



- | | | | | | | | | | | | | | |
|------------------------------------|-------|----|----|----|----|----|----|----|----|----|----|----|----|
| Control panel | VP | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
| MODBUS RS485 connection | | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
| External control | IN4 | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 |
| External stop | IN3 | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 |
| Fire system | IN2 | | | | | | | | | | | | |
| OVR control | IN1 | | | | | | | | | | | | |
| Common | C | | | | | | | | | | | | |
| Return water temp. sensor | B2 | | | | | | | | | | | | |
| Supply temp. sensor | B1 | | | | | | | | | | | | |
| Humidifier control | TG3 | | | | | | | | | | | | |
| DX 0-10V control | TG2 | | | | | | | | | | | | |
| Hot water mixing valve actuator | TG1 | | | | | | | | | | | | |
| Cooling water pump 230VAC | S2 | | | | | | | | | | | | |
| Heating water pump 230VAC | S1 | | | | | | | | | | | | |
| Humidity sensor | B9 | | | | | | | | | | | | |
| Air quality sensor | B8 | | | | | | | | | | | | |
| Exhaust air pressure sensor | B7 | | | | | | | | | | | | |
| Supply air pressure sensor | B6 | | | | | | | | | | | | |
| Supply/exhaust air damper actuator | FG1/2 | | | | | | | | | | | | |
| Run Alarm Common | NO | | | | | | | | | | | | |
| Heating Cooling Operation Common | NO | | | | | | | | | | | | |
| ~230V | L | | | | | | | | | | | | |

VERSO CF 1300 F HE
 WIRING DIAGRAM
 Date: 16 11 11