



- | | | | | | | | | | | | | | |
|------------------------------------|-------|---------------------|---|---|---|---|---|---|---|---|----|----|----|
| Control panel | VP | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
| MODBUS RS485 connection | | 3x0.5 ² | | | | | | | | | | | |
| External control | IN4 | 5x0.5 ² | | | | | | | | | | | |
| External stop | IN3 | | | | | | | | | | | | |
| Fire system | IN2 | | | | | | | | | | | | |
| OVR control | IN1 | | | | | | | | | | | | |
| Common | C | | | | | | | | | | | | |
| Return water temp. sensor | B9 | 2x0.5 ² | | | | | | | | | | | |
| Supply temp. sensor | B1 | 2x0.5 ² | | | | | | | | | | | |
| Humidifier control | TG3 | 0.10V | | | | | | | | | | | |
| DX 0-10V control | TG2 | 0.10V | | | | | | | | | | | |
| Hot water mixing valve actuator | TG1 | 0.10V | | | | | | | | | | | |
| Cooling water pump 230VAC | S2 | 0.10V | | | | | | | | | | | |
| Heating water pump 230VAC | S1 | 0.10V | | | | | | | | | | | |
| Humidity sensor | B9 | 0.10V | | | | | | | | | | | |
| Air quality sensor | B8 | 0.10V | | | | | | | | | | | |
| Exhaust air pressure sensor | B7 | 0.10V | | | | | | | | | | | |
| Supply air pressure sensor | B6 | 0.10V | | | | | | | | | | | |
| Supply/exhaust air damper actuator | FG1/2 | 0.10V | | | | | | | | | | | |
| Run Alarm Common | NO | 0.10V | | | | | | | | | | | |
| Heating Cooling Operation Common | DX | 0.10V | | | | | | | | | | | |
| ~230V | L | 2x0.75 ² | | | | | | | | | | | |

VERSO CF 1500 F HE
 WIRING DIAGRAM
 Date: 15 11 23