



Terminal	Wiring	Component
1	3x0.5mm ²	MODBUS RS485 connection
2	3x0.5mm ²	External control
3	3x0.5mm ²	External stop
4	3x0.5mm ²	Fire system
5	3x0.5mm ²	OVR control
6	3x0.5mm ²	Common
7	2x0.5mm ²	Return water temp. sensor
8	2x0.5mm ²	Supply temp. sensor
9	2x0.5mm ²	Humidifier control
10	2x0.5mm ²	DX 0-10V control
11	2x0.5mm ²	Hot water mixing valve actuator
12	2x0.5mm ²	Cooling water pump 230VAC
13	2x0.5mm ²	Heating water pump 230VAC
14	3x0.5mm ²	Humidity sensor
15	3x0.5mm ²	Air quality sensor
16	3x0.5mm ²	Exhaust air pressure sensor
17	3x0.5mm ²	Supply air pressure sensor
18	3x0.5mm ²	Humidity sensor
19	3x0.5mm ²	Air quality sensor
20	3x0.5mm ²	Exhaust air pressure sensor
21	3x0.5mm ²	Supply air pressure sensor
22	3x0.5mm ²	Humidity sensor
23	3x0.5mm ²	Air quality sensor
24	3x0.5mm ²	Exhaust air pressure sensor
25	3x0.5mm ²	Supply air pressure sensor
26	3x0.5mm ²	Humidity sensor
27	3x0.5mm ²	Air quality sensor
28	3x0.5mm ²	Exhaust air pressure sensor
29	3x0.5mm ²	Supply air pressure sensor
30	3x0.5mm ²	Humidity sensor
31	3x0.5mm ²	Air quality sensor
32	3x0.5mm ²	Exhaust air pressure sensor
33	3x0.5mm ²	Supply air pressure sensor
34	3x0.5mm ²	Humidity sensor
35	3x0.5mm ²	Air quality sensor
36	3x0.5mm ²	Exhaust air pressure sensor
37	3x0.5mm ²	Supply air pressure sensor
38	3x0.5mm ²	Humidity sensor
39	3x0.5mm ²	Air quality sensor
40	3x0.5mm ²	Exhaust air pressure sensor
41	3x0.5mm ²	Supply air pressure sensor
42	3x0.5mm ²	Humidity sensor
43	3x0.5mm ²	Air quality sensor
44	3x0.5mm ²	Exhaust air pressure sensor
45	3x0.5mm ²	Supply air pressure sensor
46	3x0.5mm ²	Humidity sensor
47	3x0.5mm ²	Air quality sensor
48	3x0.5mm ²	Exhaust air pressure sensor
49	3x0.5mm ²	Supply air pressure sensor
50	3x0.5mm ²	Humidity sensor
51	3x0.5mm ²	Air quality sensor
52	3x0.5mm ²	Exhaust air pressure sensor
53	3x0.5mm ²	Supply air pressure sensor
54	3x0.5mm ²	Humidity sensor
55	3x0.5mm ²	Air quality sensor
56	3x0.5mm ²	Exhaust air pressure sensor
57	3x0.5mm ²	Supply air pressure sensor
58	3x0.5mm ²	Humidity sensor
59	3x0.5mm ²	Air quality sensor
60	3x0.5mm ²	Exhaust air pressure sensor
61	3x0.5mm ²	Supply air pressure sensor
62	3x0.5mm ²	Humidity sensor
63	3x0.5mm ²	Air quality sensor
64	3x0.5mm ²	Exhaust air pressure sensor
65	3x0.5mm ²	Supply air pressure sensor
66	3x0.5mm ²	Humidity sensor
67	3x0.5mm ²	Air quality sensor
68	3x0.5mm ²	Exhaust air pressure sensor
69	3x0.5mm ²	Supply air pressure sensor
70	3x0.5mm ²	Humidity sensor
71	3x0.5mm ²	Air quality sensor
72	3x0.5mm ²	Exhaust air pressure sensor
73	3x0.5mm ²	Supply air pressure sensor
74	3x0.5mm ²	Humidity sensor
75	3x0.5mm ²	Air quality sensor
76	3x0.5mm ²	Exhaust air pressure sensor
77	3x0.5mm ²	Supply air pressure sensor
78	3x0.5mm ²	Humidity sensor
79	3x0.5mm ²	Air quality sensor
80	3x0.5mm ²	Exhaust air pressure sensor
81	3x0.5mm ²	Supply air pressure sensor
82	3x0.5mm ²	Humidity sensor
83	3x0.5mm ²	Air quality sensor
84	3x0.5mm ²	Exhaust air pressure sensor
85	3x0.5mm ²	Supply air pressure sensor
86	3x0.5mm ²	Humidity sensor
87	3x0.5mm ²	Air quality sensor
88	3x0.5mm ²	Exhaust air pressure sensor
89	3x0.5mm ²	Supply air pressure sensor
90	3x0.5mm ²	Humidity sensor
91	3x0.5mm ²	Air quality sensor
92	3x0.5mm ²	Exhaust air pressure sensor
93	3x0.5mm ²	Supply air pressure sensor
94	3x0.5mm ²	Humidity sensor
95	3x0.5mm ²	Air quality sensor
96	3x0.5mm ²	Exhaust air pressure sensor
97	3x0.5mm ²	Supply air pressure sensor
98	3x0.5mm ²	Humidity sensor
99	3x0.5mm ²	Air quality sensor
100	3x0.5mm ²	Exhaust air pressure sensor