


Control panel	VP	1	2	3	4	5	6	7	8	9	10	11	12
MODBUS RS485 connection	B A 1	13	14	15	16	17	18	19	20	21	22	23	24
External control	IN4	25	26	27	28	29	30	31	32	33	34	35	36
External stop	IN3	37	38	39	40	41	42	43	44	45	46	47	48
Fire system	IN2	49	50	51	52	53	54	55	56	57	58	59	60
OVR control	IN1	61	62	63	64	65	66	67	68	69	70	71	72
Common	IN0	73	74	75	76	77	78	79	80	81	82	83	84
Return water temp. sensor	B5	85	86	87	88	89	90	91	92	93	94	95	96
Supply temp. sensor	B1	97	98	99	100	101	102	103	104	105	106	107	108

Humidifier control	TG3	109	110	111	112	113	114	115	116	117	118	119	120
DX 0-10V control	TG2	121	122	123	124	125	126	127	128	129	130	131	132
Hot water mixing valve actuator	TG1	133	134	135	136	137	138	139	140	141	142	143	144
Cooling water pump 230VAC	S2	145	146	147	148	149	150	151	152	153	154	155	156
Heating water pump 230VAC	S1	157	158	159	160	161	162	163	164	165	166	167	168

Humidity sensor	B9	169	170	171	172	173	174	175	176	177	178	179	180
Air quality sensor	B8	181	182	183	184	185	186	187	188	189	190	191	192
Exhaust air pressure sensor	B7	193	194	195	196	197	198	199	200	201	202	203	204
Supply air pressure sensor	B6	205	206	207	208	209	210	211	212	213	214	215	216

Supply/exhaust air damper actuator	FC1/2	217	218	219	220	221	222	223	224	225	226	227	228
Run Alarm Common	NO	229	230	231	232	233	234	235	236	237	238	239	240
Heating Cooling Operation Common	NO	241	242	243	244	245	246	247	248	249	250	251	252
-230V	N	253	254	255	256	257	258	259	260	261	262	263	264

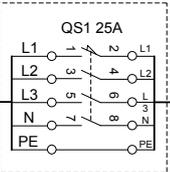

400VAC

5x2.5mm²

VERSOF 1700 U HE

WIRING DIAGRAM

Date: 16 11 11