

komfovent[®]



C5.1

EN Electrical installation and Operation Manual

Content

1. ELECTRICAL INSTALLATION MANUAL 4

1.1. Air Handling Units Sections Connection 4

1.2. Electric Power Supply Connection 4

1.3. External Elements Connection 5

1.4. Temperature Sensors Installation 6

1.5. Requirements for the installation of the control panel 6

1.6. Control panel connection 6

2. OPERATION MANUAL 7

2.1. Unit Control 7

2.2. Control panel indication 7

2.3. Parameters overview 8

2.4. Operation modes selection 8

2.5. Menu 8

2.5.1. Overview 9

2.5.1.1. Alarms 9

2.5.1.2. Operation counters 9

2.5.1.3. Efficiency status 9

2.5.1.4. Detailed information 9

2.5.2. Functions 9

2.5.2.1. Air quality control 10

2.5.2.2. Operation on demand 10

2.5.2.3. Outdoor compensated ventilation 10

2.5.2.4. Summer night cooling 11

2.5.2.5. Minimum temperature control 11

2.5.2.6. Override function 11

2.5.2.7. Humidity control 12

2.5.3. Scheduling 12

2.5.3.1. Operation program 13

2.5.3.2. Holidays 13

2.5.4. Settings 13

2.5.4.1. Air handling unit settings 13

2.5.4.2. Personalization 14

2.6. Control of air handling units through a web browser 14

2.7. Additional control options 15

2.7.1. Combined water coil control 15

2.7.2. Inverter direct evaporation cooler control 15

2.7.3. Multi-level control of direct evaporation cooler 15

2.7.4. Reversal of direct evaporation coolers 16

2.8. Troubleshooting 16



This symbol indicates that this product is not to be disposed of with your household waste, according to the WEEE Directive (2002/96/EC) and your national law. This product should be handed over to a designated collection point, or to an authorised collection site for recycling waste electrical and electronic equipment (EEE). Improper handling of this type of waste could have a possible negative impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. At the same time, your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, waste authority, approved WEEE scheme or your household waste disposal service.

1. ELECTRICAL INSTALLATION MANUAL

Installation works can be performed only by the specialists that have required qualification. During installation following requirements must be fulfilled.



It is recommended to lay control cables separately from power cables, or use shielded cables. In such case it is necessary to earth cable shielding!

1.1. Air Handling Units Sections Connection

After unit parts have been connected together (see unit installation instruction), unit sections connecting cables and wires are connected.



Connector connection is performed strictly according to numeration given in wiring diagram, or adequate markings (see unit electric scheme).



When disconnecting unit sections, do not pull by connecting wires and cables!

1.2. Electric Power Supply Connection

If the air handling unit voltage is ~230 V; 50 Hz it is necessary to install the socket with grounding of corresponding capacity (see electric diagram unit). If the voltage is ~400 V; 50 Hz, the cable of electrical power supply is connected to the main switch, which is located on the unit's outside wall. It is necessary to connect earthing! Electrical power supply connection and other cable thicknesses are specified in the wiring diagram.




Air handling units designed for 400 V AC supply voltage must be connected to the stationary installation by solid cable. All units must be connected through circuit breaker with 30 mA current leakage protection (type B or B+).



Before connecting unit to the electrical power supply, it is necessary to check whether earthing has been installed properly.

1.3. External Elements Connection

The air handling unit is designed with external connection terminals which are located on the controller box, inside the air handling unit. All external control elements are connected to the terminals.

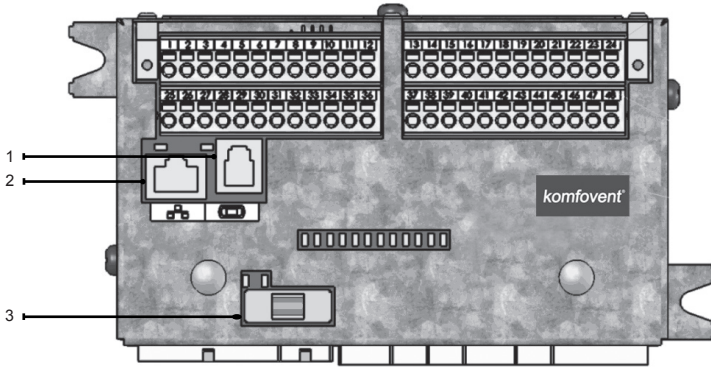

1. Control panel connection
2. „Ethernet“ computer network or internet connection
3. Fuse 1A

1.3 a Picture. Controller with connection terminals

Total power of all external elements with 24 V supply may not exceed 15 W.

| | | MODBUS RS485 connection | | | | | | | | External control | | | | B5 | B1 | | | | | | | | |
|--|--|-------------------------|------|----------------------------------|--------|---|--------|--------------------------------|------|---------------------------------|--------|-------------------------------|----|----|----|--|--|--|--|--|--|--|--|
| | | B | A | GND | IN4 | IN3 | IN2 | IN1 | C | Return water temperature sensor | | Supply air temperature sensor | | | | | | | | | | | |
| | | 0..10V | ~24V | N | 0..10V | ~24V | N | 0..10V | ~24V | N | 0..10V | ~24V | N | | | | | | | | | | |
| | | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | | | | | | | | | | |
| | | 25 | 26 | 27 | 28 | 29 | 30 | 31 | 32 | 33 | 34 | 35 | 36 | | | | | | | | | | |
| | | Humidity sensor | | Air quality sensor | | | | Exhaust air pressure sensor | | Supply air pressure sensor | | | | | | | | | | | | | |
| | | B9 | | B8 | | | | B7 | | B6 | | | | | | | | | | | | | |
| | | TG3 | | TG2 | | TG1 | | S2 | | S1 | | | | | | | | | | | | | |
| | | Humidifier control | | Cold water mixing valve actuator | | Hot water mixing valve actuator | | Cooling water pump 230V AC, 1A | | Heating water pump 230V AC, 1A | | | | | | | | | | | | | |
| | | 0..10V | GND | 0..10V | ~24V | N | 0..10V | ~24V | N | L | N | L | N | | | | | | | | | | |
| | | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | | | | | | | | | | |
| | | 37 | 38 | 39 | 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 | 48 | | | | | | | | | | |
| | | C | | Indication | | Cooling control | | 230V AC, 0.5A | | | | | | | | | | | | | | | |
| | | Air damper actuator | | Run Alarm Common | | DX3 signal DX2 signal DX1 signal Common | | | | | | | | | | | | | | | | | |
| | | 0..10V | ~24V | N | NO | NO | C | NO | NO | NO | C | L | N | | | | | | | | | | |
| | | FG1 | | DX | | | | | | | | | | | | | | | | | | | |


1.3 b Picture. External control elements connection

1.4. Temperature Sensors Installation

The supply air temperature sensor B1 (1.4 a Picture) is mounted in the air duct in a projected place for it; after cooler section (if provided). The minimal distance from the duct connection of the unit up to the sensor should be not less than double diameter of the circular connection or a diagonal of rectangular connection.

The water temperature sensor B5 (1.4 b Picture) is mounted on the water pipe by screwing it into the provided hole. The sensor must be thermo insulated!

Supply air temperature sensor B1

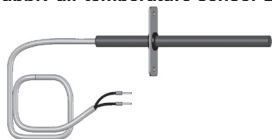


1.4 a Picture

Water temperature sensor B5



1.4 b Picture

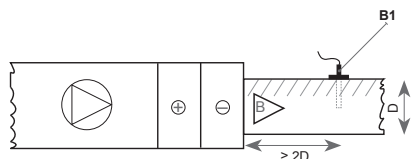


1.5. Requirements for the installation of the control panel

1. The control console should be installed in a room where the following conditions are ensured:
 - 1.1. ambient temperature: 0 °C ... 40 °C;
 - 1.2. relative humidity range: 20 % ... 80 %;
 - 1.3. protection against dripping of water (IP X0).
2. Control panel connection is provided through a hole in the back or bottom side.
3. The panel can be mounted on a flush mounting box or in any other place just screwing two holes on the fastening surface.

Do not use any other type or size screws but those that are packed together for control panel mounting. Wrong screws may damage electronics board.

1.6. Control panel connection

The control panel is connected to the controller box (see Picture 1.3 a). The length of the cable for connecting the panel with the unit may not exceed 150 m.

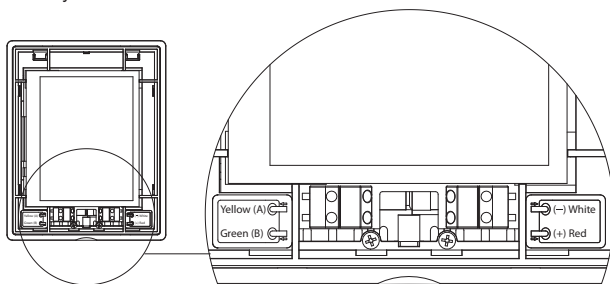

1.6 Picture. Control panel connection

Control panel connection and other cable thicknesses are specified in the wiring diagram!

Remove protective screen tape, before mounting front cover on the control panel!

2. OPERATION MANUAL


2.1. Unit Control

Air handling units control system ensures control of the physical processes that are taking place inside the air handling unit.

Control system consists of:


- main controller module;
- circuit breakers and main switch;
- control panel, which can be installed in the convenient place for the user;
- pressure and temperature sensors.

Control panel (2.1 Picture) is designed for remote air handling unit control, setting and display of controller parameters.

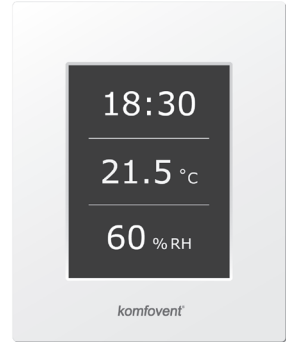

2.1 Picture. Control panel

2.2. Control panel indication

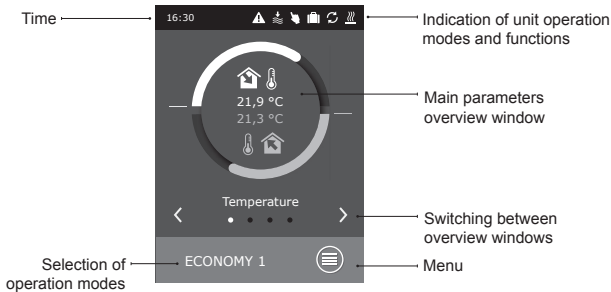


Explanation of the displayed symbols

| | | | | | |
|--|----------------------------|--|---|--|---------------------------|
| | Supply air temperature | | Fan operation | | Air humidifier operation |
| | Extract air temperature | | Air flow increasing by activated function (see chapter Functions) | | Summer night cooling mode |
| | Supply air volume | | Air flow decreasing by activated function (see chapter Functions) | | Weekly operation mode |
| | Extract air volume | | Energy recovery operation | | Holiday operation mode |
| | Supply air humidity | | Air heater operation | | „Override“ mode |
| | Extract air humidity | | Air cooler operation | | Alarm signal |
| | Extract (room) air quality | | | | |

2.3. Parameters overview

The main parameters of the unit are indicated in four main windows of the panel: temperatures indication, air flow, air quality (humidity) and energy saving.


All other unit parameters are presented in the menu "Overview" (see 9 page).

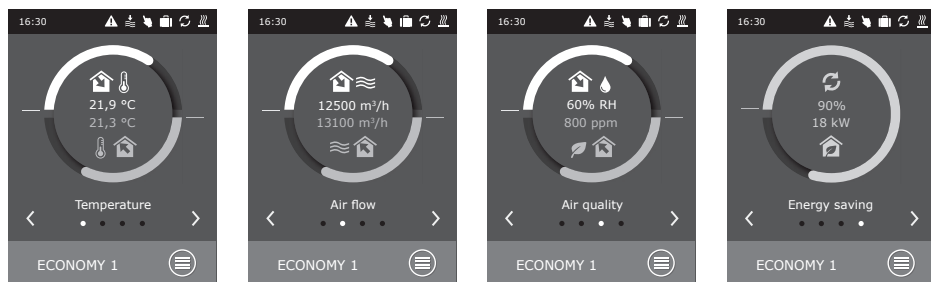

2.4. Operation modes selection


Six operation modes are possible, one of them user can select directly from control panel main window:

- Two Comfort and two Economy modes, for each of them the user can set air flow and temperature.
- Special mode allows the user not only to set air flow and temperature, but also to select blocking or using heating, cooling and other functions.
- OFF mode completely turns off the unit.

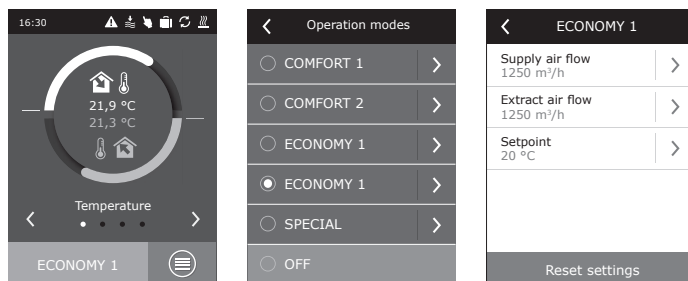



2.5. Menu

Menu of panel consists of the four points:

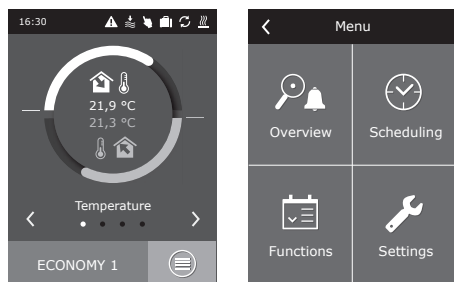

2.5.1. Overview



Main air handling unit parameters are presented in the main windows (Chapter 2.3). All other information, relating to the operation of the unit, malfunctions and efficiency status is detailed in overview menu.

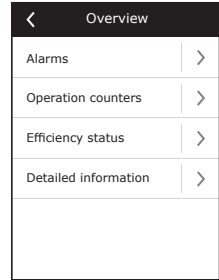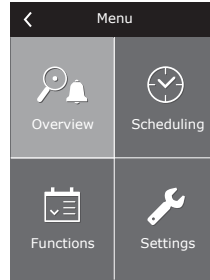

2.5.1.1. Alarms

This menu displays the notification of existing faults.

After failure elimination (see chapter 2.8), messages are deleted by selecting "Delete". By clicking on „History“ can be viewed up to 50 registered alarms.

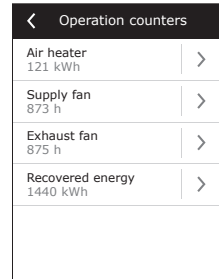
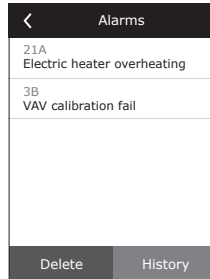


2.5.1.2. Operation counters

This menu displays operation time of the fans, the consumed energy of the heater and how much energy was recovered by the heat exchanger.

2.5.1.3. Efficiency status

Menu for the heat exchanger efficiency and energy recovery monitoring in real time.

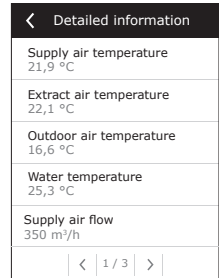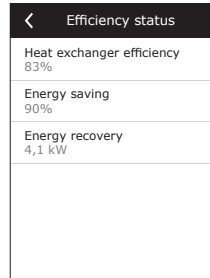



2.5.1.4. Detailed information

All temperature sensor readings, functioning of separate air handling unit elements and other detailed information is available in this menu.

2.5.2. Functions

In this menu item, the user can activate and set additional unit functions.

- blank box: function is not activated
- gray box: function is activated, but currently not operating
- blue box: currently operating function

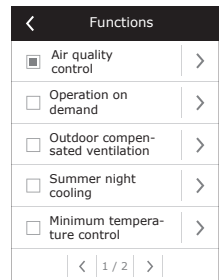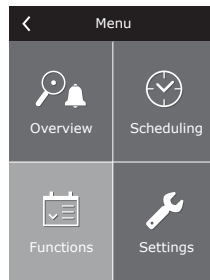

2.5.2.1. Air quality control

Air quality control is designed according to:

- CO₂ sensor¹ [0...2000 ppm];
- air quality sensor VOCq [0...100 %];
- air pollution sensor VOCp [0...100 %];
- relative humidity sensor [0...100 %];
- temperature sensor [0...50 °C].

Depending on the type of the selected sensor, the value of the air quality function to be maintained is set, and the air handling unit intensity will be adjusted according to that value. Ventilation intensity will be increased automatically in the case of deviation from the set value and decreased again when it is approached. For example, if the unit is designed with the CO₂ maintenance function and is equipped with a CO₂ sensor, after setting value 800 ppm, this set CO₂ level will be maintained by adjusting ventilation intensity, i.e. ventilation intensity will be increased if the CO₂ level grows and will be decreased when it returns to the previous condition.



The function of air quality operates only if no other below function is active at the same time:

- summer night cooling;
- min. temperature control;
- outdoor compensated ventilation.

2.5.2.2. Operation on demand

The air handling unit start-up function is designed to start the unit which currently off, when one of the selected parameters has exceeded the critical limit.

The function provided for the start-up of the unit according to:

- room CO₂ sensor;
- room air quality sensor VOCq;
- room air pollution sensor VOCp;
- room relative humidity sensor;
- room temperature sensor.



Operation on demand (start-up / shut-down) is performed by the same sensor which is used in the control of the "Air quality function".



A room sensor with the analogue output (0...10 V DC) should be designed for this function.

2.5.2.3. Outdoor compensated ventilation

The ventilation compensation function adjusts the air volume depending on the existing outdoor temperature. It is possible to enter four temperature points, with two of them defining winter conditions and the other two defining summer conditions. When compensation start and end points for both winter and summer seasons are entered (it is also possible to enter only one of them, example only winter compensation; in this case, the start and the end points of summer compensation should be the same), the current ventilation intensity will be decreased in proportion according to the outdoor temperature until it reaches the minimum possible ventilation level of 20 %.




The ventilation compensation function does not operate when summer night cooling function is active.

| Air quality control | |
|--|---|
| <input checked="" type="checkbox"/> Enable | |
| Setpoint 1 1000 ppm | > |
| Mode 1 COMFORT 1 | > |
| Setpoint 2 880 ppm | > |
| Mode 2 COMFORT 2 | > |
| Reset settings | |

| Operation on demand | |
|--|---|
| <input checked="" type="checkbox"/> Enable | |
| Setpoint 1000 ppm | > |
| Reset settings | |

| Outdoor compensated ... | |
|--|---|
| <input checked="" type="checkbox"/> Enable | |
| Winter stop -15 °C | > |
| Winter start 5 °C | > |
| Summer start 25 °C | > |
| Summer stop 35 °C | > |
| Reset settings | |

¹ Factory setting.

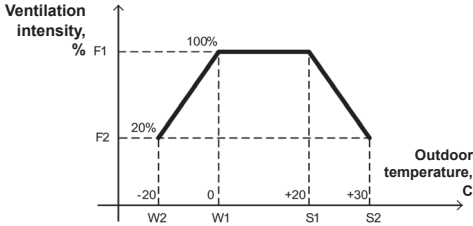

F1 – user-selected air flow (actual)
 F2 – minimum air flow 20 %
 W1 – winter compensation start point
 W2 – winter compensation end point
 S1 – summer compensation start point
 S2 – summer compensation end point

2.5.2.4. Summer night cooling

Summer night cooling function is intended for energy saving during the summer season: by utilizing the outside chill of night hours, it is possible to cool down heated rooms, i.e. to remove excessive heat that accumulated in the room during day hours.

Summer night cooling function can start at night (from 00:00 h to 06:00 h a.m.) at any time, even when the air handling unit is not working and is in standby mode. User can set indoor temperature, at which this function starts and stops.

When this function is active, the current ventilation level is switched to the maximum ventilation intensity (100 %) and ventilation is performed only by means of fans, i.e. at that time neither the air cooling nor the energy recovery functions operate.

Summer night cooling function has an operating priority over the following functions: outdoor compensated ventilation and the air quality function.

2.5.2.5. Minimum temperature control

In winter time the minimum temperature control function forcibly reduces the supply and extract air flow set by the user when the heater capacity available in the unit is insufficient and/or heat recovery does not ensure minimally possible temperature supply to the room. The user can set a separate supply air temperature value so that when that value is not achieved, the intensity of the ventilation unit starts to be reduced automatically. The air flow may be reduced to the minimally possible ventilation intensity of 20 %.




During the summer, when the air handling unit provided with cooler, this function according to the same user-set value limits the cooling capacity, thus ensuring the minimum possible temperature supply to the room.

In ventilation intensity control, this function has top priority over “Outdoor compensated ventilation” and “VAV” functions.

2.5.2.6. Override function


Override (OVR) control of the unit can be performed by the external contact (see Picture 1.3 b) or device (timer, switch, thermostat, etc.). The received signal from the outside activates the OVR function, which ignores the current operation modes of the unit and performs one of the selected actions listed below:

- switches off the air handling unit;
- switches over the unit to operation according to the mode “Comfort1”;
- switches over the unit to operation according to the mode “Comfort2”;
- switches over the unit to operation according to the mode “Economy1”;
- switches over the unit to operation according to the mode “Economy2”;
- switches over the unit to operation according to the mode “Special”;
- switches over the unit to operation according to the weekly schedule.

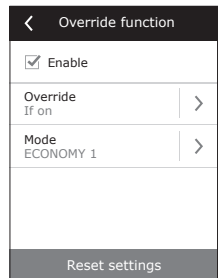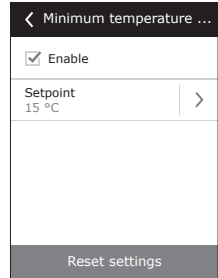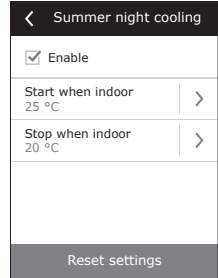

The OVR function provides for three operation modes selectable depending on the needs of the user:

1. The mode “When on” – the function will respond to the external control contact only when the air handling unit is on.
2. The mode “When off” – the function will respond to the external control contact only when the air handling unit is off.
3. The mode “Always” – the function will respond to the external control contact irrespective of the operating condition of the unit.

 The OVR function has the top priority and, therefore, ignores all previous modes. The function remains active as long as the external control contact is in the closed position.


2.5.2.7. Humidity control


Humidity control function is designed for maintenance of air humidity determined by the user. For proper operation of the function one or two additional humidity sensors shall be connected, depending on where humidity will be maintained. There are two modes for maintenance of humidity:


- **Supply air.** The determined humidity of supply air is maintained, using the supply air duct humidity sensor (B9).
- **Room air.** The determined humidity of indoor air is maintained, using the room air or exhaust air duct humidity sensor (B8). The supply air humidity limit is set using the duct humidity sensor or hydrostat (B9).

One of the below methods can be chosen for maintenance of the determined humidity:

- **Humidification of air.** There is a control signal of 0...10 V, directly reflecting the capacity of the humidifier from 0 to 100 %. If humidification is required, the control is transferred through the output TG3 of the controller.
- **Dehumidification of air.** There is a control signal of 0...10 V, directly reflecting the capacity of the dehumidifier from 0 to 100 %. If dehumidification is required, the control is transferred through the output TG3 of the controller.
- **Dehumidification of air: cooling-heating.** Dehumidification is performed using the coolers and heaters available in the air handling unit. If there are several coolers and heaters, then it shall be pre-determined which of them will be used in the dehumidification process.
- **Humidification and dehumidification of air.** For humidification of air the control signal of 0...10 V is used through the output TG3 of the controller, and the dehumidification of air is performed using the coolers and heaters available in the unit.


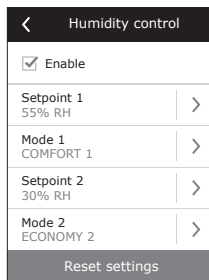


 If the maintenance of the room air humidity is provided for, then the humidity function will prevail over the air quality and recirculation functions, i.e. when humidification or dehumidification is required, these functions will be blocked.

 Humidity control function must be ordered in advance.



2.5.3. Scheduling

Menu for planning of the air handling unit operation according to the weekly program and the annual calendar.

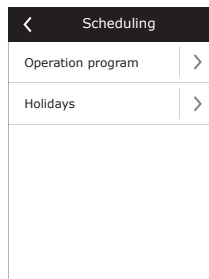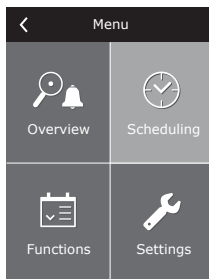



2.5.3.1. Operation program

User can set up to twenty operation programs for the unit. For each program possible to adjust the mode of operation, day of the week and the time interval.

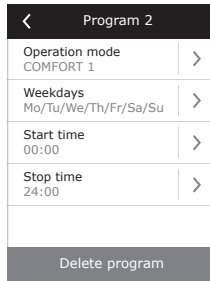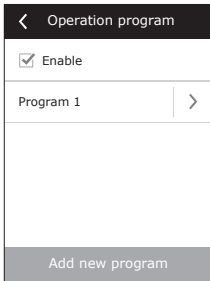



2.5.3.2. Holidays

Holiday schedule specifies the time period during which the unit operates under selected mode. Possible to set up to ten holidays.

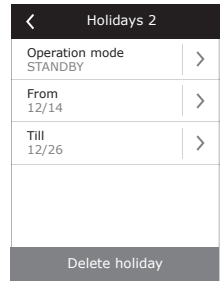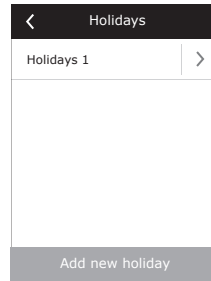

2.5.4. Settings

This menu is for air handling unit and the user parameter setting.

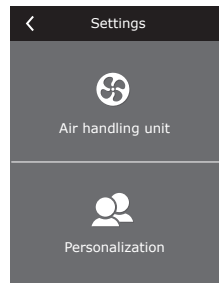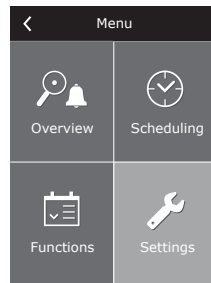


2.5.4.1. Air handling unit settings

Temperature control

The air handling unit provides for several temperature control modes:

- Supply. The unit supplies air according to the temperature preset by the user.
- Extract. Unit automatically supplies air of such temperature to maintain preset exhaust air temperature.
- Room. Operation is similar to the mode “exhaust” but temperature is maintained by the sensor mounted in the room (B8).
- Balance. Supply air temperature maintenance value will be determined automatically from the existing exhaust air temperature, i. e., what temperature air will be removed from the premises, the same temperature air will be supplied back.

When “Balance” is selected, the temperature setpoint disappears.

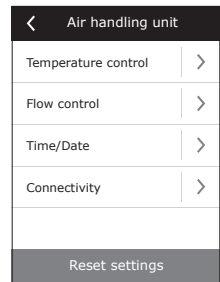


Air volume control

Supply and exhaust air volumes control modes have been provided in the unit:

- **CAV** – constant air volume control mode. The unit will supply and extract a constant air flow which is preset by the user, irrespective of any changes occurring in the ventilation system;
- **VAV** – variable air volume control mode. The unit will supply and extract an air flow with regard to the ventilation needs in different rooms. In case of frequently changing ventilation demands this air volumes maintenance mode signally reduces unit exploitation costs.

It is possible to use a simplified VAV control function, “single-flow VAV control”. It means that the performance of this function requires only a single air flow pressure sensor, which is installed in a variable air duct system (e. g. in supply air). This variable system is called the master ventilation system, according to which

control is performed, while the other air flow (in this case, discharged air) operates as the slave ventilation system and always follows the master one. If the supply air requirement in the ventilation system which is assigned as the master system decreases, the intensity of discharged air in the slave system is reduced correspondingly by the same percentage.

 If the variable air volume control function is mode is selected, the initial calibration of the control mode must be performed; otherwise, the unit will not operate if the VAV mode is selected.

Variable air volume control mode calibration:

1. Before start of calibration the air distribution and exhaust devices in ventilation system should be adjusted, all valves for variable air flow in a way enabling air supply to all ventilated premises should be opened.
2. After switch on of the unit the VAV mode should be selected and calibration procedure should be confirmed. After the end of the calibration, depending on the configuration of pressure sensors, VAV mode status will change to Supply, Extract, Double.
3. After calibration the air handling unit further will operate in the previous mode.
 - **DCV**– direct controlled volume. The air handling unit will operate similarly as in the CAV mode, but air volumes will be maintained directly in accordance with the values of the B6 and B7 analog input signals of controller. After giving the signal 0... 10 V to the appropriate input, it will be converted according to the current determined air volume. For example, if the maximum air flow of the unit is 1000 m³/h, setpoint in the panel – 800 m³/h, and the B6 input value – 7 V, the unit will supply constant air volume of 560 m³/h, i. e., 70 % of the set value. The same applies to the exhaust air only by B7 input.

Time / Date

Time and date is required for air handling unit operation planning.

Connectivity

- IP address and subnet mask. Setting is required when air handling unit is connected to PC network or Internet.
- Controller ID. Number that identifies the controller, when several air handling units are connected to common network and controlled by one control panel.
- RS-485. Settings of external RS-485 interface (1, 2, 3 terminals, picture 1.3 b).


2.5.4.2. Personalization

In this item for the user are presented menu language, measurement units and other control panel settings.

| Personalization | |
|---------------------------------|---|
| Language English | > |
| Flow units m ³ /h | > |
| Screen saver On | > |
| Panel lock Off | > |
| Touch sound Click | > |
| | |


2.6. Control of air handling units through a web browser

You may not only monitor the operation of air handling units and the functionality of their individual components, change settings and activate extra functions by means of control panel but also by your computer. All you need is to connect the unit to the computer, local area network or the Internet using a network cable.

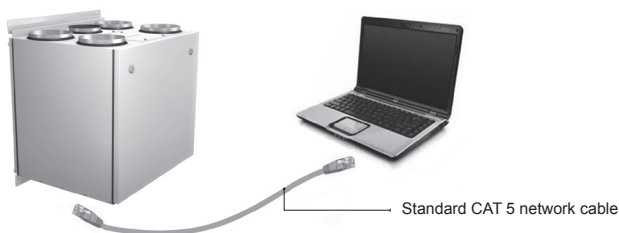

How to connect the unit directly to your computer:


1. Plug one end of the network cable into the controller port on the unit (see Picture 1.3 a) and the other end to the computer.
2. Go to the properties of your network card and enter IP address, e.g. 192.168.0.200, and subnet mask 255.255.0.0.
3. Open the web browser on your computer and disable all proxy servers in the settings.
4. In the address bar of your web browser enter the IP address associated with the air handling unit; the default IP address is 192.168.0.50. You can change it at any time on the control panel or from web browser (see connection settings).



Note: It is recommended to download the latest version of your web browser before use.

5. If the connection is successful, a window prompting to enter your user name and password appears:

Note: the user name is “user”. The default password is also “user”; after logging in, the user can later change the password to any other of his/her choice (see user interface settings).



2.7. Additional control options

2.7.1. Combined water coil control

For the air handling unit with the combined water coil (Combi-coil – heater and cooler in one) the control of the mixing valve actuator is provided both under the air heating and cooling modes. The actuator is connected to the control terminals of the heating circuit and operates only under the heating mode by default. However upon transfer of the feedback signal confirming that there is cold water within the circulation system to the control terminals (IN4) of the external control (e. g., by connecting additional device: thermostat, switch, etc.), the air cooling function will be activated, and the mixing valve actuator (TG1) will be controlled under the air cooling mode.

2.7.2. Inverter direct evaporation cooler control

By default all units are provided with inverter type DX cooler control, which allows stepless control of the compressor. For the inverter unit power control, there is a modulated signal (TG2), as well as signals: cooler start (DX1), cooling demand DX2, heating demand DX3 (see Pic. 1.3 b).

There are three different control methods:

1. Universal control, suitable for most cooler units¹.
2. Control adapted to Panasonic cooler units.
3. Control adapted to Daikin cooler units.


2.7.3. Multi-level control of direct evaporation cooler


For air cooling in the air handling unit there is provided 3 control contacts (connection is shown in Picture 1.3 b). Depending on how much will be cooling steps and how it will be divided on steps, it is recommended to select the optimal control method. If the capacity of all steps is the same, then only three control steps are possible. If cooling capacities of steps are close to ratio 1-2-4 (the capacity of each of the following steps is double the previous), then cooler control will be realized with seven cooling steps.

Example: To the terminals DX1 is connected 1kW cooler, to DX2 – 2kW and to terminals DX3 connected cooler with 4kW capacity. Control will be in steps:

- 1: 1 kW; 2: 2 kW; 3: 1 kW + 2 kW; 4: 4 kW; 5: 1 kW + 4 kW; 6: 2 kW + 4 kW; 7: 1 kW + 2 kW + 4 kW.


¹ Factory setting.

 The function of step rotation is provided, when capacities of coolers are the same.

 The number of direct evaporation cooling units must be provided in advance.

2.7.4. Reversal of direct evaporation coolers

There is a reverse option of direct evaporation coolers, i.e. when the cooler is switched to the heating mode. In such case, there must be only max 3 cooling control steps. There are control terminals DX3 for connection of the cooler reversing signal “Heating” (Pic. 1.3 b.).

 The option of reversal of direct evaporation cooling units must be provided in advance.

2.8. Troubleshooting

If the unit fails to operate:

- Make sure that the unit is connected to the power supply network.
- Check whether the main switch (if designed) is turned on.
- Check all fuses of the automatics. If necessary, replace blown-out fuses with new ones having the same electrical parameters (the sizes of the fuses are indicated on the schematic electrical diagram).
- Check whether there is any failure message on the control panel. If there is indication, it needs to be eliminated first. In order to eliminate the failure, follow the table.
- If nothing is indicated on the control panel, check whether cable connecting control panel with the unit is not damaged.

2.8 Table. Alarms indicated on the control panel, their possible causes and elimination methods

| Message | Possible cause | Elimination |
|--|--|---|
| Service time | If unit continuous operation (without breaks) was 12 months, then periodic inspection message appears. | After disconnecting the unit from power supply, it is necessary to carry out periodic inspection of the unit, i.e. to check the condition of the heat exchanger, the heater and fans. |
| Low supply air flow | Too high resistance of the ventilation system. | Check pressure pipes, air dampers, air filters and make sure that the ventilation system is not blocked. |
| Low extract air flow | Too high resistance of the ventilation system. | Check pressure pipes, air dampers, air filters and make sure that the ventilation system is not blocked. |
| VAV calibration fail | Pressure sensors are not connected or broken. | Check connections of the sensor or replace the sensor. |
| Change outdoor air filter | The fresh air filter is blocked. | Shut down the unit and replace the filter. |
| Change extract air filter | The extract air filter is blocked. | Shut down the unit and replace the filter. |
| Electric heater off | The heater is disconnected due to too low air volume. | As soon as the heater cools down, protection resets automatically. It is recommended to increase the ventilation intensity level. |
| Service mode | Temporary mode, which can be activated by the service personnel. | The service mode is switched off by simply deleting the alert message. |
| Supply air temperature sensor failure | The supply air temperature sensor is not connected or broken. | Check connections of the sensor or replace the sensor. |
| Extract air temperature sensor failure | The discharged air temperature sensor is not connected or broken. | Check connections of the sensor or replace the sensor. |
| Outdoor air temperature sensor failure | The external air temperature sensor is not connected or broken. | Check connections of the sensor or replace the sensor. |
| Exhaust air temperature sensor failure | The exhaust air temperature sensor is not connected or blocked. | Check connections of the sensor or replace the sensor. |
| Water temperature sensor failure | The water temperature sensor is not connected or broken. | Check connections of the sensor or replace the sensor. |
| Return water temperature low | Return water temperature of the heater dropped below the permissible limit. | Check the status and operation of the circulation pump, heating system and mixing valve actuator. |
| Internal fire alarm | Fire danger in the ventilation system. | Check the ventilation system. Find the source of the heat. |

| Message | Possible cause | Elimination |
|---|--|---|
| External fire alarm | A fire signal has been received from the fire signalization system of the building. | Delete alarm message and restart the unit when the fire signal disappears. |
| External stop | A signal from an external device (switch, timer, or sensor) has been received. | As soon as the auxiliary device is switched off, the unit will operate in the previous mode. |
| Heat exchanger failure | Blocked or not rotating rotor, by-pass damper failure. | Check the rotor drive, replace the belt or check the by-pass channel operation. |
| Heat exchanger icing | Icing may form under a low outdoor temperature and high room humidity. | Check the operation of the rotation heat exchanger drive or the air bypass damper of the plate heat exchanger. |
| Low supply air temperature | The heating equipment fails to operate or its capacity is insufficient. | Check the heating equipment. |
| High supply air temperature | The heating equipment is not controllable (mixing valve or contactor is blocked). | Check the heating equipment. |
| Electric heater overheat | The emergency overheating protection of the electrical heater has actuated. | Protection can be reset only by pressing the RESET press-button on the heater. |
| Evaporator air temperature sensor failure | The evaporator air temperature sensor is not connected or broken. | Check connections of the sensor or replace the sensor. |
| Evaporator icing | The evaporator is iced over due to excessively high humidity content in the exhaust air and low outdoor temperatures. | Check the operation of the evaporator defrost system. |
| High pressure on compressor | Compressor system operated in an overload mode as a result of too high temperature in the condensing unit. | Identify the cause and eliminate it. |
| Low pressure on compressor | Compressor system is leaky or the amount of refrigerant is insufficient. | Identify the cause and eliminate it. |
| Compressor failure | No power supply. | Check supply voltage on the circuit breaker and/or make sure whether it is on. |
| | Supply voltage mismatches. | Check that the supply voltage is on all three phases, if necessary, swap the two phase conductor positions. |
| | Compressor motor failure. | Check the compressor motor and replace it if necessary. |
| | Compressor drive failure. | Check the operation of the compressor drive and replace it if necessary. |
| Supply fan drive failure | A fault signal has been received from the supply fan drive. | Check the supply fan drive and its messages. |
| Supply fan drive overload | The supply fan drive is overloaded. | Check the condition of the supply fan drive and its cooling. |
| Supply fan motor failure | The supply fan is broken. | Check the supply fan and replace it if necessary. |
| Supply fan motor overload | The supply fan is overloaded. | Check the condition of the supply fan and make sure that the resistance of the ventilation system is not exceeded. |
| Exhaust fan drive failure | A fault signal has been received from exhaust fan drive. | Check the exhaust fan drive and its messages. |
| Exhaust fan drive overload | The exhaust fan drive is overloaded. | Check the condition of the exhaust fan drive and its cooling. |
| Exhaust fan motor failure | The exhaust fan is broken. | Check the exhaust fan and replace it if necessary. |
| Exhaust fan motor overload | The exhaust fan is overloaded. | Check the condition of the exhaust fan and make sure that the resistance of the ventilation system is not exceeded. |
| Rotor drive failure | A fault signal has been received from the rotor drive. | Check the rotor drive and its messages. |
| Rotor drive overload | The rotor drive is overloaded. | Check the condition of the rotor drive and its cooling. |
| Rotor motor failure | The rotor motor is broken. | Check the rotor motor and replace it if necessary. |
| Rotor motor overload | The rotor motor is overloaded. | Check the condition of the rotor motor and make sure that the rotor is not blocked. |
| Communication error | No communication with the internal components of the air handling unit (controller extension modules, frequency converters, fans, etc.) or one / several of them are broken. | Check internal connections and functioning of separate components. |
| Controller failure | Main controller module fault. | Replace the main controller. |



The emergency protection of the electrical heater against overheating can be reset with the RESET button only if the cause of the overheating of the heater has been clarified and eliminated.



If the unit is shut down and a failure text message is shown on the control panel, the fault must be eliminated!



Before performing any jobs inside the unit make sure that the unit is stopped and disconnected from the electrical power supply.

After failure has been eliminated and power supply connected the error messages should be deleted. However if the failure has not been eliminated, unit either starts operating and after some time it stops again, or it does not operate and failure message is indicated.

UAB KOMFOVENT

VILNIUS Ozo g. 10, LT-08200
Tel. +370 (5) 2779 701
Mob. tel. 8-685 44658
el. p. info@komfovent.com

KAUNAS Taikos pr. 149, LT-52119
Tel.: (8-37) 473 153, 373 587
Mob. tel. 8 685 63962
el. p. kaunas@komfovent.com

KLAIPĖDA Dubysos g. 25, LT-91181
Mob. tel.: 8 685 93706, 8 685 93707
el. p. klaipeda@komfovent.com

ŠIAULIAI Metalistų g. 6H, LT-78107
Tel. (8-41) 500090,
mob. tel. +370 685 93700
el. p. siauliai@komfovent.com

PANEVĖŽYS Beržų g. 44, LT-36144
Mob. tel. 8 640 55988
el. p. panevezys@komfovent.com

EXPORT & SALES DEPARTMENT
Ph.: +370 (5) 205 1579, 231 6574
Fax +370 (5) 230 0588
export@komfovent.com

**GARANTINIO APTARNAVIMO SK. /
SERVICE AND SUPPORT**
Tel. / Ph. +370 (5) 200 8000,
mob. tel. / mob. ph.: +370 652 03180
service@komfovent.com

www.komfovent.com

ООО «АМАЛБА-Р»

Россия, Москва
ул. Выборгская д. 16,
стр. 1, 2 этаж, 206 офис
тел./факс +7 495 640 6065,
info.msk@komfovent.com
www.komfovent.ru

ООО «АМАЛБА-ОКА»

390017 г. Рязань
Рязжское шоссе, 20 литера Е, пом Н6
тел. +7 4912 950575, +7 4912 950672,
+7 4912 950648
info.oka@komfovent.com
www.komfovent.ru

ИООО «Комфовент»

Республика Беларусь, 220125 г. Минск,
ул. Уручская 21 – 423
Тел. +375 17 286 5297, 266 6327
info.by@komfovent.com
www.komfovent.by

PARTNERS

| | | |
|----|----------------------------------|--|
| AT | J. PICHLER Gesellschaft m. b. H. | www.pichlerluft.at |
| AU | Pacific HVAC | www.pacificvac.com |
| BE | Ventilair group | www.ventilairgroup.com |
| | ACB Airconditioning | www.acbairco.be |
| CZ | REKUVENT s.r.o. | www.rekuvent.cz |
| CH | WESCO AG | www.wesco.ch |
| | SUDCLIMATAIR SA | www.sudclimatair.ch |
| | CLIMAIR GmbH | www.komfovent.com/en/business/ more/contact-us/ |
| DK | UNIQU COMFORT ApS | www.uniocomfort.dk |
| | AIR2TRUST | www.air2trust.com |
| EE | BVT Partners | www.bvtpartners.ee |
| FR | AERIA | www.aeria-france.fr |
| GB | ELTA FANS | www.eltafans.com |
| HR | Microclima | www.microclima.hr |
| HU | AIRVENT Légtechnikai Zrt. | www.airvent.hu |
| | Gevent Magyarország Kft. | www.gevent.hu |
| | Merkapt | www.merkapt.hu |
| IR | Fantech Ventilation Ltd | www.fantech.ie |
| IS | Blikk & Tækniþjónustan ehf | www.bogt.is |
| | Hitataekni ehf | www.hitataekni.is |
| NL | Ventilair group | www.ventilairgroup.com |
| | DECIPOL-Vortvent | www.vortvent.nl |
| NO | Ventistål AS | www.ventistal.no |
| | Thermo Control AS | www.thermocontrol.no |
| PL | Ventia Sp. z o.o. | www.ventia.pl |
| SE | Nordisk Ventilator AB | www.nordiskventilator.se |
| SI | Agregat d.o.o | www.agregat.si |
| SK | TZB produkt, s.r.o. | www.tzbprodukt.sk |

Komfovent AB

Ögärdesvägen 12B
433 30 Partille, Sverige
Phone +46 31 487752
info_se@komfovent.com
www.komfovent.se

Komfovent Oy

Muuntotie 1 C1
FI-01 510 VANTAA
+358 (0) 40 8263 500
info_fi@komfovent.com
www.komfovent.com

Komfovent GmbH

Konrad-Zuse-Str. 2a, 42551 Velbert,
Deutschland
Mob. ph. +49 (0) 2051/6051180
info@komfovent.de
www.komfovent.de

Komfovent SIA

Katlakalna iela 9,
LV-1073 Riga
Tel. +371 67 20 1572
Fakss +371 67 20 1570
info@komfovent.lv
www.komfovent.lv