

TECHNICAL DATA

2WAY SYSTEM

Space saving combination
(8 ~ 80 HP)

R410A



**Model No.
Outdoor Unit**

Type	Outdoor Unit Type	Rated Capacity						
		8 HP*	10 HP*	12 HP*	14 HP*	16 HP*	18 HP	20 HP
ME2	2WAY System	U-8ME2E8	U-10ME2E8	U-12ME2E8	U-14ME2E8	U-16ME2E8	U-18ME2E8	U-20ME2E8

* Should you wish to use as space saving combination, read this Technical Data.

If there is not capacity of 18 HP or 20 HP among the combination of outdoor units, refer to the technical data for "High efficiency combination (TD831189)".

IMPORTANT!

Please Read Before Starting

This air conditioner must be installed by the sales dealer or installer.

This information is provided for use only by authorized persons.

For safe installation and trouble-free operation, you must:

- Carefully read this instruction booklet before beginning.
- Follow each installation or repair step exactly as shown.
- This air conditioner shall be installed in accordance with National Wiring Regulations.
- This product is intended for professional use. Permission from the power supplier is required when installing the U-8ME2E8 and U-10ME2E8 outdoor units that are connected to a 16 A distribution network.
- This equipment complies with EN/IEC 61000-3-12 provided that the short-circuit power S_{sc} is greater than or equals to the values corresponding to each model as shown in the table below at the interface point between the user's supply and the public system. It is the responsibility of the installer or user of the equipment to ensure; by consultation with the distribution network operator if necessary that the equipment is connected only to supply with a short-circuit power S_{sc} greater than or equals to the values corresponding to each model as shown in the table below.

	U-12ME2E8	U-14ME2E8	U-16ME2E8
Ssc	1,550 kVA	1,550 kVA	1,550 kVA

	U-18ME2E8	U-20ME2E8
Ssc	1,550 kVA	1,550 kVA

- The product meets the technical requirements of EN/IEC 61000-3-3.
- Pay close attention to all warning and caution notices given in this manual.



WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



CAUTION

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

If Necessary, Get Help

These instructions are all you need for most installation sites and maintenance conditions. If you require help for a special problem, contact our sales/service outlet or your certified dealer for additional instructions.

In Case of Improper Installation

The manufacturer shall in no way be responsible for improper installation or maintenance service, including failure to follow the instructions in this document.

SPECIAL PRECAUTIONS



WARNING When Wiring



ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. ONLY A QUALIFIED, EXPERIENCED ELECTRICIAN SHOULD ATTEMPT TO WIRE THIS SYSTEM.

- Do not supply power to the unit until all wiring and tubing are completed or reconnected and checked.
- Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding can cause **accidental injury or death**.
- Connect all wiring tightly. Loose wiring may cause overheating at connection points and a possible fire hazard.
- Provide a power outlet to be used exclusively for each unit.
- ELCB must be incorporated in the fixed wiring. Circuit breaker must be incorporated in the fixed wiring in accordance with the wiring regulations.

	Circuit breaker		Circuit breaker
U-8ME2E8	20 A	U-16ME2E8	40 A
U-10ME2E8	25 A	U-18ME2E8	50 A
U-12ME2E8	30 A	U-20ME2E8	60 A
U-14ME2E8	35 A		

- Provide a power outlet exclusively for each unit, and full disconnection means having a contact separation by 3mm in all poles must be incorporated in the fixed wiring in accordance with the wiring rules.
- To prevent possible hazards from insulation failure, the unit must be grounded. 
- This equipment is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD). Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown.

When Transporting

- It may need two or more people to carry out the installation work.
- Be careful when picking up and moving the indoor and outdoor units. Get a partner to help, and bend your knees when lifting to reduce strain on your back. Sharp edges or thin aluminum fins on the air conditioner can cut your fingers.

When Installing...

Select an installation location which is rigid and strong enough to support or hold the unit, and select a location for easy maintenance.

...In a Room

Properly insulate any tubing run inside a room to prevent “sweating” that can cause dripping and water damage to walls and floors.



CAUTION

Keep the fire alarm and the air outlet at least 1.5 m away from the unit.

...In Moist or Uneven Locations

Use a raised concrete pad or concrete blocks to provide a solid, level foundation for the outdoor unit. This prevents water damage and abnormal vibration.

...In an Area with High Winds

Securely anchor the outdoor unit down with bolts and a metal frame. Provide a suitable air baffle.

...In a Snowy Area (for Heat Pump-type Systems)

Install the outdoor unit on a raised platform that is higher than drifting snow. Provide snow vents.

When Connecting Refrigerant Tubing


Pay particular attention to refrigerant leakages.



WARNING

- When performing piping work, do not mix air except for specified refrigerant (R410A) in refrigeration cycle. It causes capacity down, and risk of explosion and injury due to high tension inside the refrigerant cycle.
- If the refrigerant comes in contact with a flame, it produces a toxic gas.
- Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury, etc.
- Ventilate the room immediately, in the event that is refrigerant gas leaks during the installation. Be careful not to allow contact of the refrigerant gas with a flame as this will cause the generation of toxic gas.
- Keep all tubing runs as short as possible.
- Apply refrigerant lubricant to the matching surfaces of the flare and union tubes before connecting them, then tighten the nut with a torque wrench for a leak-free connection.
- Check carefully for leaks before starting the test run.
- Do not leak refrigerant while piping work for an installation or re-installation, and while repairing refrigeration parts. Handle liquid refrigerant carefully as it may cause frostbite.

When Servicing

- Turn the power OFF at the main power box (mains), wait at least 10 minutes until it is discharged, then open the unit to check or repair electrical parts and wiring. 
- Keep your fingers and clothing away from any moving parts.
- Clean up the site after you finish, remembering to check that no metal scraps or bits of wiring have been left inside the unit.

WARNING





- This product must not be modified or disassembled under any circumstances. Modified or disassembled unit may cause fire, electric shock or injury.
- Do not clean inside the indoor and outdoor units by users. Engage authorized dealer or specialist for cleaning.
- In case of malfunction of this appliance, do not repair by yourself. Contact to the sales dealer or service dealer for a repair.

CAUTION

- Ventilate any enclosed areas when installing or testing the refrigeration system. Leaked refrigerant gas, on contact with fire or heat, can produce dangerously toxic gas.
- Confirm after installation that no refrigerant gas is leaking. If the gas comes in contact with a burning stove, gas water heater, electric room heater or other heat source, it can cause the generation of toxic gas.

Others

CAUTION

- Do not touch the air inlet or the sharp aluminum fins of the outdoor unit. You may get injured. 
- Do not sit or step on the unit, you may fall down accidentally. 
- Do not stick any object into the FAN CASE. You may be injured and the unit may be damaged.  

Check of Density Limit

Check the amount of refrigerant in the system and floor space of the room according to the legislation on refrigerant drainage. If there is no applicable legislation, follow the standards described below.

The room in which the air conditioner is to be installed requires a design that in the event of refrigerant gas leaking out, its density will not exceed a set limit.

The refrigerant (R410A), which is used in the air conditioner, is safe, without the toxicity or combustibility of ammonia, and is not restricted by laws imposed to protect the ozone layer. However, since it contains more than air, it poses the risk of suffocation if its density should rise excessively. Suffocation from leakage of refrigerant is almost non-existent. With the recent increase in the number of high density buildings, however, the installation of multi air conditioner systems is on the increase because of the need for effective use of floor space, individual control, energy conservation by curtailing heat and carrying power, etc.

Most importantly, the multi air conditioner system is able to replenish a large amount of refrigerant compared to conventional individual air conditioners. If a single unit of the multi air conditioner system is to be installed in a small room, select a suitable model and installation procedure so that if the refrigerant accidentally leaks out, its density does not reach the limit (and in the event of an emergency, measures can be made before injury can occur).

In a room where the density may exceed the limit, create an opening with adjacent rooms, or install mechanical ventilation combined with a gas leak detection device. The density is as given below.

Total amount of refrigerant (kg)


$$\frac{\text{Min. volume of the indoor unit installed room (m}^3\text{)}}{\text{Density limit (kg/m}^3\text{)}} \leq \text{Density limit (kg/m}^3\text{)}$$

The density limit of refrigerant which is used in multi air conditioners is 0.44 kg/m³ (ISO 5149).

NOTE

- If there are 2 or more refrigerating systems in a single refrigerating device, the amount of refrigerant should be as charged in each independent device.

For the amount of charge in this example:

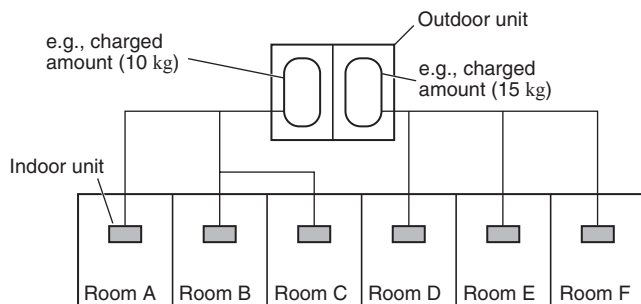


The possible amount of leaked refrigerant gas in rooms A, B and C is 10 kg.


The possible amount of leaked refrigerant gas in rooms D, E and F is 15 kg.

- The standards for minimum room volume are as follows.


- (1) No partition (shaded portion)

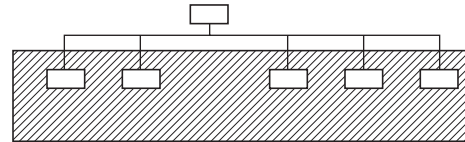


- (2) When there is an effective opening with the adjacent room for ventilation of leaking refrigerant gas (opening without a door, or an opening 0.15% or larger than the respective floor spaces at the top or bottom of the door).

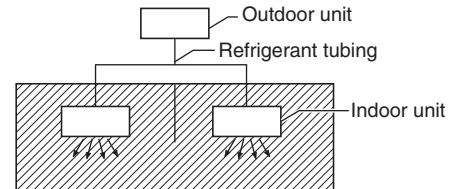

- (3) If an indoor unit is installed in each partitioned room and the refrigerant tubing is interconnected, the smallest room of course becomes the object. But when mechanical ventilation is installed interlocked with a gas leakage detector in the smallest room where the density limit is exceeded, the volume of the next smallest room becomes the object.

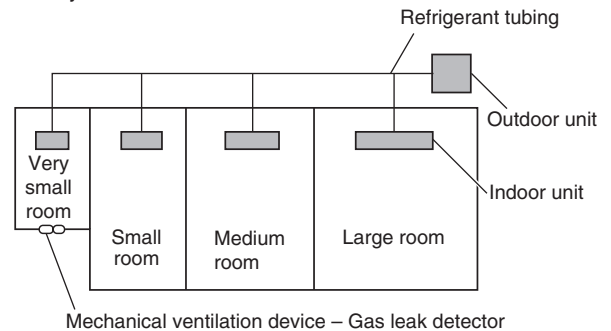

- The minimum indoor floor space compared with the amount of refrigerant is roughly as follows: (When the ceiling is 2.7 m high)

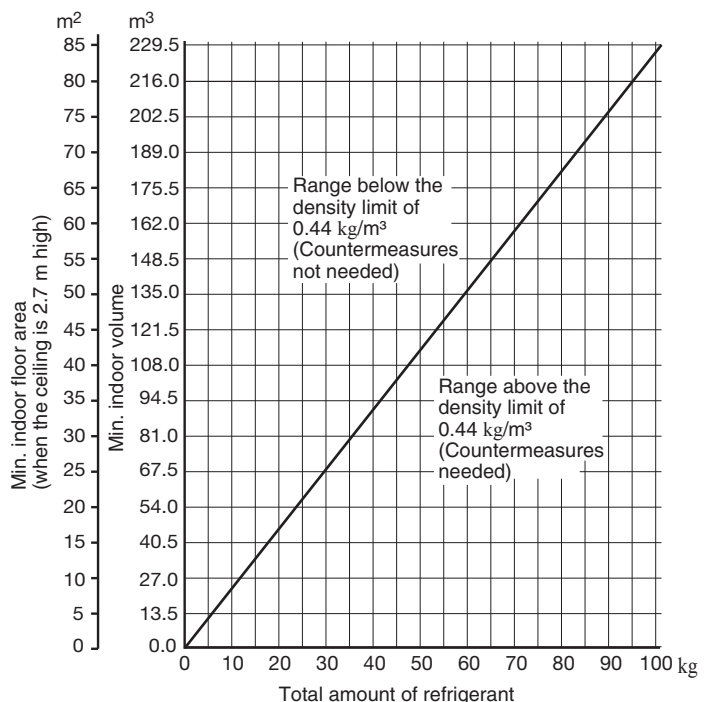

Precautions for Installation Using New Refrigerant

1. Care regarding tubing

1-1. Process tubing

- **Material:** Use seamless phosphorous deoxidized copper tube for refrigeration. Wall thickness shall comply with the applicable legislation. The minimal wall thickness must be in accordance with the table below. For tubes of $\phi 22.22$ or larger, use the material of temper 1/2H or H (Hard copper tube). Do not bend the hard copper tube.
- **Tubing size:** Be sure to use the sizes indicated in the table below.
- Use a tube cutter when cutting the tubing, and be sure to remove any flash. This also applies to distribution joints (optional).
- When bending tubing, use a bending radius that is 4 times the outer diameter of the tubing or larger.



CAUTION

Use sufficient care in handling the tubing. Seal the tubing ends with caps or tape to prevent dirt, moisture, or other foreign substances from entering. These substances can result in system malfunction.

Unit: mm

Material		Temper - O (Soft copper tube)				
Copper tube	Outer diameter	6.35	9.52	12.7	15.88	19.05
	Wall thickness	0.8	0.8	0.8	1.0	1.2

Unit: mm

Material		Temper - 1/2 H, H (Hard copper tube)							
Copper tube	Outer diameter	22.22	25.4	28.58	31.75	38.1	41.28	44.45	50.8
	Wall thickness	1.0	1.0	1.0	1.1	over 1.35	over 1.45	over 1.55	over 1.8

1-2. Prevent impurities including water, dust and oxide from entering the tubing. Impurities can cause R410A refrigerant deterioration and compressor defects. Due to the features of the refrigerant and refrigerating machine oil, the prevention of water and other impurities becomes more important than ever.

2. Be sure to recharge the refrigerant only in liquid form.

- 2-1. Since R410A is a non-azeotrope, recharging the refrigerant in gas form can lower performance and cause defects in the unit.
- 2-2. Since refrigerant composition changes and performance decreases when gas leaks, collect the remaining refrigerant and recharge the required total amount of new refrigerant after fixing the leak.


3. Different tools required

3-1. Tool specifications have been changed due to the characteristics of R410A.


Some tools for R22- and R407C-type refrigerant systems cannot be used.

Item	New tool?	R407C tools compatible with R410A?	Remarks
Manifold gauge	Yes	No	Types of refrigerant, refrigerating machine oil, and pressure gauge are different.
Charge hose	Yes	No	To resist higher pressure, material must be changed.
Vacuum pump	Yes	Yes	Use a conventional vacuum pump if it is equipped with a check valve. If it has no check valve, purchase and attach a vacuum pump adapter.
Leak detector	Yes	No	Leak detectors for CFC and HCFC that react to chlorine do not function because R410A contains no chlorine. Leak detectors for HFC134a can be used for R410A.
Flaring oil	Yes	No	For systems that use R22, apply mineral oil (Suniso oil) to the flare nuts on the tubing to prevent refrigerant leakage. For machines that use R407C or R410A, apply synthetic oil (ether oil) to the flare nuts.

Manifold gauge

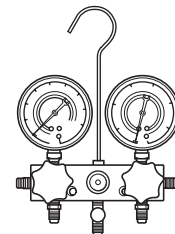

Vacuum pump

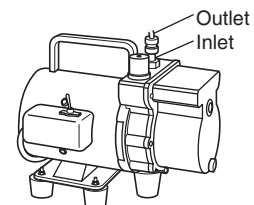


* Using tools for R22 and R407C and new tools for R410A together can cause defects.

3-2. Use R410A exclusive cylinder only.

Single-outlet valve

(with siphon tube)
Liquid refrigerant should be recharged with the cylinder standing on end as shown.

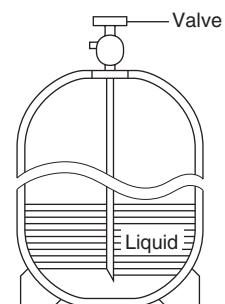

Important Information Regarding The Refrigerant Used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.

Refrigerant type: R410A

GWP⁽¹⁾ value: 1975


⁽¹⁾GWP = global warming potential

Periodical inspections for refrigerant leaks may be required depending on European or local legislation. Please contact your local dealer for more information.

Please fill in with indelible ink,

- ① the factory refrigerant charge of the product
 - ② the additional refrigerant amount charged in the field and
 - ① + ② the total refrigerant charge
- on the refrigerant charge label supplied with the product.

The filled out label must be adhered in the proximity of the product charging port (e.g. onto the inside of the service cover).

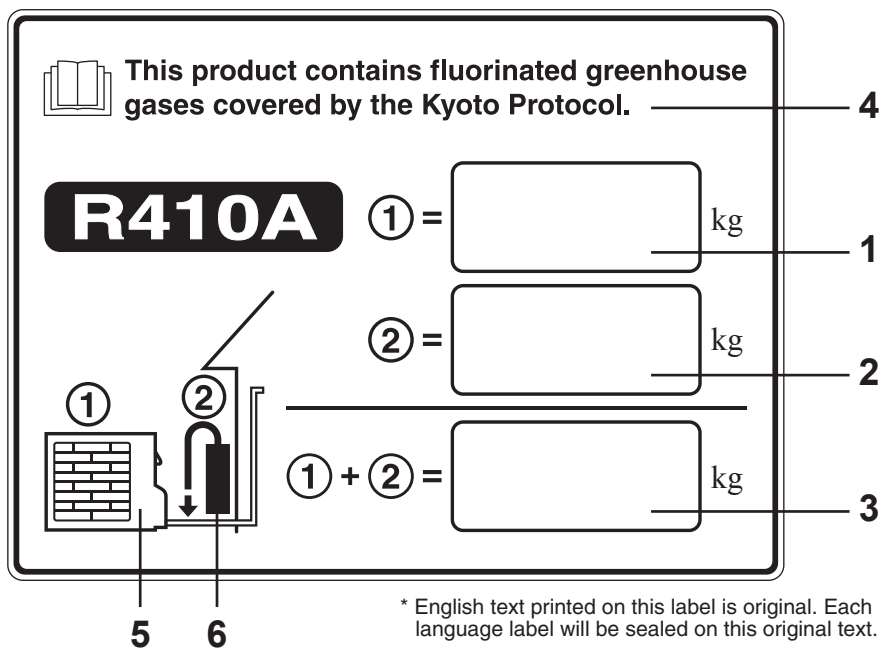

1. Factory refrigerant charge of the product: see unit name plate
2. Additional refrigerant amount charged in the field
3. Total refrigerant charge
4. Contains fluorinated greenhouse gases covered by the Kyoto Protocol
5. Outdoor unit
6. Refrigerant cylinder and manifold for charging

Contents

Section 1: OUTLINE OF 2WAY SYSTEM	1-1
1. Line-up.....	1-2
2. Features of 2WAY SYSTEM	1-6
Section 2: DESIGN OF 2WAY SYSTEM	2-1
1. Model Selection and Capacity Calculator	2-2
2. System Design	2-17
3. Electrical Wiring	2-23
4. Installation Instructions	2-28
5. HOW TO PROCESS TUBING	2-47
6. AIR PURGING	2-51
7. Optional Parts	2-54
8. Supplement	2-60
Section 3: Control of 2WAY SYSTEM	3-1
1. Main Operating Functions	3-4
2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER	3-6
3. Timer Remote Controller.....	3-39
4. Simplified Remote Controller.....	3-71
5. System Controller	3-79
6. Schedule Timer.....	3-101
7. ON/OFF Controller (CZ-ANC2)	3-126
8. Intelligent Controller (CZ-256ESMC2).....	3-144
9. Communication Adaptor (CZ-CFUNC2)	3-205
10. Remote Sensor.....	3-213
11. LonWorks Interface (CZ-CLNC2)	3-216
12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2).....	3-231
13. Seri-para I/O Unit for each indoor unit (CZ-CAPBC2)	3-246
14. Interface Adaptor (CZ-CAPC2).....	3-254
15. Web Interface (CZ-CWEBC2)	3-261
16. Intelligent Management System	3-317
17. RAC Interface Adaptor (CZ-CAPRA1).....	3-463
18. Intelligent Controller (CZ-256ESMC3).....	3-470
19. System Controller (CZ-64ESMC3)	3-491
20. Remote Sensor (CZ-CSRC3)	3-511
21. Cloud adaptor (CZ-CFUSCC1).....	3-515
Section 4: 2WAY SYSTEM UNIT SPECIFICATIONS	4-1
1. Outdoor Unit	4-2
Section 5: TEST RUN	5-1
1. Preparing for Test Run	5-2
2. Test Run Procedure	5-3
3. Main Outdoor Unit PCB Setting.....	5-4
4. Auto Address Setting	5-7
5. Remote Controller Test Run Settings	5-15
6. Caution for Pump Down.....	5-17
7. Self-Diagnosis Function Table and Contents of Alarm Display	5-17
Section 6: ELECTRICAL DATA	6-1
1. Outdoor Unit	6-2
Section 7: PCB AND FUNCTIONS	7-1
1. Outdoor Unit Control PCB	7-2
Section 8: CAPACITY TABLE	8-1
1. Capacity of Outdoor Unit	8-4
2. Cooling Capacity of Indoor Unit.....	8-46
3. Part Load of Outdoor Unit	8-133
Section 9: RENEWAL	9-1
1. Precautions on Renewal Design & Installation.....	9-2
2. Reference	9-10
3. INSTALLATION INSTRUCTIONS (VRF Renewal Kit)	9-12
4. 2WAY VRF Installation Instructions for High Pressure Switch Kit	9-13

Contents

1. OUTLINE OF 2WAY SYSTEM

- 1. Line-up..... 1-2
- 2. Features of 2WAY SYSTEM 1-6
 - Outline of 2WAY SYSTEM 1-6
 - Maximum number of connectable indoor units when connected with minimum capacity.. 1-6
 - Combination of outdoor units 1-7
 - Capacity control 1-8

1. Line-up

Outdoor Units		Rated Capacity						
Type	Outdoor Unit Type	8 HP*	10 HP*	12 HP*	14 HP*	16 HP*	18 HP	20 HP
ME2	2WAY System	U-8ME2E8	U-10ME2E8	U-12ME2E8	U-14ME2E8	U-16ME2E8	U-18ME2E8	U-20ME2E8

* Should you wish to use as space saving combination, read this Technical Data.

• To be connecting Indoor Unit

Indoor Units		Rated Capacity						
Type	Indoor Unit Type	15	22	28	36	45	56	60
D1	1-Way Cassette			S-28MD1E5	S-36MD1E5	S-45MD1E5	S-56MD1E5	
L1	2-Way Cassette		S-22ML1E5	S-28ML1E5	S-36ML1E5	S-45ML1E5	S-56ML1E5	
U2	4-Way Cassette		S-22MU2E5A	S-28MU2E5A	S-36MU2E5A	S-45MU2E5A	S-56MU2E5A	S-60MU2E5A
U1	4-Way Cassette		S-22MU1E5A	S-28MU1E5A	S-36MU1E5A	S-45MU1E5A	S-56MU1E5A	S-60MU1E5A
Y2	4-Way Cassette 60 × 60	S-15MY2E5A	S-22MY2E5A	S-28MY2E5A	S-36MY2E5A	S-45MY2E5A	S-56MY2E5A	
K1	Wall-Mounted					S-45MK1E5A	S-56MK1E5A	
K2	Wall-Mounted	S-15MK2E5A	S-22MK2E5A	S-28MK2E5A	S-36MK2E5A			
T2	Ceiling				S-36MT2E5A	S-45MT2E5A	S-56MT2E5A	
F2	Low Silhouette Ducted	S-15MF2E5A	S-22MF2E5A	S-28MF2E5A	S-36MF2E5A	S-45MF2E5A	S-56MF2E5A	S-60MF2E5A
M1	Slim Low Static Ducted	S-15MM1E5A	S-22MM1E5A	S-28MM1E5A	S-36MM1E5A	S-45MM1E5A	S-56MM1E5A	
P1	Floor Standing		S-22MP1E5	S-28MP1E5	S-36MP1E5	S-45MP1E5	S-56MP1E5	
R1	Concealed Floor Standing		S-22MR1E5	S-28MR1E5	S-36MR1E5	S-45MR1E5	S-56MR1E5	


Type	Indoor Unit Type	Rated Capacity				
		71 / 73	90	106	140	160
D1	1-Way Cassette	S-73MD1E5				
L1	2-Way Cassette	S-73ML1E5				
U2	4-Way Cassette	S-73MU2E5A	S-90MU2E5A	S-106MU2E5A	S-140MU2E5A	S-160MU2E5A
U1	4-Way Cassette	S-73MU1E5A	S-90MU1E5A	S-106MU1E5A	S-140MU1E5A	S-160MU1E5A
K1	Wall-Mounted	S-73MK1E5A		S-106MK1E5A		
T2	Ceiling	S-73MT2E5A		S-106MT2E5A	S-140MT2E5A	
F2	Low Silhouette Ducted	S-73MF2E5A	S-90MF2E5A	S-106MF2E5A	S-140MF2E5A	S-160MF2E5A
P1	Floor Standing	S-71MP1E5				
R1	Concealed Floor Standing	S-71MR1E5				

Type	Indoor Unit Type	Rated Capacity		
		180	224	280
E2	High Static Pressure Ducted	S-180ME2E5	S-224ME2E5	S-280ME2E5


1. Line-up

Outdoor units


Model	U-8ME2E8	U-10ME2E8
Capacity: kW Cooling / Heating	22.4 / 25.0	28.0 / 31.5

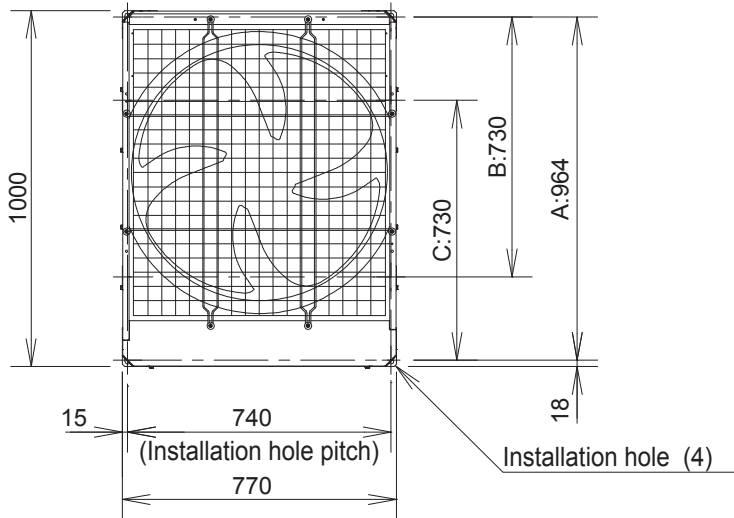

Top view

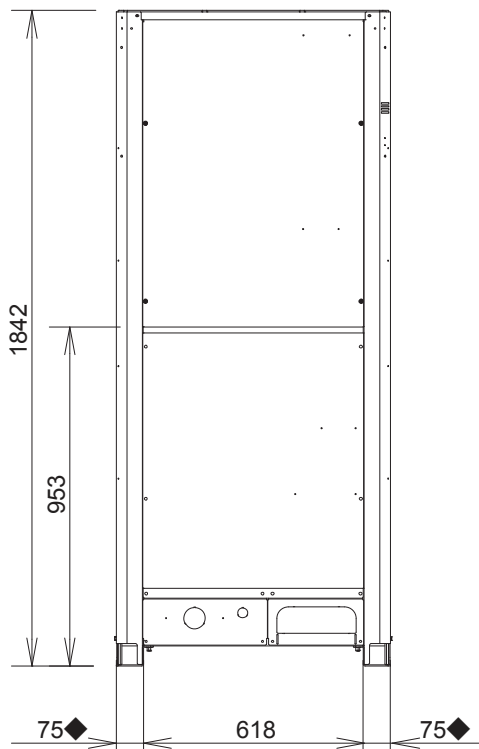

Front view

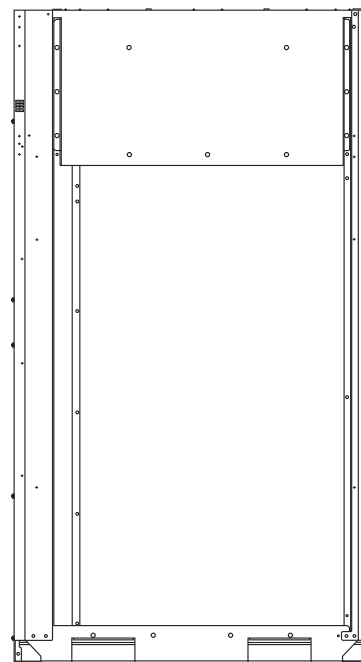

Side view

◆ Installation fixing bracket
Installation side

According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".

A : 964 (Installation hole pitch) * The tubing is routed out from the front.

B : 730 (Installation hole pitch) * The tubing is routed out from the bottom.

C : 730 (Installation hole pitch)




1

1. Line-up

Outdoor units

Model	U-12ME2E8	U-14ME2E8	U-16ME2E8
Capacity: kW Cooling / Heating	33.5 / 37.5	40.0 / 45.0	45.0 / 50.0

unit: mm

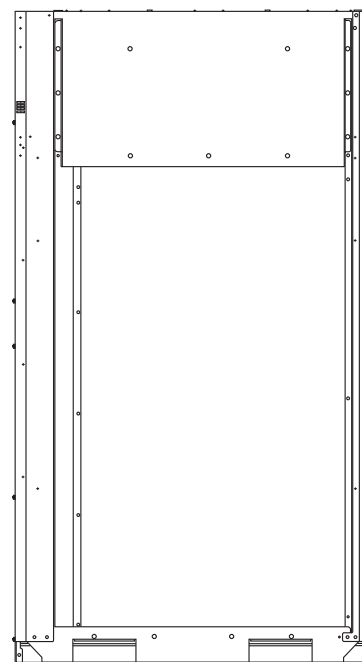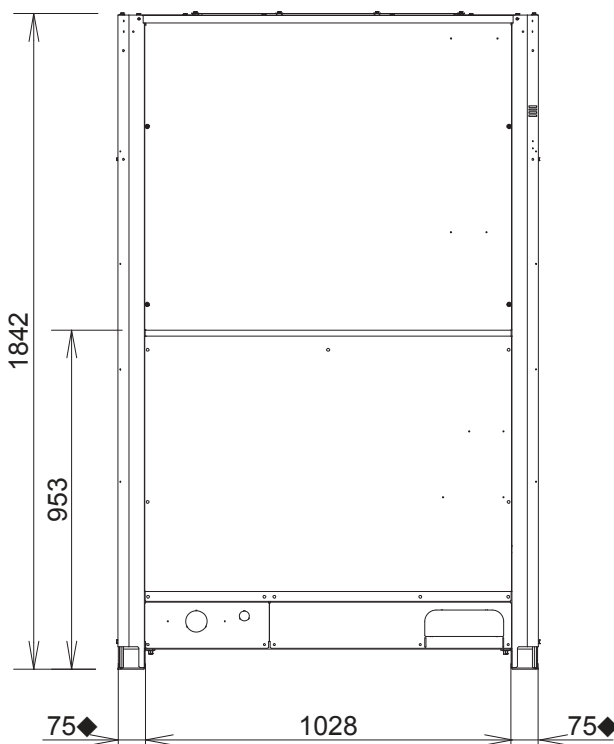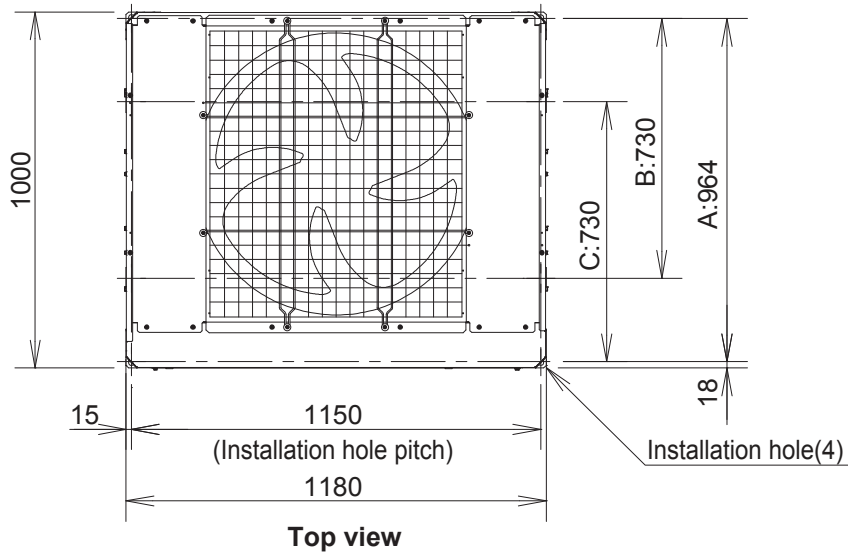

◆ Installation fixing bracket
Installation side

According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".

A : 964 (Installation hole pitch) * The tubing is routed out from the front.

B : 730 (Installation hole pitch) * The tubing is routed out from the bottom.


C : 730 (Installation hole pitch)

1. Line-up


Outdoor units

Model	U-18ME2E8	U-20ME2E8
Capacity: kW Cooling / Heating	50.0 / 56.0	56.0 / 63.0


unit: mm

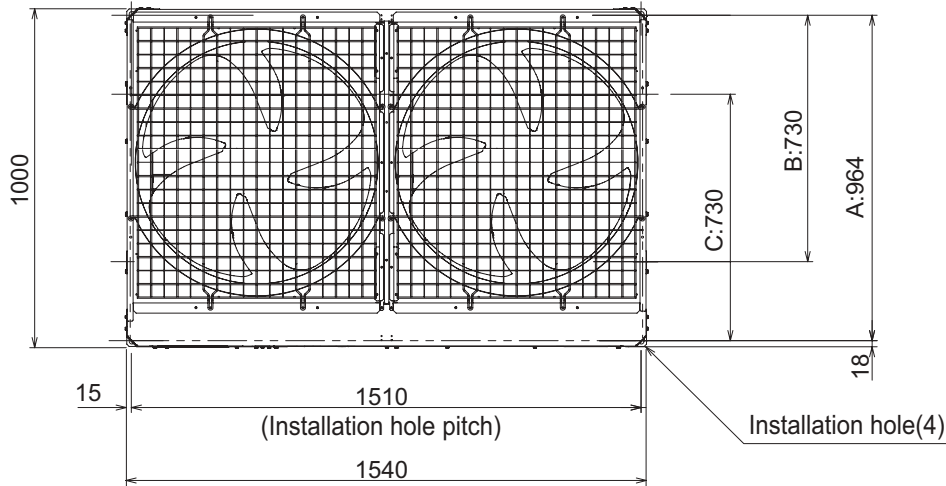

Top view

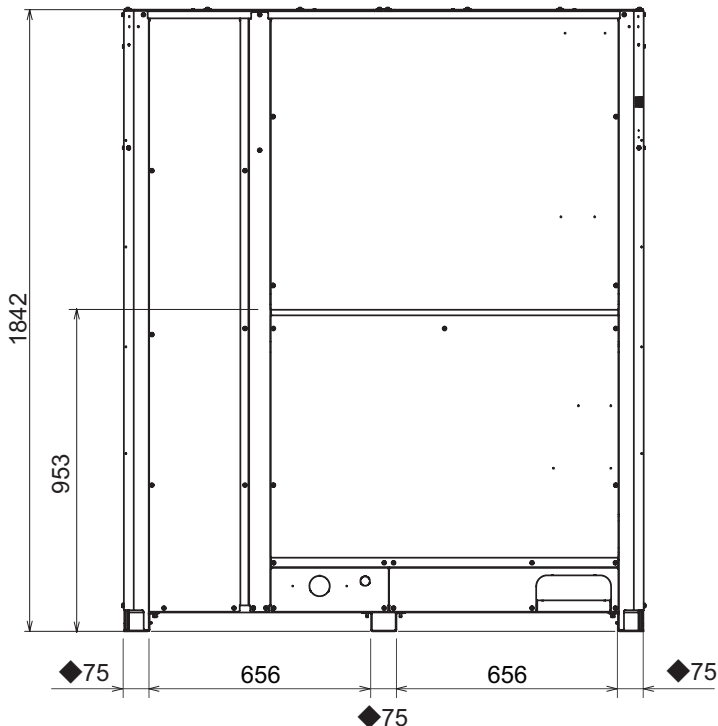

Front view

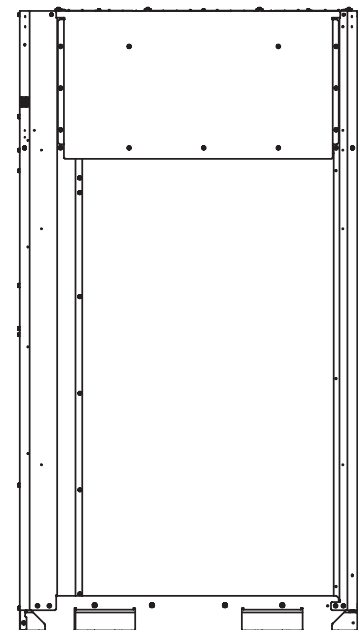

Side view

◆ Installation fixing bracket
Installation side

According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".

A : 964 (Installation hole pitch) * The tubing is routed out from the front.


B : 730 (Installation hole pitch) * The tubing is routed out from the bottom.

C : 730 (Installation hole pitch)



2. Features of 2WAY SYSTEM

■ Outline of 2WAY SYSTEM

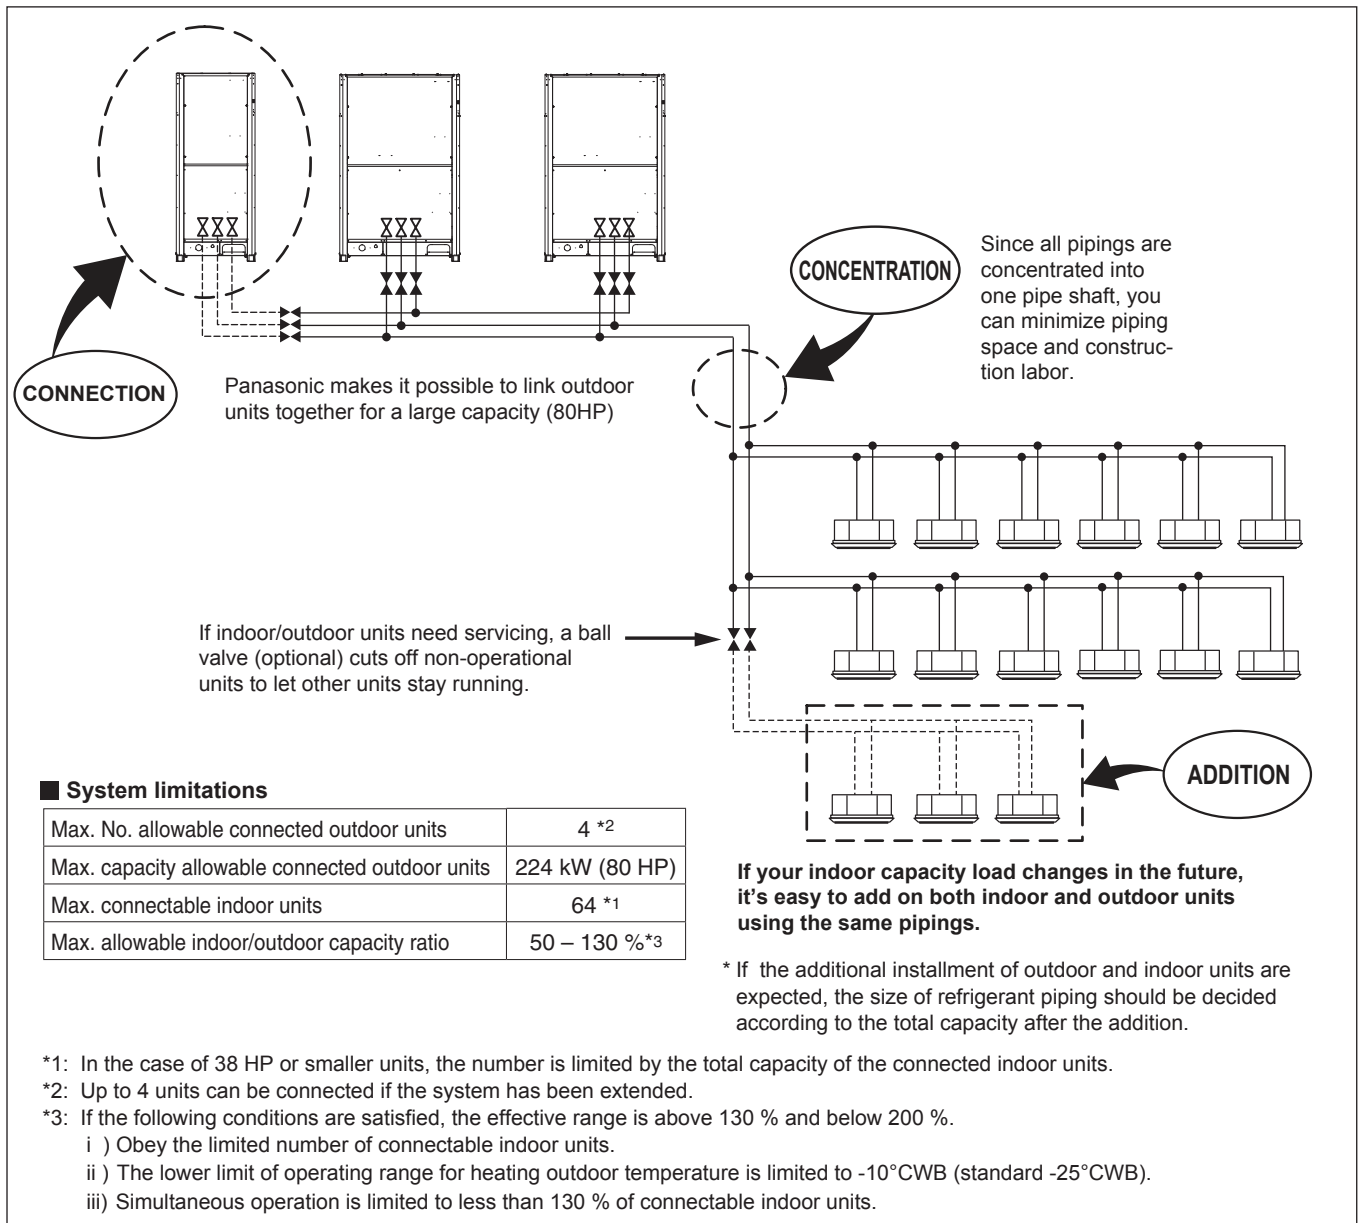

■ Maximum number of connectable indoor units when connected with minimum capacity

Total horse power	Number of indoor units	Total horse power	Number of indoor units	Total horse power	Number of indoor units	Total horse power	Number of indoor units	Total horse power	Number of indoor units	Total horse power	Number of indoor units
8 HP	13 20*4	14 HP	23 36*4	20 HP	33 50*4	26 HP	43 64*4	32 HP	53 64*4	38 HP	63 64*4
10 HP	16 25*4	16 HP	26 40*4	22 HP	36 55*4	28 HP	46 64*4	34 HP	56 64*4	40~80 HP	64
12 HP	19 30*4	18 HP	29 45*4	24 HP	40 61*4	30 HP	50 64*4	36 HP	59 64*4		

*4: In case of 1.5kW indoor unit connection.

It is increase the risk of drastically lowering of capacity when the outside temperature is below than -10°C.

2. Features of 2WAY SYSTEM

■ Combination of outdoor units

Total horse power Type (HP)	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40	42	44	46	48	50	52	54	56	58	60	62	64	
8	1																													
10		1					1		1								1													
12			1				1	2		1								1												
14				1							1		1						1		1		1					1		
16					1					1	1	1	2		1			2	2	2	3	1	2		1			3	4	
18						1										1										1				
20							1							1	1	1	2						1	1	2	2	2	3		

Total horse power Type (HP)	66	68	70	72	74	76	78	80
8								
10	1		1					
12		1						
14								
16	1	1		2	1	1		
18					1		1	
20	2	2	3	2	2	3	3	4



2. Features of 2WAY SYSTEM

■ Capacity control

The compressor combination (All PC inverter compressor) allows very smooth capacity control from 0.8 HP to 80 HP.

Realization of smooth capacity control from 0.8HP to 80HP


Capacity control is possible smoothly with a DC inverter compressor.

The graph shown in the below is the image of the operating combination of compressors in case of 64HP system.


In actual operation, the combination will be changed by operating condition, operating time amount, priority of compressor and so on.

	Unit 1	Unit 2	Unit 3	Unit 4
Comp. HP	16HP	16HP	16HP	16HP
INV1 comp.	8	8	8	8
INV2 comp.	8	8	8	8

* 64HP = U-16ME2E8 x 4

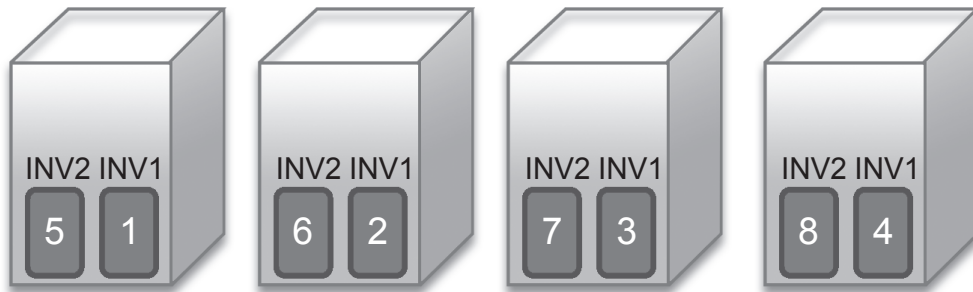

In case of 64 HP system

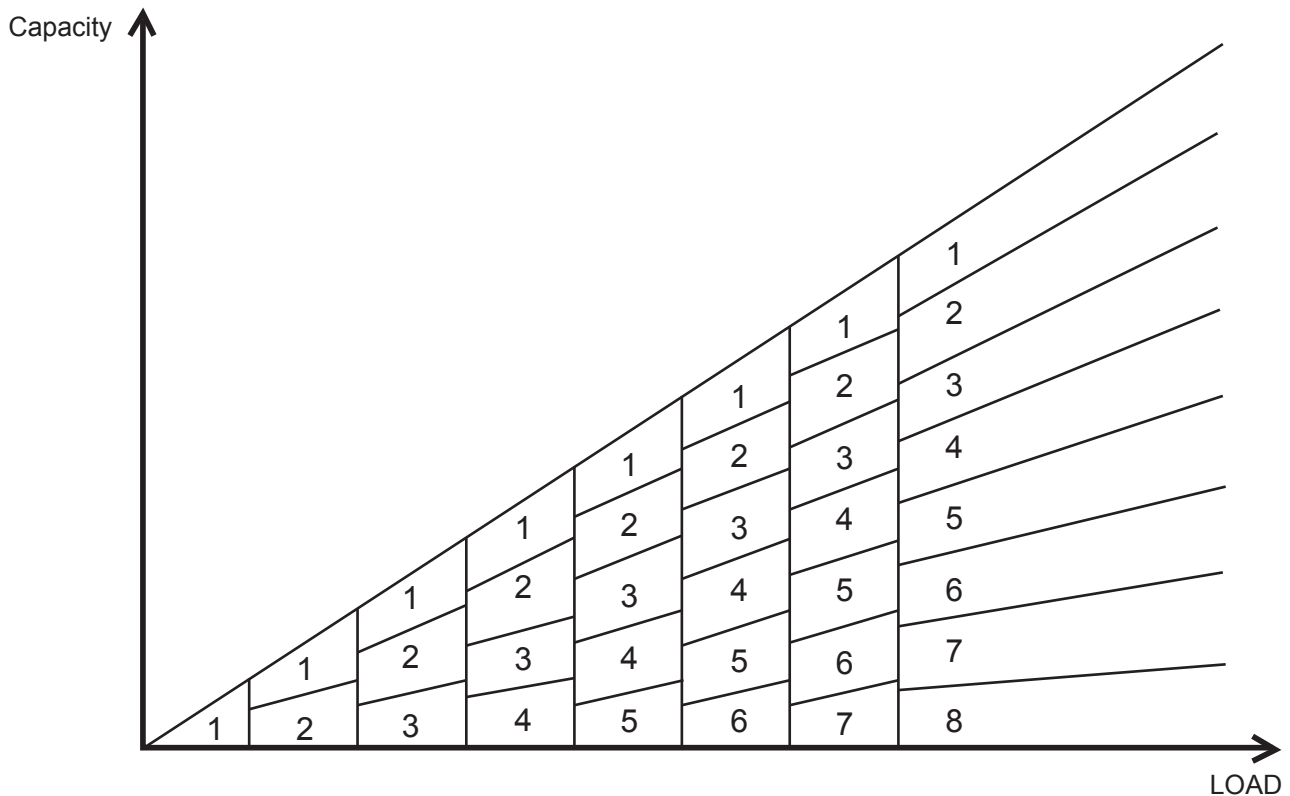

1



Contents

2. DESIGN OF 2WAY SYSTEM

1. Model Selection and Capacity Calculator	2-2
1-1. Operating Range	2-2
1-2. Procedure for Selecting Models and Calculating Capacity	2-3
1-3. Tubing Length	2-4
1-4. Tubing Size	2-8
1-5. Straight Equivalent Length of Joints	2-10
1-6. Check of Limit Density	2-11
1-7. Calculation of Actual Capacity of Indoor Unit	2-12
2. System Design	2-17
2-1. System Example	2-17
2-2. Example of Tubing Size Selection and Refrigerant Charge Amount	2-19
3. Electrical Wiring	2-23
3-1. General Precautions on Wiring	2-23
3-2. Recommended Wire Length and Wire Diameter for Power Supply System	2-23
3-3. Wiring System Diagrams	2-24
4. Installation Instructions	2-28
■ Outdoor Unit	2-28
4-1. Selecting the Installation Site for Outdoor Unit	2-28
4-2. Shield for Horizontal Exhaust Discharge	2-31
4-3. Installing the Outdoor Unit in Heavy Snow Areas	2-31
4-4. Precautions When Installing in Heavy Snow Areas	2-31
4-5. Dimensions of Wind Ducting	2-32
4-6. Dimensions of Snow Ducting	2-35
4-7. Transporting the Outdoor Unit	2-38
4-8. Installing the Outdoor Unit	2-39
4-9. Routing the Tubing	2-41
4-10. Prepare the Tubing	2-42
4-11. Connect the Tubing	2-43
5. HOW TO PROCESS TUBING	2-47
5-1. Connecting the Refrigerant Tubing	2-47
5-2. Connecting Tubing Between Indoor and Outdoor Units	2-48
5-3. Insulating the Refrigerant Tubing	2-48
5-4. Taping the Tubes	2-50
5-5. Finishing the Installation	2-50
6. AIR PURGING	2-51
■ Air Purging with a Vacuum Pump (for Test Run) Preparation	2-51
7. Optional Parts	2-54
7-1. Distribution Joint Kits (CZ-P160BK2, P680BK2, P1350BK2, P680PJ2, P1350PJ2, P4HPC2, P4HP2C2, P4HP1C2)	2-54
8. Supplement	2-60

1. Model Selection and Capacity Calculator

1-1. Operating Range

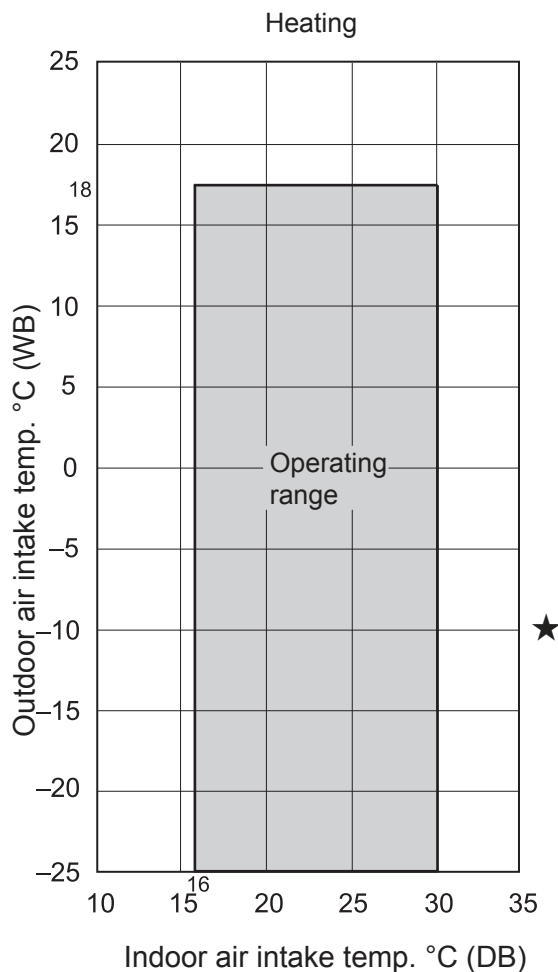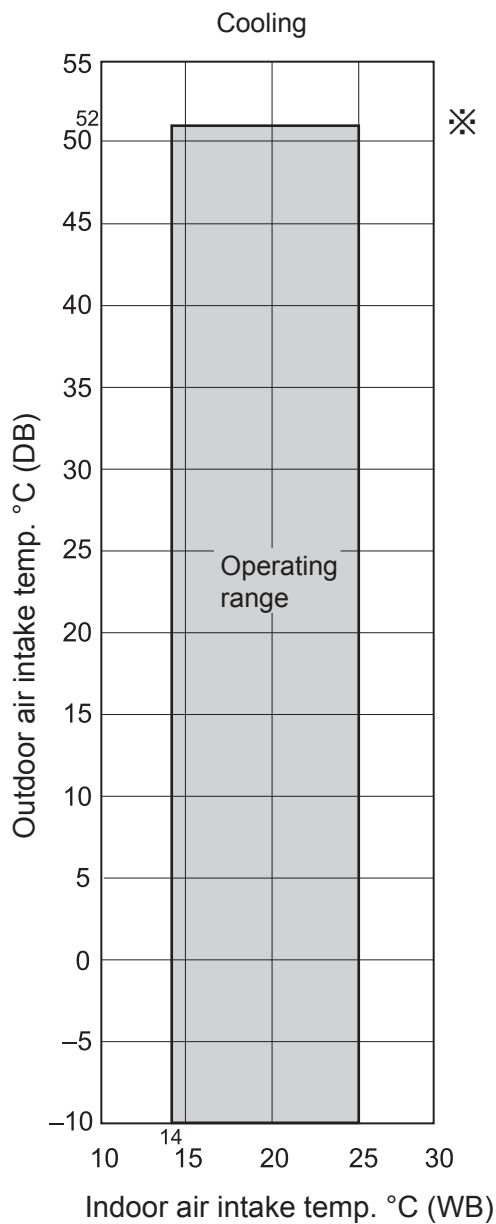

★ : When the outdoor and indoor unit capacity ratio is above 130 % and below 200 %, the lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).


※ : When the outdoor air temperature is between 50 to 52°C in cooling mode, the unit Intermittent operation happens.

1. Model Selection and Capacity Calculator

1-2. Procedure for Selecting Models and Calculating Capacity

■ Model Selection Procedure

Select the model and calculate the capacity for each refrigerant system according to the procedure shown below.

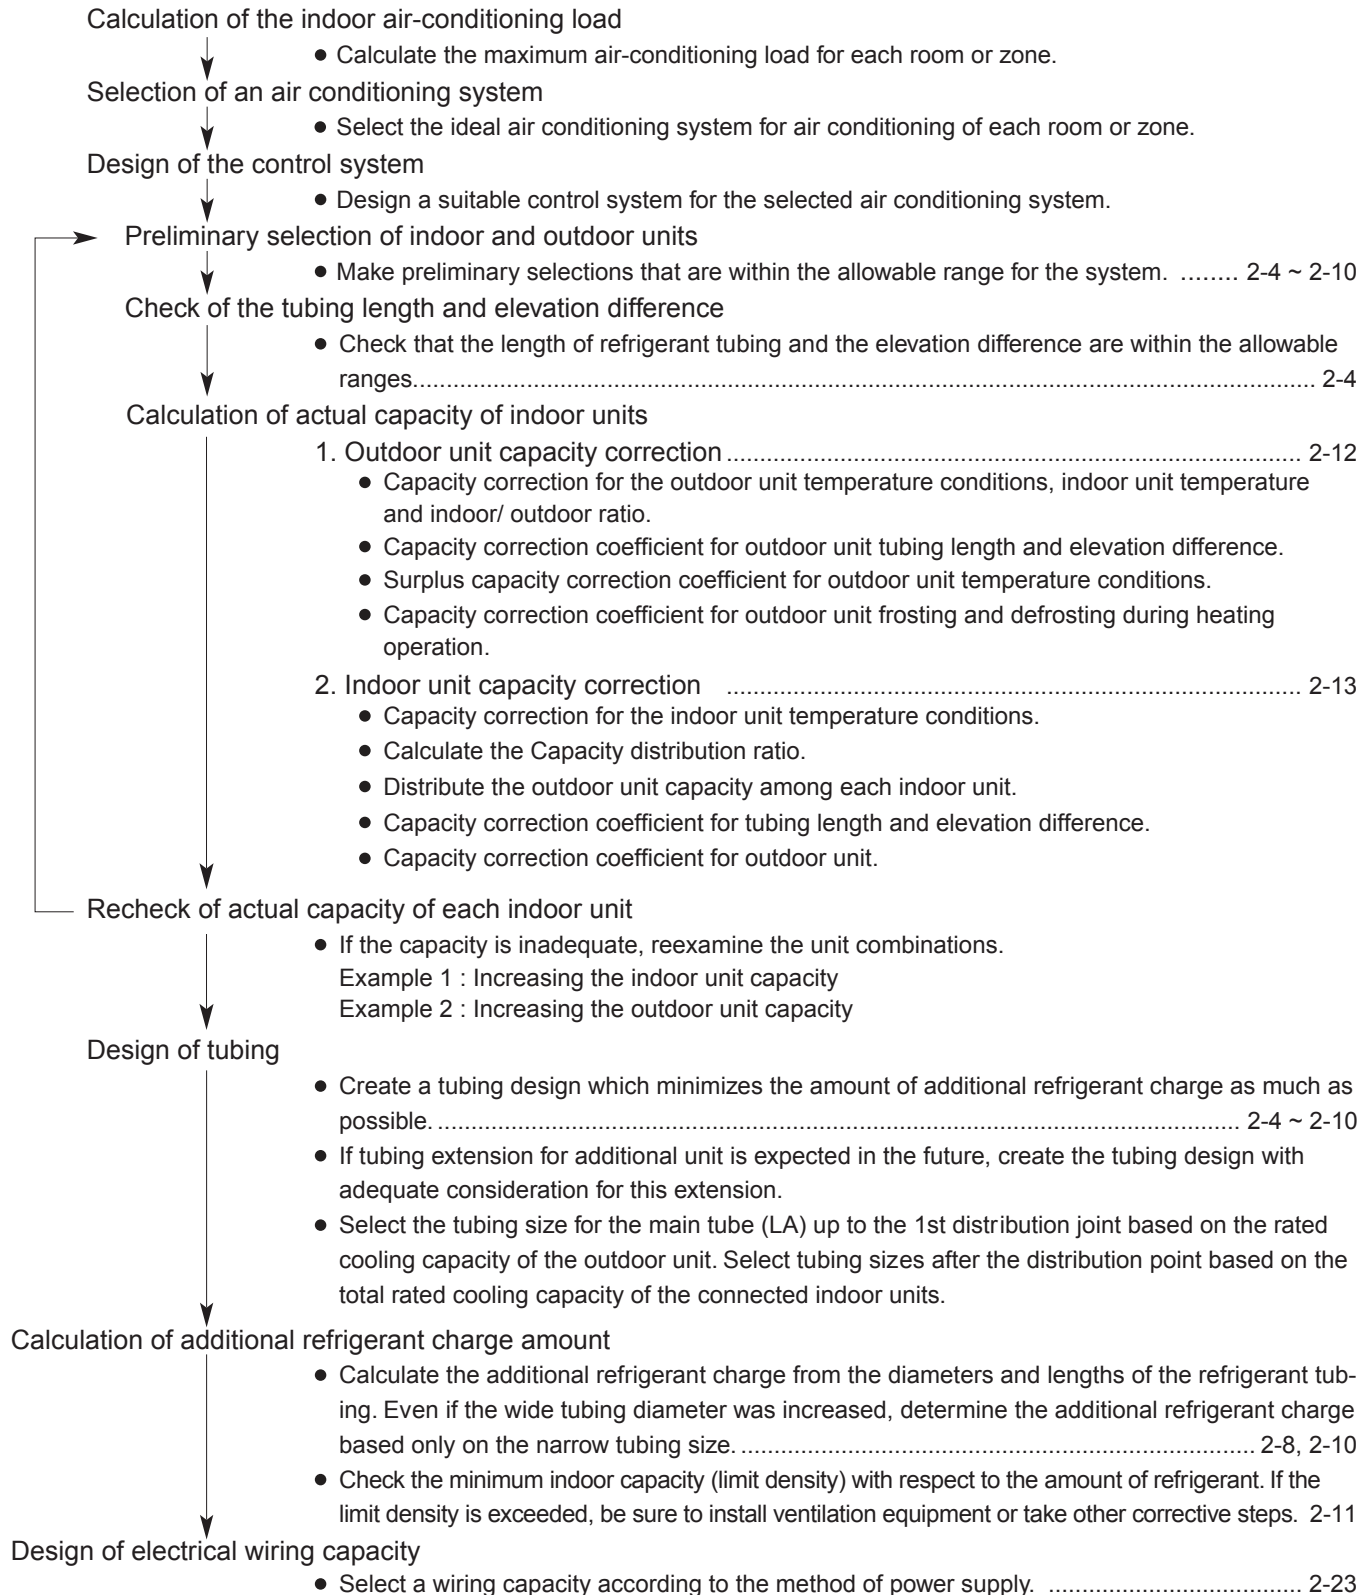


1. Model Selection and Capacity Calculator

1-3. Tubing Length

Select the installation location so that the length and size of refrigerant tubing are within the allowable range shown in the figure below.

1. — Main tubing length (maximum tubing size) $LM = LA + LB \dots$
2. — Main distribution tubes $LC - LH$ are selected according to the capacity after the distribution joint.
3. The outdoor connection main tubing (LO portion) is determined by the total capacity of the outdoor units that are connected to the tube ends.
4. — Sizes of indoor unit connection tubing $\varnothing 1 - \varnothing 64$ are determined by the connection tubing sizes on the indoor units.

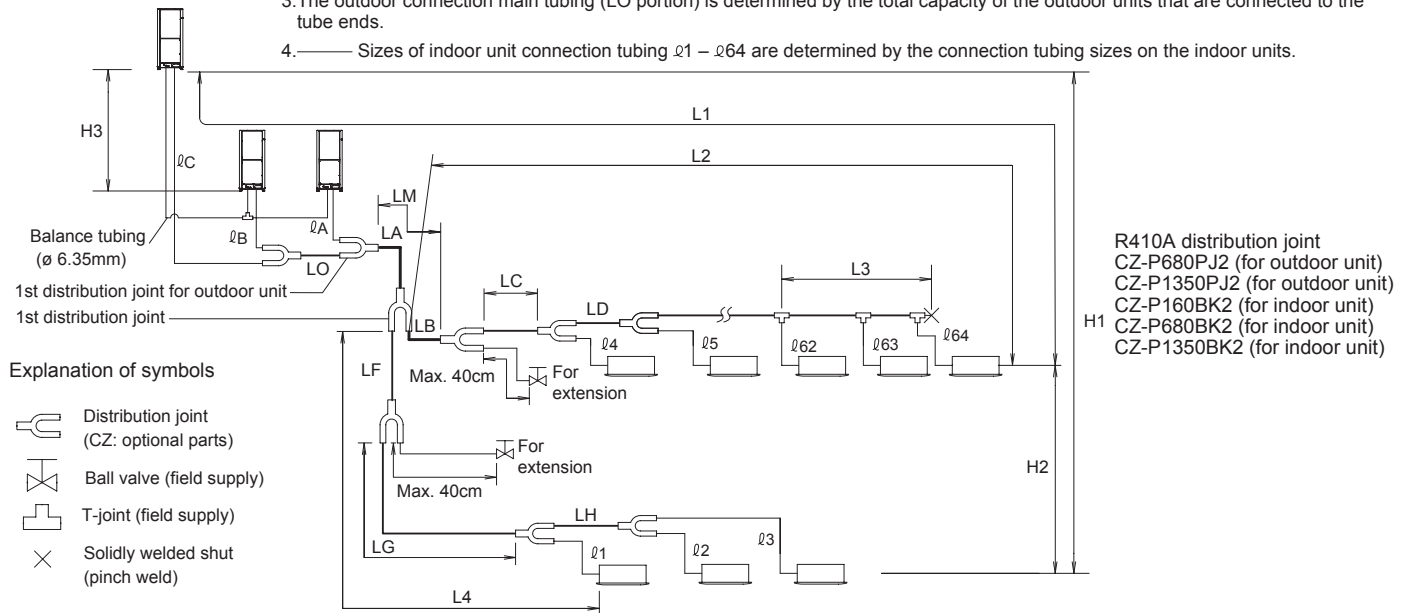

NOTE

* Be sure to use special R410A distribution joints (CZ: optional parts) for outdoor unit connections and tubing branches.

Table 2-1 Ranges that Apply to Refrigerant Tubing Lengths and to Differences in Installation Heights

				Unit: m
Item	Mark	Contents	Length	
Allowable tubing length	L1	Max. tubing length	Actual length	$\leq 200^{*2}$
			Equivalent length	$\leq 210^{*2}$
	$\Delta L (L2 - L4)$	Difference between max. length and min. length from the 1st distribution joint	$\leq 50^{*5}$	
	LM	Max. length of main tubing (at maximum size) * Even after 1st distribution joint, LM is allowed if at maximum tubing length.	— ^{*3}	
	$\varnothing 1, \varnothing 2 \sim \varnothing 64$	Max. length of each distribution tube	$\leq 50^{*7}$	
	$L1 + \varnothing 1 + \varnothing 2 \sim \varnothing 63 + \varnothing A + \varnothing B + LF + LG + LH$	Total max. tubing length including length of each distribution tube (only liquid tubing)	≤ 1000	
Allowable elevation difference	H1	When outdoor unit is installed higher than indoor unit	≤ 50	
		When outdoor unit is installed lower than indoor unit	≤ 40	
	H2	Max. difference between indoor units	$\leq 15^{*6}$	
	H3	Max. difference between outdoor units	≤ 4	
Allowable length of joint tubing	L3	T-joint tubing (field-supply); Max. tubing length between the first T-joint and solidly welded-shut end point	≤ 2	

L = Length
H = Height

NOTE

- 1: The outdoor connection main tubing (LO portion) is determined by the total capacity of the outdoor units that are connected to the tube ends.
- 2: If the longest tubing length (L1) exceeds 90 m (equivalent length), increase the sizes of the main tubes (LM) by 1 rank for gas tubes and liquid tubes. Use a field supply reducer. Select the tube size from the table of main tubing sizes (Table 2-5) and from the table of refrigerant tubing sizes (Table 2-9).
- 3: If the longest main tubing length (LM) exceeds 50 m, increase the main tubing size at the portion before 50 m by 1 rank for the gas tubes. Use a field supply reducer. Determine the length less than the limitation of allowable maximum tubing length. For the portion that exceeds 50 m, set based on the main tubing size (LA) listed in Table 2-5.


1. Model Selection and Capacity Calculator

- 4: If the size of the existing tubing is already larger than the standard tubing size, it is not necessary to further increase the size.
 * If the total amount of refrigerant for the system exceeds the value listed below, then change the size of the tubing to reduce the amount of refrigerant.
 Total amount of refrigerant for the system with 1 outdoor unit: 50 kg
 Total amount of refrigerant for the system with 2 outdoor units: 80 kg
 Total amount of refrigerant for the system with 3 outdoor units or 4 outdoor units: 100 kg
- 5: When the tubing length exceeds 40 m, increase a longer liquid or gas tubing by 1 rank.
 See the section "Refrigerant Pipe" as described below.
- 6: If the total distribution tubing length exceeds 500m, maximum allowable elevation difference (H2) between the indoor units is calculated by the following formula. Make sure the indoor unit's actual elevation difference should fall within the figure calculated as follows.
 Unit of account (meter): $15 \times (2 - \text{total tubing length(m)} \div 500)$
- 7: If any of the tubing length exceeds 30m, increase the size of the liquid and gas tubes by 1 rank.

■ Refrigerant Pipe

Tubing size increase [Difference ΔL from the first distribution joint between maximum and minimum length]

If the ΔL exceeds 40m, it is necessary to increase both the liquid and gas tubes by one size. Follow the steps below to increase the size.

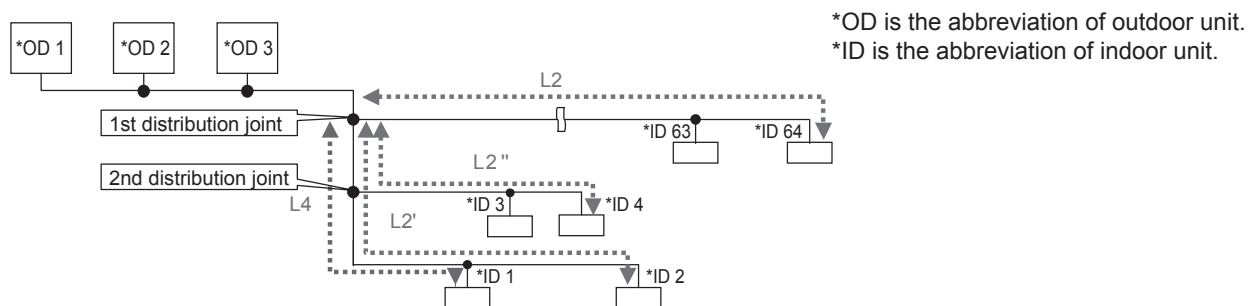

1. Check the combined indoor units which the ΔL exceeds 40m.
 Calculate the ΔL of each combined indoor unit after 1st distribution joint ($L2 \{L2', L2'' \dots\} - L4$).
 The $L2$ ($L2 \{L2', L2'' \dots\}$) indicates the pipe length connected to the farthest indoor unit among each combined indoor unit from 1st distribution joint. The $L4$ indicates the pipe length connected from the 1st distribution joint to the nearest indoor unit among all connected indoor units to the system. If the calculated ΔL exceeds 40m, it is necessary to increase by one size of both the liquid and gas tubes. Follow the steps to increase the size.
2. Check the total capacity of each combined indoor unit system.
 Calculate the total capacity of indoor units from the 1st distribution joint.
 Example: $L2''$: Total capacity of indoor unit 3 and 4
3. Check the portion for increasing the pipe size and length.
 Portion to increase the pipe by one size: Increase the pipe size to be directed towards the indoor units from the 1st distribution joint against the indoor unit which the ΔL exceeds 40m. Pipe length for sizing up: Pipe length becomes different according to the total capacity of indoor units.

Total capacity of indoor units and pipe length for sizing up	Length for sizing up
Total capacity of combined indoor units	
Less than 22.4kW	12m
22.4kW or more and less than 52.4kW	20m
52.4kW or more	28m


- * The larger the total capacity, the more it is necessary to increase the pipe length for sizing up.
 * If the range of size up portion is improper, it is available to extend the length for sizing up until the next distribution joint is reached.

NOTE:

1. Be sure to use the reducer (field supply) at joint portion between the original pipe and the pipe increased by one size.
2. If there is the necessity to increase by one size from the original pipe size, there can be only one time effective to increase by one size even though the portion for sizing up is overlapped.
3. It may sometimes happen that the diameter of pipe when sized up becomes wider than that of the main pipe LA.

1. Model Selection and Capacity Calculator

Example 1

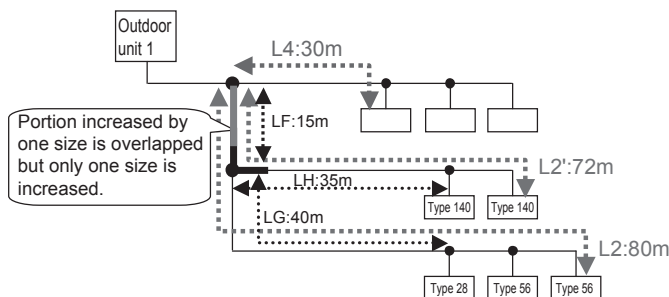

1. Check the portion for one size increase.

	ΔL	Total capacity of indoor units	Length for sizing up
L2 system	50m	14kW	12m
L2' system	42m	28kW	20m

L2 combined indoor units

Increase the gas and liquid tubes 12m by one size from the 1st distribution joint to be directed towards L2 indoor units.

LF: Increase 12m by one size among 15m.

LG: No increase by one size

L2' combined indoor units

Increase the gas and liquid tubes 20m by one size from the 1st distribution joint to be directed towards L2' indoor units.

LF: Increase all 15m by one size

LH: Increase 5m by one size among 35m.


2. Final result

	Before sizing up	After sizing up	Tube length	Size up length
LF	ϕ 12.7 / ϕ 28.58	ϕ 15.88 / ϕ 31.75	15m	15m
LG	ϕ 9.52 / ϕ 15.88	No size up	40m	0m
LH	ϕ 9.52 / ϕ 22.22	ϕ 12.7 / ϕ 25.4	35m	5m

* The LH is only 5m from the 2nd distribution joint.

* The size increased portion is overlapped at the LF but it has only one size increase.

Example 2

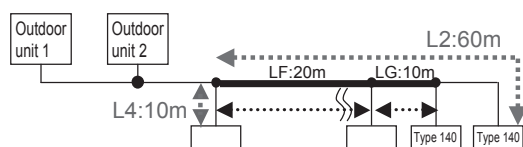

1. Checking the portion for one size increase

	ΔL	Total capacity of indoor units	Length for sizing up
L2 system	50m	70kW	28m

• L2 combined indoor units

Increase the gas and liquid tubes 28m by one size from the 1st distribution joint to be directed towards L2 indoor units.

LF: Increase 20m by one size.

LG: Increase 8m by one size among 10m.

2. Final result

	Before sizing up	After sizing up	Tube length	Size up length
LF	ϕ 15.88 / ϕ 28.58	ϕ 19.05 / ϕ 31.75	20m	20m
LG	ϕ 15.88 / ϕ 28.58	ϕ 19.05 / ϕ 31.75	10m	8m

* The LG is only 8m from the 2nd distribution joint.LG

* It is possible to increase the LG to 10m by one size.

1. Model Selection and Capacity Calculator

Additional Refrigerant Charge

Additional refrigerant charge amount is calculated below.

Required amount of additional refrigerant charge
 = [(Amount of additional refrigerant charge per meter of each size of liquid tube × its tube length) + (...) + (...)]
 + [(Necessary amount of additional refrigerant charge per outdoor unit) + (...) + (...)]

* Always charge accurately using a scale for weighing.

* If the total amount of refrigerant for the system exceeds the value listed below, change the size of the tubing to reduce the amount of refrigerant.

	with 1 outdoor unit	with 2 outdoor units	with 3 or 4 outdoor units
Total amount of refrigerant for the system	50 kg	80 kg	100 kg

Table 2-2-1 Amount of Additional Refrigerant Charge Per Meter, According to Liquid Tubing Size

Liquid tubing size (mm)	6.35	9.52	12.7	15.88	19.05	22.22	25.4
Amount of additional refrigerant charge/m (g /m)	26	56	128	185	259	366	490

Table 2-2-2 Necessary Amount of Additional Refrigerant Charge Per Outdoor Unit

U-8ME2E8	U-10ME2E8	U-12ME2E8	U-14ME2E8	U-16ME2E8	U-18ME2E8	U-20ME2E8
5.5 kg	5.5 kg	7.0 kg	7.0 kg	7.0 kg	7.0 kg	7.0 kg

Table 2-3 Refrigerant Charge Amount at Shipment (for Outdoor Unit)

U-8ME2E8	U-10ME2E8	U-12ME2E8	U-14ME2E8	U-16ME2E8	U-18ME2E8	U-20ME2E8
5.6 kg	5.6 kg	8.3 kg	8.3 kg	8.3 kg	9.5 kg	9.5 kg

Table 2-4 System Limitations

Max. No. allowable connected outdoor units	4 *2
Max. capacity allowable connected outdoor units	224 kW (80 HP)
Max. connectable indoor units	64 *1
Max. allowable indoor/outdoor capacity ratio	50 – 130 % *3

*1: In the case of 38 HP (Type 107 kW) or smaller units, the number is limited by the total capacity of the connected indoor units.

*2: Up to 4 units can be connected if the system has been extended.

*3: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

Maximum number of connectable indoor units when connected with minimum capacity

Total horse power	Number of indoor units	Total horse power	Number of indoor units	Total horse power	Number of indoor units	Total horse power	Number of indoor units	Total horse power	Number of indoor units	Total horse power	Number of indoor units
8 HP	13 20*4	14 HP	23 36*4	20 HP	33 50*4	26 HP	43 64*4	32 HP	53 64*4	38 HP	63 64*4
10 HP	16 25*4	16 HP	26 40*4	22 HP	36 55*4	28 HP	46 64*4	34 HP	56 64*4	40~80 HP	64
12 HP	19 30*4	18 HP	29 45*4	24 HP	40 61*4	30 HP	50 64*4	36 HP	59 64*4		

*4: In case of 1.5kW indoor unit connection.

It is increase the risk of drastically lowering of capacity when the outside temperature is below than -10°C.

1. Model Selection and Capacity Calculator

1-4. Tubing Size

Table 2-5 Main Tubing Size (LA)

Unit: mm

kW	22.4	28.0	33.5	40.0	45.0	50.0	56.0	61.5	68.0	73.0	78.5	85.0	90.0	96.0	
Total system horsepower	8	10	12	14	16	18	20	22	24	26	28	30	32	34	
Combined outdoor units	8	10	12	14	16	18	20	12 10	12 12	16 10	16 12	16 14	16 16	20 14	
Gas tube	ø19.05	ø22.22	ø25.4		ø28.58				ø31.75						
Liquid tube	ø9.52		ø12.7			ø15.88				ø19.05					
kW	101	107	113	118	124	130	135	140	145	151	156	162	168	174	
Total system horsepower	36	38	40	42	44	46	48	50	52	54	56	58	60	62	
Combined outdoor units	20 16	20 18	20 20	16 16 10	16 16 12	16 16 14	16 16 16	20 16 14	20 16 16	20 20 14	20 20 16	20 20 18	20 20 20	16 16 16 14	
Gas tube	ø38.10													ø41.28	
Liquid tube	ø19.05														
kW	180	185	190	196	202	208	213	219	224						
Total system horsepower	64	66	68	70	72	74	76	78	80						
Combined outdoor units	16 16 16 16	20 20 16 10	20 20 16 12	20 20 20 10	20 20 16 16	20 20 18 16	20 20 20 16	20 20 20 18	20 20 20 20						
Gas tube	ø41.28				ø44.45										
Liquid tube	ø19.05		ø22.22												

* If future extension is planned, select the tubing diameter based on the total horsepower after extension.

However, extension is not possible if the resulting tubing size is two ranks higher.

* The balance tube (outdoor unit tube) diameter is ø6.35.

* The refrigerant tubing should be used with R410A refrigerant.

* If the length of the longest tube (L1) exceeds 90 m (equivalent length), increase the main tube (LM) size by 1 rank for the gas and liquid tubes. Select from Table 2-5 and Table 2-9. Use field-supply reducers. If the tube diameter is more than ø41.28, use field-supply reducer.

* If the longest main tube length (LM) exceeds 50 m, increase the main tube size at the portion before 50 m by 1 rank for the gas tubes.

For the portion that exceeds 50 m, set based on the main tube sizes (LA) listed in the table above.

1. Model Selection and Capacity Calculator

■ Size of Tubing (LO) Between Outdoor Units

Calculate the total relevant horsepower connected to the tube ends of outdoor units and select the size of tubing between outdoor units based on the main tubing size (LA) listed in the table above.

■ Table 2-6 Main Tubing Size After Distribution (LB, LC...)

Unit: mm
HP = horsepower


Total capacity after distribution	Below kW	7.1 (2.5 HP)	16.0 (6 HP)	22.5 (8.1 HP)	30.0 (11 HP)	42.0 (15 HP)	52.4 (19 HP)	70.0 (25 HP)	98.0 (35 HP)	170.0 (61 HP)	187.0 (67 HP)	199.0 (71 HP)	—
	Over kW	—	7.1 (2.5 HP)	16.0 (6 HP)	22.5 (8.1 HP)	30.0 (11 HP)	42.0 (15 HP)	52.4 (19 HP)	70.0 (25 HP)	98.0 (35 HP)	170.0 (61 HP)	187.0 (67 HP)	199.0 (71 HP)
Tubing size	Gas tube	ø12.7	ø15.88	ø19.05	ø22.22	ø25.4	ø28.58	ø28.58	ø31.75	ø38.1	ø41.28	ø41.28	ø44.45
	Liquid tube	ø9.52	ø9.52	ø9.52	ø9.52	ø12.7	ø12.7	ø15.88	ø19.05	ø19.05	ø19.05	ø22.22	ø22.22

Note: In case the total capacity of indoor units connected after distribution exceeds the total capacity of the outdoor units, select the main tubing size for the total capacity of the outdoor units.

■ Table 2-7 Outdoor Unit Tubing Connection Size (LA – LC)

Unit: mm

kW	22.4	28.0	33.5	40.0	45.0	50.0	56.0
Horsepower (HP)	8	10	12	14	16	18	20
Gas tube	ø19.05	ø22.22	ø25.4		ø28.58		
	Braze connection						
Liquid tube	ø9.52		ø12.7			ø15.88	
	Flare connection						
Balance tube	ø6.35						
	Flare connection						

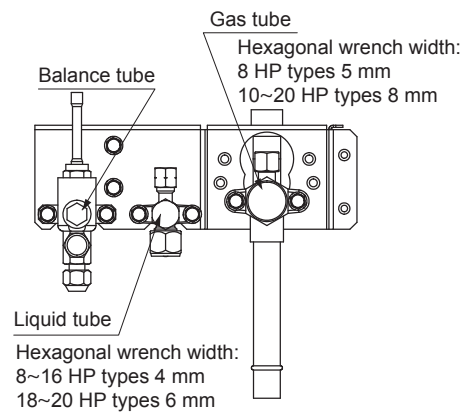

■ Table 2-8 Indoor Unit Tubing Connection Size

Indoor unit type	15	22	28	36	45	56	60	71/73	90	106	140	160	180	224	280
Gas tube (mm)	ø12.7						ø15.88					ø19.05	ø22.22		
Liquid tube (mm)	ø6.35						ø9.52								

Note: Use the material of temper - 1/2 H or - H for tubing over ø22.22.

■ Table 2-9 Refrigerant Tubing

Tubing size (mm)			
Material Temper - O		Material Temper - 1/2 H • H	
ø6.35	t0.8	ø22.22	t1.0
ø9.52	t0.8	ø25.4	t1.0
ø12.7	t0.8	ø28.58	t1.0
ø15.88	t1.0	ø31.75	t1.1
ø19.05	t1.2	ø38.1	over t1.35
		ø41.28	over t1.45
		ø44.45	over t1.55
		ø50.8	over t1.8

* When bending the tubes, use a bending radius that is at least 4 times the outer diameter of the tubes.

In addition, take sufficient care to avoid crushing or damaging the tubes when bending them.

* Use the material of temper - 1/2 H or - H for tubing ø22.22 or more.






1. Model Selection and Capacity Calculator

■ Straight equivalent length of joints

1-5. Straight Equivalent Length of Joints

Design the tubing system by referring to the following table for the straight equivalent length of joints.

Straight Equivalent Length of Joints

Gas tubing size (mm)		12.7	15.88	19.05	22.22	25.4	28.58	31.75	38.1	41.28	44.45	50.8
90° elbow		0.30	0.35	0.42	0.48	0.52	0.57	0.70	0.79	0.85	0.92	1.00
45° elbow		0.23	0.26	0.32	0.36	0.39	0.43	0.53	0.59	0.64	0.69	0.79
U-shape tube bent (R60-100 mm)		0.90	1.05	1.26	1.44	1.56	1.71	2.10	2.37	2.55	2.76	3.00
Trap bend		2.30	2.80	3.20	3.80	4.30	4.70	5.00	5.80	6.80	7.40	7.98
Y-branch distribution joint		Equivalent length conversion not needed.										
Ball valve for service		Equivalent length conversion not needed.										

1. Model Selection and Capacity Calculator

■ Check of limit density



WARNING Always check the gas density limit for the room in which the unit is installed.

1-6. Check of Limit Density

When installing an air conditioner in a room, it is necessary to ensure that even if the refrigerant gas accidentally leaks out, its density does not exceed the limit level for that room. If the density could exceed the limit level, it is necessary to provide an opening between the unit and the adjacent room, or to install mechanical ventilation which is interlocked with a leak detector.

(Total refrigerant charged amount: k_g)


(Min. indoor volume where the indoor unit is installed: m^3)

$$\leq \text{Limit density } 0.44 \text{ (kg/m}^3\text{)}$$

The limit density of refrigerant R410A which is used in this unit is 0.44 kg/m^3 (ISO 5149).

The shipped outdoor unit comes charged with the amount of refrigerant fixed for each type, so add it to the amount that is charged in the field. (For the refrigerant charge amount at shipment, refer to the unit's nameplate.)

Minimum indoor volume & floor area as against the amount of refrigerant is roughly as given in the following table.

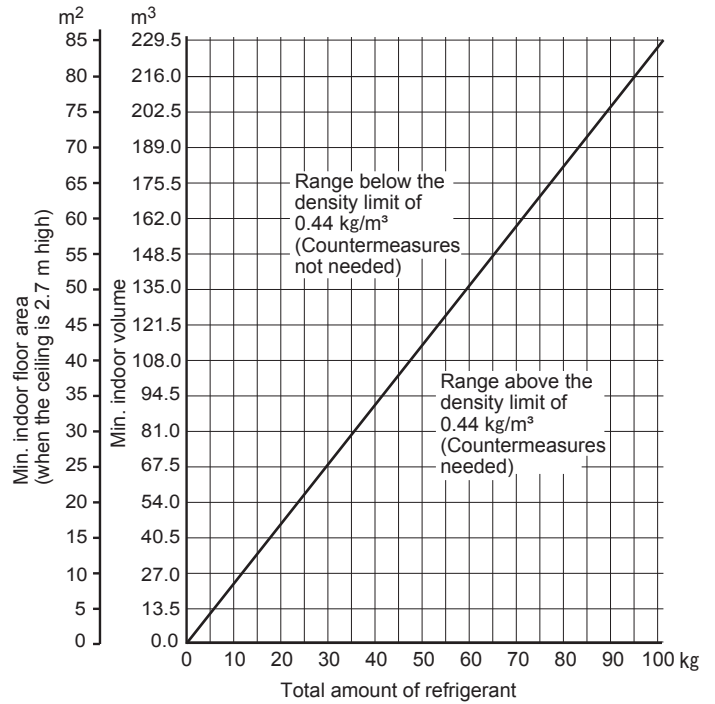

CAUTION Pay special attention to any location, such as a basement, etc., where leaking refrigerant can accumulate, since refrigerant gas is heavier than air.

1. Model Selection and Capacity Calculator

1-7. Calculation of Actual Capacity of Indoor Unit

■ Calculating the actual capacity of each indoor unit

Because the capacity of a multi air-conditioner changes according to the temperature conditions, tubing length, elevation difference and other factors, select the correct model after taking into account the various correction values.

When selecting the model, calculate the corrected capacities of the outdoor unit and each indoor unit.

Use the corrected outdoor unit capacity and the total corrected capacity of all the indoor units to calculate the actual final capacity of each indoor unit.

1. Outdoor unit capacity correction

$$\text{Outdoor unit capacity correction (kW)} = (\text{A}) \times (\text{B}) \times (\text{C}) \times (\text{D})$$

(A) Capacity correction for the outdoor unit temperature conditions, indoor unit temperature and indoor/ outdoor ratio (kW)

Read the capacity correction for outdoor unit temperature, indoor unit temperature and indoor/ outdoor ratio as shown in the section "8. CAPACITY TABLE", "1. Capacity of Outdoor Unit" and "2. Cooling Capacity of Indoor Unit".

* Indoor unit temperature is indoor unit rated capacity - weighted average temperature.

Example

Cooling operation

No.	(a) Rated capacity	(b) Intake temperature	(a) × (b)
1	2.8 kW	19 °C WB	53.2
2	3.6 kW	18 °C WB	64.8
3	4.5 kW	17 °C WB	76.5
4	5.6 kW	16 °C WB	89.6

$$\text{Rated capacity-weighted average temperature} = \frac{\sum((a) \times (b))}{\sum(a)} = 17.2^\circ\text{C WB}$$

* The indoor/ outdoor ratio should be selected according to the real rated capacity.

Example

There are 4 indoor units for class 28, 36, 45, 56 and the outdoor unit HP is 8 (22.4kW in the cooling-mode, 25.0kW in the heating-mode).

No.	Rated cooling capacity	Rated heating capacity
1	2.8 kW	3.2 kW
2	3.6 kW	4.2 kW
3	4.5 kW	5.0 kW
4	5.6 kW	6.3 kW
Total	16.5 kW	18.7 kW
I/O ratio	73.7%	74.8 %

(B) Capacity correction coefficient for outdoor unit tubing length and elevation difference (%)

From the graph of capacity change characteristics resulting from tubing length and elevation difference on page " 2-15 ", read the capacity correction coefficient.

* Use the lowest capacity changing ratio. Usually, the furthest and highest or the lowest indoor unit is used.

(C) Surplus capacity correction coefficient for outdoor unit temperature conditions (%)

From the graph of surplus capacity characteristics resulting from outdoor temperature on page " 2-14 ", read the capacity correction coefficient.

(D) Capacity correction coefficient for outdoor unit frosting and defrosting during heating operation (%)

From the outdoor unit heating capacity correction coefficient during frosting / defrosting on page " 2-14 ", read the capacity correction coefficient.

1. Model Selection and Capacity Calculator

2. Indoor unit capacity correction coefficient

$$\text{Indoor unit capacity correction (kW)} = (G) \times (I) \times (D)$$

* Indoor unit capacity correction \leq (G)

(E) Capacity correction for the indoor unit temperature conditions (kW)

From the graph of indoor capacity characteristics on page “ 2-15 ”, read the capacity correction coefficient for indoor unit temperature conditions.

$$(E) = \text{Capacity correction coefficient for indoor unit temperature conditions} \times \text{Rated capacity}$$

(F) Calculate the Capacity distribution ratio (%)

$$(F) = \frac{(E)}{\sum(E)}$$

(G) Distribute the outdoor unit capacity among each indoor unit (kW)

$$(G) = (A) \times (F)$$

(H) Capacity correction coefficient for tubing length and elevation difference (%)

From the graph of capacity change characteristics resulting from tubing length and elevation difference on page “ 2-15 ”, read the capacity correction coefficient.


(I) Capacity correction coefficient for outdoor unit (%)

$$(I) = (H) \times (C)$$

- In the case of $(I) \leq 100\%$, loss of capacity resulting from the tubing length can be supplied by the outdoor unit capacity.
 - When the outdoor air temperature is lower in cooling mode
 - When the outdoor air temperature is higher in heating mode

1. Model Selection and Capacity Calculator

Surplus capacity correction coefficient (%)

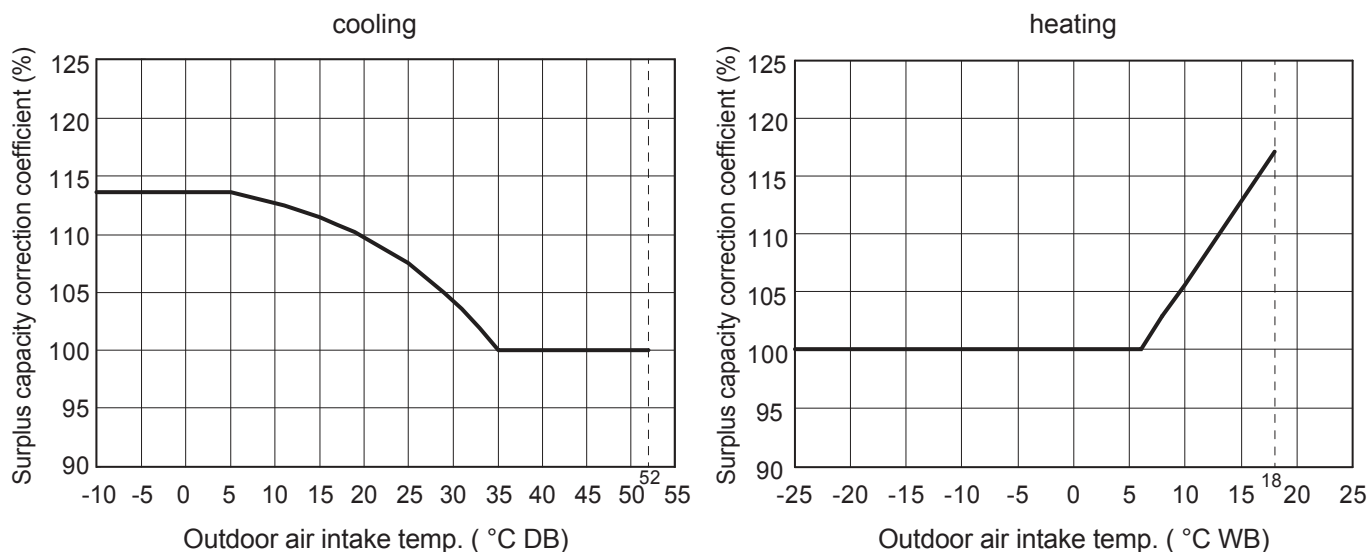

3. Graph of capacity correction coefficients

■ Outdoor unit heating capacity correction coefficient during frosting/defrosting (1 – (4))

Outdoor intake air temp. (°CWB, RH85%)	-25	-24	-23	-22	-21	-20	-15	-10	-8	-6	-5	-4	-2	-1
Correction coefficient	0.97	0.97	0.97	0.97	0.97	0.97	0.97	0.97	0.96	0.94	0.91	0.89	0.87	0.87


Outdoor intake air temp. (°CWB, RH85%)	0	1	2	3	4	5	6
Correction coefficient	0.87	0.88	0.89	0.91	0.92	0.95	1.0

* To calculate the heating capacity with consideration for frosting/defrosting operation, multiply the heating capacity found from the capacity graph by the correction coefficient from the table above.


1. Model Selection and Capacity Calculator

■ Graph of indoor unit capacity characteristics (2 – (2))

Indoor unit cooling capacity characteristics

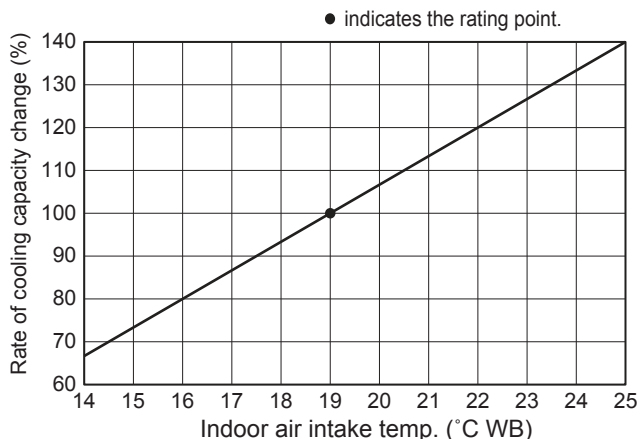


Indoor unit heating capacity characteristics

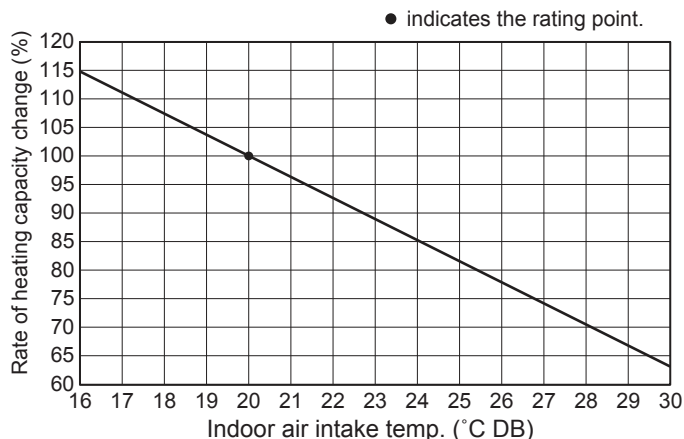


■ Graph of capacity change characteristics resulting from tubing length and elevation difference (1 / 2 – (3))

(Performance correction coefficients by elevation difference of refrigerant tube length [performance change rate ÷ 100] is calculated by the following line map.)

<Cooling>

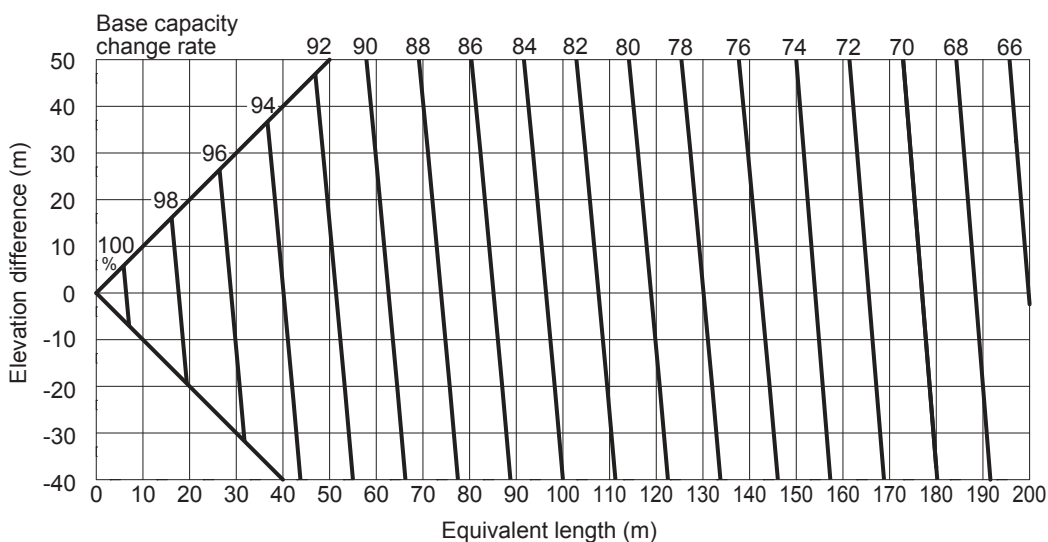

<Heating>

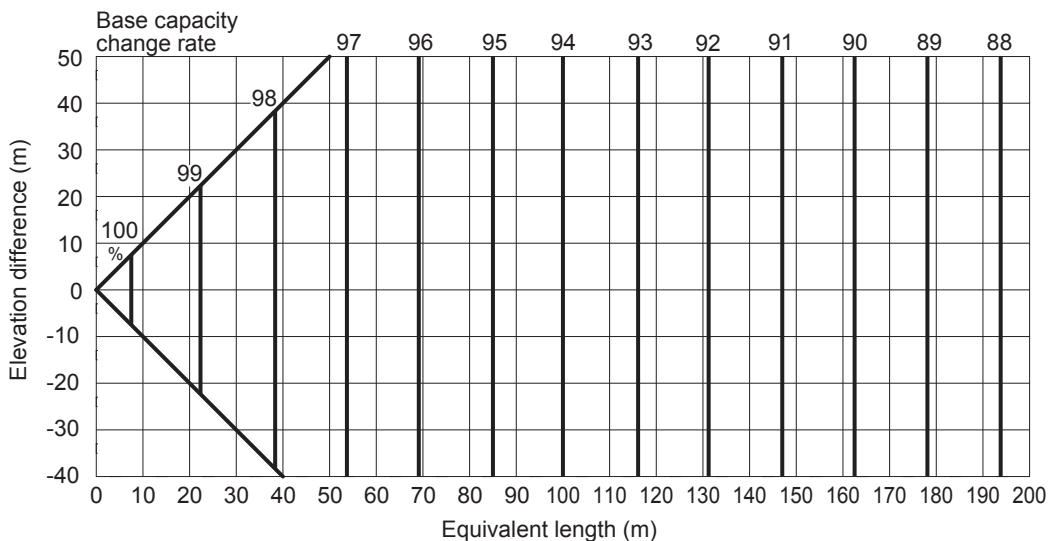

*The positive side for the elevation difference indicates that the outdoor unit is installed at a higher position than the indoor units. The negative side indicates the opposite.

1. Model Selection and Capacity Calculator

- The capacity loss that is caused by the tubing length can be reduced by increasing the sizes of the gas tubes. See Table 2-10 and make the appropriate changes. However, be sure that the total length does not exceed the maximum.
 - * The only sizes which can be increased are the LM (main tubing with the largest diameter) gas tubes, and the changes are limited to those shown in Table 2-10.
- In addition, note that the additional refrigerant charge is determined only by the liquid tube size.

Table 2-10 Equivalent Length Correction Coefficient when the Size of the Gas Tubes (LM) is Increased

Standard tubing diameter (gas tube, mm)	ø12.7	ø15.88	ø19.05	ø22.22	ø25.4	ø28.58	ø31.75	ø38.1	ø41.28	ø44.45
Tubing diameter after change (gas tube, mm)	ø15.88	ø19.05	ø22.22	ø25.4	ø28.58	ø31.75	ø38.1	ø41.28	ø44.45	ø50.8
Equivalent length correction coefficient	0.4		0.5			0.6		0.7		


- * If the size of the gas tubing (LM) have been increased, apply the correction coefficient from Table 2-10 and calculate the equivalent length of the LM section.

Equivalent length of tubing after size increase = Standard tubing equivalent length × Equivalent length correction coefficient

2. System Design

2-1. System Example

Below are the tables created using the "PAC System Diagram Software".

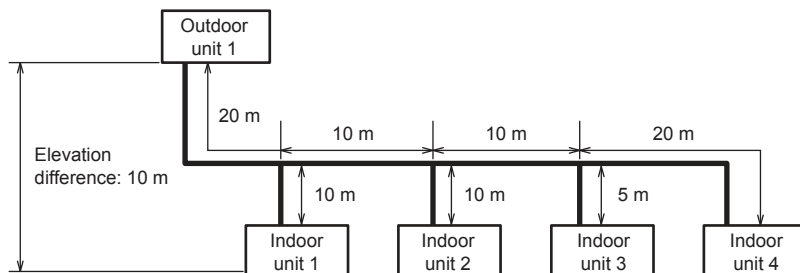

Selection conditions

Assume that installation is in a 50 Hz region.

		Outdoor unit	Room1 (indoor unit 1)	Room2 (indoor unit 2)	Room3 (indoor unit 3)	Room4 (indoor unit 4)
Cooling	Air condition (DB / WB)	34.0 / 22.0	27.0 / 20.0	27.0 / 20.0	27.0 / 20.0	27.0 / 20.0
	Max. load (kW)	-	15.8	13.5	5.0	3.5
Heating	Air condition (DB / WB)	3.0 / 2.0	19.0 / 14.0	19.0 / 14.0	19.0 / 14.0	19.0 / 14.0
	Max. load (kW)	-	16.2	14.3	5.4	4.0
Actual tubing length		60 m	30 m	40 m	45 m	60 m
Equivalent length		72 m	36 m	48 m	54 m	72 m

Preliminary selection

		Outdoor unit	Room1 (indoor unit 1)	Room2 (indoor unit 2)	Room3 (indoor unit 3)	Room4 (indoor unit 4)
Selected model		14 HP	Type 160	Type 140	Type 56	Type 36
Load (cooling / heating) (kW)		-	15.8 / 16.2	13.5 / 14.3	5.0 / 5.4	3.5 / 4.0
Rated capacity (cooling / heating) (kW)		40.0 / 45.0	16.0 / 18.0	14.0 / 16.0	5.6 / 6.3	3.6 / 4.2
Actual capacity (cooling / heating) (kW)		-	16.3 / 16.3	13.9 / 14.4	5.51 / 5.64	3.42 / 3.71

Calculate the actual capacity results according to the capacity calculation procedure on page "2-12" to "2-16"

		Outdoor unit	Room1 (indoor unit 1)	Room2 (indoor unit 2)	Room3 (indoor unit 3)	Room4 (indoor unit 4)
Rated capacity (cooling / heating) (kW)		40.0 / 45.0	16.0 / 18.0	14.0 / 16.0	5.6 / 6.3	3.6 / 4.2
(A) capacity table		41.8 / 46.2	-	-	-	-
(B) Capa. Estimation Coef. : the Equiv. Tube Length		0.882 / 0.958	-	-	-	-
(C) Capa. Estimation Coef. : Temp Conditions		-	1.010 / 1.000	1.010 / 1.000	1.010 / 1.000	1.010 / 1.000
(D) Capa. Estimation Coef. : Frosting / defrosting		- / 0.890	-	-	-	-
(E) Estimation Capacity		-	17.1 / 18.7	14.9 / 16.6	6.0 / 6.5	3.8 / 4.4
(F) Capacity distribution ratio		-	0.408 / 0.404	0.357 / 0.360	0.143 / 0.142	0.092 / 0.094
(G) = (A) × (F)		-	17.1 / 18.7	14.9 / 16.6	6.0 / 6.5	3.8 / 4.4
(H) Capa. Estimation Coef. : the Equiv. Tube Length		-	0.945 / 0.981	0.924 / 0.973	0.914 / 0.969	0.882 / 0.958
(I) = (C) × (H)		-	0.954 / 0.981	0.933 / 0.973	0.923 / 0.969	0.891 / 0.958
Actual capacity (cooling / heating) (kW)		-	16.3 / 16.3	13.9 / 14.4	5.51 / 5.64	3.42 / 3.71

Actual capacity = (G) × (I) × (D)

2. System Design

Indoor unit change

Increase by one rank because the capacity of the indoor unit 4 is lower than the maximum load.

Calculating the actual capacity in the same way as Preliminary selection.

	Outdoor unit	Room1 (indoor unit 1)	Room2 (indoor unit 2)	Room3 (indoor unit 3)	Room4 (indoor unit 4)
Selected model	14 HP	Type 160	Type 140	Type 56	Type 45
Load (cooling / heating) (kW)	-	15.8 / 16.2	13.5 / 14.3	5.0 / 5.4	3.5 / 4.0
Rated capacity (cooling / heating) (kW)	40.0 / 45.0	16.0 / 18.0	14.0 / 16.0	5.60 / 6.30	4.50 / 5.00
Actual capacity (cooling / heating) (kW)	-	16.3 / 16.1	13.9 / 14.2	5.50 / 5.59	4.27 / 4.38

Outdoor unit change

The capacity of the indoor units 1 and 2 is lower than the maximum load.

Increase the capacity of the outdoor unit by one rank because of inability to increase the indoor unit 1 by one rank.

Calculating the actual capacity in the same way as Preliminary selection.

	Outdoor unit	Room1 (indoor unit 1)	Room2 (indoor unit 2)	Room3 (indoor unit 3)	Room4 (indoor unit 4)
Selected model	16 HP	Type 160	Type 140	Type 56	Type 45
Load (cooling / heating) (kW)	-	15.8 / 16.2	13.5 / 14.3	5.0 / 5.4	3.5 / 4.0
Rated capacity (cooling / heating) (kW)	45.0 / 50.0	16.0 / 18.0	14.0 / 16.0	5.60 / 6.30	3.60 / 4.20
Actual capacity (cooling / heating) (kW)	-	16.3 / 16.3	13.9 / 14.4	5.51 / 5.64	4.28 / 4.42

For both cooling and heating in all rooms, actual capacity is now greater than or equal to the maximum load.

Selection is completed

2. System Design

2-2. Example of Tubing Size Selection and Refrigerant Charge Amount

Additional refrigerant charging

Based on the values in Tables 2-2-1, 2-2-2, 2-5, 2-6, 2-7 and 2-8, use the liquid tubing size and length, and calculate the amount of additional refrigerant charge using the formula below.

$$\text{Required additional refrigerant charge (kg)} = [490 \times (a) + 366 \times (b) + 259 \times (c) + 185 \times (d) + 128 \times (e) + 56 \times (f) + 26 \times (g)] \times 10^{-3} + \text{Necessary amount of additional refrigerant charge per outdoor unit.}$$

- (a) : Liquid tubing Total length of ø25.4 (m)
- (b) : Liquid tubing Total length of ø22.22 (m)
- (c) : Liquid tubing Total length of ø19.05 (m)
- (d) : Liquid tubing Total length of ø15.88 (m)
- (e) : Liquid tubing Total length of ø12.7 (m)
- (f) : Liquid tubing Total length of ø9.52 (m)
- (g) : Liquid tubing Total length of ø6.35 (m)

● Charging procedure

Be sure to charge with R410A refrigerant in liquid form.

1. After performing a vacuum, charge with refrigerant from the liquid tubing side. At this time, all valves must be in the “fully closed” position.
2. If it was not possible to charge the designated amount, operate the system in Cooling mode while charging with refrigerant from the gas tubing side. (This is performed at the time of the test run. For this, all valves must be in the “fully open” position. However if only one outdoor unit is installed, a balance tube is not used. Therefore, leave the valves fully closed.)

Charge with R410A refrigerant in liquid form.

With R410A refrigerant, charge while adjusting the amount being fed a little at a time in order to prevent liquid refrigerant from backing up.


- After charging is completed, turn all valves to the “fully open” position.

- Replace the tubing covers as they were before.

1. **R410A additional charging absolutely must be done through liquid charging.**
2. **The R410A refrigerant cylinder has a gray base color, and the top part is pink.**
3. **The R410A refrigerant cylinder includes a siphon tube. Check that the siphon tube is present. (This is indicated on the label at the top of the cylinder.)**
4. **Due to differences in the refrigerant, pressure, and refrigerant oil involved in installation, it is not possible in some cases to use the same tools for R22 and for R410A.**



CAUTION

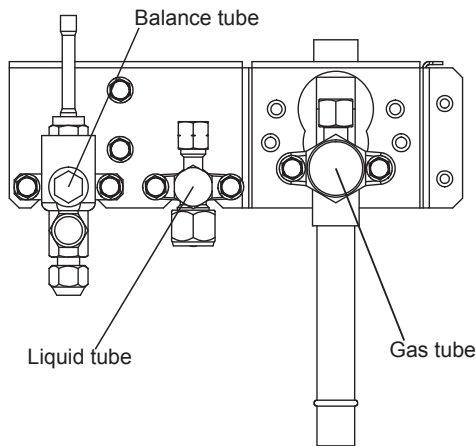


* Use a hexagonal wrench and turn to the left to open.

		Gas tube	Liquid tube
Hex wrench width	8 HP	5 mm	4 mm
	10 HP	8 mm	
	12 HP		
	14 HP		
	16 HP		6 mm
	18 HP		
	20 HP		

Balance tube


Rotate 90 degrees counterclockwise for OPEN

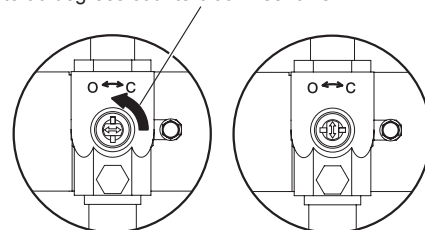

Fully closed (at shipment) Fully open
How to turn the tab

2. System Design

Example:

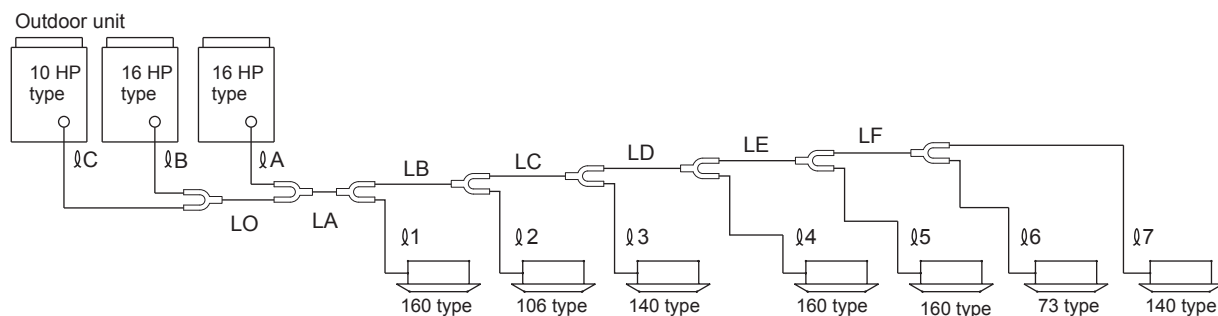

● Example of each tubing length

Main tubing

LO = 2 m	LD = 15 m
LA = 40 m	LE = 10 m
LB = 5 m	LF = 10 m
LC = 5 m	

Distribution joint tubing

Outdoor side	Indoor side
$l A = 2$ m	$l 1 = 30$ m
$l B = 2$ m	$l 2 = 5$ m
$l C = 3$ m	$l 3 = 5$ m
	$l 4 = 5$ m
	$l 5 = 2$ m
	$l 6 = 6$ m
	$l 7 = 5$ m

Note :The maximum tubing length (equivalent length) exceeds 90 m.

● Obtain liquid tubing size from Tables 2-2-1, 2-5, 2-6, 2-7 and 2-8.

Main tubing

LO = $\varnothing 19.05$ mm (Total capacity of outdoor unit is 73.5 kW)	LD = $\varnothing 15.88$ mm (Total capacity of indoor unit is 53.3 kW)
LA* = $\varnothing 22.22$ mm (Total capacity of outdoor unit is 118.0 kW)	LE = $\varnothing 12.7$ mm (Total capacity of indoor unit is 37.3 kW)
LB = $\varnothing 19.05$ mm (Total capacity of indoor unit is 77.9 kW)	LF = $\varnothing 9.52$ mm (Total capacity of indoor unit is 21.3 kW)
LC = $\varnothing 15.88$ mm (Total capacity of indoor unit is 67.3 kW)	

The longest main tubing length in this example (LM = 40 + 5 = 45 m)

* The tubing size $\varnothing 19.05$ was increased to $\varnothing 22.22$.

Distribution joint tubing

Outdoor side	$l A$: $\varnothing 12.7$	$l B$: $\varnothing 12.7$	$l C$: $\varnothing 9.52$ (from outdoor unit connection tubing)
Indoor side	$l 1$: $\varnothing 9.52$	$l 2$: $\varnothing 9.52$	$l 3$: $\varnothing 9.52$
	$l 4$: $\varnothing 9.52$	$l 5$: $\varnothing 9.52$	$l 6$: $\varnothing 9.52$
		$l 7$: $\varnothing 9.52$ (from indoor unit connection tubing)	

● Obtain additional charge amount.

Note 1*

The charge amounts per 1 meter are different for each liquid tubing size.

$\varnothing 22.22 \rightarrow LA$: 40 m $\times 0.366$ kg/m = 14.640
$\varnothing 19.05 \rightarrow LB + LO$: 7 m $\times 0.259$ kg/m = 1.813
$\varnothing 15.88 \rightarrow LC + LD$: 20 m $\times 0.185$ kg/m = 3.7
$\varnothing 12.7 \rightarrow LE + l A + l B$: 14 m $\times 0.128$ kg/m = 1.792
$\varnothing 9.52 \rightarrow l C + LF + (l 1 - l 7)$: 71 m $\times 0.056$ kg/m = 3.976

Total 25.921 kg

Note 2*

Necessary amount of additional refrigerant charge per outdoor unit (See Table 2-2-2.)

Amount of additional charge per outdoor unit :	U-10ME2E8	5.5	kg
	U-16ME2E8	7.0	kg
	U-16ME2E8	7.0	kg

Total 19.5 kg

Therefore,

*Note 1 : Amount of additional charge per tubing length :	25.921	kg
*Note 2 : Amount of additional charge per outdoor unit :	19.5	kg

Therefore, the total of additional refrigerant charge amount reaches 45.421 kg.

● Obtain overall refrigerant charge amount.

Overall refrigerant charge amount of the system indicates the calculated value shown above the additional charge amount in addition to the total of the refrigerant charge amount (shown in the Table 2-3) at the shipment of each outdoor unit.

Refrigerant charge amount at shipment:

U-10ME2E8	: 5.6	kg
U-16ME2E8	: 8.3	kg
U-16ME2E8	: 8.3	kg

Additional charge amount : 45.421 kg

Grand total : 67.621 kg

Therefore, overall refrigerant charge amount of the system reaches 67.621 kg.

2. System Design



CAUTION Be sure to check the limit density for the room in which the indoor unit is installed.

Checking of limit density

Density limit is determined on the basis of the size of a room using an indoor unit of minimum capacity.

For instance, when an indoor unit is used in a room (floor area $15 \text{ m}^2 \times$ ceiling height $2.7 \text{ m} =$ room volume 40.5 m^3), the graph at right shows that the maximum overall refrigerant charge amount of limit density (0.44 kg/m^3) that is not required to install a ventilation fan should be calculated as follows.

Due to the room volume,

Maximum overall refrigerant charge amount

$$\begin{aligned} &= (\text{room volume}) \times (\text{limit density}) \\ &= 40.5 (\text{m}^3) \times 0.44 (\text{kg/m}^3) \\ &= 17.82 \text{ kg} \end{aligned}$$

Overall refrigerant charge amount for this system is $67.621 (\text{kg})$. The formula for the minimum room volume should be determined as follows.

Required minimum room volume

$$\begin{aligned} &= (\text{overall refrigerant charge amount}) \div (\text{limit density}) \\ &= 67.621 (\text{kg}) \div 0.44 (\text{kg/m}^3) \\ &= 153.68 (\text{m}^3) \end{aligned}$$

Required minimum floor area

$$\begin{aligned} &= (\text{minimum room volume}) \div (\text{ceiling height}) \\ &= 153.68 (\text{m}^3) \div 2.7 (\text{m}) \\ &= 56.9 (\text{m}^2) \end{aligned}$$


Therefore an opening for ventilation is required.

< Formula for computation >

Overall refrigerant charge amount for the air conditioner: kg

$$\begin{aligned} &= \frac{(\text{Minimum room volume for indoor unit: m}^3)}{40.5 (\text{m}^3)} \\ &= \frac{67.621 (\text{kg})}{40.5 (\text{m}^3)} \\ &= 1.67 (\text{kg/m}^3) > 0.44 (\text{kg/m}^3) \end{aligned}$$

Accordingly, it is necessary to install a ventilation fan for this room.

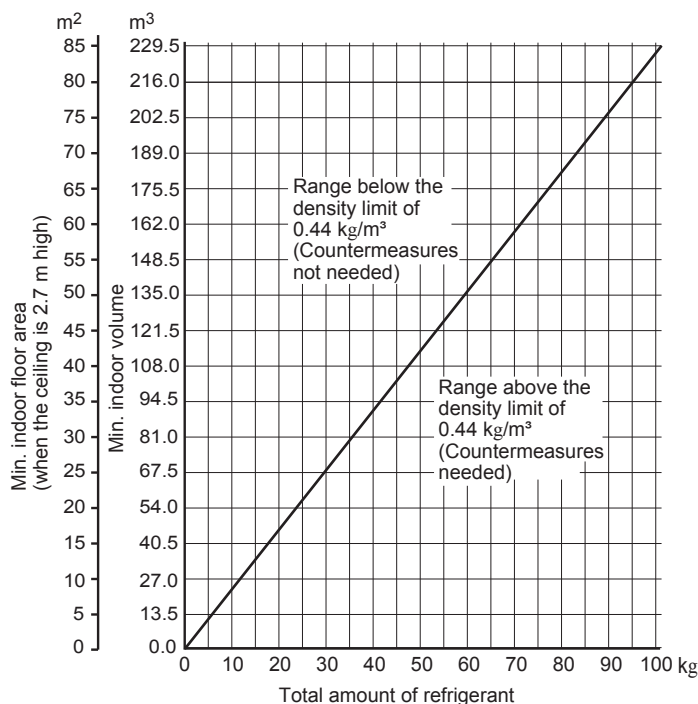

2. System Design


■ Installing distribution joint

(1) Refer to "HOW TO ATTACH DISTRIBUTION JOINT" enclosed with the optional distribution joint kit (CZ-P680PJ2, CZ-P1350PJ2, CZ-P160BK2, CZ-P680BK2, CZ-P1350BK2).

- When connecting a branch tubing to the indoor unit directly, it is necessary for each branch tubing to install at a positive angle with respect to horizontal in order to prevent accumulation of refrigerant oil in stopped units. See the below chart.

Branch tubing system		— Restricted - - - - - Not restricted				
How to install branch tubing	When connecting branch tubing to indoor unit directly				When not connecting branch tubing to indoor unit directly	
	Gas tube		Liquid tube		Gas & liquid tubes	
	When connecting to A	When connecting to B				
Horizontal						
Vertical	Upward					
	Downward					

Header branch system (Main tubing is horizontal.)

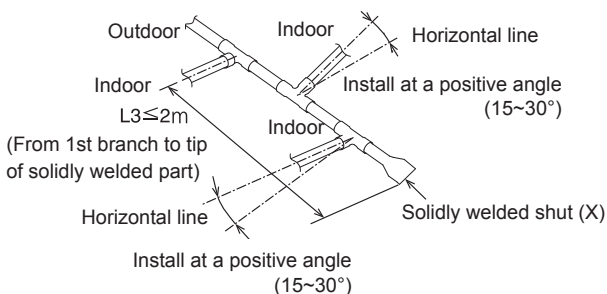

- Be sure to solidly weld shut the T-joint end (marked by X in the figure). In addition, pay attention to the insertion depth of each connected tube so that the flow of refrigerant within the T-joint is not impeded. Be sure to use a commercial available T-joint.
- When using the header joint system, do not make further branches in the tubing.
- Do not use the header joint system on the outdoor unit side.

3. Electrical Wiring

3-1. General Precautions on Wiring

- (1) Before wiring, confirm the rated voltage of the unit as shown on its nameplate, then carry out the wiring closely following the wiring diagram.
- (2) Provide a power outlet to be used exclusively for each unit, and a power supply disconnect, circuit breaker and earth leakage breaker for overcurrent protection should be provided in the exclusive line.
- (3) To prevent possible hazards from insulation failure, the unit must be grounded.
- (4) Each wiring connection must be done in accordance with the wiring system diagram. Wrong wiring may cause the unit to misoperate or become damaged.
- (5) Do not allow wiring to touch the refrigerant tubing, compressor, or any moving parts of the fan.
- (6) Unauthorized changes in the internal wiring can be very dangerous. The manufacturer will accept no responsibility for any damage or misoperation that occurs as a result of such unauthorized changes.
- (7) Regulations on wire diameters differ from locality to locality. For field wiring rules, please refer to your LOCAL ELECTRICAL CODES before beginning. You must ensure that installation complies with all relevant rules and regulations.
- (8) To prevent malfunction of the air conditioner caused by electrical noise, care must be taken when wiring as follows:
 - The remote control wiring and the inter-unit control wiring should be wired apart from the inter-unit power wiring.
 - Use shielded wires for inter-unit control wiring between units and ground the shield on both sides.
- (9) If the power supply cord of this appliance is damaged, it must be replaced by a repair shop appointed by the manufacturer, because special purpose tools are required.
- (10) Use a waterproof conduit for outdoor unit wiring to avoid damaging the wire and to prevent accumulation of liquid inside the unit.

3-2. Recommended Wire Length and Wire Diameter for Power Supply System

Outdoor unit

	(A) Power supply		Time delay fuse or circuit capacity		(A) Power supply		Time delay fuse or circuit capacity
	Wire size	Max. length			Wire size	Max. length	
U-8ME2E8	4 mm ²	77 m	20 A	or	6 mm ²	115 m	30 A
U-10ME2E8	4 mm ²	54 m	25 A		6 mm ²	81 m	30 A
U-12ME2E8	6 mm ²	65 m	30 A		—	—	—
U-14ME2E8	10 mm ²	84 m	35 A		—	—	—
U-16ME2E8	10 mm ²	69 m	40 A		—	—	—
U-18ME2E8	10 mm ²	62 m	50 A		16 mm ²	100 m	50 A
U-20ME2E8	10 mm ²	54 m	60 A		16 mm ²	86 m	60 A

Indoor unit

Type	(B) Power supply		Time delay fuse or circuit capacity	Type	(B) Power supply		Time delay fuse or circuit capacity
	Minimum 2 mm ²	2.5 mm ²			Minimum 2 mm ²	2.5 mm ²	
K2	Max. 150 m	—	15 A	D1	—	Max. 130 m	10 – 16 A
Y2	Max. 130 m	—	15 A	L1	—	Max. 130 m	10 – 16 A
K1	—	Max. 150 m	10 – 16 A	M1	—	Max. 130 m	10 – 16 A
U2	—	Max. 130 m	10 – 16 A	P1	—	Max. 130 m	10 – 16 A
U1	—	Max. 130 m	10 – 16 A	R1	—	Max. 130 m	10 – 16 A
F2	—	Max. 130 m	10 – 16 A	E2	—	Max. 30 m	10 – 16 A
T2	—	Max. 130 m	10 – 16 A				

Control wiring


(C) Inter-unit (between outdoor and indoor units) control wiring		(D) Remote control wiring	
0.75 mm ² (AWG #18) Use shielded wiring*	or	2.0 mm ² (AWG #14) Use shielded wiring*	0.75 mm ² (AWG #18)
Max. 1,000 m		Max. 2,000 m	Max. 500 m

NOTE * With ring-type wire terminal.

(E) Control wiring for group control	(F) Inter-outdoor unit control wiring
0.75 mm ² (AWG #18)	0.75 mm ² (AWG #18) Use shielded wiring
Max. 200 m (Total)	Max. 300 m

3. Electrical Wiring




3-3. Wiring System Diagrams

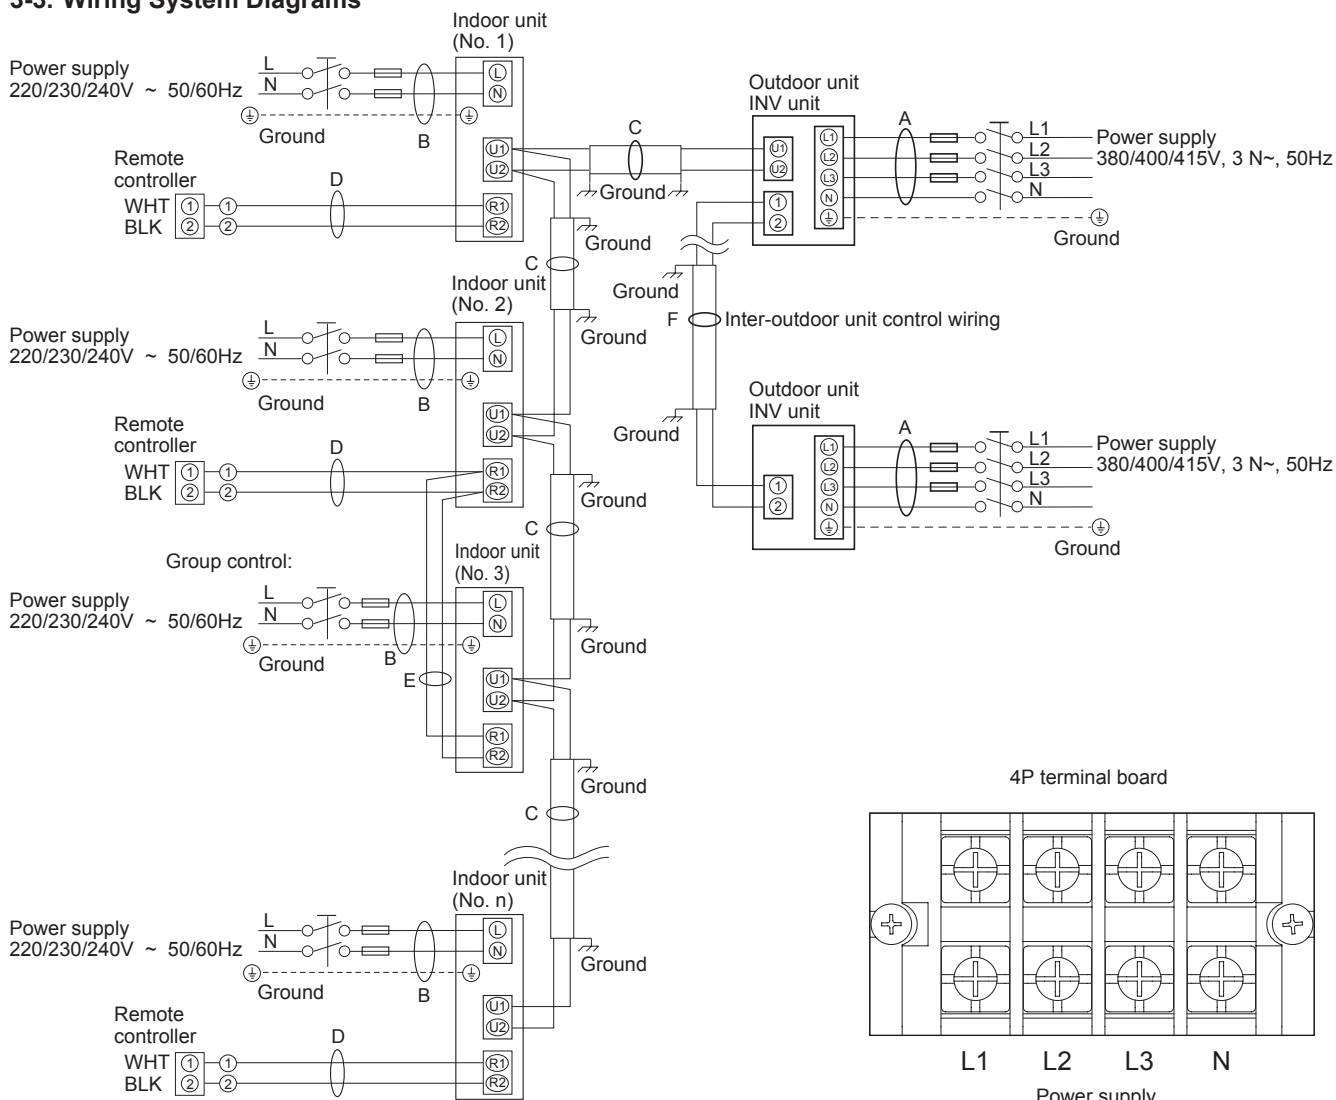

2

NOTE

- (1) See the section "3-2. Recommended Wire Length and Wire Diameter for Power Supply System" for the explanation of "A", "B", "C", "D", "E" and "F" in the above diagram.
- (2) The basic connection diagram of the indoor unit shows the 6P terminal board, so the terminal boards in your equipment may differ from the diagram.
- (3) Refrigerant Circuit (R.C.) address should be set before turning the power on.
- (4) Regarding the R.C. address setting, it can be executed by remote controller automatically. See the section "4. Auto Address Setting" under "Section 5 : TEST RUN".

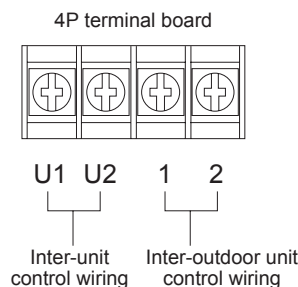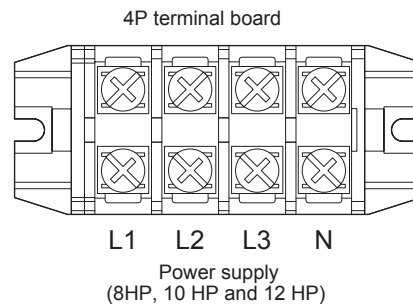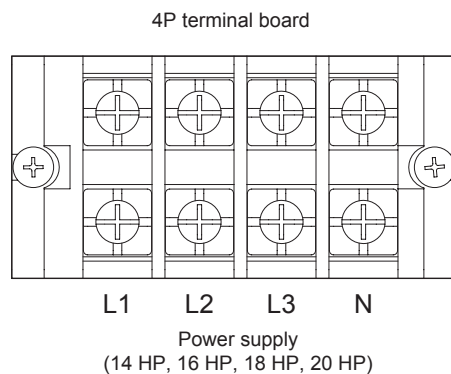

Type ME2

3. Electrical Wiring



CAUTION

- (1) When linking outdoor units in a network, disconnect the terminal extended from the short plug (CN072, 2P Black, location: right bottom on the outdoor main control PCB) from all outdoor units except any one of the outdoor units.
(When shipping: In shorted condition.)
For a system without link (no connection wiring between outdoor units), do not remove the short plug.
- (2) Do not install the inter-unit control wiring in a way that forms a loop. (Fig. 2-1)

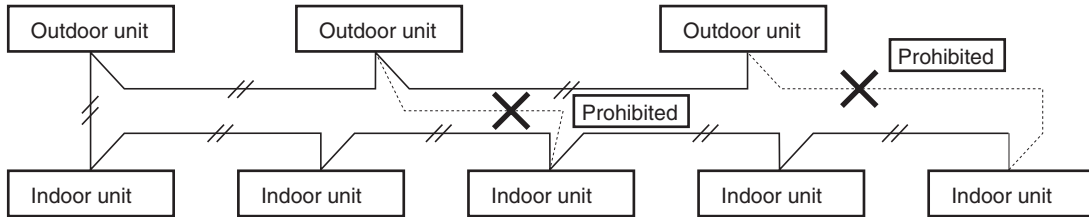


Fig. 2-1

- (3) Do not install inter-unit control wiring such as star branch wiring. Star branch wiring causes misaddress setting.

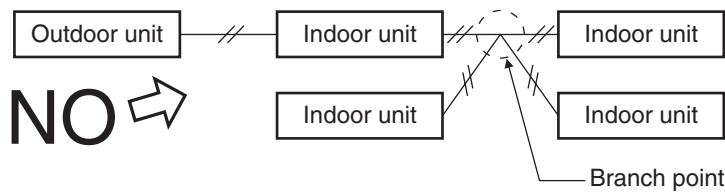


Fig. 2-2

- (4) If branching the inter-unit control wiring, the number of branch points should be 16 or fewer.

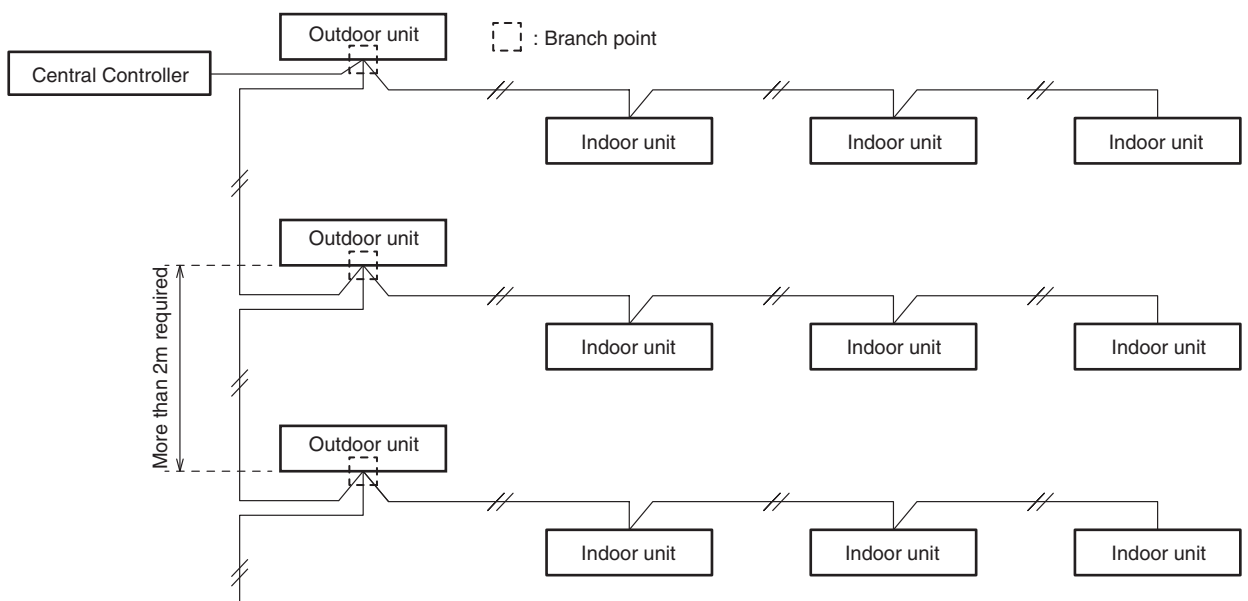


Fig. 2-3

3. Electrical Wiring

- (5) Use shielded wires for inter-unit control wiring (C) and ground the shield on both sides, otherwise misoperation from noise may occur. Connect wiring as shown in the section “3-3. Wiring System Diagrams.”




Fig. 2-4

- (6) • Connecting cable between indoor unit and outdoor unit shall be approved polychloroprene sheathed 5 or 3 *1.5 mm² flexible cord. Type designation 60245 IEC57 (H05RN-F, GP85PCP etc.) or heavier cord.
• Use the standard power supply cables for Europe (such as H05RN-F or H07RN-F which conform to CENELEC (HAR) rating specifications) or use the cables based on IEC standard. (60245 IEC57, 60245 IEC66)



WARNING

Loose wiring may cause the terminal to overheat or result in unit malfunction.

A fire hazard may also exist.

Therefore, ensure that all wiring is tightly connected.

When connecting each power wire to the terminal, follow the instructions on “How to Connect Wiring to Terminal” and fasten the wire securely with the fixing screw of the terminal board.

How to Connect Wiring to Terminal

■ For stranded wiring

- (1) Cut the wire end with cutting pliers, then strip the insulation to expose the stranded wiring about 10 mm and tightly twist the wire ends.

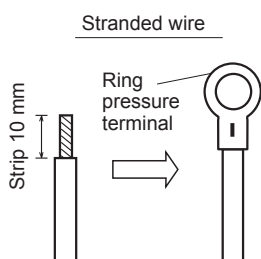


Fig. 2-5

- (2) Using a Phillips head screwdriver, remove the terminal screw(s) on the terminal board.
(3) Using a ring connector fastener or pliers, securely clamp each stripped wire end with a ring pressure terminal.
(4) Place the ring pressure terminal, and replace and tighten the removed terminal screw using a screwdriver.

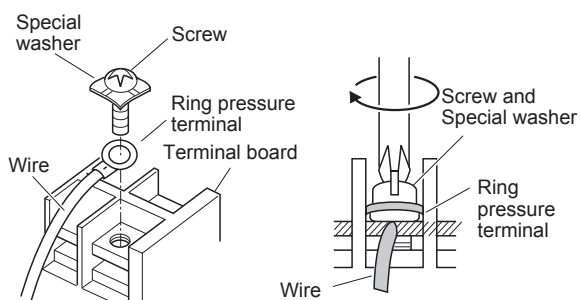


Fig. 2-6

■ Examples of shield wires

- (1) Remove cable coat not to scratch braided shield.



Fig. 2-7

- (2) Unbraid the braided shield carefully and twist the unbraid shield wires tightly together. Insulate the shield wires by covering them with an insulation tube or wrapping insulation tape around them.




Fig. 2-8

- (3) Remove coat of signal wire.

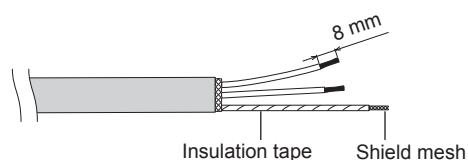


Fig. 2-9

- (4) Attach ring pressure terminals to the signal wires and the shield wires insulated in Step (2).





Fig. 2-10

■ Earth wire for power supply

The earth wire should be longer than the other lead wires for electrical safety.

3. Electrical Wiring

■ Wiring sample

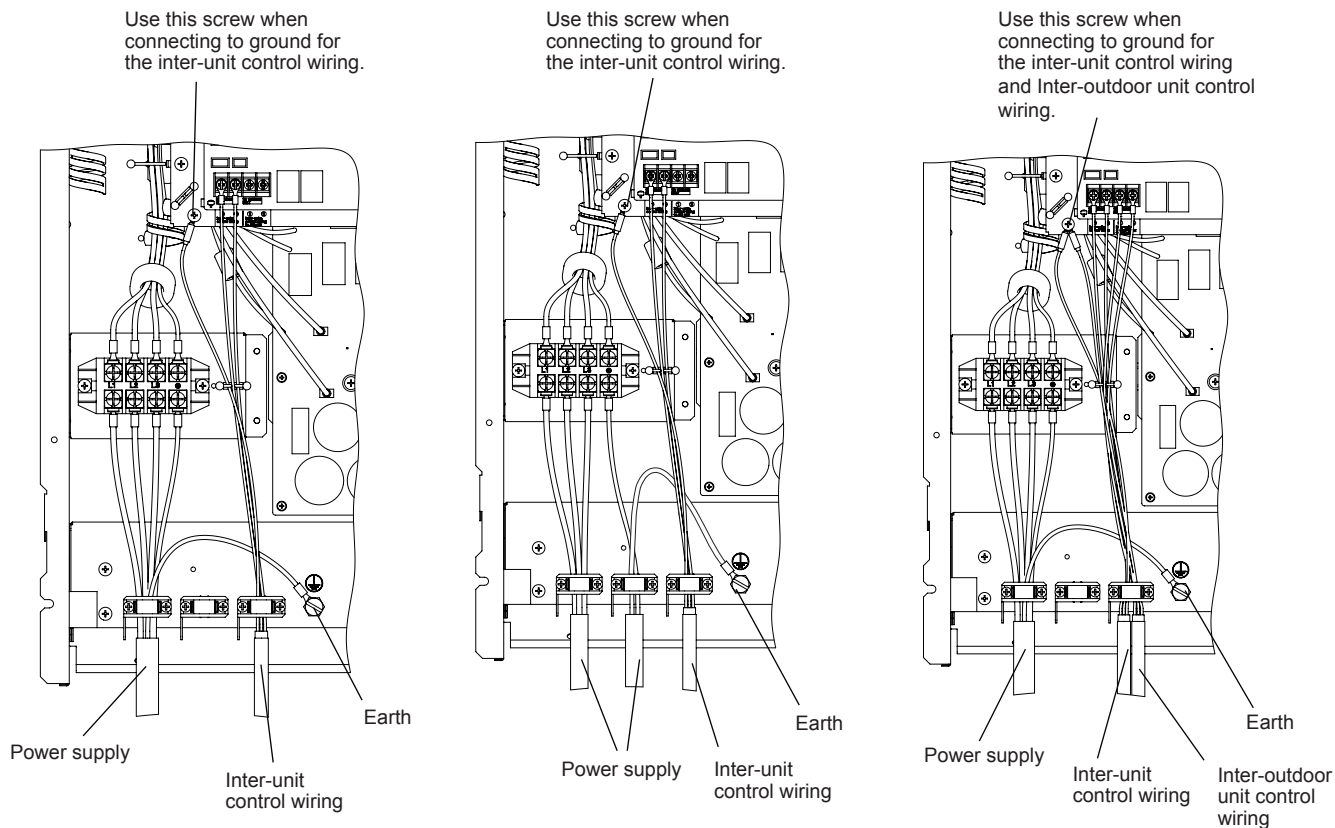

2

Torque values of power supply terminal board
 8/10/12 HP: 2.2N·m±0.05N·m {22 kgf·cm ±0.5 kgf·cm}
 14/16/18/20 HP: 2.7N·m±0.1N·m {27 kgf·cm ±1 kgf·cm}


Torque value of communication terminal board: 1.3N·m±0.1N·m {13 kgf·cm ±1 kgf·cm}

ATTENTION: Comply with the torque values.
 If tightening over torque values, the screw will be damaged.

ATTENTION: Apply an adjustable wrench to the valve vertically not to damage the P.C.board.

NOTE

- Fix the wires with the clammer to the wiring fixture plates (2 locations) and do not allow them to touch the refrigerant tubing and compressor.
- Use a waterproof conduit for outdoor unit wiring to avoid damaging the wire and to prevent accumulation of liquid inside the unit.

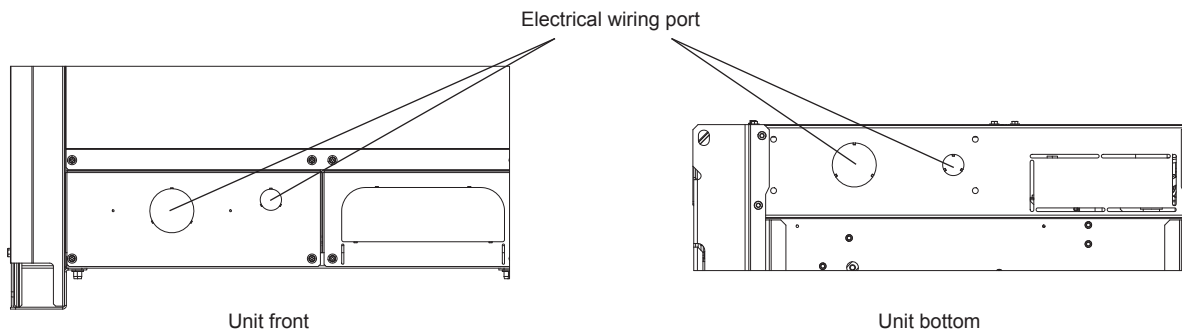

4. Installation Instructions

4-1. Selecting the Installation Site for Outdoor Unit

AVOID:

- heat sources, exhaust fans, etc.
- damp, humid or uneven locations
- indoors (no-ventilation location)

DO:

- choose a place as cool as possible.
- choose a place that is well ventilated.
- allow enough room around the unit for air intake/exhaust and possible maintenance.

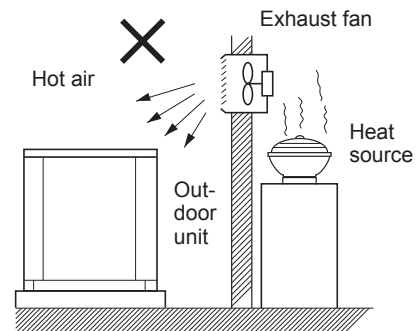


Fig. 2-11

Installation Space

Install the outdoor unit where there is enough space for ventilation. Otherwise the unit may not operate properly. Fig. 2-12 shows the minimum space requirement around the outdoor units when 3 sides are open and only 1 side is shuttered, with open space above the unit. The mounting base should be concrete or a similar material that allows for adequate drainage. Make provisions for anchor bolts, platform height, and other site-specific installation requirements.




CAUTION

- Leave space open above the unit.
- Construct louvers or other openings in the wall, if necessary, to ensure adequate ventilation.

NOTE

- Do not do any wiring or tubing within 30 cm of the front panel, because this space is needed as a servicing space for the compressor.
 - Ensure a base height of 100 mm or more to ensure that drainage water does not accumulate and freeze around the bottom of the unit.
 - If installing a drain pan, install the drain pan prior to installing the outdoor unit.
- * Make sure there is at least 150 mm between the outdoor unit and the ground.
- Also, the direction of the tubing and electrical wiring should be from the front of the outdoor unit.







Example of installation of 2 units
(when 3 sides are open and only 1 side is shuttered)

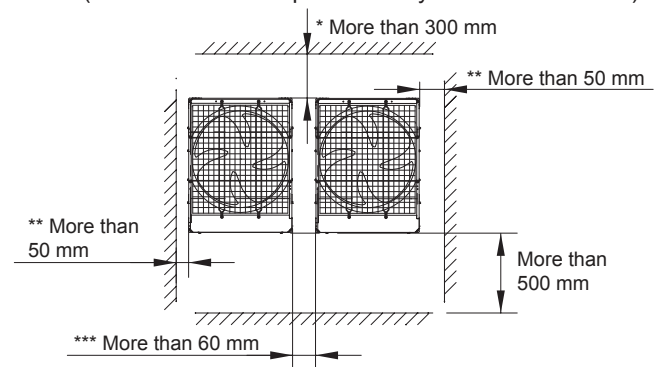

- * Make a walk-in space behind the unit to erase maintenance and servicing.
- ** When setting the anchor bolt to position "B" or "C" (See Fig. 2-13), make the space between the unit and the wall more than 250 mm for installation operation.
- *** When setting the anchor bolt to position "B" or "C" (See Fig. 2-13), make the space between the outdoor units more than 180 mm for installation operation.

Fig. 2-12

4. Installation Instructions

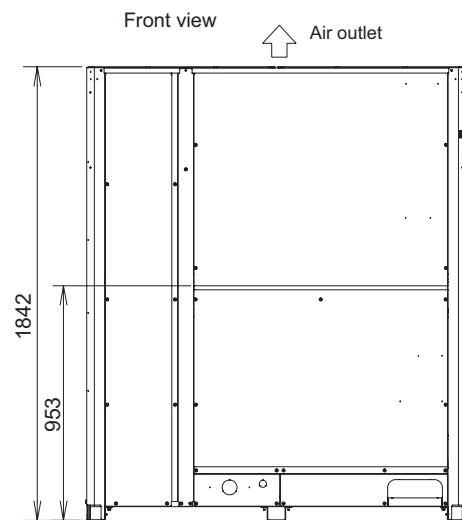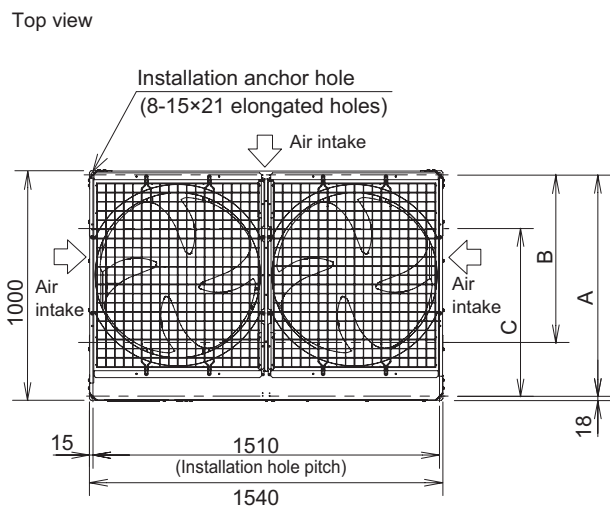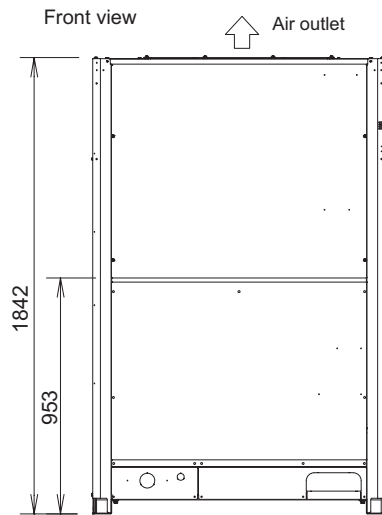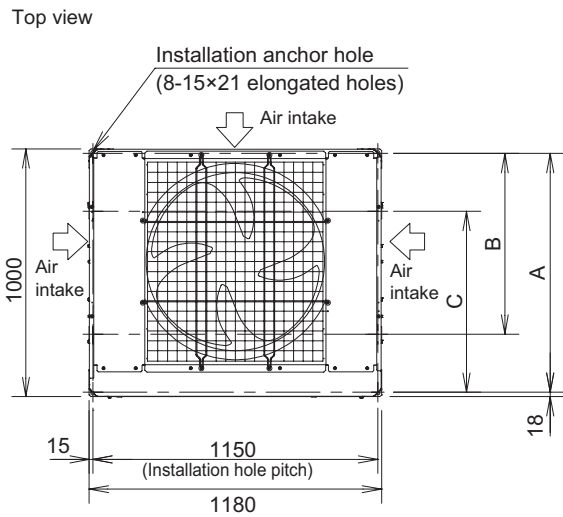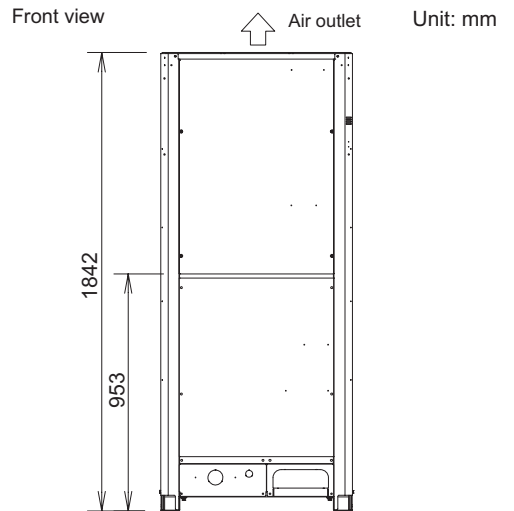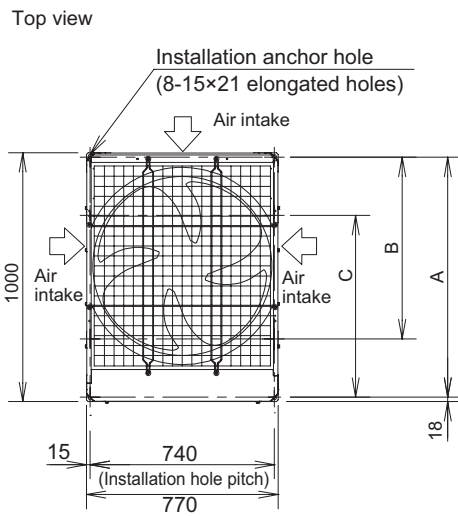


- * According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".
- A : 964 (Installation hole pitch) * For removing tube forward
- B : 730 (Installation hole pitch) * For removing the tube downward
- C : 730 (Installation hole pitch)

Fig. 2-13

4. Installation Instructions

Combination with various type of outdoor units

Unit: mm

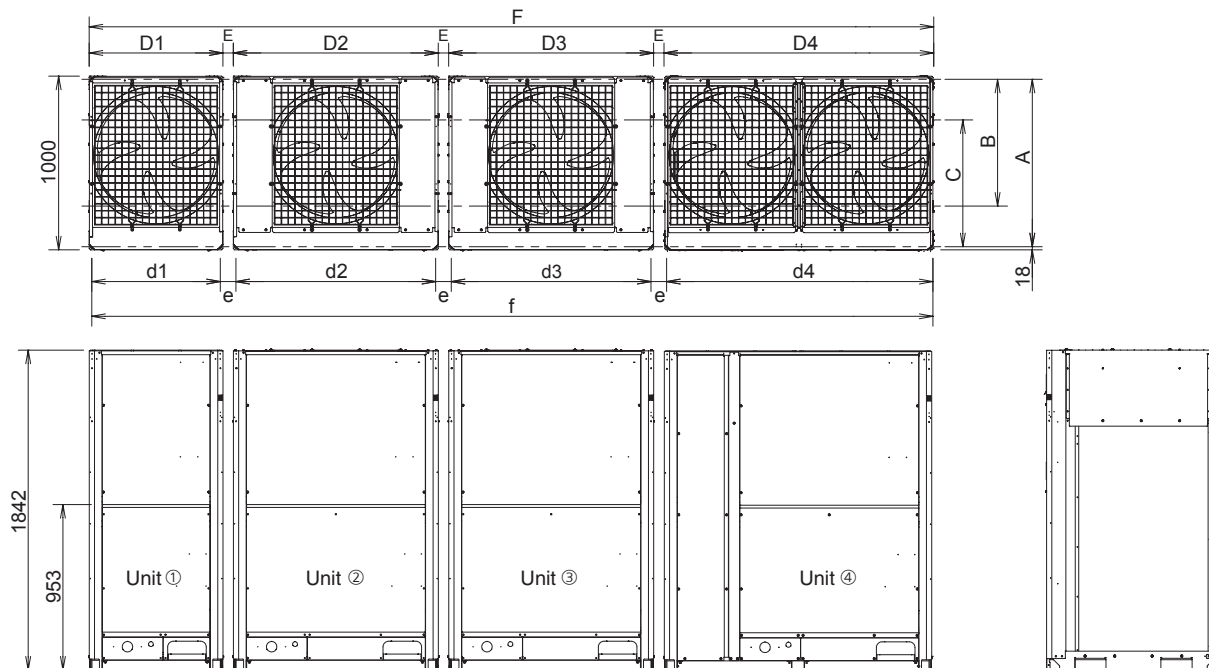

Capacity	Combination				Dimensions of single unit				Distance between units		Dimensions of combination unit		Dimensions of single unit installation hole				Distance between unit installation hole		Dimensions of combination unit installation hole		
	①	②	③	④	D1	D2	D3	D4	E(+1)	E(+2)	F(+1)	F(+2)	d1	d2	d3	d4	e(+1)	e(+2)	f(+1)	f(+2)	
8HP	8	—	—	—	770	—	—	—	—	—	770	770	740	—	—	—	—	—	—	740	740
10HP	10	—	—	—	770	—	—	—	—	—	770	770	740	—	—	—	—	—	—	740	740
12HP	12	—	—	—	1180	—	—	—	—	—	1180	1180	1150	—	—	—	—	—	—	1150	1150
14HP	14	—	—	—	1180	—	—	—	—	—	1180	1180	1150	—	—	—	—	—	—	1150	1150
16HP	16	—	—	—	1180	—	—	—	—	—	1180	1180	1150	—	—	—	—	—	—	1150	1150
18HP	18	—	—	—	1540	—	—	—	—	—	1540	1540	1510	—	—	—	—	—	—	1510	1510
20HP	20	—	—	—	1540	—	—	—	—	—	1540	1540	1510	—	—	—	—	—	—	1510	1510
22HP	10	12	—	—	770	1180	—	—	60	180	2010	2130	740	1150	—	—	90	210	1980	2100	
24HP	12	12	—	—	1180	1180	—	—	60	180	2420	2540	1150	1150	—	—	90	210	2390	2510	
26HP	10	16	—	—	770	1180	—	—	60	180	2010	2130	740	1150	—	—	90	210	1980	2100	
28HP	12	16	—	—	1180	1180	—	—	60	180	2420	2540	1150	1150	—	—	90	210	2390	2510	
30HP	14	16	—	—	1180	1180	—	—	60	180	2420	2540	1150	1150	—	—	90	210	2390	2510	
32HP	16	16	—	—	1180	1180	—	—	60	180	2420	2540	1150	1150	—	—	90	210	2390	2510	
34HP	14	20	—	—	1180	1540	—	—	60	180	2780	2900	1150	1510	—	—	90	210	2750	2870	
36HP	16	20	—	—	1180	1540	—	—	60	180	2780	2900	1150	1510	—	—	90	210	2750	2870	
38HP	18	20	—	—	1540	1540	—	—	60	180	3140	3260	1510	1510	—	—	90	210	3110	3230	
40HP	20	20	—	—	1540	1540	—	—	60	180	3140	3260	1510	1510	—	—	90	210	3110	3230	
42HP	10	16	16	—	770	1180	1180	—	60	180	3250	3490	740	1150	1150	—	90	210	3220	3460	
44HP	12	16	16	—	1180	1180	1180	—	60	180	3660	3900	1150	1150	1150	—	90	210	3630	3870	
46HP	14	16	16	—	1180	1180	1180	—	60	180	3660	3900	1150	1150	1150	—	90	210	3630	3870	
48HP	16	16	16	—	1180	1180	1180	—	60	180	3660	3900	1150	1150	1150	—	90	210	3630	3870	
50HP	14	16	20	—	1180	1180	1540	—	60	180	4020	4260	1150	1150	1510	—	90	210	3990	4230	
52HP	16	16	20	—	1180	1180	1540	—	60	180	4020	4260	1150	1150	1510	—	90	210	3990	4230	
54HP	14	20	20	—	1180	1540	1540	—	60	180	4380	4620	1150	1510	1510	—	90	210	4350	4590	
56HP	16	20	20	—	1180	1540	1540	—	60	180	4380	4620	1150	1510	1510	—	90	210	4350	4590	
58HP	18	20	20	—	1540	1540	1540	—	60	180	4740	4980	1510	1510	1510	—	90	210	4710	4950	
60HP	20	20	20	—	1540	1540	1540	—	60	180	4740	4980	1510	1510	1510	—	90	210	4710	4950	
62HP	14	16	16	16	1180	1180	1180	1180	60	180	4900	5260	1150	1150	1150	1150	90	210	4870	5230	
64HP	16	16	16	16	1180	1180	1180	1180	60	180	4900	5260	1150	1150	1150	1150	90	210	4870	5230	
66HP	10	16	20	20	770	1180	1540	1540	60	180	5210	5570	740	1150	1510	1510	90	210	5180	5540	
68HP	12	16	20	20	1180	1180	1540	1540	60	180	5620	5980	1150	1150	1510	1510	90	210	5590	5950	
70HP	10	20	20	20	770	1540	1540	1540	60	180	5570	5930	740	1510	1510	1510	90	210	5540	5900	
72HP	16	16	20	20	1180	1180	1540	1540	60	180	5620	5980	1150	1150	1510	1510	90	210	5590	5950	
74HP	16	18	20	20	1180	1540	1540	1540	60	180	5980	6340	1150	1510	1510	1510	90	210	5950	6310	
76HP	16	20	20	20	1180	1540	1540	1540	60	180	5980	6340	1150	1510	1510	1510	90	210	5950	6310	
78HP	18	20	20	20	1540	1540	1540	1540	60	180	6340	6700	1510	1510	1510	1510	90	210	6310	6670	
80HP	20	20	20	20	1540	1540	1540	1540	60	180	6340	6700	1510	1510	1510	1510	90	210	6310	6670	

According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from A, B or C.

A: 964: (Installation hole pitch) : For removing tube forward. Use the data with the asterisk (*) in combination of each unit dimension.

B: 730: (Installation hole pitch) : For removing tube downward. Use the data with the asterisk (*) in combination of each unit dimension.

C: 730: (Installation hole pitch) : Use the data with the asterisk (*) in combination of each unit dimension.

4. Installation Instructions

4-2. Shield for Horizontal Exhaust Discharge

It is necessary to install an air-discharge chamber (field supply) to direct exhaust from the fan horizontally if it is difficult to provide a minimum space of 2 m between the air-discharge outlet and a nearby obstacle. (Fig. 2-14)



CAUTION

In regions with heavy snowfall, the outdoor unit should be provided with a solid, raised platform and snow-proof vents. (Fig. 2-15)

4-3. Installing the Outdoor Unit in Heavy Snow Areas

In locations where wind-blown snow can be a problem, snow-proof vents should be fitted to the unit and direct exposure to the wind should be avoided as much as possible. (Fig. 2-16)
The following problems may occur if proper countermeasures are not taken:

- The fan in the outdoor unit may stop running, causing the unit to be damaged.
- There may be no air flow.
- The tubing may freeze and burst.
- The condenser pressure may drop because of strong wind, and the indoor unit may freeze.

4-4. Precautions When Installing in Heavy Snow Areas

- a) The platform should be higher than the maximum snow depth. (Fig. 2-16)
- b) The 2 anchoring feet of the outdoor unit should be used for the platform, and the platform should be installed beneath the air-intake side of the outdoor unit.
- c) The platform foundation must be solid and the unit must be secured with anchor bolts.
- d) When installing on a roof subject to strong wind, countermeasures must be taken to prevent the unit from being overturned.

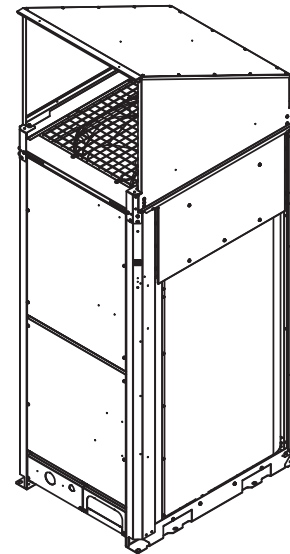


Fig. 2-14

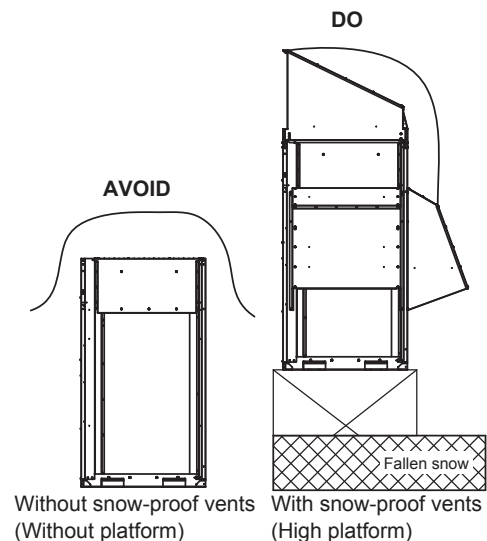


Fig. 2-15

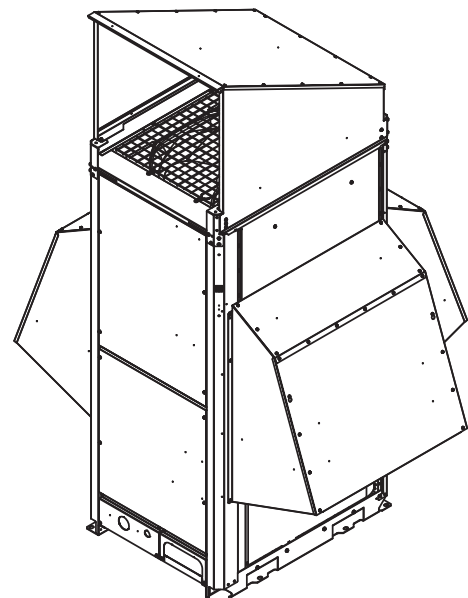


Fig. 2-16

4. Installation Instructions

4-5. Dimensions of Wind Ducting

Reference diagram for air-discharge chamber (field supply)


Can be installed so that the air direction is to the front or rear direction.

According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".



Regarding the field supply parts for the detail diagrams, refer to the section "8. Supplement".

Model : U-8ME2E8, 10ME2E8

unit: mm

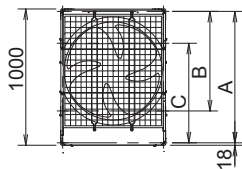


- A : 964 (Installation hole pitch) * For removing tube forward
- B : 730 (Installation hole pitch) * For removing the tube downward
- C : 730 (Installation hole pitch)

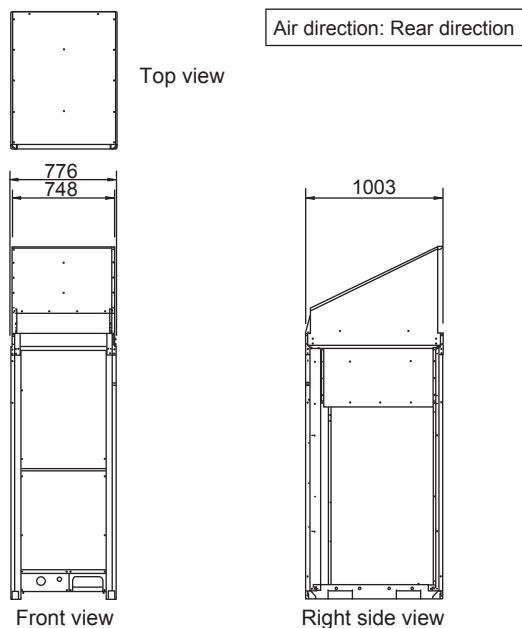
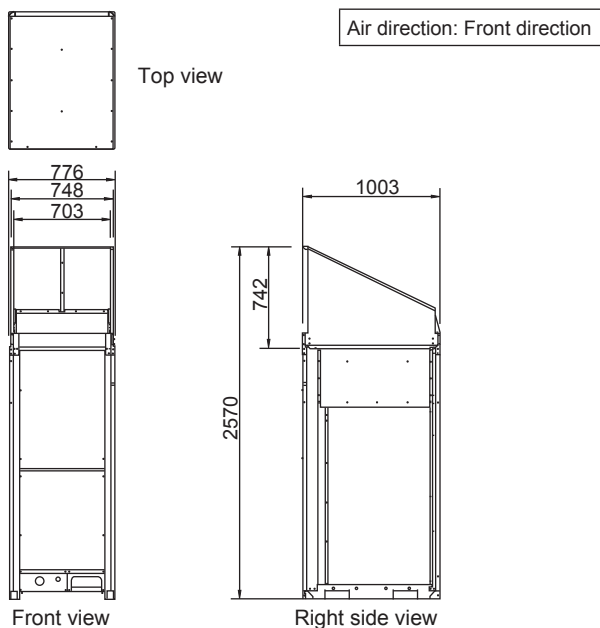


Model : U-12ME2E8, 14ME2E8, 16ME2E8

unit: mm

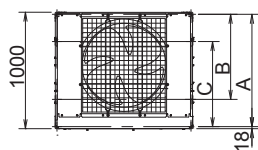


- A : 964 (Installation hole pitch) * For removing tube forward
- B : 730 (Installation hole pitch) * For removing the tube downward
- C : 730 (Installation hole pitch)

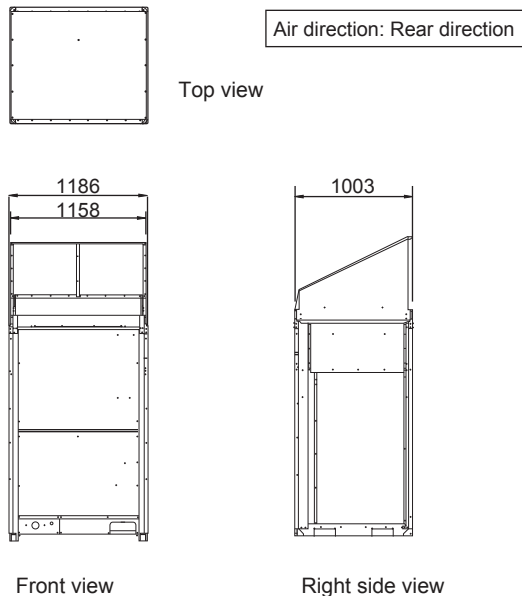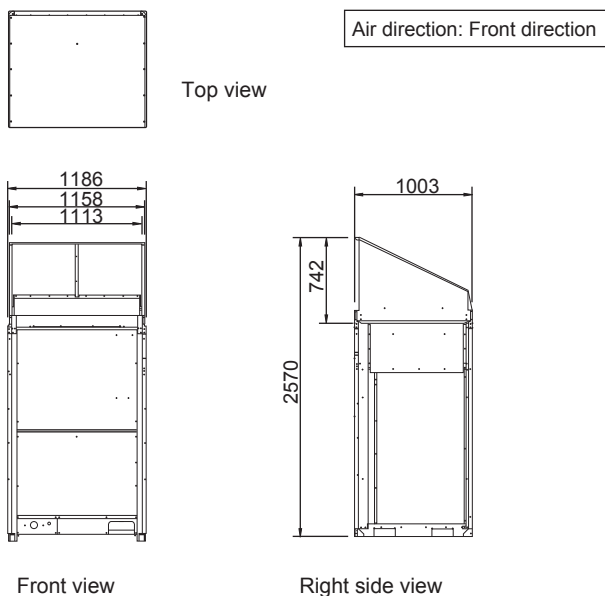


4. Installation Instructions

Model : U-18ME2E8, 20ME2E8

unit: mm

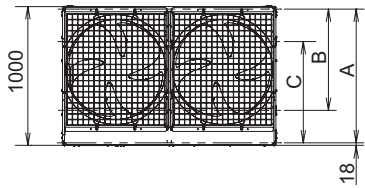


- A : 964 (Installation hole pitch) * For removing tube forward
- B : 730 (Installation hole pitch) * For removing the tube downward
- C : 730 (Installation hole pitch)

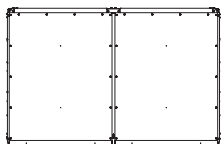


Air direction: Front direction


Top view

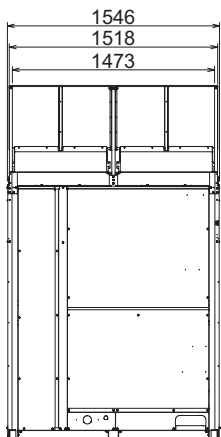

Front view

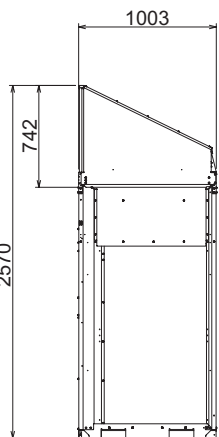


Right side view

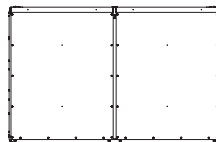


Air direction: Rear direction

Top view

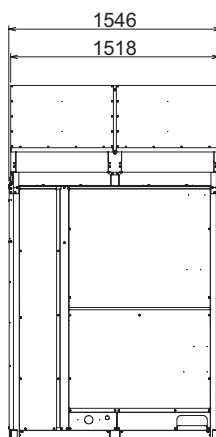

Front view

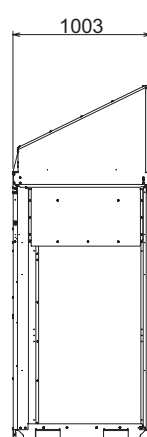

Right side view


4. Installation Instructions

Reference diagram for air-discharge chamber (field supply) (continued)

Unit combinations

Can be installed so that the air direction is to the front or rear direction.

According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".

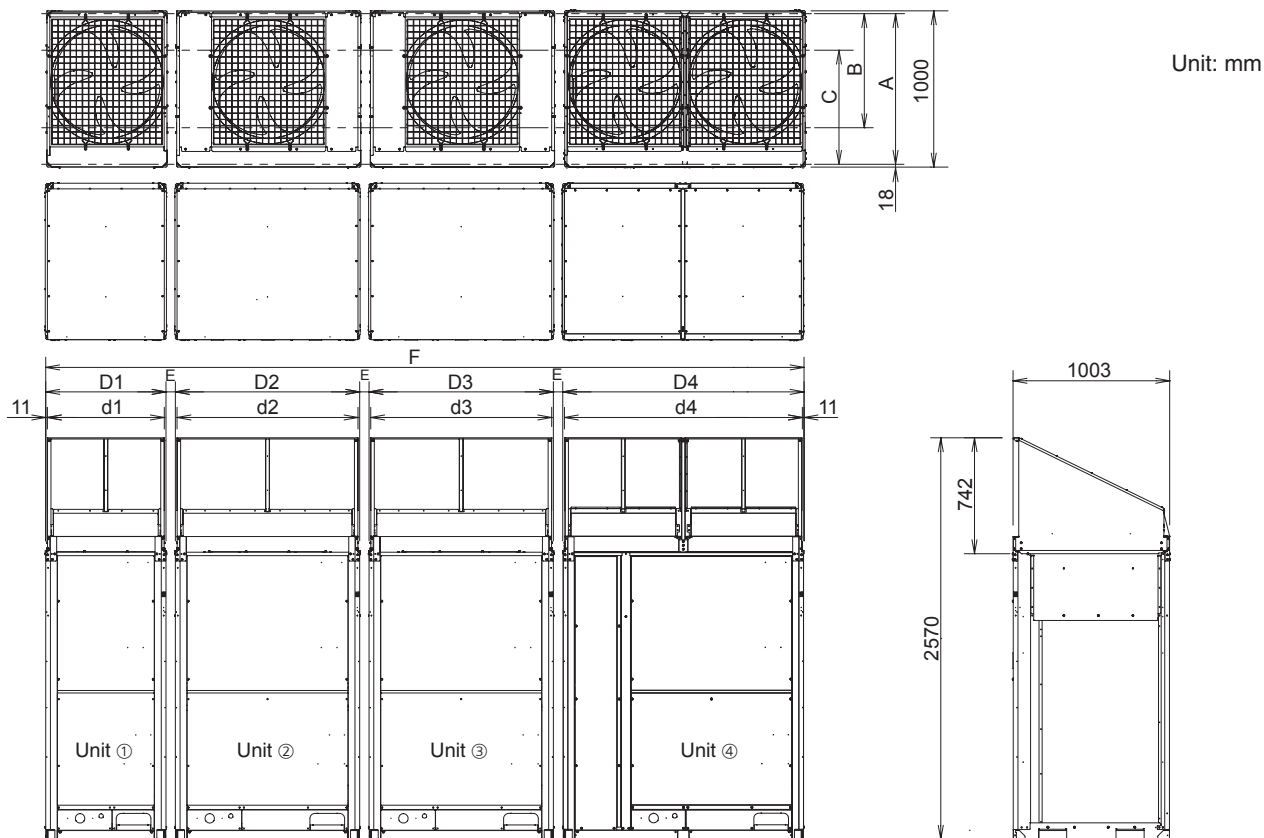

Unit: mm

2

Capacity	Combination				Separate dimensions of air-discharge chamber								Distance between units		Dimensions of air-discharge chamber	
	①	②	③	④	D1	D2	D3	D4	d1	d2	d3	d4	E(+1)	E(+2)	F(+1)	F(+2)
8HP	8	—	—	—	770	—	—	—	748	—	—	—	—	—	770	770
10HP	10	—	—	—	770	—	—	—	748	—	—	—	—	—	770	770
12HP	12	—	—	—	1180	—	—	—	1158	—	—	—	—	—	1180	1180
14HP	14	—	—	—	1180	—	—	—	1158	—	—	—	—	—	1180	1180
16HP	16	—	—	—	1180	—	—	—	1158	—	—	—	—	—	1180	1180
18HP	18	—	—	—	1540	—	—	—	1518	—	—	—	—	—	1540	1540
20HP	20	—	—	—	1540	—	—	—	1518	—	—	—	—	—	1540	1540
22HP	10	12	—	—	770	1180	—	—	748	1158	—	—	60	180	2010	2130
24HP	12	12	—	—	1180	1180	—	—	1158	1158	—	—	60	180	2420	2540
26HP	10	16	—	—	770	1180	—	—	748	1158	—	—	60	180	2010	2130
28HP	12	16	—	—	1180	1180	—	—	1158	1158	—	—	60	180	2420	2540
30HP	14	16	—	—	1180	1180	—	—	1158	1158	—	—	60	180	2420	2540
32HP	16	16	—	—	1180	1180	—	—	1158	1158	—	—	60	180	2420	2540
34HP	14	20	—	—	1180	1540	—	—	1158	1518	—	—	60	180	2780	2900
36HP	16	20	—	—	1180	1540	—	—	1158	1518	—	—	60	180	2780	2900
38HP	18	20	—	—	1540	1540	—	—	1518	1518	—	—	60	180	3140	3260
40HP	20	20	—	—	1540	1540	—	—	1518	1518	—	—	60	180	3140	3260
42HP	10	16	16	—	770	1180	1180	—	748	1158	1158	—	60	180	3250	3490
44HP	12	16	16	—	1180	1180	1180	—	1158	1158	1158	—	60	180	3660	3900
46HP	14	16	16	—	1180	1180	1180	—	1158	1158	1158	—	60	180	3660	3900
48HP	16	16	16	—	1180	1180	1180	—	1158	1158	1158	—	60	180	3660	3900
50HP	14	16	20	—	1180	1180	1540	—	1158	1158	1518	—	60	180	4020	4260
52HP	16	16	20	—	1180	1180	1540	—	1158	1158	1518	—	60	180	4020	4260
54HP	14	20	20	—	1180	1540	1540	—	1158	1518	1518	—	60	180	4380	4620
56HP	16	20	20	—	1180	1540	1540	—	1158	1518	1518	—	60	180	4380	4620
58HP	18	20	20	—	1540	1540	1540	—	1518	1518	1518	—	60	180	4740	4980
60HP	20	20	20	—	1540	1540	1540	—	1518	1518	1518	—	60	180	4740	4980
62HP	14	16	16	16	1180	1180	1180	1180	1158	1158	1158	1158	60	180	4900	5260
64HP	16	16	16	16	1180	1180	1180	1180	1158	1158	1158	1158	60	180	4900	5260
66HP	10	16	20	20	770	1180	1540	1540	748	1158	1518	1518	60	180	5210	5570
68HP	12	16	20	20	1180	1180	1540	1540	1158	1158	1518	1518	60	180	5620	5980
70HP	10	20	20	20	770	1540	1540	1540	748	1518	1518	1518	60	180	5570	5930
72HP	16	16	20	20	1180	1180	1540	1540	1158	1158	1518	1518	60	180	5620	5980
74HP	16	18	20	20	1180	1540	1540	1540	1158	1518	1518	1518	60	180	5980	6340
76HP	16	20	20	20	1180	1540	1540	1540	1158	1518	1518	1518	60	180	5980	6340
78HP	18	20	20	20	1540	1540	1540	1540	1518	1518	1518	1518	60	180	6340	6700
80HP	20	20	20	20	1540	1540	1540	1540	1518	1518	1518	1518	60	180	6340	6700

The air-discharge chamber will be obtained at a local field. According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from A, B or C.

A: 964 (Installation hole pitch) : For removing tube forward. Use the data with the asterisk (*1) in combination of each unit dimension.

B: 730 (Installation hole pitch) : For removing tube downward. Use the data with the asterisk (*2) in combination of each unit dimension.

C: 730 (Installation hole pitch) : Use the data with the asterisk (*2) in combination of each unit dimension.

4. Installation Instructions


4-6. Dimensions of Snow Ducting

Reference diagram for snow-proof vents (field supply)

According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C". Regarding the field supply parts for the detail diagrams, refer to the section "8. Supplement".


Model : U-8ME2E8, 10ME2E8

unit: mm

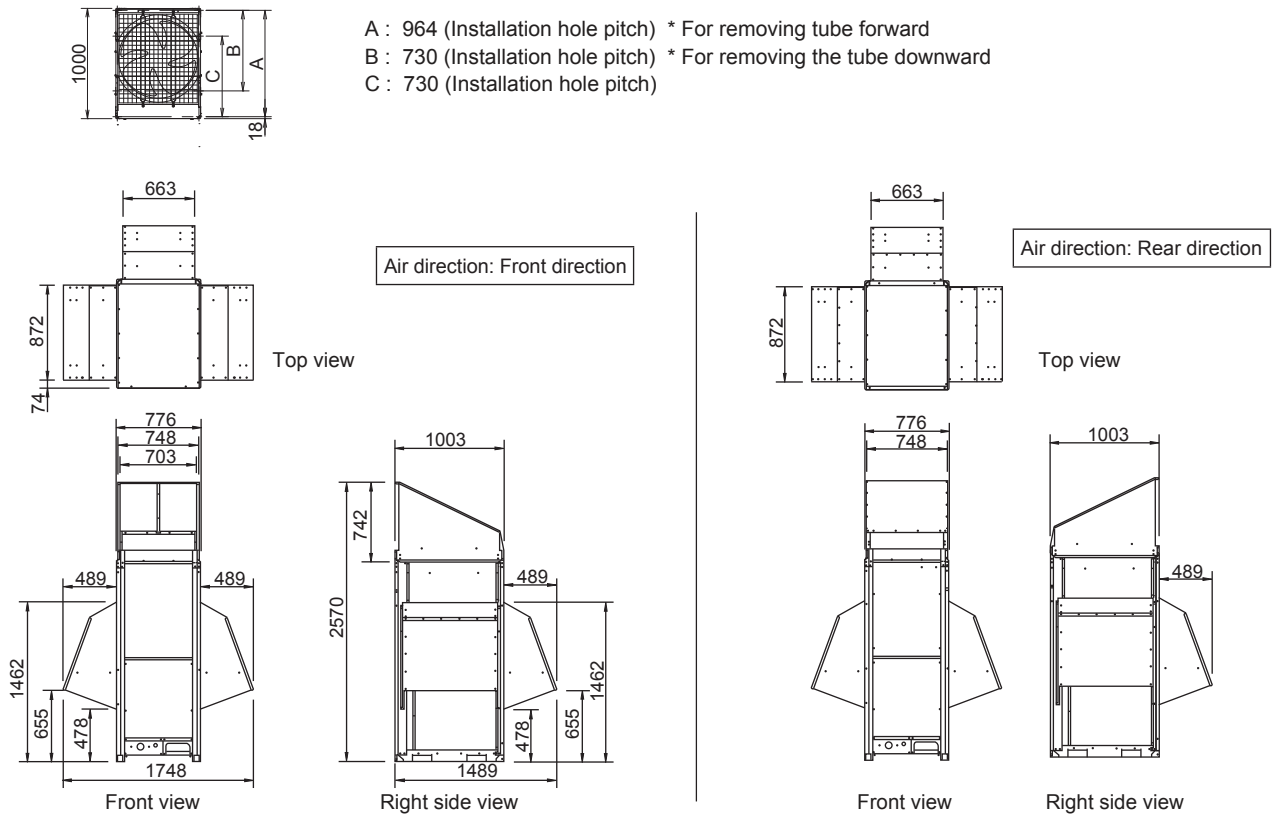

Model : U-12ME2E8, 14ME2E8, 16ME2E8


unit: mm

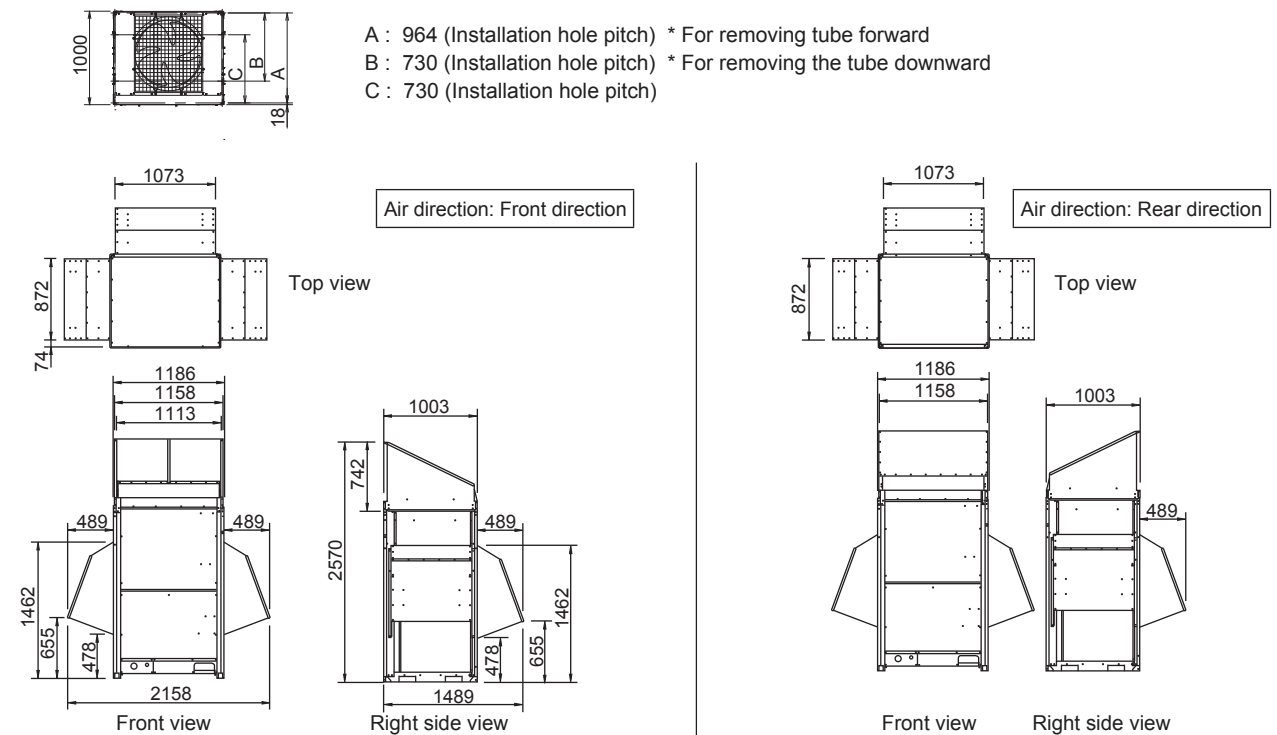





4. Installation Instructions

Model : U-18ME2E8, 20ME2E8

unit: mm

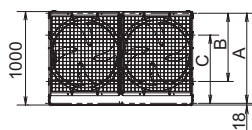

A : 964 (Installation hole pitch) * For removing tube forward
 B : 730 (Installation hole pitch) * For removing the tube downward
 C : 730 (Installation hole pitch)

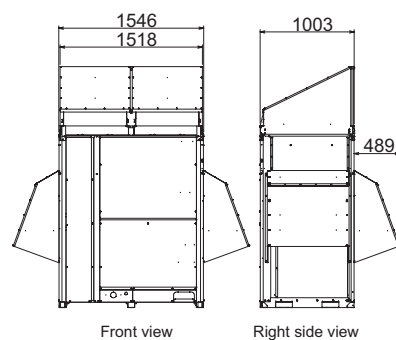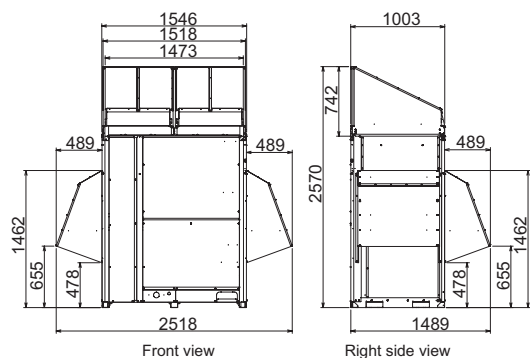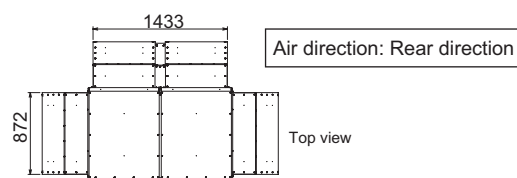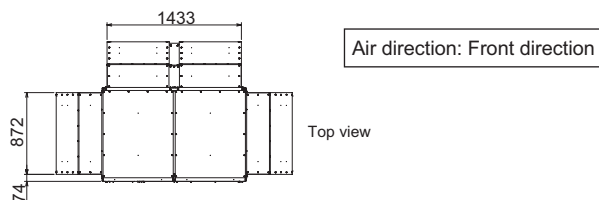


2

4. Installation Instructions

Reference diagram for snow-proof vents (field supply) (continued)

Unit combinations

According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from “A”, “B” or “C”.

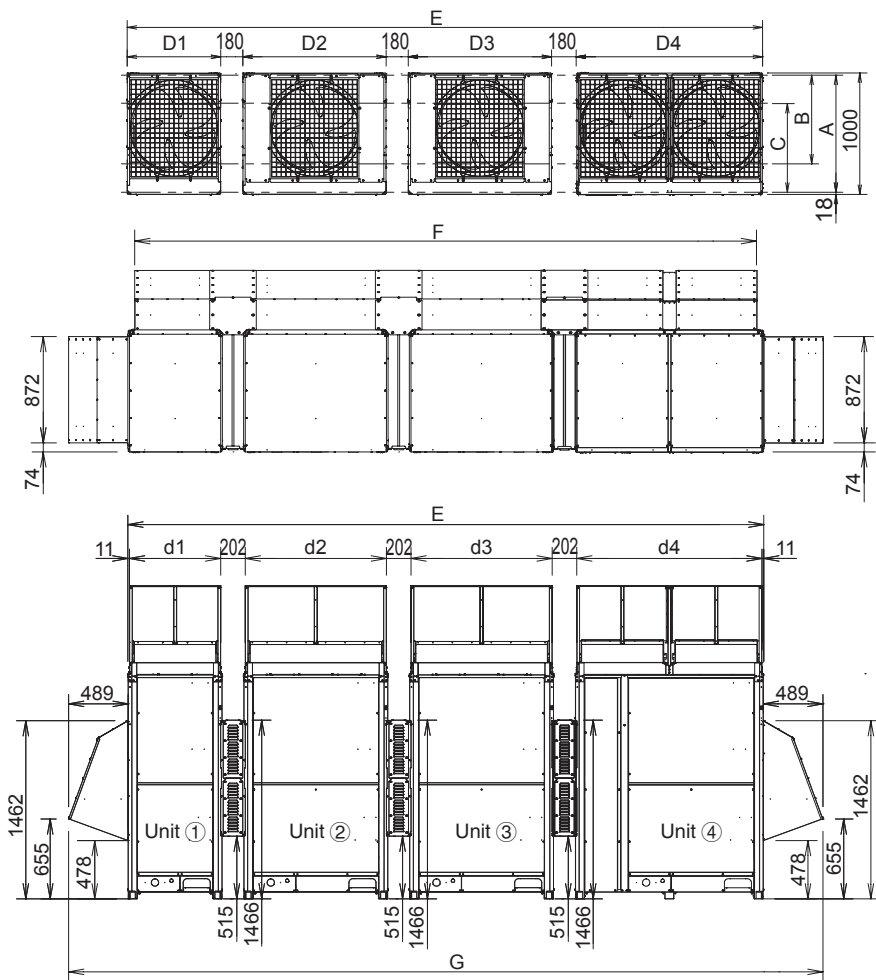

Unit: mm

The snow-proof vents will be obtained at a local field.

According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from A, B or C.


A: 964 (Installation hole pitch) :

For removing tube forward.

B: 730 (Installation hole pitch) :

For removing tube downward.

C: 730 (Installation hole pitch)

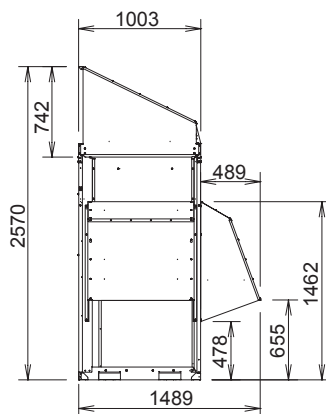

2

Capacity	Combination				Separate dimensions of snow-proof vents								Units dimensions		Dimensions of snow-proof vents	
	①	②	③	④	D1	D2	D3	D4	d1	d2	d3	d4	E	F	G	
8HP	8	—	—	—	770	—	—	—	748	—	—	—	770	663	1748	
10HP	10	—	—	—	770	—	—	—	748	—	—	—	770	663	1748	
12HP	12	—	—	—	1180	—	—	—	1158	—	—	—	1180	1073	2158	
14HP	14	—	—	—	1180	—	—	—	1158	—	—	—	1180	1073	2158	
16HP	16	—	—	—	1180	—	—	—	1158	—	—	—	1180	1073	2158	
18HP	18	—	—	—	1540	—	—	—	1518	—	—	—	1540	1433	2518	
20HP	20	—	—	—	1540	—	—	—	1518	—	—	—	1540	1433	2518	
22HP	10	12	—	—	770	1180	—	—	748	1158	—	—	2130	2023	3108	
24HP	12	12	—	—	1180	1180	—	—	1158	1158	—	—	2540	2433	3518	
26HP	10	16	—	—	770	1180	—	—	748	1158	—	—	2130	2023	3108	
28HP	12	16	—	—	1180	1180	—	—	1158	1158	—	—	2540	2433	3518	
30HP	14	16	—	—	1180	1180	—	—	1158	1158	—	—	2540	2433	3518	
32HP	16	16	—	—	1180	1180	—	—	1158	1158	—	—	2540	2433	3518	
34HP	14	20	—	—	1180	1540	—	—	1158	1518	—	—	2900	2793	3878	
36HP	16	20	—	—	1180	1540	—	—	1158	1518	—	—	2900	2793	3878	
38HP	18	20	—	—	1540	1540	—	—	1518	1518	—	—	3260	3153	4238	
40HP	20	20	—	—	1540	1540	—	—	1518	1518	—	—	3260	3153	4238	
42HP	10	16	16	—	770	1180	1180	—	748	1158	1158	—	3490	3383	4468	
44HP	12	16	16	—	1180	1180	1180	—	1158	1158	1158	—	3900	3793	4878	
46HP	14	16	16	—	1180	1180	1180	—	1158	1158	1158	—	3900	3793	4878	
48HP	16	16	16	—	1180	1180	1180	—	1158	1158	1158	—	3900	3793	4878	
50HP	14	16	20	—	1180	1180	1540	—	1158	1158	1518	—	4260	4153	5238	
52HP	16	16	20	—	1180	1180	1540	—	1158	1158	1518	—	4260	4153	5238	
54HP	14	20	20	—	1180	1540	1540	—	1158	1518	1518	—	4620	4513	5598	
56HP	16	20	20	—	1180	1540	1540	—	1158	1518	1518	—	4620	4513	5598	
58HP	18	20	20	—	1540	1540	1540	—	1518	1518	1518	—	4980	4873	5958	
60HP	20	20	20	—	1540	1540	1540	—	1518	1518	1518	—	4980	4873	5958	
62HP	14	16	16	16	1180	1180	1180	1180	1158	1158	1158	1158	5260	5153	6238	
64HP	16	16	16	16	1180	1180	1180	1180	1158	1158	1158	1158	5260	5153	6238	
66HP	10	16	20	20	770	1180	1540	1540	748	1158	1518	1518	5570	5463	6548	
68HP	12	16	20	20	1180	1180	1540	1540	1158	1158	1518	1518	5980	5873	6958	
70HP	10	20	20	20	770	1540	1540	1540	748	1518	1518	1518	5930	5823	6908	
72HP	16	16	20	20	1180	1180	1540	1540	1158	1158	1518	1518	5980	5873	6958	
74HP	16	18	20	20	1180	1540	1540	1540	1158	1518	1518	1518	6340	6233	7318	
76HP	16	20	20	20	1180	1540	1540	1540	1158	1518	1518	1518	6340	6233	7318	
78HP	18	20	20	20	1540	1540	1540	1540	1518	1518	1518	1518	6700	6593	7678	
80HP	20	20	20	20	1540	1540	1540	1540	1518	1518	1518	1518	6700	6593	7678	

4. Installation Instructions

4-7. Transporting the Outdoor Unit

When transporting the unit, have it delivered as close to the installation site as possible without unpacking. Use a hook for suspending the unit respectively according to the type of model. (Figs. 2-17-1 to 2-17-3)



CAUTION

- When hoisting the outdoor unit, pass lifting belts through the left and right holes of the bottom plate as shown in the following figures. Use two lengths of lifting belt 7.5 meters long or longer.
- Hang the lifting belt at an oblique angle of the four corners of the bottom plate. If it is hung at other areas, the lifting belt becomes loose and the outdoor unit will be damaged or you may be injured.
- Use protective panels or padding at all locations where the lifting belt contacts the outer casing or other parts to prevent scratching. In particular, use protective material (such as cloth or cardboard) to prevent the edges of the top panel from being scratched.

Model : 8 HP, 10 HP

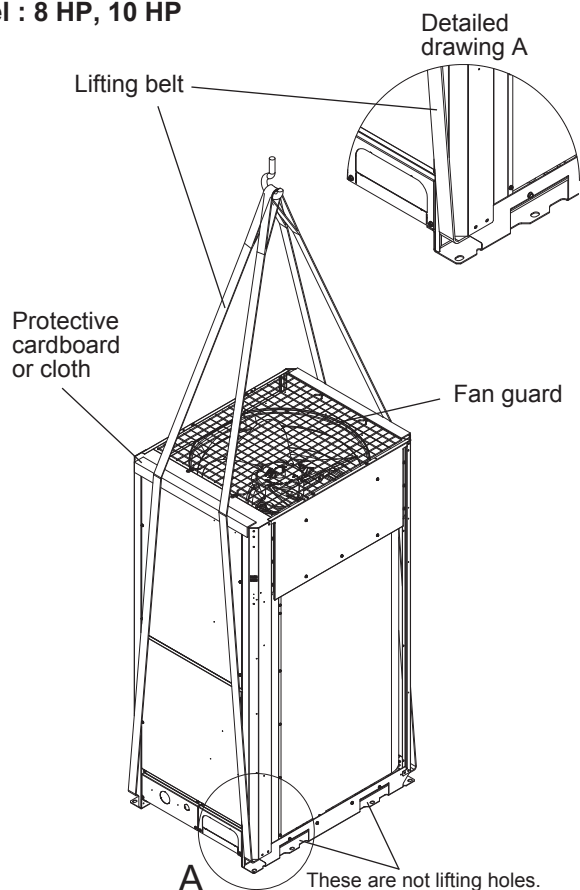


Fig. 2-17-1

Model : 12 HP, 14 HP, 16 HP

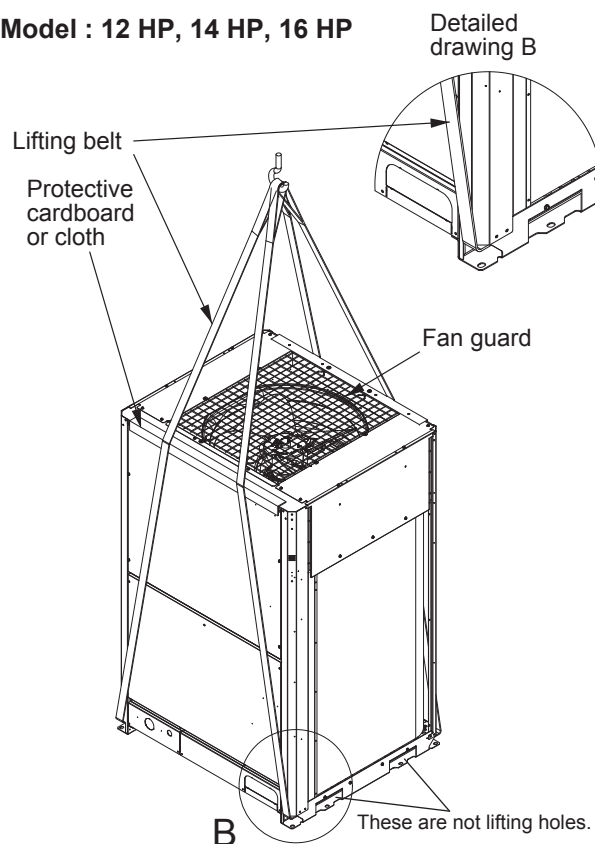


Fig. 2-17-2

Model: 18 HP, 20 HP

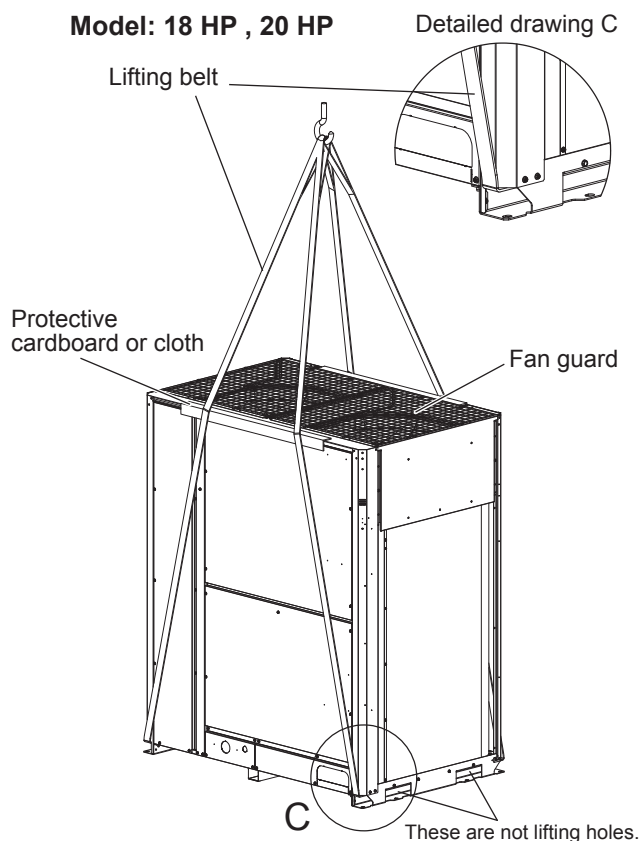


Fig. 2-17-3

4. Installation Instructions

4-8. Installing the Outdoor Unit

(1) Use four (4) anchor bolts (M12 or similar) to securely anchor the unit.

Regarding the positioning anchor bolts of the depth direction, select one of three types according to the installation site.

(See Figs. 2-18a-c / "A", "B" or "C".)

Normally, select the position "A". When removing the connection tube in a downward direction, select the position "B".

(2) When only using a single outdoor unit, see the Figure 2-18.

When making a combination of more than 2 units, refer to section 4 "1-2. Dimensional Data" and "1-3. Multiple Unit Installation Example" regarding the confirmation of the unit installation holes and unit size.

* When positioning the anchor bolt at "B" or "C", make a sufficient space between the units or from the wall for installation.

(Make a space between the units wider than 180mm and left and right space wider than 250mm from the wall.)

(3) The vibration insulator or the like should be kept secure to satisfy the width and depth of 100mm for the plate legs.

(See the dimensions marked by the asterisk at Fig. 2-20g - 2-20j.) Use a washer from the upper direction larger than the hole size for fixing the installation. The models 18 and 20 have four (4) anchor bolts respectively as same as others.

Two models, however, additionally need the vibration insulator under the plate leg at the central location for the installation site. Screw or wire the vibration insulator at the center of the unit to the rack or the basement.

Be sure to use the same thickness of all vibration insulators and make adjustment so that they will become the same height each other. (Fig. 2-19 and Figs. 2-20a to 2-20j)

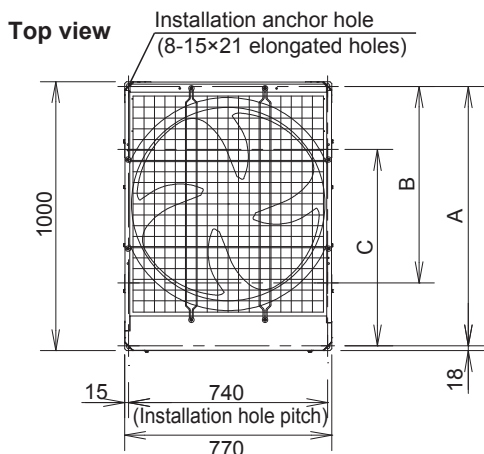


Fig. 2-18a

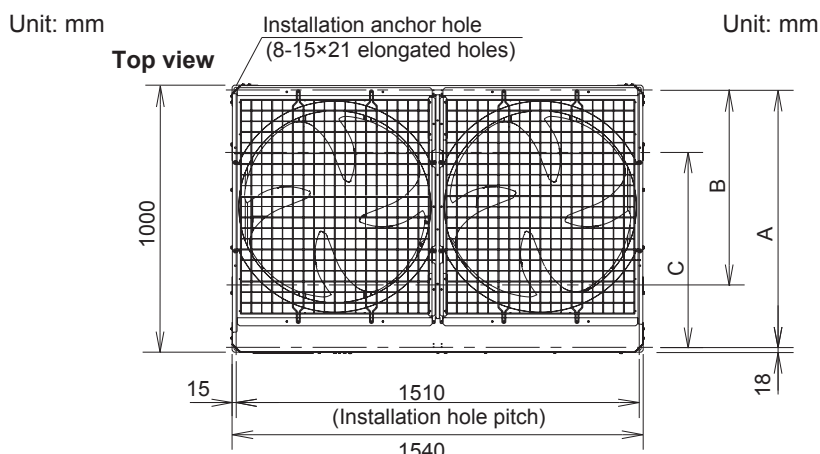


Fig. 2-18c

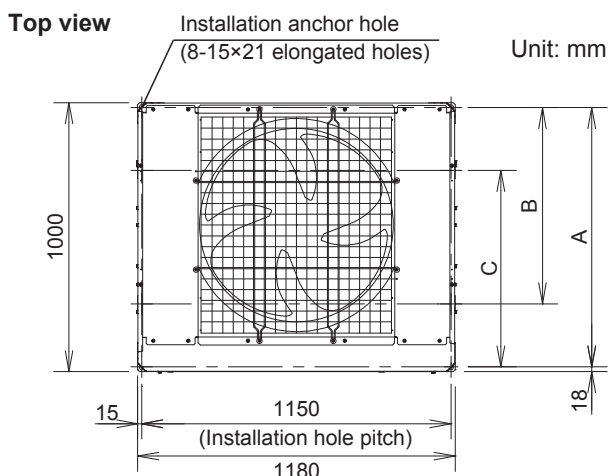


Fig. 2-18b

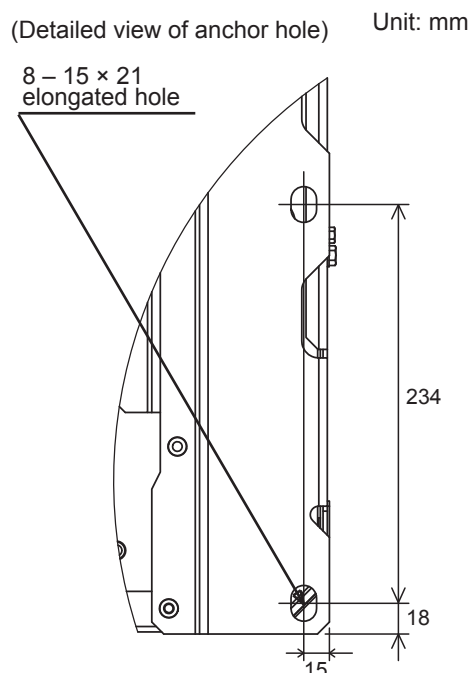


Fig. 2-19

• According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".

A :964 (Installation hole pitch) * The tubing is routed out from the front.

B :730 (Installation hole pitch) * The tubing is routed out from the bottom.

C :730 (Installation hole pitch)

4. Installation Instructions

• Below shows vibration insulator position when setting anchor bolt at position A (Figs.2-18a to 2-18c).

**Model : 8 HP, 10 HP, 12 HP,
14 HP, 16 HP**

Unit: mm

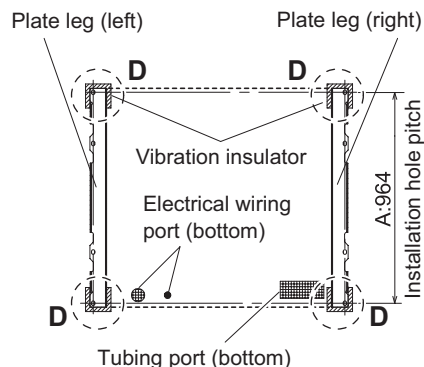


Fig. 2-20a

Model : 18 HP, 20 HP

Unit: mm

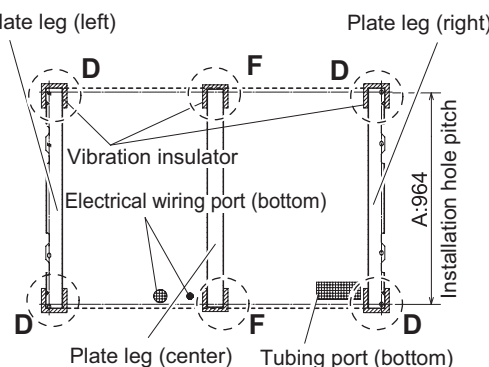


Fig. 2-20d

Detailed view of D and E

Unit: mm

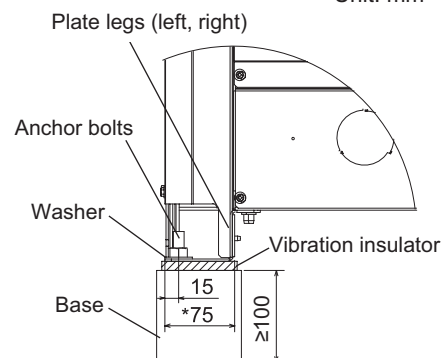


Fig. 2-20g

• Below shows vibration insulator position when setting anchor bolt at position B (Figs.2-18a to 2-18c).

**Model : 8 HP, 10 HP, 12 HP,
14 HP, 16 HP**

Unit: mm

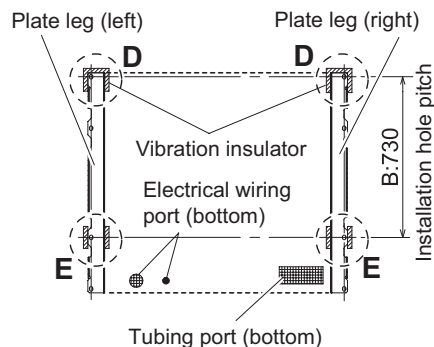


Fig. 2-20b

Model : 18 HP, 20 HP

Unit: mm

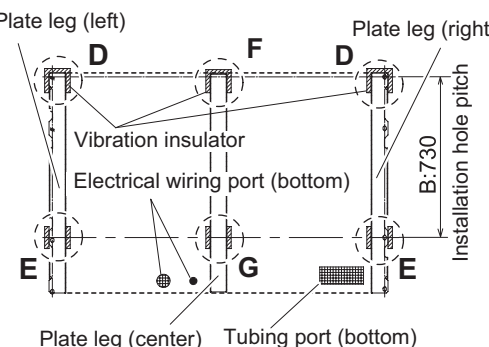


Fig. 2-20e

Detailed view of E and G

Unit: mm

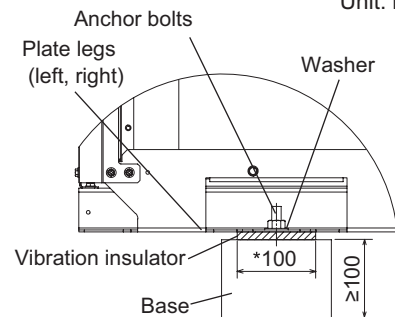


Fig. 2-20h

• Below shows vibration insulator position when setting anchor bolt at position C (Figs.2-18a to 2-18c).

**Model : 8 HP, 10 HP, 12 HP,
14 HP, 16 HP**

Unit: mm

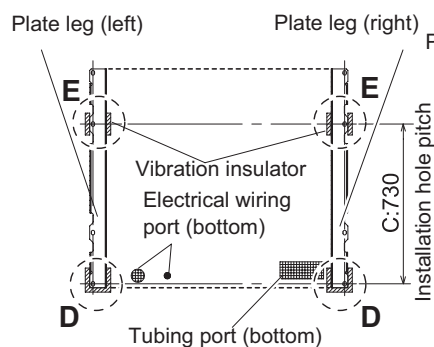


Fig. 2-20c

Model : 18 HP, 20 HP

Unit: mm

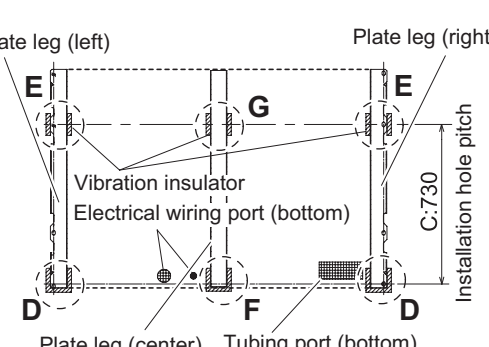


Fig. 2-20f

Detailed view of D and F

Unit: mm

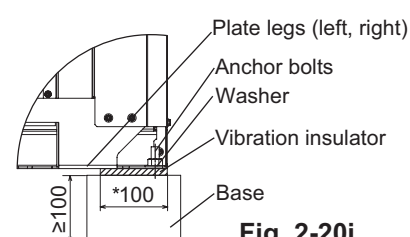


Fig. 2-20i

Detailed view of F and G

Unit: mm

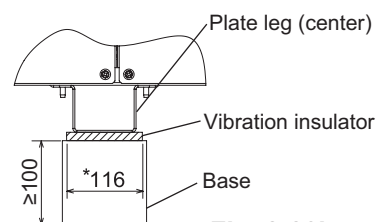




Fig. 2-20j

* Need the vibration insulator under the plate leg at the central location for the installation site.

NOTE: Proceed with the work following the dimensions showing the asterisk.
Anchor bolt and washer are not required at the central plate leg (F and G).

4. Installation Instructions

4-9. Routing the Tubing

- The tubing can be routed out either from the front or from the bottom. (Fig. 2-21a)
 - The connecting valve is contained inside the unit. Therefore, remove the front panel. (Fig. 2-21b)
- (1) If the tubing is routed out from the front, punch out the slit part (). (Fig. 2-22a)
 - Be careful not to damage the tubing cover.
 - (2) If the tubing is routed out from the bottom, use cutting pliers or a similar tool to cut out the tubing outlet slit (part indicated by ) from the tubing cover. (Figs. 2-21c and 2-22b)
 - Be careful not to damage the tubing cover.

Model : 8 HP, 10 HP

Model : 12 HP, 14 HP, 16 HP

Model : 18 HP, 20 HP

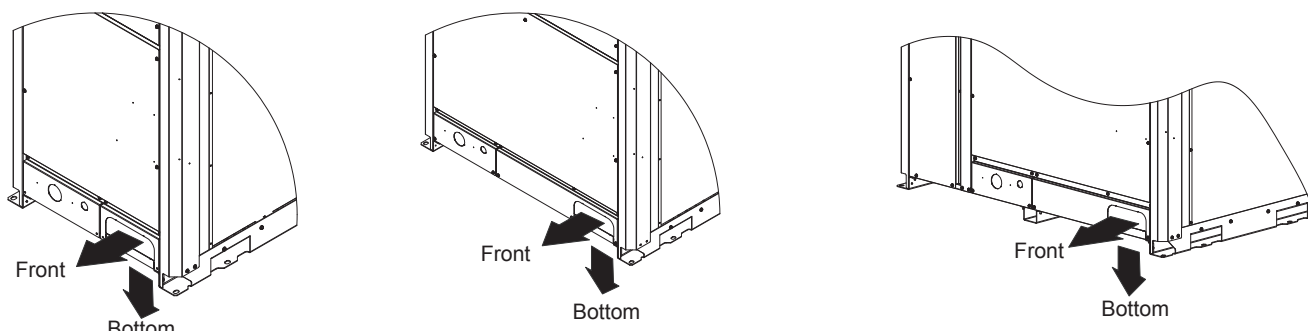



Fig. 2-21a

Model : 8 HP, 10 HP


Model : 12 HP, 14 HP, 16 HP

Model : 18 HP, 20 HP

Remove 8 panel screws from front panel.

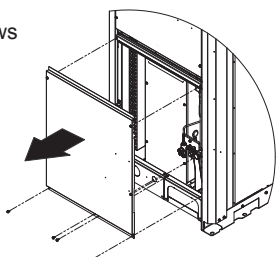

Remove 10 panel screws from front panel.

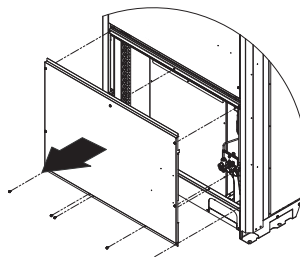

Remove 10 panel screws from front panel.

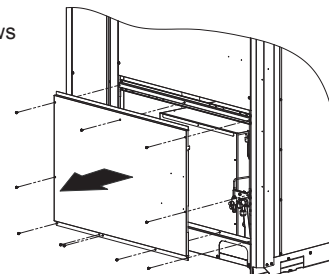


Fig. 2-21b

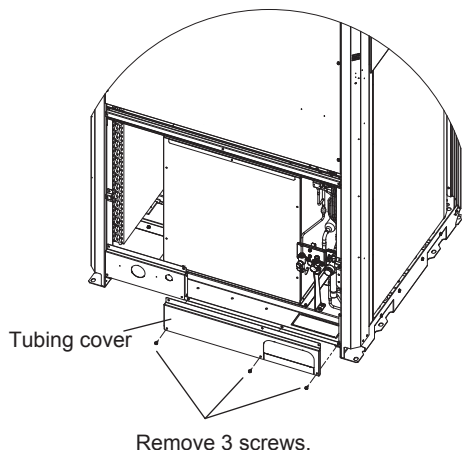


Fig. 2-21c

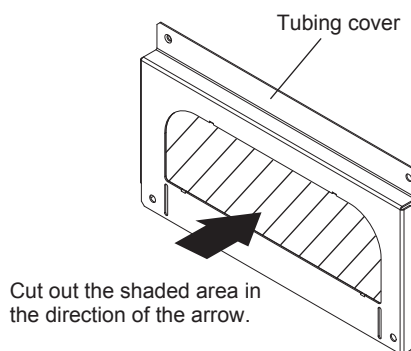


Fig. 2-22a

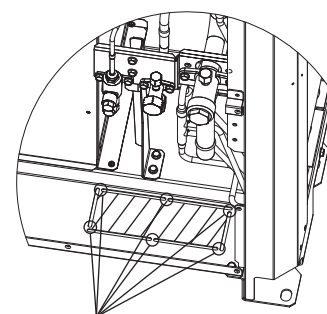


Fig. 2-22b

4. Installation Instructions

4-10. Prepare the Tubing

- Material: Use seamless phosphorous deoxidized copper tube for refrigeration. Wall thickness shall comply with the applicable legislation. The minimal wall thickness must be in accordance with the table below. For tubes of $\varnothing 22.22$ or larger, use the material of temper 1/2H or H (Hard copper tube). Do not bend the hard copper tube.
- Tubing size
Use the tubing size indicated in the table below.
- When cutting the tubing, use a tube cutter, and be sure to remove any burrs.
The same applies to distribution tubing (optional).
- When bending the tubes, bend each tube using a radius that is at least 4 times the outer diameter of the tube.
When bending, use sufficient care to avoid crushing or damaging the tube.
- For flaring, use a flare tool, and be sure that flaring is performed correctly.



CAUTION

Use sufficient caution during preparation of the tubing.

Seal the tube ends by means of caps or taping to prevent dust, moisture, or other foreign substances from entering the tubes.

Refrigerant tubing


Tubing size (mm)			
Material Temper - O (Soft copper tube)		Material Temper - 1/2 H, H (Hard copper tube)	
Outer dia.	Thickness	Outer dia.	Thickness
$\varnothing 6.35$	t0.8	$\varnothing 22.22$	t1.0
$\varnothing 9.52$	t0.8	$\varnothing 25.4$	t1.0
$\varnothing 12.7$	t0.8	$\varnothing 28.58$	t1.0
$\varnothing 15.88$	t1.0	$\varnothing 31.75$	t1.1
$\varnothing 19.05$	t1.2	$\varnothing 38.1$	over t1.35
		$\varnothing 41.28$	over t1.45
		$\varnothing 44.45$	over t1.55
		$\varnothing 50.8$	over t1.8

4. Installation Instructions

4-11. Connect the Tubing


- When operating the refrigerant tube installation in the field, do not apply the flame of welding to the surrounding sheet-metal parts. If necessary, use a wet rag to prevent overheating of the heat exchanger.
- Except for the 16HP model, do not use the supplied connector tubing.

Model : 8 HP, 10 HP, 12 HP, 14 HP (Except 16 HP)

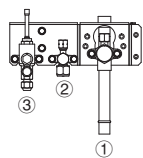


	Refrigerant tubing	Connection method	Supplied parts used?
①	Gas tube	Brazing	No
②	Liquid tube	Flare connection	No
③	Balance tube	Flare connection	No

Model : 16 HP

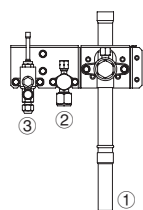


	Refrigerant tubing	Connection method	Supplied parts used?
①	Gas tube	Brazing	yes ($\phi 25.4 \rightarrow \phi 28.58$)
②	Liquid tube	Flare connection	No
③	Balance tube	Flare connection	No

Model : 18 HP, 20 HP


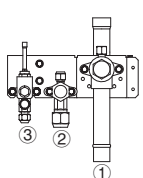


	Refrigerant tubing	Connection method	Supplied parts used?
①	Gas tube	Brazing	No
②	Liquid tube	Flare connection	No
③	Balance tube	Flare connection	No

Refrigerant tube port

- Use caulking, putty, or a similar material to fill any gaps at the refrigerant tube port () in order to prevent rainwater, dust or foreign substances from entering the unit.

* Perform this work even if the tubing is routed out in a downward direction.

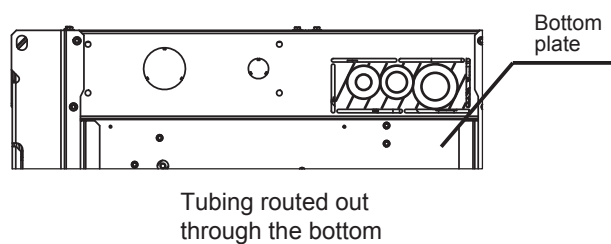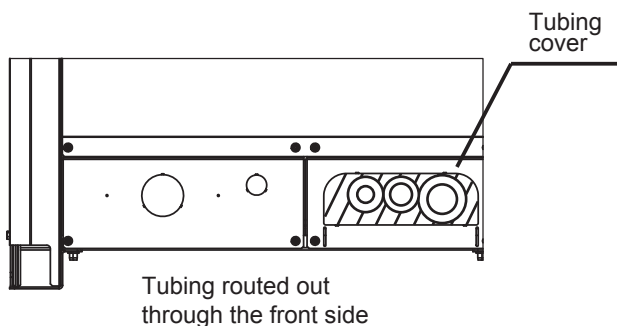

4. Installation Instructions

- Tighten each cap as specified below.

Tightening torque for each cap


Cap tightening torque

HP: horsepower


		Unit	8 HP	10 HP	12 HP	14 HP	16 HP	18 HP	20 HP	
Liquid tube	Valve cap	N · m	20.6 ~ 28.4			48.0 ~ 59.8				
		{kgf · cm}	{206 ~ 284}			{480 ~ 598}				
	Service port cap	N · m	10.7 ~ 14.7							
		{kgf · cm}	{107 ~ 147}							
Flare nut	N · m	34 ~ 42		49 ~ 61		68 ~ 82				
	{kgf · cm}	{340 ~ 420}		{490 ~ 610}		{680 ~ 820}				
Gas tube	Valve cap	N · m	40 ~ 45	47 ~ 53			70 ~ 75			
		{kgf · cm}	{400 ~ 450}	{470 ~ 530}			{700 ~ 750}			
	Service port cap	N · m	10 ~ 12							
		{kgf · cm}	{100 ~ 120}							
Balance tube	Valve cap	N · m	20 ~ 25							
		{kgf · cm}	{200 ~ 250}							
	Service port cap	N · m	9 ~ 11							
		{kgf · cm}	{90 ~ 110}							
Flare nut	N · m	14 ~ 18								
	{kgf · cm}	{140 ~ 180}								

2


Model : 8 HP

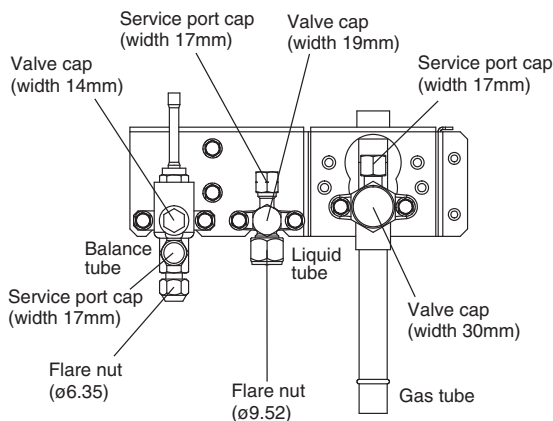


Model: 12 HP, 14 HP, 16 HP

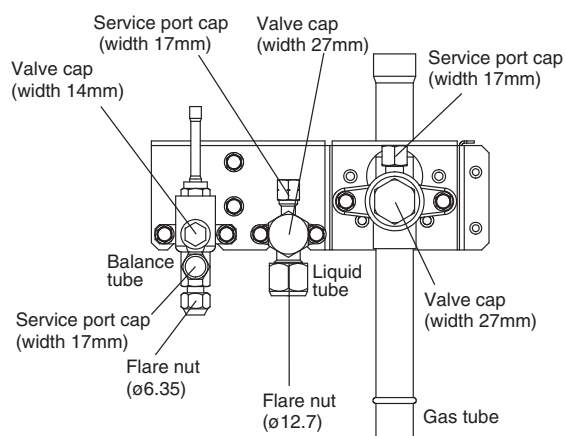

Model: 10 HP

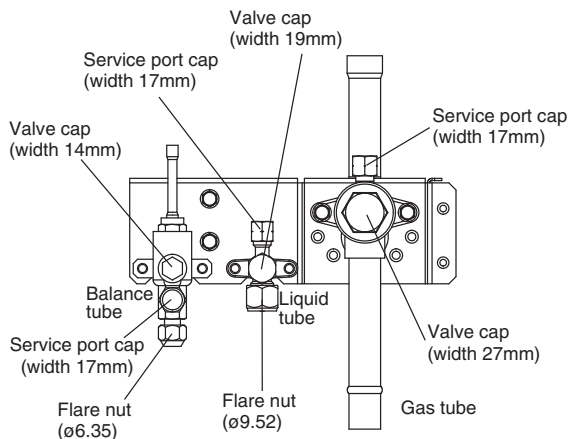


Model: 18 HP, 20 HP

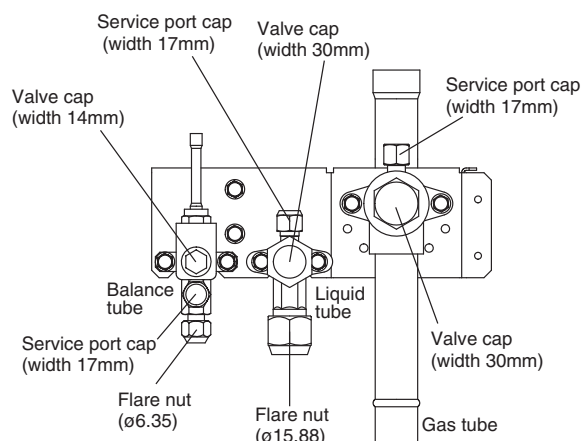

4. Installation Instructions

Do not apply an adjustable wrench to the hexagonal part.

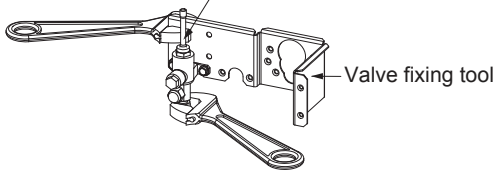

Use two adjustable wrenches when removing or installing the balance tube flare nut.

In particular, do not apply an adjustable wrench to the hexagonal part at the top of the valve.


If force is applied to this part, gas leakage will occur.

Apply an adjustable wrench to settle the fixing tool as shown in the figure. If not used, the valve fixing tool will get distorted.

Use two adjustable wrenches, as shown in the figure, when removing the liquid tube valve flare nut.

1. Do not apply a wrench to the valve cap when removing or installing the flare nuts. Doing so may damage the valve.
2. If the valve cap is left off for a long period of time, refrigerant leakage will occur. Therefore, do not leave the valve cap off.
3. Applying refrigerant oil to the flare surface can be effective in preventing gas leakage, however be sure to use a refrigerant oil which is suitable for the refrigerant that is used in the system.

This unit utilizes R410A refrigerant, and the refrigerant oil is ether oil (synthetic oil). However, hub oil (synthetic oil) can also be used.

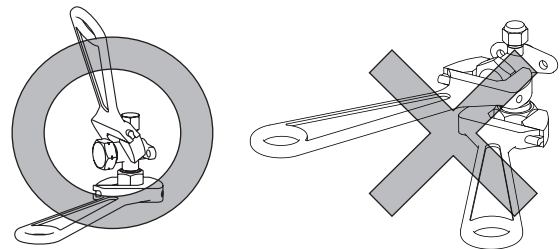


● Precautions for brazing

Be sure to replace the air inside the tube with nitrogen to prevent oxide film from forming during the brazing process.

Be sure to use a damp cloth or other means to cool the valve unit during brazing.

Work method

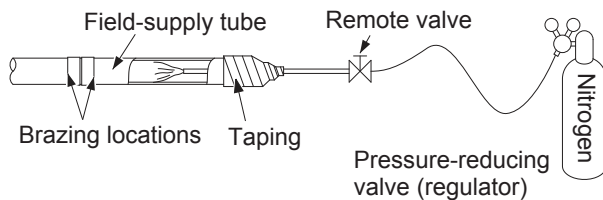

CAUTION

1. Be sure to use nitrogen
Oxygen, CO₂, and CFC must not be used.
2. Use a pressure-reducing valve on the nitrogen tank.
3. Do not use agents intended to prevent the formation of oxide film.
They will adversely affect the refrigeration oil, and may cause equipment failure.
4. The balance tube is not used if only 1 outdoor unit is installed.
Use the unit in the same conditions as when it was shipped from the factory.

4. Installation Instructions

● Charging procedure

Be sure to charge with R410A refrigerant in liquid form.

1. After performing a vacuum, charge with refrigerant from the liquid tubing side. At this time, all valves must be in the “fully closed” position.
2. If it was not possible to charge the designated amount, operate the system in Cooling mode while charging with refrigerant from the gas tubing side. (This is performed at the time of the test run. For this, all valves must be in the “fully open” position. However if only one outdoor unit is installed, a balance tube is not used.

Therefore, leave the valves fully closed.) Charge with R410A refrigerant in liquid form.


With R410A refrigerant, charge while adjusting the amount being fed a little at a time in order to prevent liquid refrigerant from backing up.

- After charging is completed, turn all valves to the “fully open” position.
- Replace the tubing covers as they were before.



CAUTION

1. R410A additional charging absolutely must be done through liquid charging.
2. The R410A refrigerant cylinder has a gray base color, and the top part is pink.
3. The R410A refrigerant cylinder includes a siphon tube. Check that the siphon tube is present. (This is indicated on the label at the top of the cylinder.)
4. Due to differences in the refrigerant, pressure, and refrigerant oil involved in installation, it is not possible in some cases to use the same tools for R22 and for R410A.

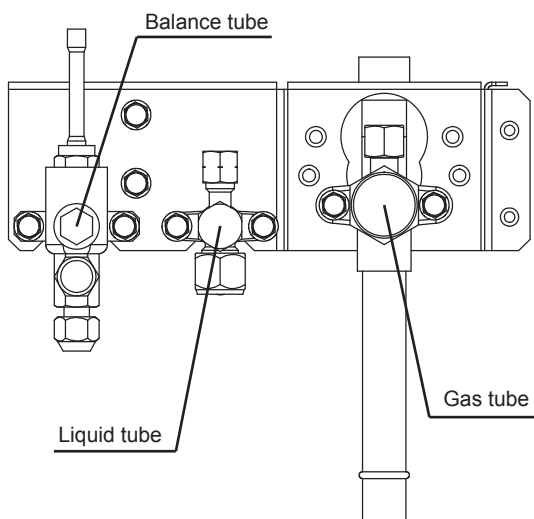


* Use a hexagonal wrench and turn to the left to open.


		Gas tube	Liquid tube
Hex wrench width	8 HP	5 mm	4 mm
	10 HP		
	12 HP	8 mm	
	14 HP		
	16 HP	6 mm	
	18 HP		
20 HP			

Balance tube

Rotate 90 degrees counterclockwise for OPEN

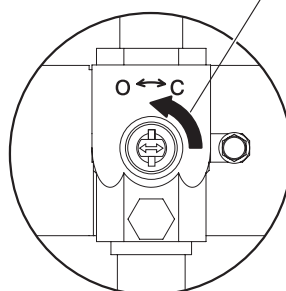

Fully closed (at shipment)

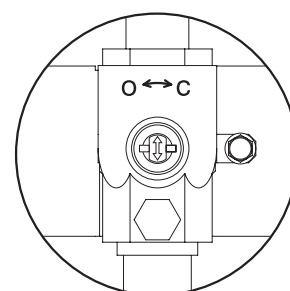

Fully open

How to turn the tab

5. HOW TO PROCESS TUBING

The liquid tubing side is connected by a flare nut, and the gas tubing side is connected by brazing.

5-1. Connecting the Refrigerant Tubing

Use of the Flaring Method

Many of conventional split system air conditioners employ the flaring method to connect refrigerant tubes which run between indoor and outdoor units. In this method, the copper tubes are flared at each end and connected with flare nuts.

Flaring Procedure with a Flare Tool

- (1) Cut the copper tube to the required length with a tube cutter. It is recommended to cut approx. 30 – 50 cm longer than the tubing length you estimate.
- (2) Remove burrs at the end of the copper tube with a tube reamer or a similar tool. This process is important and should be done carefully to make a good flare. Be sure to keep any contaminants (moisture, dirt, metal filings, etc.) from entering the tubing. (Figs. 2-23 and Figs. 2-24)

NOTE

When reaming, hold the tube end downward and be sure that no copper scraps fall into the tube. (Fig. 2-24)

- (3) Remove the flare nut from the unit and be sure to mount it on the copper tube.
- (4) Make a flare at the end of copper tube with a flare tool. (Fig. 2-25)

NOTE

A good flare should have the following characteristics:

- Inside surface is glossy and smooth
- Edge is smooth
- Tapered sides are of uniform length

Caution Before Connecting Tubes Tightly

- (1) Apply a sealing cap or water-proof tape to prevent dust or water from entering the tubes before they are used.
- (2) Be sure to apply refrigerant lubricant (ether oil) to the inside of the flare nut before making piping connections. This is effective for reducing gas leaks. (Fig. 2-26)
- (3) For proper connection, align the union tube and flare tube straight with each other, then screw in the flare nut lightly at first to obtain a smooth match. (Fig. 2-27)

- Adjust the shape of the liquid tube using a tube bender at the installation site and connect it to the liquid tubing side valve using a flare.

Cautions During Brazing

- Replace air inside the tube with nitrogen gas to prevent copper oxide film from forming during the brazing process. (Oxygen, carbon dioxide and Freon are not acceptable.)
- Do not allow the tubing to get too hot during brazing. The nitrogen gas inside the tubing may overheat, causing refrigerant system valves to become damaged. Therefore allow the tubing to cool when brazing.
- Use a reducing valve for the nitrogen cylinder.
- Do not use agents intended to prevent the formation of oxide film. These agents adversely affect the refrigerant and refrigerant oil, and may cause damage or malfunctions.

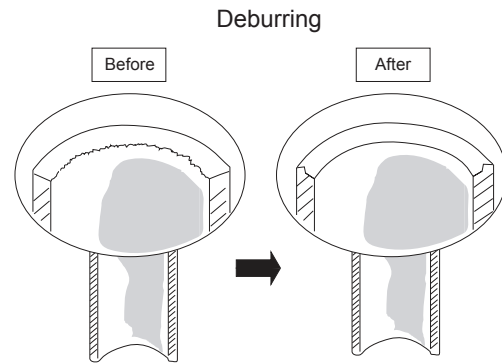


Fig. 2-23

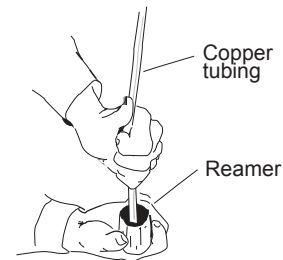


Fig. 2-24

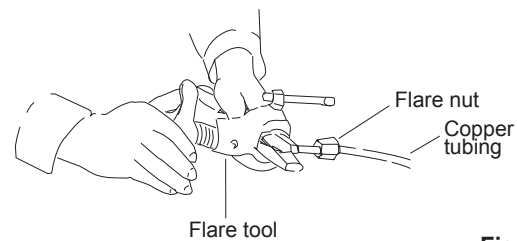


Fig. 2-25

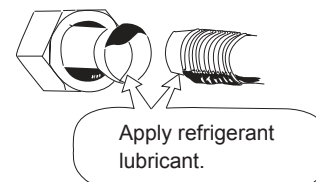


Fig. 2-26

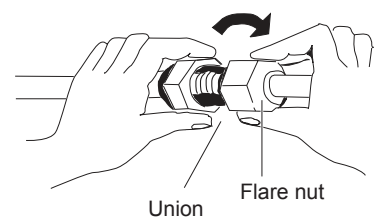


Fig. 2-27

5. HOW TO PROCESS TUBING

5-2. Connecting Tubing Between Indoor and Outdoor Units

- (1) Tightly connect the indoor-side refrigerant tubing extended from the wall with the outdoor-side tubing.
- (2) To fasten the flare nuts, apply the following specified torque:

- When removing the flare nuts from the tubing connections, or when tightening them after connecting the tubing, be sure to use a torque wrench and a spanner.

(Fig. 2-28)

If the flare nuts are over-tightened, the flare may be damaged, which could result refrigerant leakage and cause injury or asphyxiation to room occupants.

- For the flare nuts at tubing connections, be sure to use the flare nuts that were supplied with the unit, or else flare nuts for R410A (type 2). The refrigerant tubing that is used must be of the correct wall thickness as shown in the following table.
- In order to prevent damage to the flare caused by over-tightening of the flare nuts, use the table above as a guide when tightening.
- When tightening the flare nut on the liquid tube, use an adjustable wrench with a nominal handle length of 200 mm.

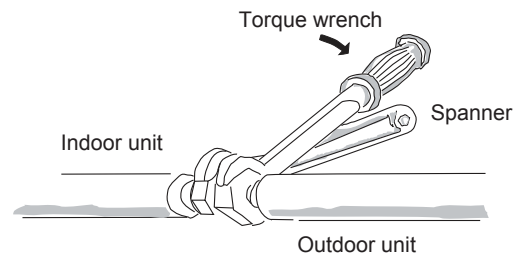


Fig. 2-28

Tube diameter	Tightening torque, approximate	Tube thickness
ø6.35 (1/4")	14 – 18 N · m {140 – 180 kgf · cm}	0.8 mm
ø9.52 (3/8")	34 – 42 N · m {340 – 420 kgf · cm}	0.8 mm
ø12.7 (1/2")	49 – 61 N · m {490 – 610 kgf · cm}	0.8 mm
ø15.88 (5/8")	68 – 82 N · m {680 – 820 kgf · cm}	1.0 mm
ø19.05 (3/4")	100 – 120 N · m {1000 – 1200 kgf · cm}	1.2 mm

Because the pressure is approximately 1.6 times higher than conventional refrigerant pressure, the use of ordinary flare nuts (type 1) or thin-walled tubes may result in tube rupture, injury, or asphyxiation caused by refrigerant leakage.


5-3. Insulating the Refrigerant Tubing

Tubing Insulation

- Standard Selection of Insulation Material
Under the environment of the high temperature and high humidity, the surface of the insulation material is easy to become condensation. This will result in leakage and dew drop. Refer to the chart shown below when selecting the insulation material. In case that the ambient temperature and relative humidity are placed above the line of the insulation thickness, the condensation may occasionally make a dew drop on the surface of the insulation material. In this case, select the better insulation efficiency.

* However, since the condition will be different due to the sort of the insulaton material and the environmental condition of the installation place, see the chart shown below as a reference when making a selection.

Two tubes arranged together

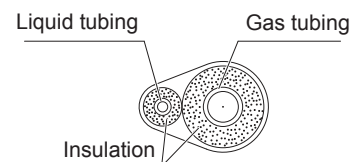

Three tubes arranged together














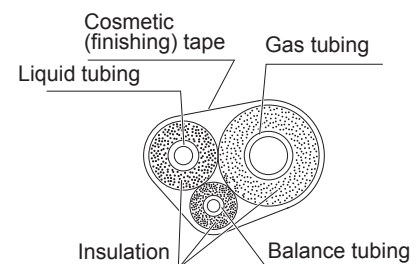


Fig. 2-29

Standard Selection of Tubing Insulation

Sort of insulation material	Polyethylene heat resisting material
Upper limits of usage temperature	Gas tubing : 120 °C or above Other tubing : 80 °C or above
Calculating condition	
Thermal conductivity of insulation material	0.043 W/(m · K) (Average temperature 23 °C)
Refrigerant temperature	2 °C

5. HOW TO PROCESS TUBING

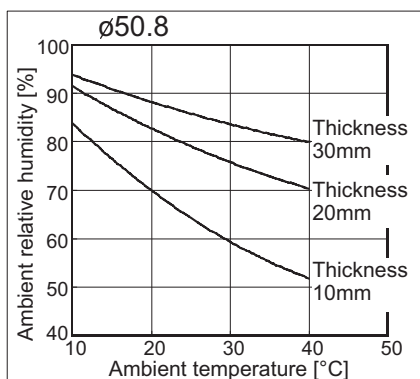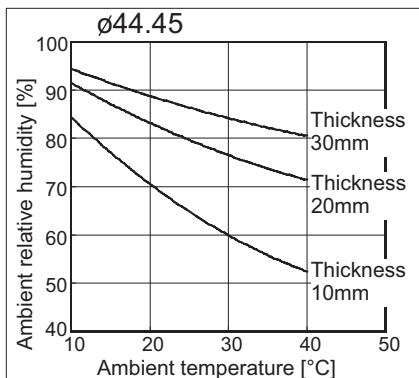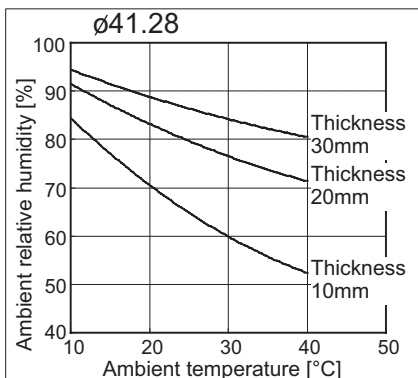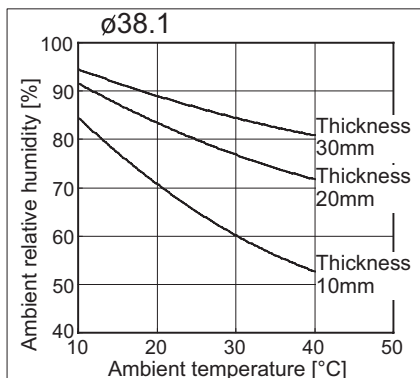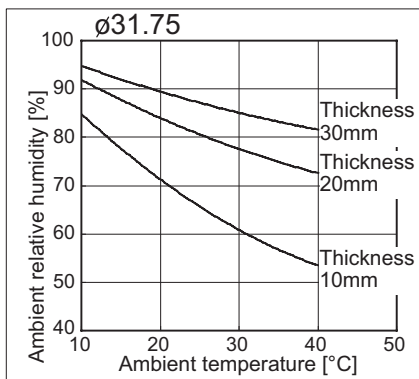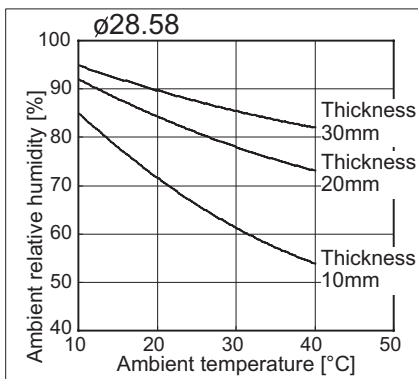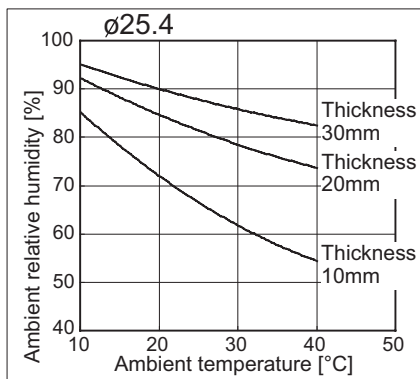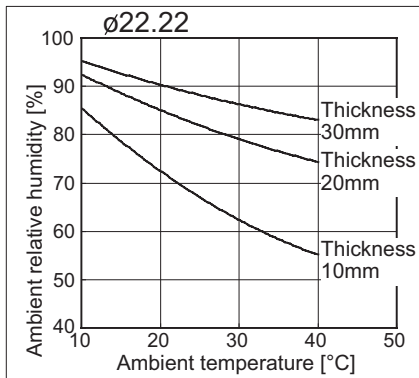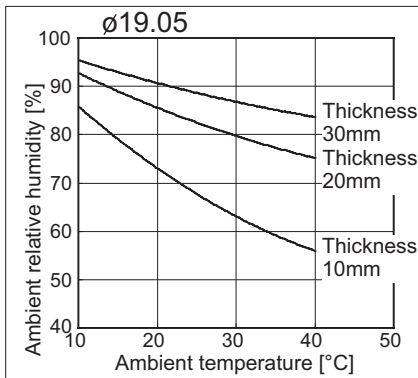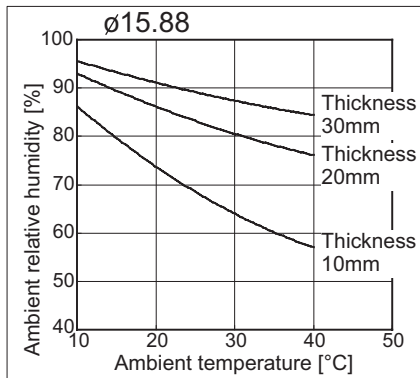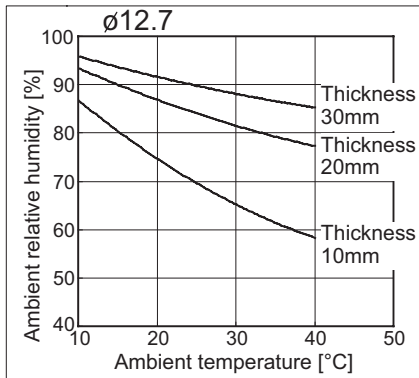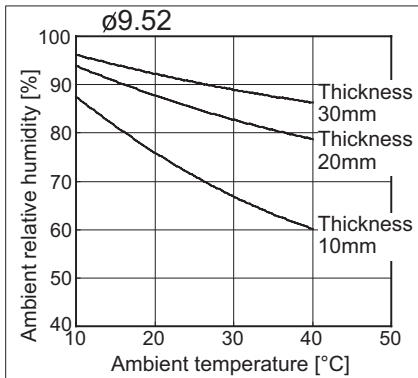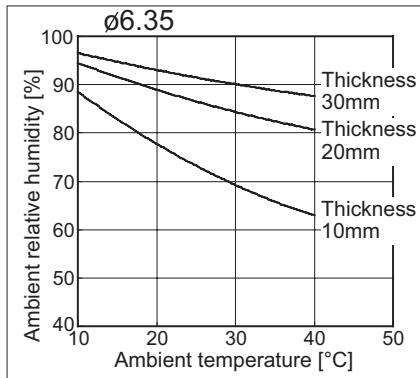

2

5. HOW TO PROCESS TUBING



CAUTION

If the exterior of the outdoor unit valves has been finished with a square duct covering, make sure you allow sufficient space to use the valves and to allow the panels to be attached and removed.

Taping the flare nuts

Wind the white insulation tape around the flare nuts at the gas tube connections. Then cover up the tubing connections with the flare insulator, and fill the gap at the union with the supplied black insulation tape. Finally, fasten the insulator at both ends with the supplied vinyl clamps. (Fig. 2-30)

Insulation material

The material used for insulation must have good insulation characteristics, be easy to use, be age resistant, and must not easily absorb moisture.

Be sure to use the heat-resistant insulator corresponding to the gas tube of 120°C or above and other tubes of 80°C or above.

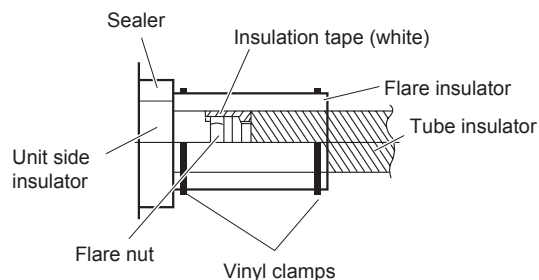


Fig. 2-30

2



CAUTION

After a tube has been insulated, never try to bend it into a narrow curve because it can cause the tube to break or crack.

Never grasp the drain or refrigerant connecting outlets when moving the unit.

5-4. Taping the Tubes


- (1) At this time, the refrigerant tubes (and electrical wiring if local codes permit) should be taped together with armoring tape in 1 bundle. To prevent the condensation from overflowing the drain pan, keep the drain hose separate from the refrigerant tubing.
- (2) Wrap the armoring tape from the bottom of the outdoor unit to the top of the tubing where it enters the wall. As you wrap the tubing, overlap half of each previous tape turn.
- (3) Clamp the tubing bundle to the wall, using 1 clamp approx. each meter. (Fig. 2-32)

NOTE

Do not wind the armoring tape too tightly since this will decrease the heat insulation effect. Also ensure that the condensation drain hose splits away from the bundle and drips clear of the unit and the tubing.

5-5. Finishing the Installation

After finishing insulating and taping over the tubing, use sealing putty to seal off the hole in the wall to prevent rain and draft from entering. (Fig. 2-33)

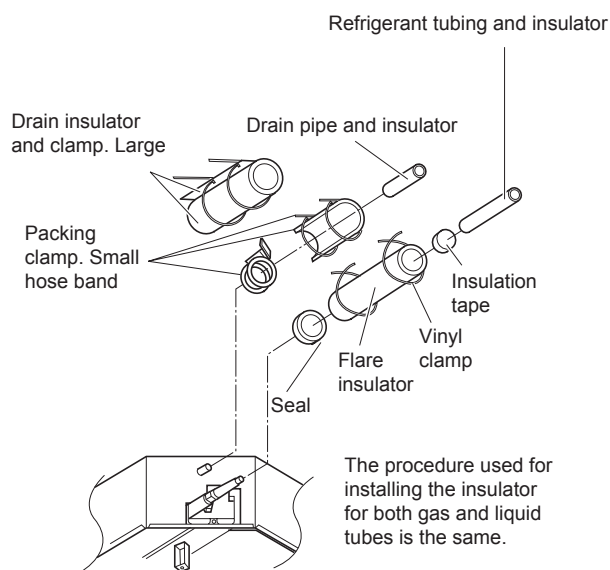

The procedure used for installing the insulator for both gas and liquid tubes is the same.

Fig. 2-31

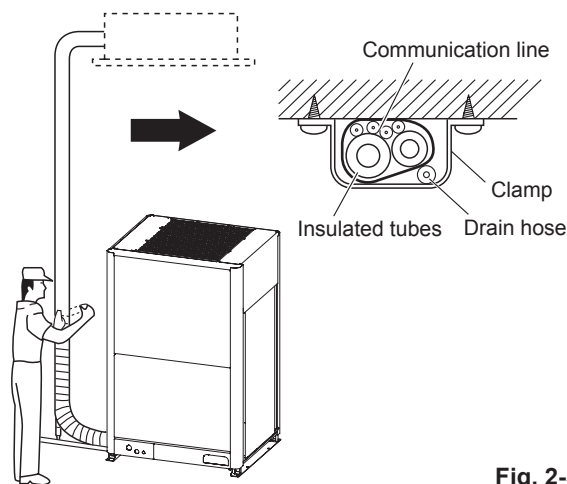


Fig. 2-32

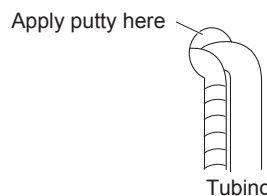


Fig. 2-33

6. AIR PURGING

Air and moisture in the refrigerant system may have undesirable effects as indicated below.

- pressure in the system rises
- operating current rises
- cooling (or heating) efficiency drops
- moisture in the refrigerant circuit may freeze and block capillary tubing
- water may lead to corrosion of parts in the refrigerant system

Therefore, the indoor unit and tubing between the indoor and outdoor unit must be leak tested and evacuated to remove any noncondensables and moisture from the system.

■ Air Purging with a Vacuum Pump (for Test Run) Preparation

Check that each tube (both liquid and gas tubes) between the indoor and outdoor units have been properly connected and all wiring for the test run has been completed. Remove the valve caps from both the gas and liquid service valves on the outdoor unit. Note that both liquid and gas tube service valves on the outdoor unit are kept closed at this stage.

Leak test

- (1) With the service valves on the outdoor unit closed, remove the 1/4 in. flare nut and its bonnet on the gas tube service valve. (Save for reuse.)
- (2) Attach a manifold valve (with pressure gauges) and dry nitrogen gas cylinder to this service port with charge hoses.



CAUTION

Use a manifold valve for air purging. If it is not available, use a stop valve for this purpose. The “Lo” knob of the manifold valve must always be kept closed.

- (3) Pressurize the system to no more than 3.8 MPa with dry nitrogen gas and close the cylinder valve when the gauge reading reaches 3.8 MPa. Then, test for leaks with liquid soap.



CAUTION

To avoid nitrogen entering the refrigerant system in a liquid state, the top of the cylinder must be higher than the bottom when you pressurize the system. Usually, the cylinder is used in a vertical standing position.

Manifold gauge

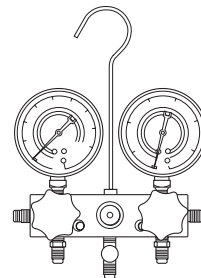


Fig. 2-34

Vacuum pump

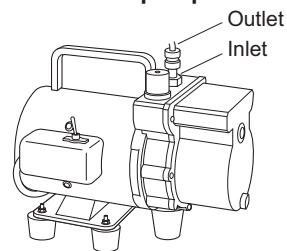


Fig. 2-35

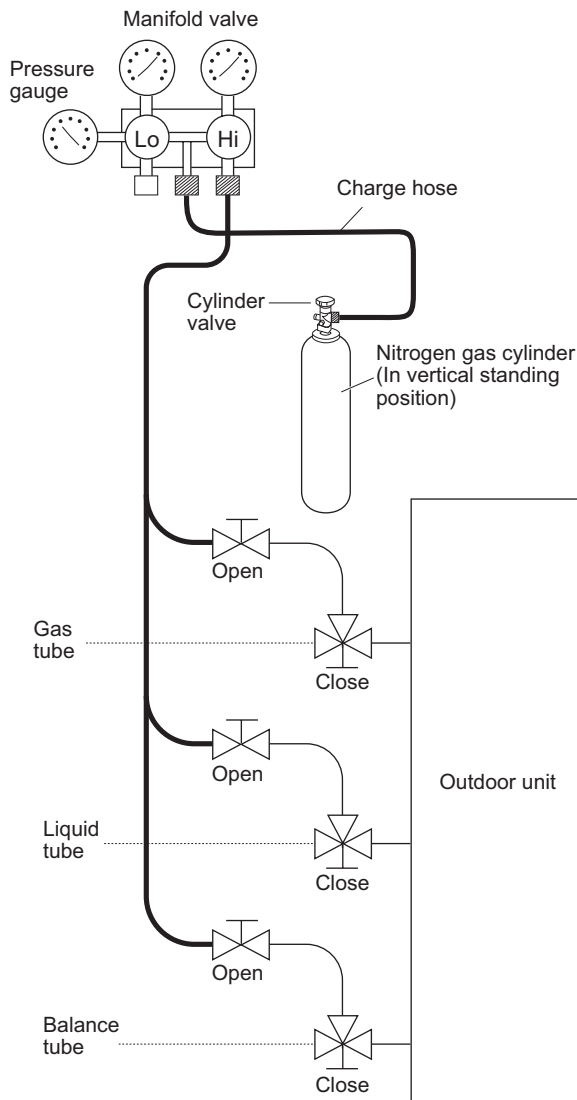


Fig. 2-36

6. AIR PURGING

- (4) Do a leak test of all joints of the tubing (both indoor and outdoor) and both gas and liquid service valves. Bubbles indicate a leak. Wipe off the soap with a clean cloth after a leak test.
- (5) After the system is found to be free of leaks, relieve the nitrogen pressure by loosening the charge hose connector at the nitrogen cylinder. When the system pressure is reduced to normal, disconnect the hose from the cylinder.

Evacuation

- (1) Attach the charge hose end described in the preceding steps to the vacuum pump to evacuate the tubing and indoor unit. Confirm that the "Lo" knob of the manifold valve is open. Then, run the vacuum pump. The operation time for evacuation varies with the tubing length and capacity of the pump. The following table shows the amount of time for evacuation:

Required time for evacuation when 30 gal/min. vacuum pump is used	
If tubing length is less than 15 m	If tubing length is longer than 15 m
45 min. or more	90 min. or more

NOTE

The required time in the above table is calculated based on the assumption that the ideal (or target) vacuum condition is less than -101 kPa $\{-755$ mmHg, 5 Torr $\}$.

- (2) When the desired vacuum is reached, close the "Lo" knob of the manifold valve and turn off the vacuum pump. Please confirm that the gauge pressure is under -101 kPa $\{-755$ mmHg, 5 Torr $\}$ after 4 to 5 minutes of vacuum pump operation.



CAUTION

Use a cylinder designed for use with R410A respectively.

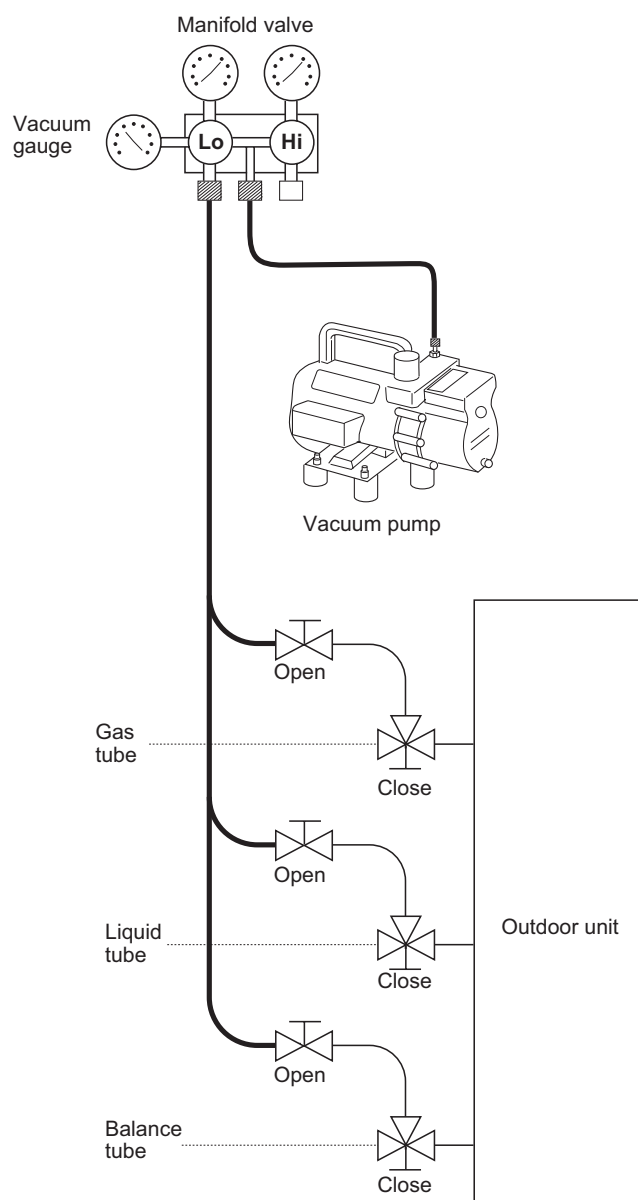


Fig. 2-37

6. AIR PURGING

Charging additional refrigerant

- Charging additional refrigerant (calculated from the liquid tube length as shown in Section “1-3. Tubing Length”) using the liquid tube service valve. (Fig. 2-38)
- Use a balance to measure the refrigerant accurately.
- If the additional refrigerant charge amount cannot be charged at once, charge the remaining refrigerant in liquid form by using the gas tube service valve with the system in cooling operation mode at the time of test run. (Fig. 2-39)

Finishing the job

- (1) With a hex wrench, turn the liquid tube service valve stem counter-clockwise to fully open the valve.
- (2) Turn the gas tube service valve stem counter-clockwise to fully open the valve.



CAUTION

To avoid gas from leaking when removing the charge hose, make sure the stem of the gas tube is turned all the way out (“BACK SEAT” position).

- (3) Loosen the charge hose connected to the gas tube service port (1/4 in.) slightly to release the pressure, then remove the hose.
- (4) Replace the 1/4 in. flare nut and its bonnet on the gas tube service port and fasten the flare nut securely with an adjustable wrench or box wrench. This process is very important to prevent gas from leaking from the system.
- (5) Replace the valve caps at both gas and liquid service valves and fasten them securely.

This completes air purging with a vacuum pump. The air conditioner is now ready for a test run.

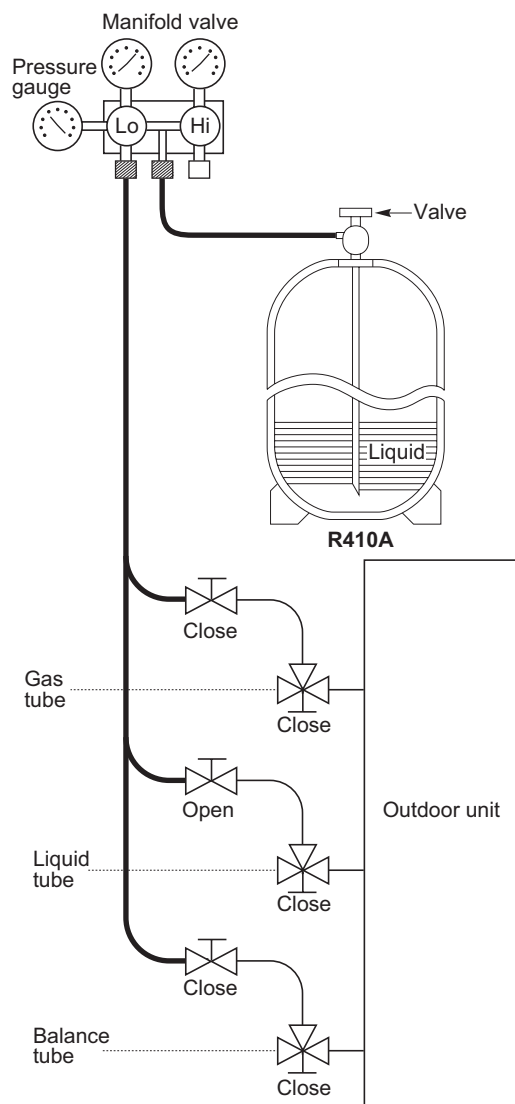


Fig. 2-38

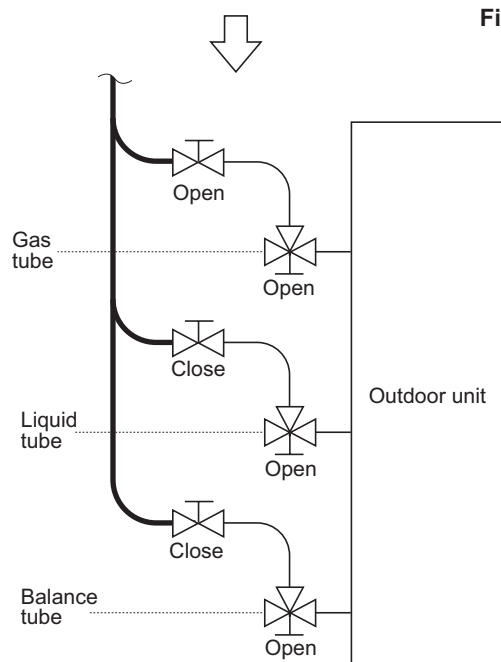


Fig. 2-39

7. Optional Parts

7-1. Distribution Joint Kits

Model name	Cooling capacity after distribution	Remarks	Model name	Cooling capacity after distribution	Remarks
1. CZ-P680PJ2	68.0 kW or less	For outdoor unit	3. CZ-P160BK2	22.4 kW or less*	For indoor unit
2. CZ-P1350PJ2	more than 68.0 kW	For outdoor unit	4. CZ-P680BK2	68.0 kW or less*	For indoor unit
			5. CZ-P1350BK2	more than 68.0 kW *	For indoor unit

*In case the total capacity of indoor units connected after distribution exceeds the total capacity of the outdoor units, select the distribution tubing size for the total capacity of the outdoor units.

Regarding the cautions when connecting to the indoor unit, see the section "Installing distribution joint" on page 2-22.


■ CZ-P160BK2 (for R410A)

How to Attach Distribution Joint

1. Accompanying Parts

Check the contents of your distribution joint kit.

2. Distribution Joint Kits (with insulation)

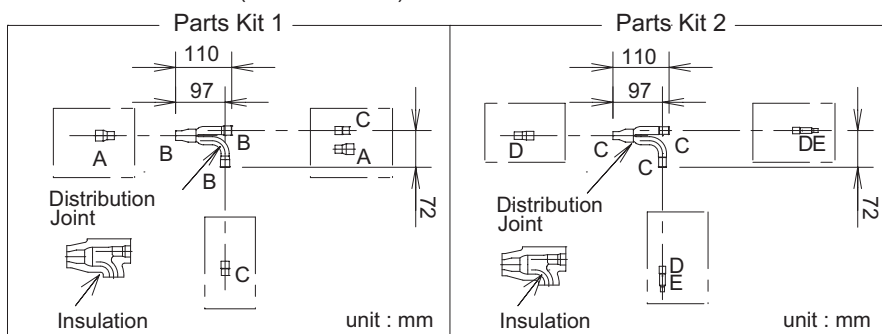

- Size of connection point on each part (Shown are inside diameters of tubing)

Size	mm	Inch
Part A	ø19.05	3/4
Part B	ø15.88	5/8
Part C	ø12.7	1/2
Part D	ø9.52	3/8
Part E	ø6.35	1/4

3. Making Branch Connections

- For branching tubes, install 150mm or larger (including reducer) straight tubing up to the point where the tube branches (or after the point where the tubes join together). (Fig. 2-40)
- Using a tube cutter, cut the joints at the diameter required to match the outside diameter of the tubing you are connecting. (This is usually done at the installation site.)
The tube diameter depends on the total capacity of the indoor unit. Note that you do not have to cut the joints if it already matches the tubing end size. For size selection of the tube diameter, refer to the installation instructions provided with the outdoor unit.

NOTE

Avoid forceful cutting that may harm the shape of the joints or tubing. (Inserting the tubing will not be possible if the tube shape is not proper.)

- Cut off as far away from stopper as possible. (Fig. 2-41)
- After cutting the joints, be sure to remove burrs on the inside of the joints. (If the joints have been squashed or dented badly, reshaped them using a tube spreader.)
- Make sure there is no dirt or other foreign substances inside the distribution joint.
- The distribution joint can be either horizontal or vertical. (Fig. 2-42)
In the case of horizontal, the L-shaped tubing must be slanted slightly upward (15° to 30°).
- When brazing a pipe E to the reducer of which middle pipe inner dimension is D as shown above chart, cut the middle pipe as long as possible so that the pipe E can be inserted.
- When brazing, replace air inside the tube with nitrogen gas to prevent copper oxide from forming.
- To insulate the distribution joint, use the supplied tubing insulation. (If using insulation other than that supplied, make sure that its heat resistance is 120°C or higher.)
- For additional details, refer to the installation instructions provided with the outdoor unit.

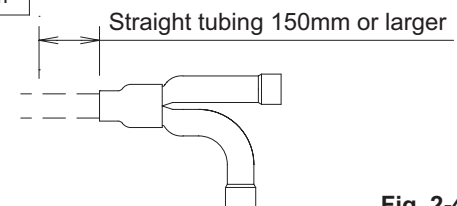


Fig. 2-40



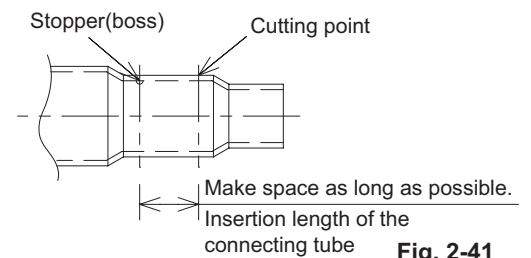


Fig. 2-41

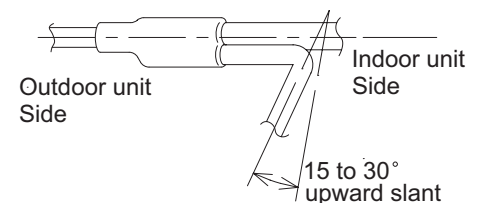

In case of horizontal position

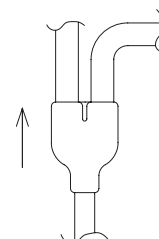

In case of vertical position
(directed upward)

Fig. 2-42

7. Optional Parts

■ CZ-P680BK2 (for R410A)


How to Attach Distribution Joint

1. Accompanying Parts

Check the contents of your distribution joint kit.

2. Distribution Joint Kits (with insulation)

Part Name	Parts Kit 1	Parts Kit 2
Distribution Joints	1	1
Insulations	1	1
Reducing Joints	5	3

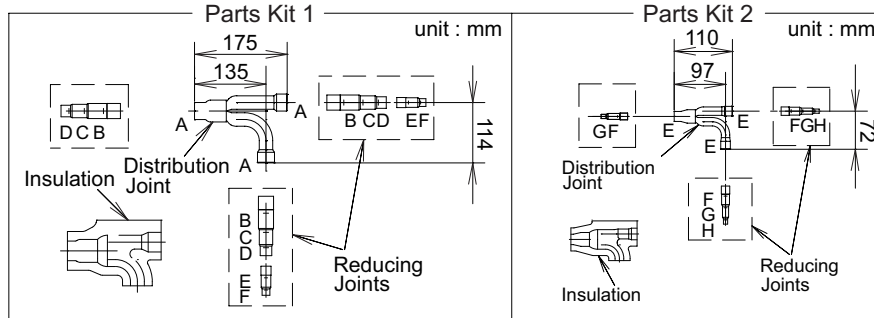

- Size of connection point on each part (Shown are inside diameters of tubing)

Size	mm	Inch
Part A	ø28.58	1-1/8
Part B	ø25.4	1
Part C	ø22.22	7/8
Part D	ø19.05	3/4
Part E	ø15.88	5/8
Part F	ø12.7	1/2
Part G	ø9.52	3/8
Part H	ø6.35	1/4

3. Making Branch Connections

- For branching tubes, install 150mm or larger (including reducer) straight tubing up to the point where the tube branches (or after the point where the tubes join together). (Fig. 2-43)
- Using a tube cutter, cut the joints at the diameter required to match the outside diameter of the tubing you are connecting. (This is usually done at the installation site.)
The tube diameter depends on the total capacity of the indoor unit. Note that you do not have to cut the joints if it already matches the tubing end size. For size selection of the tube diameter, refer to the installation instructions provided with the outdoor unit.

NOTE

Avoid forceful cutting that may harm the shape of the joints or tubing. (Inserting the tubing will not be possible if the tube shape is not proper.)

- Cut off as far away from stopper as possible. (Fig. 2-44)
- After cutting the joints, be sure to remove burrs on the inside of the joints. (If the joints have been squashed or dented badly, reshaped them using a tube spreader.)
- Make sure there is no dirt or other foreign substances inside the distribution joint.
- The distribution joint can be either horizontal or vertical. (Fig. 2-45)
In the case of horizontal, the L-shaped tubing must be slanted slightly upward (15° to 30°).
- When brazing, replace air inside the tube with nitrogen gas to prevent copper oxide from forming.
- To insulate the distribution joint, use the supplied tubing insulation. (If using insulation other than that supplied, make sure that its heat resistance is 120°C or higher.)
- For additional details, refer to the installation instructions provided with the outdoor unit.

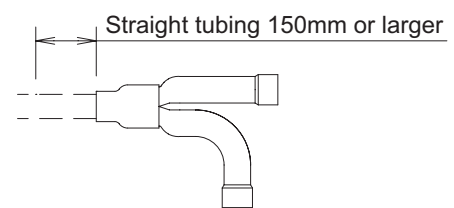


Fig. 2-43



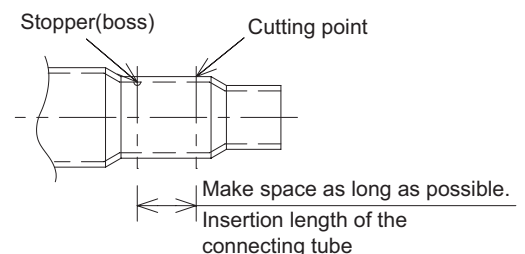


Fig. 2-44

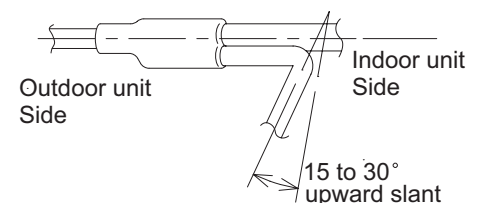

In case of horizontal position

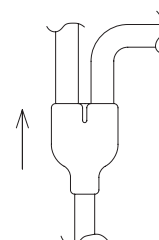

In case of vertical position
(directed upward or downward)

Fig. 2-45

7. Optional Parts


■ CZ-P1350BK2 (for R410A)

How to Attach Distribution Joint

1. Accompanying Parts

Check the contents of your distribution joint kit.

2. Distribution Joint Kits (with insulation)

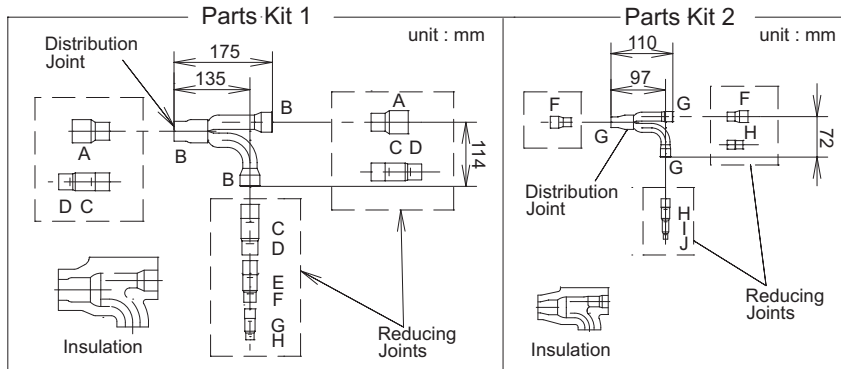

- Size of connection point on each part (Shown are inside diameters of tubing)

Size	mm	Inch
Part A	ø38.1	1-1/2
Part B	ø31.75	1-1/4
Part C	ø28.58	1-1/8
Part D	ø25.4	1
Part E	ø22.22	7/8
Part F	ø19.05	3/4
Part G	ø15.88	5/8
Part H	ø12.7	1/2
Part I	ø9.52	3/8
Part J	ø6.35	1/4

3. Making Branch Connections

- For branching tubes, install 150mm or larger (including reducer) straight tubing up to the point where the tube branches (or after the point where the tubes join together). (Fig. 2-46)
- Using a tube cutter, cut the joints at the diameter required to match the outside diameter of the tubing you are connecting. (This is usually done at the installation site.)

The tube diameter depends on the total capacity of the indoor unit. Note that you do not have to cut the joints if it already matches the tubing end size. For size selection of the tube diameter, refer to the installation instructions provided with the outdoor unit.

NOTE

Avoid forceful cutting that may harm the shape of the joints or tubing. (Inserting the tubing will not be possible if the tube shape is not proper.)

- Cut off as far away from stopper as possible. (Fig. 2-47)
- After cutting the joints, be sure to remove burrs on the inside of the joints. (If the joints have been squashed or dented badly, reshaped them using a tube spreader.)
- Make sure there is no dirt or other foreign substances inside the distribution joint.
- When brazing, replace air inside the tube with nitrogen gas to prevent copper oxide from forming.
- To insulate the distribution joint, use the supplied tubing insulation. (If using insulation other than that supplied, make sure that its heat resistance is 120°C or higher.)
- For additional details, refer to the installation instructions provided with the outdoor unit.

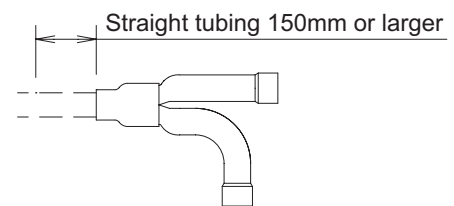


Fig. 2-46

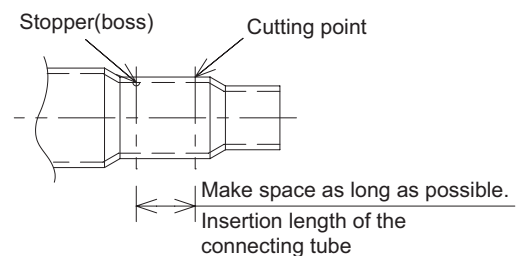


Fig. 2-47

7. Optional Parts

■ CZ-P680PJ2, CZ-P1350PJ2 (for R410A)


How to Attach Distribution Joint

1. Accompanying Parts

Check the contents of your distribution joint kit.

2. Distribution Joint Kits (with insulation)

Model	Capacity	Parts Kit Combination	
CZ-P1350PJ2	More than 68kW	Parts Kit 1	Parts Kit 3
CZ-P680PJ2	68kW or less	Parts kit 2	Parts Kit 3

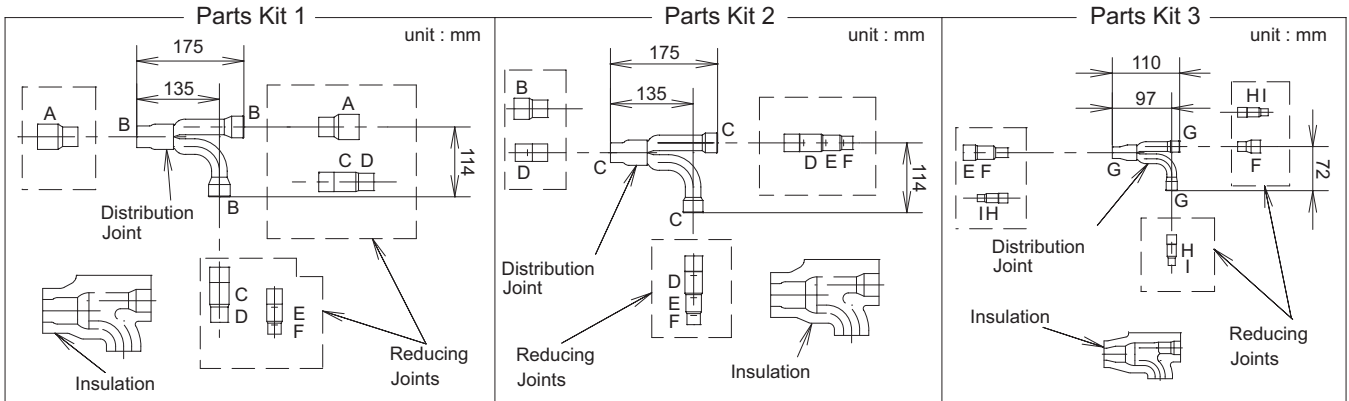

- Size of connection point on each part (Shown are inside diameters of tubing)

Size	Part A	Part B	Part C	Part D	Part E	Part F	Part G	Part H	Part I
mm	ø38.1	ø31.75	ø28.58	ø25.4	ø22.22	ø19.05	ø15.88	ø12.7	ø9.52
Inch	1-1/2	1-1/4	1-1/8	1	7/8	3/4	5/8	1/2	3/8

* If the gas tube diameter is more than ø38.1, use field-supply reducer.

3. Making Branch Connections

- For branching tubes, install 150mm or larger (including reducer) straight tubing up to the point where the tube branches (or after the point where the tubes join together). (Fig. 2-48)
- Using a tube cutter, cut the joints at the diameter required to match the outside diameter of the tubing you are connecting. (This is usually done at the installation site.)

The tube diameter depends on the total capacity of the indoor unit. Note that you do not have to cut the joints if it already matches the tubing end size. For size selection of the tube diameter, refer to the installation instructions provided with the outdoor unit.

NOTE

Avoid forceful cutting that may harm the shape of the joints or tubing. (Inserting the tubing will not be possible if the tube shape is not proper.)

- Cut off as far away from stopper as possible. (Fig. 2-49)
- After cutting the joints, be sure to remove burrs on the inside of the joints. (If the joints have been squashed or dented badly, reshaped them using a tube spreader.)
- Make sure there is no dirt or other foreign substances inside the distribution joint.
- The distribution joint can be either horizontal or vertical. (Fig. 2-50)
In the case of horizontal, the L-shaped tubing must be slanted slightly upward (15° to 90°).
- When brazing, replace air inside the tube with nitrogen gas to prevent copper oxide from forming.
- To insulate the distribution joint, use the supplied tubing insulation. (If using insulation other than that supplied, make sure that its heat resistance is 120°C or higher.)
- For additional details, refer to the installation instructions provided with the outdoor unit.

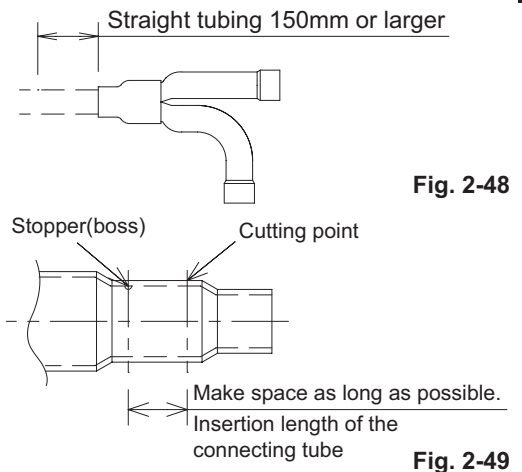


Fig. 2-48

Fig. 2-49

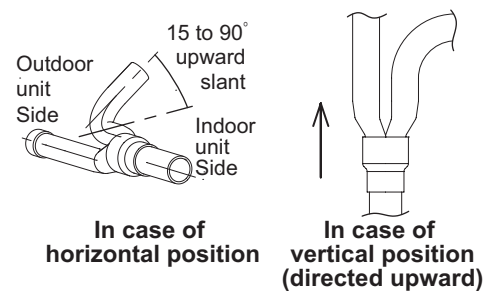


Fig. 2-50

Direction of Distribution Joint

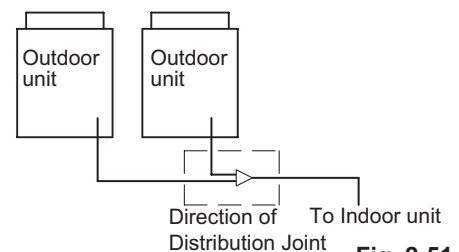



Fig. 2-51

7. Optional Parts


■ CZ-P4HPC2, CZ-P4HP2C2, CZ-P4HP1C2 (for R410A)

Header Tube Kit Installation

Tube size

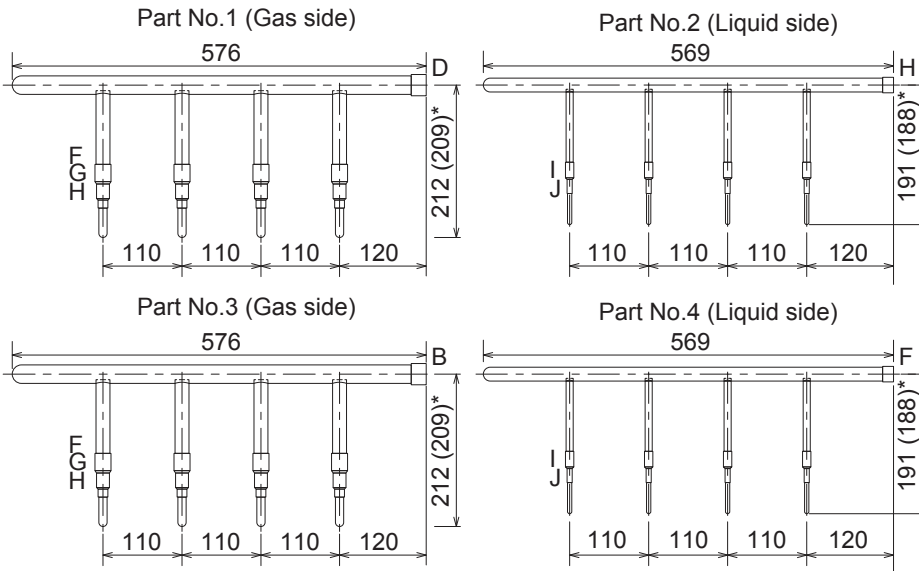

Unit : mm

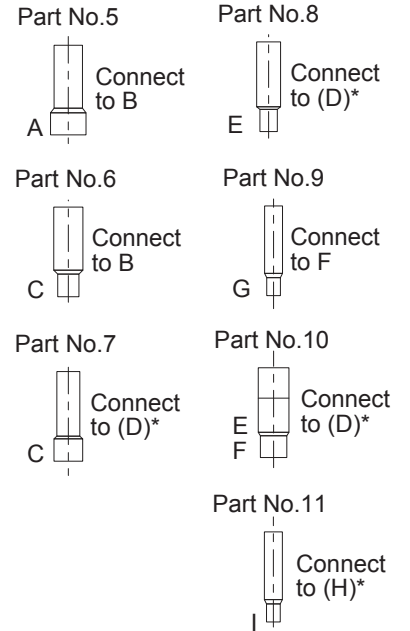

NOTE * The values and alphabets given in the parenthesis indicate the size of CZ-P4HPC2, P4HP1C2.

- Size of connection joint on each part (shown are inside diameter of tubing)

Supplied Parts

	Part No.1	Part No.2	Part No.3	Part No.4	Part No.5	Part No.6	Part No.7	Part No.8	Part No.9	Part No.10	Part No.11
CZ-P4HPC2	○	○					○	○			
CZ-P4HP2C2			○	○	○	○			○		
CZ-P4HP1C2	○	○								○	○

Header Selection

	Total capacity of indoor units (kW) after distribution joint
CZ-P4HPC2	More than 16.1kW to less than 45.0kW
CZ-P4HP2C2	More than 45.1kW
CZ-P4HP1C2	Less than 28.0kW

Size	mm	Inch
A	ø38.1	1-1/2
B	ø31.75	1-1/4
C	ø28.58	1-1/8
D	ø25.4	1
E	ø22.22	7/8
F	ø19.05	3/4
G	ø15.88	5/8
H	ø12.7	1/2
I	ø9.52	3/8
J	ø6.35	1/4

※ If the tube diameter is more than ø38.1, use field-supply reducer.


Installation

- Be sure to handle the header tube in the correct direction as shown below.


<Horizontal use>

- Be sure to use the tube in the 15-degree to 30-degree tilt position. Regarding the branch tube of the indoor unit side, raise the tube correctly as shown in "Horizontal sideways use" and joint the tube sideways.

Horizontal sideways use

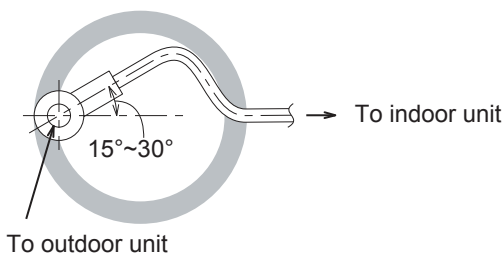


Horizontal upward use

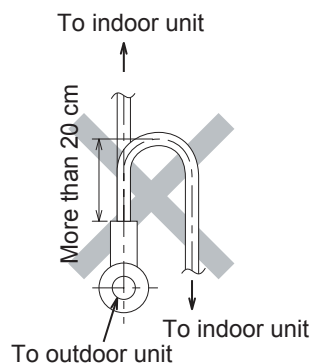

7. Optional Parts

<Vertical use>

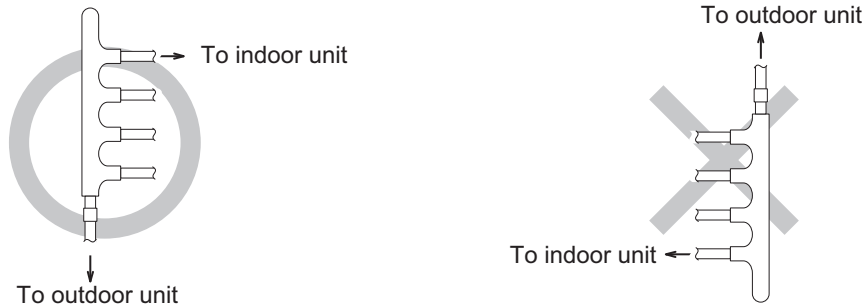


- Cut off the header tube by the pipe cutter according to meet the demand of the local tube size selected in consideration of the total amount of indoor units.
(It is not necessary to cut off the tube if it is identical to the tip of the size.)


NOTE

- Do not forcibly cut off the tube to escape deformation. (If doing so, connection tube cannot be inserted.)
- When using with 3 indoor units, cut off the tube and joint in the position fitted to the refrigerant tubing size at the side of 3 indoor units. When not to use some of the header tubes, leave as-is.
- When using with 5 to 8 indoor units, joint two header tubes as shown in the figure below. (Limited up to 2 header tubes)
- Maximum length of two header tubes should be within 2m as shown in the figure below.
- Connection of branch-to-branch tube is strictly prohibited.

In case of using header tube kit :

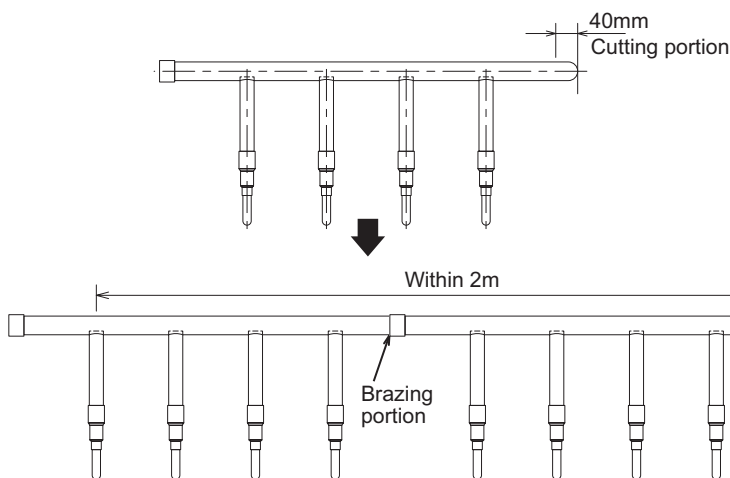

Tube cutting portion :

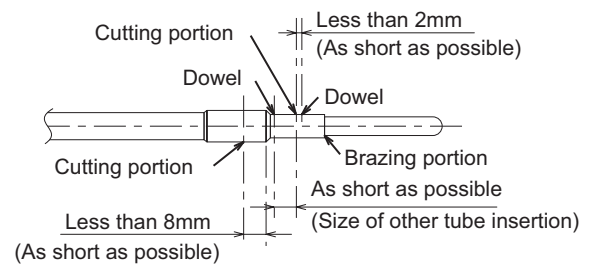

Branch tube connection prohibited

- After cutting off the tubing, carefully remove burrs from the cut cross section of the tube and make a smooth finish.
(If there is any hollow on the tube, enlarge the opening port by a mechanical pipe expander.)
- Use the supplied reducer according to the tube size from the side of outdoor unit. In this case, braze it in the local field.
- Check that there is no foreign substance inside the branch tube.
- Use the supplied insulator for the insulation of the branch tube.
(When using other than that, be sure to insulate it to tolerate the temperature of more than 120°C.)
- For the details, refer to "Installation Instructions".

Request for Replacement of Nitrogen When Brazing

If the replacement of nitrogen was not carried out when brazing the refrigerant tube of the outdoor unit and indoor unit, oxidized scale occurs and the motor valve and strainer become clogged.



This will cause malfunction. It is necessary to replace the air in the tube with the nitrogen gas when brazing the tube and prevent the trouble caused by the oxidized scale.

8. Supplement

1. Air-Discharge Chamber (S) (field supply)


Reference Diagram for Air-Discharge Chamber

Model : U-8ME2E8, 10ME2E8

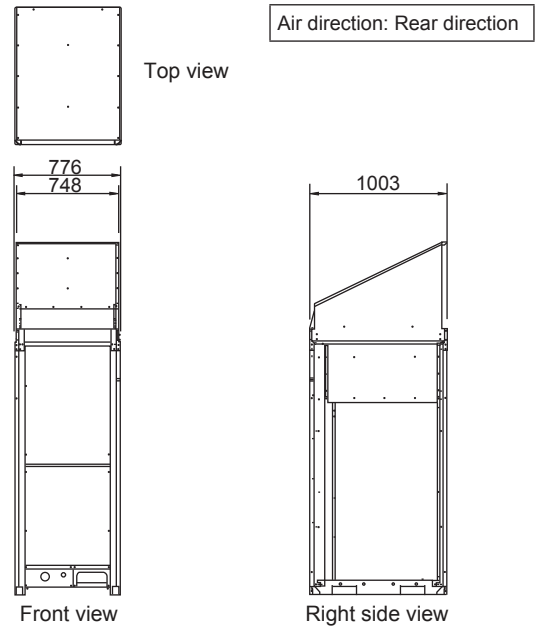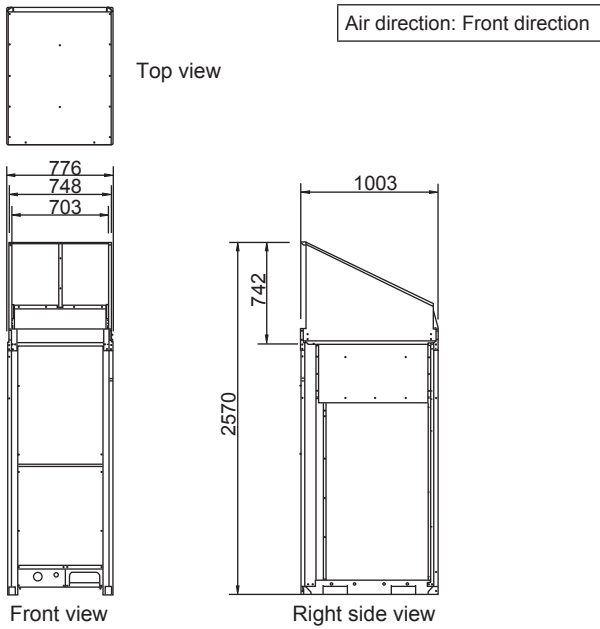


Necessary Assembling Parts

unit: mm

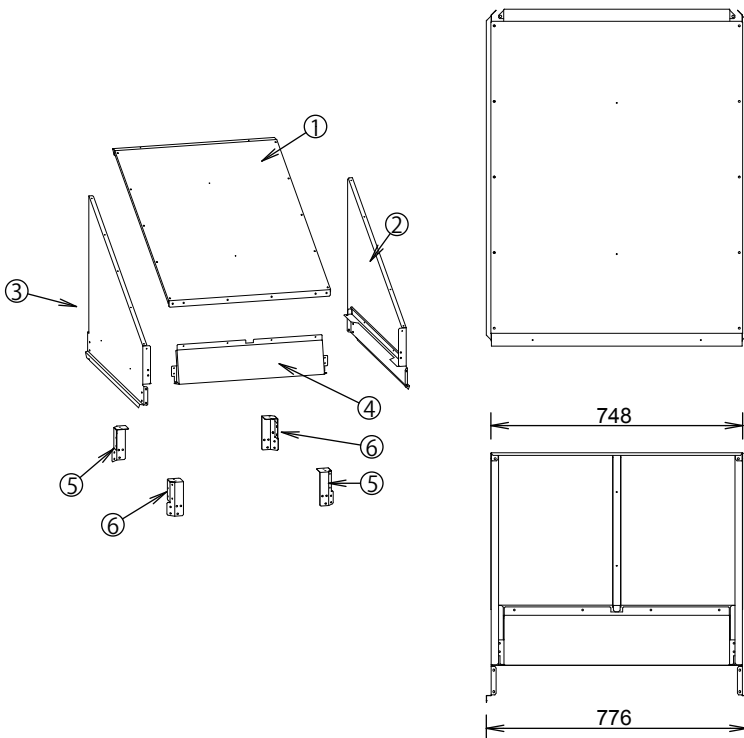


	Parts	Q'ty	Thickness
①	Topside Cover (S)	1	—
②	Side Panel (Left)	1	—
③	Side Panel (Right)	1	—
④	Rear Cover (S)	1	0.8
⑤	Bracket A	2	1.2
⑥	Bracket B	2	1.2
	Tapping Screw (4mm x 12mm)	20	—
	Tap Tight Screw (5mm x 10mm)	32	—

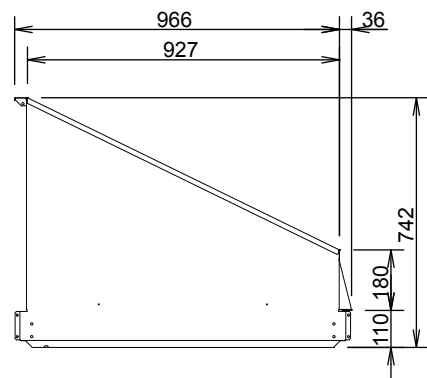

8. Supplement

Installation of Air-Discharge Chamber (S)

- The parts shown below are locally procured parts.
- Choose the parts free from rust or rustless material in order to prevent rust and salt-air damage resistance.
- The parts are available for use of the air-discharge chamber (S) and snow-proof vents (S).
- When using for the snow-proof vents (S) (air-discharge duct), first attach this air-discharge chamber (S) and then the snow-proof vents (S) (air intake duct).

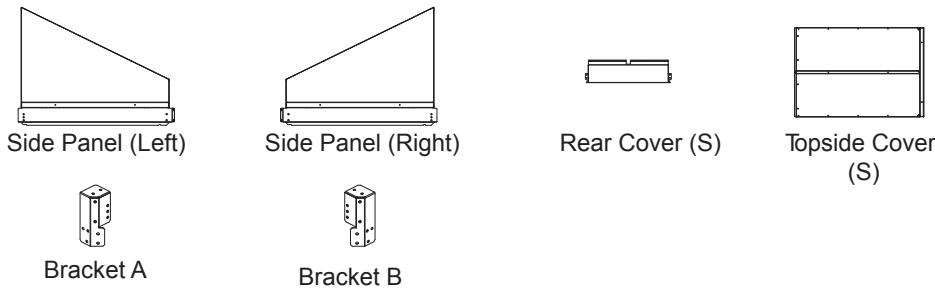

Bracket B

Parts	Q'ty
Topside Cover (S)	1
Side Panel (Left)	1
Side Panel (Right)	1
Rear Cover (S)	1
Bracket A	2
Bracket B	2
Tapping Screw (4mm x 12mm)	20
Tap Tight Screw (5mm x 10mm)	32

NOTE

- Install the duct where there is well enough for ventilation even if a strong wind is blowing.

Tightening Screws

- The screws for fixing parts indicate by number as shown in the chart.
- Tighten with Tapping Screw (4mm x 12mm) for the number ①.
- Tighten with Tap Tight Screw (5mm x 10mm) for the number ②.
- Remove the screw ③ tightened to the unit. It is available for reuse.

How to Install Air-Discharge Chamber

- The installation work must be carried out with a partner for safety.
- To accomplish the parts assembly, follow the steps below.
- If the parts assembly is performed in a different way, installation will not successfully complete.

1. Bracket Attachment

Attach Bracket A and Bracket B at each corner post of the unit (as shown below). Tighten with 3 screws respectively per corner post.

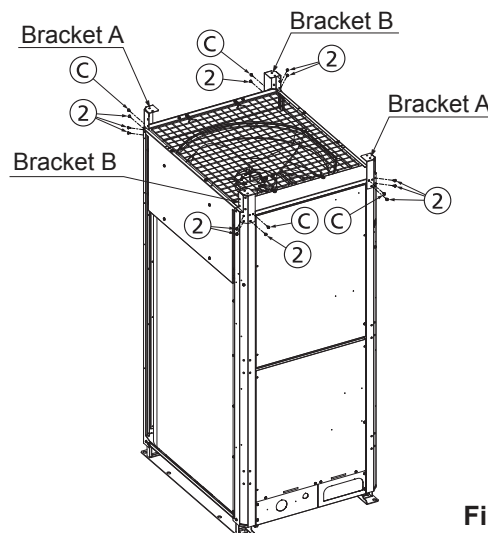


Fig. 2-8-1

8. Supplement

2. Rear Cover (S) Attachment

Attach Rear Cover (S) to the upside of Bracket A and Bracket B.
Tighten with 2 screws from upside.

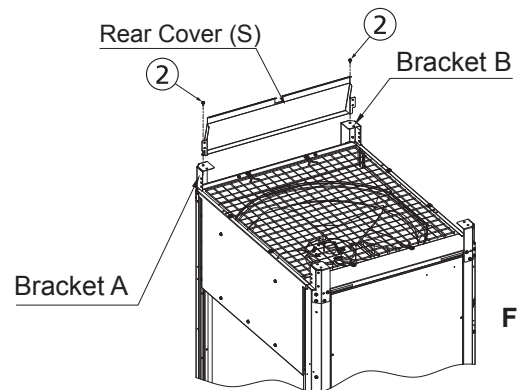


Fig. 2-8-2

3. Side Panel Attachment (Left & Right)

Fix one side panel on the top of the unit.
Place the side panels so that the flap of Rear Cover (S) should fit inside the side panels as shown in the chart.

At first, tighten with 2 screws (5mm x 10mm) respectively from upside marked with an asterisk as shown in the chart.
Then tighten 10 other locations respectively on the sideways of the brackets and rear panel.
Repeat the same procedure as described above for other side panel.

★ : At first, tighten with 4 screws marked with the asterisk.
(① 4mm x 2, ② M5 x 9)

* : Same procedure for the right side panel marked with the asterisk

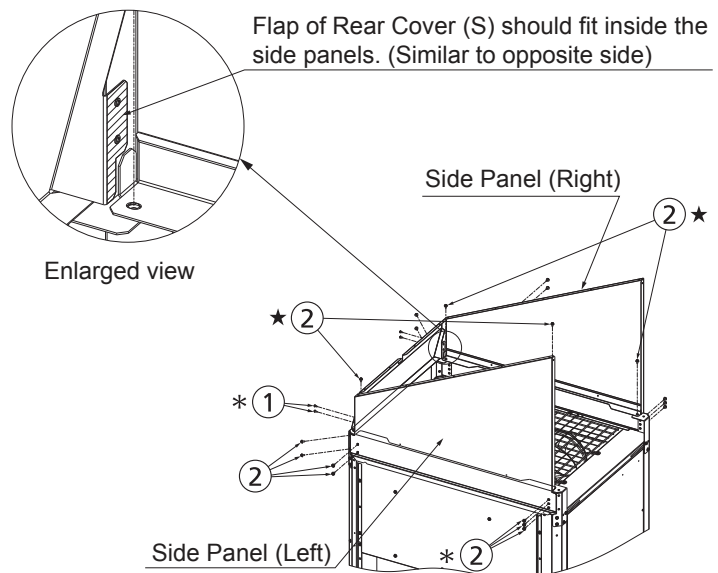


Fig. 2-8-3

4. Topside Cover (S) Attachment

Fix Topside Cover (S), Side Panel (Left and Right) and Rear Cover (S).
Tighten with 16 screws.

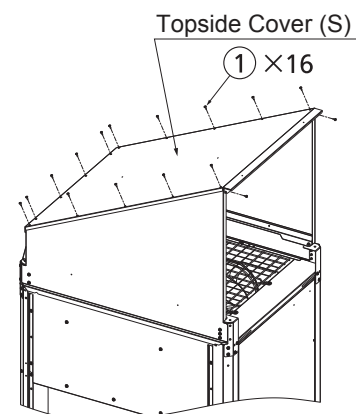


Fig. 2-8-4

8. Supplement

Reference Diagram for Side Panel (Left) (field supply) : 1107-332

RMK	PART NAME	Q'ty
1	COV SIDE L 780	1
2	PL MTG 411	1

unit: mm

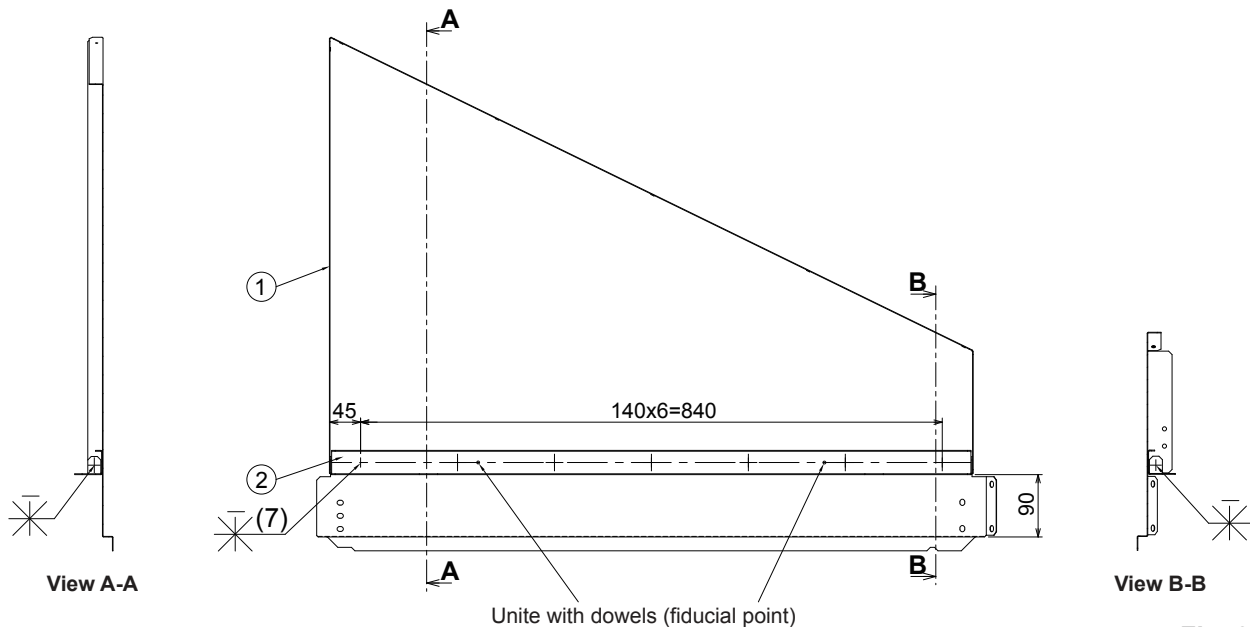


Fig. 2-8-5

Reference Diagram for Side Panel (Left) (field supply) : COV SIDE L 780

unit: mm

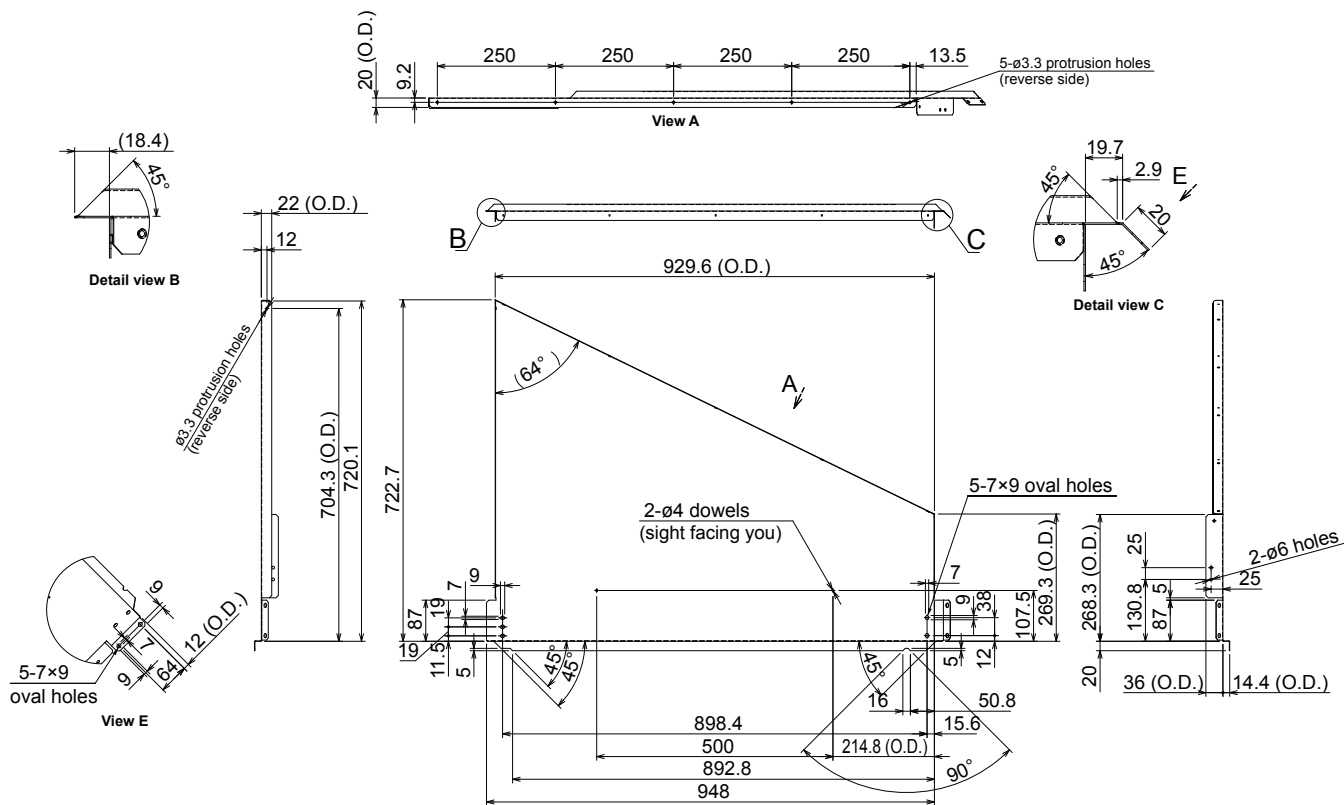


Fig. 2-8-6



8. Supplement

Reference Diagram for Side Panel (Left) (field supply) : PL MTG 411

unit: mm

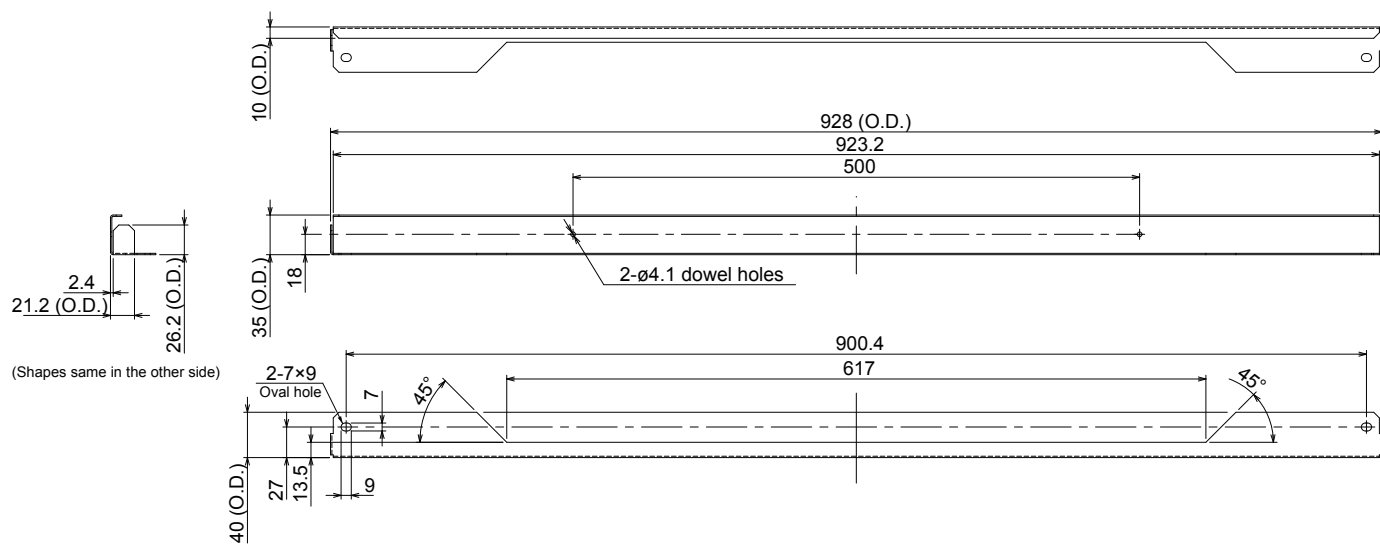


Fig. 2-8-7

8. Supplement

Reference Diagram for Side Panel (Right) (field supply) : 1108-338

RMK	PART NAME	Q'ty
1	COV SIDE R 502	1
2	PL MTG 411*	1

* Same as Fig. 2-8-7

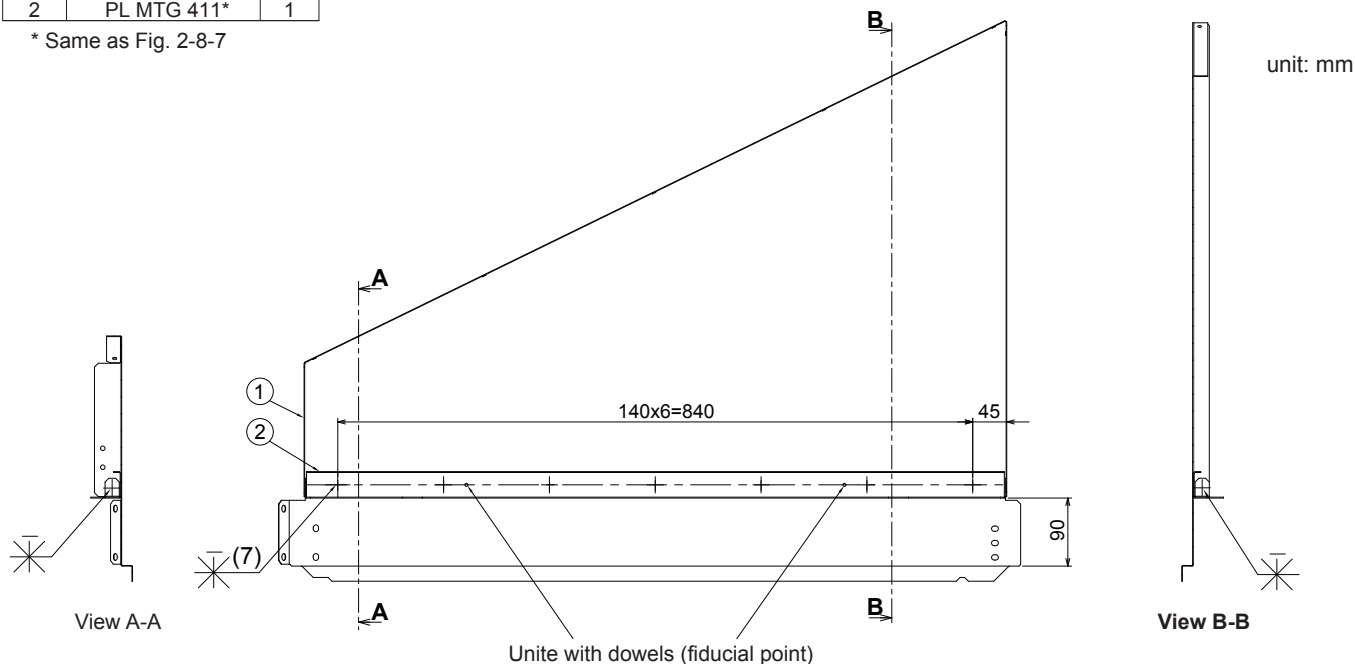


Fig. 2-8-8

Reference Diagram for Side Panel (Right) (field supply) : COV SIDE R 502

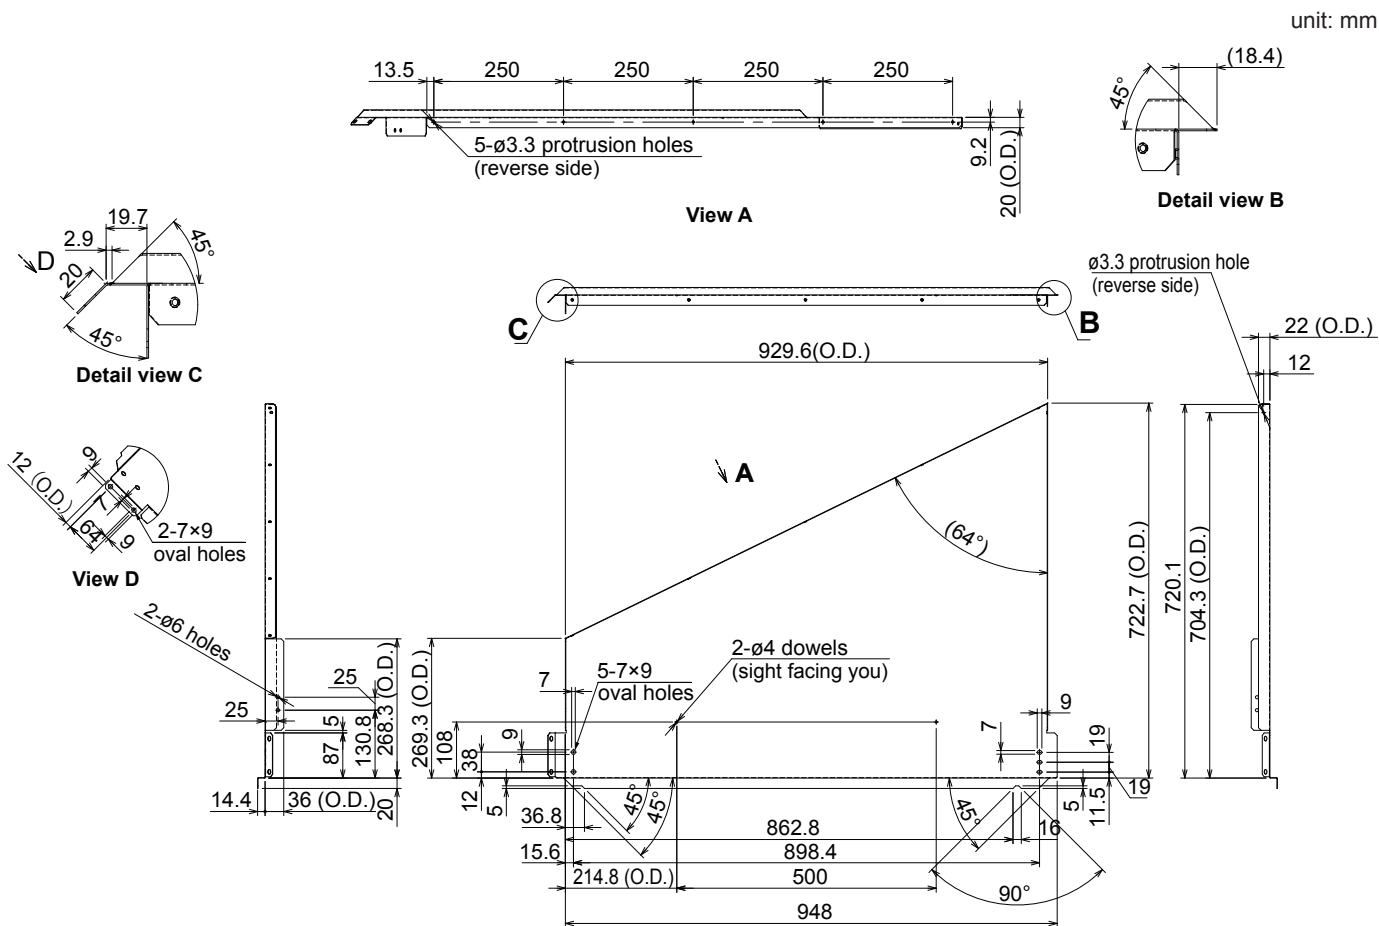


Fig. 2-8-9



8. Supplement

Reference Diagram for Topside Cover (S) (field supply) : 1106-362

RMK	PART NAME	Q'ty
1	COV TOP 499	1
2	PL MTG 412	1
3	PL MTG 349	1

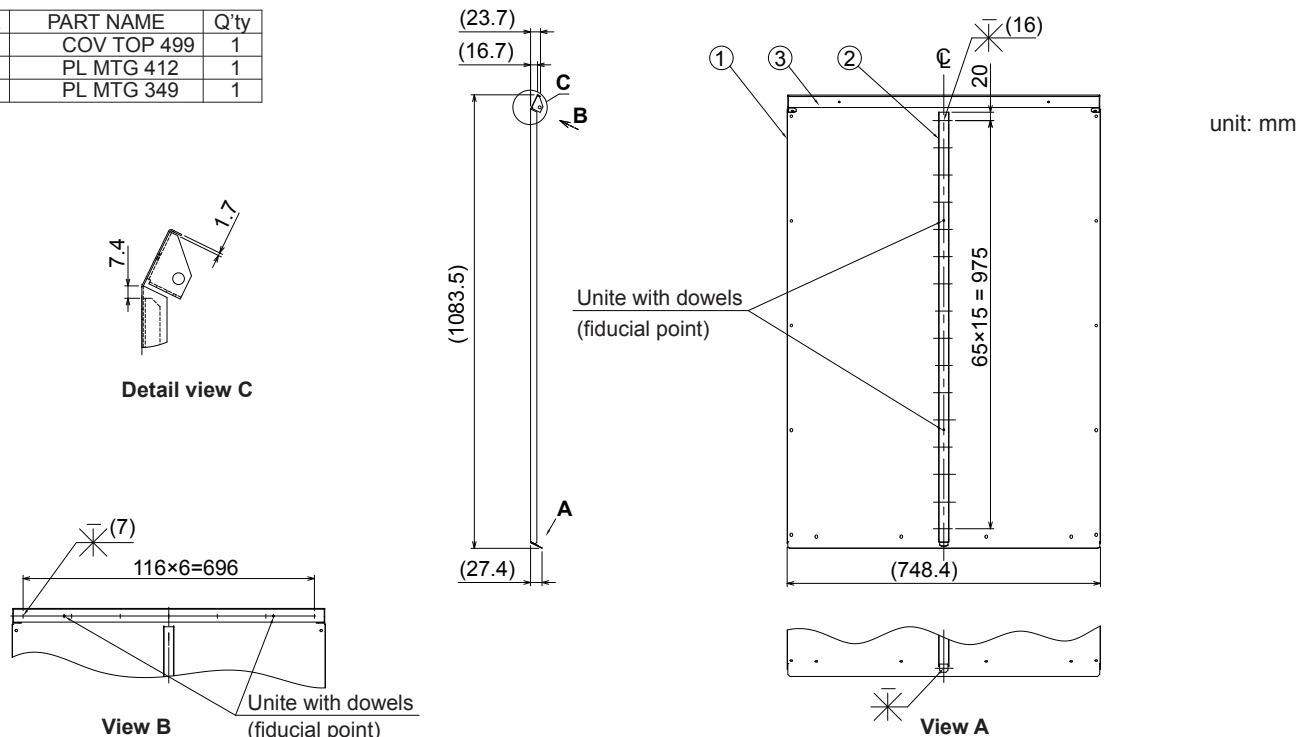


Fig. 2-8-10

Reference Diagram for Topside Cover (S) (field supply) : COV TOP 499

unit: mm

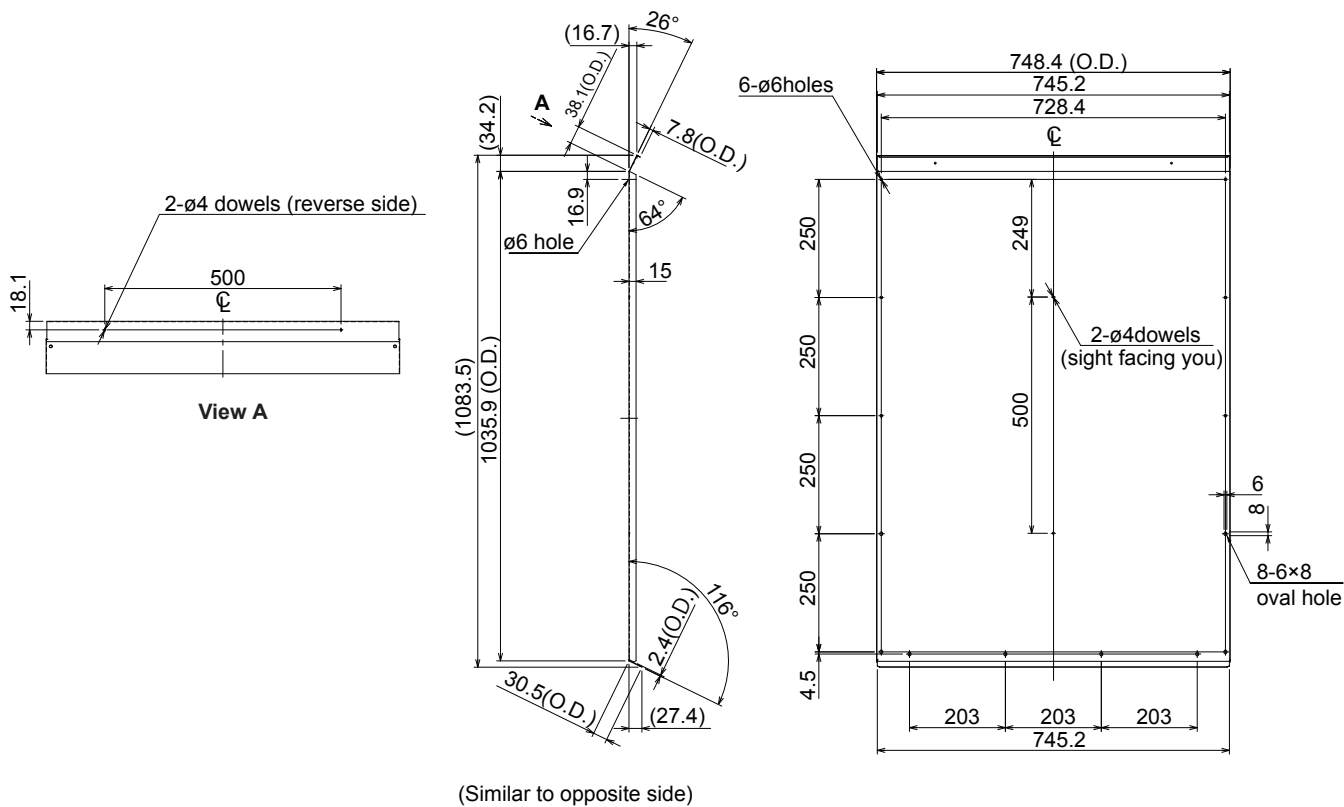


Fig. 2-8-11

8. Supplement

Reference Diagram for Topside Cover (S) (field supply) : PL MTG 412

unit: mm

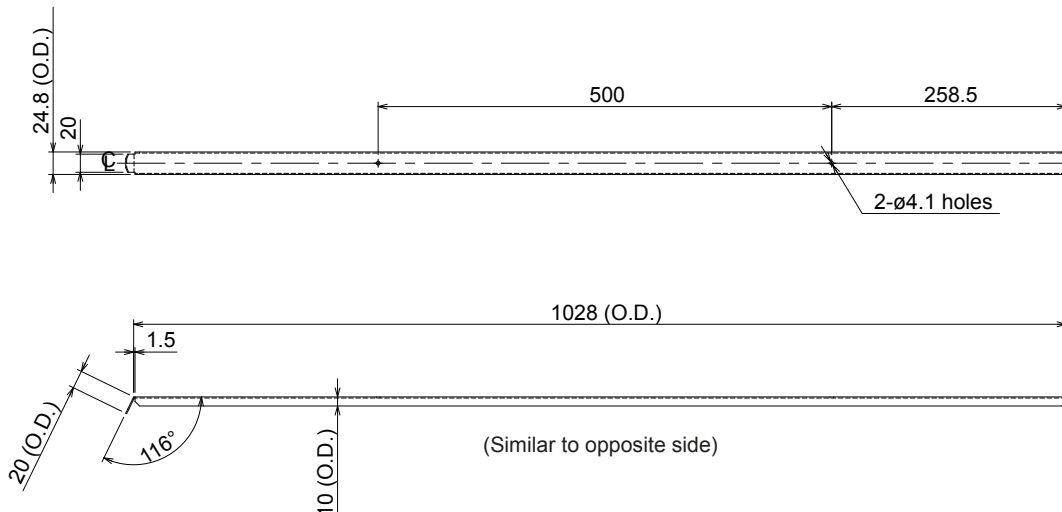


Fig. 2-8-12

2

Reference Diagram for Topside Cover (S) (field supply) : PL MTG 349

unit: mm

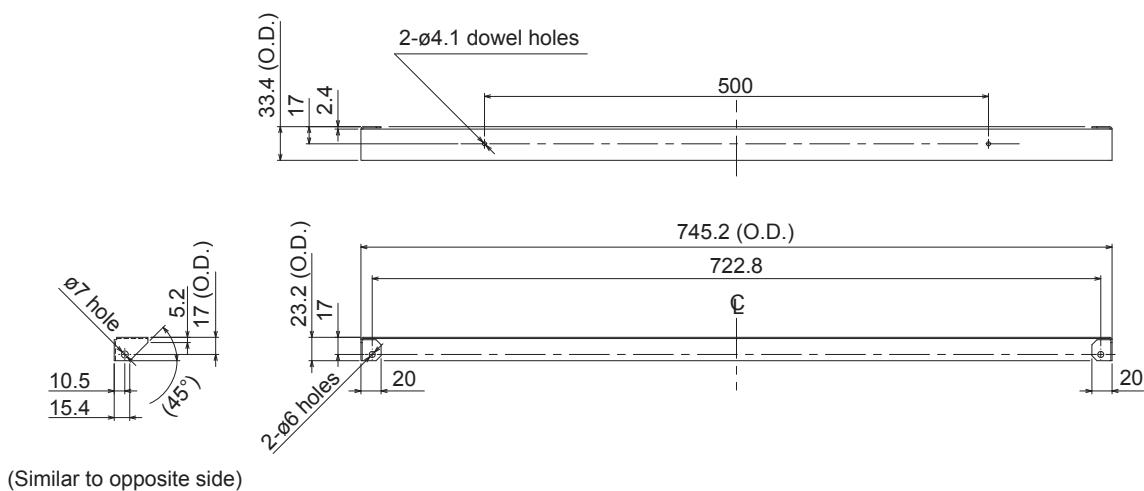


Fig. 2-8-13

8. Supplement

Reference Diagram for Rear Cover (S) (field supply) : 1109-482

unit: mm

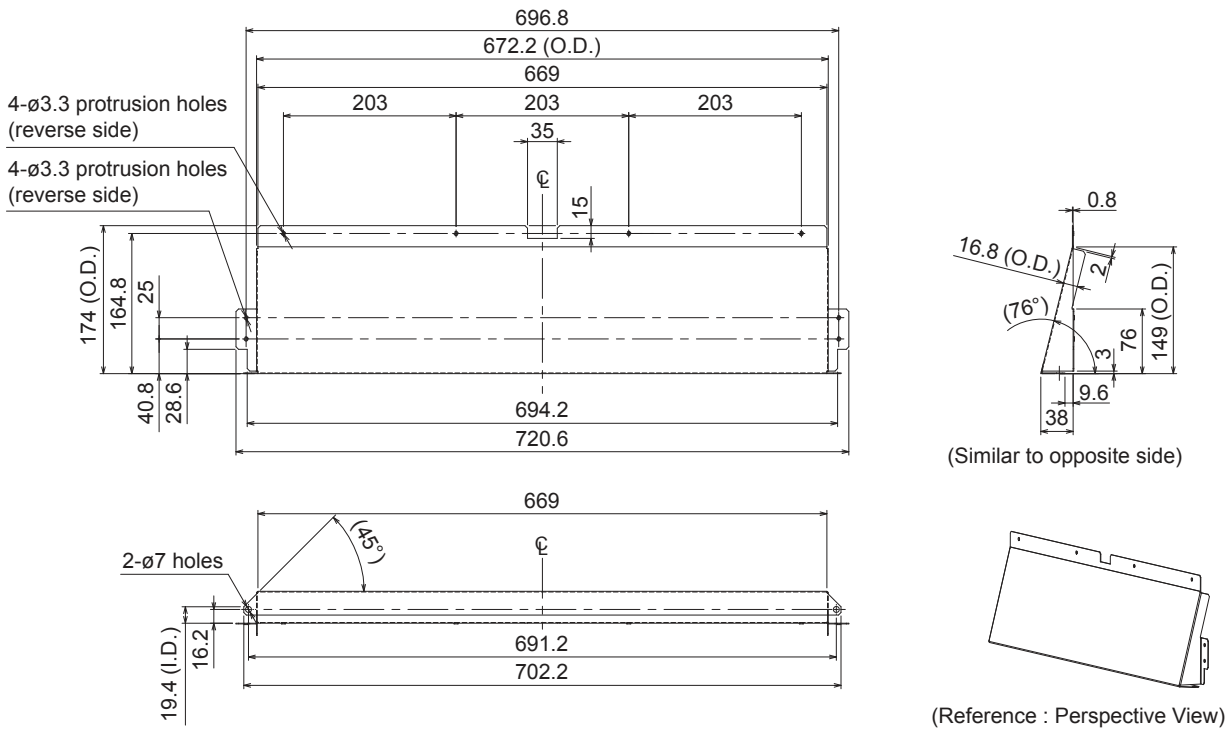


Fig. 2-8-14

Reference Diagram for Bracket A (field supply) : 1136-410

unit: mm


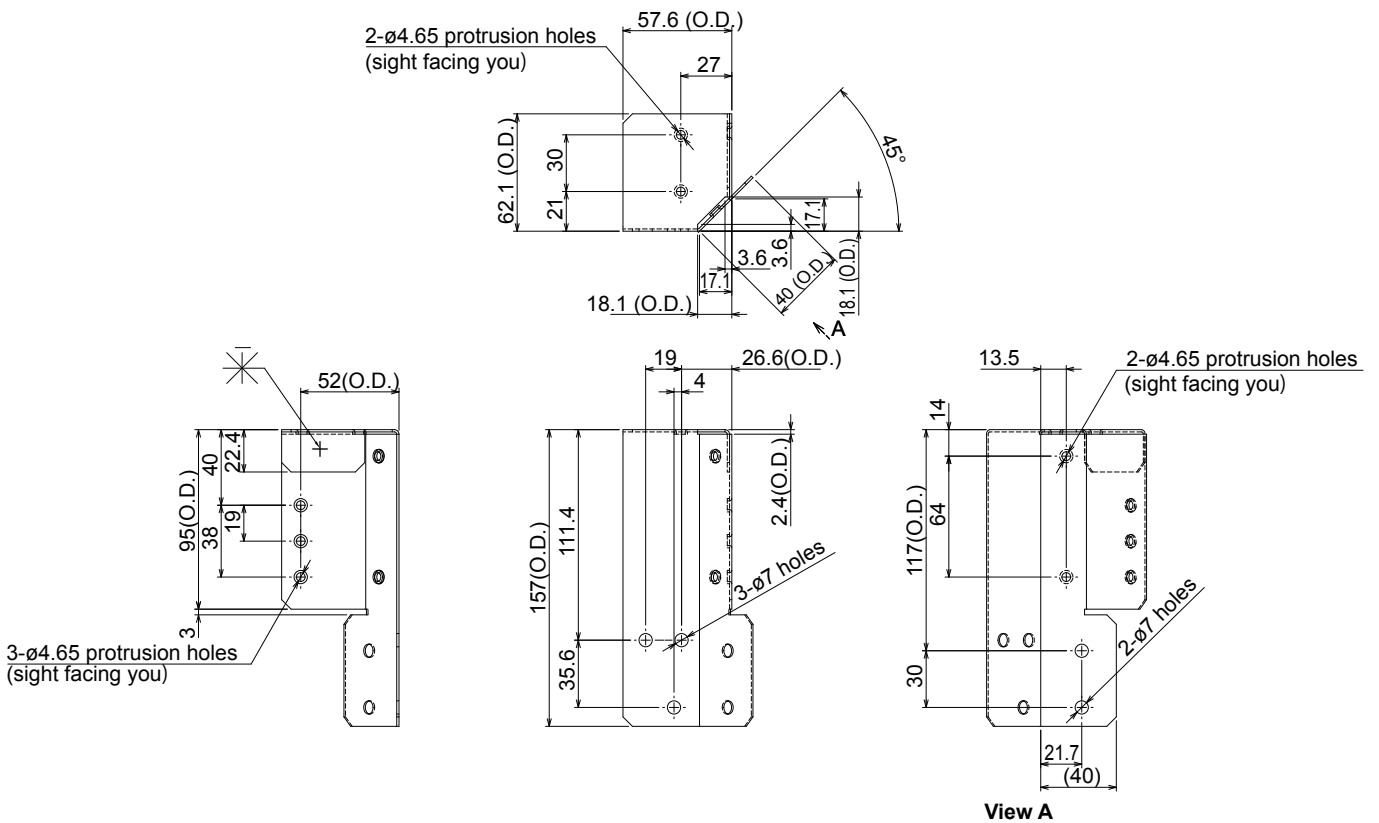


Fig. 2-8-15

8. Supplement

Reference Diagram for Bracket B (field supply) : 1136-409

unit: mm

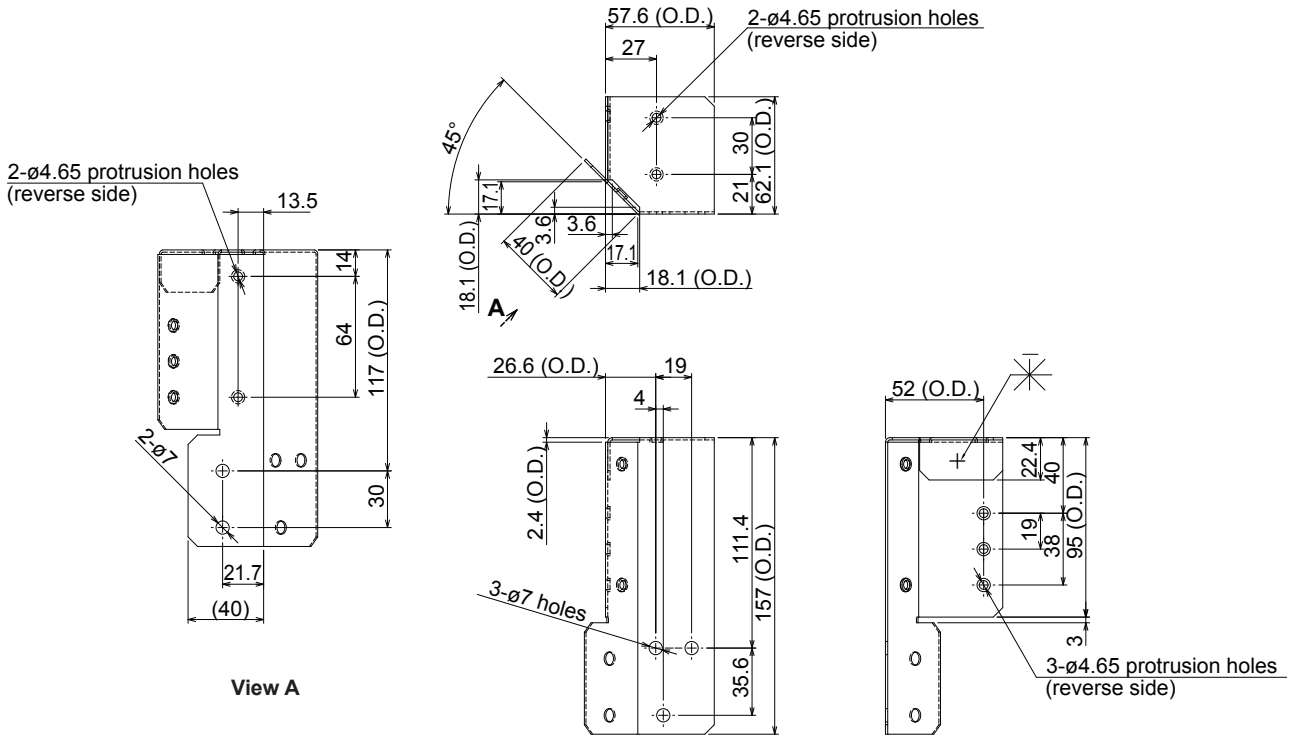

2

Fig. 2-8-16



8. Supplement

2. Air-Discharge Chamber (M) (field supply)

Reference Diagram for Air-Discharge Chamber


Model : U-12ME2E8, 14ME2E8, 16ME2E8

unit: mm

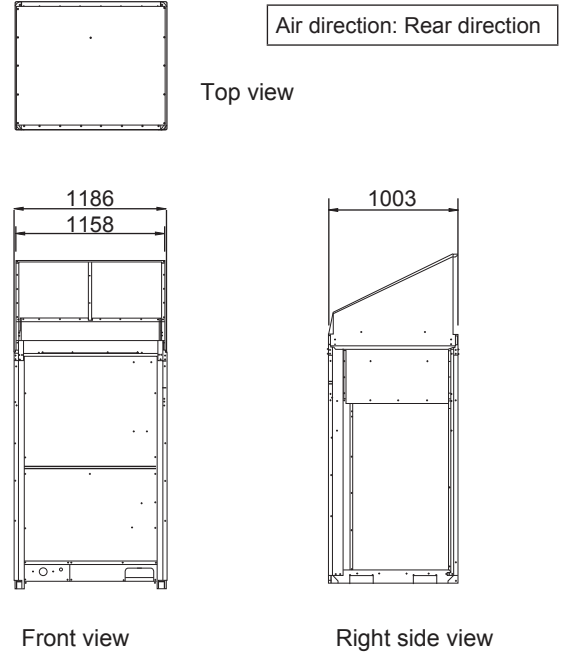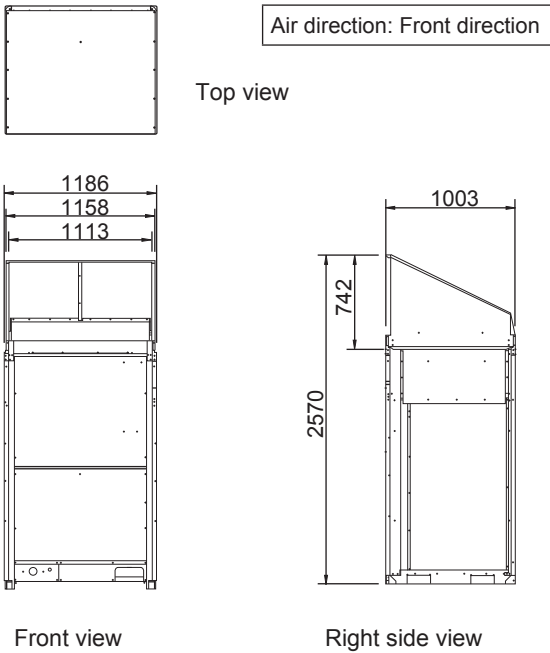

Necessary Assembling Parts

unit: mm

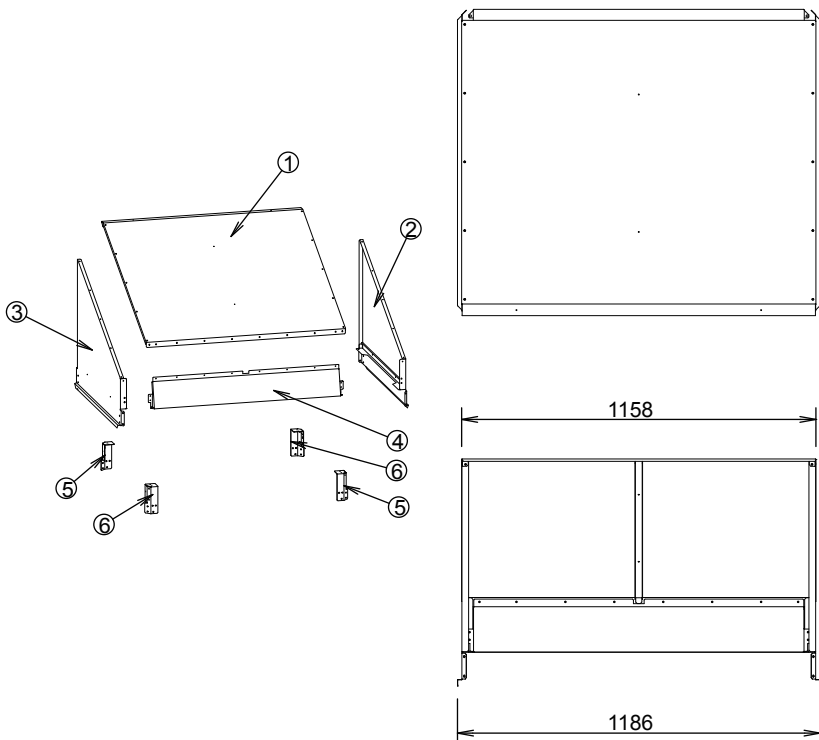


	Parts	Q'ty	Thickness
①	Topside Cover (M)	1	—
②	Side Panel (Left)	1	—
③	Side Panel (Right)	1	—
④	Rear Cover (M)	1	0.8
⑤	Bracket A	2	1.2
⑥	Bracket B	2	1.2
	Tapping Screw (4mm x 12mm)	24	—
	Tap Tight Screw (5mm x 10mm)	32	—

8. Supplement

Installation of Air-Discharge Chamber (M)

- The parts shown below are locally procured parts.
- Choose the parts free from rust or rustless material in order to prevent rust and salt-air damage resistance.
- The parts are available for use of the air-discharge chamber (M) and snow-proof vents (M).
- When using for the snow-proof vents (M) (air-discharge duct), first attach this air-discharge chamber (M) and then the snow-proof vents (M) (air intake duct).

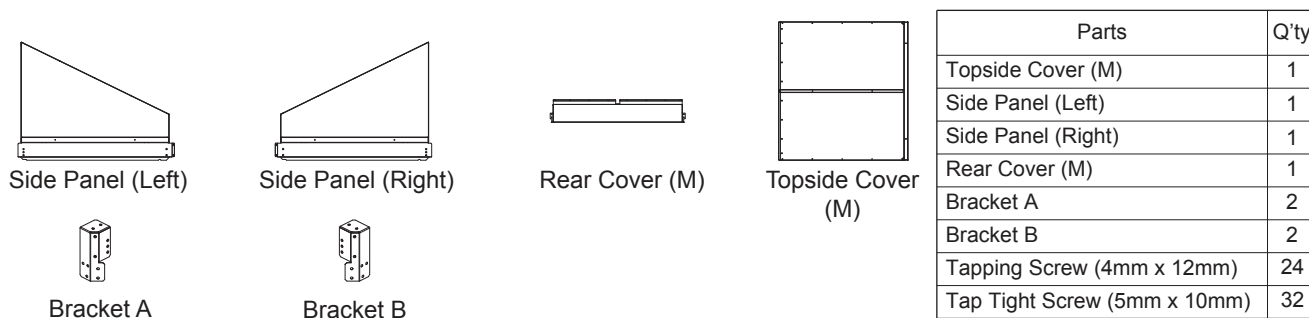

NOTE

- Install the duct where there is well enough for ventilation even if a strong wind is blowing.

Tightening Screws

- The screws for fixing parts indicate by number as shown in the chart.
- Tighten with Tapping Screw (4mm x 12mm) for the number ①.
- Tighten with Tap Tight Screw (5mm x 10mm) for the number ②.
- Remove the screw ③ tightened to the unit. It is available for reuse.

How to Install Air-Discharge Chamber

- The installation work must be carried out with a partner for safety.
- To accomplish the parts assembly, follow the steps below.
- If the parts assembly is performed in a different way, installation will not successfully complete.

1. Bracket Attachment

Attach Bracket A and Bracket B at each corner post of the unit (as shown below). Tighten with 3 screws respectively per corner post.

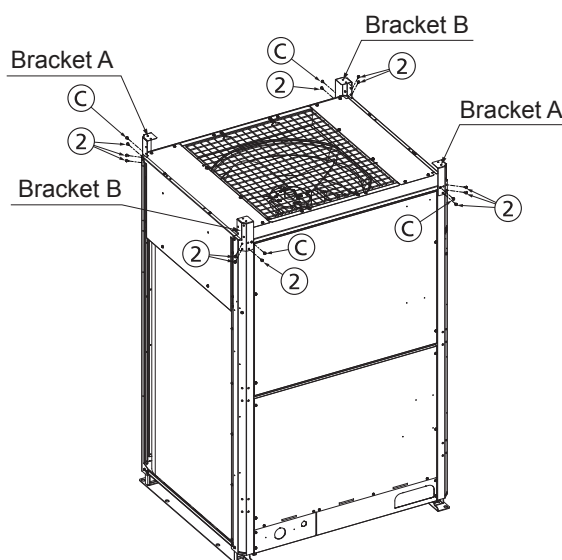


Fig. 2-8-17

8. Supplement

2. Rear Cover (M) Attachment

Attach Rear Cover (M) to the upside of Bracket A and Bracket B.
Tighten with 2 screws from upside.

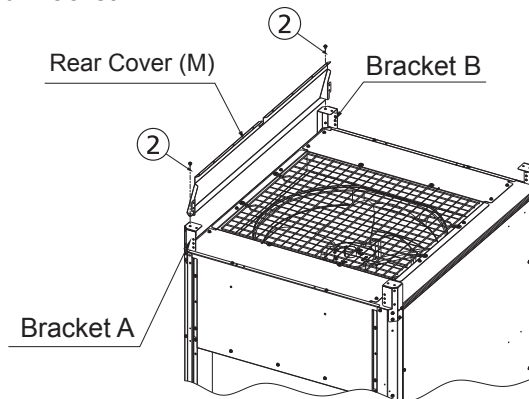


Fig. 2-8-18

3. Side Panel Attachment (Left & Right)

Fix one side panel on the top of the unit.
Place the side panels so that the flap of Rear Cover (M) should fit inside the side panels as shown in the chart.

At first, tighten with 2 screws (5mm x 10mm) respectively from upside marked with an asterisk as shown in the chart.
Then tighten 10 other locations respectively on the sideways of the brackets and rear panel.
Repeat the same procedure as described above for other side panel.

★ : At first, tighten with 4 screws marked with the asterisk.

(① 4mm x 2, ② M5 x 9)

* : Same procedure for the right side panel marked with the asterisk

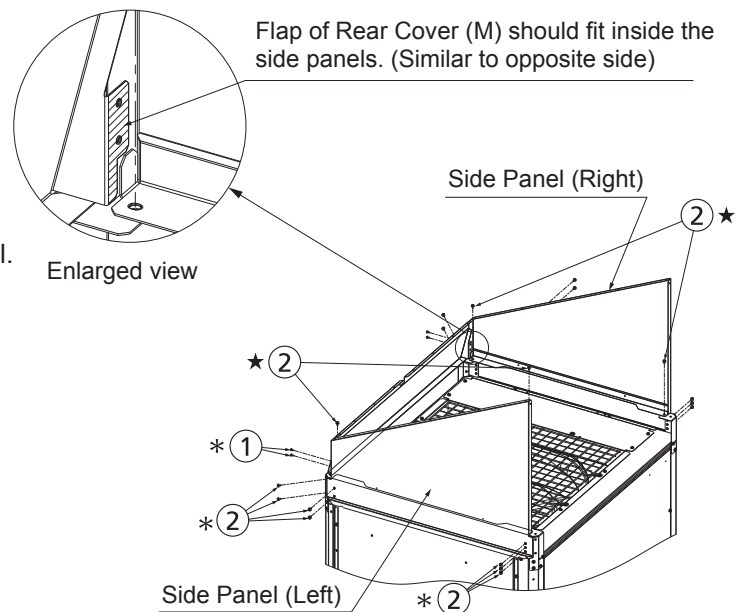


Fig. 2-8-19

4. Topside Cover (M) Attachment

Fix Topside Cover (M), Side Panel (Left and Right) and Rear Cover (M).
Tighten with 20 screws.

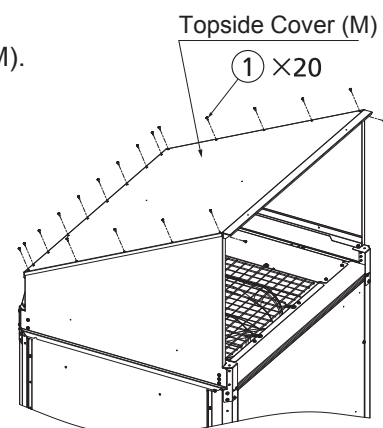


Fig. 2-8-20

8. Supplement

Reference Diagram for Side Panel (Left) (field supply) : 1107-332

RMK	PART NAME	Q'ty
1	COV SIDE L 780	1
2	PL MTG 411	1

The parts are the same as Figure 2-8-5.

Reference Diagram for Side Panel (Right) (field supply) : 1108-338


RMK	PART NAME	Q'ty
1	COV SIDE R 502	1
2	PL MTG 411	1

The parts are the same as Figure 2-8-8.


Reference Diagram for Topside Cover (M) (field supply) : 1106-363

RMK	PART NAME	Q'ty
1	COV TOP 498	1
2	PL MTG 412*	1
3	PL MTG 413	1


* Same as Fig. 2-8-12

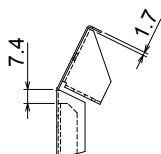

Detail view C

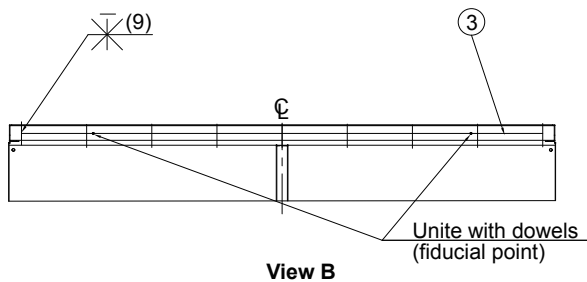

View B

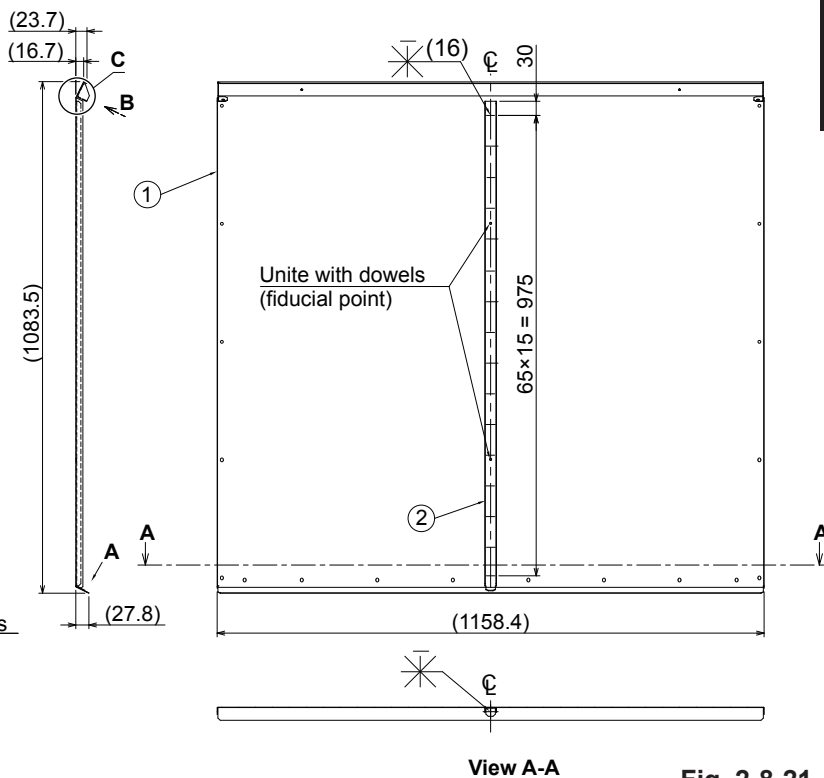

View A-A

Fig. 2-8-21

unit: mm



8. Supplement

Reference Diagram for Topside Cover (M) (field supply) : COV TOP 498

unit: mm

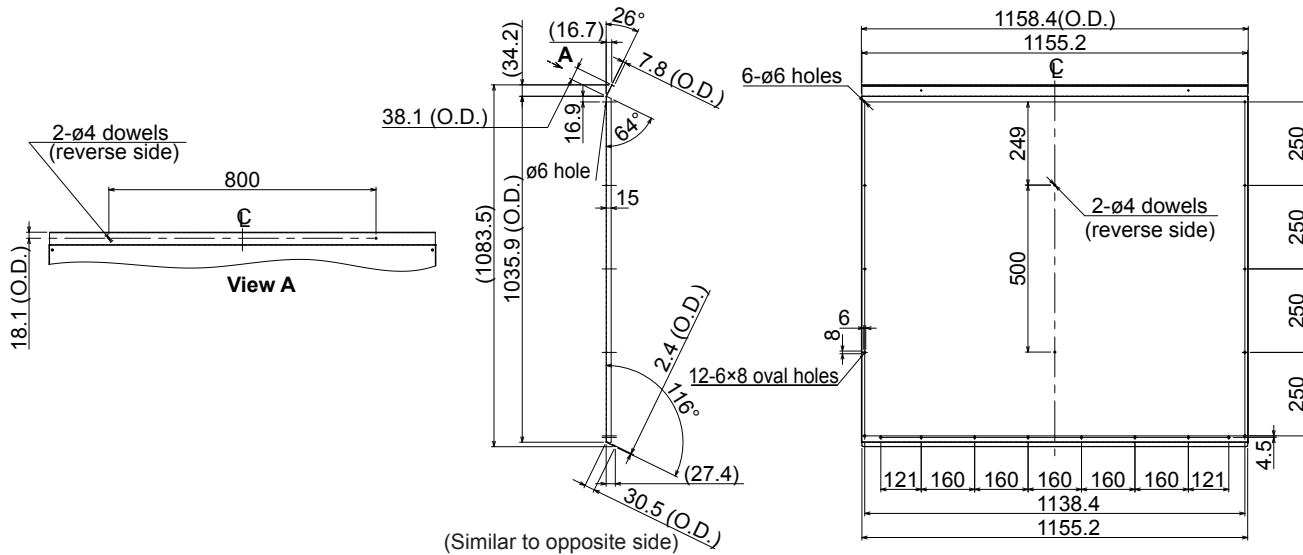


Fig. 2-8-22

Reference Diagram for Topside Cover (M) (field supply) : PL MTG 413

unit: mm

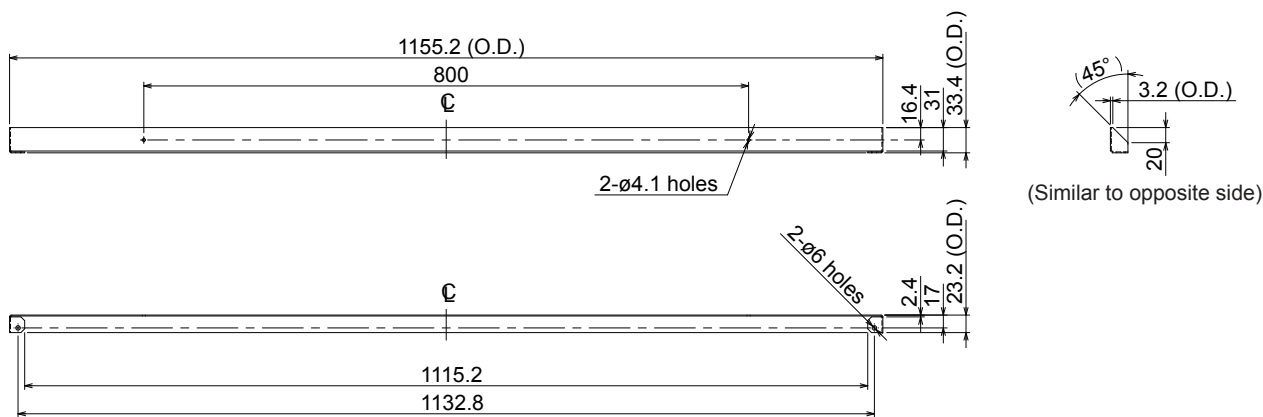


Fig. 2-8-23

8. Supplement

Reference Diagram for Rear Cover (M) (field supply) : 1109-488

unit: mm

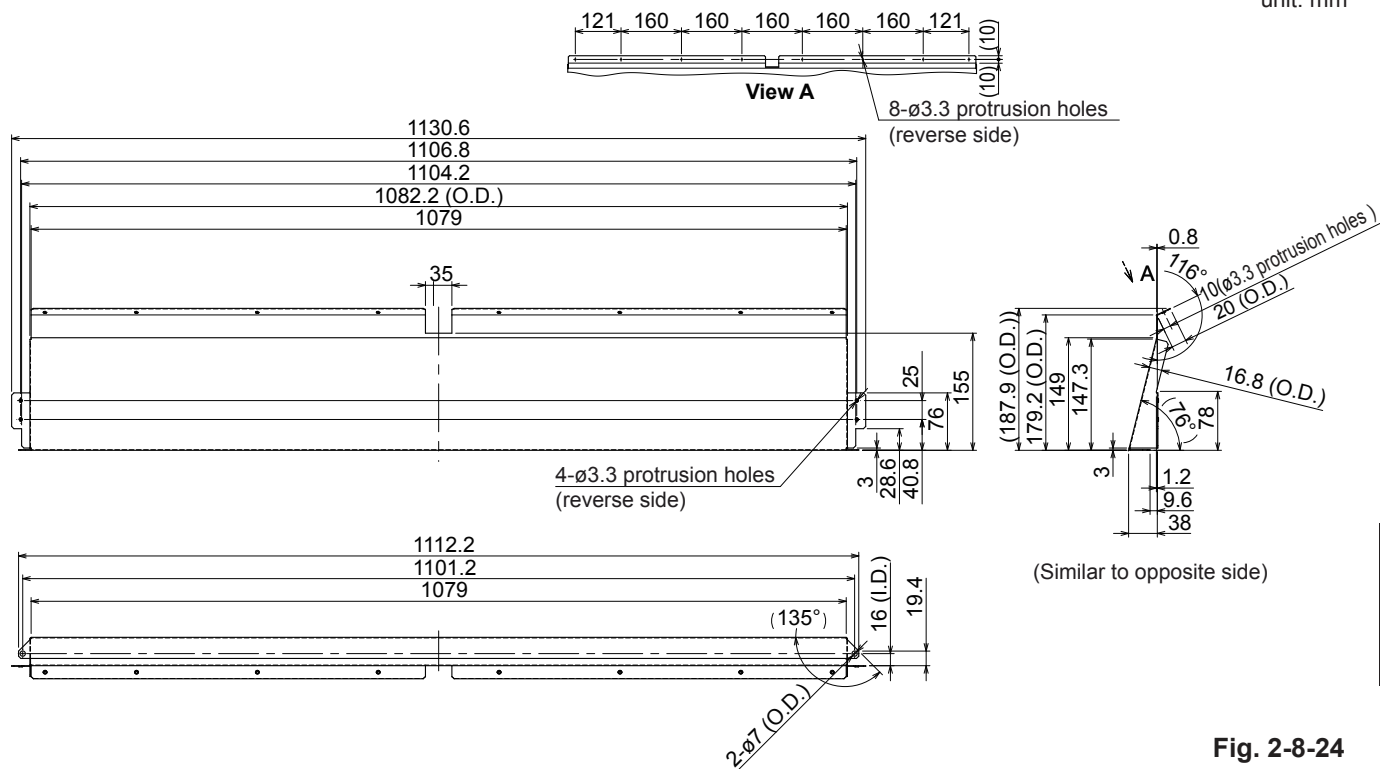


Fig. 2-8-24

Reference Diagram for Bracket A (field supply) : 1136-410

The parts are the same as Figure 2-8-15.

Reference Diagram for Bracket B (field supply) : 1136-409



The parts are the same as Figure 2-8-16.

8. Supplement

3. Air-Discharge Chamber (L) (field supply)

Reference Diagram for Air-Discharge Chamber

Model : U-18ME2E8, 20ME2E8

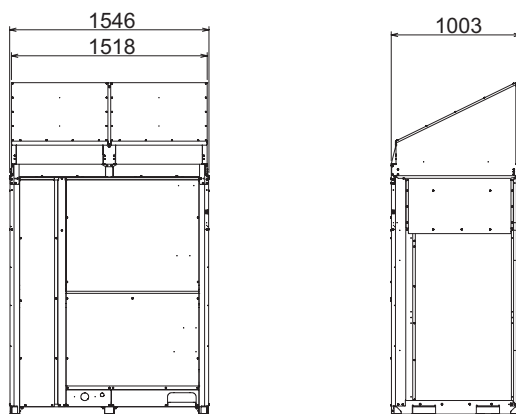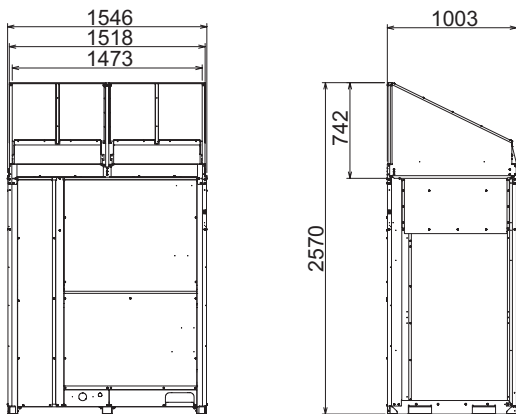

unit: mm

Air direction: Rear direction

Top view


Front view

Right side view

Front view


Right side view

Necessary Assembling Parts

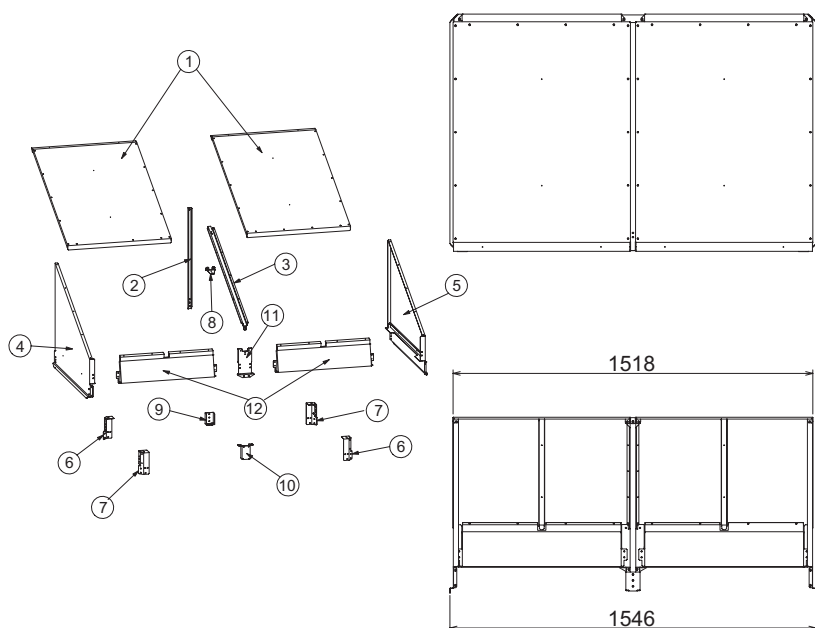

unit: mm

	Parts	Q'ty	Thickness
①	Topside Cover (S)	2	—
②	Center Bracket (Front)	1	1.2
③	Unit Top Connecting Bracket	1	1.2
④	Side Panel (Left)	1	—
⑤	Side Panel (Right)	1	—
⑥	Bracket A	2	1.2
⑦	Bracket B	2	1.2
⑧	Bracket C	1	1.2
⑨	Bracket D	1	1.2
⑩	Bracket E	1	1.2
⑪	Unit Rear Connecting Bracket	1	1.2
⑫	Rear Cover (S)	2	0.8
	Tapping Screw (4mm x 12mm)	50	—
	Tap Tight Screw (5mm x 10mm)	42	—

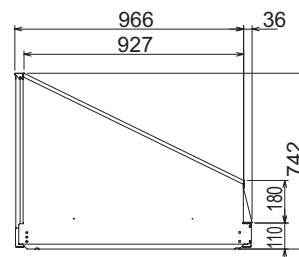


8. Supplement

Installation of Air-Discharge Chamber (L)

- The parts shown below are locally procured parts.
- Choose the parts free from rust or rustless material in order to prevent rust and salt-air damage resistance.
- The parts are available for use of the air-discharge chamber (L) and snow-proof vents (L).
- When using for the snow-proof vents (L) (air-discharge duct), first attach this air-discharge chamber (L) and then the snow-proof vents (L) (air intake duct).

unit: mm

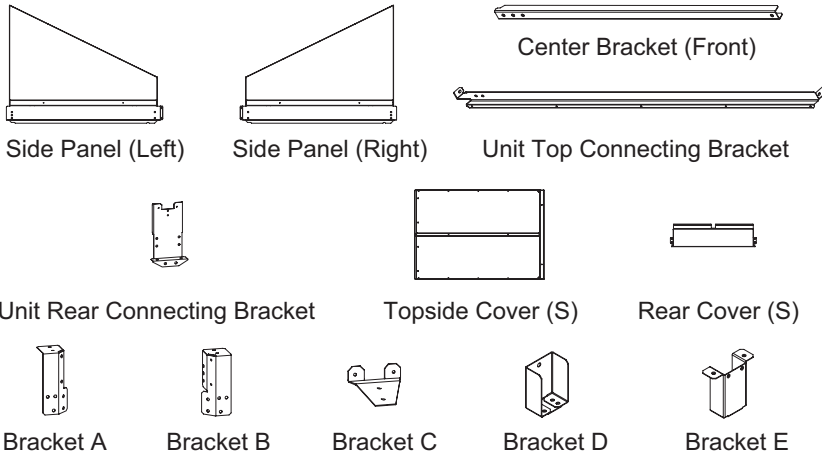

Parts	Q'ty
Topside Cover (S)	2
Center Bracket (Front)	1
Unit Top Connecting Bracket	1
Side Panel (Left)	1
Side Panel (Right)	1
Bracket A	2
Bracket B	2
Bracket C	1
Bracket D	1
Bracket E	1
Unit Rear Connecting Bracket	1
Rear Cover (S)	2
Tapping Screw (4mm x 12mm)	50
Tap Tight Screw (5mm x 10mm)	42

NOTE

- Install the duct where there is well enough for ventilation even if a strong wind is blowing.

Tightening Screws

- The screws for fixing parts indicate by number as shown in the chart.
- Tighten with Tapping Screw (4mm x 12mm) for the number ①.
- Tighten with Tap Tight Screw (5mm x 10mm) for the number ②.
- Remove the screw ③ tightened to the unit. It is available for reuse.

How to Install Air-Discharge Chamber

- The installation work must be carried out with a partner for safety.
- To accomplish the parts assembly, follow the steps below.
- If the parts assembly is performed in a different way, installation will not successfully complete.

1. Bracket Attachment

- 1) Attach Bracket A and Bracket B at each corner post of the unit (as shown below).
Tighten with 4 Screws (② *1 and ③ *1) respectively per corner post.
- 2) Attach Bracket D and Bracket E to the top side of the unit (as shown below).
Tighten with 4 screws (① *1) per part.

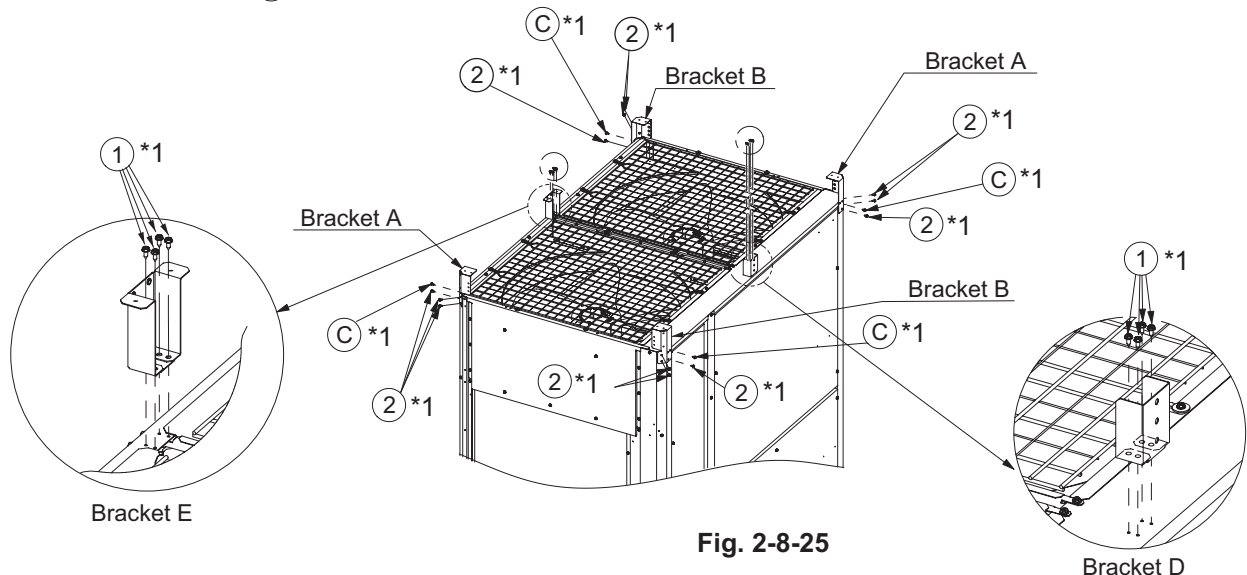


Fig. 2-8-25

8. Supplement

2. Unit Rear Connecting Bracket Attachment

Attach Unit Rear Connecting Bracket to the upside of Bracket E.
Tighten with 2 screws (② *2) on the rear of Bracket E.

3. Center Bracket (Front) Attachment

Attach Center Bracket (Front) to the upside of Bracket D.
Tighten with 3 screws (② *3) on the front of Bracket D.

4. Rear Cover (S) Attachment

- 1) Attach Rear Cover (S) to the upside of Bracket A or Bracket B and the side of Unit Rear Connecting Bracket. Place Rear Cover (S) so that the flap of Rear Cover (S) should fit inside Unit Rear Connecting Bracket. (See below chart.)
- 2) Attach Rear Cover (S) and Bracket A or Bracket B and Unit Rear Connecting Bracket from upside (with 4 screws (② *4)).
- 3) Attach Rear Cover (S) and Unit Rear Connecting Bracket from the rear of the bracket (with 4 screws (① *2)).

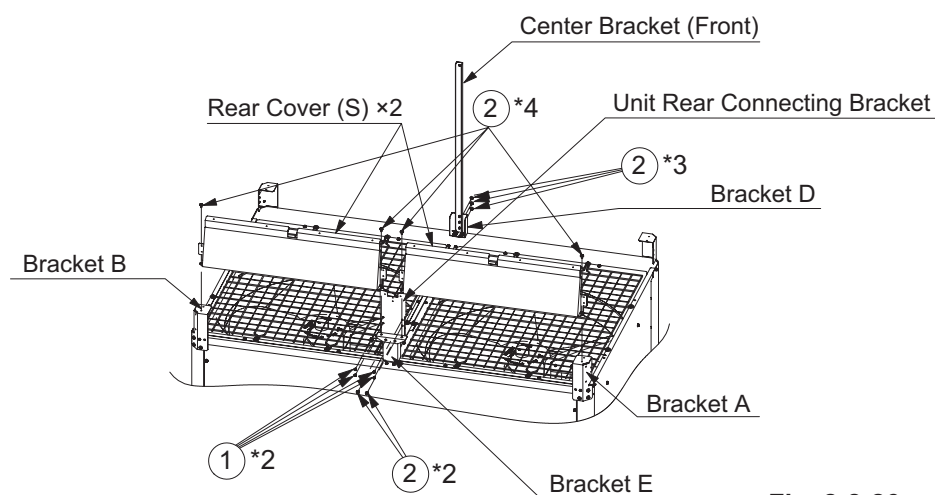


Fig. 2-8-26

5. Unit Top Connecting Bracket Attachment

Tighten Unit Top Connecting Bracket and Bracket C with 2 screws (② *5).
Tighten Unit Top Connecting Bracket and Unit Rear Connecting Bracket with 2 screws (① *3).
Tighten Unit Top Connecting Bracket and Center Bracket (Front) with 1 screw (② *6).

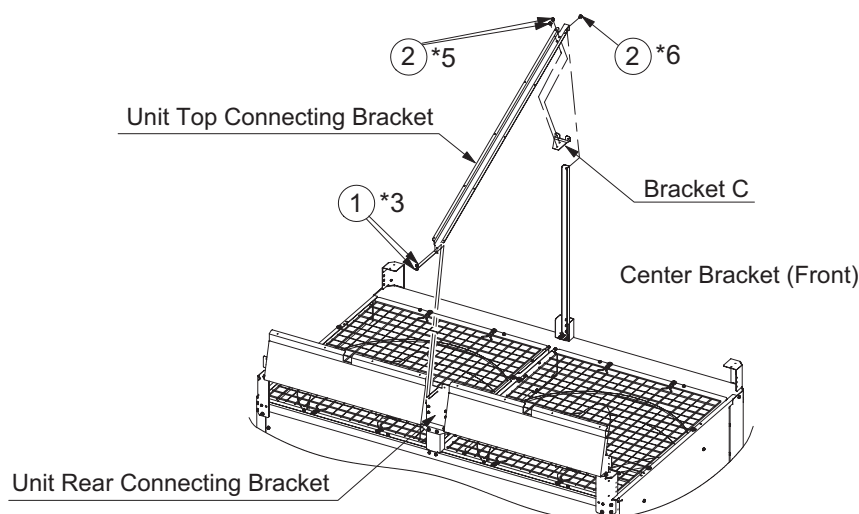


Fig. 2-8-27

8. Supplement

6. Side Panel Attachment (Left & Right)

Fix both side panels on the top of the unit. Place side panels so that the flap of Rear Cover (S) should fit inside side panels as shown in the chart.

At first, tighten with 4 screws (② *7) (5mm x 10mm) respectively from upside " *7 " as shown in the chart.

Then tighten 18 (① *4 and ② *8) other locations respectively on the sideways of the brackets and Rear Cover (S).

Repeat the same procedure as described above for other side panel.

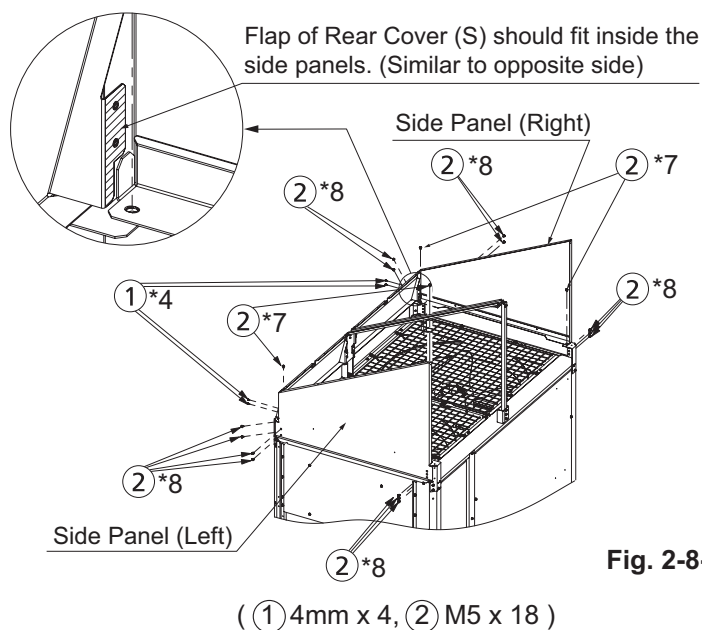


Fig. 2-8-28

7. Topside Cover (S) Attachment

Fix Topside Cover, Side Panel (Left and Right), Unit Top Connecting Bracket, Bracket C and rear cover. Tighten with 32 screws (① *5).

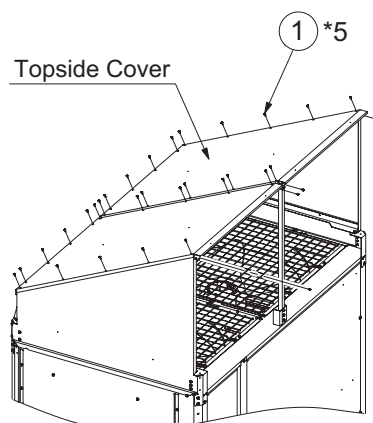


Fig. 2-8-29

8. Supplement

Reference Diagram for Topside Cover (S) (field supply) : 1106-362

The parts are the same as Figure 2-8-10.

Reference Diagram for Side Panel (Left) (field supply) : 1107-332

The parts are the same as Figure 2-8-5.

Reference Diagram for Side Panel (Right) (field supply) : 1108-338

The parts are the same as Figure 2-8-8.

2

Reference Diagram for Bracket A (field supply) : 1136-410

The parts are the same as Figure 2-8-15.

Reference Diagram for Bracket B (field supply) : 1136-409

The parts are the same as Figure 2-8-16.

Reference Diagram for Rear Cover (S) (field supply) : 1109-482

The parts are the same as Figure 2-8-14.

8. Supplement

Reference Diagram for Center Bracket (Front) (field supply) : 14003

unit: mm

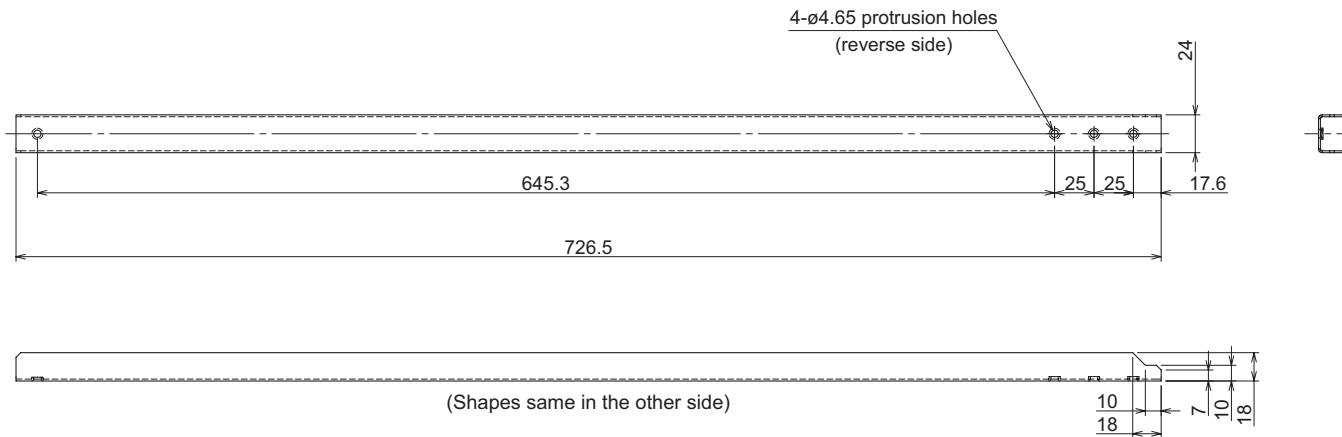


Fig. 2-8-30

2

Reference Diagram for Unit Top Connecting Bracket (field supply) : 14004

unit: mm

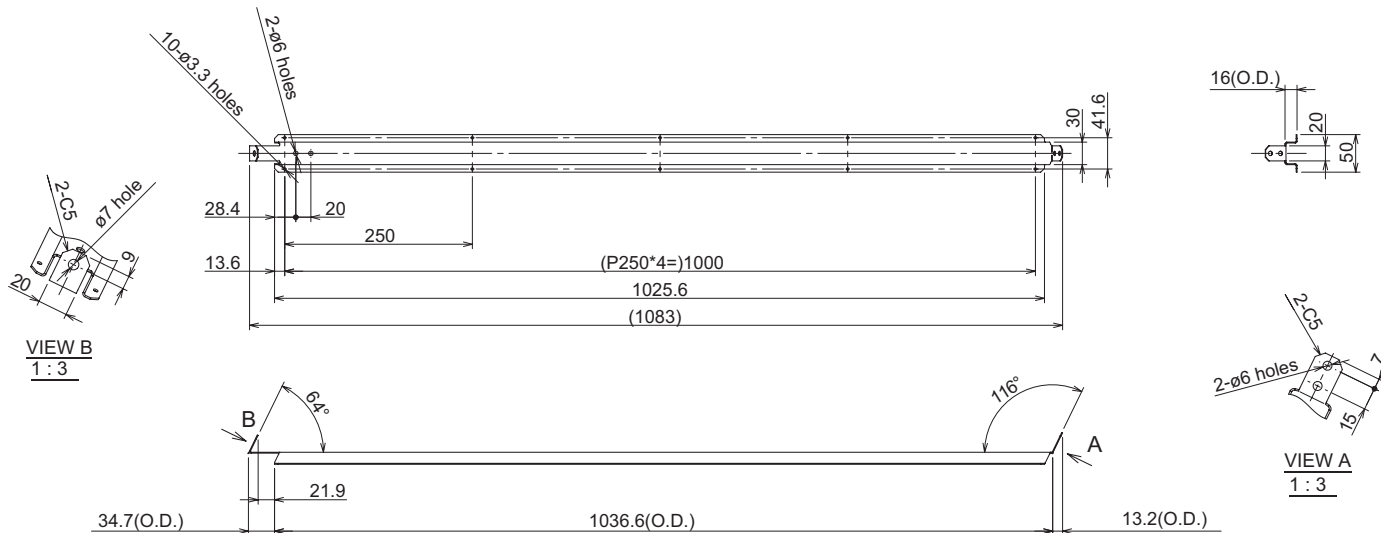


Fig. 2-8-31

8. Supplement

Reference Diagram for Bracket C (field supply) : 14029

unit: mm


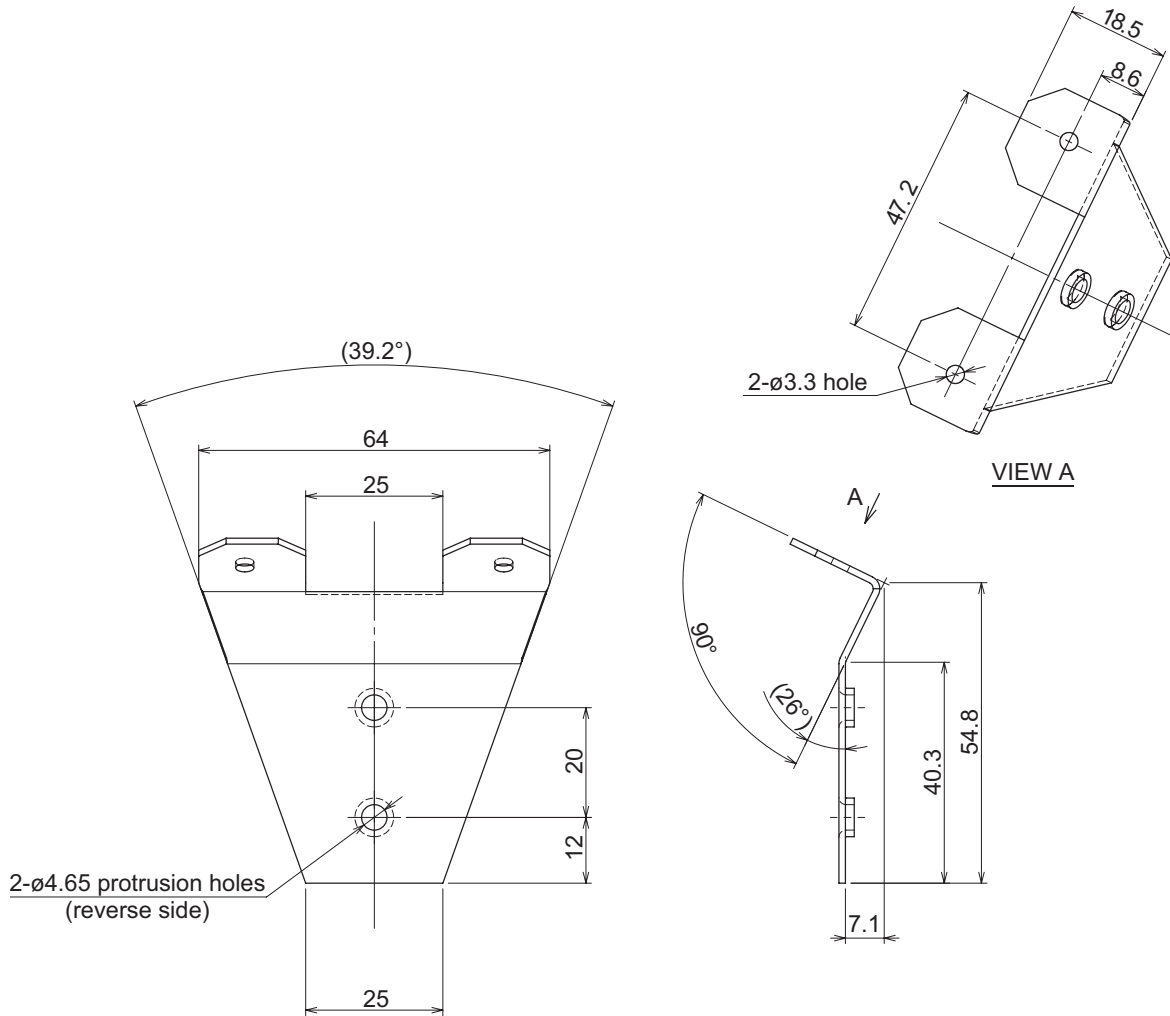


Fig. 2-8-32

Reference Diagram for Unit Rear Connecting Bracket (field supply) : 1109-483

unit: mm

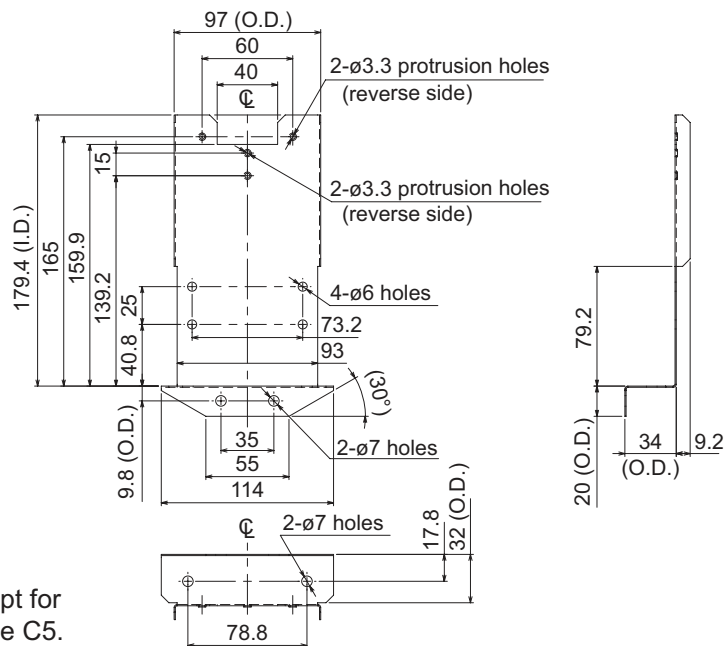

NOTE : The contour of bevel except for specific indications shall be C5.

Fig. 2-8-33

8. Supplement

Reference Diagram for Bracket D (field supply) : 14028

unit: mm

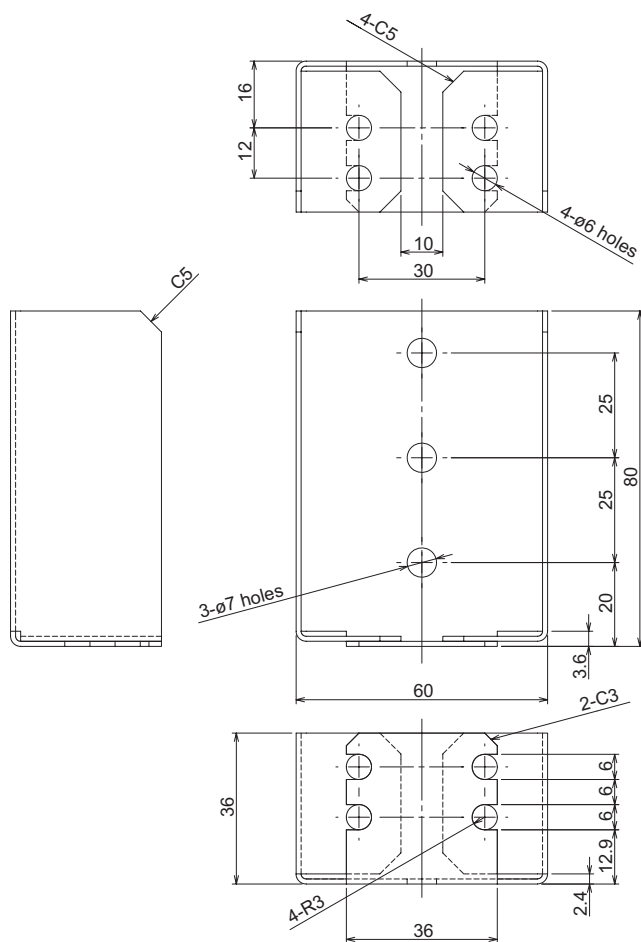


Fig. 2-8-34

Reference Diagram for Bracket E (field supply) : 14005

unit: mm

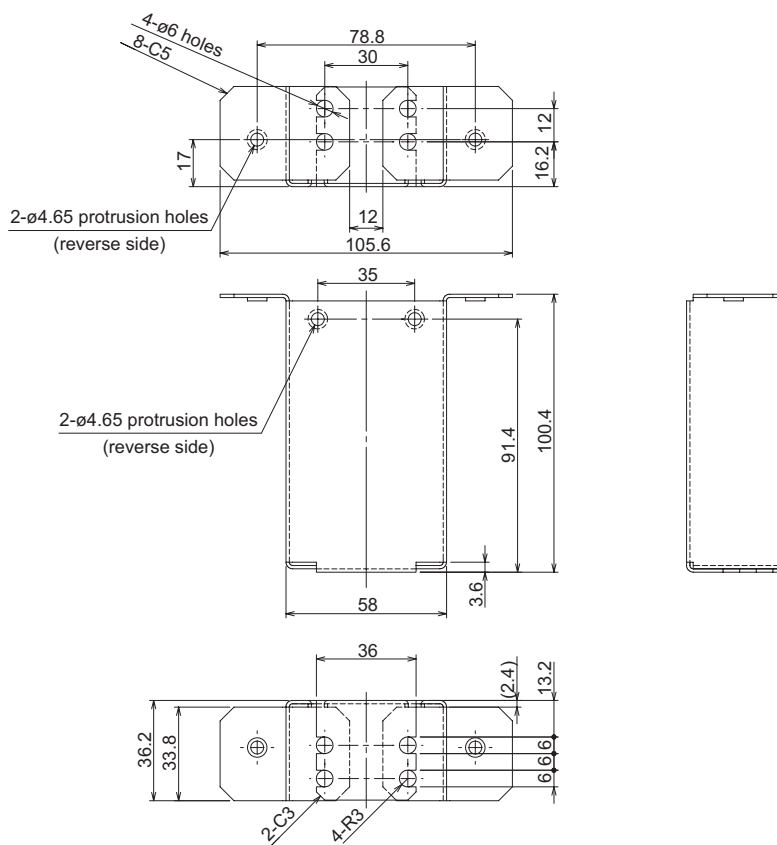


Fig. 2-8-35

8. Supplement


4. Snow-Proof Vents for Side Panel (Y) (Air Intake Duct)(field supply)

Reference Diagram for Snow-Proof Vents (air intake duct)

Model : U-8ME2E8, U-10ME2E8, U-12ME2E8, U-14ME2E8, U-16ME2E8,
U-18ME2E8, U-20ME2E8

Example : U-8ME2E8





unit: mm

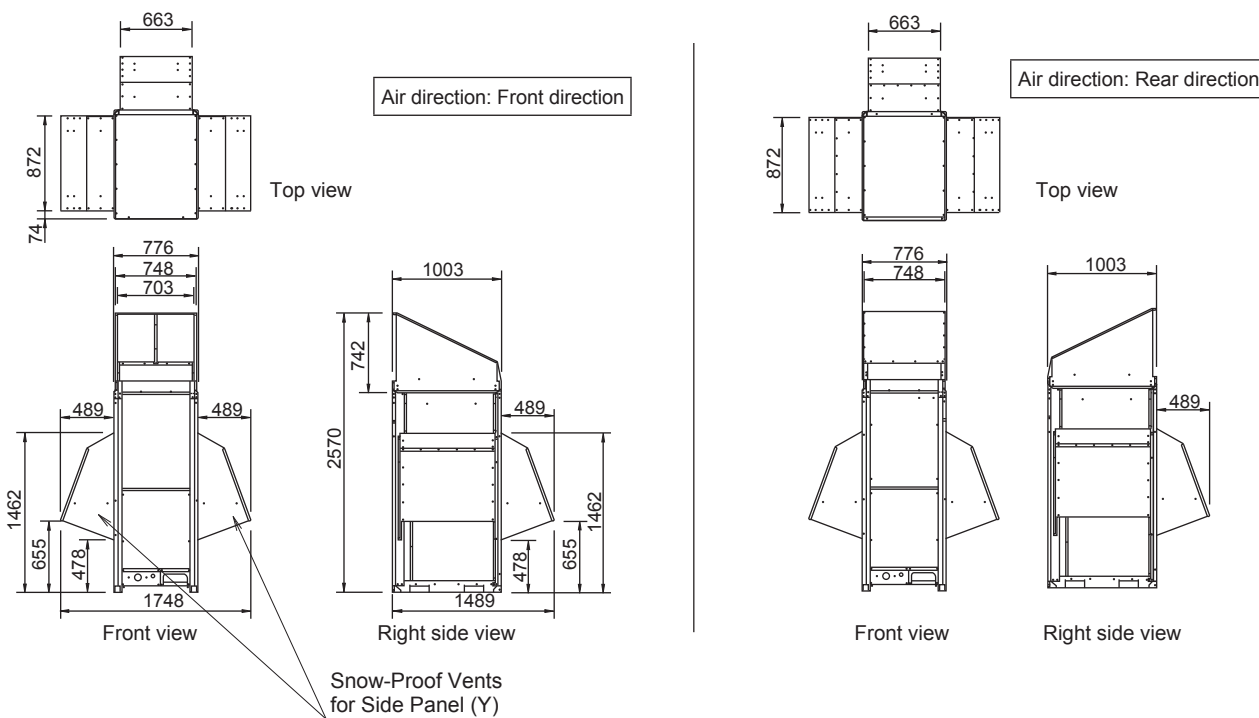

Necessary Assembling Parts

unit: mm


	Parts	Q'ty	Thickness
①	Top Cover (Y)	1	0.8
②	Side Panel (Right)	1	0.8
③	Side Panel (Left)	1	0.8
④	Rear Cover (Y)	1	0.8
	Tapping Screw (4mm x 12mm)	26	—

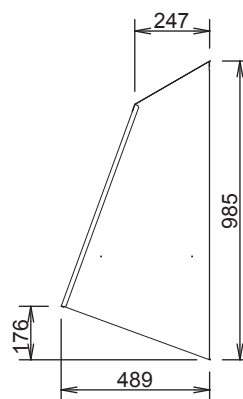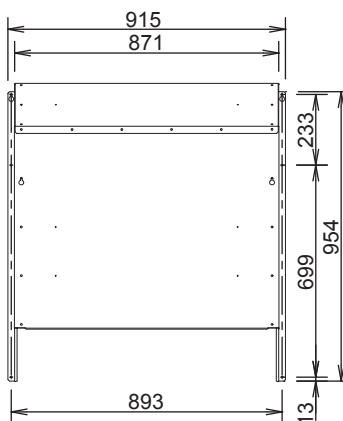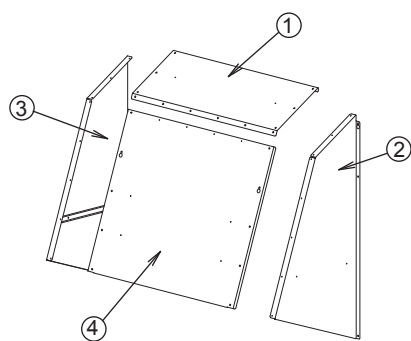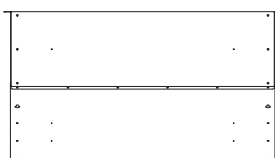

8. Supplement

Installation of Snow-Proof Vents for Side Panel (Y) (air intake duct)

- The parts shown below are locally procured parts.
- The number of pieces shown below indicates the number of installed quantity on one sideways of the unit. (Obtain necessary number of pieces.)
- Choose the parts free from rust or rustless material in order to prevent rust and salt-air damage resistance.
- First install the air-discharge chamber (S,M,L) (field supply) and then install this snow-proof vents for Side Panel (Y) (air intake duct).
- When setting up a multiple-unit installation, the optional supplemental Installation Kit for Multiple-Unit (field supply) is required.

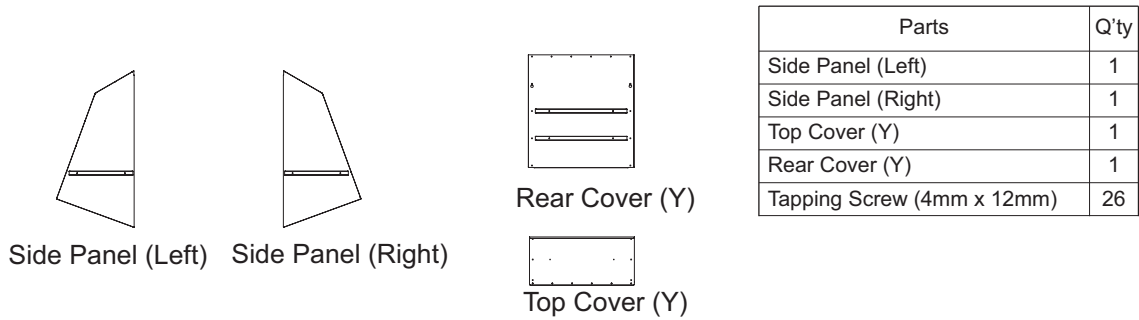

NOTE

- Install the air-discharge chamber where there is well enough for ventilation even if a strong wind is blowing.

Tightening Screws

- The screws for fixing parts indicate by number as shown in the chart.
- Tighten with Tapping Screw (4mm x 12mm) for the number ①.

How to Install Snow-Proof Vents for Side Panel (Y) (air intake duct)


To accomplish the parts assembly, follow the steps below.

If the parts assembly is performed in a different way, installation will not successfully complete.


1. How to Install the Snow-Proof Vents for Side Panel(Y) (air intake duct)
 First install the air-discharge chamber (S,M,L) (field supply) and follow the steps below.
 Regarding the air-discharge chamber (S,M,L) installation, follow the steps described separately.
2. Side Panel Attachment (Left & Right)
 Attach Side Panel (Left / Right) to the corner post on the side of the unit.
 Attach Side Panel (Left) to the left post and Side Panel (Right) to the right post respectively.
 When installing, tighten the foremost upside screw temporarily. (See detail chart A, B.)
 Attach side panel likely to hook to that screw and then tighten each panel with 2 other screws (total 3 screws) securely.

Example : U-8ME2E8

Air-discharge chamber (S,M,L)

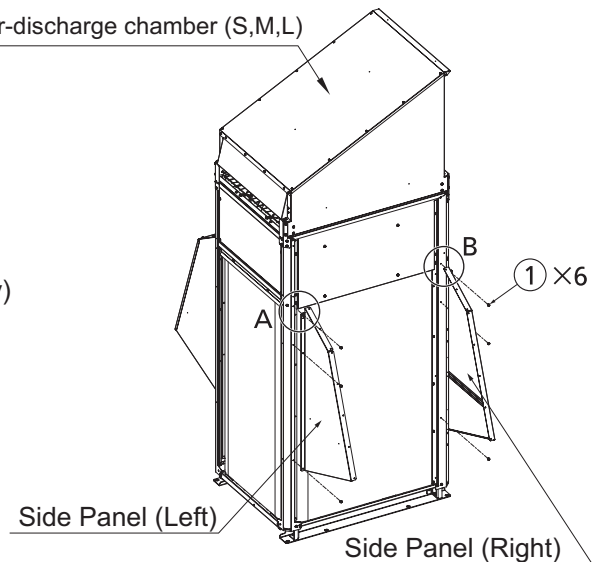


Firstly tighten screw temporarily

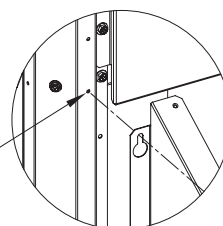

Detail view A

Firstly tighten screw temporarily

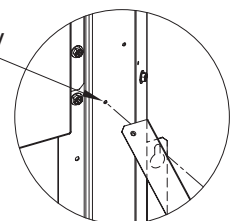

Detail view B

Fig. 2-8-36

8. Supplement

3. Rear Cover (Y) Attachment

Attach Rear Cover (Y) to the top of both side panels as described in step 2 above.

When installing, tighten the second upside screws on both side temporarily.

Attach Rear Cover (Y) likely to hook to that screw and then tighten with 6 other screws (total 8 screws) securely.

See Fig. 2-8-37.

Example : U-8ME2E8

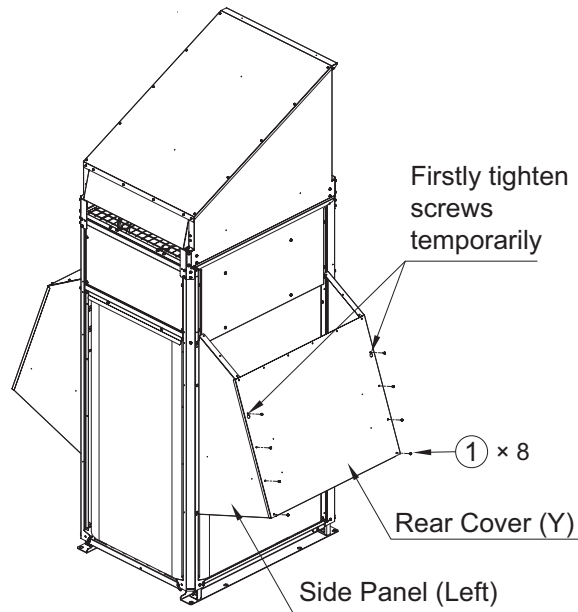


Fig. 2-8-37

2

4. Top Cover Attachment

Attach the topside cover to upside the rear cover as described in step 3 above and tighten with 12 screws.

See Fig. 2-8-38.

Example : U-8ME2E8

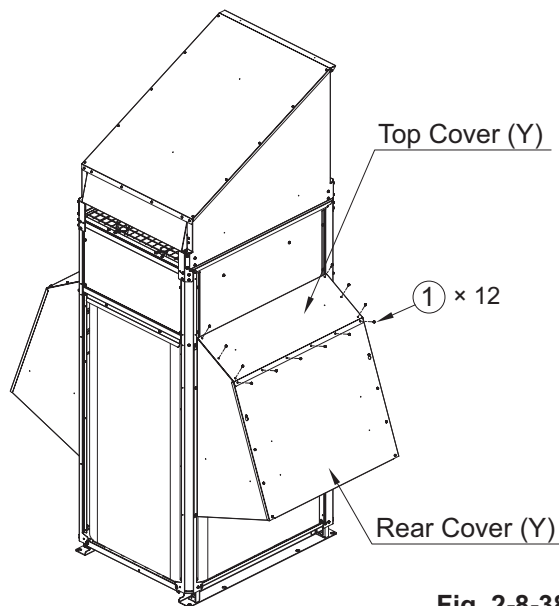



Fig. 2-8-38

5. Opposite Side Attachment


When installing the snow-proof vents for Side Panel (Y) (air intake duct) to the opposite side of the unit, follow steps 2 - 4 described above.

Reference : Brief Assembly Diagram for Each Outdoor Unit


Model : U-8ME2E8
U-10ME2E8

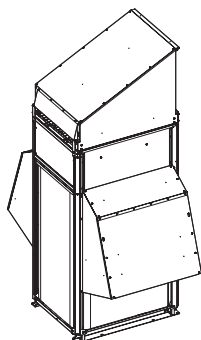

Model : U-12ME2E8
U-14ME2E8
U-16ME2E8

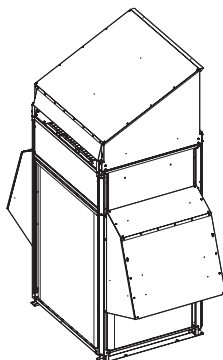

Model : U-18ME2E8
U-20ME2E8

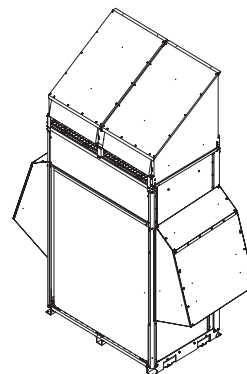

8. Supplement

Reference Diagram for Side Panel (Left) (field supply) : 1107-331

RMK	PART NAME	Q'ty
1	COV SIDE L 779	1
2	PL MTG 359	1

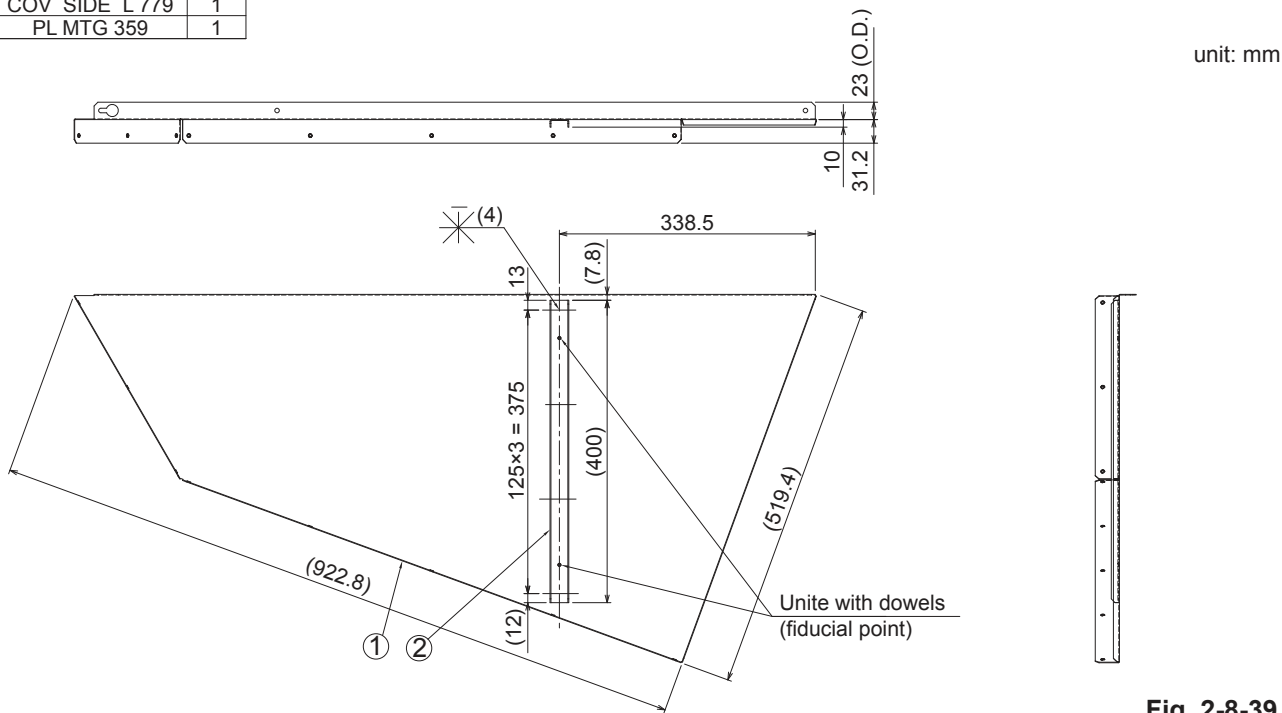


Fig. 2-8-39

Reference Diagram for Side Panel (Left) (field supply) : COV SIDE L 779


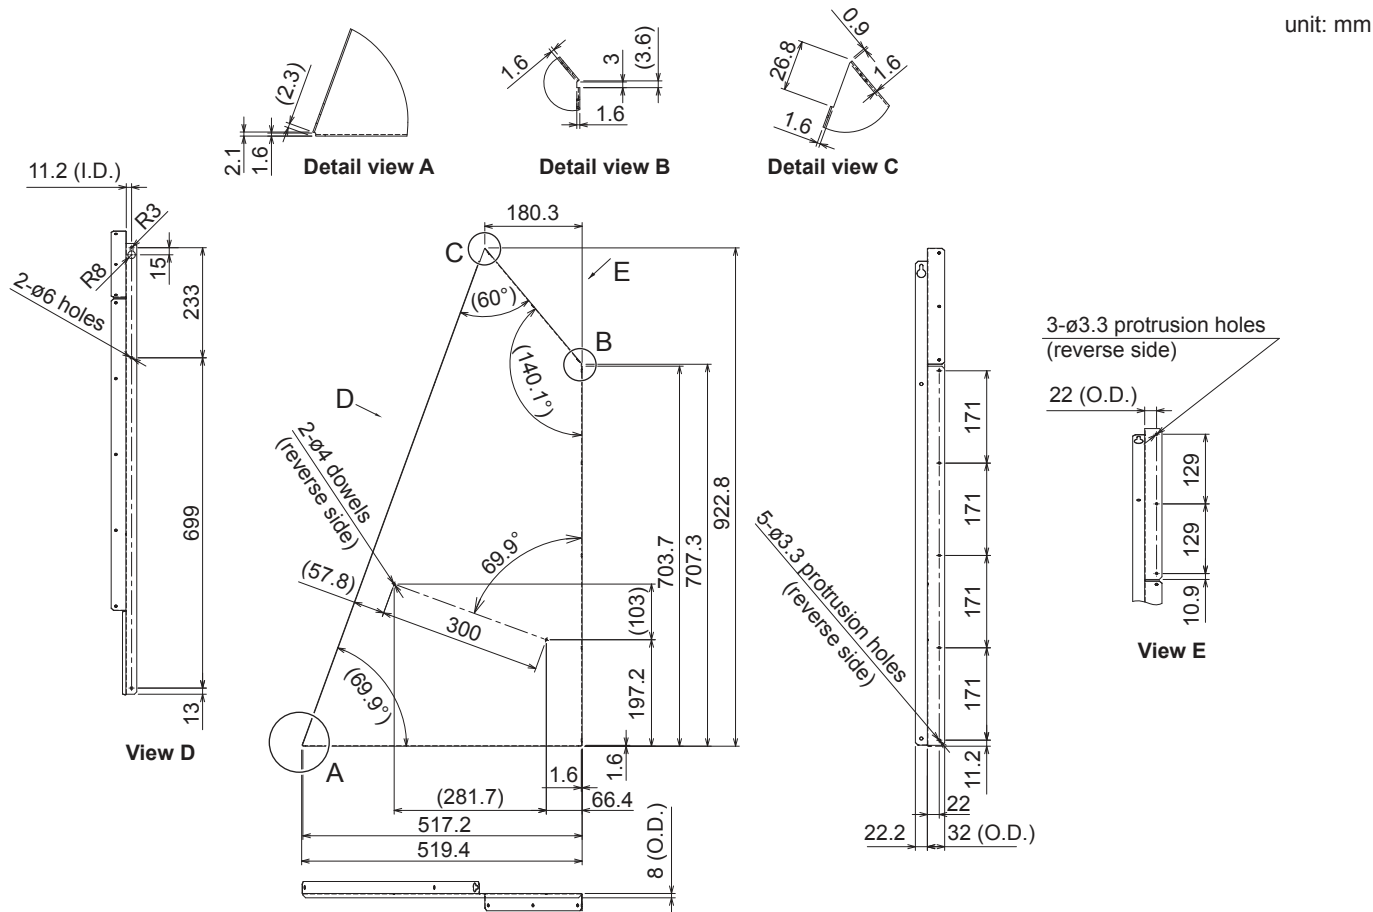


Fig. 2-8-40



8. Supplement

Reference Diagram for Side Panel (Left) (field supply) : PL MTG 359

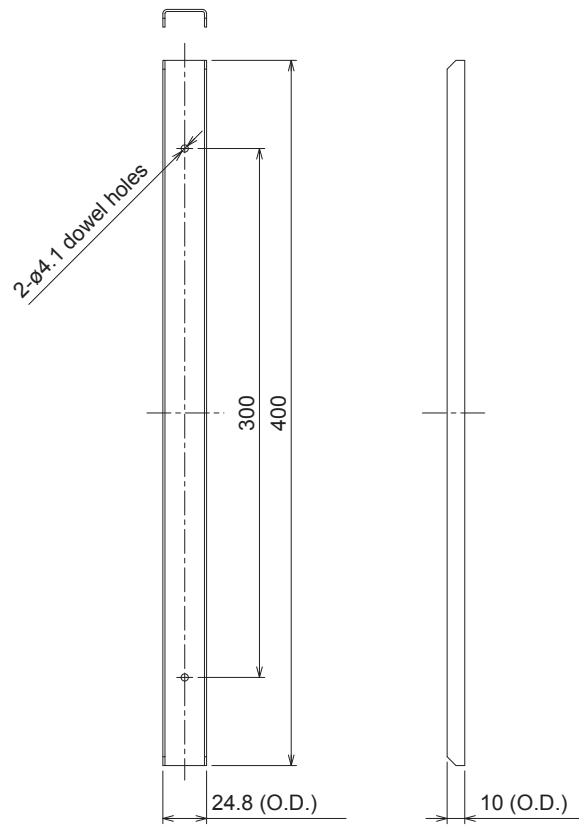

unit: mm

2

Fig. 2-8-41

8. Supplement

Reference Diagram for Side Panel (Right) (field supply) : 1108-337

RMK	PART NAME	Q'ty
1	COV SIDE R 501	1
2	PL MTG 359*	1

* Same as Fig. 2-8-41


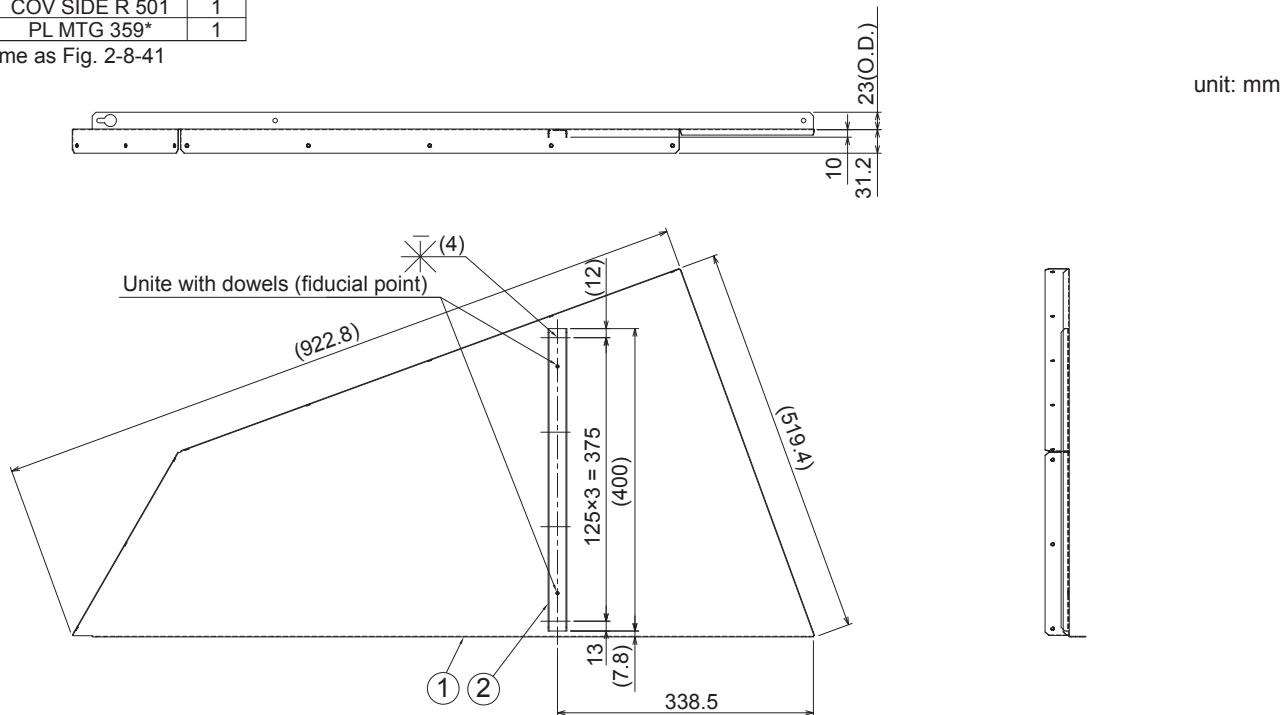


Fig. 2-8-42

Reference Diagram for Side Panel (Right) (field supply) : COV SIDE R 501

unit: mm

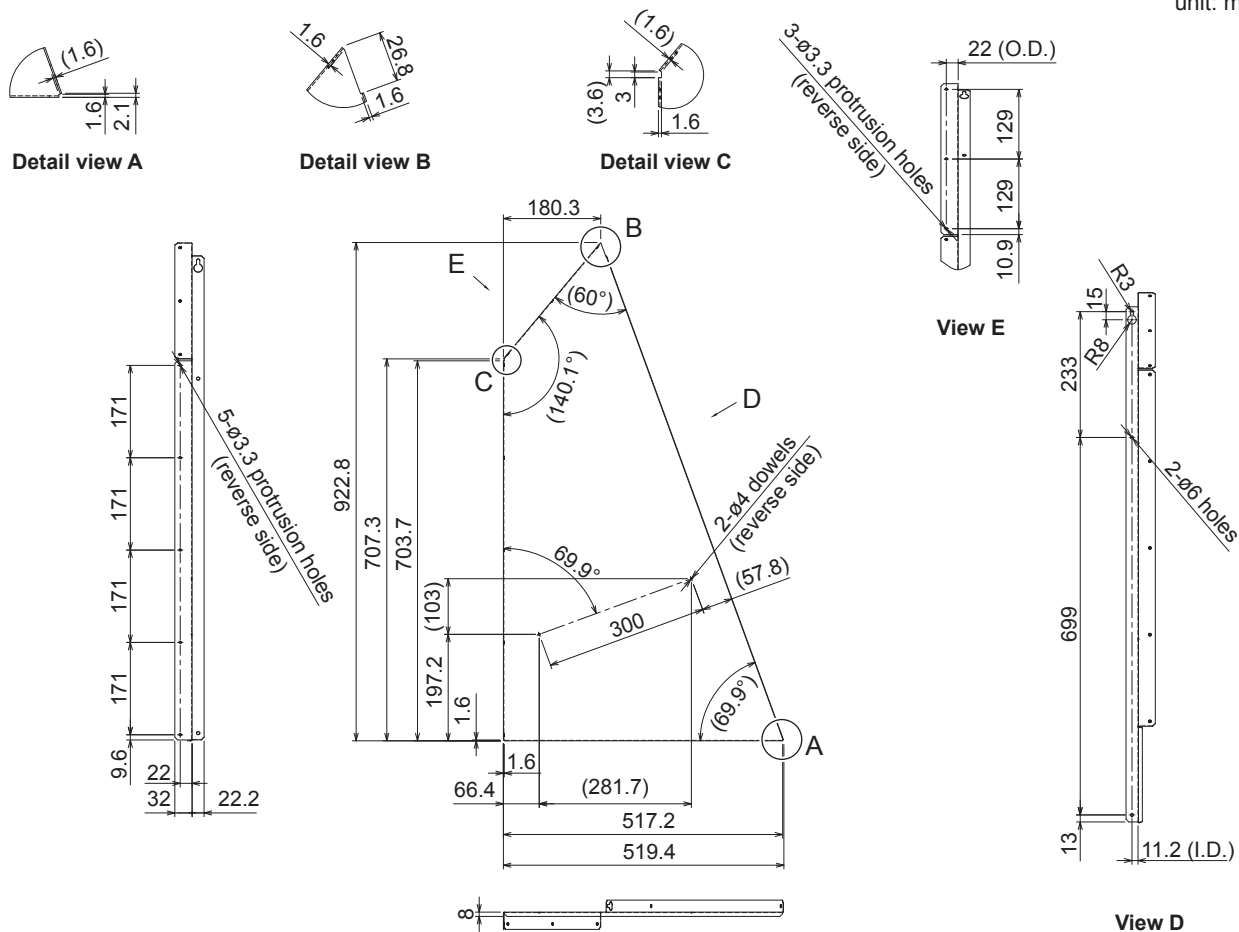

View D

Fig. 2-8-43



8. Supplement

Reference Diagram for Top Cover (Y) (field supply) : 1106-366

RMK	PART NAME	Q'ty
1	Top cover 502	1
2	PL MTG 362	1

unit: mm

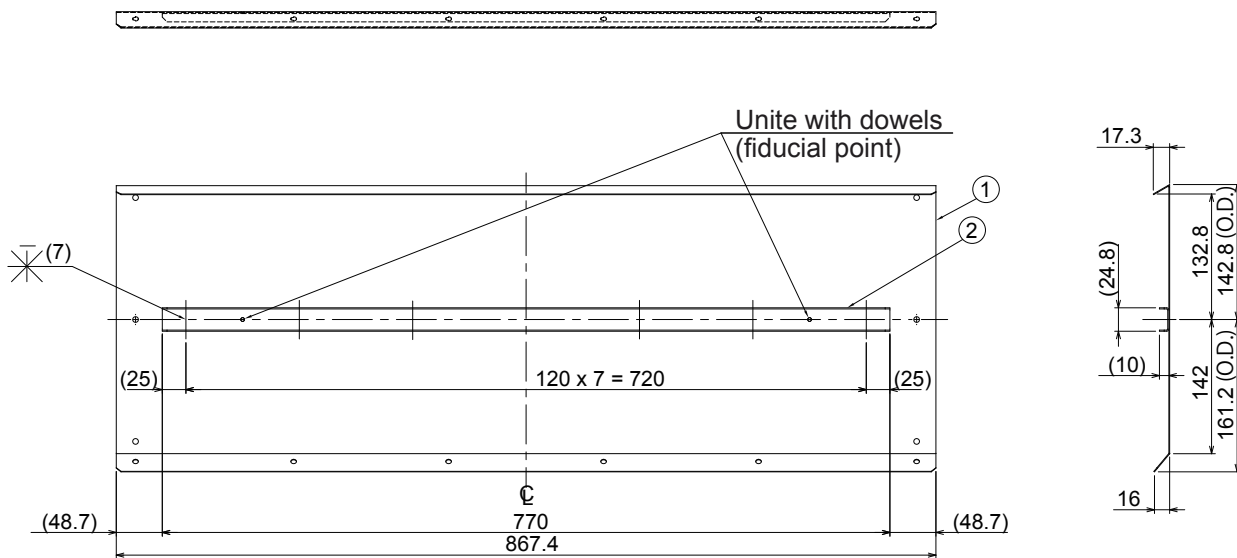


Fig. 2-8-44

Reference Diagram for Top Cover (Y) (field supply) : COV TOP 502

unit: mm

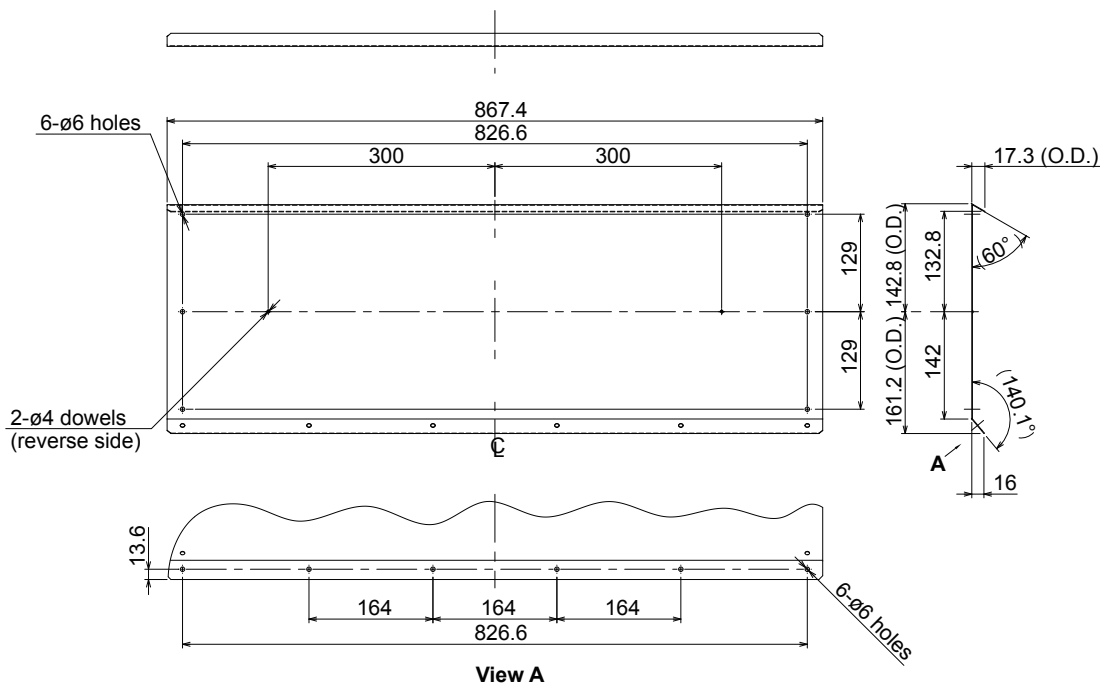



Fig. 2-8-45

2

8. Supplement

Reference Diagram for Top Cover (Y) (field supply) : PL MTG 362

unit: mm

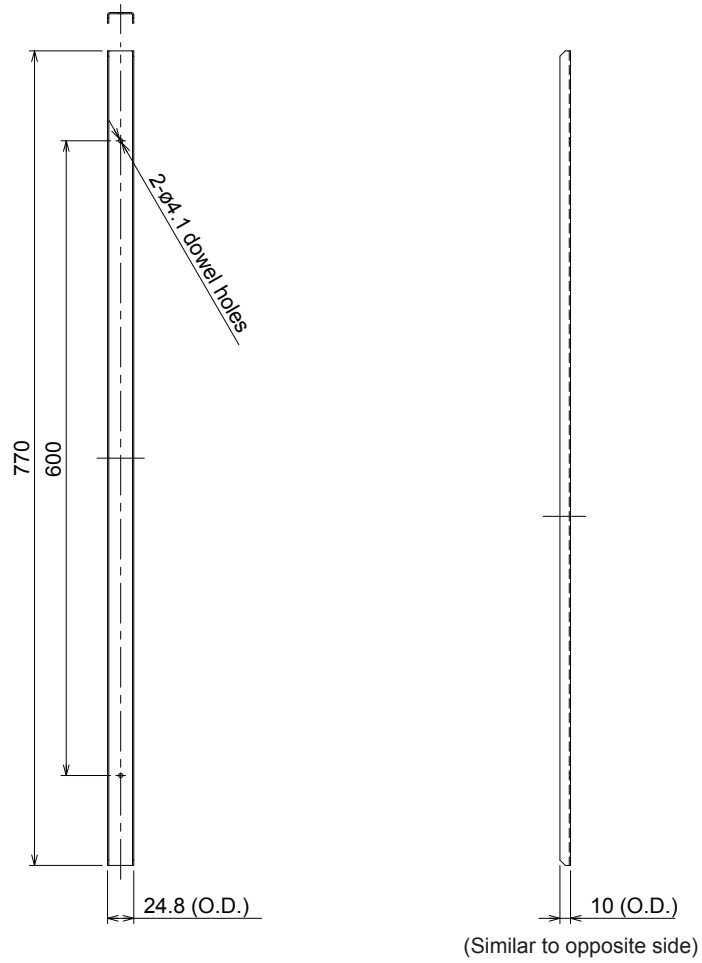


2

Fig. 2-8-46

8. Supplement

Reference Diagram for Unit PKG (field supply) : 764
Material : Polyethylene form

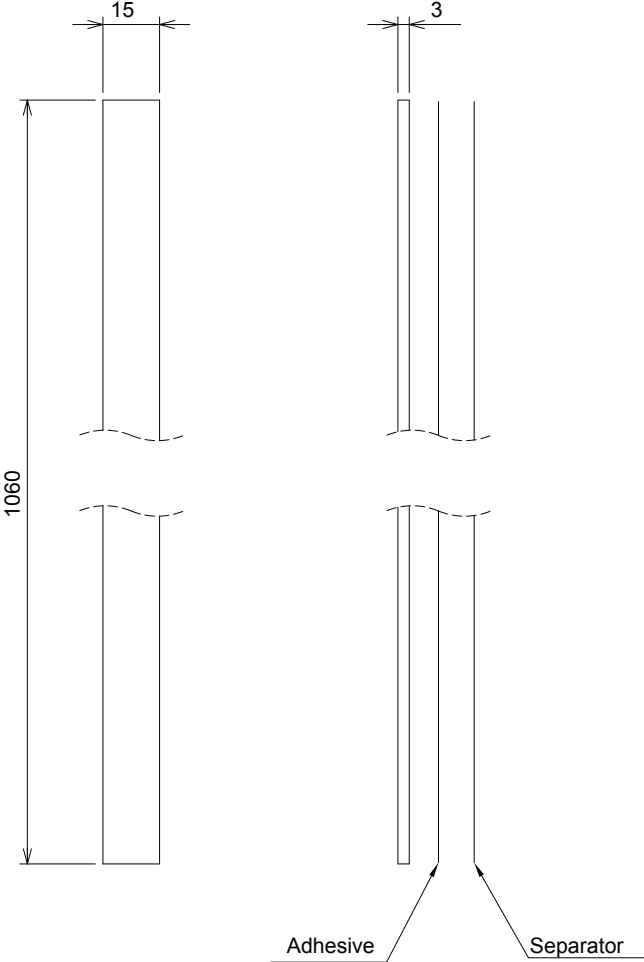

unit: mm

2

Fig. 2-8-49


8. Supplement

5. Snow-Proof Vents for Rear Panel (U-S) (Air Intake Duct)(field supply)

Reference Diagram for Snow-Proof Vents (air intake duct)

Model : U-8ME2E8, U-10ME2E8





unit: mm

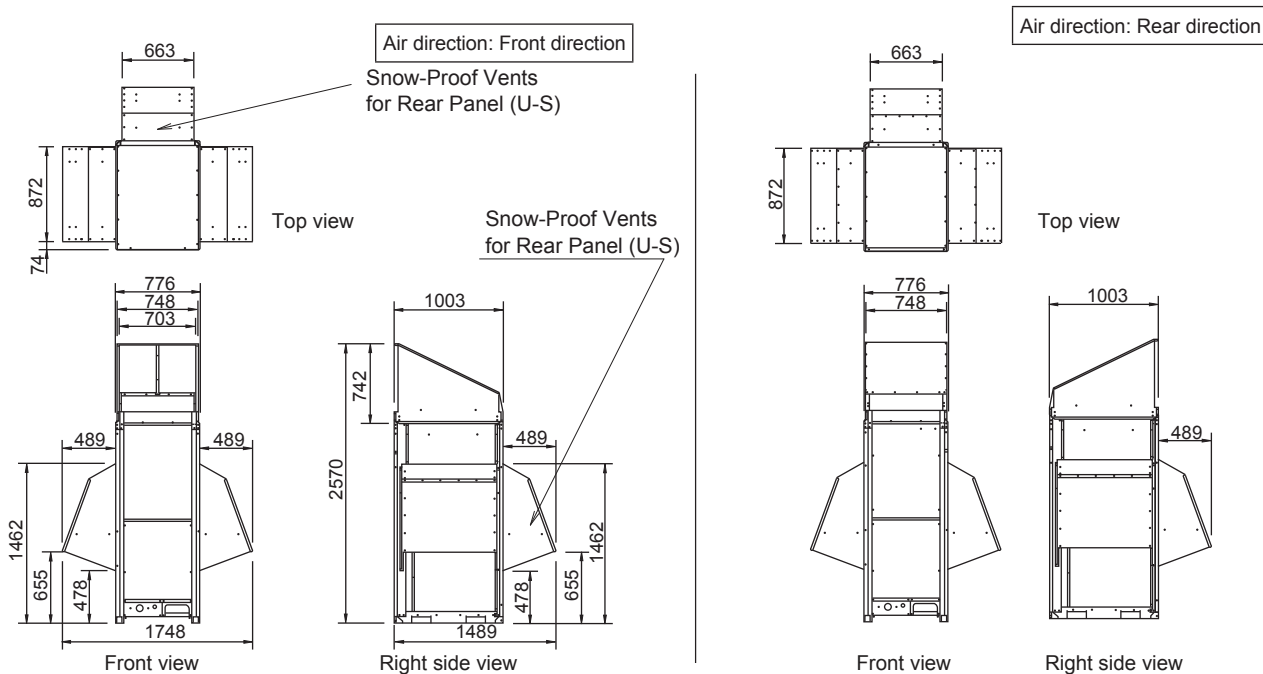

Necessary Assembling Parts

unit: mm


	Parts	Q'ty	Thickness
①	Top Cover (U-S)	1	0.8
②	Side Panel (Right)	1	0.8
③	Side Panel (Left)	1	0.8
④	Rear Cover (U-S)	1	0.8
	PKG	1	—
	Tapping Screw (4mm x 12mm)	26	—

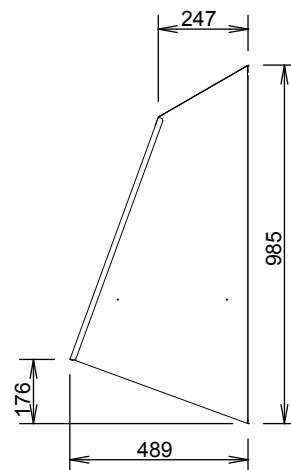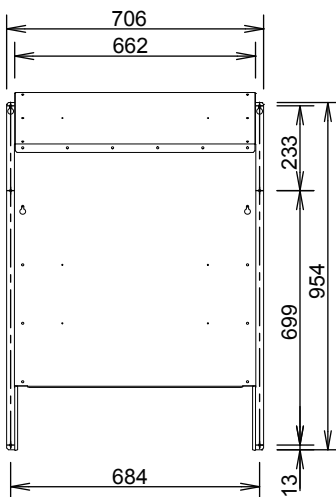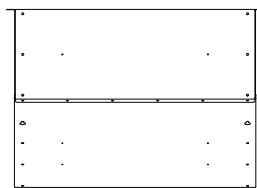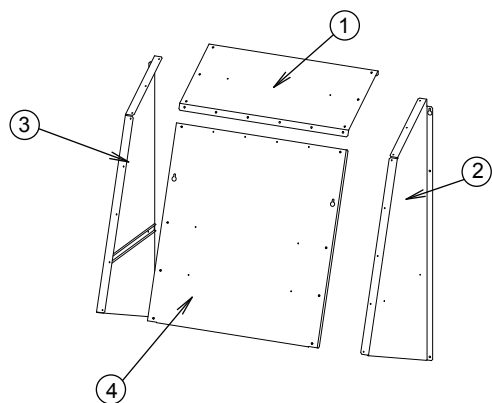

8. Supplement

Installation of Snow-Proof Vents for Rear Panel (U-S) (air intake duct)

- The parts shown below are locally procured parts.
- The number of pieces shown below indicates the quantity per 1 set.
The necessary quantity of pieces becomes different according to the type of installation model.
- Choose the parts free from rust or rustless material in order to prevent rust and salt-air damage resistance.
- First install the air-discharge chamber (S) (field supply) and then install this snow-proof vents for Rear Panel (U-S) (air intake duct).
- When setting up a multiple-unit installation, the optional supplemental Installation Kit for Multiple-Unit (field supply) is required.

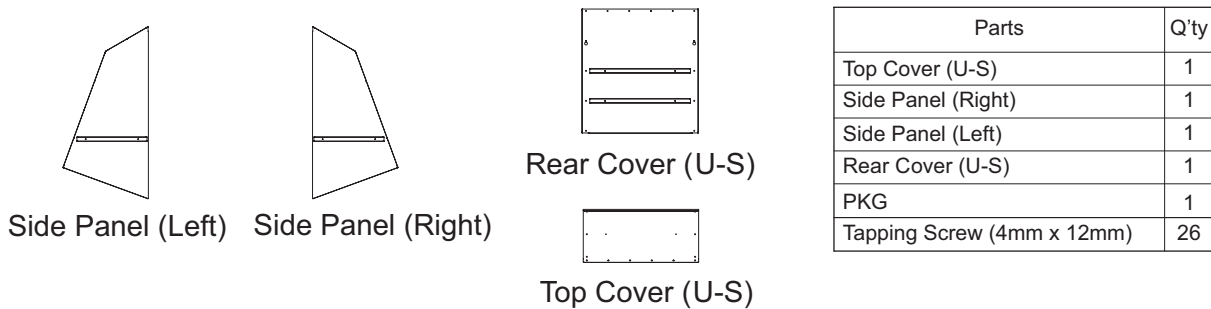

NOTE

- Install the air-discharge chamber where there is well enough for ventilation even if a strong wind is blowing.

Tightening Screws

- The screws for fixing parts indicate by number as shown in the chart.
- Tighten with Tapping Screw (4mm x 12mm) for the number ①.

How to Install Snow-Proof Vents for Rear Panel (U-S) (air intake duct)

To accomplish the parts assembly, follow the steps below.

If the parts assembly is performed in a different way, installation will not successfully complete.

1. How to Install the Snow-Proof Vents (U-S) (air intake duct) First install the air-discharge chamber (S) (field supply) and follow the steps below. Regarding the air-discharge chamber (S) installation, follow the steps described separately.
2. Side Panel Attachment (Left & Right)
Attach Side Panel (Left/Right) to the corner post on the side of the unit.
Attach Side Panel (Left) to the left post and Side Panel (Right) to the right post respectively.
When installing, tighten the foremost upside screw temporarily. (See detail chart A, B.)

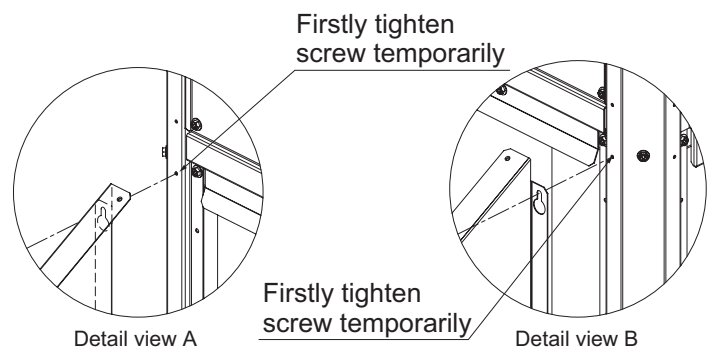
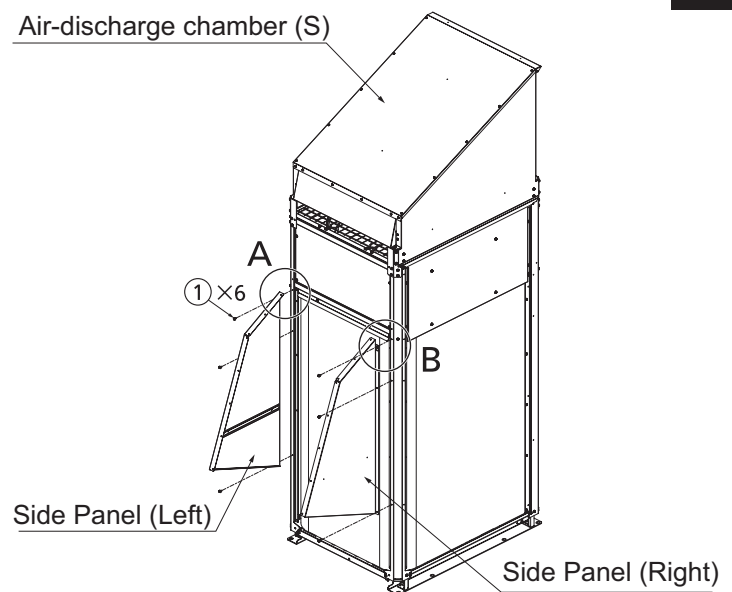


Fig. 2-8-50

8. Supplement

3. Rear Cover Attachment

Attach Rear Cover to the top of both side panels as described in step 2.

When installing, tighten the second upside screws on both sides temporarily.

Attach Rear Cover likely to hook to that screw and then tighten with 6 other screws (total 8 screws) securely. See Fig. 2-8-51.

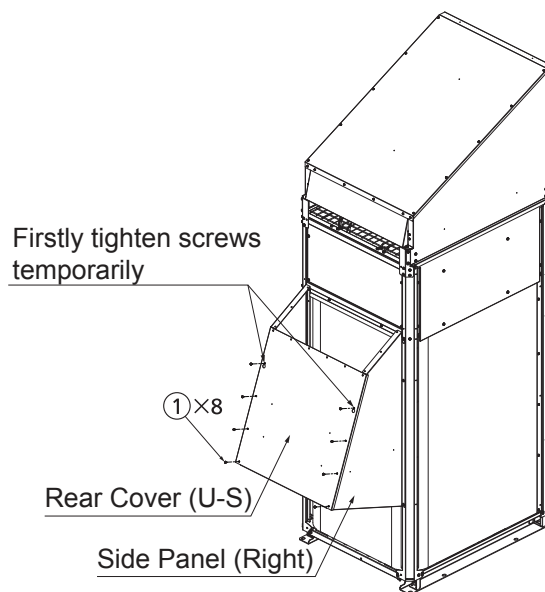


Fig. 2-8-51

4. Top Cover Attachment

Attach Top Cover to upside Rear Cover as described in step 3 above and tighten with 12 screws securely. See Fig. 2-8-52.

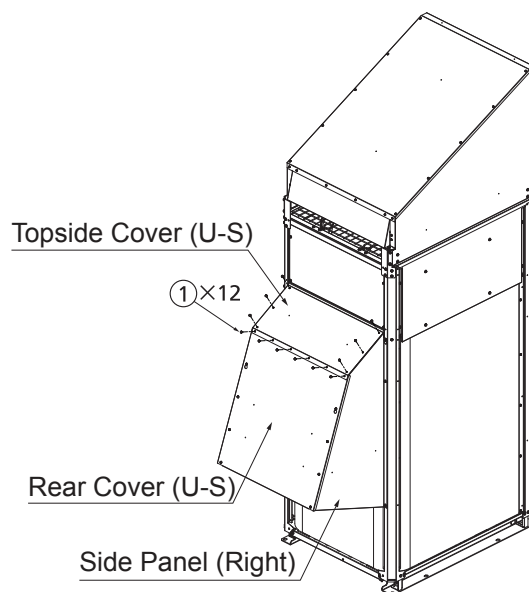


Fig. 2-8-52

8. Supplement

Reference Diagram for Side Panel (Left) (field supply) : 1107-331



The parts are the same as Figure 2-8-39.

Reference Diagram for Side Panel (Right) (field supply) : 1108-337

The parts are the same as Figure 2-8-42.

Reference Diagram for Top Cover (U-S) (field supply)

RMK	PART NAME	Q'ty
1	COV TOP 500	1
2	PKG 763	1

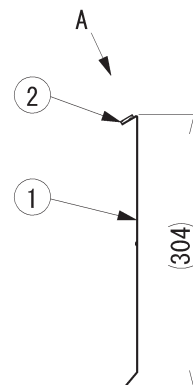
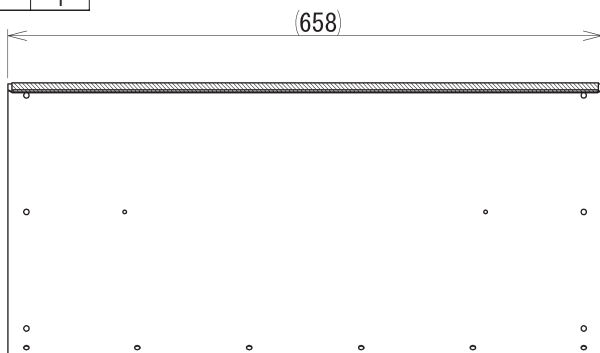


unit: mm

Fig. 2-8-53

2

Reference Diagram for Topside Cover (U-S) (field supply COV TOP 500) : 1109-500

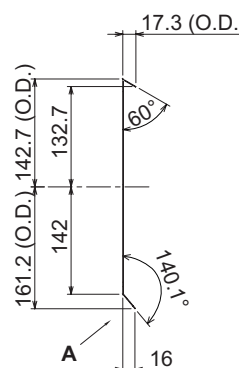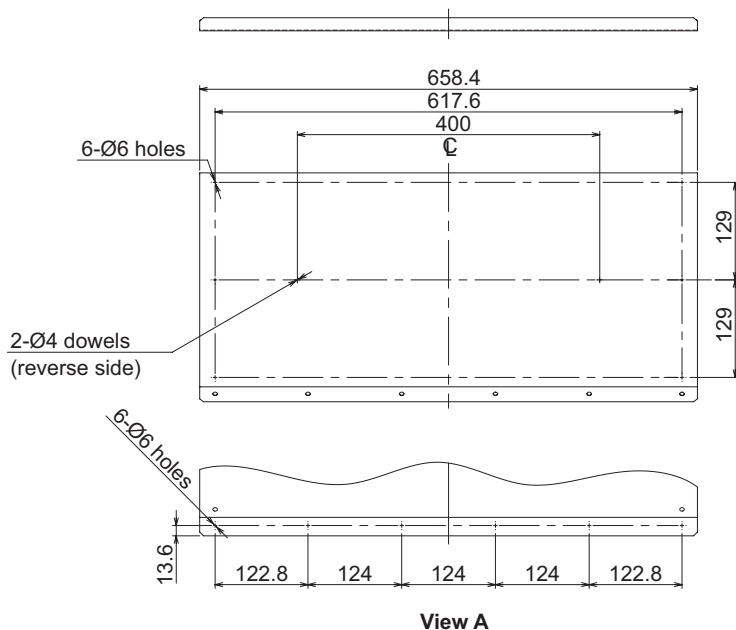


unit: mm

Fig. 2-8-54

Reference Diagram for PKG (field supply) : 763

Material : Polyethylene form

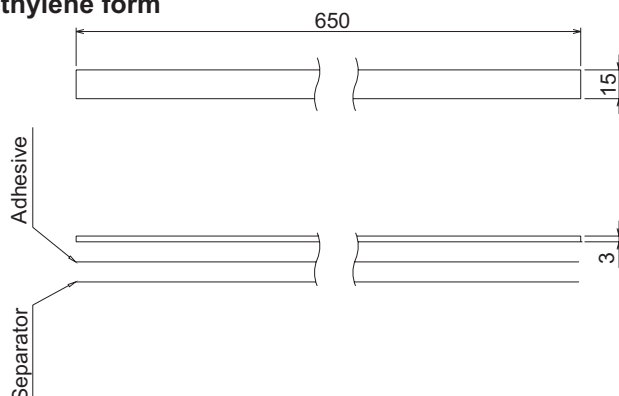

unit: mm

Fig. 2-8-55

8. Supplement

Reference Diagram for Rear Cover (U-S) (field supply) : 1109-325

RMK	PART NAME	Q'ty
1	COV REAR 489	1
2	PL MTG 414	2

unit: mm

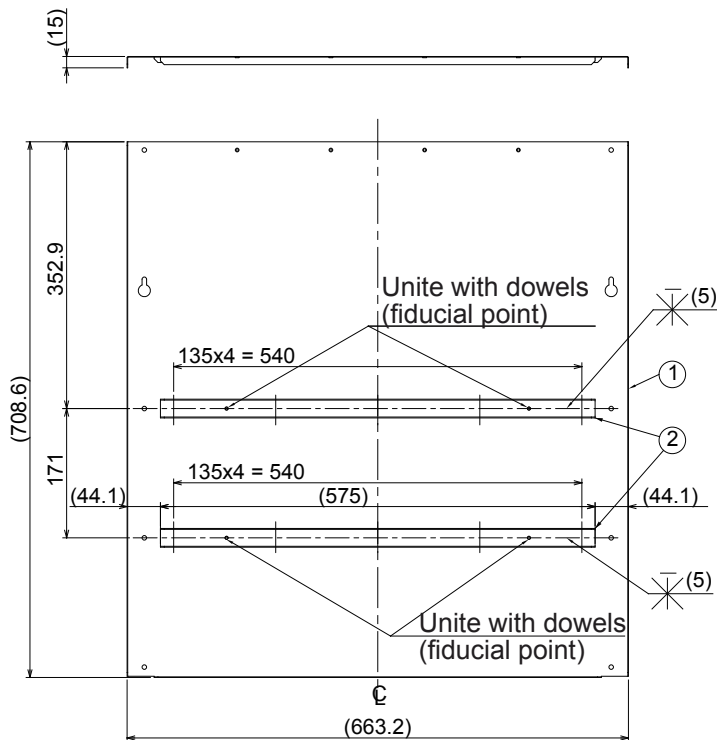


Fig. 2-8-56

Reference Diagram for Rear Cover (U-S) (field supply) : COV REAR 489

unit: mm

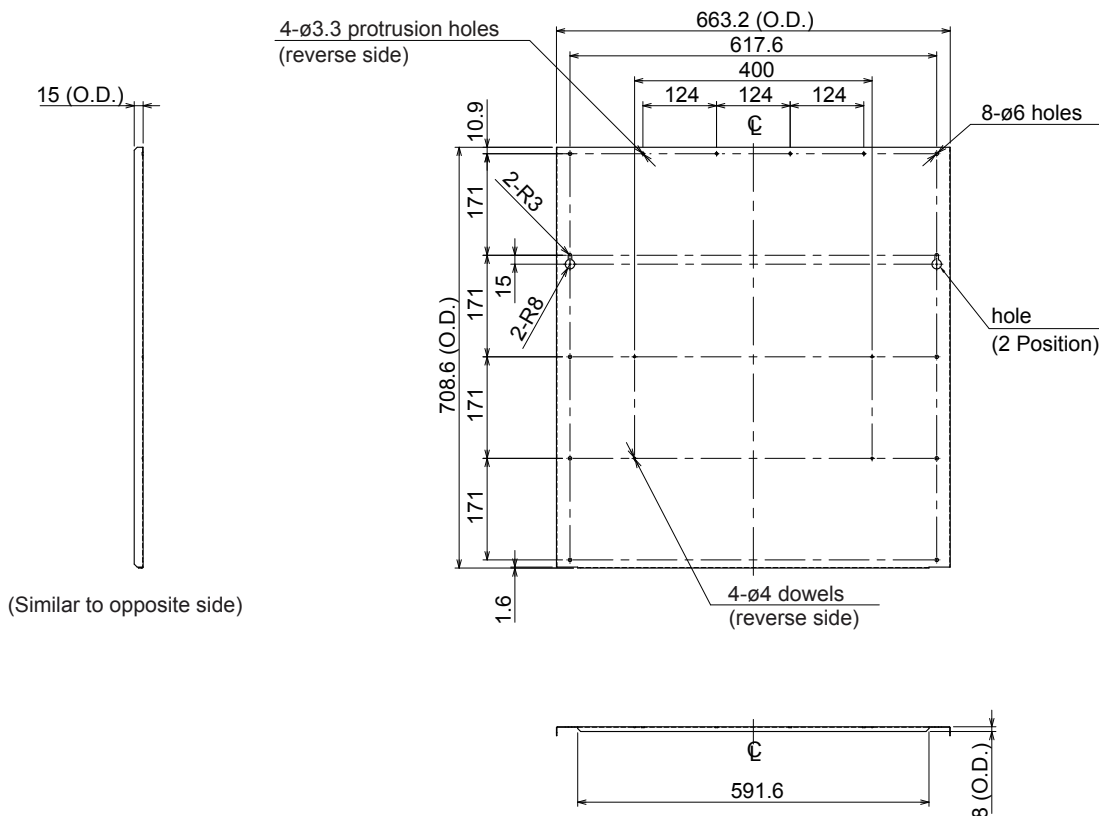


Fig. 2-8-57

8. Supplement

Reference Diagram for Rear Cover (U-S) (field supply) : PL MTG 414

unit: mm

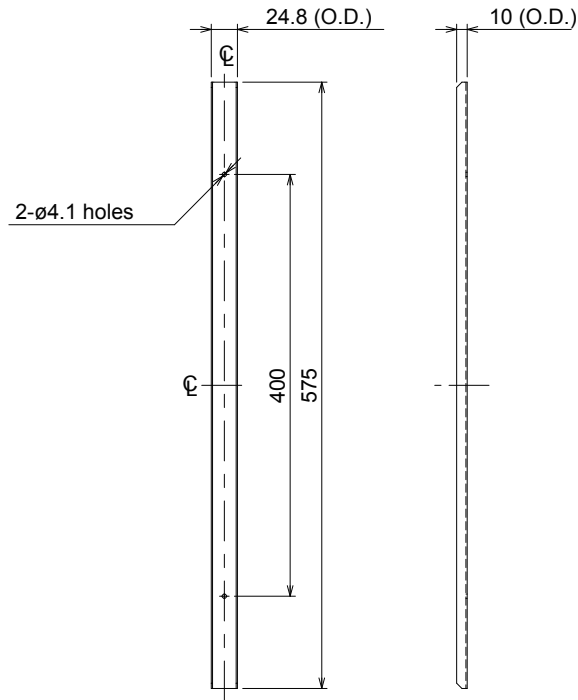


Fig. 2-8-58

2

8. Supplement

6. Snow-Proof Vents for Rear Panel (U-M) (Air Intake duct)(field supply)



Reference Diagram for Snow-Proof Vents (air intake duct)

Model : U-12ME2E8, 14ME2E8, U-16ME2E8

unit: mm

Air direction: Front direction





Air direction: Rear direction

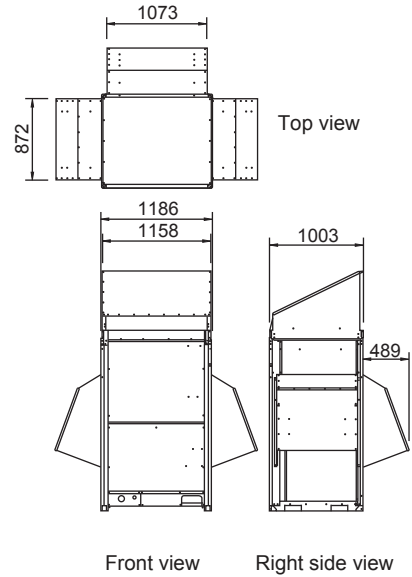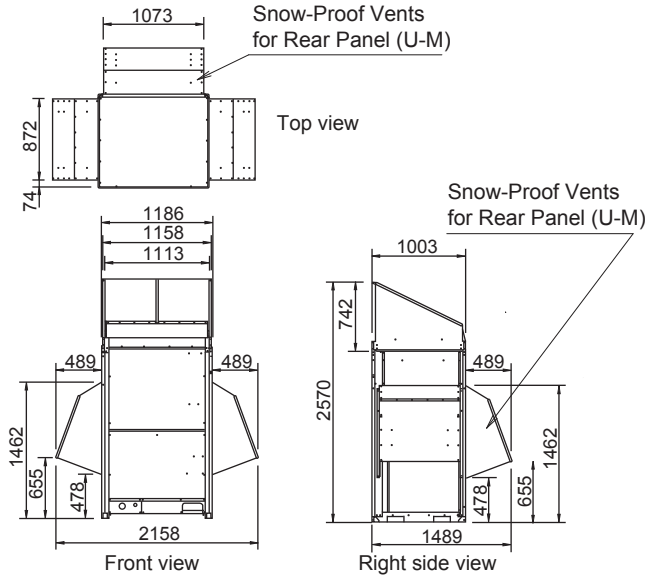

Necessary Assembling Parts

unit: mm


	Parts	Q'ty	Thickness
①	Top Cover (U-M)	1	0.8
②	Side Panel (Right)	1	0.8
③	Side Panel (Left)	1	0.8
④	Rear Cover (U-M)	1	0.8
	Tapping Screw (4mm x 12mm)	27	—

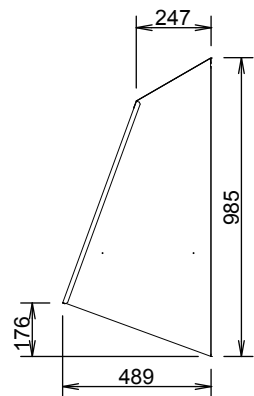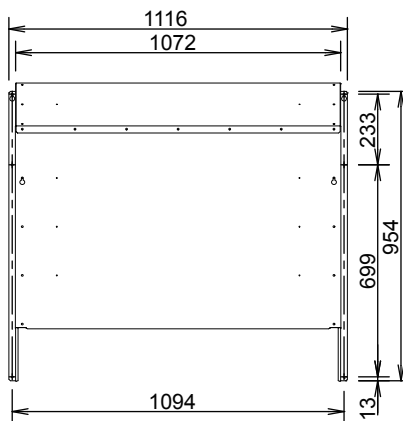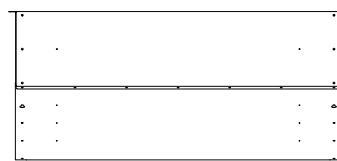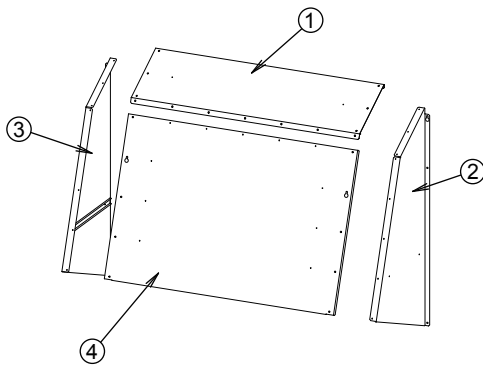

8. Supplement

Installation of Snow-Proof Vents for Rear Panel (U-M) (air intake duct)

- The parts shown below are locally procured parts.
- The number of pieces shown below indicates the quantity per 1 set.
- Choose the parts free from rust or rustless material in order to prevent rust and salt-air damage resistance.
- First install the air-discharge chamber (M) (field supply) and then install this snow-proof vents for Rear Panel (M)(air intake duct).
- When setting up a multiple-unit installation, the optional supplemental Installation Kit for Multiple-Unit (field supply) is required.

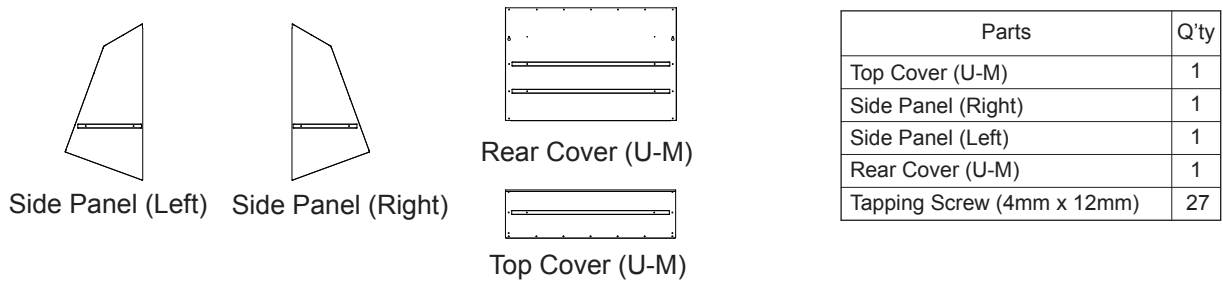

NOTE

- Install the air-discharge chamber where there is well enough for ventilation even if a strong wind is blowing.

Tightening Screws

- The screws for fixing parts indicate by number as shown in the chart.
- Tighten with Tapping Screw (4mm x 12mm) for the number ①.

How to Install Snow-Proof Vents for rear panel (U-M) (air intake duct)

To accomplish the parts assembly, follow the steps below.
If the parts assembly is performed in a different way, installation will not successfully complete.

1. How to Install the Snow-Proof Vents for Rear Panel (U-M) (air intake duct) First install the air-discharge chamber (M) (field supply) and follow the steps below. Regarding the air-discharge chamber installation, follow the steps described separately.
2. Side Panel Attachment (Left & Right)

Attach Side Panel (Left/Right) to the corner post on the side of the unit.
Attach Side Panel (Left) to the left post and Side Panel (Right) to the right post respectively.
When installing, tighten the foremost upside screw temporarily. (See detail chart A, B.)
Attach Side Panel likely to hook to that screw and then tighten each panel with 2 other screws (total 3 screws) securely.



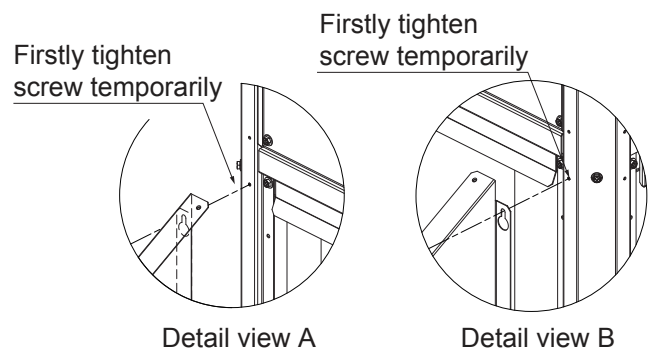


Fig. 2-8-59

8. Supplement


3. Rear Cover Attachment

Attach Rear Cover to the top of both side panels as described in step 2.
 When installing, tighten the second upside screws on both sides temporarily.
 Attach Rear Cover likely to hook to that screw and then tighten with 6 other screws (total 8 screws) securely. See Fig. 2-8-60.

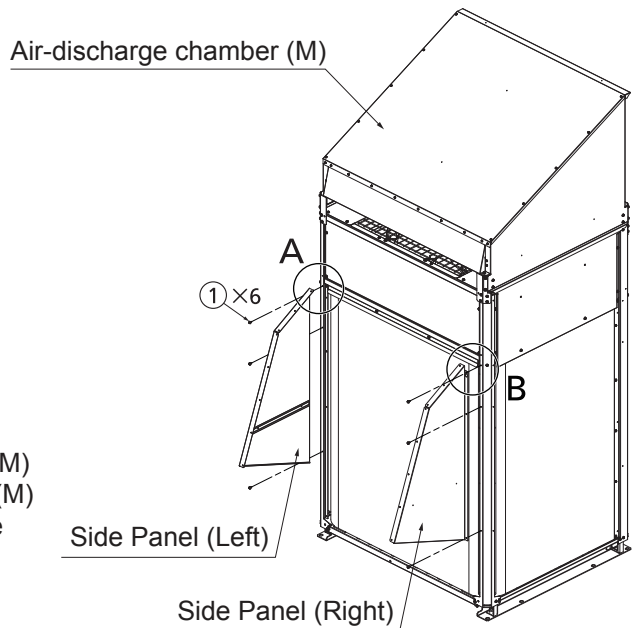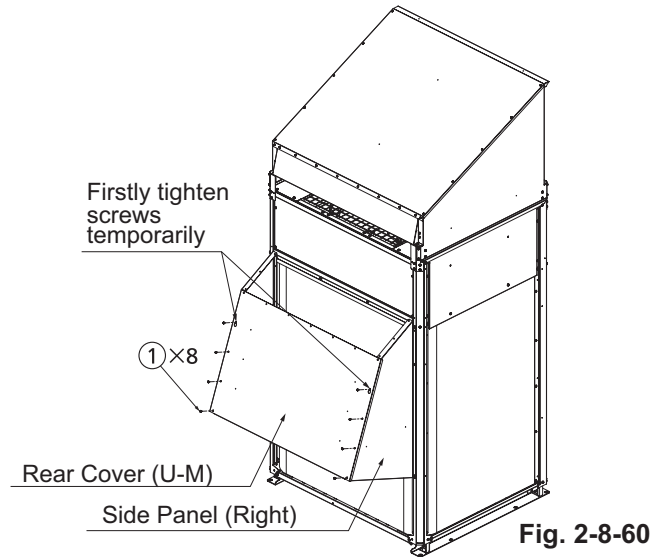

4. Top Cover Attachment

Attach Top Cover to upside Rear Cover as described in step 3 above and tighten with 13 screws securely. See Fig. 2-8-61.

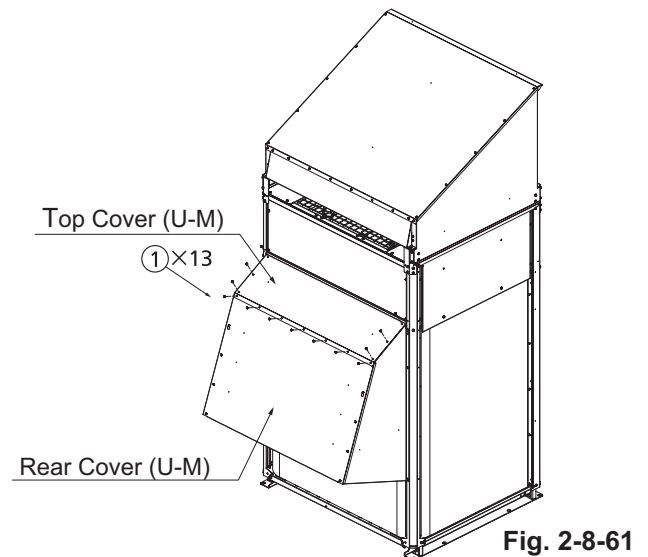

8. Supplement

Reference Diagram for Side Panel (Left) (field supply) : 1107-331

The parts are the same as Figure 2-8-39.

Reference Diagram for Side Panel (Right) (field supply) : 1108-337

The parts are the same as Figure 2-8-42.

Reference Diagram for Top Cover (U-M) (field Supply) : 1106-356

RMK	PART NAME	Q'ty
1	COV TOP 501	1
2	PL MTG 415	1
3	PKG 764	1

unit: mm

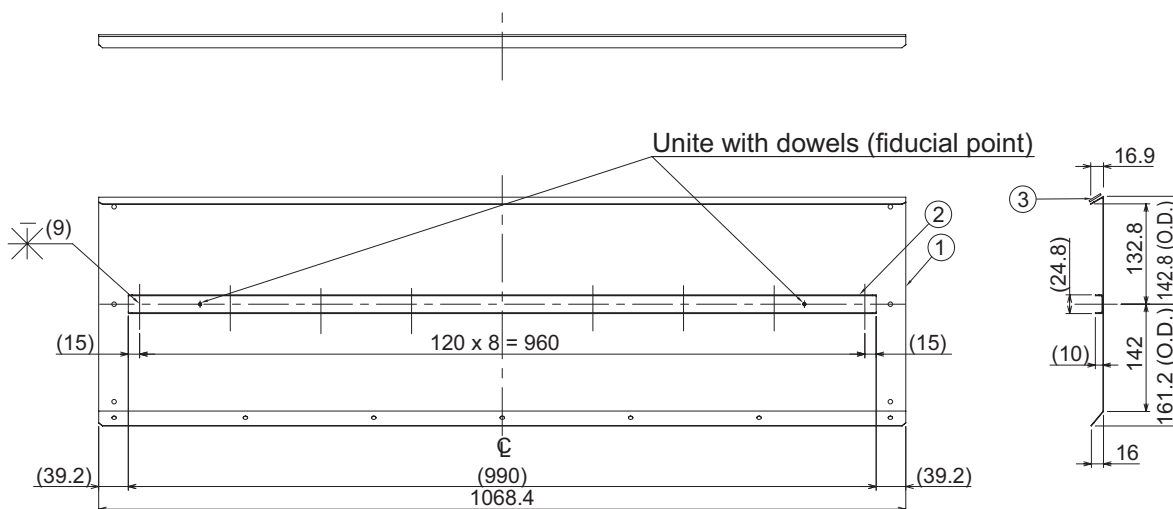


Fig. 2-8-62

Reference Diagram for Top Cover (U-M) (field Supply) : COV TOP 501

unit: mm


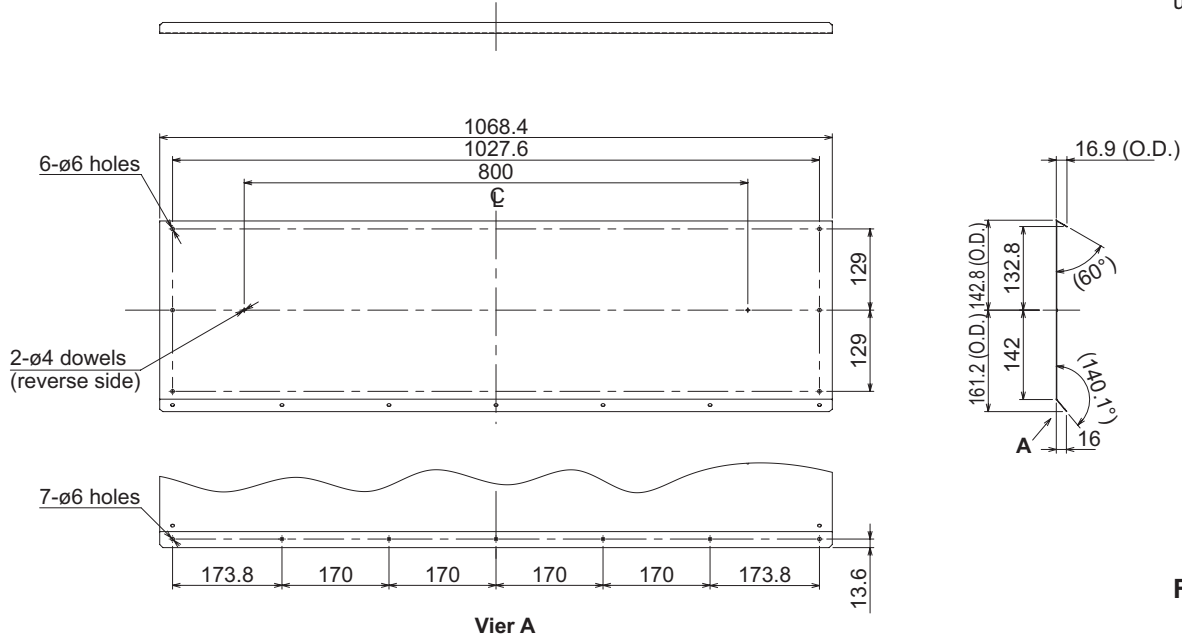


Fig. 2-8-63

8. Supplement

Reference Diagram for Top Cover (U-M) (field supply) : PL MTG 415

unit: mm

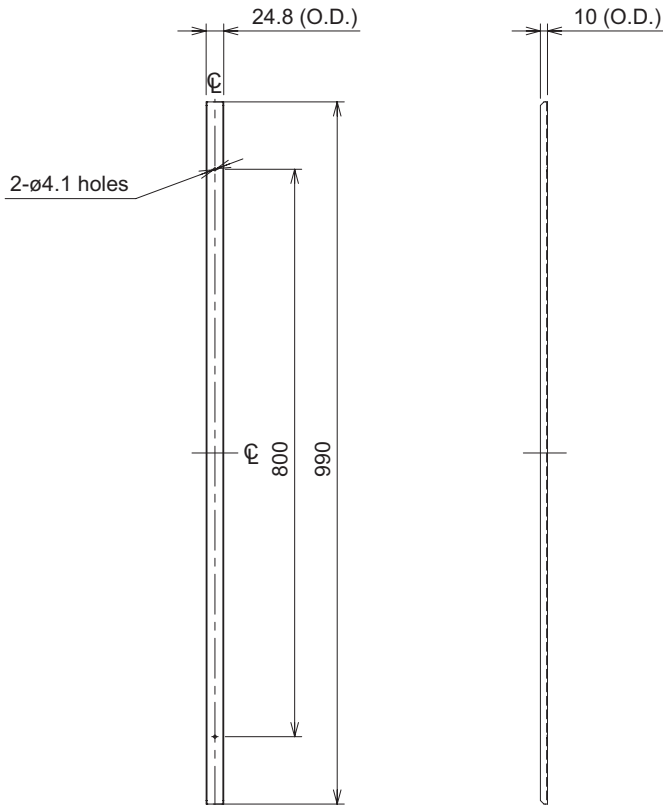

(Similar to opposite side)

Fig. 2-8-64

Reference Diagram for PKG (field supply) : 764
Material : Polyethylene form

unit: mm

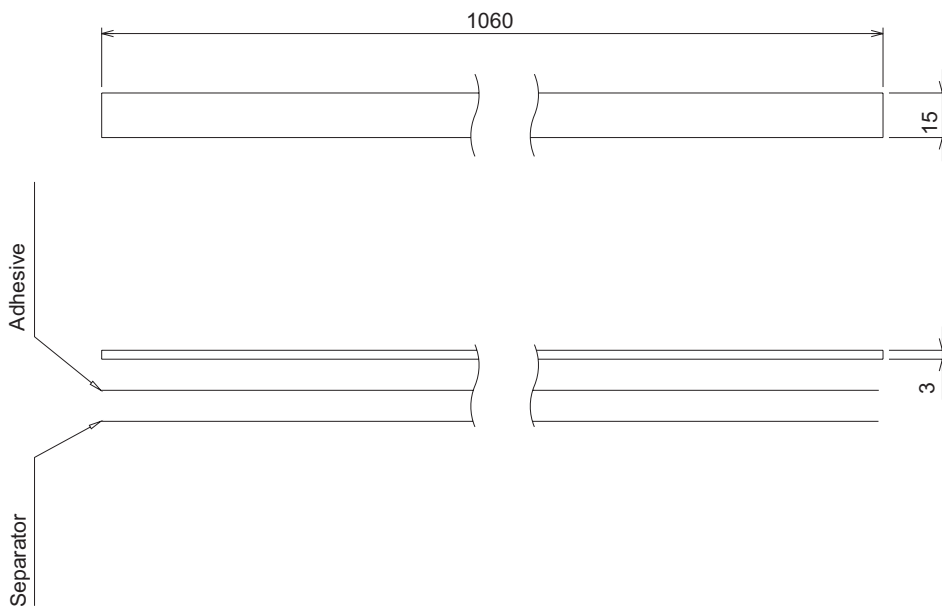


Fig. 2-8-65

8. Supplement

Reference Diagram for Rear Cover (U-M) (field supply) : 1109-326

RMK	PART NAME	Q'ty
1	COV REAR 490	1
2	PL MTG 415*	3

unit: mm

* Same as Fig. 2-8-64

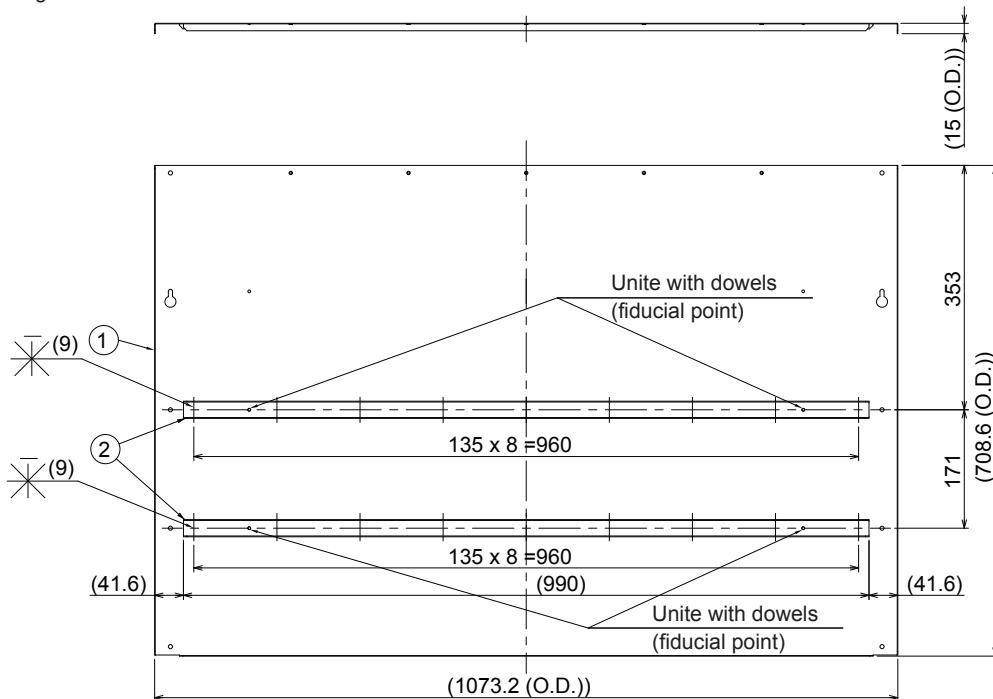


Fig. 2-8-66

Reference Diagram for Rear Cover (U-M) (field supply) : COV REAR 490

unit: mm

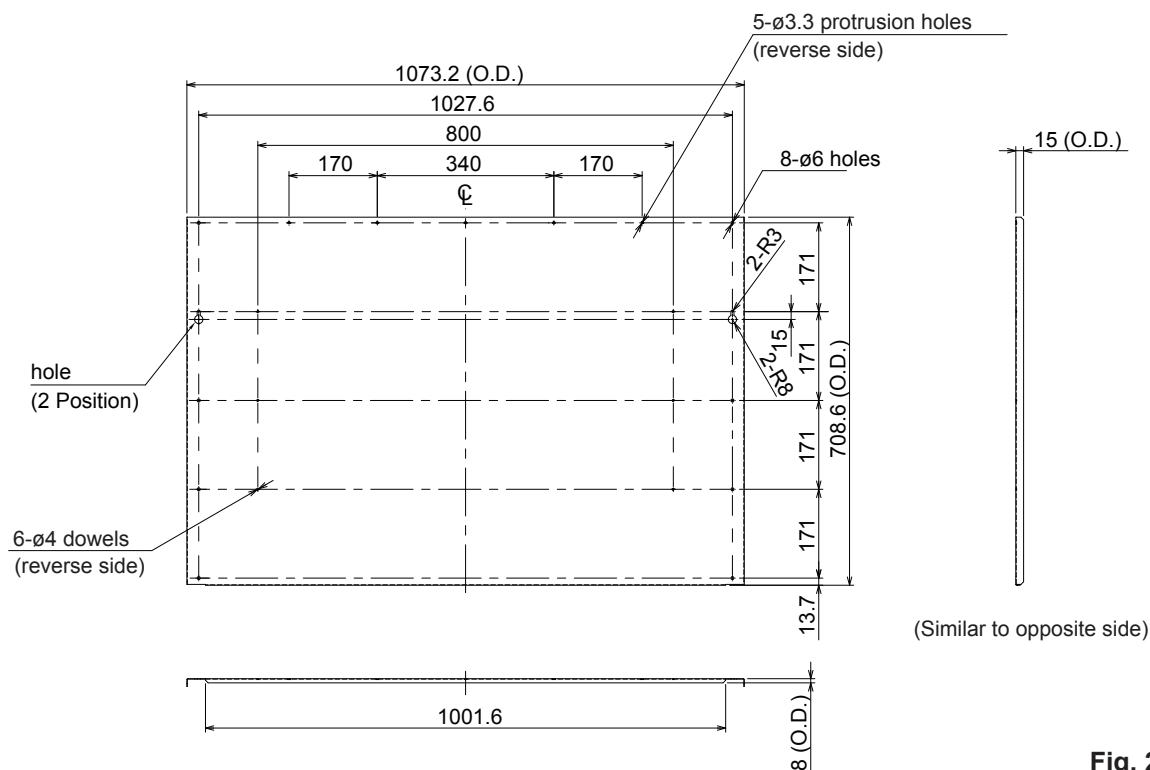


Fig. 2-8-67

Reference Diagram for PKG (field supply) : 764

The parts are the same as Figure 2-8-49.


8. Supplement

7. Snow-Proof Vents for Rear Panel (U-L) (Air Intake duct)(field supply)

Reference Diagram for Snow-Proof Vents (air intake duct)

Model : U-18ME2E8, 20ME2E8





unit: mm

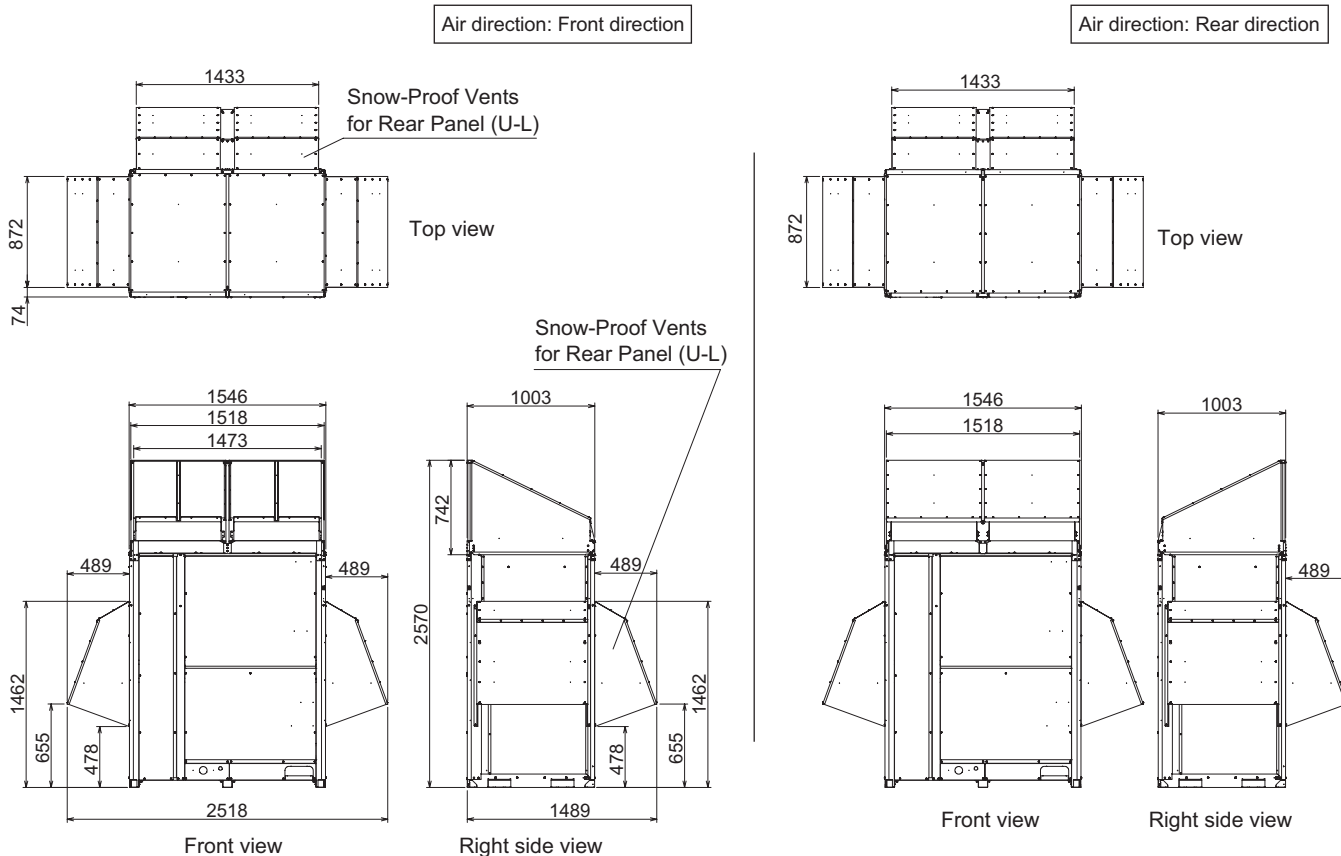

Necessary Assembling Parts

unit: mm


	Parts	Q'ty	Thickness
①	Top Cover (U-S)	2	0.8
②	Rear Cover (U-S)	2	0.8
③	Side Panel (Left)	1	0.8
④	Side Panel (Right)	1	0.8
⑤	PL MTG A	2	1.2
⑥	PL MTG B	1	1.2
⑦	PL MTG C	1	0.8
⑧	PL MTG D	1	0.8
	Tapping Screw (4mm x 12mm)	54	—
	Tap Tight Screw (5mm x 10mm)	10	—

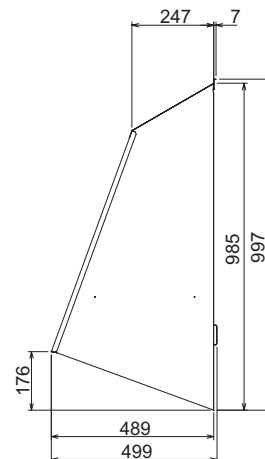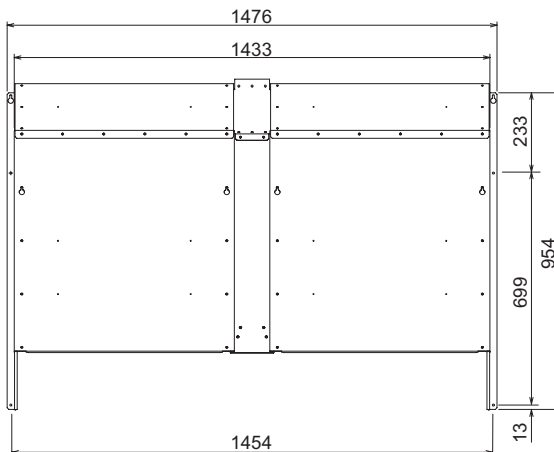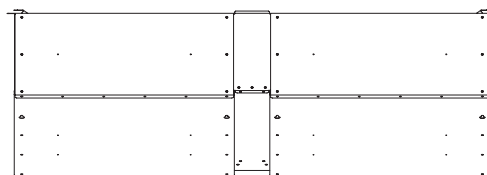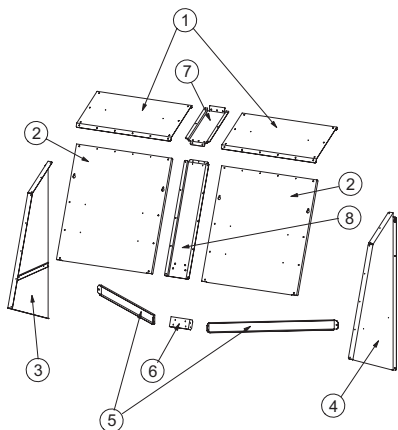

8. Supplement

Installation of Snow-Proof Vents for Rear Panel (U-L) (air intake duct)

- The parts shown below are locally procured parts.
- The number of pieces shown below indicates the quantity per 1 set.
- Choose the parts free from rust or rustless material in order to prevent rust and salt-air damage resistance.
- First install the air-discharge chamber (L) (field supply) and then install this snow-proof vents for Rear Panel (L)(air intake duct).
- When setting up a multiple-unit installation, the optional supplemental Installation Kit for Multiple-Unit (field supply) is required.

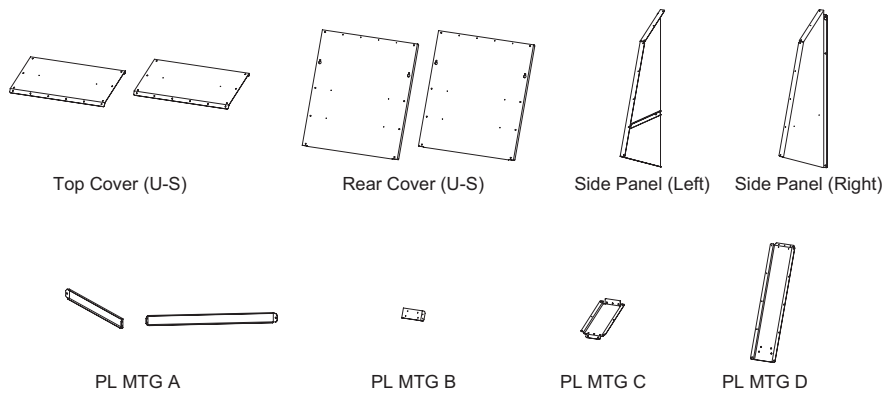

Parts	Q'ty
Top Cover (U-S)	2
Rear Cover (U-S)	2
Side Panel (Left)	1
Side Panel (Right)	1
PL MTG A	2
PL MTG B	1
PL MTG C	1
PL MTG D	1
Tapping Screw (4mm x 12mm)	54
Tap Tight Screw (5mm x 10mm)	10

NOTE

- Install the air-discharge chamber where there is well enough for ventilation even if a strong wind is blowing.

Tightening Screws

- The screws for fixing parts indicate by number as shown in the chart.
- Tighten with Tapping Screw (4mm x 12mm) for the number ①.
- Tighten with Tap Tight Screw (5mm x 10mm) for the number ②.

How to Install Snow-Proof Vents for Rear Panel (U-L) (air intake duct)

To accomplish the parts assembly, follow the steps below.
If the parts assembly is performed in a different way, installation will not successfully complete.

1. How to Install the Snow-Proof Vents for Rear Panel (U-L) (air intake duct) First install the air-discharge chamber (L) (field supply) and follow the steps below. Regarding the air-discharge chamber installation, follow the steps described separately.

2. Assembling of PL MTG D(S)

Attach PL MTG C to PL MTG D with 5 screws (① *1).
Attach PL MTG B to PL MTG D with 4 screws (② *1).

3. PL MTG D(S) Attachment

- Attach PL MTG D(S) to the rear side of the unit with 3 screws. See Fig. 2-8-68. (① *2).
- Attach PL MTG A to the corner post on the side of the unit with 2 screws (② *2).
Tighten PL MTG A and PL MTG D(S) with 4 screws (② *3).

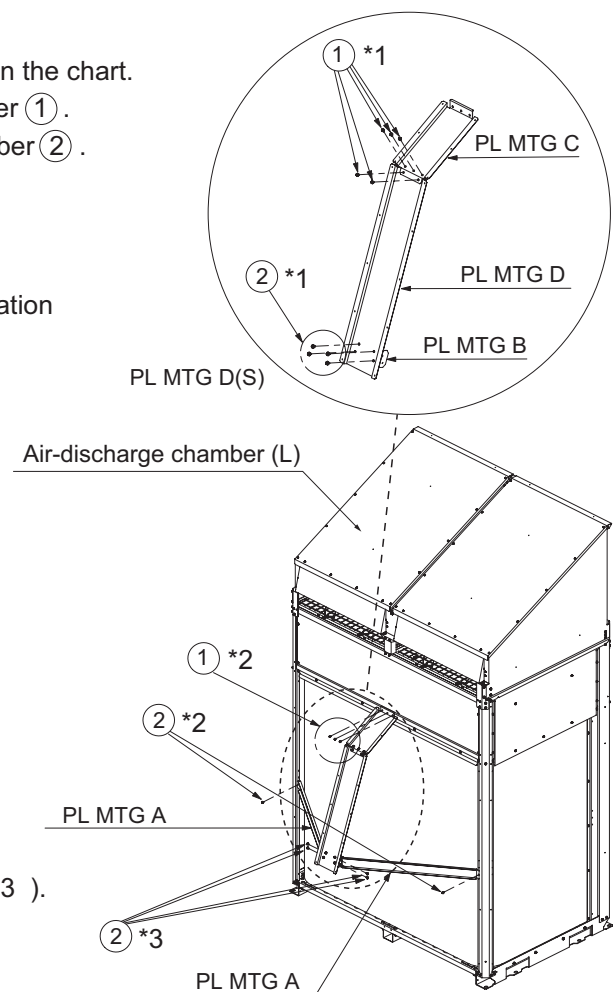


Fig. 2-8-68

8. Supplement

4. Side Panel Attachment (Left & Right)

Attach Side Panel (Left/Right) to the corner post on the side of the unit.
 Attach Side Panel (Left) to the left post and Side Panel (Right) to the right post respectively.
 When installing, tighten the foremost upside screw temporarily. (See detail chart A, B.)
 Attach Side Panel likely to hook to that screw and then tighten each panel with 4 other screws (total 6 screws) securely (① *3).

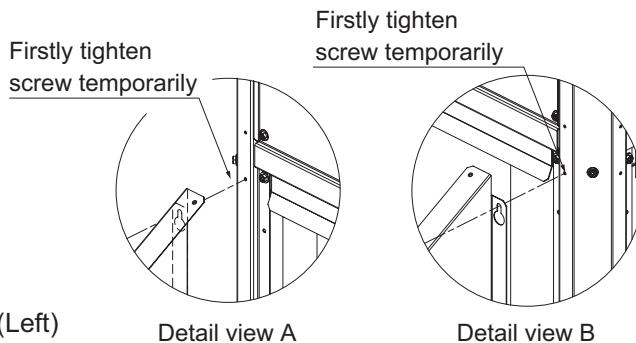
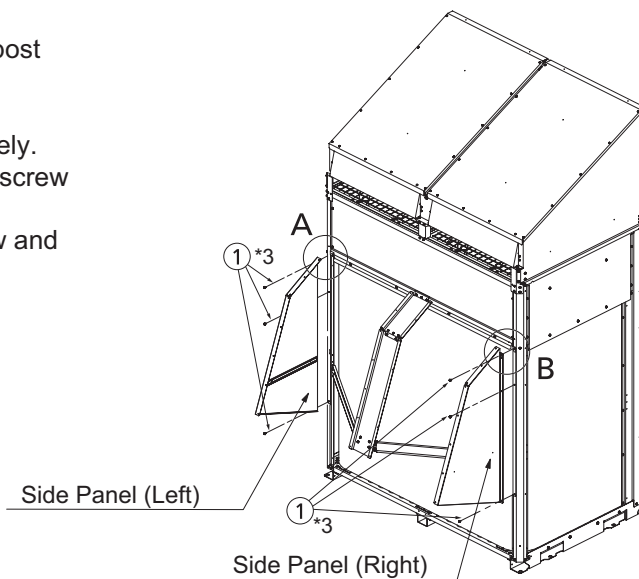


Fig. 2-8-69

5. Rear Cover (U-S) Attachment

Attach Rear Cover (U-S) to the rear of Side Panel (Left) or Side Panel (Right) and PL MTG D(S).
 When installing, tighten the second upside screws on both sides temporarily.
 Attach Rear Cover (U-S) likely to hook to that screw and then tighten with 12 other screws (total 16 screws) securely.
 See Fig. 2-8-70 (① *4).

6. Top Cover (U-S) Attachment

Fix Top Cover (U-S) , Side Panel (Left) or Side Panel (Right) , PL MTG D(S) and upside Rear Cover (U-S).
 Tighten with 24 screws securely. See Fig. 2-8-71 (① *5).

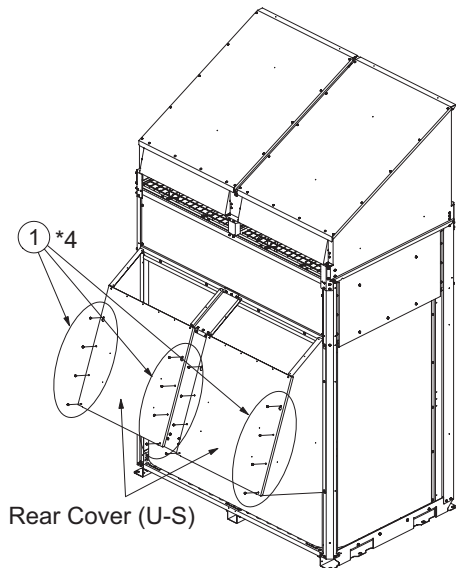


Fig. 2-8-70

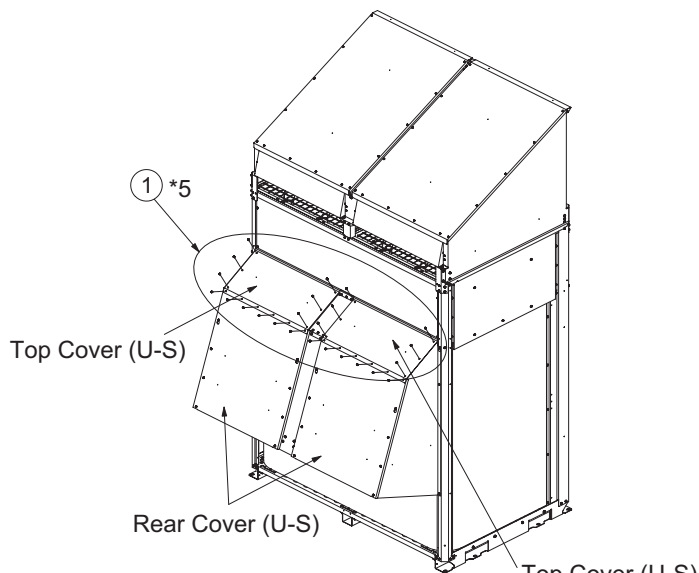


Fig. 2-8-71

8. Supplement

Reference Diagram for Top Cover (U-S) (field supply)

RMK	PART NAME	Q'ty
1	COV TOP 500	1
2	PKG 763	1

The parts are the same as Figure 2-8-53.

Reference Diagram for Rear Cover (U-S) (field supply) : 1109-325

RMK	PART NAME	Q'ty
1	COV REAR 489	1
2	PL MTG 414	2

The parts are the same as Figure 2-8-56.

Reference Diagram for Side Panel (Left) (field supply) : 1107-331

RMK	PART NAME	Q'ty
1	COV SIDE L 779	1
2	PL MTG 359	1

The parts are the same as Figure 2-8-39.

Reference Diagram for Side Panel (Right) (field supply) : 1108-337

RMK	PART NAME	Q'ty
1	COV SIDE R 501	1
2	PL MTG 359	1

The parts are the same as Figure 2-8-42.

Reference Diagram for Top Cover (U-L) (field Supply) : PL MTG A

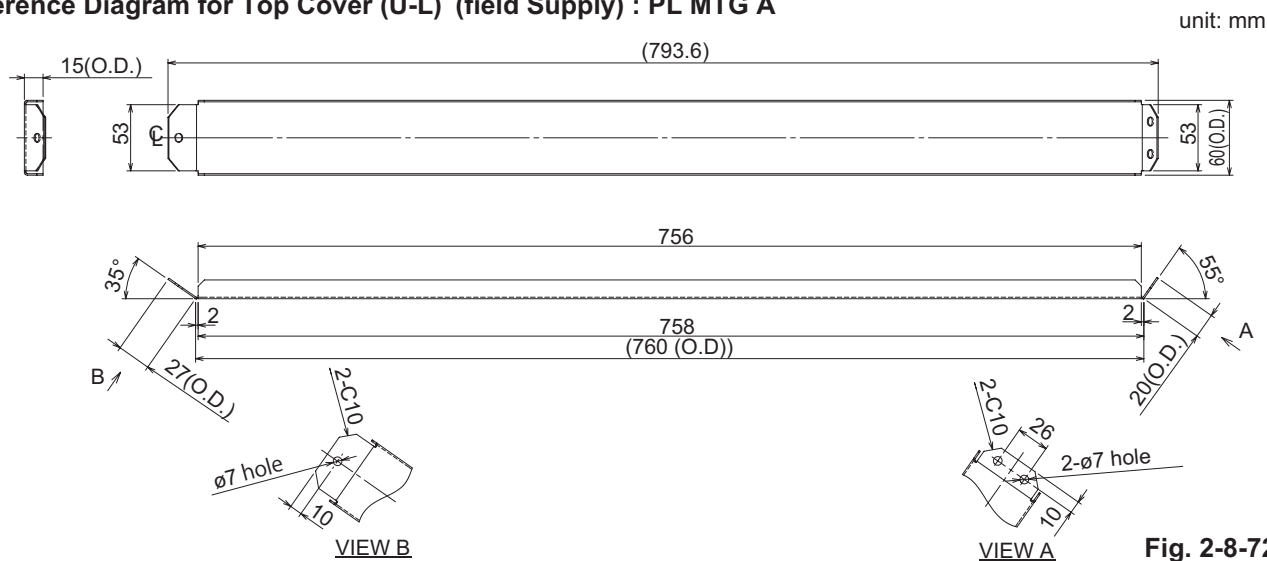


Fig. 2-8-72

Reference Diagram for Bracket (U-L) (field Supply) : PL MTG B

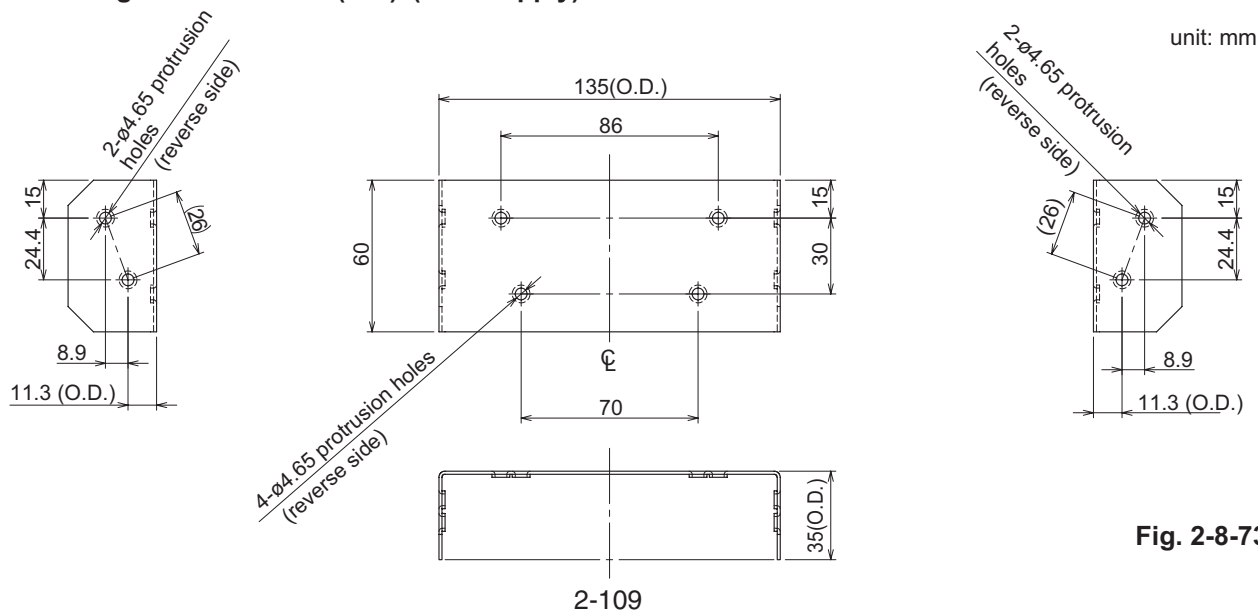


Fig. 2-8-73

8. Supplement

Reference Diagram for Bracket (U-L) (field supply) : PL MTG C

unit: mm

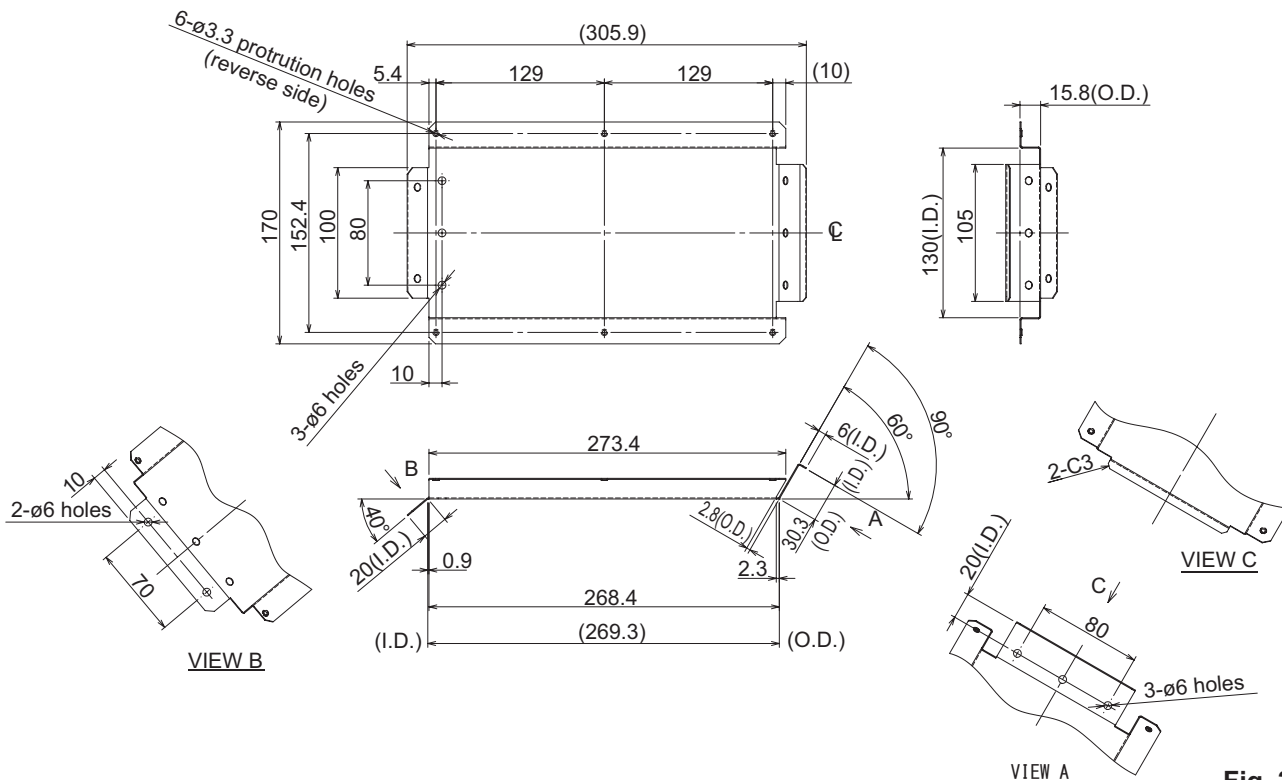


Fig. 2-8-74

Reference Diagram for Bracket (U-L) (field supply) : PL MTG D

unit: mm


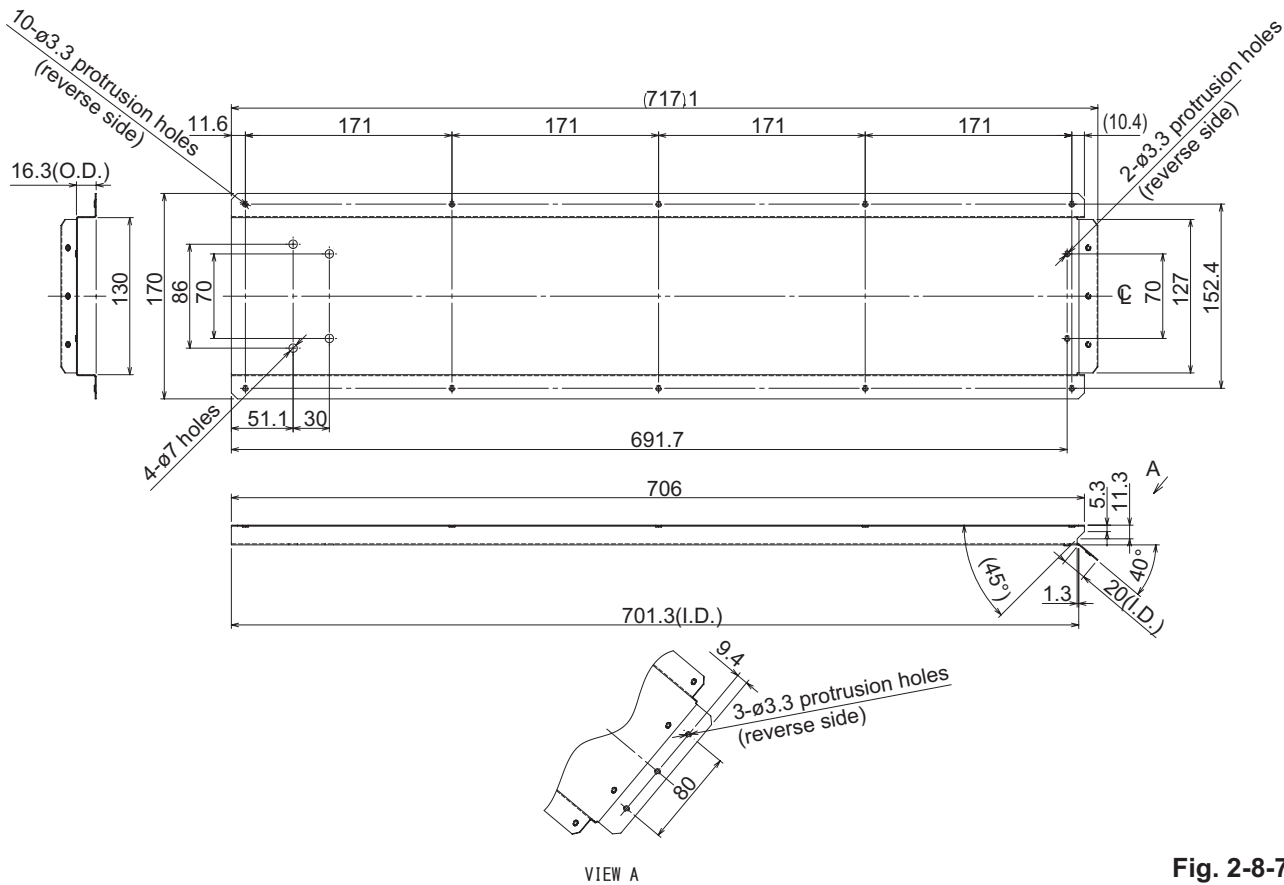


Fig. 2-8-75


8. Supplement

7. Supplemental Installation Kit for Multiple-Unit (field supply)

- This part is the Supplemental Installation Kit for multiple-unit installation.
- In order to attach this part, the unit must have been installed within the range as shown in the below chart.
- The parts shown below are locally procured parts.
- The number of pieces shown below indicates the quantity per 1 set. (Obtain necessary number of pieces.)
- Choose the parts free from rust or rustless material in order to prevent rust and salt-air damage resistance.
- First install the air-discharge chamber (S,M,L) (field supply) and then install the snow-proof vents (Y,U-S,U-M,U-L) (air intake duct (field supply)).

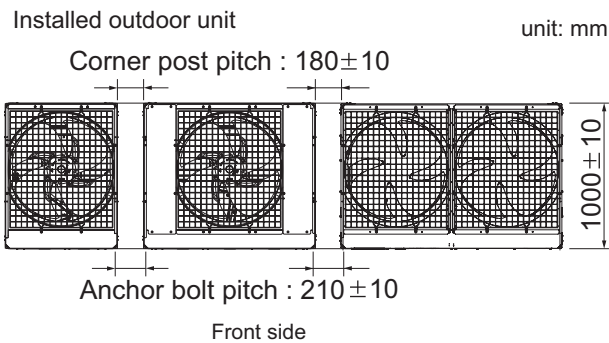

Example : U-8ME2E8

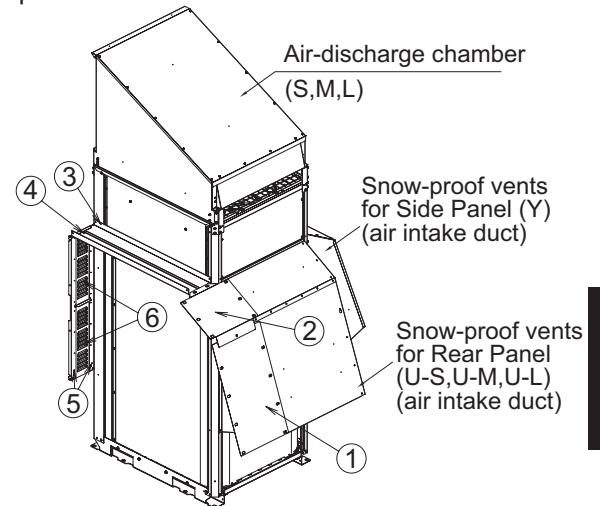

Tightening Screws

- The screws for fixing parts indicate by number as shown in the chart.
- Tighten with Tapping Screw (4mm x 12mm) for the number ①.
- Remove the screw ③ tightened to the snow-proof vents (air intake duct). It is available for reuse.

How to Install Installation Kit for Multiple-Unit


The installation work must be carried out with a partner for safety. To accomplish the parts assembly, follow the steps below. If the parts assembly is performed in a different way, installation will not successfully complete.

1. Topside Panel (Right) Attachment


Attach Topside Panel (Right) to the corner posts (2 locations) at the right side between the units. The installed direction of this part is shown in the chart.

When installing, tighten the screw temporarily to the corner post on the rear of right side unit (position as in the chart) and insert Topside Panel (Right) between the units.

Attach Topside Panel (Right) likely to hook to that screw and tighten with the screws to the corner post of the front side of the unit.

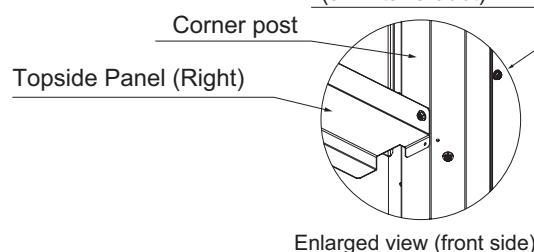

Example : U-12ME2E8

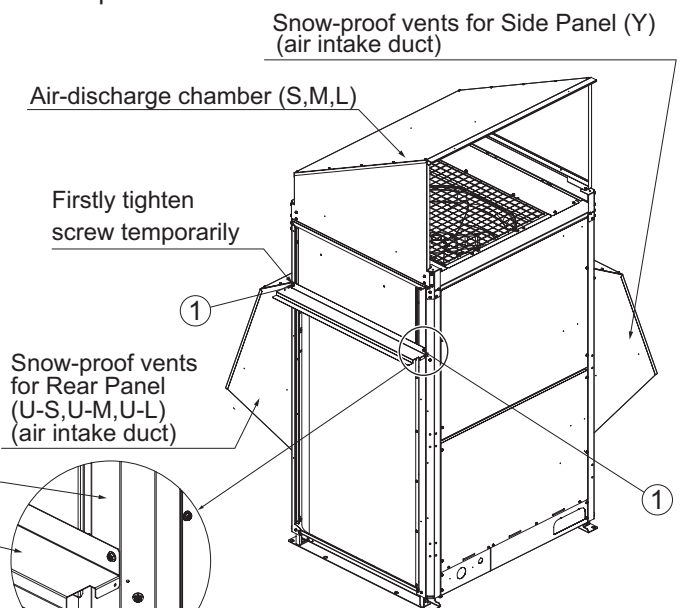

	Parts	Q'ty	Thickness
①	Rear Panel (Lower)	1	0.8
②	Rear Panel (Upper)	1	0.8
③	Topside Panel (Left)	1	0.8
④	Topside Panel (Right)	1	0.8
⑤	Frame	2	0.8
⑥	Front Panel	2	0.8
	Tapping Screw (4mm x 12mm)	33	—
	Washer (Screw for 4mm)	17	—

Fig. 2-8-76

8. Supplement

2. Topside Panel (Left) Attachment

Follow the same procedure as described in step 1 above for attaching Topside Panel (Left).

Attach Topside Panel (Left) to the corner posts (2 locations) at the left side between the units.

The installed direction of this part is shown in the below chart.

When installing, tighten the screw temporarily to corner post on the rear of left side unit (position as in the below chart) and insert Topside Panel (Left) between the units.

Attach Topside Panel (Left) likely to hook to that screw and tighten with the screws to the corner post of the front side of the unit.

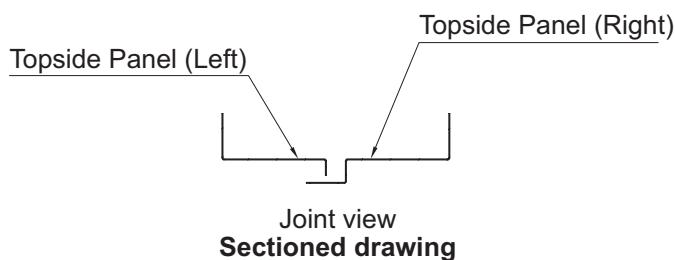
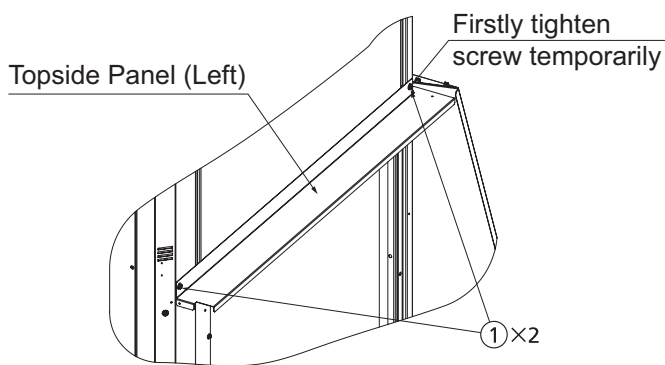


Fig. 2-8-77

3. Frame Attachment

Attach Frame to the left and right units respectively.

The installation position is located at the front side corner post between the units and Topside Panel (Right/Left) as described in steps 1 and 2 above.

Frame installed direction should be located so that the notches at the center of the part can face each other.

Tighten the corner post to the unit with 4 screws respectively.

Tighten Topside Panel (Right/Left) with 1 screw respectively.

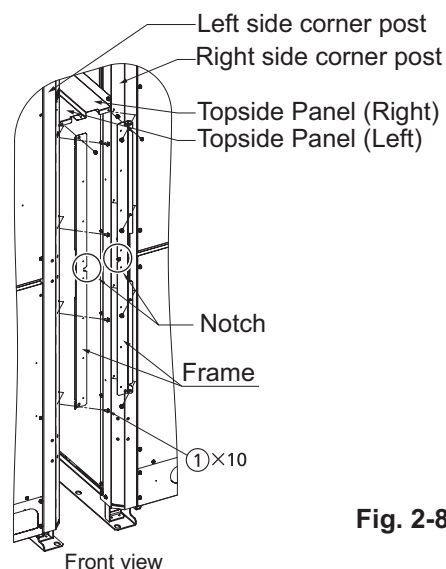


Fig. 2-8-78

4. Front Panel Attachment

Tighten Front Panel to Frame (right/left) with 8 screws respectively as described in step 3 above.

Attach Front Panel vertically.

The installed direction of this part is that the louver inside Front Panel is facing outward and the air inlet/outlet port is facing downward.

Also adjust until Front Panel will be positioned at the center of between the units.

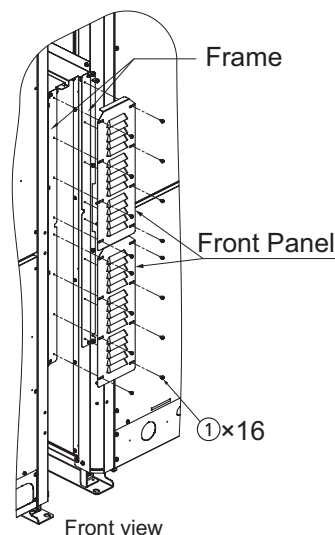


Fig. 2-8-79

8. Supplement

5. Rear Panel (Lower) Attachment

Attach Rear Panel (Lower) to Rear Cover of snow-proof vents (air intake duct) which has already been installed from upside. (See figure 2-8-80.)

Remove 4 screws respectively on the side between the units attached to Rear Cover (left side unit & right side unit) of snow-proof vents (air intake duct).

Attach the washer to the screw once it was removed.

Using the screw with a washer, attach Rear Panel (Lower) between the left and right rear covers of snow-proof vents (air intake duct) and then tighten the rear panel with 8 screws with washers.

6. Rear Panel (Upper) Attachment

Attach Rear Panel (Upper) to Top Cover of snow-proof vents (air intake duct) which has already been installed from upside. (See figure 2-8-80.)

Remove 3 screws respectively on the side between the units attached to Top Cover (left side unit & right side unit) of the snow-proof vents (air intake duct).

Attach the washer to the screw once it was removed.

Using the screw with a washer, attach Rear Panel (Upper) between the left and right Top Cover of snow-proof vents (air intake duct) and tighten rear panel with 6 screws.

Using the screw with a washer, tighten Rear Panel (Upper) with 1 screw respectively to Topside Panel (Right/Left) as described in steps 1 and 2 above.

Also using 1 screw with a washer, tighten Rear Panel (Lower) as described in step 5 above.

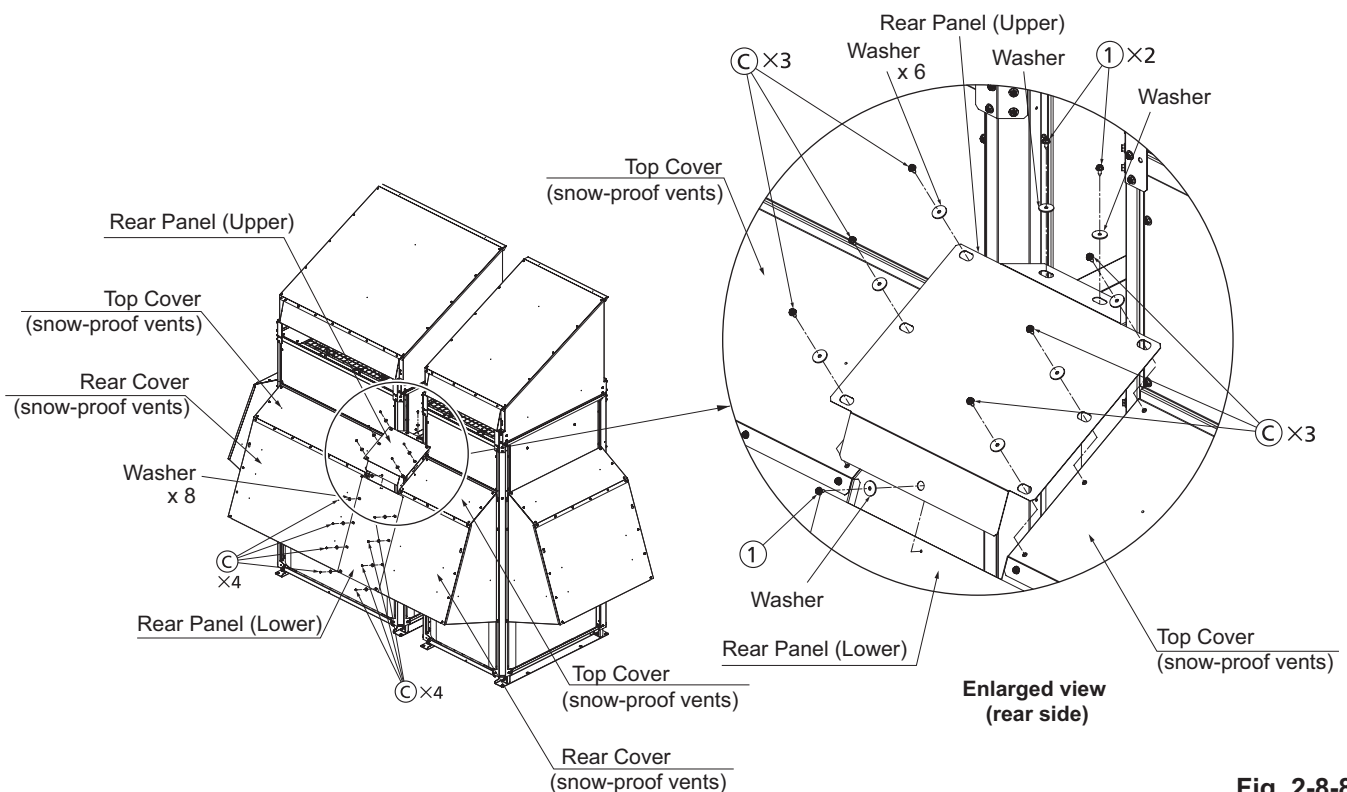


Fig. 2-8-80

8. Supplement

Reference Diagram for Rear Panel (Lower) (field supply) : 2371-004

unit: mm

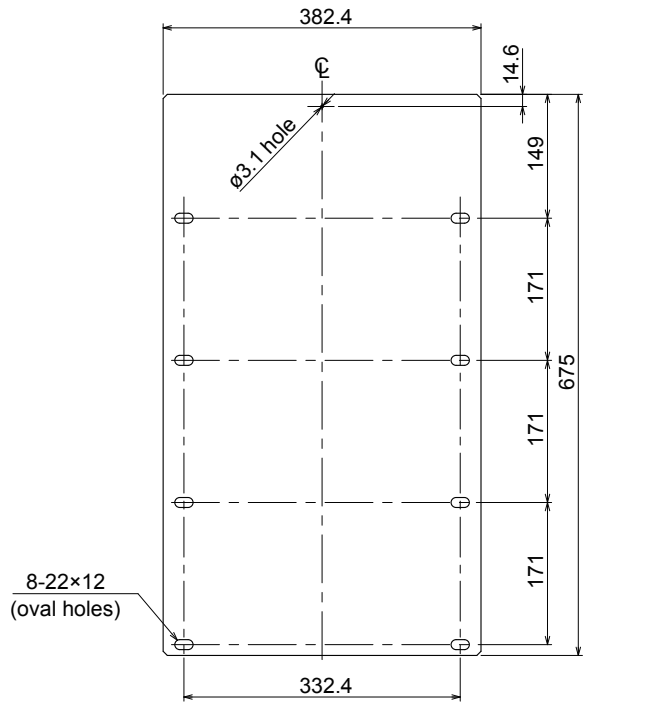


Fig. 2-8-81

Reference Diagram for Rear Panel (Upper) (field supply) : 2371-005

unit: mm

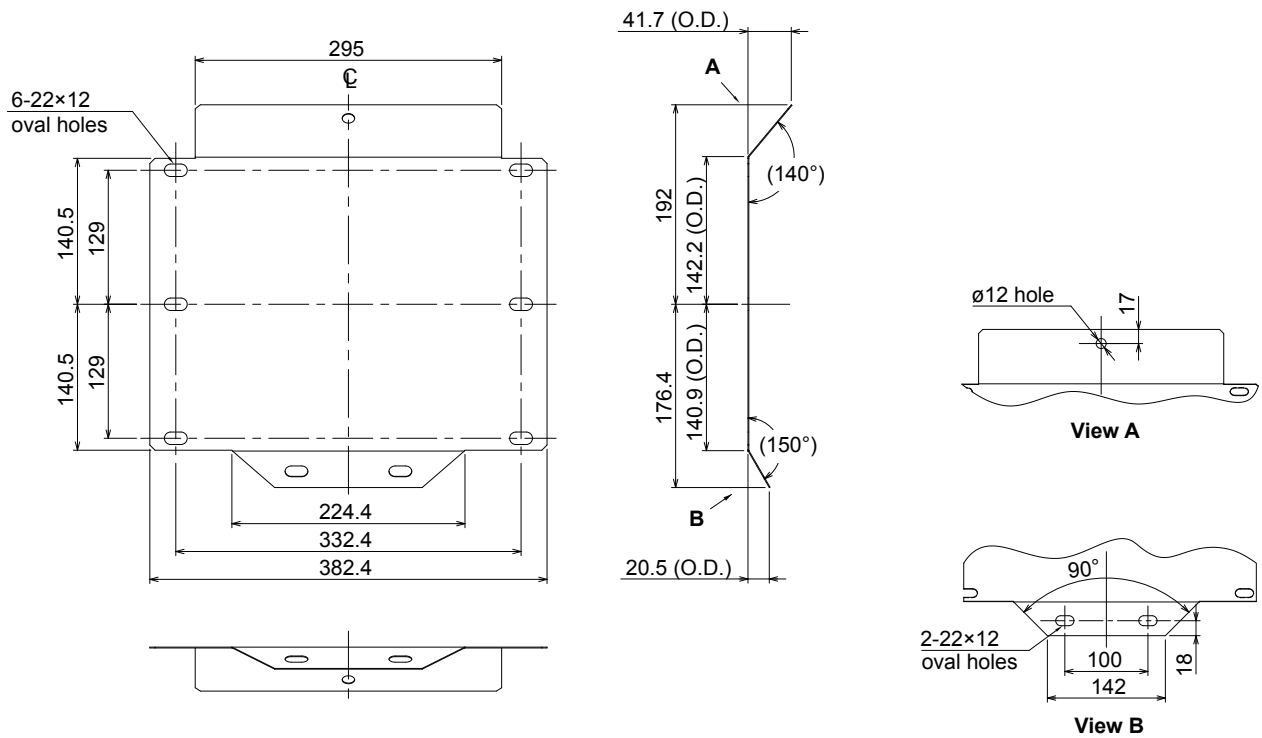


Fig. 2-8-82

8. Supplement

Reference Diagram for Topside Panel (Right) (field supply) : 1136-416

unit: mm

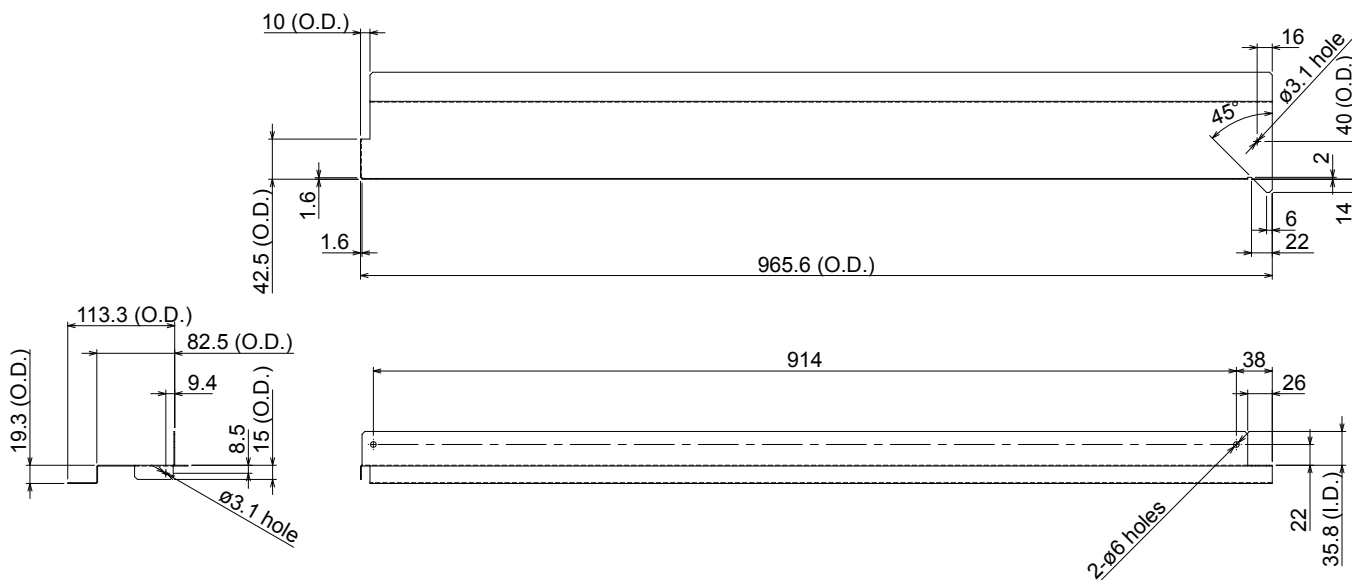


Fig. 2-8-83

Reference Diagram for Topside Panel (Left) (field supply) : 1136-417

unit: mm

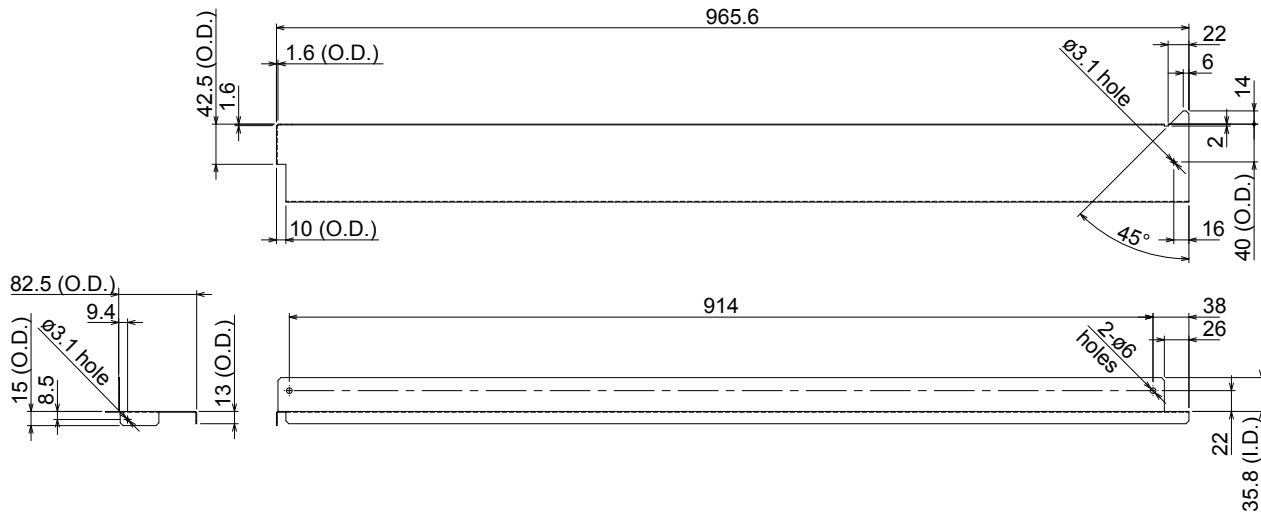


Fig. 2-8-84

Contents

3. Control of 2WAY SYSTEM

1. Main Operating Functions	3-4
1. Room Temperature Control	3-4
2. Automatic Control for Heating and Cooling	3-5
2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER	3-6
1. Important Safety Instructions	3-6
2. Optional Controller (Remote Controller)	3-7
3. Wiring for the Receiver	3-18
■ Common to All Models	3-18
■ CZ-RWSU2N	3-20
■ CZ-RWSU3	3-22
■ CZ-RWSC3	3-24
■ CZ-RWST3N	3-28
■ CZ-RWST3N	3-30
■ CZ-RWSD2	3-33
■ When Using Wireless Remote Controller Instead of Wired Remote Controller	3-35
■ Common to All Models	3-36
■ Test Operation	3-38
3. Timer Remote Controller	3-39
3-1. Timer Remote Controller / CZ-RTC4	3-39
■ Safety Precautions	3-39
■ Specifications	3-40
■ Part Names	3-41
■ Basic Operations	3-43
■ Supplied accessories / Dimensions	3-45
■ Safety Precautions	3-46
■ Installation Precautions	3-47
■ Mounting	3-48
■ Setting / Test operation / Specifications	3-50
3-2. Timer Remote Controller / CZ-RTC5A	3-51
■ Safety Precautions	3-51
■ Specifications	3-52
■ Part Names	3-53
■ Basic Operations	3-56
■ Part Names	3-58
■ Safety Precautions	3-59
■ CONTENTS / Specifications	3-60
■ Installation Precautions	3-61
■ Mounting	3-63
■ Setting	3-65
■ Confirming Information	3-69
■ Test Operation	3-70
4. Simplified Remote Controller	3-71
Simplified Remote Controller / CZ-RE2C2	3-71
■ Important Safety Instructions	3-71
■ Names and Operations	3-72
■ Outing Function	3-75
■ Basic Installation	3-75
5. System Controller	3-79
System Controller / CZ-64ESMC2	3-79
■ Functions of Buttons	3-79
■ Display	3-82
■ How to Start Group Operation	3-83
■ How to Start Collective Operation	3-84
■ How to Install the System Controller	3-85
■ Overview of the System Controller	3-86
■ Installation Procedure	3-87
■ Layout of Electrical Terminals	3-88
■ Basic Wiring Diagram	3-89
■ Address Switch Setting	3-90
■ Mode Setting	3-93
■ How to Perform Zone Registration	3-94

Contents

■ Zone Registration Table	3-95
■ How to Check Overlapping of Central Address Nos.	3-98
■ Memory Back-Up Switch	3-98
■ Test Run	3-98
■ System Examples	3-99
6. Schedule Timer.....	3-101
Schedule Timer / CZ-ESWC2	3-101
■ Operation Buttons	3-101
■ Display	3-102
■ Using the Schedule Timer	3-102
■ Setting the Present Time.....	3-103
■ Setting Today's Day of the Week	3-104
■ Setting Up Programmed Operations	3-105
■ Setting Errors	3-107
■ How to Check Program Times	3-108
■ How to Copy Program Times	3-109
■ How to Copy Group Programs	3-111
■ How to Set Holidays in a Scheduled Week of Operation	3-113
■ How to Clear Programs	3-115
■ Schedule Timer and Air Conditioner Operation.....	3-116
■ Power Outages	3-117
■ Troubleshooting.....	3-118
■ Accessories for Schedule Timer	3-119
■ Installing the Schedule Timer	3-119
■ Installation of Connected Schedule Timers	3-120
■ Wiring the Schedule Timer	3-120
■ About the Setting Switches	3-122
■ Creating Timer Groups	3-123
■ Memory Back Up Switch	3-124
■ Checking the Central Control Addresses and Operating the Units that are Controlled by the Schedule Timer.....	3-124
■ Explanation to Customers	3-124
■ Installation Work Plan	3-125
7. ON/OFF Controller (CZ-ANC2)	3-126
1. How to Use the ON/OFF Controller.....	3-126
■ Functions of buttons	3-126
■ How to use the nameplate	3-127
2. Installation Instructions	3-128
■ General	3-128
■ Installation site selection	3-128
■ How to install the ON/OFF controller	3-128
■ Dip switch setting	3-133
■ Zone address setting	3-135
■ How to perform zone registration.....	3-136
■ How to check overlapping of central address no.	3-141
■ System examples	3-142
8. Intelligent Controller (CZ-256ESMC2)	3-144
1. Operation Manual	3-144
2. Access and Operation by Web Browser	3-195
9. Communication Adaptor (CZ-CFUNC2)	3-205
Instructions for the Electrical Installer.....	3-205
1. Installing	3-205
2. Wiring	3-206
3. Precautions for the Communication Adaptor control wire	3-207
4. Setting the Communication Adaptor board	3-208
5. Connecting to external equipment	3-211
6. Outer dimensions	3-211
7. Specifications	3-211
Appendix A. Connecting to an Intelligent Controller	3-212

Contents

10. Remote Sensor	3-213
Remote Sensor / CZ-CSRC2	3-213
■ Parts Supplied with Remote Sensor	3-213
■ Remote Sensor Installation Guidelines	3-213
■ How to Install the Remote Sensor.....	3-214
■ How to Wire the Remote Sensor.....	3-215
■ Important Information When Using Together with Remote Controller Switch.....	3-215
11. LonWorks Interface (CZ-CLNC2)	3-216
1. LonWorks Interface Overview	3-217
2. Procedures for Installation (Electrical Work) of LonWorks Interface	3-219
3. Assigning Central Control Addresses	3-223
4. LonWorks Interface Test Run	3-224
5. Checking the LonWorks Interface Version	3-225
6. List of LonWorks Network Variables.....	3-226
7. Details of LonWorks Network Variables	3-227
8. Locations Where Neuron ID is Applied	3-230
12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)	3-231
1. Installing the Seri-Para I/O Unit for outdoor unit	3-232
2. Wiring for the Seri-Para I/O Unit for outdoor unit	3-232
3. Setting Switches.....	3-241
4. Detailed Explanation of Address Setting SW (S02)	3-244
5. Test Run	3-244
6. External Dimensions	3-245
7. Product Specifications	3-245
13. Seri-para I/O Unit for each indoor unit (CZ-CAPBC2)	3-246
14. Interface Adaptor (CZ-CAPC2)	3-254
15. Web Interface (CZ-CWEBC2)	3-261
1. Important Safety Instructions	3-264
2. Features of the System	3-268
3. System Configuration	3-269
4. Names and Functions of Parts	3-270
5. Preparations and Login	3-273
6. Status / Control	3-275
7. Maintenance	3-282
8. Initial Settings	3-285
9. Auxiliary Settings	3-296
10. Supplementary Information	3-306
11. Troubleshooting	3-309
12. Care	3-311
13. Specifications	3-312
Installation (Electric) and Service Instructions	3-313
16. Intelligent Management System	3-317
1. Basic Software (CZ-CSWKC2)	3-317
2. Distribution Ratio Software (CZ-CSWAC2).....	3-368
3. Web Software (CZ-CSWWC2)	3-398
4. Layout Display Software (CZ-CSWGC2)	3-431
5. BACnet™ Software (CZ-CSWBC2)	3-454
17. RAC Interface Adaptor (CZ-CAPRA1)	3-463
18. Intelligent Controller (CZ-256ESMC3)	3-470
1. Installation Instructions	3-470
2. Quick Reference	3-473
19. System Controller (CZ-64ESMC3)	3-491
1. Installation Instructions	3-491
2. Quick Reference	3-505
20. Remote Sensor (CZ-CSRC3)	3-511
1. Installation Instructions	3-511
21. Cloud adaptor (CZ-CFUSCC1)	3-515
1. Installation Instructions	3-515

1. Main Operating Functions

1. Room Temperature Control

The thermostat is turned ON/OFF according to ΔT as shown below.


$\Delta T = \text{Room temperature} - \text{Set temperature}$	
When remote controller sensor is used	Room temperature = Temperature detected by the remote controller sensor
When body sensor is used	Room temperature = Temperature detected by the body sensor - Intake shift temperature*

* Intake shift temperature (enabled only during heating)

During heating, a difference in temperature occurs between the top and bottom of a room. This value is set in consideration for the difference between the temperature detected by the body sensor and the temperature at the bottom of the room.

<Value set for intake shift temperature at time of shipment>: 4°C

Note: The shift temperature can be selected in the range of 0 – 10°C, by using the remote controller simplified setting mode.

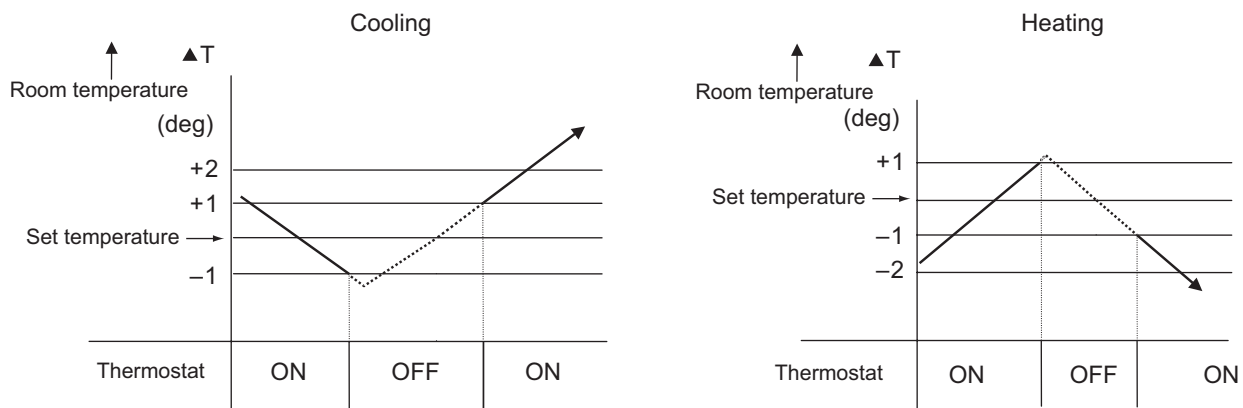

3

- (1) After the thermostat turns ON, it will not turn OFF again as a result of ΔT for 5 minutes.
- (2) After the thermostat turns OFF, it will not turn ON again for 3 minutes. (It also will not turn ON for 3 minutes after the power is switched ON.)
- (3) The compressor turns OFF if the mode is changed cooling → heating (or heating → cooling) while the compressor is ON.
- (4) If "test run" mode is selected, the thermostat will not turn OFF as a result of ΔT for 60 minutes. (The thermostat is forced ON.)

1. Main Operating Functions

2. Automatic Control for Heating and Cooling

Automatic Heating/Cooling Control

- This function is only valid as long as one indoor unit is installed within one refrigerant system or all indoor units are controlled within a group control.
- When operating in a group control, the sub-indoor units become the same operation mode of the main unit.
- As for the indoor units in a group control, install them in the same air conditioning circumstances.
- Use the temperature sensor which is built-in sensor of the indoor unit.

(1) When operation starts, heating or cooling is selected according to the set temperature and the room temperature.

- Room temperature \geq Set temperature + 1 \rightarrow Cooling
- Set temperature - 1 < Room temperature \leq Set temperature + 1 \rightarrow Monitoring mode (*1)
- Room temperature < Set temperature - 1 \rightarrow Heating

*1: If the difference between the room temperature and set temperature is small when operation starts, the cooling thermostat remains in standby status (OFF) until the temperature difference increases. When the temperature difference increases, either cooling operation or heating operation is selected. This standby status is known as "monitoring mode."

(2) After operation starts in the selected operating mode, the set temperature is automatically shifted by +2°C (cooling operation) or -2°C (heating operation).

Example: Temperature set on the remote controller is 20°C.

	Selected operating mode	Shifted set temp.	Remote controller display
1	Cooling	22°C	20°C
2	Heating	18°C	20°C

(3) Operating mode changes (heating \rightarrow cooling, cooling \rightarrow heating) which occur during operation as a result of temperature changes are handled as shown below.

- Heating \rightarrow cooling: Room temperature \rightarrow Shifted set temperature (set temperature + 2°C) + 0.5°C
- Cooling \rightarrow heating: Room temperature \rightarrow Shifted set temperature (set temperature - 2°C) - 1.0°C


Example: Temperature set on the remote controller is 20°C.

	Operating mode change	Shifted set temp.
1	Heating \rightarrow Cooling	$20 + 2 + 0.5 = 22.5^\circ\text{C}$ or higher (*2)
2	Cooling \rightarrow Heating	$20 - 2 - 1.0 = 17^\circ\text{C}$ or lower

*2: During heating operation when the body sensor is used, a temperature shift is applied to the intake temperature detected by the sensor, in consideration of the difference in temperature at the top and bottom of the room. (Refer to the "Room Temperature Control" item.) If this intake shift temperature is 4°C, then the heating \rightarrow cooling change occurs when the temperature detected by the body sensor is 26.5°C or higher.

(4) Cooling (heating) operation does not change if the room temperature changes from area C \rightarrow A (or A \rightarrow C) within 10 minutes after the compressor turns OFF. (Monitoring mode is excepted.)

(5) When the heating/cooling change occurs, the 4-way valve switches approximately 30 to 50 seconds after the compressor turns ON.

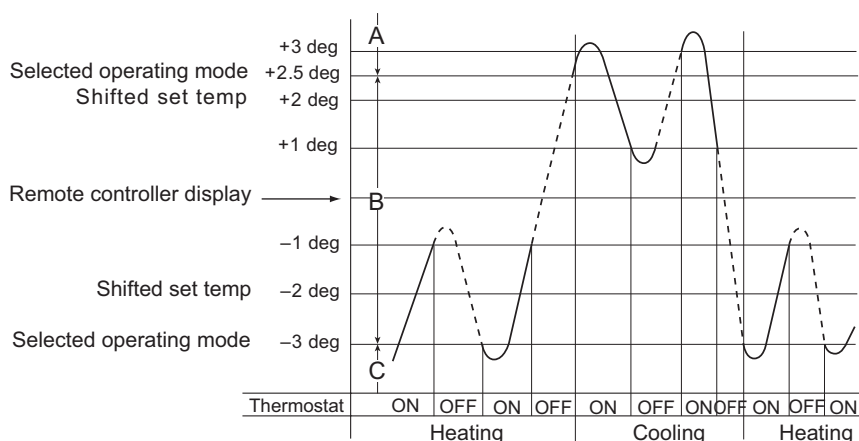

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

1. Important Safety Instructions

Before using the system, be sure to read these “Important Safety Instructions”.
After reading this manual, save it in a convenient place.

WARNING

Installation Precautions

- Do not install this equipment yourself.
Installation should always be performed by your distributor or a professional service provider.
Electric shock or fire may result if an inexperienced person performs any installation or wiring procedures incorrectly.
- Use only specified air conditioners.
Always use only air conditions specified by the distributor.

Precautions for Use

- Do not touch switches with wet hands.
Electric shock and damage to the system can result.
- Protect the remote controller from water because it may cause damage to the system.
- Stop the system and turn the power off if you notice unusual smells or other irregularities.
Continuing operation when the system is out of order can result in electric shock, fire, and damage to the system.
Contact your distributor.
- Do not swallow the battery.

Moving and Repair Precautions

- Do not repair.
Never repair the system by yourself.
- Contact your distributor before moving the system.
Contact your distributor or a professional service provider about moving and reinstalling the system.
Electric shock or fire may result if an inexperienced person performs any installation procedures incorrectly.

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER














2. Optional Controller (Remote Controller)


Wireless Remote Controller CZ-RWSU2N / CZ-RWSU3 / CZ-RWSC3 / CZ-RWSK2 / CZ-RWST3N / CZ-RWSL2N / CZ-RWSD2


One remote controller can control a group of up to eight indoor units. (See page 3-12)

2-1. Names and Operations

REMOTE CONTROLLER

1. Operation Display	Displays the operation status. (The figure shows all the statuses.) • The auto-flap display may be different, depending on the installed unit. (See page 3-12)	14. Address button 	
2. Start/Stop button 	Pressing this button once starts and pressing again stops the operation.	15. Sensor button	Use this to activate the temperature sensor on the remote controller instead of the one on the indoor unit. The temperature sensor on the indoor unit is selected before shipment. At this time  is shown on the display.
3. Fan speed button 		16. Clock button 	Use this to set the clock.
4. Swing/Wind Direction button 			
5. Timer setting button 	Use for operating with a timer.		
6. Reset button	Use this button after changing the batteries.		
7. Cover	Press at the top center and then slide down.		
8. Transmitter			
9. Remote control sensor	Detects the temperature at the remote controller when detection has been switched to the remote controller by the sensor button.		
10. Temperature setting buttons	 raises the temperature setting 1 °C at a time.  lowers the temperature setting 1 °C at a time.		
11. Filter button 	CZ-RWSC3 Press to turn off the filter lamp on the receiver.		
12. Mode Select button 	Press to switch the operation mode.		
13. Ventilation button 	Use this when connected to an aftermarket fan. Pressing this button starts and stops the fan. When the air conditioner is started or stopped, the fan starts or stops at the same time. ( appears on the display of the remote controller when the fan is operating.)		

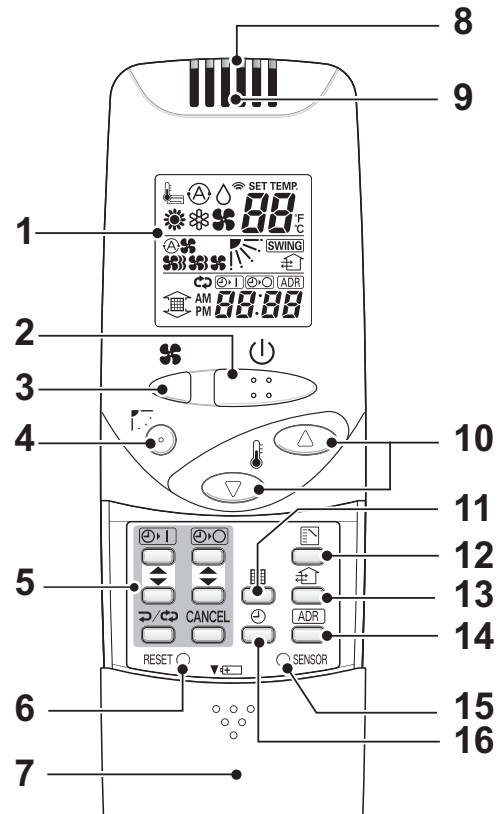


From this page, the names of remote controller's buttons will be indicated with the above illustrations. E.g.: Start/Stop button → 

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER


RECEIVER

1. Receiver	Receives the signal sent from the remote controller.
2. Emergency operation button	Display lamps When an error occurs, one of the lamps flashes. When a display lamp is blinking, refer to " Before Requesting Service " .
3. Operating lamp	This lamp is lit when the unit is operating.
4. Timer lamp	This lamp is lit when the timer is set.
5. Standby lamp	When the heater is working, the lamp lights at the following times. When the thermostat has operated during defrosting at the time of the startup. The lamp flashes when an error occurs.
6. Filter lamp	This lamp is for notifying you when the filter needs to be cleaned.
7. Address switch	See " 2-11. Addresses " .


CZ-RWSU3

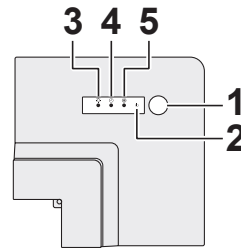


CZ-RWST3N

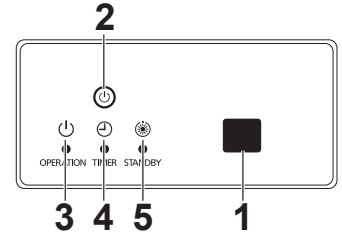


Indoor Unit : Type Y2

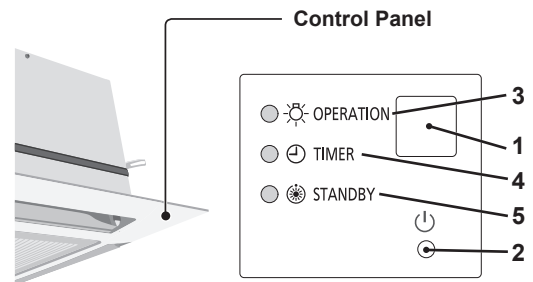


Indoor Unit : Type K2

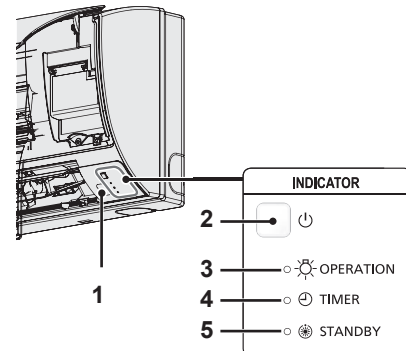


CZ-RWSU2N

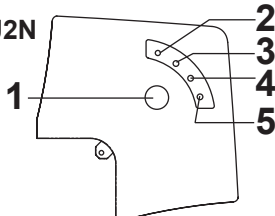


CZ-RWSD2

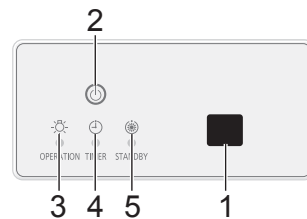


Indoor Unit : Type K1

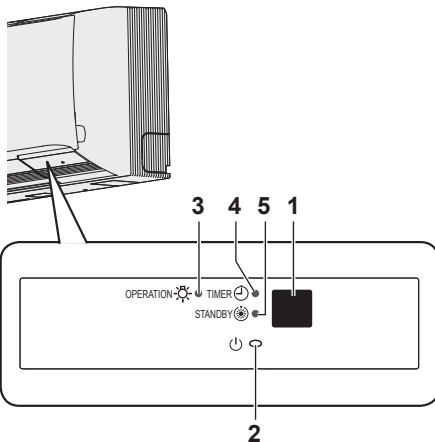

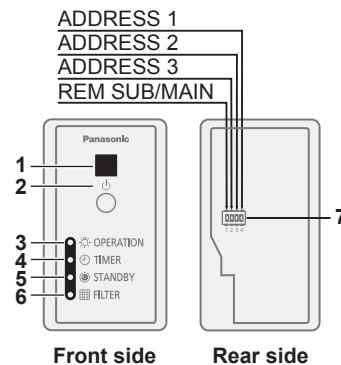


CZ-RWSC3

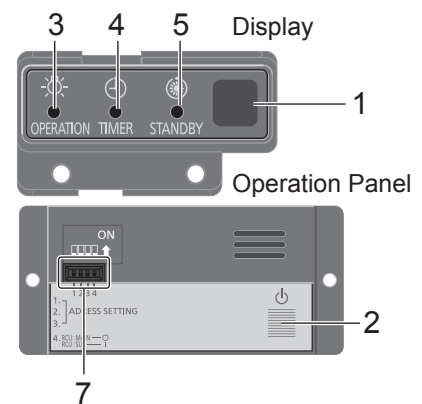

CZ-RWSL2N



NOTE

- If a heat pump (2WAY) type is being used, it will beep twice and the operating lamp will light up on the display; if the timer and standby lamps blink alternately, a conflict between the heating and cooling exists, so the unit cannot operate in the desired mode. (On models that do not have an Auto function, even if Auto is selected, it works in the same way.)
- When the local operation is disabled by centralized control or similar cause, and if the Start/Stop , Mode  or Temperature setting button  is pressed, the unit will beep five times and the change will not be made.


2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

2-2. Installing Batteries

1. Remove the cover.
2. Insert two LR03 size batteries.
Put the batteries in with the polarity [+/-] as shown in the figure.
3. Gently insert one end of an unfolded paper clip (or a similar object that can fit) into the Reset hole and press the Reset button inside the hole, then put the cover back on.

NOTE

- Change the batteries when the display of the remote controller gets weak, or if it will not work unless close to the receiver.
(Alkaline batteries generally last about one year.)
- When changing batteries, always use two fresh batteries of the same make.
- If the remote controller will not be used for a long period of time, remove the batteries.
- Please dispose of batteries appropriately.
- After changing the batteries, follow the procedures on the next page to reset the current time.

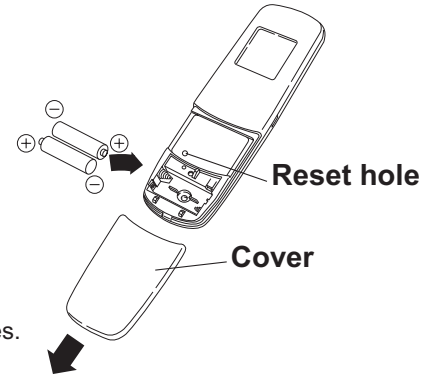

2-3. How to remove batteries


1. Remove the cover.
2. Press the battery toward the negative end and lift it out by its positive end.
(See the figure on the right.)
3. Remove the other battery in the same way.

NOTE

- Dispose of the used batteries at the designated location in compliance with the applicable local ordinances.

⚠ WARNING

- Do not swallow the battery.
- After removing the battery from remote controller, keep it out of the reach of children.
The battery can cause death by suffocation if swallowed.
- When inserting the battery, make sure the polarities (+ and -) are correct.

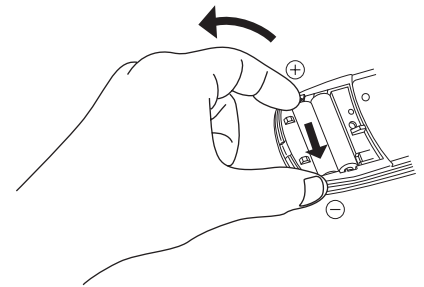

3


2-4. Setting the Current Time

After changing the batteries and pressing the Reset button, be sure to reset the current time.
(When the Reset button is pressed, the current time reverts to [0:00])

1. Press **⏸** for two seconds or more.
Once the clock displays starts blinking, the clock can be set.
2. Set the hour with **▲/▼** of the **⏸**.
If you press and hold the button, the time changes quickly.
3. Set the minutes with **▲/▼** of the **⏸**.
If you press and hold the button, the time changes quickly.
4. Pressing **⏸** completes the time setting.
 - While you are setting the current time, the time display flashes and the colon lights up.
 - If the buttons are not pressed for three minutes while setting the current time, it is set to the displayed time.

NOTE

When the Reset button is pressed, the timer settings are canceled.

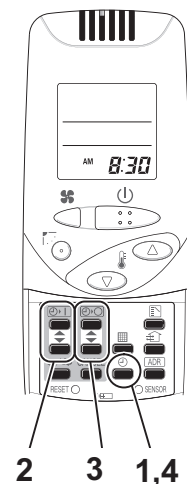













2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

2-5. Operation





Auto , **Heat** , **Dry** , **Cool** , **Fan** 

Models that only provide the cooling function cannot operate in the auto or heating mode.

Power: Turn on the circuit breaker beforehand, referring to the operating instructions for the unit.

1. Press .
2. Press  and select from among Auto , Heat , Dry , Cool  and Fan .
3. Press  and select the desired speed.
If set to Auto  , the fan speed switches automatically.
(Auto does not work in Fan mode.)
4. Press one of the   buttons and set the desired temperature.

Temperature settings cannot be made in Fan mode.

	Auto 	Heat 	Dry  / Cool 
MAX (°C)	27	30	30
MIN (°C)	17	16	18

Stop: Press .

When the unit is stopped with the remote controller, the fan on the outdoor unit may continue to run for a while, even though the compressor of the outdoor unit stops.

If the unit is not heating very effectively with a Low fan speed , switch the fan speed to High  or Medium .

Depending on the indoor unit being used, it may indicate a function that it does not have. (The fan speed is constant.)


If you cannot turn the air conditioner off in the normal way.


Disconnect the power to the indoor unit and contact the distributor where the product was purchased.

<Auto Operation>

Only when identical refrigerant system inside all the indoor units or cooling/heating free-type are under control as one group. It heats or cools automatically via the differences between the set temperature and the room temperature.

<Dry Operation>

- Depending on the indoor unit used, the remote controller may have a [Dry]  indicator on its display even though the unit does not have the Dry function. (Same as cooler operation)
- When the room temperature approaches the temperature setting, the unit continues to start up or stop automatically.
- When the drying mode stops operating, the indoor unit's fan blows a gentle breeze in order to keep the moisture from returning to the room at a minimum.
- Depending on the indoor unit used, and/or the temperature in the room, the fan speed may not be adjustable.
- Depending on the unit used, when the outside air temperature is 15 °C or less, the dry function will not operate.

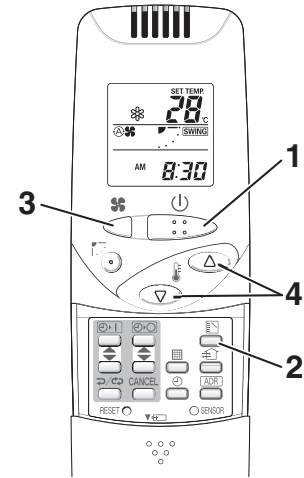

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

2-6. Timer Operation

- When setting the timer, make sure the current time on the remote controller is accurate.
- The timer's clock can only be set when the display of the remote controller is ON.
- After setting the timer, put the remote controller for in a place where its signal will reach the receiver of the indoor unit. (When the time set for the timer is reached, a signal is sent from the remote controller to Start or Stop the unit.)

Using the Timer

1. Press either ▲ / ▼ of the or , and while the time is being displayed, if you press ▲ / ▼ again, a scheduled time can be set.

The time last set on the timer is displayed.

“--:--” indicates time to change the batteries.


2. Press either ▲ / ▼ of the or and set the timer to the desired time.

Every time you press ▲ / ▼, the time changes in 10 minute increments.

If you press and hold the button, the time changes quickly.

3. After setting the timer, if you press , the time you set changes to a steady display, indicating settings are complete.

After the timer setting is displayed for three seconds, the display reverts to the current time.

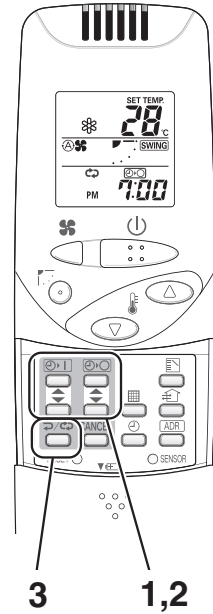

Combining ON and OFF Timers

- The ON and OFF timers can be set respectively.

Checking the timer setting

- If you press either ▲ / ▼ for the or the , the scheduled time is displayed for four seconds.
- When no timer setting has been made, it displays --:--. (Initial Setting)

Changing a timer setting

- Press ▲ / ▼ for the or the , and then when the timer setting is displayed, press ▲ / ▼ for the timer again.

Canceling a timer setting

- If you press [CANCEL], the timer setting is canceled.
- If you wish to cancel the setting for either the or the timer, press ▲ / ▼, and long-press [CANCEL] while the scheduled time is displayed.

Using the same timer setting every day

- If you press for 2 or more seconds, “” is displayed and the **ON timer** or the **OFF timer** will operate repeatedly every day.
- If you press again for two seconds or more, “” goes off and the timer operates only one time.


2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

2-7. Adjusting the Wind Direction



- Never try to manually move the flap (up-down wind direction plate) that is operated by the remote controller.
- When the unit stops, the flap (up-down wind direction plate) automatically faces downwards.
- When the unit is in heating standby, the flap (up-down wind direction plate) faces upwards.
Also, bear in mind that the flap starts swinging after the heating standby mode is released, but the display on the remote controller indicates Auto Flap during standby heating as well.

CZ-RWSU2N / CZ-RWSU3 / Indoor Unit (Type K1, Type K2, Type Y2) / CZ-RWST3N / CZ-RWSL2N / CZ-RWSD2



Setting the Wind Direction

While the unit is operating, every time you press , the direction the flap faces changes.


Setting Flap to Swing

If you press  to set the flap (up-down wind direction plate) in its most downward facing position, and then press  again, **SWING** is displayed and the flap swings automatically up and down.

Stopping Flap Swing

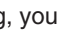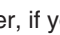If you press  again while the flap is swinging, you can stop the flap from swinging and set it in place as desired. Thereafter, if you press , you can set the wind direction starting from the most upward position.

- When the unit is in the Cool or Dry mode, the flap cannot stop facing downwards. If you try to stop the flap from swinging while it is facing downwards, it will continue moving until it is in the third position from the top.

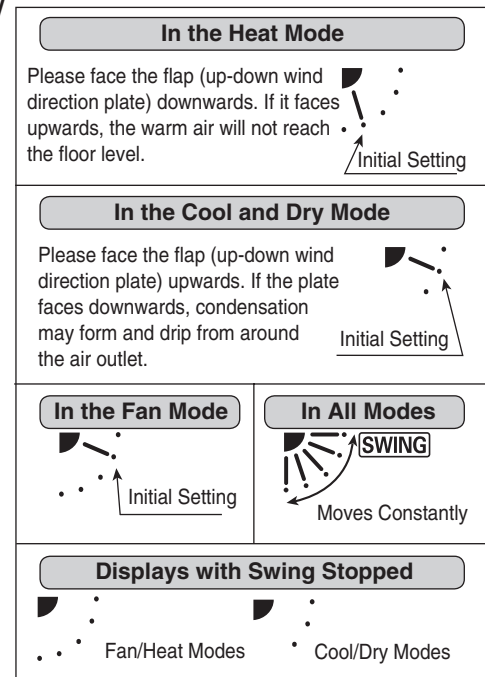

CZ-RWSC3

The available functions differ depending on the indoor unit being used.

The wind direction cannot be set via remote controller for any models other than those noted below.

For more information, please refer to the users' manual that came with your indoor unit.


4-Way Cassette Models, Ceiling Models, Wall-Mounted Models

Please refer to *Setting the Wind Direction and Stopping Flap Swing*.

2-8. Operating Multiple In/Outdoor Units Simultaneously (Group Control)

Group control works well for providing air conditioning to one large room with more than one air conditioning units.

- One remote controller can operate up to eight indoor units.
- All the indoor units have identical settings.
- Set temperature sensing to the indoor unit (Main sensor).
(See page 3-7)

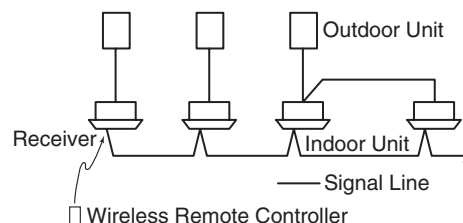

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

2-9. Using the Remote Controller

- Point the transmitter of the remote controller at the receiver. When the signal is received correctly, it will beep once time. (It only beeps two times when the unit starts operating.)
- The signal can be received at a distance of up to about 6 meters. This distance should be used only as a guide. It depends on battery strength.
- Make sure nothing is between the remote controller and the receiver that could block the signal.
- Do not leave the remote controller in direct sunlight, where the wind from the air conditioner can blow directly on it, or near any other heat source.
- Take care not to drop, throw or wash the remote controller with water.
- The signal from the remote controller may not be received in rooms with rapid start fluorescent lighting, inverter lights, plasma displays, LCD televisions (monitor), etc. For more information, please contact the distributor where the product was purchased.

Wall Mount Use

- Press \cup from the location you wish to mount the remote controller and make sure the signal is received properly.
- Pull the remote controller forward to remove it.

2-10. For Best Results

Don't get the remote controller too far away from the receiver.

This may cause a malfunction. Be sure to keep the remote controller in the same room as the receiver.

Point the remote controller at the receiver.

When the signal is received properly, it will beep one time.

Avoid locating the remote controller where it is covered, such as behind a curtain.

Keep it out in the open.

2-11. Addresses

In both multi and single unit installations, when more than one indoor units are installed in the same room with a compatible wireless remote controller, addresses can be set up to avoid crosstalk. By setting the address switches on the receivers and matching them with the number of addresses on the remote controller, up to six indoor units can be controlled separately with the remote controller. (When using units in a flexible combination or operating multiple units simultaneously, they cannot be controlled individually as they are operated at the same time.) There are separate address settings: receiver addresses for the receivers *1 and transmitter addresses for the remote controller.

For more information, please contact the distributor where the product was purchased.

- The setting procedure is different for Indoor Unit (Type K1, Type K2, Type Y2). (See page 3-14)
- These settings are saved in nonvolatile memory in the remote controller, so even when its batteries are changed, the settings do not have to be made again.

*1 CZ-RWST3N is of receivers (Inside the indoor unit); CZ-RWSL2N and CZ-RWSD2 are of operation panels.

Checking Addresses


When you press ADR on the remote controller, its current address appears on the display. If this address corresponds to the address of a receiver *2, the buzzer sounds. (If it is on ALL, the buzzer will always sound.)

If it is on ALL, it can be operated regardless of receiver addresses. Point the remote controller at the receiver you wish to operate and transmit.

*2 CZ-RWSL2N is of an operation panel (Indoor unit).

Fasten the remote control holder with screws.

Fitting the remote controller in the holder.

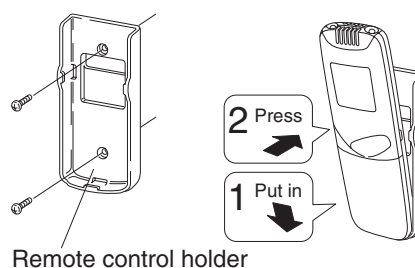

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

Matching up Addresses

Setting Remote Controller Addresses

1. If you press **[ADR]** and **↻/↺** at the same time, "SET" will blink.
2. While holding **[ADR]** down, every time you press **↻/↺**, it cycles from **ALL** → **1** → **2** → **3... 6** → **ALL**.
Set it to the receiver address switch of the indoor unit you wish to operate.
3. When you release **[ADR]**, the address that was displayed is set.
When you do this, if it corresponds to the receiver's address setting, the buzzer sounds.


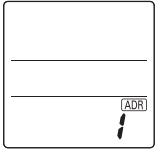
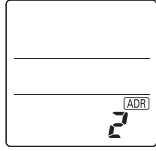
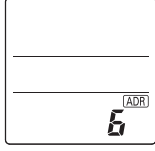






Setting Addresses (CZ-RWSK2)


(Setting the address of the indoor unit)

1. Set the address for the remote controller following the procedure under the section "Setting Remote Controller Addresses" (See the above descriptions).
2. Press **[Emergency Operation]** **⏻** of the indoor unit for four seconds or longer.
When you do this, the lamps of the display will blink one after another.
3. Press **[ADR]** on the remote controller.
4. The buzzer will sound and the address of the indoor unit will change to the address displayed on the remote controller.
5. If you press **[Emergency Operation]** **⏻** of the indoor unit once, the lamps on the indoor unit's display will turn off.

NOTE

- Please do not hold the **[Emergency Operation]** **⏻** button of the indoor unit down while the indoor unit's display lamps are blinking one after another.
- Make sure to operate while the indoor unit is stopped.
- The address of indoor unit is set to "ALL" at the time of the shipment.

Wireless remote controller address display				...			
CZ-RWSU2N / CZ-RWSU3 / CZ-RWSC3 / CZ-RWST3N / CZ-RWSL2N / CZ-RWSD2							
	Address ALL	Address 1	Address 2	Address 3	Address 4	Address 5	Address 6
Address switch position	Receiving is possible at all address positions	ON  1 2 3 4 OFF	ON  1 2 3 4 OFF	ON  1 2 3 4 OFF	ON  1 2 3 4 OFF	ON  1 2 3 4 OFF	ON  1 2 3 4 OFF

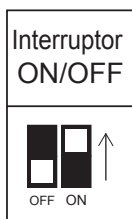

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

2-12. Emergency Operation

Use [Emergency Operation]  in the following situations when there is an urgent need.

- When the remote controller's batteries have failed.
- When the remote controller is broken.
- When the remote controller is lost.

*1 Figures: CZ-RWSU2N, CZ-RWSU3 and CZ-RWST3N are of receivers (inside indoor unit), and Indoor Unit (Type K1, Type K2, Type Y2) is of its front panel.


CZ-RWSU2N / CZ-RWSU3 / Indoor Unit (Type K1, Type K2, Type Y2) / CZ-RWSC3 / CZ-RWST3N / CZ-RWSL2N / CZ-RWSD2

Start : press [Emergency Operation]  of the receiver.

If the indoor temperature is 24 °C or greater when the unit starts running, it will act as a cooler.

If the indoor temperature is less than 24 °C when the unit starts running, it will act as a heater.

Stop : press [Emergency Operation]  of the receiver again.

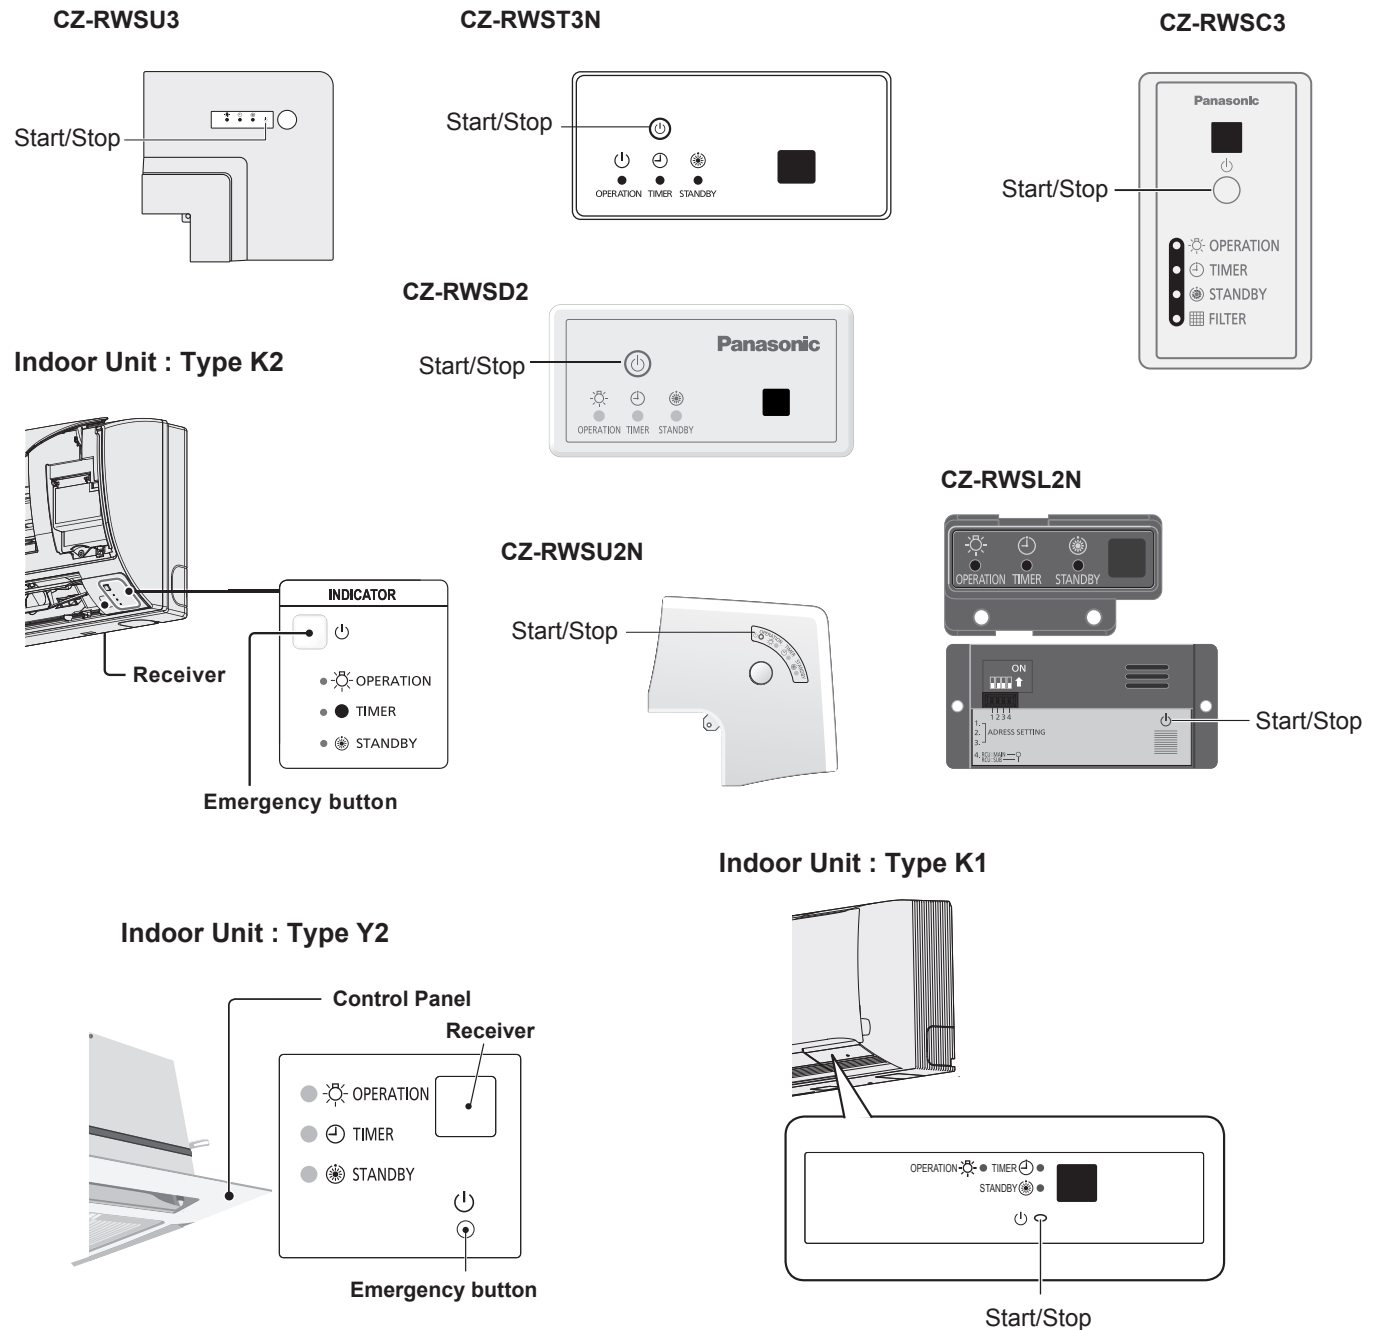

3

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER



2-13. Miscellaneous Settings










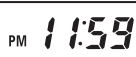



A variety of changes can be made to settings, depending on the indoor unit being used.

Operation mode indicator, time display (24 hour, AM/PM), heating maximum temperature

- (These settings are saved in nonvolatile memory in the remote controller, so even when its batteries are changed, the settings do not have to be made again.)
- First check the display of the remote controller when the unit is stopped and then make any desired settings.

How to Operate


- While holding down the buttons below, the remote controller's display changes every time  is pressed.
- Whatever is being displayed when you release  is set.

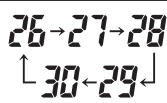Setting Item	Operation Button	Setting Content	Remote Controller Display
Remote controller operation mode display setting when  is pressed	Press  while pressing 	Heat Pump (with Auto)	
		Heat Pump (without Auto)	
		Dedicated air conditioner	
Clock display setting	Press  while pressing 	24-hour	
		AM/PM	
Max possible temperature setting in the Heat mode	Press  while pressing 	Maximum heating temperature range is 26 °C – 30 °C	

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

2-14. Before Requesting Service

Before requesting service, please check the followings.

Problem	Cause	Solution
The unit doesn't work even when  is pressed on the remote controller.	The power to the indoor unit is not ON.	Make sure the power to the indoor unit is ON.
	Is the Normal/Stop All switch in the Stop All position? (See page 3-8)	Switch it to the Normal position and cancel operation.
	Are the remote controller's batteries dead?	Change the batteries.
	Is there a mismatch between the display lamp and cooling/heating or is it set to something other than Auto? (The operating lamp stays lit, while the timer lamp and the standby lamp blink alternately.)	Change the operating mode.
	Do the addresses match one another?	Check the addresses of the receiver and the remote controller. (See page 3-13)
The air conditioner starts and stops on its own.	Has the timer been set to repeat?	Check the timer settings. (See page 3-11)
"EP" is displayed on the remote controller when the unit is stopped.	An error has occurred in the non-volatile memory.	Please contact your sales outlet.
Although the unit is for air conditioning only, either Auto or Heat is indicated in the display.		Make settings to the remote controller's operation mode display. (See page 3-16)
After the batteries are put in the remote controller, even when it is operated, the display does not change.		Press the Reset button on the remote controller. (See page 3-9)
The timer cannot be set.		Make the settings when the remote controller is in Operation Display. (See page 3-11)

If the problem persists even after you check the foregoing items, stop the unit, disconnect the power to the indoor unit and contact the distributor where the product was purchased with the model number and problem you are having.

As it is dangerous, under no circumstances should you undertake repairs yourself.

Further, when the receiver's lamps are blinking; please contact your retailer with that information.

■ Specifications

CZ-RWSU2N/CZ-RWSU3/CZ-RWSC3/CZ-RWSK2/CZ-RWST3N/CZ-RWSL2N/CZ-RWSD2

Wireless Remote Controller	Dimensions	182 mm (H) X 61 mm (W) X 18.5 mm (D)
	Power source	Two LR03 size batteries
	Clock Accuracy	±30 seconds per month (at 25 °C)

CZ-RWSU2N/CZ-RWSU3/CZ-RWSC3/CZ-RWST3N/CZ-RWSD2

Receiver	Dimensions	CZ-RWSU2N	200 mm (H) X 200 mm (W) X 25 mm (D)
		CZ-RWSU3	29.7 mm (H) X 211.8 mm (W) X 211.8 mm (D)
		CZ-RWSD2	65 mm (H) X 130 mm (W) X 22 mm (D)
		CZ-RWSC3	120 mm (H) X 70 mm (W) X 20 mm (D)
		CZ-RWST3N	65 mm (H) X 141 mm (W) X 22.5 mm (D)
	Power source	16 V DC (Supplied from the terminal strip of the indoor unit's remote controller)	


CZ-RWSL2N

Display	Dimensions	37 mm (H) X 70 mm (W) X 22 mm (D)
	Power source	5 V DC (supplied from the operation panel)
Operation Panel	Dimensions	55 mm (H) X 120 mm (W) X 16 mm (D)
	Power source	16 V DC (Supplied from the terminal strip of the indoor unit's remote controller)

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

When 1 indoor unit is operated by 2 remote controllers:


* Either of the remote controllers can be set to main/sub.

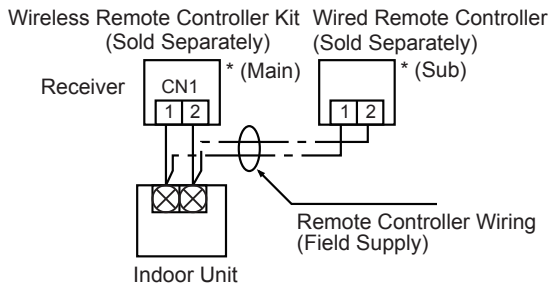

- Use wiring of 0.5 mm² to 2 mm² for field supply.
- Use a total wire length of no more than 400 m.

If a group of units are to be controlled by 2 remote controllers:

* Main/sub remote controllers will work regardless of which indoor unit they are installed to

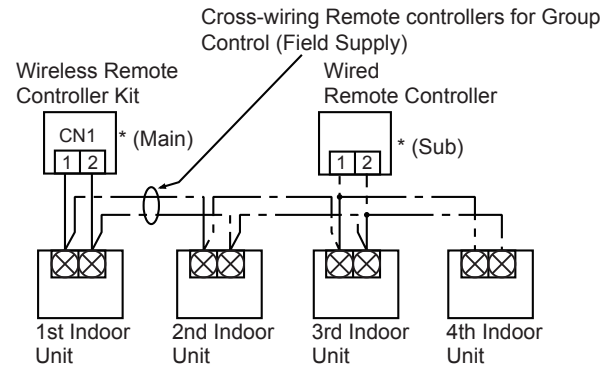








- Use wiring of 0.5 mm² to 2 mm² for field supply.
- Make the total wire length when cross-wiring a group no more than 200 m.

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

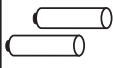■ CZ-RWSU2N

1. Accessories

Supplied accessories						
Wireless Remote Controller (1)	Remote Control Holder (1)	LR03 Size Battery (2)	Operating Instructions (1)	Quick Reference (1)	Wood Screw M4 × 16 (2)	Clamper (1)
						

2. Installing the Receiver

The receiver can only be installed on the corner indicated in Fig. 3-1. Consider how the panel will face when it is installed on the indoor unit.

- (1) Remove the air inlet grill.
- (2) Remove the screw holding the adjustable corner cover. Then slide the cover to the side and remove it. (Fig. 3-2)

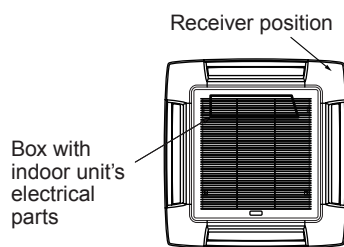


Fig. 3-1

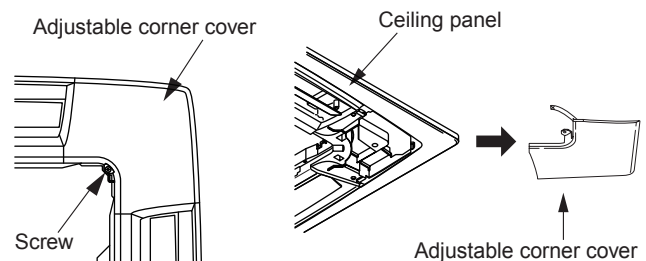


Fig. 3-2

- (3) To pass the wire through the panel, bend the part (shaded area) on the square hole and then pass wire protruding from the wireless receiver through the grill. (Fig. 3-3)
- (4) After wiring according to the directions in "Wiring for the Receiver" below, leave enough wire length so that the receiver's adjustable corner cover can be removed and fasten the wire with the clamper. (Fig. 3-3)
- (5) Hang the corner cover string on the pin of the ceiling panel (Fig. 3-4). Then slide the corner cover onto the ceiling panel until the three clips are correctly located and fix it in place with the screws.

- Make sure the wire is not caught.
- Refer to the installation instructions supplied with the panel.

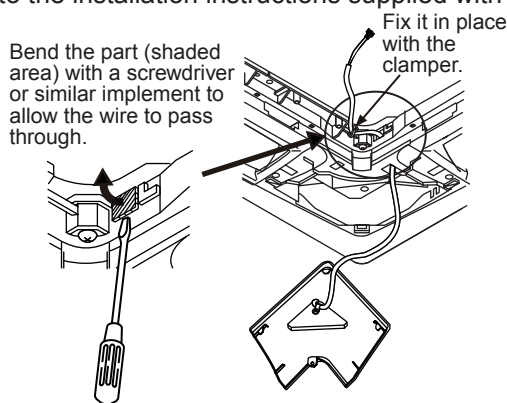


Fig. 3-3

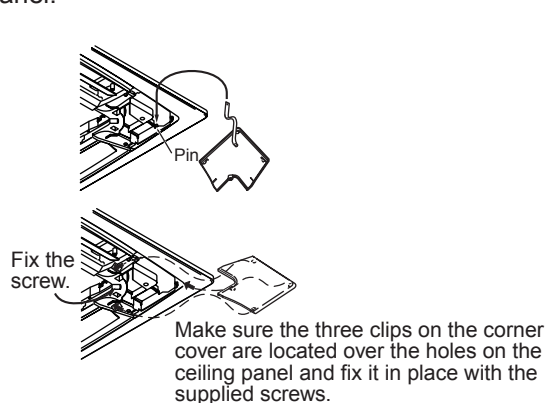


Fig. 3-4


NOTE

- (1) If the wiring for the receiver is bundled with other wires, such as the incoming line, it may cause a malfunction, so avoid putting them together.
 - (2) If something causes the unit's power source to make noise it will be necessary to resolve the problem, such as by installing a noise filter.
- For more information about wiring or test operation, refer to Wiring the Receiver and Test Run.

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

3. Wiring the Receiver

• Wiring Diagram

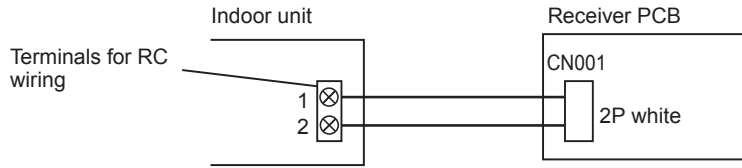

• How to Connect the Wires

- Connect the wires from the receiver to the terminals for RC wiring on the indoor unit. (No polarity)

4. Test Operation

Implementing a Test Run

1. Turn the #1 DIP switch [S003] on the receiver's PCB from OFF to ON and operate the wireless remote control with its Start/Stop button.
2. During a test run, all display lamps on the display will light up.
3. During a test run, it is not possible to adjust the temperature.
4. After completing a test run, be absolutely sure to turn the #1 DIP switch from ON to OFF and make sure none of the display lamps are blinking. Also, replace the PCB cover back as it was and fasten it; while holding the wiring with the cable clamp, tighten its screw.

CZ-RWSU2N

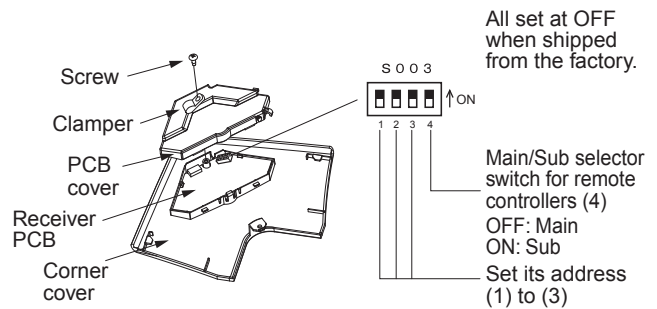


Fig. 3-5

- Before installing the receiver, see the sections on "Wiring for the Receiver" and "Setting Address Switches". Then check the settings of the [S003] DIP switch on the receiver's PCB.

* Remove the cover from the receiver when performing the PCB settings.

NOTE

- (1) This is hard on the device, so only use this for the test run.
- (2) After turning on the power, the unit will not receive any commands from the remote control for about 1 minute. This is not an error. (In fact it does receive signals, but they are cancelled.)

5. Setting Address Switches









- When more than one receiver and remote control are installed in the same room, setting up addresses allows them to avoid interfering with each other.
- Refer to the Users Manual for information on how to change the addresses of the remote controls.
- Changing the address of a receiver can be done after removing the screw to the receiver's PCB cover. Once the change is complete, put the cover back in place; while holding the wiring with the cable clamp, tighten its screw.

Address Display on the Remote Control	ALL	1	2	6
Position of the Receiver's Address Switch	It doesn't matter where the receiver's address switch is.			

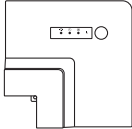2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

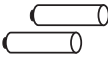■ CZ-RWSU3

1. Accessories


Supplied accessories							
Receiver (1)	Wireless Remote Controller (1)	Remote Control Holder (1)	LR03 Size Battery (2)	Operating Instructions (1)	Quick Reference (1)	Wood Screw M4 × 16 (2)	Clamper (1)
							

2. Settings

Setting for Receiver

- Check the settings of the [S003] DIP switch on the receiver's PCB.



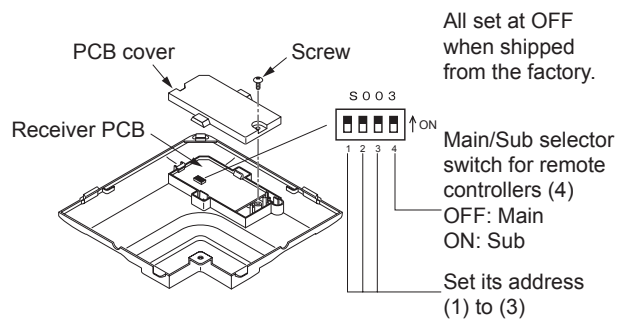




* Remove the cover from the receiver when performing the PCB settings.



All set at OFF when shipped from the factory.

Setting Address Switches


- When more than 1 receiver is installed in the same room, setting addresses prevents interference.
- For how to change addresses of wireless remote controllers, see the operating instructions of wireless remote controllers.
- To change the receiver's address, remove the cover from the receiver's PCB and set No.1 to No.3 of the [003] DIP switch on PCB.

Remote Controller Address Display	Address	Address	Address	Address	Address	Address	Address	ON/OFF States
	ALL	1	2	3	4	5	6	
Position of the receiver's address switch	Receipt is possible at all of the address positions							

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

3. Wiring the Receiver

• Wiring Diagram

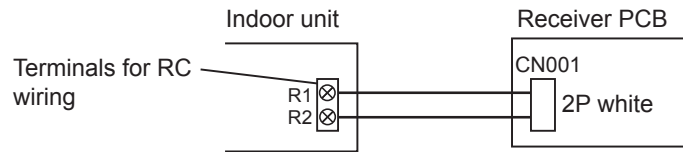

How to Connect the Wires


- Connect the wires from the receiver to the terminals for RC wiring on the indoor unit. (No polarity)

4. Installing the Receiver

- The receiver can be installed only on the corner shown in Fig. A. Consider the direction where the panel is attached to the indoor unit.


1 Remove the air inlet grille

Indoor unit electric component box

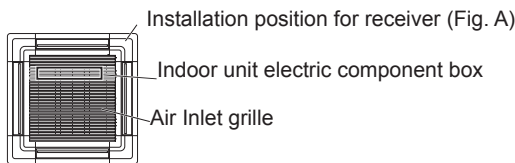


2 Remove the corner cover.

- ① Remove the screw fixing the corner cover.

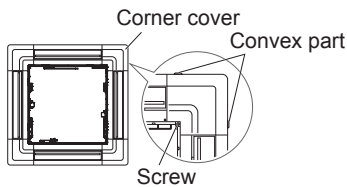


- ② Place a hand on both the right and left convex parts of the corner cover to remove it.

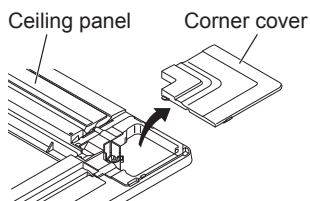


3 Wire the receiver.

- ① Hang the string of the receiver on the pin of the ceiling panel.

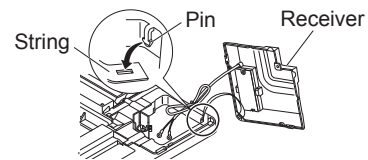

- ② Pass the wiring from the wireless receiver section into the slit. (See "Wiring for the receiver")
- ③ Fix the wiring with the clasper (supplied) while leaving enough length of wiring to remove the receiver.

- When attaching the filter chamber, cut the clasper (a), and attach the receiver.

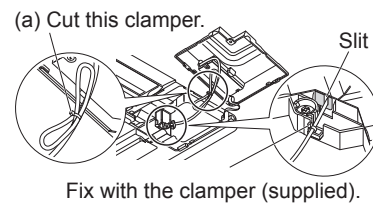


Fix with the clasper (supplied).

4 Fix the receiver.

- ① Fit the receiver to the ceiling panel so the 5 claws are properly set, and fix it with the removed screw.


- Make sure the wire is not caught.
- Refer to the installation instructions supplied with the panel.

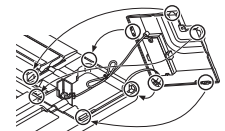

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

■ CZ-RWSC3

Installation Instructions Wireless Receiver for ALL

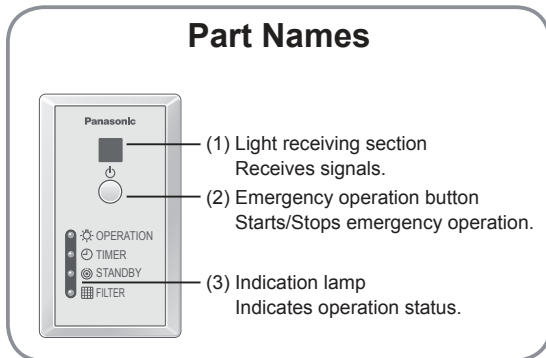

Safety Precautions

Read before installation

- Read the Installation Instructions carefully to install the unit correctly and safely.
Be sure to read the Safety Precautions in particular before installation.
- After the installation is complete, perform test operation to confirm that no abnormality is present.

WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.


WARNING

- Turn off the circuit breaker of the units before installation.
- Ask your dealer or professionals for installation and electric work.
- This receiver shall be installed in accordance with National Wiring Regulations.
- Securely connect and fix the specified cables for wiring.
- Do not allow the connection to be exposed to the external force of the cables.
- Choose an installation location that sufficiently supports the weight of the receiver.

1. Accessories

Supplied accessories	
Wood screw M4 × 15.5 (2) 	Clamper (1)

Dimensions

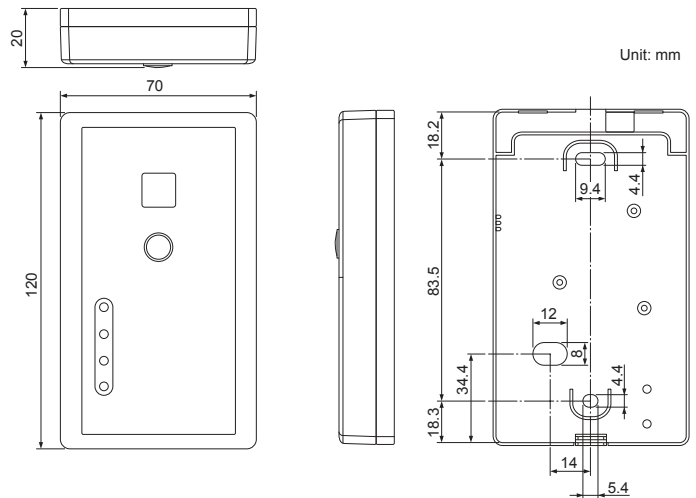

- We assume no responsibility for accidents or damages resulting from methods other than those described in the installation instructions or methods without using specified parts. Malfunctions that occurred due to the unauthorised installation methods are not covered by the product warranty.
- Read the installation instructions supplied with indoor units as well.

CAUTION

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.


CAUTION

- Do not use at the following locations.
 - Location where condensation occurs
 - Location where flammable gases, etc. may leak
 - Location where corrosive gases, etc. may leak
 - Location with lots of water or oil droplets (including machine oil)
 - Location where voltage fluctuation frequently occurs
 - Location where there is a machine producing electromagnetic radiation
 - Location where droplets of organic solvents spread
 - Location where acidic or alkaline solutions or special sprays are frequently used
- Do not operate with wet hands.
- **Do not wash with water.**

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

2. Installing the Receiver


1 Remove the bottom case.

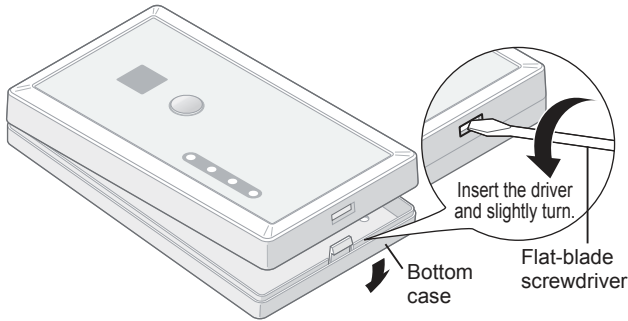

Attention

Mounting the bottom case

- Tighten the screws securely until the screw heads touch the bottom case. (Otherwise, loose screw heads may hit the PCB and cause malfunction when mounting the top case.)
- Do not over-tighten the screws. (The bottom case may be deformed, resulting in fall of the unit.)

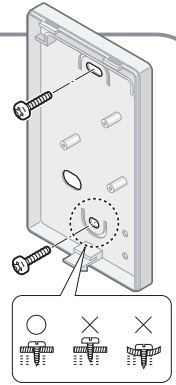

Connecting the remote control wiring


- Arrange the wires as shown in the illustration for ② in step 2, avoiding unnecessary wires being stored in the case. (Caught wires may destroy the PCB.)
- Avoid wires touching parts on the PCB. (Caught wires may destroy the PCB.)

2 Mount to the wall.


Exposed type

Preparation: Make 2 holes for screws using a driver.

- Mount the top case.
 - Align the claws of the top case and then align the claws of the bottom case.
- Mount the bottom case to the wall.

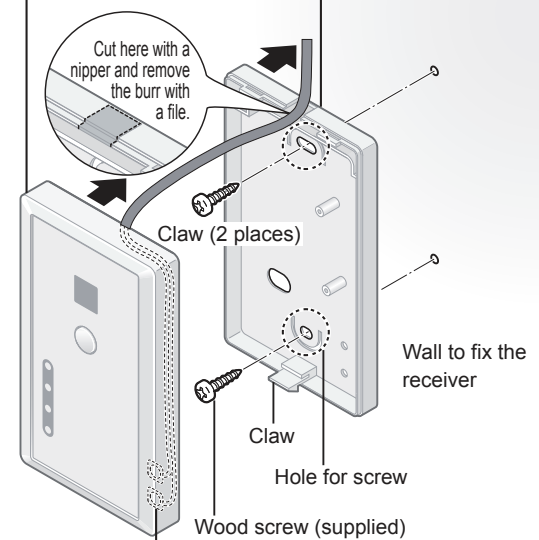

- Connect the remote control wiring.
 - Arrange the wires along the groove of the case.

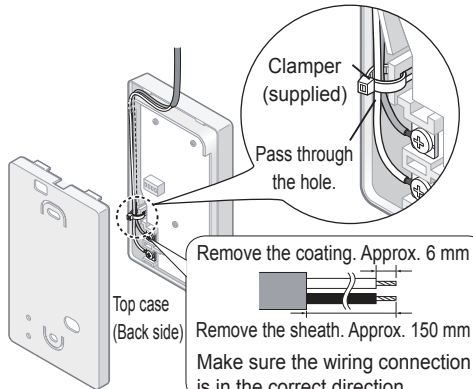


Bottom case (Back side)


Embedded type

Preparation: Make 2 holes for screws using a driver.

- Mount the top case.
 - Align the claws of the top case and then align the claws of the bottom case.
- Mount the bottom case to the wall.
 - Pass the wire through the hole in the centre of the bottom case.

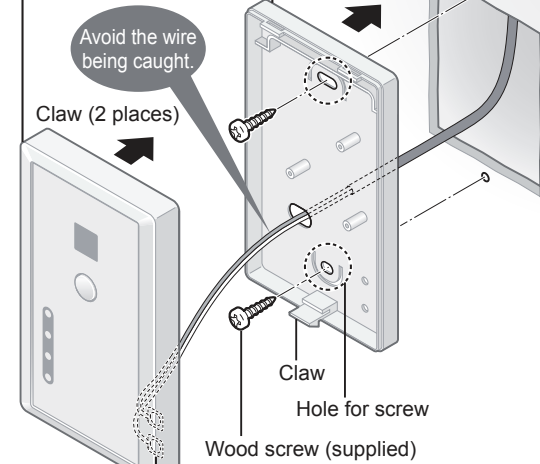

- Connect the remote control wiring.

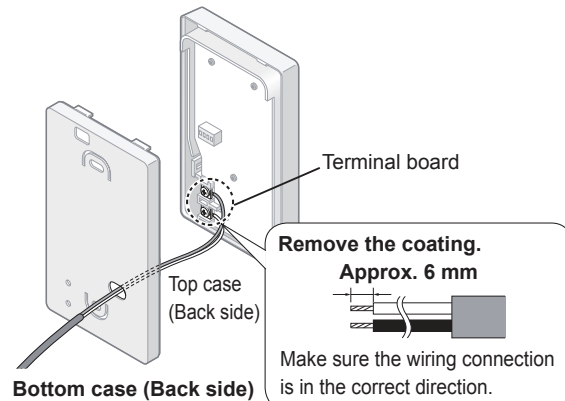

Remove the coating. Approx. 6 mm

Make sure the wiring connection is in the correct direction.

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

3. Wiring the Receiver

Wiring for the receiver

- **Wiring diagram**


- **Type of wiring**

Use cables of 0.5 to 1.25 mm².

- **Total wire length:** 400 m or less
(The wire length between indoor units should be 200 m or less.)

- **Number of connectable units**

Remote controller and receiver: Max. 2, Indoor unit: Max. 8

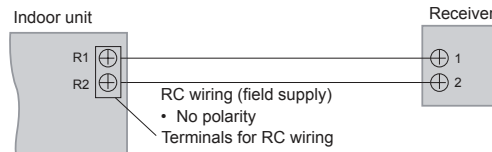


Attention

- Be careful not to connect cables to other terminals of indoor units (e.g. power source wiring terminal). Malfunction may occur.
- Do not bundle together with the power source wiring or store in the same metal tube. Operation error may occur.
- If noise is induced to the unit power supply, attach a noise filter.

- For the RC wiring of field supply, please use insulated wires with sheath. The insulation thickness should be at least 1 mm.
- Regulations on wire diameters differ from locality to locality. For field wiring rules, please refer to your LOCAL ELECTRICAL CODES before beginning.
- You must ensure that installation complies with all relevant rules and regulations.

*Wiring as shown below is prohibited.

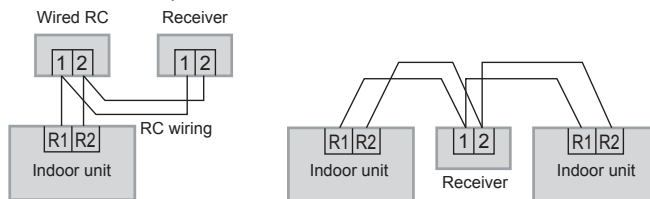

Installation when setting Main/Sub for the remote controller and the receiver

- **Using 1 indoor unit**

Installation example


Receiver (Sub)

Wired RC (Main)

- **Using more than 1 indoor unit**

Receiver (Sub)

Wired RC (Main)

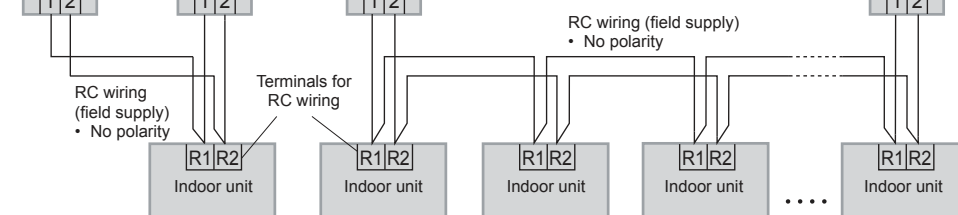

After installation, according to the "Main/Sub setting" in the "Setting" section, set one to [Main] and the other to [Sub].
Setting the wired remote controller to [Main] is recommended.

Note

The remote controller and the receiver can be connected to any indoor unit for operation.

Specifications


Model No.	CZ-RWSC3
Dimensions	(H) 120 mm × (W) 70 mm × (D) 20 mm
Weight	75 g
Temperature/Humidity range	0 °C to 40 °C / 20 % to 80 % (No condensation) *Indoor use only.
Power Source	DC16 V (supplied from indoor unit)

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

4. Setting Address Switches

■ Main/Sub setting ■ Address setting

Remove the top case of the receiver for setting.

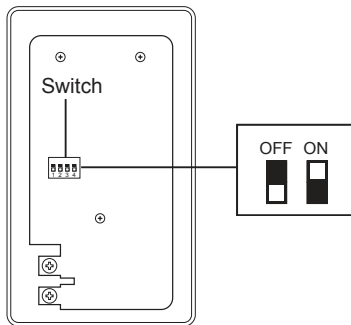

Main/Sub setting

- Use this to set Main/Sub for the remote controller and the receiver.
- Set one to [Main] and the other to [Sub].
- Factory default: [Main]
- It is recommended to set the wired remote controller to [Main].

Main/Sub	MAIN	SUB
Main/Sub switch position	 1 2 3 4	 1 2 3 4

Address setting

- When more than 1 receiver is installed in the same room, setting addresses prevents interference.
- For how to change addresses of wireless remote controllers, see operating instructions of wireless remote controllers.

Wireless remote controller address display	Address	Address	Address	Address	Address	Address	Address
	ALL	1	2	3	4	5	6
Address switch position	Receiving is possible at all address positions.						

5. Test operation

Preparation : Turn on the circuit breaker of units and then turn the power on. After the power is turned on, remote controller operation is ignored for approx. 1 minute because setting is being made. This is not malfunction. (Contents received while setting are disabled.)

1. To start test operation, press and hold the emergency operation button for 10 seconds.
2. The indication lamps (OPERATION, TIMER, STANDBY) blink during test operation.
3. To finish test operation, press and hold the emergency operation button for 10 seconds.

Attention

- Do not use this mode for purposes other than the test operation. (To prevent overload of the units)
- Read the installation instructions supplied with the units.
- Any of the Heat, Cool and Fan operations can only be performed.
- Temperature cannot be changed.
- The test operation mode is automatically turned off in 60 minutes. (To prevent continuous test operation)
- Outdoor units do not operate for approx. 3 minutes after the power is turned on or operation is stopped.

Self-diagnostics table and detected contents

- The "Alarm Display" as shown in the table below expresses the alarm contents displayed when the wired remote controller is connected. For how to handle the alarms, see installation instructions of indoor units or technical guide.

Detected contents	Alarm Display	Indication lamp on the receiver			
		OPERATION	TIMER	STANDBY	Blinking
Communication error in the remote control circuit	E01-E03, E08-E14, E17, E18	□	●	●	
Communication error either in the in/outdoor operation line or the sub-bus of the outdoor unit	E04-E07, E15, E16, E19-E31	●	●	□	
Operation of indoor protection device	P01, P09-P14	●	□	□	Alternately
Operation of outdoor protection device	P02-P08, P15-P31	□	●	□	Alternately
Error in the indoor thermistor	F01-F03, F10-F11	□	□	●	Alternately
Error in the outdoor thermistor	F04-F09, F12-F28	□	□	○	Alternately
Error in the indoor EEPROM	F29	□	□	●	Simultaneously
Error in the outdoor EEPROM	F30, F31	□	□	○	Simultaneously
Error related to the compressor	H01-H31	●	□	●	
Error in indoor settings	L01-L03, L05-L09	□	●	□	Simultaneously
Error in outdoor settings	L04, L10-L31	□	○	□	Simultaneously
Inconsistency in Air/Heat (Including an auto-temp setting for a model without auto-temp settings)		○	□	□	Alternately
Oil Alarm (Same as operation of outdoor protection device)		□	●	□	Alternately
Test operation		□	□	□	Simultaneously

●: OFF ○: ON (Illuminated) □: Blinking (0.5 seconds interval)

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

■ CZ-RWST3N


1. Accessories

Supplied accessories							
Receiver (1)	Wireless Remote Controller (1)	Remote Control Holder (1)	LR03 Size Battery (2)	Operating Instructions (1)	Quick Reference (1)	Wood Screw M4 × 16 (2)	Clamper (1)

2. Settings

- Before installing the receiver, see the sections on “Wiring for the Receiver” and “Setting Address Switches”. Then check the settings of the [S003] DIP switch on the receiver’s PCB.

* Remove the cover from the receiver when performing the PCB settings.

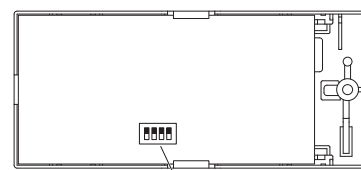

S 0 0 3
 All set at OFF when shipped from the factory.
 Main/Sub selector switch for remote controllers (4)
 OFF: Main ON: Sub
 Set its address (1) to (3)

3


Setting Address Switches

- When more than 1 receiver is installed in the same room, setting addresses prevents interference.
- For how to change addresses of wireless remote controllers, see the operating instructions of wireless remote controllers.
- To change the receiver’s address, remove the cover from the receiver’s PCB and set No.1 to No.3 of the [003] DIP switch on PCB.

Remote Controller Address Display	Address ALL	Address 1	Address 2	Address 3	Address 4	Address 5	Address 6	ON/OFF States
Position of the receiver’s address switch	Receipt is possible at all of the address positions							

3. Wiring the Receiver

Wiring Diagram

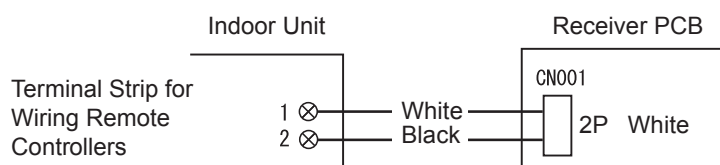

Connections

Connect the wires from the receiver to the remote controller terminal strip on the indoor unit. (Polarity does not matter)

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

4. Installing the Receiver

● Ceiling Suspended Model

- (1) Remove the screw, and slide the latch to open the air-intake grille. (Fig. 3-6)
- (2) Insert a flat-head screwdriver from the side, and remove the cover while pressing down on the two cover tabs. (Fig. 3-7)
- (3) Route the remote controller wiring through the panel, and mount the receiver into the panel holes. (Fig. 3-8)
- (4) Route the remote controller wiring through the adjustable clamber, and draw in the wire from the remote controller wiring inlet to the inside of the indoor unit. (Fig. 3-8) (See Fig. 3-9 for how to loosen the adjustable clamber.)
- (5) Route the remote controller wiring through the three saddles, and draw the wire into the electrical box. (Fig. 3-9)
 - * Draw in the power wire and remote controller wiring separately.
- (6) Connect the remote controller wiring to the terminal board, route through the cable tie (accessory) to the holding clamp, and secure the remote controller wiring. (Fig. 3-10)
- (7) Mount the side cover, and close the air-intake grille.

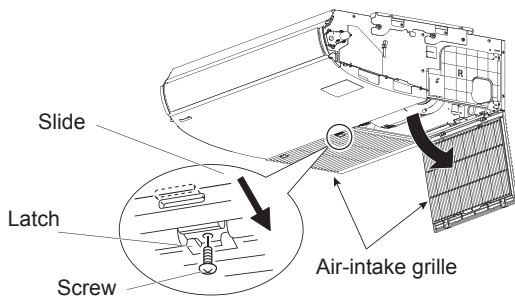


Fig. 3-6

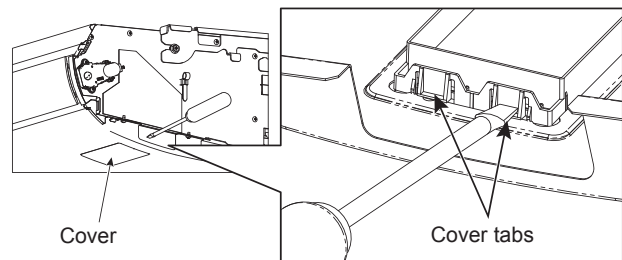


Fig. 3-7

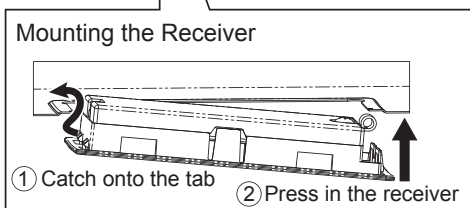
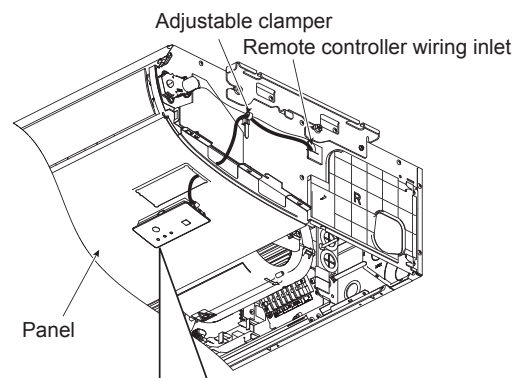


Fig. 3-8

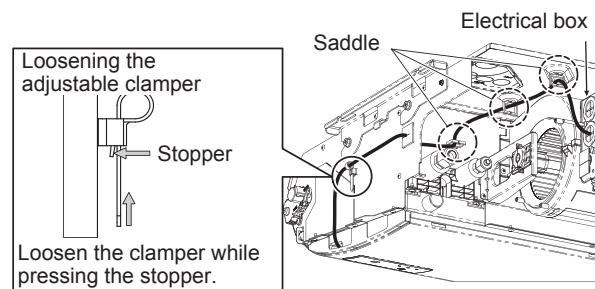


Fig. 3-9

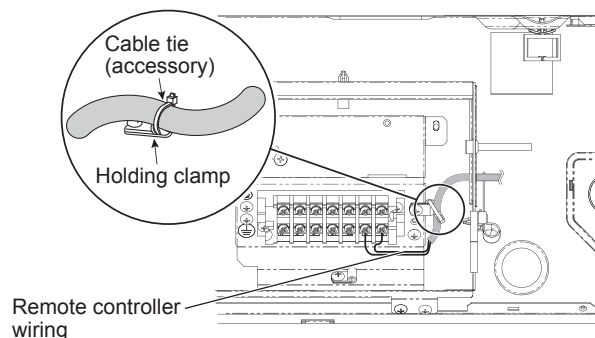


Fig. 3-10

● Removing and Mounting the Side Cover

Removing the side cover

Remove the side cover mounting screw, and slide the side cover to the front side (direction of arrow in Fig. 3-11) to remove.

Mounting the side cover

Slide in the side cover from the indoor unit front side, mount to the latch tabs, and secure using the side cover mounting screw.

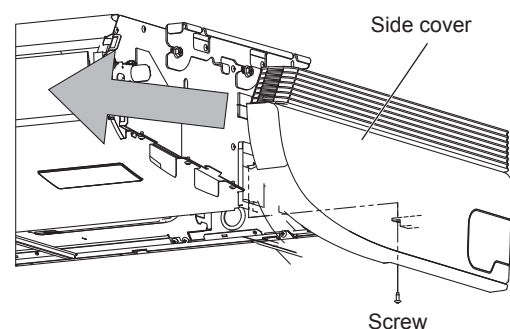

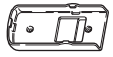








Fig. 3-11

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

■ CZ-RWSL2N

1. Accessories

Supplied accessories							
Wireless Remote Controller (1)	Remote Control Holder (1)	LR03 Size Battery (2)	Operating Instructions (1)	Quick Reference (1)	Wood Screw M4 × 16 (2)	Pan Head Self-Tapping Screw 4 × 10 (4)	Clamper (3)
							

2. Installing the Receiver/Operation Panel

Resin Panel

Installing the Operation Panel

- (1) Remove the 2 screws. Then remove the cover A from the back of the panel. (Fig. 3-12)
- (2) Fasten the operation panel to the location shown in the figure below with the 2 enclosed screws (4 × 10). (Fig. 3-13)
- (3) Pass the receiver wiring (6P white connector) through the back of the panel.

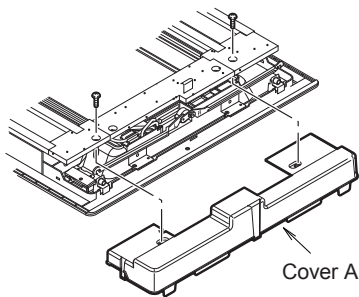


Fig. 3-12

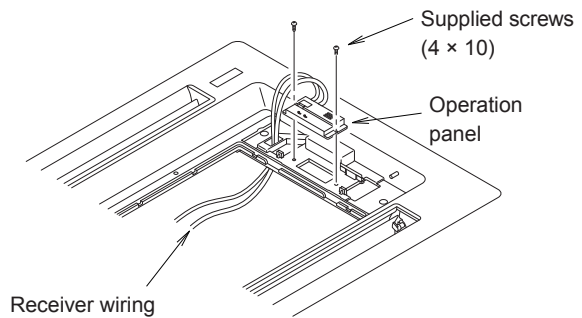


Fig. 3-13

Installing the Receiver

- (1) The cover B is fitted in the cover A. Remove the 1 screw and detach it by pressing on it from the front side of the panel. (Fig. 3-14)
- (2) Connect the receiver wiring (6P white connector) that is sticking out from the operation panel to the receiver and fit the receiver into the panel. Make sure the 6P white connector is fully plugged in all the way.
- (3) Bend the lead wire of the receiver into shape so that it does not come in contact with the louver shaft. There is a groove to pass the wire (circled part in Fig. 3-14). Insert the lead wire into this groove with no slack.
- (4) Attach the cover A until it is firmly engaged in the claws indicated by arrows. (Fig 3-15)
- (5) Arrange the lead wire of the operation panel appropriately and fasten it with the supplied clamper.
- (6) Install the ceiling panel.

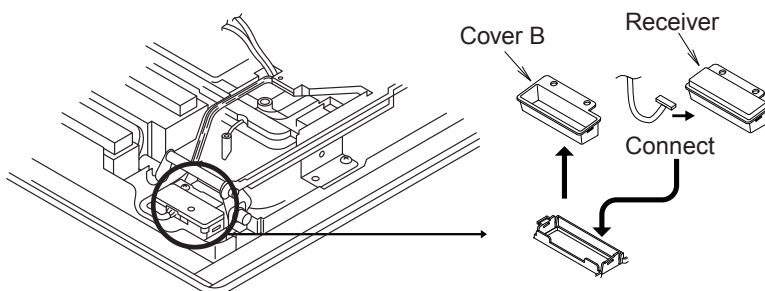


Fig. 3-14

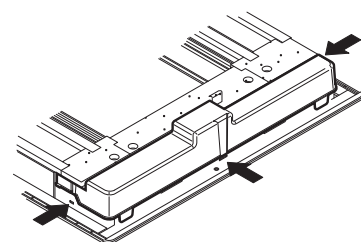


Fig. 3-15

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

Metal Panel

Installing the Operation Panel

- (1) Remove the 2 screws and remove the cover A from the back of the panel. (Fig. 3-16)
- (2) Fasten the operation panel to the location shown in the figure below with the 2 enclosed screws (4 × 10). (Fig. 3-17)
- (3) Pass the receiver wiring (6P white connector) through the back of the panel.

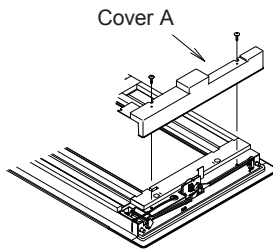


Fig. 3-16

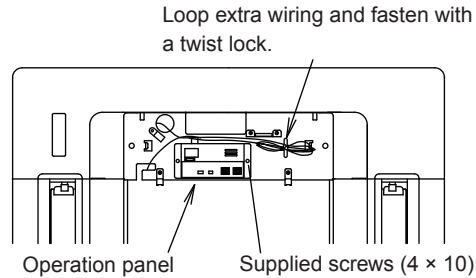


Fig. 3-17

Installing the Display

- (1) The cover B is fit in the Cover A. Spread the points as indicated in figure 3-18 and remove it. The tape holding cover B is only to protect it during transport. Remove and discard it.
- (2) Connect the receiver wiring (6P white connector) that is sticking out from the operation panel to the receiver and fit the receiver into the panel. Make sure the 6P white connector is fully plugged in all the way.
- (3) Pass the lead wire for the receiver through the cutout in the panel and the hole in the metal panel. Then fasten it to the hole in the metal panel with the plastic clasper. (Fig. 3-19)
- (4) Attach cover A.
- (5) Properly route the lead wire of the operation panel and fasten it with the twist lock. (Fig. 3-17)
- (6) Install the ceiling panel.

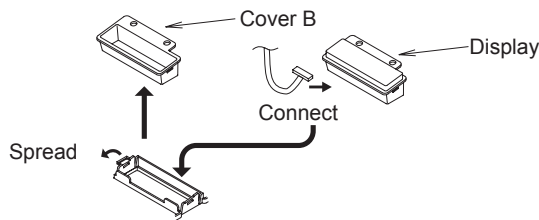


Fig. 3-18

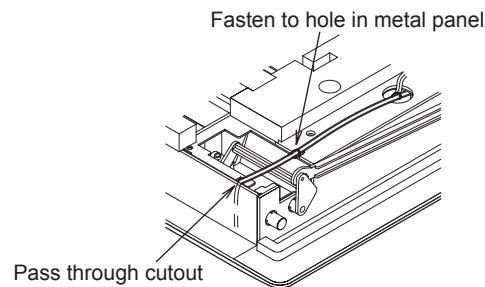



Fig. 3-19

NOTE

- (1) If the wiring to the operation panel is bundled together with other wiring, such as the incoming line from the power source, it can cause a malfunction, so avoid doing so.
 - (2) If something causes the unit's power source to make noise it will be necessary to resolve the problem, such as by installing a noise filter.
- For more information about wiring or test runs, refer to Wiring the Receiver and Test Run.

3. Wiring for the Receiver

Wiring Diagram

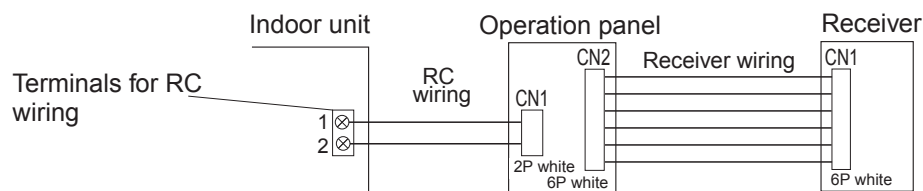

Connections

- (1) Connect the remote controller wiring to the terminals for RC wiring on the indoor unit. (No polarity)
- (2) Connect the receiver and the operation panel with the receiver wiring.


2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

4. Test Operation

Implementing a Test Run

1. Turn the #1 DIP switch of the operation panel from OFF to ON (Down → Up) and operate the wireless remote control with its Start/Stop button.
2. During a test run, all display lamps on the display will light up.
3. During a test run, it is not possible to adjust the temperature.
4. After completing a test run, be absolutely sure to turn the #1 DIP switch from ON to OFF (Up → Down) and make sure none of the display lamps are blinking. Also, replace the PCB cover back as it was and fasten it; while holding the wiring in the cable clamp, tighten its screw.

- Before installing the operation panel, see the sections on “Wiring for the Receiver” and “Setting Address Switches”. Then check the settings of the operation panel switches.

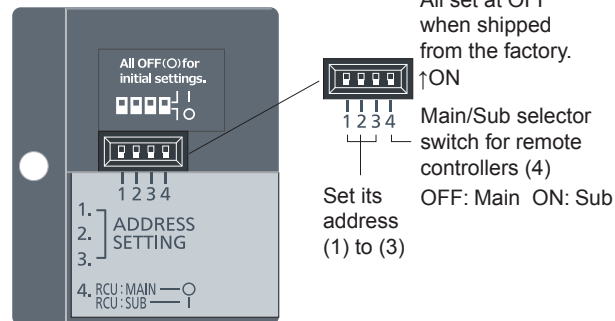

3

NOTE

- (1) This is hard on the device, so only use this for the test run.
- (2) After turning on the power, the unit will not receive any commands from the remote control for about 1 minute. This is not an error. (In fact it does receive signals, but they are cancelled)

5. Setting Address Switches


- When more than one display/operation panel and remote control are installed in the same room, setting up addresses allows them to avoid interfering with each other.
- Refer to the Users Manual for information on how to change the addresses of the remote controls.

Address Display on the Remote Control	ALL	1	2	6
Position of the Receiver's Address Switch	It doesn't matter where the receiver's address switch is.			


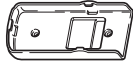
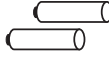




2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

■ CZ-RWSD2

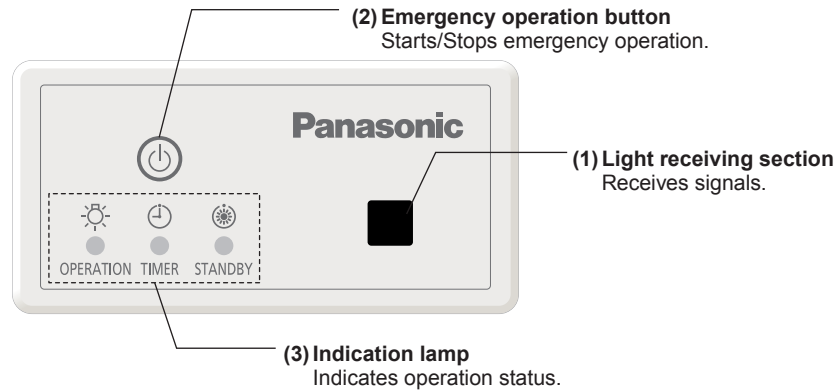1. Part Names




2. Supplied accessories

Supplied accessories						
Wireless Remote Controller (1) 	Remote Control Holder (1) 	LR03 Size Battery (2) 	Operating Instructions (1) 	Quick Reference (1) 	Wood Screw M4 x 16 (2) 	Clamper (1) 


3. Settings

- Before installing the receiver, see the sections on "Wiring for the Receiver" and "Setting Address Switches". Then check the setting of the [S003] DIP switch on the receiver's PCB.
- * Remove the cover from the receiver when performing the PCB settings.

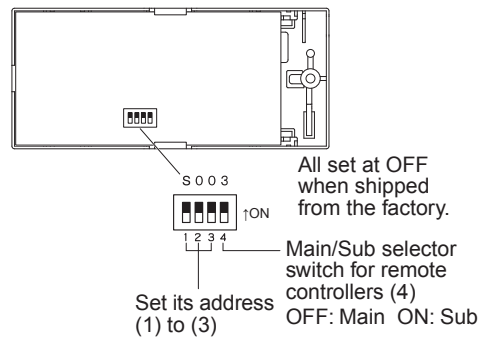

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

4. Wiring for the Receiver Wiring Diagram

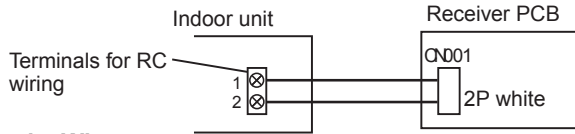

How to Connect the Wires

Connect the wires from the receiver to the terminals for RC wiring on the indoor unit. (No polarity)

5. Installing the Receiver

- (1) While spreading the tabs of the cover, pull it out from the panel to the front. (Fig. 3-20)
- (2) When installing on the 1-WAY cassette (high-ceiling), pass the lead wire through the panel and install the receiver in the hole in the panel. (The projecting parts of the receiver are fixed in the hole in the panel.)
- (3) Route the lead wire from the receiver along the rib on the back of the panel. Pass it through the cutout. (Fig. 3-21)
- (4) Install the panel on the indoor unit.
- (5) Fasten the lead wire sticking out from the panel with the clamper in the indoor unit. (Fig. 3-22)
- (6) Draw the lead wire into the electrical box through the hole on the bottom and connect it to the remote controller terminal board.

When installing to the 1-WAY cassette (high-ceiling), fasten the wire at the latch of the fan casing with the supplied clamper. (Fig. 3-23)

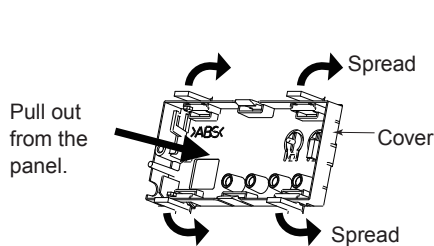


Fig. 3-20

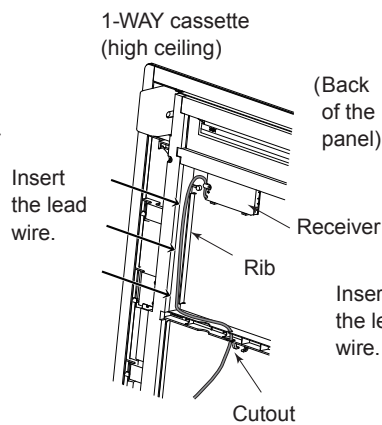


Fig. 3-21

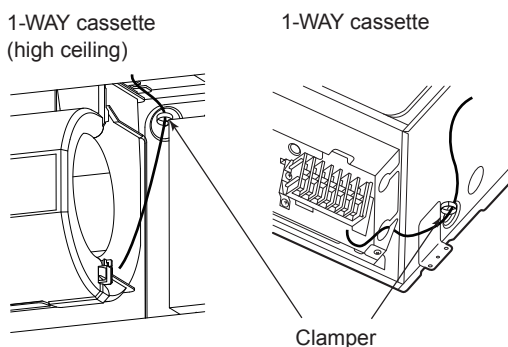
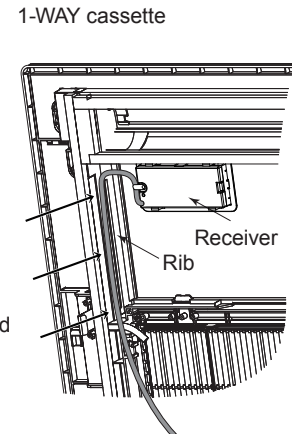


Fig. 3-22

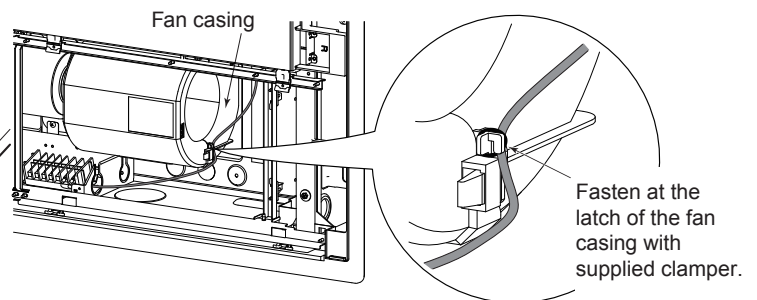


Fig. 3-23

- Fasten the lead wire securely so that it does not get wrapped up in the fan.
- For more information about wiring and test operation, see the sections on "Wiring for the Receiver" and "Test Operation".

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER


■ When Using Wireless Remote Controller Instead of Wired Remote Controller

● Type Y2 : S-15MY2E5A / S-22MY2E5A / S-28MY2E5A / S-36MY2E5A / S-45MY2E5A / S-56MY2E5A

When the wireless remote controller is to be used, slide the switch (SW502) on the indoor unit control PCB to the ON position.


- If this setting is not made, an alarm will occur. (The operation lamp on the display blinks.)

Reverse side view of Decorative Panel

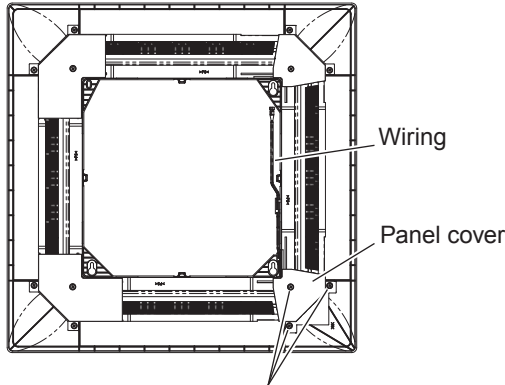

Remove 3 screws and panel cover

PCB inside panel cover

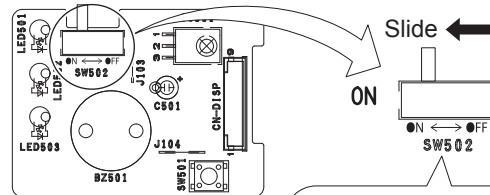

Setting status


ON: Wireless: main, Wired: sub
OFF: Wired: main, Wireless: sub (at shipment)

● Type K2 : S-15MK2E5A / S-22MK2E5A / S-28MK2E5A / S-36MK2E5A

When the wireless remote controller is to be used, slide the switch (S011) on the indoor unit control PCB to the ON position.


- If this setting is not made, an alarm will occur. (The operation lamp on the display blinks.)

Slide



Setting status

ON: Wireless: main, Wired: sub
OFF: Wired: main, Wireless: sub (at shipment)

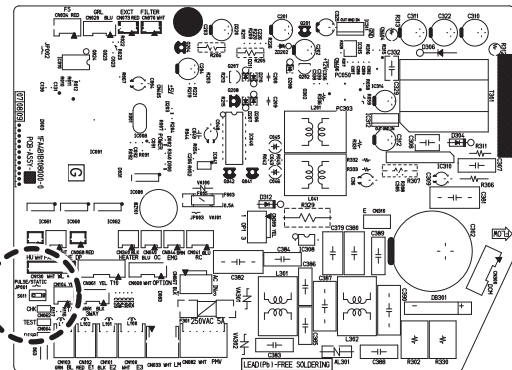


● Type K1 : S-45MK1E5A / S-56MK1E5A / S-73MK1E5A / S-106MK1E5A

When the wireless remote controller is to be used, slide the switch (S011) on the indoor unit control PCB to the ON position.


- If this setting is not made, an alarm will occur. (The operation lamp on the display blinks.)

Slide



Setting status

ON: Wireless: main, Wired: sub
OFF: Wired: main, Wireless: sub (at shipment)

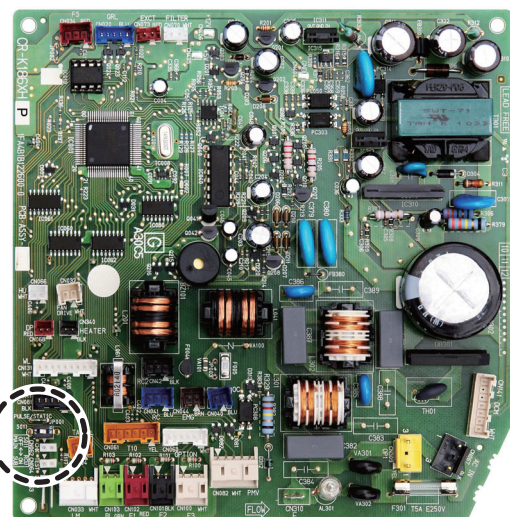

3

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

■ Common to All Models


1. The Self-Diagnosis Function Display and What is Detected

- The “Alarm Display” shown in the table below expresses the alarm contents displayed when the wired remote controller is connected. For how to handle the alarms, see installation instructions of indoor units or technical guide.

Detected contents	Alarm Display	Indication lamp on the receiver			Blinking
		OPERATION	TIMER	STANDBY	
Communication error in the remote controller circuit	E01–E03, E08–E14, E17, E18	○	●	●	
Communication error either in the in/outdoor operation line or the sub-bus of the outdoor unit	E04–E07, E15, E16, E19–E31	●	●	○	
Operation of indoor protection device	P01, P09–P14	●	○	○	Alternately
Operation of outdoor protection device	P02–P08, P15–P31	○	●	○	Alternately
Error in the indoor thermistor	F01–F03, F10–F11	○	○	●	Alternately
Error in the outdoor thermistor	F04–F09, F12–F28	○	○	○	Alternately
Error in the indoor EEPROM	F29	○	○	●	Simultaneously
Error in the outdoor EEPROM	F30, F31	○	○	○	Simultaneously
Error related to the compressor	H01–H31	●	○	●	
Error in indoor settings	L01–L03, L05–L09	○	●	○	Simultaneously
Error in outdoor settings	L04, L10–L31	○	○	○	Simultaneously
Error in the gas heat pump air conditioner	A01–A31	●	○	○	Simultaneously
Inconsistency in Cooling/Heating (Including an auto-temp setting for a model without auto-temp settings)		○	○	○	Alternately
Oil alarm (Same as operation of outdoor protection device)		○	●	○	Alternately
Test operation		○	○	○	Simultaneously

● : OFF ○ : ON (Illuminated) ○ : Blinking (0.5 seconds interval)


2. Room Temperature Sensor Settings

- The indoor unit and the wireless remote controller are equipped with room temperature sensors. The sensing of room temperature works via one of them.
- When the unit is shipped, it is set to the indoor unit. To switch it to the remote controller, press the sensor button (the figure on the right) inside the remote controller's cover and then check that Main Sensor  on the LCD screen goes off.

NOTE

Be sure to install the remote controller so as to face the receiver.

If the unit does not receive any room temperature data from the remote controller for ten minutes even with its sensing function activated, the indoor unit sensor will automatically start sensing the room temperature.

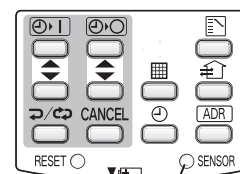

Sensor button

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

3. Setting Up Remote Controller Functions

The functions of the wireless remote controller can be set on site.

(These settings are saved in nonvolatile memory in the remote controller. Therefore, the settings do not revert to the defaults even when its batteries are changed.)

NOTE


Only service personnel should make the settings because the operation of the air conditioner may be affected, depending on the settings made.

Furthermore, making changes to these settings may cause actual operation to deviate from what is printed in the Operating Instructions, so be sure to fully explain this to the customer.

Making Settings (Do with unit stopped)

- (1) Holding down the swing/flap () + OFF timer () + mode select () buttons at the same time for 4 or more seconds will open the setting screen. (See figure below.)
- (2) Use the Temperature setting buttons () / () () to select the number of the item to be set.
- (3) Use the ON timer buttons () / () () to change settings.
- (4) The settings are saved with the once/every day button (). When this is done, the SET displayed on the LCD changes from blinking to lighting.
- (5) If other settings are to be changed, repeat steps (2) to (4).
- (6) When all settings have been made, press the start/stop () button.

Operation procedure and function display

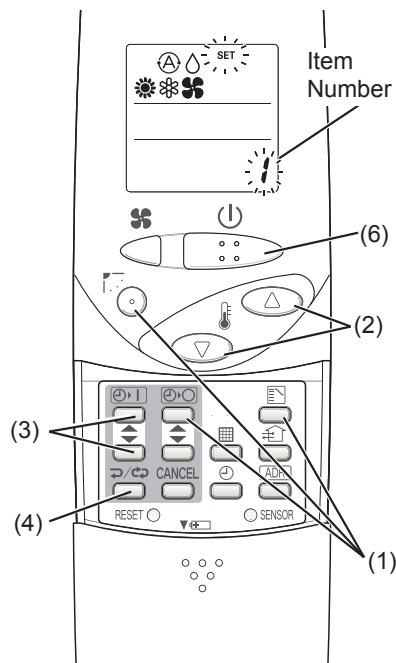

Detected contents	Set Contents	Factory setting
1 Operation Mode	→ → → → → → →	
2 Flap Display	→ → → (No Display) (*1)	
3 Select Fan Speed	→ → → (No Display)	
4 Display of Set Temperature	°C → °F → Setting Off (*2)	°C
5 Time Display	24 Hour (No Display) → AM/PM	24 Hour
6 Ventilation Fan ON/OFF	OFF (No Display) → ON	OFF (*3)
7 Cool temp Max	05 to 35°C	30
8 Cool temp Min	05 to 35°C	18
9 Heat temp Max	05 to 35°C	30 (*4)
10 Heat temp Min	05 to 35°C	16
11 Dry temp Max	05 to 35°C	30
12 Dry temp Min	05 to 35°C	18
13 Auto temp Max	05 to 35°C	27
14 Auto temp Min	05 to 35°C	17
16 Address Setting Max Value	00 (ALL only) → 01 to 031	06 (*5)
17 Heat temp Max ON/OFF	JP (Heater Max Temp Change Off) → EP (ON)	JP

Attention

- While the unit is in the SWING mode (swing/flap), the flap cannot be stopped in a desired position.
- When Setting OFF is selected, "°C" is displayed on the LCD.
- You can toggle between ON and OFF by pressing ventilation "()" button for 4 seconds or more.
- If the Heater Max ON/OFF setting is not changed to EP (ON), the setting change will not be reflected.
- This is the number of addresses that can be set in the address change mode. Do not set it to 07 or above.

2. HOW TO INSTALL THE WIRELESS REMOTE CONTROLLER RECEIVER

■ Test Operation

Preparation: Turn on the circuit breaker of units and then turn the power on. After the power is turned on, remote controller operation is ignored for approx. 1 minute because setting is being made.

This is not malfunction. (Contents received while setting are disabled.)

1. To start test operation, press and hold the emergency operation button for 10 seconds.
2. The indication lamps (OPERATION, TIMER, STANDBY) blink during test operation.
3. To finish test operation, press and hold the emergency operation button for 10 seconds.

Attention

- Do not use this mode for purposes other than the test operation.
(To prevent overload of the units)
- Read the installation instructions supplied with the units.
- Any of the Heat, Cool and Fan operations can only be performed.
- Temperature cannot be changed.
- The test operation mode is automatically turned off in 60 minutes.
(To prevent continuous test operation)
- Outdoor units do not operate for approx. 3 minutes after the power is turned on or operation is stopped.

3. Timer Remote Controller

3-1. Timer Remote Controller / CZ-RTC4

Safety Precautions



WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



CAUTION

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.



Matters to be observed



Prohibited matters



WARNING



Do not use this appliance in a potentially explosive atmosphere.



In case of malfunction of this appliance, do not repair by yourself. Contact the sales or service dealer for repair.



In case of emergency, remove the power plug from the socket or switch off the circuit breaker or the means by which the system is isolated from the mains power.



CAUTIONS



This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



- Do not operate with wet hands.
- Do not wash with water.

3. Timer Remote Controller

Note:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- FCC Caution: To assure continued compliance, follow the attached installation instructions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.


Specifications


Model No.	CZ-RTC4	
Dimensions	(H) 120 mm × (W) 120 mm × (D) 20 + 4.75 mm	
Weight	160 g	
Temperature/ Humidity range	0 °C to 40 °C / 20 % to 80 % (no condensation) *Indoor use only.	
Power Source	DC16 V (supplied with indoor unit)	
Clock	Precision	± 30 seconds/month (at normal temperature 25 °C) *Adjust periodically.
	Holding time	24 hours (when fully charged) *Approx. 8 hours are required for full charge.
Number of connected indoor units	Up to 8 units	

3. Timer Remote Controller

Part Names


Control panel

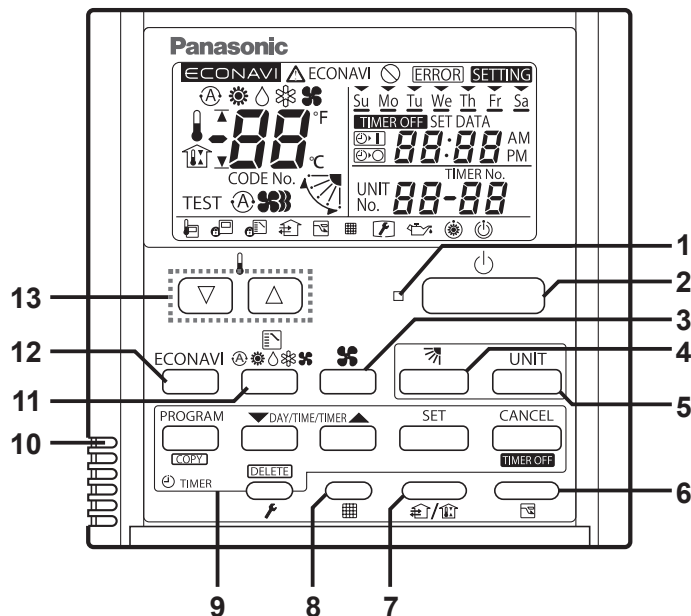





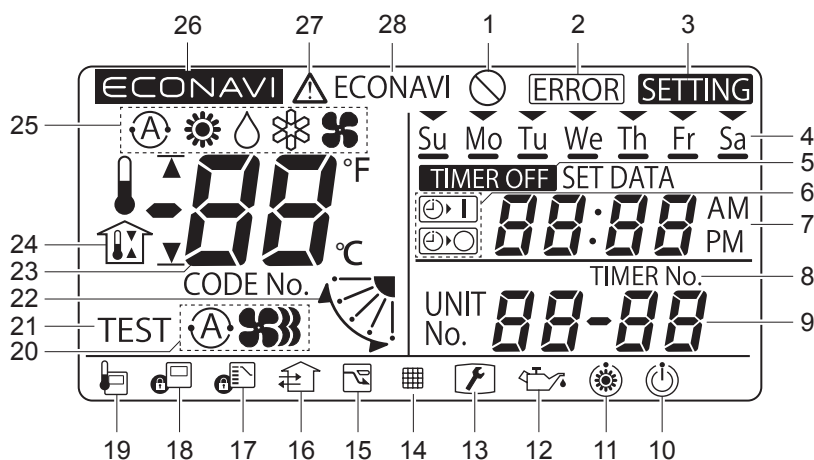


- 1 Operation indicator**
Illuminates during operation. Blinks during alarm.
- 2 Start/Stop button**
Starts/Stops operation.
- 3 Fan speed**
Changing the fan speed.
- 4 Swing/Air direction**
Use this button to set the auto swing or air direction to a specific angle.
- 5 Unit select**
When more than one indoor unit is operated by one remote control unit, this button is used to select a unit when adjusting the air direction.
- 6 Sleeping**
- 7 Ventilation**
Use this button when you installed a fan available in the market. Pressing this button turns on and off the fan. When turning off the air conditioner, the fan will be also turned off.
- 8 Filter reset**
Use this button to reset the filter sign. When  is displayed, press this button after cleaning the filter.
- 9 Timer setting buttons**
- 10 Remote control sensor**
Normally, the temperature sensor of the indoor unit is used to detect the temperature. However, it is also possible to detect the temperature around the remote control unit.
- 11 Mode select**
Pushing this button selects an operation mode.
- 12 ECONAVI**
Use this button to turn on/off the ECONAVI Function.
- 13 Temperature setting buttons**
Changing the temperature setting.

3. Timer Remote Controller

Screen display




- 1 Displayed if the selected feature was disabled during installation.
- 2 Displayed when a mistake is made during timer setting.
- 3 Appears when the timer program is being set.
- 4 Indicates today's day of the week.
- 5 Displayed when the timer has been turned OFF.
- 6 Timer program indication
: The indoor unit starts operation at the programmed time.
: The indoor unit stops operation at the programmed time.
- 7 Displays the present time on a 24-hour clock. Also, displays settings in the various setting modes.
- 8 Appears when the time program is being set.
- 9 Indicates the unit No. of the selected indoor unit.
- 10 Appears during the peak cut mode (Demand) if an electric heat pump (EHP) air conditioner is used or during standby if a gas heat pump (GHP) air conditioner is used.
- 11 Appears when the fan of the indoor unit is stopped or in low fan speed.
- 12 The engine oil needs to be replaced. (Only when using a gas heat pump air conditioner.)
- 13 Appears when the maintenance function (monitoring sensor temperatures) is activated.
- 14 The indoor unit filter needs to be cleaned.
- 15 Appears during the sleeping function.
- 16 Appears when a fan available in the market is installed and is operating.
- 17 Switching operation modes is prohibited. (Switching to Auto mode is also prohibited.)
- 18 Remote control operation is restricted by a central control device.
- 19 Appears when the remote control sensor is used.
- 20 The selected fan mode is displayed.
- 21 Appears while in test operation.
- 22 Indicates the flap position.
- 23 Indicates the set temperature.
- 24 Appears during the outing function.
- 25 Displays the selected operation mode.
 (AUTO  /HEAT  /DRY  /COOL  /FAN )
- 26 Appears when ECONAVI is being set to ON.
- 27 When inspection is required.
- 28 Appears with displaying 27 if there is a problem on ECONAVI.

3. Timer Remote Controller

Basic Operations

Setting the Present Time

- 1 Press and hold [SET] for more than 2 seconds to enter the present day and time setting mode.
Once you enter the setting mode, "SETTING", "▼"(day) and "time" flash.
- 2 Set "▼" to today's day of the week.
Press [▲] to move "▼" (flashing on the display) in the order of: Su → Mo → Tu →
Press [▼] to move it in the order of: Su → Sa → Fr →
Press [SET] to store.
- 3 Press [▼/▲] to change the present "hour" in the range of 0 to 23*1.
Set the present hour and press [SET].
The "hour" digits light up, and the "minute" digits start flashing.
*1 If the clock uses the 12 hours AM/PM setting, the hour is displayed in the range of AM 1 to 12 / PM 1 to 12.
- 4 Press [▼/▲] to change the present "minute" in the range of 0 to 59.
Set the present minute and press [SET]. The day and time are set and the unit finishes the setting mode.

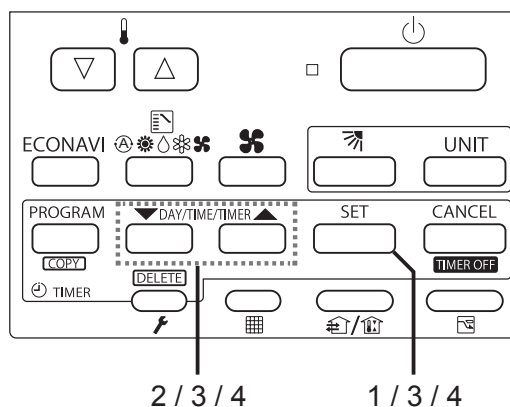

Note






- If the present time is invalid, "-- : --" is displayed. If the power failure occurs, check if the set data of day and time are valid.

3. Timer Remote Controller


How to Operate

Turn on the indoor unit before operation. See operating instructions of the indoor unit.

Start/Stop operation / Operation mode


1. Press [Start/Stop] to start operation.
2. Press the mode select button to select the mode among AUTO , HEAT , DRY , COOL  and FAN .

* Auto: The mode is automatically switched to Cool or Heat to achieve the set temperature.

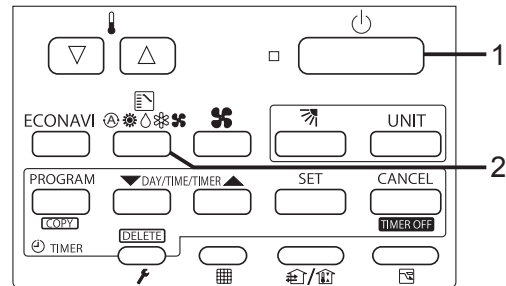

Fan speed / Set temperature / Flap


1. Press the fan speed button to set the fan speed.

 : Automatically switches the fan speed.

2. Press [∇/Δ] to set the desired temperature.

Cannot be set in Fan mode.

3. Press the flap button to adjust the flap position.

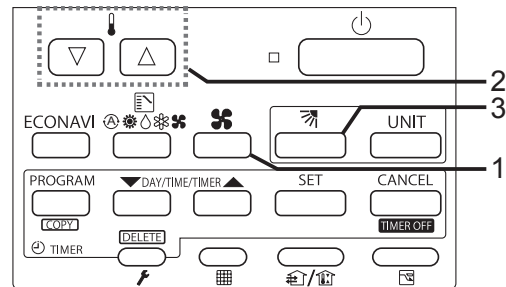


Weekly Program




1. Press [PROGRAM] to enter the program confirmation mode.
2. Select the day with [∇/Δ], and press [SET].
3. Select a Timer number with [∇/Δ], and press [SET].
4. Select the hour / minute / program pattern with [∇/Δ].

You can also set the temperature with [∇/Δ].

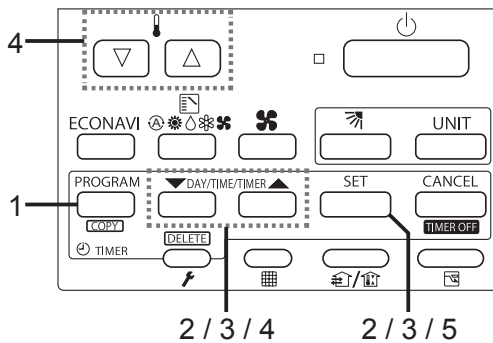5. Press [SET] to store the timer programme.



Note

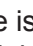
- If the heating performance is insufficient in Low  fan speed, change the fan speed to Medium  or High .
- The temperature range that can be set varies depending on the model.
- Temp sensor detects temperature in the vicinity of the air inlet of the indoor unit. The detected temperature slightly differs from the room temperature depending on the installation condition. The set temperature is a guideline of room temperature.

3. Timer Remote Controller




Installation Instructions

Timer Remote Controller

Model No.
CZ-RTC4

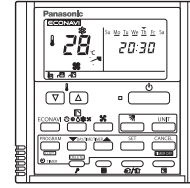


Supplied accessories

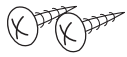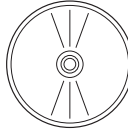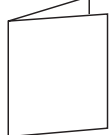 <p>(2)</p> <p>Screw M3.8 × 16</p>	 <p>(1)</p> <p>Operating Instructions</p>	 <p>(1)</p> <p>Quick Reference</p>
--	---	--

*Remote control wiring is not supplied. (field supplied item)

Dimensions

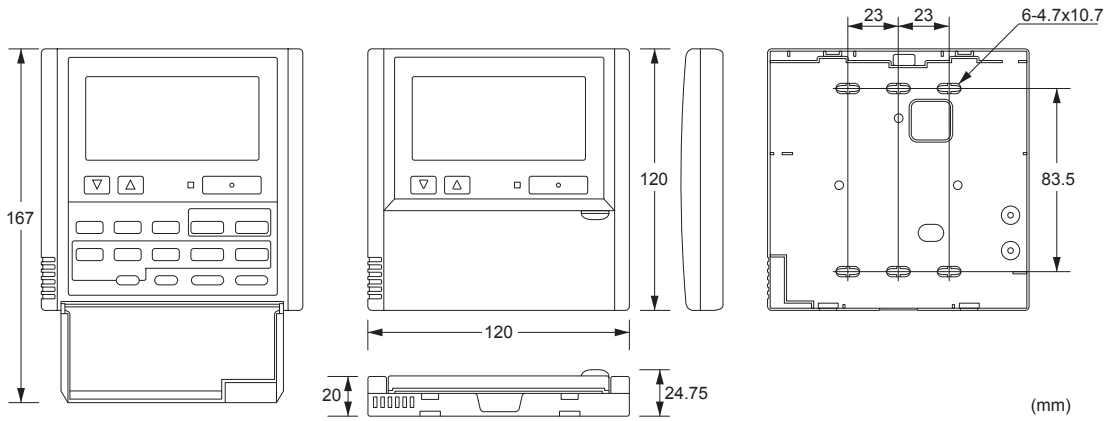

3. Timer Remote Controller

Safety Precautions

Safety Precautions

Read before installation

- Read the Installation Instructions carefully to install the remote controller correctly and safely. Be sure to read the Safety Precautions in particular before installation.
- After the installation is complete, perform test operation to confirm that no abnormality is present.
- We assume no responsibility for accidents or damages resulting from methods other than those described in the installation instructions or methods without using specified parts. Malfunctions that occurred due to the unauthorised installation methods are not covered by the product warranty.
- Read the installation instructions supplied with indoor units as well.



WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



CAUTION

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.



WARNING

- Turn off the circuit breaker of the units before installation.
- Ask your dealer or professionals for installation and electric work.
- This controller shall be installed in accordance with National Wiring Regulations.
- Connect and fix the specified cables for wiring securely.
- Do not allow the connection to be exposed to the external force of the cables.
- Choose an installation location that sufficiently supports the weight of the remote controller.



CAUTION

- Do not use the remote controller at the following locations.
 - Location where condensation occurs
 - Location where flammable gases, etc. may leak
 - Location where corrosive gases, etc. may leak
 - Location with lots of water or oil droplets (including machine oil)
 - Location where voltage fluctuation frequently occurs
 - Location where there is a machine producing electromagnetic radiation
 - Location where droplets of organic solvents spread
 - Location where acidic or alkaline solutions or special sprays are frequently used
- Do not operate with wet hands.
- Do not wash with water.




NOTICE The English text is the original instructions. Other languages are translation of the original instructions.

3. Timer Remote Controller

Installation Precautions


Installation location

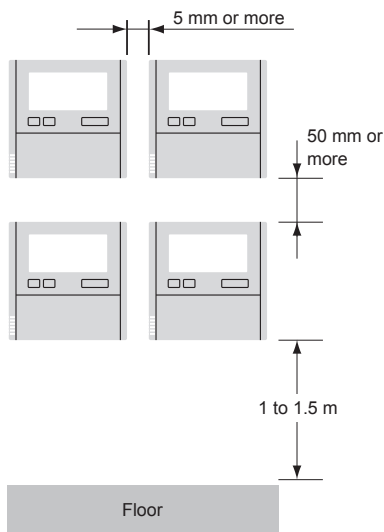

- Install at the height of 1 to 1.5 m from the floor (Location where average room temperature can be detected).
- Install vertically against the floor.
- When installing more than 1 remote controller next to each other, keep distance of 5 mm on the right and left and 50 mm on top and bottom.
- Avoid the following locations for installation.
 - By the window, etc. exposed to direct sunlight or direct air
 - In the shadow or backside of objects deviated from the room airflow.
 - Location where condensation occurs (The remote controller is not moisture proof or drip proof.)
 - Location near heat source
 - Uneven surface
- Keep distance of 1 m or more from the TV, radio and PC. (Cause of fuzzy images or noise)

Remote control wiring

■ Wiring diagram

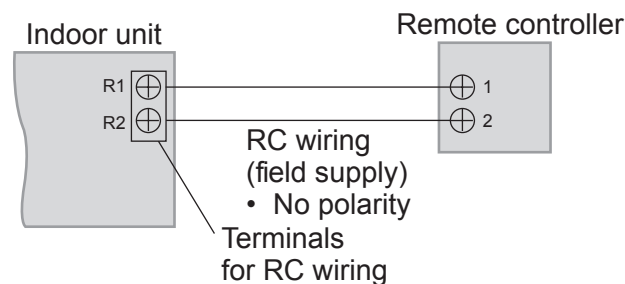

■ Type of wiring

Use cables of 0.5 to 1.25 mm².

■ Total wire length: 500 m or less

(The wire length between indoor units should be 200 m or less.)

■ Number of connectable units

Remote controller: Max. 2 Indoor unit: Max. 8

Attention

- Use the field supplied RC wiring with at least 1 mm in thickness of insulation part including the sheath.
Regulations on wire diameters differ from locally to locally. For field wiring rules, please refer to your LOCAL ELECTRICAL CODES before beginning. You must ensure that installation complies with relevant rules and regulations.
- Be careful not to connect cables to other terminals of indoor units (e.g. power source wiring terminal). Malfunction may occur.
- Do not bundle together with the power source wiring or store in the same metal tube.
Operation error may occur.
- If noise is induced to the unit power supply, attach a noise filter.


3. Timer Remote Controller

Installation Precautions (Continued)

Remote control wiring (Continued)

*Wiring as shown below is prohibited.


Installation example

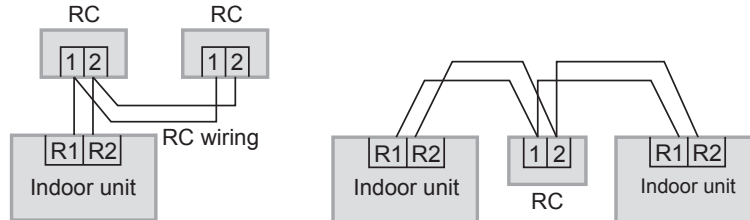

When setting both the main and sub remote controllers

After installation, set one remote controller to [Main] and the other to [Sub] for [Main/sub] for "Setting" (P.3-50).


Installation example

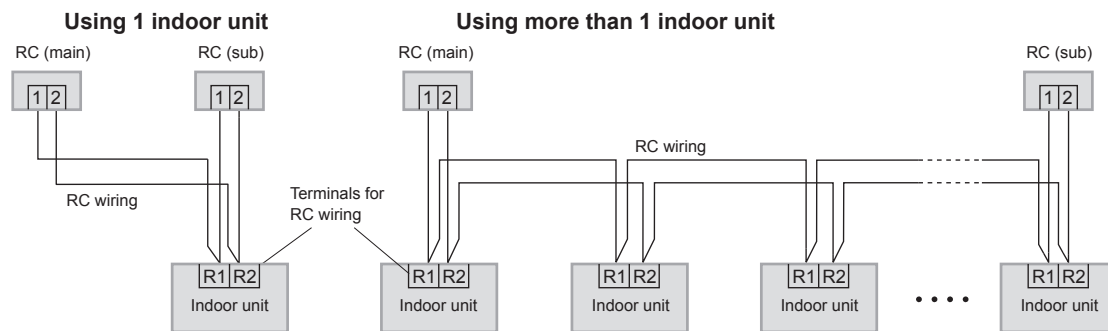

*Remote controllers can be connected to any indoor unit for operation.

Mounting

- Remove the bottom case.**
Insert the driver and slightly turn.
*Do not insert the screw driver too deep. Doing so may cause the claw to be broken.

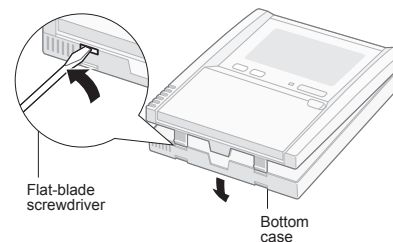

Attention

Mounting the bottom case

- Tighten the screws securely until the screw heads touch the bottom case. (Otherwise, loose screw heads may hit the PCB and cause malfunction when mounting the top case.)
- Do not over-tighten the screws. (The bottom case may be deformed, resulting in fall of the unit.)


Connecting the remote control wiring

- Arrange the wires as shown in the illustration for ⑥ in step 2 (P.3-49) and ⑤ (P.3-49), avoiding unnecessary wires being stored in the case.
- Avoid the wires touching parts on the PCB.
- Avoid the wires coming in contact with the metallic object protruded from the PCB.

(Caught wires may destroy the PCB.)

Mounting the top case

- Do not push the top case with excessive force. (Doing so may cause the protrusions of the bottom case to hit and destroy the PCB.)

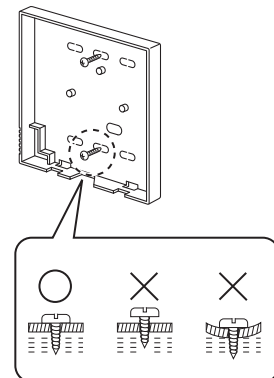


3. Timer Remote Controller

Mounting (Continued)


2 Mount to the wall.

Exposed type

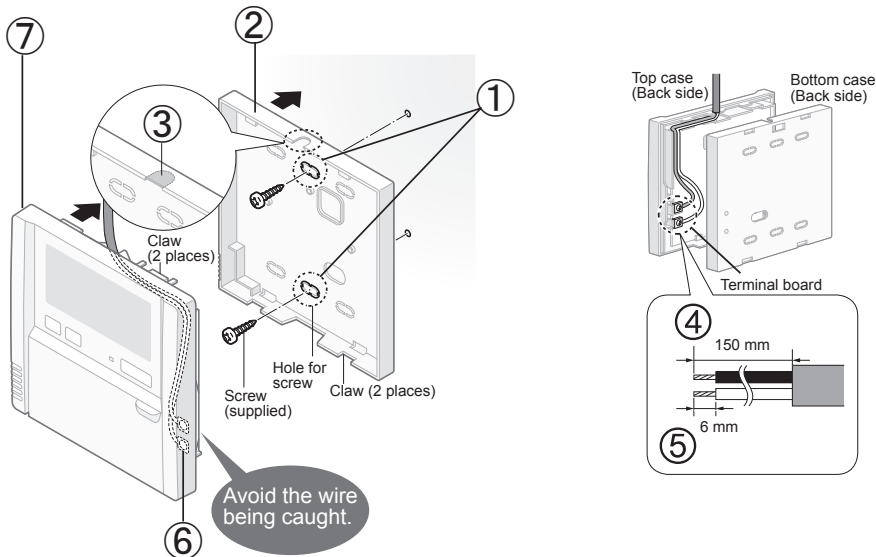

- ① Make 2 holes for screws using a driver.
- ② Mount the bottom case to the wall.
- ③ Cut here with a nipper and remove the burr with a file.
- ④ Remove the sheath. Approx. 150 mm
- ⑤ Remove the coating. Approx. 6 mm
- ⑥ Connect the remote control wiring.
 - Make sure the wiring connection is in the correct direction.
 - Arrange the wires along the groove of the case.
 - Avoid the wire being caught.
- ⑦ Mount the top case.
 - Align the claws of the top case and then align the claws of the bottom case.

Embedded type

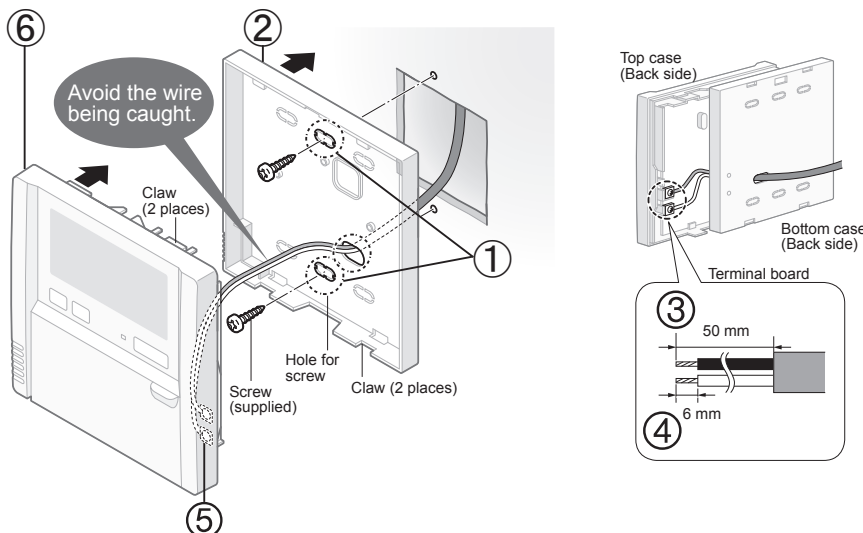

- ① Make 2 holes for screws using a driver.
- ② Mount the bottom case to the wall.
 - Pass the wire through the hole in the centre of the bottom case.
- ③ Remove the sheath. Approx. 50 mm
- ④ Remove the coating. Approx. 6 mm
- ⑤ Connect the remote control wiring.
 - Make sure the wiring connection is in the correct direction.
 - Avoid the wire being caught.
- ⑥ Mount the top case.
 - Align the claws of the top case and then align the claws of the bottom case.

3. Timer Remote Controller

Setting / Test operation / Specifications

EN

Setting

- Clock
- RC. setting mode (Main/sub, Clock type)
- Detailed setting mode (Ventilation fan output setting, Room temperature sensor, Temperature display setting)

Clock

- 1 Press and hold for several seconds.
- 2 Set day of the week, hour and minute.
 "▼": Su ↔ Mo ↔ ... ↔ Sa
 (Repeat)

RC. setting mode

- 1 Press and hold the 2 buttons for several seconds simultaneously.
 ,
- 2 Select the Code no.
- 3 Select the Set data.
 →
 The indicator illuminates after blinking.
 Press .

Code no.	Item	Set data	
		0000	0001
01	Main/sub	Sub	Main
02	Clock type	24 hours	12 hours (AM/PM)

Detailed setting mode

- 1 Press and hold the 3 buttons for several seconds simultaneously.
 , ,
- 2 Select the Code no.
- 3 Select the Unit no.
- 4 Select the Set data.
 →
 The indicator illuminates after blinking.
 Press .

Code no.	Item	Set data	
		0000	0001
31	Ventilation fan output setting	Not connected	Connected
32	Room temperature sensor	Main unit	RC
33	Temperature display setting	°C	°F

Test operation

Turn on the circuit breaker beforehand, referring to the operating instructions for the unit. The remote controller starts.

- 1 Press and hold for several seconds.
 [TEST] display appears. (The unit enters the test operation mode.)
- 2 Press . Perform the test operation.
 [TEST] is displayed during the test operation.
- 3 Press . Finish the test operation
 [TEST] display disappears.
- 4 Delete the error history.
 Press and hold the 2 buttons for several seconds simultaneously.
 ,
 Information of errors is displayed.
 To delete the error history, press .
 Press to finish service mode.

Attention

- Do not use this mode for purposes other than the test operation.
 (To prevent overload of the units)
- Read the installation instructions supplied with the units.
- Any of the Heat, Cool and Fan operations can only be performed.
- Temperature cannot be changed.
- The test operation mode is automatically turned off in 60 minutes. (To prevent continuous test operation)
- Outdoor units do not operate for approx. 3 minutes after the power is turned on or operation is stopped.

Specifications

Model No.	CZ-RTC4		
Dimensions	(H) 120 mm × (W) 120 mm × (D) 20 + 4.75 mm		
Weight	160 g		
Temperature/ Humidity range	0 °C to 40 °C / 20 % to 80 % (no condensation) *Indoor use only.		
Power Source	DC16 V (supplied with indoor unit)		
Clock	Precision	± 30 seconds/month (at normal temperature 25 °C) *Adjust periodically.	
	Holding time	24 hours (when fully charged) *Approx. 8 hours are required for full charge.	
Number of connected indoor units	Up to 8 units		

3. Timer Remote Controller

3-2. Timer Remote Controller / CZ-RTC5A

Safety Precautions



WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



CAUTION

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.



Matters to be observed



Prohibited matters



WARNING



Do not use this appliance in a potentially explosive atmosphere.



In case of malfunction of this appliance, do not repair by yourself. Contact the sales or service dealer for repair.



In case of emergency, remove the power plug from the socket or switch off the circuit breaker or the means by which the system is isolated from the mains power.



CAUTIONS



This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



- Do not operate with wet hands.
- Do not wash with water.

3. Timer Remote Controller

Note:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- FCC Caution: To assure continued compliance, follow the attached installation instructions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.


Specifications

Model No.		CZ-RTC5A
Dimensions		(H) 120 mm x (W) 120 mm x (D) 16 mm
Weight		180 g
Temperature/ Humidity range		0 °C to 40 °C / 20 % to 80 % (No condensation) *Indoor use only.
Power Source		DC16 V (supplied with indoor unit)
Clock	Precision	± 30 seconds/month (at normal temperature 25 °C) *Adjust periodically.
	Holding time	72 hours (When fully charged) *Approx. 8 hours are required for full charge.
Number of connected indoor units		Up to 8 units

3. Timer Remote Controller


Part Names

Control panel

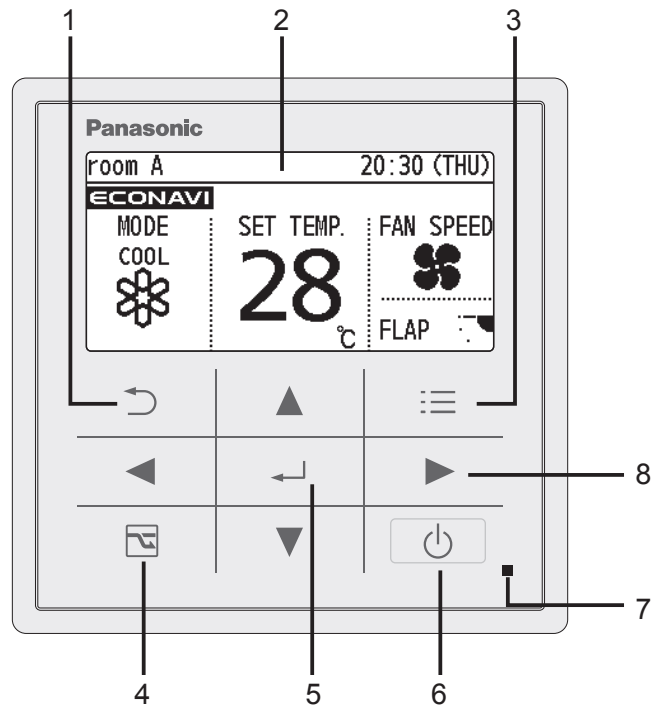


- 1 Return button**
Returns to the previous screen.
- 2 LCD screen**
- 3 Menu button**
Displays the menu screen.
- 4 Energy saving button**
Switches Energy saving/Normal operation.
- 5 Enter button**
Fixes the selected content.
- 6 Start/Stop button**
Starts/Stops operation.
- 7 Operation indicator**
Illuminates during operation. Blinks during alarm.
- 8 Cross key buttons**
Selects an item. (◀Left / ▼Down / ▶Right / ▲Up)


Note

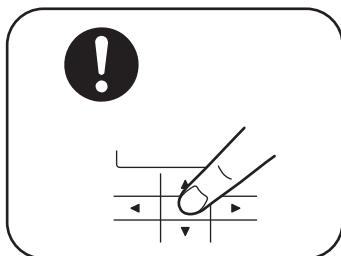

Press centre

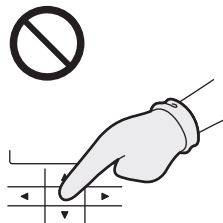

No glove

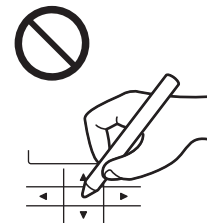


No pen

3. Timer Remote Controller


Screen display

Top screen

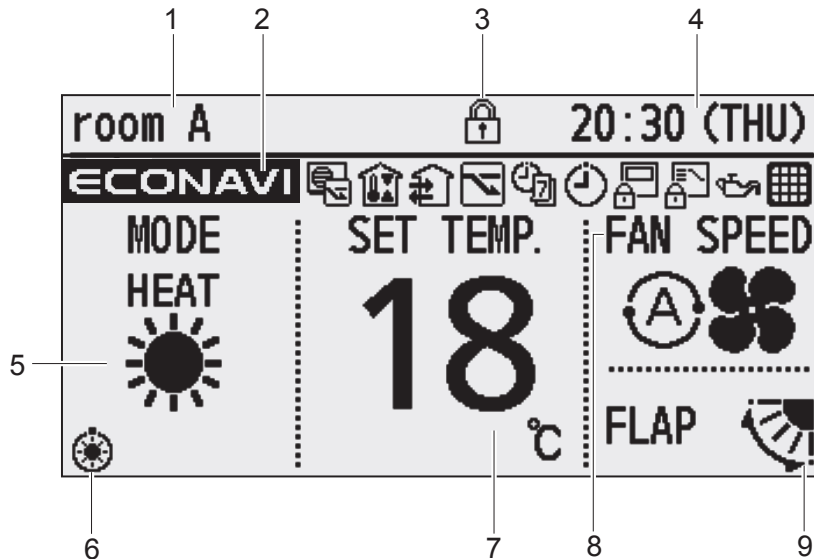


- 1 Remote controller name
- 2 Appears when ECONAVI is being set to ON.
- 3 Operation is locked.
- 4 Present time & day
- 5 Operation mode
- 6 The indoor unit is stopped or slight blow operation is in process.
- 7 Set temperature
- 8 Fan speed
- 9 Flap

■ Item selection screen

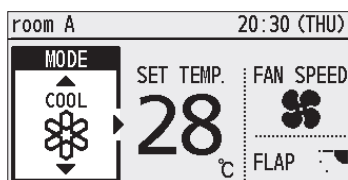


Cursor

■ Operation stop screen

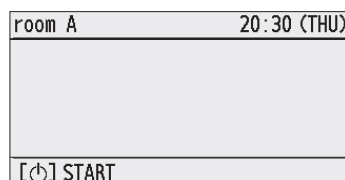

Operation guide

■ Lock screen display

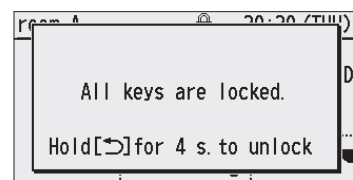


[Operation lock] is functioning.

- To cancel lock
Press [] button for 4 seconds.


3. Timer Remote Controller

■ Setting information icons displayed on the top screen

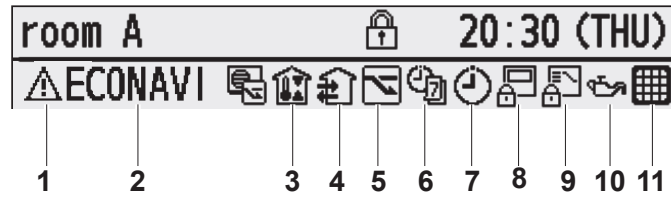

- 1 When inspection is required
- 2 Appears if there is a problem on ECONAVI.
- 3 Prevents the room temperature from increasing too much (or decreasing too much) when no one is in the room.
- 4 Fresh air is used for ventilation.
(Only when connecting a heat exchange ventilation unit or connecting a commercially sold fan.)
- 5 Energy saving operation is in process.
- 6 [Weekly timer] is set.
- 7 [ON/OFF timer] is set.
- 8 Remote control operation is restricted by a central control device.
- 9 Switching operation modes is prohibited.
(Switching to Auto mode is also prohibited.)
- 10 The engine oil needs to be replaced.
(Only when using a gas heat pump air conditioner.)
- 11 The indoor unit filter needs to be cleaned.



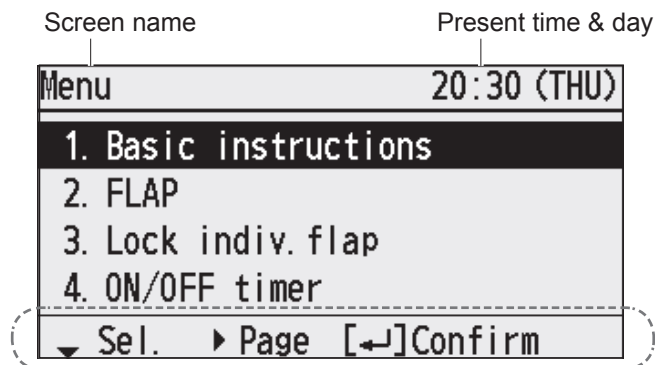




Menu screen




- Operation guide
- The currently operable content is simply displayed.
- ▲▼◀▶: Cross key buttons
 - ↵: Enter button


3. Timer Remote Controller

Basic Operations

- 1 **Start operation.**
Press 
(The operation indicator illuminates.)
 - 2 **Select the item to set.**
Press  .
 - 3 **Change the setting.**
Press    .
- (The cursor disappears.)

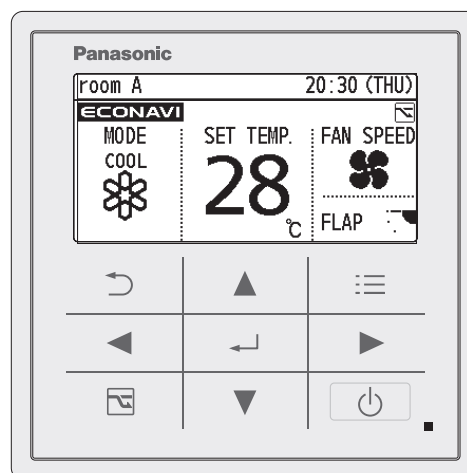

Note


- Operation modes that cannot be set are not displayed.
- The flap display differs from the actual flap angle.
- Pressing  after recovery from mains power failure will resume operation with the contents before mains power failure has occurred.
- If no operation is performed for a certain period of time, the backlight turns off to save electricity. (Press any button for illumination.)
- The energy saving operation restricts the maximum current value, resulting in decreased cooling/heating performance.
(If the current of outdoor units does not reach the peak due to low load operation, the current value is not restricted.)
- The temperature range that can be set varies depending on the model.
- The set temperature range can be changed using the remote controller.
- Some models do not display the flap.

3. Timer Remote Controller

Perform the following operations in step 2 on page 7.


■ Operation mode (e.g. Cool, Heat, etc.)

Press ◀.

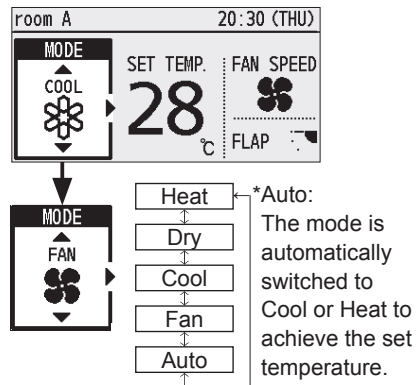


■ Set temperature

Press ↵. (When the cursor is not visible)

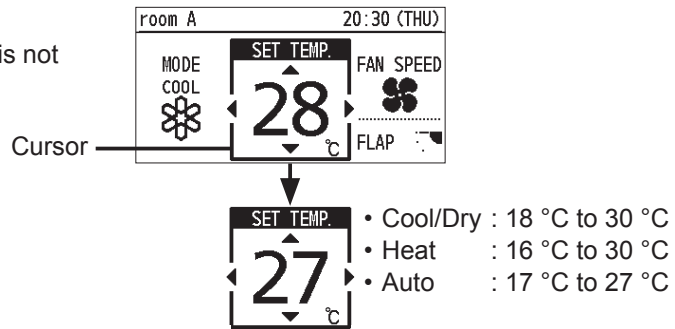


■ Fan speed

Press ▶.

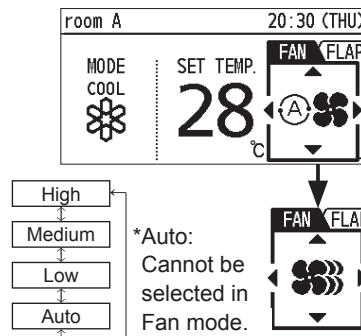

■ Flap

Press ▶ 2 times.

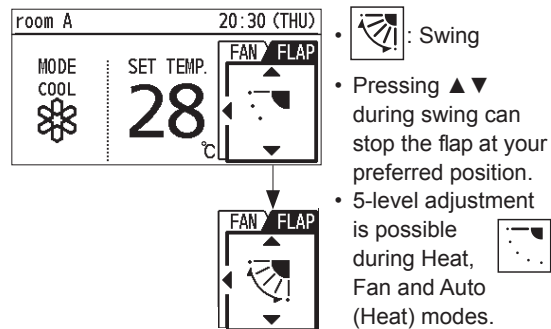


NOTICE


The English text is the original instructions. Other languages are translation of the original instructions.

3. Timer Remote Controller


Part Names

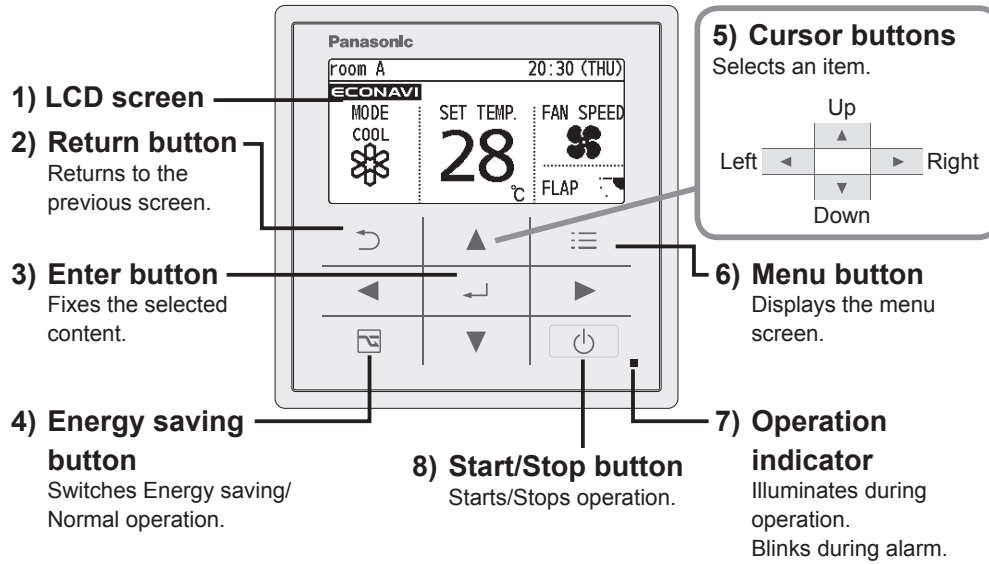


Note

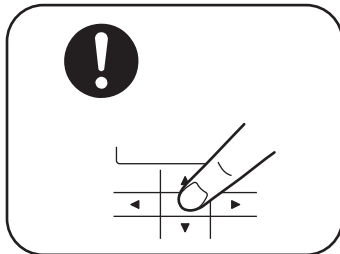

Press centre

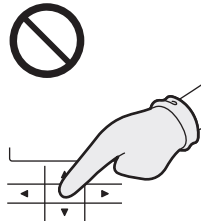

No glove

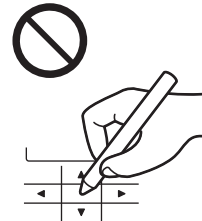

No pen

3. Timer Remote Controller

Safety Precautions

Read before installation

- Read the Installation Instructions carefully to install the remote controller correctly and safely. Be sure to read the Safety Precautions in particular before installation.
- After the installation is complete, perform test operation to confirm that no abnormality is present.
- We assume no responsibility for accidents or damages resulting from methods other than those described in the installation instructions or methods without using specified parts. Malfunctions that occurred due to the unauthorised installation methods are not covered by the product warranty.
- Read the installation instructions supplied with indoor units as well.



WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



CAUTION

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.



WARNING

- Turn off the circuit breaker of the units before installation.
- Ask your dealer or professionals for installation and electric work.
- This controller shall be installed in accordance with National Wiring Regulations.
- Connect and fix the specified cables for wiring securely.
- Do not allow the connection to be exposed to the external force of the cables.
- Choose an installation location that sufficiently supports the weight of the remote controller.



CAUTION


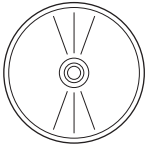
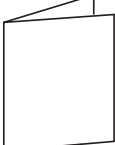
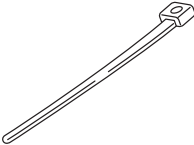
- Do not use the remote controller at the following locations.
 - Location where condensation occurs
 - Location where flammable gases, etc. may leak
 - Location where corrosive gases, etc. may leak
 - Location with lots of water or oil droplets (including machine oil)
 - Location where voltage fluctuation frequently occurs
 - Location where there is a machine producing electromagnetic radiation
 - Location where droplets of organic solvents spread
 - Location where acidic or alkaline solutions or special sprays are frequently used
- Do not operate with wet hands.
- Do not wash with water.



NOTICE The English text is the original instructions. Other languages are translation of the original instructions.

3. Timer Remote Controller

CONTENTS

Supplied accessories			
Screw M3.8 x 16 (2) 	Operating Instructions (1) 	Quick Reference (1) 	Clamper (1) 

*Remote control wiring is not supplied. (field supplied item)


Specifications

Model No.	CZ-RTC5A	
Dimensions	(H) 120 mm x (W) 120 mm x (D) 16 mm	
Weight	180 g	
Temperature/ Humidity range	0 °C to 40 °C / 20 % to 80 % (no condensation) *Indoor use only.	
Power Source	DC16 V (supplied with indoor unit)	
Clock	Precision	± 30 seconds/month (at normal temperature 25 °C) *Adjust periodically.
	Holding time	72 hours (when fully charged) *Approx. 8 hours are required for full charge.
Number of connected indoor units	Up to 8 units	

3. Timer Remote Controller

Installation Precautions


Installation location

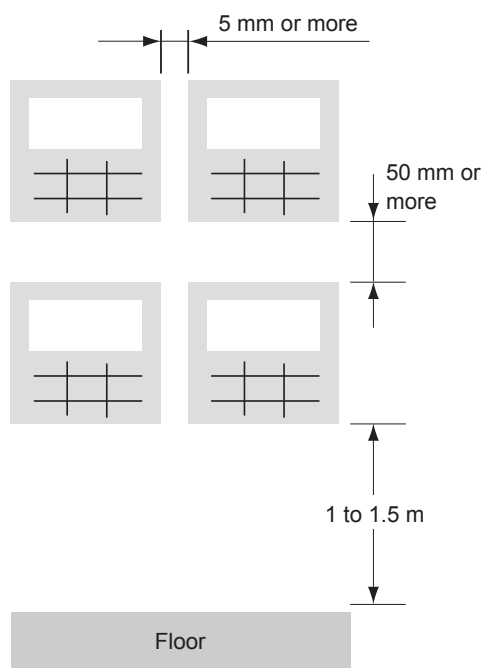

- Install at the height of 1 to 1.5 m from the floor (Location where average room temperature can be detected).
- Install vertically against the floor.
- When installing more than 1 remote controller next to each other, keep distance of 5 mm on the right and left and 50 mm on top and bottom.
- Avoid the following locations for installation.
 - By the window, etc. exposed to direct sunlight or direct air
 - In the shadow or backside of objects deviated from the room airflow.
 - Location where condensation occurs (The remote controller is not moisture proof or drip proof.)
 - Location near heat source
 - Uneven surface
- Keep distance of 1 m or more from the TV, radio and PC. (Cause of fuzzy images or noise)

Remote control wiring

■ Wiring diagram

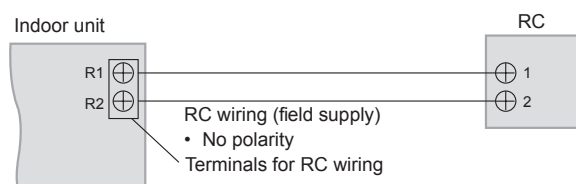

■ Type of wiring

- Use cables of 0.5 to 1.25 mm².

- Total wire length: 500 m or less
(The wire length between indoor units should be 200 m or less.)


- Number of connectable units
Remote controller: Max. 2
Indoor unit: Max. 8

Attention

- Use the field supplied RC wiring with at least 1 mm in thickness of insulation part including the sheath. Regulations on wire diameters differ from locally to locally. For field wiring rules, please refer to your LOCAL ELECTRICAL CODES before beginning. You must ensure that installation complies with relevant rules and regulations.
- Be careful not to connect cables to other terminals of indoor units (e.g. power source wiring terminal). Malfunction may occur.
- Do not bundle together with the power source wiring or store in the same metal tube. Operation error may occur.
- If noise is induced to the unit power supply, attach a noise filter.

3. Timer Remote Controller

***Wiring as shown below is prohibited.**

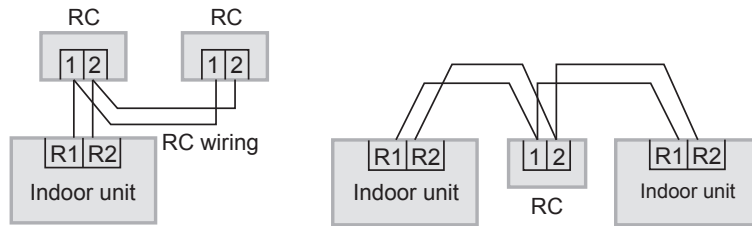


When setting both the main and sub remote controllers

After installation, set one remote controller to [Main] and the other to [Sub] for [Main/sub] for "Setting" (P.3-67).


When using the remote controllers* in combination, set this unit to [Main].

*CZ-RTC2, CZ-RTC4, CZ-RE2C2, CZ-RELC2

■ Using 1 indoor unit

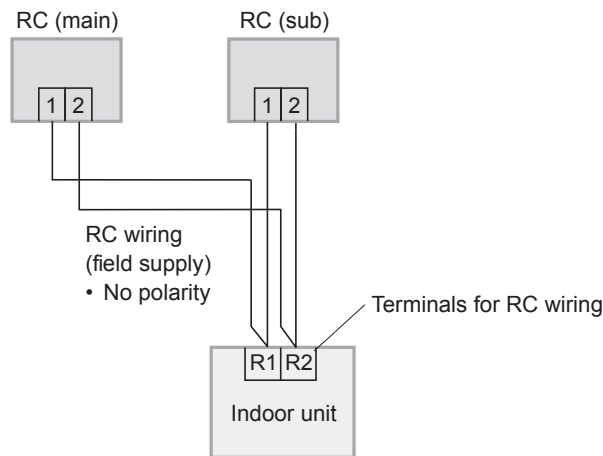

■ Using more than 1 indoor unit or heat exchange ventilation unit

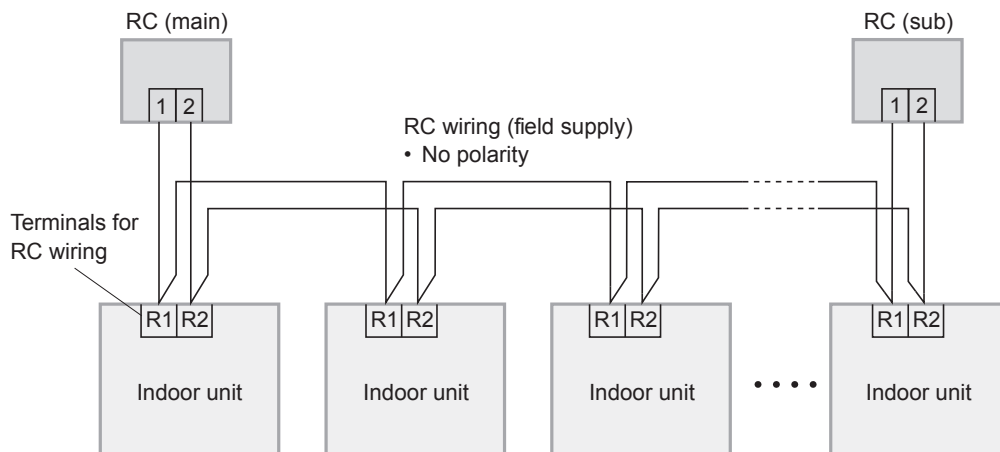


Note

- Remote controllers can be connected to any indoor unit for operation.

3. Timer Remote Controller

Mounting

1 Remove the bottom case.


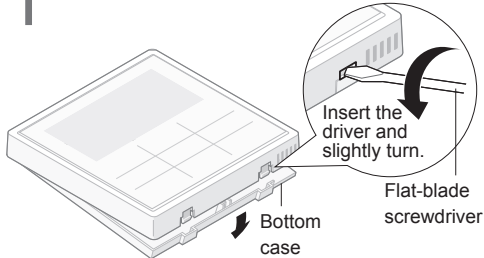


2 Mount to the wall.

Attention

Mounting the bottom case

- Tighten the screws securely until the screw heads touch the bottom case. (Otherwise, loose screw heads may hit the PCB and cause malfunction when mounting the top case.)
- Do not over-tighten the screws. (The bottom case may be deformed, resulting in fall of the unit.)



Connecting the remote control wiring

- Arrange the wires as shown in the illustration for ② in step 2, avoiding unnecessary wires being stored in the remote controller case. (Caught wires may destroy the PCB.)
- Avoid wires touching parts on the PCB. (Caught wires may destroy the PCB.)


Exposed type

Preparation: Make 2 holes for screws using a driver.

3 Mount the top case.

- Align the claws of the top case and then align the claws of the bottom case.

1 Mount the bottom case to the wall.

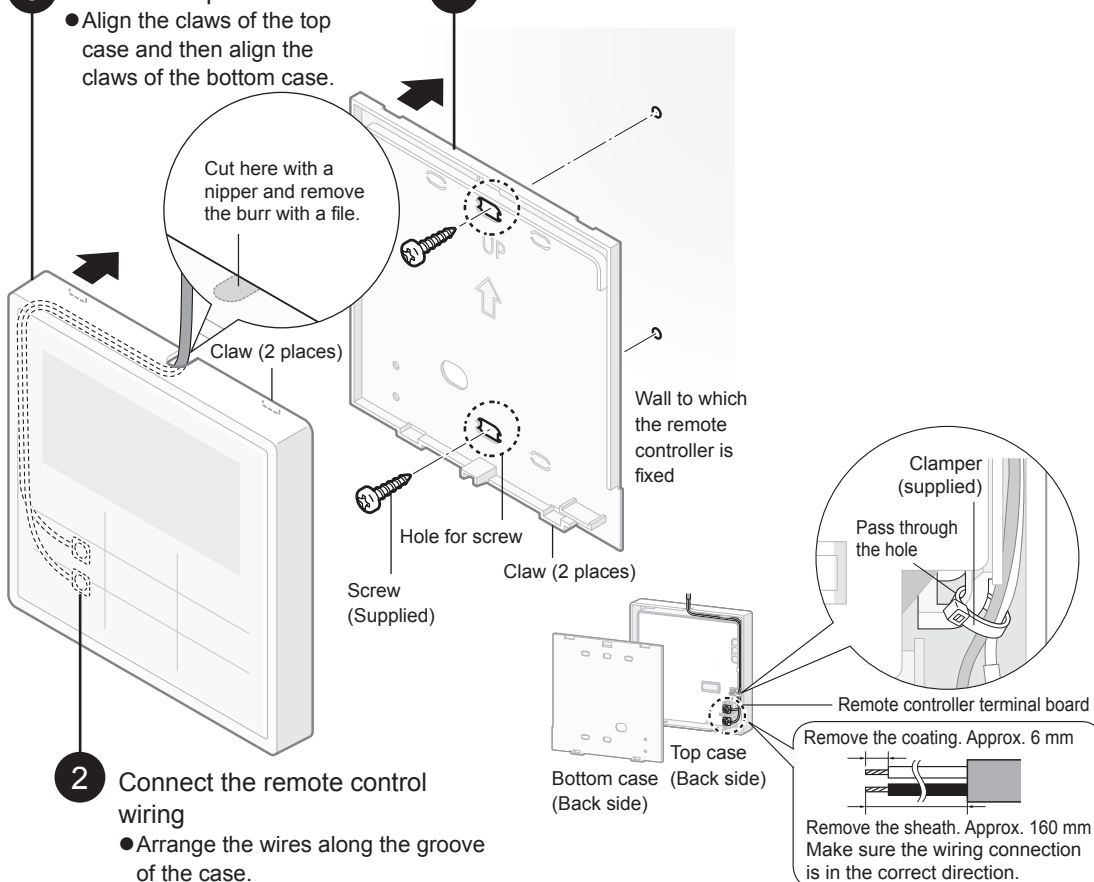


2 Connect the remote control wiring

- Arrange the wires along the groove of the case.


3. Timer Remote Controller

Embedded type

Preparation: Make 2 holes for screws using a driver.

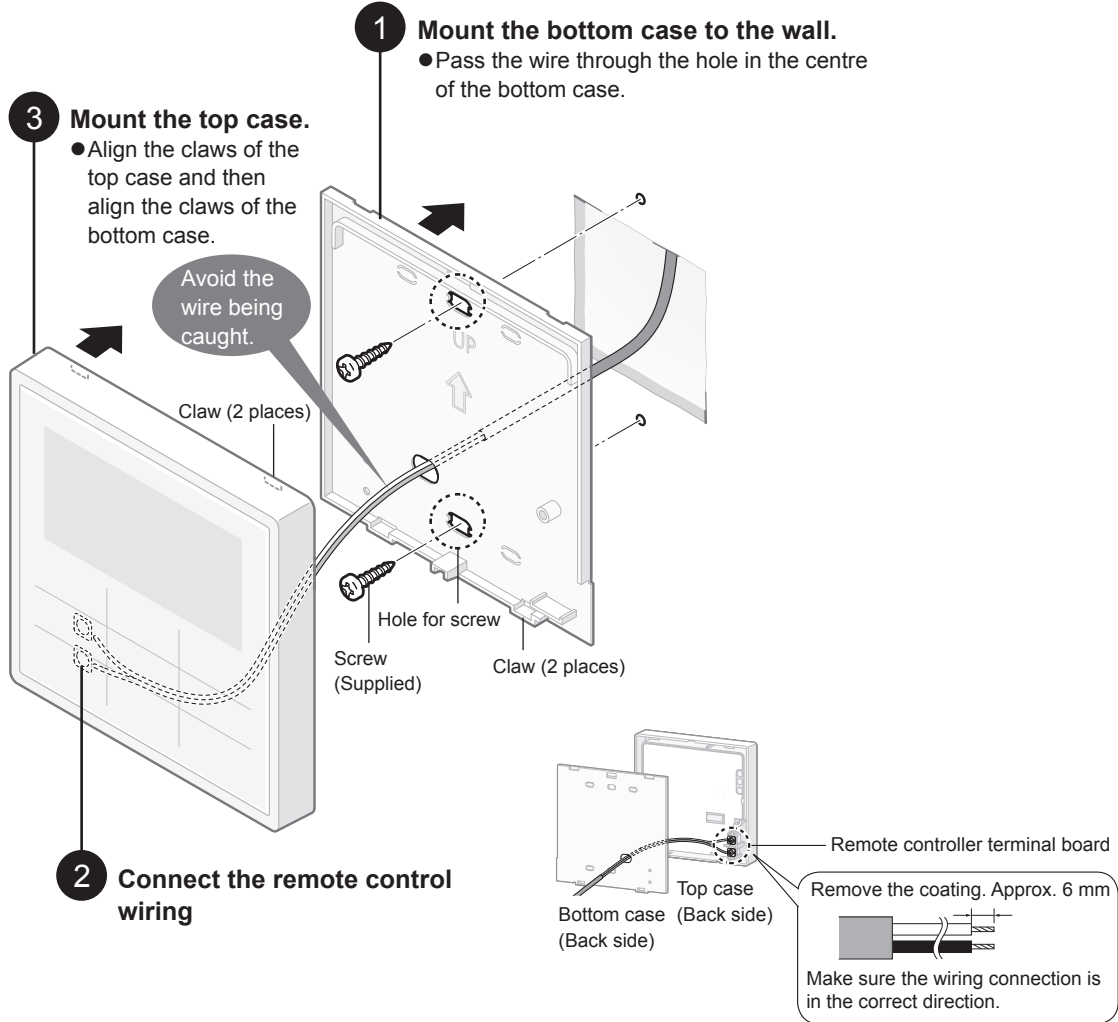

Dimensions

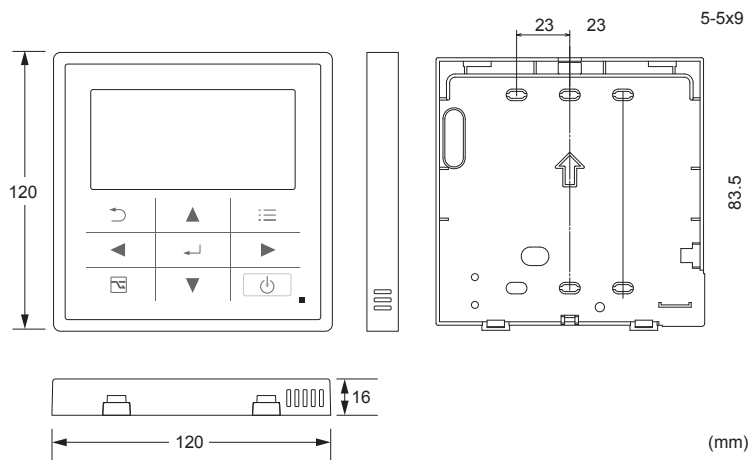

3. Timer Remote Controller

Setting

1 Press .

2 Select [Initial settings].


▲ ▼ → 


3 Select the item to set.

▲ ▼ → 

■ Language ■ Clock ■ Controller name

Controller name

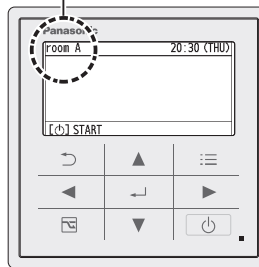


Menu	20:30 (THU)
8. Quiet operation	
9. Power consumption monitor	
10. Energy saving	
11. Initial settings	
◀ Sel. ▶ Page  Confirm	

Default setting : English

Language

4 Set.

▲ ▼ → 

Language	20:30 (THU)
ENGLISH	FRANÇAIS
DEUTSCH	ITALIANO
ESPAÑOL	POLSKI
РУССКИЙ	
◀▶ Sel.  Confirm	

Clock

4 Set.

▲ ▼ → ▶ → 
(Repeat)

Clock	20:30 (THU)
Year/Month/Day	Hour:Min
2015 / 10 / 1	20 : 30
◀ Change ▶ Month	

Controller name

4 Set.


▲ ▼ ◀ ▶ → 

(Repeat the same procedure for all characters.)


RC. name:	
ABC/abc	0-9/Other
ABCDEFGHIJKLMN OPQR	Space
STUVWXYZ abcdefghi	BS
klmnopqrstuvwxyz	Conf
◀▶ Sel.	

- Up to 16 characters
(Space is included in the number of characters.)


■ To delete 1 character

Select [BS] with ▲ ▼ ◀ ▶ and press .

■ To change the character type


Select the character type with ▲ ▼ ◀ ▶ and press .

■ To enter space

Select [Space] with ▲ ▼ ◀ ▶ and press .

5 Select [Conf].

▲ ▼ ◀ ▶ → 

RC. name: room A	
ABC/abc	0-9/Other
ABCDEFGHIJKLMN OPQR	Space
STUVWXYZ abcdefghi	BS
klmnopqrstuvwxyz	Conf
◀▶ Sel.  Confirm	

3. Timer Remote Controller

Setting

■ Service contact

- 1** Press and hold the 3 buttons for 4 seconds or more simultaneously.

↶, ↵, ▶

- 2** Select the item to set.

▲ ▼ → ↵

Maintenance func	20:30 (THU)
1. Outdoor unit error data	
2. Service contact	
3. RC setting mode	
4. Test run	
↕ Sel. ◀ ▶ Page [↵] Confirm	

Service contact

- 3** Select. (Name)

▲ ▼ → ↵

Service contact	20:30 (THU)
Name	Unset
Contact number	Unset
↕ Sel. [↵] Confirm	

Name

Contact number

- 4** ▲ ▼ ◀ ▶ → ↵
(Repeat the same procedure for all characters.)

Name:	ABC/abc	0-9/Other
ABCDEFGHIJKL MNOPQR	Space	
STUVWXYZ	abcdefghi	BS
klmnopqrstuvwxyz		Conf
↕ Sel.		

- Up to 16 characters
(Space is included in the number of characters.)

■ To delete 1 character

Select [BS] with ▲ ▼ ◀ ▶ and press ↵.

■ To change the character type

Select the character type with ▲ ▼ ◀ ▶ and press ↵.

■ To enter space

Select [Space] with ▲ ▼ ◀ ▶ and press ↵.

- 5** Select [Conf].

▲ ▼ ◀ ▶ → ↵

Name:XXXXXXXXXXXXXXXXXX	
ABC/abc	0-9/Other
ABCDEFGHIJKL MNOPQR	Space
STUVWXYZ	abcdefghi
klmnopqrstuvwxyz	BS
	Conf
↕ Sel. [↵] Confirm	

- Up to 16 characters
(Space is included in the number of characters.)

- 6** Select on the screen for step 3.
(Contact number)

▲ ▼ → ↵

Contact number:	
1 2 3 + -	Space
4 5 6 ()	BS
7 8 9 0 * #	Conf
↕ Sel. [↵] Enter	

- 7** ▲ ▼ ◀ ▶ → ↵
(Repeat the same procedure for all characters.)

- 8** Select [Conf].

▲ ▼ ◀ ▶ → ↵

Contact number:XXXXXXXXXXXXXXXXXX	
1 2 3 + -	Space
4 5 6 ()	BS
7 8 9 0 * #	Conf
↕ Sel. [↵] Confirm	

3. Timer Remote Controller

Setting

- RC. setting mode (Main/sub, Clock type, Password change)
- Detailed settings (Vent output setting, Temp sensor setting, Temp display setting)

1 Press and hold the 3 buttons for 4 seconds or more simultaneously.



2 Select the item to set.



Maintenance func	20:30 (THU)
1. Outdoor unit error data	
2. Service contact	
3. RC setting mode	
4. Test run	
◀ Sel. ▶ Page [↵] Confirm	

RC. setting mode

3 Set.
(Select the Code no. and Set data.)



RC. setting mode	20:30 (THU)
Code no.	Set data
01	0001
◀ Sel. ▶ Next	
Code no.	Set data

Code no.		Set data
01	Main/sub	Set this when using 2 remote controllers. • 0000: Sub • 0001: Main (factory setting)
02	Clock type	Set the type of clock display. • 0000: 24 hours • 0001: 12 hours (AM/PM)
36	Display of operation lock cancelling method	Set whether to display the operation lock cancelling method on the lock screen while operation is locked. (For the lock screen, see the "Part Names" section in the Quick Reference.) • 0000: Displayed (factory setting) • 0001: Not displayed
2F	Password change	Set the administrator password. • 0000 to 9999 • 0000 (factory setting)

Detailed settings

3 Set.
(Select the indoor unit number, Code no. and Set data.)



Detailed settings	20:30 (THU)	
Unit no.	Code no.	Set data
1-1	10	0001
◀ Sel. ▶ Next		
Indoor unit number	Code no.	Set data

Code no.		Set data
31	Vent output setting	Set this when connecting a commercially sold fan, etc. to the ventilation fan output "FAN DRIVE:2P (White)" on the indoor control board. *Dedicated cables (optional) are required. • 0000: Not connected • 0001: Connected
32	Temp sensor setting	Set this when measuring the room temperature with the room temperature sensor of the remote controller. • When using the main and sub controllers, the main one is enabled. • When controlling in group, set this for the main indoor unit number. (No setting is required for sub indoor units.) • When using with the remote sensor in combination, set the indoor unit setting data. • 0000: Indoor unit • 0001: RC
33	Temp display setting	Set the type of temperature display. • 0000: °C • 0001: °F

3. Timer Remote Controller

Setting

■ Auto address ■ Set elec. consumption

Auto address

3 Set.
(Select the Code no. [A1] and O/D unit no.)
▲ ▼ → ▶ → ◀
(Repeat)

Auto address		20:30 (THU)
Code no.	O/D unit no.	
A1	1	
◀ Sel.	▶ Next	
Code no.	O/D unit no.	

Code no.	O/D unit no.
A1	1
Set the Auto address for each O/D unit no. Select the O/D unit no. (outdoor unit) for Auto address.	
• Outdoor unit number	

Note

- After RC. setting mode, Detailed settings or Auto address is complete, the unit restarts.

Attention

- Set Auto address after all units are turned on and 1 minute and 30 seconds or more have passed.
- Operate the units after Auto address is set and 1 minute and 30 seconds or more have passed.

Set elec. consumption

3 Set.
(Select the power supply voltage of outdoor units.)
▲ ▼ → ▶ → ◀

Set elec. consump.		20:30 (THU)
Set voltage		
230 V		
◀ Sel.	[+]	Confirm

Note

- Set the power supply voltage of outdoor units to calculate electric consumption of the Power consumption monitor.
- If the setting differs from the power supply voltage of outdoor units, the electricity display error may occur.
- Depending on the outdoor unit model, this cannot be set.

■ When 3-phase model connections are used for outdoor units

Power supply voltage	Setting value
380 V	220 V
400 V	230 V
415 V	240 V

3. Timer Remote Controller

Confirming Information

- Sensor info.
- Service check

- 1** Press and hold the 3 buttons for 4 seconds or more simultaneously.

↶, ↵, ▶

- 2** Select the item to set.

▲ ▼ → ↵

Maintenance func		20:30 (THU)
2.	Service contact	
3.	RC. setting mode	
4.	Test run	
5.	Sensor info.	
Sel. ◀ ▶ Page		[↵] Confirm

Sensor info.

This displays each sensor temperature of the remote controller, indoor units and outdoor units.

- 3** Select.
(Select the unit number.)

▲ ▼ → ▶

Sensor info.		20:30 (THU)
Unit no.	Code no.	Data
▲	00	0026
1- 1	01	0028
▼	02	0026
Sel. ▶ Next		

- 4** Confirm the content.
▲ ▼

- Pressing ↶ will return to the Maintenance func screen.

Sensor info.		20:30 (THU)
Unit no.	Code no.	Data
1- 1	00	0026
	01	0028
	02	0026
Scroll		

Service check

This displays the alarm history.

- 3** Confirm the content.
▲ ▼

Service check		20:30 (THU)
	Unit no.	Alarm
1	1- 1	E04
2	1- 5	F10
3	1- 2	P01
Check [↵] Delete		

Information of 4 errors is displayed.

[---] shows that no error has occurred.

- Pressing ↶ will return to the Maintenance func screen.
- To delete the error history, press ↵ and select [YES].

3. Timer Remote Controller


Test Operation

Preparation: Turn on the circuit breaker of units and then turn the power on. The remote controller starts, and wait until the [Assigning] display disappears. (If [Assigning] continues to blink for 10 minutes or more, check the address setting of indoor units.)


- 1 Press and hold the 3 buttons for 4 seconds or more simultaneously.**




- 2 Select [Test run].**

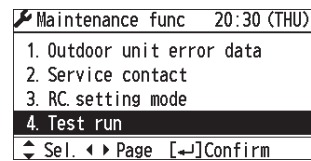


- 3 Select [ON].** (The unit enters the test operation mode. Then, [TEST] turns on.)

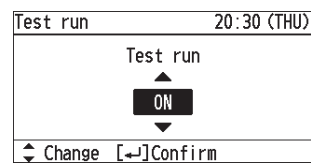

Press .

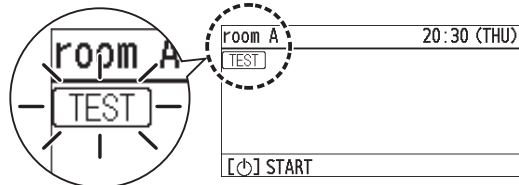

- 4 Perform the test operation.**

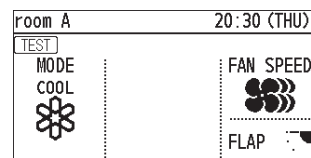

- 5 Finish the test operation.**

Perform step 1 and 2, and then select [OFF] in step 3. ([TEST] display disappears.)

- Any of the Heat, Cool and Fan operations can only be performed.
- Temperature cannot be changed.
- The test operation mode is automatically turned off in 60 minutes. (To prevent continuous test operation)
- Outdoor units do not operate for approx. 3 minutes after the power is turned on or operation is stopped.

Attention

- Do not use this mode for purposes other than the test operation. (To prevent overload of the units)
- Read the installation instructions supplied with the units.

4. Simplified Remote Controller

Simplified Remote Controller / CZ-RE2C2

■ Important Safety Instructions

Before using the system, be sure to read these "Important Safety Instructions".
After reading this manual, save it in a convenient place.

Warning

* Installation Precautions

1. Do not install by yourself.
Installation should always be performed by your dealer or a professional service provider.
Electric shock or fire may result if an inexperienced person performs any installation or wiring procedures incorrectly.
2. Use only specified air conditioners.
Always use only air conditions specified by the dealer.

* Moving and Repair Precautions

1. Do not repair.
Never repair the system by yourself.
2. Contact your dealer before moving the system.
Contact your dealer or a professional service provider about moving and reinstalling the system.
Electric shock or fire may result if an inexperienced person performs any installation procedures incorrectly.

* Precautions for Use

1. Do not touch switches with wet hands.
Electric shock and damage to the system can result.
2. Protect the remote controller from water.
Damage to the system can result.
3. Stop the system and turn the power off if you sense unusual smells or other irregularities.
Continuing operation when the system is out of order can result in electric shock, fire, and damage to the system. Contact your dealer.
4. Do not turn the air conditioner on and off from the power mains switch.
Use the ON/OFF operation button.
5. Do not stick anything into the air outlet of the air conditioner.
Doing so is dangerous because the fan is rotating at high speed.
6. Do not let children play with the air conditioner.
7. Do not cool or heat the room too much if babies or invalids are present.
8. Do not wipe the remote controller with benzine, thinner, or chemical cloth.


NOTE









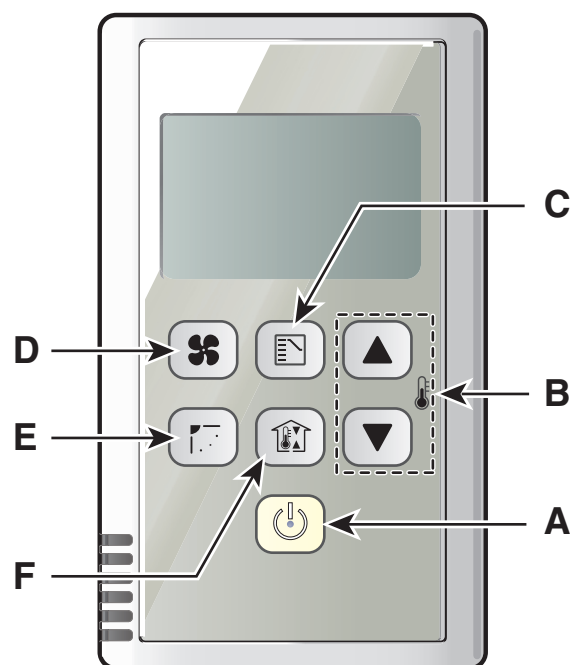

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- FCC Caution: To assure continued compliance, follow the attached installation instructions.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.






4. Simplified Remote Controller


■ Names and Operations

Operation Section



- A.  (Start/Stop)button**
Pushing this button starts, and pushing again stops the unit.
- B.  /  () (Temperature setting) buttons**
Changing the temperature setting.
- C.  (Mode Select) button**
Pushing this button to select an operation mode. (AUTO  / HEAT  / DRY  / COOL  / FAN ).

- D.  (Fan speed) button**
Changing the fan speed.
( / ) / ( / )

- E.  (Swing/Air direction) button*1**
Use this button to set the auto swing or air direction to a specific angle.

*1 Do not move the flap (vertical airflow adjustment board) with your hand.

The flap is automatically directed down when the unit is stopped.


The flap is directed up during the HEAT standby.

The flap starts swinging after the HEAT standby is cancelled, although the AUTO flap indication on the remote control unit is displayed during the HEAT standby.

- F.  (Outing function) button**
( Outing Function)

4. Simplified Remote Controller

Display Section

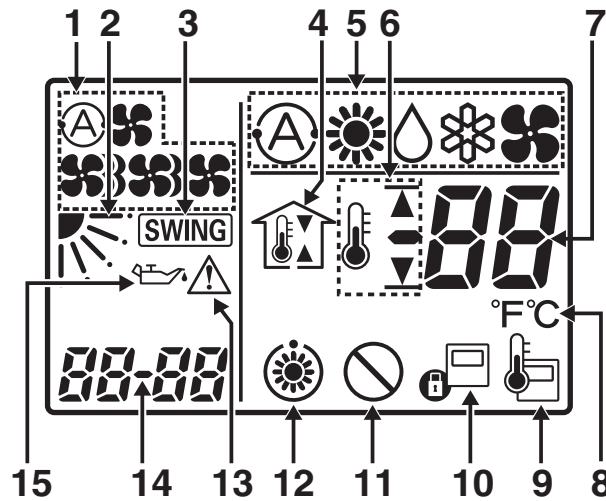


1. (Fan mode select) indication
The selected fan mode is displayed.
2. (Flap position) indication
Indicates the flap position.
3. **SWING** (Swing) indication
Appears while the flap swings.
4. (Outing) indication
(Outing Function)
Appears when the outing function is set.
5. **Operation Mode indication**
Displays the selected operation mode.
(AUTO /HEAT /DRY /COOL /
FAN).
6. **Upper and lower limit indication of the outing function**
 : Indicates the upper limit of the temperature.
 : Indicates the lower limit of the temperature.
7. **Temperature indication**
Indicates the set temperature.
8. **°F / °C (Temperature unit) indication**
9. (Remote control sensor) indication
Appears when the remote control sensor is used.
10. (Centralized control) indication
Appears when operated in centralized control. If the remote control operation is not permitted to the remote unit, when the (Start/Stop) button, (Mode select) button, (Fan speed) button, (Swing/Air direction) button or (Temperature setting) buttons are pressed, flashes and rejects the change.
11. (Disabled feature) indication
Displayed if the selected feature was disabled during installation.
12. (Heating standby mode) indication
 appears when the fan of the indoor unit is stopped or in low fan speed.
13. (Caution) indication
Appears when the protective device is activated or when an abnormality occurs.
14. **Alarm indication**
This displays alarm messages when an error occurs.
15. (Oil) indication
Appears when the engine oil needs to be changed. (Appears when the gas heat pump air conditioner is used.)

4. Simplified Remote Controller

■ Outing Function

Outing function is a function that prevents the room temperature from increasing too much (or decreasing too much) when no one is in the room. An air conditioner works automatically if this function is set effective.

General Performance of the Outing Function

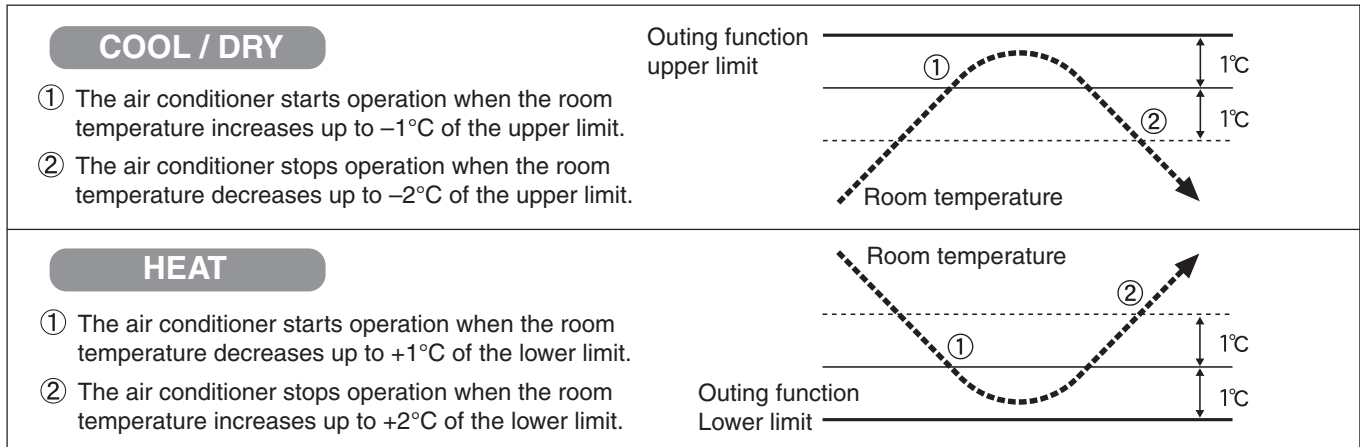

[Precautions]

- The outing control only starts/stops the air conditioner. It does not change the operation mode/temperature setting. Therefore, the operation mode/temperature needs to be set beforehand so that the outing function turns on the air conditioner with your desired operation mode/ temperature setting.
- If the room temperature rapidly changes, the room temperature may get over the upper or lower limit when the outing function is activated.
- The outing function is invalid during FAN/AUTO operation mode.
- The air conditioner's stop order (stated in ② /above) is valid only when the outing function is operated. If operated using other remote control units (or a centralized control device such as a system control), the outing function will not stop air conditioner operation.

• Setting the Outing Function

1. Press and hold for more than 4 seconds to display the upper limit temperature setting screen.

, and the upper limit temperature start flashing.
(The default value of the upper limit temperature is 38°C .)

2. Press / to select the upper limit temperature, and press to fix the value. The lower limit temperature setting screen is displayed.

3. Press / to select the lower limit temperature, and press to fix the value. The outing function setting is completed.

(The default value of the lower limit temperature is 10°C .)

* The unit returns to the normal mode if is pressed or there is no operation made for 3 minutes during the setting. In this case, all the settings in progress will be lost.



2



3

• Canceling the outing function

Press and hold for more than 4 seconds while the outing function is set.

• Outing function indication

Outing function indication	Status
Off	The outing function is not set.
Flashing	The outing function is now being set, or under operation.
Lighting	Although the outing function is set, not under operation.



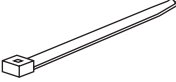
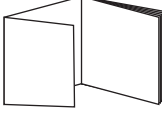
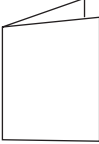
NOTE

If a blackout occurs during outing function operation and power is cut, the remote controller will lose the information for outing function operation. It reverts from the blackout, and an air conditioner does not drive in outing function when operation is started. At this time, an air conditioner does not stop at outing function.

4. Simplified Remote Controller

■ Basic Installation

● Parts supplied with simplified remote controller

Simplified remote controller	Wood screws	Binding strap	Instruction manual	Installation manual
				

● Simplified remote controller installation guidelines (Place of installation)

1. Mount the simplified remote controller at a height of 1 to 1.5 meters above the floor where it can sense the average temperature of the room.
2. Do not mount the simplified remote controller in a place exposed to direct sunlight or a place exposed to outside air such as near a window.
3. Do not mount the simplified remote controller behind an object so that it is separated from the air circulation of the room.
4. Mount the simplified remote controller within the room being air conditioned.
5. The simplified remote controller must be mounted on the wall or other surface vertically.

● How to install the simplified remote controller

● When used as embedded type

1. Insert a screwdriver or the like in the groove on the lower side of the simplified remote controller body to pry off the back case. (See Fig. 3-25)
2. After passing the simplified remote controller wiring through the conduit on the back case of the controller, secure it with the two screws (field supply). (See Fig. 3-24)

NOTE Do not apply excessive strain to the back case when securing it. Deformation of the back case may result in the remote controller falling off.

3. Connect the simplified remote controller wiring to the simplified remote controller main unit. (See "How to wire the simplified remote controller".) When connecting the locally supplied 2 core lead wires to the terminal block, check the terminal numbers in the indoor unit to make sure that the wires are correctly connected. (See Fig. 3-26) (The simplified remote controller is damaged if 220 / 240 V AC is applied.)
4. Fit the simplified remote controller to the tabs of the back case and mount it.

When mounting the back case to the electric junction box, tighten the screws securely until the screw heads touch the back case. Otherwise, a loose screw head may damage the PCB on the back of the top cover when mounting the top cover. But do not over-tighten the screws. Overtightening may deform the back case and cause the unit to fall.

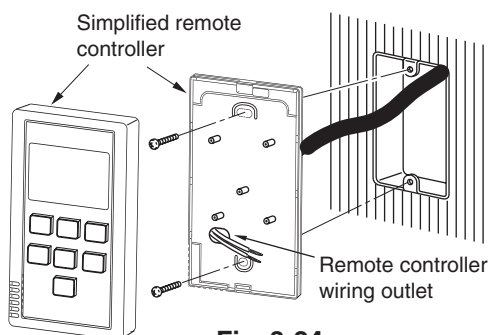
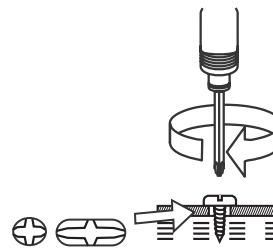


Fig. 3-24

4. Simplified Remote Controller

• When used as exposed type

1. This step is the same as step 1 for the embedded type.
2. Because the simplified remote controller wiring exits the back case (thin part in upper central area), use a nipper or the like to cut out the part to fit the thickness of the simplified remote controller wiring. (See Fig. 3-27)
3. Referring to Fig. 3-28, connect the controller wiring to the main unit, and then attach the binding strap (supplied).
4. Place the controller wiring in the groove, and then adjust the wiring so that the binding strap attached in step 3 can be stored inside the simplified remote controller.
5. Secure the back case to the wall with the wood screws (supplied). (See Fig. 3-29)

NOTE Do not apply excessive strain to the back case when securing it. Deformation of the back case may result in the remote controller falling off.

6. This step is the same as step 4 for the embedded type.

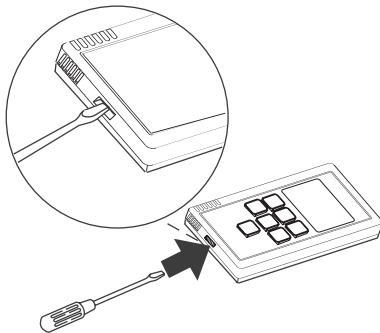


Fig. 3-25

• Basic wiring diagram

NOTE

Make sure to connect the wires correctly or the unit may be damaged. (See Fig. 3-30)

1. Following is a wiring diagram for controlling 1 indoor unit by 2 simplified remote controllers.
2. Performing group control of the multiple indoor units with 2 simplified remote controllers.
3. The main and the sub simplified remote controllers can be installed at any indoor unit for operations.

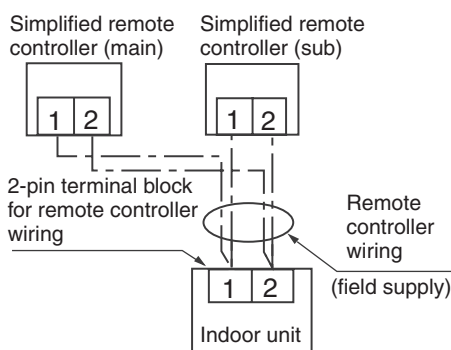


Fig. 3-30


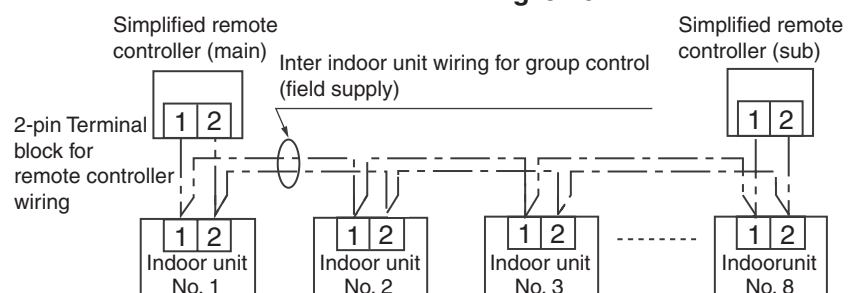


Fig. 3-31

• How to wire the simplified remote controller

• Connection diagram

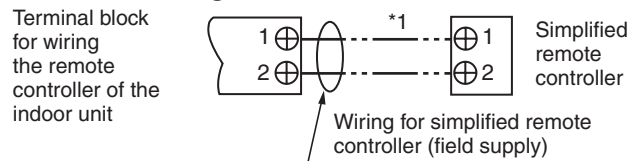

*1: Use 0.5 mm² to 1.25 mm² stranded wires.

Fig. 3-26

Remote controller wiring can be extended to a maximum of 500m.

NOTE

1. Do not twist the simplified remote controller wiring with the power wiring or run it in the same metal conduit, because this may cause malfunction.
 2. Install the simplified remote controller away from sources of electrical noise.
 3. Install a noise filter or take other appropriate action if electrical noise affects the power supply circuit of the unit.
- Use an electric junction box (field supply) (See Fig. 3-24) for flush mounting of the simplified remote controller

• Guidelines for using 2 simplified remote controllers

This multiple remote controller system controls 1 to 8 indoor units with 2 simplified remote controllers.

• Set-up procedure

1. One of the 2 simplified remote controllers should be set as main controller.
2. For the rest, see the "Remote controller setting mode" section and set up Sub.

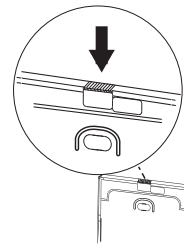


Fig. 3-27

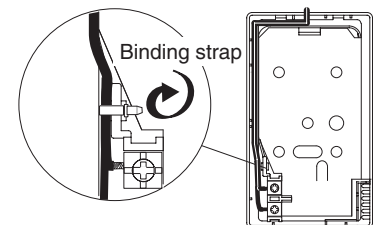


Fig. 3-28

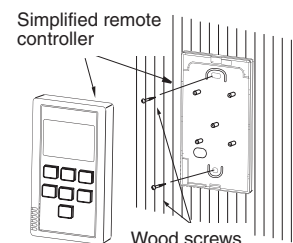


Fig. 3-29


4. Simplified Remote Controller

● Remote controller setting mode

Use the following method to perform simplified remote controller Main/Sub setting and RCU.CK switching.

1. Press both and buttons on the remote controller for more than 4 seconds together.

2. Use () button to select an item code, and then use button to confirm.

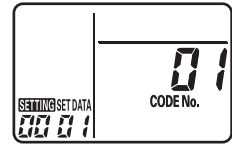

3. Change DATA with () buttons.

4. Press . Finally, press .

CODE ITEM	ITEM	DATA	
		0000	0001
01	RCU. Main/Sub	Sub	Main
08	RCU. CK	RCU. CK	Normal

* To go back one step, press .

* DATA is memorized in the RCU.

(DATA setting will not be changed even when the power is turned off.)

* Make sure to set [Normal] for RCU. CK.

● Indoor unit setting mode

Use the following method to switch sensor or temperature unit (Celsius/Fahrenheit).

1. Press + + buttons on the remote controller for more than 4 seconds together.

2. Use () button to select a unit, and then use button to confirm.

3. Use () button to select an item code, and then use button to confirm.

4. Change DATA with () buttons.

5. Press . Finally, press .

CODE	ITEM	DATA	
		0000	0001
32	Room temperature sensor	Main unit	RCU
33	Temperature unit	°C	°F

* To go back one step, press .

* DATA is memorized in the indoor unit.

(DATA setting will not be changed even when the power is turned off.)

● To display the sensor temperature:


1. Press both and buttons on the remote controller for more than 4 seconds together.

2. Use () button to select a unit, and then use button to confirm.

3. Change the sensor address (CODE No.) with () buttons.

4. Press the button to finish service mode.

* To go back one step, press .

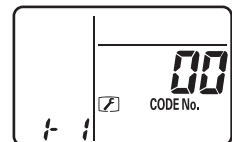

● To display the trouble history:


1. Press both and buttons on the remote controller for more than 4 seconds together.

2. Change the alarm message: () buttons

3. Press the button to finish service mode.




* To clear the trouble history, press .

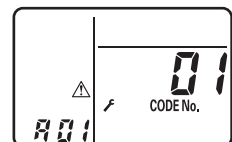CODE No. 01 → 04
(New) (Old)



4. Simplified Remote Controller

● Test run setting

- Press both  and  buttons on the remote controller for more than 4 seconds together, and then press  (ON/OFF) button.
 - “TEST” will appear on the crystal display during test run.
 - During test run, temperature cannot be adjusted. This button should be used only for test run.
- Perform test run in any operation mode of “heat”, “cool” or “fan”.

NOTE


The outdoor unit does not operate for 3 minutes after stopping operation or turning on the unit.

- After test run is finished, press both  and  buttons again for more than 4 seconds together, and then make sure “TEST” goes off from the display. (The 60-minute off timer function is provided for this remote controller in order to avoid continuous test run.)

● Caution

Caution when installing the remote controller (See Fig. 3-32-1)

- *1 Install the remote controller more than 70 mm apart from the wall surface. (See Fig. 3-32-2)
- *2 To install the remote controllers side-by-side, keep the space between each for more than 75 mm. (See Fig. 3-32-2)
- *3 To install the remote controllers one above the other, keep the space between each for more than 25 mm. (See Fig. 3-32-3)

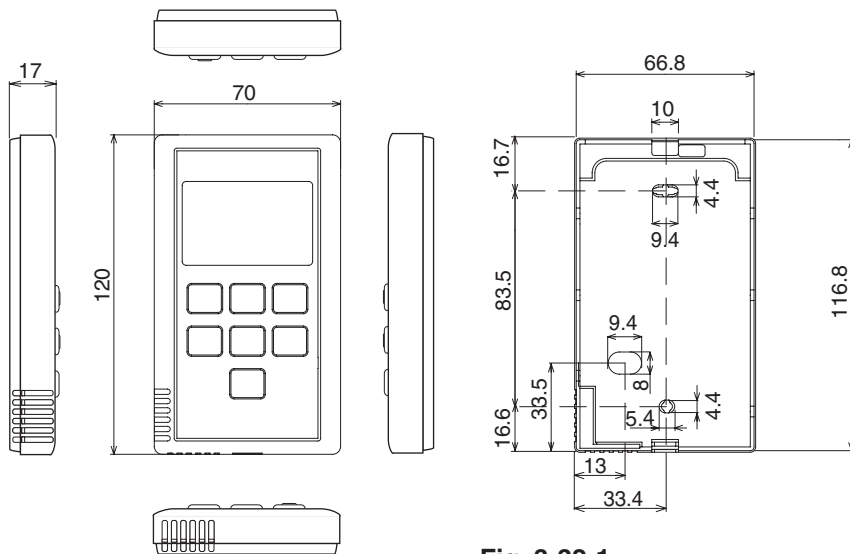

Unit: mm

Fig. 3-32-1

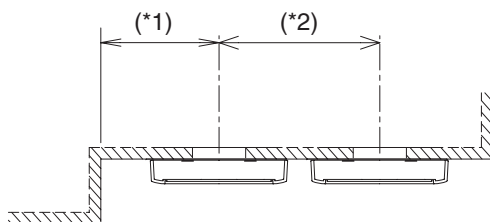


Fig. 3-32-2

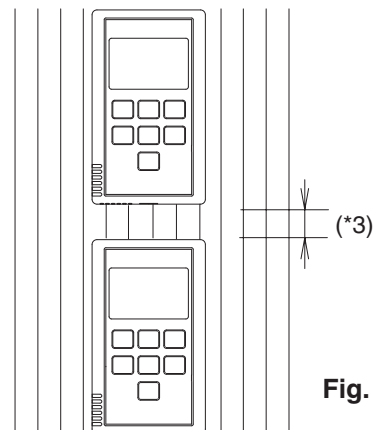
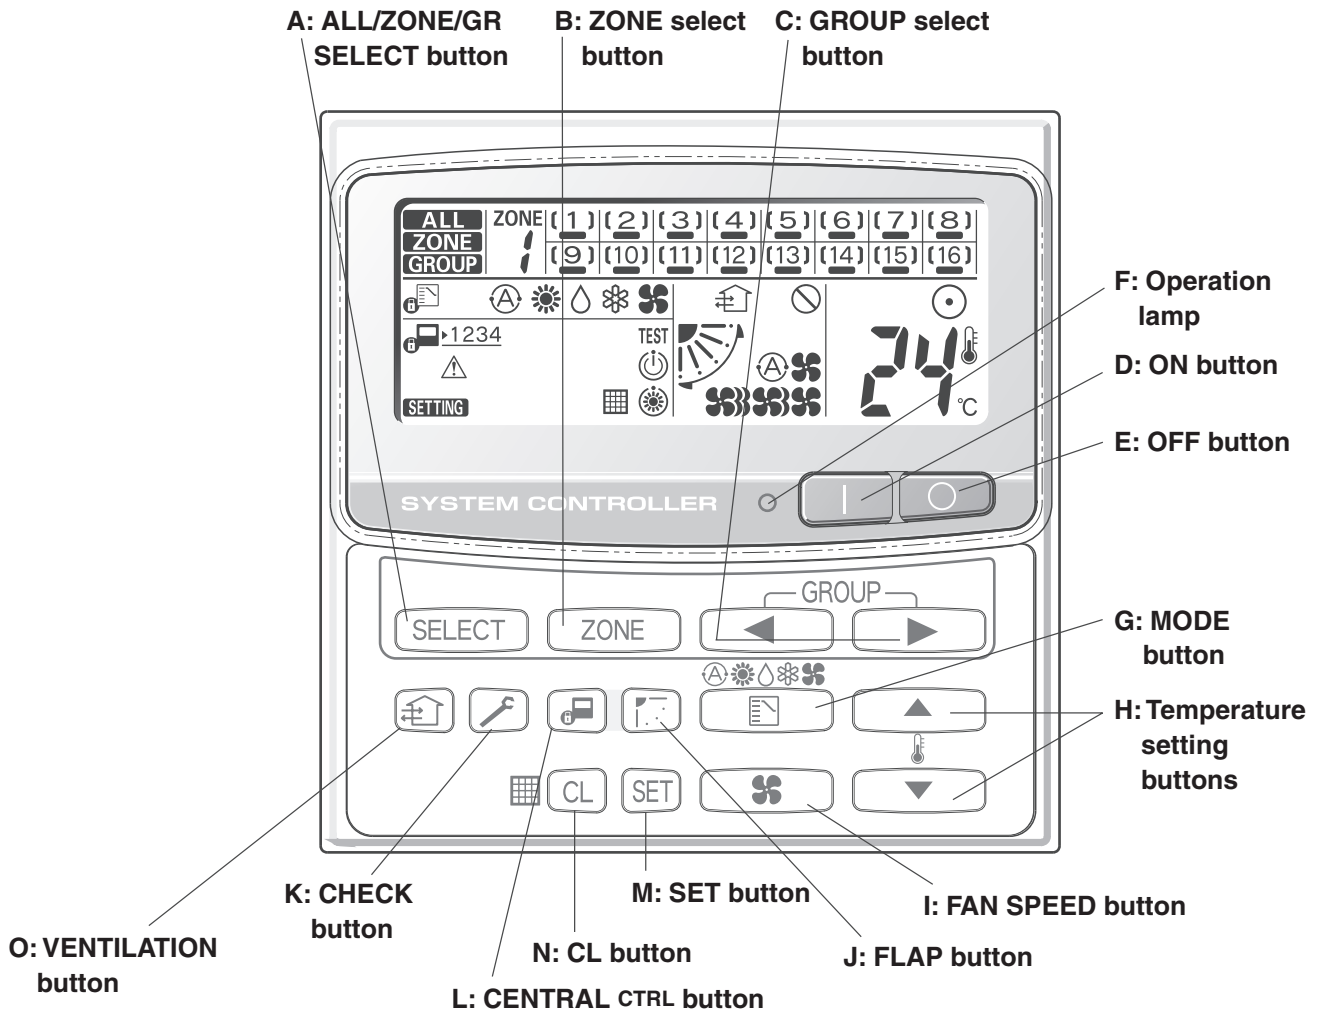


Fig. 3-32-3

5. System Controller

System Controller / CZ-64ESMC2

■ Functions of Buttons
















3

<p>A: ALL/ZONE/GR SELECT button</p> <p>NOTE</p>	<p>Use this button to select one of the following:</p> <p>ALL: Used for turning all the air conditioners on and off.</p> <p>ZONE: Used for turning all the air conditioners of each zone on and off.</p> <p>GROUP: Used for turning all the air conditioners of each group on and off. (GR)</p> <p>A maximum of four zones and 16 groups (units) in a zone can be set.</p>
<p>B: ZONE select button</p>	<p>Use this button to select a zone (1 to 4) to operate individually.</p>
<p>C: GROUP select buttons</p>	<p>Use these buttons to select a group (1 to 16) to operate individually.</p>

Continued











5. System Controller

D: ON button		This button is for turning the selected air conditioner on.												
E: OFF button		This button is for turning the selected air conditioner off.												
F: Operation lamp		This lamp lights when the unit is turned on.												
G: MODE button	 (AUTO) (HEAT) (DRY) (COOL) (FAN) NOTE	Use this button to select one of the following five operations: Ⓐ: Used to automatically set cooling or heating operation. Only for heat pump type (Temperature range: 17 to 27°C) ☀: Used for normal heating operation. Only for heat pump type (Temperature range: 16 to 26°C) △: Used for dehumidifying without changing the room temperature. (Temperature range: 18 to 30°C) ❄: Used for normal cooling operation. (Temperature range: 18 to 30°C) 🌀: Used to run the fan only, without heating or cooling operation. When the  indication is displayed, you cannot change the mode from ❄ and △ or ☀ to ☀ or ❄ and △. To change the mode, turn off all units once then select the mode again.												
H: Temperature setting buttons	 	 : Press this button to increase the temperature setting.  : Press this button to decrease the temperature setting.												
I: FAN SPEED button	 (AUTO) (HI) (MED) (LO)	Ⓐ🌀: The air conditioner automatically decides the fan speed. 🌀🌀: High fan speed 🌀: Medium fan speed 🌀: Low fan speed												
J: FLAP button	 (↙) 	1. Use this button to set the airflow direction to a specific angle. The airflow direction is displayed on the remote control unit. <table border="1" data-bbox="667 1263 1410 1442"> <thead> <tr> <th>Operation mode</th> <th>Number of airflow direction settings</th> </tr> </thead> <tbody> <tr> <td>❄ (COOL) or △ (DRY)</td> <td>3</td> </tr> <tr> <td>☀ (HEAT) or 🌀 (FAN)</td> <td>5</td> </tr> <tr> <td>Ⓐ (AUTO)</td> <td></td> </tr> <tr> <td>Cooling mode:</td> <td>3</td> </tr> <tr> <td>Heating mode:</td> <td>5</td> </tr> </tbody> </table> <p>In the cool mode and dry mode, when the flaps are set in a downward position, condensation may form and drip around the vent. Do not move the flap with your hands.</p> NOTE This function is available only for models U1 and T1.	Operation mode	Number of airflow direction settings	❄ (COOL) or △ (DRY)	3	☀ (HEAT) or 🌀 (FAN)	5	Ⓐ (AUTO)		Cooling mode:	3	Heating mode:	5
Operation mode	Number of airflow direction settings													
❄ (COOL) or △ (DRY)	3													
☀ (HEAT) or 🌀 (FAN)	5													
Ⓐ (AUTO)														
Cooling mode:	3													
Heating mode:	5													
		2. Use this button to make the airflow direction sweep up and down automatically. Press this button several times until the  symbol appears on the display. NOTE This function is available only for models U1, K1 and T1.												
	NOTE	1) The flap setting can be performed only for units that have no remote controllers. 2) In the ALL or ZONE mode, no flap setting can be performed. If necessary, you should select the GROUP mode and use the FLAP button.												




CAUTION

5. System Controller





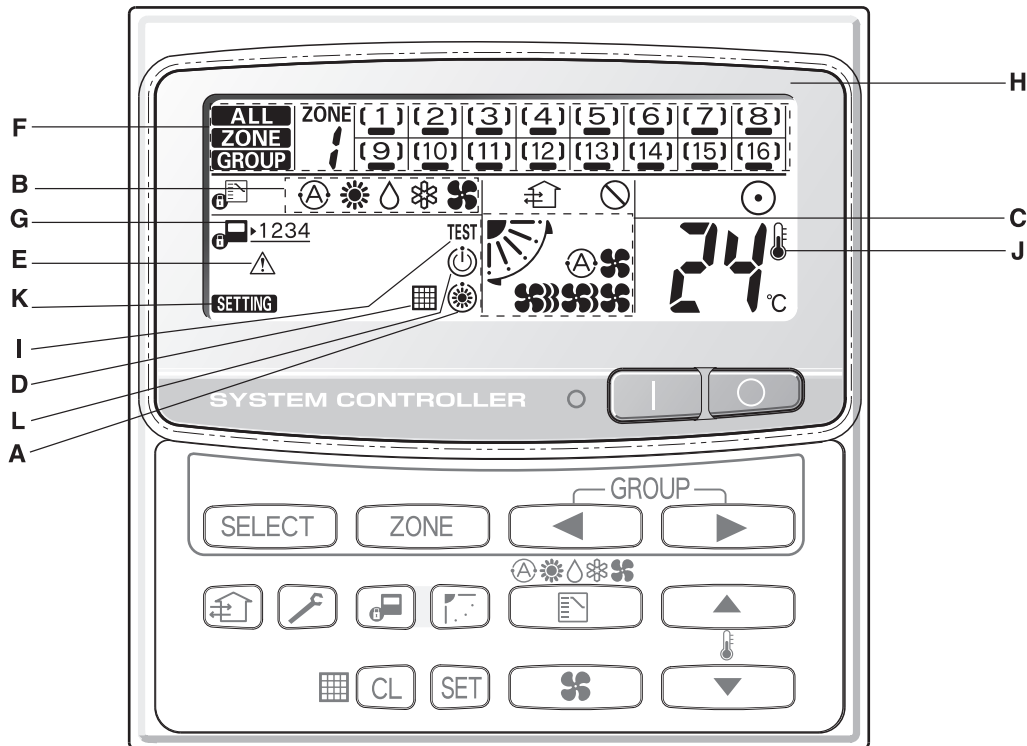


<p>K: CHECK button </p> <p> CAUTION</p>	<p>This button is used only when servicing the air conditioner.</p> <p>Do not use the CHECK button for normal operation.</p>
<p>L: CENTRAL CTRL button </p>	<p>Use this button to inhibit individual operation by remote controller as follows:</p> <p>:1234</p> <ol style="list-style-type: none"> 1: Individual ON/OFF operation is inhibited. 2: Individual ON/OFF, MODE and Temperature setting operation is inhibited. 3: Individual MODE and Temperature setting operation is inhibited. 4: Individual MODE operation is inhibited. <p>No indication: Central control is cleared. (Individual operation)</p>
<p>M: SET button </p> <p>NOTE</p>	<p>This button is used for setting indoor unit's address when installing the air conditioner.</p> <p>Do not use the SET button for normal operation.</p>
<p>N: CL button </p>	<p>Use this button to reset the filter sign .</p> <p>The air conditioner has the timer for the filter and informs you when the filter needs cleaning</p>
<p>O: VENTILATION button </p>	<p>Use this button when you installed a fan available in the market.</p> <p>Pressing this button turns on and off the fan.</p> <p>When turning off the air conditioner, the fan will also turned off. While the fan is operating,  will appear in the display.</p> <p>* If “” is displayed when pressing the ventilation button, no fans are installed.</p>

5. System Controller

■ Display




Description

- A:** When the unit is in heating standby mode, the  indicator appears.
- B:** The currently selected operation mode is displayed.
- C:** The currently selected FAN SPEED, Airflow Direction and SWEEP settings are displayed.
- D:** This indication appears when the filter needs cleaning.
- E:** This indication appears only when an abnormality occurs within a unit.
- F:** The currently selected mode (ALL, ZONE or GROUP), ZONE number and GROUP number are displayed.
 -  GROUP number display (no figure: no number registered)
 - [5]**  GROUP state display ([] : registered group,  : currently selected group)
 -  Operation state display (— : on, no sign: off,  : alarm)
- G:** The currently selected central control mode (1, 2, 3 or 4) is displayed.
- H:** Lights when any of the air conditioners under the system control is operating; turns off when none of the air conditioners under the system control is operating. Blinks when any conditioner is operating under abnormal conditions and its protection function is working.
- I:** When the  button is pressed for more than 4 seconds, the TEST indicator appears.
- J:** This indication appears when the temperature is set.
- K:** When turning on the power switch of the system controller, **SETTING** sign blinks for a few minutes. While blinking, any controls using the system controller are inhibited. This is because the system controller is verifying connected groups.
- L:** Appears during the peak cut mode (Demand) if an electric heat pump (EHP) air conditioner is used or during standby if a gas heat pump (GHP) air conditioner is used.

5. System Controller

■ How to Start Group Operation

To start group operation

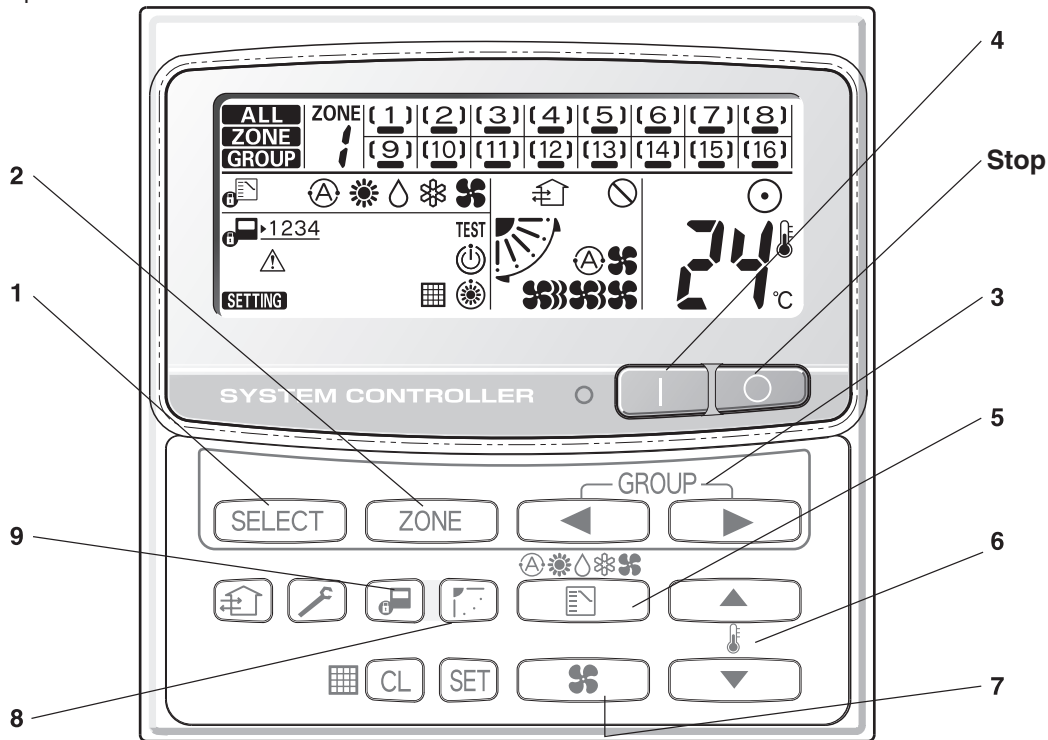

Power		Turn the power supply switch on more than 5 hours before starting operation.
1		Press the SELECT button and select GROUP.
2		Select the ZONE No. including the group to be operated by pressing ZONE button.
3		Select the GROUP No. to be operated by pressing GROUP select buttons ◀▶.
4		Press the ON button.
5		Set the operation mode by pressing the MODE button.
6		Set the desired temperature by pressing one of the temperature setting buttons ▲▼.
7		Set the desired fan speed by pressing the FAN SPEED button.
8		Set the airflow direction to a specific angle or sweep mode.
9		By pressing , select your desired setting. Individual → : Controls with the remote controller are possible. Central 1 → : Individual ON/OFF operation with the remote controller is inhibited. Central 2 → : Individual ON/OFF, MODE, and Temp. setting operations with the remote controller are inhibited. Central 3 → : Individual MODE and Temp. setting operations with the remote controller are inhibited. Central 4 → : Individual MODE operation with the remote controller is inhibited. ● Under Central/Individual settings other than listed above, "CENTRAL" is displayed.
Stop		Confirming the GROUP No. to be selected, press the OFF button.


NOTE

- The flap setting can be performed only for units that have no remote controllers.
- **AUTO Operation** : Depending on the difference between the temperature setting and the room temperature, heating and cooling alternate automatically so that a uniform room temperature is maintained.

5. System Controller

■ How to Start Collective Operation

To start collective operation (ALL or ZONE)

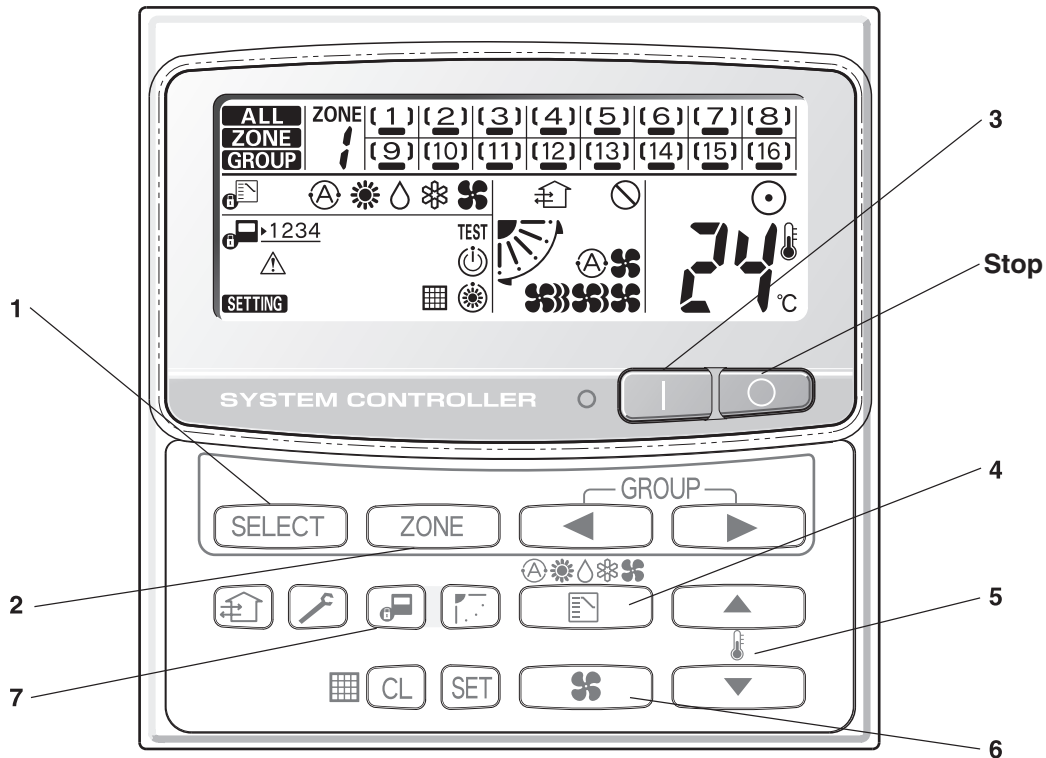

Power		Turn the power supply switch on 5 hours or more before starting operation.
1		Press the SELECT button and select ALL or ZONE. In case of ZONE collective operation.
2		Select the ZONE No. to be operated by pressing ZONE button.
3		Press the ON button.
4		Set the operation mode by pressing the MODE button.
5		Set the desired temperature by pressing one of the temperature setting buttons ▲▼.
6		Set the desired fan speed by pressing the FAN SPEED button.
7		Select the control mode.
Stop		Confirming the ZONE No. to be selected or ALL indication, press the OFF button.

NOTE

In the ALL or ZONE mode, no flap setting can be performed. If necessary, you should select the GROUP mode and use the FLAP button.

5. System Controller

■ How to Install the System Controller

Installation site selection

- Install the system controller at a height between 1 and 1.5 meters above the floor.
- Do not install the system controller in a place where it will be exposed to direct sunlight or near a window or other place where it will be exposed to the outside air.
- Be sure to install the system controller vertically, such as on a wall.







CAUTION

- Do not twist the control wiring together with the power wiring or run it through the same metal conduit, because this may cause a malfunction.
- Install the system controller away from sources of electrical noise.
- Install a noise filter or take other appropriate action if electrical noise affects the power supply circuit of the unit.




WARNING

Do not supply power to the unit or try to operate it until the tubing and wiring to the outdoor unit is completed.

Part Name	Figure	Q'ty	Remarks
System controller		1	
Tapping screw	Truss-head Phillips 4 × 16 mm 	4	For securing the system controller
Rawl plug		4	For securing the system controller
Manual		1	For installation
		1	For operation

5. System Controller

■ Overview of the System Controller

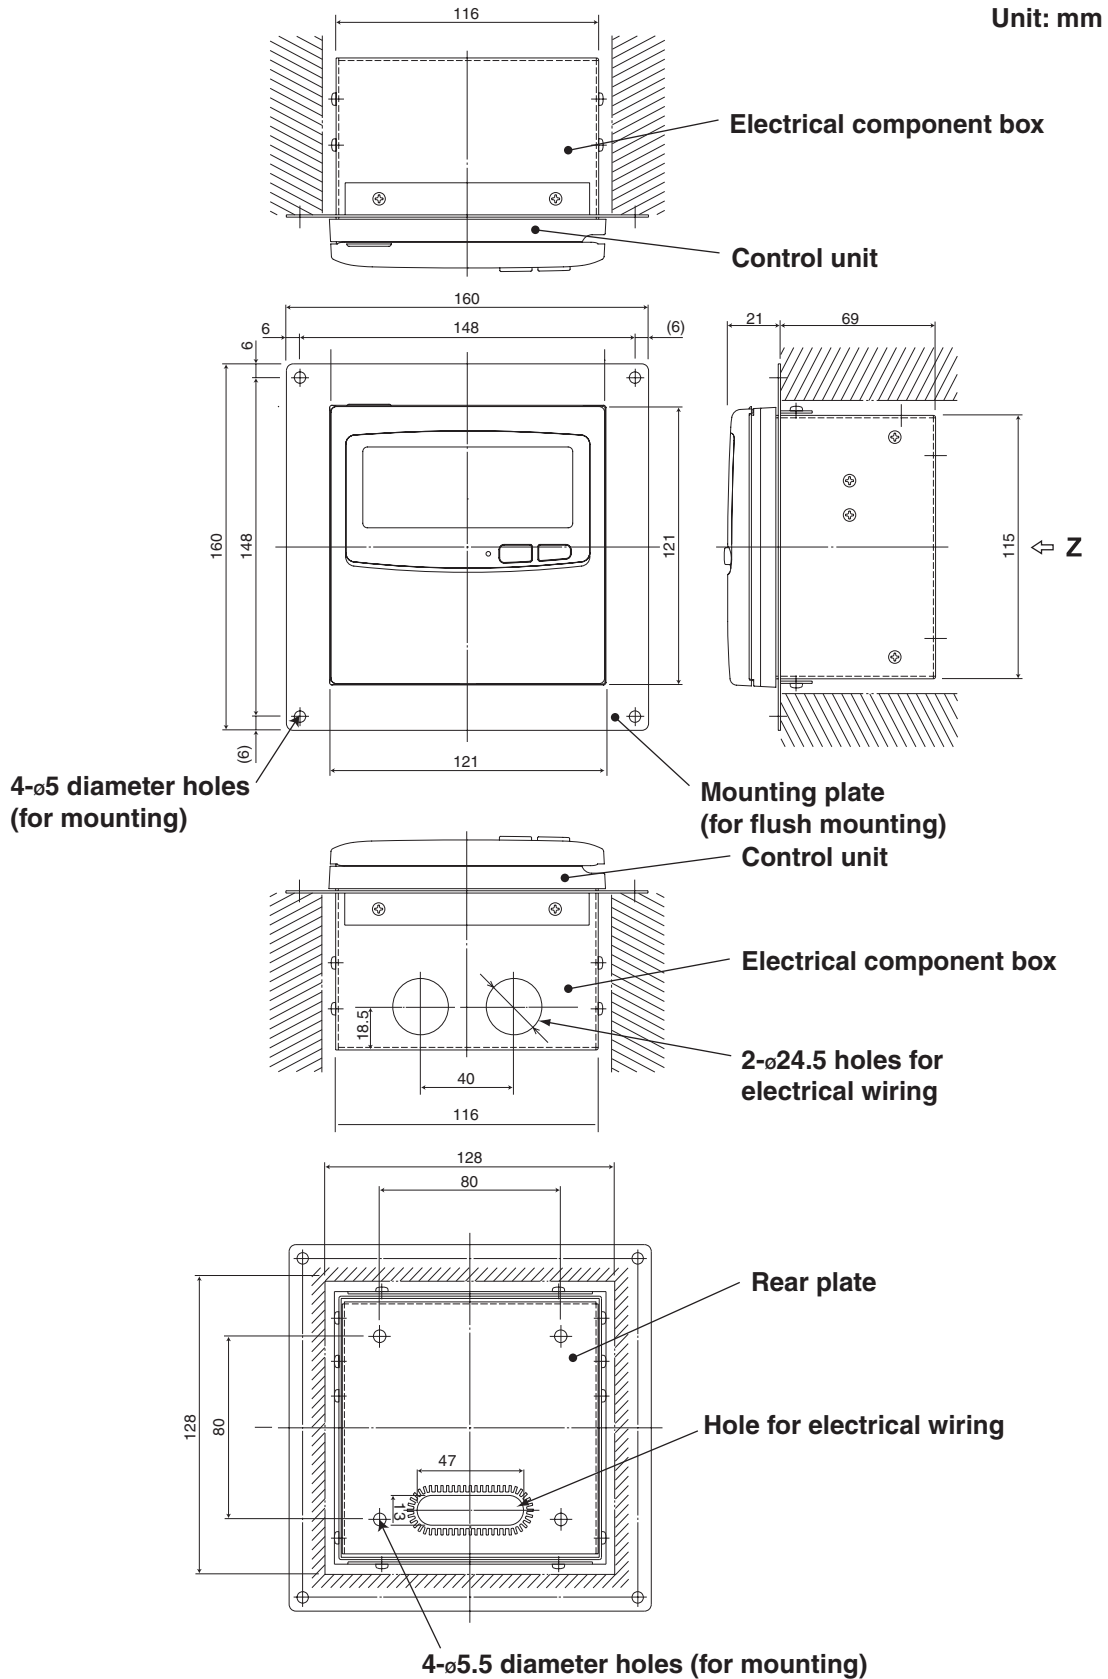


Z-view (back side)

* In order to mount the system controller flush with the wall, an opening measuring 128 mm x 128 mm is necessary.


Fig. 3-33

5. System Controller

■ Installation Procedure

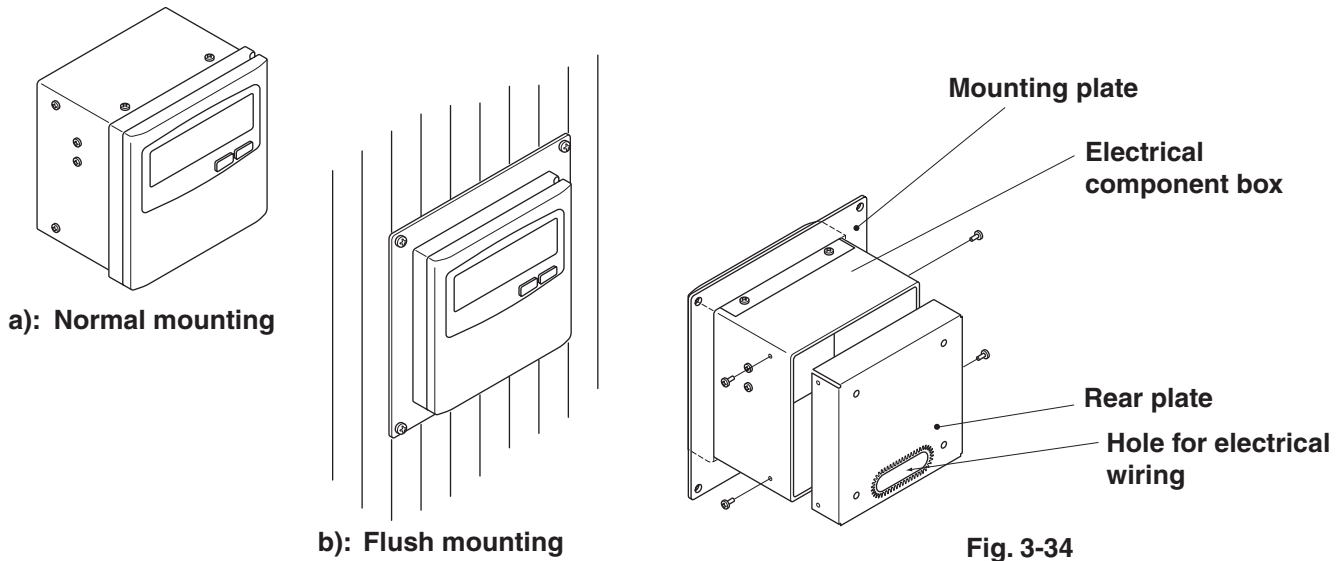

1. Decide how the system controller will be mounted: in the normal manner or flush with the wall.
 - a) To mount the system controller in the normal manner, remove the mounting plate. Then reattach the four screws to the electrical component box.
 - b) To mount the system controller flush with the wall, make an opening in the wall measuring 128 mm x 128 mm. The opening must be at least 85 mm deep as measured from the outside surface of the wall.
2. Remove the rear plate and connect the electrical wiring.
 - 1) Remove the four screws located on both sides of the rear plate.
 - 2) Either the hole in the bottom of the electrical component box or the hole in the rear plate may be used to feed the electrical wiring.
 - 3) If the hole on top is used, the rear plate should be turned upside down.
3. Secure the system controller in place.
 - a) If the system controller is being mounted in the normal manner, first attach the rear plate to the wall using the screws and Rawl plugs provided. Next, place the body of the system controller over the rear plate and secure it in place using four screws.
 - b) If the system controller is being mounted flush with the wall, fit it through the mounting plate on the wall and secure it in place using the screws and Rawl plugs provided.

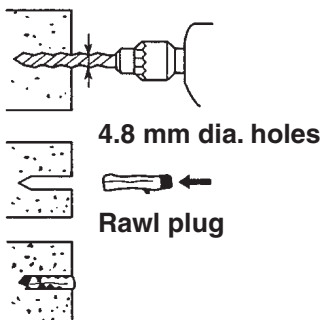


NOTE

To mount the system controller on a wall made of cinder block, brick, concrete, or a similar material, drill 4.8 mm diameter holes in the wall and insert Rawl plugs to anchor the mounting screws.

5. System Controller

Layout of Electrical Terminals

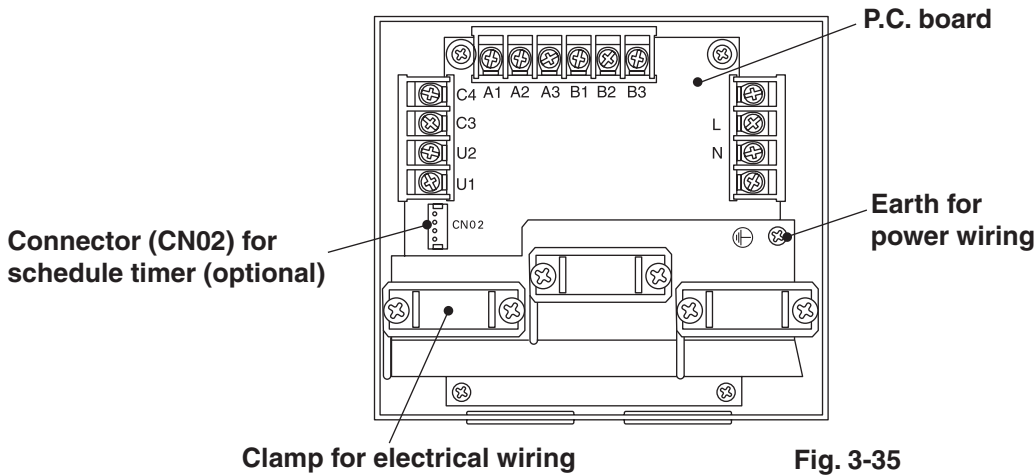



How to connect electrical wiring

1) Basic wiring

- N: Power supply (220 – 240 V ~ 50 Hz/60 Hz)
- L: Power supply (220 – 240 V ~ 50 Hz/60 Hz)
- U1: Inter-unit control wiring. (Low voltage)
- U2: (Use shielded wiring)
- C3: Reserve
- C4: Earth for inter-unit control wiring

2) Terminals for remote monitoring

- A1: Input for turning on air conditioners concurrently.
- A2: Input for turning off air conditioners concurrently.
- A3: Common input for turning air conditioners on or off.
- B1: On operation state indicator output.
- B2: Alarm indicator output.
- B3: Common indicator output.

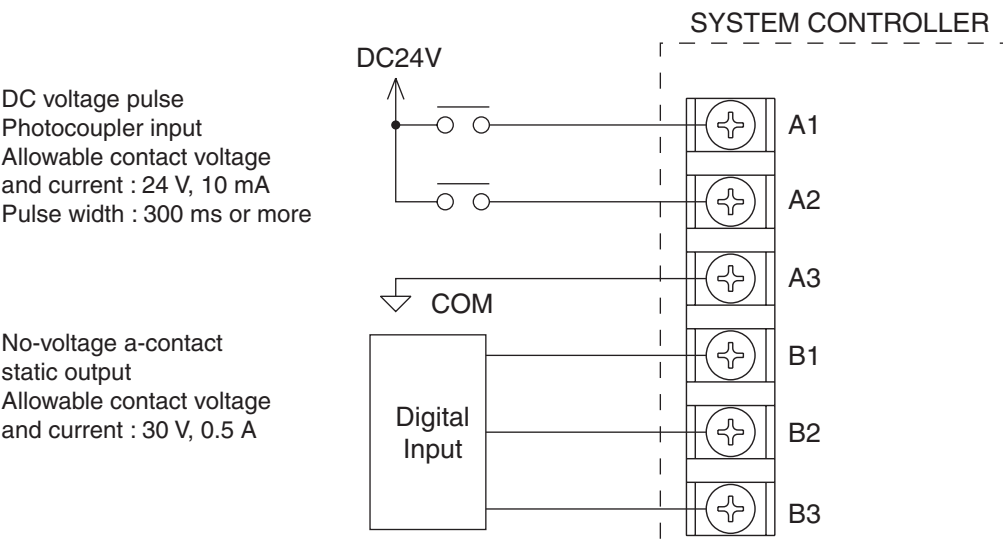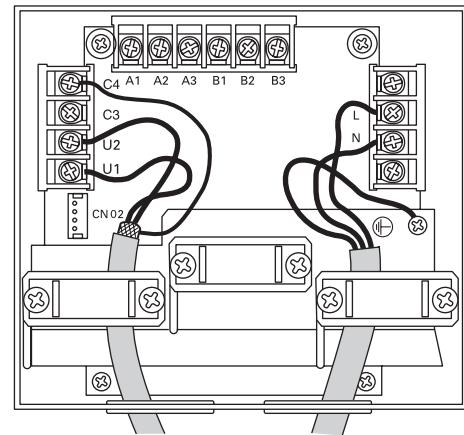


5. System Controller

Basic Wiring Diagram



CAUTION

Ensure that wiring connections are correct. (Incorrect wiring will damage the equipment.)

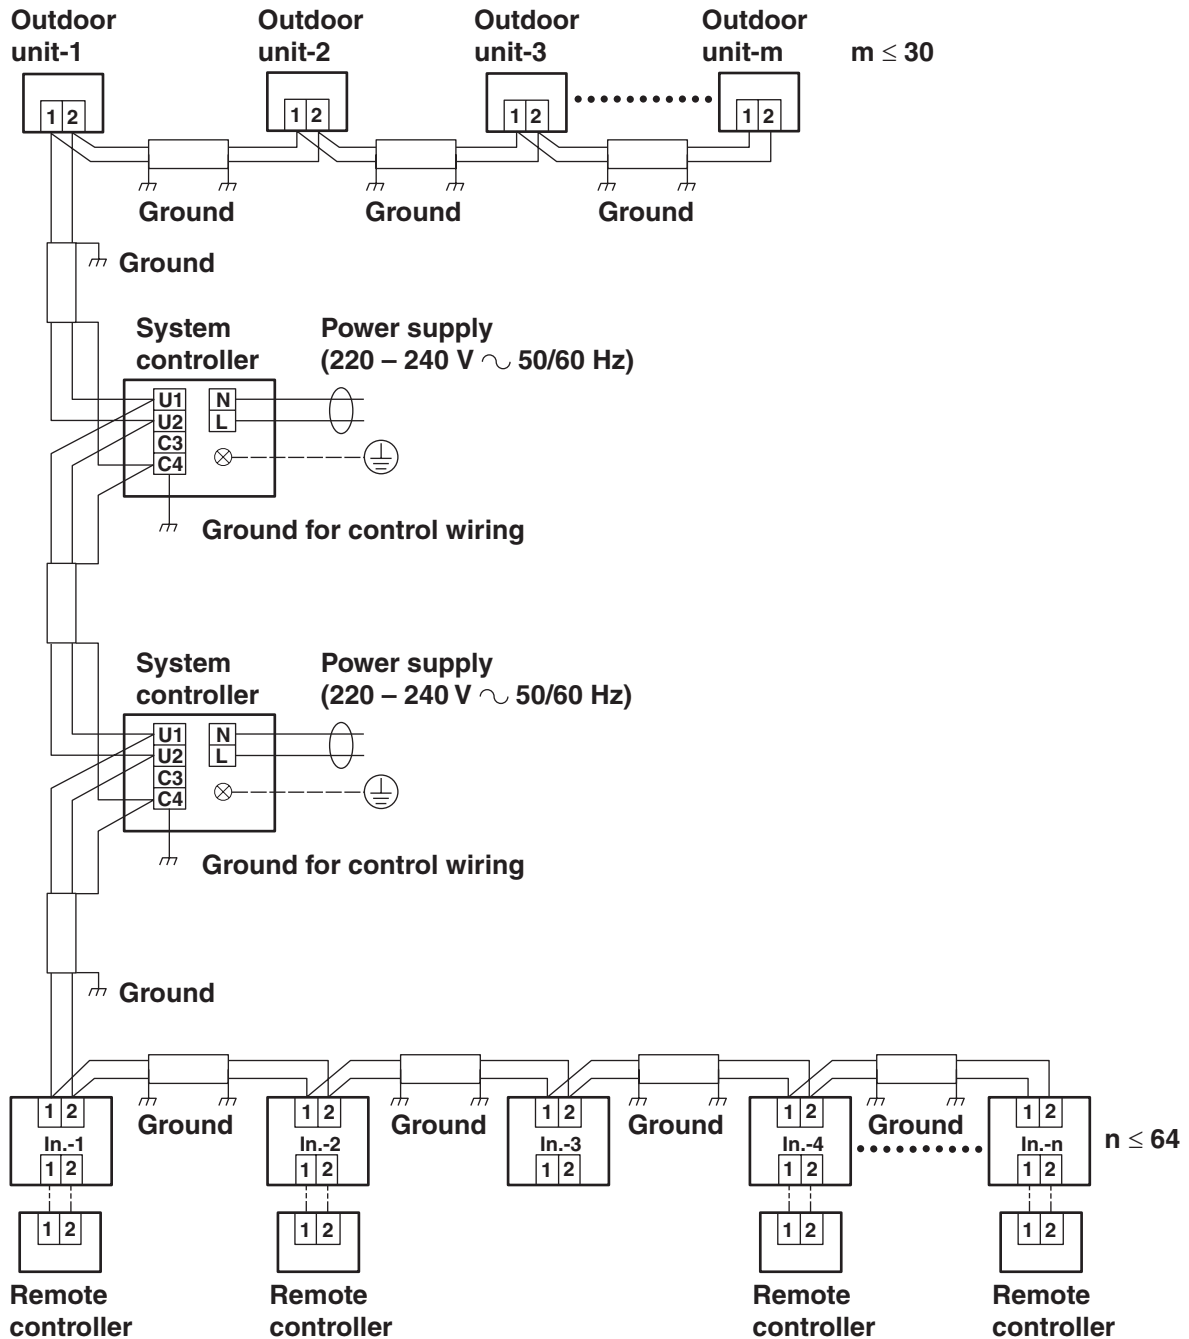

NOTE

1. The following figure is the inter-unit control wiring.



Use the shielded wiring.


2. In. means indoor unit.

3. Up to two system controllers may be connected to one control line system.

Fig. 3-36


5. System Controller

■ Address Switch Setting

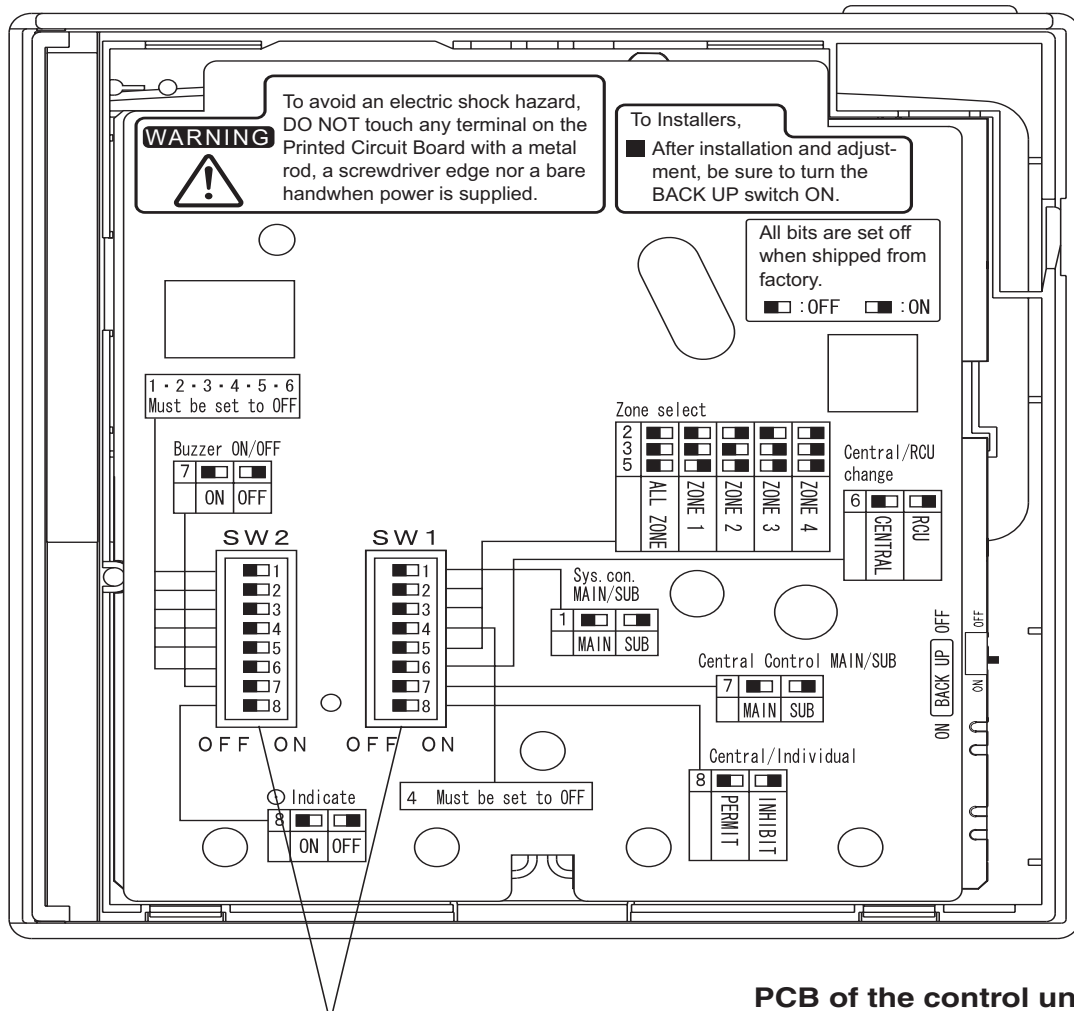

PCB of the control unit

Dip switch

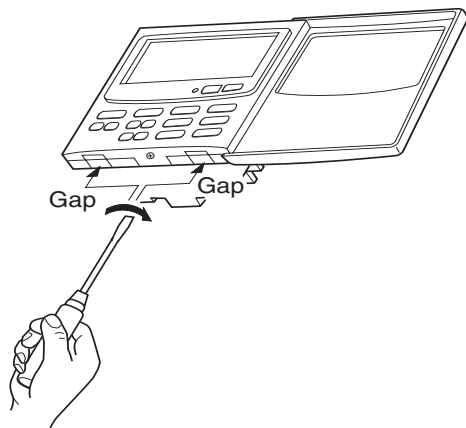


How to reach the P.C. board

Remove the flat-top screw on the bottom of the back case. When you open up the decorative cover, you will see two notches under the control unit. Inset a coin or other flat object into these notches and pry off the back case. The P.C. board on the back of the control unit is now visible.

3

5. System Controller

SW1

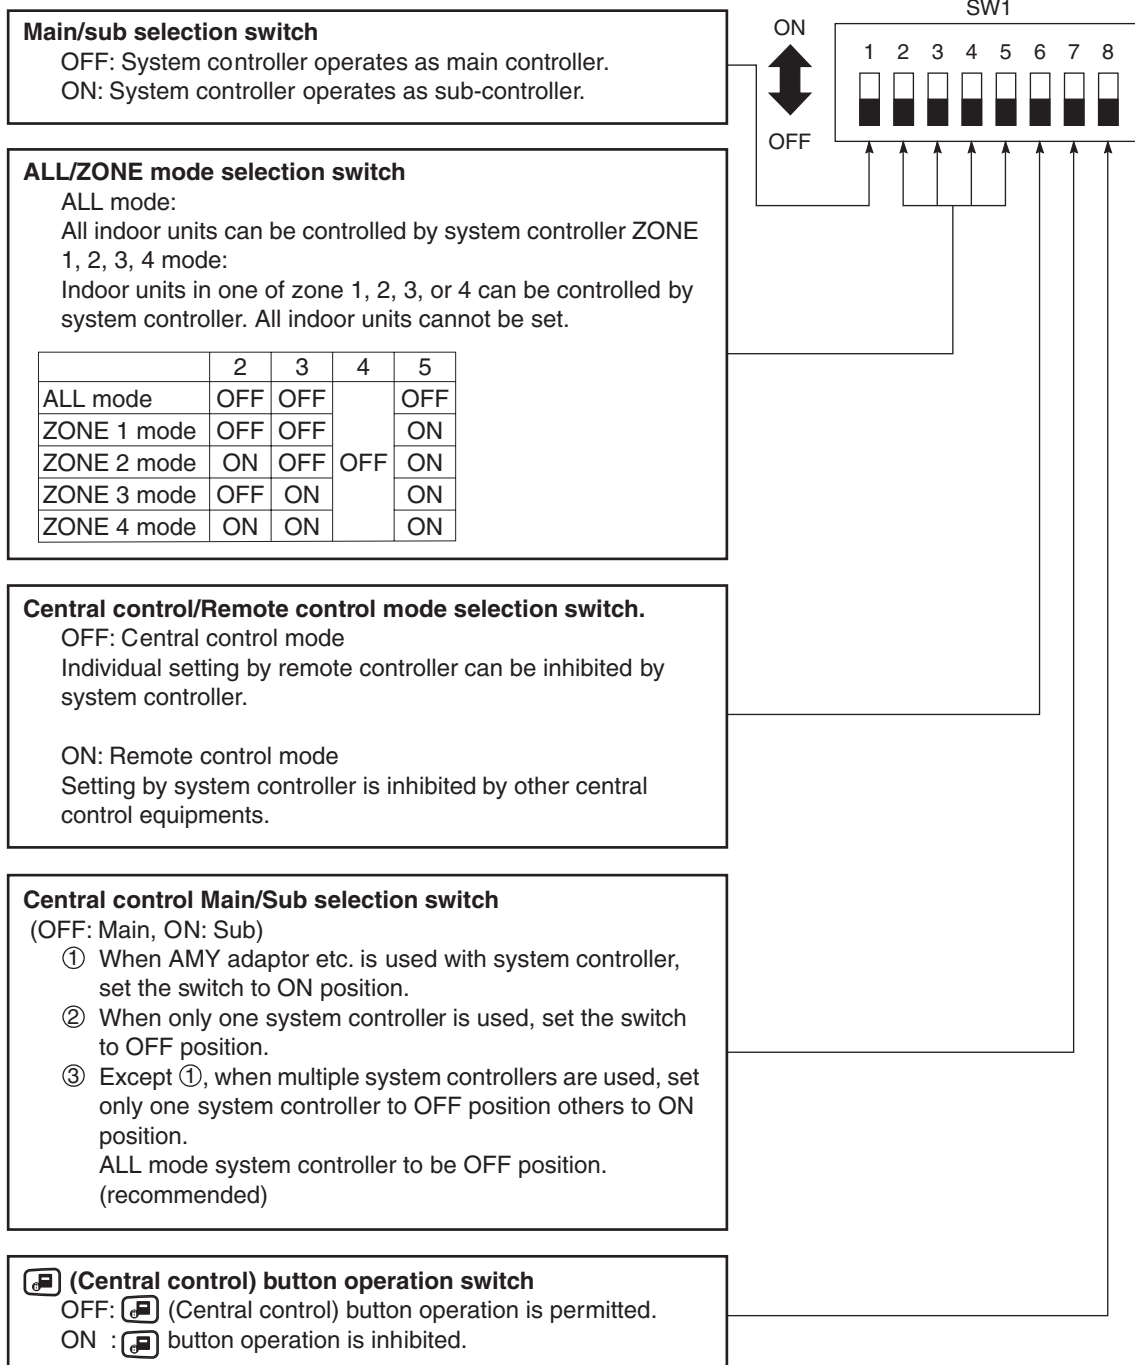

*All switches are in OFF position at shipment.

Fig. 3-37

5. System Controller

SW2

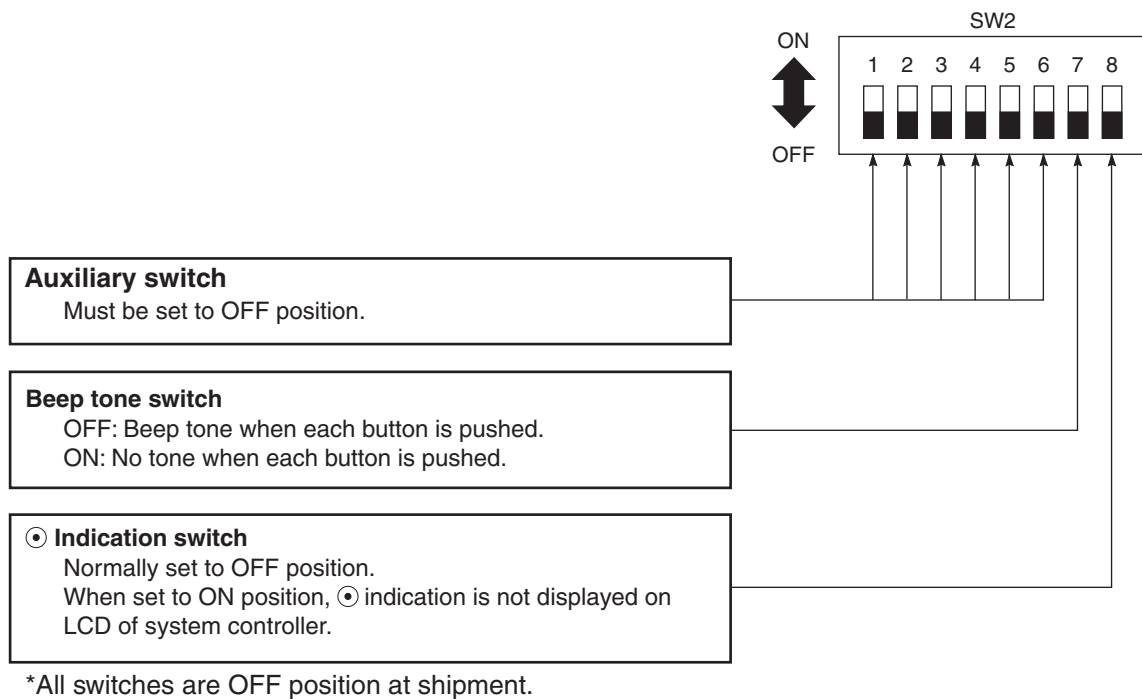


Fig. 3-38

5. System Controller

■ Mode Setting

According to the function of each system controller, set SW1 as Fig. 3-39.

(1) Central control/Remote control mode

● Central control mode

System controller is used as central control equipment.

Individual setting by remote controller can be inhibited by system controller

● Remote control mode

System controller is used as remote controller.

Setting by system controller is inhibited by other central control equipments.

(2) ALL/ZONE mode

● ALL mode

All indoor units can be controlled by system controller.

● ZONE mode

Indoor units in one of ZONE 1, 2, 3 or 4 can be controlled by system controller

(3) Function of system controller is 10 types

according to combination of central control/remote control mode and ALL/ZONE mode setting as the table 3-1.

(4) Stick the system controller unit label in a conspicuous position.

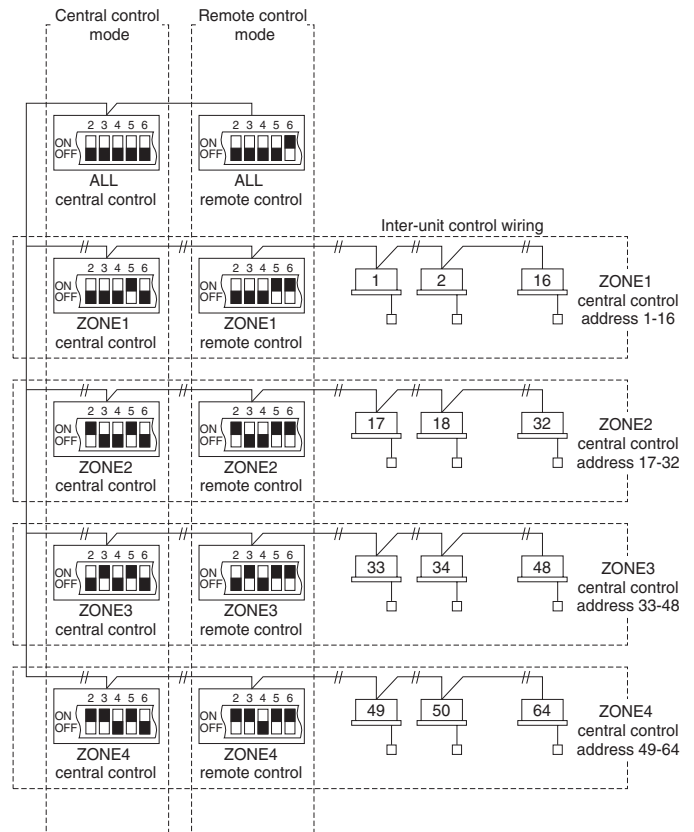


Fig. 3-39

Table 3-1

	Central control	Remote control
ALL	1. ALL/Central	6. ALL/Remote
ZONE1	2. ZONE1/Central	7. ZONE1/Remote
ZONE2	3. ZONE2/Central	8. ZONE2/Remote
ZONE3	4. ZONE3/Central	9. ZONE3/Remote
ZONE4	5. ZONE4/Central	10. ZONE4/Remote

5. System Controller

■ How to Perform Zone Registration

To operate the system controller properly, zone registration is required after finishing the test run (and after setting all indoor unit addresses) using one of the following methods.

- (a) Zone registration using the remote controller (CZ-RTC2)
Refer to page 3-89
- (b) Zone registration using the system controller (CZ-64ESMC2)
Refer to page 3-90
- (c) Automatic zone registration using the system controller (CZ-64ESMC2)
Refer to page 3-90


For methods (a) and (b), you should make a zone registration table manually before performing the registration as shown on the page 3-88.

For method (c), zone registration is executed automatically, proceeding from small indoor unit addresses and small central addresses to larger numbers in numerical order. For example:

Central address	1	2	3	4	5	6	
ZONE-group	1-1	1-2	1-3	1-4	1-5	1-6	
Indoor unit address	1-1	1-2	2-1	2-2	2-3	3-1	

NOTE

1. An indoor unit address is assigned to each indoor unit during automatic address operation. Each indoor unit address combines an R.C. address and indoor unit number as follows:

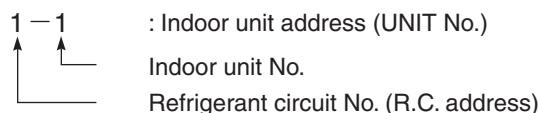

This address is displayed on remote controller for UNIT No. when the UNIT button is pressed.

2. The central address represents the zone and group number. These addresses are assigned in ascending numerical order.

5. System Controller

■ ZONE Registration Table

ZONE	GROUP	Central address	Indoor unit address (UNIT No.)	Unit location	ZONE	GROUP	Central address	Indoor unit address (UNIT No.)	Unit location
1	1	1			3	1	33		
	2	2				2	34		
	3	3				3	35		
	4	4				4	36		
	5	5				5	37		
	6	6				6	38		
	7	7				7	39		
	8	8				8	40		
	9	9				9	41		
	10	10				10	42		
	11	11				11	43		
	12	12				12	44		
	13	13				13	45		
	14	14				14	46		
	15	15				15	47		
	16	16				16	48		
2	1	17			4	1	49		
	2	18				2	50		
	3	19				3	51		
	4	20				4	52		
	5	21				5	53		
	6	22				6	54		
	7	23				7	55		
	8	24				8	56		
	9	25				9	57		
	10	26				10	58		
	11	27				11	59		
	12	28				12	60		
	13	29				13	61		
	14	30				14	62		
	15	31				15	63		
	16	32				16	64		

NOTE

1. Assign indoor unit addresses to the desired positions (central addresses) manually.
2. For group control, only the main indoor unit should be assigned. Sub indoor units cannot be assigned.

5. System Controller





(a) Zone registration using the remote controller (CZ-RTC2)

(Determination of central address)


- In this case, after confirming which indoor unit is connected to the remote controller and that the air conditioner in the OFF state, you set the central addresses one at a time.
- If the system has no remote controller, connect a remote controller to the system temporarily. Then follow this procedure.




NOTE

The indoor unit address must already have been set before performing zone registration. If necessary, refer to the Installation Manual supplied with the outdoor unit.

- (1) Press the  and  buttons at the same time of the remote controller for more than 4 seconds.
- (2) Do not press  button.
- (3) Once in this mode, the UNIT No., CODE No., No. of SET DATA and  indications will flash on the display as shown Fig. 3-40.







NOTE

In case of group control "ALL" instead of "UNIT No." will flash on the display. Select the main indoor unit address by pressing the  button once.

- (4) Set CODE No. to 03 using the  and  () buttons.

NOTE

CODE No. 03 must be selected to perform zone registration using the remote controller.

- (5) Set the Central address which you want to assign to the indoor unit address using the  and  () buttons according to the zone registration table.
- (6) Press the  button. The CODE No. and Central address changes from flashing to ON state. If you make a mistake, then press the  button and reset the central address.
- (7) Press the  button to finish zone registration.


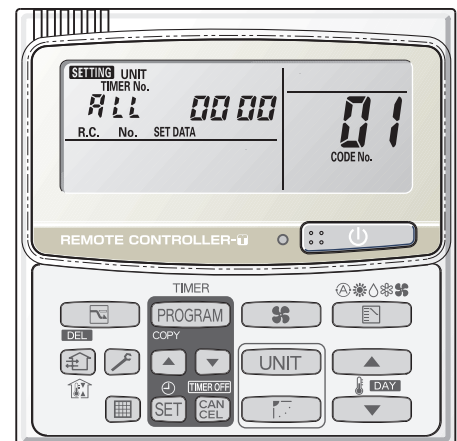


Fig. 3-40








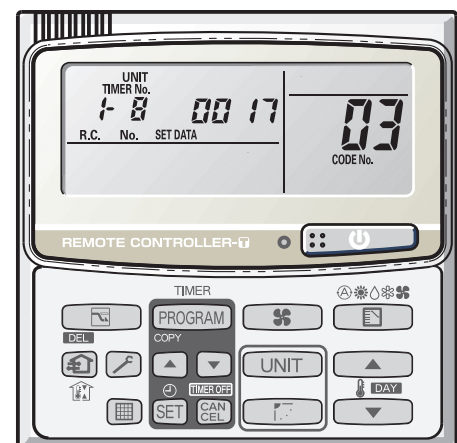


For example, in this case
Indoor unit address: 1-8
Central address : 17 (ZONE 2, GROUP 1)

Fig. 3-41

5. System Controller

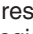(b) Zone registration using the system controller (CZ-64ESMC2)

- In this case, you set all Central addresses by system controller at once manually.
- (1) Press the  and **ZONE** buttons at the same time for more than 4 seconds.
SETTING and CODE No. C1 will flash.
 - (2) After confirming that CODE No. C1 is displayed, press the **SET** button. Once in this mode, a change takes place as shown in Fig. 3-42.
 - (3) Select the zone and group No. which you want to set with **ZONE** and   (GROUP) buttons. If already set, press the **CL** button.
 - (4) Set the unit No. (Indoor unit address) with  and  buttons, according to the zone registration table.
R.C. No.  button
Indoor unit No.....  button
 - (5) Press the **SET** button.
GROUP No. turns ON and UNIT No. (Indoor unit address) changes from flashing to ON state. UNIT No. is registered to selected ZONE No. and GROUP No.
If you make a mistake, then press the **CL** button and reselect the ZONE, GROUP and UNIT No.
 - (6) Register the other UNIT Nos. in the same way by following steps (3) to (5).
 - (7) Finally, complete the registration by pressing the  button.
SETTING flashes for a few minutes, then goes OFF.


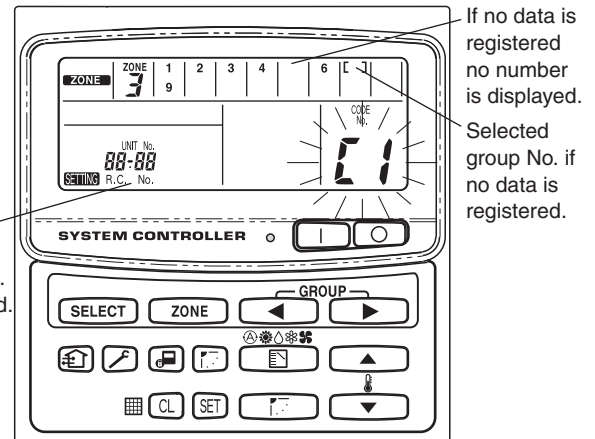







Fig. 3-42

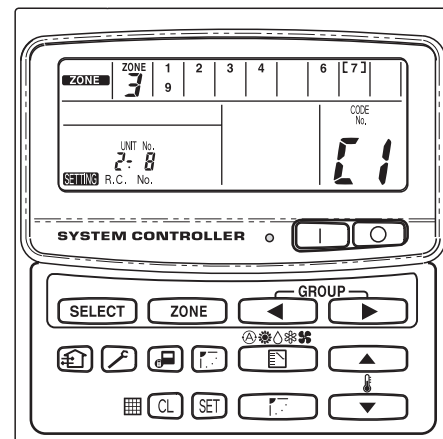

For example, in the case at left
Zone 3, group No. 7
Unit No. (indoor unit address) 2-8
Unit No. 2-8 is registered to zone 3-group 7.

Fig. 3-43

(c) Automatic zone registration using the system controller (CZ-64ESMC2)

- (1) Press the  and **ZONE** buttons at the same time for more than 4 seconds.
SETTING and CODE No. C1 will flash.
- (2) Select CODE. No. C2 by pressing  and  () button and press the **SET** button.
C2 changes from flashing to ON state and automatic zone registration will start.
- (3) All registered GROUP No. will be disappeared all.
- (4) Central address will be assigned from small indoor unit address to large one in numerical order automatically.
Finishing automatic zone registration, **SETTING** changes from flashing to OFF.
- (5) If the error is happened, the "CHECK" starts flashing and zone registration finishes at this time. Press the **CL** button.
- (6) Finally, complete automatic zone registration mode by pressing the  button.
SETTING flashes for a few minutes, then OFF.

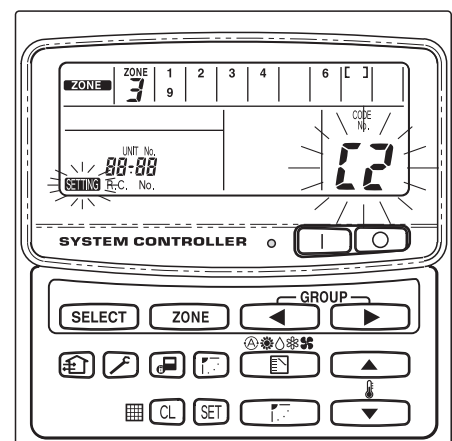


















Fig. 3-44

5. System Controller

■ How to Check Overlapping of Central Address Nos.

- (1) Press the  and  buttons at the same time for more than 4 seconds.
 and CODE No. C1 will flash.
- (2) Select CODE. No. C3 by pressing ,  () button and press the  button.
 C3 changes from flashing to ON state and  will flash.
 Then auto overlap checking will start.
- (3) If C3 changes from ON to flashing and  stops flashing and disappears, there is no overlapping.
 Then finally, complete the auto overlap checking mode by pressing the  button.
- (4) If some of GROUP No., ZONE No. and UNIT No. flash, you should try again the zone registration.
 - ① Select CODE No. C1 by pressing ,  () button and press the  button.
 - ② Select the flashing GROUP No. with ZONE and GROUP button.
 Then press the  button and reselect the ZONE, GROUP and UNIT No.
 - ③ Then finally, complete the auto overlap checking mode by pressing the  button.


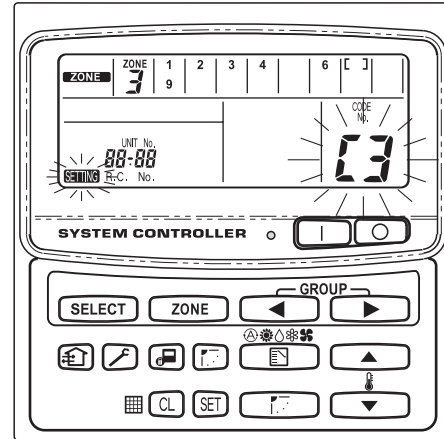



Fig. 3-45

■ Memory Back-Up Switch

Check the back-up switch is ON for back side of the system controller PCB.

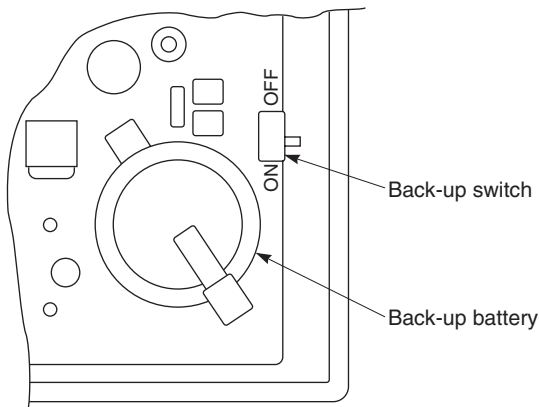

■ Test Run

- (1) Power on for all indoor units. Next, power on for the system controller.
 will flash, checking the indoor unit address automatically.
- (2) If the group No. displayed on system controller is not same as indoor unit No.* which is connected, see Fig. 3-39 and do the setting again.


* In case of group control, main unit No. only.

5. System Controller

■ System Examples


The following diagrams show system examples and the correct setting of the switches on the PCB.

(1) For a system without link

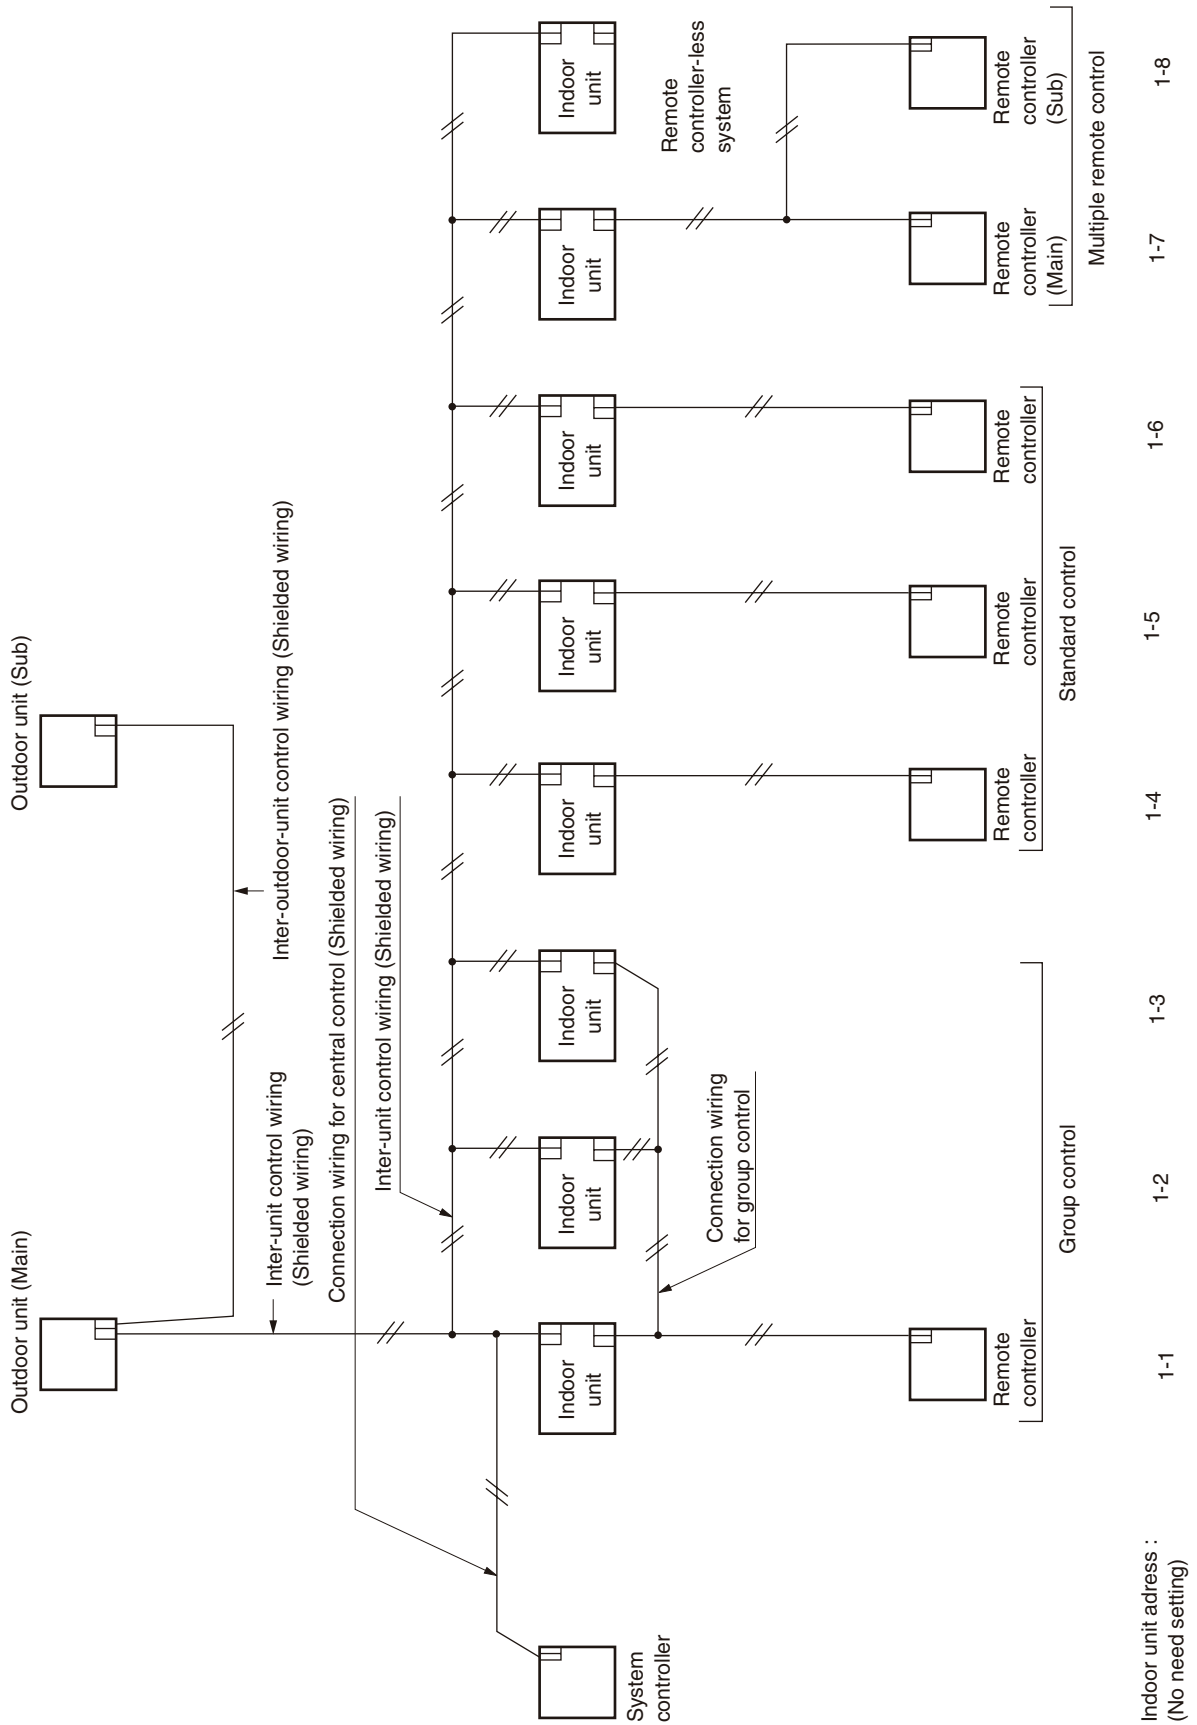

5. System Controller


(2) For a system with link

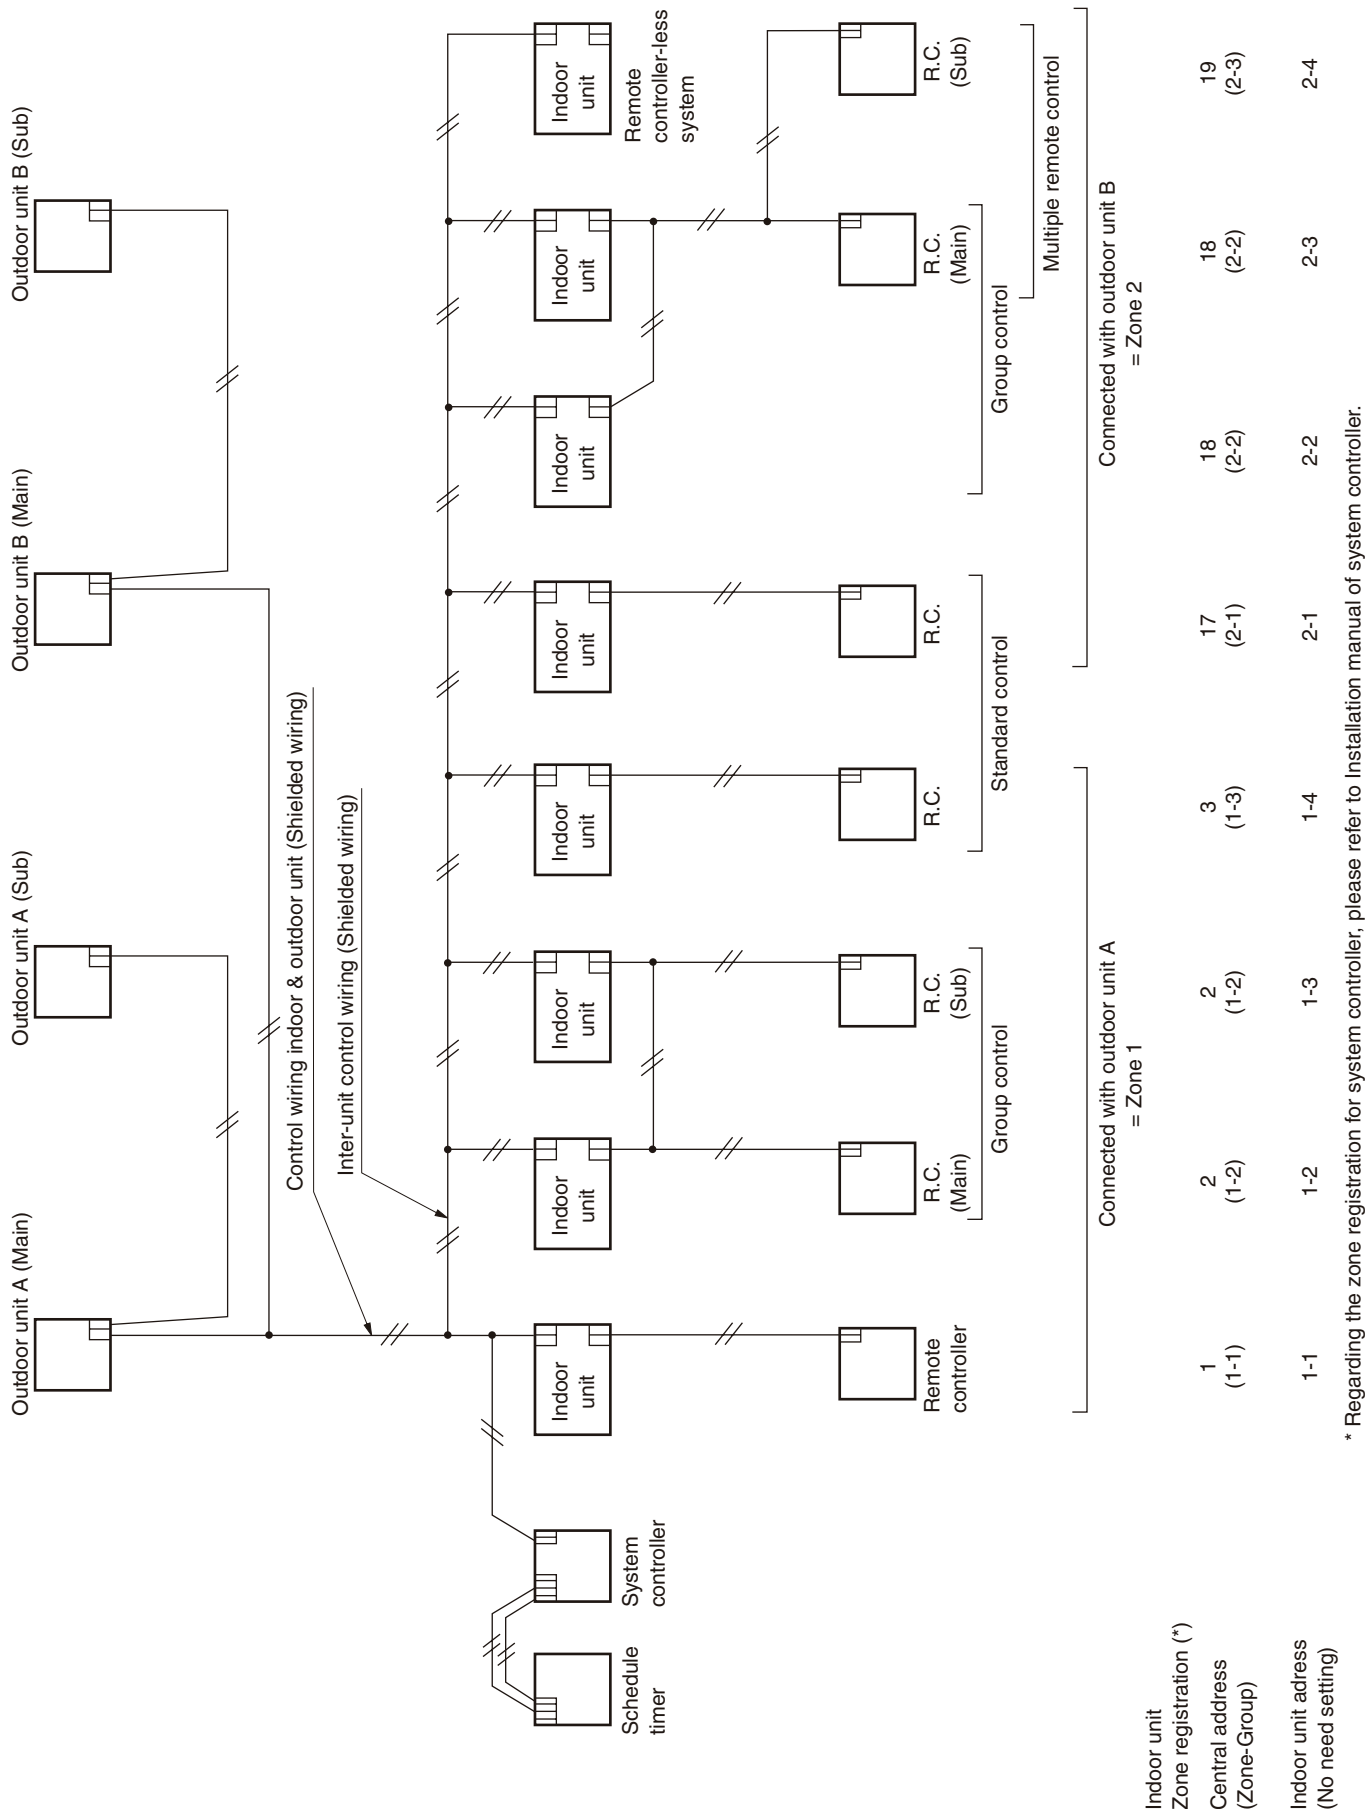

6. Schedule Timer

Schedule Timer / CZ-ESWC2

■ Operation Buttons

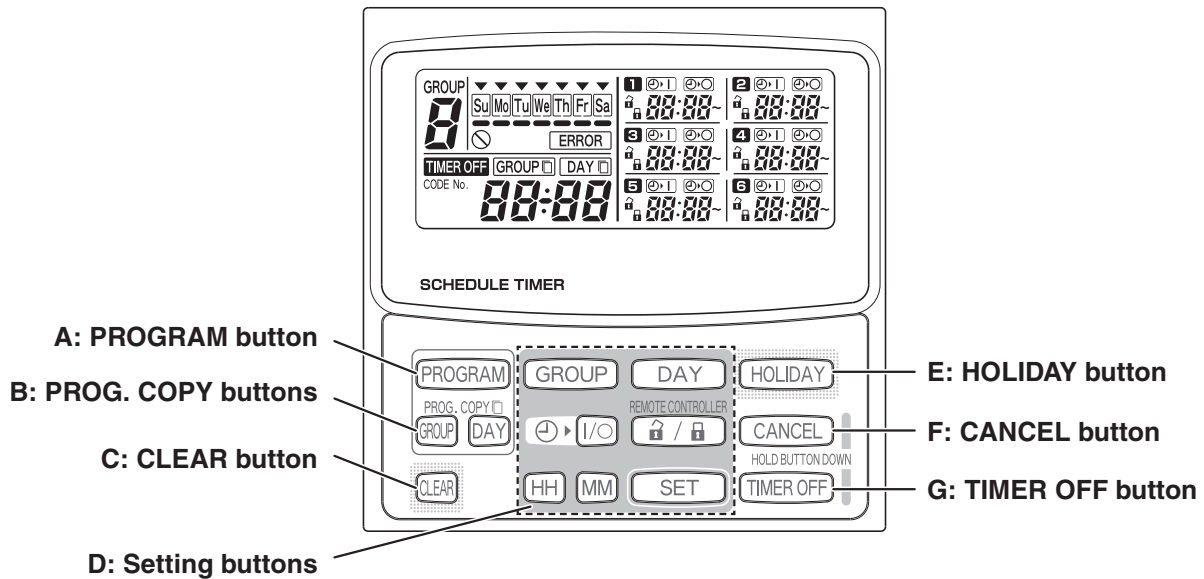


A: PROGRAM button	Use to start setting programs and to enter program settings.
B: PROG. COPY buttons	Use to copy programs to groups or specific days in a schedule. (Refer to page 3-97)
C: CLEAR button	Press to clear the settings of the currently displayed program. <ul style="list-style-type: none"> The current program is not cleared unless the PROGRAM button is pressed after pressing the CLEAR button.
D: Setting buttons	Use to make program settings and to set the present time. <div style="display: flex; flex-direction: column; align-items: flex-start; margin-left: 20px;"> <div style="display: flex; align-items: center; margin-bottom: 5px;">GROUP Press to set groups for programmed operation.</div> <div style="display: flex; align-items: center; margin-bottom: 5px;">DAY Press to set today's day and days of programmed operation.</div> <div style="display: flex; align-items: center; margin-bottom: 5px;">HH MM Press to set the present time and times used in programmed operation.</div> <div style="display: flex; align-items: center; margin-bottom: 5px;">I/O Use to start/stop indoor units via the timer.</div> <div style="display: flex; align-items: center; margin-bottom: 5px;">REMOTE CONTROLLER Use to enable/disable remote controller operation via the timer.</div> <div style="display: flex; align-items: center; margin-bottom: 5px;">SET Use to set programmed operation trigger time. <ul style="list-style-type: none"> Program settings are not entered unless the PROGRAM button is pressed at the end of setting operations. </div> </div>
E: HOLIDAY button	Press to set and cancel holidays during a scheduled week of operation.
F: CANCEL button	Press to cancel the current program setting operation, copying operation or holiday setting operation. When the CANCEL button is held down for 2 seconds, the current setting operation or copying operation is canceled and the normal display returns.
G: TIMER OFF button	Press to turn the timer OFF when timer operation will not be used for a long period of time. When this button is held down for 2 seconds, TIMER OFF appears on the display. Programs cannot be run until the button is again held down for 2 seconds.

- Some of the above features are disabled when the unit is installed. If the button of a disabled feature is pressed, appears on the display. For more information, contact your dealer.

6. Schedule Timer

■ Display

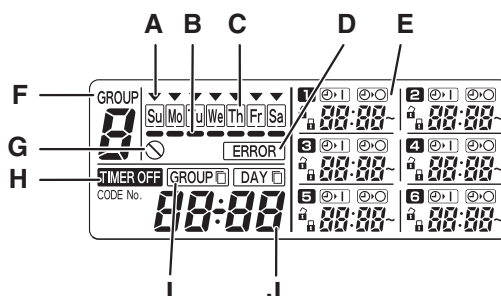

A: Today's day of the week (▼)	Indicates today's day of the week.
B: Program schedule indication (■)	Appears under days that are scheduled for program operation.
C: Holiday schedule indication (□)	Appears around scheduled holidays. (Refer to page 3-101)
D: ERROR indication	Displayed when a mistake is made during timer setting.
E: Timer program	Displays set timer programs. Also, indicates the copy source/destination during group program copying.
F: Group No.	Up to 8 groups can be selected and displayed.
G: (Disabled Feature) indication	Displayed if the selected feature was disabled during installation.
H: TIMER OFF indication	Displayed when the timer has been turned OFF.
I: Copy mode indication	Displayed when copying a program into a group or day of the schedule.
J: Present time	Displays the present time on a 24-hour clock. Also, displays settings in the various setting modes.

Using the Schedule Timer

To use the schedule timer, follow the steps below.

STEP 1 Turn ON power to the air conditioner.

- Turn ON power to the air conditioner connected to the schedule timer. The schedule timer performs initial communications with the indoor units, during which $\text{5C} \text{ 5n}$ blinks on the display.

NOTE

Do not turn off the power mains in heating and cooling seasons. (This keeps the crankcase heater electricity turned on, which protects the compressor at startup.) If the air conditioner has been OFF for a long period of time, turn on power 5 hours before starting operation.

STEP 2 Make the initial settings of the schedule timer.

- Set the present time and today's day of the week. (Refer to page 3-91)

STEP 3 Set up programs of the schedule timer.

- Make settings for programmed operation. (Refer to page 3-93)


6. Schedule Timer

■ Setting the Present Time

Set the present time. (Example: When the present time is 12:45)


STEP 1 Hold down the SET button and press the HH button to set the hour.

- The hour increases one hour at a time with each single press of the HH button while the SET button is held down.
- The hour scrolls rapidly when both the SET button and HH button are held down. (Example: To set 12:00, release the HH button when "12" is displayed.)
- When the SET button is released, the hour is set and the indication changes from blinking to lighting.

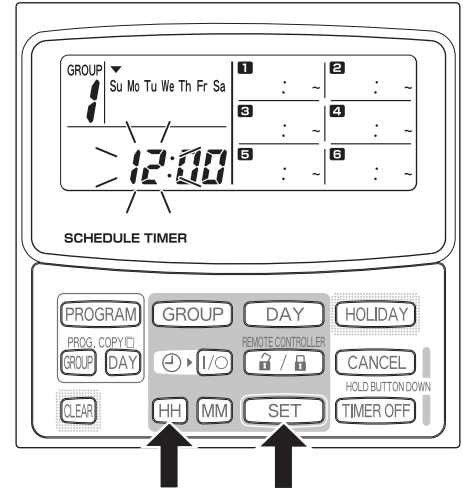

STEP 2 Hold down the SET button and press the MM button to set the minutes.

- The minutes increase one minute at a time with each single press of the MM button while the SET button is held down.
- The minutes scroll rapidly when both the SET button and MM button are held down. (Example: To set 00:45, release the MM button when "45" is displayed.)
- When the SET button is released, the minutes are set and the indication changes from blinking to lighting.

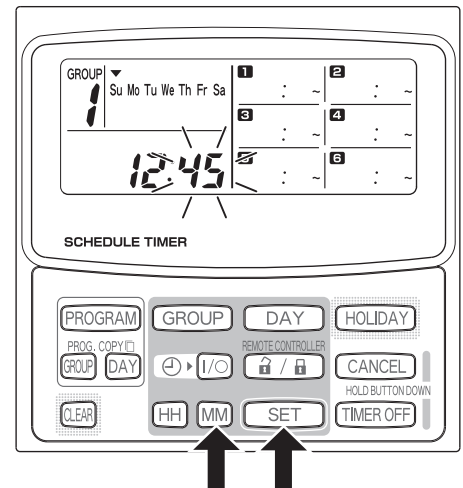

3

NOTE

- Pressing just the HH or MM button does not change the time.


6. Schedule Timer

■ Setting Today's Day of the Week

Set today's day of the week. (Example: When today is Wednesday)

STEP 1 Hold down the **SET** button and press the **DAY** button to set today's day of the week.

- ▼ blinks and moves one day at a time across the days of the week with each single press of the DAY button while the SET button is held down.
- When the SET button is released, the day of the week is set and the ▼ changes from blinking to lighting.

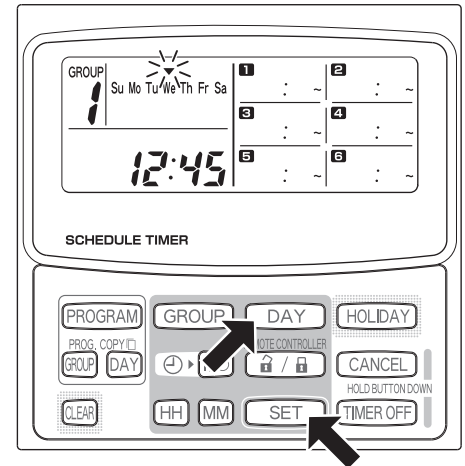

NOTE

- Pressing just the DAY button does not change the day of the week.



6. Schedule Timer

■ Setting Up Programmed Operations

Correctly set the present time and today's day of the week.


Unless both are correctly set, the programs will not run as expected.

- Up to 6 programmed operations can be set per day for each group and day of the week.
- A combination of the below operations can be set for each timer program.
 - Air conditioner starting/stopping
 - Remote controller operation enable/disable *1
- To change the settings of an existing program, use the same below procedure used to set up a new program.

*1 The remote controller operation enable/disable setting is disabled depending on installation conditions. If so,  appears on the display when the  button is pressed.

For more information, contact your dealer.

Example settings

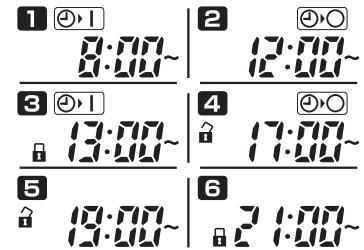

STEP 1 Press the PROGRAM button to select a group.

- When the PROGRAM button is pressed, the group No. and today's day of the week start blinking and the present time indication changes to a blinking "PG-1".
- Press the GROUP button to select a group for programmed operation and then press the SET button.

NOTE



- Group selection is disabled depending on installation conditions. If so, proceed to the next step.
- The number of selectable groups is set during installation.

STEP 2 Press the DAY button and select a day of the week for programmed operation.

- When the SET button is pressed, the program schedule marker (■) changes from blinking to lighting and, at the same time, the time set in program 1 starts blinking. Also, the present time indication changes to a blinking "PG-2".

NOTE

- The currently selected day of the week blinks slowly at this time.

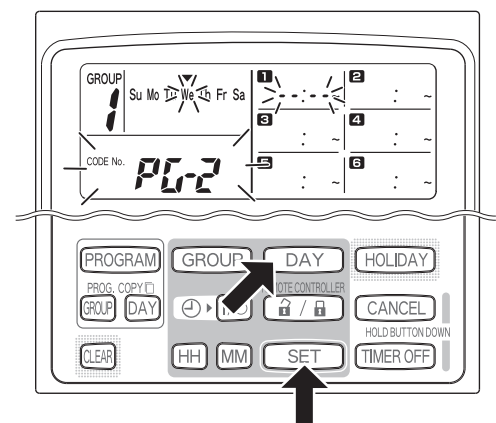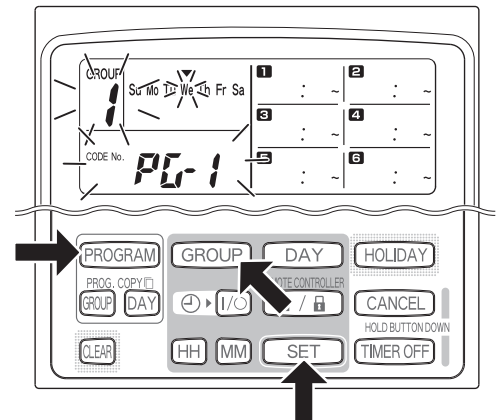


6. Schedule Timer

STEP 3 Set up the program and press the SET button.

- Select timer operation with the \odot / \circ (timer ON/OFF) button and \square / \square (remote controller operation enable/disable) button. Then, set the trigger time with the HH and MM buttons, and press the SET button.
- When the SET button is pressed, the time set in program **1** changes from blinking to lighting and, at the same time, the time set in program **2** starts blinking.


NOTE

- Every time the \odot / \circ button is pressed, the timer indication changes in the order of \odot / \square (ON) \rightarrow \odot / \circ (OFF) \rightarrow no indication.
- Every time the \square / \square button is pressed, the remote controller indication changes in the order of \square (enabled) \rightarrow \square (disabled) \rightarrow no indication.
- The remote control operation enable/disable setting is disabled depending on installation conditions. In this case, only timer ON/OFF can be set.

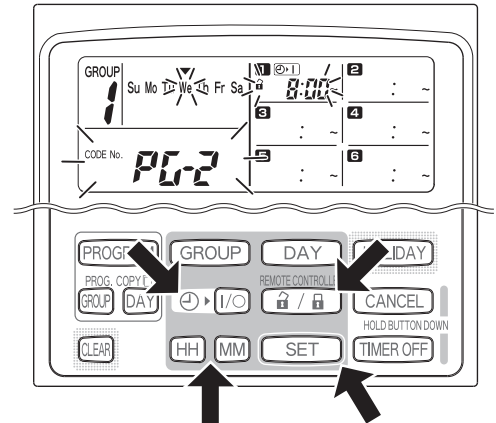


STEP 4 Set up programs **2** ~ **6** in the same way.

- When the SET button is pressed, settings are automatically arranged in the order of earliest time first.
- If the SET button is pressed without any new settings being made in the program, program **1** starts blinking again and settings can be changed.
- Similarly, if the SET button is pressed after setting up program **6**, program **1** starts blinking again.

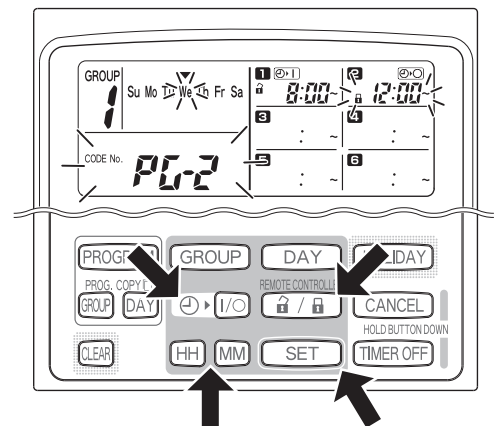

STEP 5 Press the PROGRAM button.

- Program settings are entered and the normal display returns.

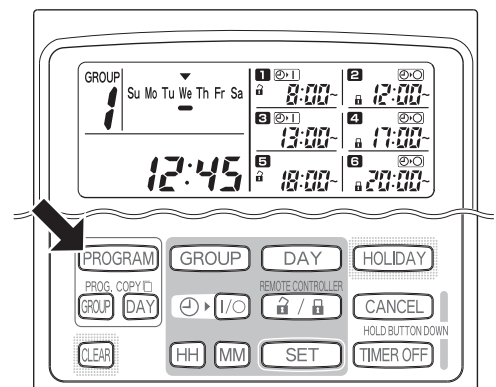

STEP 6 Set up programmed operation for other groups and days of the week in the same way.

Programs that have already been set up can be copied into other groups and days of the week. (Refer to page 3-102)

NOTE


- A "0:00" time setting is interpreted to mean 12:00 midnight.
- To cancel program settings during program setup (while "PG-1" or "PG-2" is blinking on the display), hold down the CANCEL button for more than 2 seconds. The normal display returns.
- If settings are canceled without pressing the PROGRAM button, settings are not entered.

6. Schedule Timer

■ Setting Errors

If time is set as shown below while setting up a program, "ERROR" is displayed (the **ERROR** indication blinks). Therefore, correct the time setting.

If Program Times Are the Same

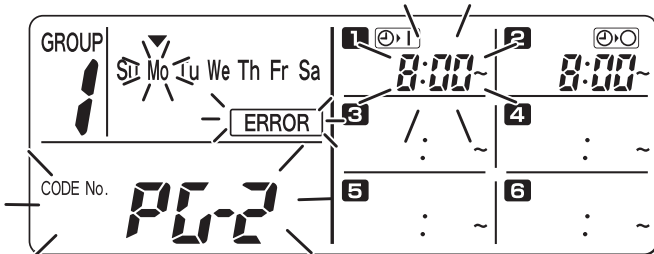


- STEP 1** Every time the SET button is pressed, the setting mode switches between programmed operations of the same time setting (**1** and **2** in the above example), therefore select the time setting to correct.
- STEP 2** Change the time setting with the HH and MM buttons so that the times are no longer the same.
- STEP 3** Press the SET button and check "ERROR" is not displayed.
- STEP 4** Press the PROGRAM button to end the setting mode.

Example Time Settings That Do Not Cause Errors

The below time settings do not generate an error.

1) When ON and OFF times are staggered

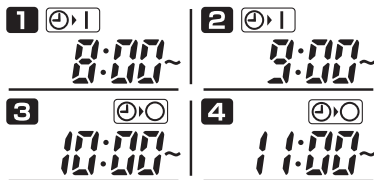

2) When OFF time is earlier than ON time



6. Schedule Timer


■ How to Check Program Times

You can check the programmed times for each group and day of the week.

STEP 1 Press the **GROUP** button and select a group whose time you want to check.


NOTE

- Group selection is disabled depending on installation conditions. If so, proceed to the next step.

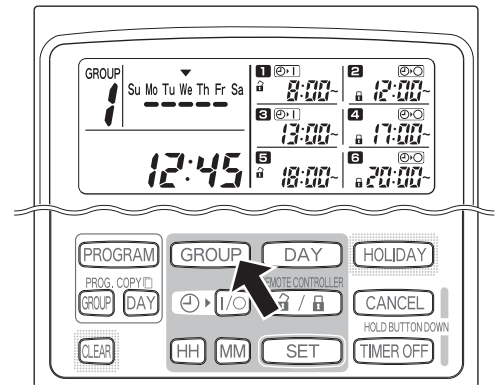

STEP 2 Press the **DAY** button.

- When the DAY button is pressed the first time, tomorrow's day of the week starts blinking and the program settings for tomorrow are displayed.
- Every time the DAY button is pressed, the program settings change in order of the days of the week.
- Pressing the GROUP button displays the program settings of another group on that same day.

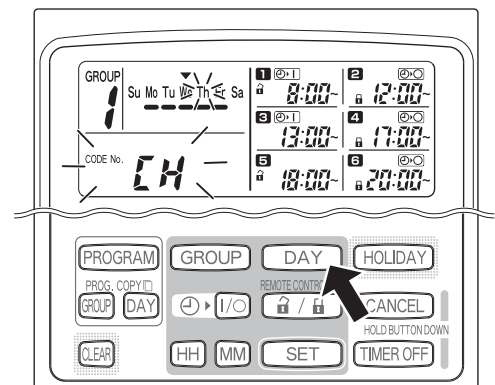


STEP 3 End checking.

- Press the CLEAR button. The normal display returns.

NOTE

- Holding down the CANCEL button for more than 2 seconds also returns the normal display.

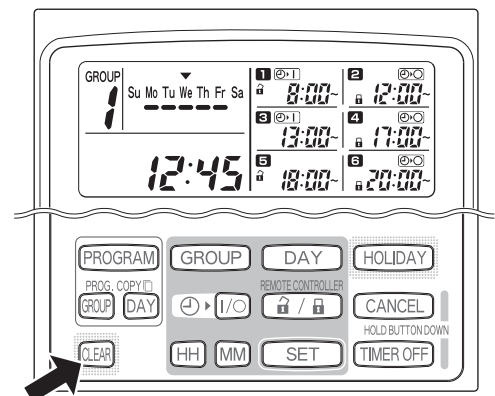


6. Schedule Timer


■ How to Copy Program Times

You can copy the already set program of one day into another day (Day Program Copying), as well as copy the entire week programmed for one group into another group (Group Program Copying).

Example of Day Program Copying (Copying Monday's program into Tuesday)

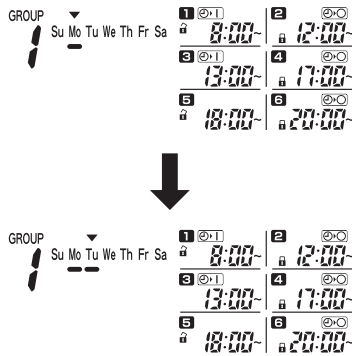


Example of Group Program Copying (Copying group No. 1's program into group No. 2)

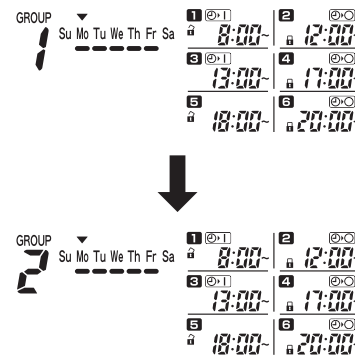

How to Copy Day Programs


STEP 1 Press the PROG. COPY DAY button.

- The group No. and the ▼ over today's day start blinking and "CP-1" starts blinking in the present time display area. In this state, select a group in which to copy day programs, using the GROUP button.

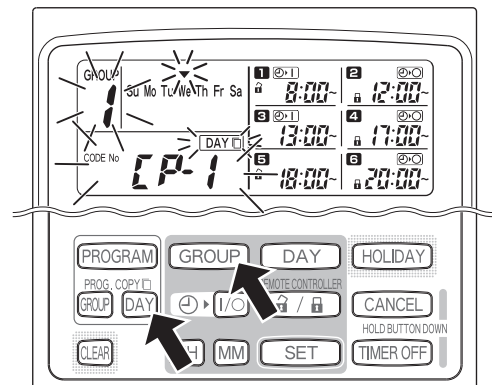


STEP 2 Select a source day program to copy.

- Every time the DAY button is pressed, the ▼ moves across the days of the week display, therefore select a day of the week that will serve as the copy source.
- Once having selected the copy source day, press the SET button to set it. The display changes to key you to select a copy destination day.

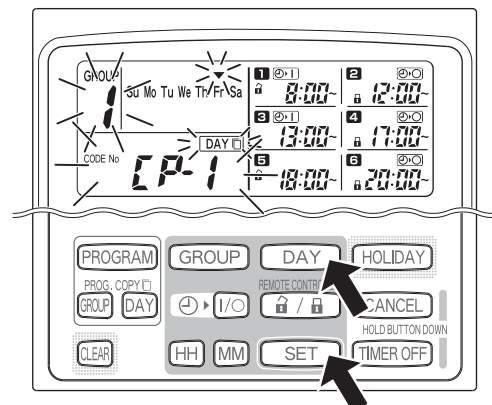


STEP 3 Select a copy destination day.

- When the schedule timer is ready for you to select a copy destination day, "CP-2" starts blinking in the present time display area, while the selected copy source day blinks in the days of the week. Therefore, select a day of the week as the copy destination, using the DAY button.

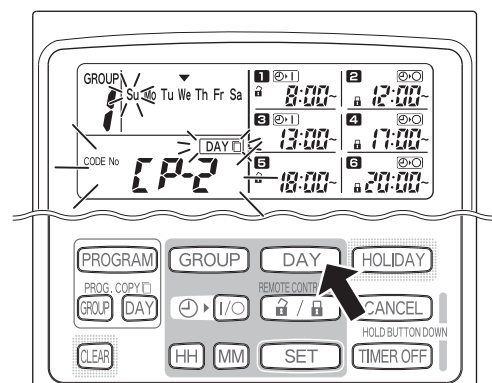

6. Schedule Timer


- STEP 4 Press the SET button to copy.**
- Press the SET button and the program schedule marker (■) will be displayed.

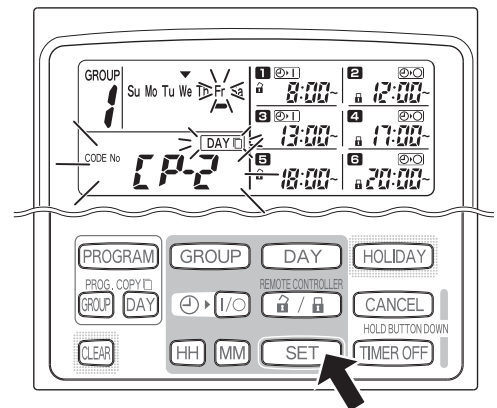


- STEP 5 Select other copy destination days if desired.**
- You can copy the selected source day program into other days by repeatedly pressing the DAY button to select a day of the week followed by the SET button to set it.

NOTE

- Pressing the CLEAR button extinguishes the program schedule marker (■) and cancels the copy operation.

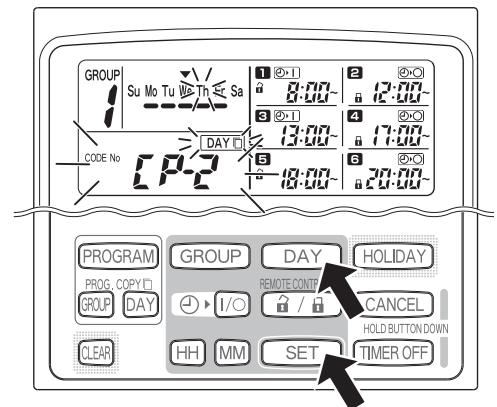

- STEP 6 Press the PROG. COPY DAY button to enter the copied program in the selected days.**
- The normal display returns.

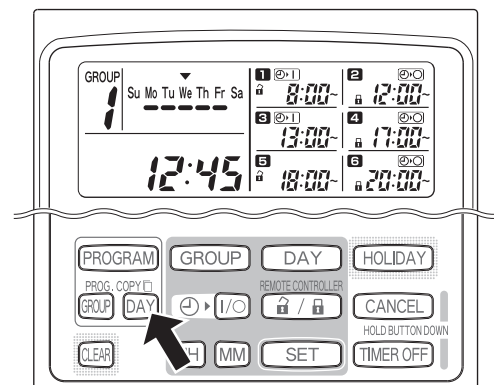


NOTE

- If a program already exists in the copy destination day, the newly copied program overwrites the existing program.
- If you accidentally copy over a program in the day program copy mode, holding down the CANCEL button for more than 2 seconds returns the program to the point prior to pressing the PROG. COPY DAY button in STEP 1. (All changes and copy operations made up until that point are cleared.)


6. Schedule Timer

■ How to Copy Group Programs


- STEP 1** Press the **PROG. COPY GROUP** button.
- “CP-1” starts blinking in the present time display area and “CP” (copy) starts blinking in the program **1** area to indicate the copy source.

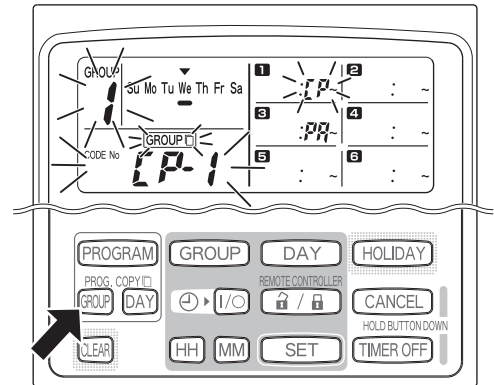

- STEP 2** Select a source group program to copy.
- Select a copy source group using the **GROUP** button.
 - Once having selected the copy source group, press the **SET** button to set it. The display changes to key you to select a copy destination group.

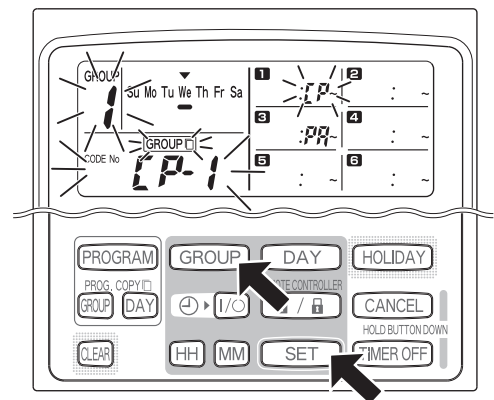


- STEP 3** Select a copy destination group.
- After pressing the **SET** button, “CP-2” starts blinking in the present time display area, the copy source group No. set appears in the program **2** area, and “PA” (paste) starts blinking in the program **3** area to indicate the copy destination.
 - Select a copy destination group using the **GROUP** button.

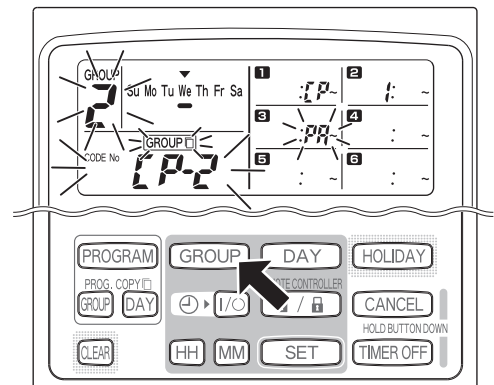

- STEP 4** Enter the selected copy destination group.
- When the **SET** button is pressed, the number of the copy destination group appears in the program No. area.

NOTE

- If a group from numbers 1 to 4 was selected as the copy destination group, that number appears in the program **4** area. If a group from numbers 5 to 8 was selected, that number appears in the program **6** area.

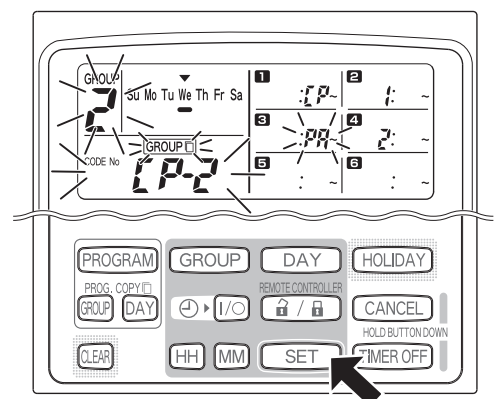

6. Schedule Timer

STEP 5 Select other copy destination groups if desired.



- You can copy the selected source group programs into other groups by repeatedly pressing the GROUP button to select a group followed by the SET button to set it.

NOTE

- If a group from numbers 1 to 4 was selected as the copy destination group, that number appears in the program **4** area. If a group from numbers 5 to 8 was selected, that number appears in the program **6** area.

STEP 6 Press the PROG. COPY GROUP button to enter the copied programs in the selected groups.

- The normal display returns.

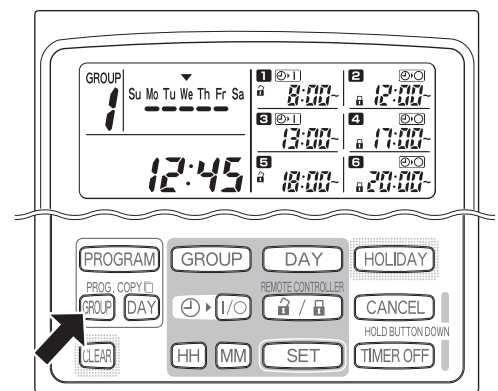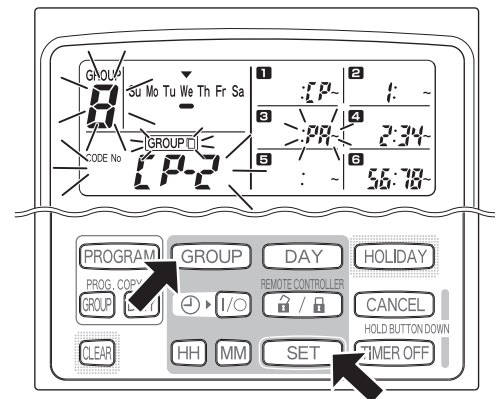

NOTE

- If a program already exists in the copy destination group, the newly copied program overwrites the existing program.
- If you accidentally copy over a program in the group program copy mode, holding down the CANCEL button for more than 2 seconds returns the program to the point prior to pressing the PROG. COPY GROUP button in STEP 1. (All changes and copy operations made up until that point are cleared.)

6. Schedule Timer

■ How to Set Holidays in a Scheduled Week of Operation

Operations programmed for a specific day during the week can be temporarily disabled by setting that day as a holiday.

- When the set holiday passes, the holiday setting is canceled and operation is resumed as programmed the following week.
- Holidays can be selected for the week starting from today's day. If today is selected as a holiday, the holiday setting is canceled from the next programmed operation. (Depending on the program, if the program is currently running, the program may not stop.)

Example Setting

Su Mo Tu We Th **Fr** Sa

Today is Thursday and Friday is set as a holiday.



Su Mo Tu We Th **Fr** Sa

When Friday comes, the program set for that day does not run.




Su Mo Tu We Th Fr Sa

When Saturday comes, Friday's holiday setting is canceled.

STEP 1 Press the **GROUP** button to select a group to go on holiday.


NOTE

- Depending on installation conditions, group selection is disabled or set so that all groups are automatically selected for the holiday feature. If so, proceed to the next step.

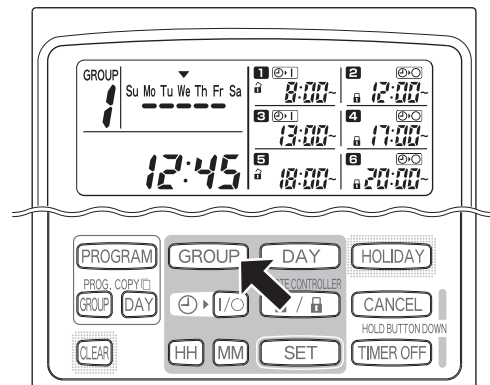


STEP 2 Press the **HOLIDAY** button.

- "HL" starts blinking in the present time display area and today's day of the week starts blinking.

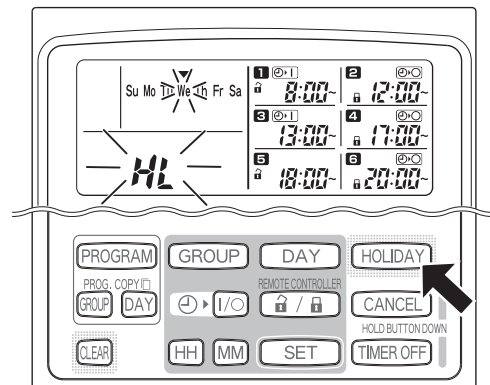


STEP 3 Select a day as the holiday using the **DAY** button, and press the **SET** button.

- A "□" appears over the selected holiday.
- To select other holidays, select a day using the DAY button and set it with the SET button.
- If you made a mistake or want to cancel a holiday, press the CLEAR button.

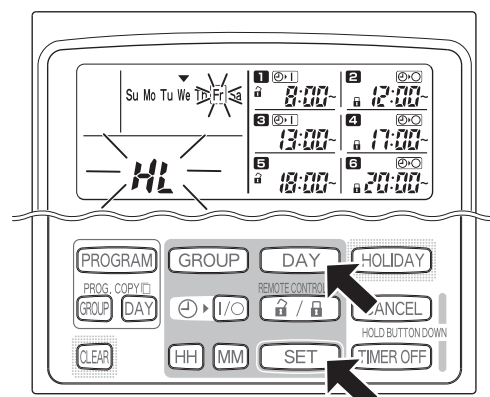

6. Schedule Timer

- STEP 4** Press the **HOLIDAY** button to enter the holiday.
- The normal display returns.

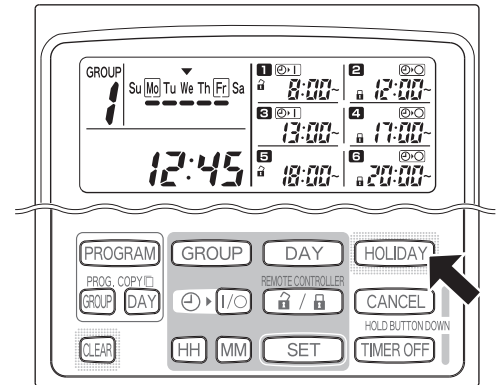

How to Disable the Timer Operation

To halt programmed operation for one week or more, you can disable all timer programs.


- Once the timer has been disabled, programmed operations are not run until the below procedure is performed.

NOTE

- During installation, the remote controller may be set to disable the timer for individual groups. In this state, the timer is disabled only for the selected group, therefore press the **GROUP** button to confirm which group is selected.


3

Hold down the **TIMER OFF** button for more than 2 seconds

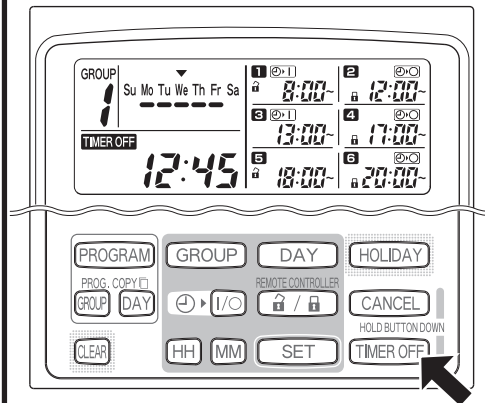

- TIMER OFF** appears on the display. The timer is disabled from the next scheduled program.

To turn the timer back ON, hold down the **TIMER OFF** button for more than 2 seconds

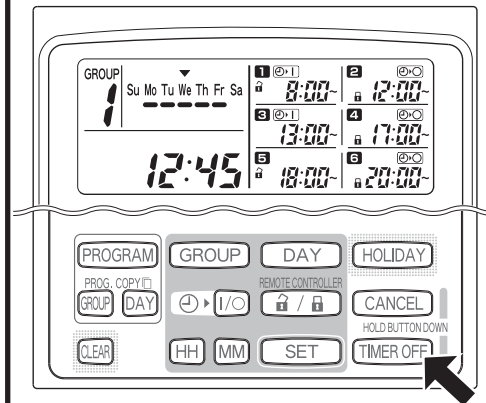


- TIMER OFF** goes out and the timer is enabled from the next scheduled program.

6. Schedule Timer

■ How to Clear Programs

Press the PROGRAM button.

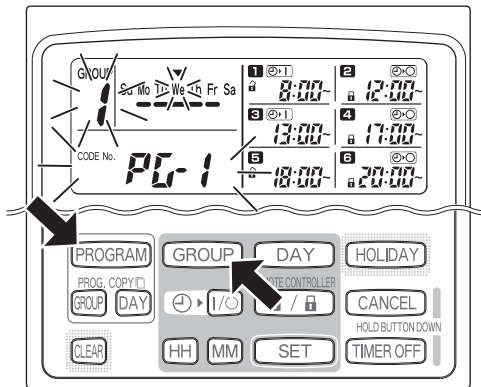


- When the PROGRAM button is pressed, the group No. and the present day of the week start blinking and the present time indication changes to a blinking "PG-1".
- Press the GROUP button to select a group to clear.

NOTE


- Group selection may be disabled during installation. If so, proceed to the next step.
- Holding down the CANCEL button for more than 2 seconds returns the program to the point prior to pressing the PROGRAM button. (All operations made up until that point are cleared.)

To cancel specific days

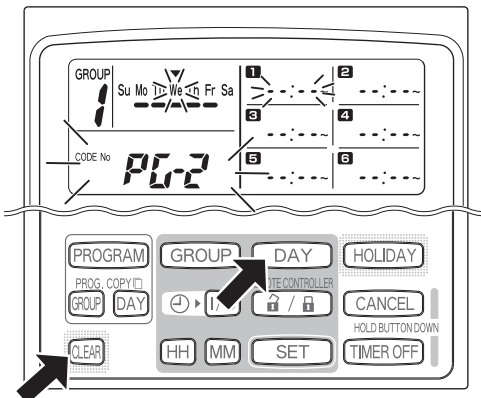

- Select a day to cancel using the DAY button and press the CLEAR button. All settings in programmed operations **1** through **6** are cleared. The display appears as shown above.
- Press the PROGRAM button to enter the clear operation. The normal display returns without the program schedule marker (■) underneath the days of the week.

To cancel individual programs on specific days

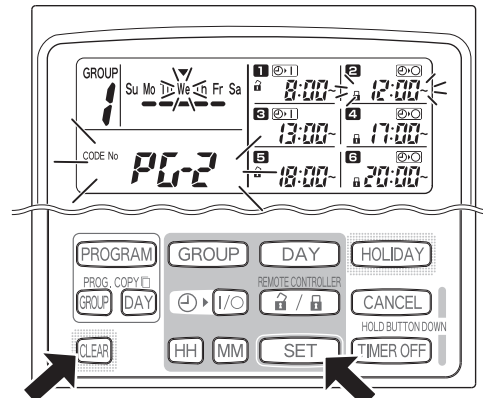

- Select a day and press the SET button. Programmed operations **1** through **6** start blinking in rotation, therefore press the CLEAR button when the programmed operation to clear starts blinking. (The remaining programmed operations are automatically arranged in the order of earliest time first.)
- Press the PROGRAM button to enter the clear operation. The normal display returns.

Example:
Display after clearing
programmed operation **2**
above


1	8:00	2	13:00
3	17:00	4	18:00
5	20:00	6	---

6. Schedule Timer

■ Schedule Timer and Air Conditioner Operation


Air conditioners operate either according to operations programmed from the schedule timer (starting/stopping and remote control operation enable/disable) or according to a connected remote controller or system controller.

Schedule timer settings (Example)

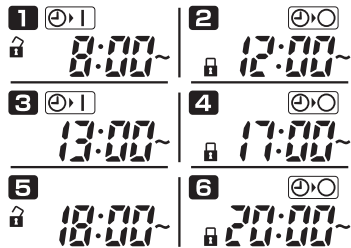

Operation without system controller operation


- If remote controller operation is enabled, the air conditioner can be started/stopped from the remote controller. (The air conditioner responds to the most recently pressed button.)

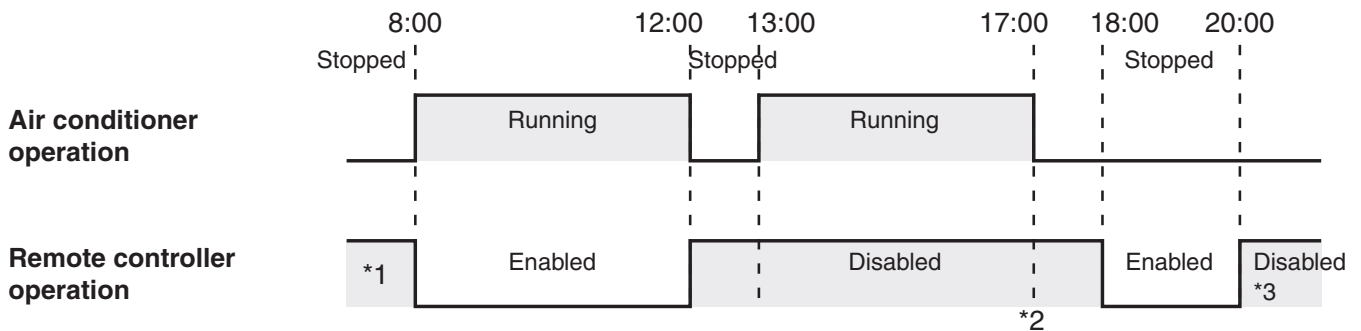

- *1 Whether remote controller operation is enabled or disabled depends on the setting of the previous day.
- *2 Since remote controller operation is disabled, operation remains disabled.
- *3 The remote controller remains disabled the next day and thereafter until it is enabled in the remote controller operation enable/disable setting.

Operation with system controller operation

- If remote controller operation is enabled, the air conditioner can be started/stopped from the remote controller. (The air conditioner responds to the most recently pressed button.)
- The remote controller operation enable/disable set from the system controller (Centralized control 1 to 4) is canceled according to programmed operations.

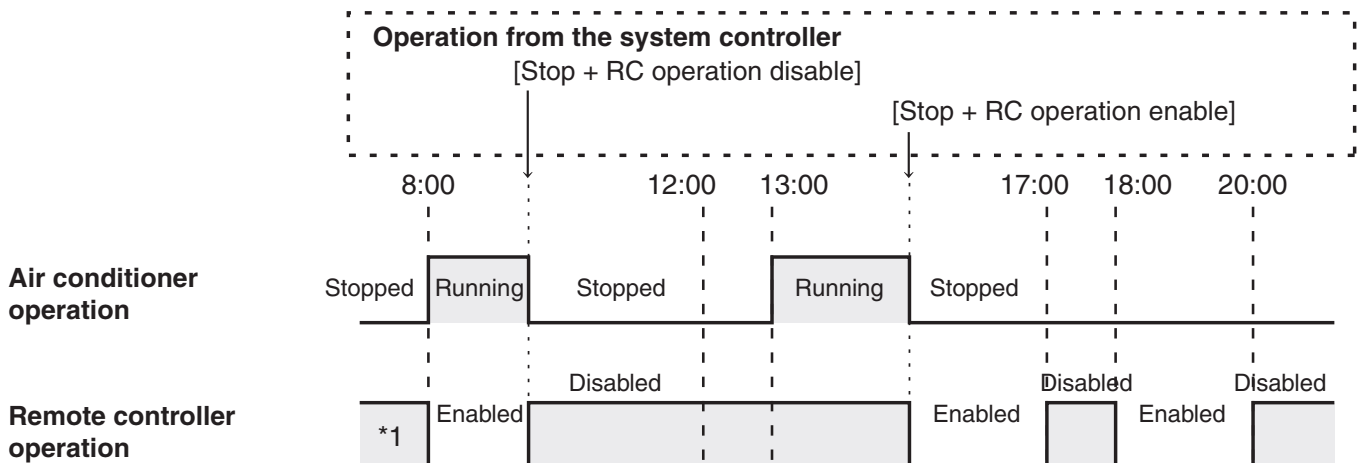

- *1 Whether remote controller operation is enabled or disabled depends on the setting of the previous day.

6. Schedule Timer

■ Power Outages


If the air conditioner is running when power is lost, the air conditioner remains OFF when power is restored. Also, if remote controller operation was disabled when power was lost, it is enabled for a few minutes when power is restored.

- Programmed operations scheduled for times that come after power is restored run as usual.
- Program settings are retained in the non-volatile memory of the schedule timer, therefore they are not cleared in the event of a power outage. Also, the present time and today's day of the week are retained for a maximum of 100 hours by the internal battery.

Schedule timer settings (Example)




Operation when power is not lost

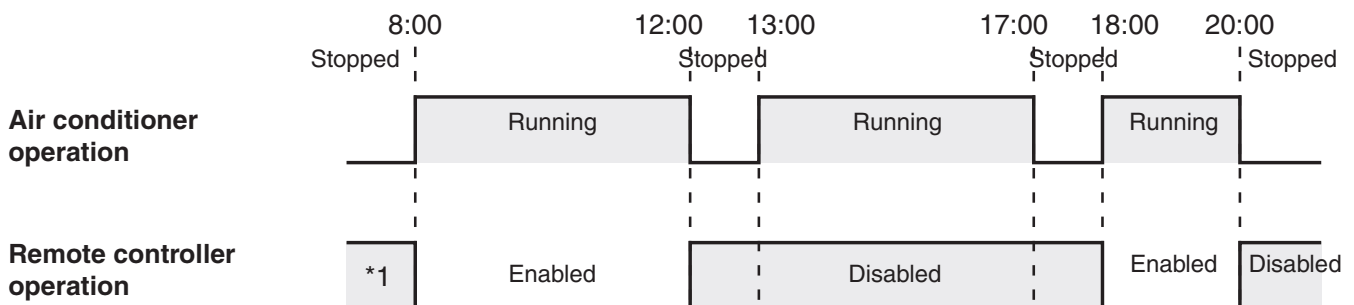

*1 Whether remote controller operation is enabled or disabled depends on the setting of the previous day.

Operation when power is lost at 15:00 and subsequently restored

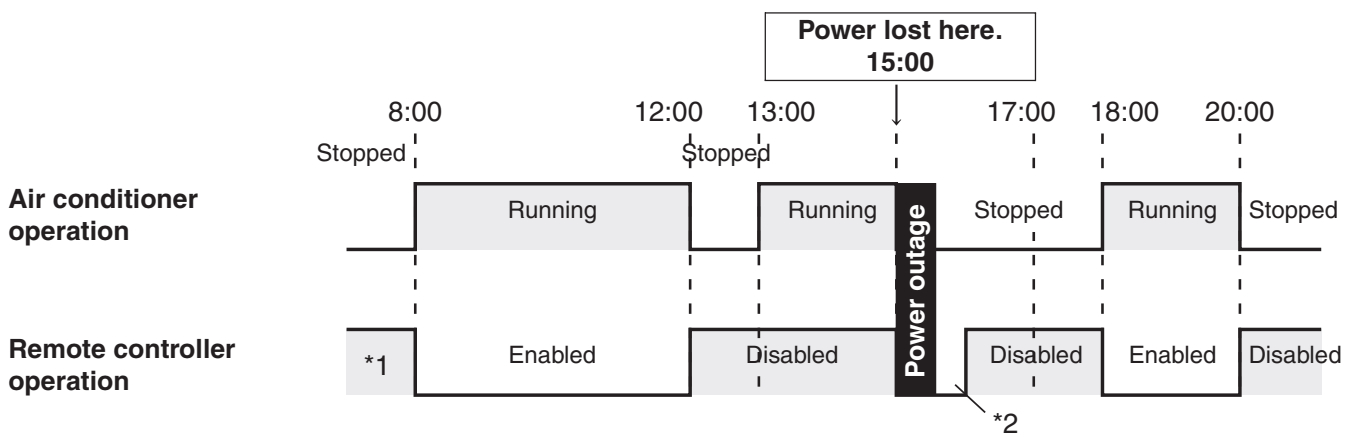

*1 Whether remote controller operation is enabled or disabled depends on the setting of the previous day.

*2 Remote controller operation is enabled for a few minutes after power is restored.

6. Schedule Timer

■ Troubleshooting



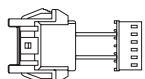

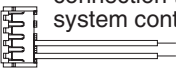




Before requesting servicing, check the following.

	Trouble	Cause/Remedy
Check before requesting servicing	⏰ blinks on the display.	The schedule timer is performing initial communications with connected indoor units. Wait for communications to finish.
	Air conditioners do not operate as scheduled when the set time comes.	The timer has been disabled. (Refer to page 3-102) A holiday has been scheduled. (Refer to page 3-101)
	Air conditioners can be started and stopped from the remote controller even though the program disables remote controller operation.	Power to the air conditioner was lost and subsequently restored. (Refer to page 3-105)
	⏰ blinks in the present time display area.	Power to the air conditioner was lost for a long period of time. Set the present time and today's day of the week again. (Refer to pages 3-91 and 3-92)

If trouble persists despite taking the above action, stop the schedule timer, turn off the unit and report the serial number and problem to your dealer. Never service the unit yourself as this is dangerous.

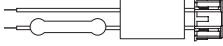6. Schedule Timer

■ Accessories for Schedule Timer

No.	Supplied parts	Q'ty	No.	Supplied parts	Q'ty
1	T10 power wire  (with current fuse) *1	1	5	Spacers 	2
2	T10 relay wire *2 	1	6	Wire joints 	7
3	Power wire for connection to system controller 	1	7	Operating Instructions 	1
4	Screws M4 x 25 	2	8	Label 	1
			9	Earth screw for T10 (for indoor unit) 4 x 8 - 3 	1

*1 If the fuse blows as a result of a wiring short-circuit, mis-wiring, or overcurrent, replace it with a 125 V, 0.5 A fuse.


*2 Use it according to the form of T10 connector.

■ Installing the Schedule Timer

NOTE

- Avoid twisting the inter-unit control wiring or the input/output wiring together with power or other wiring, and avoid running them in the same metal conduit. Doing so can cause malfunction.
- Install the schedule timer at a location away from any sources of electrical noise.
- Install a noise filter or take other appropriate action if electrical noise affects the power supply circuit of the unit.

When mounting the back case to the electric junction box, tighten the screws securely until the screw heads touch the back case. Otherwise, a loose screw head may damage the PCB on the back of the top cover when mounting the top cover. But do not over-tighten the screws. Over-tightening may deform the back case and cause the unit to fall.

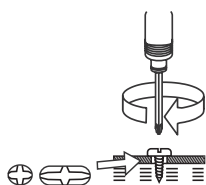

- (1) Open the panel on the schedule timer unit. Insert a standard (flat-head) screwdriver or similar tool into the notches on the bottom of the schedule timer unit to open and remove the back case.
- (2) Use the 2 supplied M4 machine screws and install the schedule timer back case onto the switch box. Before installing, use a screwdriver or similar tool to press on and open the screw holes that correspond to the Electric junction box that is used. When fastening the case, use spacers and do not tighten the screws too much. If the schedule timer does not fit tightly against the wall, cut the spacers as required to make adjustments.
- (3) Connect the supplied power wire (2-core) and inter-unit control wire (3-core) to the schedule timer unit. (Refer to "Wiring the Schedule Timer.")
- (4) Align the schedule timer unit with the tabs on the back case and press to install it.

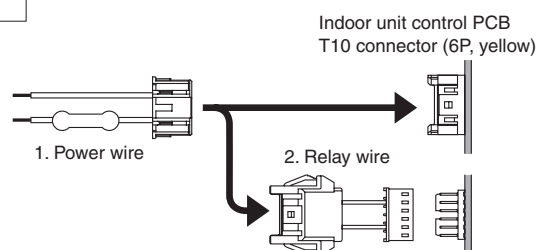


Fig. 3-46

*3 For used in North America, remove the wiring for earth (green) on the back case.

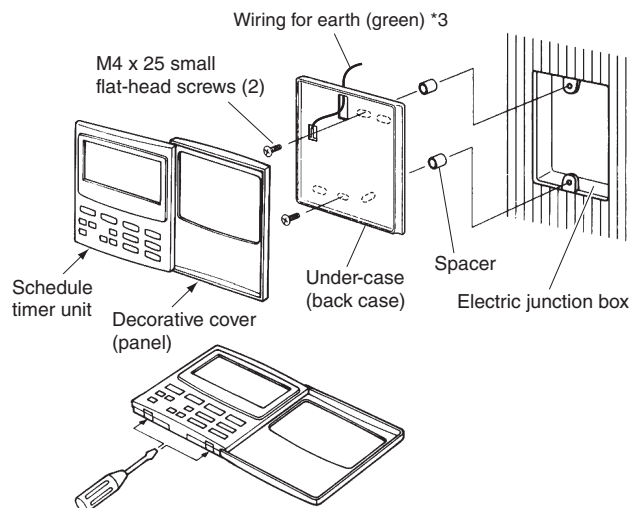


Fig. 3-47

6. Schedule Timer

■ Installation of Connected Schedule Timers

When installing schedule timers (remote controller switches, system controllers, etc.) onto the wall, use the method shown in Figs. 3-52 and 3-53.


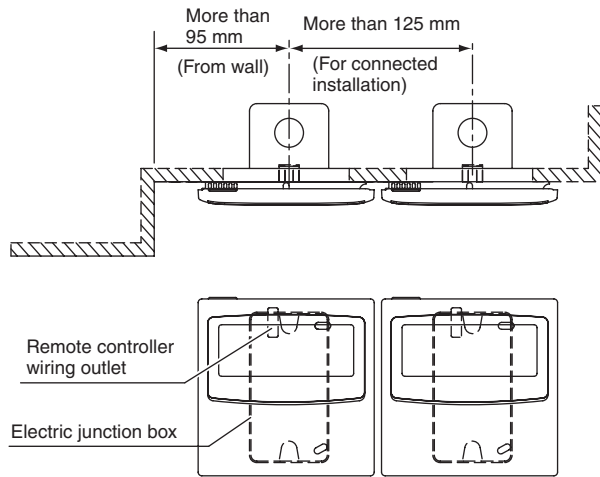


Fig. 3-48

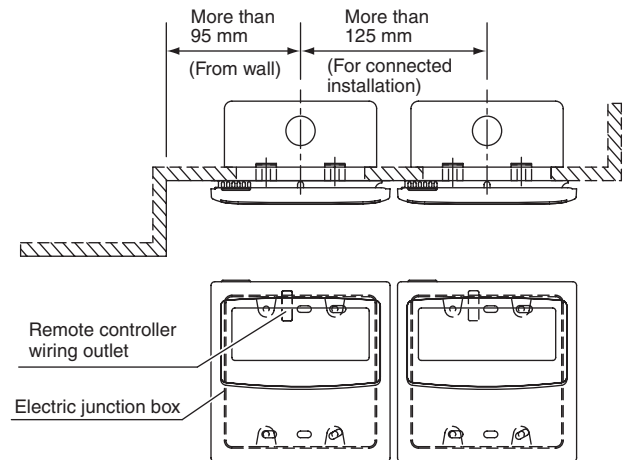

* For maintenance reasons, leave a gap of 25 mm or more between the remote controller switch and schedule timer if they are arranged in parallel above/below each other.

Fig. 3-49

■ Wiring the Schedule Timer

- Before beginning wiring
 - Use 0.5 – 2 mm² wires for field supply wiring.
 - For inter-unit control wiring, use signal wires that allow the remote controller wiring to be differentiated from the power wiring, and take care to prevent miswiring. (**Miswiring will damage the schedule timer.**)
 - Use shielded wiring for Inter-unit control wiring and power wiring(T10). (Except North America)
 - Check that the schedule timer communications wiring and power wiring are connected correctly. (Fig. 3-50)

<Basic Wiring Diagram>

- Route the A/C inter-unit control wiring for central control as shown in the figure at right.
- The maximum number of indoor units that can be connected to a single system is 64. The maximum number of outdoor units is 30.
- The maximum number of schedule timer units that can be connected is 8. (A maximum of 10 schedule timer units and other central control devices can be connected.)

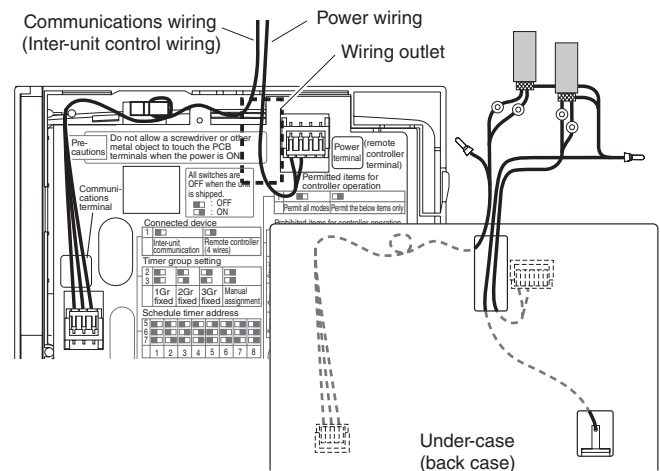


Fig. 3-50

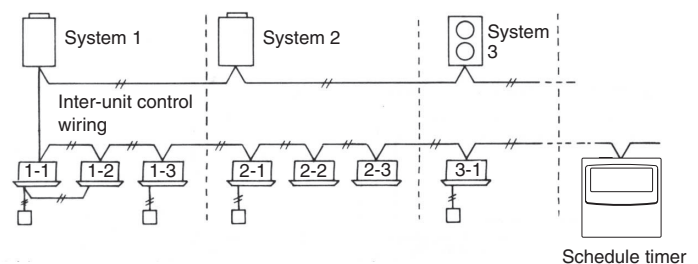


Fig. 3-51

NOTE Depending on the model of A/C, a local adapter may be required.

6. Schedule Timer

● Wiring

The schedule timer wiring can be connected by the following two methods. Select one of these connection methods according to the actual installation location.

When wiring, extend the lengths of the wires using wire joints (provided) and extension wires (field supply).



CAUTION

When installing multiple schedule timers, avoid the use of cross-over wiring.

- Connection diagram (Be sure to use the provided wires as the power wiring.)

If a system controller is also installed:

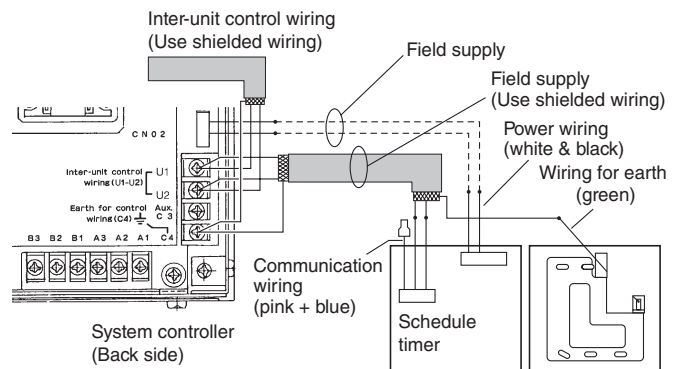


Fig. 3-52

Connect the wires for the schedule timer inter-unit control wiring (see Note below) to the U1 and U2 terminals on the system controller terminal board. Connect the system controller power wiring to CN02 and to the schedule timer power wires (white + black).

- The inter-unit control wiring has no polarity. The wiring may be connected in either direction to U1 and U2. (Use shielded wiring)
- The power wiring has no polarity. The wiring may be connected in reverse.
- **The length of the power wiring must be no more than 100 m.**

Note: The inter-unit control wires are pink + blue + blue (using wire joint crimping). Use pink + blue wires.

If a system controller is not installed (power is supplied from the indoor unit):

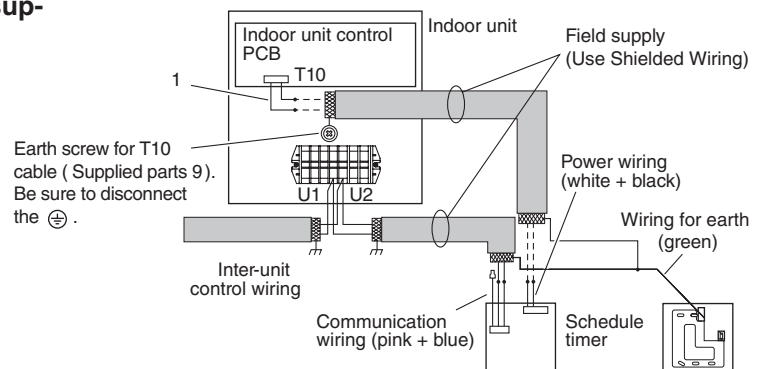


Fig. 3-53

If power is supplied from the indoor unit control PCB of a nearby indoor unit, connect the provided T10 terminal connection wires to the T10 terminal on the indoor unit control PCB, and to the schedule timer power wires.

- The inter-unit control wiring has no polarity. The wiring may be connected in either direction to U1 and U2. (Use shielded wiring)
- If necessary, use a relay wire when connecting the wiring to the indoor unit control PCB.
- The power wiring has no polarity. The wiring may be connected in reverse. (Use shielded wiring)
- **The length of the power wiring must be no more than 100 m.**


NOTE

The only functions of the schedule timer are indoor unit ON/OFF and remote controller enable/disable operations. It is therefore recommended that during installation, a system controller, remote controller, or similar device be installed next to the schedule timer so that the operation mode and other information can be checked. (If the system controller or other central control device is not present, the schedule timer cannot be used in combination with a system that does not utilize remote controllers.)

6. Schedule Timer

■ About the Setting Switches

Complete the switch settings before turning ON the schedule timer power.

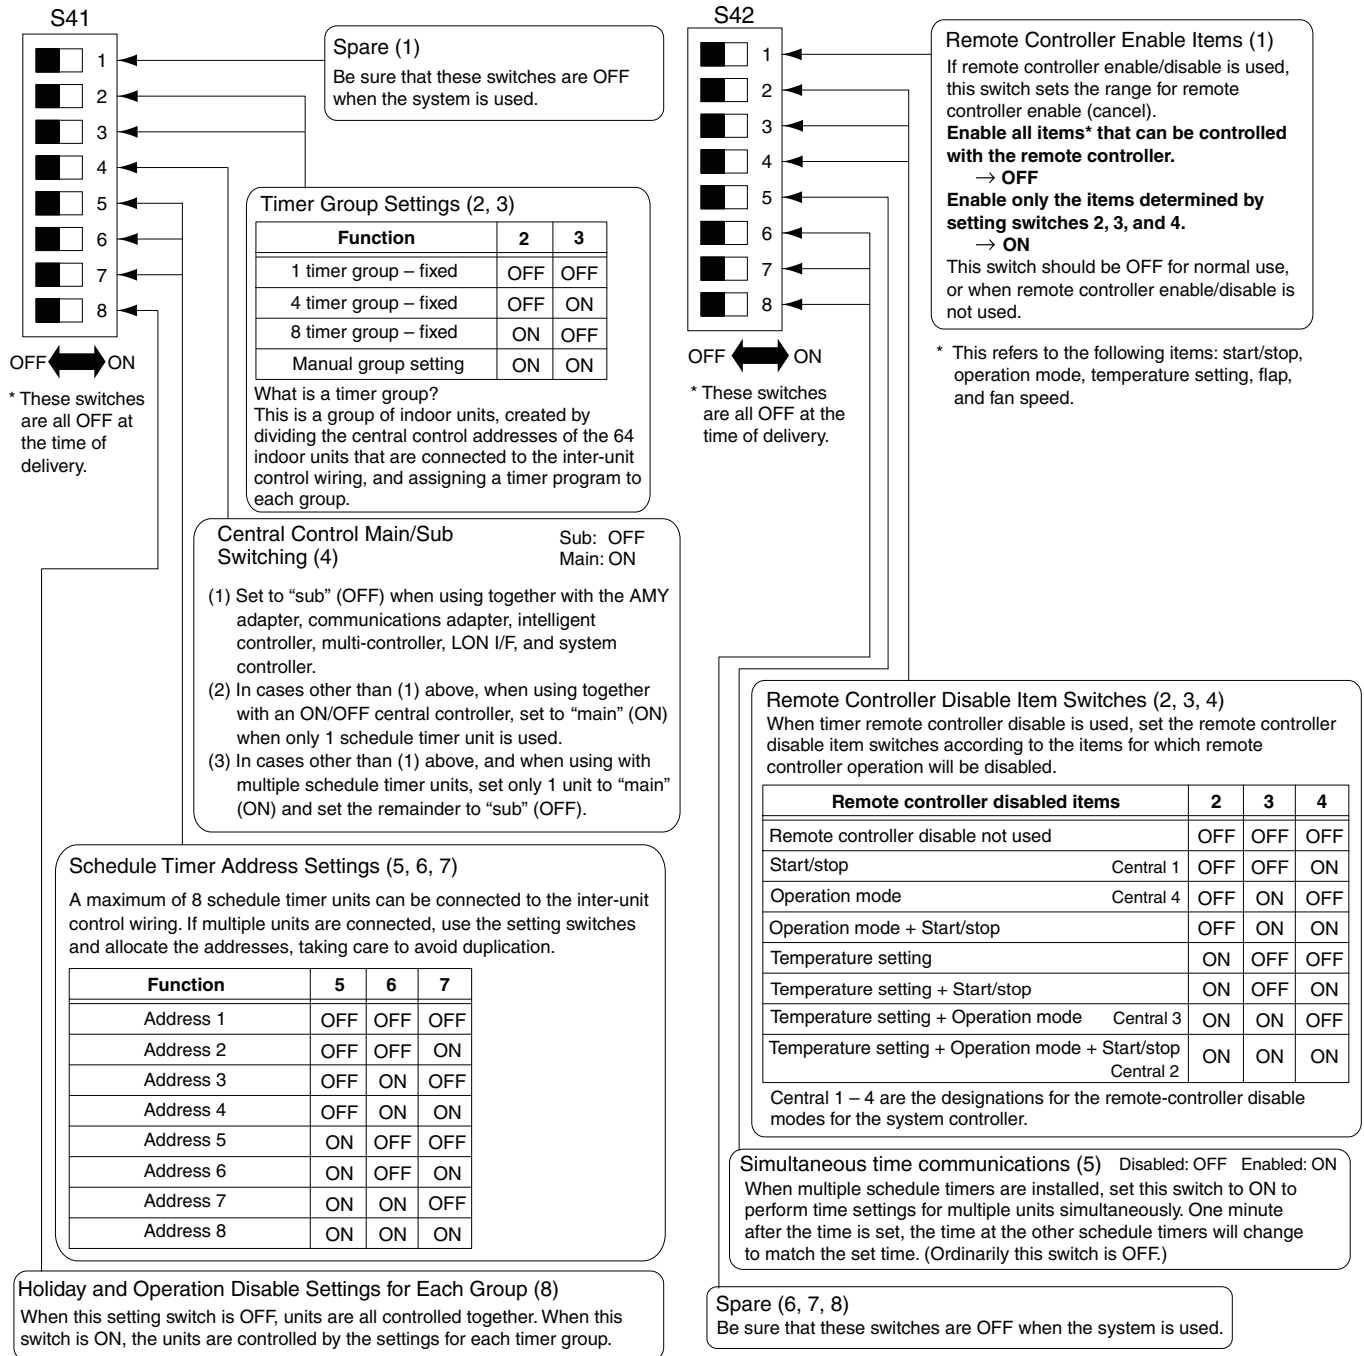


6. Schedule Timer

■ Creating Timer Groups

The schedule timer can be set for 6 time status changes. These can be used to create up to 8 groups (timer groups). For systems in which schedule timers are used, set the timer groups to match the central control addresses of the indoor units that will be subject to group timer control.

The timer-group settings for the schedule timer involve assignment of central control addresses. Therefore, use the system controller (or other central control device) or wired remote controllers to set the central control addresses of the indoor units, then make the schedule timer settings.

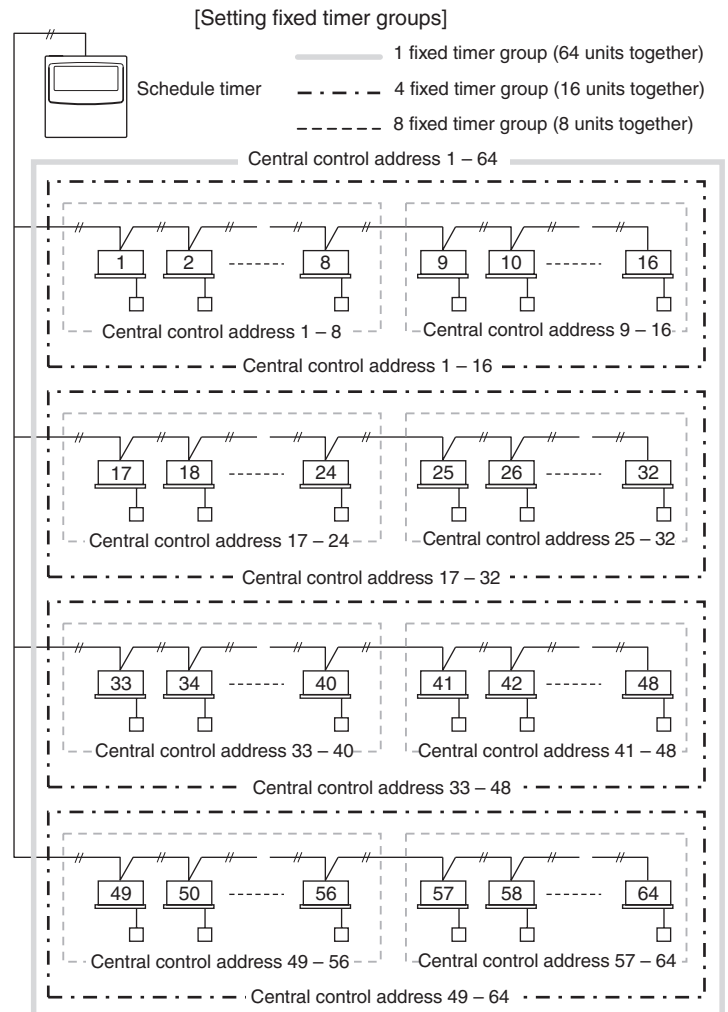

● Procedure for making fixed timer group settings (fixed groups)

- (1) First, use a different central control device (system controller or other device) or the wired remote controllers to set the central control addresses, as assigned in the figure above, to the indoor units that will be subject to group timer control.
- (2) Next, use S41 switches 2 and 3 to set the number of timer groups you wish to create.
- (3) Finally, turn ON the schedule timer power. Initial communications are performed. (SCAN blinks in the display.) The normal display appears after several minutes, and the timer group settings are confirmed.

● Procedure for making manual timer group settings (manual group assignments)

Manual timer group settings allow central control addresses to be assigned freely within the timer groups.


- (1) Turn ON S41 setting switches 2 and 3, then turn ON the power. Restart and initial communications are performed. (SCAN blinks in the display.) The normal display appears after several minutes.
- (2) When the normal display appears, press and hold the schedule timer **⏏** button, the timer **⏸/▶/⏪** button, and the **🔒/🔓** button for 4 seconds or longer. “Ad-01” appears, blinking, in the current time display. (Ad indicates “address” and 01 is the central address number.)
- (3) Use the **GROUP** button in the **■** area to select the timer group. Then use the **DAY** button in the **■** area to select the central control address to assign and register for that timer group. Press the **SET** button to register the selected central control address.

6. Schedule Timer

- (4) To continue registering addresses, repeat step (3). (Central control address numbers will be added to the right side of the LCD display.) To cancel a registered central control address, use the **GROUP** button in the area to select the timer group, then use the **DAY** button in the area to select the central control address and press the **CLEAR** button.
- (5) Repeat steps (3) - (4) for each timer group. When registration is completed, press the timer **⊕ / ⊖** button. The schedule timer restarts automatically and performs initial communications. (SCAN blinks in the display.) The normal display appears after several minutes, and the manually assigned timer group settings are confirmed.

■ Memory Back Up Switch

After installation is completed, check that the backup switch on the reverse side of the schedule timer PCB is turned to ON. (The backup battery will retain the current time for up to 100 hours.)

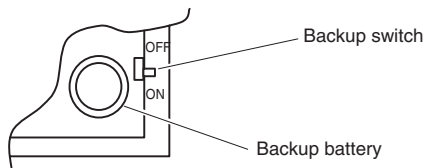

■ Checking the Central Control Addresses and Operating the Units that are Controlled by the Schedule Timer

The schedule timer communicates with the indoor units to check which central control addresses can be controlled with the current timer control. The schedule timer can then be used to start and stop these units.

- (1) Press and hold the schedule timer **⊕ / ⊖** button, **TIMER OFF** button, and **CLEAR** button for 4 seconds or longer. "Ad-(central control address)" appears in sequence, blinking.
- (2) Use the **GROUP** button in the area to display the blinking central control addresses in sequential order. In this way, it is possible to check which central control addresses in the displayed timer group can be operated by the timer.
- (3) With the selected timer group displayed, press the timer **⊕ / ⊖** button. Each time the button is pressed the indoor units in the displayed timer group start or stop. Pressing the **⊕ / ⊖** button in this mode permits all items (operation start/stop, operation mode, temperature setting items) at the indoor units in the displayed timer group where remote controller prohibit is in effect.
- (4) After checking the addresses and operating the units, press and hold the **CANCEL** button for 2 seconds or longer. The schedule timer display returns to the normal display and all controllable indoor units stop.

■ Explanation to Customers

- After work is completed, present the Operation Manual and Information for the Person in Charge of Installation (Electrical) Work to the customer.
- Explain to the customer the methods for use of the system, as described in the Operation Manual.

6. Schedule Timer

■ Installation Work Plan


- Use the wired remote controller to check the unit No. of the indoor units.
(Start the A/C unit with the wired remote controller, then press the remote controller UNIT SELECT button once to display the unit No. of the main unit.)

Schedule timer			Central control addresses	Indoor unit Unit No. System - Indoor	Room name
Fixed timer group					
1	4	8			
1 At the time of shipment	1	1	1	- , -	
			2	- , -	
			3	- , -	
			4	- , -	
			5	- , -	
			6	- , -	
			7	- , -	
			8	- , -	
	2	2	9	- , -	
			10	- , -	
			11	- , -	
			12	- , -	
			13	- , -	
			14	- , -	
			15	- , -	
			16	- , -	
	3	3	17	- , -	
			18	- , -	
			19	- , -	
			20	- , -	
			21	- , -	
			22	- , -	
			23	- , -	
			24	- , -	
	4	4	25	- , -	
			26	- , -	
			27	- , -	
			28	- , -	
			29	- , -	
			30	- , -	
			31	- , -	
			32	- , -	
	5	5	33	- , -	
			34	- , -	
			35	- , -	
			36	- , -	
			37	- , -	
			38	- , -	
			39	- , -	
			40	- , -	
	6	6	41	- , -	
			42	- , -	
			43	- , -	
			44	- , -	
			45	- , -	
			46	- , -	
			47	- , -	
			48	- , -	
	7	7	49	- , -	
			50	- , -	
			51	- , -	
			52	- , -	
			53	- , -	
			54	- , -	
			55	- , -	
			56	- , -	
	8	8	57	- , -	
			58	- , -	
			59	- , -	
			60	- , -	
			61	- , -	
			62	- , -	
			63	- , -	
			64	- , -	


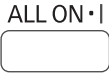
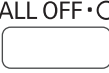
7. ON/OFF Controller (CZ-ANC2)

1. How to Use the ON/OFF Controller

■ Functions of buttons

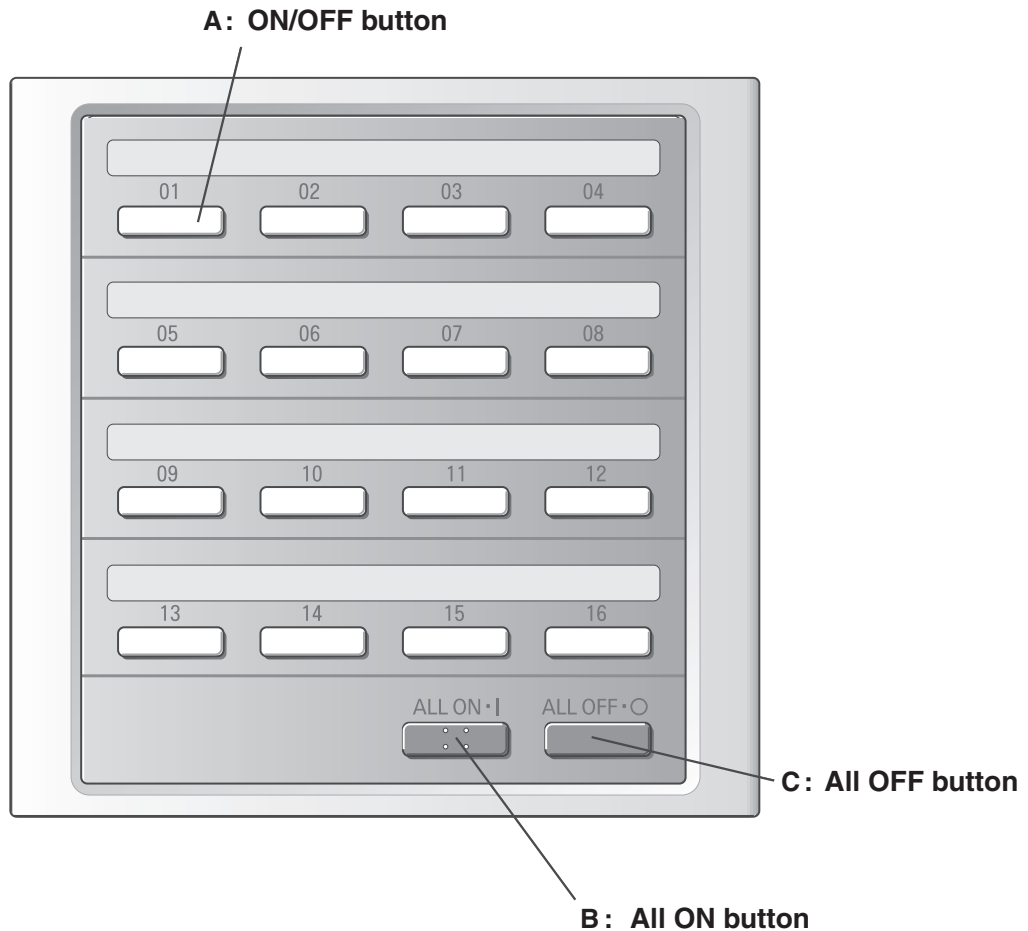

3

A: ON/OFF button 	Press this to start up or stop an individual air conditioner.
B: All ON button  <div style="border: 1px solid black; padding: 2px; display: inline-block;">NOTE</div>	Press this to start up all the air conditioners at the same time. The indoor units which can be operated by the ON/OFF controller now start operating in sequence at intervals of 1 to 2 seconds.
C: All OFF button 	Press this to stop all the air conditioners at the same time.


7. ON/OFF Controller (CZ-ANC2)

■ How to use the nameplate

The nameplate shows the rooms where the air conditioners are to be operated, and it enables the operating statuses of the air conditioners in those rooms to be checked by the operation indicator lamps.

Steps

1. Insert an implement such as a ballpoint pen into the hole on the left of the transparent cover, and remove the cover.
2. Use a writing instrument such as an oil-based pen to write the names of the rooms on the switch name labels provided, and adhere the labels to the name displays.

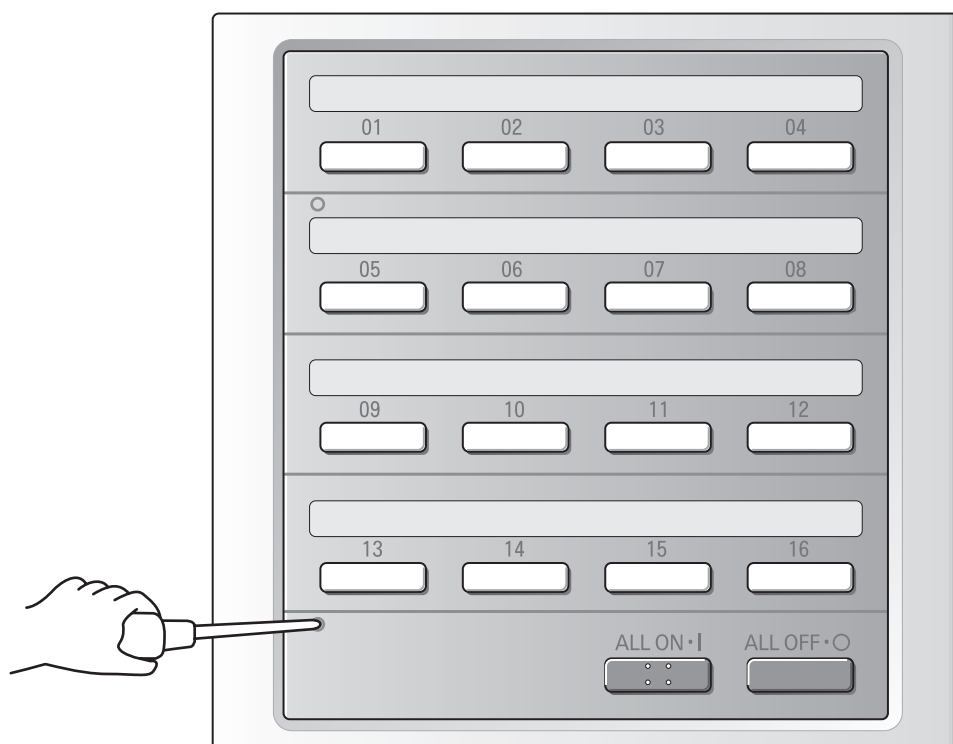

7. ON/OFF Controller (CZ-ANC2)





2. Installation Instructions

■ General

This booklet briefly outlines where and how to install the ON/OFF controller. Please read over the entire set of instructions for the indoor and outdoor units and make sure all accessory parts listed are with the controller before beginning.

NOTE

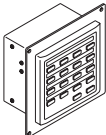Give these instructions to the customer after finishing the installation.

Part Name	Figure	Q'ty	Remarks
ON/OFF controller		1	
Tapping screw	Truss-head Phillips 4 x 16 mm 	4	For securing the system controller
Rawl plug		4	For securing the system controller
Manual		1	For installation
		1	For operation

■ Installation site selection

- Install the ON/OFF controller at a height of between 1 and 1.5 meters above the floor.
- Do not install the ON/OFF controller in a place where it will be exposed to direct sunlight or near a window or other place where it will be exposed to the outside air.
- Be sure to install the ON/OFF controller vertically, such as on a wall.

■ How to install the ON/OFF controller



CAUTION

- Do not twist the control wiring together with the power wiring or run it through the same metal conduit, because this may cause a malfunction.
- Install the ON/OFF controller away from sources of electrical noise.
- Install a noise filter or take other appropriate action if electrical noise affects the power supply circuit of the unit.



WARNING

Do not supply power to the unit or try to operate it until the tubing and wiring to the outdoor unit is completed.

7. ON/OFF Controller (CZ-ANC2)

Installation procedure


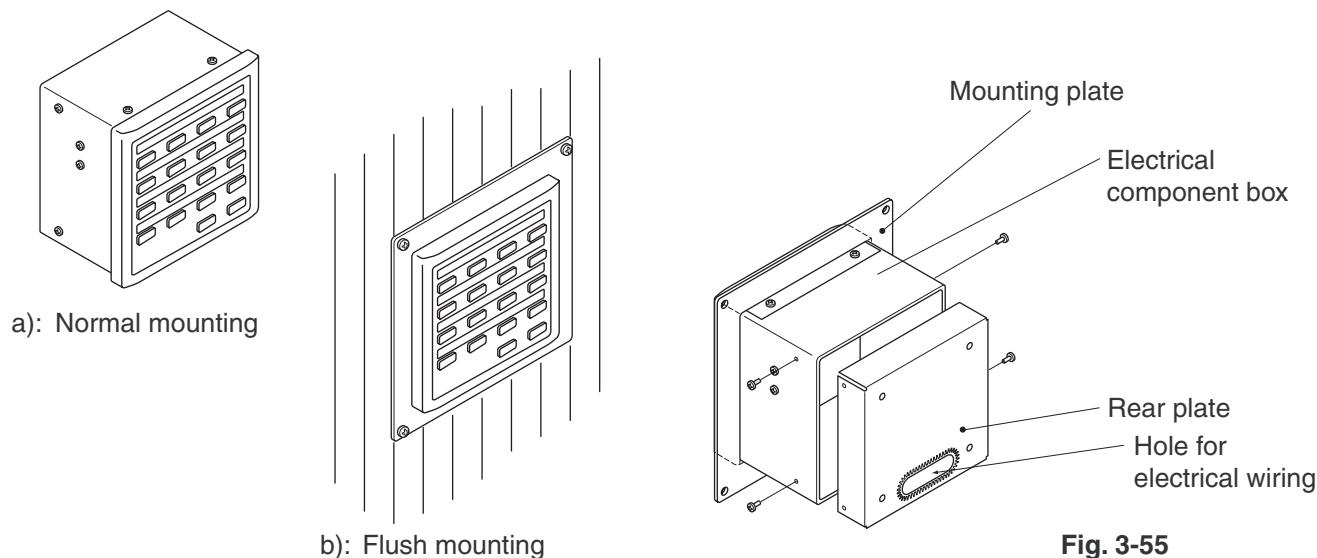


Fig. 3-55

1. Decide how the ON/OFF controller will be mounted: in the normal manner or flush with the wall.
 - a) To mount the ON/OFF controller in the normal manner, remove the mounting plate. Then reattach the four screws to the electrical component box.
 - b) To mount the ON/OFF controller flush with the wall, make an opening in the wall measuring 128 mm × 128 mm. The opening must be at least 85mm deep as measured from the outside surface of the wall.
2. Remove the rear plate and connect the electrical wiring.
 - 1) Remove the four screws located on both sides of the rear plate.
 - 2) Either the hole in the bottom of the electrical component box or the hole in the rear plate may be used to feed the electrical wiring.
3. Secure the ON/OFF controller in place.
 - a) If the ON/OFF controller is being mounted in the normal manner, first attach the rear plate to the wall using the screws and Rawl plugs provided. Next, place the body of the ON/OFF controller over the rear plate and secure it in place using four screws.
 - b) If the ON/OFF controller is being mounted flush with the wall, fit it through the mounting plate on the wall and secure it in place using the screws and Rawl plugs provided.


NOTE

To mount the ON/OFF controller on a wall made of cinder block, brick, concrete, or a similar material, drill 4.8 mm diameter holes in the wall and insert Rawl plugs to anchor the mounting screws.

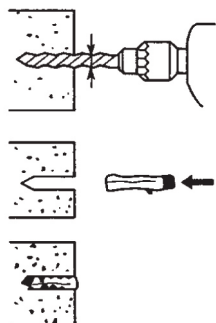

7. ON/OFF Controller (CZ-ANC2)

Layout of electrical terminals

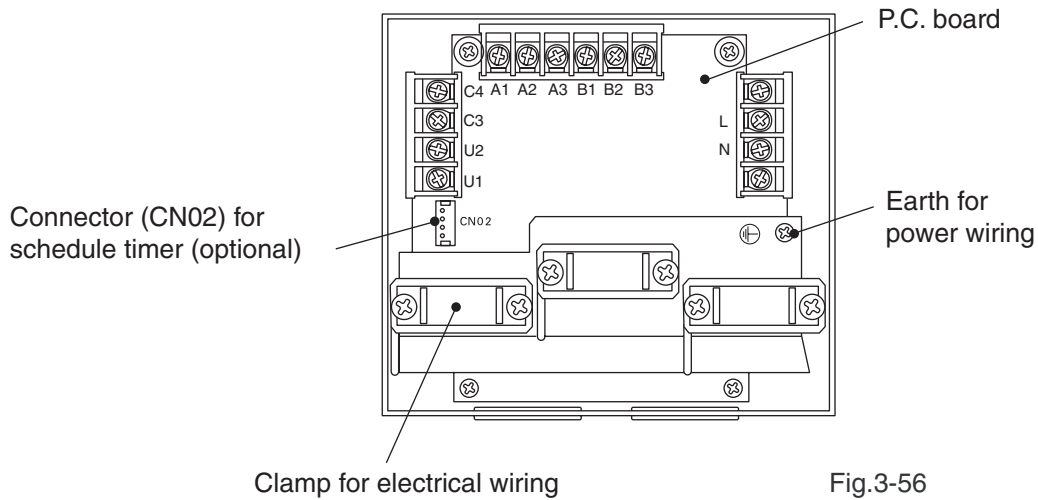


How to connect electrical wiring

1) Basic wiring

- N: Power supply (220-240 V ~ 50/60 Hz)
- L: Power supply (220-240 V ~ 50/60 Hz)
- U1: Inter-unit control wiring. (Low voltage)
- U2: (Use shielded wiring)
- C3: Reserve
- C4: Earth for inter-unit control wiring


2) Terminals for remote monitoring

- A1: Input for turning on air conditioners concurrently.
- A2: Input for turning off air conditioners concurrently.
- A3: Common input for turning air conditioners on or off.
- B1: On operation state indicator output.
- B2: Alarm indicator output.
- B3: Common indicator output.

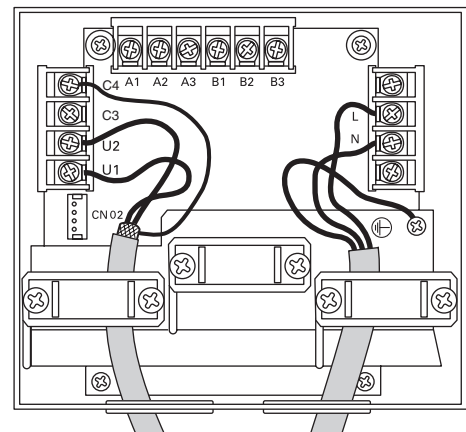

DC voltage pulse
Photocoupler input
Allowable contact voltage
and current : 24 V, 10 mA
Pulse width : 300 ms or more

No-voltage a-contact
static output
Allowable contact voltage
and current : 30 V, 0.5 A

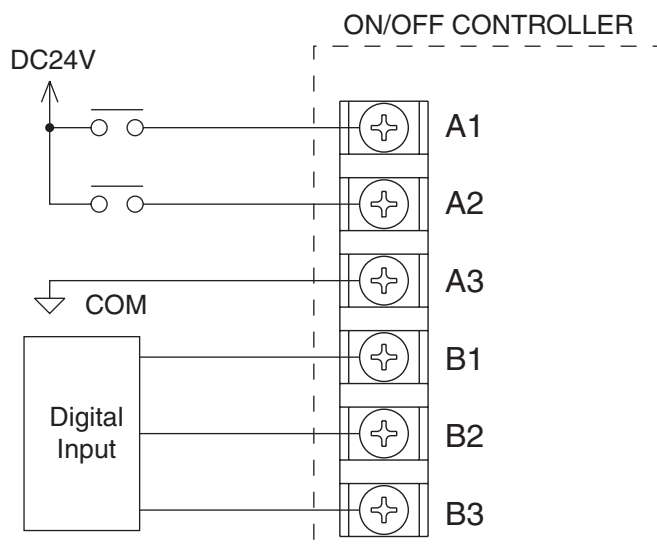

7. ON/OFF Controller (CZ-ANC2)

Basic wiring diagram



CAUTION

Ensure that wiring connections are correct.
(Incorrect wiring will damage the equipment.)

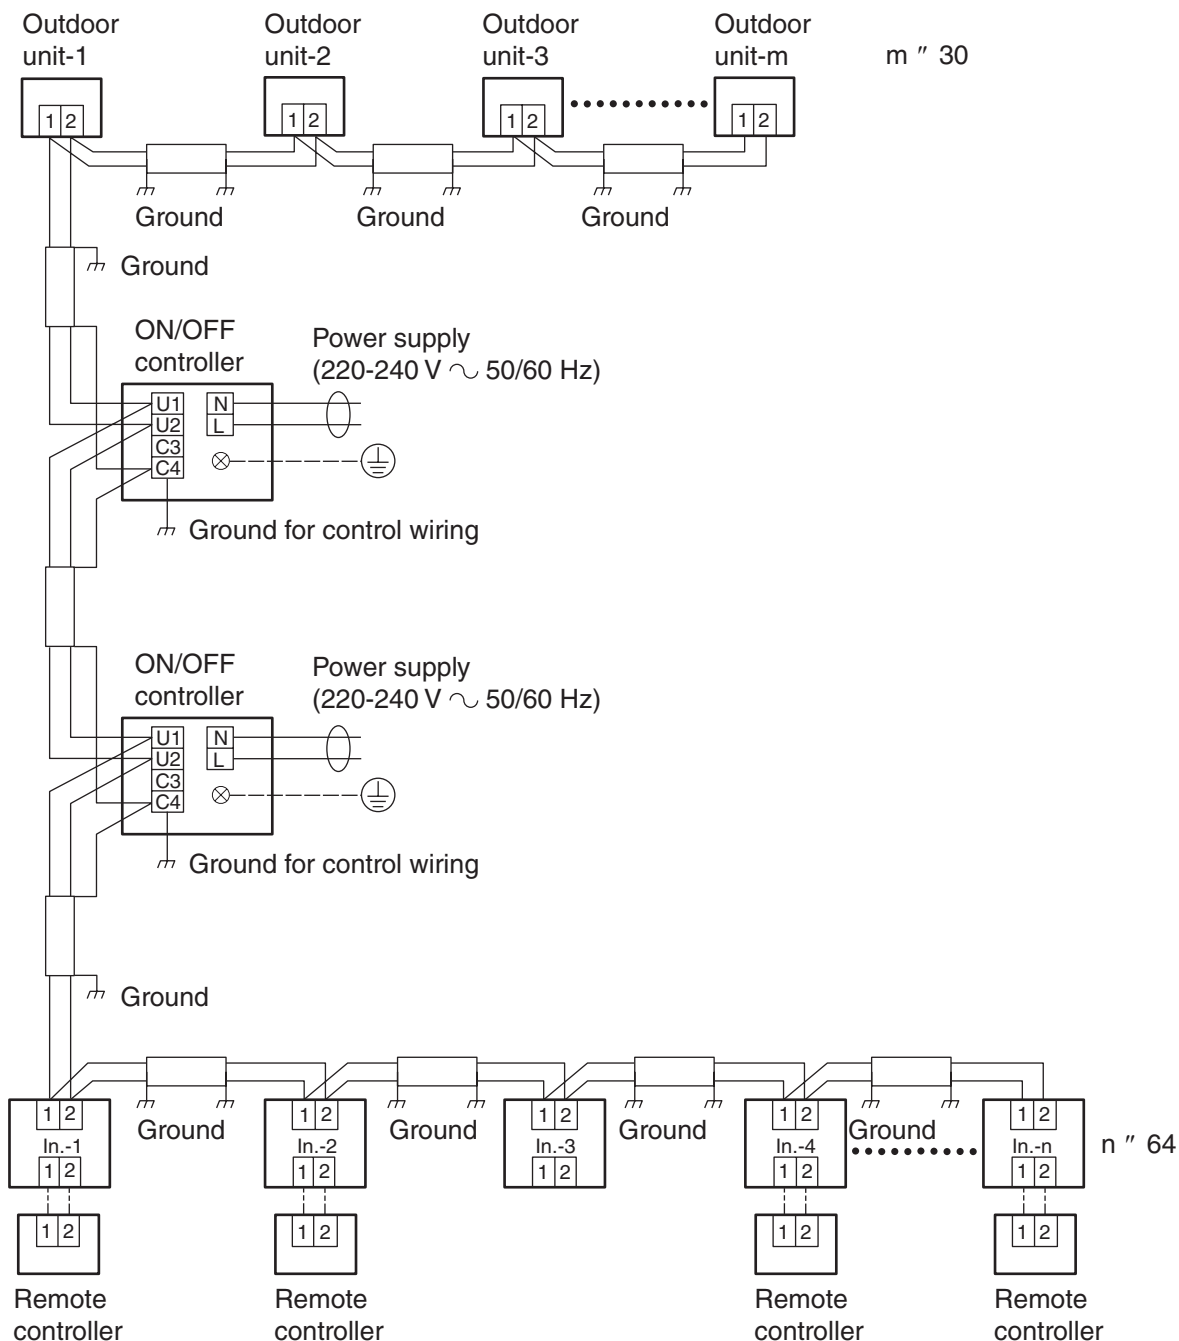


Fig. 3-57

NOTE

1. The following figure is the inter-unit control wiring.




Use the shielded wiring.


2. In. means indoor unit.
3. One ON/OFF controller can connect up to two units – one main unit and one sub unit – for each zone.

7. ON/OFF Controller (CZ-ANC2)

■ Dip switch setting

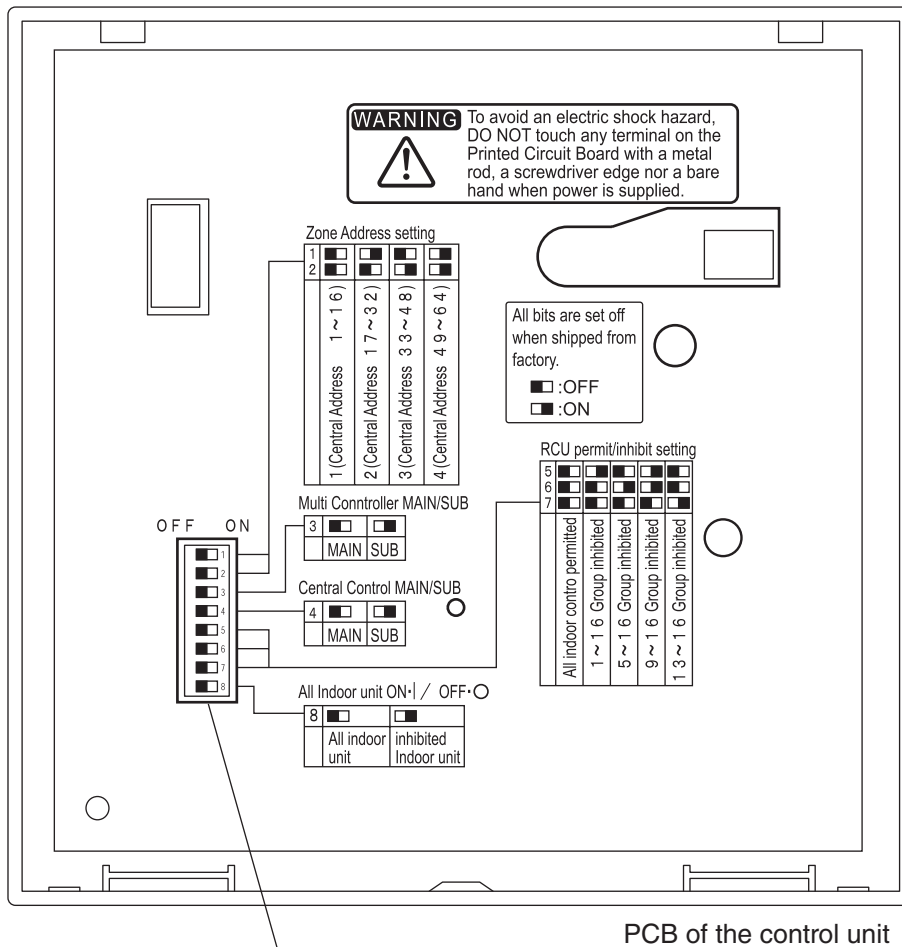

Dip switch

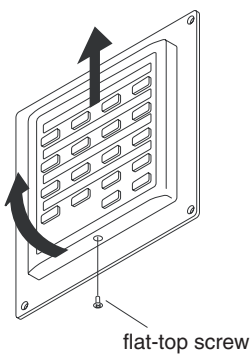

How to reach the P.C. board

Remove the flat-top screw on the bottom of the back case.

Raise the bottom of the control unit, and now remove the unit by sliding it upward.

The P.C. board on the back of the control unit is now visible.

NOTE

Do not force the bottom of the control unit open. Doing so may damage the notch at the top and make it impossible to install the control unit.

7. ON/OFF Controller (CZ-ANC2)

DIPSW1

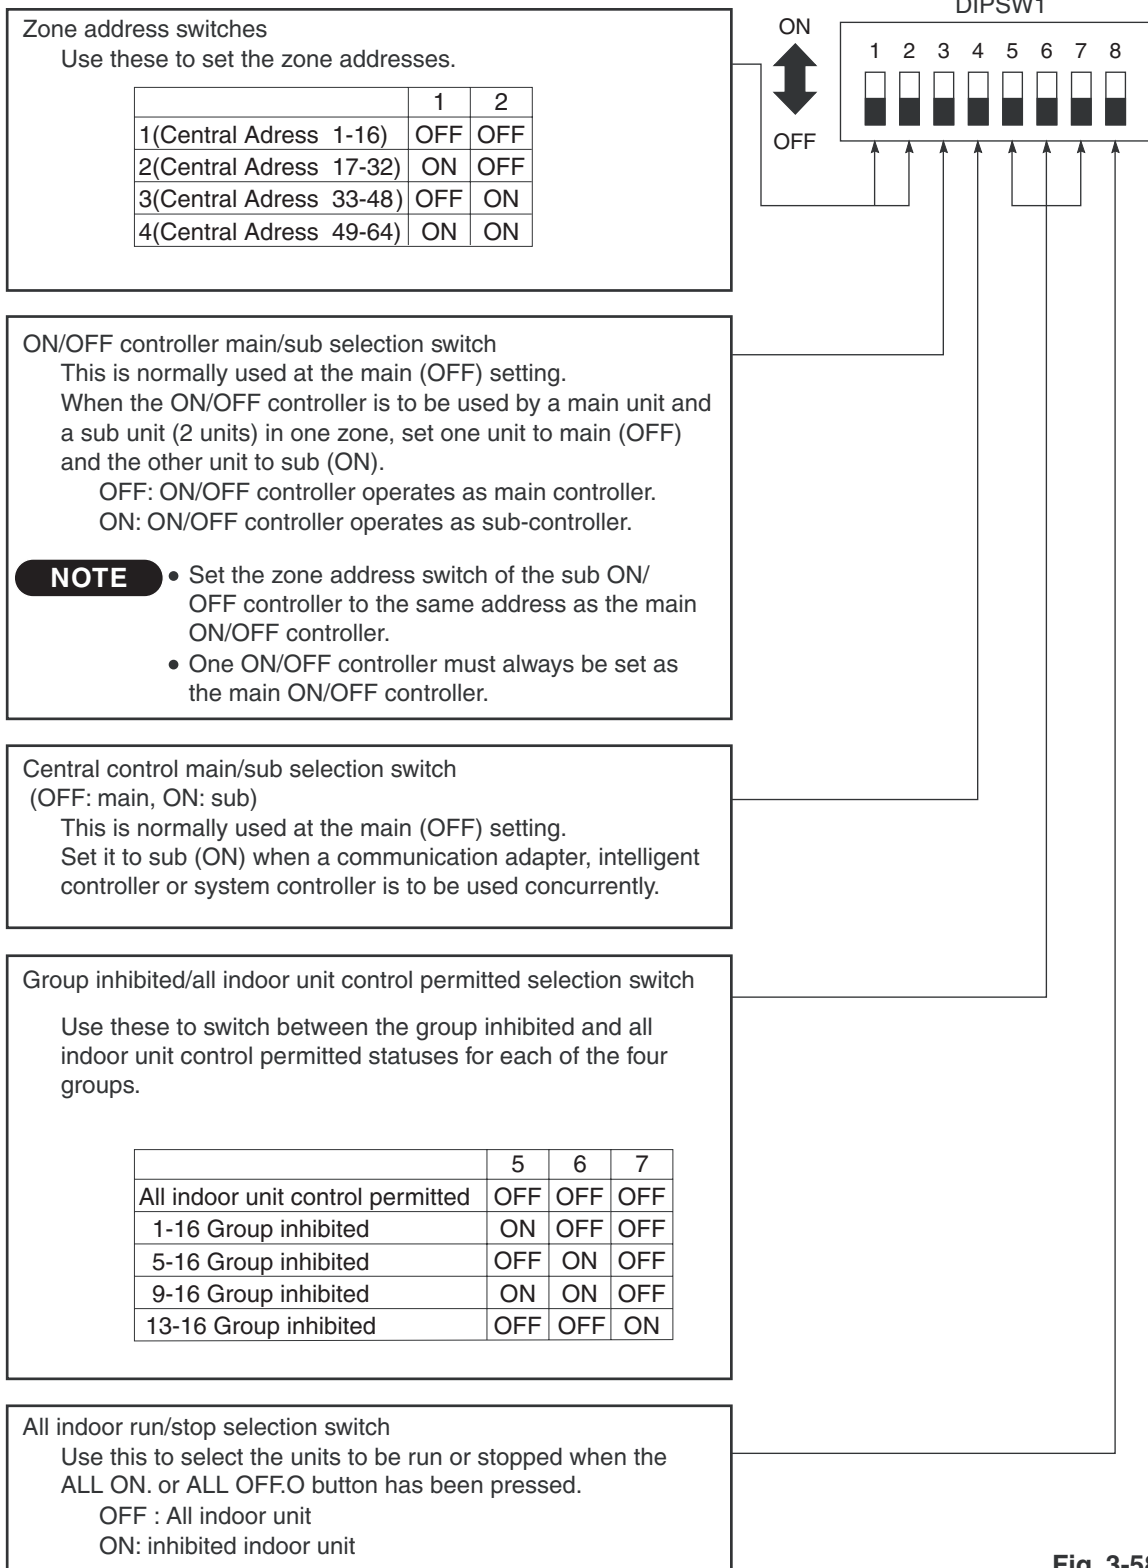


Fig. 3-58

* All switches are OFF position at shipment.

7. ON/OFF Controller (CZ-ANC2)

■ Zone address setting

The zone addresses must be set (using #1 and #2 of DIPSW1) when the ON/OFF controllers are to be controlled in a multiple number of zones.

- Set to zone 1 when the ON/OFF controller is to be used in one zone only.
- When the ON/OFF controllers are to be used in a multiple number of zones, one of them must be set to zone 1 without fail.

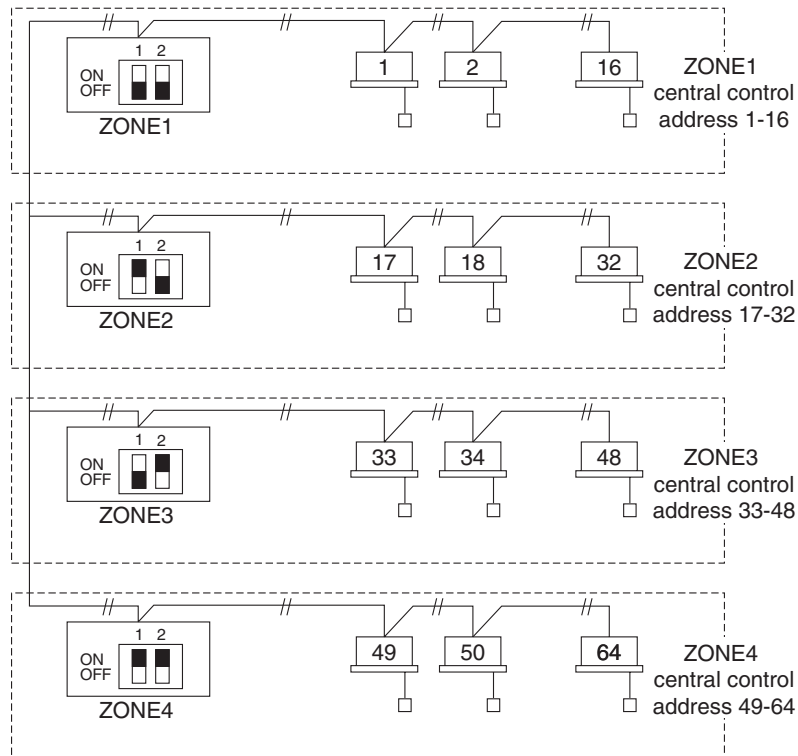


Fig. 3-59

7. ON/OFF Controller (CZ-ANC2)

■ How to perform zone registration

To operate the ON/OFF controller properly, zone registration is required after finishing the test run (and after setting all indoor unit addresses) using one of the following methods.

- (a) Zone registration using the remote controller
Refer to page 3-131
- (b) Zone registration using the system controller
Refer to page 3-132
- (c) Automatic zone registration using the system controller
Refer to page 3-133


For methods (a) and (b), you should make a zone registration table manually before performing the registration as shown on the page 3-125.

For method (c), zone registration is executed automatically, proceeding from small indoor unit address and small central addresses to larger numbers in numerical order. For example:

Central address	1	2	3	4	5	6	
ZONE-group	1-1	1-2	1-3	1-4	1-5	1-6	
Indoor unit address	1-1	1-2	2-1	2-2	2-3	3-1	

NOTE

1. An indoor unit address is assigned to each indoor unit during automatic address operation. Each indoor unit address combines an R.C. address and indoor unit number as follows:

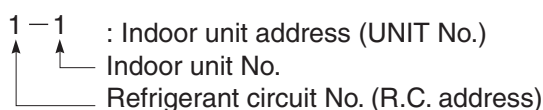



This address is displayed on remote controller for UNIT No. when the UNIT button is pressed.

2. The central address represents the zone and group number. These addressed are assigned in ascending numerical order.

7. ON/OFF Controller (CZ-ANC2)

ZONE registration table

ZONE	GROUP	Central address	Indoor unit address (UNIT No.)	Unit location	ZONE	GROUP	Central address	Indoor unit address (UNIT No.)	Unit location
1	1	1			3	1	33		
	2	2				2	34		
	3	3				3	35		
	4	4				4	36		
	5	5				5	37		
	6	6				6	38		
	7	7				7	39		
	8	8				8	40		
	9	9				9	41		
	10	10				10	42		
	11	11				11	43		
	12	12				12	44		
	13	13				13	45		
	14	14				14	46		
	15	15				15	47		
	16	16				16	48		
2	1	17			4	1	49		
	2	18				2	50		
	3	19				3	51		
	4	20				4	52		
	5	21				5	53		
	6	22				6	54		
	7	23				7	55		
	8	24				8	56		
	9	25				9	57		
	10	26				10	58		
	11	27				11	59		
	12	28				12	60		
	13	29				13	61		
	14	30				14	62		
	15	31				15	63		
	16	32				16	64		

**NOTE**

1. Assign indoor unit addresses to the desired positions (central addresses) manually.
2. For group control, only the main indoor unit should be assigned. Sub indoor units cannot be assigned.

7. ON/OFF Controller (CZ-ANC2)

(a) Zone registration using the remote controller

(Determination of central address)

- In this case, after confirming which indoor unit is connected to the remote controller and that the air conditioner is in the OFF state, you set the central addresses one at a time.
- If the system has no remote controller, connect a remote controller to the system temporarily. Then follow this procedure.

NOTE

The indoor unit address must already have been set before performing zone registration. If necessary, refer to the Installation Manual supplied with the outdoor unit.

- (1) Press the and buttons at the same time of the remote controller for more than 4 seconds.
- (2) Do not press **UNIT** button.
- (3) Once in this mode, the UNIT No., CODE No., No. of SET DATA and **SETTING** indications will flash on the display as shown Fig. 3-60.

NOTE

In case of group control "ALL" instead of "UNIT No." will flash on the display. Select the main indoor unit address by pressing the **UNIT** button once.

- (4) Set CODE No. to 03 using the and () buttons.

NOTE

CODE No. 03 must be selected to perform zone registration using the remote controller.

- (5) Set the Central address which you want to assign to the indoor unit address using the and () buttons according to the zone registration table.
- (6) Press the **SET** button. The CODE No. and Central address changes from flashing to ON state. If you make a mistake, then press the **CAN CEL** button and reset the central address.
- (7) Press the button to finish zone registration.


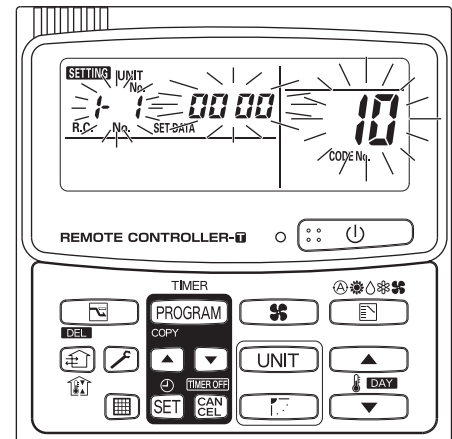


Fig. 3-60







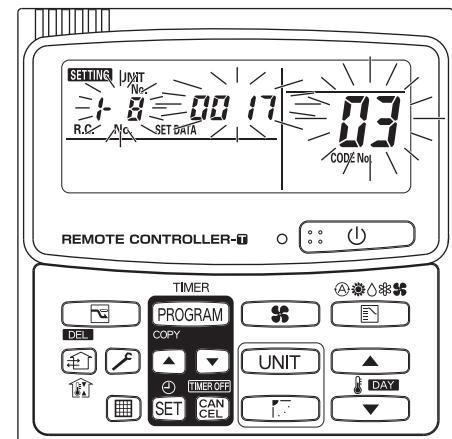











For example, in this case
 Indoor unit address: 1-8
 Central address : 17 (ZONE 2, GROUP 1)

Fig. 3-61

7. ON/OFF Controller (CZ-ANC2)

(b) Zone registration using the system controller

- In this case, you set all Central addresses by system controller at once manually.
- (1) Press the  and  buttons at the same time for more than 4 seconds.
 and CODE No. C1 will flash.
 - (2) After confirming that CODE No. C1 is displayed, press the  button. Once in this mode, a change takes place as Fig. 3-62.
 - (3) Select the zone and group No. which you want to set with  and   (GROUP) buttons. If already set, press the  buttons.
 - (4) Set the unit No. (Indoor unit address) with  and  buttons, according to the zone registration table.

R.C. No.	
Indoor unit No.	
 - (5) Press the  button.
GROUP No. turns ON and UNIT No. (Indoor unit address) changes from flashing to ON state. UNIT No. is registered to selected ZONE No. and GROUP No.
If you make mistake, then press the  button and reselect the ZONE, GROUP and UNIT No.
 - (6) Register the other UNIT No. in the same way by following the steps (3) to (5).
 - (7) Finally, complete the registration by pressing the  button.
 flashes for a few minutes, then OFF.


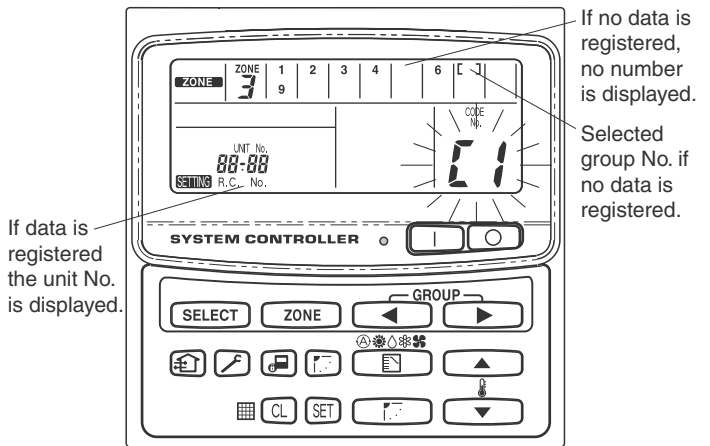


Fig. 3-62



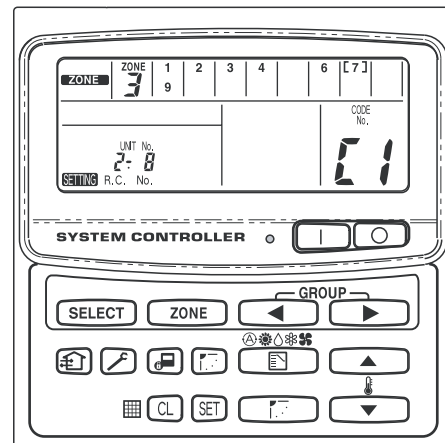

For example, in the case at left
 Zone 3, group No. 7
 Unit No. (indoor unit address) 2-8
 Unit No. 2-8 is registered to zone 3-group 7.




Fig. 3-63

7. ON/OFF Controller (CZ-ANC2)

(c) Automatic zone registration using the system controller

(1) Press the  and  buttons at the same time for more than 4 seconds.


 and CODE No. C1 will flash.


(2) Select CODE. No. C2 by pressing  and  () button and press the  button.


C2 changes from flashing to ON state and automatic zone registration will start.

(3) Registered GROUP No. will be disappeared all.

(4) Central address will be assigned from small indoor unit address to large one in numerical order automatically.

Finishing automatic zone registration,  changes from flashing to OFF.

(5) If the error is happened, the “CHECK” starts flashing and zone registration finishes at this time. Press the  button.

(6) Finally, complete automatic zone registration mode by pressing the  button.

 flashes for a few minutes, then OFF.

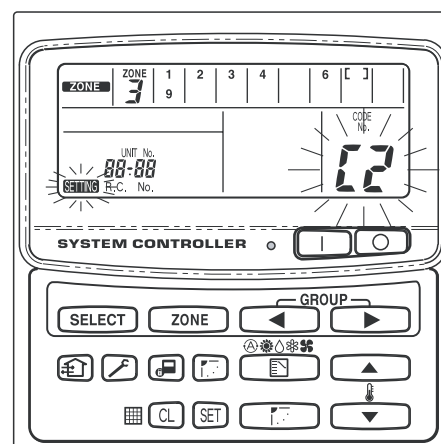











Fig. 3-64

7. ON/OFF Controller (CZ-ANC2)

■ How to check overlapping of central address no.

- (1) Press the  and **ZONE** buttons at the same time for more than 4 seconds.
SETTING and CODE No. C1 will flash.
- (2) Select CODE No. C3 by pressing ,  () button and press the **SET** button.
 C3 changes from flashing to ON state and **SETTING** will flash. Then auto overlap checking will start.
- (3) If C3 changes from ON to flashing and **SETTING** stops flashing and disappears, there is no overlapping.
 Then finally, complete the auto overlap checking mode by pressing the  button.
- (4) If some of GROUP No., ZONE No. and UNIT No. flash, you should try again the zone registration.
 - ① Select CODE No. C1 by pressing ,  () button and press the **SET** button.
 - ② Select the flashing GROUP No. with ZONE and GROUP button.
 Then press the **CL** button and reselect the ZONE, GROUP and UNIT No.
 - ③ Then finally, complete the auto overlap checking mode by pressing the  button.

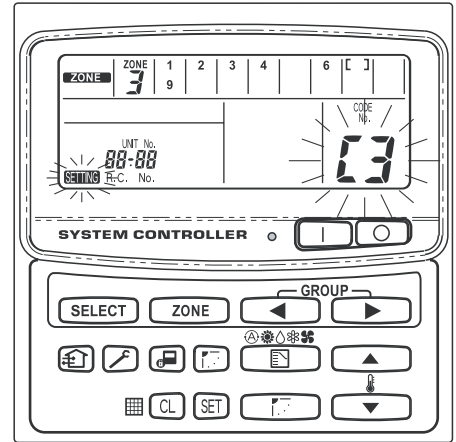



Fig. 3-65

7. ON/OFF Controller (CZ-ANC2)

■ System examples


The following diagrams show system examples and the correct setting of the switches on the PCB.

(1) For a system without link

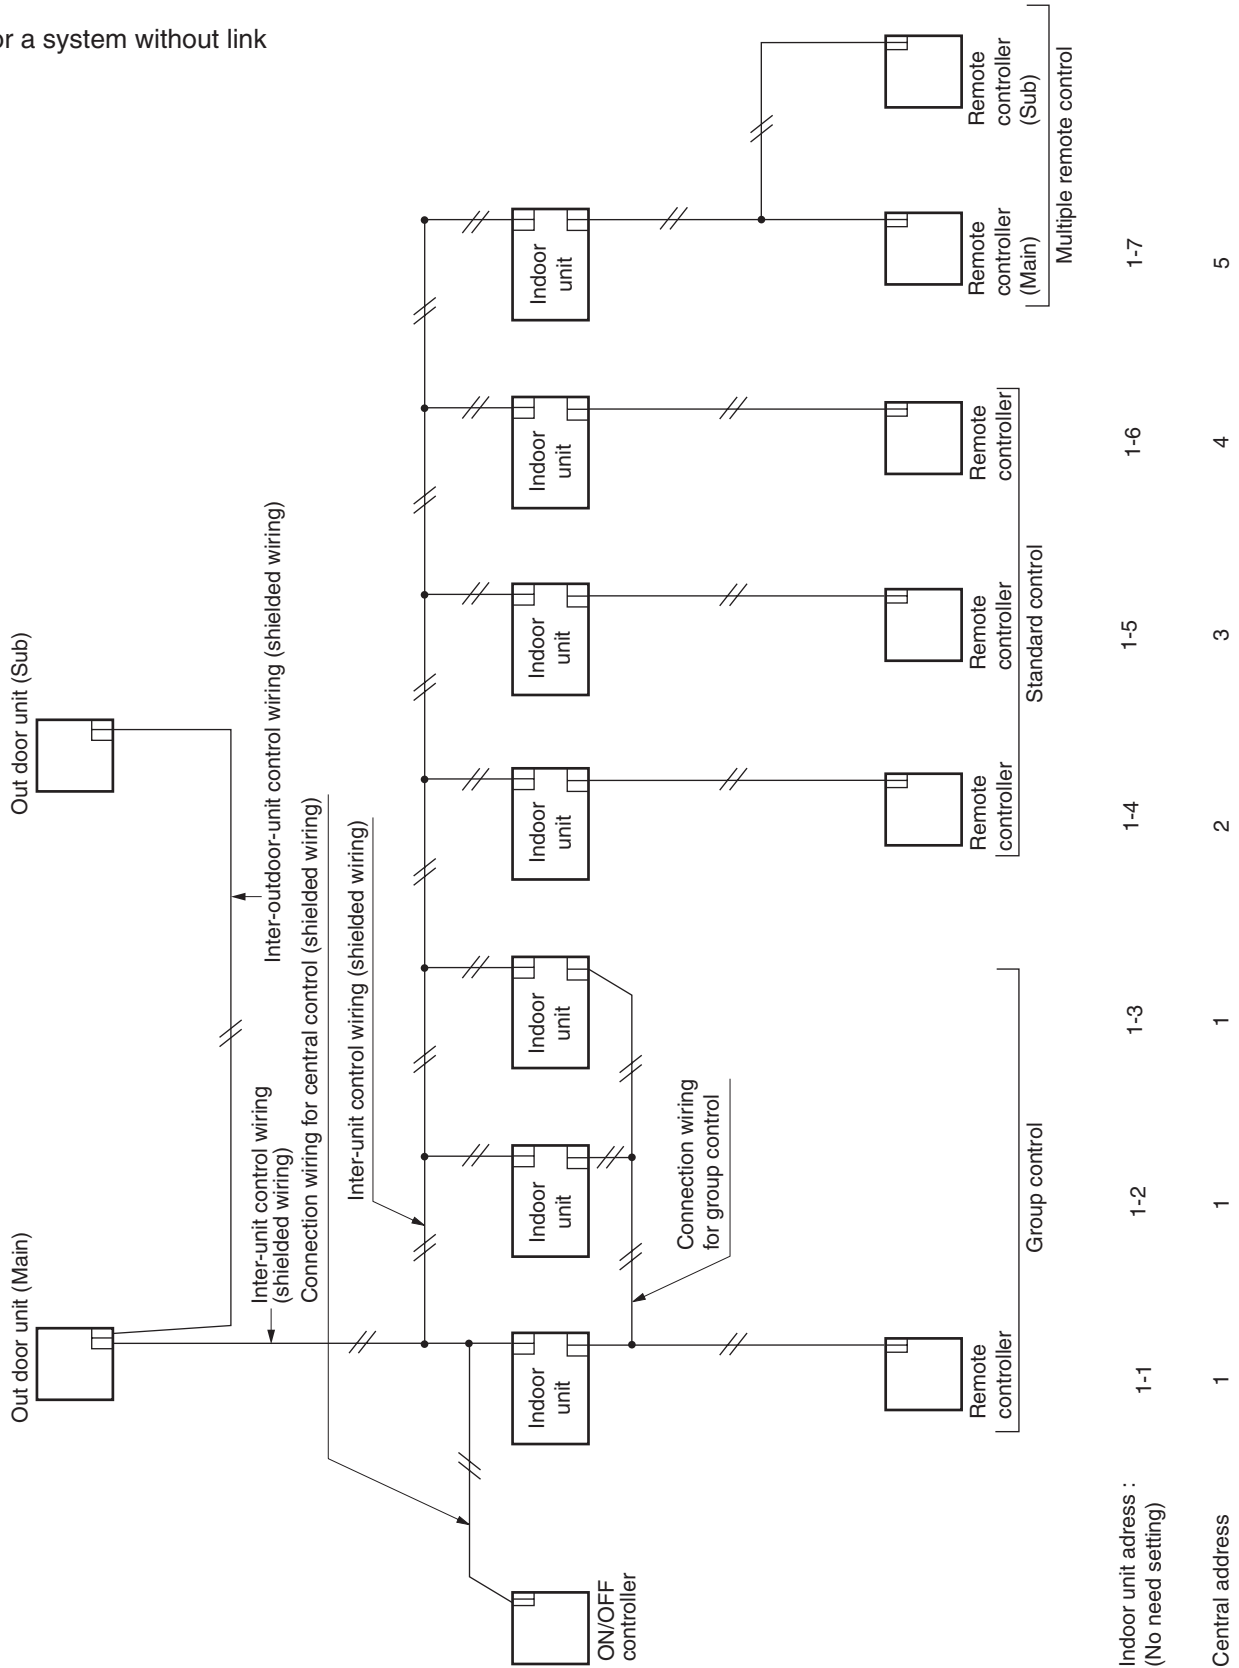

7. ON/OFF Controller (CZ-ANC2)

(2) For a system with link

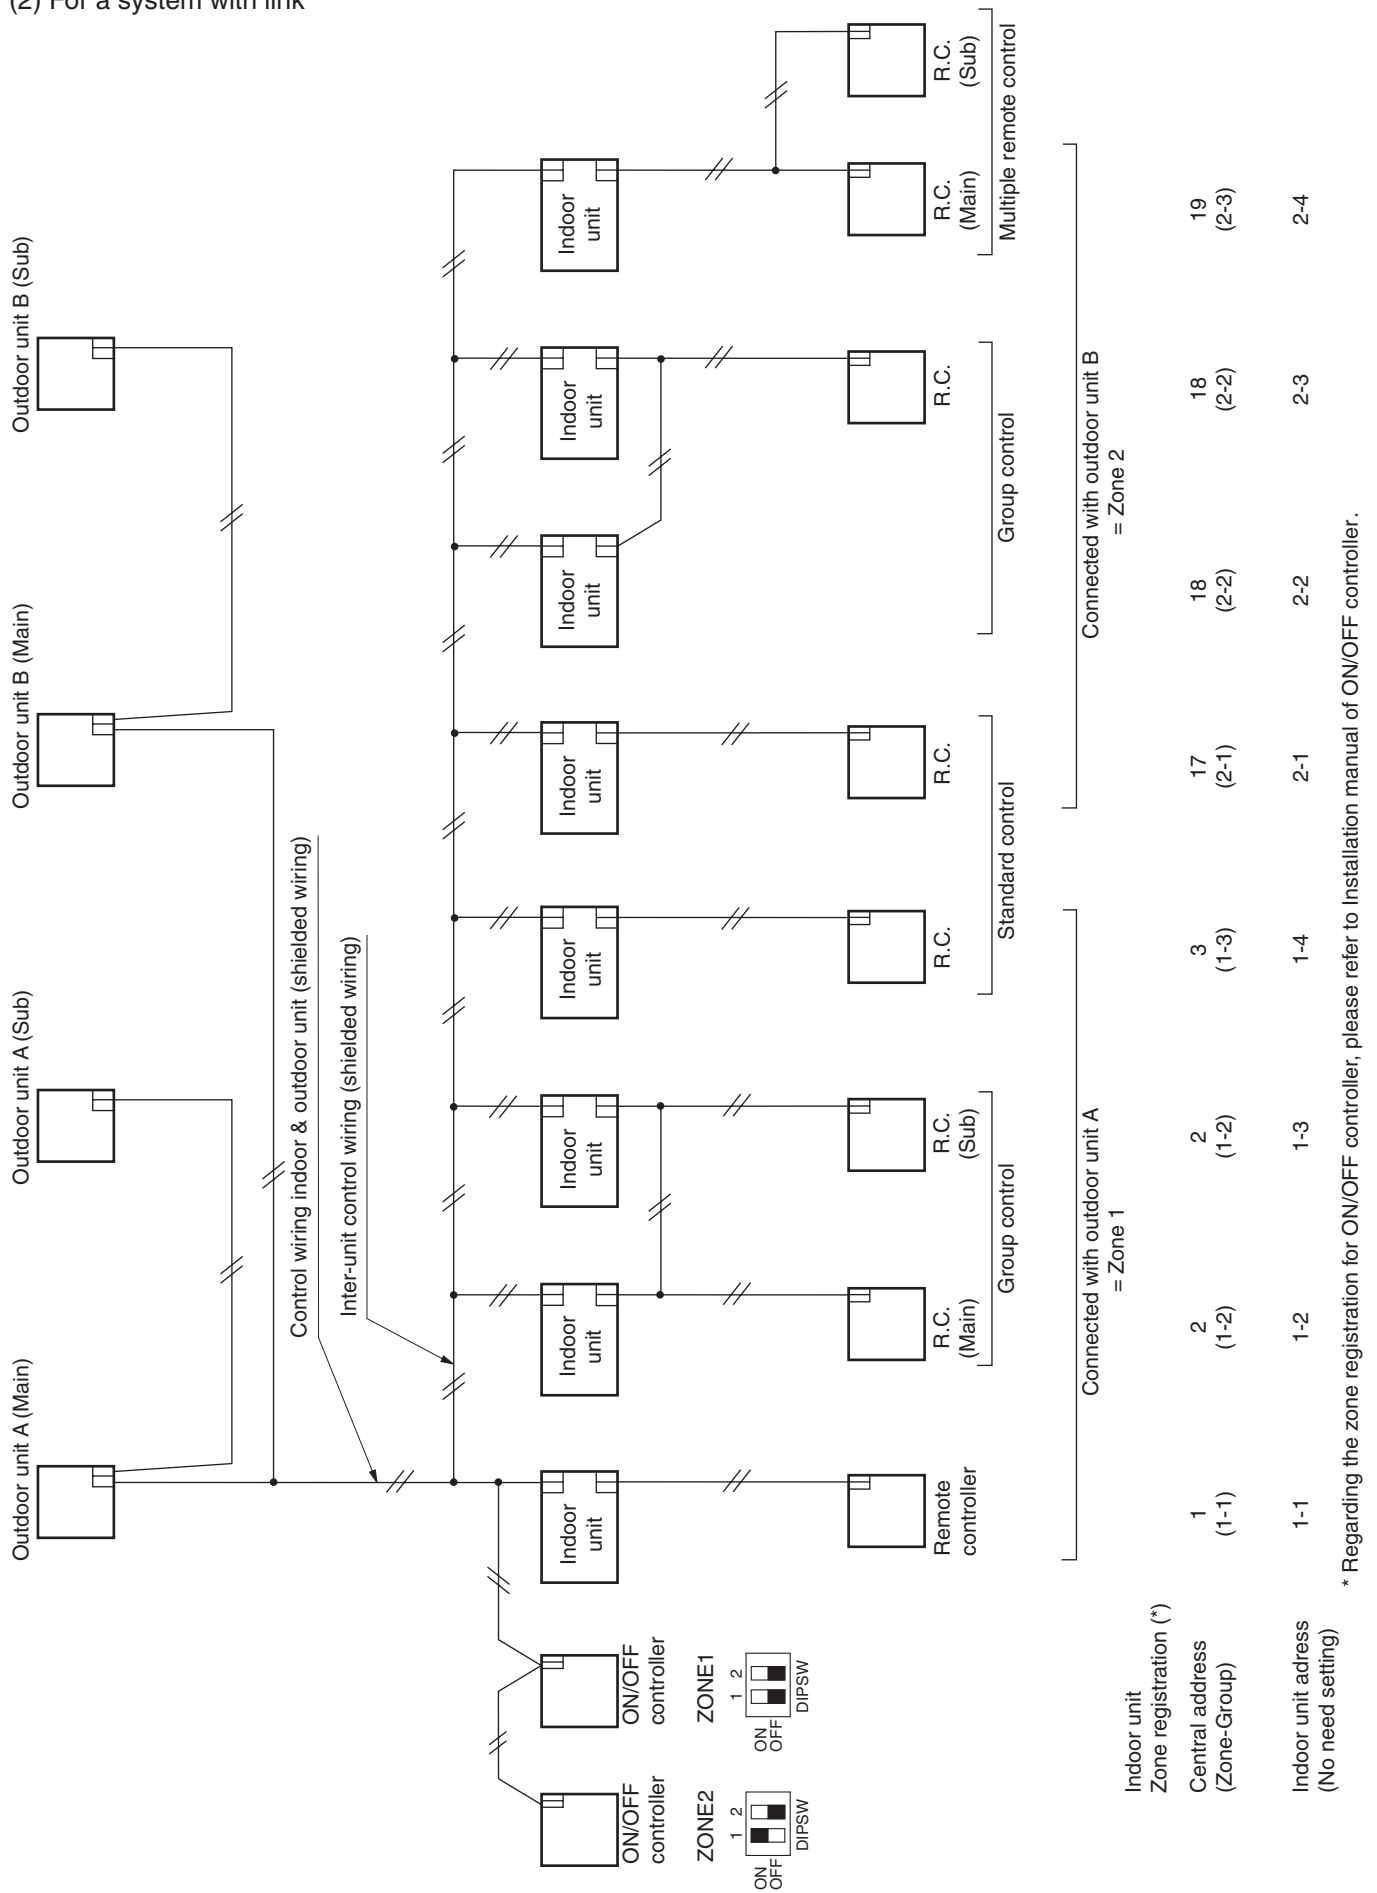

8. Intelligent Controller (CZ-256ESMC2)

1. Operation Manual

Panasonic[®]

Centralized Control System CZ-256ESMC2 Operation Manual

INTELLIGENT CONTROLLER

Centralized Control System

CZ-256ESMC2


INTELLIGENT CONTROLLER

Operation Manual

Thank you for choosing the CZ-256ESMC2 Intelligent Controller.

Before using the system, be sure to read this manual carefully. In particular, be sure to read the "Important Safety Instructions".

After reading this manual, store it in a convenient place.

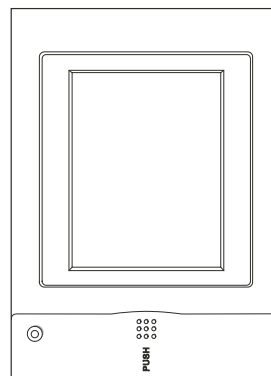

Contents

1 Important Safety Instructions	4
2 Features of the System	8
3 System Configuration	9
4 Names and Functions of Parts	10
5 Quick Reference	13
6 Using the System	15
7 Entering Text and Numbers	76
8 Connection of External Signals	79
9 TERMS	82
10 Calculating air conditioner distribution	83
11 Supplementary Information-1	87
12 Supplementary Information-2	88
13 Troubleshooting	91
14 Maintenance	93
15 Specifications	94
16 Installation (Electric) and Service Instructions	96

8. Intelligent Controller (CZ-256ESMC2)

Contents

1 Important Safety Instructions.....	4
2 Features of the System.....	8
3 System Configuration.....	9
4 Names and Functions of Parts.....	10
5 Quick Reference.....	13
6 Using the System.....	15
6.1 Powering the System On.....	15
6.2 Names and Functions of Screen Parts.....	15
6.2.1 Initial communications screen.....	15
6.2.2 Operating screen example.....	16
6.3 Initial Settings.....	18
6.3.1 System setting flow.....	19
6.3.2 Setting the date, cut-off date, and distribution ratio calculation method.....	22
6.3.3 Setting central addresses, unit names and tenant numbers.....	24
6.3.4 Setting tenant names and distribution groups.....	26
6.3.5 Making pulse meter settings.....	28
6.3.6 Clear accumulation data.....	30
6.4 Status Monitoring and Operation Screens.....	31
6.4.1 Displaying general information by tenant.....	31
6.4.1.1 Operating units individually.....	32
6.4.1.2 Operating all units by tenant.....	33
6.4.1.3 Operating all connected units.....	34
6.4.2 Displaying detailed information by tenant.....	35
6.4.3 Displaying general information by zone.....	36
6.4.4 Displaying detailed information by zone.....	37
6.4.5 Displaying and operating all indoor units.....	38
6.5 Total Data and Manual Cut-Off Processing.....	39
6.5.1 Displaying total data by indoor unit.....	39
6.5.2 Displaying total data by tenant.....	40
6.5.3 Displaying total data by outdoor unit.....	41
6.5.4 Displaying pulse meter total data.....	42
6.5.5 Performing manual cut-off processing and saving data.....	43
6.5.5.1 Manual cut-off processing.....	43
6.5.5.2 Saving data.....	44
6.5.5.3 Outputting distribution data in progress.....	44
6.5.5.4 Restoring data.....	45
6.6 Air Conditioning Distribution Ratios and Energy Usage.....	46
6.6.1 Displaying distribution ratios and energy usage by indoor unit.....	46
6.6.2 Displaying distribution ratios and energy usage by tenant.....	47
6.6.3 Time zone totals and distribution.....	48
6.7 Maintenance and Test Runs.....	49
6.7.1 Checking inspection signs.....	49
6.7.2 Checking the alarm logs.....	50
6.7.3 Executing test runs.....	52



6.8 Auxiliary Settings.....	53
6.8.1 Registering zone names.....	53
6.8.2 Setting zone numbers and management targets.....	54
6.8.3 Programming timers.....	56
6.8.3.1 Programming daily timers.....	56
6.8.3.2 Programming weekly timers.....	59
6.8.4 Setting Tenant holiday/Timer special day.....	60
6.8.5 Prohibiting remote control use.....	61
6.8.6 Setting distribution time zones.....	62
6.8.7 Setting special distribution days.....	63
6.8.8 Indoor unit settings.....	64
6.8.9 Other settings.....	65
6.8.9.1 Checking the connection configuration.....	65
6.8.9.2 Registering passwords.....	66
6.8.9.3 Selecting no-communications mode.....	66
6.8.9.4 Buzzer sounds.....	66
6.8.9.5 Initialization.....	66
6.8.9.6 LCD auto off settings.....	67
6.8.9.7 Calibrating touch panels.....	67
6.8.9.8 Power off button.....	68
6.8.10 WEB settings.....	69
6.8.10.1 Detailed server settings.....	70
6.8.10.1.1 Receiving server settings.....	71
6.8.11 User settings.....	72
6.9 System Configuration Changes.....	74
6.9.1 When a system configuration change detected.....	74
6.9.2 When system configuration may change.....	75
7 Entering Text and Numbers.....	76
7.1 Entering Numbers.....	76
7.2 Entering Text.....	77
8 Connection of External Signals.....	79
8.1 Pulse Meter Input.....	80
8.2 All Stop Input.....	80
8.3 All Start Input.....	81
8.4 All-Unit Alarm Output.....	81
8.5 All-Unit Operation Output.....	81
9 TERMS.....	82
10 Calculating air conditioner distribution.....	83
10.1 Calculating simple distribution.....	83
10.2 Calculating air conditioner energy usage.....	85
10.3 Calculating loaded distribution.....	86
11 Supplementary Information-1.....	87
12 Supplementary Information-2.....	88
13 Troubleshooting.....	91
14 Maintenance.....	93
15 Specifications.....	94
16 Installation (Electric) and Service Instructions.....	96

refers to the explanation of main menu 5, sub menu 1.

8. Intelligent Controller (CZ-256ESMC2)

1 Important Safety Instructions

Before using the system, be sure to read these "Important Safety Instructions".

The precautions given in this manual consist of specific "▲ Warnings" and "▲ Cautions". They provide important safety related information and are important for your safety, the safety of others, and trouble-free operation of the system. Be sure to strictly observe all safety procedures.

- The labels and their meanings are as described below.


▲ Warning

This refers to a hazard or unsafe procedure or practice which can result in severe personal injury or death.

▲ Caution

This refers to a hazard or unsafe procedure or practice which can result in personal injury or product or property damage.

- Meaning of symbols

 Indicates "Warning" or "Caution".

 Indicates "Prohibited".

 Indicates an action that should always be performed.

- After reading this manual, save it in a convenient place.

Be sure to provide this manual to any person who may use the product.

Installation Precautions

▲ Warning	
<p>Do not install yourself</p> <p>Installation should always be performed by your dealer or a professional service provider. Electric shock or fire may result if an inexperienced person performs any installation or wiring procedures incorrectly.</p>	<p>Use only specified air conditioners</p> <p>Always use only air conditions specified by dealer.</p>
<p>Electrical work must be carried out by qualified personnel</p> <p>Contact your dealer for installation. Do not attempt to install the product yourself.</p>	



1 Important Safety Instructions

Location




▲ Caution	
<p>Do not install in damp locations or locations subject to vibrations</p> <p>Damage to the product can result.</p>	<p>Do not install under direct sunlight or in places near heat sources</p> <p>The product may be damaged.</p>
<p>Do not install near sources of noise</p> <p>Malfunctions can result.</p> <p>Elevators, Automatic doors, Industrial machinery, etc</p>	<p>Avoid static electricity during cabling work</p> <p>Before starting cabling work, touch ground to discharge static electricity from the body.</p>
<p>Avoid installation in the following locations</p> <ul style="list-style-type: none"> ● Locations subject to inflammable gas leakage ● Near beaches or other places with a large amount of salt ● Hot springs or other locations subject to sulfuric gas ● Locations near water and oil (including industrial lubricants), and water and oil sprays ● Locations with large changes in voltage ● Near machines generating electromagnetic waves ● Locations close to organic solvents 	<p>Keep televisions, radios, PCs, etc, at least 1m away from the central controller, indoor units, and remote controls</p> <p>Picture breakup and noise can occur.</p>
<p>Do not use heaters near the Intelligent Controller</p> <p>Plastic parts of the Intelligent Controller may be deformed or discolored.</p>	

8. Intelligent Controller (CZ-256ESMC2)






1 Important Safety Instructions






 <p>Caution</p>
<p>Use the special supplied touch pen</p> <p>Touching the touch panel with any pen other than the supplied touch pen can damage the system.</p>
 <p>Prohibited</p>

Moving and Repair Precautions

 <p>Warning</p>	<p>Do not disassemble or repair the system yourself. Contact your dealer for repair. Electric shock or fire may result if an inexperienced person attempts to repair the system.</p>	<p>Do not touch the LCD if it is leaking</p> <p>If the touch panel is damaged, the liquid crystal from inside the display may leak out. Do not ingest the liquid or allow it to contact your skin. If accidental contact with skin occurs, rinse the area of contact thoroughly under running water for at least 15 minutes. If accidental swallowing occurs, rinse the inside of your mouth thoroughly with water. Drink plenty of water and induce vomiting, and then seek immediate medical attention.</p>
 <p>Prohibited</p>	<p>Contact your dealer before moving the system</p> <p>Contact your dealer or a professional service provider about moving and reinstalling the system. Electric shock or fire may result if an inexperienced person performs any installation procedures incorrectly.</p>	 <p>Prohibited</p>

1 Important Safety Instructions


<p>Precautions for Use</p>	
 <p>Warning</p>	<p>Protect the Intelligent Controller from water</p> <p>Damage to the system can result.</p>
 <p>Prohibited</p>	 <p>Prohibited</p>
<p>Do not touch switches with wet hands</p> <p>Electric shock and damage to the system can result.</p>	<p>Stop the system and turn the power off if you sense unusual smells or other irregularities</p> <p>Continuing operation when the system is out of order can result in electric shock, fire, and damage to the system. Contact your dealer</p>
 <p>Prohibited</p>	 <p>Turn off the power.</p>

 <p>Caution</p>	<p>Use only fuses with the correct capacity</p> <p>Use of pins or copper wire can result in fire and damage to the system.</p>
 <p>Prohibited</p>	 <p>Prohibited</p>
<p>Do not drop the system or subject it to strong shocks</p> <p>Damage to the system can result.</p>	<p>Use only the specified power source</p> <p>Use of any other power source can result in fire and damage to the system. Use single-phase 100-240V power.</p>
 <p>Prohibited</p>	

8. Intelligent Controller (CZ-256ESMC2)

3 System Configuration

System Configuration Example

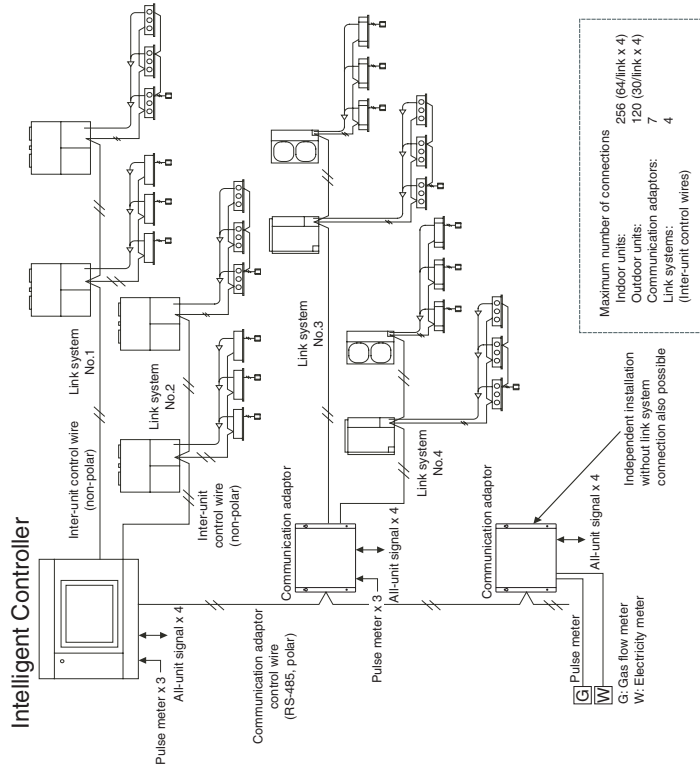

* When connecting link systems (inter-unit control wires), always connect beginning with LINK1 and LINK2 on the Intelligent Controller. Up to 4 link systems can be connected.

2 Features of the System

The Intelligent Controller is a centralized air conditioning management system dedicated to PAC and GHP for small and medium sized buildings.

- Number of connectable units ● By connecting communication adaptors to one Intelligent Controller, up to 256 indoor units can be connected.
 - Up to 120 outdoor units can be connected.
- Display..... ● Touch panel type 6.5-inch TFT color (640x480 pixel VGA) LCD display
- Operation functions ● Start and stop, temperature settings, operation mode selection, fan speed settings, fan direction settings, ventilation etc.
- Operating monitoring ● All unit monitoring of operation status (operating/stopped, operation mode, alarms)
 - Display of alarm logs
 - One-operation checking of all filter cleaning signs and engine oil inspection signs
 - External output of all errors, external output of all operations (relay connections)
- Program timers ● Up to 50 types of weekly timers can be programmed by combining 50 types of daily timers (50 times per day).
- Air conditioning energy distribution ● Recording and display of accumulated operating time and total number of operations for each indoor unit.
 - Calculation of gas and electricity distribution ratios and energy amounts used (m³, kWh) for each indoor unit and each tenant.
 - Distributions are available in two modes; the "simple distribution" calculated based on the operating time and "loaded distribution" calculated based on the actual air conditioning capacity, respectively. (In order to make operation in the "Loaded distribution" mode, the air conditioner side needs to be adaptable to the "Loaded distribution".
 - Distribution by time zones (regular hours, out of hours, special days).
 - Recording of up to past 24 months of cut-off data.

Terms and abbreviations used in this manual and in the system software


Full term	Abbreviation
Adaptor address	Adaptor
Link system address	Link system
Outdoor unit system address	Outdoor unit system, Outdoor unit, Outdoor system, Outdoor, O/D
Indoor unit address	Indoor unit, Indoor, I/D
Distribution group number	Distribution group No., Distribution group
Tenant number	Tenant No., Tenant
Zone number	Zone No., Zone
Unit name	Unit
Air conditioning distribution ratio	Distribution ratio, Distr. ratio
Central control address	Central address, CNTR
Thermostat	T/S

* For more information about terms, see "9 Terms".

8. Intelligent Controller (CZ-256ESMC2)

4 Names and Functions of Parts


● Front Panel

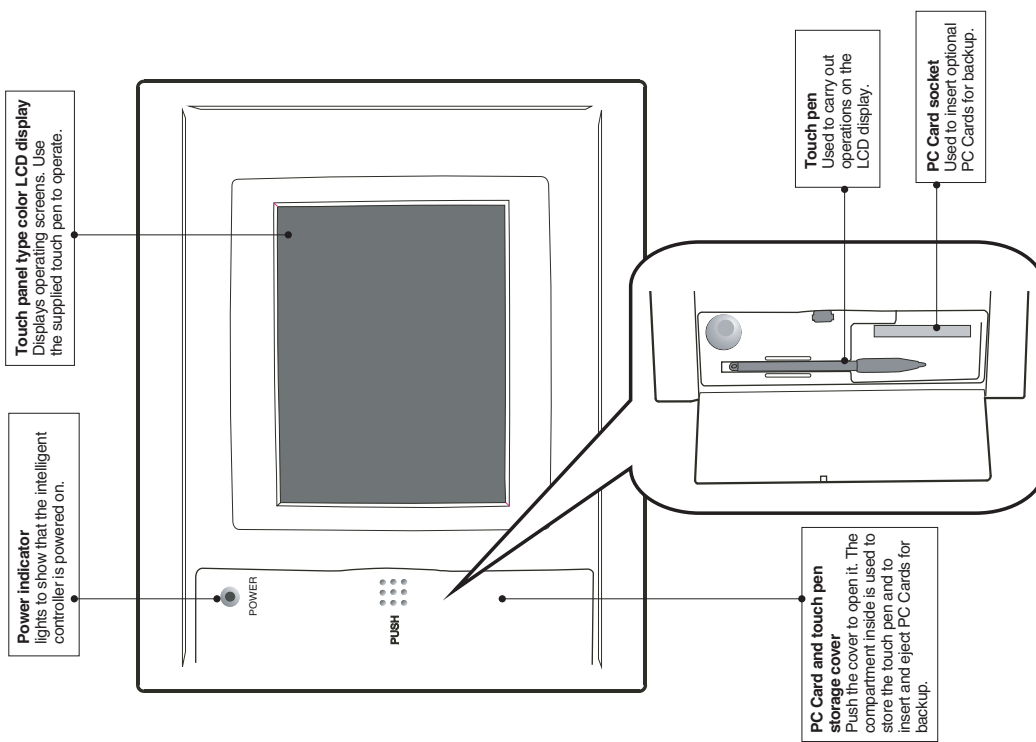

10

4 Names and Functions of Parts

● Rear Panel

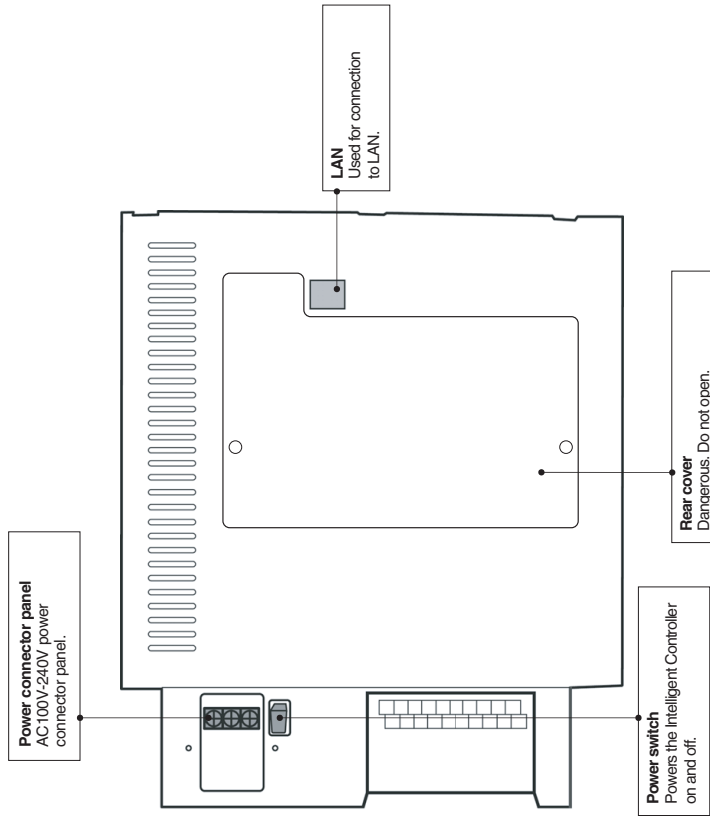


11

8. Intelligent Controller (CZ-256ESMC2)


5 Quick Reference

Menu List

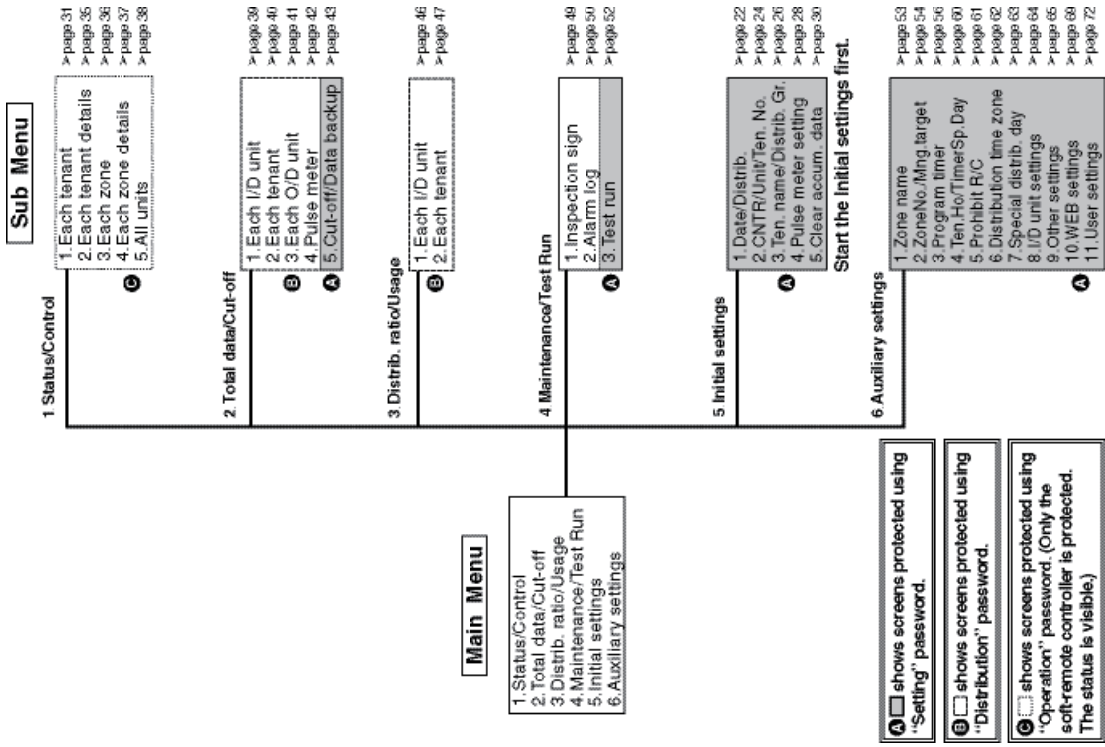

4 Names and Functions of Parts

● Right side panel

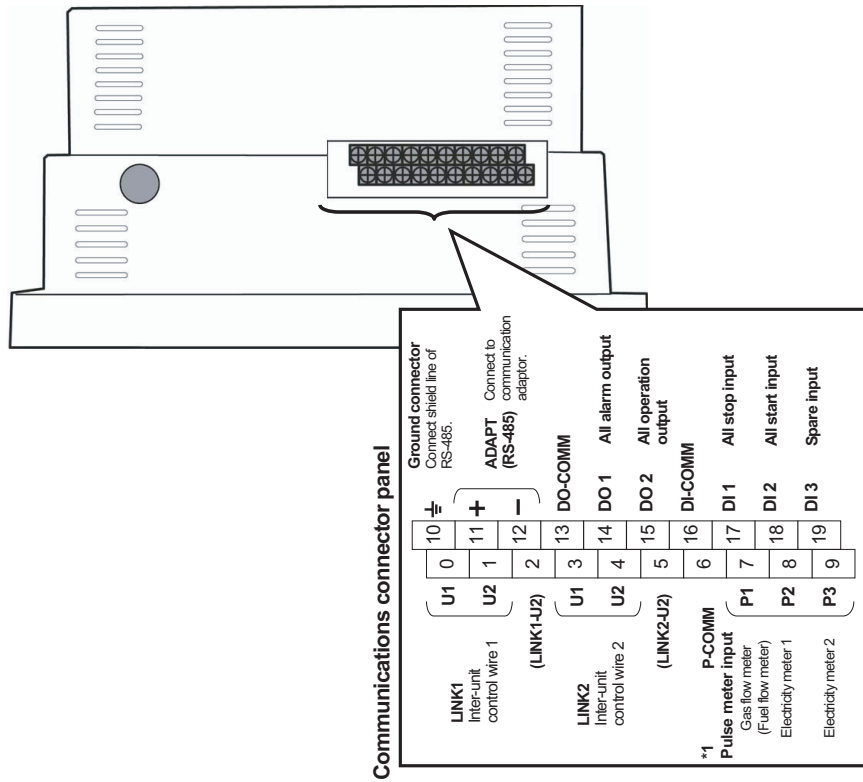

*1 Factory default setting (alterable)

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System


6.1 Powering the System On

Check the wiring, (air conditioners, communication adaptors, etc.) and then turn the power switch on (see page 12). The system starts automatically.
When the system is powered on for the first time, about 10 minutes are required for the normal system screen to appear. Wait until it appears.

6.2 Names and Functions of Screen Parts

6.2.1 Initial communications screen

The figure below shows the initial communications screen, which appears when the Intelligent Controller starts.

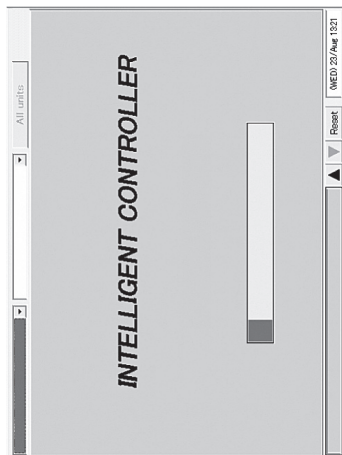

★ System power off procedure ★

Always use the following procedure to power the Intelligent Controller off.

In the "Other settings" menu (Main → Sub), select the last item, Power off.

The message "Exit this program?" appears. Press the OK button.

The message "It is now safe to turn off the Intelligent Controller." appears (*). Turn the power off.
(* Several minutes may be required before the message appears.)

5 Quick Reference

Menu List

Listed are only typical functions.

How to operate air conditioners

- Operating all units collectively desired ☞ Page 34
- Operating units individually desired ☞ Page 32
- Operating units by tenant desired ☞ Page 31
- Operating units by zone desired ☞ Page 36
- Varying operation modes desired ☞ Page 32
- Varying setting temperatures desired ☞ Page 32
- Resetting filter signs desired ☞ Page 32
- Varying fan direction and speed ☞ Page 32
- Prohibiting remote controlling desired ☞ Page 32

Monitoring status of air conditioner operation

- Monitoring status of inspection signs desired ☞ Page 49
- Monitoring operation status collectively desired ☞ Page 38
- Checking the alarm history desired ☞ Page 50
- Checking current and past total calculation times desired ☞ Page 39
- Checking current and past distribution ratios and energy consumption desired ☞ Page 46

Setting the system

- Changing the unit names desired ☞ Page 24
- Changing tenant names desired ☞ Page 26
- Changing zone names desired ☞ Page 53
- Adjusting dates and times desired ☞ Page 22
- Changing type of pulse meter (power meter or gas meter) ☞ Page 28
- Setting timer operation desired ☞ Page 56
- Setting security displayed on the screen desired ☞ Page 66
- Stopping or sounding the buzzer ☞ Page 66

Others


- Backing up PC cards desired ☞ Page 45
- Powering off Intelligent Controllers desired ☞ Page 68
- Outputting distribution in progress desired ☞ Page 44
- Calibrating touch panel deviations ☞ Page 67

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

6.2.2 Operating screen example


The figure below shows a typical operating screen.

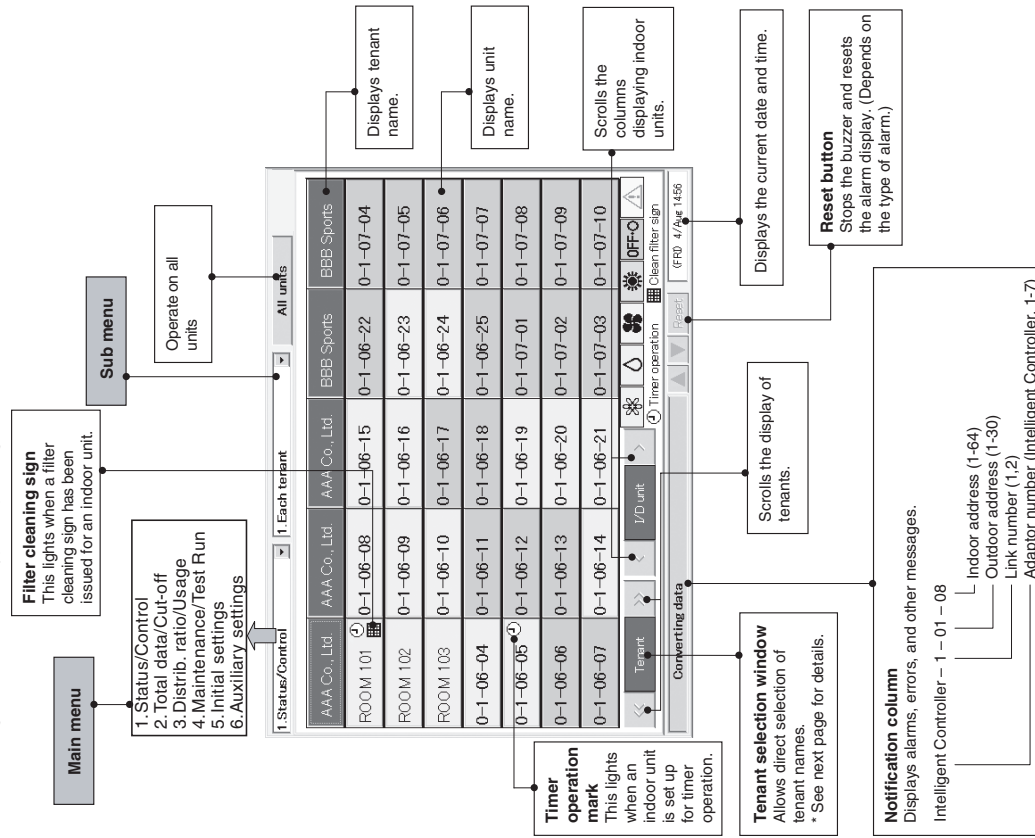

6 Using the System


* Selection windows

When you touch [Tenant] (or whatever is displayed in blue between the scroll buttons) shown on the previous page, the items available for selection appear in a list as follows, enabling direct selection.

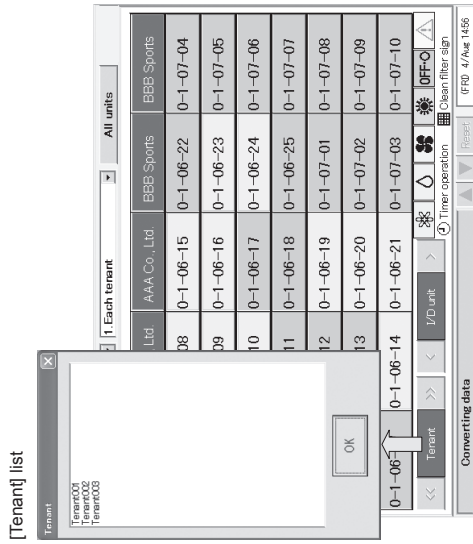


A similar list appears for the other buttons.


[I/D unit] list

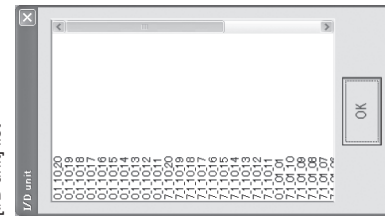

[Weekly timer] list

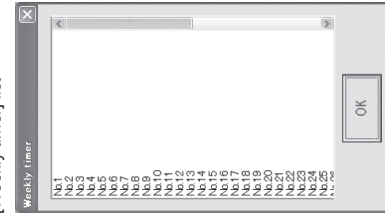

Tenant holiday [Date] list

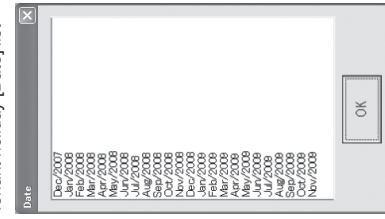

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

Main Sub

6.3.2 Setting the date, cut-off date, and distribution ratio calculation method

Use this screen to set the current date and time, and make settings related to time. These settings are needed for program timers and distribution ratio calculation, **so be sure to make them before starting operation of the system.**


Procedure

Select [5.Initial settings] in the main menu and [1.Date/Distrib.] in the sub menu, then proceed as follows.

- ① Set the current date and time.
Under '(1) Current time', select the current [year, month, day, hour, minute, and second] from the drop-down lists(▼).
The day of the week is shown automatically.
Press the [Set] button to set the settings.
- ② Set the monthly cut-off day.
Under '(2) Cut-off day', select a number from [1 to 28 or End] (to select the last day of the month) from the drop-down list(▼).

1. Status/Control
2. Total data/Cut-off
3. Distrib. ratio/Usage
4. Maintenance/Test Run
5. Initial settings
6. Auxiliary settings

1. Date/Distrib.
2. CNTR/Unit/Ten. No.
3. Ten. name/Distrib. Gr.
4. Pulse meter setting
5. Clear accum. data

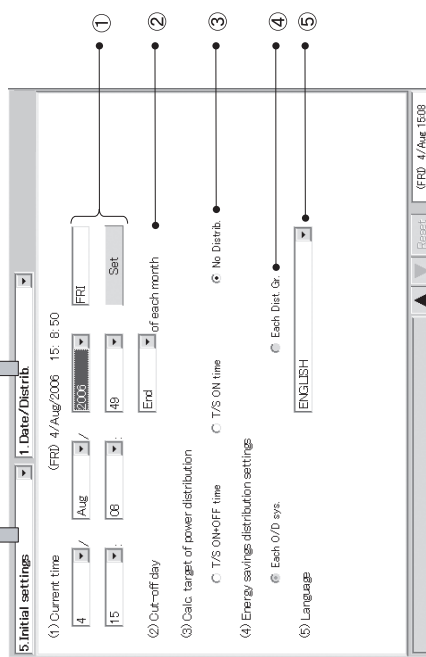

If the time set is ahead of the current time, the program timer set in that period becomes invalid and transmission is not performed.

6 Using the System

Main Sub

- ③ Select the calculation target of power distribution.

(3) Select [T/S ON+OFF time], [T/S ON time], or [No Distrib.].

- T/S ON + OFF time

To be selected when taking power both for the outdoor and indoor units to make distribution calculation.

- T/S ON time

To be selected when taking power only for the outdoor unit to make distribution calculation.

- No Distrib.

To be selected when distribution calculation for gas and electricity is unnecessary.

- ④ Select the energy savings distribution settings.

(4) Select [Each O/D sys.] or [Each Dist. Gr.].

This item cannot be selected when [No Distrib.] has been set for "(3) Calc. target of power distribution".

Select a range where the energy savings effect in 3 WAY units can be reflected on the distribution calculation.

- Each O/D sys.

The energy savings operation in 3 WAY units is reflected only on the air conditioning distribution for the tenant for the outdoor system.

- Each Dist. Gr.

The energy savings operation in 3 WAY units is reflected on air conditioning distributions for all the tenants in the overall distribution group including them.

(However, this is effective only when plural distribution groups have been set.)

- ⑤ In the Language pull-down menu (5), select the language you would like to use.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

Main 5 Sub 2

6.3.3 Setting central addresses, unit names and tenant numbers

Use this screen to set central addresses, names of units connected to the system and tenant numbers.

Procedure

Select [5.Initial settings] in the main menu and [2.CNTR/Unit/Ten. No.] in the sub menu, then proceed as follows.

1. Status/Control
2. Total data/Cut-off
3. Distrib. ratio/Usage
4. Maintenance/Test Run
5. Initial settings
6. Auxiliary settings

1. Date/Distrib.
2. CNTR/Unit/Ten. No.
3. Ten. name/Distrib. Gr.
4. Pulse meter setting
5. Clear accum. data

5. Initial settings → 2. CNTR/Unit/Ten. No. →

Set CNTR addr./unit name/ten. No. for each I/O unit.

O/C- I/O Address	Unit name	Tenant No.	Zone No.	Measurement	Product Type	Model Class
6-1	ROOM101	1	1	Target	PAC	S(7)
6-2	ROOM102	1	1	Target	PAC	X(8)
6-3	ROOM103	1	1	Target	PAC	S(6)
6-4	0-1-00-04	1	1	Target	PAC	S(6)
6-5	0-1-00-06	1	1	Target	PAC	L(12)
6-6	0-1-00-06	1	1	Target	PAC	K(16)
6-7	0-1-00-07	1	1	Target	PAC	D(6) (1.1.1.1.1.1)

① Link System ② Intelligent Ctrl-1 ③ I/O Unit

Buttons: EFB 4/A4, Reset, DEL, 7, 8, 9, 4, 5, 6, 1, 2, 3, 0, Cancel, Set, Auto

- ① When you touch a central address column, a screen will be displayed as shown on the right. Input a number 1 to 64 to set central address. When you touch [Auto], the central address will be automatically set.

Two identical central address settings cannot be used within a link system. If you input an existing address, the input data is cancelled. It may take several minutes before the central address settings are reflected in the display. When other central controllers (system controller, etc.) are connected, it is recommended to set the central addresses on those units.

6 Using the System


Main 5 Sub 2

- ② Touch an unit name column. A keyboard window like the one shown below appears. Use the keyboard to enter an unit name. Unit names can be up to 12 characters long.



- * See "7 Entering Text and Numbers" for details about entering text in keyboard windows.
- * You can copy and paste text using the [Copy] and [Paste] buttons. See "7.2 Entering Text" for details.

- ③ Touch a tenant number. A keyboard window like the one shown below appears. Use the keyboard to enter the tenant number.

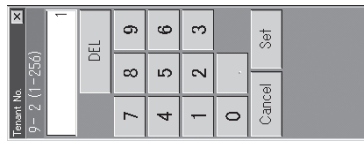

* The tenant number range is from 1 to 256.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

6.3.4 Setting tenant names and distribution groups

Use this screen to set tenant names and distribution groups. You can also use this screen to set the product type (PAC, GHP, HOT, etc.) of indoor units.

Procedure

Select [5.Initial settings] in the main menu and [3.Ten. name/Distrib. Gr.] in the sub menu, then proceed as follows.

No.	Tenant name	Distrib. Gr.	Tenant name	Distrib. Gr.
1	AAA	1(PAC)	Tenant008	-
2	BBB	2(HOT)	Tenant009	-
3	CCC	3(GHP)	Tenant010	-
4	Tenant004	-	Tenant011	-
5	Tenant005	-	Tenant012	-
6	Tenant006	-	Tenant013	-
7	Tenant007	-	Tenant014	-

① Touch a tenant name. A keyboard window appears. Use the keyboard to enter the tenant name.

② Touch a distribution group. A keyboard window appears. Use the keyboard to enter the distribution group.

③ Touch a product type. A keyboard window appears. Use the keyboard to enter the product type.

④ Touch a distribution group. A keyboard window appears. Use the keyboard to enter the distribution group.

⑤ Touch [Cancel] to confirm the setting, or [Cancel] to cancel it.

6 Using the System

② Touch a distribution group. A keyboard window like the one shown above appears. Use the keyboard to enter a distribution group number and to select the product type from among PAC, GHP and HOT. Select "Simple" or "Load" in the distribution methods.

* Refer to "10. Calculating air conditioner distribution" for details.

The tenant set at "Load" distribution will have its "No Distrib." box display in light blue.

* The distribution group number range is from 1 to 8.

* This button is invalid when "No Distrib." has been set. (Refer to Main5 Sub1)

* The distribution group column set at loaded distribution has no product type such as "PAC" and "GHP" displayed.

* Make manual cut-off in advance to change the distribution method.

③ Press the [Type] button to select "PAC" or "GHP" for the following unit that is unable to automatically recognize product type.

- Interface Adaptor

This is only for "Simple distribution" setting.

④ Specify which distribution method, "Simple" or "Load," to apply to the selected distribution group.

⑤ Touch [Set] to confirm the setting, or [Cancel] to cancel it.



- PAC, GHP, and HOT cannot be mixed in the same group. Set up a separate distribution group for each type.
- HOT multi units cannot be recognized automatically (they are recognized as PAC). Manually set the product type to HOT.
- HOT Tenants cannot be set at the "Load" distribution.
- "Load" distribution tenants cannot be set at "HOT".
- Air conditioners unadaptable to loaded distribution cannot be set at "Load" Distribution.
- Interface Adaptors are also unadaptable to loaded distribution.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

Main 5 Sub 4

6 Using the System


Main 5 Sub 4

6.3.5 Making pulse meter settings

If you have connected pulse meters, use this screen to set the target distribution groups and the amount of electricity or gas per pulse.

Procedure

Select [5. Initial settings] in the main menu, and [4. Pulse meter setting] in the sub menu.

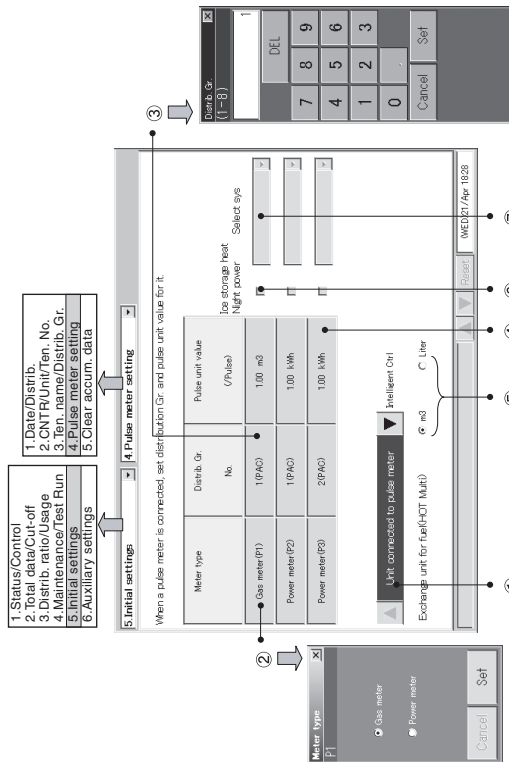

- ① Select the pulse meter connection destination.
- ② You can change the type of pulse meter (power meter or gas meter). The above indicates the factory default state. When you touch the Meter type area, the Meter type window appears so that you can select the type of pulse meter to use.
- ③ Touch a distribution group number. A numeric keypad appears for the distribution group. Use the keyboard to enter the distribution group number.
 - * The distribution group number range is from 1 to 8.
 - * The distribution group buttons are disabled when you have chosen not to perform distribution rate calculations (see [Main 5 Sub 4](#)).
- ④ Touch the pulse unit amount column and enter the amount of electricity (kWh) or gas (m³) per pulse.
- ⑤ If the product type is HOT Multi, select the unit for fuel metering.

- ⑥ Select this check box for ice heat accumulation night power meters. (Enabled during loaded distribution setting only.)
 - * This cannot be set for electricity meters configured for use with HOT Multi or simple distribution.
- ⑦ For the night power meter set in ⑥, select which outdoor system to meter ice heat accumulation by selecting the address.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System


Main Sub

6.3.6 Clear accumulation data


Use this screen to erase total data after test runs, and to restart total calculations for operating time, operating counts, and so on.

Procedure

Select [5.Initial settings] in the main menu and [5.Clear accum. data] in the sub menu, then proceed as follows.

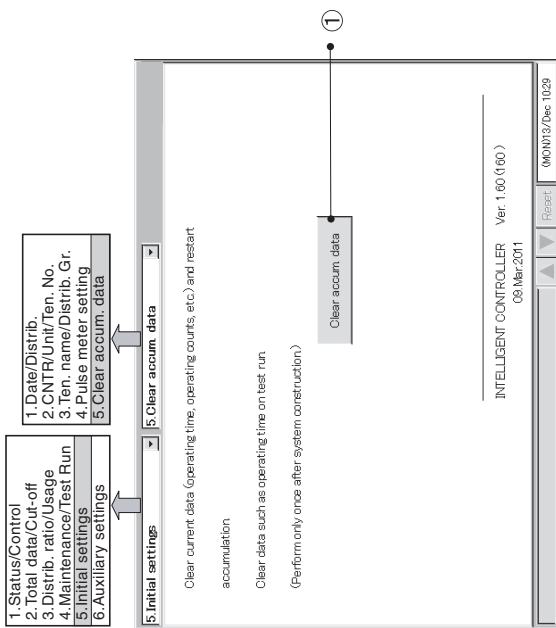

- ① Touch [Clear accum. data].
A window like the following appears.

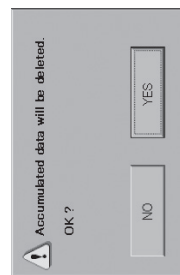

Touch [Yes]. Total data up to now is erased, and calculation of total operating time restarts.

6 Using the System

Main Sub

6.4 Status Monitoring and Operation Screens


6.4.1 Displaying general information by tenant

Use this screen to display information about all connected indoor units by tenant.

Procedure


Select [1.Status/Control] in the main menu and [1.Each tenant] in the sub menu.

The indoor units for each tenant are displayed.

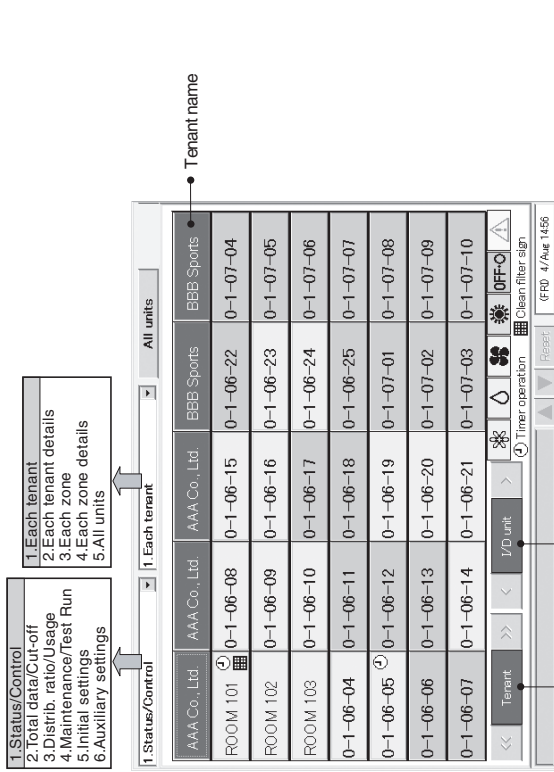

- ① Scrolls the display one tenant at a time.
- ② Scrolls the display one row at a time.

Meaning of symbols

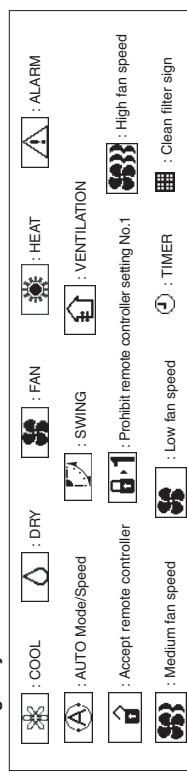

"..." is displayed in the tenant name row for indoor units not registered to a tenant. The first 12 characters are displayed for tenant names and unit names. If an Interface A adaptor is used, the color becomes light purple during the ON operation.

8. Intelligent Controller (CZ-256ESMC2)

Main / Sub

6 Using the System


6.4.1.2 Operating all units by tenant

Use this screen to operate all connected indoor units of each tenant.

Procedure

Select [1>Status/Control] in the main menu and [1.Each tenant] in the sub menu.

- ① When you touch a tenant name, a remote control window appears. This window allows you to perform on/off operations for all units of the tenant.
- ② When you touch a remote control window appears. This window allows you to make detailed settings for operations on all units of the tenant.

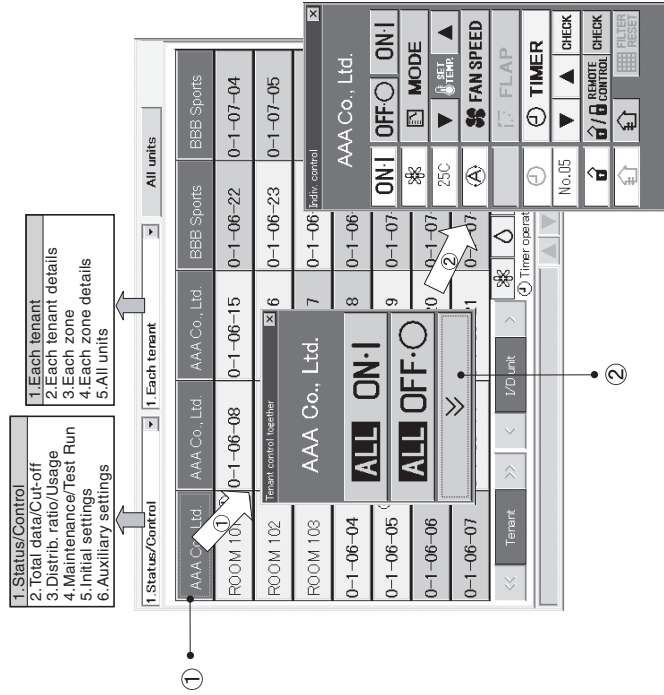

Main / Sub

6 Using the System


6.4.1.1 Operating units individually

Use this screen to operate individual indoor units.

Procedure

Select [1.Status/Control] in the main menu and [1.Each tenant] in the sub menu.

- ① When you touch the unit that you want to set, a remote control window for individual on/off operations appears.
- ② When you touch a remote control window appears. This window allows you to make detailed settings for operations on individual units.

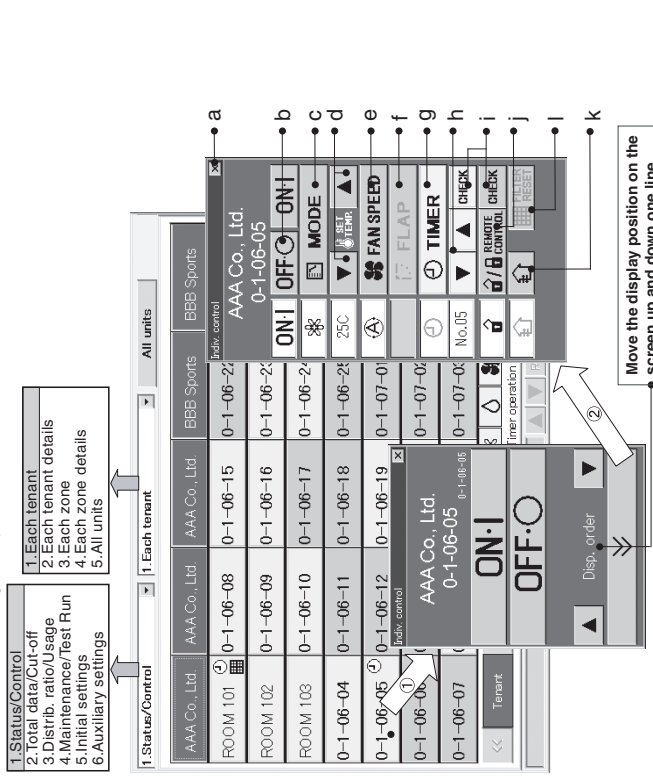

- a. Closes the remote control window.
- b. Sets to either Start or Stop.
- c. Sets the operating mode.
- d. Set the temperature.
- e. Sets the fan speed.
- f. Sets the fan direction. This setting is applied to the entire group. You cannot change the sub unit setting independently.
- g. Sets and cancels timer operation.
- h. Sets timer number from No. 1 to No. 50.
- i. Displays a window that allows you to check timer setting status and remote control prohibition status.
- j. Displays one of "Prnb1/ Prnb2/ Prnb3/ Prnb4/ Accept".
- k. Turns the ventilation function ON and OFF. (You cannot press the button when air conditioners have no ventilation functions).
- l. Resets filter cleaning signs.

• For multiple units, the operation mode for one unit may not be varied while another indoor unit is under operation. In such a case, once stop the unit, hold it for several minutes, and then vary the operation mode.

• In the remote control window, the first 16 characters for tenant names and the first 12 characters for unit names are displayed.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

Main / Sub 1


6.4.1.3 Operating all connected units

Use this screen to operate all connected indoor units.

Procedure

Select [1.Status/Control] in the main menu and [1.Each tenant] in the sub menu.

- ① When you touch [All units], a remote control window appears. This window allows you to perform on/off operations for all connected units.
- ② When you touch [All units], a remote control window appears. This window allows you to make detailed settings for all connected units.

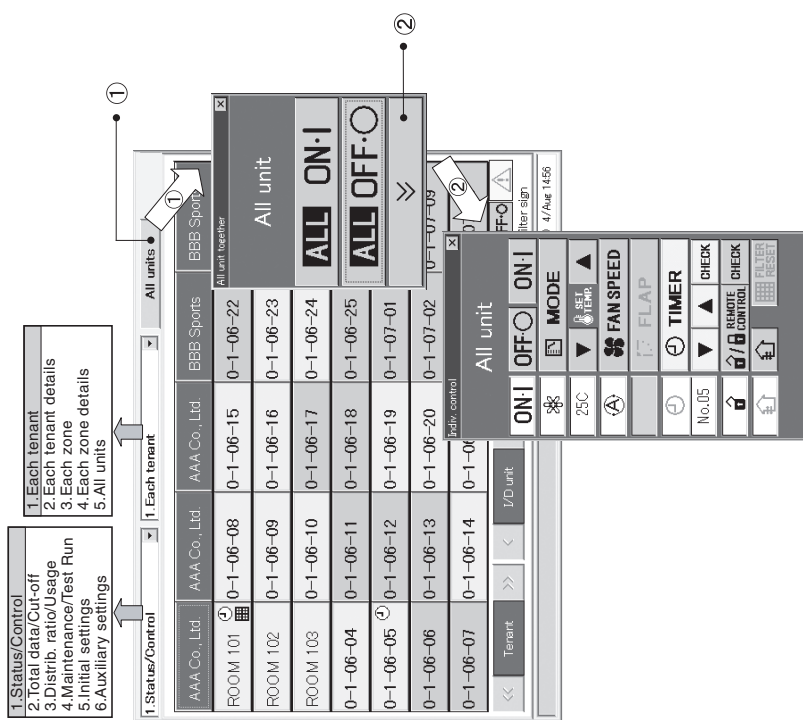

6 Using the System

Main / Sub 2


6.4.2 Displaying detailed information by tenant

Use this screen to display detailed settings and operating for each tenant.

Procedure

Select [1.Status/Control] in the main menu and [2.Each tenant details] in the sub menu.

- ① When you touch a unit name, a remote control window for individual operations appears.
- ② When you touch a tenant name, a remote control window for operating all tenant units appears.
- ③ When you touch [All units], a remote control window for operating all connected units appears.

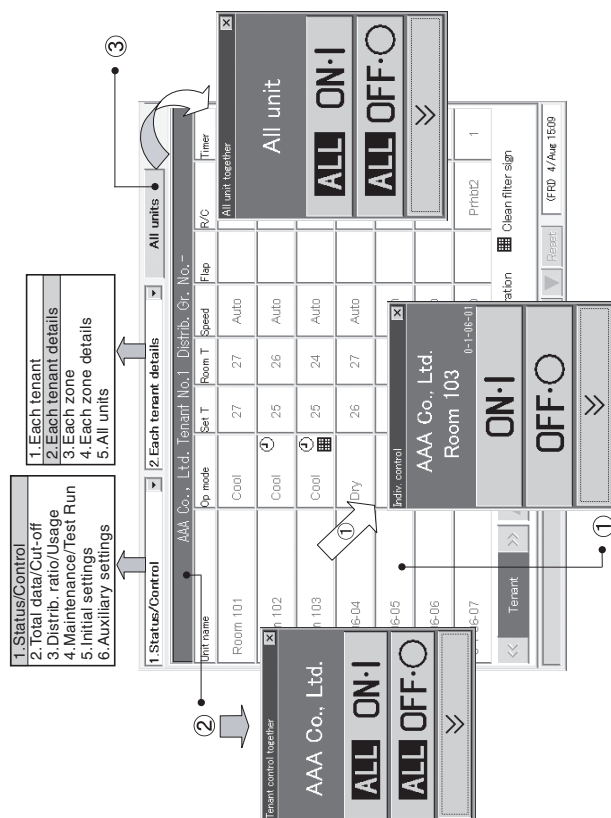

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

Main 1 Sub 5

6.4.5 Displaying and operating all indoor units

Use this screen to display information about the state of all indoor units and to operate all indoor units at once.

Procedure

Select [1. Status/Control] in the main menu and [5. All units] in the sub menu.

One screen displays up to 100 indoor units in order of their tenant. The units can be operated individually or all at once.

- ① When you touch a unit name, a remote control window for individual operations appears.
- ② When you touch [All units], a remote control window for operating all connected units appears.

The first four characters are displayed for unit names.

6 Using the System

Main 2 Sub 1

6.5 Total Data and Manual Cut-Off Processing

6.5.1 Displaying total data by indoor unit

Use this screen to check total data such as the operating time and the number of operations for each indoor unit.

Procedure

Select [2. Total data/Cut-off] in the main menu and [1. Each I/D unit] in the sub menu.

- ① Selects the tenant to display.
- ② Selects either the current or the past (maximum 24 months) cut-off data.
- ③ Selects the time zone to display.

* This button will be invalid when setting the mode at "No Distrib." (see Main 5 Sub 1)

- ④ If you want to display operating time by fan speed, touch [Operating time]. The display changes as shown below.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

6.5.3 Displaying total data by outdoor unit

Use this screen to check total data such as the operating time and the number of operations for each outdoor unit.

Procedure

Select [2.Total data/Cut-off] in the main menu and [3.Each O/D unit] in the sub menu.

- ① Selects the connection destination link system to display.
- ② Selects either the current or the past (maximum 24 months) cut-off data.

Some items may not be shown depending on the type of the outdoor unit.

O/D system Address	Oper. time (hour)	Oper. count (Count)	Running time after oil exchange(hour)	Power output (kWh)
1	208	48	712	4033.5

You should make frequent checks of the running time after oil exchanges. When the time approaches for an oil exchange, contact your dealer or service provider to request an early oil exchange. The engines of GHP type outdoor unit can be damaged by operation without exchanging the oil.

- For double multiple models comprising two or more outdoor units with the same address, data with a typical unit are displayed.
- Depending on the model of the outdoor unit, some items may not be displayed.
- Monthly values are displayed for "Operating time" and "Operating count". (The values reset to "0" after cut-off processing.)
- Cumulative values from the starting point are displayed for "Running time after oil exchange (Hour)" and "Power output (kWh)". (The values do not reset to "0" even after cut-off processing.)

6 Using the System

6.5.2 Displaying total data by tenant

Use this screen to check total data such as the operating time and the number of operations for each tenant.

Procedure

Select [2.Total data/Cut-off] in the main menu and [2.Each tenant] in the sub menu.

- ① Selects the distribution group to display.
- ② Selects either the current or the past (maximum 24 months) cut-off data.
- ③ Selects the time zone to display.

* This button will be invalid when setting the mode at "No Distrib.". (see Main 5 Sub 1)

Tenant No.	Tenant name	T/S ON	T/S OFF	Total	Elec. heater ON time	Oper. count
1	AAA Co.,Ltd	0.00	0.00	0.00	-	0
2	BBB Sports	0.00	0.00	0.00	-	0
3	CCC-SHOP	0.00	0.00	0.00	-	0

- ④ If you want to display operating time by fan speed, touch [Operating time]. The display changes as shown below.



8. Intelligent Controller (CZ-256ESMC2)

Main 2 Sub 5

6 Using the System

6.5.5 Performing manual cut-off processing and saving data

Use this screen to perform manual cut-off processing, and to back up setting and total data to optional PC Cards.



6.5.5.1 Manual cut-off processing

Proceed as follows to manually perform cut-off processing.


Procedure

Select [2.Total data/Cut-off] in the main menu and [5.Cut-off/Data backup] in the sub menu.


① Touch [Cut-off].

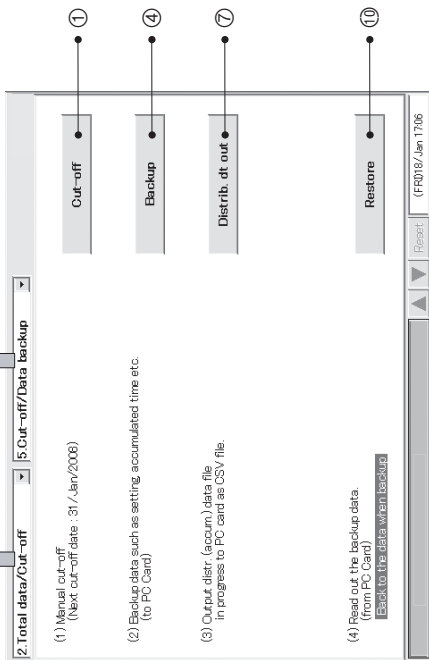

② When a window like the one shown below appears, touch the [OK] button.

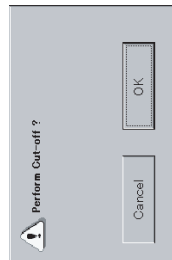

③ When a window like the one shown below appears, touch the [Check] button.

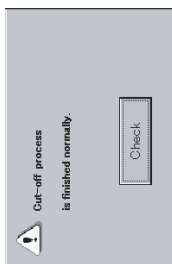

Main 2 Sub 4

6 Using the System

6.5.4 Displaying pulse meter total data

Use this screen to check the pulse count and other such cumulative data for pulse meters.

Procedure


Select [2.Total data/Cut-off] in the main menu, and [4.Pulse meter] in the sub menu.

① Selects the pulse meter connection destination.

② Selects either the current or the past (maximum 24 months) cut-off data.

③ Selects the time zone to display.

* This button will be invalid when setting the mode at "No Distrib. ". (see Main 5 Sub 1)

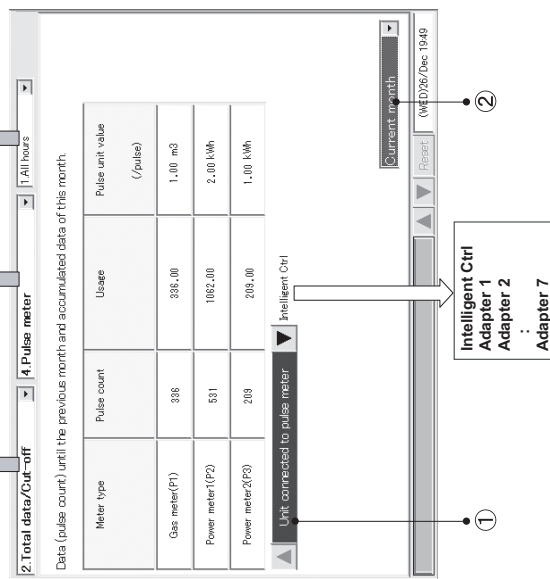

If the product type is HOT Multi, unit amount will be displayed in m³ or liters. The meter type will be "fuel metering".

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

Main 2 SUB 5

6.5.5.2 Saving data


Proceed as follows to back up setting data and totals data to optional PC Cards.

Procedure


Complete the cut-off processing described in "6.5.5.1 Manual cut-off processing" and then execute the following backup procedure.

- ④ Insert a PC card and touch the [Backup] button.

- ⑤ When a window like the one shown below appears, touch the [OK] button.

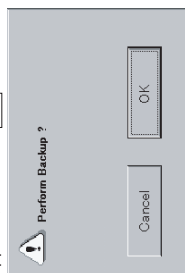

- ⑥ When a window like the one shown below appears, touch the [Check] button.

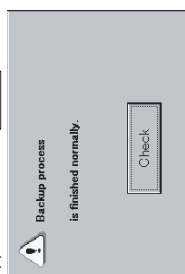

* When keeping the PC card inserted in a unit, data therein are automatically backed up once a day (at every 0 o'clock at midnight).


6.5.5.3 Outputting distribution data in progress

Save distribution data (total data) in progress before cut-off processing in PC cards (optionally available) following the procedure stated below.

Procedure

- ⑦ Insert a PC card and touch the [Distrib. dt out] button.

- ⑧ When a screen like the one shown below appears, touch the [OK] button.

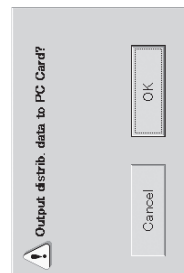


As data output by pressing the [Distrib. dt out] button are strictly in progress, it is impossible to apply these data for cut-off processing for the tenant who leaves halfway. (Manual cut-off processing is necessary).

6 Using the System

Main 2 SUB 5

- ⑨ When a screen like the one shown below appears, touch the [Check] button.

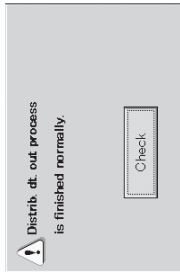

[File form]

A file name is fixed as follows according to the year, month, and date when the distribution data output was carried out.

20060316A.csv (Example of a file output on March 16, 2006)

When outputting repeatedly on the same day, the last "A" varies as B, C, D, and so forth. (Outputting is possible up to 26 times a day).

Data composition in the file is the same as that in a cut-off processing file.

[Caution]

Distribution data files are stored in the "Data" folder.

Copy output distribution data files to your PC and then delete them from the PC card.

When distribution data files are too many, normal backups of cut-off data may become impossible.


6.5.5.4 Restoring data

Proceed as follows to restore setting data and total data from optional PC Cards.


Procedure

- ⑩ Insert a PC card and touch the [Restore] button.

- ⑪ When a window like the one shown below appears, touch the [OK] button.

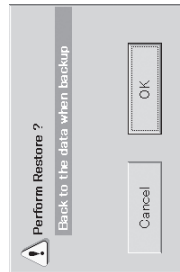

- ⑫ When a window like the one shown below appears, touch the [Check] button.

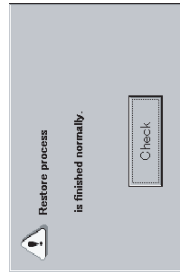

* When trying to restore data backed up using an old-version Intelligent Controller, a message "Unsupported file version. Perform Restore?" will be displayed; confirm the message and touch "Yes". After completing restoring, "Rebooting." will be displayed and then touch "OK". The data restored will be effective after rebooting. (After "Converting data" is displayed for a while, the system will automatically reboot again.)

* Everyday, at 23:30 to 00:00, cut-off processing take place, when you cannot press the [Restore] button.

Use the special optional PC Cards to back up and restore Intelligent Controller data. For details about using PC Cards, refer to the instructions of the PC Cards.
Depending on the amount of data, backup and restore operations may require up to 15 minutes.
When the system reboots immediately after the backup data is restored, "Converting data" may continue to be displayed for a long period of time (estimated maximum period of time: 1 hour 30 minutes). Be sure not to turn off the power of the unit during that time. The internal files may become corrupted and the system may become unable to be booted. If the system becomes unable to be booted, the internal data needs to be restored so ask your dealer or service provider to restore the data.

8. Intelligent Controller (CZ-256ESMC2)

Main Sub 2

6 Using the System

6.6.2 Displaying distribution ratios and energy usage by tenant

Use this screen to check the distribution ratios and energy usage by tenant.

Procedure

Select [3.Distrib. ratio/Usage] in the main menu and [2.Each tenant] in the sub menu.

*When "No Distrib." is selected, this screen is not accessible. (see [Main Sub 1])

- ① Selects the distribution group to display.
- ② Selects either the current or the past (maximum 24 months) cut-off data.
- ③ Selects the time zone to display.
- ④ Switches the gas distribution ratio and gas usage display between values for air conditioning and values for power generation.

When "Gas usage" is displayed: Gas distribution ratios and usage for air conditioning are shown.

When "Gas use/PwrGen" is displayed: Gas distribution ratios and usage for power generation are shown.

For air conditioning units without a power generation feature, "-" appears under gas usage for power generation and gas distribution ratio.

Tenant No.	Tenant name	Power usage(kWh)	ratio (%)	Gas usage(m3)	ratio (%)
1	AAA Co., Ltd.	204.13	36.52	203.79	36.99
2	BBB Sports	82.70	10.83	0.00	0.00
3	CCC	204.44	36.56	204.26	36.06
4	DDD	61.82	7.92	54.88	10.50
5	EEE	64.96	8.37	59.85	11.45
Total		777.84	100.00	522.77	100.00

- If the product type is HOT Multi, unit amount will be displayed in m³ or liters.
- If no pulse meter is connected, power usage and gas usage are not displayed.
- Gas usage and distribution ratios are not displayed for PAC units.

Main Sub 1

6 Using the System

6.6 Air Conditioning Distribution Ratios and Energy Usage

6.6.1 Displaying distribution ratios and energy usage by indoor unit

Use this screen to check the distribution ratios and energy usage of indoor units.

Procedure

Select [3.Distrib. ratio/Usage] in the main menu and [1.Each I/D unit] in the sub menu.

*When "No Distrib." is selected, this screen is not accessible. (see [Main Sub 1])

- ① Selects the tenant to display.
- ② Selects either the current or the past (maximum 24 months) cut-off data.
- ③ Selects the time zone to display.
- ④ Switches the gas distribution ratio and gas usage display between values for air conditioning and values for power generation.

When "Gas usage" is displayed: Gas distribution ratios and usage for air conditioning are shown.

When "Gas use/PwrGen" is displayed: Gas distribution ratios and usage for power generation are shown.

For air conditioning units without a power generation feature, "-" appears under gas usage for power generation and gas distribution ratio.

Unit name	I/D type	T/S ON	Power usage (kWh)	Distr. ratio(%)	Gas usage (m3)	Distr. ratio(%)
0-1-01-01	101	174:54	12.14	1.56	10.77	2.06
0-1-01-02	102	174:05	119:43	1.58	10.92	2.09
0-1-31-02	103	132:15	88:21	1.59	11.08	2.12
1-1-01-01	1-1-01-01	278:54	187:19	1.59	10.98	2.10
1-1-01-02	1-1-01-02	189:29	121:21	1.60	11.13	2.13

- If the product type is HOT Multi, unit amount will be displayed in m³ or liters.
- If no pulse meter is connected, power usage and gas usage are not displayed.
- Gas usage and distribution ratios are not displayed for PAC units.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

Main Sub 2

6.6.3 Time zone totals and distribution

The Intelligent Controller provides functions for recording total operating time and calculating distribution ratios for four time zones: All hours, Regular hours, Out of hours, and Special days. When using these functions, be aware of the following points.

■ **Margin of error in time zone operating totals**

The intelligent controller acquires operating time data accumulated by individual indoor units via communication adaptors. The Intelligent Controller itself has an internal communication adaptor function.

When the Intelligent Controller requests data from a communication adaptor, the adaptor queries indoor units for their operating time data, and forward it to the Intelligent Controller after all totals have been calculated.

For this reason, there is a margin of error of up to several minutes that may arise in count totals around the transitions from one time zone to another. For example, cases such as the following are possible.

Case 1) Indoor units are stopped at the exact end of the Regular hours time zone (or immediately before the end of the zone). For this reason, several minutes are counted in the Out of hours total.

Case 2) Indoor units are operated for the same length of time before and after the transition from Regular hours to Out of hours, but the totals for the two zones are not the same.

■ **Note about daily timer settings**

For communications reasons, there is a slight delay before units can be stopped by a timer.

Therefore you should avoid setting timers that stop units exactly at the transition between two time zones.

For example, if you simultaneously stop a large number of indoor units at the transition from

Regular hours to Out of hours, a certain period of time is required for the indoor units to actually stop. This time is counted as Out of hours time.

If you need to set a timer to stop units before a time zone transition, you should avoid setting it within 10 minutes of the transition. (This is only an approximately guideline, since results vary depending on communications conditions.)

■ **Communications errors and data totals**

Data totals may not be accurate if communications errors occur in the Intelligent Controller, indoor units, or communication adaptors.

For example, if a communications error occurs in the Regular hours time zone, and normal communications are restored in the Out of hours time zone, all data received by the Intelligent Controller will be counted in the Out of hours time zone.

Totals data received by the Intelligent Controller is counted in the time zone in which it is received.

■ **Usage for "All hours"**

The usage of "all hours" is calculated from the ratio of distributed portion of the entire group based on the total of operation data in all time zones. Therefore, it is not consistent with the total usage of "regular hours", "Out of hours", and "special day".

48

6 Using the System

Main Sub 1

6.7 Maintenance and Test Runs


6.7.1 Checking inspection signs

Use this screen to check for indoor units for which filter cleaning signs have been issued, and outdoor units (GHP) for which engine oil inspection signs have been issued.

Procedure

Select **4.Maintenance/Test Run** in the main menu and **1.Inspection sign** in the sub menu.

If filter cleaning signs or engine oil inspection signs have been issued, contact your dealer or service provider to request cleaning or oil exchange.

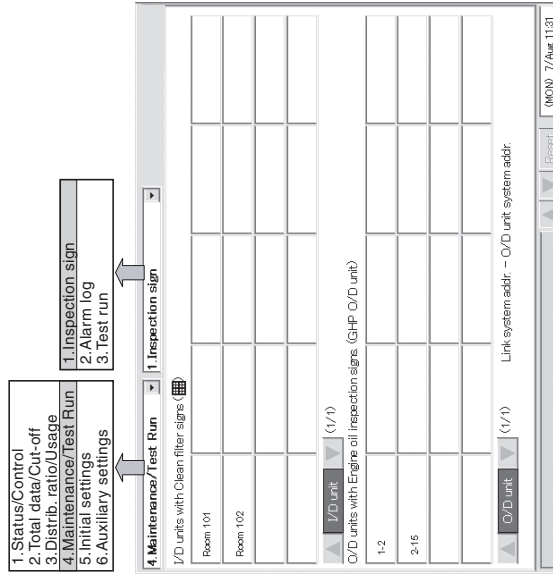

Filter cleaning signs are only an approximate guide. We recommend that you clean indoor unit filters regularly, even if no signs have been issued.

49

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

Main 4 Sub 2

6.7.2 Checking the alarm logs

Use this screen to check logs of up to the past 14 alarms and errors for individual indoor units.


Procedure

Select [4.Maintenance/Test Run] in the main menu and [2.Alarm log] in the sub menu.

- ① Select the tenant to display.
- ② Select the indoor unit to display.



1. Status/Control
2. Total data/Cut-off
3. Distrib. ratio/Usage
4. Maintenance/Test Run
5. Initial settings
6. Auxiliary settings

1. Inspection sign
2. Alarm log
3. Test run

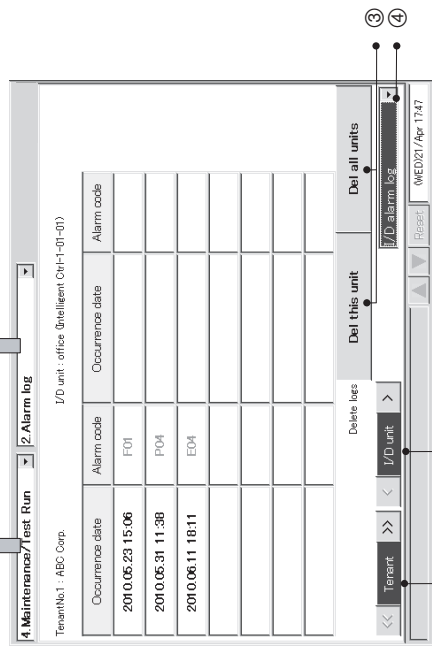

- ③ Touch the [Del this unit] button to delete the alarm logs of the selected unit only, or touch the [Del all units] button to delete the alarm logs of all units.

When a window like the following appears, touch the [Yes] button.

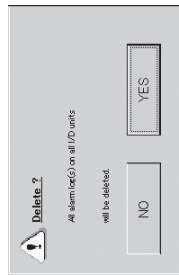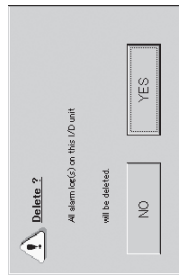


6 Using the System

Main 4 Sub 2


- ④ Select "I/D alarm log", "O/D comm. error log", or "Adapter alarm log".

[O/D comm. error log] logs the history of errors in communication between the outdoor unit and the Intelligent Controller or the communication adaptor.

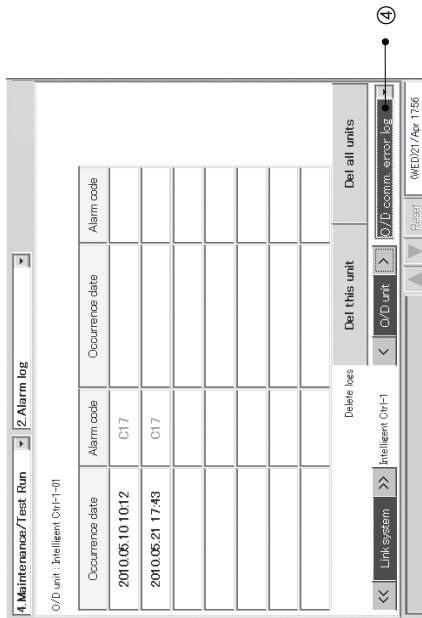

[Adapter alarm log] logs the history of warnings as determined by the Intelligent Controller or the communication adaptor.

(Duplicate adaptor addresses, communication error between the Intelligent Controller and adaptor, etc.)

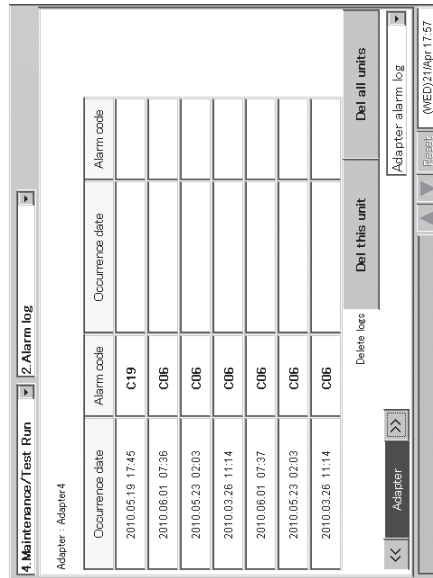

8. Intelligent Controller (CZ-256ESMC2)

Main 6 Sub 1

6 Using the System


6.8 Auxiliary Settings

6.8.1 Registering zone names

You can assign names to zones.
Zones are unrelated to distribution, so you can mix GHP, PAC, and HOT units, and make settings that extend across link systems.
Start/stop, monitoring, timer operation and so on can be done all at once for all units in a zone.

Procedure

Select [6.Auxiliary settings] in the main menu and [1.Zone name] in the sub menu.

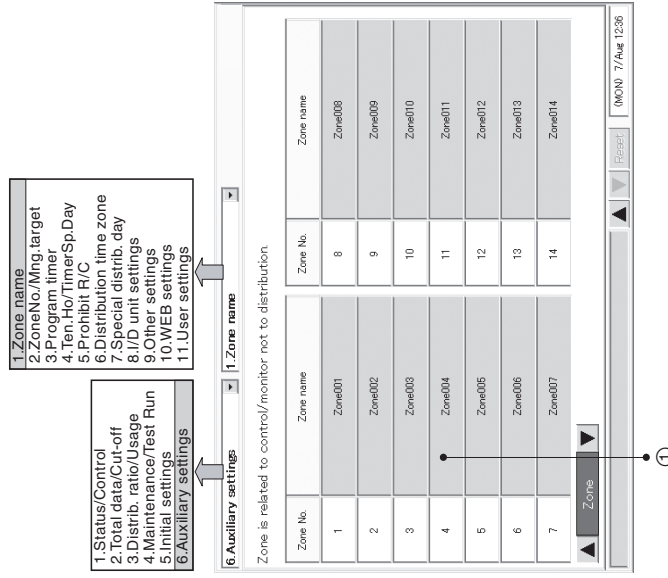

- ① Select a name to register or modify. A software keyboard appears.
- ② Enter the name with the keyboard.
Names can be up to 20 characters long.
* See "7 Entering Text and Numbers" for details about entering text in keyboard windows.
* Zones name can be registered in the range 1 to 128.

Main 4 Sub 3


6 Using the System

6.7.3 Executing test runs

Use this screen to display list of each indoor unit for outdoor unit system addresses.
You can execute test runs, either for each outdoor unit system address or individually.

Procedure

- ① Select a connection destination link system.
- ② Select the outdoor unit to operate.

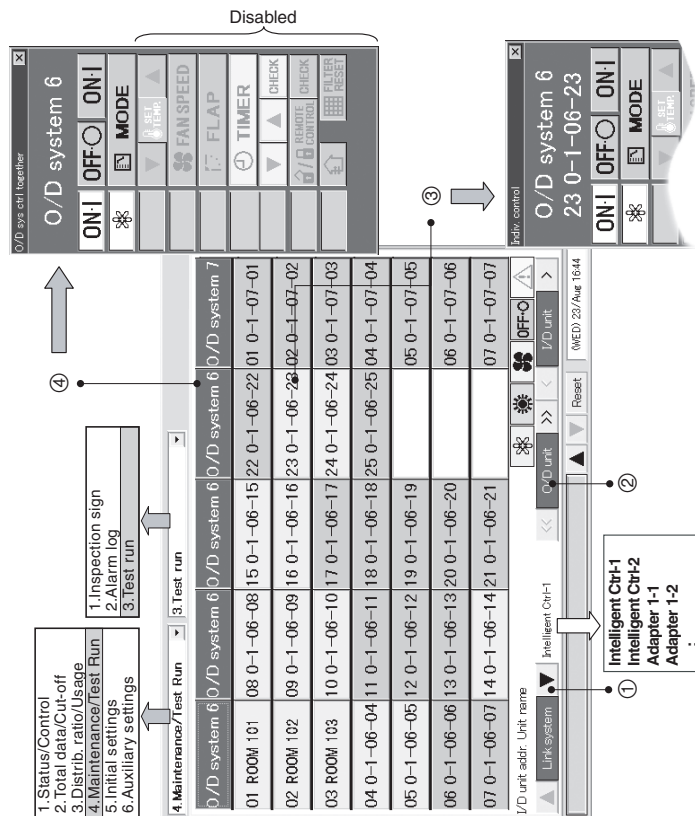

- ③ To operate an individual unit, touch a unit name and operate with the individual control remote control window.
- ④ To operate all units in an outdoor unit system, touch the outdoor unit system address column. A remote control window for operating an outdoor unit system appears. Use this window to execute a test run. Select Cool, Heat, or Fan as the operating mode.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

6.8.2 Setting zone numbers and management targets

Use this screen to set the zone number and management category for individual indoor units. Be sure to assign a central address to each unit.

Procedure

Select [6.Auxiliary settings] in the main menu and [2.ZoneNo./Mng.target] in the sub menu.

1. Zone name
 2. ZoneNo./Mng.target
 3. Program timer
 4. Ten.Ho/TimerSp.Day
 5. Prohibit P/C
 6. Distribution time zone
 7. Special distrib. day
 8. I/D unit settings
 9. Other settings
 10. WEB settings
 11. User settings

1. Status/Control
 2. Total data/Cut-off
 3. Distrib. ratio/Usage
 4. Maintenance/Test Run
 5. Initial settings
 6. Auxiliary settings

O/P-I/D	CNT/Address	Unit name	Tenant No.	Zone No.	Management	Product Type	Model (Class)
6-1	1	ROOM101	1	1	Target	PAC	ST7
6-2	2	ROOM102	1	1	Target	PAC	X00
6-3	3	ROOM103	1	-	Indiv Op	PAC	S00
6-4	4	O-1-00-04	1	-	Not Target	PAC	S00
6-5	5	O-1-00-05	1	-	Target	PAC	L02
6-6	6	O-1-00-06	1	-	Target	PAC	K00
6-7	-	O-1-00-07	1	-	Target	PAC	D04

Set zone No./room mng target for each I/D unit.

Link system: Intelligent Ch-1 | I/D unit: [dropdown] | Preset | MON 7/Aut 12:37

6 Using the System

- ① A window like the one shown at right appears when you touch the zone number column.
 Enter digits specify to the zone number.
 * Zone No. can be registered in the range 1 to 128.



- ② A window like the one shown at right appears when you touch the management column.
 Select one from among Target, Individual operation, or Not Target.



- Individual operation:
 Display, total, distribution, and individual operation are possible with individual units, but all-unit operations (all tenant units, all zone units, all connected units, external all stop input, external all start input, etc.) are not possible.
 However, external all-unit alarm output and external all-unit operation output are possible.
- Not Target:
 No operations are possible for Not Target units, including information display (except for Main Sub2 and Main Sub3), totals calculation, and distribution.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

6.8.3 Programming timers
Up to 50 types of daily timers and 50 types of weekly timers can be programmed. It is also possible to set holidays or timer special days for tenants.

6.8.3.1 Programming daily timers
Up to 50 types of daily timers can be programmed, with up to 50 times per day. Start/stop, operation mode, temperature settings, and remote control prohibition can be programmed.

Procedure
Select **6.Auxiliary settings** in the main menu and **3.Program timer** in the sub menu.

- 1. Status/Control
 - 2. Total data/Cut-off
 - 3. Distrib. ratio/Usage
 - 4. Main tenance/Rest Run
 - 5. Initial settings
 - 6. Auxiliary settings
- 1. Zone name
 - 2. Zone No./Mng. target
 - 3. Program timer
 - 4. Ten.Ho/Timer/Sp.Day
 - 5. Prohibit R/C
 - 6. Distribution time zone
 - 7. Special distrib. day
 - 8. I/D unit settings
 - 9. Other settings
 - 10. WEB settings
 - 11. User settings

No.	Set time	Start/Stop	Op mode	Set temp	Prsh
1	7:00	Stop	-	24	Acc
2	8:00	Start	Heat	23	Prh
3	9:00	Stop	-	24	Acc
4	13:00	Start	Heat	23	Prh
5	15:00	Stop	-	24	Acc

No.	SUN	MON	TUE	WED	THU	FRI	SAT
1	D1	D1	D1	D1	D1	D1	D1
2	D2	D1	D1	D1	D1	D1	D1
3	D2	D1	D1	D1	D1	D1	D2

- ① With Daily timer, select a timer number (D1 to D50), [Holiday], [Sp1] to [Sp5].
The [Holiday] number is reserved for tenant holiday settings.
- ② The timer numbers [Sp1] to [Sp5] are reserved for setting timer special days.
- ③ Select the time to set.

- ④ Touch [Set] to confirm the time.
- ⑤ Touch [Cancel] to cancel the setting.
The display changes to "___".
- ⑥ Touch the Start/Stop column and set in the following window.

- ⑦ Programs the timer to start the unit.
- ⑧ Cancels the setting.

- ⑦ Touch the Op mode column and set in the following window.
- ⑧ Closes the window.
- ⑨ Sets the operating mode.
Select from among Heat, Cool, Fan, Dry, and Auto.
- ⑩ Cancels the setting.
- ⑪ Confirms the setting.


6 Using the System

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System



③ Touch the Set temp. column and set in the following window.

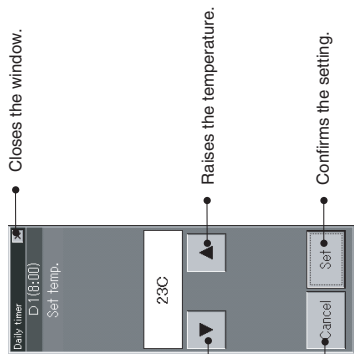

• Closes the window.


• Lowers the temperature.

• Raises the temperature.

• Cancels the setting.

• Confirms the setting.

④ Touch the Prrhbt R/C column and set in the following window.

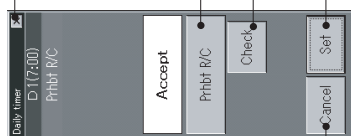

• Closes the window.

• Switches between Prohibit1, Prohibit2, Prohibit3, Prohibit4, and Accept.

• Displays a window that allows you to check prohibit status.

• Cancels the setting.

• Confirms the setting.

Since different air conditioner models have different upper and lower temperature limits, the temperature is set automatically within the supported range when an air conditioner is actually controlled. Items for which no time is set are ignored.

6 Using the System



6.8.3.2 Programming weekly timers


You can program weekly timers by assigning any daily timer to each day of the week. Up to 50 types of weekly timers can be programmed.

Procedure

Select [6.Auxiliary settings] in the main menu and [3.Program timer] in the sub menu.

- 1. Zone name
- 2. ZoneNo./Mng.target
- 3. Program timer
- 4. Ten.Ho/TimerSp.Day
- 5. Prohibit R/C
- 6. Distribution time zone
- 7. Special distrib. day
- 8. I/D unit settings
- 9. Other settings
- 10. WEB settings
- 11. User settings

- 1. Status/Control
- 2. Total data/Cut-off
- 3. Distrib. ratio/Usage
- 4. Maintenance/Test Run
- 5. Initial settings
- 6. Auxiliary settings

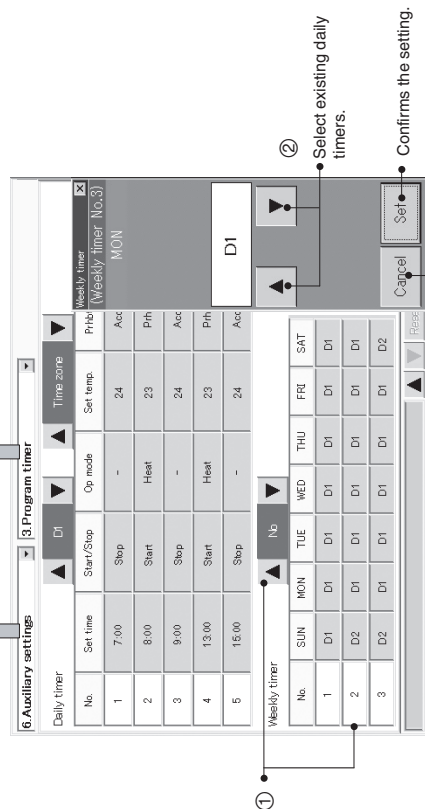

①

②

• Select existing daily timers.

• Confirms the setting.

• Cancels the setting.

① With Weekly timer, select a weekly timer number ([1] to [50]).

Up to 50 types of weekly timers can be set. Three items each are displayed.

Each press of ▼ changes the display in order like [1,2,3][2,3,4][3,4,5].

Each press of ▲ changes the display in order like [50,1,2][49,50,1][48,49,50].

② Select the daily timer number ([D1] to [D50], [Holiday], [Sp1] to [Sp5]) to set and confirm or cancel each button.



8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

6.8.5 Prohibiting remote control use

You can prohibit the use of the remote controls connected to indoor units.

Procedure

Select [6.Auxiliary settings] in the main menu and [5.Prohibit R/C] in the sub menu.

1. Status/Control
2. Total data/Cut-off
3. Distrib. ratio/Usage
4. Maintenance/Test Run
5. Initial settings
6. Auxiliary settings

1. Zone name
2. ZoneNo./Mng.target
3. Program timer
4. Ten.Ho/TimerSp.Day
5. Prohibit R/C
6. Distribution time zone
7. Special distrib. day
8. I/D unit settings
9. Other settings
10. WEB settings
11. User settings

6. Auxiliary settings

5. Prohibit R/C

Prohibit R/C	Start/Stop	Oper. mode	Set temp.	Fan speed	Set flap
Prohibition1	X	O	O	O	O
Prohibition2	X	X	X	O	O
Prohibition3	O	X	X	O	O
Prohibition4	O	X	O	O	O

Reset to the init

Initial s

Cancel

Set

MON 7/Aug 12:38

① ② ③ ④

- ① Touch the item you want to change to display a settings window for that item.
- ② To allow remote control use, touch the [O (Accept)] button. To prohibit remote control use, touch the [X (Prohibition)] button.
- ③ Touch the [Set] button to confirm the setting, or the [Cancel] button to cancel it.
- ④ Touch the [Initial setting] button to restore the initial setting (described above).

6 Using the System

6.8.4 Setting Tenant holiday/Timer special day

You can make settings by tenant of days of setting timer for holidays and timer special days. Holidays and timer special days can be registered for up to the next two years.

Procedure

Select [6.Auxiliary settings] in the main menu and [4.Ten.Ho/TimerSp.Day] in the sub menu.

1. Status/Control
2. Total data/Cut-off
3. Distrib. ratio/Usage
4. Maintenance/Test Run
5. Initial settings
6. Auxiliary settings

1. Zone name
2. ZoneNo./Mng.target
3. Program timer
4. Ten.Ho/TimerSp.Day
5. Prohibit R/C
6. Distribution time zone
7. Special distrib. day
8. I/D unit settings
9. Other settings
10. WEB settings
11. User settings

6. Auxiliary settings

4. Ten.Ho/TimerSp.Day

On the calendar at left, push the date or day to set as a holiday or TimerSp. Day.

SUN	MON	TUE	WED	THU	FRI	SAT
2	3	4	5	6	7	8
9	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30	31					

Blue num. Special distrib. day

1. Tenant001

1. Tenant001

Copy

Copy to (Tenant)

MON 7/Aug 12:37

① ② ③ ④ ⑤ ⑥

- ① Select the tenant.
- ② Select the calendar for the month of the year to set.
- ③ Select items (regular days, holidays, and special days 1 to 5) you would like to set.
- ④ Point the item (regular days, holidays, and special days 1 to 5) you would like to set on the left calendar and touch the date or day of the week.
- ⑤ If holidays and timer special days have already been registered for a tenant, you can copy them from the calendar to the calendar on the right. Select the tenant for the copy destination calendar.
- ⑥ A window like the one on the right appears when you touch [Copy].
- ⑦ Touch the [OK] button to copy two years of holidays from the tenant on the left to the tenant on the right.
- * Set the system mode at "Regular day" to cancel settings of holidays and timer special days.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

Main 6 Sub 6

6.8.6 Setting distribution time zones

You can set distribution time zones for the same day of each week.

Procedure

Select [6.Auxiliary settings] in the main menu and [6.Distribution time zone] in the sub menu.

*When "No Distrib." is selected, this screen is not accessible. (see [Main 6 Sub 1])

	From	To
SUN	0:00	24:00
MON	8:00	17:00
TUE	8:00	17:00
WED	0:00	24:00
THU	0:00	24:00
FRI	8:00	12:00
SAT	0:00	24:00

Regular hour
Out of hour

Distr Gr No. 1 PAC

Distrib. time zone: MON (From)

8:00

Cancel Set

- ① Select the distribution group.
 - ② Touch the "From" column.
 - ③ Set the start time of regular hours to a time between 00:00 and 24:00 (30-minute intervals).
 - ④ Touch the [Set] button to confirm the setting, or the [Cancel] button to cancel it.
 - If you set the start time to 00:00 and the end time to 24:00, the entire day is regular hours.
 - If the start time is the same as the end time, the entire day is out of hours.
 - If the start time and the end time are reversed, the outer side is regular hours.
 - ⑤ Touch the "To" column.
 - ⑥ Set the end time of regular hours to a time between 00:00 and 24:00 (30-minute intervals).
 - ⑦ Touch the [Set] or [Cancel] button.
- * Refer also to "6.3 Time zone totals and distribution".

6 Using the System

Main 6 Sub 7

6.8.7 Setting special distribution days

You can set special distribution days to which normal time zone settings do not apply. Use this function for holidays and so on. Special distribution days can be registered for up to the next two years.

Procedure

Select [6.Auxiliary settings] in the main menu and [7.Special distrib. day] in the sub menu.

*When "No Distrib." is selected, this screen is not accessible. (see [Main 6 Sub 1])

1. Status/Control
2. Total data/Cut-off
3. Distrib. ratio/Usage
4. Maintenance/Rest Run
5. Initial settings
6. Auxiliary settings

1. Zone name
2. ZoneNo./Mng.target
3. Program timer
4. Ten_Ho/TimerSp.Day
5. Prohibit R/C
6. Distribution time zone
7. Special distrib. day
8. I/D unit settings
9. Other settings
10. WEB settings
11. User settings

6. Auxiliary settings
7. Special distrib. day

On the calendar at left, push the date or day to set as a special distribution day.

SUN MON TUE WED THU FRI SAT
1 2 3 4 5 6 7
8 9 10 11 12 13 14
15 16 17 18 19 20 21
22 23 24 25 26 27 28
29 30 31

SUN MON TUE WED THU FRI SAT
1 2 3 4 5 6 7
8 9 10 11 12 13 14
15 16 17 18 19 20 21
22 23 24 25 26 27 28
29 30 31

Aug/2004 Special distrib. day
No. 1 PAC
Distr Gr Copy
No. 2 PAC
Copy to (Distr Gr)
Copy

(MON) 7/Aug 12:38

- ① Select the distribution group to set.
- ② Select the calendar for the month of the year to set.
- ③ On the left-side calendar, touch the date or day to set as a special distribution day.
- ④ If special distribution days have already been registered for a distribution group, you can copy them from the calendar to the calendar on the right. Select the distribution group for the copy destination calendar.
- ⑤ A window like the one on the right appears when you touch [Copy].
- ⑥ Touch the [OK] button to copy two years of special distribution days from the distribution group on the left to the distribution group on the right.



8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

6.8.9 Other settings

You can use this screen to register passwords, initialize data, and make power saving settings for the LCD display.

Procedure

Select [6.Auxiliary settings] in the main menu and [9.Other settings] in the sub menu.

6.8.9.1 Checking the connection configuration

- ① Touch the [Chk config.] button to check the connection configuration of the system. You should do this after adding or deleting units, changing addresses, and so on. If the system configuration has changed, cut-off processing and confirmation of the system processing messages appear. For details, see "6.9 System Configuration Changes".

Up to 10 minutes may be required to check the system configuration.

6 Using the System

6.8.8 Indoor unit settings

You can use this screen to check the air conditioning capacity of indoor units, and to set the capacity. Normally you do not need to change settings with this screen.

Exercise care when changing settings, because improper settings can prevent accurate distribution.

Procedure

Select [6.Auxiliary settings] in the main menu and [8.I/D unit settings] in the sub menu.

*When "No Distrib." is selected, this screen is not accessible. (see [Main 5 Sub 1])

- ① Select the link system to display.

O/I-D	I/D	Unit name	Ten. No.	I/D unit Cap.(kW)	Eheater Cap.(kW)	Prct. Type
1-1	1-1	aaa	1	2.2	-	PAC
1-2	1-2	bbb	1	*4.5	-	PAC
1-3	1-3	aaaH	2	2.8	0.0	PAC
1-4	1-4	ElaHlave	3	2.8	-	PAC(Sub)
1-5	1-5	ElaHlave	3	3.6	-	PAC(Sub)
1-6	1-6	ElaHlave	3	4.5	-	PAC(Sub)
1-7	1-7	ElaHlave	3	7.1	0.0	PAC
1-8	1-8	O-1-01-08	1:28	-	-	-

- ② To change a capacity setting, touch an item in the capacity column, and enter a kW capacity from 0 to 999.9 in the numeric keypad window which appears.
- ③ Touch [Set] to confirm the setting. Or [Auto] to cancel it. (The capacity value will restore the received level) If you have changed the capacity, an asterisk (*) appears to the left of the value.
- ④ Touching the heater capacity column for the indoor unit having an electric heater will have a soft ten-key for the heater capacity setting displayed. Input numbers 0.0 to 100.00 by kW. However, these are effective only for loaded distribution settings.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

Main 

6.8.9.2 Registering passwords

- ② Click the [Not registered] button to display a keyboard window for registering passwords. You can register 3 kinds of passwords: "Setting", "Distrib.", and "Operation". Refer to "Menu list" under "5. Quick reference" for details.
- Enter a 4-digit number from 0000 to 9999, and touch the [Set] button. The caption on the [Not registered] button changes to [Registered].
- To delete a password, first enter the four-digit password, then touch the [Set] button. Clear the password by pressing the [Registered] button and entering the password. The button changes back to [Not registered]. When changing a password, delete the old password before setting the new one.

6.8.9.3 Selecting no-communications mode


- ③ Use the options buttons to select whether or not to use no-communications mode. If you select [YES (no-communications mode)] then communications errors will be suppressed, but it will not be possible to communicate with air conditioning units. Data displayed by the system will be meaningless.
- This setting is provided for occasions when you want to register names or check the display layout even though air conditioners are not installed, not turned on, or otherwise not capable of communications.
- Normally you should leave the [NO (Normal)] button selected, selecting [YES (no-communications mode)] only when it is necessary.

6.8.9.4 Buzzer sounds

- ④ When pressing an effective button during setting at [Sound], the buzzer will sound (buzz). When setting at [No sound], even the alarm buzzer does not sound.

6.8.9.5 Initialization

- ⑤ Initialization erases all system data, including setting data and totals data. A window like the following appears when you touch the [Initialization] button.

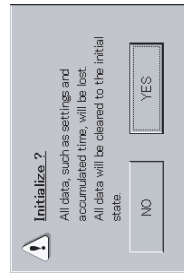

[!] Do not make imprudent initialization.

Touch the [Yes] button to erase all data and return the system to the factory default state.
 * Everyday, at 23:30 to 00:00, cut-off processing takes place and you cannot press the [Initialization] button then.

6 Using the System


Main 

6.8.9.6 LCD auto off settings


- ⑥ The auto display off settings allow you to select a time after which the LCD display should be automatically turned off if there is no activity. The LCD display is turned on again when you touch it.
- Settings: 5 minutes, 10 minutes, 15 minutes, 30 minutes, OFF (default: 30 minutes)
- Turning the LCD display off when it is not in use saves power and can prolong the life of the display and backlight.

6.8.9.7 Calibrating touch panels

- Humidity and temperature around the Intelligent Controller and its secular change may affect the point on the touch panel screen to deviate after use over a long period of time. In such a case, Calibrate the position.
- ⑦ Press [Calibration] and the next screen will be displayed.

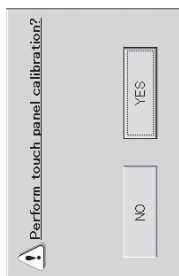

- Now press [Yes] and a cross mark will appear in the center of the screen. Keep pressing the center with a touch pen for a second or longer and stop pressing. Follow the same procedure of Upper left → Lower left → Lower right → Upper right.

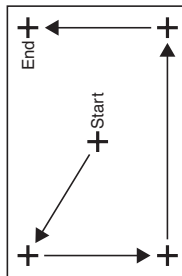

- Finally the cross mark disappear and "New calibration settings have been measured." will be displayed. Then press somewhere on the screen and the result of calibration will become effective to restore the original screen.
- When 30 seconds passes without operating the screen, the calibration result is cancelled to restore the previous screen.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

6.8.9.8 Power off button

- Ⓢ Always touch this button before powering the Intelligent Controller off.

A message appears asking if you want to exit the program. Touch **OK** in the message. The system saves current data, and then displays a message "It is now safe to turn off the Intelligent Controller." Wait until this message appears before powering the system off. (If there is a large amount of data, several minutes may be required for this message to appear.)

!! Powering off before this message appears may cause malfunction or prevent booting.

6 Using the System

6.8.10 WEB settings

Settings related to WEB such as the site name, mail settings, and network settings are possible.

Procedure

Select **6. Auxiliary settings** in the main menu and **10. WEB settings** in the sub menu.

For items ①, ④ to ⑥, and ⑧ to ⑩, touch each input box and a soft keyboard will appear.

- ① Input the name of an optional site (within 40 characters).
- ② Set the automatic updating interval on the screen displayed on Web browser. When selecting "Invalid", data will not be updated until pressing the **[New]** button on the WEB browser screen.
- ③ Send the test mail.
- ④ Input the IP address (or domain name) of the mail (SMTP) server separately contracted.
- ⑤ Input an optional transmitter account name (mail address) (within 40 characters).
- ⑥ Input the receiver account name (mail address) (within 40 characters).
- ⑦ Select this check box to enable DHCP instead of using a fixed IP address. When DHCP is enabled, input for items ⑧ to ⑩ is disabled.
- ⑧ Input the Intelligent Controller IP address (or domain name). Refer to settings for other equipment (PC, router, etc.).
- ⑨ Refer to settings for other equipment (PC, router, etc.).
- ⑩ Input the IP address of the default gateway connected to the Intelligent Controller as necessary.

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

Main 6 Sub 10

- ① Input the IP address of the primary and secondary DNS servers as necessary.
 - ② Input the IP address of the primary and secondary WINS servers as necessary.
 - ③ Input the Intelligent Controller's device name (device ID) (within 15 characters).
(This is used to identify the Intelligent Controller when using DNS, for example.)
 - ④ For details on the mail server settings, see "6.8.10.1 Detailed server settings".
- * Refer to the network administrator for confirmation of detailed mail and network settings.
 - * If a Web browser (on PC) was used to change any of the settings from ① to ③, the "Network settings have changed. Restart the unit." message appears and the Intelligent Controller restarts automatically.
 - * If you change the settings for items ① and ③, the system restarts so that the new settings are reflected when you switch to other screens.
 - * You cannot set the IP address to "0.0.0.0" or "255.255.255.255". You cannot set the subnet mask, default gateway, DNS, or WINS to "0.0.0.0".

6.8.10.1 Detailed server settings

From the "WEB settings" screen (Main 6 Sub 10), clicking the "Server details" button displays the following screen.

This screen enables you to use the same and actual mail server settings to set up the Intelligent Controller as well. Therefore, check your mail server settings in advance and then apply the same settings to the Intelligent Controller.

- ① Specify a port to use for sending mails, using a number within 6 digits.
- ② Select an encryption type to use for sending mails: "None", "SSL", "TLS", or "STARTTLS".
- ③ Select this check box if you want to perform authentication during mail transmission.
Settings ④ to ⑥ below are valid only when you have selected this check box.

70

6 Using the System

Main 6 Sub 10

- ④ Select this option if you want to perform SMTP authentication during mail transmission.
Settings ⑤ and ⑥ below are valid only when you have selected SMTP authentication.
- ⑤ Select either or all of the authentication methods: "LOGIN" and "PLAIN".
If both check boxes are selected, "LOGIN" takes priority.
- ⑥ Specify a user ID and a password for authentication. For each of them, you can use within 50 characters.
- ⑦ Select this option if you want to perform POP before SMTP authentication when the mail server is receiving mails from the Intelligent Controller.
- ⑧ Click this button to set up the server if you want to perform POP before SMTP authentication.
See "6.8.10.1.1 Receiving server settings".

6.8.10.1.1 Receiving server settings

Clicking the "Receiving server settings" button on the "Server details" screen displays the following screen.

Use this screen to set up the server so that you can perform POP before SMTP authentication when the mail server is receiving mails from the Intelligent Controller.
Check your mail server settings in advance, and then apply the same settings here.

- ① Specify the address of the receiving server (POP3), within 40 characters.
If it is same as the sender's server, then set it to the same address of the "Sender's SMTP" setting on the "WEB settings" screen.
- ② Specify a user ID and a password for receiving mails. For each of them, you can use within 50 characters.
- ③ Specify a port to use for receiving mails, using a number within 6 digits.
- ④ Select this check box if you want to use SSL protected connection to receive mails.

71

8. Intelligent Controller (CZ-256ESMC2)

Main 6 Sub 11


6 Using the System

For items ① and ②, touch each input box and a soft keyboard will appear.

- ① Input an optional user ID (within 20 characters).
- ② Input an optional password (within 10 characters).
- ③ Users include three categories: "Administrator", "Special user", and "General user". No. 000 denotes "Administrator" (A special user solely admitted; its initial user ID: administrator). No. 001 or higher denotes "Special user" if authority is set to ○, and "General user" if authority is set to X. Depending on the user, the functions available from the Web differ as follows.

	Administrator	Special user	General user
Tenants affected	All tenants	Specified tenants	Specified tenants
Prohibit remote control settings	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Screen 3-3 Download	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
Screen 4-2 Alarm log	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Screen 4-4 Sent mail log	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
Screen 6-3 Program timer	<input type="radio"/>	Confirmation only	Confirmation only
Screen 6-4 Ten_Ho/Time/Sp.Day	<input type="radio"/>	Confirmation only	Confirmation only
Screen 6-5 Prohibit R/C	<input type="radio"/>	Confirmation only	<input checked="" type="radio"/>
Screen 6-10 WEB setting	<input type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>

- ④ When touching the input box, the following small screen is displayed, where you set operatable tenants by User ID.

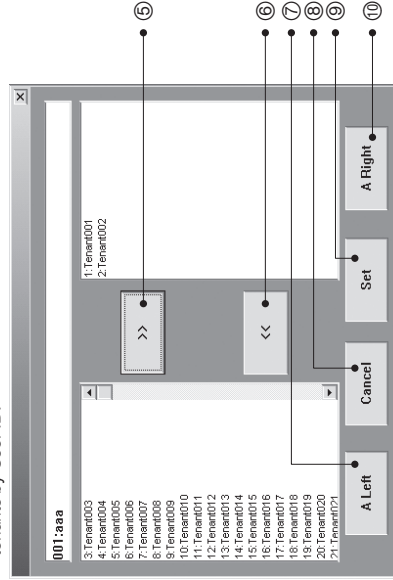

- ⑤ Register the tenant selected on the left side into the right side as the operatable tenant.
- ⑥ Delete the tenant selected on the right side from among the operatable tenants.
- ⑦ Select all the tenants on the left side.
- ⑧ Cancel this tenant setting change.
- ⑨ Make register setting for this user as the operatable tenant.
- ⑩ Select all the tenants on the right side.

Main 6 Sub 11


6 Using the System

6.8.11 User settings

The user ID, password, authority, and operatable tenant can be set.

Procedure

Select [6.Auxiliary settings] in the main menu and [11. User settings] in the sub menu.

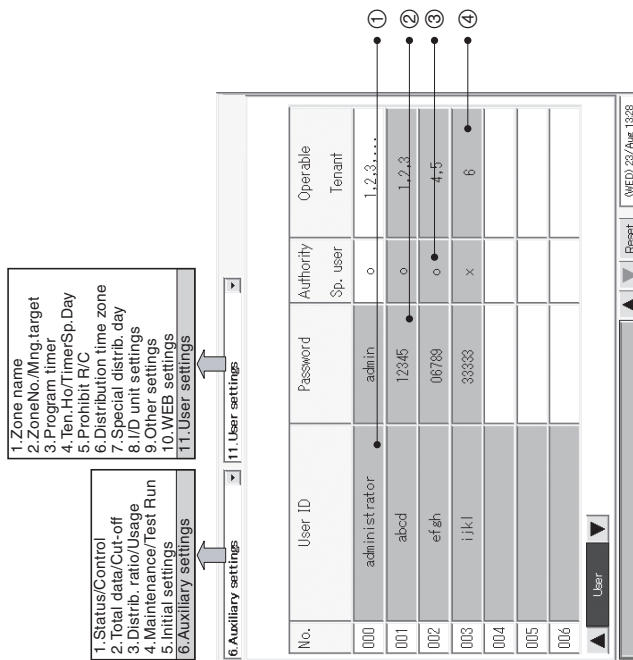

8. Intelligent Controller (CZ-256ESMC2)

6 Using the System

6.9 System Configuration Changes


An alarm message like the following appears when a system configuration change (or the possibility of a configuration change) is detected. If the system continues to operate after its configuration has changed, distribution ratios and other data will be totally inaccurate. For this reason, cut-off processing must be done with the system in the state before the change. The following message is displayed to ask you to confirm the processing.

Operation procedure for each case is as follows.

6.9.1 When a system configuration change detected

This alarm message is displayed in cases such as the following.

- ① "Check system Configuration" was made after removing the outdoor and indoor units.
- ② "Check system Configuration" was made after starting the unit and found that it was different from the previous one in configuration.
- * "Configuration" includes not only the number of units and address but also indoor unit capacity, main/sub unit setting, and presence/absence of an electric heater.

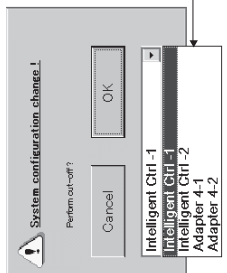


Here you can see the link system where the configuration has been changed.

While this message is visible, no other operations can be performed except **[OK]** and **[Cancel]**.

Touch **[OK]** to perform cut-off processing with the system in the state before the change.

Touch **[Cancel]** if you do not need to perform cut-off processing.

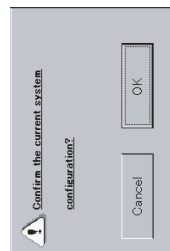

Touch **[OK]** to check the new configuration.

If you select **[OK]** here, the current system configuration is re-checked and the results are confirmed. If you do not need to do this, select **[Cancel]**.

If the system has changed because of a mistake, return the system to its former state and then touch **[Cancel]**. You should also touch **[Cancel]** here if you mistakenly selected **[Cancel]** in the previous message, even though the system cut-off processing should have been done. This returns you to the first alarm message, where you can perform cut-off processing.


While this message is visible, no other operations can be performed except **[OK]** and **[Cancel]**.

6 Using the System

6.9.2 When system configuration may change

This alarm message is displayed in cases such as the following.

- ① The following "Detailed settings" were made from a local remote controller. (for address, extension settings, indoor unit capacity, or presence/absence of an electric heater)
- ② Only confirmation of "Detailed setting" was made from a local remote controller.
- ③ Automatic address setting was carried out for an indoor or outdoor unit.
- ④ An additional indoor or outdoor unit was installed.
- * "Configuration" includes not only the number of units and address but also indoor unit capacity, main/sub unit setting, and presence/absence of an electric heater.

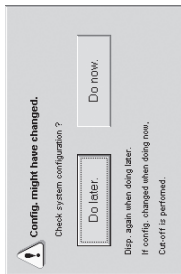

While this message is visible, no other operations can be performed except **[Do later.]** or **[Do now.]**.

When touching **[Do later.]**, this window closes and other screen operations are made possible. However, after a while the message will be displayed again.

Touch **[Do now.]** to confirm whether the configuration has been actually changed. When a configuration change was detected as a result of configuration confirmation, cut-off processing is automatically performed and the post-variation configuration is established. When there is no change in configuration, the screen exits configuration confirmation processing.

For example, imprudently pressing **[Do now.]** while a communication error message is displayed will result in an automatic cut-off processing to establish the current configuration. Therefore, take full care to avoid such a mistake.

When establishing a configuration without making cut-off processing, press **[Do later.]** to once close the screen and perform "Check system Configuration" using the 6-9 screen.

After this, proceed "Perform cut-off?" → "Cancel" → "Confirm the current system configuration?" → "OK" in accordance with "6.9.1. When a system configuration change detected".

When no operation has been made on this screen for twelve hours or more, cut-off and post-variation configuration fixing processing are automatically carried out.

Caution

Imprudent cut-off processing and configuration fixing or neglecting them when necessary may cause a significant inconvenience in control. When this alarm message is displayed, do not operate the system and contact the store where you purchased it or its service agency. This message may be displayed also in inspecting the air conditioner. In such a case inform the person in charge of service of the fact.




8. Intelligent Controller (CZ-256ESMC2)

7 Entering Text and Numbers

This system displays keyboard and numeric keypad windows when you need to enter names and numbers. The numeric keypad window appears when you need to enter numbers, and the keyboard window appears when you need to enter text.

7.1 Entering Numbers

A numeric keypad window like the one shown below appears when you need to enter a number, for example to register a password.

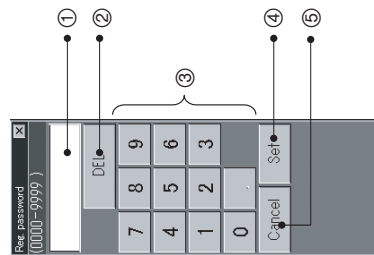

- ① Input field
Displays the number being entered.
- ② DEL button
Deletes digits in the number, from the right.
- ③ Numeric keys
Add the digit shown on the key face to the number in the input field.
- ④ Set button
Confirms the number in the input field.
- ⑤ Cancel button
Clears the numbers entered.


76

7 Entering Text and Numbers

7.2 Entering Text

A keyboard window like the one shown below appears when you need to enter text, for example a tenant name.
To edit an existing text string, touch the character that you want to edit in the input field.

Alphanumeric, lowercase

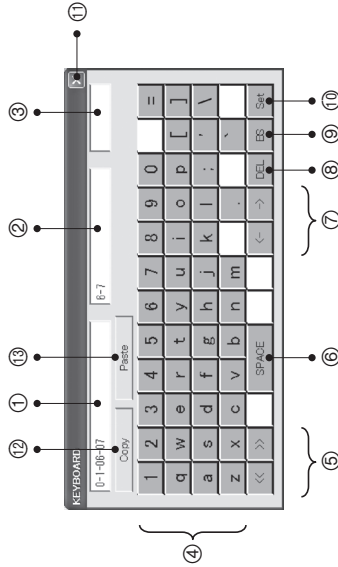

- ① Input field
Displays the text being entered.
- ② Information field
Displays information about the target of the operation (for example, the tenant number when a tenant name is being entered).
- ③ Input mode
Displays the current input mode (type of characters).
- ④ Character input buttons
Input characters.
- ⑤ Input mode selection buttons
Select the type of characters to input.
- ⑥ Space button
Inputs a space.
- ⑦ <- and -> buttons
Move the input cursor to the left and right in the input field.

77

8. Intelligent Controller (CZ-256ESMC2)

8 Connection of External Signals

When connecting external signals, refer to the Installation Instructions (end of this manual) for detailed information about the electrical specifications.

8.1 Pulse Meter Input

You can measure energy usage by connecting pulse meters (gas, fuel, and electricity meters). If you do not need to view information about energy usage, there is no need to install pulse meters.

1) Input locations

The communications connector panel on the side of the intelligent controller or on an optical communication adaptor connected to the intelligent controller:

- P1 (No.7), P-COMM (No.6) Gas meter, fuel meter
- P2 (No.8), P-COMM (No.6) Electricity meter 1
- P3 (No.9), P-COMM (No.6) Electricity meter 2

* The above are factory default settings. If necessary, you can change the type of pulse meter (power meter or gas meter).

See "6.3.5 Making pulse meter settings" for more information.

2) Operation

Each pulse is counted.


The amount of energy consumed per pulse (m³, kWh, liters) must be defined by ["Main 5 Sub 4"](#) Pulse meter setting*.

See "6.3.5 Making pulse meter settings".

7 Entering Text and Numbers

- Ⓜ DEL button
Deletes the character to the right of the input cursor.
- Ⓜ BS button
Deletes the character to the left of the input cursor.
- Ⓜ Set button
Enables the entered character string.
- Ⓜ Close button
Closes the keyboard window.
- Ⓜ Copy button
Copies text displayed in the input field. You can also copy portions of the text by dragging the touch pen over the desired portion.
- Ⓜ Paste button
Pastes the text copied with the Copy button to the input field in which the cursor is currently located.

Alphanumeric, upper case

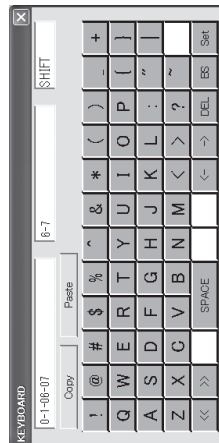

8. Intelligent Controller (CZ-256ESMC2)


8 Connection of External Signals

8.2 All Stop Input

You can stop all connected units automatically by connecting external signals (for example, from fire-alarm detectors).
All stop input is available only for managed ("target") units. It does not affect units which have been designated as not managed ("Not target") or individually operated ("Indiv Op").

- 1) Input location
The communications connector panel on the side of the Intelligent Controller or on an optional communication adaptor connected to the Intelligent Controller:
DI1 (No. 17), DI-COMM (No. 16)
- 2) Operation
While the input is asserted ON, a stop signal is sent periodically (once per minute) to all indoor units.

3) Display

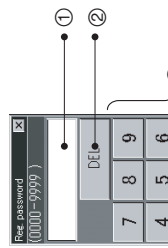

This message disappears when normal status is restored.

8.3 All Start Input

You can start all connected units automatically by connecting external signals.
All start input is available only for managed ("target") units. It does not affect units which have been designated as not managed ("Not target") or individually operated ("Indiv Op").

- 1) Input location
The communications connector panel on the side of the Intelligent Controller or on an optional communication adaptor connected to the Intelligent Controller:
DI2 (No. 18), DI-COMM (No. 16)
- 2) Operation
When inputting ON from OFF, the operation signal will be transmitted to all the indoor units.



When both "All stop input" and "All start input" are set ON simultaneously, only "All stop input" is enabled.

8 Connection of External Signals

8.4 All-Unit Alarm Output

An external signal is output when an alarm or error occurs in any connected unit.
This signal can be used by alarm monitors and other equipment.

- 1) Output location
The communications connector panel on the side of the Intelligent Controller or on an optional communication adaptor connected to the Intelligent Controller:
DO1 (No. 14), DO-COMM (No. 13)
- 2) Operation
The signal goes ON when an alarm or error occurs, and goes OFF when normal status is restored.

8.5 All-Unit Operation Output

An external signal is output when any connected unit is operating.

- 1) Output location
The communications connector panel on the side of the Intelligent Controller or on an optional communication adaptor connected to the Intelligent Controller:
DO2 (No. 15), DO-COMM (No. 13)
- 2) Operation
The signal goes ON when any connected unit (including interface adaptor) is operating, and goes OFF when all units are stopped.
Operation during alarms and errors is included.

8. Intelligent Controller (CZ-256ESMC2)

9 TERMS

This section explains some of the terms used in this manual.

- **Adaptor address (No. 0 set on Intelligent Controller, No. 1 to 7 set on communication adaptors)**
An adaptor address is the address assigned to an optional communication adaptor.
- **Link system address (No. 1 to 2, fixed)**
A link system is a collection of indoor units and outdoor units connected to a single inter-unit control wire. Up to two link systems each can be connected to the Intelligent Controller and to an optional communication adaptor.
- **Outdoor unit system address (No. 1 to 30 for each link system, set on outdoor unit side)**
An outdoor unit system is a collection consisting of one outdoor unit and the indoor units connected to that outdoor unit. A single link system can contain up to 30 outdoor systems.
- **Indoor unit address**
Up to 64 indoor units can be connected in one link system.
The Intelligent Controller system supports up to two link systems connected to the Intelligent Controller only (128 indoor units), or four link systems (256 indoor units) when an optional communication adaptor is connected.
Indoor unit addresses, central control addresses, and unit names are applied to indoor units.
 - **Indoor unit address** (No. 1~for each outdoor unit system, set on indoor unit side)
An indoor unit address is a unique number within an outdoor unit system.
These numbers are assigned to each indoor unit, including units subject to group control. These numbers are the smallest unit of totals calculation and distribution calculation.
 - **Central control address** (No. 1 to 64 for each link system, set on Intelligent Controller and other central control equipment)
A central control address is a unique number within a link system. It is shared with other central control equipment (system controllers, multi controllers, etc.)
This is the same address used in group control.
 - **Unit name** (set on Intelligent Controller)
This is the same name used in group control.
It is the smallest unit of operation, monitoring, and timer operations.
- **Distribution group number (No. 1 to 8, set on Intelligent Controller)**
A distribution group is made up of one or more tenants. The total of the distribution ratios in the group is 100%. The Intelligent Controller system supports up to 8 distribution groups. GHP, PAC, and HOT units cannot be mixed in a single distribution group.
- **Tenant number (No. 1 to 256 set on Intelligent Controller)**
A tenant is a collection that is the object of distribution calculations (or operation and monitoring). It is made up of one or more indoor units. The system as a whole supports up to 256 tenants.
- **Zone number (No. 1 to 128, set on Intelligent Controller)**
A zone is unrelated to distribution. It is a range for performing all-unit operation, monitoring, and timer operation. GHP, PAC, and HOT units can be mixed in a zone. The system as a whole supports up to 128 zones.

82

10 Calculating air conditioner distribution

The Intelligent Controller calculates energy (electricity and gas) distribution ratios utilizing the accumulated working time (T/S ON/OFF) or the capacity value of the indoor unit.
* T/S: Thermostat

10.1 Calculating simple distribution

Parameters as listed below are used to calculate simple distribution:

- **RHHi**: accumulated operation time for indoor unit i (High fan speed)
 - **RLi**: accumulated operation time for indoor unit i (Medium fan speed)
 - **SHHi**: T/S ON accumulated time for indoor unit i (High fan speed)
 - **SHi**: T/S ON accumulated time for indoor unit i (Medium fan speed)
 - **SLi**: T/S ON accumulated time for indoor unit i (Low fan speed)
 - **PI**: Capacity of indoor unit i (in kW)
 - **k**: Weighing factor for power consumptions as T/S ON and OFF
 - **aHH**: Weighing factor for High fan speed
 - **aH**: Weighing factor for Medium fan speed
 - **aL**: Weighing factor for Low fan speed
- * Accumulated operation time = T/S ON accumulated time + T/S OFF accumulated time

Index of indoor unit i power/gas consumptions is calculated.

Here, "TEI" and TGI" denotes the power and gas consumption indexes of the indoor unit i, respectively.

When "Object of power distribution calculation" is "T/S ON + OFF time":

The power consumption index is calculated using "Accumulated operation time" and "T/S ON accumulated time"; the gas consumption index using "T/S ON accumulated time".

- For GHP:

$$TEI = (RHHi \times aHH + RLi \times aL) \times Pi \quad \text{①}$$

$$TGI = (SHHi \times aHH + SHi \times aH + SLi \times aL) \times Pi \quad \text{②}$$
- For PAC:

$$TEI = \left\{ (RHHi \times aHH + RLi \times aL) \times Pi + (SHHi \times aHH + SHi \times aH + SLi \times aL) \times Pi \right\} / k + TGI = 0 \quad \text{③}$$

$$TGI = 0 \quad \text{④}$$

When "Object of power distribution calculation" is "T/S ON time":

Both the power and gas consumption indexes are calculated using "T/S ON accumulated time".

- For GHP:

$$TEI = (SHHi \times aHH + SHi \times aH + SLi \times aL) \times Pi \quad \text{⑤}$$

$$TGI = (SHHi \times aHH + SHi \times aH + SLi \times aL) \times Pi \quad \text{⑥}$$
- For PAC:

$$TEI = (SHHi \times aHH + SHi \times aH + SLi \times aL) \times Pi \quad \text{⑦}$$

$$TGI = 0 \quad \text{⑧}$$



- Weighing by wind speed is not carried out for models with their speed set only as High or only as High and low.
- Distribution ratios are not calculated when you have chosen not to perform distribution ratio calculations. (See 6.3.2 Setting the date, cut-off date, and distribution ratio calculation method)

83

8. Intelligent Controller (CZ-256ESMC2)

10 Calculating air conditioner distribution

Calculate electricity/gas usage index of entire distribution group

Let "TOTALe" be the electricity usage index of entire distribution group, and let "TOTALg" be the gas usage index of entire distribution group. Let "m" be the number of indoor units in the distribution group.

$$\begin{aligned} \text{TOTALe} &= \text{TE1} + \text{TE2} + \dots + \text{TE}_m \\ \text{TOTALg} &= \text{TG1} + \text{TG2} + \dots + \text{TG}_m \end{aligned}$$

Calculate electricity/gas usage distribution ratio of indoor units

Let "REi" be the electricity usage distribution ratio, and let "RGi" be the gas usage distribution ratio.

$$\begin{aligned} \text{REi} (\%) &= \text{TEi} / \text{TOTALe} \times 100 \\ \text{RGi} (\%) &= \text{TGi} / \text{TOTALg} \times 100 \end{aligned}$$

Calculate electricity/gas usage distribution ratio of tenant j

Let "NEj" be the electricity usage distribution ratio of tenant j, and let "NGj" be the gas usage distribution ratio of tenant j. Let "n" be the number of indoor units of tenant j.

$$\begin{aligned} \text{NEj} (\%) &= \text{RE1} + \text{RE2} + \dots + \text{RE}_n \\ \text{NGj} (\%) &= \text{RG1} + \text{RG2} + \dots + \text{RG}_n \end{aligned}$$

Distribution ratios are rounded at the third decimal place and shown to the second decimal place.

* The following table shows which of the formulas ① to ⑧ on the previous page are used by the two distribution modes.

	T/S ON+OFF time distribution mode		T/S ON time distribution mode
	①	②	⑤
GHP	Electricity	②	⑤
	Gas	③	⑥
PAC	Electricity	③	⑦
	Gas	—	—
HOT	Electricity	③	⑦
	Gas	②	⑥

See "About distribution ratios in 12 Supplementary Information-2".



See "About distribution ratios and energy usage" in "12 Supplementary Information-2".

10 Calculating air conditioner distribution

10.2 Calculating air conditioner energy usage

Calculate electricity/gas usage of entire distribution group

Electricity usage for distribution group = Pulse meter (electricity) count value × Pulse unit amount (kWh)

Gas usage for distribution group = Pulse meter (gas) count value × Pulse unit amount (m³)

Calculate electricity/gas usage of indoor units

Electricity usage for indoor unit = Electricity usage for distribution group × Electricity consumption distribution ratio for indoor unit

Gas usage for indoor unit = Gas usage for distribution group × Gas consumption distribution ratio for indoor unit

The usage is **rounded** to two decimal places and displayed.



8. Intelligent Controller (CZ-256ESMC2)


11 Supplementary Information-1

★ IMPORTANT ★

- Microsoft and Windows CE are trademarks of Microsoft Corporation in the United States and other countries. Other products names are trademarks or registered trademarks of their respective holders, or copyrights of their respective holders.
- Duplication of all or part of the software and documentation of this product without the express consent of the holder of the rights to the above, and transfer of the software to another party, are prohibited by law.
- We will not be liable for any loss, lost profits, or any incidental damages due to use of this product or the supplied software. We will not be liable to any claim based on a third-party claim. Even in the case of errors in calculations of distribution ratios, and so on, we will not be responsible for any remedies.
- The software supplied with this product may not be used on any other equipment.
- This product and the supplied software are subject to change without notice. The contents of this manual are subject to change without notice.
- We will not be liable for any violation of the rights of any third party stemming from use of information in this manual, or for violation of other rights.

10 Calculating air conditioner distribution

10.3 Calculating loaded distribution

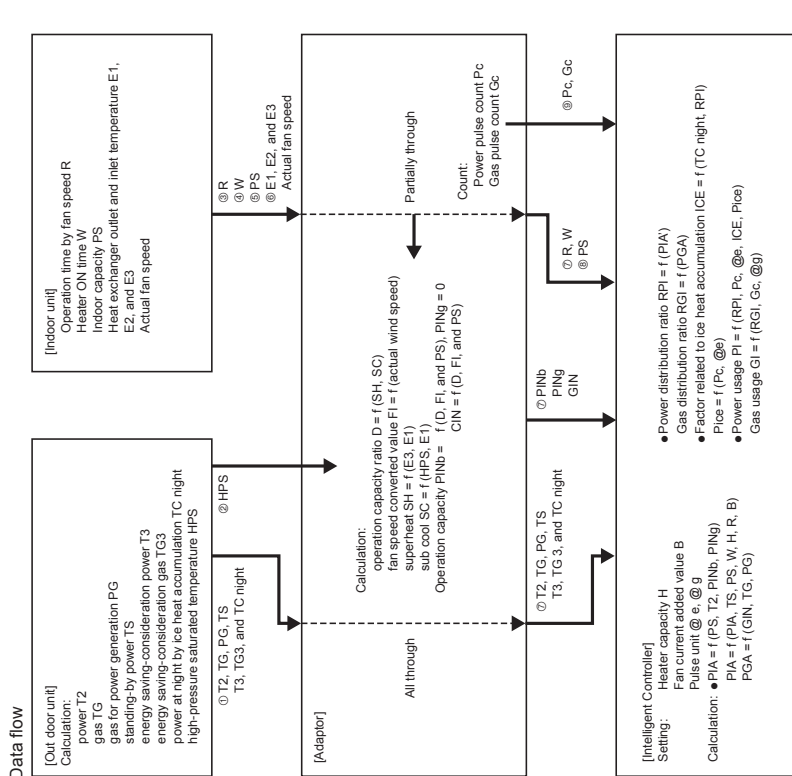

* "f" means function. For example:
 Operation capacity ratio $D = f(SH, SC)$
 means that the operation capacity ratio is calculated using superheat SH and sub cool SC.

Calculation parameter	Simple distribution	Loaded distribution
Indoor unit capacity (kW)	○	○
Indoor unit operation time	○	○
Indoor fan speed ratio (high, medium, low)	○	○
Outdoor unit operation ratio	○	○
(Power: detected using CI, Gas: neuro-calculation)	○	○
Standing-by power and various heater powers	×	○
Indoor unit loaded ratio (Calculated using the values detected by multiple internal thermo sensor of indoor unit)	×	○
(Degree of superheat)		○

○ parameters considered in distribution calculation
 × parameters not considered in distribution calculation

8. Intelligent Controller (CZ-256ESMC2)

12 Supplementary Information-2

- Powering the system off
Always use the following procedure to power the Intelligent Controller off. Otherwise, the internal files may become corrupted and the system may become unable to be booted.
Touch the [Power off] button in the "Other settings" screen (Main Menu).
- Touch the [OK] button in the message box which appears to ask if you want to exit the program.
Wait until a message appears to inform you that "It is now safe to turn off the Intelligent Controller." (*) and then power the system off.
(*Several minutes may pass before this message appears.)
- Caution for when backup data is restored
When the system reboots immediately after a restore, "Converting data" may continue to be displayed for a long period of time (estimated maximum period of time: 1 hour 30 minutes). Be sure not to turn off the power of the unit during that time. The internal files may become corrupted and the system may become unable to be booted. If the system becomes unable to be booted, the internal data needs to be restored so ask your dealer or service provider to restore the data.
- Air conditioner limitations
Some types of air conditioners are limited in the settings which they support.
For example, cooling-only air conditions cannot be set to heating.
Floor-type models typically support only high fan speeds.
Ceiling mounted models do not have flaps, and therefore cannot change the fan direction.
You should be aware of the limitations of the air conditioner models in your system.
For more information, contact your dealer or service provider.
- Standby power (for simple distribution)
The Intelligent Controller performs distribution calculations on the basis of indoor unit operating time. Therefore it does not count power consumed while under are stopped (on standby).
For example, if no units are operated over the course of a month, no standby power consumption is distributed to any tenant. However if a unit is operated for even one minute, then all of the standby power consumption is distributed to the corresponding tenant.
For loaded distribution, distribution is made with standing-by power added.
- W Multi GHP outdoor unit data is displayed as "Reference unit".
Because the reference unit changes depending on operating conditions, the data displayed by the Intelligent Controller also changes.
Outdoor unit data is data such as "number of operations" and "operating time".
- Only an alarm code is displayed in the notification bar and alarm log display.
The content of an alarm can vary for different models, even if the alarm code is the same. Consult the documentation of the various models to determine the content of the alarm.
- Because of data transmission delay, the totals and distribution data displayed by the Intelligent Controller for different time zone (regular hours, out of hours, special days) may not be counted in a completely accurate fashion.
For details, see "6.6.3 Time zone totals and distribution".
- Filter cleaning signs and oil exchange signs are updated every 7 minutes (maximum).
Operating time totals and distribution data are updated every 18 minutes. Electric heater ON time is updated once an hour.
- Cut off processing for the previous day is performed every day for a few minutes after 00:00 a.m. The system will not respond to user input during this processing.

12 Supplementary Information-2

- After the settings of an indoor unit are changed from the Intelligent Controller, the display may revert temporarily to the former settings. This is more likely to occur with all-unit operations. The cause is communications delay, not any malfunction in the system. If you wait a few minutes, the display will show the correct information.
- Errors occurred while operating during a thunder storm or because of electromagnetic interference.
Power the Intelligent Controller off and then on again. (Refer to "Powering the system off" stated on the previous page)
As a rule, the Intelligent Controller should be powered off only in cases such as the above.
Correct management of air conditioning is not possible when the Intelligent Controller is powered off.
- About distribution ratios and energy usage
The formulas used by the Intelligent Controller to calculate air conditioning distribution ratios and energy usage are only approximations. They normally do not yield the same amounts that appear on bills from electric and gas utilities.
Depending on operating conditions, there may be a margin of error between distribution ratios and actual air conditioning amounts.
There may also be a small margin of error between the following, due to the rounding algorithms used in distribution ratio calculations.
 - "Distribution ratios of tenants in a group" and "100.00%"
 - "Total of distribution ratios" and "Overall tenant distribution ratio"
 - "Total of usage by each tenant" and "Total usage indicated by pulse meters"
 - "Total of usage during regular hour, out of hours, and special days time zones" and "Total of all hours time zones"
 The Intelligent Controller does not measure energy use directly. It calculates energy distribution ratio based on the inferred load ratio of each indoor unit. The results of the calculations should be regarded as approximations.
- About operating time totals
Air conditioning distributions and air conditioner operating times are calculated only for periods in which the Intelligent Controller is powered on and in which there are no communications errors between the Intelligent Controller and the air conditioners.
Therefore, no totals are accumulated for times when the Intelligent Controller is powered off or in which communications errors occur.
You should be aware that errors in distribution ratios will become larger if conditions like the above continue for a longer period of time.
 - Setting the current date and time
The current date and time should be set on a regular basis, since the system clock can gain or lose up to about two minutes per month.
 - Touch panel operations are not possible at the following times.
 - While the system is booting
 - During connection checks
 - Under cut-off processing
 - During PC Card access (backup, restore)
 - About passwords
Passwords should be recorded and saved in a safe place. They should never be disclosed to third parties.
If you forget your password, contact your dealer or service provider.
- Flickering on the screen
This may occur occasionally. It is due to data refreshing and is not a malfunction.

8. Intelligent Controller (CZ-256ESMC2)

13 Troubleshooting

Before requesting service, check the following items.
Do not attempt to service the Intelligent Controller yourself. Doing so can be dangerous.

Symptom	Cause
Nothing appears on the screen when the computer is turned on. Timer operation does not work.	<ul style="list-style-type: none"> Is the power cord connected? Is the power switch set to on? Is timer operation set to the target unit? Operation of a selected timer does not start if the setting is not set the target unit. Does the setting match the current date and time? If the date and time do not match, operation can start at an unexpected time. (See "6.3.2 Setting the date, cut-off date, and distribution ratio calculation method")
The distribution ratio is always 100%.	<ul style="list-style-type: none"> Check the group settings and tenant settings. Distribution rate calculations always result in 100% if there is only one tenant registered in a distribution group, or if there is only one indoor unit in a tenant.
The power goes off at odd times.	<ul style="list-style-type: none"> The screen may be blank because of the power-saving auto off function. The Intelligent Controller is still powered on. Touch the screen to restore the display. Regardless of the selected auto off time, the screen may be turned off when the Intelligent Controller boots.
There is an alarm message in the notification bar at the bottom of the screen that will not go away. Backing up to a PC Card does not work.	<ul style="list-style-type: none"> The message displays the unit where the alarm occurred, and the alarm number. Inform your dealer or service provider about the content of the message. Data can be backed up only to the special PC Cards (option) for the Intelligent Controller. Backup to other PC Card types is not possible.
It takes a long time after an operation for the screen to be updated.	<ul style="list-style-type: none"> A certain amount of time may be required depending on the state of communications with the connected air conditioners. Please wait until all of the information is received.
LCD display	<ul style="list-style-type: none"> In rare cases there may be a dot on the screen which is always on or always off. This is not a malfunction. Due to the nature of LCD displays, there may be some color bleeding in certain areas because of variations in temperature and so on.
Nothing happens when an operation button is pressed.	<ul style="list-style-type: none"> Over extended use, the touch positions and display positions on the touch panel may get out of alignment. (→ "6.8.9.7. Calibrating touch panels")
When local remote control operation is prohibited on the Intelligent Controller, the Intelligent Controller is not able to start/stop operation of a malfunctioning air conditioner.	<ul style="list-style-type: none"> Emergency operations until our service person arrives. Power off the Intelligent Controller and externally installed communication adaptor, re-power on the indoor unit. Operation with the local remote control will be possible. However, this cannot be done in a remote control free system.
A power outage occurred. When it ended, the equipment did not come on automatically according to program timer settings.	<ul style="list-style-type: none"> The Intelligent Controller does not power on equipment automatically by program timer after a power outage. The setting for the next programmed time will be executed when the time arrives.
The Intelligent Controller cannot detect a single indoor unit. Or it cannot find all of them.	<ul style="list-style-type: none"> Try using the "Check configuration" button in the "Other settings" screen (Main 6 Sub 9).

12 Supplementary Information-2

- About interface adaptors
You can use interface adaptors to connect equipment that can be turned on and off (fans, room air conditioners and so on) to the Intelligent Controller.
However, note that the following limitations apply.
For details, refer to the documentation of the equipment or contact your dealer or service provider.
- ▲ Central control is supported for the following operations only.
 - Start/stop
 - Remote control prohibition (start/stop only)
 Timer settings are supported, but settings other than "start/stop" and "remote control prohibition" are ignored. Remote control prohibition is possible only when prohibition signal output from the Interface adaptor has been connected to the equipment. Even in this case, the only operations that can be prohibited are start and stop.
- ▲ For each screen from (Main 1 Sub 1) to (Main 1 Sub 9), it appears in light purple during the ON operation.
- ▲ Alarm display
Alarm details are not shown.
The "C12" code is displayed (meaning Interface adaptor all-unit alarm).
However, this is possible only when a Interface adaptor alarm input signal has been connected.
- ▲ About air conditioning distribution
 - ① Indoor unit fan speed data
Total operating times by fan speed are fixed at high speed. (Units are treated as if they always operated at high speed, even if the thermostat ON signal is connected to the unit.)
 - ② Electric heater ON time
Total electric heater ON time is not displayed.
 - ③ Indoor unit capacity values
These cannot be read automatically. Set them as kW values in the "I/D unit settings" screen (Distribution is not performed if they are not set.)
 - ④ Product types
When connected via Interface adaptors, the system cannot distinguish PAC and GHP units. You need to set the type as well when you set the indoor unit capacity.
(Refer to "Tenant name/Distribution group" screen (Main 2 Sub 3))
 - ⑤ This applicable only to simple distribution. No loaded distribution can be made.
- ▲ As long as it conforms to the contact specifications of the Interface adaptors, any type of equipment can be connected to the Intelligent Controller. However, you should avoid connecting equipment whose operation can have grave consequences for life or property.
- When only one centralized control unit is installed in a system without remote controller, if the centralized control unit is damaged, the air conditioner(s) may become inoperable, or other troubles may occur. To avoid this problem, we recommend that you install multiple centralized control units.
- If the indoor unit address is changed and replaced with another indoor unit address that has a different number after starting distributed operation, distribution calculations may become incorrect causing malfunctions to occur. Please note that we shall not be responsible for compensation in such cases.

8. Intelligent Controller (CZ-256ESMC2)

13 Troubleshooting

Symptom	Cause
One of the following messages is displayed and the unit does not start. <ul style="list-style-type: none"> • Application error !! • DiskErr • CF error !! 	<ul style="list-style-type: none"> • Contact the store where you purchased the system or our service agency.
A message, "Diskxx access error", is displayed. (xx is a number from 1 to 4)	Press the [Check] button to close, and press [Reset] to the left of the clock display. If the same message appears again, consult your local dealer or service representative.

14 Maintenance

- Unplug the power cord before cleaning the Intelligent Controller.**
 The system has high-voltage connectors and other dangerous components. Always power the system off and unplug the power cord before cleaning it.
- Use a neutral solvent**
 To clean the control panel and touch panel, use a soft cloth slightly moistened with a neutral solvent. Do not use volatile liquids such as benzene or thinner, and do not use polishing power or pesticides. Doing so can damage painted surfaces and the surface of the touch panel.
- Avoid direct contact with water**
 Do not allow water to contact the product directly. Insulation will be impaired, which may result in damage or electrical shorts.
- Do not disassemble**
 Do not disassemble the Intelligent Controller. Doing so is extremely dangerous. It may damage the unit or cause electrical shock.
- Check the mounting of components**
 Several times a year, check to make certain that the mounting of components such as the control panel has not been weakened by rust or corrosion.

8. Intelligent Controller (CZ-256ESMC2)

15 Specifications

15 Specifications

Product number	CZ-256ESMC2	
External dimensions	(H) 240 · (W) 280 · (D) 138 mm	
Method of installation	Front door of control panel	
Maximum number of connectable units	Maximum 128 air conditioners (indoor units) Maximum 256 air conditioners (indoor units) with communication adaptor connected	
Timer precision	± Approx. 2 minutes/month (normal temperature)	
Timers	Setting unit	1 minute
	Operation	50 times/day 50 types of daily timer / 50 types of weekly timer
	Program cycle	1 week
Temperature / humidity ranges for use	5°C to 40°C / 20% to 80%	
Display	6.5-inch TFT color LCD display (640 x 480 pixels), with backlight	
Power requirements	Single-phase 100-240 V ~ 50/60 Hz	
Power consumption	Max. 30 W	
Weight	3.4 kg	


8. Intelligent Controller (CZ-256ESMC2)

16 Installation (Electric) and Service Instructions

3 Wiring

Always shut off the power supply (breaker) before installing or uninstalling.

Connection terminals

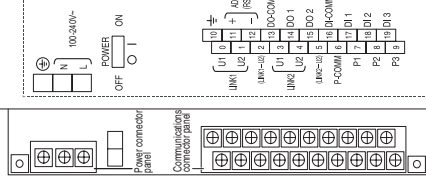

(1) Power supply connection

Connect the power supply to the commercial power mains (100 to 240 V AC), using a dedicated circuit. Connect the power supply lines to the L and N power supply terminals (the power supply neutral to the N terminal). Connect an earth ground line to the PE power supply terminal.

Attach the power supply terminal board cover. Firmly secure the power lines using the supplied cable tie.

(2) Signal connection


- Connect indoor and outdoor signals using 0.5 - 2.0 mm² two-conductor cable.
- Overall length of each signal line should be 1 km or less.
- Use the shielded wire for inter-unit control wiring.
- Do not run signal lines through the same conduit as power supply lines, use the same cable as the power supply, or run close to the power supply lines (maintain at least 30 cm separation, if cabled outside the control box).
- Do not run the LINK1 and LINK2 signal lines through the same conduit. Use the same cable for wiring, or run the signal lines close together.
- Fasten the shield wire of the inter-unit control wire (U1-U2).

Terminal names and uses

- ADAPT +/- : Communication adaptor control wire (RS-485)
- LINK 1/2 : Inter-unit control wire (HBS)
- P2 - 3 : Pulse meter input (Gas flow meter, fuel meter)
- D11 : All stop input
- D12 : reserved
- D13 : reserved
- DO 1 : All alarm output
- DO 2 : All operation output

Basic wiring diagram


Wire up the communication adaptor control wire and inter-unit control wire as shown in the figure below.

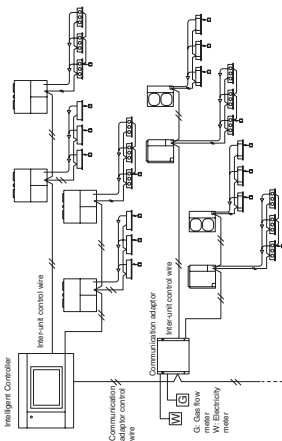

* When connecting link systems (inter-unit control wires), always connect beginning with LINK1 and LINK2 on the Intelligent Controller. Up to 4 link systems can be connected.

16 Installation (Electric) and Service Instructions


4 Connecting to external equipment

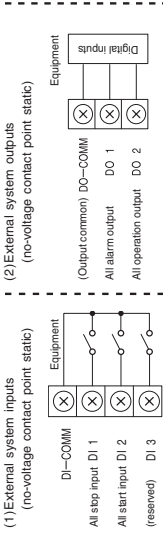


- Keep the input and output signal line lengths to under 20 meters. For distances greater than this, install a stand-alone communication adaptor, or use a relay.
- For use in areas that may be susceptible to electrical noise, use two-conductor shielded cable (with one line grounded), with a cross-section of 0.5 mm² or greater.
- Do not apply external voltages to the input terminals.
- The input terminals use a sensing current of about 10 mA at 5 V DC.
- The output terminal allowable contact voltage and current are 30 V DC, 0.5 A.

5 Power switch

The Intelligent Controller has a power switch. If the LCD is blank after connecting power, check the position of the power switch.

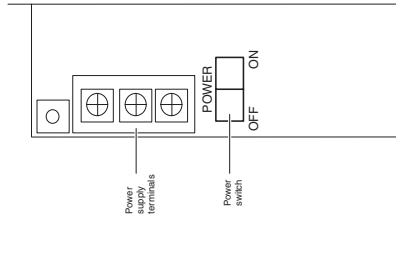

6 Circuit board diagram

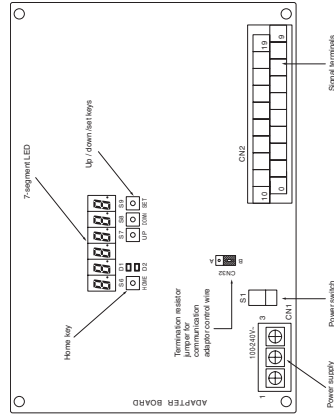


* Ordinarily, there is no need to change any settings on the Intelligent Controller board.

7 Verify the system configuration, make necessary settings


- ① Turn on power to all air conditioner units.
- ② Turn on power to the Intelligent Controller.
- ③ Set the date and time on the Intelligent Controller and verify the system configuration.
- ④ Following the display on the Intelligent Controller, verify the number of units connected.
- ⑤ Perform the necessary settings. **Be sure to set the central control address.**
- * See the Operation Manual for details.

8 Educating the customer


- Give the Operation Manual to the customer.
- Explain the operation to the customer, following the explanations given in the Operation Manual.

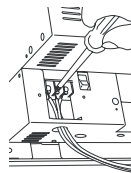

Power supply terminal board cover

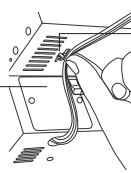

Cable tie

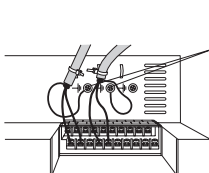

Use the screw when connecting the shield for the inter-unit control wiring to ground.

Wiring procedure

- Inter-unit control wire (no polarity) : Connect signal terminals 0 and 1 (LINK1) to the inter-unit control wire terminals of an indoor or outdoor unit. If using two link systems for connection, connect signal terminals 3 and 4 (LINK2) in the same manner.
- Communication adaptor control lines (note + and - polarity) : Up to seven external communication adaptors can be connected to the control unit (see figure at left). However, a maximum of four links is supported. Be sure to follow the communications adaptor installation instructions when connecting the adaptors. Make sure that power lines are not connected to the communication adaptor terminals or inter-unit control wire terminals.
- * If the power voltage is accidentally applied to the inter-unit control wire terminals, a fuse will blow to protect the controller board. If this happens, disconnect the power line, and connect the inter-unit control wire to the spare U2 terminal. (The other signal line can stay connected to the U1 terminal.) The spare U2 terminals are right next to the main U2 terminals.

Use terminal 2 (LINK1-U2) instead of terminal 1. Use terminal 5 (LINK2-U2) instead of terminal 4.

8. Intelligent Controller (CZ-256ESMC2)

Memo

Panasonic Corporation

8. Intelligent Controller (CZ-256ESMC2)

2. Access and Operation by Web Browser

Access and Operation by Web Browser

Accessing the Intelligent Controller from your computer allows you to monitor/operate air-conditioning equipment using a Web browser.

1. Computer Environment Requirements

In order to use the web browser of your computer to connect to the Intelligent Controller and monitor/operate air-conditioning equipment, the following environment requirements must be met.

- Supported browser : Internet Explorer 6.0 or later
- Java applet : Sun Microsystems Java Plugin Ver 1.4.2 or later
- Screen resolution : 1024 x 768 recommended

2. Log-in

To log in to the Intelligent Controller, enter the following into the address bar of the web browser:
http://[Intelligent Controller address]/SACWWW/index_[language code].asp

For example, if the Intelligent Controller address is 192.168.0.2 and you want to connect to the English page, enter:

http://192.168.0.2/SACWWW/index_en.asp


If the DNS is used and ID name (device name) of the Intelligent Controller is "WindowsCEO", enter:
http://WindowsCEO/SACWWW/index_en.asp.

The language codes are as follows.

English	: en	French	: fr	German	: de	Italian	: it
Portuguese	: pt	Spanish	: es				
Chinese	: zh	Japanese	: ja	Korean	: ko		

This will cause the web browser to connect to the Intelligent Controller, and a screen such as shown below appears.

Enter the user ID and password set for the Intelligent Controller to log in.

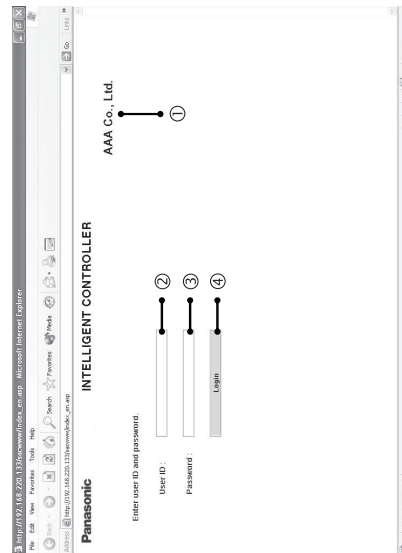

- ① Shows the site name that was set for Intelligent Controller.
- ② Enter the user ID that was set for Intelligent Controller.
- ③ Enter the password that was set for Intelligent Controller.
- ④ Click the **[Login]** button.

Centralized Control System CZ-256ESMC2 INTELLIGENT CONTROLLER

Access and Operation by Web Browser

Contents	
1. Computer Environment Requirements1
2. Log-in1
3. Screen Display and Operation2
3-1. [Each Tenant] Screen2
3-2. [Each Tenant Details] Screen5
3-3. [All Units] Screen5
3-4. Distribution Ratio/Usage: Data Download Screen6
3-5. Alarm Log Screen7
3-6. Mail Send Log Screen9
3-7. Program Timer Screen10
3-8. Tenant Holiday/Timer Special Day Screen12
3-9. Prohibit Remote Control Screen13
3-10. WEB Settings Screen14
4. Supplementary Information18


Thank you for choosing the CZ-256ESMC2 Intelligent Controller.
 Before using the system, be sure to read this manual carefully.

8. Intelligent Controller (CZ-256ESMC2)

3. Screen Display and Operation

3-1. [Each Tenant] Screen

After you log in to the Intelligent Controller, or when you use the menu to select [1. Status/Control : 1. Each tenant], a screen such as shown below appears. (Screen details may differ depending on the user logged in.)

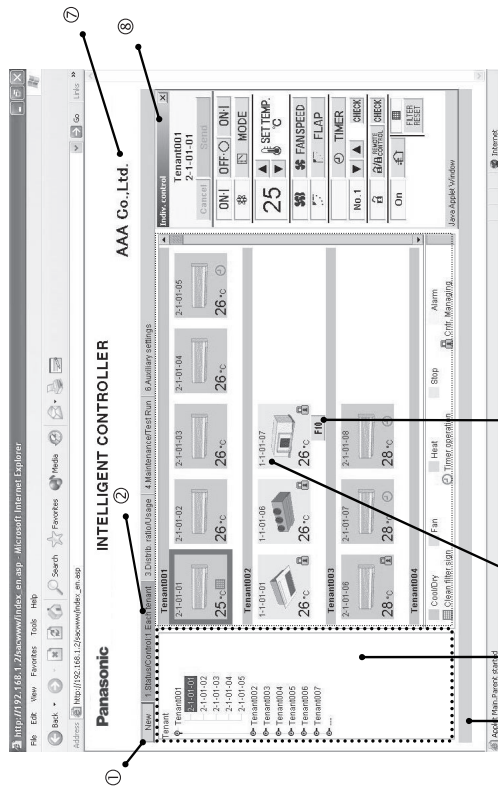

- ① **New** button
Updates the screen to the latest information.
- ② **Menu**
(The menu may differ depending on the user logged in. The following menu appears when logged in as an administrator.)
Lets you select one of the following screens.


- ★ Administrator Menu
 - New
 - 1. Status/Control:1. Each tenant
 - 1. Each tenant
 - 2. Each tenant details
 - 5. All units
- ★ Special User Menu
 - New
 - 1. Status/Control:1. Each tenant
 - 4. Maintenance/Test Run
- ★ General User Menu
 - New
 - 1. Status/Control:1. Each tenant

- ③ **Tenant list**
Shows the indoor unit and tenant structure currently accessed by the Intelligent Controller in a list. Select indoor units by clicking different parts of the list. Clicking on the part highlighted in the screen example above will select the individual indoor unit, while clicking on the tenant name (Tenant001, Tenant002, etc. in the example) will select all indoor units for that tenant. Clicking on the top of the list (Tenant in the example) will select all indoor units of the site. Only the tenants that can be operated by the user permission used to log in (administrator, special, general) are displayed.
- ④ **Icon display area**
Shows icons for indoor units connected to the Intelligent Controller. Clicking on an icon whose frame is shown in reverse will select that unit. Clicking on a tenant name will select that tenant.

If an Interface Adaptor is used, the icon display becomes light purple during the ON operation.

- ⑤ **Notification column**
Shows information about the connection status of web browser and Intelligent Controller, etc.
- ⑥ **Alarm code display**
Shows the alarm code as a tooltip when the cursor is moved over the icon of the indoor unit for which the alarm is occurring.
- ⑦ **Site name**
The "Site name" set in the Intelligent Controller appears.
- ⑧ **Remote control window**
Shows the Remote control window. When this window has been closed, clicking on the indoor unit or making another selection will bring it up again.

- A Status/Control screen section**
Shows the status of the indoor unit and the operation condition.
When a control operation is performed, the background color of the respective field changes and the [Send] button becomes available. Clicking the [Send] button will send all operation steps performed up to this point to the Intelligent Controller. If you instead click the [Cancel] button or perform a step such as selecting another indoor unit, operation steps performed up to this point will be canceled.

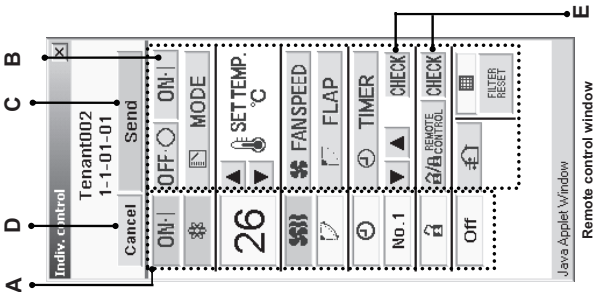


8. Intelligent Controller (CZ-256ESMC2)

B Control section
Shows controls for possible operation steps such as start/stop switching, operation mode selection, temperature selection, fan speed setting, fan direction setting etc. If the logged in user has only general user privileges, buttons for restricted operation steps will be grayed out (inactive).
The [REMOTE CONTROL] and [CHECK] buttons will not be displayed.

C [Send] button
Sends the changes made to the Intelligent Controller.

D [Cancel] button
Cancels the changes made.


E [CHECK] buttons
Used to check the timer setting and remote control prohibition setting status.
(See "3-7. Program Timer Screen" and "3-9. Prohibit Remote Control Screen".)
Clicking the [Return] button will return the display to the previous screen.

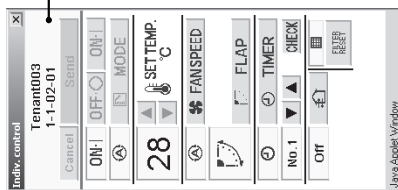

Remote control window for general user


3-2. [Each Tenant Details] Screen

When you use the menu to select [1. Status/Control : 2. Each tenant details], a screen such as shown below appears. (Screen details may differ depending on the user logged in.) Operation principles for this screen are similar to those of the "3-1. [Each tenant] screen".

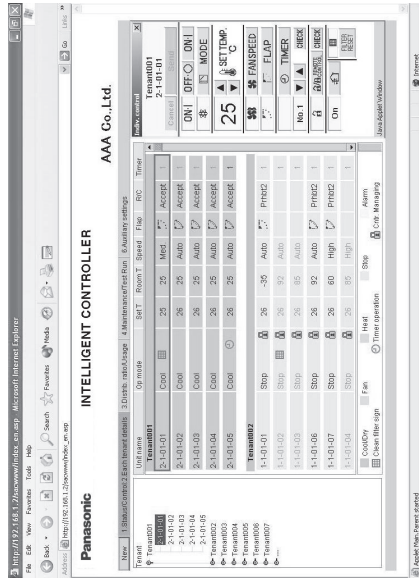

3-3. [All Units] Screen

When you use the menu to select [1. Status/Control : 5. All units], a screen such as shown below appears. (Screen details may differ depending on the user logged in.) A maximum of 256 indoor units are displayed in 1 screen. Operation principles for this screen are similar to those of the "3-1. [Each tenant] screen".

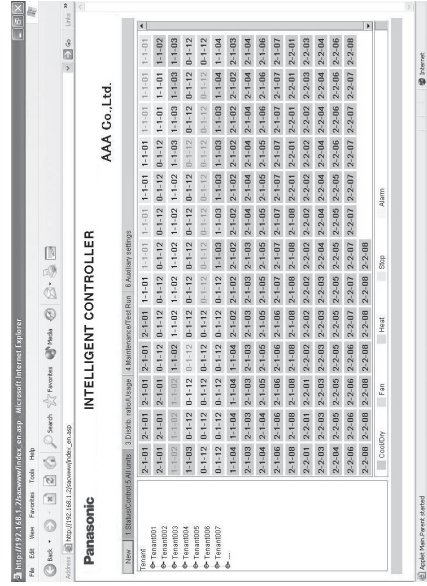


8. Intelligent Controller (CZ-256ESMC2)

3-5. Alarm Log Screen


When you use the menu to select [4. Maintenance/Test Run : 2. Alarm log] while logged in as an administrator or special user, a screen such as shown below appears.
When an indoor unit is selected in the tree section, the previous 14 occurrences are displayed. (Same as the display on the Intelligent Controller.)

"I/D alarm log", "O/D comm. error log", and "Adapter alarm log" can be selected from the drop-down list.

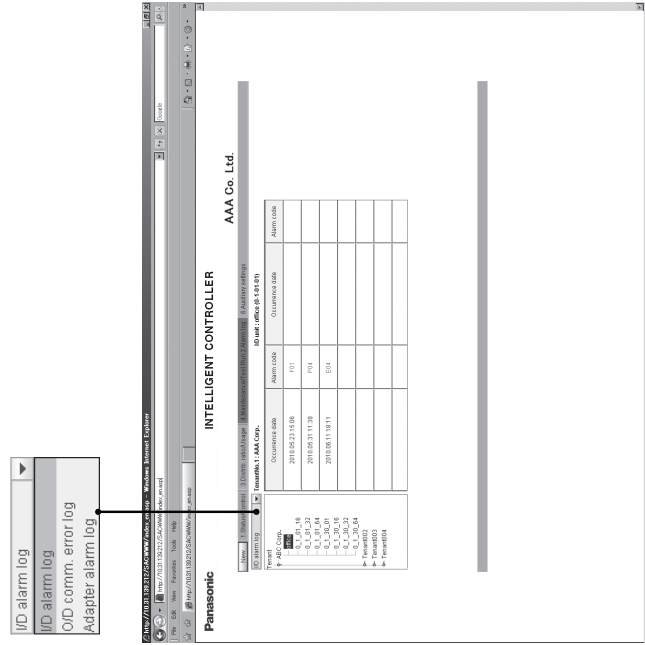

3-4. Distribution Ratio/Usage: Data Download Screen

When you use the menu to select [3. Distrib. ratio/Usage : 3. Download] while logged in as an administrator, a screen such as shown below appears.
You can download files by selecting them and clicking the "Download" button.

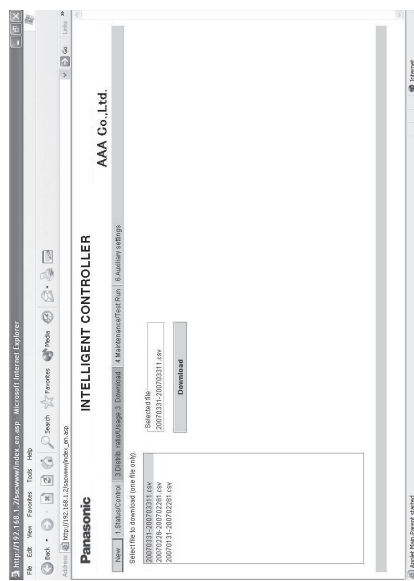


A cut-off data file appears for each piece of cut-off data that appears on the Intelligent Controller unit. Be aware, however, that the dates that appear on the Intelligent Controller unit appear as file names on this screen.

For example, cut-off data that appears as "01/Apr-30/Apr" on the Intelligent Controller will appear as "20070401-200704301.csv" on this screen.


When the following message appears after clicking the "Download" button, select "Open" or "Save".

- "Open" Open the selected CSV file using spreadsheet software.
- "Save" Select a folder and save the CSV file.

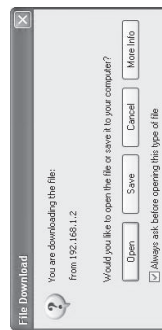


8. Intelligent Controller (CZ-256ESMC2)

[O/D comm. error log] logs the history of errors in communication between the outdoor unit and the Intelligent Controller or the Communication Adaptor.

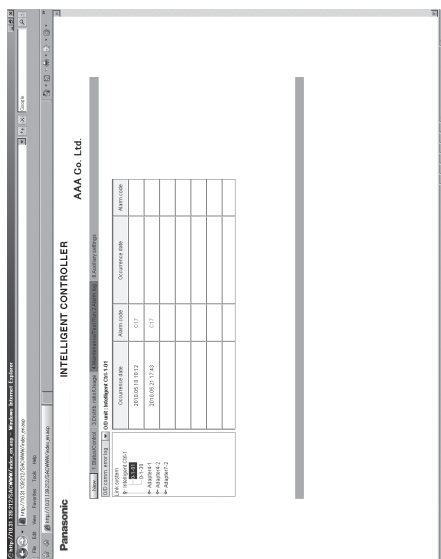


[Adaptor alarm log] logs the history of warnings as determined by the Intelligent Controller or the Communication Adaptor.
(Duplicate adaptor addresses, communication error between the Intelligent Controller and adaptor, etc.)

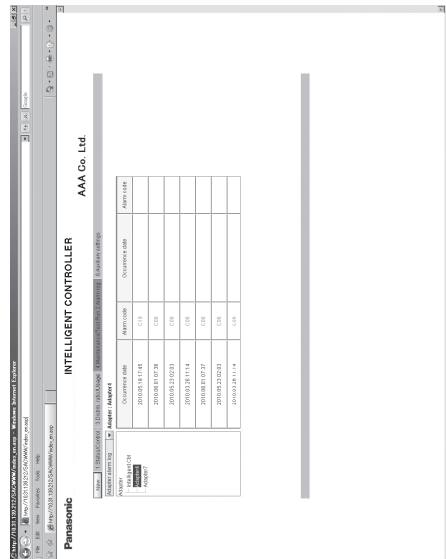

3-6. Mail Send Log Screen

When you use the menu to select [4. Maintenance/Test Run : 4. Sent mail log] while logged in as an administrator, a screen such as shown below appears.

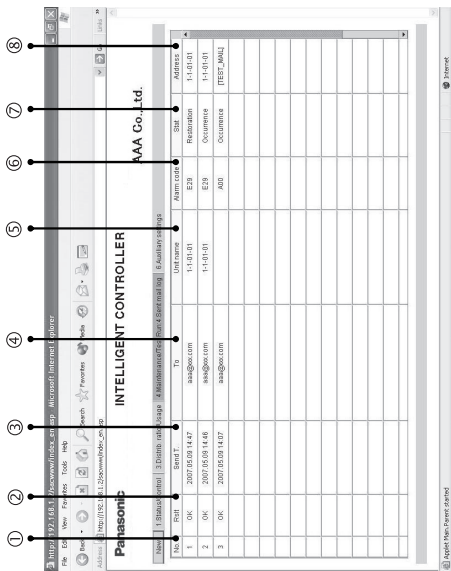

- ① No.
- ② The entry numbers for the sent mail log. With a maximum of 20 (No. 1 to 20) possible entries, the newest entries appear at the top of the list. When the number of entries exceeds 20, entries are deleted starting with the oldest.
- ③ As up to three mail recipients can be specified, up to three log entries can be recorded for one alarm occurrence.
- ④ Rst
- ⑤ "OK" appears when an alarm mail is sent properly, and "NG" appears when sending fails.
- ⑥ Send T.
- ⑦ The date and time the alarm mail was sent (or sending was attempted).
- ⑧ To
- ⑨ The recipient address the alarm mail was sent to. If the address is too long, only part of the address may appear.
- ⑩ Unit name
- ⑪ The name of the indoor unit for which the alarm occurred.
- ⑫ Alarm code
- ⑬ The code for the alarm that occurred.
- ⑭ Stat
- ⑮ "Occurrence" appears when a notification of an alarm occurrence is sent, and "Restoration" appears when a notification of an alarm restoration is sent.
- ⑯ Address
- ⑰ The address of the indoor unit for which the alarm occurred.
- ⑱ The address follows the format "adaptor number - link number - system (outdoor) number - indoor number".
- ⑲ When a test mail is sent, "TEST_MAIL" appears.

8. Intelligent Controller (CZ-256ESMC2)

You can only configure daily timer settings one number (D1, D2, etc.) at a time. If you attempt to switch to D2 settings in the middle of configuring D1 settings, for example, the message "Send for each daily timer." appears.



In such a case, apply or cancel the current settings by clicking the "Send" or "Cancel" button, respectively, before configuring the next daily timer number.


For details on the settings, refer to the operation manual for the Intelligent Controller.

The "Check RC prohib." button appears in the above screen when logged in as an administrator or special user. When you click on this button, a screen such as shown below appears.


Check RC prohib.	Start/Stop	Other mode	Set temp.	Fan speed	Set flap
Prohibit01	X	O	O	O	O
Prohibit02	X	X	X	O	O
Prohibit03	O	X	X	O	O
Prohibit04	O	X	O	O	O

3-7. Program Timer Screen

When you use the menu to select [6. Auxiliary settings : 3. Program timer] while logged in as an administrator, or use the "CHECK" button for timer operation in the remote control window, a screen such as shown below appears. (As non-administrator users can only confirm settings and not configure them, the "Cancel" and "Send" buttons only appear when logged in as an administrator.)

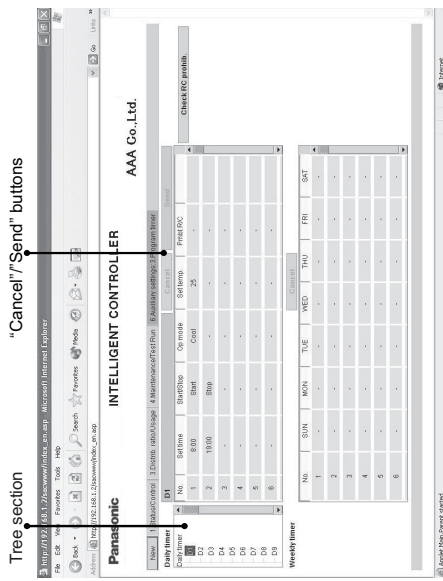

When the daily timer number is selected in the tree section, the current setting status is displayed. Click the desired setting item, and you can select the setting from the drop-down list as shown below.

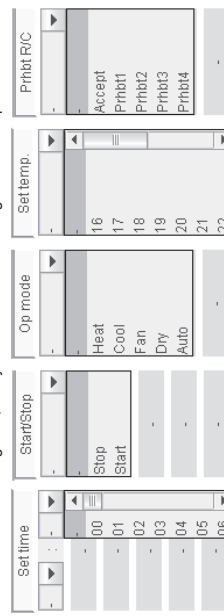


Drop-down lists are also displayed for the weekly timer in the same way as the daily timer number.

8. Intelligent Controller (CZ-256ESMC2)

Screen Display and Operation

3-8. Tenant Holiday/Timer Special Day Screen

When you use the menu to select [6. Auxiliary settings : 4. Ten.Ho./TimerSp.Day] while logged in as an administrator, a screen such as shown below appears.

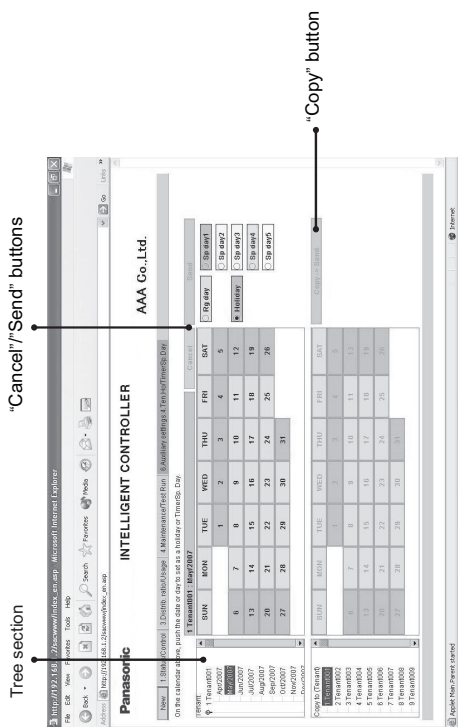

You can only configure tenant holiday/timer special day settings one tenant at a time. If you attempt to switch to Tenant002 settings in the middle of configuring Tenant001 settings, for example, the message "Send for each tenant." appears.




In such a case, apply or cancel the current settings by clicking the "Send" or "Cancel" button, respectively, before configuring the next tenant. To copy changed settings, click the "Send" button and apply the settings before copying.

For details on the settings, refer to the operation manual for the Intelligent Controller.

Screen Display and Operation

3-9. Prohibit Remote Control Screen

When you use the menu to select [6. Auxiliary settings : 5. Prohibit R/C] while logged in as an administrator, or click the "CHECK" button for prohibit remote control in the remote control window, a screen such as shown below appears. (As non-administrator users can only confirm settings and not configure them, the "Cancel" and "Send" buttons only appear when logged in as an administrator.)

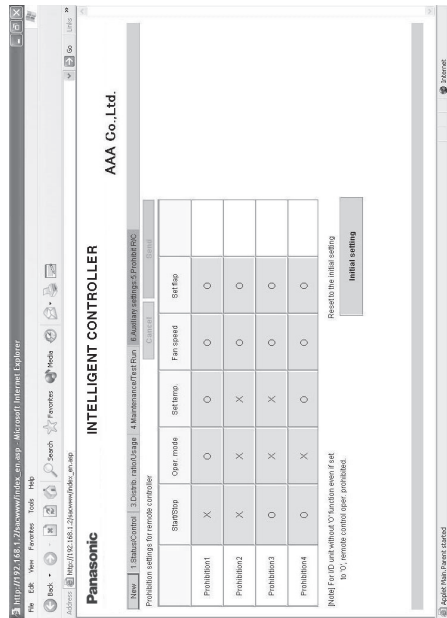

For details on the settings, refer to the operation manual for the Intelligent Controller.

8. Intelligent Controller (CZ-256ESMC2)

When a mail test is sent, the window below appears when the mail settings have been changed.



In this case, either click the "Send" button to enable the mail setting changes or click the "Cancel" button to disable the changes, and then send the mail test again.


If the Intelligent Controller unit is processing (check configuration, cut-off, backup, etc.), this screen cannot be displayed or updated, mail test cannot be sent, and setting change "Send" cannot be performed.

If the Intelligent Controller unit is displaying the initial setting screen (main menu 5) or the Settings screen (main menu 6), setting change "Send" cannot be performed. In either case, the following window appears.



3-10-1. Server details

When you click the "Server details" button from the [WEB settings] screen, a screen such as shown below appears.

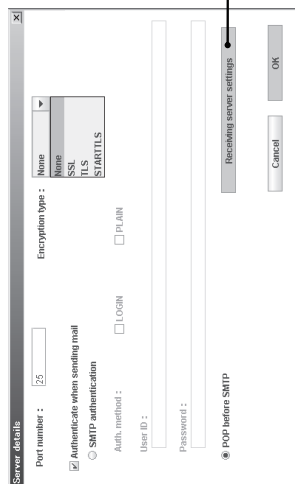


For details on the settings, refer to the operation manual for the Intelligent Controller.

Input values have the following restrictions.

Setting Item	Input Range	Input Character Limitations
Port number	Numbers 0 to 999999	
User ID	Up to 50 alphanumeric characters and symbols	
Password		

3-10-1-1. Receiving server settings

When you click the "Receiving server settings" button from the [Server details] screen, a screen such as shown below appears.

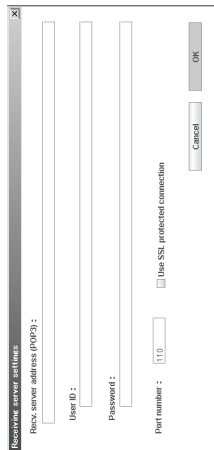

For details on the settings, refer to the operation manual for the Intelligent Controller.

Input values have the following restrictions.






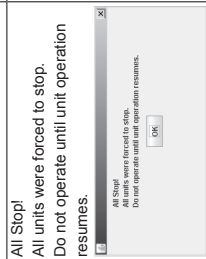
Setting Item	Input Range	Input Character Limitations
Recv. server address (POP3)	Up to 40 alphanumeric characters and symbols	Symbols are "@ _ . , ; : " only
User ID	Up to 50 alphanumeric characters and symbols	
Password		
Port number	Numbers 0 to 999999	

8. Intelligent Controller (CZ-256ESMC2)

4. Supplementary Information

- When connecting the Intelligent Controller via Internet, consider implementing network security measures, such as a firewall.

Error Messages



Error	Cause	Remedy
 <p>System configuration change! (when logged in with Administrator privileges)</p>	The system configuration of the Intelligent Controller has changed.	This is a warning message. Wait a moment and resume operation.
 <p>Intelligent Controller is now processing, please wait. Please try later.</p>	The Intelligent Controller is applying settings. Access from the Web is heavy.	If configuring settings with the Intelligent Controller, switch to a non-settings screen (such as screen 1-1). Wait a moment and resume operation.
 <p>Communication error</p>	The Intelligent Controller was turned off while connected, or a cable was unplugged or the network failure.	Try the operation again. Verify that the Intelligent Controller is turned on, and that the network wiring connections are correct.
 <p>Invalid user ID</p>	The entered user ID is different from the user ID registered on the Intelligent Controller.	Verify the user ID that was registered to the Intelligent Controller.
 <p>Wrong password</p>	The entered password is different from the password registered on the Intelligent Controller.	Verify the password that was registered to the Intelligent Controller.
 <p>All Stop All units were forced to stop. Do not operate until unit operation resumes.</p>	The external all stop input is switched on for the Intelligent Controller unit.	When the external all stop input is changed to OFF, the message disappears. After changing to OFF, wait for the message to disappear.

9. Communication Adaptor (CZ-CFUNC2)

Instructions for the Electrical Installer (CZ-CFUNC2)

For your safety

- Read the following instructions carefully, and carry out secure installation and electrical work.
- The precautions given in this manual consist of specific "Warnings" and "Cautions". They provide important safety-related information. Be sure to strictly observe all safety procedures. The labels and their meanings are as described below.

 Warning	This symbol refers to a hazard or unsafe procedure or practice that can result in severe personal injury or death.
 Caution	This symbol refers to a hazard or unsafe procedure or practice that can result in personal injury or product or property damage.

- * After installation is completed, perform a test run to check for operating trouble. Explain operating procedures to the customer following the central control device Operation Manual and then request the customer to store this Instructions for the Electrical Installer together with the central control device Operation Manual.

Warning

- Be sure to arrange installation by the dealer where the system was purchased or by a professional installer. Electric shock or fire may result if an inexperienced person performs any installation or wiring procedures incorrectly.
- Be sure that this unit is securely installed in accordance with this Instructions for the Electrical Installer. Electric shock or fire may result if any installation or wiring procedures are incorrectly performed.
- Only a qualified electrician should attempt to connect this system, in accordance with the instructions in this manual. Insufficient electrical circuit capacity or incorrect installation may cause electric shock and fire.
- Use the specified cables for the electrical connections, and connect the cables securely. Run and fasten the cables securely so that external forces or pressure placed on the cables will not be transmitted to the connection terminals. Overheating or fire may result if connections or attachments are not secure.
- Depending on the installation conditions and location, an earth leakage breaker may be required. If an earth-leakage breaker is not installed, there is a danger of electric shock or fire.
- The installation location requires the use of a circuit breaker. Failure to use a circuit breaker may result in electric shock or fire.
- Circuit breaker must be incorporated in the fixed wiring in accordance with the wiring regulations. The circuit breaker must be an approved 10-16 A, having a contact separation in all poles.

Caution


- Ground yourself to discharge static electricity before performing any wiring.

1 Installing

Note

- Do not run the indoor/outdoor communication lines, input/output lines, and power cables through the same conduit, or twist those cables together, or place the cables near one another. It can cause malfunction.
- Install the main unit away from any sources of electrical noise.
- Avoid installing in any locations where the unit may come into contact with water, or in any extremely humid locations.
- Avoid installing in any location that is subject to excessive vibration or physical impacts.

- (1) After determining the attachment position, secure the installation hardware as shown in the dimensions diagram. If the included screws will not work for the installation, prepare appropriate screws (such as metric ones) for use at the site.
- (2) Attach the main unit and fasten the installation hardware as illustrated.
- (3) If the installation hardware is loose or appears like it will fall out, remove the upper case on the unit and secure with screws in the failsafe screw holes.

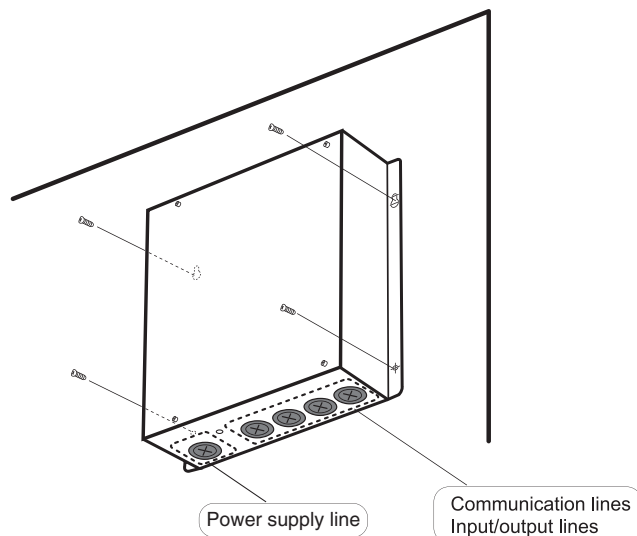


9. Communication Adaptor (CZ-CFUNC2)

2 Wiring


Always shut off the power supply (breaker) before installing or uninstalling the Communication Adaptor.
Remove the two screws at the front of the unit and remove the upper case.

Arrangement of the terminal board and switches

Detailed board illustration

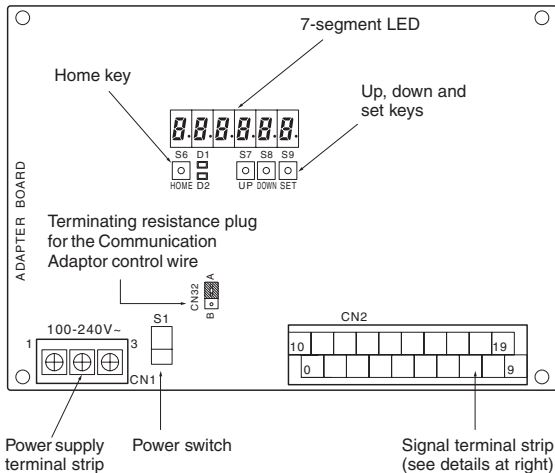

Detailed terminal assembly illustration

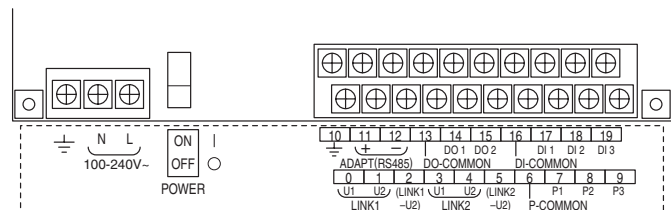


ADAPT +/- : Communication Adaptor control wire (RS-485)
 LINK 1/2: Inter-unit control wiring (HBS)
 P1: Pulse meter inputs (gas flow meter and fuel flow meter) (*)
 P2 and P3: Pulse meter input (power flow meter) (*)
 DI1: All stop input (*)
 DI2: All operation input (*)
 DI3: Reserved
 DO1: All alarm output (*)
 DO2: All operation output (*)
 (*) Input/output function when connecting to the Intelligent Controller

(1) Connecting the power supply

The unit can use AC power sources between 100 and 240 V.
 Connect the power supply to terminals 2 (N) and 3 (L) on the power terminal strip CN1. (Connect the AC neutral end to N.)
 Connect the ground line securely.

(2) Connecting the communication line


- For the Communication Adaptor control wires, use only two-conductor **shielded wire** with a cross-section between 0.5 and 2.0 mm² (MVVS or CPEVS).
- Be sure to ground only one end of the shielding.
- The overall length of each line should be 1 km or less.
- Do not run the communication line through the same conduit as the power supply, use the same cable as the power supply, or run close to the power supply line (maintain at least 30 cm separation).
- Do not run the LINK1 and LINK2 signal lines through the same conduit, use the same cable for wiring, or run them close together.
- Use different communication and power cables so they can be differentiated visually.

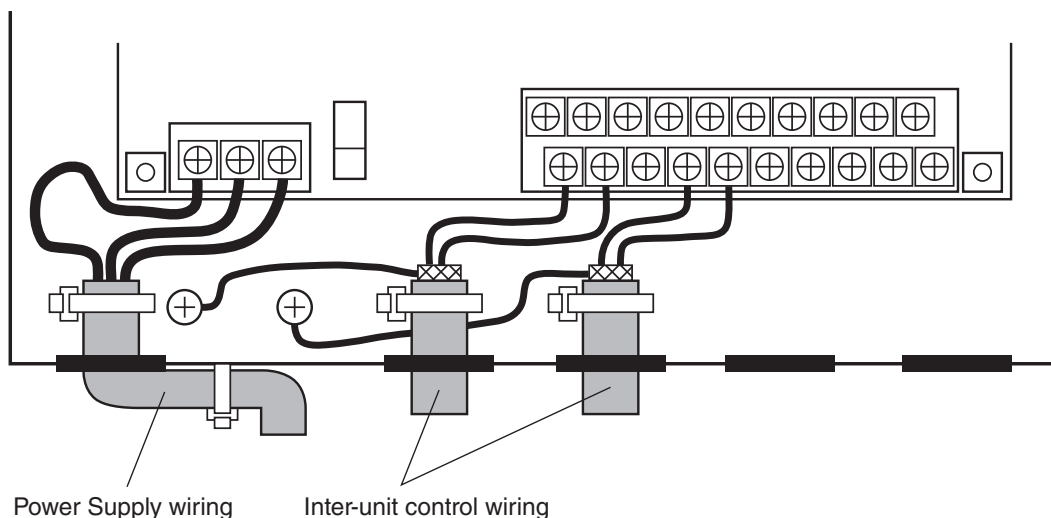

9. Communication Adaptor (CZ-CFUNC2)

Basic wiring diagram (Example using an Intelligent Controller)

Wire up the Communication Adaptor control wire and Inter-unit control wiring as shown in the figure below.

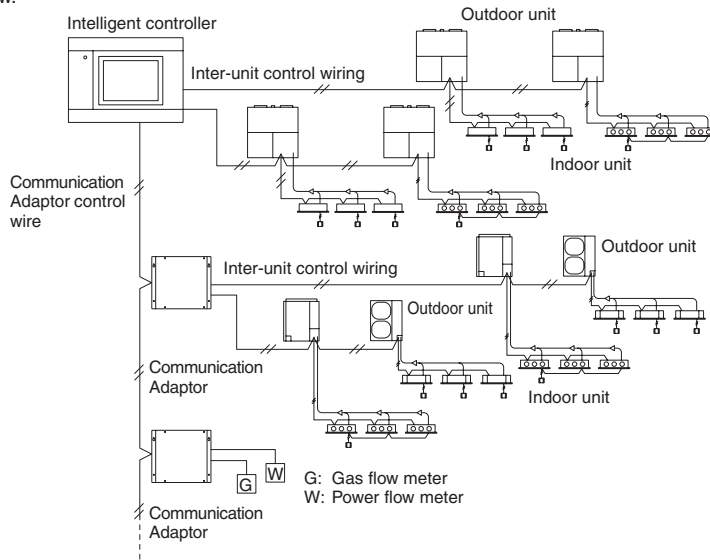


Wiring procedure

- **Inter-unit control wiring**
Use the shielded wire for inter-unit control wiring. Connect terminals 0 and 1 (LINK1) on the Communication Adaptor signal terminal strip CN2 to the inter-unit control wiring terminals of the indoor or outdoor unit. There is no polarity. If connecting two inter-unit control wiring systems, connect terminals 3 and 4 (LINK2) on CN2 in the same manner.
- **Communication Adaptor control wire**
Connect terminals 11 and 12 (ADAPT + and -) on the Communication Adaptor signal line terminal strip CN2 with the same terminals on the other Communication Adaptor. **The terminals have polarity.** Connect so the positive and negative elements are correct. When connecting, **be sure to use crossover wiring, not a branching configuration.**


3 Precautions for the Communication Adaptor control wire

(Some items are duplicated in other sections.)


- (1) The overall length should be 1 km or less.
- (2) The communication wire has polarity. Connect so the positive and negative elements are correct.
- (3) Use only shielded wire. Be sure to ground only one end of the shielding.

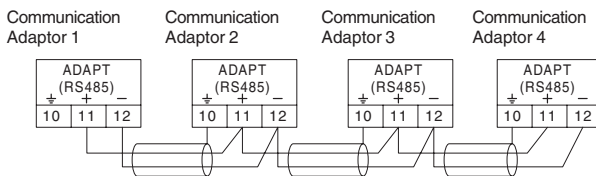

- (4) Be sure to use crossover wiring, not a branching configuration.
 - * Connect the Intelligent Controller to the end of the crossover configuration.

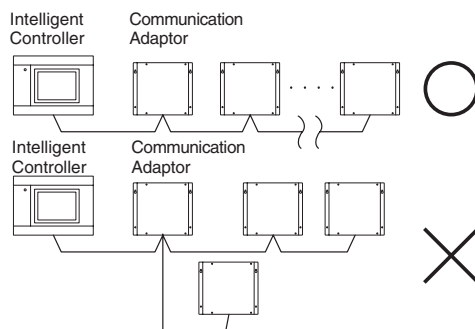

- (5) Change the terminating resistance plug CN32 to the "B" side (with terminal resistance) on the board for the Communication Adaptors (2 of them) at both ends of the configuration.

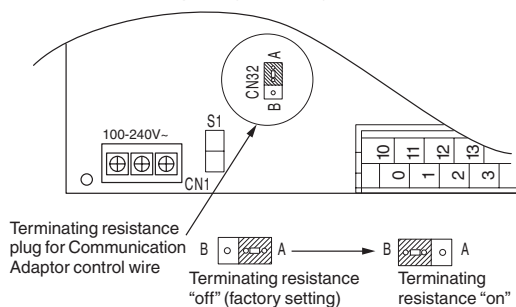


- (6) Do not hook more than 16 units up to the Communication Adaptor. The system you are using (such as an Intelligent Controller) may have further restrictions. Consult the installation manual for your system.
 - * The Intelligent Controller has a maximum restriction of seven units.
- (7) Make sure that high voltage (ex. 230 V) AC lines are not connected to the Communication Adaptor control wire or the inter-unit control wiring terminals.
 - * If high voltage AC is accidentally applied to the inter-unit control wiring terminals, a fuse will blow to protect the controller board. If this happens, disconnect the AC line, and connect the U2 terminal wire of the inter-unit control wiring to the spare terminal. (Do not change the U1 terminal wire.) Spare terminals are located right next to U2.

Change terminal number 1 LINK1-U2
→ to terminal number 2 (LINK1-U2)
Change terminal number 4 LINK2-U2
→ to terminal number 5 (LINK2-U2)

9. Communication Adaptor (CZ-CFUNC2)

4 Setting the Communication Adaptor board

The switches on the board control the adaptor numbers, turn the inter-unit control wiring connection on and off, and control other settings.

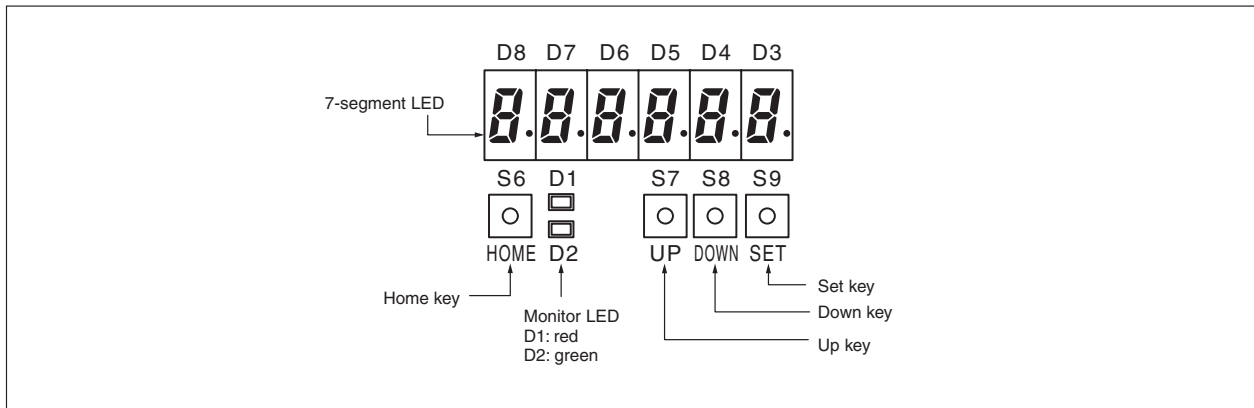

(1) Switch operation overview

Turn on the Power switch(S1) on the board.

① Item selection

Use the and keys to find the desired item, then press the key to select.

② Changing the settings

Use the and keys to change the setting, then press the key to confirm.

Hold down the key for at least two seconds to reset to the default setting (Any settings in progress will be lost.)



(Any settings in progress will be lost.)

(2) Adaptor number setting procedure

① Hold down the key for at least two seconds so the initial display shows as follows:



↓ After 2 seconds



② Press the key five times so the following display appears:



This automatically switches to the below display after 2 more seconds. (Operation is not necessary.)



③ Press the key so the below display appears. (Only the green monitor LED is on.)



④ Hold down the key for at least 1 second so the "00" part blinks, indicating that the setting can be changed. (The green and red monitor LEDs are both on.)

Use the and keys to set the adaptor number.

For example, to set number 3, press the key three times. The following will display:





⑤ Press the key for at least 1 second to confirm. (Only the green monitor LED is on.)

9. Communication Adaptor (CZ-CFUNC2)


(3) Setting the inter-unit control wiring connection on/off



- ① Repeat steps ① to ③ in section (2) "Adaptor number setting procedure" above. The following will display:

 (1.Ano.03) (When the adaptor number is 3)

- ② Press the  key once so the following display appears:

 (2.Adyu.0) (Factory setting)


- ③ Hold down the  key for at least 1 second so the "0" part blinks, indicating that the setting can be changed. (The green and red monitor LEDs are both on.)

Use the  and  keys to turn the inter-unit control wiring connection on or off as shown in the table below.


Setting value	Inter-unit control wiring connection
0	LINK1: On, LINK2: On (factory setting)
1	LINK1: On, LINK2: Off
2	LINK1: Off, LINK2: On
3	LINK1: Off, LINK2: Off

For example, to connect the inter-unit control wiring only to LINK1, press the  key once. The following display will result:





 (2.AdYu.1)

- ④ Press the  key for at least 1 second to confirm. (Only the green monitor LED is on.)

(4) Other settings

With the display status showing as in number ③ in section (2) "Adaptor number setting procedure", press the  and  keys to select the setting items shown in the table below. Set as needed.

The setting procedure is the same as above.









(Press the  key for at least 1 second, press the  and  keys to change, then press the  key at least one second to confirm.)

Note

- ① When configuring, do not set the same adaptor number more than once.
 - * Use numbers between 1 and 7 for connecting to an Intelligent Controller.
- ② Turn the inter-unit control wiring connection on/off as appropriate. (Set to "Off" for LINKs with no connection.)
- ③ For connecting the inter-unit control wiring to only one link, use the "LINK1" side.

9. Communication Adaptor (CZ-CFUNC2)

Table 3-2 Communication Adaptor setting items


Display	Setting item (grayed in areas indicate factory setting)
 (1.Ano.xx)	[1] Adaptor number setting xx = 00 to 15: adaptor number Sets the Communication Adaptor number. Set 1 to 7 for the Intelligent Controller, making sure the same number is not used twice. When actually communicating from a master system, the link system address LINK1 is 2n and LINK2 is 2n + 1, where n is the Communication Adaptor number. Thus, when the adaptor number is 2, the LINK1 address is 4 and the LINK2 address is 5.
 (2.AdYu.x)	[2] Inter-unit control wiring connection settings x = 0: LINK1 on, LINK2 on x = 1: LINK1 on, LINK2 off x = 2: LINK1 off, LINK2 on x = 3: LINK1 off, LINK2 off Set so any LINK (inter-unit control wiring) connected to the air conditioner is "on", and any LINK not connected is "off". * For solo installation (pulse meter dedicated), use x = 3: LINK1 and 2 both set to off.
 (3.Cont.x)	[3] Base unit settings Always use 0 (the initial value).
 (4.CAn1.x)	[4] Settings for the number of Communication Adaptor units in one link, part 1 x = 0 to 7 x = 0: First Communication Adaptor in the LINK1 link x = 1: Second Communication Adaptor in the LINK1 link x = 7: Eighth Communication Adaptor in the LINK1 link
 (5.CAn2.x)	[5] Settings for the number of Communication Adaptor units in one link, part 2 x = 0 to 7 x = 0: First Communication Adaptor in the LINK2 link x = 1: Second Communication Adaptor in the LINK2 link x = 7: Eighth Communication Adaptor in the LINK2 link Set the Communication Adaptor unit number for each LINK system when connecting multiple Communication Adaptors to one inter-unit control wiring.
 (6.PUL.xx)	[6] Minimum pulse input detection time setting x = 03: 30 msec x = 10: 100 msec If connecting a pulse meter with a pulse width between 30 and 100 msec, set to 30 msec.
 (7.LoCA.x)	[7] Interface Adaptor connection settings x = 0: LINK 1 on, LINK2 on x = 1: LINK 1 off, LINK2 on x = 2: LINK 1 on, LINK2 off x = 3: LINK 1 off, LINK2 off Set whether there is a Interface Adaptor (for turning off and on) for each LINK system. If the setting is "off", startup will be faster as no Interface Adaptor detection is run.
 (8.SCA.n.x)	[8] Initial communication setting Always use 0 (the initial value).




9. Communication Adaptor (CZ-CFUNC2)

5 Connecting to external equipment


(1) External all input (No-voltage a-contact static)

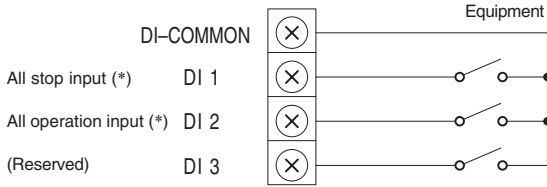

(2) External all output (No-voltage a-contact static)

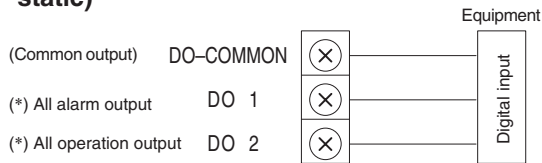

(3) Pulse meter input (No-voltage a-contact pulse)

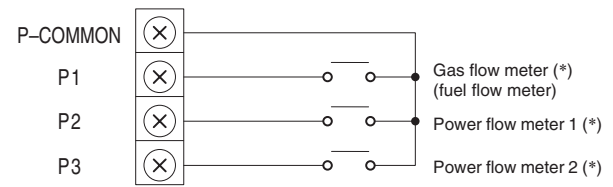


- Minimum pulse width: 100 msec
- Minimum pulse interval: 1 sec

(*) Input/output function when connecting to the Intelligent Controller

- Keep the signal input line lengths to 20 meters or less. For distances greater than this, install a standalone Communication Adaptor or use a relay.
- For use in areas that may be susceptible to electrical noise, use a two-conductor shielded cable (with one line grounded), with a cross-section at least 0.5 mm².
- Do not apply external voltages to the input terminals.
- About 10 mA of 5 V DC voltage is applied to the contact point for input terminal detection.
- The output terminal allowable contact voltage and current are 30 V DC and 0.5 A.

6 Outer dimensions

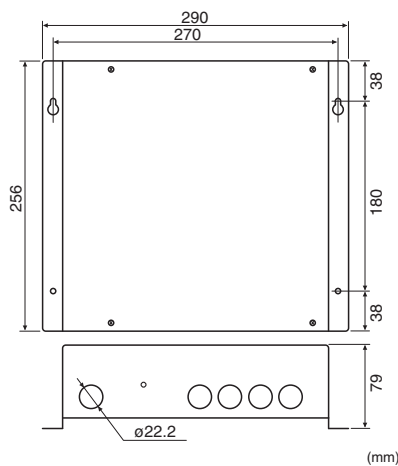

7 Specifications

Rated voltage	Single phase 100-240V~
Rated frequency	50/60 Hz
Power consumption	5.6 W max
Operating temperature	-10 to +50°C
Operating humidity	20 to 80% (no condensation)

9. Communication Adaptor (CZ-CFUNC2)

Appendix A. Connecting to an Intelligent Controller

Before making the initial settings for the Communication Adaptor, check to ensure the below operations are complete.

- (1) Is the air conditioner test operation complete?
- (2) Is the wiring for the air conditioner and the Communication Adaptor complete?

To set, follow steps 1 to 5 below in sequence.

(1) Adaptor number setting



(2) Inter-unit control wiring connection setting



(3) Number of Communication Adaptor units in one link setting



(4) Minimum pulse input detection time setting



(5) Interface Adaptor connection setting



Complete!

- **This is a required setting.**
- Set the address for the Communication Adaptor control wire.
For the Intelligent Controller internal board, the address is 0. Set a value between 1 and 7 for the external adaptor, ensuring no value is used twice.
Refer to the number (2) "Adaptor number setting procedure" in section [4] "Setting the Communication Adaptor board".
* Refer to Table 3-2 [1].

- **This setting is required for two or more Communication Adaptors.**
- Two links can be connected to a Communication Adaptor.
For links without an air conditioner or other such connection, set the LINK to "off".
- The Intelligent Controller can be connected to only four links that are set to be active.
Refer to the number (3) "Setting the inter-unit control wiring connection on/off" in section [4] "Setting the Communication Adaptor board".
* Refer to Table 3-2 [2].

- **This setting is required only for using an Intelligent Controller in conjunction with a AMY Software.**
- When adding another Communication Adaptor to the inter-unit control wiring, the adaptor address for the added unit needs to be changed.
* Refer to Table 3-2 [4] and [5].





- **This setting is not required if pulse input (P1, P2, P3) is not used.**
- Use a pulse meter whose minimum pulse width is normally at least 100 msec.
If and only if a pulse meter 30 msec or higher must be used, use this setting.
* Refer to Table 3-2 [6].




- By not using a Interface Adaptor, the configuration confirmation time can be shortened.
- **Not using this setting will not affect operation of the device.**
* Refer to Table 3-2 [7].

10. Remote Sensor

Remote Sensor / CZ-CSRC2

■ Parts Supplied with Remote Sensor

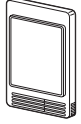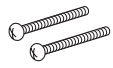No.	Supplied parts	Qty
1	Remote sensor (comes with 200 mm wire) 	1
2	Machine screws M4 × 25 	2
3	Wood screws 	2
4	Spacers 	2

No.	Supplied parts	Qty
5	Wire joints 	2
6	Clamp 	1
7	Installation manual 	1

■ Remote Sensor Installation Guidelines

Place of installation

- Mount the remote sensor at a height of 1 to 1.5 meters above the floor where it can sense the average temperature of the room.
- Do not mount the remote sensor in a place exposed to direct sunlight or a place exposed to outside air such as near a window.
- Do not mount the remote sensor behind an object so that it is separated from the air circulation of the room.
- Mount the remote sensor within the room being air conditioned.
- The remote sensor must be mounted on the wall or other surface vertically.

NOTE

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- FCC Caution: To assure continued compliance, follow the attached installation instructions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

10. Remote Sensor

■ How to Install the Remote Sensor

NOTE

- Do not twist the remote sensor wiring with the power wiring or run it in the same metal conduit, because this may cause malfunction.
- Install the remote sensor away from sources of electrical noise.
- Install a noise filter or take other appropriate action if electrical noise affects the power supply circuit of the unit.
- Use an electric junction box (field supply) (See Fig. 3-66) for flush mounting of the remote sensor.

When mounting the back case to the electric junction box, tighten the screws securely until the screw heads touch the back case. Otherwise, a loose screw head may damage the PCB on the back of the top cover when mounting the top cover. But do not over-tighten the screws. Overtightening may deform the back case and cause the unit to fall.

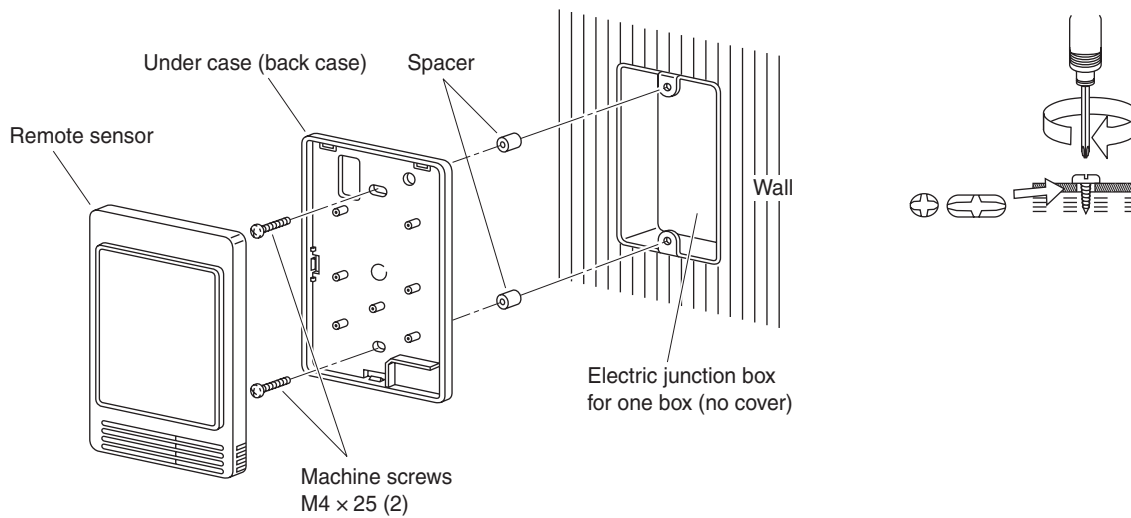


Fig. 3-66

1. Insert a screwdriver or the like in the groove on the lower side of the remote sensor body to pry off the back case. (See Fig. 3-67)

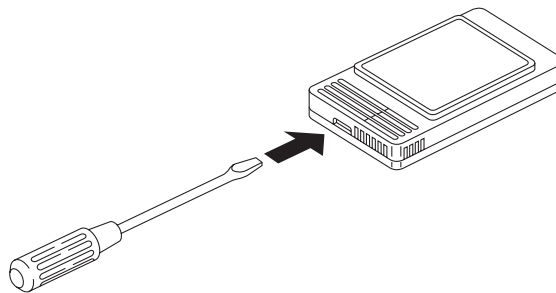


Fig. 3-67

2. Use the 2 supplied M4 machine screws to secure the remote sensor back case. Prior to mounting, clear the cutouts in the back case corresponding to the holes in the electric junction box using a screwdriver or the like. Use the spacers and take care not to tighten the screws excessively. If the back case will not seat well, cut the spacers to a suitable thickness.
3. Connect field supplied 2 core lead wires to the lead wires from the remote sensor. (See "How to wire the remote sensor.")


When connecting the field supplied 2 core lead wires to the terminal block, check the terminal numbers in the indoor unit to make sure that the wires are correctly connected. (See Fig. 3-68) (The remote sensor is damaged if 220 / 240V AC is applied.)

4. Fit the remote sensor to the tabs of the back case and mount it.

10. Remote Sensor

■ How to Wire the Remote Sensor

● Connection diagram

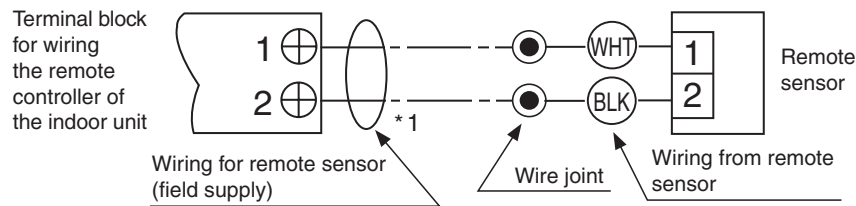

Remote controller wiring can be extended to a maximum of 500 m.

Fig. 3-68

● How to connect lead wires

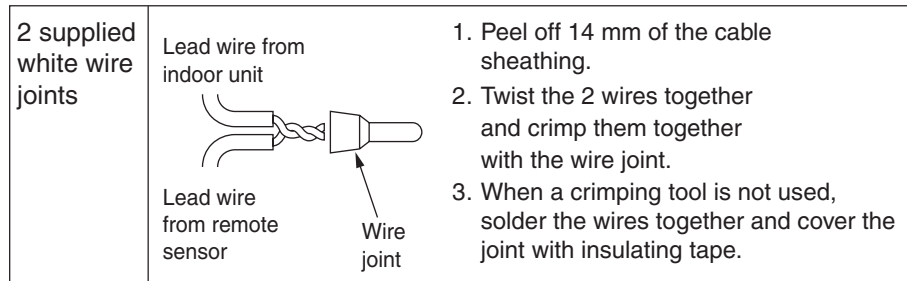


Fig. 3-69

■ Important Information When Using Together with Remote Controller Switch

● Installation method

1. Set the remote controller switch as the main remote controller.

NOTE Do not set the room temperature sensor on the remote controller switch as the remote controller sensor.

● Basic wiring diagram

NOTE When connecting the wires, be careful not to wire incorrectly. (Incorrect wiring will damage the unit.)

- * Wiring when controlling a single indoor unit with the remote sensor and remote controller switch:

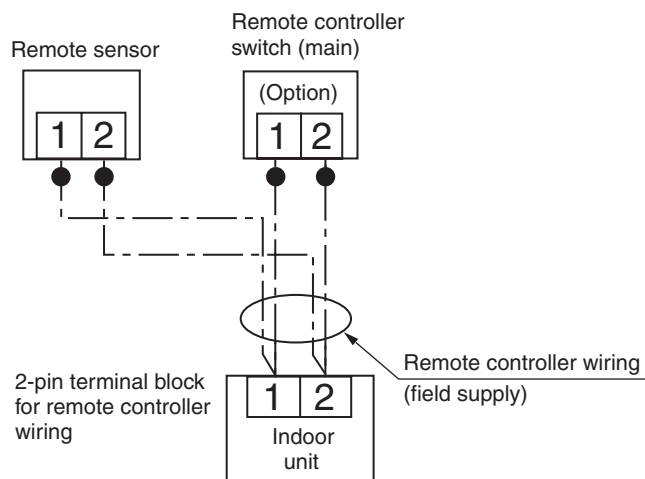


Fig. 3-70

11. LonWorks Interface (CZ-CLNC2)


1. LonWorks Interface Overview

Product Overview

This interface is a communications interface for connecting LonWorks to an air conditioner unit control network.

From the host connected to LonWorks, basic settings and status monitoring is possible for up to 16 groups of A/C units.

System Diagram

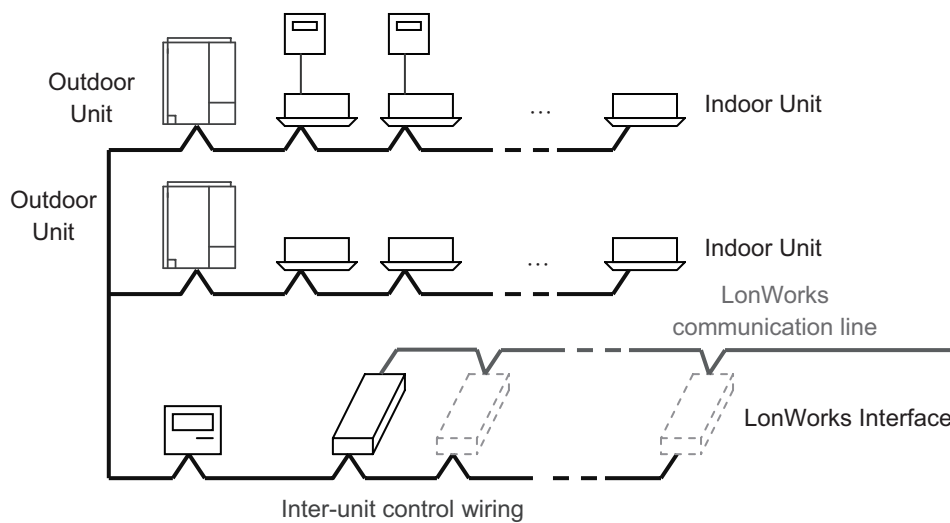

- Up to 16 groups of indoor units (maximum 64 units) can be controlled with 1 LonWorks Interface unit. For 17 or more groups of indoor units, connect additional interface units.
- Install a remote controller (or system controller, etc.), which can control the A/C units, to an inter-unit control wiring other than the LonWorks Interface unit.
- Before making the connection to the LonWorks Interface unit, set the central control addresses in the indoor units.

11. LonWorks Interface (CZ-CLNC2)

Functions

A/C unit settings from the LonWorks	Settings for each group of indoor units	Start/stop
		Temp. setting(*1)
		Operation mode
		Option 1 settings(*2)
		Option 2 settings(*2)
	Settings for all units	Emergency stop
A/C unit status notifications made to the LonWorks	Start/stop	
	Temp. setting	
	Operation mode	
	Option 1 settings(*2)	
	Option 2 settings(*2)	
	Alarm status(*3)	
	Indoor units with active alarms(*4)	
	Room temp(*5)	
A/C unit status(*6)		
Configuration properties	Transmission interval settings(*7)	
	Minimum time secured for transmission(*8)	

(*1) When a temperature above the upper limit of the temperature which can be set by the indoor units has been specified, it will be set to the upper limit; conversely, when a temperature below the lower limit has been specified, it will be set to the lower limit.

(*2) Two options can be selected using the setting switch from among remote-controller prohibit, fan speed setting, air direction setting and filter sign.

(*3) When indoor units are under group control, an alarm is determined to have occurred when the alarm occurs at one or more of the units.

(*4) The number of the indoor unit at which the alarm has occurred is notified. This makes it possible to identify at which indoor unit of the indoor unit group the alarm has occurred.

(*5) When indoor units are under group control, the room temperature of the main unit in the group is notified.

(*6) When an alarm occurs at one or more indoor units, the alarm code is notified as the indoor unit status.

(*7) All the data which can be output is output at the set interval.

(*8) The same data is not output continuously at the set interval.

11. LonWorks Interface (CZ-CLNC2)

2. Procedures for Installation (Electrical Work) of LonWorks Interface

Safety Precautions

- * The following is intended for the installer responsible for installation and test operations of the LonWorks Interface, and should be carefully read before beginning.
- * The precautions given in this manual consist of specific "Warnings" and "Cautions." They provide important safety-related information and are important for your safety, the safety of others, and trouble-free operation of the system. Be sure to strictly observe all safety procedures. The labels and their meanings are as described below.



This symbol refers to a hazard or unsafe procedure or practice which can result in severe personal injury or death.



This symbol refers to a hazard or unsafe procedure or practice which can result in personal injury or product or property damage.


※After installation is completed, perform a test run to check for operating trouble. As you do, use the central control device *Operation Manual* and explain operating procedures to the customer. Then request that the customer store this manual together with the central control device *Operation Manual*.

Warning

- Be sure to arrange installation from the dealer where the system was purchased or using a professional installer. Electric shock or fire may result if an inexperienced person performs any installation or wiring procedures incorrectly.
- Please install and ensure construction according to *Procedures for Installation (Electrical Work) of LonWorks Interface*.
- Only a qualified electrician should attempt to connect this system, in accordance with the instructions in this manual. If the electrical circuit capacity is insufficient a danger of electric shock and fire may be present.
- Use the specified cables (type and wiring diameter) for the electrical connections, and connect the cables securely. Run and fasten the cables securely so that external forces or pressure placed on the cables will not be transmitted to the connection terminals. Overheating or fire may result if connections or attachments are not secure.
- Do the ground connection.
- The installation location requires the use of a circuit breaker. Failure to use a circuit breaker may result in electric shock or fire.
- Circuit breaker must be incorporated in the fixed wiring in accordance with the wiring regulations. The circuit breaker must be an approved 10-16 A, having a contact separation in all poles.

Installation Method

- The screws used to install the main unit must be provided by the installer.

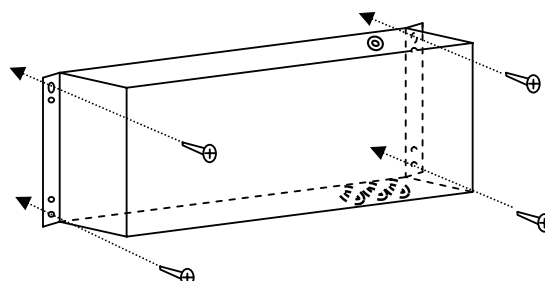

- Install the LonWorks Interface away from any sources of electrical noise.

Wiring Specifications

- For the inter-unit control wiring use twin-core 0.5 – 2 mm² shielded cables and ground the shield on both side.
- For the LonWorks communication line cables, use twisted-pair cables with a wire diameter of 0.51 mm or larger as recommended by Echelon Corp.

Examples of cables recommended by Echelon Corp			
Cable type	Wire diameter /AWG	Total cable length	
		Bus type	Free
24 AMG twisted-pair (TIA568A category 5)	0.51mm /24	900m	450m


- Do not use the same cable for the inter-unit control wiring, the LonWorks communication lines, and the power cable. Do not run them through the same conduit or place the cables near one another.
- Connect the cables so that there is no miswiring. (Miswiring can cause malfunction.)

Included Parts

No.	Part	Qty
(1)	 Product manual	1

LonWorks Interface Structure


- This interface contains 4 LonWorks communication boards (nodes).
- Up to 4 indoor unit groups (maximum 32 units) can be assigned to 1 node.

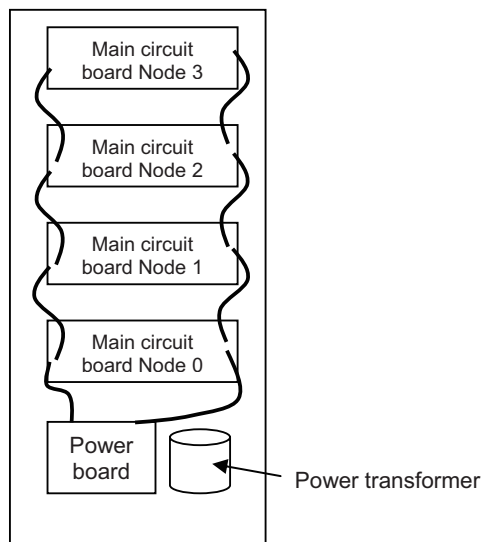

11. LonWorks Interface (CZ-CLNC2)

Power Board Initial Settings


Not Install: Ordinarily, keep this set to "Not Install" (initial setting).
 Install: Free topology terminal resistor (51Ω) for the LonWorks communication lines.

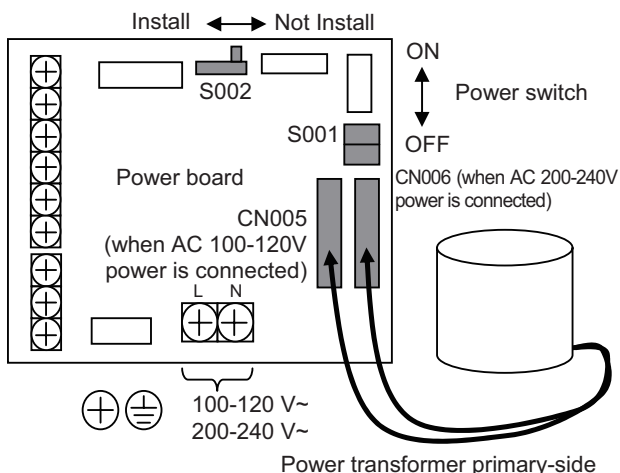


When AC 200-240V power is connected, connect the power transformer primary-side to CN006. When AC 100-120V power is connected, connect the power transformer primary-side to CN005. (It is connected to CN006 when the unit is shipped from the plant.)

Wiring Procedure

- Connect the power supply lines to the L and N power supply terminals. (the power supply neutral to the N terminal.)
- Connect an earth ground line to the screw.

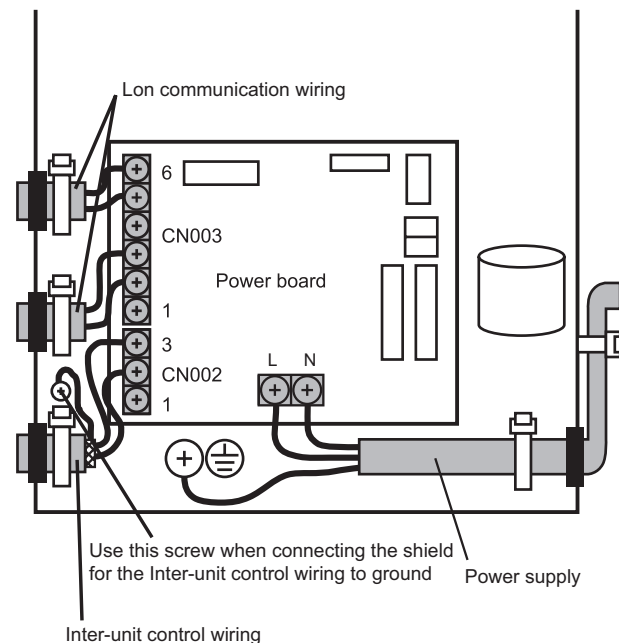


Power Board Wiring

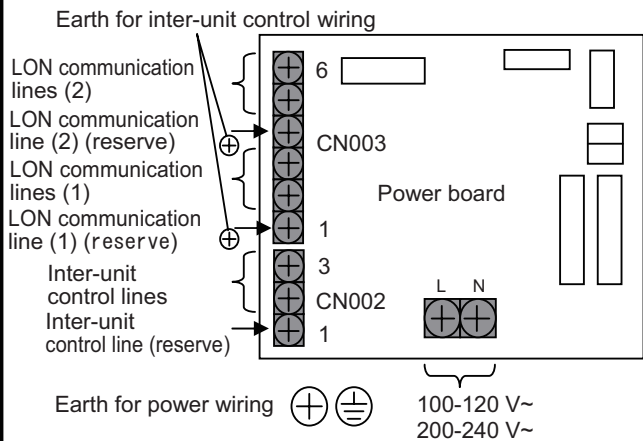

- The LonWorks communication lines can be connected to either (1) or (2) in the above figure. The results are the same.
- Do not run the inter-unit control lines, the LonWorks communication lines, and the power cables through the same conduit, or place the cables near one another. Doing so can cause the system to malfunction.
- Before turning the power on, follow the instruction in *Power Board Initial Settings*.
- When using the spare inter-unit control line, connect [1] and [3] at CN002.
- When using the spare LON communication line, connect [1] and [3] or [4] and [6] at CN003.


Main Circuit Board

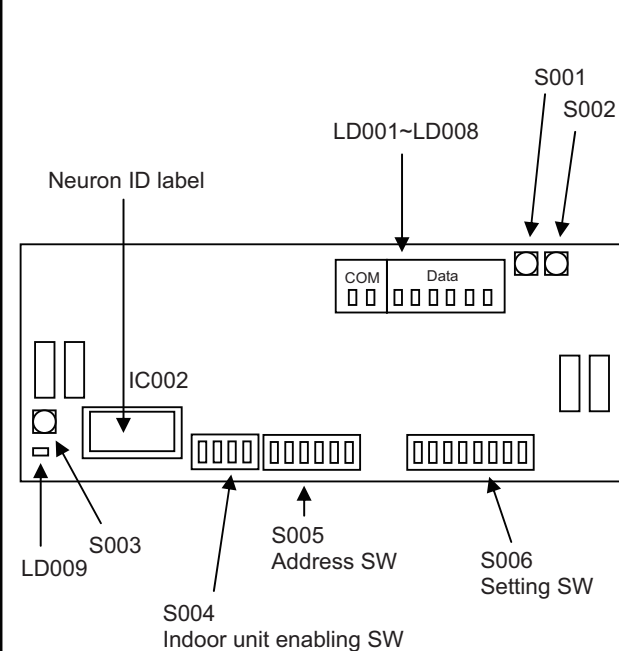

3


11. LonWorks Interface (CZ-CLNC2)

Indoor Unit Enabling Switches

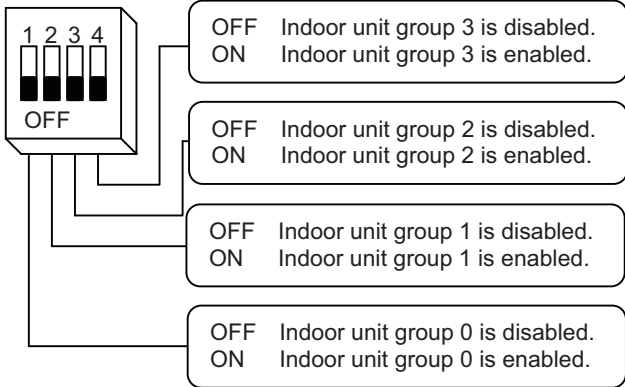

- One main circuit board can control 4 groups (indoor unit groups 0 – 3).
- Set to “disable” if the indoor unit group does not exist. Set to “enable” if the indoor unit group exists.

Address Switches

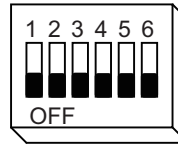


O : ON - : OFF

Address switch						Central control address
1	2	3	4	5	6	
-	-	-	-	-	-	1
O	-	-	-	-	-	2
-	O	-	-	-	-	3
O	O	-	-	-	-	4
-	-	O	-	-	-	5
O	-	O	-	-	-	6
-	O	O	-	-	-	7
O	O	O	-	-	-	8
-	-	-	O	-	-	9
O	-	-	O	-	-	10
-	O	-	O	-	-	11
O	O	-	O	-	-	12
-	-	O	O	-	-	13
O	-	O	O	-	-	14
-	O	O	O	-	-	15
O	O	O	O	-	-	16
-	-	-	-	O	-	17
O	-	-	-	O	-	18
-	O	-	-	O	-	19
O	O	-	-	O	-	20
-	-	O	-	O	-	21
O	-	O	-	O	-	22
-	O	O	-	O	-	23
O	O	O	-	O	-	24
-	-	-	O	O	-	25
O	-	-	O	O	-	26
-	O	-	O	O	-	27
O	O	-	O	O	-	28
-	-	O	O	O	-	29
O	-	O	O	O	-	30
-	O	O	O	O	-	31
O	O	O	O	O	-	32
-	-	-	-	-	O	33
O	-	-	-	-	O	34
-	O	-	-	-	O	35
O	O	-	-	-	O	36
-	-	O	-	-	O	37
O	-	O	-	-	O	38
-	O	O	-	-	O	39
O	O	O	-	-	O	40
-	-	-	O	-	O	41
O	-	-	O	-	O	42
-	O	-	O	-	O	43
O	O	-	O	-	O	44
-	-	O	O	-	O	45
O	-	O	O	-	O	46
-	O	O	O	-	O	47
O	O	O	O	-	O	48
-	-	-	-	O	O	49
O	-	-	-	O	O	50
-	O	-	-	O	O	51
O	O	-	-	O	O	52
-	-	O	-	O	O	53
O	-	O	-	O	O	54
-	O	O	-	O	O	55
O	O	O	-	O	O	56
-	-	-	O	O	O	57
O	-	-	O	O	O	58
-	O	-	O	O	O	59
O	O	-	O	O	O	60
-	-	O	O	O	O	61
O	-	O	O	O	O	62
-	O	O	O	O	O	63
O	O	O	O	O	O	64

Setting Switches

O: ON -: OFF R/C: Remote Controller

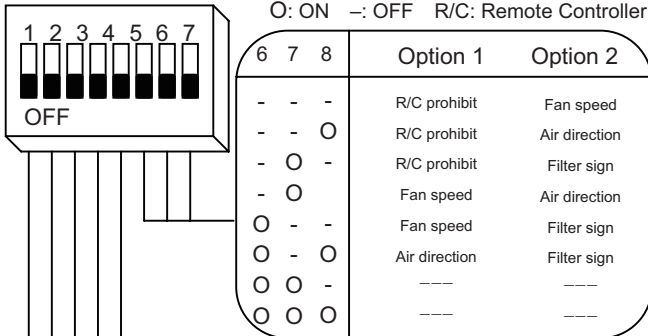

Not used (Be sure to set to OFF.)

OFF Central/individual setting is according to the central control device (normal setting).
ON Central/individual setting is always set to “individual.”


OFF Control temperature is used for the room temperature (normal setting).
ON Inlet temperature is used for the room temperature.

Not used (Be sure to set to OFF.)

- OFF Communicate as a “sub” central control device.
ON Communicate as a “main” central control device.
- If there are no central control devices other than this interface, set to “main” (ON).
 - To set this interface as the main, set only node 0 to “main” (ON).
 - If using in combination with an communication adapter, AMY adapter, intelligent controller, or system controller, set to “sub” (OFF).
 - If using in combination with an ON/OFF central controller, set the ON/OFF central controller as the main if the ON/OFF central controller’s remote-controller prohibit function is to be used. If this interface’s remote-controller prohibit function is to be used, set this interface as the main.

11. LonWorks Interface (CZ-CLNC2)

Communications LED (Green)

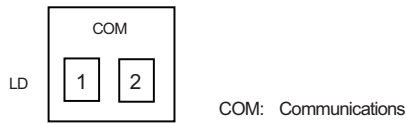


LD001	LD002	Display meaning
X	X	① Power OFF
X	Low	② -----
X	High	③ Flash writer writing in progress
X	O	④ Waiting for A/C unit initial communication
Low	X	⑤ A/C unit initial communication in progress
Low	Low	⑥ -----
Low	High	⑦ LonWorks communication microcomputer error
Low	O	⑧ EEPROM error
High	X	⑨ -----
High	Low	⑩ -----
High	High	⑪ -----
High	O	⑫ -----
O	X	⑬ Test run mode
O	Low	⑭ -----
O	High	⑮ Version display in progress
O	O	⑯ Normal communications in progress

X: Not lit, Low: Low-speed flashing (once/second)
High: High-speed flashing, O: Constantly lit


• Display of A/C unit communications status

LD	Indoor unit group	Display meaning
003	0	OFF: Waiting for initial communication Low-speed flashing: Waiting for minimum transmission interval
004	1	
005	2	
006	3	High-speed flashing: Initial communication in progress
007		ON: Normal communications in progress
007		Illuminates for 200 ms when data is output to the LonWorks communicator.
008		Illuminates for 200 ms when data is output to the indoor/outdoor communicator.

Diagram of External Dimensions

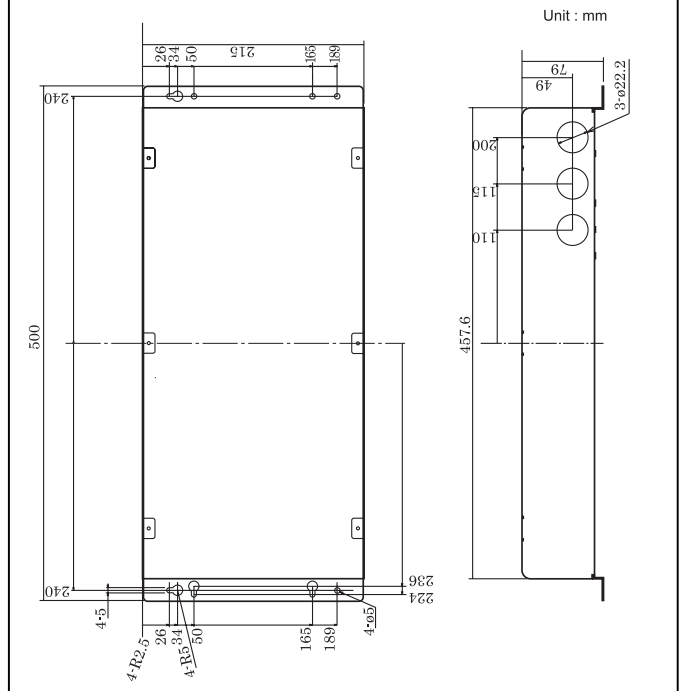

Data LED (Red)



Communications LED	Data LED display meaning
①	No LED lit
②	All LEDs lit
③	-----
④	Displays the wait time (seconds) for A/C unit initial communication.
⑤	Displays the A/C unit communications status
⑥	-----
⑦	No LED lit
⑧	No LED lit
⑨	-----
⑩	-----
⑪	-----
⑫	-----
⑬	According to the test run mode specifications
⑭	-----
⑮	According to the version display specifications
⑯	Displays the A/C unit communications status

Product Specifications










Connects to	LonWorks network FTT-10 A transceiver device
Power	Single-phase, 100-120/ 200-240V~
Power consumption	11 W max.
Service environment conditions	Temp. 0 to 40°C, humidity 20 to 80% Indoor use only
External dimensions	Height 79 mm × Width 500 mm × Depth 215 mm
Weight	Approx. 3.3 kg

11. LonWorks Interface (CZ-CLNC2)


3. Assigning Central Control Addresses

- Before assigning central control addresses for the LonWorks Interface, use the remote controller to make central control address settings for A/C units.
- Follow only the steps for "Assigning Central Control Addresses" when a system controller or other central controller is already provided.

[Setting Central Control Addresses]

- (1) Press and hold both the  and  buttons for 4 seconds or longer. Check that the "SETTING" display on the remote controller is flashing.
- (2) Set the "03" item code by pressing the  and  temperature setting buttons.
- (3) Set the desired central control address by pressing the  and  timer buttons.
- (4) Press the  button, and check that the "SETTING" display stops flashing and illuminates instead. (The setting data cannot be changed unless the  button is pressed.)
- (5) Press the  button, and check that the display on the remote controller has been cleared.

remote controller

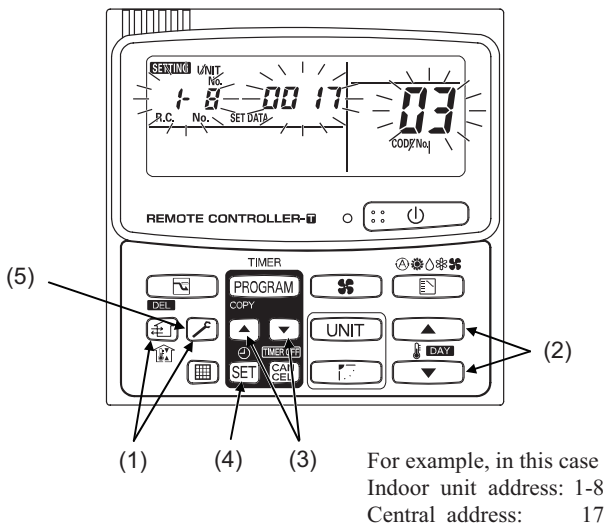

[Assigning Central Control Addresses]

- (1) Turn the power switch (S001) on the LonWorks Interface power board to OFF.
- (2) Turn the setting switch (S006-2) to OFF (so that central control addresses are set with the DIP switches).



- (3) Set the first central control address with the address switch (S005). When assigning serial numbers, a consecutive series of numbers is assigned for the central control addresses.

<Example> If the first central control address is "5," then this circuit board assigns central control addresses "5," "6," "7," and "8."



- (4) Make the enable/disable settings with the indoor unit enabling switches (S004).

<Example> If central control addresses "6" and "8" do not exist, enable only "5" and "7."



"5" is set as the central control address for indoor unit group 0, and "7" is set as the central control address for indoor unit group 2.

- (5) Turn the power switch (S001) on the LonWorks Interface power board to ON.


11. LonWorks Interface (CZ-CLNC2)

4. LonWorks Interface Test Run

Before performing a test run of the LonWorks Interface, perform test runs of the A/C units and assign central control addresses for A/C units.

[LonWorks Interface Test Run Procedure]

- Press and hold touch-switch S001 on the main circuit board for 5 seconds or longer.
Test run mode is enabled for the main circuit board that is currently being controlled. LD001 illuminates, and LD002 – LD008 turn off.



- Press touch-switch S002. The data LEDs appear as shown in the tables below.
In addition, the assigned indoor unit groups start and stop as shown in the tables below.

STEP 1		Indoor unit Gr	Start/stop
COM	Data	0	Stop
1 2	3 4 5 6 7 8	1	Stop
		2	Stop
		3	Stop



STEP 2		Indoor unit Gr	Start/stop
COM	Data	0	Start
1 2	3 4 5 6 7 8	1	Stop
		2	Stop
		3	Stop



STEP 3		Indoor unit Gr	Start/stop
COM	Data	0	Start
1 2	3 4 5 6 7 8	1	Start
		2	Stop
		3	Stop




STEP 4		Indoor unit Gr	Start/stop
COM	Data	0	Start
1 2	3 4 5 6 7 8	1	Start
		2	Start
		3	Stop



STEP 5		Indoor unit Gr	Start/stop
COM	Data	0	Start
1 2	3 4 5 6 7 8	1	Start
		2	Start
		3	Start



STEP 1		Indoor unit Gr	Start/stop
COM	Data	0	Stop
1 2	3 4 5 6 7 8	1	Stop
		2	Stop
		3	Stop




- Be sure to reset the power after the LonWorks Interface test run is completed.

11. LonWorks Interface (CZ-CLNC2)

5. Checking the LonWorks Interface Version

(1) Press touch-switch S002.

Version display mode is enabled on that circuit board for a period of 18 seconds. LD001 illuminates, and LD002 flashes at high speed.




(2) While the version is displayed (18 seconds), the display contents are the following.

First 3 seconds	<p>Displays the first digit of the main microcomputer version</p> <p>Off Lit</p> <p>Data</p>
Next 3 seconds	<p>Displays the second digit of the main microcomputer version</p> <p>Lit Off</p> <p>Data</p>
Next 3 seconds	<p>Displays the third digit of the main microcomputer version</p> <p>Lit Lit</p> <p>Data</p>
Next 3 seconds	<p>Displays the first digit of the LonWorks I/F microcomputer version</p> <p>Off Lit</p> <p>Data</p>
Next 3 seconds	<p>Displays the second digit of the LonWorks I/F microcomputer version</p> <p>Lit Off</p> <p>Data</p>
Last 3 seconds	<p>Displays the third digit of the LonWorks I/F microcomputer version</p> <p>Lit Lit</p> <p>Data</p>

• Version display

0	3 4 5 6	5	3 4 5 6
1	3 4 5 6	6	3 4 5 6
2	3 4 5 6	7	3 4 5 6
3	3 4 5 6	8	3 4 5 6
4	3 4 5 6	9	3 4 5 6

<Example> Main microcomputer Version 3.56
LonWorks I/F microcomputer Version 2.00

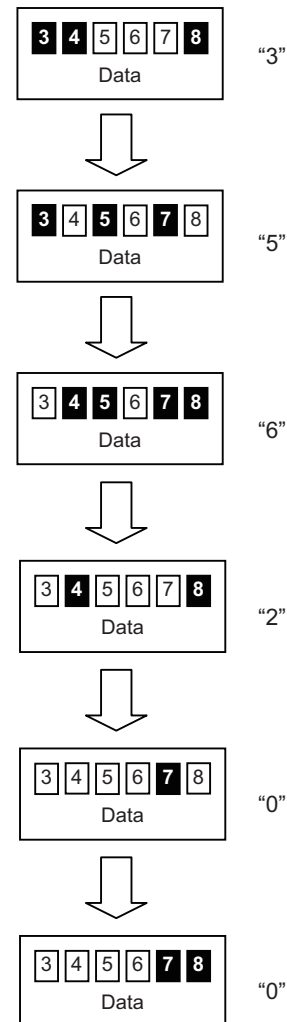

3

11. LonWorks Interface (CZ-CLNC2)

6. List of LonWorks Network Variables

A/C unit	Input/output	Item	Variable name	Variable type
Indoor group 0	Input	Start/stop	nviOnOff_00	SNVT_switch
		Temp. setting	nviSetPoint_00	SNVT_temp_p
		Operating mode	nviHeatCool_00	SNVT_hvac_mode
		Option 1 setting	nviOption1_00	SNVT_switch
		Option 2 setting	nviOption2_00	SNVT_switch
	Output	Start/stop status	nvoOnOff_00	SNVT_switch
		Temp. setting	nvoSetPoint_00	SNVT_temp_p
		Operating mode	nvoHeatCool_00	SNVT_hvac_mode
		Option 1 status	nvoOption1_00	SNVT_switch
		Option 2 status	nvoOption2_00	SNVT_switch
		Alarm status	nvoAlarm_00	SNVT_switch
		Indoor units with active alarms	nvoAlarmIn_00	SNVT_switch
		Room temp.	nvoSpaceTemp_00	SNVT_temp_p
		Indoor unit status	nvoInState_00	SNVT_count
Indoor group 1	Input	Start/stop	nviOnOff_01	SNVT_switch
		Temp. setting	nviHeatCool_01	SNVT_temp_p
		Operating mode	nviSetPoint_01	SNVT_hvac_mode
		Option 1 setting	nviOption1_01	SNVT_switch
		Option 2 setting	nviOption2_01	SNVT_switch
	Output	Start/stop status	nvoOnOff_01	SNVT_switch
		Temp. setting	nvoSetPoint_01	SNVT_temp_p
		Operating mode	nvoHeatCool_01	SNVT_hvac_mode
		Option 1 status	nvoOption1_01	SNVT_switch
		Option 2 status	nvoOption2_01	SNVT_switch
		Alarm status	nvoAlarm_01	SNVT_switch
		Indoor units with active alarms	nvoAlarmIn_01	SNVT_switch
		Room temp.	nvoSpaceTemp_01	SNVT_temp_p
		Indoor unit status	nvoInState_01	SNVT_count
Indoor group 2	Input	Start/stop	nviOnOff_02	SNVT_switch
		Temp. setting	nviHeatCool_02	SNVT_temp_p
		Operating mode	nviSetPoint_02	SNVT_hvac_mode
		Option 1 setting	nviOption1_02	SNVT_switch
		Option 2 setting	nviOption2_02	SNVT_switch
	Output	Start/stop status	nvoOnOff_02	SNVT_switch
		Temp. setting	nvoSetPoint_02	SNVT_temp_p
		Operating mode	nvoHeatCool_02	SNVT_hvac_mode
		Option 1 status	nvoOption1_02	SNVT_switch
		Option 2 status	nvoOption2_02	SNVT_switch
		Alarm status	nvoAlarm_02	SNVT_switch
		Indoor units with active alarms	nvoAlarmIn_02	SNVT_switch
		Room temp.	nvoSpaceTemp_02	SNVT_temp_p
		Indoor unit status	nvoInState_02	SNVT_count
Indoor group 3	Input	Start/stop	nviOnOff_03	SNVT_switch
		Temp. setting	nviHeatCool_03	SNVT_temp_p
		Operating mode	nviSetPoint_03	SNVT_hvac_mode
		Option 1 setting	nviOption1_03	SNVT_switch
		Option 2 setting	nviOption2_03	SNVT_switch
	Output	Start/stop status	nvoOnOff_03	SNVT_switch
		Temp. setting	nvoSetPoint_03	SNVT_temp_p
		Operating mode	nvoHeatCool_03	SNVT_hvac_mode
		Option 1 status	nvoOption1_03	SNVT_switch
		Option 2 status	nvoOption2_03	SNVT_switch
		Alarm status	nvoAlarm_03	SNVT_switch
		Indoor units with active alarms	nvoAlarmIn_03	SNVT_switch
		Room temp.	nvoSpaceTemp_03	SNVT_temp_p
		Indoor unit status	nvoInState_03	SNVT_count
Indoor groups 0 – 3	Input	Emergency stop	nviAllnOff	SNVT_switch

Transmission intervals settings	nciSndHrtBt	SNVT_time_sec
Minimum time secured for transmission	nciMinOutTm	SNVT_time_sec

11. LonWorks Interface (CZ-CLNC2)

[nv7] Option 1 setting command**[nv9] Option 2 setting command**

network input SNVT_switch nviOption1_00;
 network input SNVT_switch nviOption1_01;
 network input SNVT_switch nviOption1_02;
 network input SNVT_switch nviOption1_03;
 network input SNVT_switch nviOption2_00;
 network input SNVT_switch nviOption2_01;
 network input SNVT_switch nviOption2_02;
 network input SNVT_switch nviOption2_03;

These input network variables are used to make the indoor unit option settings.

Two of the following 4 option settings can be selected: remote-controller prohibit, fan speed setting, air direction setting, and filter sign reset.

Make changes using the DIP switches on the main circuit board.


When option settings are not made from the LonWorks, it is not necessary to use these network variables.

	state	value	Start/stop operation	Temp. setting	Operating mode
Remote-controller prohibit	0	(Not used)	○	○	○
	1	100	×	×	
		120	○		
		140	×		
	1	150	○	○	×
		160	×		
		180	○		
		200	×		
		Other	×		

○: Permitted
 ×: Prohibited

Fan speed setting	(Not used)	120	Auto
		200	High
		150	Medium
		100	Low
		Other	

Air direction setting	(Not used)	200	Swing
		170	F1
		140	F2
		110	F3
		80	F4
		50	F5
		Other	Swing

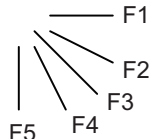

* Positions F4 and F5 can not be set for cool- and dry-mode operation.

Filter sign	Filter sign is reset when data is updated.
-------------	--

[nv8] Option 1 setting status notification**[nv10] Option 2 setting status notification**

network output SNVT_switch nvoOption1_00;
 network output SNVT_switch nvoOption1_01;
 network output SNVT_switch nvoOption1_02;
 network output SNVT_switch nvoOption1_03;
 network output SNVT_switch nvoOption2_00;
 network output SNVT_switch nvoOption2_01;
 network output SNVT_switch nvoOption2_02;
 network output SNVT_switch nvoOption2_03;

These output network variables provide notification of changes in the status of the indoor unit option settings.

Two of the following 4 option settings can be selected: remote-controller prohibit, fan speed setting, air direction setting, and filter sign reset.

Make changes using the DIP switches on the main circuit board.

They are output when the LonWorks Interface or A/C unit power is reset.

	state	value	Start/stop operation	Temp. setting	Operating mode
Remote-controller prohibit	0	0	○	○	○
	1	100	×	×	
		120	○		
		140	×		
	1	150	○	○	×
		160	×		
		180	○		
		200	×		
		Other	×		

○: Permitted
 ×: Prohibited

Fan speed setting	1	120	Auto
		200	High
		150	Medium
		100	Low
		50	Very
		0	Stop

Air direction setting	1	200	Swing
		170	F1
		140	F2
		110	F3
		80	F4
		50	F5
		0	Stop


Filter sign	0	0	OFF
	1		ON

11. LonWorks Interface (CZ-CLNC2)

8. Locations Where Neuron ID is Applied

The Neuron ID is applied in the following 3 locations.

- (1) Packaging box
- (2) Top panel lid
- (3) On the main circuit board Neuron chip

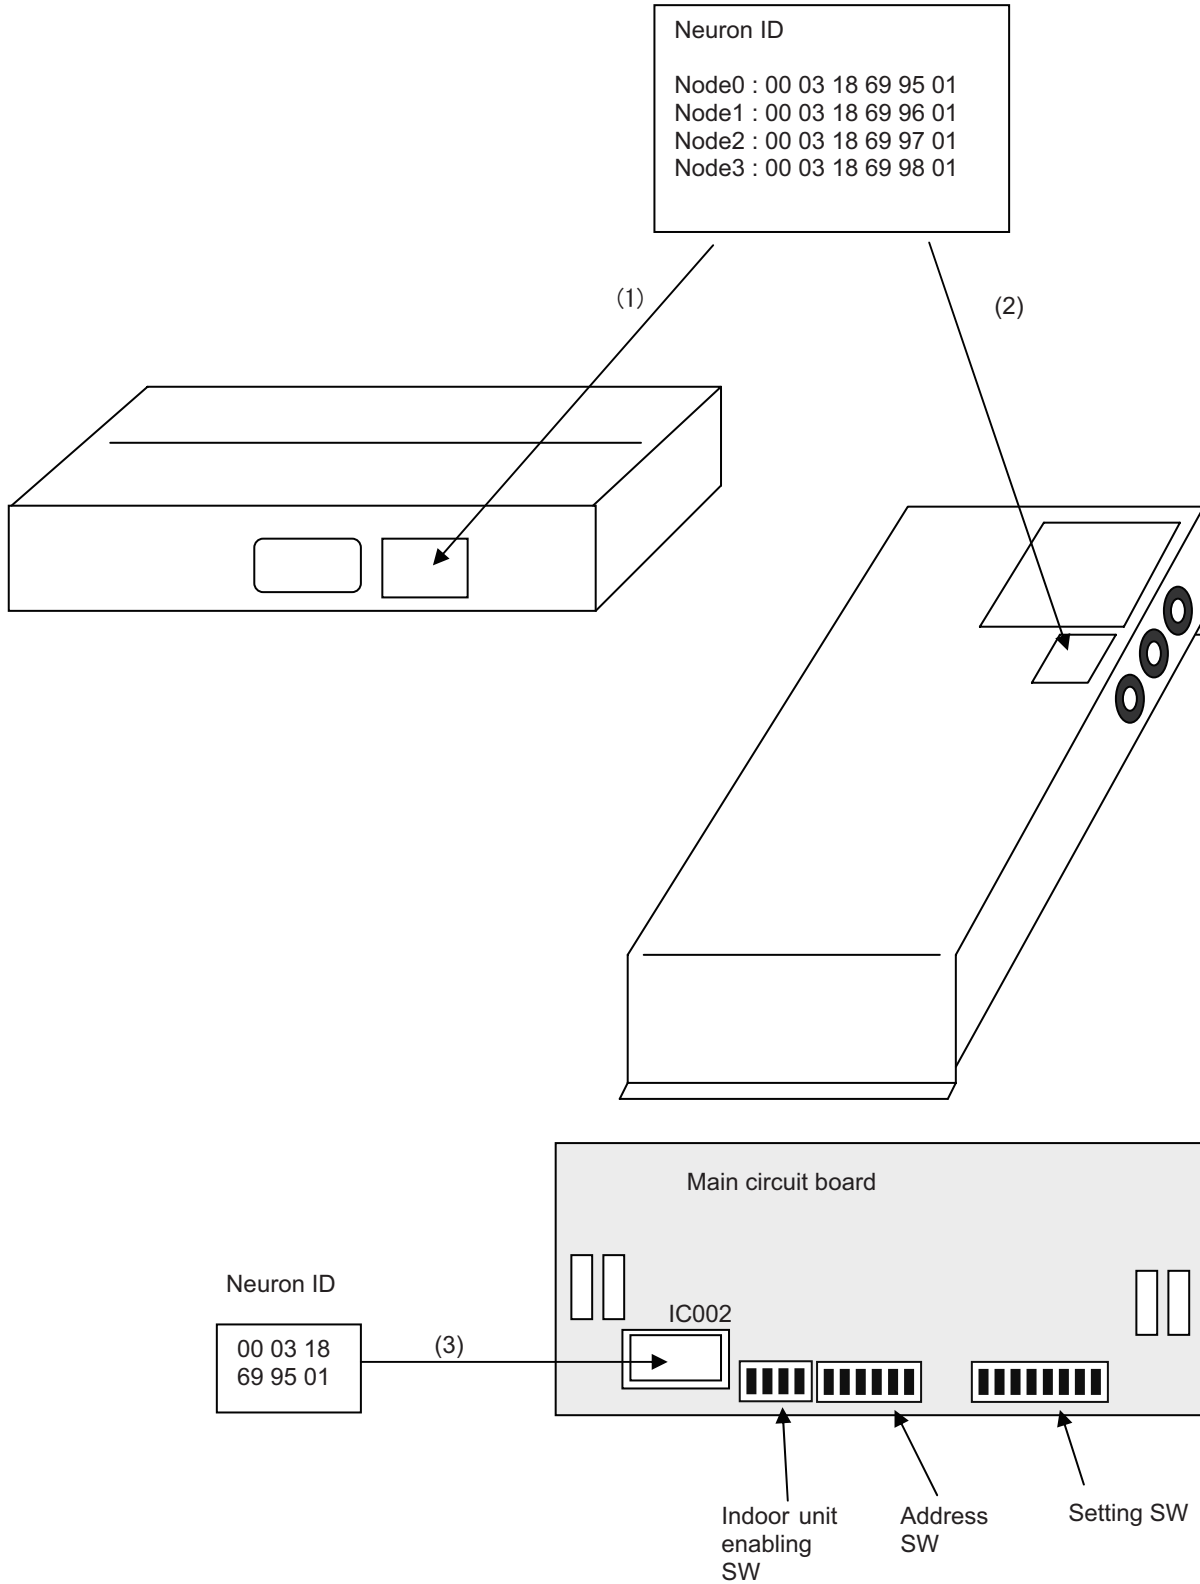


12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)


Seri-Para I/O Unit for outdoor unit (CZ-CAPDC2) INSTALLATION INSTRUCTIONS

Procedures and Technical Points for Test Run

Warnings and Cautions

The precautions given in this manual consist of specific “Warnings” and “Cautions.” They provide important safety-related information and are important for your safety, the safety of others, and trouble-free operation of the system. Be sure to strictly observe all safety procedures. The labels and their meanings are as described below.

 **Warning** This symbol refers to a hazard or unsafe procedure or practice which can result in severe personal injury or death.

 **Caution** This symbol refers to a hazard or unsafe procedure or practice which can result in personal injury or product or property damage.

* After installation is completed, perform a test run to check for operating trouble. As you do, use the central control device Operation Manual and explain operating procedures to the customer. Then request that the customer store the Procedures and Technical Points for Installation of LonWorks Interface (Electrical Work) together with the central control device Operation Manual.

3

Warning

* Be sure to arrange installation from the dealer where the system was purchased or using a professional installer. Electric shock or fire may result if an inexperienced person performs any installation or wiring procedures incorrectly.

*Only a qualified electrician should attempt to connect this system, in accordance with the instructions in “technical standards related to electrical design,” “local wiring regulations,” and this manual. Electric shock or fire may result if electrical work is not correctly done.

ELECTRICAL WIRING REQUIREMENTS

Precautions regarding electrical wiring

*Use a dedicated electrical circuit. If the electrical circuit capacity is insufficient a danger of electric shock and fire may be present.

*Use the specified cables (type and wiring diameter) for the electrical connections, and connect the cables securely. Run and fasten the cables securely so that external forces or pressure placed on the cables will not be transmitted to the connection terminals. Overheating or fire may result if connections or attachments are not secure.

*The installation location requires the use of a circuit breaker. Failure to use a circuit breaker may result in electric shock or fire.


*Circuit breaker must be incorporated in the fixed wiring in accordance with the wiring regulations. The circuit breaker must be an approved 10-16 A, having a contact separation in all poles.

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

1. Installing the Seri-Para I/O Unit for outdoor unit

- <Note 1> Do not run the inter-unit control wiring, input/output lines, and power cables through the same conduit, or place the cables near one another. Doing so can cause malfunction.
- <Note 2> Install the Seri-Para I/O Unit for outdoor unit away from any sources of electrical noise.
- <Note 3> Avoid installing in any locations where the interface may come into contact with water, in locations where water accumulates, or in any extremely humid locations.
- <Note 4> Avoid installing in any location that is subject to excessive vibration or physical impacts.


Note that when the Seri-Para I/O Unit for outdoor unit is used incorporated in the control panel, it is necessary to make local procurement of the control panel that can accommodate required number of the Seri-Para I/O Unit for outdoor unit.

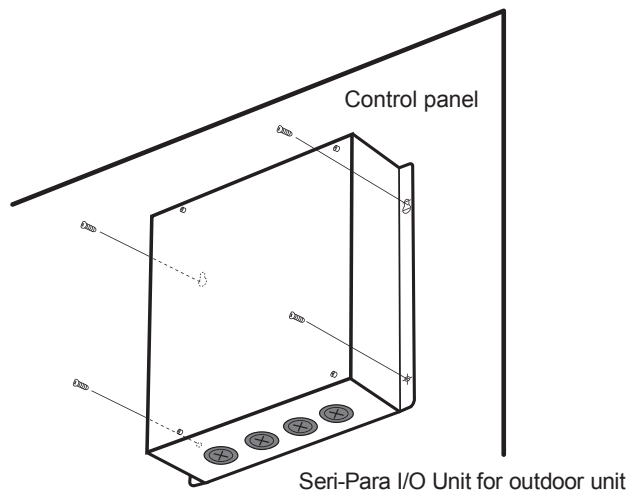

2. Wiring for the Seri-Para I/O Unit for outdoor unit


For safety, turn off the main power supply (breaker) before installing or removing the Seri-Para I/O Unit for outdoor unit.

Remove the 4 screws from the body and remove the top cover.

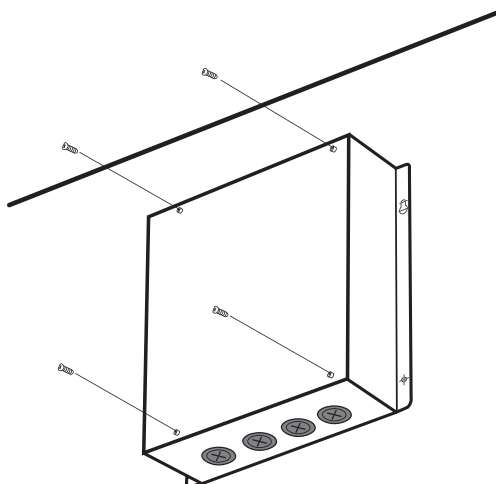

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

<Arrangement of components on the Seri-Para I/O Unit for outdoor unit board>

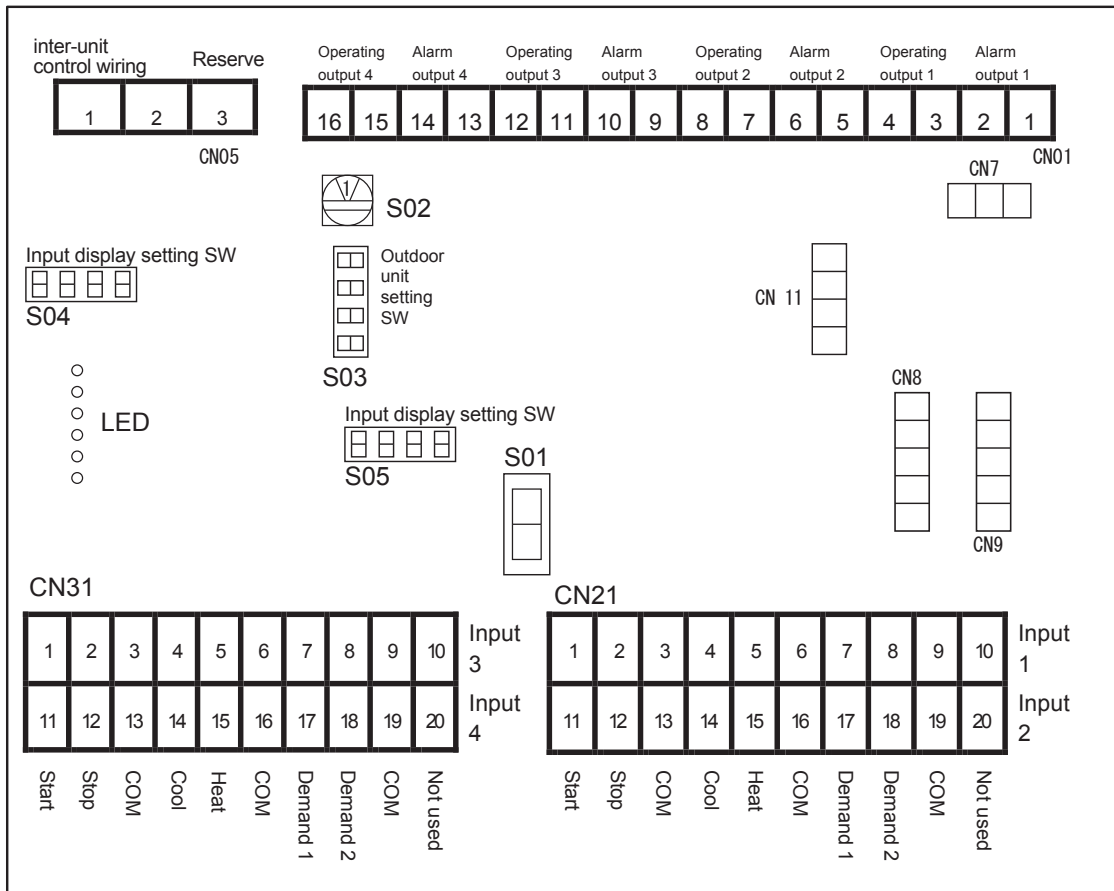

(1) Connecting the power


This interface can use either 110-120V AC power or 220-240V AC power. Insert the transformer primary-side (red 5P connector) into either the 110-120V AC CN (red connector labeled "CN 9") or the 220-240V AC CN (red connector labeled "CN8") on the circuit board. Check the power voltage that will be used before changing it. It is initially set for 220-240V AC power.

Caution

- Be careful: If the combination of the power voltage and the transformer primary-side selection is incorrect, the interface may be damaged.
- Turn the power off before changing the connector.
- This is a high-voltage circuit, and there is danger of electric shock. Do not touch the circuit when the power is on.
- Do not touch the power connector or any other protruding metal parts when the power is on.
- Tune the power on again when a defective communication or a malfunction is generated.


12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

<Arrangement of transformer, power connector, and terminal block>

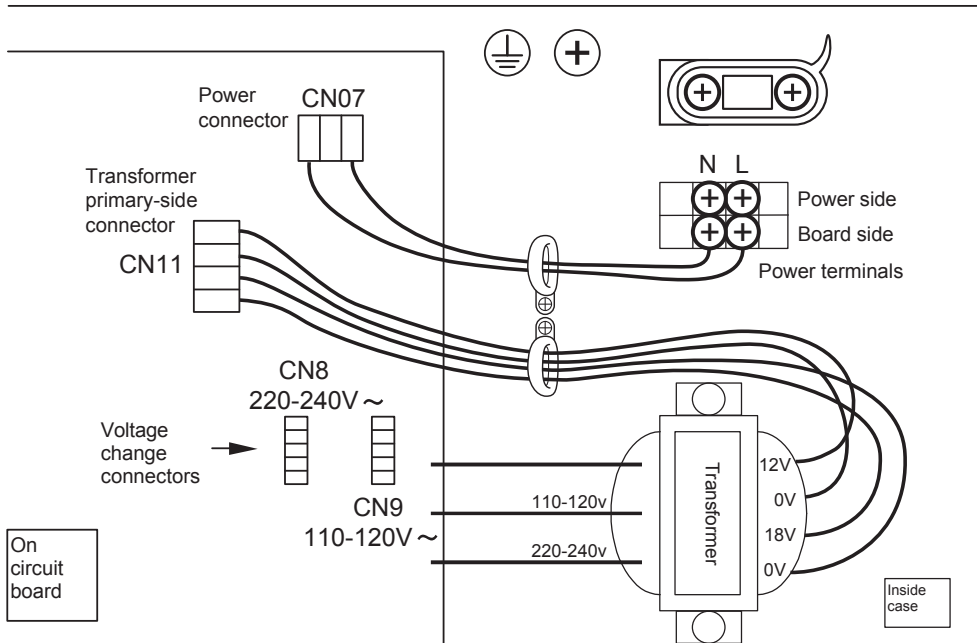

Changing the voltage:


- For 110-120V AC specifications, connect the 5P connector from the transformer to the 110-120V AC side, as shown in the figure below. (Because of the danger of electric shock, turn the power off before changing the connector.)

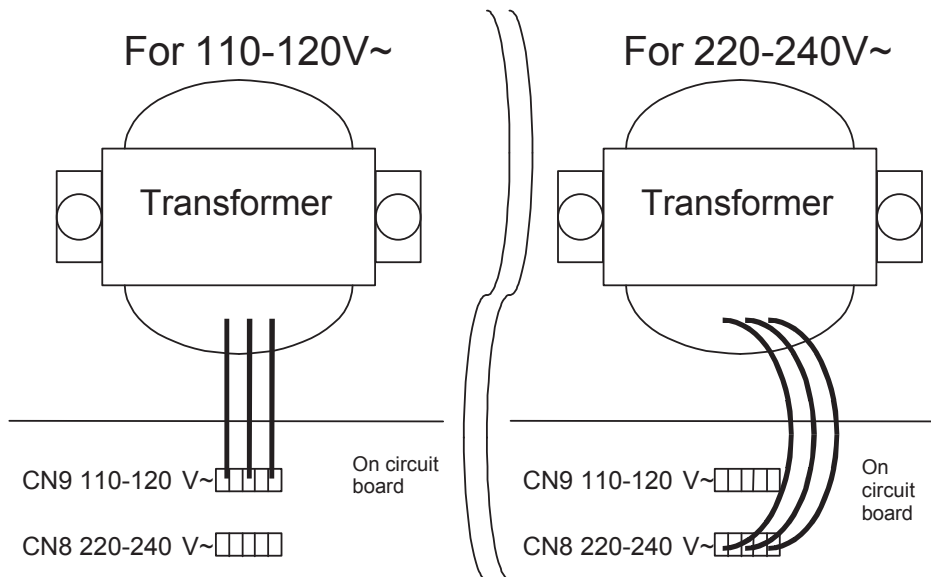

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

<Wiring Procedure>

- Connect the power supply lines to the L and N power supply terminals (the power supply neutral to the N terminal.)
- Connect an earth ground line to the screw.

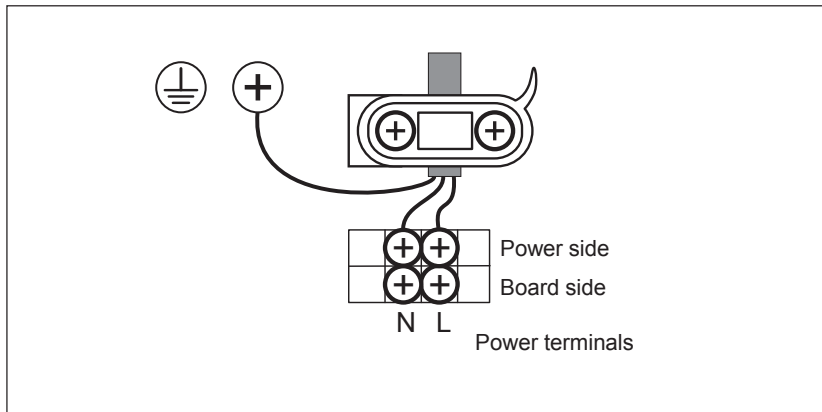

(2) Connecting the Seri-Para I/O Unit for outdoor unit and the inter-unit control wiring

- Use the inter-unit control wiring to connect the Seri-Para I/O Unit for outdoor unit to the A/C units.
- For the inter-unit control wiring, use twin-core 0.5– 2 mm² wires and shielded wiring. (Maximum length 1km.) There is no polarity to the signal wires.

Do not use the same cable for the inter-unit control wiring and power cables. Do not run them through the same conduit or place the cables near one another. For the inter-unit control wiring, use signal wires that are clearly differentiated from the power cables.



<Signal wire type> Thickness: 0.5 – 2.0 mm²

- CCV Vinyl-insulated vinyl-sheath control cable
- VCTF Vinyl cabtyre round cable
- VCT 600V vinyl cabtyre cable
- VVR Vinyl-insulated vinyl-sheath round cable
- MVVS Braided shielded instrumentation cable
- CPEVS Shielded polyethylene-insulated vinyl-sheath cable

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

<Wiring procedure>

- Inter-unit control wiring (Use the shielded wiring)
- Connect the inter-unit control wiring connector terminals for the indoor or outdoor unit to CN05 1 and 2 on the board's inter-unit control wiring terminal block (for communications).

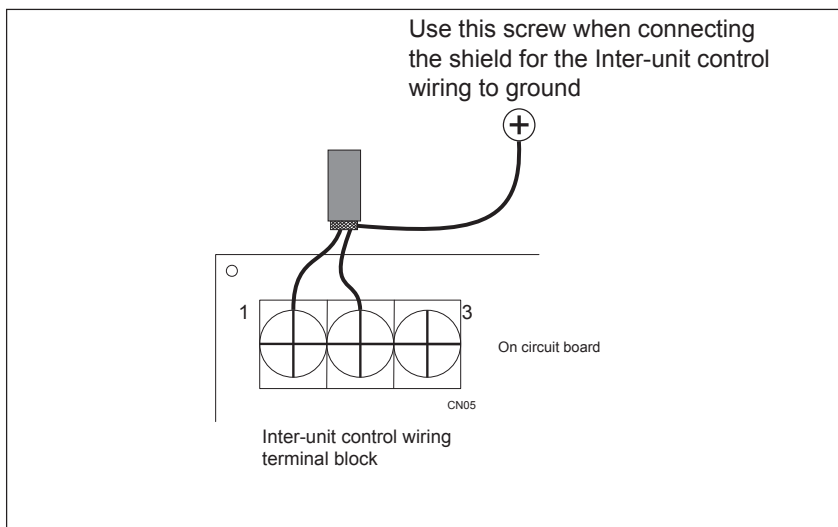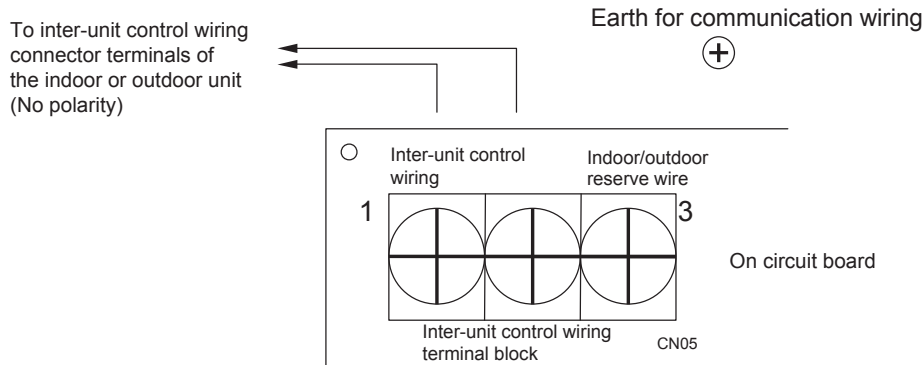


Check that the power cable (110-120/220-240V AC) has not been wired to the inter-unit control wiring terminal block. If power is accidentally applied here, the board fuse (F01) will blow in order to protect the circuit board. After correcting the power cable connection, wire by connecting the inter-unit control wiring to CN05 1 to 3 (using the indoor/outdoor reserve wire).

(Be sure to turn the power off before beginning work.)

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

<Basic wiring diagram>

- The diagram below shows a sample wiring arrangement of inter-unit control wiring for the Seri-Para I/O Unit for outdoor unit.
- One system can include a maximum of 30 connected outdoor units and 64 connected indoor units.
- One Seri-Para I/O Unit for outdoor unit can be connected to a maximum of 4 outdoor units in 1 system. A maximum of 8 Seri-Para I/O Unit for outdoor units can be connected to control up to 30 outdoor units.

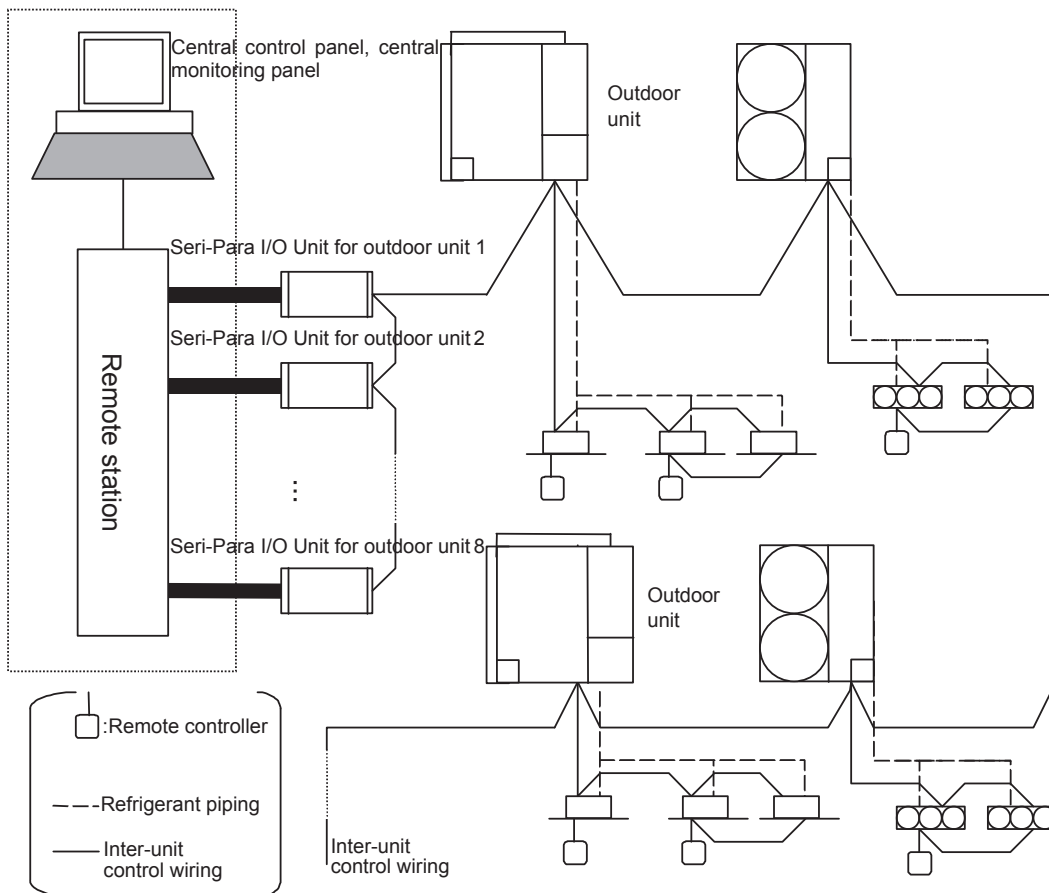

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

(3) Connections between the Seri-Para I/O Unit for outdoor unit and external connectors(central control panel, central monitoring panel)

Name	Input/output item	Seri-Para I/O Unit for outdoor unit side		Equipment (central control panel, central monitoring panel) side		
		Input/output condition	Terminal No.	Separation terminal	Sample circuit	Input/output condition
Status output	Operating output 1 - 4 No-voltage a-contact output Allowable contact voltage and current: 30 V, 1 A Minimum applied load: 1V, 1 mA	CN01-3,01-7, CN01-11,01-15				Response time for start/stop input: Max. 20 s
	CN01-4,01-8, CN01-12,01-16					
Alarm output 1 - 4 No-voltage a-contact output Allowable contact voltage and current: 30 V, 1 A Minimum applied load: 1V, 1 mA	CN01-1,01-5, CN01-9,01-13				Response time for start/stop input: Max. 20 s	
	CN01-2,01-6, CN01-10,01-14					
Control input	All-start input (pulse/static) Photocoupler input Allowable contact voltage and current: DC 24V, 10 mA Switch 01 is set as a no-voltage contact (setting when unit is shipped).	CN21-1,21-11, CN31-1,31-11				Pulse width: 1 s or more No-voltage a-contact output
		CN21-2,21-12, CN31-2,31-12				
		CN21-3,21-13, CN31-3,31-13				
Control input	All-start input All-stop input (pulse/static) Photocoupler input Allowable contact voltage and current: DC 24 V, 10 mA Switch 01 is set as DC 24 V contact.	CN21-1,21-11, CN31-1,31-11				Pulse width: 1 s or more No-voltage a-contact output
		CN21-2,21-12, CN31-2,31-12				
		CN21-3,21-13, CN31-3,31-13				

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

Name	Input/output item	Seri-Para I/O Unit for outdoor unit side		Equipment (central control panel, central monitoring panel) side		
		Input/output	Terminal No.	Separation terminal	Sample circuit	Input/output condition
Contact input/output terminal	Control input (static)	Cool input Heat input (Demand 1, demand 2) Photocoupler input Allowable contact voltage and current: DC 24 V, 10 mA Switch 01 is set as a no-voltage contact (setting when unit is shipped).	CN21-4,21-14, (21-7,21-17) CN31-4,31-14, (31-7,31-17) CN21-5,21-15, (21-8,21-18) CN31-5,31-15, (31-8,31-18) CN21-6,21-16, (21-9,21-19) CN31-6,31-16, (31-9,31-19)			Pulse width: 1 s or more No-voltage a-contact output
	Cool input Heat input (Demand 1, demand 2) Photocoupler input Allowable contact voltage and current: DC 24 V, 10 mA Switch 01 is set as DC 24 V contact.	CN21-4,21-14, (21-7,21-17) CN31-4,31-14, (31-7,31-17) CN21-5,21-15, (21-8,21-18) CN31-5,31-15, (31-8,31-18) CN21-6,21-16, (21-9,21-19) CN31-6,31-16, (31-9,31-19)			Pulse width: 1 s or more No- voltage a-contact output	

Note: Demand 1 and 2 (shown in parentheses) are listed together because their structure is the same as cool/heat input.

- The length of digital signal wiring between the Seri-Para I/O Unit for outdoor unit and the equipment side must be 100 m or less.

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

* Input terminal block table

	Input 1	Input 2	Input 3	Input 4
All-start	CN21-1 CN21-3	CN21-11 CN21-13	CN31-1 CN31-3	CN31-11 CN31-13
All-stop	CN21-2 CN21-3	CN21-12 CN21-13	CN31-2 CN31-3	CN31-12 CN31-13
Cool	CN21-4 CN21-6	CN21-14 CN21-16	CN31-4 CN31-6	CN31-14 CN31-16
Heat	CN21-5 CN21-6	CN21-15 CN21-16	CN31-5 CN31-6	CN31-15 CN31-16
Demand 1/ thermostat OFF	CN21-7 CN21-9	CN21-17 CN21-19	CN31-7 CN31-9	CN31-17 CN31-19
Demand 2/ remote-con- troller inhibit	CN21-8 CN21-9	CN21-18 CN21-19	CN31-8 CN31-9	CN31-18 CN31-19


* Polarity for input wiring

	Input (start, stop, cool, heat, demand 1/thermostat OFF demand 2/remote-controller inhibit)	COM
S01-direction no-voltage contact	Because it is a no-voltage contact, there is no polarity.	Because it is a no-voltage contact, there is no polarity.
S01-direction DC 24 V contact	Positive	COM

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

3. Setting Switches


- Setting switch S01 (Change the voltage before turning on the power.)

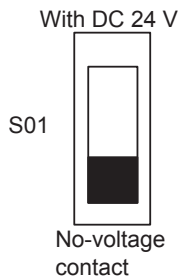

- S01 (contact input voltage change SW) (Set as a no-voltage contact when unit is shipped.)

- When using the input terminal as a no-voltage a-contact, set switch S01 to the no-voltage contact side.
- When using the input terminal as a DC 24 V contact, set switch S01 to the DC 24 V voltage side.

- Setting switches S02 and S03

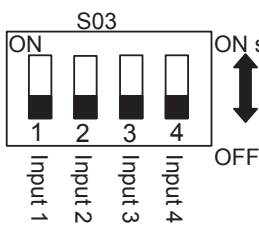

- S02 (outdoor SP address setting SW)

This switch sets the Seri-Para I/O Unit for outdoor unit address. (Refer to *1.)

- S03 (outdoor unit setting SW)

This switch sets the connected outdoor units. Be sure to turn the SW to the ON side for each input that will be used. (Note: If input is turned OFF, no input or output occurs.)

- | | |
|-----------------------------------|-----------------------------------|
| 1: Outdoor unit addresses 1 - 4 | 2: Outdoor unit addresses 5 - 8 |
| 3: Outdoor unit addresses 9 - 12 | 4: Outdoor unit addresses 13 - 16 |
| 5: Outdoor unit addresses 17 - 20 | 6: Outdoor unit addresses 21 - 24 |
| 7: Outdoor unit addresses 25 - 28 | 8: Outdoor unit addresses 29 - 30 |
- (0 is set the same as 1. 9 is set the same as 8.)


(*1) Relationship between the input/output terminal block (input/output 1 - 4) and the Outdoor unit address when S02 (outdoor SP address setting SW) is changed

S02 (outdoor SP address setting SW)	Input/output terminal block number				System address (outdoor unit address)
	1	2	3	4	
1	1	2	3	4	
2	5	6	7	8	
3	9	10	11	12	
4	13	14	15	16	
5	17	18	19	20	
6	21	22	23	24	
7	25	26	27	28	
8	29	30	30	30	

* Set the S02 not to overlap.

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

- Setting switch S04

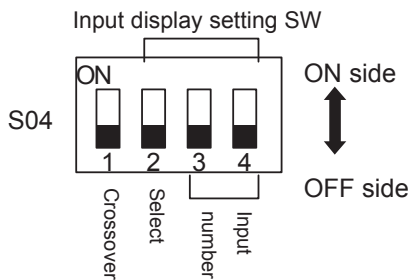

- S04-1 (OFF when unit is shipped.)

Crossover	OFF	No crossover process (normal)
	ON	Crossover process performed (Connect only to terminal block input 1.)

* Crossover process: Performs the same process as if terminal block inputs 1 - 4 were wired across one another. (Processing proceeds as if inputs 2 - 4 were the same as input 1.) Even if there is crossover input, input and output operations are not performed if the S03 input is turned OFF.

- S04-2 (OFF when unit is shipped.)

Select	OFF	Displays the status of communications with the outdoor unit corresponding to LED 1 - 4.
	ON	Using the LED (6), displays the input status (start, stop, etc.) for the terminal block with the input number selected.

- S04-3 and 4 input number selection: Select the input number to check.

	S04-3	S04-4
Input 1	OFF	OFF
Input 2	OFF	ON
Input 3	ON	OFF
Input 4	ON	ON

* The following information is displayed by the LED, according to the settings of S04-2 (select) and S04-3 and 4 (input number).


(If the select switch is ON, the LED illuminate according to the signal that is being input at the input terminal block with the selected number.)

Select	OFF (normal)	ON (for checking input)
LED explanation	1 ○ Status of communications with the outdoor unit corresponding to each number	Start ○ Input present: Lit
	2 ○ Normal: Lit	Stop ○ No input: Not lit
	3 ○ Trouble: Flashing	Cool ○
	4 ○	Heat ○
		Demand 1 ○
		Demand 2 ○

Note: If S04-2 (select) is ON, there are cases when communications errors may go unnoticed. Therefore, leave this switch OFF when checking normal communications.

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

- Setting switch S05

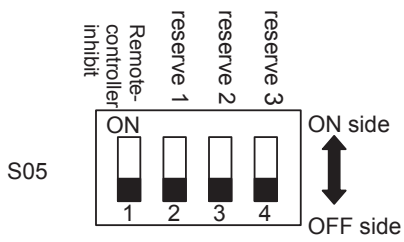

- S05-1 (OFF when unit is shipped.)
Changes the remote-controller inhibit switch input as shown below.

Remote-controller prohibit	OFF	Demand 1/demand 2
	ON	Thermostat OFF (*1)/remote-controller inhibit


*1 This input forces the thermostat to turn OFF (100% demand).

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

4. Detailed Explanation of Address Setting SW (S02)

The Seri-Para I/O Unit for outdoor unit addresses must be set (S02) when connecting and using multiple Seri-Para I/O Unit for outdoor units.

* The example here shows 8 Seri-Para I/O Unit for outdoor units and 30 outdoor units connected.

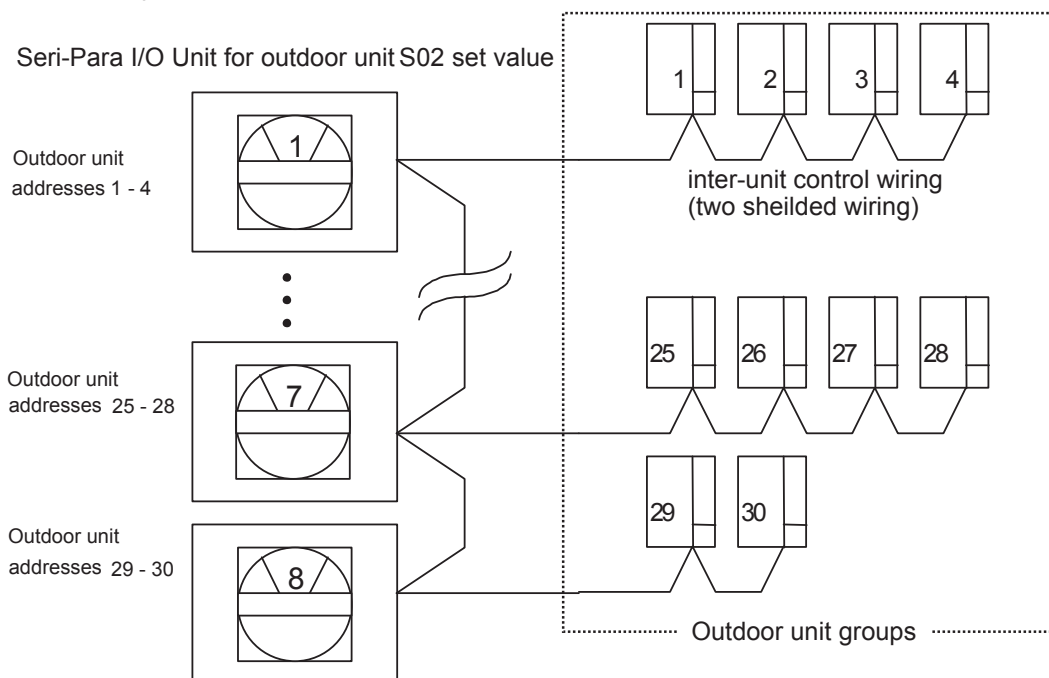


3

5. Test Run

1. Turn on the power to all A/C. Check that all test-runs are completed.
 2. After the A/C test-runs are completed, follow the procedure below.
 3. Turn on the power to the Seri-Para I/O Unit for outdoor unit. (Complete settings before turning on the power.)
 4. If there is no trouble with communications between the Seri-Para I/O Unit for outdoor unit and the outdoor units, then generate all-start input from the Seri-Para I/O Unit for outdoor unit. (Connect "Start" and "COM" on the input terminal block.) Check the operating lamps. Check all inputs in the same way. To check inputs, set the input number that you wish to check with settings switches S04-3 and 4 (input number switches). Then switch S04-2 (select switch) to ON and check the input. (Refer to **3. Setting Switches.**)
- Approximately 3 minutes after trouble occurs in the communications between the Seri-Para I/O Unit for outdoor unit and the outdoor units, the communications-check LEDs will begin flashing. When these LEDs are flashing, check and correct the communications line connections and power for the outdoor units which correspond to the flashing LEDs.

12. Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)

6. External Dimensions

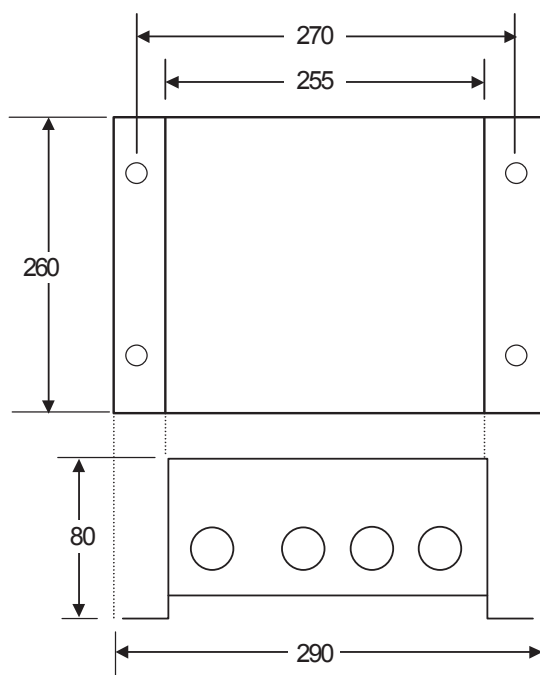

H80 x W290 x D260 mm

7. Product Specifications

Specifications

Rated voltage:	Single-phase 110-120 / 220-240 V ~
Rated frequency:	50 / 60 Hz
Power consumption:	Approx. 18 W
Weight:	3.2 kg

13. Seri-para I/O Unit for each indoor unit (CZ-CAPBC2)

For Your Safety

Read the following instructions carefully, and carry out secure installation and electrical work.

The precautions given in this manual consist of specific "⚠Warning" and "⚠ Caution". They provide important safety-related information. Be sure to strictly observe all safety procedures. The labels and their meanings are as described below.

⚠Warning This symbol refers to a hazard or unsafe procedure or practice that can result in severe personal injury or death.

⚠Caution This symbol refers to a hazard or unsafe procedure or practice that can result in personal injury or product or property damage.

After installation is completed, perform a test run to check for operating trouble. Explain operating procedures to the customer and request the customer to store the Procedures for Installation (Electrical Work) and Test Operation of Seri-Para I/O Unit for each indoor unit.



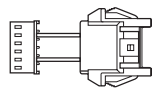


⚠Warning

- Be sure to arrange installation by the dealer where the system was purchased or by a professional installer. Electric shock or fire may result if an inexperienced person performs any installation or wiring procedures incorrectly.
- Be sure that this unit is securely installed in accordance with the Procedures for Installation (Electrical Work) and Test Operation of Seri-Para I/O Unit for each indoor unit. Electric shock or fire may result if any installation or wiring procedures are incorrectly performed.
- Only a qualified electrician should attempt to connect this system, in accordance with the instructions in this manual. Insufficient electrical circuit capacity or incorrect installation may cause electric shock and fire.
- Use the specified cables for the electrical connections, and connect the cables securely. Run and fasten the cables securely so that external forces or pressure placed on the cables will not be transmitted to the connection terminals. Overheating or fire may result if connections or attachments are not secure.

⚠Caution

- Depending on the installation conditions and location, an earth leakage breaker may be required. If an earth-leakage breaker is not installed, there is a danger of electric shock or fire.
- Ground yourself to discharge static electricity before performing any wiring.

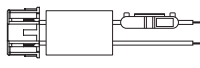Accessories

No.	Accessory	Quantity	No.	Accessory	Quantity
①	T10 cable (150mm) *1  with a current fuse ※1	1	④	Wire joints 	2
②	T10 cable (100mm) *2 	1	⑤	Installation Plan (this manual) 	1
③	Installation Screws (tapping screws ϕ 4x8mm) 	4			


※1 In the case of melting-down of fuse cables due to a short-circuit, wrong wiring or excessive current, change current to 125V/0.5A.

*1 Panasonic model or SANYO 4-series or newer type.

*2 SANYO 3-series type.

Installing

Installation Screws
(tapping screws x 4
Accessory components ③)

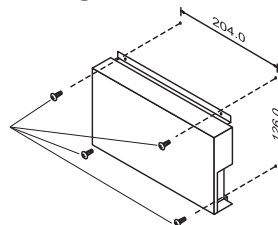


Note:

- Do not run the communication lines and power cables through the same conduit, or twist those cables together, or place the cables near one another. It can cause malfunction.
- Install it away from any sources of electrical noise.
- Avoid installing in any locations where the unit may come into contact with water, or in any extremely humid locations.
- Avoid installing in any location that is subject to excessive vibration or physical impacts.


13. Seri-para I/O Unit for each indoor unit (CZ-CAPBC2)

Wiring

Removing the top cover

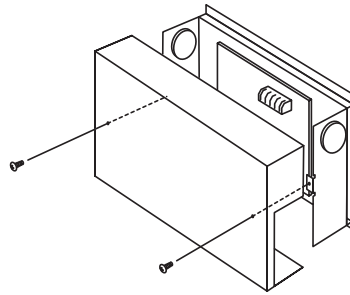

Arrangement of the terminal block and switches

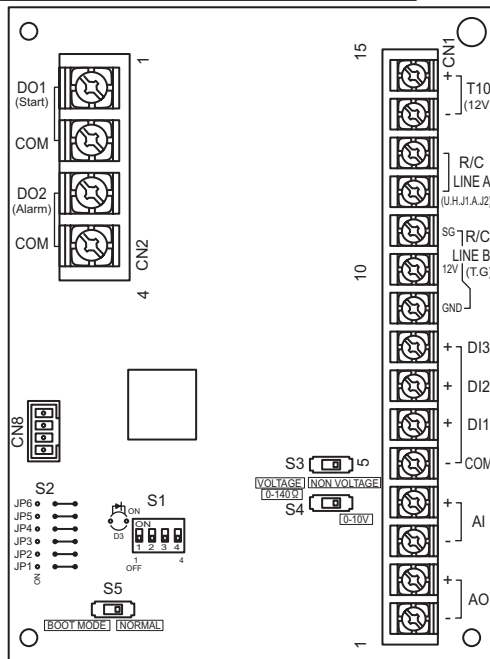

CN1	15	+	T10(12V)	12 V power supply
	14	-		
	13		R/C LINE A	Remote control line A
	12			
	11	SG		
	10	12V	R/C LINE B	Remote control line B
	9	GND		
	8	+	DI 3	Digital input
	7	+	DI 2	
	6	+	DI 1	
	5	-	COM	
	4	+	AI	Analog input (Change temperature setting)
	3	-		
	2	+	AO	Analog output (Room temperature monitor)
	1	-		

CN2	1	DO1	Digital output 1 (Start output)
	2	COM	
	3	DO2	Digital output 2 (Alarm output)
	4	COM	

S1	Control type setting switch
S2	Detail setting switch
S3	Voltage present / absent switch
S4	Set temperature input select switch
S5	Not used


CN8	Not used
-----	----------

Caution:

- Always use round connectors with insulator holddown for wiring to the terminal block. (CN1 uses M3.0, CN2 uses M3.5)

Securing the wiring

Make sure to secure all wiring using the clip wires inside the unit, and the cable clamps outside the unit.

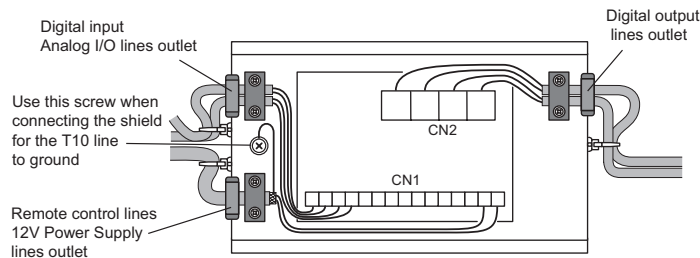

Caution:


- If using high-voltage wiring such as AC power supply (Digital output), make sure that wiring does not contact any component on the circuit board, or any low-voltage (CN1) wiring.

13. Seri-para I/O Unit for each indoor unit (CZ-CAPBC2)

(1) Connecting to indoor units


- Do not run the control lines and power cables in the same conduit, do not connect those lines and cables with the same wire, and do not place those lines and cables close together. (Maintain a minimum 30 cm separation.)
- Wiring specifications
 - Type: vinyl insulated cord with sheath
 - Thickness: 0.5 to 2.0 mm²
 - Length: 100 m maximum
 - * Use the shielded wire for the 12 V power cable (T10).

Connect to model of Panasonic or SANYO 4-series or newer type

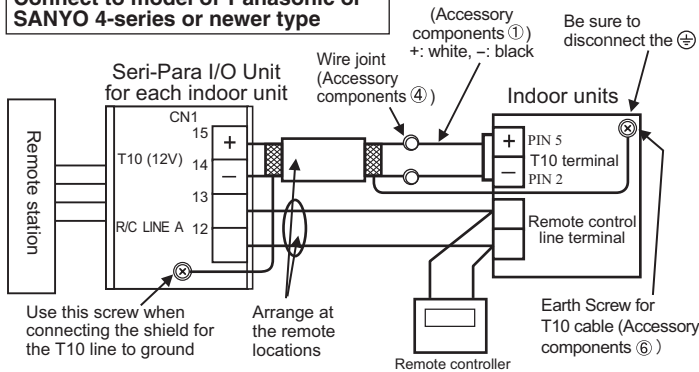

- Remote control line**
Connect terminals 12 and 13 (Remote Control Line A) on the Seri-Para I/O Unit terminal block CN1 to the Remote Control terminals of the indoor unit. There is no polarity for the signal wires.
- 12V power supply line**
Connect terminals 14 and 15 (12V Power Supply Line) on the Seri-Para I/O Unit terminal block CN1 to the T10 terminal of the indoor unit. The polarity of the connection is important; make sure to connect the + and - terminals correctly. Wiring the polarity incorrectly may result in damage to the units.

Connect to model of SANYO 3-series type

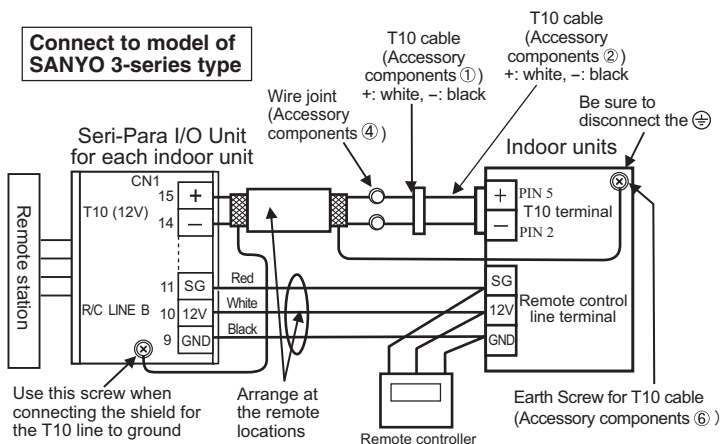

- Remote control line**
Connect terminals 9, 10, and 11 (Remote Control Line B) on the Seri-Para I/O Unit terminal block CN1 to the Remote Control terminals of the indoor unit. The polarity of the connection is important; make sure to connect the GND, 12V and SG correctly. Wiring the polarity incorrectly may result in damage to the units.
- 12V power supply line**
Connect terminals 14 and 15 (12V Power Supply Line) on the Seri-Para I/O Unit terminal block CN1 to the T10 terminal of the indoor unit. The polarity of the connection is important; make sure to connect the + and - terminals correctly. Wiring the polarity incorrectly may result in damage to the units.

13. Seri-para I/O Unit for each indoor unit (CZ-CAPBC2)

Cautions

- * In addition to the Seri-Para I/O Unit, be sure to install a remote control or centralized control device (system controller, etc.) in the indoor unit
- * Two or more Seri-Para I/O Units cannot be linked within a remote control line.
- * The Seri-Para I/O Unit cannot be used with a control device which uses the T10 terminal of the indoor unit (example: indoor unit relay board, schedule timer, etc.)

(2) Connecting to the Remote Stations







- Do not run the control lines and power cables in the same conduit, do not connect those lines and cables with the same wire, and do not place those lines and cables close together. (Maintain a minimum 30 cm separation.)

Name	Input/output item	Seri-Para I/O Unit side		Remote Station side	
		Input/output conditions	Terminal number	Example Circuit	Input/output conditions
Digital input/output terminal	Digital input ※1	DI1 Input DI2 Input DI3 Input Voltage a-contact static or Voltage a-contact pulses Allowable contact voltage and current : DC 24 V, 10 mA Voltage present / absent switch : S3 Voltage absent : set to <input type="checkbox"/> NON VOLTAGE Voltage present : set to <input type="checkbox"/> VOLTAGE	<ul style="list-style-type: none"> • For voltage absent input (factory default) <ul style="list-style-type: none"> • For voltage present input 	Voltage present 12 to 24V or Voltage absent When pulse input: 200 ms minimum	
	Digital output ※2	Start output Alarm output No-voltage a-contact static Allowable contact voltage and current : AC 240 V, 3A DC 24 V, 3A (Minimum load 10mA)			
Analog input/output terminal	Analog input ※3	Indoor temperature setting input Input voltage : 0 to 10V or 0 to 140 Ω Temperature setting range: Within the indoor units temperature setting range Temperature reading: In steps of 1°C Set temperature input select switch : S4 Voltage level input: set to <input type="checkbox"/> 0 to 10V Resistance connection : set to <input type="checkbox"/> 0 to 140 Ω		For analog inputs, use within 0.1% of reference accuracy	
	Analog output ※4	Indoor temperature monitor output Output current : 4 to 20 mA Temperature indication range : 5 to 36 °C, 0.5 °C step		Allowable load: 240 Ω maximum	

13. Seri-para I/O Unit for each indoor unit (CZ-CAPBC2)

※ 1 Digital input

- Select the control type using control type setting switch S1, according to the table below.

Control type	Input1 (DI 1)		Input2 (DI 2)		Input3 (DI 3)		Voltage a-contact static/pulses ※ 1
	 (open) → (close)	 (close) → (open)	 (open) → (close)	 (close) → (open)	 (open) → (close)	 (close) → (open)	
0	Start Fan low	Indoor units stop when all of Input 1, 2, 3 are open	Start Fan medium	Indoor units stop when all of Input 1, 2, 3 are open	Start Fan high	Indoor units stop when all of Input 1, 2, 3 are open	All input: static
1	Start Prohibit R/C Start/Stop	Stop Prohibit R/C Start/Stop	Start Accept R/C Start/Stop	Stop Prohibit R/C Start/Stop	Stop Prohibit R/C Start/Stop	-	Input 1, 2: static Input 3: pulse
2	Start Prohibit R/C Start	Stop Prohibit R/C Start/Stop	Accept R/C Start/Stop	Stop Prohibit R/C Start/Stop	Stop Prohibit R/C Start/Stop	-	Input 1, 2: static Input 3: pulse
3	Start ↔ Stop Prohibit R/C Start/Stop	-	Start ↔ Stop Accept R/C Start/Stop	-	Stop Prohibit R/C Start/Stop	-	All input: pulse
4	Start Prohibit R/C Start/Stop	-	Start Accept R/C Start/Stop	-	Stop Prohibit R/C Start/Stop	-	
5	Start Prohibit R/C Start	-	Accept R/C Start/Stop	-	Stop Prohibit R/C Start/Stop	-	
6	Start Accept R/C Start/Stop	-	Stop Accept R/C Start/Stop	-	-	-	
7	Start ↔ Stop Prohibit R/C Start/Stop	-	Start ↔ Stop Accept R/C Start/Stop	-	Set thermostat OFF	Release thermostat OFF	Input 1, 2: pulse Input 3: static
8	-	-	-	-	-	-	-
9	Heat	-	Cool	-	Fan	-	All input: pulse
10	Heat Start	Indoor units stop when all of Input 1, 2, 3 are open	Cool Start	Indoor units stop when all of Input 1, 2, 3 are open	Fan Start	Indoor units stop when all of Input 1, 2, 3 are open	All input: static
11	-	-	-	-	-	-	-
12	-	-	-	-	-	-	-
13	-	-	-	-	-	-	-
14	-	-	-	-	-	-	-
15	Start	Stop	-	-	Set thermostat OFF	Release thermostat OFF	All input: static

※ R/C: Remote Controller

※ 1: When inputting pulses, set the pulse width to 200 ms.

• Wiring specifications

Type: vinyl insulated cord with sheath
 Thickness: 0.5 to 2.0 mm²
 Length: 100 m maximum

※ 2 Digital output

- D01 for start output signal.
D02 for alarm output signal.
- Maximum allowable contact voltage and current are AC 240 V and 3 A maximum or DC24 V and 3 A maximum.
- Wiring specifications are for digital input.

13. Seri-para I/O Unit for each indoor unit (CZ-CAPBC2)

※3 Analog input

● Select the temperature setting control method from the following 3 types.


- Input voltage ① (equally divided upper and lower setting temperature limits)
- Input voltage ② (fixed voltage)
- Input resistance

● In case of Input voltage ①, ②

- Set the Set temperature input switch S4 to "0 to 10 V" (factory default)
- Wiring specifications
 - Type: vinyl insulated cord with sheath (shield line recommended)
 - Thickness: 1.25 to 2.00 mm²
 - Length: 70 m maximum


● Input voltage ① (equally divided upper and lower setting temperature limits) (factory default)

- Performed in the input range of 0 to 10 V DC (lower setting temperature limit to upper setting temperature limit).
- Relationship between setting temperature and voltage is as the diagram below.
- Upper and lower temperature setting limits may vary according to the indoor units and operation mode. Refer to the relationship between setting temperature and voltage, described in (example) 3-1 "Operation mode of a typical model [lower limit to upper limit]".

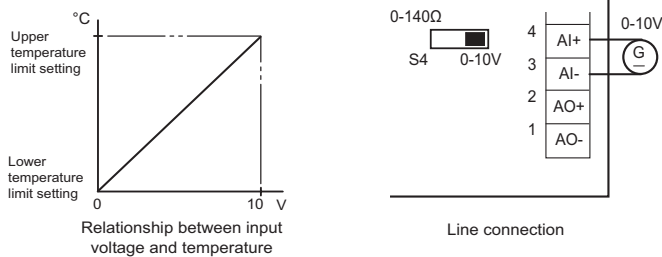

● Input voltage ② (fixed voltage)

- Performed in the input range of 0 to 10 V DC.
- The effective range of the setting temperature is 2.2 V to 10 V (11 °C to 50 °C). Remote controller cannot be used for temperature in this range.
- When the input exceeds the upper or lower setting temperature limits, it is set to the upper or lower limits. For example, in case of air-conditioning (cool) [18 °C to 30 °C], if the voltage is below 3.5 V, the temperature is set to 18 °C, and if over 6.2 V, to 30 °C.
- To set the temperature using remote controller, set the input voltage below 1.9 V.

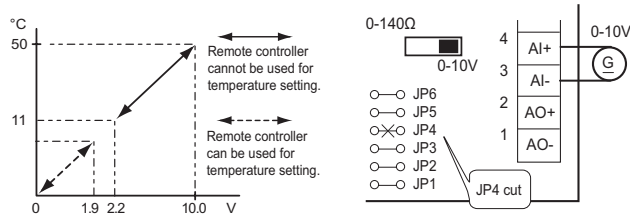

Mapping table of setting temperature and input voltage (input voltage ②)


Temperature setting [°C]	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30
Input voltage [V]	3.2	3.4	3.6	3.8	4.0	4.2	4.4	4.6	4.8	5.0	5.2	5.4	5.6	5.8	6.0

Note:

Input voltage after an indoor unit has been connected. The maximum input voltage is 10 V. Over 10 V input voltage may cause malfunction.


● Input resistance

- Temperature setting (1 °C step) is performed in the range of 0 to 140 Ω.
- Relationship between setting temperature and resistance is as the diagram below.
- Upper and lower temperature setting may vary according to the indoor units and operation mode. Refer to the relationship between setting temperature and resistance, described in (example) 3-1 "Operation mode of a typical model [lower limit to upper limit]".
- Set the Set temperature input switch S4 to "0 to 140 Ω".
- Wiring specifications
 - Type: vinyl insulated cord with sheath (shield line recommended)
 - Thickness: 1.25 to 2.00 mm²
 - Length: 70 m maximum

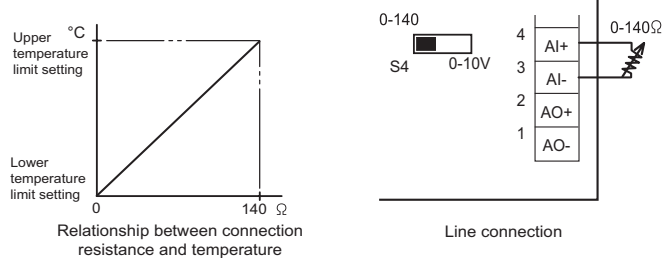


13. Seri-para I/O Unit for each indoor unit (CZ-CAPBC2)

(example) 3-1: Operation mode of a typical model [lower limit to upper limit °C]

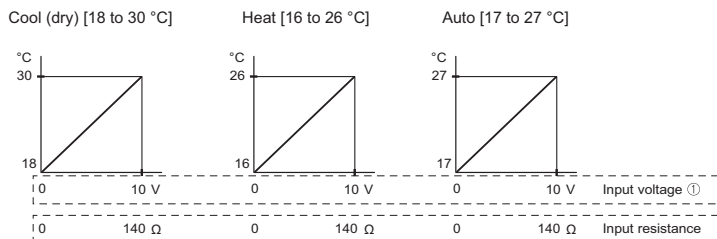

※4 Analog output

- The indoor temperature monitor output is from 4 to 20 mA DC (5 to 36°C), and the temperature can be set in steps of 0.5°C. Take care of the measurement units used by the central monitor. The wiring specifications are for analog input. Keep the load resistance below 240 Ω.

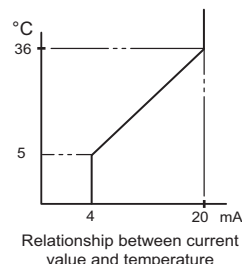

Settings switch

Control type setting switch S1

<p>ON S1</p> <p>1 2 3 4</p> <p>OFF</p> <p>— : OFF ● : ON</p>	Control type	S1				Control type	S1			
	0	—	—	—	—	8	—	—	—	●
	1	●	—	—	—	9	●	—	—	●
	2	—	●	—	—	10	—	●	—	●
	3	●	●	—	—	11	●	●	—	●
	4	—	—	●	—	12	—	—	●	●
	5	●	—	●	—	13	●	—	●	●
	6	—	●	●	—	14	—	●	●	●
7	●	●	●	—	15	●	●	●	●	

Refer to digital input.

Detail setting switch S2

<p>S2</p> <p>JP6 ● ● ● ● ● ●</p> <p>JP5 ● ● ● ● ● ●</p> <p>JP4 ● ● ● ● ● ●</p> <p>JP3 ● ● ● ● ● ●</p> <p>JP2 ● ● ● ● ● ●</p> <p>JP1 ● ● ● ● ● ●</p>	JP6	Connection	N/C	(factory default)	
		Cut	N/C		
		Connection	With Remote controller or centralized control system	(factory default) ※4	
		Cut	Without Remote controller or centralized control system	※4	
		JP4	Connection	Input voltage ①	(factory default) ※3
		Cut	Input voltage ②	※3	
		JP3	Connection	Output control temperature as room temperature	(factory default) ※2
		Cut	Output intake temperature as room temperature	※2	
		JP2	Connection	Set temperature push priority	(factory default) ※1
		Cut	Prohibit Remote controller temperature setting	※1	
		JP1	Connection	N/C	(factory default)
		Cut	N/C		

- ※1: Switches the local remote control temperature setting operation between push priority and operation prohibited.
- ※2: Switches the room temperature monitor output between the temperature used by the controller (when heating, the intake temperature with shift, or the remote control sensor) and the intake temperature.
- ※3: **Cut (fixed voltage) JP4, although no change the setting temperature with Seri-Para I/O Unit. Do not input voltage to No.3 and 4 (AI±) of CN1 at the time.**
- ※4: When using the Seri-Para I/O Unit, it is standardized to connect a remote controller or a centralized control system (i.e. System controller). To use the Seri-Para I/O Unit by itself (without a remote controller or a centralized control system), cut JP5. In this regard, however, the operational functions (such as operation mode, fan speed and wind direction) will be limited with only the Seri-Para I/O Unit.


Voltage present / absent switch S3

Set temperature input switch S4

<p>S3</p> <p>VOLTAGE NON VOLTAGE</p> <p>(factory default)</p>	<p>S4</p> <p>0-140Ω 0-10V</p> <p>(factory default)</p>
For digital input, switches between voltage present and voltage absent.	For analog input, switches between input voltage and input resistance.

13. Seri-para I/O Unit for each indoor unit (CZ-CAPBC2)

Boot Switch S5



Always set the S5 switch to NORMAL.

LED (Green) display

LED (Green) display

LED display	Meaning	Action to take
Off	Power Off	Check the remote control line connection
Blinking at 3 s intervals	12V (T10 terminal) power supply error	Check the power supply line connection Make sure that the fuse of the T10 cable (accessory components 1) does not meltdown.
On/off out at 1 s intervals	Indoor unit alarm	Clear the indoor unit alarm
On/off out at 100 ms intervals	Initializing communications, communications error	Check the remote control line connection
On ※1	Normal operation	-

※1: When transmitting setting data to an indoor unit, the LED will be turned off for 200 ms.


Product specifications

Power	DC12V
Power consumption	1.2W, 0.1A
Operating environment conditions	Temperature: -10 to 50°C; Humidity: 20 to 80%; for indoor use only
External dimensions	256.0 mm (w) x 136.0 mm (d) x 63.8 mm (h)
Weight	0.9 kg

3

External dimensions

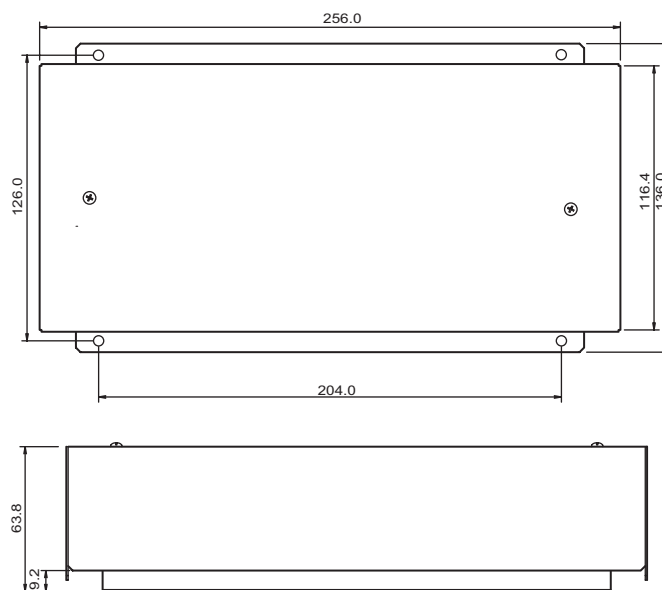

unit: mm



14. Interface Adaptor (CZ-CAPC2)

Safety Precautions

- Read these Safety Precautions before beginning installation or electrical work, and perform the work only in the correct manner.
- Precautions in this manual are given in the form of "Warnings" or "Cautions." Both types of precautions contain important information related to your safety, the safety of users, and the correct operation, installation or maintenance of the air conditioning system. Be sure to carefully observe all relevant precautions.

	WARNING	This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.
	CAUTION	This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

When installation work is completed, perform a test run and check that no trouble occurs. Also be sure to explain the methods for using the product to the customer, based on the contents of the Operation Manual. In addition, request that the customer keep and conveniently store the "Information for the Person in Charge of Installation (Electrical) Work and Servicing " together with the Operation Manual.



WARNING




- Request installation and electrical work only from the dealer or a qualified air conditioning specialist. Attempting to carry out installation work on your own, and doing so incorrectly, may result in electrical shock, fire, or other hazards.
- Installation procedures must be performed correctly, carefully following the instructions in this document. Failure to do so may result in electrical shock, fire, or other hazards.
- Electrical work must be performed by a qualified electrician. It must be performed in accordance with technical standards related to electrical equipment, interior wiring regulations, local codes, and the contents of these instructions. Insufficient power circuit capacity or improper electrical work may result in electrical shock or fire.
- Use only the designated cables for wiring, and connect them securely. Fasten cables so that no external force is applied to the terminal connections. Insufficient connections or cable fastening may result in heat generation, fire, or other hazards.
- The installation location requires the use of a circuit breaker. Failure to use a circuit breaker may result in electric shock or fire.
- Circuit breaker must be incorporated in the fixed wiring in accordance with the wiring regulations. The circuit breaker must be an approved 10-16 A, having a contact separation in all poles.



CAUTION

- Do not install in kitchens, workshops, or other locations where there is oil mist in the air.
- Do not install next to windows or in other locations exposed to direct sunlight or in direct contact with outside air.
- Do not install near an elevator, automatic door, industrial sewing machine, or other devices that can be expected to produce electrical noise.
- To prevent possible hazards from insulation failure, the unit must be grounded.

Accessories for Interface Adaptor

No.	Supplied parts	Qty.
①	Fastening screws, Tapping screws 4 x 8 	4
②	Binding strap 	2
③	Terminals (M3) 	11

Installing the Interface Adaptor


<Note 1> Avoid twisting the inter-unit control wiring or the input/output wiring together with power or other wiring, and avoid running them in the same metal conduit. Doing so can cause malfunction.

<Note 2> Install the interface adaptor at a location away from any sources of electrical noise.

<Note 3> Install a noise filter or take other appropriate action if electrical noise affects the power supply circuit of the unit.

14. Interface Adaptor (CZ-CAPC2)

Wiring up the Interface Adaptor


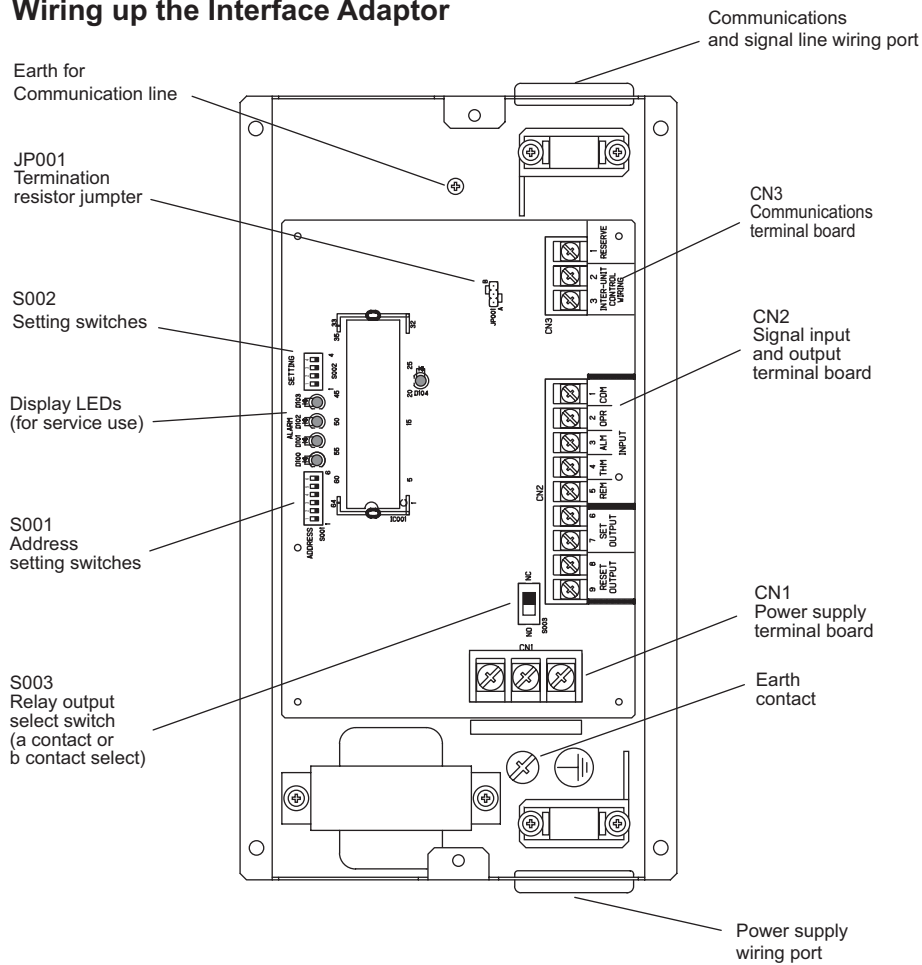


(1) Connecting the power supply

This interface adaptor can use either 110-120 V AC or 220-240 V AC power supply.

Use terminals 2 and 3 for 110-120 V AC, or terminals 1 and 3 for 220-240 V AC.

- ※ Be sure of the power supply voltage before connecting the power supply terminals. Connecting the wrong power supply voltage could result in fire or other damage.
- ※ Connect the power supply wires securely to the power supply terminals, using M4.5 round connectors with insulator hold-down.

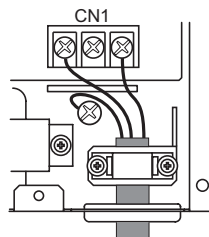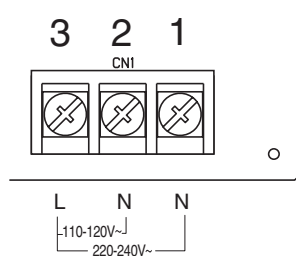


Wiring sample for 220-240 V AC

14. Interface Adaptor (CZ-CAPC2)

(2) Connecting to the central control unit


Connect the interface adaptor inter-unit control wiring (CN3, (2) and (3)) to the central control unit inter-unit control wiring, as shown in the diagram below. Use the shielded wiring.

- These signal lines do not have polarity; either signal line may be connected to terminals (2) and (3).
- These terminals may also be connected to the inter-unit control wiring of other indoor or outdoor units.
- Ground the communication wiring.

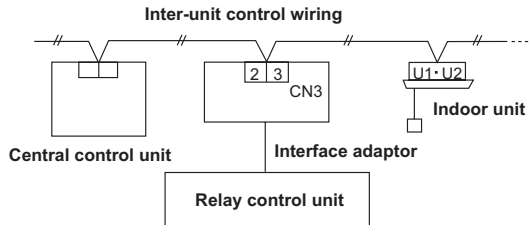


Securing the wiring

Make sure to secure all wiring using the clip wires inside the unit, and the cable clamps outside the unit.

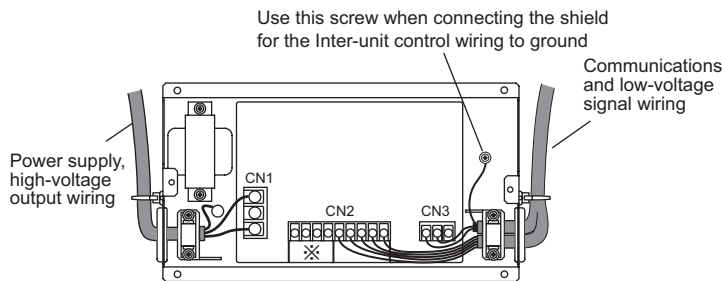

- ※ If the SET / RESET output uses high voltage signaling (110 - 240 V AC), pull that signal line out through the power supply wiring port. Bundling the high voltage signal line with the communications lines or low-voltage signal lines, or allowing it to touch them, may result in malfunction.


Circuit example for high-voltage set output

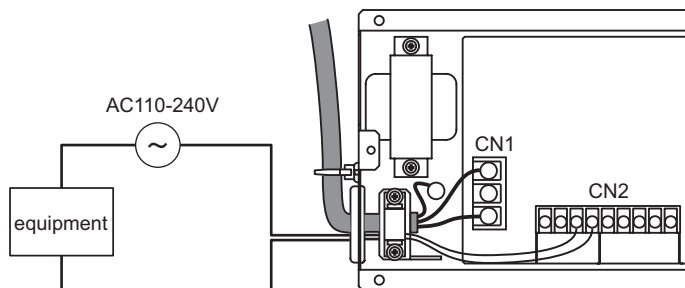


Termination Plug (JP001)

If the system is comprised of a single interface adaptor, and there are no air conditioner units connected directly to the inter-unit control wiring, then a jumper must be installed on the B side of the termination plug (JP001) of the single interface adaptor.

- Jumper on the A side of JP001: termination resistor not connected
(factory default setting)
- Jumper on the B side of JP001: termination resistor connected




no termination resistor



termination resistor connected

14. Interface Adaptor (CZ-CAPC2)

How to Set the Adaptor Address



The adaptor address corresponds to the indoor unit number.
If multiple interface adaptors are used, make sure each adaptor has a unique address.

(1) Setting the central control address from the central control unit (Setting switch S002-3 OFF)

This mode is useful for systems with both interface adaptors and indoor units which are connected directly to inter-unit control wiring, and when the central control unit sets or changes central control addresses.

Set the interface adaptor addresses, beginning with address 1.
※ Interface adaptors are registered as system address 31.

Example: When the interface adaptor address is set to 1, then the interface adaptor unit number becomes 31-1.
In this case, the central control unit is free to set the interface adaptor's central control address.

(2) Setting the central control address using the interface adaptor address switches (Setting switch S002-3 ON)

The interface adaptor address becomes the central control address.
Set the interface adaptor address as desired.

※ Interface adaptors are registered as system address 31, and the adaptor address and central control address will be the same.

Example: If the interface adaptor address is set to 5, then the interface adaptor unit number becomes 31-5, and its central control address becomes 5.


※ The central control address is fixed by the adaptor address switches.
(The central control address may not be changed by the central control unit.)

Set the address so that it does not match that of any indoor unit central control address.

Channel	adaptor address switch number						Channel	adaptor address switch number						Channel	adaptor address switch number						Channel	adaptor address switch number					
	1	2	3	4	5	6		1	2	3	4	5	6		1	2	3	4	5	6		1	2	3	4	5	6
1							17							33							49						
2	●						18	●						34	●						50	●					
3		●					19		●					35		●					51		●				
4	●	●					20	●	●					36	●	●					52	●	●				
5		●					21		●					37		●					53		●				
6	●	●					22	●	●					38	●	●					54	●	●				
7	●	●					23	●	●					39	●	●					55	●	●				
8	●	●					24	●	●					40	●	●					56	●	●				
9		●					25		●					41		●					57		●				
10	●	●					26	●	●					42	●	●					58	●	●				
11	●	●					27	●	●					43	●	●					59	●	●				
12	●	●					28	●	●					44	●	●					60	●	●				
13	●	●					29	●	●					45	●	●					61	●	●				
14	●	●					30	●	●					46	●	●					62	●	●				
15	●	●					31	●	●					47	●	●					63	●	●				
16	●	●					32	●	●					48	●	●					64	●	●				

● : ON - : OFF

Setting Switches

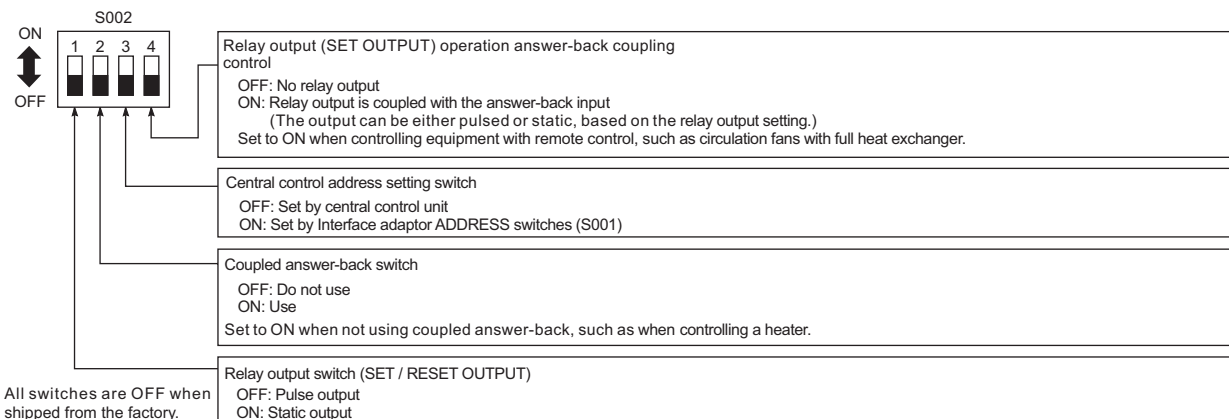





14. Interface Adaptor (CZ-CAPC2)

Connection as a Relay Control Unit

The interface adaptor output terminal and input terminal specifications are given below. Use the signals most appropriate for the type of equipment being controlled.

(1) Output terminals

The interface adaptor provides four styles of ON (set relay) and OFF (reset relay) output signals for use by the equipment being controlled. Select the style appropriate for your application. For more information, see the "Relay Circuit Examples" section.

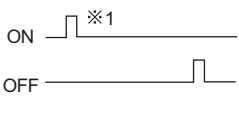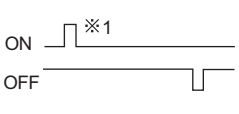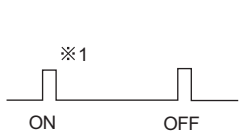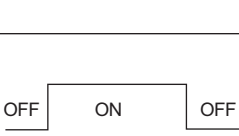Output style	Contact outputs (relay contact)	Setting method
Pulse contact output ON (set) output: a contact OFF (reset) output: a contact		<ul style="list-style-type: none"> • S002-1: OFF • S002-4: OFF • S003: NO
Pulse contact output ON (set) output: a contact OFF (reset) output: b contact		<ul style="list-style-type: none"> • S002-1: OFF • S002-4: OFF • S003: NC
Pulse contact output ON (set) output: a contact Both start and stop signals are sourced in turn from the ON (set) relay		<ul style="list-style-type: none"> • S002-1: OFF • S002-2: OFF • S002-4: ON • Only the ON contact output is used. • The OFF contact output becomes a local prohibit signal (see ※2)
Static contact output (continuous contact)		<ul style="list-style-type: none"> • S002-1: ON • Only the ON contact output is used. • The OFF contact output becomes a local prohibit signal (see ※2)

※ 1 The pulse width is approximately 0.5 seconds.

※ 2 The output changes according to a signal from the Central control unit. Use this signal as needed.

Individual permission: OFF (continuous contact)
Local prohibit: ON (continuous contact)

< Contact capacity >

Output	Contact capacity (resistive load)
ON (set) relay output (CN1, terminals 6 and 7)	250 V AC, 10 A (inductive load: 5 A) Minimum usable load: 5 V, 100 mA
OFF (reset) relay output (CN1, terminals 8 and 9)	250 V AC, 3 A Minimum usable load: 5 V, 100 mA

Caution:

Note that the ON (set) relay output and OFF (reset) relay output have different contact capacities.

(2) Input terminals

- Status monitor signals from the equipment being controlled are received by the relay contacts.
- The local start/stop input uses a pulse style, so connect it to a momentary input device, such as a push switch.

Input	Terminal numbers	Input style	Usage
Operation answer-back input	1, 2	No-voltage a contact (static)	Monitor the operation (start/stop condition)
Alarm signal input	1, 3	No-voltage a contact (static)	Monitor general alarms
Thermo ON signal input	1, 4	No-voltage a contact (static)	Monitor the load when the thermo is ON, and report to the central control unit
Local start/stop input	1, 5	No-voltage a contact (pulse)	Equipment ON/OFF from interface adaptor

Circuit contact voltage and current: 12 V DC, 10 mA

Caution:

When local prohibit (central) is set by the central control unit, the local start/stop input will be ignored.

When stopped, the alarm input will be ignored.

14. Interface Adaptor (CZ-CAPC2)

Relay Circuit Examples

Style	Installed equipment (areas within the dashed lines are the interface adaptor)	Notes
Pulse contact output (no-voltage contact) (ON output a contact + OFF output a contact)		<ol style="list-style-type: none"> 1) X1, X2 are auxiliary devices 2) The interface adaptor OFF output uses the a contact (S003 set to NO) 3) Switch S002-1 is OFF, switch S002-4 is OFF
Pulse contact output (no-voltage contact) (ON output a contact + OFF output b contact)		<ol style="list-style-type: none"> 1) X1 is an auxiliary device 2) The interface adaptor OFF output uses the b contact (S003 set to NC) 3) Switch S002-1 is OFF, switch S002-4 is OFF
Continuous contact output (no-voltage contact) (ON output a contact)		<ol style="list-style-type: none"> 1) X1 is an auxiliary devices 2) Switch S002-1 is ON 3) The equipment can be controlled directly (power supply directly shut off) by the ON output if it requires 250 V AC, 5 A or less (inductive load) 4) The output will be OFF during a commercial power outage 5) The OFF output may be used for individual / central selection (will be ON when the central control unit is set to "central", off when the central control unit is set to "individual").
Input (no-voltage a contact)		<ol style="list-style-type: none"> 1) X1, X2, X3 are auxiliary devices; SW is a push switch. 2) If operation answer-back from the equipment is not used, switch S002-2 is ON. In this case, the internal answer-back will be OFF during a commercial power outage. 3) If the answer-back input is unused, it should not be connected. (Only connect inputs that are used.)
Connecting to a circulation fan with a full heat exchanger		<ol style="list-style-type: none"> 1) Switch S002-1 is OFF, switch S002-2 is OFF, switch S002-4 is ON 2) The circulation fan with full heat exchanger's external start/stop control input uses no-voltage a contact pulse, and its start/stop condition output uses no-voltage a contact. <p>Caution: If the Central control unit or circulation fan with full heat exchanger remote control repeatedly and continuously initiates start/stop operations, the circulation fan with full heat exchanger may not be able to recognize the settings.</p>

3

14. Interface Adaptor (CZ-CAPC2)

Alarm Display

Alarm			Service display lamps			
Item	Meaning	Action	D100	D101	D102	D103
Alarm from connected equipment	An alarm signal was received by the interface adaptor from a connected piece of equipment during operation.	Investigate the reason for the alarm from the connected equipment, and remove the cause of the alarm.	※	●	●	●
System stop	The system is stopped.	Not an alarm	※	※	※	※

※: blink ●: Off


Of the items listed above, only the alarm from connected equipment is passed to an upstream central control unit, which will display "C12". If the central control unit does not have an LCD display, then its warning LED will blink.

Specifications

Power source	110 -120V / 220-240 V ~ 50 / 60Hz , single-phase
Power consumption	4.9 W
Operating environment	0-40 °C, 20-80% humidity, indoor only
External dimensions	50 mm (h) x 235 mm (w) x 96.5 mm (d)
Weight	Approx. 1.3 kg

External dimensions

Unit: mm

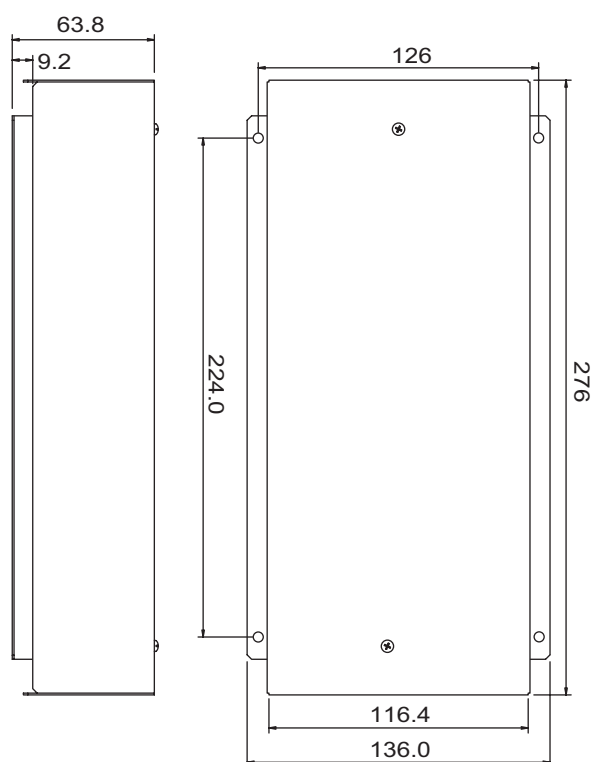

15. Web Interface (CZ-CWEBC2)

Operation Manual


Centralized Control System CZ-CWEBC2

Web Interface

Thank you for choosing the CZ-CWEBC2 Web Interface.

Before using the system, be sure to read this manual carefully. In particular, be sure to read the "Important Safety Instructions".

After reading this manual, store it in a convenient place.

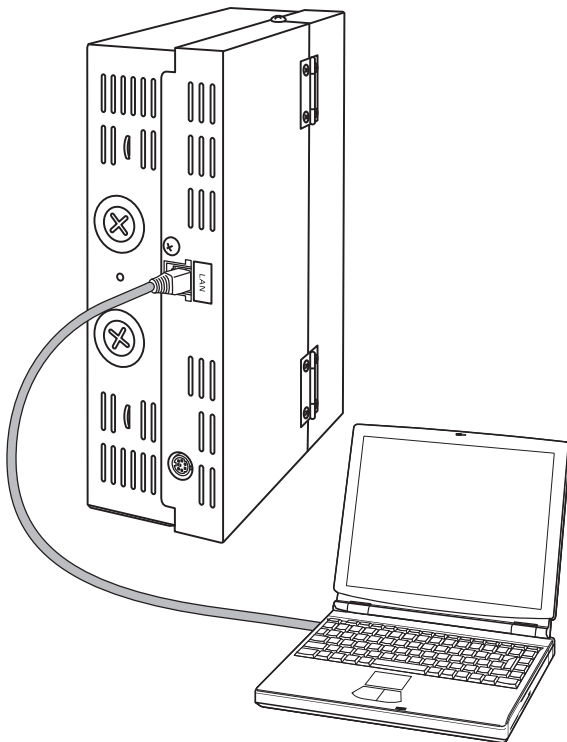

Contents

1. Important Safety Instructions	3
2. Features of the System	7
3. System Configuration	8
4. Names and Functions of Parts.....	9
5. Preparations and Login	12
6. Status/Control	14
7. Maintenance.....	21
8. Initial Settings	24
9. Auxiliary Settings	35
10. Supplementary Information	45
11. Troubleshooting.....	48
12. Care.....	50
13. Specifications.....	51

15. Web Interface (CZ-CWEBC2)

Centralized Control System

CZ-CWEBC2

Web Interface

Operation Manual

15. Web Interface (CZ-CWEBC2)

Contents

1 Important Safety Instructions	3
2 Features of the System	7
3 System Configuration	8
4 Names and Functions of Parts	9
5 Preparations and Login	12
5.1 Turning the Web Interface On	12
5.2 Checking the PC	12
5.3 Log-in	12
6 Status/Control	14
6.1 Displaying general information by tenant	14
6.2 Displaying detailed information by tenant	19
6.3 All Units	20
7 Maintenance	21
7.1 Alarm Log	21
7.2 Sent Mail Log	22
8 Initial Settings	24
8.1 Date and Time Setting	24
8.2 Unit/Tenant	26
8.3 WEB Settings	28
8.4 User Settings	30
9 Auxiliary Settings	35
9.1 Program Timer	35
9.2 Tenant holiday/Timer special day	37
9.3 Prohibiting remote control use	39
9.4 Other settings	41
10 Supplementary Information	45
11 Troubleshooting	48
12 Care	50
13 Specifications	51

Main 1 Sub 1

Main 1 Sub 2

Main 1 Sub 3

Main 2 Sub 1

Main 2 Sub 2

Main 3 Sub 1

Main 3 Sub 2

Main 3 Sub 3

Main 3 Sub 4

Main 4 Sub 1

Main 4 Sub 2

Main 4 Sub 3

Main 4 Sub 4

[Note]

The screen display examples in this manual are for explanation use and may be different from the displays of air conditioners actually used.

The screen displays may also vary, depending on the operating system of your PC and the Web browser you use.


15. Web Interface (CZ-CWEBC2)


1 Important Safety Instructions

Before using the system, be sure to read these “Important Safety Instructions”.

The precautions given in this manual consist of specific “ Warnings” and “ Cautions”. They provide important safety related information and are important for your safety, the safety of others, and trouble-free operation of the system. Be sure to strictly observe all safety procedures.

- The labels and their meanings are as described below.

 **Warning** This refers to a hazard or unsafe procedure or practice which can result in severe personal injury or death.

 **Caution** This refers to a hazard or unsafe procedure or practice which can result in personal injury or product or property damage.

- Meaning of symbols



Indicates “Warning” or “Caution”.



Indicates “Prohibited”.








Indicates an action that should always be performed.

- After reading this manual, save it in a convenient place.










Be sure to provide this manual to any person who may use the product.

Installation Precautions

 Warning	
<p>Do not install by yourself.</p>  Installation should always be performed by your dealer or a professional service provider. Electric shock or fire may result if an inexperienced person performs any installation or wiring procedures incorrectly.	<p>Use only specified air conditioners.</p>  Always use only air conditioners specified by dealer. Installation should always be performed by a professional service provider. Electric shock or fire may result if an inexperienced person performs any installation or wiring procedures incorrectly.
<p>Electrical work must be carried out by qualified personnel.</p>  Contact your dealer for installation. Do not attempt to install the product by yourself.	<p>Avoid installation in the following locations:</p>  Locations subject to inflammable gas leakage

15. Web Interface (CZ-CWEBC2)





1 Important Safety Instructions





 Caution	
<p>Do not install in damp locations or locations subject to vibrations.</p> <p> Damage to the system can result.</p>	<p>Do not install under direct sunlight or in places near heat sources.</p> <p> Damage to the system can result.</p>
<p>Do not install near sources of noise.</p> <p> Malfunctions can result. Elevators, automatic doors, industrial machinery, etc.</p>	<p>Avoid static electricity during cabling work.</p> <p> Before starting cabling work, touch ground to discharge static electricity from the body.</p>
<p>Avoid installation in the following locations:</p> <p> <ul style="list-style-type: none"> • Near beaches or other places with a large amount of salt • Hot springs or other locations subject to sulfuric gas • Locations subject to water and oil (including industrial lubricants) sprays and high humidity • Locations with large changes in voltage • Near machines generating electromagnetic waves • Locations close to organic solvents </p>	<p>Keep televisions, radios, PCs, etc, at least 1 m away from the Centralized Control System, indoor units, and remote controllers.</p> <p> Picture breakup and noise can occur.</p>
<p>Do not use heaters near the Centralized Control System.</p> <p> The Centralized Control System may malfunction because the temperature becomes outside the range of the operating temperature for the system.</p>	<p>Use remote controllers or system controllers together.</p> <p> Should the Centralized Control System fail, operation of air conditioners is disabled with the Centralized Control System. Be sure to use the remote controllers or system controllers together.</p>

15. Web Interface (CZ-CWEBC2)

1 Important Safety Instructions

Precautions for Use




 Warning	
<p>Do not touch switches with wet hands.</p> <p> Electric shock and damage to the system can result.</p> <p>Prohibited</p>	<p>Protect the Web Interface from water.</p> <p> Damage to the system can result.</p> <p>Prohibited</p>
<p>Stop the system and turn the power off if you sense unusual smells or other irregularities.</p> <p> Continuing operation when the system is out of order can result in electric shock, fire, and damage to the system. Contact your dealer.</p> <p>Turn off the power.</p>	

 Caution	
<p>Do not drop the system or subject it to strong shocks.</p> <p> Damage to the system can result.</p> <p>Prohibited</p>	<p>Use only fuses with the correct capacity.</p> <p> Use of pins or copper wire can result in fire and damage to the system.</p> <p>Prohibited</p>
<p>Use only the specified power source.</p> <p> Use of any other power source can result in fire and damage to the system. Use single-phase 100-240 V AC power.</p>	

15. Web Interface (CZ-CWEBC2)

1 Important Safety Instructions

Moving and Repair Precautions

 Warning	
<p>Do not disassemble or repair.</p>  <p>Prohibited</p> <p>Never disassemble or repair the system by yourself. Contact your dealer for repair. Electric shock or fire may result if an inexperienced person attempts to repair the system.</p>	<p>Contact your dealer before moving the system.</p>  <p>Contact your dealer</p> <p>Contact your dealer or a professional service provider about moving and reinstalling the system. Electric shock or fire may result if an inexperienced person performs any installation procedures incorrectly.</p>

15. Web Interface (CZ-CWEBC2)

2 Features of the System

The Web Interface (CZ-CWEBC2) is a centralized air conditioning management system dedicated to PAC and GHP for small-sized buildings.

Operations and status monitoring of air conditioners can be performed by a customer's PC after logging into the Web Interface.

- Number of connectable units..... • Up to 64 indoor units can be connected to one Web Interface.
• Up to 30 outdoor units can be connected.
- Display • No display unit is provided with this product. Operations are performed from and indications are displayed on a customer's PC after login.
- Operation functions • Start and stop, temperature settings, operation mode selection, fan speed settings, fan direction settings, prohibition of use of remote controllers, ventilation, and resetting of filter cleaning sign
- Operation monitoring • Monitoring of operation status (operating/stopped, operation mode, etc.) and alarms
• Monitoring of filter cleaning signs
• Display of alarm logs
- Program timers • Up to 50 types of weekly timers can be programmed by combining 50 types of daily timers (50 times per day).
• Programs for a tenant holiday and five types of timer special days can be set.
- Supported languages • The following languages are supported, and you can select a language when logging in by entering a language code:
English
French
German
Italian
Portuguese
Spanish


Terms and abbreviations used in this manual and in the system software

Full term	Abbreviation
Outdoor unit system address	Outdoor unit system, Outdoor unit, Outdoor system, Outdoor, O/D
Indoor unit address	Indoor unit, Indoor, I/D
Tenant number	Tenant No., Tenant
Unit name	Unit
Central control address	Central address, CNTR

15. Web Interface (CZ-CWEBC2)

3 System Configuration

System Configuration Example

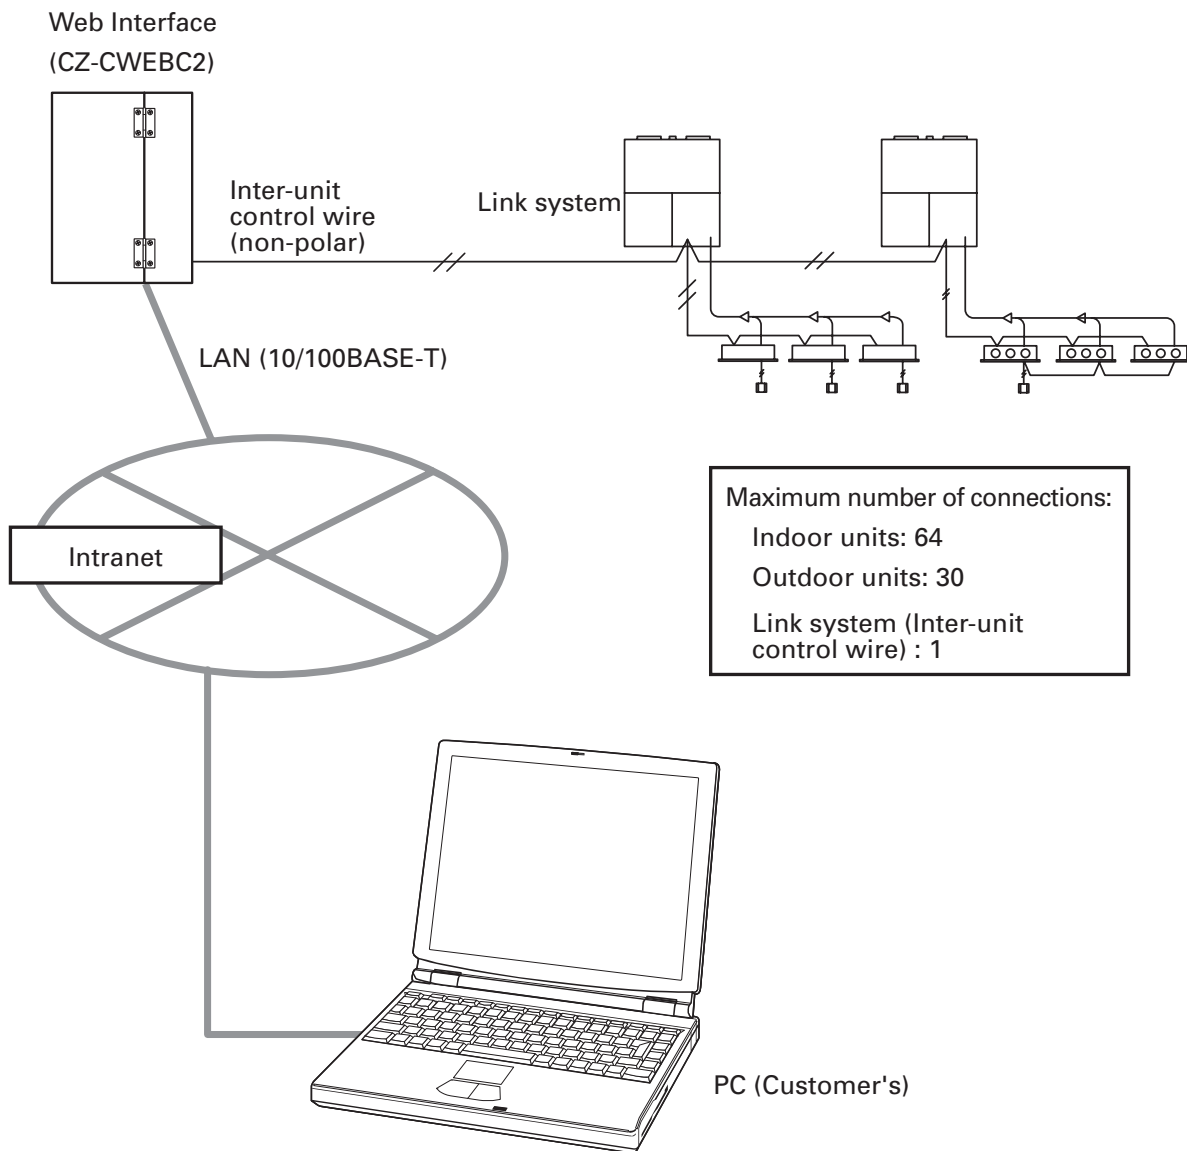


3

15. Web Interface (CZ-CWEBC2)

4 Names and Functions of Parts

- Exterior

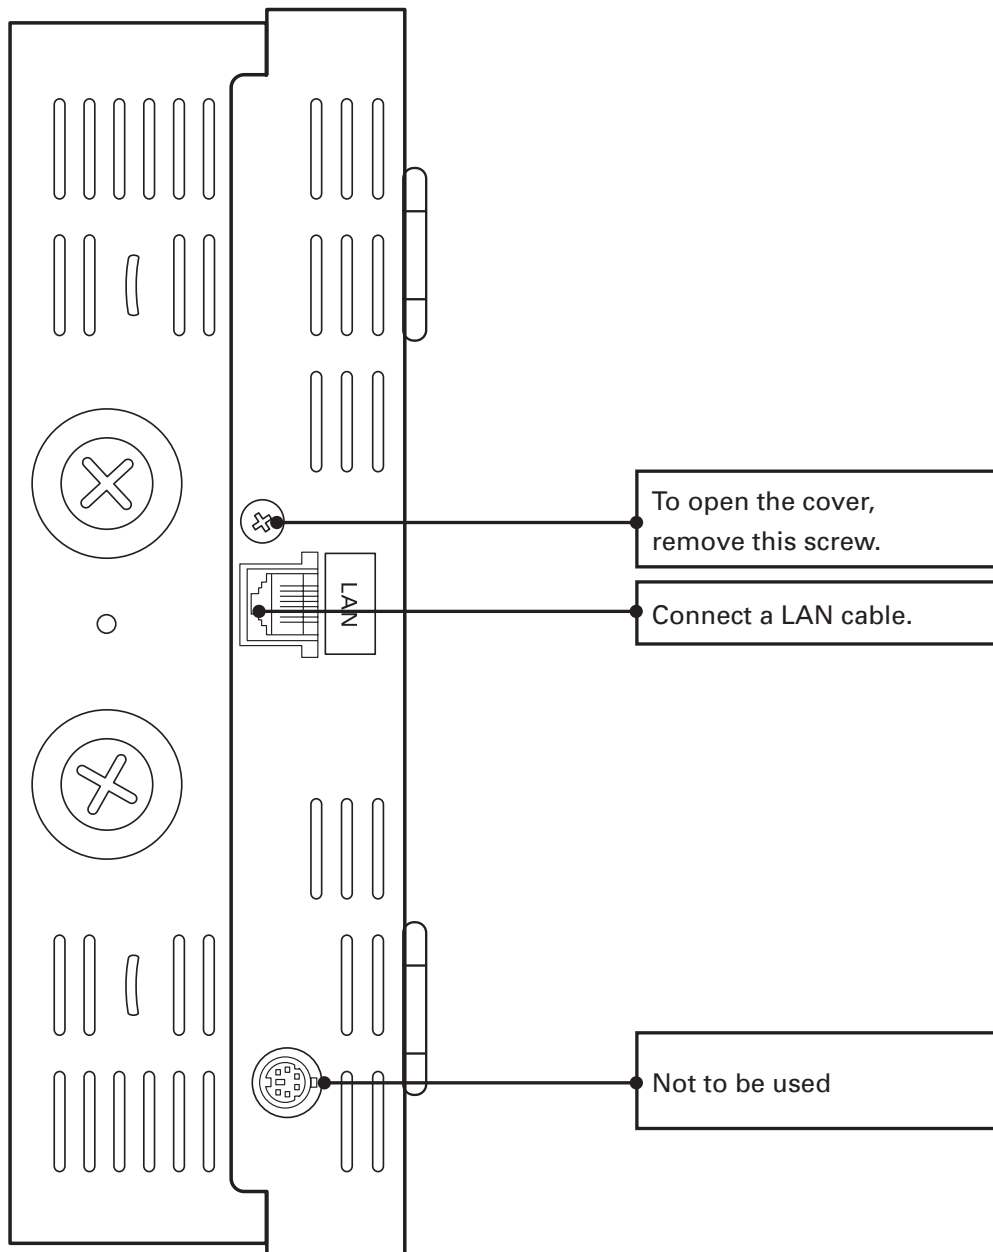


3

15. Web Interface (CZ-CWEBC2)

4 Names and Functions of Parts

- Under the cover

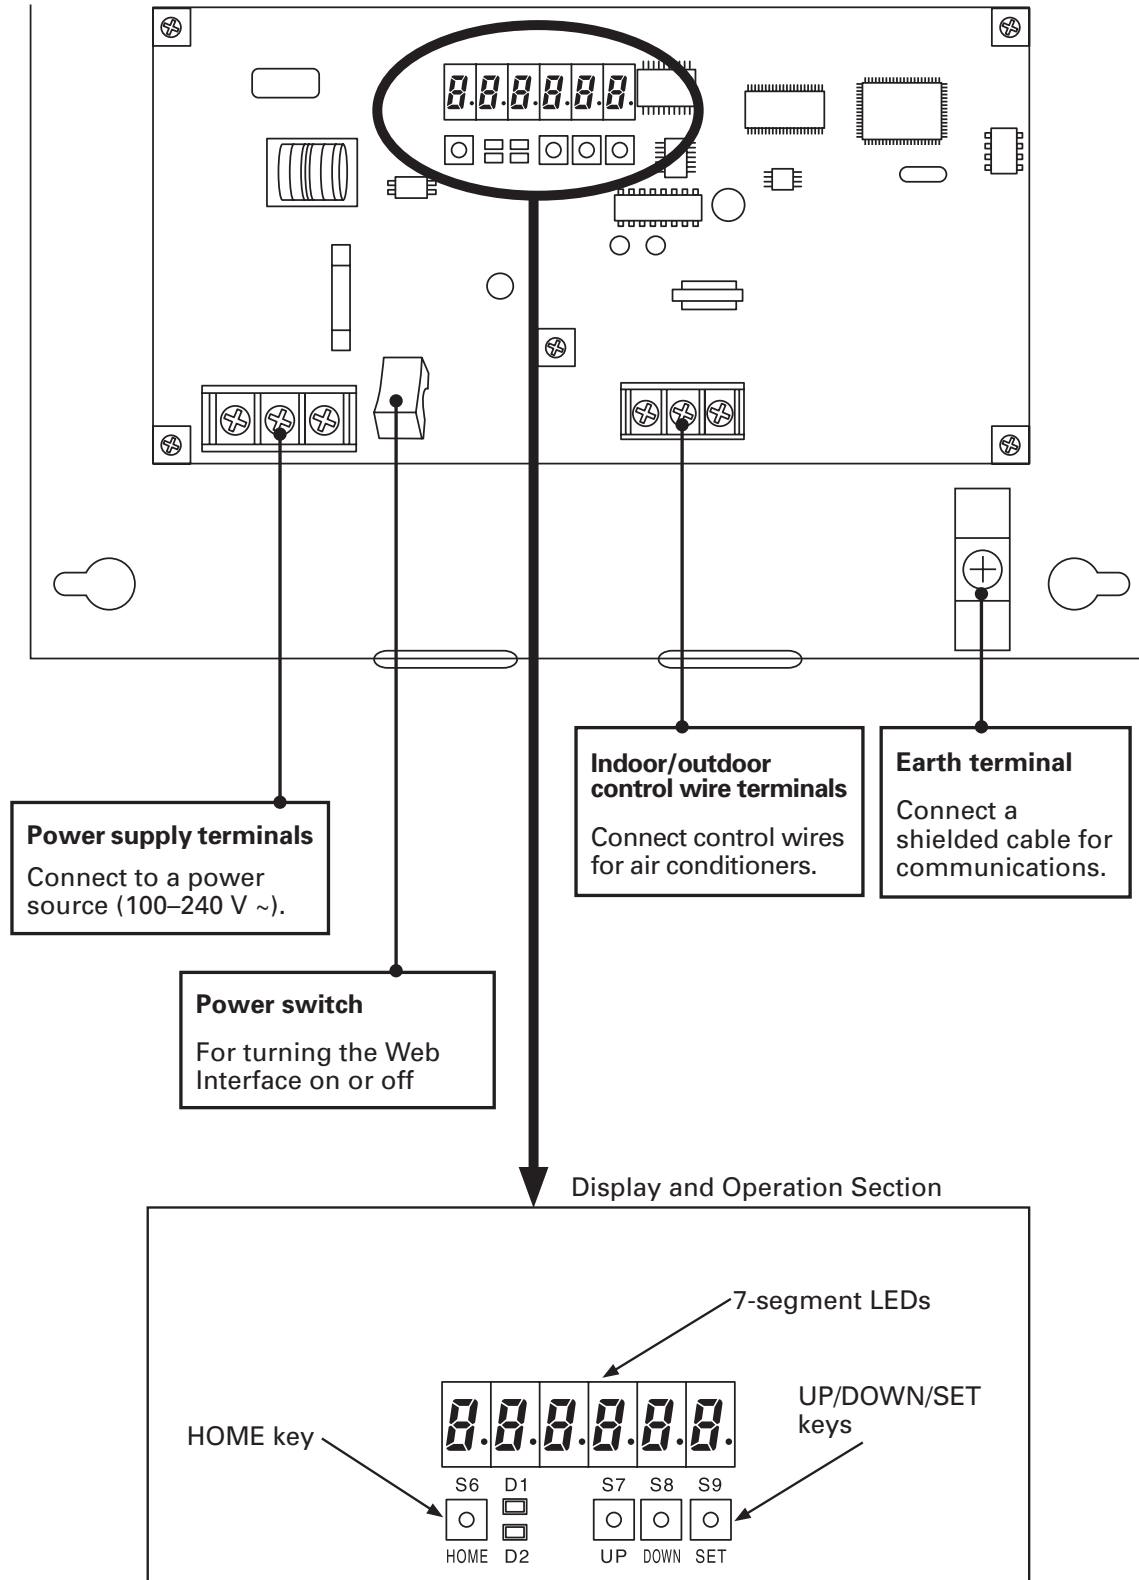

3

15. Web Interface (CZ-CWEBC2)

4 Names and Functions of Parts

[Notes on Connecting a LAN cable]

- Use a LAN cable of Category 5* or higher standards.
- Take security measures, such as installing a firewall, in order to protect this system against external unauthorized access.
- For details on connections and settings, consult the network administrator of the field site.

*Category 5

The standards for telecommunications cabling systems defined by the Telecommunications Industry Association (TIA) and the Electronic Industries Alliance (EIA). Up to 100 MHz frequencies can be used for telecommunications.

Straight and cross cables can be used. Straight cables are used for connections between a PC and a hub, and the Web Interface and the hub. Cross cables are used for directly connecting the Web Interface and a PC.

15. Web Interface (CZ-CWEBC2)

5 Preparations and Login

5.1 Turning the Web Interface On

After checking the connection with the air conditioners and making sure that **all the air conditioners are ON**, set the Power switch of the Web Interface to ON.

5.2 Checking the PC

The following environment is required for a customer's PC to access the Web Interface for operations of air conditioners:

(The system may not function properly in an environment other than that mentioned below.)

- (1) Browser : Microsoft Internet Explorer 6.0
- (2) Java applet : Sun Microsystems Java Plugin Ver1.4.2
 - * Free downloading is possible from
<http://www.java.com/ja/download/manual.jsp>
- (3) Communications protocol : IPV4 (IPV6 not supported)
- (4) Display resolutions : XGA (1024 × 768 dots) or higher recommended

5.3 Log-in

Enter the following in the address bar of the Web browser on the PC:

`http://[① or ②]/sacwww/index_[③].asp`

- ① IP address : IP address that has been set for the Web Interface unit
The factory default settings are "192.168.1.1" and the DHCP "Invalid".
- ② ID name : "Device Name" that has been set for the Web Interface unit
The ID name is required when the DHCP server is to be used.
- ③ Language code (Enter with one-byte characters.)

English: en	French: fr	German: de
Italian: it	Portuguese: pt	Spanish: es

[Example]

In a case where the IP address of the Web Interface is "10.31.139.212" and you are accessing English pages

`http://10.31.139.212/sacwww/index_en.asp`


In a case where a DHCP server is used and the ID name (device name) of the Web Interface is "WindowsCE0"

`http://WindowsCE0/sacwww/index_en.asp`

15. Web Interface (CZ-CWEBC2)

5 Preparations and Login


If the network works properly, the following login screen is displayed:

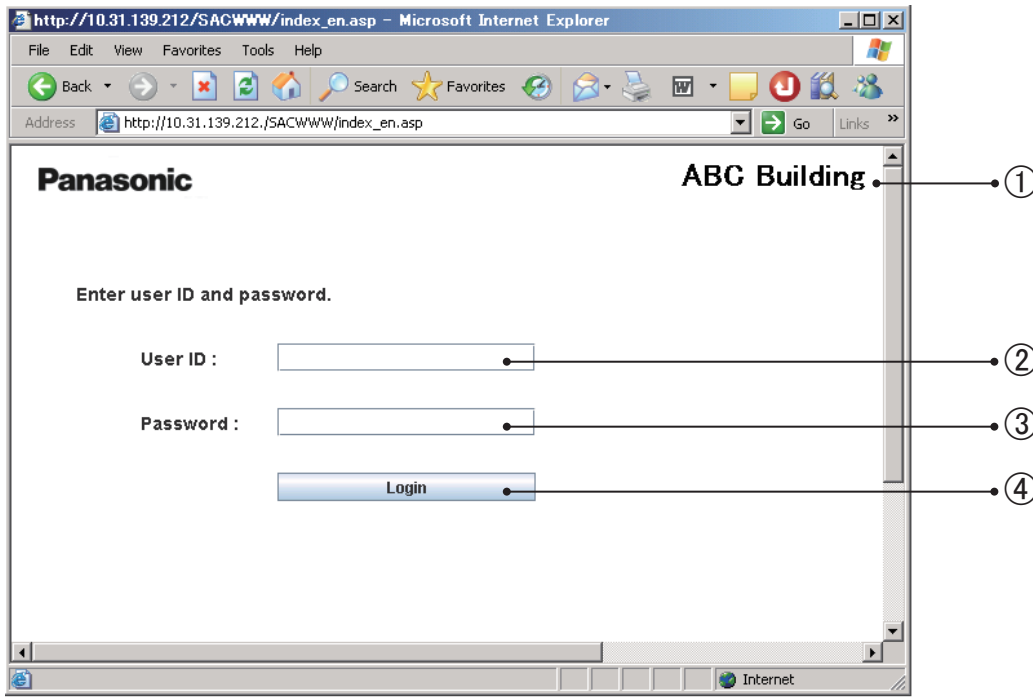

Log in using the user ID and password that have been set for the Web Interface.

- ① The "Site name" that has been set for the Web Interface is displayed.
- ② Enter the "User ID" that has been set for the Web Interface.
- ③ Enter the "Password" that has been set for the Web Interface.
- ④ Click on this button to log in.

If a wrong user ID or password is entered, the following message will be displayed:

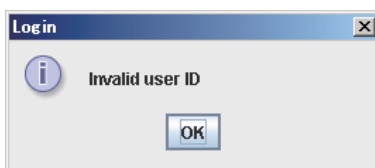

After login is executed properly, the "Each tenant" screen (next page) will be displayed.

At the factory, the Administrator user shown below is registered.
After logging in using this administrator user account, change the password:*

User ID : administrator
Password : admin

*For details on how to change the password, see "8.4 User Settings".

15. Web Interface (CZ-CWEBC2)


6 Status/Control

Main 1 Sub 1

6.1 Displaying general information by tenant

When you log in the Web Interface, or when "1. Status/Control: 1. Each tenant" is selected from the menu, the screen shown below is displayed.

(The details of the displayed screen vary, depending on the type of account used for login.)

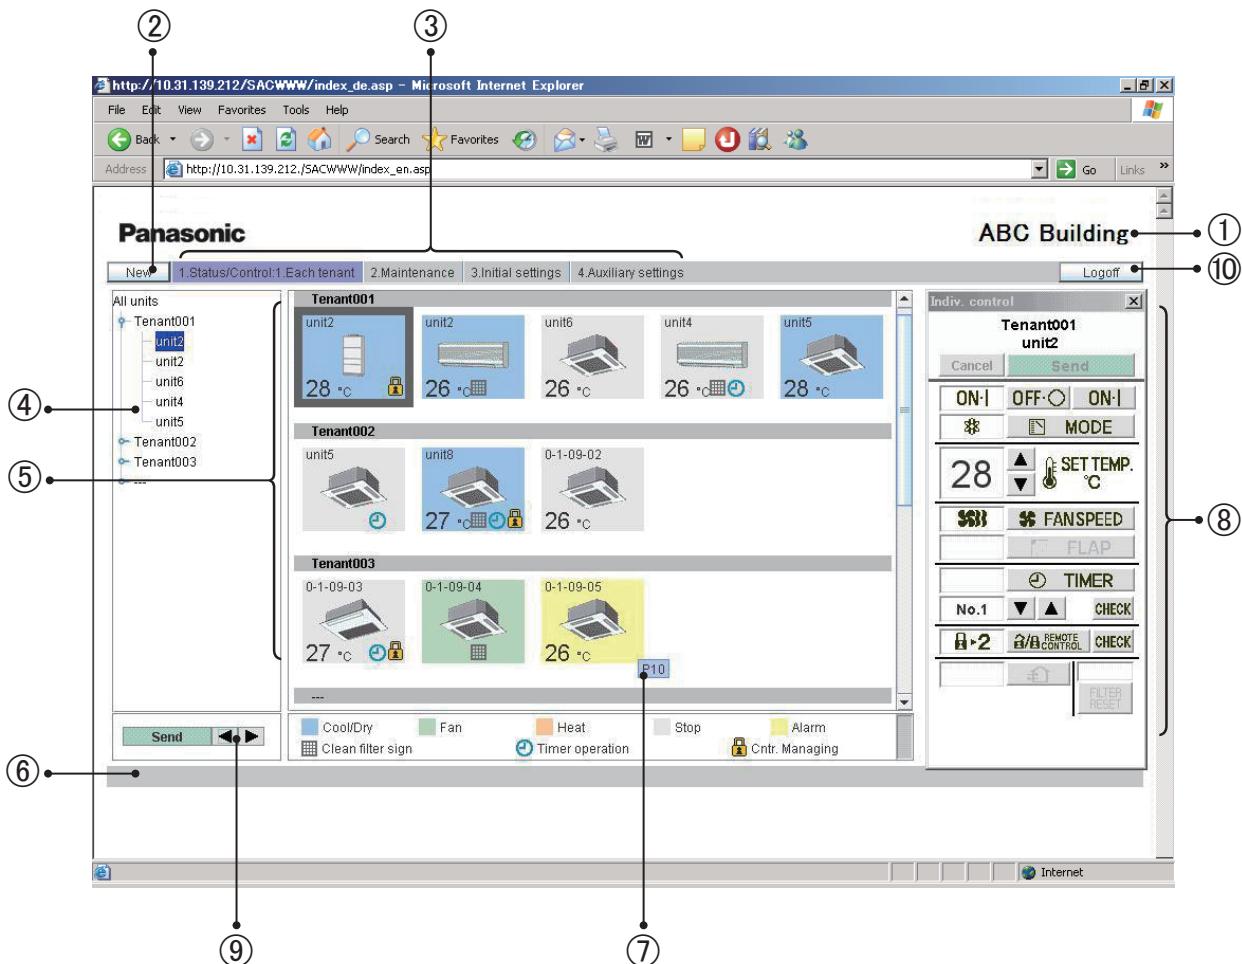

In a case of group control, only the main units will be displayed.

① Site name

The "Site name" that has been specified on the "WEB settings" screen (Main 3 Sub 3) displayed.

② "New" button

For updating the data on the screen to the latest data. This button is displayed on every screen.

15. Web Interface (CZ-CWEBC2)


6 Status/Control




③ Menu (The displayed menu varies, depending on the type of account used for login.)

Select a screen by displaying the pulldown menu, as shown below.


★ Menu for the "Admin." (Administrator) user

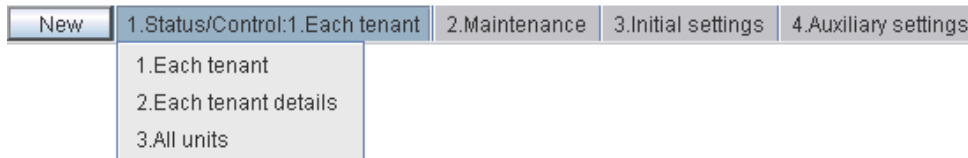

★ Menu for a "Special" user



★ Menu for a "General" user



④ Tree view section

A tree view of relationships among the indoor units that are connected with the Web Interface and tenants is displayed.

Indoor units and tenants to be selected vary, according to which part of the tree you click on. Each indoor unit is selected when an indoor unit name (highlighted part in the screen example) is clicked on.

When a tenant name is clicked on, all the units belonging to the tenant are selected. All indoor units are selected when the top line ("All units" in the screen example) of the tree is clicked on.

According to the type of account used for login (Admin, Special, or General), only the operable tenants will be displayed.

⑤ Icon display section

The indoor units connected with the Web Interface are displayed with icons.

For details on the meanings of colors and symbols of the icons, see the legend displayed below the icon display section.

When an indoor unit icon is clicked on, that indoor unit is individually selected, and the selected indoor-unit icon is indicated with an inversed frame.

When a tenant name is clicked on, all the indoor units belonging to that tenant are selected, and all the indoor-unit icons are indicated with highlighted frames.

While any of the icons is selected, the display for the corresponding remote controller (⑧) is displayed.

⑥ Notification column

The communication status between the Web browser and the Web Interface is displayed. For example, while a screen is being updated, "Updating" is displayed.

When settings for an indoor unit are changed, while those data are being sent, "Sending" is displayed.

⑦ Alarm code display

If you move the cursor onto the icon of the indoor unit from which an alarm has been issued, an alarm code will be displayed after about 1 second.


15. Web Interface (CZ-CWEBC2)

6 Status/Control

Main 1 Sub 1

⑧ Remote control window

If any of the indoor units is selected, the remote control window shown below will be displayed for detailed setting modifications.

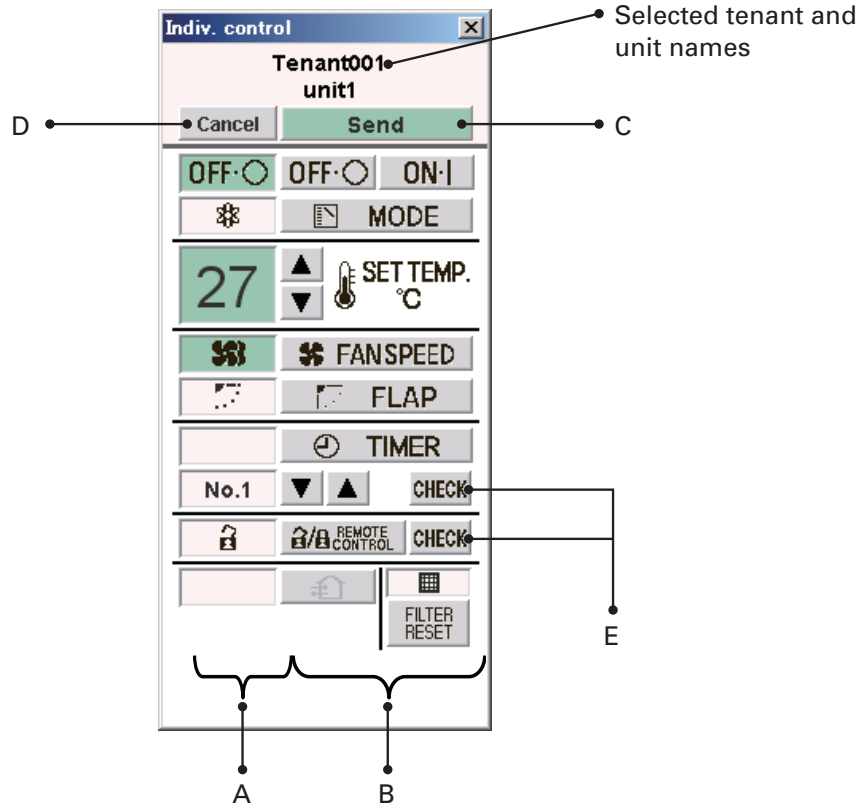

A: Status/Control screen section

The status and operations of the selected air conditioner are displayed.

If a setting is changed, the background color of the changed item will turn green, and the "Send" button will be enabled.

In the above example, the background color for the items of start/stop, setting temperature, and fan speed is green.

When the "Send" button is clicked on, data for all changes are enabled and sent to the Web Interface.

To disable the changes made, click on the "Cancel" button or select another air conditioner.

B: Control section

The settings for start/stop, operation mode, setting temperature, fan speed, and swing/fan direction can be changed.

15. Web Interface (CZ-CWEBC2)

6 Status/Control

Main 1 Sub 1

C: Send button

For sending all the changes made so far to the Web Interface.

The settings of the air conditioner will not be changed until the data for the changes are sent using this button.

D: Cancel button

For cancelling all the changes made so far.

E: Check buttons for timer setting and remote controller prohibition setting


For displaying a check screen for the corresponding settings.

(See "Tenant holiday/Timer special day" and "Prohibiting remote control use".)

To return to the previous screen, click on the "Return" button.

*For a user who has logged in using the "General" user account, the buttons that have been set as prohibited will be disabled.

In addition, the "R/C" button and the "Check" button on its right will not be displayed.

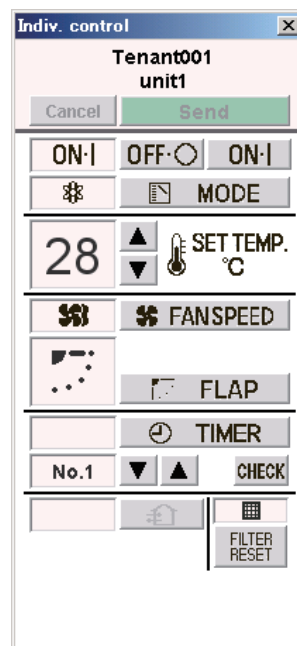

Remote controller for a "General" user




15. Web Interface (CZ-CWEBC2)


6 Status/Control



⑨ Display order change buttons

For changing the display order of indoor units

After selecting an indoor unit whose order you wish to change, click on the "" or "" button. Each time the "" button is clicked on, the order of the indoor unit will move one place upward in the tree or leftward in the icon display section.

Each time the "" button is clicked on, the order of the indoor unit will move one place downward in the tree or rightward in the icon display section.

To register the changed setting, click on the "Send" button.

The changed order will be reflected on the "Each tenant details" and "All units" screens.

⑩ "Log off" button

For logging off the currently logged-in user. The login screen will be displayed.

15. Web Interface (CZ-CWEBC2)

6 Status/Control

 Main **1** Sub **2**

6.2 Displaying detailed information by tenant

When “1. Status/Control: 2. Each tenant details” is selected from the menu, the screen shown below is displayed. (The details of the displayed screen vary, depending on the type of account used for login.)

When any of the indoor units is clicked on, the remote controller screen will be displayed. Operations on this screen are the same as those on the “Each tenant” screen. See the relevant heading.

The screenshot shows the Panasonic web interface for ABC Building. The main window displays a list of indoor units under the heading "Panasonic ABC Building". The units are organized by tenant (Tenant001, Tenant002, Tenant003) and then by unit ID. The unit 0-1-09-09 is selected, and its details are shown in a table. The table has columns for Unit name, Op mode, Set T, Room T, Speed, Flap, R/C, and Timer. The unit 0-1-09-09 is in "Stop" mode with a Set T of 25 and Room T of 27. The right side of the interface shows a detailed control panel for the selected unit, including a temperature display of 25°C, mode selection (OFF, ON), fan speed control, and timer settings.

Unit name	Op mode	Set T	Room T	Speed	Flap	R/C	Timer
unit11	Alarm	28	7	Auto		Accept	1
0-1-09-05	Stop	27	73	Auto		Prhbt1	1
0-1-09-06	Stop	26	0	Auto		Accept	1
0-1-09-07	Stop	26	72	Auto		Accept	1
0-1-09-09	Stop	25	27	Med.		Accept	1
0-1-09-01	Stop	25	27	Med.			1
0-1-09-10	Stop	25	27	Med.			1
0-1-09-12	Stop	25	27	Med.			1
0-1-09-13	Cool	27	24	Auto		Prhbt1	1
0-1-09-08	Cool	27	29	Auto			1
0-1-09-11	Cool	27	8	Auto			1

Even in a case of group control, the main units, as well as sub unit, are displayed.

The indications for sub units are grayed, and the remote controller screen will not open if you click on a grayed indication. To open the remote control screen, select the main unit.

For sub units, the cells for the flap setting and remote controller prohibition setting are blank.

15. Web Interface (CZ-CWEBC2)

6 Status/Control

 Main **1** Sub **3**

6.3 All Units


When "1. Status/Control: 3. All units" is selected from the menu, the screen shown below is displayed.

(The details of the displayed screen vary, depending on the type of account used for login.)

A maximum of 64 indoor units are displayed on a screen. In a case of group control, sub units, as well as main units, are displayed.

Operations on this screen are the same as those on the "Each tenant" screen. See the relevant heading.

When any of the indoor units is clicked on, the remote controller screen will be displayed.

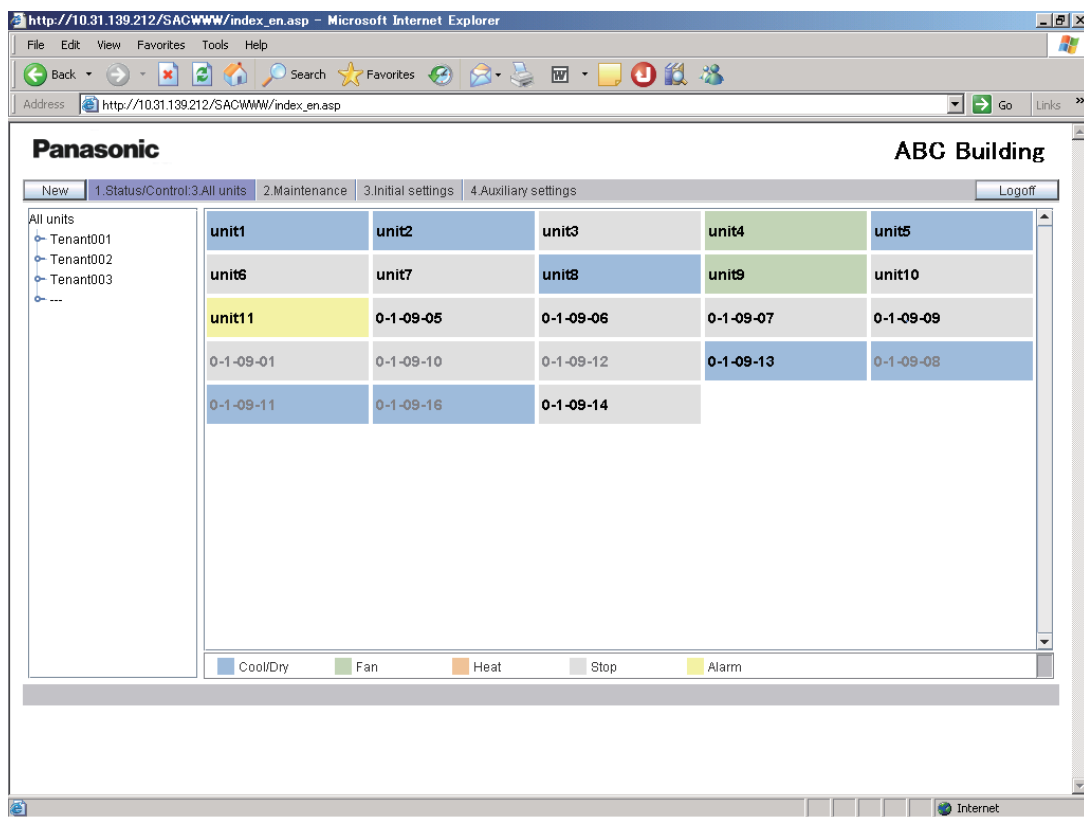

As the number of indoor units increases, the display space for one unit will be reduced. As a result, part of a unit name may become hidden.

15. Web Interface (CZ-CWEBC2)

7 Maintenance

Main ² Sub ¹

7.1 Alarm Log

If you log in using the administrator or special user account, when “2. Maintenance: 1. Alarm log” is selected from the menu, the screen shown below is displayed.

When an indoor unit is selected in the tree, the latest 14 alarm logs will be displayed.

If 15 or more alarms are issued, all but the latest 14 logs will be erased.

A log for restoration from an error will not be recorded.

The screenshot shows the Panasonic web interface for ABC Building. The browser address bar displays `http://10.31.139.212/SACWWW/index_en.asp`. The page title is "Panasonic" and "ABC Building". The navigation menu includes "New", "1. Status/Control", "2. Maintenance: 1 Alarm log", "3. Initial settings", "4. Auxiliary settings", and "Logout". The current view is for "TenantNo.1 : Tenant001" and "ID unit : unit4 (0-1-01-04)".

The left sidebar shows a tree view of tenants and units. The main content area displays a table of alarm logs for the selected unit.

Occurrence date	Alarm code	Occurrence date	Alarm code
2009.05.11 03:32	Filter sign		
2009.05.11 04:04	P10		
2009.05.11 04:06	F03		

The content of an alarm is indicated with an alarm code.

For details on the meanings of alarm codes, refer to the operation manual of the air conditioners or consult your service representative.

15. Web Interface (CZ-CWEBC2)

7 Maintenance

Main 2 Sub 2

7.2 Sent Mail Log

If you log in using the administrator user account, when “2. Maintenance: 2. Sent mail log” is selected from the menu, the screen shown below is displayed.

The logs for pieces of e-mail that were delivered to the specified addresses when an alarm was issued from air conditioners or when the air conditioners were restored are displayed.

No.	Rslt	Send T.	To	Unit name	Alarm code	Stat	Address
1	OK	2009.07.25 12:13	user1@user.com	unit5	P09	Occurrence	0-1-01-05
2	OK	2009.06.10 11:55	user1@user.com	0-1-01-08	F03	Restoration	0-1-01-08
3	OK	2009.06.10 09:09	user1@user.com	0-1-01-08	F03	Occurrence	0-1-01-08
4	OK	2009.06.02 21:47	user1@user.com	unit1	P10	Restoration	0-1-01-01
5	OK	2009.06.02 21:36	user1@user.com	unit1	P10	Occurrence	0-1-01-01
6	OK	2009.06.02 21:32	user1@user.com		A00	Occurrence	[TEST_MAIL]

① No.

The entry numbers for the sent mail log. With a maximum of 20 (No. 1 to 20) possible entries, the newest entries appear at the top of the list. When the number of entries exceeds 20, entries are deleted starting with the oldest.

As up to three mail recipients can be specified, up to three log entries can be recorded for one alarm occurrence.

When normal status is restored for the alarm, up to 3 e-mail delivery logs are recorded, in the same way.

② Rslt

“OK” appears when a piece of alarm mail is sent properly, and “N/A” appears when sending fails.

③ Send T.

The date and time a piece of alarm mail was sent (or sending was attempted).

④ To


The recipient address a piece of alarm mail was sent to. If the address is too long, only part of the address may appear.

⑤ Unit name

The name of the indoor unit for which the alarm occurred.

15. Web Interface (CZ-CWEBC2)

7 Maintenance



⑥ Alarm code

The code for the alarm that occurred.

⑦ Stat

"Occurrence" appears when a notification of an alarm occurrence is sent, and

"Restoration" appears when a notification of an alarm restoration is sent.


⑧ Address

The address of the indoor unit for which the alarm occurred.

The display format is "0-1- Outdoor unit system address - Indoor unit address".

When a piece of test mail is sent, "TEST_MAIL" appears.

*For details on the setting of a destination address for alarm e-mail, see "WEB settings"

(Main ).

15. Web Interface (CZ-CWEBC2)

8 Initial Settings


Main 3 Sub 1

8.1 Date and Time Setting


If you log in using the administrator user account, when “3. Initial settings: 1. Date” is selected from the menu, the screen shown below is displayed.

Setting of the current date and time can be made.

Be sure to set the date and time before starting any operation, as this setting is required for program timer settings.

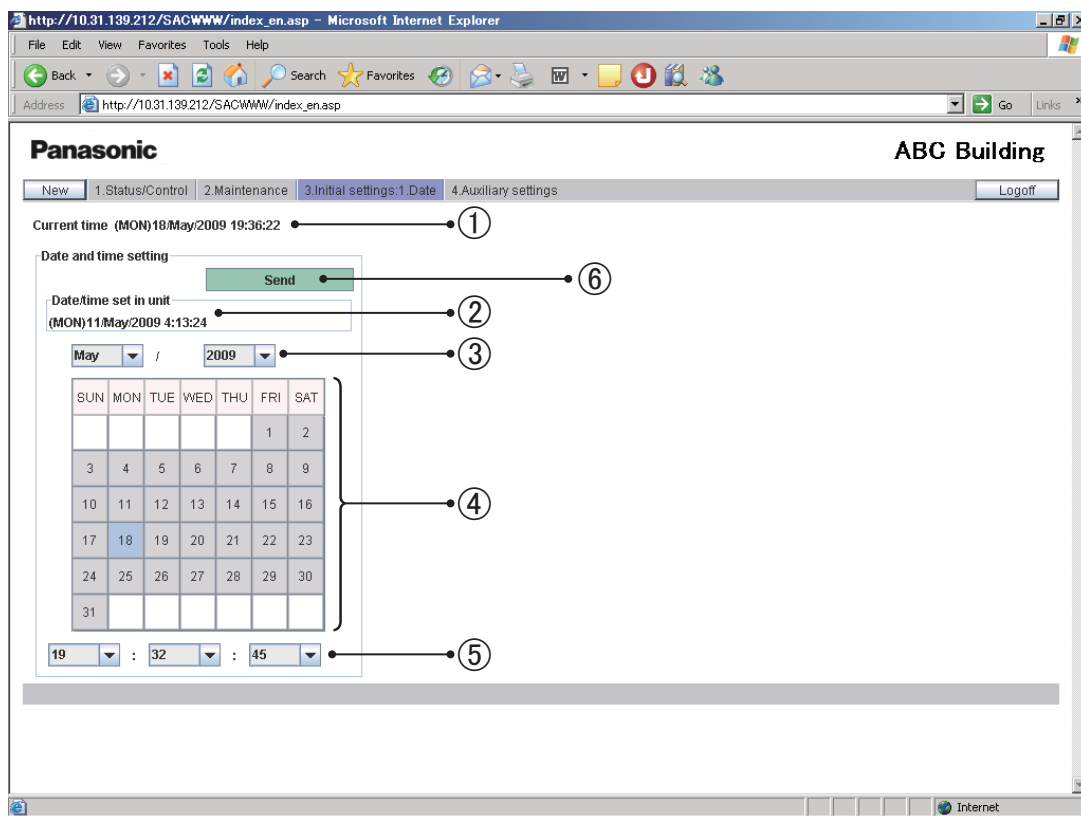

- ① The current date and time settings of the PC are displayed. (This indication is periodically updated.)
- ② The current date and time settings of the Web Interface main unit are displayed. (Only when this screen is displayed or updated is this indication updated.)
- ③ To set the date, click on “▼” to open the pulldown menu shown below. Select the year (2000–2070) and month.

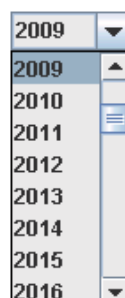


15. Web Interface (CZ-CWEBC2)

8 Initial Settings

 Main **3** Sub **1**

- ④ Directly click on the day to be set. The selected day will be highlighted in light blue.
- ⑤ To set the time, click on "▼" to open the pulldown menu shown below.
Select the hour, minute, and second.

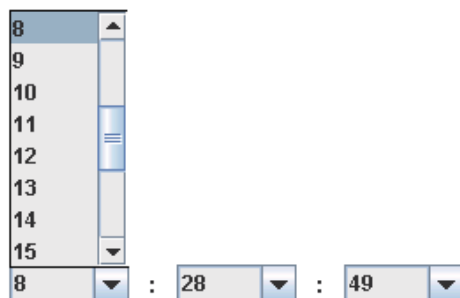

- ⑥ When you click on "Send", the following message will be displayed. Click on "YES" with the time signal. The date and time settings of the Web Interface are updated.
The date and time of the PC will not be updated.



Note: In Steps ③, ④, and ⑤, the settings of the PC will be reflected when this screen is displayed or updated.

15. Web Interface (CZ-CWEBC2)

8 Initial Settings

Main ³ Sub ²

8.2 Unit/Tenant


If you log in using the administrator user account, when “3. Initial settings: 2. Unit/Tenant” is selected from the menu, the screen shown below is displayed.

Setting of the central control addresses, unit names, and tenants can be made.

O/D-ID	CNTR Address	Unit name	Tenant No.	Management
1-1	1	unit1	1	Target
1-2	2	unit2	1	Target
1-3	3	unit3	1	Target
1-4	4	unit4	1	Target
1-5	5	unit5	1	Indiv Op
1-6	6	unit6	1	Target
1-7	7	unit7	2	Target
1-8	8	unit8	2	Indiv Op
9-1	7	0-1-09-01	-	Target
9-2	1	unit9	2	Target
9-3	2	unit10	3	Target
9-4	3	unit11	3	Not target
9-5	4	0-1-09-05	3	Not target

No.	Tenant name
1	Tenant001
2	Tenant002
3	Tenant003
4	Tenant004
5	Tenant005
6	Tenant006
7	Tenant007
8	Tenant008
9	Tenant009
10	Tenant010
11	Tenant011
12	Tenant012
13	Tenant013

- ① The address for each indoor unit is displayed. The display format is “Outdoor system address – Indoor address”.
- ② The current central control address for each indoor unit is displayed.
To set or change a central control address, click on the cell you wish to set/change then enter a value in the range of 1–64.
In a case of group control, a sub unit cannot be selected. The central control address of the main unit will be applied to the sub units.
If a value outside the range of 1–64 is entered, the message shown below is displayed.

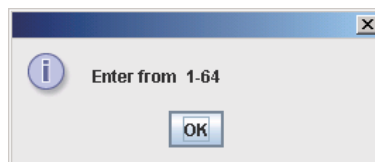

- ③ If you click on “Auto”, the central control addresses will be automatically allocated from 1 to the indoor units in ascending order of the indoor unit address.



The same central control address must not be assigned to two or more indoor units belonging to the same link system. Any such invalid input will be cancelled.
If another piece of central control equipment (system controller, etc.) is connected, it is recommended to set the central control addresses on such equipment.

15. Web Interface (CZ-CWEBC2)

8 Initial Settings

 Main **3** Sub **2**

④ The name of each indoor unit is displayed.

To set or change the name of a unit, click on the cell you wish to set/change then enter a name, using up to 12 characters.

An "=" (equal sign) or "," (comma) cannot be used.


⑤ The tenant No. for each indoor unit is displayed.

A "Tenant" represents a group of several indoor units used on the "Each tenant" screen and other screens.

To set or change a tenant No., click on the cell you wish to set/change then enter a value in the range of 1–64.

In a case of group control, a sub unit cannot be selected. The same tenant No. as that for the main unit is allocated to the sub units.

If a value outside the range of 1–64 is entered, the message shown below is displayed.

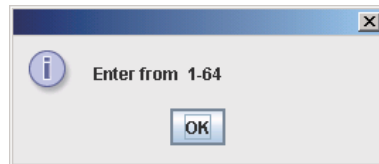

⑥ The type of management for each indoor unit can be set.

To select the management type, click on "▼" to open the pulldown menu, as shown below.

Select the type.

- Target : The corresponding indoor unit is a target for management. The factory default is "Target" for all the indoor units.
- Indiv Op : The indoor units that are set to "Indiv Op" will be excluded from the operations for all units. When the operations (start/stop, temperature setting, etc.) for all units or all tenants are performed by the Web browser, those commands will not be sent to the units set to "Indiv Op".
- Not target : The indoor units that are set to "Not target" will be excluded from targets of all operations, monitoring, and display.

Such units will not be displayed on any screen other than this one.



⑦ Clicking on this button will enable the settings of ②, ④, ⑤, and ⑥ above and send the data to the Web Interface. The changed data will only be enabled after being sent. The data for tenant name settings shown below will not be sent.

⑧ The tenant name for each tenant number is displayed. A maximum of 64 tenant names can be set. To set or change the name of a unit, click on the cell you wish to set/change then enter a name, using up to 20 characters.

An "=" (equal sign) cannot be used.

⑨ Clicking on this button will enable the settings of the above tenant names and send the data to the Web Interface. The changed data will only be enabled after being sent.

The data of the settings of the above ②, ④, ⑤, and ⑥ will not be sent.

15. Web Interface (CZ-CWEBC2)


8 Initial Settings

 Main ³ Sub ³

8.3 WEB Settings

If you log in using the administrator user account, when “3. Initial settings: 3. WEB settings” is selected from the menu, the screen shown below is displayed.

The Web-related settings, such as site name, e-mail settings, and network settings, can be made. Click on a box for an item you wish to set and directly enter values.

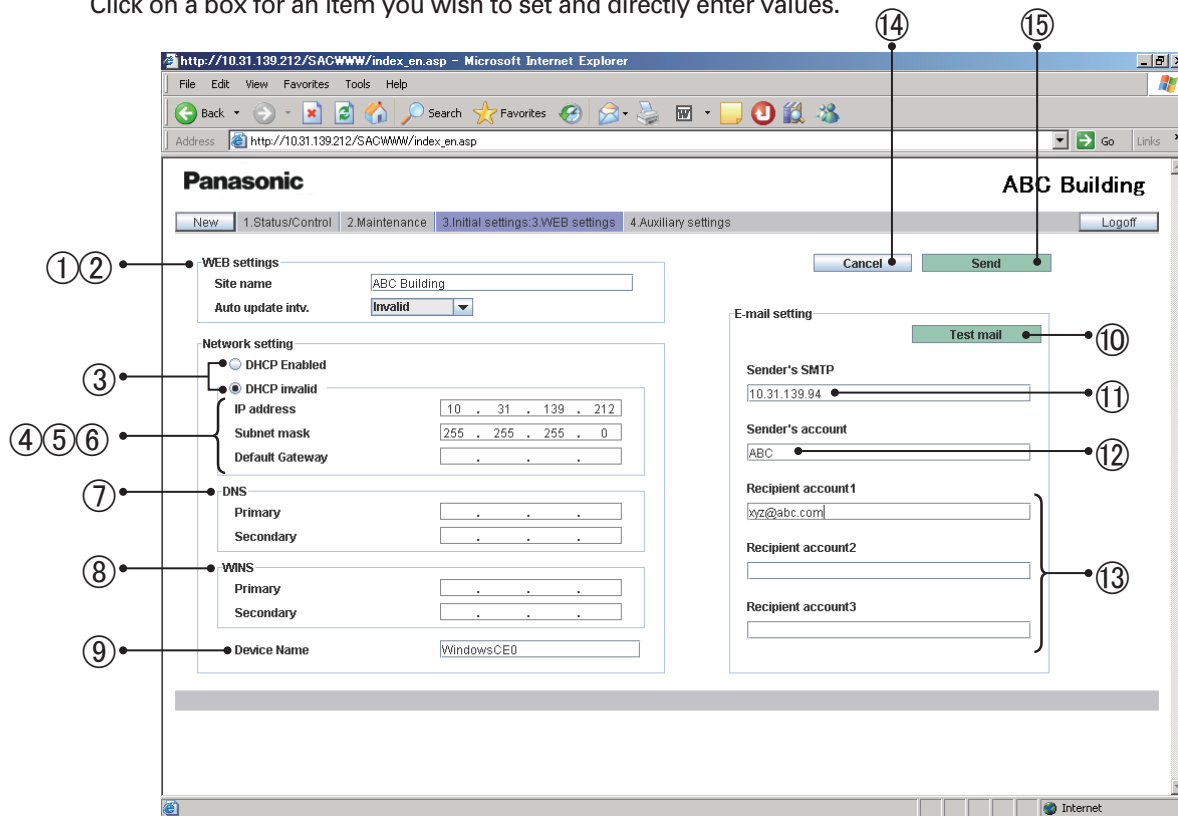

[WEB settings]

- ① Enter a site name (within 40 characters). An “=” (equal sign) cannot be used.
- ② An automatic updating interval of a screen that will be displayed on the Web browser can be set. You can select from among Invalid, 10 seconds, 20 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes, 30 minutes, and 1 hour.

If “Invalid” is selected, the data on a screen will not be updated until you click on the “New” button.

* The following screens will be automatically updated:


- Each tenant (Main ¹ Sub ¹)
- Each tenant details (Main ¹ Sub ²)
- All units (Main ¹ Sub ³)

[Network setting]

- ③ When a DHCP instead of a static IP is used, select the “DHCP Enabled” radio button. If “DHCP Enabled” is selected, items ④–⑥ will be disabled. The factory default is “DHCP invalid”.
- ④ Enter the IP address for the Web Interface. Refer to the settings of other devices, such as the PC and router. The factory default is “192.168.1.1”.
- ⑤ Enter the subnet mask for the Web Interface. Refer to the settings of other devices, such as the PC and router.
- ⑥ Enter the IP address of the default gateway that is connected with the Web Interface, as required.

15. Web Interface (CZ-CWEBC2)

8 Initial Settings



- ⑦ Enter the IP addresses for the primary and secondary DNS servers, as required.
- ⑧ Enter the IP addresses for the primary and secondary WINS servers, as required.
- ⑨ Enter a device name (ID name) of the Web Interface.
(This device name is used for identifying the Web Interface when a DNS server is used.)
Up to 15 characters, "-" (hyphen), and "_" (underscore) can be used.
Only an alphabetic (A-Z, a-z) can be used for the first character.
Neither a "-" (hyphen) nor an "_" (underscore) can be used for the last character.

[E-mail setting] The settings for automatic delivery of e-mail notifying of an occurrence of or restoration from an error of an air conditioner:


- ⑩ For sending test mail
 - ⑪ Enter the IP address (or domain name) of the mail (SMTP) server that is separately contracted.
One-byte alphanumeric, "@" (at sign), "." (bullet), "_" (underscore), and ":" (colon) can be used.
 - ⑫ Enter a sender's account name (within 40 characters).
An "=" (equal sign) cannot be used.
 - ⑬ Enter a recipient account name (mail address) (within 40 characters).
A maximum of 3 accounts can be set.
 - ⑭ For disabling input/changed data and returning to the original settings
 - ⑮ Clicking on this button will enable the input settings and send them to the Web Interface.
The input data will only be enabled after being sent.
- When the following message is displayed, click on "YES":



If any of the settings ③-⑨ is changed, the Web Interface will be restarted after the message shown below is displayed. Wait for at least 5 minutes before logging in again.

Network settings have been changed. The unit will restart.
Please log in again after about 5 minutes.

- * For details on the settings on this screen, consult the network administrator for the environment where the Web Interface has been installed.
- * The range of values that can be set for the IP addresses, subnet mask, default gateway, and the DNS and WINS blocks is 0-255.
- * For the IP addresses, neither "0.0.0.0" nor "255.255.255.255" can be set.
- * If an invalid value is entered, the following error message will be displayed:

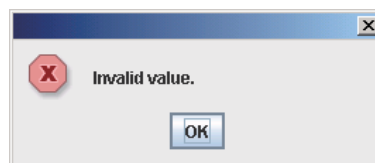

15. Web Interface (CZ-CWEBC2)


8 Initial Settings

 Main **3** Sub **4**

8.4 User Settings

If you log in using the administrator user account, when "3. Initial settings: 4. User settings" is selected from the menu, the screen shown below is displayed.

Setting of the user ID, password, and authority types that are required for logging in the Web Interface can be made.

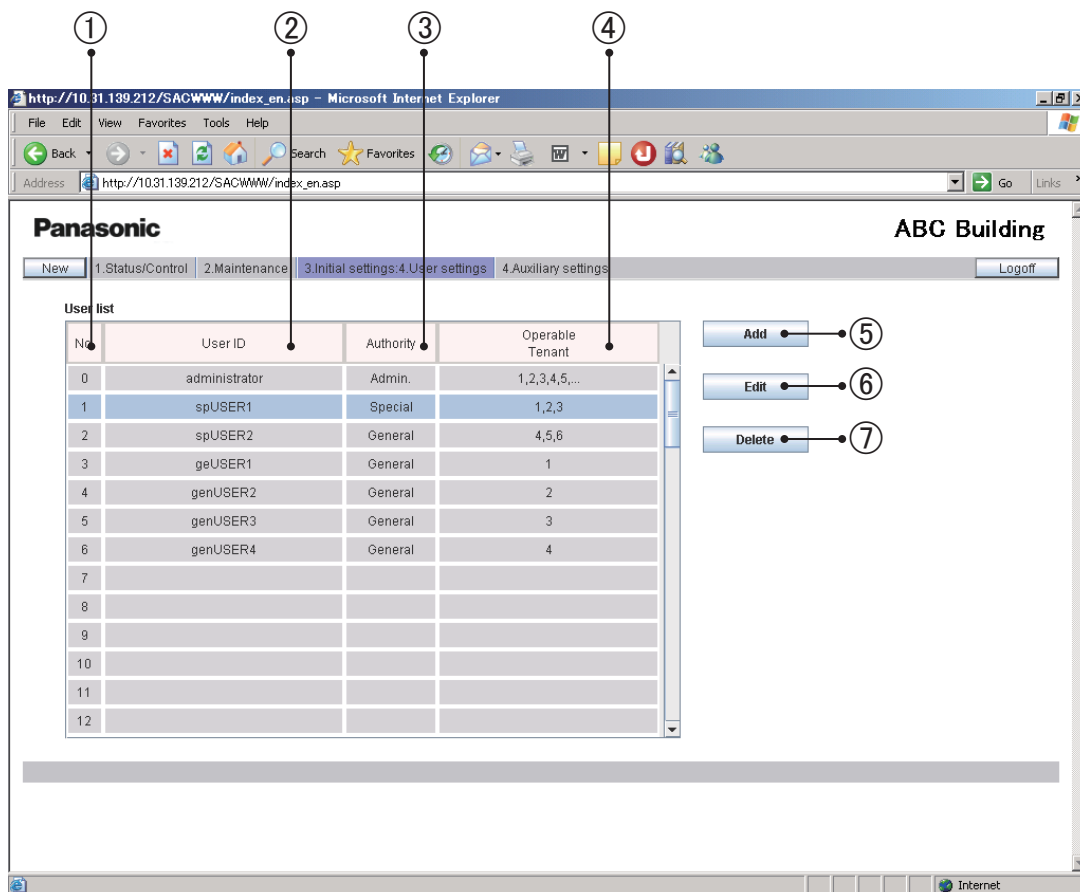

- ① User No. A maximum of 64 (No. 1–64) users can be set.
At the factory, the Administrator user shown below is registered at the top (No. 0).
After logging in using this administrator user account, change the password.
User ID : administrator
Password : admin
- ② User ID
- ③ The user authority types include "Admin.", "Special" and "General". Only one "Admin." can be set, and the administrator user is displayed at the top (No. 0).
- ④ The tenant numbers of whom monitoring and operations are allowed for that user are displayed. Although a maximum of 64 tenants can be set, only 5 are displayed in the cell at a time. If there are 6 or more tenants, "..." will be affixed.
- ⑤ For adding a new user. If users have been already set for all of No. 1–64, this button is disabled.
- ⑥ For editing the already set user data
- ⑦ For deleting a user setting. The administrator user at the top cannot be deleted.

15. Web Interface (CZ-CWEBC2)

8 Initial Settings

Main 3 Sub 4

(1) Adding a New User

If you click on the "Add" button, the following screen will be displayed:

If a user is added, that user will be registered as the lowest user number to which no user is currently registered.

No user number to be used for registration can be skipped.

- ① Enter a user ID (within 20 characters).
- ② Enter a password (within 10 characters).
- ③ For reconfirmation, enter the same password as that in Step ②. (In Steps ② and ③, input characters will not be displayed on the screen.)
- ④ Select the type of user authority, "Special" or "General".
- ⑤ A list of the tenants of whom monitoring and operations are not allowed for that user is displayed.
- ⑥ A list of the tenants of whom monitoring and operations are allowed for that user is displayed.

After selecting a tenant or several tenants on the list at the left or right, perform the operations described below.

Several tenants can be simultaneously selected in the following ways:

- While holding the Ctrl key pressed, click on the tenants you wish to select one by one.
 - After selecting one tenant, click on another tenant while holding the Shift key pressed. All the tenants displayed between the selected tenants will be selected.
- ⑦ The tenant(s) selected on the left list will be moved to the right list and registered as operable target(s).
 - ⑧ The tenant(s) selected on the right list will be moved to the left list and registered as inoperable target(s).

15. Web Interface (CZ-CWEBC2)

8 Initial Settings

 Main **3** Sub **4**

- ⑨ For selecting all the tenants on the left list
- ⑩ For cancelling the current selection of tenant(s) on both the left and right lists
- ⑪ For selecting all the tenants on the right list
- ⑫ For cancelling all the settings made and closing the screen
- ⑬ For enabling and sending the set data to the Web Interface for registering the operable tenants

(2) Editing the data of existing users

- If you click on the “Edit” button, the same screen as that shown in the previous heading will be displayed.
- The current settings displayed on the screen can be edited in the same manner as when adding a user.
- The changed settings will be enabled only after they are sent by clicking on the “Send” button.
- For the administrator user located at the top (No. 0), only the user ID and password can be changed.

The authority type is fixed at “Admin.” and cannot be changed.

The operable tenants are fixed at “All tenants” and cannot be changed.

(3) Deleting the data of existing users

After selecting a user, click on the “Delete” button. The following message will be displayed.



If you click on “YES”, that user will be deleted.

When a user is deleted, the subsequent users will be shifted upward, and their user numbers will be decreased by one.

If the same user is registered again, the user number for that user will be the final user number.

The administrator user at the top (No. 0) cannot be deleted.

(4) Error messages

If any entered data are wrong, one of the following error messages may be displayed when you click on the “Send” button.

Correct the corresponding data and send the data again.

[Invalid user ID entered.]

A wrong or no user ID (no input) was entered and sent.




15. Web Interface (CZ-CWEBC2)

8 Initial Settings

Main **3** Sub **4**


[The user ID already exists.]

The input user ID has already been registered.

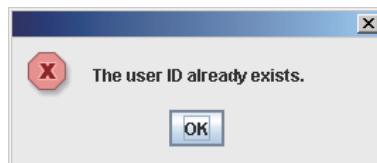

[Password reentry is incorrect.]

The password reentered in Step ③ is not the same as that entered in Step ②.

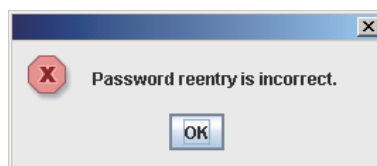

[Administrator user ID has been changed.]

If the administrator user ID is changed, the message shown below will be displayed.

Log in again with the new user ID.

**Administrator user ID has been changed.
Please log in again with new user ID.**

15. Web Interface (CZ-CWEBC2)

8 Initial Settings

Main ³ Sub ⁴

(5) Comparison of authority for each user

○: Denotes that corresponding operations and displays are available.

× : Denotes that neither the corresponding function nor its screen display is available.

All other functions and displays that are not shown in the table below are available for all users.

Functions and displays	Users		
	Admin. user	Special user	General user
Operable tenants	All	Only set tenants	Only set tenants
Prohibit R/C selection 1-4 (Remote controller screen)	○	○	×
Alarm logs	○	○	×
Sent mail log	○	×	×
Date and time setting	○	×	×
Unit and tenant setting	○	×	×
Tenant name setting	○	×	×
WEB settings	○	×	×
User settings	○	×	×
Program timers setting	○	Checking only	Checking only
Tenant holiday and timer special days setting	○	×	×
Remote controller prohibition setting	○	Checking only	×
Other settings	○	×	×

15. Web Interface (CZ-CWEBC2)

9 Auxiliary Settings

Main **4** Sub **1**

9.1 Program Timer

If you log in using the administrator user account, when "4. Auxiliary settings: 1.Program timer" is selected from the menu, the screen shown below is displayed.

Settings for the daily timers and weekly timers can be made. (For a special or general user, only checking of the timer settings is possible.)

The screenshot shows the Panasonic ABC Building web interface. The main content area is titled "4. Auxiliary settings: 1. Program timer". It features a "Daily timer" section with a tree view on the left (D1-D9) and a table of settings. The table has columns: No., Set time, Start/Stop, Op mode, Set temp., and Prhbt R/C. Below it is a "Weekly timer" section with a table of settings. Numbered callouts 1-6 point to specific UI elements: 1 points to the timer tree, 2 points to the 'Op mode' dropdown, 3 points to the 'Weekly timer' table, 4 points to the 'Cancel' button, 5 points to the 'Send' button, and 6 points to the 'Check RC prohib.' button.

① When a daily timer No. is selected in the tree, the current setting for that timer is displayed. A maximum of 50 daily timers, one timer for a "Holiday", and five timers for "Sp day" (special days) are provided.

The "Holiday" timer is a daily timer reserved for a holiday for the tenant. An "Sp day" timer is a daily timer reserved for a special day for the tenant. For details on how to use them, see "Tenant holiday/Timer special day".

② To set operation time and operations for a daily timer, click on a setting item you wish to set to open the pulldown menu, as shown below. Select operation time or operation.

Five pulldown menus showing the options for 'Set time', 'Start/Stop', 'Op mode', 'Set temp.', and 'Prhbt R/C'.

- Set time:** 00, 01, 02, 03, 04, 05, 06
- Start/Stop:** Stop, Start
- Op mode:** Heat, Cool, Fan, Dry, Auto
- Set temp.:** 21, 22, 23, 24, 25, 26, 27, 28
- Prhbt R/C:** Accept, Prhbt1, Prhbt2, Prhbt3, Prhbt4


Up to 50 actions per day can be set for a daily timer. Several actions can be set for one operation time.

15. Web Interface (CZ-CWEBC2)

9 Auxiliary Settings

③ For a weekly timer, select a daily timer from the pulldown menu in the same way as with a daily timer.


Select a desired daily timer number (D1–D50, holiday, or special day 1–5) for each day of the week. A maximum of 50 weekly timers can be set.



④ For disabling input/changed data and returning to the original settings.

⑤ Clicking on this button will enable the input settings and send them to the Web Interface. The input data will only be enabled after being sent.

Setting data for each daily timer No. (D1, D2, . . .) must be sent each time the setting for the daily timer is completed. If you attempt to move to D2 setting while you are setting D1, for example, the error message “Send for each daily timer.” will be displayed, as shown below.

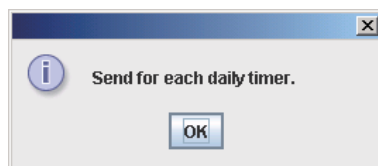

If this message is displayed, click on the “Send” button to enable the setting, or click on the “Cancel” button to disable the setting then perform the setting for another daily timer No.

⑥ The items for which operations with the remote controller are prohibited can be confirmed.

When you click on this button, the screen shown below will be displayed.

You can only confirm the prohibited items. You cannot change the setting. To change settings, see “Prohibiting remote control use”.

Check RC prohib.						
	Start/Stop	Oper. mode	Set temp.	Fan speed	Set flap	
Prohibition1	X	O	O	O	O	
Prohibition2	X	X	X	O	O	
Prohibition3	O	X	X	O	O	
Prohibition4	O	X	O	O	O	



The setting temperature will be automatically set within the range of each air conditioner's upper and lower limit values during actual operation, as the upper and lower temperature limits vary depending on the indoor unit models. Setting for an item for which “Set time” is not set will be invalid.

15. Web Interface (CZ-CWEBC2)

9 Auxiliary Settings

Main **4** Sub **2**

9.2 Tenant holiday/Timer special day

If you log in using the administrator user account, when "4. Auxiliary settings: 2.Ten.Ho/TimerSp.Day" is selected from the menu, the screen shown below is displayed.

The timer settings for the tenant holiday and special days can be made.

The screenshot shows the Panasonic web interface for 'ABC Building'. The main content area displays a calendar for '1 Tenant001: May2009'. The calendar has columns for SUN, MON, TUE, WED, THU, FRI, and SAT. The days are color-coded: pink for regular days, yellow for special days, and orange for holidays. A 'Send' button is located to the right of the calendar. Below the calendar is a 'Copy to (Tenant)' list with tenants 001 through 009. A 'Copy -> Send' button is located below the list. The interface also includes a 'Logoff' button and a 'Cancel' button. Numbered callouts 1 through 7 point to various UI elements: 1 points to the tenant selection tree, 2 points to the 'Send' button, 3 points to the calendar, 4 points to the 'Cancel' button, 5 points to the 'Send' button, 6 points to the 'Copy to (Tenant)' list, and 7 points to the 'Copy -> Send' button.

① When a month for your desired tenant No. is selected in the tree, the current timer settings are displayed.

Settings for the next 2 years are possible.

② Select the type of days to be set (regular days, holiday, special days 1–5).

③ Click on a day or a day of the week. That day or day of the week will be set as a holiday or timer special day that has been selected in Step ②. Programmed timer operation set on the "Ten.Ho/TimerSp.Day" screen will be executed on that day or day of the week.

If you click on an individual day, the selected timer is set for that day; if you click on a day of the week, the selected timer is set for that day of the week.

To cancel a holiday or timer special day setting, select "Rg day" in Step ② and select the day or day of the week.

④ For disabling input/changed data and returning to the original settings.


⑤ Clicking on this button will enable the input settings and send them to the Web Interface. The input data will only be enabled after being sent.

15. Web Interface (CZ-CWEBC2)

9 Auxiliary Settings


 Main **4** Sub **2**

The tenant holiday and timer special days settings must be performed for individual tenants. If you attempt to move to Tenant 002 setting while you are setting Tenant 001, for example, the error message "Send for each tenant." will be displayed, as shown below.

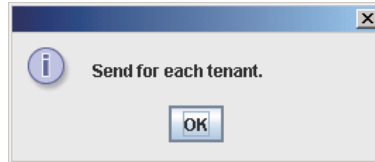

If this message is displayed, click on the "Send" button to enable the setting, or click on the "Cancel" button to disable the setting then perform the setting for another tenant.

- ⑥ Select a tenant to whom you wish to copy data of holiday/timer special days setting.
- ⑦ If you click on "Copy -> Send", the following message will be displayed:

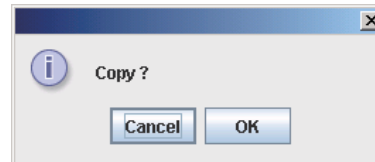

If you click on "OK", the setting data for the next 2 years will be copied from the upper (source) tenant to the lower (destination) tenant. If the setting for the upper (source) tenant is not valid, the "Copy -> Send" button is not available. First click on the "Send" button to make the setting valid then click on the "Copy -> Send" button.

15. Web Interface (CZ-CWEBC2)


9 Auxiliary Settings

Main 4 Sub 3


9.3 Prohibiting remote control use

If you log in using the administrator user account, when "4. Auxiliary settings: 3.Prohibit R/C" is selected from the menu, the screen shown below is displayed.

Setting of the items for which operations with the remote controller for an air conditioner are prohibited can be made. (For a special user, only checking of the settings is possible.)

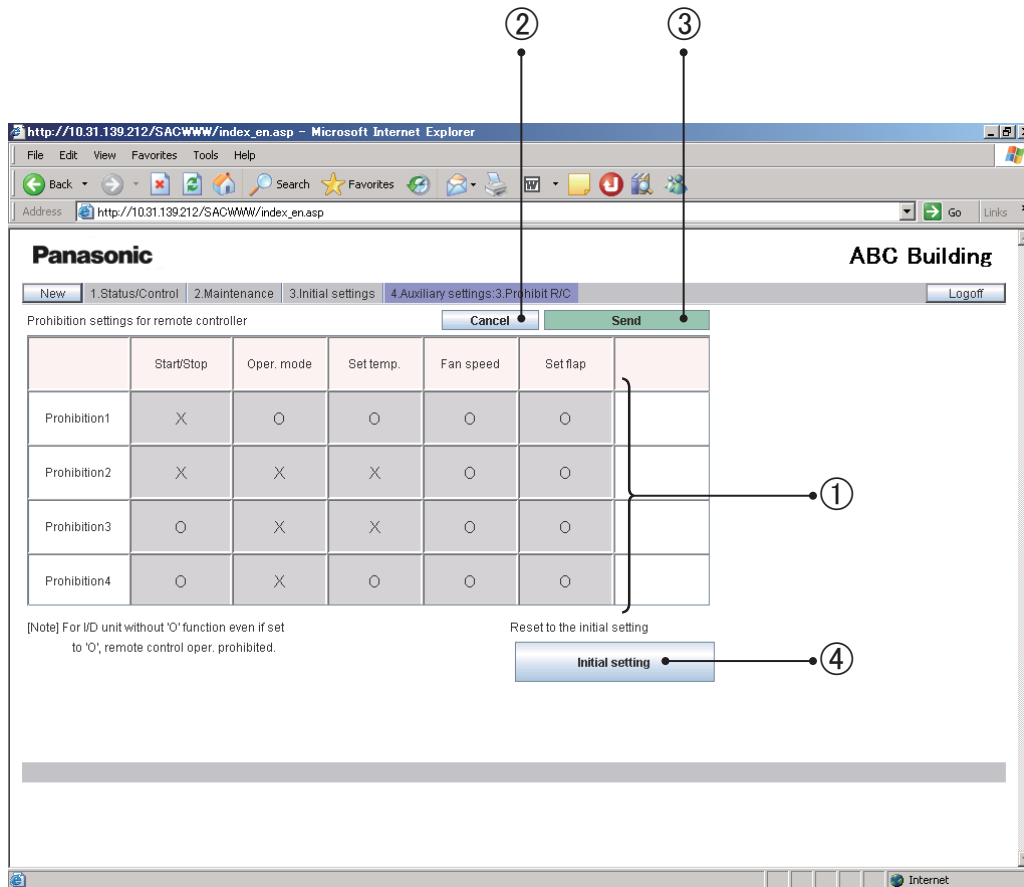

- ① Each time you click on a setting item, "○" and "x" will appear alternately.
- ② For disabling input/changed data and returning to the original settings.
- ③ Clicking on this button will enable the input settings and send them to the Web Interface. The input data will only be enabled after being sent.
- ④ To return the setting to the initial setting, click on "Initial setting". When the following message is displayed, click on "YES". The factory default setting (the setting as shown in the above figure) will be restored, and the data are also sent to the Web Interface.

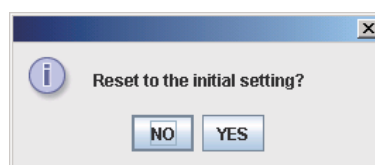


15. Web Interface (CZ-CWEBC2)

9 Auxiliary Settings

Main ⁴ Sub ³

Setting all the setting items to (allowed) is not possible, because this has the same meaning that remote controller operations are permitted.
The following error message will be displayed.

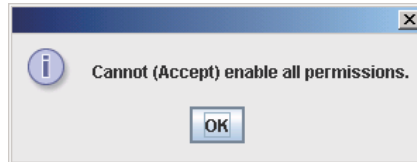


15. Web Interface (CZ-CWEBC2)

9 Auxiliary Settings

Main **4** Sub **4**


9.4 Other settings

If you log in using the administrator user account, when "4. Auxiliary settings: 4.Other settings" is selected from the menu, the screen shown below is displayed.

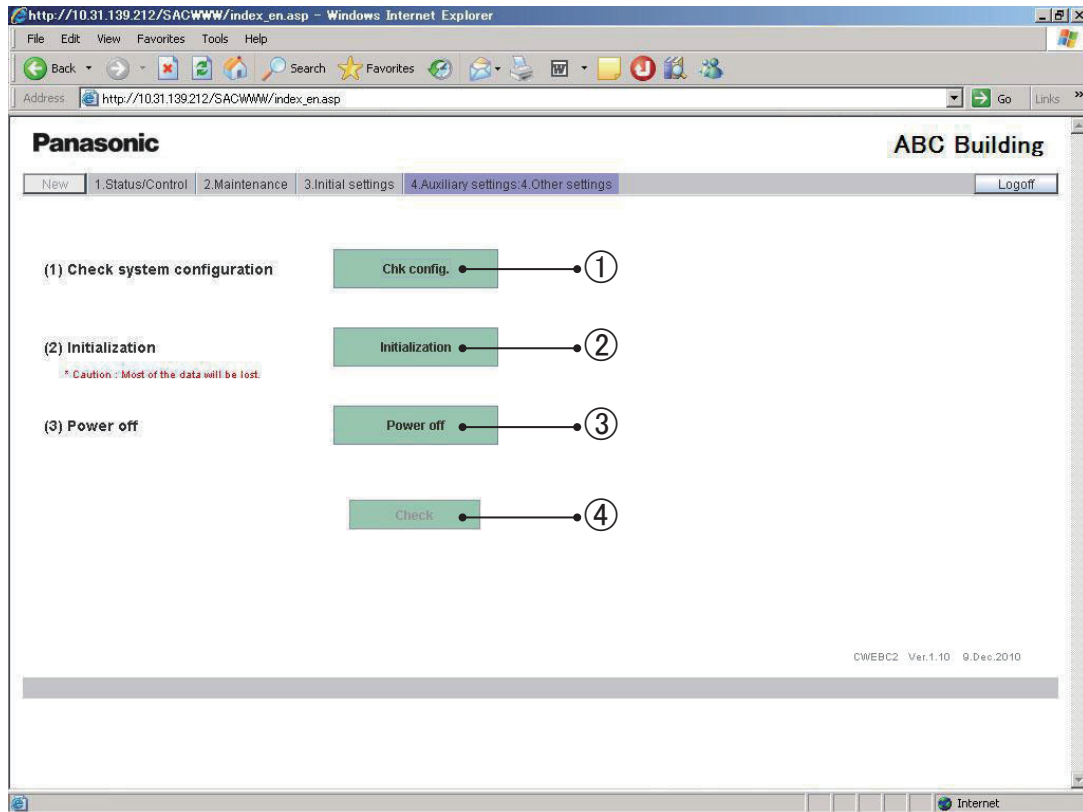

(1) Configuration check

- ① If you click on "Chk config.", a system configuration check can be performed. Perform a configuration check after addition/deletion of units or address change is performed on the air conditioner side. When the following message is displayed, click on "YES" to perform a system configuration check.

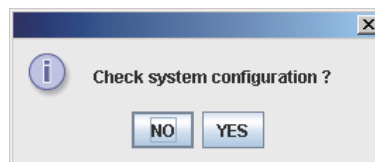


15. Web Interface (CZ-CWEBC2)


9 Auxiliary Settings

 Main **4** Sub **4**


The following message will be displayed while checking the system configuration. While this message is displayed, no Web operation is possible. Wait until the check is completed.

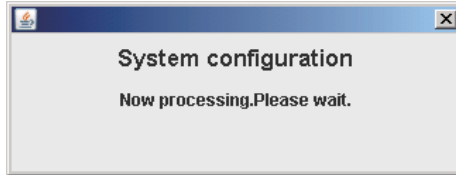

If the checking result shows that the system configuration has not been changed, the following message will be displayed.

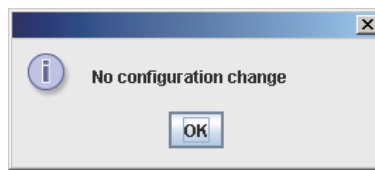


If the checking result shows that the system configuration has been changed, the following message will be displayed.

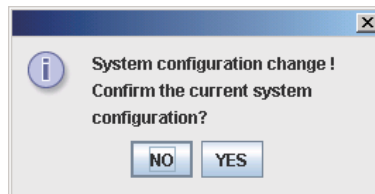


Note that if you leave the screen in this state for 1 hour or more, the current system configuration confirmation process will be automatically performed and registered.

If you click on "YES", registration of the system configuration and data storage will be performed.

During this process, the following message is displayed, and no Web operation is possible. Wait until the process is completed.

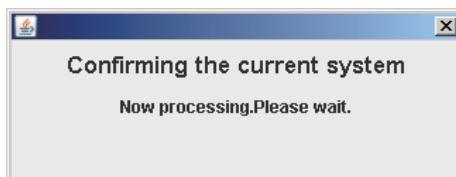

After registration of the system configuration and data storage are completed, the following message will be displayed.

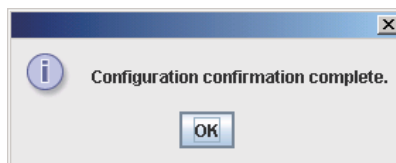

15. Web Interface (CZ-CWEBC2)

9 Auxiliary Settings



[Notes on system configuration check]

- Never perform a system configuration check unless you have actually changed the system configuration.

System configuration changes include addition, moving, and removal of units, and address change.

- Never perform a system configuration check when a power outage occurs on the air conditioner side or when temporary communication failure is generated.

If a system configuration registration is performed in such situations, the air conditioners that should be recognized may not be recognized.

- If "System configuration change!" is displayed as a result of your accidentally performing a system configuration check, never proceed to the current system configuration registration process. First take correction measures against the causal erroneous status, then click on "NO".

If the system configuration is confirmed to be as it originally was, "No configuration change" will be displayed.



- Note that if you leave the screen with the message "System configuration change!" displayed for 1 hour or more, the current system configuration confirmation process will be automatically performed and registered.

(2) Initialization

② If you click on the "Initialization" button, the message shown below will be displayed:

If you click on "YES", system configuration data and setting data will be deleted.


All alarm logs and alarm e-mail delivery logs will be also deleted.

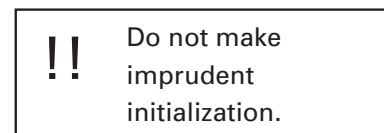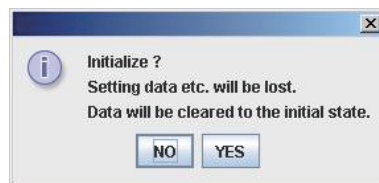

The following data will not be deleted:

- Network settings ("WEB settings" screen)
IP addresses, subnet mask, default gateway, DNS, WINS, and device name
- All user settings ("User settings" screen)

(3) If you attempt to log in using a special/general user account while the Web Interface is in the process of a system configuration check, current system configuration registration, or initialization, the message shown below will be displayed, and you cannot log in. Wait then try to log in again.

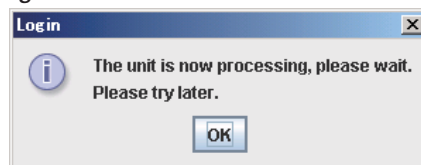

(The administrator user can log in, but Web operations will not be available. The above message will be displayed) The same message will be also displayed when an already logged in user attempts to perform any operation while the Web Interface is in the process of the above procedures.

15. Web Interface (CZ-CWEBC2)


9 Auxiliary Settings

 Main **4** Sub **4**


(4) To close the dialog box displayed in the process of a system configuration check, current system configuration registration, or initialization, click on "x" on the upper right corner. As the process continues after the dialog box is closed, if you attempt to perform other operation, the same message will be displayed again. The message is also displayed again if you click on ④ "Check" in the screen example.

(5) Power off


③ If you click on "Power off", the message shown below will be displayed.

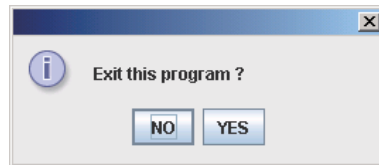

If you click on "YES", the system is preparing for safely shutting down the Web Interface main unit. Never turn off the Web Interface main unit while the following message is displayed:

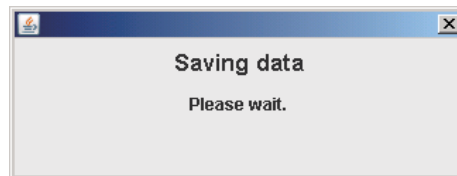

Make sure that the following message is displayed then set the Power switch of the Web Interface to OFF.

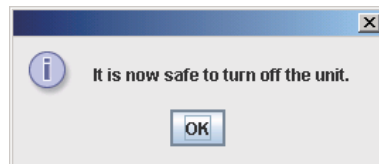

After this message is displayed, to log in again, the Power switch of the Web Interface must be set to ON again.

(6) Check button

④ When you click on the "Check" button while this button is valid, the current process of the Web Interface will be displayed.

15. Web Interface (CZ-CWEBC2)

10 Supplementary Information

■ Note on powering the system down

Always use the following procedure to power the Web Interface off:

Click on **Power off** on the "Other settings" screen.



When "Exit this program ?" is displayed, click on **OK**,



Wait until a message appears to inform you that "It is now safe to turn off the unit."* then power the system down.

(*It may take several minutes until this message appears.)

■ Only an alarm code is displayed to notify of alarm content of air conditioners.

The content of an alarm can vary for different models, even if the alarm code is the same.

Refer to the documentation of the various models to determine the content of the alarm.

■ If errors occurred because of lightning or electromagnetic interference

Turn the Web Interface off then back on again.

(See "Note on powering the system down" above.)

As a rule, the Web Interface should be powered down only in cases such as the above.

Correct management of air conditioners is not possible when the Web Interface is powered down.

■ Note on setting the current date and time

The current date and time should be set on a regular basis, since the system clock can gain or lose up to about two minutes per month (at 25°C).

■ You cannot perform Web operations from the PC while the Web Interface is undergoing the processes described below. Wait until that process is completed, following the instructions displayed on the screen.

- During startup (after turning the Web Interface on)
- During a system configuration check
- During initialization
- During the power-down process
- 23:30–0:05 daily

■ When only one centralized control unit is installed in a system without a remote controller, if the centralized control unit is damaged, the air conditioner(s) may become inoperable, or other troubles may occur.

To avoid this problem, we recommend that you use remote controller(s) or install multiple centralized control units.

■ About passwords

Login passwords should be recorded and saved in a safe place. They should never be disclosed to third parties.

If you forget your login password, contact your dealer or service provider.

We will not be liable for any disadvantage caused by disclosure of login passwords to third parties.

15. Web Interface (CZ-CWEBC2)

10 Supplementary Information

■ About interface adaptors (optional)

You can use interface adaptors to connect equipment that can be turned on and off (fans, room air conditioners, and so on) to the Web Interface.

However, note that the following limitations apply.

For details, refer to the documentation of the equipment or contact your dealer or service provider.

▶ Central control is supported for the following operations only:

- Start/stop
- Remote control prohibition (start/stop only)

Timer settings are supported, but settings other than "Start/Stop" and "Prohibit R/C" are ignored.

Remote control prohibition is possible only if reception of a prohibition signal output from the local adaptor is enabled through connection to the equipment. Even in such a case, the only operations that can be prohibited are start and stop.

▶ Alarm display

Alarm details are not shown.

The "C12" code is displayed (meaning the alarm for any of the air conditioners connected with the local adaptors).

However, this is possible only when connection with a local adaptor enables transmission of the alarm signal.

▶ As long as it conforms to the contact specifications of the on/off local adaptors, any type of equipment can be connected to the Web Interface. However, you should avoid connecting equipment whose operations can have grave consequences for life or property.

15. Web Interface (CZ-CWEBC2)

10 Supplementary Information

★ IMPORTANT ★

- Microsoft and Windows CE are trademarks of Microsoft Corporation in the United States and other countries.
Other products names are trademarks or registered trademarks of their respective holders, or copyrights of their respective holders.
- Duplication of all or part of the software and documentation of this product without the express consent of the holder of the rights to the above, and transfer of the software to another party, are prohibited by law.
- We shall not be liable for any loss, lost profits, or any incidental damages due to use of this product or the supplied software. We shall not be liable to any claim based on a third-party claim.
We shall not be liable for any disadvantage caused by malfunction of the equipment or software.
- The software supplied with this product may not be used on any other equipment.
- This product and the supplied software are subject to change without notice.
The contents of this manual are subject to change without notice.
- We shall not be liable for any violation of the patent rights of any third party stemming from use of information in this manual, or for violation of other rights.

15. Web Interface (CZ-CWEBC2)


11 Troubleshooting

Before requesting service, check the following items.

Do not attempt to service the Web Interface by yourself. Doing so can be dangerous.

Symptom	Cause
The Web Interface cannot detect a single indoor unit. Or it can find not all of them.	<ul style="list-style-type: none"> Click on the "Chk config." button in the "Other settings" screen.
"Page not found" or "Page not displayed" is displayed and you cannot log in. "Communication error" is displayed during Web operation.	<p>Is the Web Interface On? Is the LAN cable connected?</p>
Timer operation does not work.	<ul style="list-style-type: none"> Is timer operation set to "Set"? If timer operation is set to "Cancel", timer operation will not work even if a timer is selected. (*) Are the current date and time correctly set? If the current date and time are not correctly set, operation can start at an unexpected time. (See "Date and time setting" screen.)
A screen display is not automatically updated.	The factory default for "Auto update intv." is "Invalid". (Check the "WEB settings" screen.)
When local remote control operation is prohibited on the Web Interface, start/ stop operation of air conditioners is disabled because of failure in the Web Interface.	<ul style="list-style-type: none"> Emergency operations until our service person arrives: Power down the Web Interface and power the indoor units down then back up again. Operation with the local remote controllers will become possible. This cannot be done in a remote control-free system.
After the recovery from a power outage, the equipment did not come on automatically according to program timer settings.	<ul style="list-style-type: none"> The Web Interface does not power up equipment automatically by program timer after a power outage. The setting for the next programmed time will be executed when the time arrives.



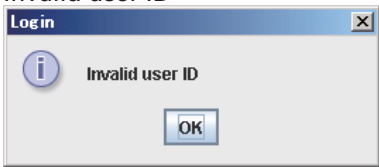
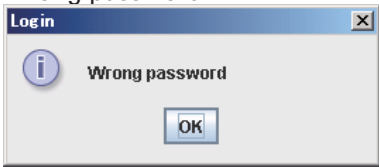
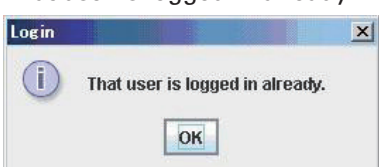
(*) When timer operation is set to "Set" or "Cancel", the timer operation indication on the remote controller screen will be as shown below. Each time you click on "TIMER", the setting will change from "Set" to "Cancel" or vice versa.

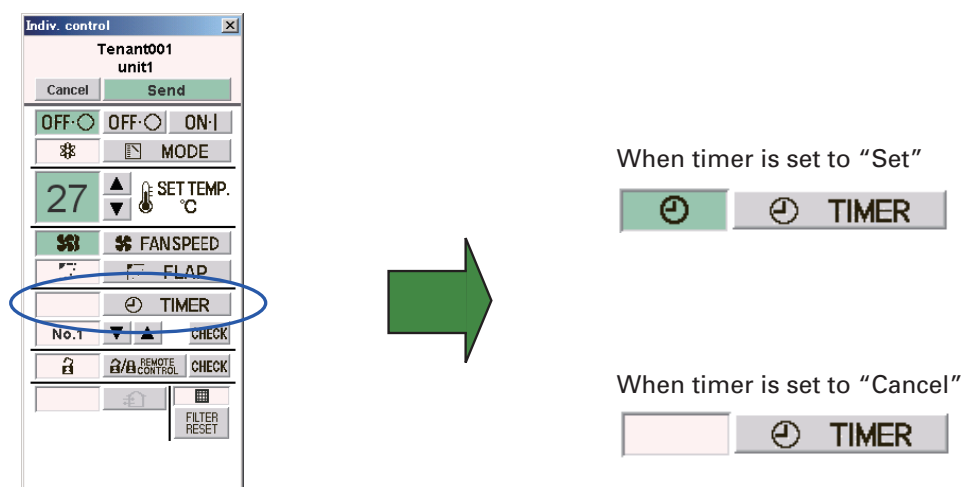

15. Web Interface (CZ-CWEBC2)

11 Troubleshooting

- When the Internet is used for connection of the Web Interface to the PC, take security measures, such as installing an optional firewall.
- The warning messages to be displayed during Web operations, their causes, and corrective measures are shown in the table below.

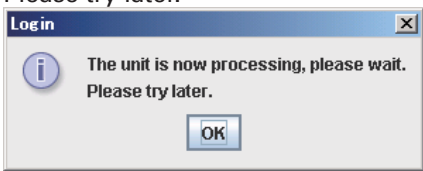Warning message	Meaning and cause	Corrective measures
<p>The unit is now processing, please wait. Please try later.</p> 	<p>The Web Interface is in the process of setting. The access from the Web is busy.</p>	<p>While the Web Interface is undergoing the following processes, Web operations are not possible:</p> <ul style="list-style-type: none"> • During startup (after turning the Web Interface on) • During system configuration check • During initialization • During power-off process • 23:30-0:05 daily <p>Wait until the process is completed then try again.</p>
<p>Communication error</p> 	<p>The Web Interface is not activated. (power-down, etc.) Failure in the LAN cable or LAN</p>	<p>Try again. Check that the Web Interface is activated. Check the LAN cable and LAN.</p>
<p>Invalid user ID</p> 	<p>You have specified an invalid user ID for login.</p>	<p>Retry login using a proper user ID that has been registered in the Web Interface.</p>
<p>Wrong password</p> 	<p>You have specified an invalid password for login.</p>	<p>Retry login using a proper password that has been registered in the Web Interface.</p>
<p>That user is logged in already.</p> 	<p>An administrator user attempted to log in while another administrator user was already logged in.</p>	<p>Log off the administrator user who has already logged in first.</p>

15. Web Interface (CZ-CWEBC2)

12 Care

■ **Unplug the power cord before cleaning the Web Interface.**

The system has high-voltage connectors and other dangerous components. Always power the system down and unplug the power cord before cleaning it.

■ **Use a neutral solvent.**

To clean the main unit, use a soft cloth slightly moistened with lukewarm water or a neutral solvent.

Do not use volatile agents, such as benzine and thinner, abrasives, or pesticides. Doing so can damage painted surfaces.

■ **Avoid direct contact with water.**

Do not allow water to contact the product directly.

Insulation will be impaired, which may result in damage or electrical shorts.

■ **Do not disassemble.**

Do not disassemble the Web Interface.

Doing so may damage the unit or cause electrical shock and is very dangerous.

■ **Check the mounting of components.**

Several times a year, check to make sure that the mounting of components has not been weakened by rust or corrosion.

15. Web Interface (CZ-CWEBC2)

13 Specifications



Model name		CZ-CWEBC2
External dimensions		(H)248 × (W)185 × (D)80 mm
Method of installation		Inside the control panel
Maximum number of connectable units		64 air conditioners (indoor units)
Timer precision		± Approx. 2 minutes/month (normal temperature: 25°C)
Timer	Setting unit	1 minute
	Operation	50 times/day 50 types of daily timer / 50 types of weekly timer
	Program cycle	1 week
Temperature/humidity ranges for use		5°C–40°C / 20%–80%
Power requirements		Single-phase, 100–240 V ~, 50/60 Hz
Power consumption		Max. 17 W
Weight		2.2 kg

15. Web Interface (CZ-CWEBC2)

■ Installation (Electric) and Service Instructions

Safety Precautions

- Before conducting installation or electrical work, be sure to carefully read these “Safety Precautions” and follow them carefully.
- The precautions given in this manual consist of specific “Warnings” and “Cautions”. Be sure to follow these precautions, as they provide important safety related information. The labels and their meanings are as described below.

 Warning	This refers to a hazard or unsafe procedure or practice which can result in severe personal injury or death.
 Caution	This refers to a hazard or unsafe procedure or practice which can result in personal injury or product or property damage.









Warning

- Be sure to arrange installation at the dealer where the system was purchased or use a professional installer. Electric shock or fire may result if an inexperienced person performs any installation or wiring procedures incorrectly.
- Carefully follow these Installation (Electric) and Service Instructions when installing the unit. Electric shock or fire may result if the unit is not installed correctly.
- Electrical installation should be performed by qualified electrician, in accordance with the provisions of the Technical Standards for Electrical Installations, local regulations for indoor wiring, and these Installation (Electric) and Service Instructions. Be sure to use a dedicated electrical circuit. Insufficient electrical circuit capacity may result in electric shock or fire.
- Use the specified cables for the electrical connections, and connect the cables securely. Fasten the cables securely so that the cables will not exert force on the connection terminals. Insecure connections or fastening may result in overheating or fire.
- The installation location requires the use of a circuit breaker. Failure to use a circuit breaker may result in electric shock or fire.
- Circuit breaker must be incorporated in the fixed wiring in accordance with the wiring regulations. The circuit breaker must be an approved 10-16 A, having a contact separation in all poles.
- Install this unit to the location where general users cannot easily access (such as inside the control box).

Caution

- When performing electrical installation, discharge any accumulated static electricity to ground before touching the unit.
- Always use the system together with a remote controller or a system controller.

Supplied parts

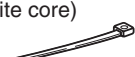Part number	Part name	Quantity	Part number	Part name	Quantity
①	Small pan head bolt (M4 x 10) 	4	②	Nut(M4) 	4
③	Flat washer 	4	④	Cable tie 	2
⑤	Operation Manual 	1	⑥	This leaflet 	1
⑦	Ferrite core 	1	⑧	Cable tie (for fixing a ferrite core) 	1


Specifications

Rated voltage..... 100 - 240 V~, single phase
 Rated frequency 50/60 Hz
 Power consumption17 W max.
 Operating temperature5 to 40° C
 Operating humidity20 to 80%
 (non-condensing)


15. Web Interface (CZ-CWEBC2)

1 Cautions regarding the design of the control box

External dimensions

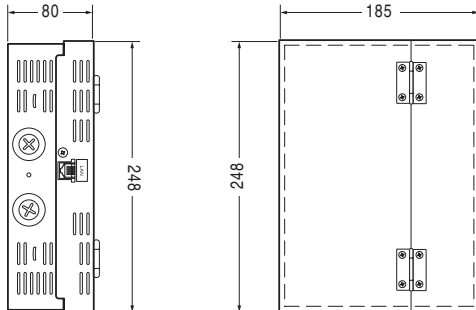

Control box machining diagram

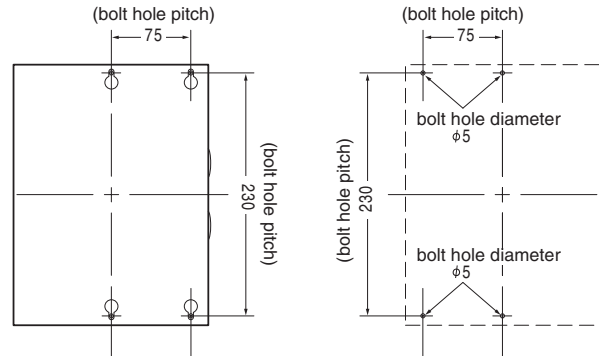


* It is possible to install the unit upside down.


Take the following into consideration when designing the control box:

- (1) To ensure sufficient airflow for cooling, provide air vents (holes, slots, etc.) on the upper, lower, left and right sides of the box, as shown in the figure below. (Be sure not to clog the ventilation hole when setting.) Ensure that the temperature inside the control box does not exceed 40°C.
- (2) Keep the power and communications signal lines as far apart as possible (at least 50 mm, if cabled inside the control box) to reduce the effects of electrical noise.

Control box example

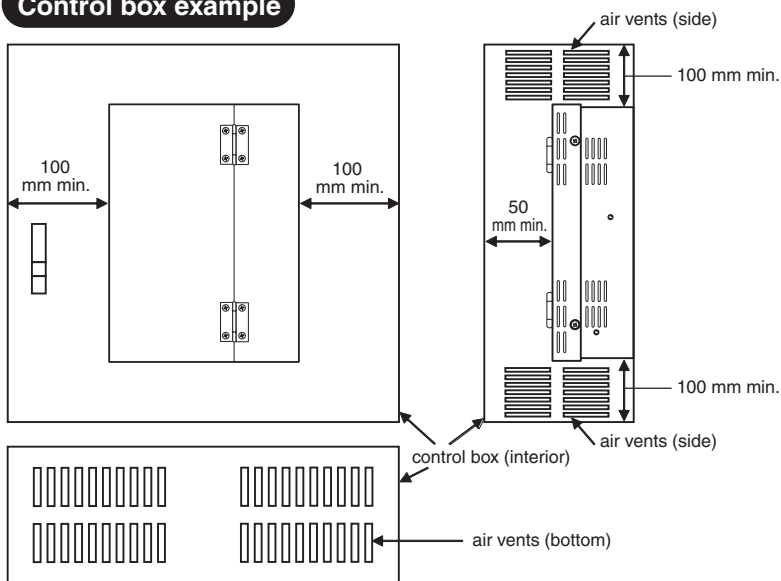

Wiring example

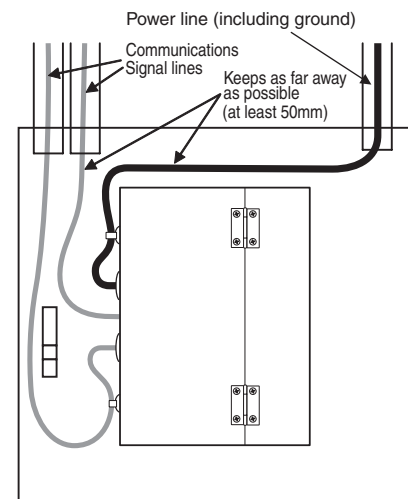


3

2 Mounting

Caution

- Mount the unit far away from potential noise sources.
 - Do not mount the unit where it could get wet, or in areas of high humidity.
 - Do not mount the unit where it could be subject to excessive vibration or shocks.
 - Mount the unit inside a control box.
- (1) Remove the tapping screw at the side of the LAN connector and open the lid.
 - (2) Mount the controller unit to the control box using the four supplied bolts, washers, and nuts.
 - (3) Replace the lid, and secure it with the tapping screw.

Mounting diagram

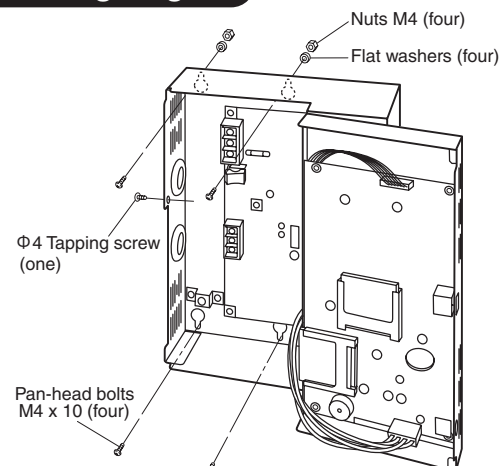


15. Web Interface (CZ-CWEBC2)

3 Wiring

Always shut off the power supply (breaker) before installing or uninstalling.

Connection terminals

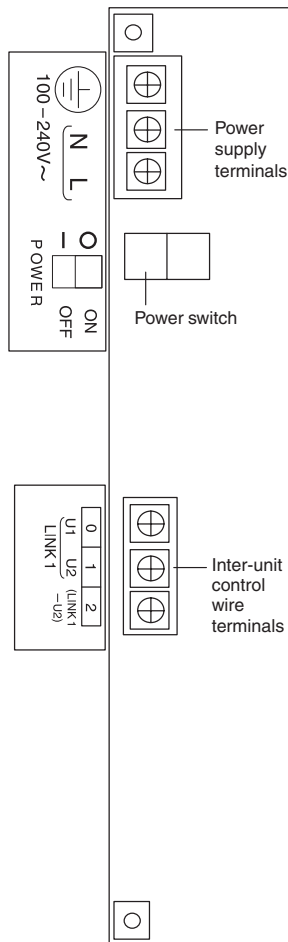


(1) Power supply connection

Connect the power supply to the commercial power mains (100 to 240 V AC), using a dedicated circuit. Connect the power supply lines to the L and N power supply terminals (the power supply neutral to the N terminal).


Connect an earth ground line to the power supply terminal. Firmly secure the power lines using the supplied cable tie.

(2) Signal connection

- Do not run signal lines through the same conduit as power supply lines, use the same cable as the power supply, or run close to the power supply lines (maintain at least 30 cm separation, if cabled outside the control box).
- Do not run the LINK1 and LAN signal lines through the same conduit, or run the signal lines close together.
- Connect indoor and outdoor signals using 0.5 - 2.0 mm² two-conductor cable. Overall length of each signal line should be 1 km or less. Secure the shielded cable to the metal plate with a screw, as illustrated (apply one-line grounding).
- Use LAN cables of Category 5 or higher.
- Be sure to attach the supplied ferrite core at one end of the LAN cable (Web Interface side). Use a cable tie to make sure the ferrite core stays in place.

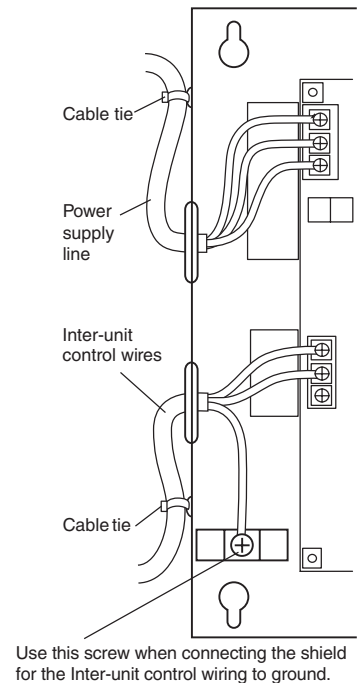


Use this screw when connecting the shield for the Inter-unit control wiring to ground.

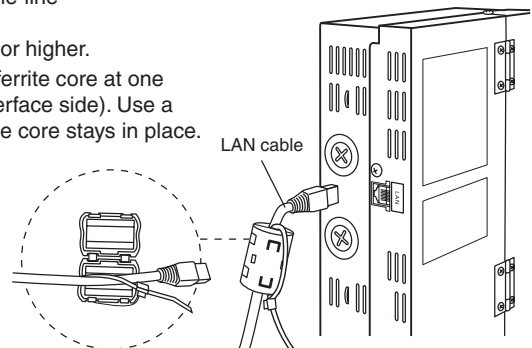

Basic wiring diagram

Wire up the Indoor/outdoor control wire as shown in the figure below.

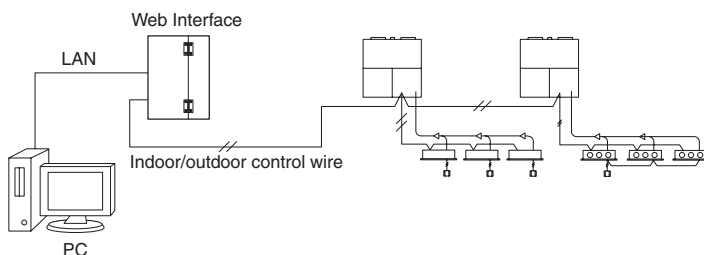

Wiring procedure

- Inter-unit control wire (no polarity)
 - Use the shielded wire for inter-unit control wiring. Connect signal terminals 0 and 1 (LINK1) to the Inter-unit control wire terminals of an indoor or outdoor unit.
 - Make sure that power lines are not connected to the Inter-unit control wire terminals.
- * If the power voltage is accidentally applied to the Inter-unit control wire terminals, the fuse will go out to protect the board, but not in some cases. If this happens, disconnect the power line, and connect the Inter-unit control wire to the spare U2 terminal. (The other signal line can stay connected to the U1 terminal.) The spare U2 terminals are right next to the main U2 terminals.
 - Use terminal 2 (LINK1-U2) instead of terminal 1
- LAN cable
 - Connect the LAN cable directly to the PC or to the network hub.

15. Web Interface (CZ-CWEBC2)

4 System power off procedure

(1) Press and hold  switch for more than 4 seconds.

The 7-segment LED indication appears as below.


d - 5 A U E

Wait several minutes.

The 7-segment LED indication appears as below.

P - o f f

(2) Turn the power switch off.

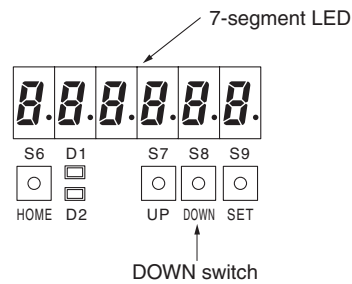

5 Verify the system configuration, make necessary settings

- (1) Turn on power to all air conditioner units.
- (2) Turn on power to the unit.
- (3) Set the date and time on the unit and verify the system configuration.
- (4) Verify the number of units connected.
- (5) Perform the necessary settings. **Be sure to set the central control address.**

* See the Operation Manual for details.

6 Educating the customer

- Give the Operation Manual to the customer.
- Explain the operation to the customer, following the explanations given in the Operation Manual.

16. Intelligent Management System

1. Basic Software (CZ-CSWKC2)

Operation Manual
Air Conditioning
Intelligent Management System
CZ-CSWKC2
Basic Software

P-AIMS

Thank you for purchasing our monitoring and control system.
 Before using the system, be sure to read this manual carefully. After reading it, store it in a convenient location for easy reference.

Operation Manual
 Air Conditioning
 Intelligent Management System
CZ-CSWKC2
Basic Software

Contents	
Precautions on Using This Product.....	1
1. Features of the System.....	1
2. Startup and exit.....	2
3. Quick Reference.....	3
4. Using the System.....	4
5. Supplementary Information.....	82
6. License Certification.....	85
7. Basic Software Installation.....	88
8. Troubleshooting.....	91
9. Afterservice.....	92

16. Intelligent Management System

Contents

Precautions on Using This Product	i
1. Features of the System	1
1-1. Introduction.....	1
1-2. System Features.....	1
2. Startup and exit	2
2-1. Startup	2
2-2. Exit.....	2
3. Quick Reference	3
4. Using the System	4
4-1. Common Items.....	4
4-1-1. The Menu Bar	4
4-2. Warning information display list box.....	7
4-3. Calendar.....	7
4-4. Password	8
4-5. Procedure.....	8
4-6. Print	9
4-6-1. Print screen.....	9
4-6-2. Excel output.....	9
4-6-3. Settings for automatic Excel output	10
4-6-3-1. Settings for saving the Operation/status log.....	10
4-6-3-2. Settings for saving the alarm log.....	11
4-6-3-3. Changing the folder in which CSV files are created for automatic Excel output	11
4-6-3-4. Registering settings	11
4-6-3-5. Deleting settings	11
4-6-3-6. Deleting	11
4-6-3-7. Troubleshooting if saving does not work	12
4-7. Status/Operation	13
4-7-1. Display method.....	14
4-7-1-1. Selecting displayed floor and area	14
4-7-1-2. Displaying alarms	14
4-7-1-3. Displaying sub units	15
4-7-1-4. Sorting lists.....	15
4-7-2. Start and stop control method	15
4-7-2-1. Indoor unit selection method	15
4-7-2-2. Start and stop operation method (for each indoor unit).....	16
4-7-2-2-1. On/Off.....	16
4-7-2-2-2. Mode switch.....	16
4-7-2-2-3. Fan speed switch	17
4-7-2-2-4. Swing/Flap	17
4-7-2-2-5. Prohibition switch	17
4-7-2-2-6. Temperature setting	17
4-7-2-2-7. Transmit	18
4-7-2-2-8. Deleting	18
4-7-2-3. On and Off operation method (Each group)	18
4-8. Filter/Indoor Unit Information	19
4-8-1. Display method.....	21

4-8-1-1. Selecting displayed floor and area	21
4-8-1-2. Sorting lists.....	21
4-8-2. Control method.....	21
4-8-2-1. Indoor unit selection method	21
4-8-2-2. Clearing filter signs.....	22
4-8-2-3. Clearing operation time	22
4-8-2-4. Canceling and setting demand	23
4-9. Outdoor unit information	24
4-9-1. Display.....	25
4-9-1-1. Oil check sign.....	25
4-9-1-2. Power output.....	25
4-9-2. Demand setting	26
4-9-2-1. Outdoor unit selection	26
4-9-2-2. Setting demand values.....	26
4-10. Control/Status Change History	27
4-10-1. Display method.....	28
4-10-1-1. Displaying control history	28
4-10-1-2. Displaying status change history	28
4-10-1-3. Display time range specification method	28
4-10-2. Printing.....	30
4-10-2-1. Excel output	30
4-11. Alarm list & alarm log	31
4-11-1. Alarm list.....	31
4-11-1-1. Display method	31
4-11-1-2. Excel output	32
4-11-2. Alarm log.....	33
4-11-2-1. Display method	34
4-11-2-2. Refining the displayed data	34
4-11-2-3. Display range term specification method	34
4-11-2-4. Alarm confirmation.....	35
4-11-2-5. Print screen	36
4-11-2-6. Excel output	36
4-11-2-7. Settings for automatic Excel output	36
4-12. Schedule/Results.....	37
4-12-1. Display method.....	38
4-12-1-1. Selecting displayed floor and area	38
4-12-1-2. Sort lists	38
4-12-1-3. Display time range specification method	38
4-12-2. Detailed display of schedule time	39
4-13. Mode setting (calendar).....	40
4-13-1. Display method.....	40
4-13-1-1. Calendar display	40
4-13-2. Calendar operation.....	40
4-13-2-1. Registering holidays on the calendar	40
4-13-3. Registering mode settings.....	41
4-13-3-1. Registering modes to the calendar	41
4-13-3-2. Deleting modes from the calendar.....	41
4-13-3-3. Registering an edited calendar	42
4-13-3-4. Registering in day-of-the-week units	42
4-13-4. Mode comment operation.....	43
4-13-4-1. Registering mode comments.....	43
4-13-5. Change confirmation.....	43
4-14. Schedule Operation Time Setting.....	44
4-14-1. Registering schedule times	45
4-14-1-1. Mode selection	45
4-14-1-2. Setting schedule times.....	46

16. Intelligent Management System

4-14-1-3. Confirming schedule time settings.....	47
4-14-2. Edit function.....	47
4-14-2-1. Editing schedule times.....	47
4-14-3. Saving changed data.....	48
4-14-4. Change confirmation.....	48
4-15. Schedule Changes.....	49
4-15-1. Display method.....	50
4-15-2. Registering schedule times.....	51
4-15-2-1. Setting schedule times.....	51
4-15-2-2. Confirming schedule time settings.....	52
4-15-3. Edit function.....	52
4-15-3-1. Editing schedule times.....	52
4-15-4. Saving changed data.....	53
4-15-5. Change confirmation.....	53
4-16. Register Maintenance Information.....	54
4-16-1. Display method.....	55
4-16-1-1. Selecting displayed floor and area.....	55
4-16-2. Maintenance settings.....	55
4-16-2-1. Maintenance settings.....	55
4-16-2-2. Cancel maintenance.....	55
4-16-2-3. Registering changed data.....	55
4-16-2-4. Deleting settings.....	55
4-16-3. Change confirmation.....	55
4-17. Floor Name Registration.....	56
4-17-1. Display method.....	57
4-17-1-1. Confirmation of indoor units included in each floor.....	57
4-17-2. Floor registration.....	57
4-17-2-1. Changing floor names.....	57
4-17-2-2. Enable/disable settings.....	57
4-17-2-3. Level setting.....	57
4-17-2-4. Main No. setting.....	57
4-17-2-5. Registering changed data.....	58
4-17-2-6. Deleting settings.....	58
4-17-3. Change confirmation.....	58
4-18. Register control group name.....	59
4-18-1. Display method.....	60
4-18-1-1. Confirmation of indoor units included in control group.....	60
4-18-2. Registering control groups.....	60
4-18-2-1. Changing control group names.....	60
4-18-2-2. Enable/disable settings.....	60
4-18-2-3. Registering changed data.....	60
4-18-2-4. Deleting settings.....	60
4-18-3. Change confirmation.....	60
4-19. Register Schedule Group Names.....	61
4-19-1. Display method.....	62
4-19-1-1. Confirmation of indoor units included in each schedule group.....	62
4-19-2. Registering schedule groups.....	62
4-19-2-1. Changing schedule group names.....	62
4-19-2-2. Enable/disable settings.....	62
4-19-2-3. Registering changed data.....	62
4-19-2-4. Deleting settings.....	62
4-19-3. Change confirmation.....	62
4-20. Register operator information.....	63
4-20-1. Registering operators.....	63
4-20-1-1. Changing operator names.....	63
4-20-1-2. Enable/disable settings.....	63
4-20-1-3. Registering changed data.....	64
4-20-1-4. Deleting settings.....	64
4-20-2. Change confirmation.....	64
4-21. R/C prohibition settings.....	65
4-21-1. Control method.....	66
4-21-1-1. Changing prohibition settings (effects prohibit 1 - 4).....	66
4-21-1-2. Initializing prohibition settings.....	66
4-21-1-3. Registering settings.....	66
4-21-1-4. Deleting settings.....	66
4-21-1-5. Close the screen.....	66
4-22. Clock setting.....	67
4-22-1. Clock setting method.....	67
4-22-2. Setting.....	67
4-23. Data backup and restoration.....	68
4-23-1. Data backup.....	68
4-23-1-1. Starting data backup.....	68
4-23-1-2. Deleting.....	69
4-23-1-3. Changing the save destination.....	69
4-23-2. Data restoration.....	69
4-23-2-1. Start data restoration.....	70
4-23-2-1-1. Starting data restoration.....	70
4-23-2-1-2. Canceling data restoration.....	70
4-23-2-1-3. Re-specifying the data restoration file.....	70
4-23-3. Canceling data restoration.....	71
4-23-3-1. Starting cancellation of data restoration.....	71
4-23-4. Automatic backup settings.....	72
4-23-4-1. Enable/disable automatic backup.....	72
4-23-4-2. Setting the maximum storage term.....	73
4-23-4-3. Changing the backup creation folder.....	73
4-23-4-4. Registering settings.....	73
4-23-4-5. Deleting settings.....	73
4-23-4-6. Deleting.....	73
4-23-4-7. Troubleshooting if saving does not work.....	74
4-24. Register Event.....	75
4-24-1. Display method.....	75
4-24-1-1. Event group display.....	75
4-24-2. Registering event groups.....	76
4-24-2-1. Changing event group names.....	76
4-24-2-2. Changing the input point.....	76
4-24-2-3. Changing status.....	76
4-24-2-4. Changing the output point.....	76
4-24-2-5. Changing output.....	76
4-24-2-6. Setting judgment conditions.....	77
4-24-2-7. Changing output delay time.....	77
4-24-2-8. Registering changed data.....	77
4-24-2-9. Deleting settings.....	77
4-24-3. Change confirmation.....	77
4-25. Register ID unit upper/low-limit temperature.....	78
4-25-1. Display method.....	79
4-25-1-1. Selecting displayed floor and area.....	79
4-25-1-2. Sorting lists.....	79
4-25-2. Control method.....	79
4-25-2-1. Indoor unit selection method.....	79
4-25-2-2. Setting upper and lower limit temperatures.....	80
4-25-2-3. Enable/disable settings.....	80
4-25-3. Saving changed data.....	80
4-25-4. Change confirmation.....	80
4-26. Exit.....	81

16. Intelligent Management System

5. Supplementary Information.....	82
6. License Certification.....	85
7. Basic Software Installation	88
8. Troubleshooting	91
9. Afterservice.....	92

Note

16. Intelligent Management System

■ Precautions on Using This Product

★ IMPORTANT ★

- Before you can use the P-AIMS system, you need to first perform a work procedure called "license certification".
- Please perform the license certification referring to "6.License certification".
- Duplication of all or part of this software and documentation without the express consent of the holder of the rights to the above, and transfer of the software to another party, are prohibited by law.
- This software and manual are not to be reproduced, in whole or in part, without permission.
- In principle, each set of this software is purchased for use on a single computer.
- Please note that we bear no responsibility for any effects resulting from the use of this software and manual.
- Panasonic will not be liable for any claim based on errors in calculations of distribution ratios and utility usage caused by faults in this equipment or software.
- The specifications of this software, and the content of this manual, are subject to change without notice, for the sake of improvement.
- This software is used to calculate distribution ratios and charges according to the load ratios estimated for each indoor unit.
- It is not based on the Measurement Act, so it cannot be used for public transactions and similar purposes.
- The content of this manual is limited to explanation of how to use this software.
- It does not cover the usage methods for the operated machinery and optional features, or for the OS etc., so refer also to the relevant manuals for those elements.
- The screen image examples presented in this manual are intended to illustrate the explanation of layouts, and do not represent actual operating conditions. The tenant names displayed are also fictional.
- Displays and operations may differ from the examples in this manual, depending on versions of Excel and the OS used.
- Refer to "Please Read Before Use" for the warranty terms for this software.
- Panasonic will not be liable for any violation of the rights of any third party stemming from use of information in this manual, or for violation of other rights.
- Microsoft, Windows XP and Microsoft Excel are trademarks of Microsoft Corporation in the United States and other countries.
- Other product names are trademarks or registered trademarks of the corresponding companies.
- Other products are copyrights of the corresponding companies.

1. Features of the System

1-1. Introduction

This Air Conditioning Intelligent Management System (P-AIMS System) is Panasonic Corporation's personal computer (PC) software for the centralized control of air conditioning equipment.

- Compatible equipment models are:
Electric package air conditioners (PAC)
Gas heat pump (GHP) air conditioners

1-2. System Features


- Connectable units 1,024 indoor
960 outdoor
- Operation functions Start/stop, temperature settings, operation mode switching, airflow direction settings, etc.
- Operation monitor Layout display (requires layout display software, sold separately)
Unified monitoring of operation status (start/stop, operation mode, alarm)
Alarm log display, status change history display
Filter cleaning signs, engine oil check sign
- Program timer 20 daily times can be set for each group (30 types)
- Air conditioning energy distribution Cumulative operation time for each indoor unit, and total operation count
Calculation of distribution ratios and usage quantities (m³, kWh) for air conditioning consumption of gas and electricity by each indoor unit and each tenant
Time zone distribution function (within hours, after hours, special days)
Processes performed on cut-off days can be changed at any time (within a year)
(separate charge calculation software is required)

16. Intelligent Management System

2. Startup and exit

2-1. Startup

1. Double click on the P-AIMS shortcut on the desktop.

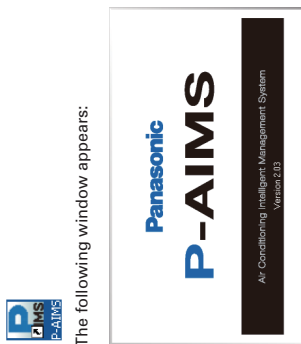


The following window appears:

The system starts up and the Status/Operation screen is displayed.

2-2. Exit

1. From the Menu bar, select "Maintenance" - "Exit".

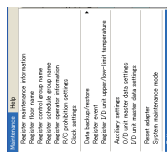

2. The Password Input screen is displayed. Input the password.




3. The System Exit screen is displayed. Click on the button.



3. Quick Reference

Menu List

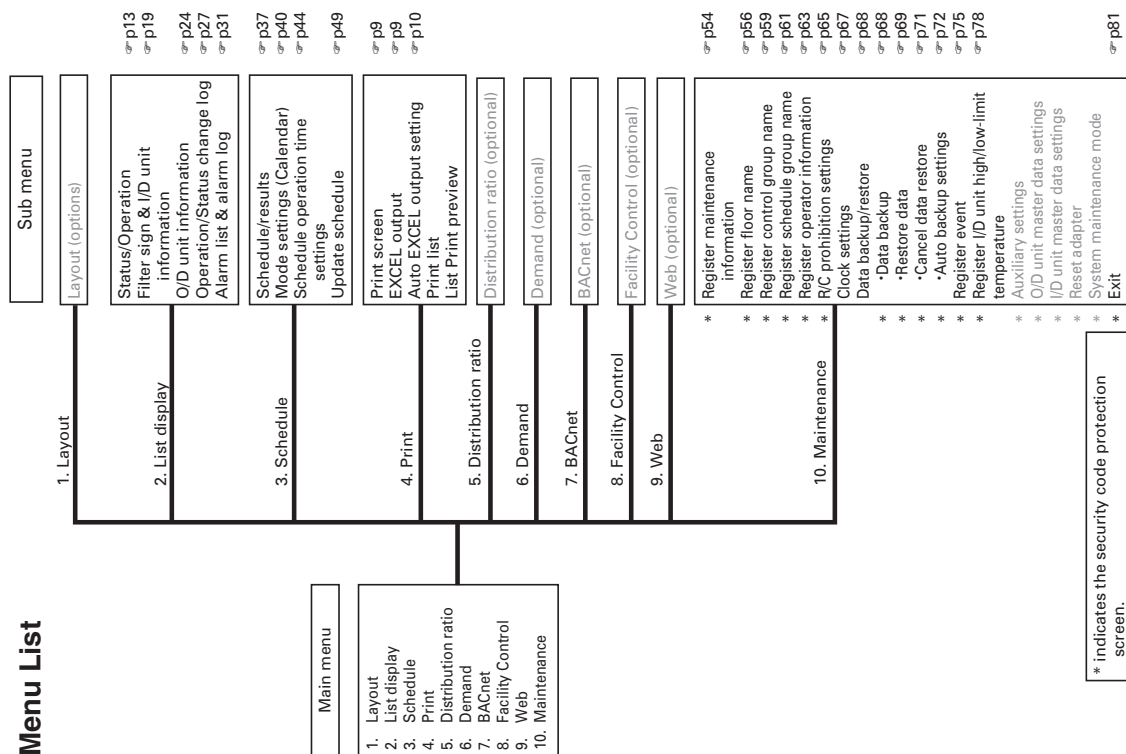

* indicates the security code protection screen.

16. Intelligent Management System

4. Using the System

4-1. Common Items

The common display area is at the top of the screen, and is always displayed, regardless of which operation screen is used. Any current alarms and the date and time are also displayed. The menu bar can be used to move between screens.

4-1-1. The Menu Bar


- Layout Display the layout. (Optional)
- List display Display the various list screens.
 - Status/Operation Monitor air conditioner status and alarms, and perform start and stop operations etc.
 - Filter sign & /ID unit information Check duration and times of indoor unit operation and reset filter alarms.
 - O/D unit information Check duration and times of outdoor unit operation and make power demand settings.
 - Operation/Status change log Display a log of air conditioner starts and stops, and change operation status.
 - Alarm list & alarm log Display a log of air conditioner alarms and restoration status.

- Schedule Display the Schedule setting screen.
 - Schedule/results Monitor air conditioner status and alarms, and perform start and stop operations etc.
 - Mode settings (Calendar) Set the scheduled operation mode to calendar.
 - Schedule operation time settings Set the scheduled operation times for each mode.
 - Update schedule Check and change scheduled operating times for the same day, next day and day after that.
- Print Print data from the screen.
 - Print screen Print the displayed screen.
 - EXCEL output Export the print image to a CSV file that can be loaded by Microsoft Excel.
 - Auto EXCEL output setting Make settings for automatically outputting the specified data to CSV files that can be loaded by Microsoft Excel.
 - Print list Print the distribution table.
 - List print preview Display and print the preview screen for the distribution table. (Optional)
- Distribution ratio Calculate distribution. (Optional)
- Demand Control demand. (Optional)
- BACnet Perform BACnet communications. (Optional)
- Facility Control Control devices other than the air conditioners. (Optional)
 - Web Provide a web browser. (Optional)
 - Maintenance Display the Maintenance screen.
 - Register maintenance information Register and cancel indoor unit maintenance.
 - Register floor name Register floor names.
 - Register control group name Register control group names.
 - Register schedule group name Register schedule group names.
 - Register operator information Register names of operators responsible for checking alarms.
 - R/C prohibition settings Set central control patterns for use with the remote control unit.
 - Clock settings Set the system time.
 - Data backup/restore Backup and restore data.
 - Data backup Make backups of data.
 - Restore data Restore back-up data.
 - Cancel data restore Delete data backups.
 - Auto backup settings Set how backups are made automatically.

16. Intelligent Management System

4-2. Warning information display list box


When an alarm is issued in connection with a monitored device, the name of the alarm device is displayed in the list box in the upper left of the screen, where it flickers in red. Click on the button on the right side of the list box to display the list of current alarms. If there are many alarms in effect, an additional scroll bar is displayed on the right side of the list display screen. Devices which have been restored from their alarms are automatically removed from the list. A buzzer also sounds when an alarm occurs, but it can be stopped by clicking on the Buzzer OFF button.



4-3. Calendar

Click on the button on the right side of the date display column, when specifying time periods on any screen, to display the calendar screen.

Click on the calendar to select the dates of displayed history items.

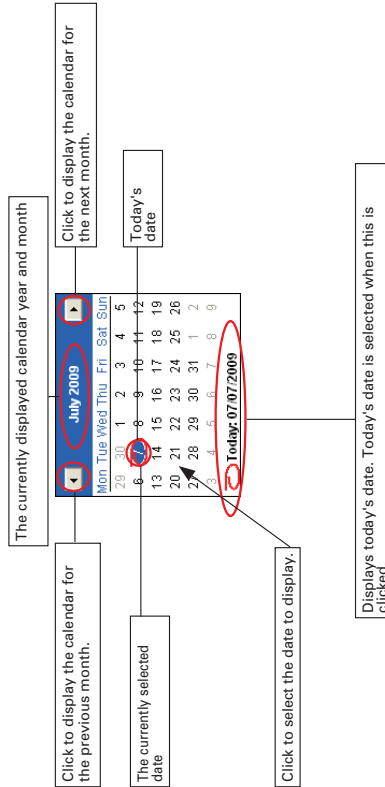


- Register event.....Register conditions for linked control.
- Register I/D unit high/low-limit temperature.....Register conditions for the upper and lower temperature limits for the indoor unit
- Auxiliary settings.....Make adapter connection line settings, system password settings, etc.
- O/D unit master data settings.....Register outdoor units to monitor.
- I/D unit master data settings.....Register indoor units to monitor.
- Reset adapterSpecify the connection line and reset the adapter.
- System maintenance modeDisplay the system maintenance mode.
- Exit.....Exit the system.
- HelpDisplay the Help screen.
- Basic software manual.....Display the basic software manual.
- Layout display software manualDisplay the layout display software manual. (Optional)
- Distribution ratio software manual.....Display the Accounting software manual. (Optional)
- Demand software manualDisplay the demand control software manual. (Optional)
- BACnet software manual...Display the BACnet control software manual. (Optional)
- Facility control software manual.....Display the facility control software manual. (Optional)
- WEB software manual.....Display the WEB software manual. (Optional)
- Select LanguageThe selected language is displayed.
- Version informationDisplay version information.

16. Intelligent Management System

4-4. Password

This password screen is displayed if users are restricted, in order to restrict access to screens such as the Maintenance screen which are not used by general users, and to prevent operation errors. The password level required for the current input is displayed at the top of the Password screen. Input a password of a level that meets the level requirement.

Click on the numerical buttons at the bottom to input the correct password. When a correct password is input, the restriction is lifted and the displays and devices on the screen become operable. Restrictions are also lifted if the input password is of a level surpassing that which is displayed.

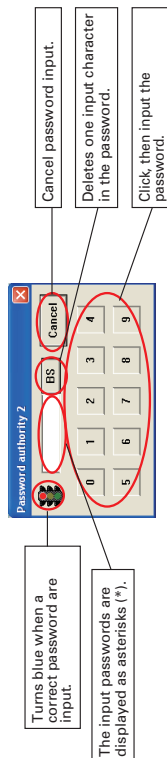

* There are three levels of password, as follows:
 Level 1: It is possible to operate and change the names of password-protected devices.
 Level 2: Operations such as system settings and shutdown are possible.
 Level 3: All operations, including system maintenance, are possible.

4-5. Procedure

If [Procedure] is displayed, the procedure for accessing that item is presented. For example,

- [Procedure]
- On the menu bar, select "Print" – "Auto EXCEL output setting".
- (Password level 1)


when the above is displayed, clicking on Print on the main menu displays the sub-menu. Click on "Auto EXCEL output setting" in the sub-menu to switch the screen display to that item. If there is a <Password Level 1> display, the Password screen (Level 1) is displayed, so the screen switches after a suitable password is input.

4-6. Print

4-6-1. Print screen

- [Procedure]
- On the menu bar, select "Print" – "Print screen".

Print the currently-displayed screen.
 * This menu cannot be selected on screens that cannot be printed.

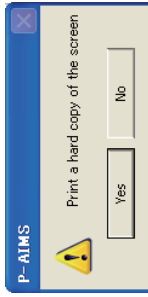


Click on the Yes button to print the screen.
 Click on the No button to exit without printing.

4-6-2. Excel output

- [Procedure]
- On the menu bar, select "Print" – "Excel output".

Currently displayed data can be saved as a file in CSV format, which can be displayed by Microsoft Excel and similar applications. The data currently displayed on the screen becomes the file, so make sure the data to place in the file is displayed on the screen.

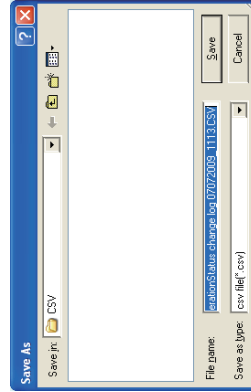

The file name is assigned automatically.

Operation>Status change log 07072009_1113.CSV

Name DDDMMYYY_hhmm *This file is for when the "Operation/Status change log" is used.

Click on the Save button to save the file to the folder specified under "Save in".
 Click on the Cancel button to exit without saving.


* Unless a different save folder has been specified, the saved file is saved to the folder named Auto_CSV in the folder to which the P-AIMS system was installed (e.g. C:\P-AIMS).

16. Intelligent Management System

4-6-3. Settings for automatic Excel output

- [Procedure]
- On the menu bar, select "Print" – "Auto EXCEL output setting".
- (Password level 1)

"Operation/Status change log" and "Alarm log" can be saved automatically, every day, in CSV format, which can be displayed on Microsoft Excel. The timing of data saving is past midnight, so the data up to the previous day can be checked.

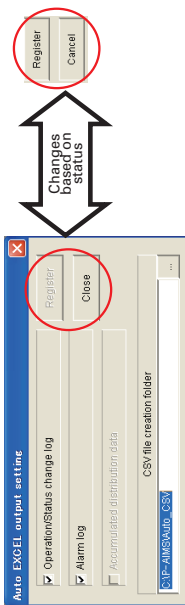

- Operation/Status change log
- Alarm log
- Accumulated distribution data



- : Specify the file to save the Operation/Status change log to.
- : Specify the file to save the Alarm log to.
- : Specify the file to save Distribution ratio-related data (Optional) to. This cannot be specified with the basic software.
- : Registers the set content.
- : Reverts to the previously registered content.
- : Closes the window.
- : Changes the backup creation folder.

4-6-3-1. Settings for saving the Operation/status log

To automatically save the "Operation/Status change log" file, click on Operation/Status change log, and add the check mark. Saving is enabled with the check mark is added.

Click again to remove the check mark.

The file name is assigned automatically. (Files are saved in one-day units).

OperationStatus_change_log_07072009_1.CSV

Name DMMYYYY serial number

(*The serial number increments to "2" when there are over 60,000 files with the serial number "1". Up to 400,000 files can be saved per day).

4-6-3-2. Settings for saving the alarm log

To automatically save the alarm log file, click on Alarm log, and add the check mark. Saving is enabled with the check mark is added. Click again to remove the check mark.


The file name is assigned automatically. (Files are saved in one-month units).

Alarm_log_082006.CSV

Name MMYYYY

4-6-3-3. Changing the folder in which CSV files are created for automatic Excel output


Click on the  button to display the Browse Folder screen, which can be used to change the folder in which files are saved.

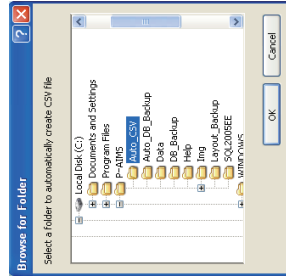

Click on the  button to apply the selected save destination and return to the Auto backup settings screen.

Click on the  button to return to the Auto backup settings screen without doing anything.


4-6-3-4. Registering settings







Click on the  button to register the set content.

4-6-3-5. Deleting settings

Click on the  button to delete the set content and revert to the previously registered content.

4-6-3-6. Deleting


Click on the  button to close the Auto backup settings screen.

* The  and  buttons change to the  button when settings are made.
 * Clicking on the  or  buttons changes them to the  button.
 * Unless a different save folder has been specified, automatic backup files are saved to the folder named Auto_DB_Backup in the folder where the P-AIMS system was installed (e.g. C:\P-AIMS).

16. Intelligent Management System


4-6-3-7. Troubleshooting if saving does not work

If an error occurs while the backup file is being saved, a red button marked "Auto Backup, Auto CSV ERR" is displayed in the upper right of the screen.

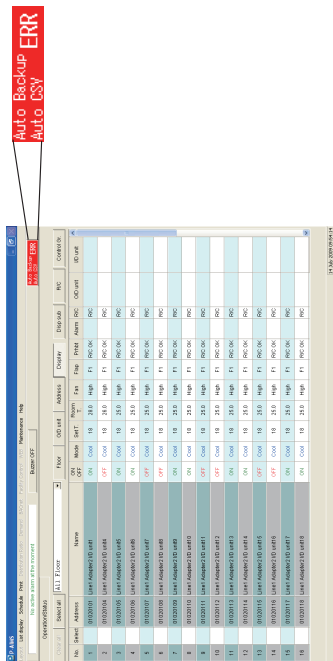

Click on the **Auto Backup ERR** button to display the "Error log of Auto_DB_Backup & Auto_CSV_Backup" screen and the content of the error.

The **Auto Backup ERR** button disappears at the same time as the error is closed.

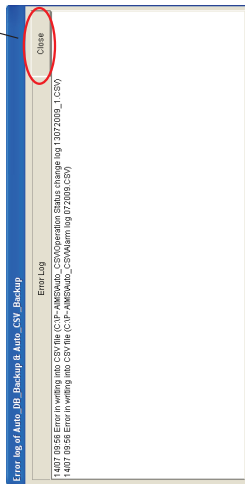



* If this button is displayed, an error may have occurred on the storage disk. Refer to the instruction manual for the device concerned and take appropriate action.

4-7. Status/Operation

- [Procedure]
- On the menu bar, select "List display" – "Status/Operation".

Monitor the status of indoor units here. The operation, mode, set temperatures, room temperatures, fan speeds, flaps, central control, alarms, presence of remote control units, outdoor units and indoor units can be monitored. Devices can also be controlled to start and stop.

Indoor units can be monitored and controlled in floor and area units, and each control group can be controlled.

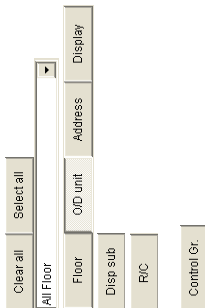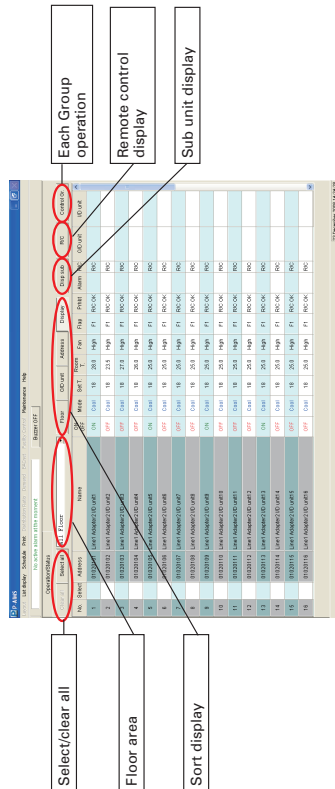

- :Use to clear all and select all.
- :Use to select floor areas.
- :Use to select the display order.
- :Sub units are also displayed.
- :Use remote control units for individual control to stop and start indoor units individually.
- :Use group control remote control units to stop and start control group units.

Key

- . Select
- . Address
- . Name
- . ON/OFF
- . Mode
- . Selects the indoor unit to control.
- . Click to add a check mark.
- . Displays the address numbers of indoor units.
- . Displays the names of the indoor units.
- . Normal: black, sub unit: blue, W/O connection: red, maintenance: gray
- . Monitors the operation status of indoor units.
- . ON: Green, OFF: Red
- . Displays the operation modes of indoor units.
- . A/Cool, A/Heat: Green, Cool: Blue, Heat: Red, Fan: Gray, Dry: Light blue

16. Intelligent Management System

4-7-1-3. Displaying sub units

Disp sub button is clicked, it changes to the pressed state (Disp sub) and sub units are also displayed. Click on the button again and it returns to its original raised state (Disp sub), so sub units are no longer displayed. Stop and start operations cannot be performed on sub units.

No.	OID	Unit	ON	Coil	18	28.0	High	F1	REC OK	RIC
1	01020100	Line1 Adapter2 ID unit	ON	Coil	18	23.5	High	F1	---	---
2	01020102	Line1 Adapter2 ID unit2	ON	Coil	18	23.5	High	F1	---	---
3	01020103	Line1 Adapter2 ID unit3	ON	Coil	18	27.0	High	F1	---	---

The names of sub units are displayed in pale blue.

- * Setup and operation of sub-units is linked to the main unit, so starting/stopping them or changing their settings is impossible.
- * To check individual alarms from sub-units, it is necessary to display the sub-unit.

4-7-1-4. Sorting lists

Click on the Sort button to change the display order of a list. The currently pressed button is the one which determines the sort order.

Floor	OID unit	Address	Display
-------	----------	---------	---------

Click on the buttons to change the list orders. If other buttons are pressed, the one that was clicked last is effective. The illustration above shows the list displayed in the indoor unit master order.

- Floor :Display is in order of floor name registration.
- OID unit :Display is in order of outdoor unit addresses, from the most recent.
- Address :Display is in order of addresses, from the most recent.
- Display :Display is in order of most recent registrations to the indoor unit master.

* Any button can be selected. It is not possible to select multiple buttons at the same time.

4-7-2. Start and stop control method

4-7-2-1. Indoor unit selection method

No.	Select	Address
1	<input checked="" type="checkbox"/>	010200

To start or stop a unit, click on the name of the indoor unit to control. The selected locations have check marks in the selection column.

Click again on the same location to remove the check mark, canceling the selection.

To select all indoor units, click on the Select all button in the upper left of the screen. To cancel selections of all indoor units, click on the Select/Cancel button in the upper left of the screen. Select/Cancel This button cannot be used if nothing has been selected. It is possible to select or deselect multiple indoor units by dragging around them with the mouse.

Unconnected units and sub units cannot be selected.

* After selecting the indoor unit, transmit the settings to the actual indoor unit on the Remote Control screen.

- . Set T. :Displays the set temperature. The range of temperatures that can be set varies, depending on the connected air conditioner model and the operation mode.
- . Room T. :Displays room temperatures.
- . Fan :Displays fan speeds. Automatic (automatic fan speed), High, Mid., Low (Displayed as -- if the model concerned cannot display this information.)
- . Flap :Displays the directions of flaps. Swing, F1 - F5 (warm, fan; F1 - F5, for cooling; F1 - F3) Displayed as -- if the model concerned cannot display this information.
- . Prhibit :Central control (local control prohibited) Individual (no prohibition), prohibit 1=prohibit 7 (Settings can be made for various types of central control (Prohibition))
- . Alarm :Displays alarm codes if an alarm has been issued by an indoor unit.
- . R/C :Displays Maintenance if "Register maintenance information" applies.
- . O/D unit :Displays outdoor unit codes.
- . I/D unit :Displays indoor unit codes.

* If it is not possible to communicate with the adapter, or if the model used cannot display the content, the column will display "--".

* Use the Maintenance screens to assign indoor unit points to the screen.

No.	OID	Unit	ON	A/C Cool	25	25.0	Auto	Swing	RIC OK
9	01020100	Line1 Adapter2 ID unit0	ON	A/C Cool	25	25.0	Auto	Swing	RIC OK
10	01020110	Line1 Adapter2 ID unit10	---	---	---	---	---	---	---

The names of indoor units which are unconnected are displayed in red. Their operating status cannot be checked.

4-7-1. Display method

4-7-1-1. Selecting displayed floor and area



First, select the floor and area. If the floor and area is "All Floor", all registered indoor units are displayed. Click on the button on the right edge of the floor selection list to display a list of registered floors and areas. From the list, select the floor or area to monitor.

A list of indoor units registered within that floor and area is displayed.

4-7-1-2. Displaying alarms

When an alarm is issued for an indoor unit, the error code is displayed in the Alarm column. Nothing is displayed if there are no current alarms.

Name	ON	Mode	RoomT	Fan	Flap	Prhibit	Alarm	RIC
Line1 Adapter2 ID unit1	ON	A/C Cool	25	28.0	Mid.	F5	RIC OK	RIC
Line1 Adapter2 ID unit2	OFF	A/Heat	25	25.0	Auto	Swing	RIC OK	AOI RIC

* The alarm display is automatically removed if the alarm has been restored.


16. Intelligent Management System

4-7-2-2. Start and stop operation method (for each indoor unit)

Click on the **R/C** button in the upper right of the screen when an indoor unit is selected to display the remote control unit screen. The Remote Control screen can be used to change operation, mode, temperature setting, fan speed, flap and prohibition settings. Click on the set button, then on the **Transmit** button to send the setting content to the unit.

Click on the **Close** button to avoid sending the settings. The Remote Control screen closes.

* Buttons for functions that cannot be set are grayed out and cannot be selected.
 * Indoor units can be selected even after the Remote Control screen has been displayed.

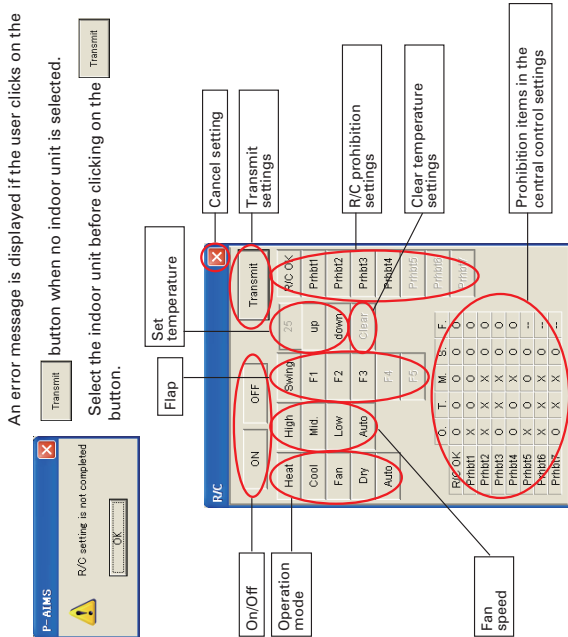

An error message is displayed if the user clicks on the **Transmit** button when no indoor unit is selected.

Select the indoor unit before clicking on the **Transmit** button.

4-7-2-2-3. Fan speed switch

When any button is clicked, the selected button remains depressed. When any other Fan speed button is clicked on, the previously selected button reverts to its non-depressed state. Auto fan speed cannot be selected in fan operation. *For some indoor unit models, it may be impossible to select "Auto" (Auto fan speed).

High
Mid
Low
Auto

4-7-2-2-4. Swing/Flap

When any button is clicked, the selected button remains depressed. When any other Flap button is clicked on, the previously selected button reverts to its non-depressed state. *Some flap settings are unavailable, depending on the selected operation mode.

Swing
F1
F2
F3
F4
F5

4-7-2-2-5. Prohibition switch

When any button is clicked, the selected button remains depressed. When any other prohibition mode button is clicked on, the previously selected button reverts to its non-depressed state. Only those set under prohibition settings can be used.

- R/C OK: Operation with the remote control unit is OK.
- Pnht1 : The remote control unit cannot be used for switching On/Off.
 - Pnht2 : The remote control unit cannot be used for switching On/Off, temperature setting and operation mode switching.
 - Pnht3 : The remote control unit cannot be used for temperature setting and operation mode switching.
 - Pnht4 : The remote control unit cannot be used for operation mode switching.
 - Pnht5 : The remote control unit cannot be used for switching On/Off.
 - Pnht6 : The remote control unit cannot be used for switching On/Off, temperature setting and operation mode switching.
 - Pnht7 : The remote control unit cannot be used for temperature setting and operation mode switching.

* The functions for Pnht 1-4 can be changed using the "Maintenance" - "R/C prohibition settings".
 * Prohibit 1-4 are for the CZ-CFUNC2.

4-7-2-2-6. Temperature setting

Click on the up and down buttons in the center right of the Remote Control screen to raise or lower the temperature displayed in the set temperature column.

Heat : 16 - 26°C
 up
 Dry/Cool : 18 - 30°C
 down
 Clear

* Temperature setting ranges differ between indoor unit models.

* Temperature setting ranges can be changed using "Maintenance" - "Register I / D unit high/low-limit temperature".

4-7-2-2-1. On/Off

When either On or Off is clicked, the selected button remains depressed. When one button is clicked on, the other reverts to its non-depressed state.

ON
OFF

4-7-2-2-2. Mode switch

When any button is clicked, the selected button remains depressed. When any other mode button is clicked on, the previously selected button reverts to its non-depressed state.

Heat
Cool
Fan
Dry
Auto

* Some modes may be unavailable, depending on the type of indoor unit.
 * Some older indoor units may be unable to provide fan operation when fan speed is set to automatic.




16. Intelligent Management System

4-8. Filter/Indoor Unit Information

On the menu bar, select "List display" – "Filter sign & I/D unit Information".

The operation time, the operation count, thermometer and fan status, intake temperature and discharge temperature can be checked for each indoor unit. Devices which are showing filter signs are also shown. Filter signs can be cleared, and indoor unit demand can be set or cancelled, from this screen.

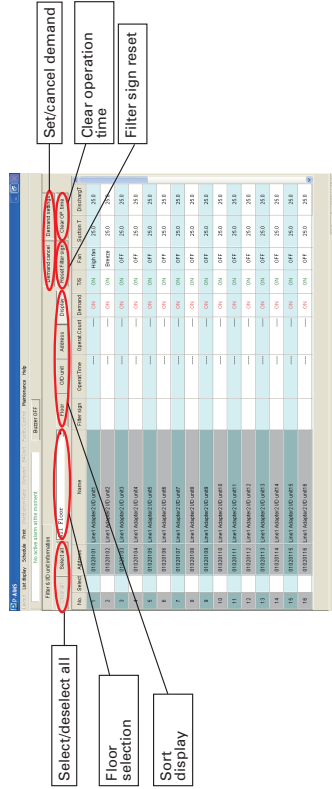

- :Use to clear all and select all.
- :Use to select floor areas.
- :Use to select the display order.
- :Use to make and cancel demand settings.
- :Use to clear filter signs.
- :Use to reset the operation times of indoor units.

- Key**
- .Select
 - .Address
 - .Name
 - .Filter sign
 - .Operat. Time
 - .Operat. Count
 - .Demand
 - .T/S
- .Selects the indoor unit to control.
 - .Click to add a check mark.
 - .Displays the addresses of alarms.
 - .Displays the names of devices which have issued alarms.
 - .Normal: black; sub unit: blue; W/O connection: red; maintenance: gray
 - .Displays alarms related to filter replacement times.
 - . "Filter sign" is displayed in red when it is time to replace a filter.
 - .Displays the operation times of indoor units. (When the distribution ratio option is installed)
 - .Displays the number of times indoor units have operated. (When the distribution ratio option is installed)
 - .Displays the demand status of indoor units.
 - .Displays the thermostat status of indoor units.

4-7-2-2-7. Transmit

Click on the button to transmit the set content to the indoor unit.

4-7-2-2-8. Deleting

Click on the button to stop transmission of the setting data to the indoor unit and close the Remote Control screen.


4-7-2-3. On and Off operation method (Each group)

Click on the button to display the Remote Control screen for Each Group operation.

The basic operations are the same as for the normal Remote Control screen (for individual indoor units), but a frame for selecting control groups is displayed on the top of the screen.

Select the control group to operate, then transmit the settings.

To change the control group, click on the button on the right of the control group. The registered control groups are displayed in the list.

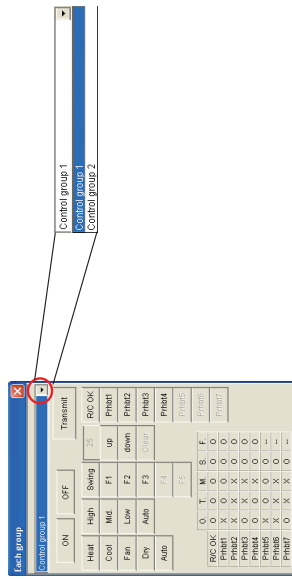

Select by clicking on the group to control. Then, set the operation mode, fan speed and other items in the same way as for normal remote control unit operation, and click on the button. The settings are transmitted to all the indoor units in the registered group.

Click on the button to avoid sending the settings. The remote control screen closes.

- * Use the "Maintenance" – "Register Control Group Name" screen to register control group names.
 - * Use the "Maintenance" – "/D unit master data" screen to assemble control groups.
 - * It is not possible to select indoor units while the Each Group Setting screen is displayed.
- Also, if the Each Group Setting screen is displayed after an indoor unit has been selected, Each Group setting operation takes priority.



When settings are transmitted for individual indoor units or for groups, but no setting items are selected on the Remote Control screen, an error message is displayed when the button is clicked.

Make settings on the Remote Control screen before clicking on the button.

16. Intelligent Management System

- Fan :Displays the fan status of indoor units.
- Suction T :Displays the temperature of air taken into the indoor unit.
- Discharge T :Displays the temperature of air discharged from the indoor unit.

* If it is not possible to communicate with the adapter, or if the model used cannot display the content, the columns will display "----".

The names of sub units are displayed in pale blue.

No.	Select	Address	Name	Operat.time	Operat.Count
1	01020101	Line1 Adapter2 ID unit1		----	----
2	01020102	Line1 Adapter2 ID unit2		----	----
3	01020103	Line1 Adapter2 ID unit3		----	----

If the optional Accounting software is installed, the current operation time and operation count are displayed for the indoor unit.

No.	Select	Address	Name	Filter sign	Operat.time	Operat.Count
1	01020101	Line1 Adapter2 ID unit1			806.21	250
2	01020102	Line1 Adapter2 ID unit2			573.43	200
3	01020103	Line1 Adapter2 ID unit3			380.10	150

If a filter sign has been issued, the text "Filter sign" will be displayed in red in the Filter Sign column.

Nothing is displayed if there are no current filter signs.

No.	Select	Address	Name	Filter sign	Operat.time	Operat.Count
1	01020101	Line1 Adapter2 ID unit1		Filter sign	806.21	250
2	01020102	Line1 Adapter2 ID unit2			573.43	200
3	01020103	Line1 Adapter2 ID unit3			380.10	150

Thermostat status (displayed when On), actual fan operation status, and intake and discharge temperatures are displayed for indoor units.

No.	Select	Address	Name	Demand	T/S	Fan	Suction T	Discharge T
1	01020101	Line1 Adapter2 ID unit1		ON		High fan	25.0	25.0
2	01020102	Line1 Adapter2 ID unit2		ON		Breeze	25.0	25.0
3	01020103	Line1 Adapter2 ID unit3		ON		OFF	25.0	25.0

4-8-1. Display method 4-8-1-1. Selecting displayed floor and area

If the floor and area is "All Floor", all registered indoor units are displayed. Click on the button on the right edge of the floor selection list to display a list of registered floors and areas. From the list, select the floor or area to monitor. A list of indoor units registered within that floor and area is displayed.



4-8-1-2. Sorting lists

Click on one of the sort buttons to change the display order of a list. The currently pressed button is the one which determines the sort order.



Click on the buttons to change the list orders. If other buttons are pressed, the one that was clicked last is effective. The illustration above shows the list displayed in the indoor unit master order.

Floor :Display is in order of floor name registration.

O/D unit :Display is order of outdoor unit addresses, from the most recent.

Address :Display is order of addresses, from the most recent.

Display :Display is in order of most recent registrations to the indoor unit master.

* Any button can be selected. It is not possible to select multiple buttons at the same time.

4-8-2. Control method 4-8-2-1. Indoor unit selection method

To set or cancel demand, clear filter signs or clear operation times, first click on the name of the target indoor unit. The selected locations have check marks in the selection column.

Click again on the same location to remove the check mark, canceling the selection.

To select all indoor units, click on the Select all button in the upper left of the screen. To cancel selections of all indoor units, click on the Clear all button in the upper left of the screen. The Clear all button cannot be used if nothing has been selected.

It is possible to select or deselect multiple indoor units by dragging around them with the mouse.

Unconnected units cannot be selected.

16. Intelligent Management System


4-8-2-2. Clearing filter signs

Clicking on the **Reset Filter sign** button in the upper right of the screen when an indoor unit is selected displays a confirmation message.

Click on the **Yes** button to clear the filter sign. Click on the **No** button to cancel the reset.



* Filter signs are displayed after the operation time of each indoor unit reaches a certain level.
 * These signs can also be cleared by pressing the Filter Reset button on the remote control unit connected to the indoor unit.
 * Filter signs are only an approximate guide. We recommend that you clean indoor unit filters regularly, even if no signs have been issued.

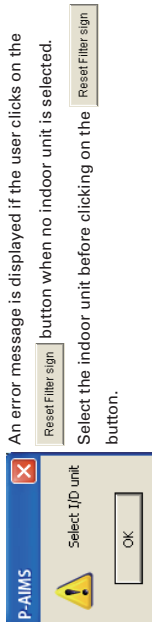

4-8-2-3. Clearing operation time


Selecting the indoor unit to clear operating time for, then clicking on the **Clear OP. time** button displays a confirmation message.

Click on the **Yes** button to reset the operation time for the indoor unit.

Click on the **No** button to avoid clearing operation time.



* The operation count cannot be reset.
 * Resetting operation time has no effect on distribution calculations and similar operations.
 * Operation time is tallied by the system, and has no relation to the adapter time.

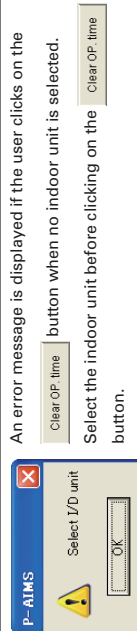

4-8-2-4. Canceling and setting demand

Selecting the indoor unit to cancel demand for, then clicking on the **Demand cancel** button displays a confirmation message.

Click on the **Yes** button to clear demand for the indoor unit.

Click on the **No** button to avoid canceling demand.



* Even if Demand is cancelled, Thermostat On indication may not be displayed in some situations. It is determined by the operating conditions of the indoor unit.

Selecting the indoor unit to set demand for, then clicking on the **Demand settings** button displays a confirmation message.

Click on the **Yes** button to set demand for the indoor unit.

Click on the **No** button to avoid setting demand.



* Thermostat On indication disappears when Demand is set.



16. Intelligent Management System

4-9. Outdoor unit information

- [Procedure]
- On the menu bar, select "List display" – "O/D unit information".

Operation times, operation counts and oil check signs are displayed for outdoor units. Demand setting is also available for outdoor units of electric air conditioners that are capable of demand setting.

No	Select	Address	Name	O/D unit	Demand	Engine oper. time	Current oil change time	Engine oil check sign	Power output
1	010201	List Adapter2 O/D unit			Protected field	12951	567	Oil check	0.0
2	010202	List Adapter2 O/D unit			Protected field	0	0	Oil check	0.0
3	010201	List Adapter2 O/D unit			100%				
4	010202	List Adapter2 O/D unit			85%				

Select/deselect all

Power demand settings

- Clear all
- Select all
- Power demand settings

- Key
- Select
- Address
- Name
- O/D unit
- Demand
- Engine oper. time
- Current oil change time
- Engine oil check sign
- Engine operation
- Power output

* In some cases, the model of adapter used for GHP systems may prevent display of engine operation time, operation time since last oil change, oil check signs, engine operation count and power generation.

* If it is not possible to communicate with the adapter, or if the model used cannot display the content, the columns will display "-----".

* With electric (package) types, only demand setting is available for the outdoor unit (where setting is possible).

* For outdoor units that cannot be set for demand, the Demand column displays "Protected field".

* Consult your dealer or service provider about assignment of outdoor unit points to screens.

No	Select	Address	Name	O/D unit	Demand	Engine oper. time	Current oil change time	Engine oil check sign	Engine operation	Power output
1	010101	List Adapter2 O/D unit			Protected field	12951	567	Oil check	567	820.0
2	010102	List Adapter2 O/D unit			Protected field	0	0	Oil check	0	200.0

The names of outdoor units which are unconnected are displayed in red. Their operating status cannot be checked.

4-9-1. Display Oil check sign

4-9-1-1. Oil check sign requires an oil check.

No	Select	Address	Name	O/D unit	Demand	Engine oper. time	Current oil change time	Engine oil check sign	Engine operation	Power output
1	010201	List Adapter2 O/D unit			Protected field	12951	567	Oil check	567	0.0
2	010202	List Adapter2 O/D unit			Protected field	0	0	Oil check	0	0.0
3	010201	List Adapter2 O/D unit			100%					
4	010202	List Adapter2 O/D unit			85%					

* If an oil check sign is displayed, contact the service engineer to have the oil level of the outdoor unit checked. The oil check sign will disappear once the oil check is complete.

4-9-1-2. Power output

If a High Power Excel outdoor unit is connected, its cumulative total power output (in kWh) is displayed.

No	Select	Address	Name	O/D unit	Demand	Engine oper. time	Current oil change time	Engine oil check sign	Engine operation	Power output
1	010201	List Adapter2 O/D unit			Protected field	12951	5901	Oil check	567	820.0
2	010202	List Adapter2 O/D unit			Protected field	0	0	Oil check	0	200.0

16. Intelligent Management System

4-10. Control/Status Change History

On the menu bar, select "List display" – "Operation/Status change log".

This displays the history of indoor units which have had changes in the status of any device. History can also be displayed for a specified period. Extraction conditions can be set to filter the display and show only history items of certain types.

The screenshot shows a table with columns: No., Select, Address, Name, O/D unit, Demand, Protected field, Engine oper. time. The 'Demand' column contains values like 'Protected field' and '100%'. The 'Engine oper. time' column contains values like '12851' and '0'. Callouts point to the 'Demand' column (labeled 'Displaying control log'), the 'Engine oper. time' column (labeled 'Displaying status change log'), and the 'Display term setting' button at the bottom right.

- Operation
- Status change
- Term setting

- Key
 - Address
 - Name
 - Operation
 - ON/OFF
 - Mode
 - Set T.
 - Fan
 - Flap
 - Prhbt
 - Date
- :Displays control log.
:Displays status change log.
:Use to specify the period of log to display.
- :Displays the addresses of indoor units.
:Displays the names of devices which have been controlled or have had changes in their operating status.
:Displays details of the controlled devices, or their status changes.
Status change: dark green, Controller: pale blue, Schedule: blue, Fire alarm: orange, Event: dark blue
:Displays changes in operation status.
ON: green, OFF: red, Fire Off: orange, fire cancel: orange, other: black
:Displays the operating mode.
A/cool, A/Heat: green, Cool: blue, Heat: red, Fan: gray, Dry: pale blue
:Displays the set temperature.
:Displays fan speeds, Auto (automatic fan speed), High, Med., Low
:Displays the directions of flaps.
Swing, F1 – F5
:Displays the central control status.
Individual (no prohibition), Prhbt 1 – Prhbt 7 (various prohibitions are settable)
:Displays the times of control and status changes.

4-9-2. Demand setting

4-9-2-1. Outdoor unit selection
For outdoor units for which demand can be set (EHP units), the setting value is displayed as a percentage in the demand setting column. Click on the name of the outdoor unit to make the setting for.

The selected locations have check marks in the selection column. In GHP systems, demand cannot be set, so the selection is unavailable.

Click again on the same location to remove the check mark, canceling the selection. To select all selectable outdoor units, click on the Select all button in the upper left of the screen. The Clear all button cannot be used if nothing has been selected. It is possible to select or deselect multiple outdoor units by dragging around them with the mouse.

Outdoor units which are W/O connection or incapable of demand setting cannot be selected.

No.	Select	Address	Name	O/D unit	Demand	Protected field	Engine oper. time
1	<input checked="" type="checkbox"/>	010201	Line1 Adapter2 O/D unit1		Protected field	12851	
2	<input checked="" type="checkbox"/>	010202	Line1 Adapter2 O/D unit2		Protected field	0	
3	<input checked="" type="checkbox"/>	010301	Line1 Adapter3 O/D unit1		100%	***	
4	<input checked="" type="checkbox"/>	010302	Line1 Adapter3 O/D unit2		75%	***	

Check marks cannot be placed in the selection column for outdoor units which have "Protected field" displayed in the Demand column.

4-9-2-2. Setting demand values

Selecting the outdoor unit to set, then clicking on the Power demand settings button displays the Power Demand Settings screen. Click on the button on the right of the frame in which Demand is displayed. The settable operation range list is displayed.



Select the operation range for the outdoor unit. The operation range differs depending on the outdoor unit.
A setting of 0% fully stops all air conditioners connected to the outdoor unit.
A setting of 100% means that no demand operation is possible.

* Operation range 75% means that the outdoor units operation is demand-controlled in the range of 0% – 75%.

16. Intelligent Management System

* Set an end date that is later than the start date. Results will not be displayed correctly if the end date is earlier than the start date.

Specify the display term, then click on the button to display history in the specified term.
To close the Term Setting screen, click on the button.

To display the latest history, click on the button without specifying a term.

* The maximum number of display items in a specified term is 10,000.
* This displays the latest count.
* Once a term is specified, the term specification will be as same as previous one when this screen is displayed again.

If there is no history on the specified dates, the display is as shown below.

No.	Address	Name	Operation	ON/OFF
		No applicable history		

* The maximum number of display items during automatic update is 2,000.
* The maximum number of display items in a specified term is 10,000.
* The maximum number of stored log items is 200,000. Data items exceeding that number are deleted.
* We recommend setting automatic backup under "Print" - "Auto EXCEL output settings".
History can be saved for each date. The maximum number of items that can be saved per day is 400,000.

4-10-1. Display method

4-10-1-1. Displaying control history

The control history is displayed when the button has been clicked on and remains depressed. The history displays control operations using the remote control unit, schedule and other means.

Click on a button that has been pressed to change it back to the un-pressed state.


4-10-1-2. Displaying status change history

The status change history is displayed when the button has been clicked on and remains depressed. The entire history of air conditioner status change is displayed.

* If both the Operation button and the Status Change button are pressed, both operation and status change logs are displayed. If neither button has been pressed, nothing is displayed.

4-10-1-3. Display time range specification method

Click on the button to display the Term Setting screen.

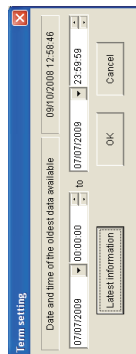

Click on the button on the right of the date display space to display the calendar. Click on the calendar dates to select the term of history items to display. Refer to "4.3 Calendar" for the calendar control method.

Click on the button on the right of the time display space to set the time. Click first on the hours, minutes and seconds, then on the button to update the hours, minutes and seconds. Specify the start and end dates. History is displayed for the specified range.

16. Intelligent Management System


4-11. Alarm list & alarm log

[Procedure]

On the menu bar, select "List display" - "Alarm list & alarm log".
The display can present either a list of currently ongoing alarms, or alarms that have occurred to date.

4-11-1. Alarm list

This displays the history of alarms and restoration for each device. History can also be displayed for a certain term.

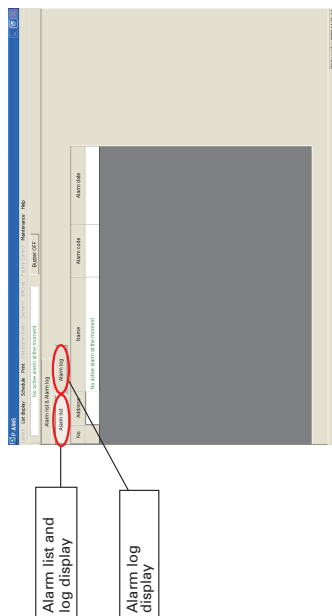

Alarm list : Displays the alarm list.

Alarm log : Displays alarm history.

Key

- Address : Displays the addresses of alarms.
- Name : Displays the names of devices which have issued alarms.
- Alarm code : Displays alarm codes at the times alarms are issued.
- Alarm date : Displays the data and time at which the alarm occurred.

* The maximum number of display items is 2,000.

4-11-1-1. Display method

When the Alarm list is pressed in, the alarm list is displayed.
The alarm list only displays current alarms which are still in effect.
Either the Alarm History button or the Alarm List button will always be selected.
The alarm is automatically removed from the list if it has been restored.

4-10-2. Printing


4-10-2-1. Excel output

[Procedure]

On the menu bar, select "Print" - "EXCEL output".

Currently displayed history can be saved as a file in CSV format, which can be displayed by Microsoft Excel and similar applications. The content displayed on the screen is placed in the CSV file. Switch the display to place only control history, or only status change history, in the file.

Refer to "4-6-2 Excel output" for the operation method.

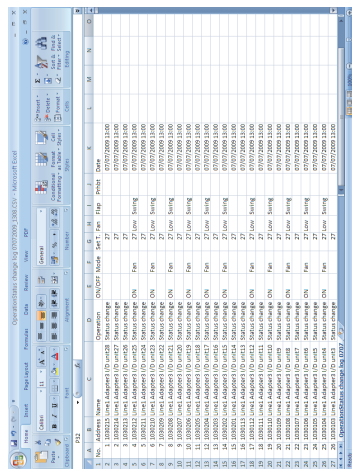

The file name is assigned automatically.


OperationStatusChangeLog_07072009_1308.CSV

Name DMMYYYY hmmm

16. Intelligent Management System

4-11-1-2. Excel output

- [Procedure]
- On the menu bar, select "Print" – "Excel output".
- The currently displayed list can be saved as a file in CSV format, which can be displayed by Microsoft Excel and similar applications.
- Refer to "4-6-2 Excel output" for the operation method.

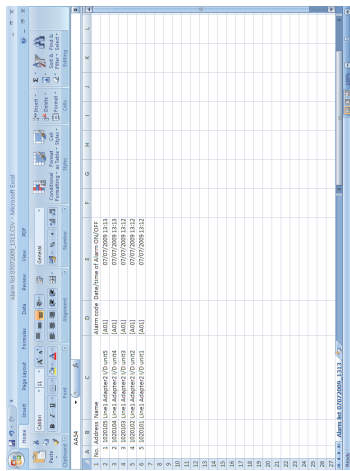

The file name is assigned automatically.
Alarm list 07072009_1313.CSV

Name DMMYYYYY hmmm

4-11-2. Alarm log

This displays the log of alarm occurrence and restoration to date. Display conditions can be set in order to display only certain alarms.




- Alarm list :Displays the alarm list.
- Alarm log :Displays alarm log.
- Alarm only :Displays only the log of alarms which have occurred.
- Unknown only :Displays only the log of alarms which have not been confirmed.
- Search : Use to select the indoor units to display.
- Check all items as confirmed. :Confirm all unconfirmed alarms.
- Term setting :Use to specify the period of log to display.

- Key**
- Address :Displays the addresses of alarms.
 - Name :Displays the names of devices which have issued alarms.
 - Alarm code :Displays alarm codes at the times alarms are issued/restored.
 - Alarm date :Displays dates and times when alarms are issued/restored.
 - Alarm :Displays occurrence/restoration status of alarms.
 - Check :Displays the status of alarm confirmation by the operator. Add a check mark to confirmed alarms.
 - Operator :Displays the name of the person who confirmed the alarm.


* The maximum number of display items is 2,000.


16. Intelligent Management System

4-11-2-1. Display method

When the  button is pressed in, the alarm log is displayed. The log of alarms occurring to date, and their restoration status, can be checked here. Either the  button or the  button will always be selected.

4-11-2-2. Refining the displayed data

When the  button has been pressed, only alarms which have occurred historically are displayed. Click on the button again to return the button to its un-pressed state.


When the  button has been pressed, only alarms which have been confirmed historically are displayed. Click on the button again to return the button to its un-pressed state.

* These two buttons can be used in combination. For example, if both the  and the  buttons are pressed, the display is limited to current alarms that are unknown.


Selecting the indoor unit to display refines the display to cover only that indoor unit.

Search 

Click on the  button on the right of the indoor unit display column, to display the list of registered indoor units.

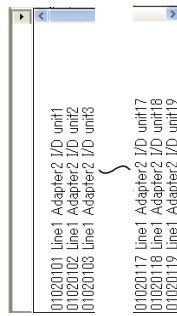


Click on the indoor unit to display. History is displayed for the selected indoor unit.


The  and  buttons can be used together to display only alarms for the selected indoor unit, or only unconfirmed alarms.


* Select the blank at the top of the list to return to display of all logs.
* When this screen is displayed again from another screen, it automatically reverts to displaying all items.

4-11-2-3. Display range term specification method

Click on the  button to display the Term Setting screen.

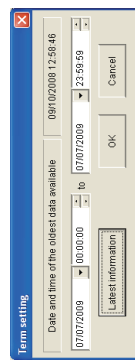


Click on the  button on the right of the date display space to display the calendar. Click on the calendar dates to select the term of history items to display. Refer to "4.3 Calendar" for the calendar operation method.

Click on the  button on the right of the time display space to set the time. Click first on the hours, minutes and seconds, then on the  button to update the hours, minutes and seconds.

Specify the start and end dates. Log is displayed for the specified range.

* Set an end date that is later than the start date. Results will not be displayed correctly if the end date is earlier than the start date.

Specify the display term, then click on the  button to display history in the specified term.

To close the Term Setting screen, click on the  button.

To display the latest log, click on the  button without specifying a term.

* Once a term is specified, the term specification will be as same as previous one when this screen is displayed again.

* The maximum number of display items for a specified term is 10,000, and the maximum for latest information display is 2,000. Latest information display is updated automatically.


4-11-2-4. Alarm confirmation

After confirming alarms, the operator should add check marks to those alarms to manage their status.



Click in the Confirmation column for the confirmed alarms to add check marks. Click again where there is a check mark to remove it.

Click in the frame of the operator column to display the  button on the right of the frame.



When the  button has been pressed, only alarms which do not have check marks (i.e. they have not been confirmed) are displayed.

* Alarms cannot be confirmed just by registering the operator name.
* Use the "Maintenance" - "Register operator information" screen to register operator names.
* If the operator name has been changed on the "Maintenance" - "Register operator information" screen, all names in the confirming operator column will be updated to the new names.

16. Intelligent Management System

4-12. Schedule/Results

[Procedure]
 On the menu bar, select "Schedule" – "Schedule/results"

This displays the schedule and results in bar graph form. The display term can be specified in order to check the presetting status, the working status of a device relative to its schedule, or other information.

Display term setting

Floor selection

07/07/2009
All Floor

07/07/2009

Sort display

:Use to select the dates to display.
 :Use to select floor areas.
 :Use to select the display order.

Key

- . Address
 - . Name
 - . Graph
- . Displays the addresses of indoor units.
 . Displays the names of the indoor units.
 . Upper Schedules. Lower: Displays results.
 Auto cool, Auto heat: green, Cool: blue, Heat: red, Fan: gray, Dry: pink
 The schedule graph display is displayed in black if it is only showing On/Off schedules.

* Display is only for main units.
 * If a communications error occurs during operation, operation is displayed as the last mode used.
 * Use the "Schedule" – "Schedule operation time settings" screen to set schedule times.
 * Use the "Schedule" – "Mode settings (Calendar)" screen to set schedule modes.

4-11-2-5. Print screen

Refer to "4-6-1 Print screen" for details of how to operate this screen.

4-11-2-6. Excel output

[Procedure]
 On the menu bar, select "Print" – "EXCEL output".

Currently displayed log can be saved as a file in CSV format, which can be displayed by Microsoft Excel and similar applications.
 Refer to "4-6-2 Excel output" for the operation method.

No.	Address Name	Alarm Type	Alarm Check Operator	Alarm Time
1	01000001	Chiller system	01000001	07/07/2009 13:25:00
2	01000002	Water system	01000002	07/07/2009 13:25:00
3	01000003	Fan system	01000003	07/07/2009 13:25:00
4	01000004	Refrigerant system	01000004	07/07/2009 13:25:00
5	01000005	Cooling system	01000005	07/07/2009 13:25:00
6	01000006	Heating system	01000006	07/07/2009 13:25:00
7	01000007	Chiller system	01000007	07/07/2009 13:25:00
8	01000008	Water system	01000008	07/07/2009 13:25:00
9	01000009	Fan system	01000009	07/07/2009 13:25:00
10	01000010	Refrigerant system	01000010	07/07/2009 13:25:00
11	01000011	Cooling system	01000011	07/07/2009 13:25:00
12	01000012	Heating system	01000012	07/07/2009 13:25:00
13	01000013	Chiller system	01000013	07/07/2009 13:25:00
14	01000014	Water system	01000014	07/07/2009 13:25:00
15	01000015	Fan system	01000015	07/07/2009 13:25:00
16	01000016	Refrigerant system	01000016	07/07/2009 13:25:00
17	01000017	Cooling system	01000017	07/07/2009 13:25:00
18	01000018	Heating system	01000018	07/07/2009 13:25:00
19	01000019	Chiller system	01000019	07/07/2009 13:25:00
20	01000020	Water system	01000020	07/07/2009 13:25:00
21	01000021	Fan system	01000021	07/07/2009 13:25:00
22	01000022	Refrigerant system	01000022	07/07/2009 13:25:00
23	01000023	Cooling system	01000023	07/07/2009 13:25:00
24	01000024	Heating system	01000024	07/07/2009 13:25:00
25	01000025	Chiller system	01000025	07/07/2009 13:25:00
26	01000026	Water system	01000026	07/07/2009 13:25:00
27	01000027	Fan system	01000027	07/07/2009 13:25:00
28	01000028	Refrigerant system	01000028	07/07/2009 13:25:00
29	01000029	Cooling system	01000029	07/07/2009 13:25:00
30	01000030	Heating system	01000030	07/07/2009 13:25:00

The file name is assigned automatically.

Alarm_log 07072009 _ 1325.CSV

Name DDDMMYYYY hhmm

4-11-2-7. Settings for automatic Excel output


Refer to "4-6-3. Settings for automatic Excel output" for details of how to operate the Auto EXCEL output settings screen.

16. Intelligent Management System

4-12-1. Display method

4-12-1-1. Selecting displayed floor and area

If the floor and area is "All Floor", all registered indoor units are displayed. Click on the  button on the right edge of the floor selection list to display a list of registered floors and areas.



From the list, select the floor or area to monitor. A list of indoor units registered within that floor and area is displayed.

4-12-1-2. Sort lists

Click on the Sort button to change the display order of a list. The currently pressed button is the one which determines the sort order.



Click on the buttons to change the list orders. If other buttons are pressed, the one that was clicked last is effective. The illustration above shows the list displayed in the indoor unit master order.

Floor :Display is in order of floor name registration.


O/D unit :Display is in order of outdoor unit addresses, from the most recent.


Address :Display is order of addresses, from the most recent.

Display :Display is in order of most recent registrations to the indoor unit master.

* Any button can be selected. It is not possible to select multiple buttons at the same time.

4-12-1-3. Display time range specification method



Click on the  button for the box with the date displayed at the top of the screen to display the calendar. From the calendar, select the date to display.

History is displayed for the specified date.

Refer to "4-3. Calendar" for the calendar operation method.

* The graph of future schedule cannot be displayed if schedule times and mode setting have not been set.

* If this screen is displayed first, it shows the operation status for that day.


4-12-2. Detailed display of schedule time

Click on the indoor unit name which has its schedule time displayed on the graph to display detailed schedule content.

No.	Address	Name
1	01020101	Unit Manager@ID unit



Time	ON	Mode	SetT	Fan	Flap	Prhbt
	OFF					
1. 00:00		Cool	19	High	F1	R/C OK
2. 23:00	OFF					
3.						
4.						
5.						
6.						
7.						
8.						
9.						
10.						
11.						
12.						
13.						
14.						
15.						
16.						
17.						
18.						
19.						
20.						

The detailed schedule for the displayed graph can be checked. It cannot be changed from this screen. Close this screen by clicking on the  button in the upper right.


- . Time :Display schedule time.
- . ONOFF :Specify air conditioner starts and stops. It is also OK to make no specification. In that case, only the set items change.
- . Mode :Displays the operation modes of indoor units.
- . SetT A/Cool, A/Heat: green, Cool: blue, Heat: red, Fan: gray, Dry: pale blue
- . Fan :Displays fan speeds.
- . Flap Auto (automatic fan speed), High, Med., Low
- . Prhbt :Displays the directions of flaps.
- . Swing, F1 – F5 (Heat, Fan: F1 – F5, for Cooling: F1 – F3)
- . Individual (no prohibition), Prhbt 1=Prhbt 7 (Settings can be made for various types of central control (Prohibition))

* Items which have not been set cannot be displayed.

16. Intelligent Management System

4-13. Mode setting (calendar)

- ⋮ [Procedure]
- ⋮ On the menu bar, select "Schedule" - "Mode settings (Calendar)".
- ⋮ Set the scheduled operation mode to calendar.

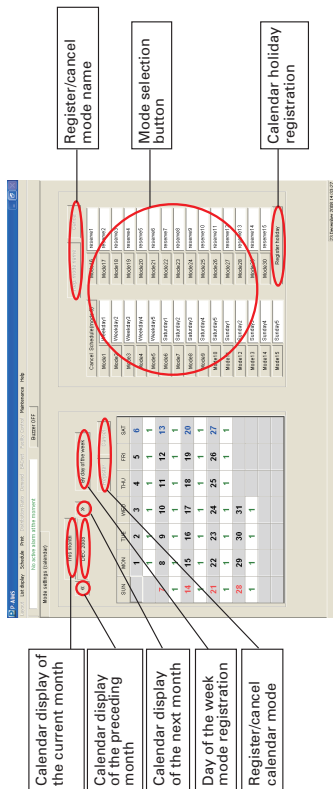

* Use the "Schedule" - "Schedule operation time settings" screen to set schedule times for each mode.

4-13-1. Display method

4-13-1-1. Calendar display

Click on the buttons on the left and right of the place where the current date and month are displayed above the current calendar, to switch the calendar to earlier and later months.



* The buttons are grayed out and unavailable during mode setting.
 * The displayed calendar cannot be changed until mode settings are registered or cancelled.

4-13-2. Calendar operation

4-13-2-1. Registering holidays on the calendar

Click on the button to leave it pressed.
 Click on the date to make into a holiday, and its date text turns red.
 To cancel the holiday setting, click again on the red text to restore the original text color and cancel the holiday setting.

Once you have finished editing calendar mode numbers, click on the button to save the mode.
 Click on the button to restore the changed content to its previously registered status.

To abandon holiday registration, click on any of the mode number buttons.

button

The button reverts to its non-depressed state.

* Even if holidays have been registered on the calendar, the schedule will not necessarily switch to holiday operation. Holiday operation requires registration of a schedule mode number for holidays on the calendar.
 * Holidays cannot be registered for dates that have passed.

4-13-3. Registering mode settings

4-13-3-1. Registering modes to the calendar

Select the mode to register from those in the mode list.

Cancel Schedule(mode 0)	Weekday1	Mode16	reserve1
Mode1	Weekday2	Mode17	reserve2
Mode2	Weekday3	Mode18	reserve3
Mode3	Weekday4	Mode19	reserve4
Mode4	Weekday5	Mode20	reserve5
Mode5	Saturday	Mode21	reserve6
Mode6		Mode22	reserve7

When you click on the mode button to register, the selected mode button changes to the depressed state.

When you click on the date to register on the calendar, the number of the selected mode is registered in the area below the date.



* To change to another mode, select another mode number and click on the registered date. Mode number will be overwritten.
 * Mode registrations to the calendar can be made within a period of one year, starting from the day after the registration is made.
 * Modes cannot be registered for dates that have passed.

4-13-3-2. Deleting modes from the calendar

To delete a registered mode number, click on in the mode list to depress it. button
 Click on a date with a registered mode number to delete the number.



* Modes cannot be deleted from dates that have passed.

16. Intelligent Management System


4-13-3-3. Registering an edited calendar

Once you have finished editing calendar mode numbers, click on the **Register** button to save the mode.
Click on the **Cancel** button to avoid registering the edited mode.

* The **Register** and **Cancel** buttons become available once the calendar is edited. It is not possible to register a mode to another calendar without clicking either button first.
* If the **Cancel** button is clicked, the calendar reverts to the state before editing the mode numbers.

4-13-3-4. Registering in day-of-the-week units

You can specify a set period and only make the mode settings once for each week. Click on the **By day of the week** button to display the Schedule Mode Setting screen for setting by day of the week.

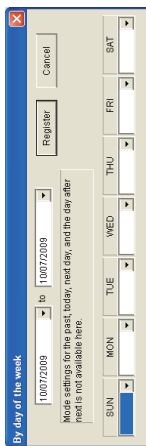


Click where the date is displayed to specify the term to set for weekly mode. Click on the **Register** button on the right of the date display space to display the calendar. On the calendar, click on the dates from the start to the end of the term you need to set the mode for.


Refer to "4-3. Calendar" for the calendar operation method.

Mode setting is not possible for past dates, today, tomorrow or the day after.

Set the start and end dates.



Click on the **Register** button under each day of the week to display the list of mode numbers.

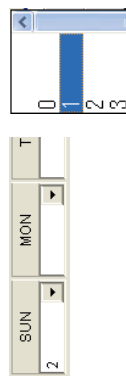

Click to select the mode number to register, with reference to the mode list.

Register the mode for each day of the week, and click on the **Register** button to register the mode number to the calendar for the specified period.

To cancel registration of the day of the week schedule mode, click on the **Cancel** button.

* It may not be necessary to set mode numbers for all days of the week.
* There is no need to click on the calendar. Register or Cancel buttons after setting schedule modes by day of the week. Settings are registered to the calendar once the Register button is clicked on this screen.
* If some mode numbers are already set to the calendar, registering the schedule by day of the week overwrites those mode numbers.

4-13-4. Mode comment operation

4-13-4-1. Registering mode comments

To edit mode comments, click in the comment area of the mode list.



The text cursor is displayed, so use the keyboard to edit the comment.

Once you have finished editing the comment, click on the **Reg. mode name** button to save. Click on the **Cancel** button to return the edited mode to its previous state, without registering changes.

* The **Reg. mode name** and **Cancel** buttons become available once comments have been edited.
* If the **Cancel** button is clicked, the mode name reverts to the name before the edit.
* The mode names are used as the mode names set in the "Schedule" - "Schedule operation time settings" screen.

4-13-5. Change confirmation

If you have changed the scheduled operation times and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.



Click on the **Yes** button to discard changes and switch screens.

Click on the **No** button to continue using this screen.

16. Intelligent Management System

4-14-1-2. Setting schedule times

Click on the cell to set the schedule for. The background turns blue.

Click on the **Edit** button to enable registration of detailed settings.

Set the set times, modes, set temperatures, fan speeds, flaps and prohibitions. Click on the **Set** button on the right of each cell to display the list. Select the item to set.

* There is no need to set all items. Only set the items required. However, time-related settings are required.

Once you have finished editing the detailed settings, click on the **Set** button.

Click on the **Cancel** button to cancel detailed settings.

* When making time settings, start from earlier times and proceed to later times. It is not possible to set the same time of an existing setting.
 Example
 10:00 On:
 With the scheduled operation time settings as shown in the example above, it is only possible to set times between the existing times in the range of 10:01-16:59.

4-14-1-3. Confirming schedule time settings

If you select a time cell with a scheduled time setting, the current settings are displayed in gray in the detailed settings column.

4-14-2. Edit function

4-14-2-1. Editing schedule times

Use the edit button in the upper right of the screen to edit schedule times.

- Copy** :Select by clicking on the time cell to copy. Click on the **Copy** button to store the selected time cell in memory.
- Paste** :Select the time cell to paste, then click on the **Paste** button to paste the copied time.
- Clear** :Select the time cell to clear, then click on the **Clear** button to clear the registered time.

* Pasting into the time cell for the same indoor unit is not possible because the times would be the same for the unit.
 * Even on a different indoor unit, pasting is impossible if there is an existing registration for the same time or an earlier time.

16. Intelligent Management System

4-14-3. Saving changed data

If the scheduled operation time has been changed, click on the **Register** button in the right side of the screen to save the settings. All changed data is saved.

Click on the **Cancel** button to return all changed data to its previous state.

* The Register and **Cancel** buttons become available once the schedule times are edited.
 * If the **Cancel** button is clicked, the schedule times revert to the settings before the edit.

4-14-4. Change confirmation

If you have changed the scheduled operation times and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.



Click on the **Yes** button to discard changes and switch screens.

Click on the **No** button to continue using this screen.


4-15. Schedule Changes

- Procedure


On the menu bar, select "Schedule" - "Update Schedule"

Check and change scheduled operating times for the same day, next day and day after that. The screen varies depending on whether or not you have registered a schedule group under "Maintenance" - "Register schedule group name". If you have registered a schedule group, use the "Maintenance" - "Indoor unit master" screen to assign indoor units to groups. If you have not registered any schedule groups, settings must be made for individual indoor units, so assignment setup is not required.

The screen if you have registered schedule groups

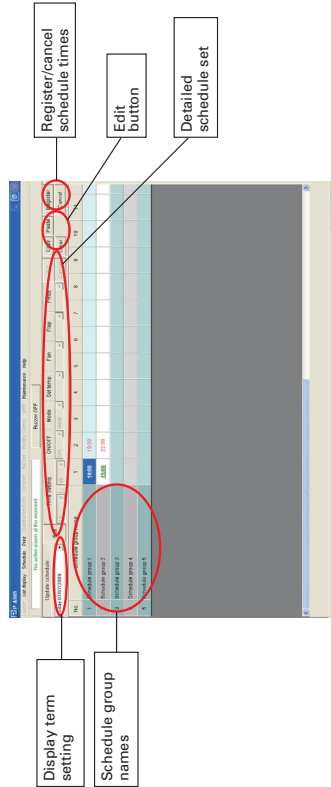


The screen if you have not registered schedule groups

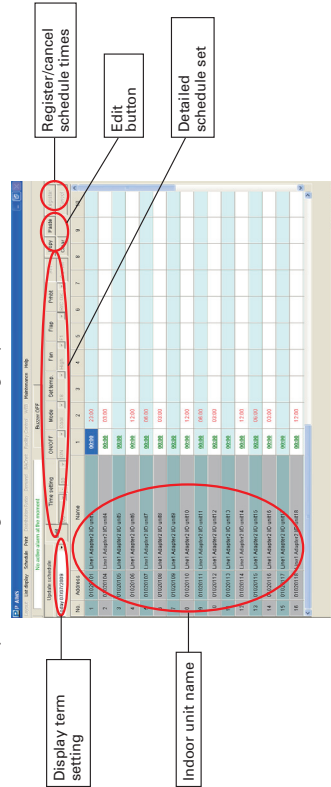

16. Intelligent Management System

- :Select the date to change. (The same day, next day, and day after that can be specified).
- :Sets schedule times and other details.
- :Use for editing schedule times. (Use for copying, pasting and clearing setting content).
- :Registers the changed content.
- :Restores all changed data to its previous states.

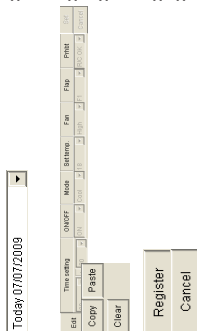

- Key**
 - . Schedule group name
- . Address
- . Name
- . Schedule time

:Displays the schedule group name. (If a schedule group has been registered)
 Use the "Maintenance" - "Register schedule group name" screen to register schedule groups.
 Use the "Maintenance" - "Indoor unit master" screen to assign indoor units to groups.
 :Displays the address numbers of indoor units. (If no schedule group has been registered)
 :Displays the names of indoor units. (If no schedule group has been registered)
 Use the "Maintenance" - "Indoor unit master" screen to register Indoor unit names.
 :Displays scheduled times. Up to 20 can be set.
 When the scheduled time is reached, the indoor unit settings are changed according to the set items.

* Schedule time registrations can only be applied to the main unit. Sub-units turn on and off according to the schedule of the main unit.
 * The underlined display (08:00), of set items indicates that other related items have also been set, such as modes other than On/Off or set temperatures.
 * Consult your dealer or service provider about registering or changing the indoor unit master.

4-15-1. Display method

Click on the button for the cell with the date displayed at the upper left of the screen to display the dates for that day and the next two days.



Select the term to display.
 Schedule times are displayed for the specified date.

4-15-2. Registering schedule times

4-15-2-1. Setting schedule times

Click on the cell to set the time for. The background turns blue.



* Drag the mouse down a column to select multiple setting cells.
 * Click on the item name area for 1-20 to select all in the column.
 * It is only possible to select multiple cells when all are in the same column. A message will be displayed if you select multiple columns, or a horizontal row, and click on the Detailed Settings button.



Click on the button to enable registration of detailed settings.



Set the set times, modes, set temperatures, fan speeds, flaps and prohibitions.
 Click on the button on the right of each cell to display the list.
 Select the item to set.



* There is no need to set all items. Only set the items required.
 However, time-related settings are required.

Once you have finished editing the detailed settings, click on the button.



The time is set.
 If multiple cells are selected, the time will be set to all selected columns.

Click on the button to cancel detailed settings.

16. Intelligent Management System

4-15-4. Saving changed data

If the scheduled operation time has been changed, click on the **Register** button in the right side of the screen to save the settings. All changed data is saved.

Click on the **Cancel** button to return all changed data to its previous state.

- * The Register and Cancel buttons become available once the schedule times are edited.
- * If the Cancel button is clicked, the schedule times revert to the settings before the edit.

4-15-5. Change confirmation

If you have changed the scheduled operation times and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.



Click on the **Yes** button to discard changes and switch screens.
 Click on the **No** button to continue using this screen.

- * On and Off settings form pairs in schedule times, but to use only On or only Off, set a time for either On or Off.
 - * When making time settings, start from earlier times and proceed to later times. It is not possible to set the same time of an existing setting.
- Example
 10:00 On: :17:00 On
 With the scheduled operation time settings as shown in the example above, it is only possible to set times between the existing times in the range of 10:01–16:59.
- * Settings cannot be made for times that have already passed.

4-15-2-2. Confirming schedule time settings

If you select a time cell with a scheduled time setting, the current settings are displayed in gray in the detailed settings column.



4-15-3. Edit function

4-15-3-1. Editing schedule times

Use the edit button in the upper right of the screen to edit schedule times.

- Copy** :Select by clicking on the time cell to copy. Click on the **Copy** button to store the selected time cell in memory.
- Paste** :Select the time cell to paste, then click on the **Paste** button to paste the copied time.
- Clear** :Select the time cell to clear, then click on the **Clear** button to clear the registered time.


- * Pasting into the time cell for the same indoor unit is not possible because the times would be the same for the unit.
- * Even on a different indoor unit, pasting is impossible if there is an existing registration for the same time or an earlier time.

16. Intelligent Management System

4-16. Register Maintenance Information

- [Procedure]
- On the menu bar, select "Maintenance" – "Register maintenance information".
- (Password level 1)

Make maintenance settings in order to temporarily suspend monitoring due to mechanical work or device malfunctions.
On/Off operation and warning display are disabled for devices registered for maintenance.
This screen is also used for canceling maintenance.

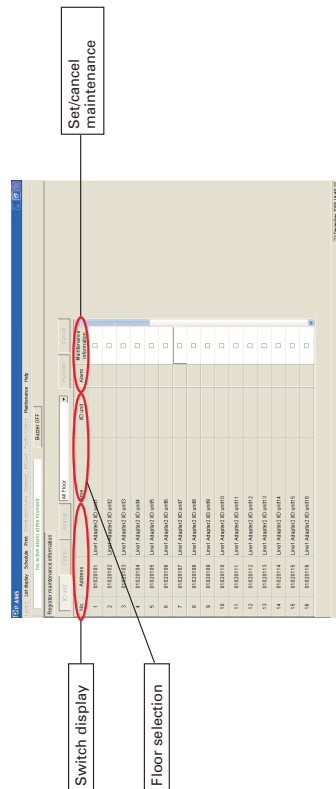

- [ID unit] [Digital] [Analog]
 - All Floor
 - Register
 - Cancel
- Switches the display.
(Enabled when the optional Facility Control software has been installed).
- Use to select floor areas.
- Registers the set content.
- Reverts to the previously registered content.

- Key**
- Address :Displays the addresses of indoor units.
 - Name :Displays the names of the indoor units.
Normal: black, W/O connection: red
 - I/D unit :Displays the codes of indoor units.
 - Alarm :Displays alarm codes currently in effect.
 - Maintenance information :Set whether or not to register maintenance information.
Add a check mark to items for maintenance registration.

4-16-1. Display method 4-16-1-1. Selecting displayed floor and area

if the floor and area is "All", all registered indoor units are displayed. Click on the button on the right edge of the floor selection list to display a list of registered floors and areas.

From the list, select the floor or area to monitor. A list of indoor units registered within that floor and area is displayed.

4-16-2. Maintenance settings 4-16-2-1. Maintenance settings

Click on the register maintenance information column for devices that are not set for maintenance. They will then have a check mark in the register maintenance information column, so monitoring and control will not be applied, even if an alarm occurs. The buzzer will not sound if an alarm occurs.

4-16-2-2. Cancel maintenance

Click on the register maintenance information column for devices that are set for maintenance. The check mark will be removed from the register maintenance information column, and they will revert to normal monitoring. All operations will be enabled.

4-16-2-3. Registering changed data

Click on the Register button to register changes. All changed data is registered.

4-16-2-4. Deleting settings

Click on the Cancel button to revert to the previously registered state.

4-16-3. Change confirmation

If you have changed the maintenance settings and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.



Click on the button to discard changes and switch screens.
Click on the button to continue using this screen.

16. Intelligent Management System

4-17-2-5. Registering changed data

Register button to register changes. All changed data is registered.

4-17-2-6. Deleting settings

Click on the Cancel button to revert to the previously registered state.

4-17-3. Change confirmation

If you have changed floor name content and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.



Click on the Yes button to discard changes and switch screens.


Click on the No button to repeat the operation on this screen.

4-18. Register control group name

[Procedure]

On the menu bar, select "Maintenance" – "Register control group name".
(Password level 1)

Control groups can be registered. Indoor units included in the control group can also be registered.

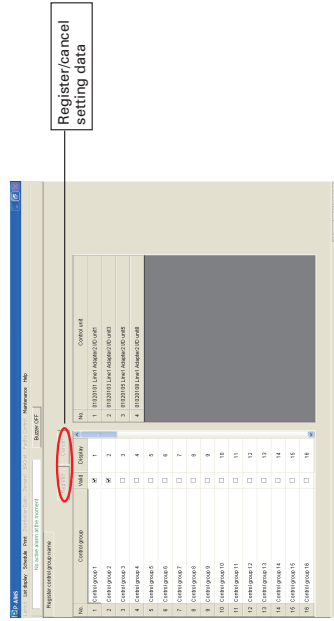

Register : Register settings.

Cancel : Reverts to the previously registered state.

Key


- Control group : Displays the control group names.
- Valid : Sets valid/invalid.
- Display : Displays the order in which the control groups are displayed.

16. Intelligent Management System

4-19. Register Schedule Group Names

- [Procedure]
- On the menu bar, select "Maintenance" – "Register schedule group name".
- (Password level 1)

Register schedule groups.

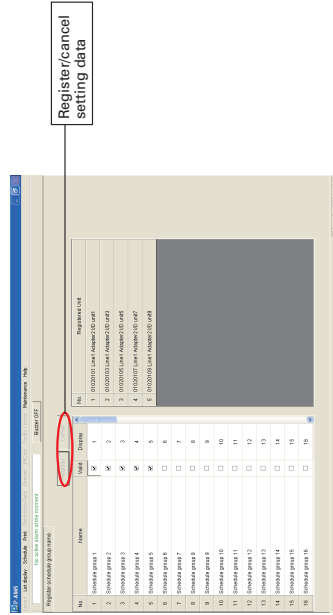

- Register : Register settings.
- Cancel : Revert to the previously registered state.

- Key**
- Name : Displays schedule group name.
 - Valid : Sets enabled/disabled.
 - Display : Displays the order in which the schedule groups are displayed.

4-18-1. Display method
4-18-1-1. Confirmation of indoor units included in control group
 Click on a registered control group to display a list of indoor units registered on that group in the indoor unit column on the right side of the screen.

4-18-2. Registering control group names
4-18-2-1. Changing control group names
 Double click to change the name of a control group. It is also possible to change part of the name of a previously-registered control group. To change the entire name, just type in the name. The existing name will be deleted and the new name displayed. Once the name has been changed, click on the Register button to register it. Click on the Cancel button to revert to the previously registered state.

4-18-2-2. Enable/disable settings
 To enable the registered content, click in the Enable space to add a check mark.
 Click there again to remove the check mark, disabling the setting.

4-18-2-3. Registering changed data
 Register button to register changes. All changed data is registered.

4-18-2-4. Deleting settings
 Click on the Cancel button to revert to the previously registered state.

4-18-3. Change confirmation
 If you have changed the control groups and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.



Click on the Yes button to discard changes and switch screens.
 Click on the No button to continue using this screen.

16. Intelligent Management System

4-19-1. Display method

4-19-1-1. Confirmation of indoor units included in each schedule group

Click on a registered schedule group to display a list of indoor units registered on that group in the indoor unit column on the right side of the screen.

4-19-2. Registering schedule group names

Double click to change the name of a schedule group. It is also possible to change part of the name of a previously-registered schedule group. To change the entire name, just type in the name. The existing name will be deleted and the new name displayed.

Once the name has been changed, click on the button to register it. Click on the button to revert to the previously registered state.

4-19-2-2. Enable/disable settings

To enable the registered content, click in the Enable space to add a check mark.

Click there again to remove the check mark, disabling the setting.



4-19-2-3. Registering changed data

Click on the button to register changes. All changed data is registered.

4-19-2-4. Deleting settings

Click on the button to revert to the previously registered state.

4-19-3. Change confirmation

If you have changed the schedule group and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.



Click on the button to discard changes and switch screens.

Click on the button to continue using this screen.


4-20. Register operator information

[Procedure]

On the menu bar, select "Maintenance" – "Register operator information".

(Password level 1)

Register operator names.

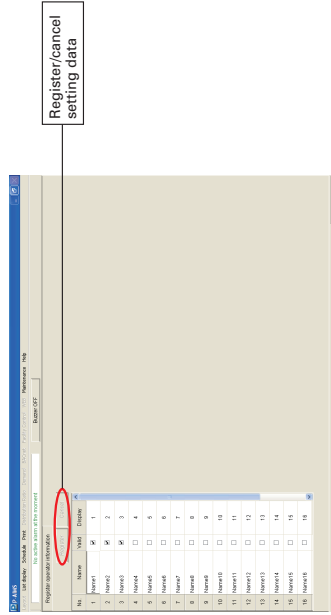

:Register settings.

:Revert to the previously registered state.

Key

. Name

. Valid

. Display

:Displays the operator names.

:Sets enabled/disabled.

:Displays the order in which the operator names are displayed.

4-20-1. Registering operators

4-20-1-1. Changing operator names

Double click to change the name of an operator. Previously registered operator names can be partially changed. To change the entire name, just type in the name. The existing name will be deleted and the new name displayed.

Once the name has been changed, click on the button to register it.

Click on the button to revert to the previously registered state.

4-20-1-2. Enable/disable settings

To enable the registered content, click in the Enable space to add a check mark.

Click there again to remove the check mark, disabling the setting.



16. Intelligent Management System

4-20-1-3. Registering changed data

Click on the button to register changes. All changed data is registered.

4-20-1-4. Deleting settings

Click on the button to revert to the previously registered state.

4-20-2. Change confirmation

If you have changed the operator names and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.




Click on the button to discard changes and switch screens.
 Click on the button to continue using this screen.

4-21. R/C prohibition settings

[Procedure]
 On the menu bar, select "Maintenance" – "R/C prohibition settings".
 (Password level 1)
 Set the prohibition items for each central control mode, which the central system (P-ALMS) uses to prohibit the remote control units of indoor units from exercising control functions.

	ON/OFF	Temperature	Mode	Fan speed	Flap
Prohibit1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Prohibit2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Prohibit3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Prohibit4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Prohibit5	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Prohibit6	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Prohibit7	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

The image above shows the initial values.



- :Indicates prohibition. (This mark can be changed)
- :Indicates prohibition. (This mark cannot be changed)
- :Indicates permission. (This mark can be changed)
- :Indicates permission. (This mark cannot be changed)
- :Initializes central control mode.
- :Registers changes to settings.
- :Restores changes to their previous settings.
- :Closes the window.

Central control mode display

- Prohibit 1: The remote control unit cannot be used for switching On/Off. (The mode can be changed)
- Prohibit 2: The remote control unit cannot be used for switching On/Off, temperature setting and operation mode switching. (The mode can be changed)
- Prohibit 3: The remote control unit cannot be used for temperature setting and operation mode switching. (The mode can be changed)
- Prohibit 4: The remote control unit cannot be used for operation mode switching. (The mode can be changed)
- Prohibit 5: The remote control unit cannot be used for switching On/Off. (The mode cannot be changed)
- Prohibit 6: The remote control unit cannot be used for switching On/Off, temperature setting and operation mode switching. (The mode cannot be changed)
- Prohibit 7: The remote control unit cannot be used for temperature setting and operation mode switching. (The mode cannot be changed)

* Prohibit 1–4 are for the CZ-CFUNC2.

16. Intelligent Management System

4-21-1. Control method


4-21-1-1. Changing prohibition settings (affects prohibit 1 - 4)

Click on the  button and the  button to switch the display and change the central control functions. It is not possible to switch the display by clicking on the  and  buttons.

4-21-1-2. Initializing prohibition settings

To initialize control mode for prohibitions 1 - 4 as well, click on the  button. The central control mode initializes.


4-21-1-3. Registering settings

Click on the  button to register the changed content.

4-21-1-4. Deleting settings

Click on the  button to revert to the previously registered state.

4-21-1-5. Close the screen

Click on the  button to close the screen.

4-22. Clock setting

[Procedure]

On the menu bar, select "Maintenance" - "Clock setting".

Set the system time.




4-22-1. Clock setting method

Click on the location to correct in the hh:mm:ss display to display the cursor there. Use the up and down arrow buttons  at the cursor position to raise or lower the time value there.

4-22-2. Setting

Click on the  button on the right of the screen to save the time setting and close this screen.

Time is gradually corrected by a separate program, so the change is not applied immediately.

The settings are not saved if you click on the  button. This screen closes.

* Time is corrected at a rate of 100ms per second. (6s per minute, 60s per ten minutes)

16. Intelligent Management System


4-23. Data backup and restoration

Perform system maintenance tasks such as data backup and restoration.

4-23-1. Data backup

[Procedure]
 On the menu bar, select "Maintenance" – "Data backup/restore – Data backup".
 (Password level 2)

Make backups of all data. The default file name is automatically the numerals for "yyyymmdd_hhmm", with the extension of bak for the database, ini_backup for initialization files, and reg_backup for the registry.

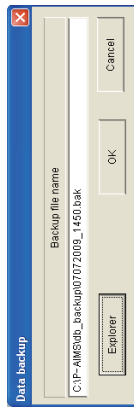

- OK
- Cancel
- Explorer
- :Make backups of data.
- :Exit.
- :Use to change the save folder.

4-23-1-1. Starting data backup

Click on the button to backup data. The message "Executing data backup...Please wait" is displayed as the backup data is saved.

Once the backup is complete, a message such as that on the left is displayed. Click on the button.

The data backup process is complete.



* The message on the right is displayed if the backup fails. Check the available free space on the backup storage drive, etc. Click on the button to go back to Data Backup.


* If the extension is changed, the data cannot be used for data restoration, so change extensions with caution.

4-23-1-2. Deleting

Click on the button to exit without saving the backup.

4-23-1-3. Changing the save destination

Click on the button to display the "Backup file name" screen and change the save folder.

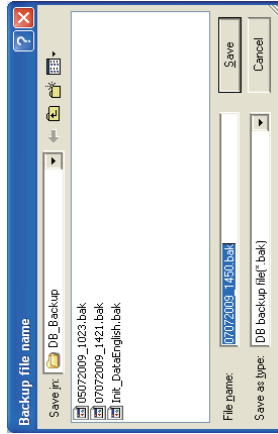

Click on the button beside "Save in," to display a folder list as shown on the left. Select the required folder from the folder list.


Click on the button to apply the selected save destination and return to the Data Backup screen.

Click on the button to return to the Data Backup screen without doing anything.

4-23-2. Data restoration

[Procedure]
 On the menu bar, select "Maintenance" – "Data backup/restore – Restore data".
 (Password level 2)

Use the files created at the data backup stage in a process to return the system to its state at the time the data was backed up. That process means that all data generated between the time the data was first backed up and the time of restoration is lost, so proceed with caution.

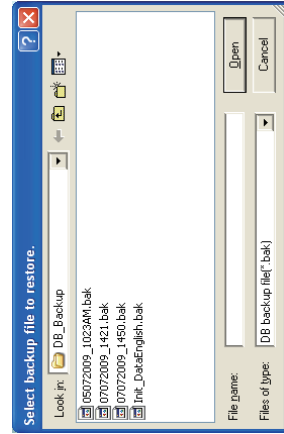

16. Intelligent Management System




:Specify the file name.
:Exit.

4-23-2-1. Start data restoration

On the "Select backup file to restore" screen, click on the file name to restore. The specified file name is displayed in the "File name" space, then click on the button.

The Data Restore screen is displayed.

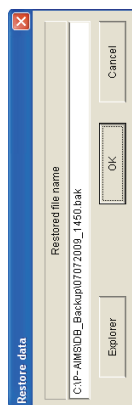

:Data is restored.
:Exit.
:Use this when you need to specify a different backup file.

4-23-2-1-1. Starting data restoration

To start data restoration, click on the button. A message reading "Restore data ..." is displayed.

Click on the button to return to the Data Restore screen.

When you click on the button, the message "Processing restore ... Please wait." is displayed, and the restoration process starts.

Once the restoration is complete, a message such as that on the left is displayed.

Click on the button.

Exit the P-AMS system.

Restart the P-AMS system.

The data restoration process is complete.

4-23-2-1-2. Canceling data restoration

Click on the button to exit without restoring data.

4-23-2-1-3. Re-specifying the data restoration file

Click on the button to re-display the "Select backup file to restore" screen.

P-AMS

Data restore failed.
Try again after a short interval. In case of the failure is repeated, this program will be automatically shut down.

* If the message "Data backup failed" is displayed during data restoration, it is possible that the database was partially restored and has lost integrity as a database.
In that case, reboot Windows SP, start P-AMS and repeat the data restoration.
* If the message "Data backup failed" still appears, contact your dealer or service provider.

4-23-3. Canceling data restoration

On the menu bar, select "Maintenance" – "Data backup/restore – Cancel data restore".

Cancellation of data restoration is a function for returning the system to its state before the data restoration process. You cannot select from the menu without performing data restoration first.
* This is an auxiliary function for use when data has been restored.



:Cancel data restoration.
:Exit.

4-23-3-1. Starting cancellation of data restoration

To start cancellation of data restoration, click on the button. A message reading "After closing ..." is displayed.



16. Intelligent Management System

Click on the button to return to the Cancel Data Restore screen.
 Click on the button to display the message "Canceling restore ... Please wait".




Once cancellation of the restoration process is complete, a message such as that on the right is displayed.
 Click on the button. Exit the P-AIMS system. Restart the P-AIMS system. Cancellation of the data restoration process is complete.

4-23-4. Automatic backup settings

[Procedure]
 On the menu bar, select "Maintenance" - "Data backup/restore - Auto backup settings".

This function makes data backups automatically. The time set for the backup process is 00:10 each day. The file name is "Auto yyyyymmdd". File extensions are the same as for data backups. This is the form that can be used for data restoration.

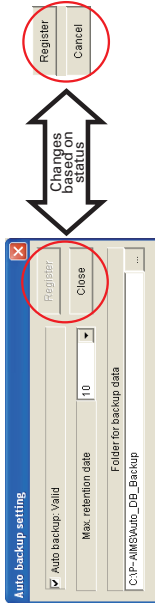

- Auto backup: Valid : Enables automatic backups.
- Max. retention date 10 : Specifies the saving period for backup files.
- Register : Registers the set content.
- Cancel : Reverts to the previously registered content.
- Close : Closes the window.
- ... : Changes the backup creation folder.

4-23-4-1. Enable/disable automatic backup

To enable the automatic backup setting, click on Auto backup: Valid, and add the check mark. Saving is enabled with the check mark added. Click again to remove the check mark.


4-23-4-2. Setting the maximum storage term

Set the maximum duration for storing backup files.
 Click on the area of Max. retention date to display the pull-down menu.
 Select from the menu. In this illustration, the specification is to store data for 100 days.

Data more than 100 days old is deleted.
 The options on the pull-down menu for numbers of days to specify are "1, ..., 9, 10, ..., 90, 100, 200, 300, 400".

4-23-4-3. Changing the backup creation folder

Click on the button to display the Browse Folder screen, to change the folder in which files are saved.

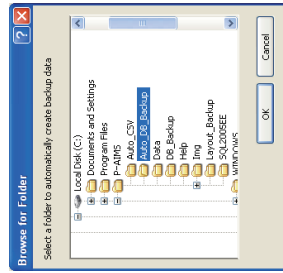

Click on the button to apply the selected save destination and return to the Automatic Backup Settings screen.
 Click on the button to return to the Automatic Backup Settings screen without doing anything.

4-23-4-4. Registering settings

Click on the button to register the set content.

4-23-4-5. Deleting settings

Click on the button to delete the set content and revert to the previously registered content.

4-23-4-6. Deleting

Click on the button to close the Automatic Backup Settings screen.


* The and buttons change to the button when making settings.
 Clicking on the or buttons changes them to the button.

* Unless a different save folder has been specified, automatic backup files are saved to the folder named Auto_DB_Backup in the folder where the P-AIMS system was installed (e.g. C:\P-AIMS).


16. Intelligent Management System

4-23-4-7. Troubleshooting if saving does not work

If an error occurs while the backup file is being saved, a red button marked "Auto Backup ERR" is displayed in the upper right of the screen.

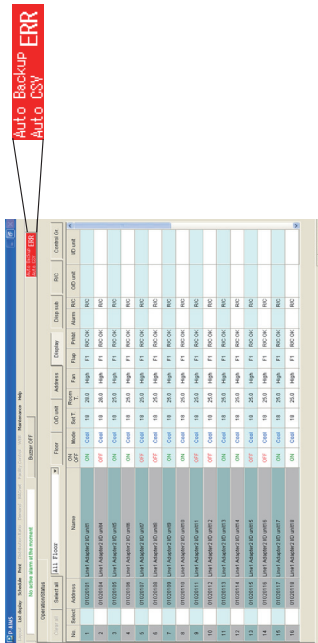

Click on the **Auto Backup ERR** button to display the "Error log of Auto_DB_Backup & Auto_CSV_Backup" screen and the content of the error.

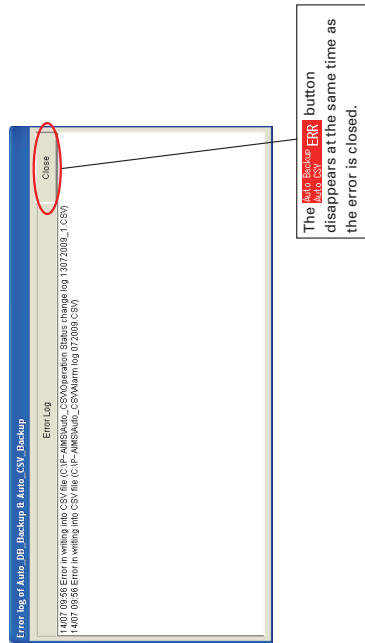


* If this button is displayed, an error may have occurred on the storage disk. Refer to the instruction manual for the device concerned and take appropriate action.

4-24. Register Event

[Procedure]
On the menu bar, select "Maintenance" – "Register event".
(Password level 2)

Register event processes for automatic control. Linked control will be performed according to the input conditions.

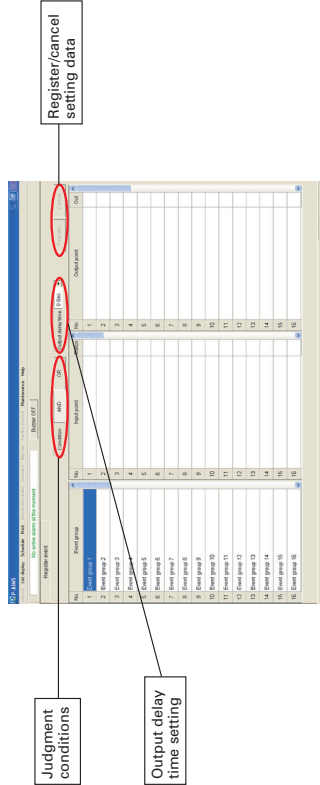

condition AND OR
Output delay time 0 Sec. →
Register
Cancel

- : Register settings.
- : Set the delay time for output.
- : Register settings.
- : Revert to the previously registered state.

Key

- Event group : Displays event group names.
- Input point : Specifies the input device.
- Status : Sets the On/Off status.
- Output point : Specifies the output device.
- Out. : Turns output On/Off.

4-24-1. Display method

4-24-1-1. Event group display

Click on an event group name to display conditions related to the event control group, such as input point, status, output point, output, judgment conditions and output delay time.

16. Intelligent Management System

4-24-2. Registering event group names


4-24-2-1. Changing event group names

Double click to change the name of an event group. It is also possible to change part of the name of a previously-registered event group. To change the entire name, just type in the name. The existing name will be deleted and the new name displayed. Once the name has been changed, click on the **Register** button to register it. Click on the **Cancel** button to revert to the previously registered state.

* When the name is changed, it becomes impossible to change the input point, status, output point, output, judgment conditions, output delay time, and other settings. Click on the **Register** button after changing the name to register it. Changes in other settings will then become possible, so register again after any further changes.

4-24-2-2. Changing the input point

Set conditions for the input device. Click in the input point box to display the **Input** button, then click on it. A list of input devices is displayed, so select the relevant device.

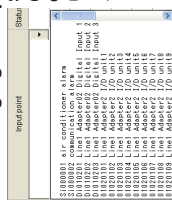

* Select the blank at the top of the list to delete the input point.

4-24-2-3. Changing status


Click in the Status box to display the **ON** button, then click on it. A list is displayed for selecting On or Off, so specify the condition for the input device.



* If the input point is deleted and the change registered, the item concerned is automatically deleted.

4-24-2-4. Changing the output point

Set conditions for the output device. Click in the Output Point box to display the **Out** button, then click on it. A list of output devices is displayed, so select the relevant device.

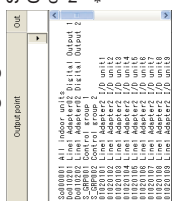

* Select the blank at the top of the list to delete the output point.

4-24-2-5. Changing output

Click in the Output box to display the **ON** button, then click on it. A list is displayed for selecting On or Off, so specify the condition for the input device.



* If the output point is deleted and the change registered, the item concerned is automatically deleted.

4-24-2-6. Setting judgment conditions

condition | **AND** | **OR** : AND condition is applied. When multiple input points have been set and the status of all input points is satisfied, the event occurs and the output point is changed according to the output setting.



condition | **AND** | **OR** : OR condition is applied. When multiple input points have been set and the status of even one of the input points is satisfied, the event occurs and the output point is changed according to the output setting.

* If there is only one input point registered, it makes no difference to the conditions whether the setting is for AND or OR.

4-24-2-7. Changing output delay time

Output delay time | 0 Sec. : Even if the input conditions are satisfied and the event occurs, output to the output point is delayed by the output delay time.

* An adapter is used for communications with the input and output devices, so such disturbances as communications delays may occur, and the actual delay time may exceed the one set.

4-24-2-8. Registering changed data

Click on the **Register** button to register changes. All changed data is registered.

4-24-2-9. Deleting settings

Click on the **Cancel** button to revert to the previously registered state.

4-24-3. Change confirmation

If you have changed event content and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.



Click on the **Yes** button to discard changes and switch screens. Click on the **No** button to repeat the operation on this screen.

16. Intelligent Management System

4-25. Register I/D unit upper/low-limit temperature

(Procedure)
 On the menu bar, select "Maintenance" – "Register I/D unit high/low-limit temperature".
 (Password level 2)

Set upper and lower limit temperatures to restrict the set temperatures of indoor units.

The screenshot shows a table of indoor units with columns for Name, Address, and Limit. Red circles highlight the 'Select all' button, the 'Floor area' column, and the 'Sort display' column. A box labeled 'Register/cancel setting data' points to the 'Register' and 'Cancel' buttons at the top right.


This block shows the control elements for the registration process. It includes a 'Clear all' button, a dropdown menu for 'All Floor', and buttons for 'Floor', 'O/D unit', 'Address', and 'Display'. Below these are input fields for 'High limit temperature' (set to 28) and 'Low limit temperature' (set to 22). At the bottom, there are radio buttons for 'Valid' and 'Invalid', and a 'Set as selected I/D unit' button.

- :Use to clear all and select all.
- :Use to select floor areas.
- :Use to select the display order.
- :Register settings.
- :Revert to the previously registered state.
- :Select the upper limit temperature/lower limit temperature.
- :Set enabled/disabled.
- :Apply the set values of upper limit temperature/lower limit temperature. Or, apply the enabled/disabled settings.

- Key**
- . Select
 - . Address
 - . Name
 - . Valid
 - . High limit temperature
 - . Low-limit temperature
- :Selects the indoor unit to control.
 - Click to add a check mark.
 - :Displays the address numbers of indoor units.
 - :Displays the names of the indoor units.
 - :Sets enabled/disabled.
 - :Displays the upper limit temperatures of indoor units.
 - :Displays the lower limit temperatures of indoor units.

4-25-1. Display method 4-25-1-1. Selecting displayed floor and area

If the floor and area is "All", all registered indoor units are displayed. Click on the button on the right edge of the floor selection list to display a list of registered floors and areas.
 From the list, select the floor or area to monitor. A list of indoor units registered within that floor and area is displayed.



4-25-1-2. Sorting lists

Click on the Sort button to change the display order of a list. The currently pressed button is the one which determines the sort order.



Click on the buttons to change the list orders. If other buttons are pressed, the one that was clicked last is effective. The illustration above shows the list displayed in the indoor unit master order.

- Floor :Display is in order of floor name registration.
- O/D unit :Display is in ascending order of outdoor unit addresses.
- Address :Display is in ascending order of addresses.
- Display :Display is in order of most recent registrations to the indoor unit master.


* Any button can be selected. It is not possible to select multiple buttons at the same time.


4-25-2. Control method 4-25-2-1. Indoor unit selection method


To set the upper and lower limit temperatures, first click on the name of the target indoor unit. The selected locations have check marks in the selection column. Click again on the same location to remove the check mark, canceling the selection. To select all indoor units, click on the Select all button in the upper left of the screen. To cancel selections of all indoor units, click on the Clear all button in the upper left of the screen. The Clear all button cannot be used if nothing has been selected. It is possible to select or deselect multiple indoor units by dragging around them with the mouse. Unconnected units cannot be selected.

16. Intelligent Management System

4-25-2-2. Setting upper and lower limit temperatures

To select upper and lower limit temperatures, click on the  button to display the pulldown menu, then select a temperature in the range 16 – 30. Click on the desired temperature.

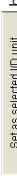The temperature you clicked on is selected. Select the lower limit temperature in the same way. Once both the upper and the lower limit temperatures are set, click on the  button. The upper and the lower limit temperatures are applied to all selected indoor units.

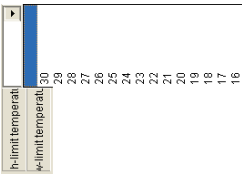



4-25-2-3. Enable/disable settings

To set enable/disable, click on either item to add a mark to it. After setting enable/disable, click on the  button. The selection is applied to all selected indoor units.



4-25-3. Saving changed data

click on the  button in the upper right of the screen to save the changed, changed data is saved.

Click on the  button to return all changed data to its previous state.

* The Register and Cancel buttons become available once upper/lower limit, and enabled status are set.
 * If the Cancel button is clicked, the settings revert to their values before the edit.

4-25-4. Change confirmation

if you have changed the scheduled operation times and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.





Click on the  button to discard changes and switch screens.
 Click on the  button to continue using this screen.

4-26. Exit

[Procedure]
 On the menu bar, select "Maintenance" – "Exit".
 (Password level 2)

Exit the system.



Click on the  button to exit the system.
 Click on the  button to avoid exiting the system.


16. Intelligent Management System

5. Supplementary Information

■ Powering the system off

Always use the following procedure to power the PC off.

1. From the Menu bar, select "Maintenance" - "Exit".

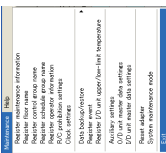


2. The Password input screen is displayed. Input the password.



3. The System Exit screen is displayed. Click on the Yes button.



4. Click on the start button in the lower left of the screen, then on the Turn Off Computer button.

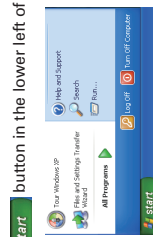


5. The "Turn Off Computer" screen appears. Click on "Turn Off".



6. The shutdown process begins. After some time, the PC will switch off*, so turn the LCD screen off as well.
*Several minutes may pass.

7. If the system is equipped with a UPS (uninterruptible power supply), turn it off at that stage.

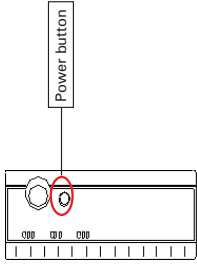

- **Limitations on changing settings**
Some types of air conditioners are limited in the settings which they support. For example, cooling-only air conditioners cannot be set to heating. Floor-type models typically support only high fan speeds. Ceiling mounted models do not have flaps, and therefore cannot change the fan direction. You should be aware of the limitations of the air conditioner models in your system. For more information, contact your dealer or service provider.
- **Personal Computers**
Use a personal computer exclusively for the P-AIMS System. Sharing the PC with any other system could cause problems.
- **Data backup**
The PC used with the P-AIMS System could break down, so you are advised to back up data to an external hard drive or other storage. For more information, contact your dealer or service provider. Caution: If the drive name of the external hard disk or other backup location changes, backups cannot be done.
- **Power outages**
We recommend use of a UPS device (uninterruptible power supply) to protect the P-AIMS in the event of a power outage. For more information, contact your dealer or service provider.
- **Please note that we will not provide compensation in the following circumstances:**
Any fault caused by a third party becoming aware of a password.
Any fault caused by sharing a PC between P-AIMS and another application.

16. Intelligent Management System

6. License Certification

Before you can use the P-AIMS system, you need to first perform a work procedure called "license certification."

To perform license certification, make an inquiry by sending the inquiry key to the inquiry e-mail address below. You will be registered as a user and issued a release key, and then receive a reply.

<Contact Information>
Product ID Issuance Desk,

E-mail address: cmc_productid_desk@gg.jp.panasonic.com

When you make an inquiry, send the following information together with the inquiry in order to be registered as a user and issued a release key.

- (1) Product name
- (2) Company name/contact person
- (3) Phone number
- (4) E-mail address
- (5) Inquiry key

* If you do not input a release key, you will no longer be able to use the system after 30 days elapses. Obtain a release key and perform license certification as soon as possible.
* Make an inquiry as soon as possible because it may sometimes take several days to be issued a release key.

License Certification Procedure

The procedure from after the P-AIMS system is installed up until the end of license certification is described below.

- (1) Check the inquiry key from the License Certification screen.
- (2) Send the inquiry key to the Product ID Issuance Desk (cmc_productid_desk@gg.jp.panasonic.com).
Also notify us of the product name, company name/contact person, phone number, and e-mail address.
- (3) A release key is issued.
You are registered as a user and a release key is issued. A reply is sent to the registered mail address.
- (4) Input the release key from the License Certification screen.
- (5) The license certification procedure is finished.

- Only alarm codes are displayed in the notification bar and alarm log display. The content of an alarm can vary for different models, even if the alarm code is the same. Consult the documentation of the various models to determine the content of the alarm.
- After the settings of an indoor unit are changed from the P-AIMS System, the display may revert temporarily to the former settings. This is more likely to occur with all-unit operations. The cause is communications delay, not any malfunction in the system. If you wait a few minutes, the display will show the correct information.
- Errors occurred while operating during a thunder storm or because of electromagnetic interference.
- Power the P-AIMS System off and then on again.
As a rule, the system should be powered off only in cases such as the above.
Correct management of air conditioning is not possible when the system is powered off.
- Setting the current date and time
The current date and time should be set on a regular basis, since the PC clock can gain or lose up to about two minutes per month.
- Passwords
Passwords should be recorded and saved in a safe place. They should never be disclosed to third parties.
If you forget your password, contact your dealer or service provider.
- Interface adaptors (sold separately)
 - ▶ Alarm display
Alarm details are not shown. The display is "C12". (meaning local adaptor all-unit alarm)


Interface adaptors (CZ-CAPCZ)
You can use interface adaptors to connect equipment that can be turned on and off (fans, room air conditioners and so on) to the system.
However, note that the following limitations apply.
For details, refer to the documentation of the equipment or contact your dealer or service provider.

- ▶ Central control is supported for the following operations only.
-On/Off
-Remote control prohibition (start/stop only)
Timer settings are supported, but settings other than "start/stop" and "remote control prohibition" are ignored.
Remote control prohibition is possible only when prohibition signal output from the local adaptor has been connected to the equipment.
Even in this case, the only operations that can be prohibited are start and stop.
- ▶ Alarm display
Alarm details are not shown.
The display is "C12". (meaning Interface adaptor all-unit alarm)
However, this is possible only when the alarm signal input has been connected to a local adaptor.
- ▶ As long as it conforms to the contact specifications of the interface adaptors, any type of equipment can be connected to the system. However, you should avoid connecting equipment whose operation can have grave consequences for life or property.

16. Intelligent Management System


Performing License Certification

1. A License Certification screen such as the following appears when you start a P-AIMS systems for which license certification is not finished.

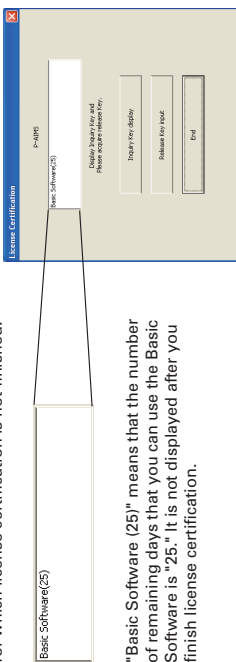

"Basic Software (25)" means that the number of remaining days that you can use the Basic Software is "25." It is not displayed after you finish license certification.

* After you start a P-AIMS system for which license certification is not finished, the License Certification screen will appear at 9:00 a.m. and 3.p.m. This screen is not displayed after you finish license certification.
If you install optional software, the License Certification screen will appear until license certification is finished for all of the software.

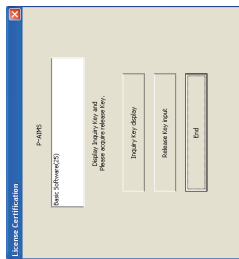


3. When you receive the release key, restart the P-AIMS system. See "2. Startup and shutdown" for how to restart the P-AIMS system, and then restart the system.

If license certification is not finished for the P-AIMS system, the License Certification screen on the right appears before the P-AIMS system restarts.

Click the button to display the Release Key input screen, and enter the release key.



* If you install multiple P-AIMS system software, the same number of license certifications is required. In such a case, the number of release keys sent will be the same as the number of inquiry keys.
Enter all of the received release keys sequentially, and perform license certification. (There is no set order for entering release keys, so they can be entered in any order.)

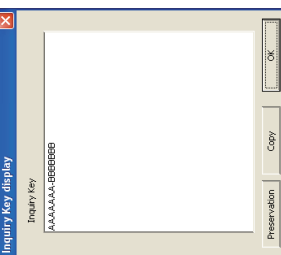

2. If you click the button in the License Certification screen, the Inquiry Key display screen appears, and the inquiry key is displayed in the screen.
Send the key displayed in this screen to the Product ID Issuance Desk (cmc, productid_desk@ggg.jp.panasonic.com) by e-mail.

At the same time, also notify us of the following items.

- (1) Product name (required)
- (2) Company name/contact person
- (3) Phone number
- (4) E-mail address (required)

You will be registered as a user and issued a release key.



- :Clicking this button saves the inquiry key as a text file. Follow the instructions on the screen to save the text file. Enter the product name, company name/contact person, phone number, and e-mail address in this saved text file, and send the text file to the Product ID Issuance Desk by e-mail.
- :Clicking this button copies the inquiry key to the Windows clipboard. Paste the inquiry key into your mail.
- :Clicking this button closes the Inquiry Key display screen.



License certification is finished once all of the release keys have been entered. Click the button. The License Certification screen closes, and the P-AIMS system starts.

* The P-AIMS system will start even if you click the button without entering the release key. You can use the system as is until license certification is finished. (The system can be used for a period of 30 days.)

16. Intelligent Management System


7. Basic Software Installation

1. Insert the Basic Software CZ-CSWKC2 CD of the P-AIMS system you purchased into the CD-ROM drive. Installation starts automatically when you insert the CD. If installation does not start, double-click "Setup.exe" on the CD-ROM drive to start it. Enter the Product ID in the Input Product ID screen that appears. For the Product ID, see the "Product ID Issuance Certificate" supplied with the software.

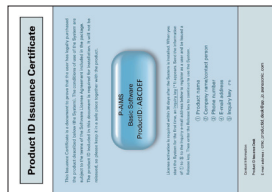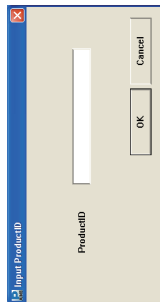


* Keep the "Product ID Issuance Certificate" in a safe place. The Product ID is required to install the P-AIMS system. The "Product ID Issuance Certificate" will not be reissued.


2. The InstallShield(R) Wizard prepares to install the P-AIMS system.

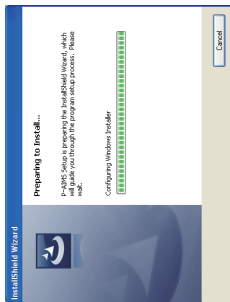


3. After a short while, the "The InstallShield(R) Wizard will install P-AIMS on your computer. To continue, click Next." message appears. Click the "Next >" button.

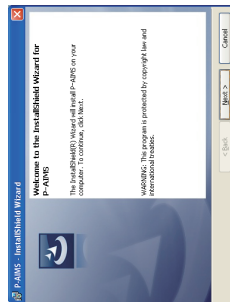


4. Next, the License Agreement screen appears. Carefully read the license agreement, and click "I accept the terms in the license agreement" if you agree to the terms of the license agreement. The "Next >" button becomes active. Click the "Next >" button. (The software cannot be installed if you do not agree to the terms of the license agreement.)

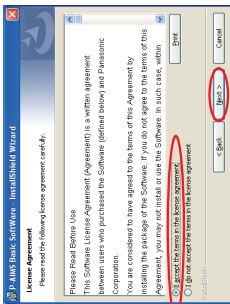


5. A screen for changing the folder to install the P-AIMS system in appears.
 - If you want to change the folder, click the "Change..." button. A screen for selecting the installation folder appears.
 - If you do not want to change the folder, click the "Next >" button.

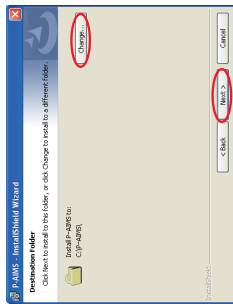

To change the folder, specify a folder and click the "OK" button. The specified folder is displayed and the previous screen is redisplayed.

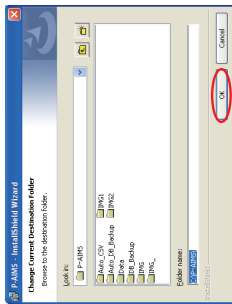

6. Click the "Install" button to begin the installation of the P-AIMS system.

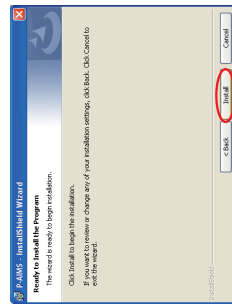

16. Intelligent Management System


8. Troubleshooting

Before requesting service, check the following items.

Do not attempt to service the system yourself. Doing so can be dangerous.


Symptom	Cause
There is no screen display, even when the PC is switched on.	<ul style="list-style-type: none"> Is the power cord connected? Is the power switch turned On?
Scheduled operation does not work well.	<ul style="list-style-type: none"> Is there a schedule mode or time setting? Even if schedule mode and time settings are made, schedule operation is not possible without confirmation. Does the setting match the current date and time? If the date and time do not match, operation can start at an unexpected time.
The power goes off at odd times.	<ul style="list-style-type: none"> The screen may be blank because of the power-saving auto off function. In this case, the power is not switched off, so move the mouse or press any key.
An error message has appeared in the alarm display area in the upper left of the screen, and does not disappear.	<ul style="list-style-type: none"> The message displays the unit number where the alarm occurred, and other information such as content and number of the alarm. Inform your dealer or service provider about the content of the message.
It takes a long time after an operation for the screen to be updated.	<ul style="list-style-type: none"> A certain amount of time may be required depending on the state of communications with the connected air conditioners. Please wait until all of the information is received.
While local remote control operation is prohibited on the P-AIMS system, P-AIMS has malfunctioned and become unable to start/stop operation of air conditioners.	<ul style="list-style-type: none"> As an ad hoc measure until the service engineer arrives, turn the P-AIMS system off, then turn the power of the indoor unit on again. Operation with the local remote control will be possible. However, this cannot be done in a system without remote control.
After a power outage, the devices do not reset automatically after power is restored.	<ul style="list-style-type: none"> The system does not power on equipment automatically after a power outage. The setting for the next programmed schedule will be executed when the time arrives.

Please wait a while.

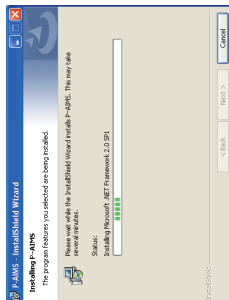

7. When the P-AIMS system setup is finished, the installation complete screen appears. If you click the **Finish** button, the initial settings of the P-AIMS system are configured.

8. When the initial settings are finished, click the **OK** button in the "Completed installation of P-AIMS" screen that appears. The installation is now finished.

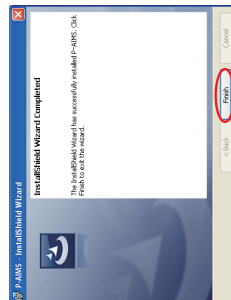

9. When the installation is finished, registration of the P-AIMS shortcut to the desktop and registration to the Start menu take place.

10. From now on, you can start the P-AIMS system by double-clicking this shortcut.

16. Intelligent Management System

9. Afterservice

Please be sure to read this section.

If you have any questions or repair-related consultations

Please consult your dealer about repairs or any questions.

Relocation

⚠ Warning

Specialist skills are required, so always consult your dealer. Necessary expenses for relocation are to be borne by the customer.

User memo space

If you fill this out at the time of purchase, it is convenient when ordering repairs etc.

Serial No.	
Date of installation	
Dealer	Telephone No. ()

16. Intelligent Management System

2. Distribution Ratio Software (CZ-CSWAC2)

Operation Manual
Air Conditioning
Intelligent Management System
CZ-CSWAC2
Distribution Ratio Software

P-AIMS

Thank you for purchasing our monitoring and control system.
 Before using the system, be sure to read this manual carefully. After reading it, store it in a convenient location for easy reference.

Operation Manual
 Air Conditioning
 Intelligent Management System
CZ-CSWAC2
Distribution Ratio Software

Contents	
Precautions on Using This Product.....	i
1. Introduction	1
2. Startup and exit	2
3. Quick reference	3
4. Using the system	4
5. Supplementary Information	39
6. License Certification	43
7. Preparation	46
Reference	49

16. Intelligent Management System

Contents

Precautions on Using This Product	i
1. Introduction	1
2. Startup and exit.....	2
2-1. Startup	2
2-2. Exit.....	2
3. Quick reference.....	3
4. Using the system	4
4-1. Print	4
4-1-1. Print screen.....	4
4-1-2. Excel output.....	4
4-1-3. Setting for automatic Excel output.....	5
Settings for saving the operation/status log.....	5
Settings for saving the alarm log.....	6
Settings for saving distribution ratio data.....	6
Changing the CSV file creation folder for automatic Excel output.....	7
Registering settings.....	7
Deleting settings.....	7
Deleting.....	7
4-1-3-7. What to do when data could not be saved.....	8
4-1-3-8. What to do when data could not be saved.....	8
4-2. Operation time with thermostat on.....	9
4-2-1. Display method.....	11
4-2-1-1. Selecting the display type.....	11
4-2-1-2. Sorting lists.....	11
4-2-1-3. Detailed display with thermostats off.....	12
4-2-1-4. How to specify the display range term.....	12
4-2-1-5. Specifying the time range.....	13
4-2-1-6. Excel output.....	13
4-3. Distribution ratio calculation.....	15
4-3-1. Screen display.....	15
4-3-1-1. Simple distribution.....	15
4-3-1-2. Load distribution.....	17
4-3-2. Display method.....	19
4-3-2-1. Selecting the display type.....	19
4-3-2-2. How to specify the display range term.....	19
4-3-2-3. Specifying the time range.....	20
4-3-3. Printing.....	20
4-3-3-1. Print screen.....	20
4-3-3-2. Excel output.....	20
4-3-3-3. Print list.....	21
4-3-3-4. List print preview.....	21
4-4. Accumulated value.....	23
4-4-1. Display method.....	25
4-4-1-1. Selecting the display type.....	25
4-4-1-2. Term setting (term total value).....	25
4-4-1-3. Display selection for the gas calculation method.....	26
4-4-2. Changing the meter value.....	26
4-4-3. Printing.....	27
4-4-3-1. Print screen.....	27
4-4-3-2. Excel output.....	27
4-5. Distribution ratio setting.....	28
4-5-1. Setting distribution method.....	28

4-5-1-1. Selecting distribution method.....	29
4-5-1-2. Settings for simple distribution.....	29
4-5-1-3. Settings for load distribution.....	30
4-5-2. Editing specified day.....	30
4-5-2-1. Changing the calendar.....	30
4-5-2-2. Setting specified day.....	30
4-5-3. Setting the regular hour range settings.....	30
4-5-3-1. Setting enable/disable for the regular hour range.....	30
4-5-3-2. Setting times for Regular hour.....	30
4-5-4. Setting accumulated data.....	30
4-5-4-1. Setting the cut-off day.....	30
4-5-4-2. Setting conversion factor.....	31
4-5-5. Registering unit prices.....	31
4-5-5-1. Registering Price rate of electric power.....	31
4-5-5-2. Registering Price rate of gas cost.....	31
4-5-6. Registering settings.....	31
4-5-6-1. Registering settings.....	31
4-5-6-2. Deleting settings.....	31
4-5-6-3. Deleting.....	31
4-6. Register distribution group name.....	32
4-6-1. Editing distribution groups.....	33
4-6-1-1. Editing distribution group names.....	33
4-6-1-2. Enabling/disabling registration.....	33
4-6-1-3. Registering display orders.....	33
4-6-2. Saving and revising edited distribution groups.....	33
4-6-3. Change confirmation.....	33
4-7. Register tenant name.....	34
4-7-1. Editing tenants.....	35
4-7-1-1. Editing tenant names.....	35
4-7-1-2. Enabling/disabling registration.....	35
4-7-1-3. Registering display orders.....	35
4-7-2. Saving and discarding edited tenants.....	35
4-7-3. Change confirmation.....	35
4-8. Indoor unit settings.....	36
4-8-1. Registering indoor units.....	37
4-8-1-1. Registering tenants.....	37
4-8-1-2. Registering distribution groups.....	37
4-8-1-3. Registering electric heater capacities.....	37
4-8-1-4. Registering indoor fans.....	37
4-8-1-5. Registering fixed capacities.....	37
4-8-1-6. Enabling/disabling registration.....	37
4-8-2. Saving and discarding edited indoor unit settings.....	38
4-8-3. Change confirmation.....	38
5. Supplementary Information	39
6. License Certification.....	34
7. Preparation	36
7-1. Installation.....	36
7-2. Display after restart.....	38
7-3. Settings.....	38
Reference.....	49

16. Intelligent Management System

Note

■ Precautions on Using This Product

★ IMPORTANT ★

- Before you can use the P-AIMS system, you need to first perform a work procedure called "license certification."
- Please perform the license certification referring to "6.License certification".
- Duplication of all or part of this software and documentation without the express consent of the holder of the rights to the above, and transfer of the software to another party, are prohibited by law.
- This software and manual are not to be reproduced, in whole or in part, without permission.
- In principle, each set of this software is purchased for use on a single computer.
- Please note that we bear no responsibility for any effects resulting from the use of this software and manual.
- Panasonic will not be liable for any claim based on errors in calculations of distribution ratios and utility usage caused by faults in this equipment or software.
- The specifications of this software, and the content of this manual, are subject to change without notice, for the sake of improvement.
- This software is used to calculate distribution ratios and charges according to the load ratios estimated for each indoor unit.
- It is not based on the Measurement Act, so it cannot be used for public transactions and similar purposes.
- The content of this manual is limited to explanation of how to use this software.
- It does not cover the usage methods for the operated machinery and optional features, or for the OS etc., so refer also to the relevant manuals for those elements.
- The screen image examples presented in this manual are intended to illustrate the explanation of layouts, and do not represent actual operating conditions. The tenant names displayed are also fictional.
- Displays and operations may differ from the examples in this manual, depending on versions of Excel and the OS used.
- Refer to "Please Read Before Use" for the warranty terms for this software.
- Panasonic will not be liable for any violation of the rights of any third party stemming from use of information in this manual, or for violation of other rights.
- Microsoft, Windows XP and Microsoft Excel are trademarks of Microsoft Corporation in the United States and other countries.
- Other product names are trademarks or registered trademarks of the corresponding companies.
- Other products are copyrights of the corresponding companies.

16. Intelligent Management System

1. Introduction

This distribution ratio software (referred to below as "the system") is intended to calculate distribution ratios, total values and charges in Air Conditioning Intelligent Management System (referred to below as the P-AIMS system).

This system is installed on the personal computer which runs the P-AIMS System (basic software).

It gathers data for each distribution group and tenant name, and calculates distribution ratios.

Data can be output as CSV files, which are readable by Microsoft Excel. Automatic output timing can be coordinated with the monthly cut-off day, but output is possible at any time.

2. Startup and exit

2-1. Startup

1. Double click on the P-AIMS shortcut on the desktop.




The window below appears. The system starts up and the Status/Operation screen is displayed.



2-2. Exit

1. From the Menu bar, select "Maintenance" - "Exit".

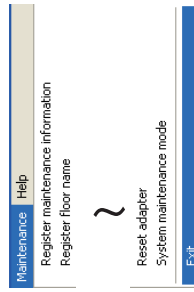

2. The Password authority 2 screen is displayed. Input the password.



3. The System Exit screen is displayed. Click on the button.



1

2

16. Intelligent Management System

3. Quick reference

Menu List

Main menu	1. Layout	Sub menu	Layout (options)
	2. List display		Status/Operation Filter sign & I/D unit information O/D unit information Operation/Status change log Alarm list & alarm log
1. Layout	3. Schedule	2. List display	Schedule/results Mode settings (Calendar) Schedule operation time Schedule operation time settings Update schedule
	4. Print		Print screen Excel output Auto EXCEL output setting Print list List print preview
2. List display	5. Distribution ratio	3. Schedule	T/S ON operation time Distribution ratio calculation Accumulated value Maintenance · Distribution ratio settings · Register distribution group name · Register-tenant name · Accumulated value master data · I/D unit settings
	6. Demand		Demand (optional)
3. Schedule	7. BACnet	4. Print	BACnet (optional)
	8. Facility Control		Facility Control (optional)
4. Print	9. Web	5. Distribution ratio	Web (optional)
	10. Maintenance		Register maintenance information Register floor name Register control group name Register schedule group name Register operator information R/C prohibition settings Clock settings Data backup/restore -Data backup -Restore data -Cancel data restore -Auto backup settings Register event Register I/D unit high/low-limit temperature Auxiliary settings O/D unit master data settings I/D unit master data settings Reset adapter System maintenance mode Exit

* indicates the security code protection screen.

4. Using the system

4-1. Print

4-1-1. Print screen

On the menu bar, select "Print" - "Print screen".




Print the currently-displayed screen. This menu cannot be selected on screens that cannot be printed.

Click on the button to print the screen.
Click on the button to exit without printing.

4-1-2. Excel output

On the menu bar, select "Print" - "Excel output".

Currently displayed data can be saved as a file in CSV format, which can be displayed by Microsoft Excel and similar applications. The data currently displayed on the screen becomes the file, so make sure the data to place in the file is displayed on the screen.

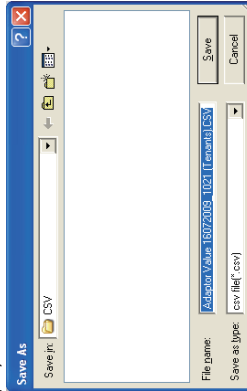

The file name is assigned automatically.

T/S ON Adaptor Value_16072009_1021(Tenants).CSV

Name DDMMYYYY hhmm

* This file is for T/S ON Adaptor Value.


Click on the button to save the file to the folder specified under "Save in".
Click on the button to exit without saving.

* Unless a different save folder has been specified, the saved file is saved to the folder Auto_CSV in the folder to which the P-AIMS system was installed (e.g. C:\P-AIMS).

16. Intelligent Management System

4-1-3. Setting for automatic Excel output

On the menu bar, select "Print" - "Auto EXCEL output setting".
 "Operation/Status change log" and "Alarm log" can be saved automatically, every day, in CSV format, which can be displayed in Microsoft Excel. Data is saved after midnight, so the data up to the previous day can be checked.

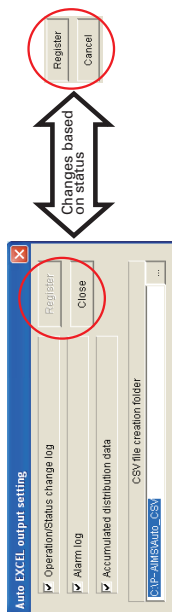

- Operation/Status change log
 - Alarm log
 - Accumulated distribution data
 - Register
 - Cancel
 - Close
 - ...
- :Specify the file to save the Operation/Status change log to.
 - :Specify how to save the alarm log files.
 - :Specify how to save files related to distribution ratios.
 - :Registers the set content.
 - :Reverts to the previously registered content.
 - :Closes the window.
 - :Changes the backup creation folder.

4-1-3-1. Settings for saving the operation/status log

To automatically save the "Operation/status change log" file, click on Operation/status change log, and add the check mark. Saving is enabled with the check mark added.

Click again to remove the check mark.
 The file name is assigned automatically. (Files are saved for each date).

Operation status change log_15072009_1.CSV
 Name DDMMYYYY Serial number

(* The serial number increments to 2 when there are over 60,000 items for the first file. Up to 400,000 items can be saved per day).

4-1-3-2. Settings for saving the alarm log

To automatically save the "Alarm log" file, click on Alarm log, and add the check mark. Saving is enabled with the check mark added. Click again to remove the check mark.
 The file name is assigned automatically. (Files are saved in one-month units).

Alarmlog_072009.CSV
 Name MMYYYY

4-1-3-3. Settings for saving distribution ratio data

To automatically save the "Distribution ratio-related" files, click on Accumulated distribution data, and add the check mark. Saving is enabled with the check mark added. Click again to remove the check mark.
 The file name is assigned automatically.

Accumulated value Total value_14062009 to 13072009.CSV
 Name Start date Cut-off date *1

Accumulated value Adaptor value_16072009_1026.CSV
 Name DDMMYYYY hmmm *2

Distribution Ratio calculation (*)_14062009 to 13072009.CSV**
 Name Start date Cut-off date *1

Tenant total (*)_14062009 to 13072009.CSV**
 Name Start date Cut-off date *1

Weigh. factor balance total (*)_14062009 to 13072009.CSV**
 Name Start date Cut-off date *1

Balance total (*)_14062009 to 13072009.CSV**
 Name Start date Cut-off date *1


TS ON operation time-Adaptor Value_16072009_1026.CSV
 Name DDMMYYYY hmmm *2

* The (***) portion within the file name is one of four patterns: Regular hours, Out of hours, Specified day and All hours.
 * *1 means that the results of collating data for one month are placed in a file, on every day after the cut-off date.
 *2 means data is placed in the file every day at the time displayed in the file name.

16. Intelligent Management System

4-1-3-4. Changing the CSV file creation folder for automatic Excel output

Click on the button to display the "Browse for Folder" screen, which can be used to change the folder in which files are saved. Click on the button to apply the selected save destination and return to the Auto Backup Settings screen. Click on the button to return to the Auto Backup Settings screen without doing anything.

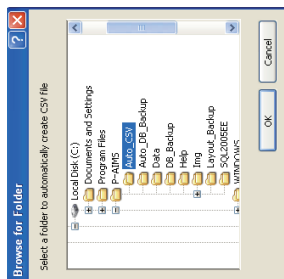

4-1-3-5. Registering settings

Click on the button to register the set content.

4-1-3-6. Deleting settings

Click on the button to delete the set content and revert to the previously registered content.

4-1-3-7. Deleting


Click on the button to close the Auto Backup Settings screen.

* The and buttons change to the button when settings are made. Clicking on the and buttons change them to the button.


* Unless a different save folder has been specified, automatic backup files are saved to the folder Auto_DB_Backup in the folder to which the P-AIMS system was installed (e.g. C:\P-AIMS).

4-1-3-8. What to do when data could not be saved

If an error occurs while the backup file is being saved, a red button marked "Auto Backup, Auto CSV ERR" is displayed in the upper right of the screen.

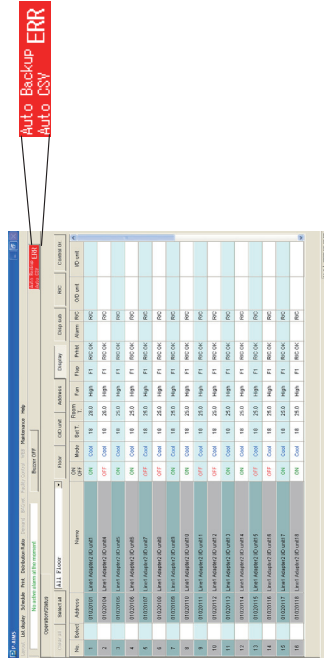

Click on the button to display the "Error log of Auto_DB_Backup & Auto_CSV_Backup" screen and the content of the error.

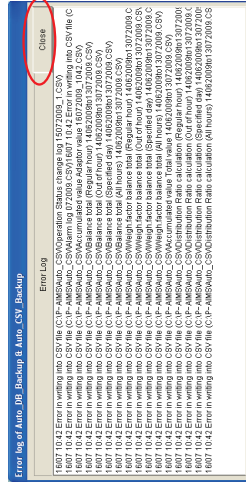

* If this Error button is displayed, an error may have occurred on the storage disk. Take appropriate action, with reference to the instruction manual for the device concerned.

16. Intelligent Management System

4-2. Operation time with thermostat on

[P Procedure]
On the menu bar, select "Distribution ratio" - "T/S ON operation time".

Thermostat data held by the adapter or indoor unit, or thermostat on/off times for the air conditioner are indicated. The time for each fan speed with the thermostat on is balanced in units of xx minutes, and the cumulative total of those balance values can be tabulated, as can the products of the values set for thermostat on time conversion coefficients of various settings multiplied by the fan speed conversion values.

- Adapter values
The thermostat on/off data held by each indoor unit communication adapter can be checked.

Unit No.	Model	Weighting Factor	Operation Time (min)	Balance Value (min)	Weighted Balance Value (min)
1	01000001	1.0000	100	100	100
2	01000002	1.0000	150	150	150
3	01000003	1.0000	200	200	200
4	01000004	1.0000	250	250	250
5	01000005	1.0000	300	300	300
6	01000006	1.0000	350	350	350
7	01000007	1.0000	400	400	400
8	01000008	1.0000	450	450	450
9	01000009	1.0000	500	500	500
10	01000010	1.0000	550	550	550
11	01000011	1.0000	600	600	600
12	01000012	1.0000	650	650	650
13	01000013	1.0000	700	700	700
14	01000014	1.0000	750	750	750
15	01000015	1.0000	800	800	800
16	01000016	1.0000	850	850	850
17	01000017	1.0000	900	900	900
18	01000018	1.0000	950	950	950
19	01000019	1.0000	1000	1000	1000
20	01000020	1.0000	1050	1050	1050

- Balance total
The balance is taken in units of xx minutes for each thermostat on fan speed held in the adapter or indoor unit, and the cumulative value of the balance values is displayed.

Unit No.	Model	Weighting Factor	Operation Time (min)	Balance Value (min)	Weighted Balance Value (min)
1	01000001	1.0000	100	100	100
2	01000002	1.0000	150	150	150
3	01000003	1.0000	200	200	200
4	01000004	1.0000	250	250	250
5	01000005	1.0000	300	300	300
6	01000006	1.0000	350	350	350
7	01000007	1.0000	400	400	400
8	01000008	1.0000	450	450	450
9	01000009	1.0000	500	500	500
10	01000010	1.0000	550	550	550
11	01000011	1.0000	600	600	600
12	01000012	1.0000	650	650	650
13	01000013	1.0000	700	700	700
14	01000014	1.0000	750	750	750
15	01000015	1.0000	800	800	800
16	01000016	1.0000	850	850	850
17	01000017	1.0000	900	900	900
18	01000018	1.0000	950	950	950
19	01000019	1.0000	1000	1000	1000
20	01000020	1.0000	1050	1050	1050

- Weighting factor balance total
The value set under Distribution ratio setting – Total data – Conversion factor, indoor unit capacity and cumulative time at each fan speed, are multiplied, then summed up and displayed.

Unit No.	Model	Weighting Factor	Operation Time (min)	Balance Value (min)	Weighted Balance Value (min)
1	01000001	1.0000	100	100	100
2	01000002	1.0000	150	150	150
3	01000003	1.0000	200	200	200
4	01000004	1.0000	250	250	250
5	01000005	1.0000	300	300	300
6	01000006	1.0000	350	350	350
7	01000007	1.0000	400	400	400
8	01000008	1.0000	450	450	450
9	01000009	1.0000	500	500	500
10	01000010	1.0000	550	550	550
11	01000011	1.0000	600	600	600
12	01000012	1.0000	650	650	650
13	01000013	1.0000	700	700	700
14	01000014	1.0000	750	750	750
15	01000015	1.0000	800	800	800
16	01000016	1.0000	850	850	850
17	01000017	1.0000	900	900	900
18	01000018	1.0000	950	950	950
19	01000019	1.0000	1000	1000	1000
20	01000020	1.0000	1050	1050	1050

Adapter Value
Balance total
Weighting factor balance total

Term setting
Tenants
I/D unit
T/S OFF details

- : Displays thermostat times.
- : Displays thermostat time balance total values.
- : Displays the weighting factor balance total values for thermostat times.
- : Use to specify the term for which to display values.
- : Selects the display order.
- : Displays details of thermostat off times.

- Address
: Displays the addresses of indoor units.
- Name
: Displays indoor unit names or tenant names.
- Tenant
: Displays tenant numbers.
- ON/High
: Displays the time of operation with the thermostat on and high fan speed.
- ON/Mid
: Displays the time of operation with the thermostat on and medium fan speed.
- ON/Low
: Displays the time of operation with the thermostat on and low fan speed.
- Total T/S ON
: Displays the total time of operation with the thermostat on and high, medium and low fan speed.
- OFF/High
: Displays the time of operation with the thermostat off and high fan speed. (If thermostat off detailed display is used)
- OFF/Mid
: Displays the time of operation with the thermostat off and medium fan speed. (If thermostat off detailed display is used)
- OFF/Low
: Displays the time of operation with the thermostat off and low fan speed. (If thermostat off detailed display is used)
- Total T/S OFF
: Displays the total time of operation with the thermostat off and high, medium and low fan speed.
- T/S ON + T/S OFF
: Displays the total operation time at all fan speeds, with the thermostat both on and off.
- Electric heater ON
: Displays the time of operation with the electric heater ON.

16. Intelligent Management System

4-2-1-3.

Detailed display with thermostats off

Details of thermostat off time are displayed on the list when the button has been clicked on and remains depressed.

T/S OFF details

* It is possible to use this in combination with adapter value, balance total and weighting factor balance total.

4-2-1-4.

How to specify the display range term

Click on the Term setting button to display the Term setting screen.

Click on the buttons on the right of the date display spaces to display the calendar.

Click on the calendar dates to select the term of data terms to display.

Refer to "4-3. Calendar" in the basic software operation manual for the calendar operation method.

Specify the start and end dates.

Alternatively, click on the Previous month or Current month button.

Previous month : The term is set to the month leading up to the cut-off date of the preceding month.

Current month : The term is set to the period from the day after the preceding cut-off date to the present.

Specify the display term and click on the OK button to begin data collation.

No other operations can be performed during data collation.

Wait...

Once data collation is complete, the balance total or the weighting factor balance total for the term is displayed.

To close the Term setting screen, click on the Cancel button.

* Use Distribution ratio - Maintenance - Indoor unit settings on the menu bar to assemble tenant groups and sort their display order.

* The fan speed conversion coefficients for weighting factor balance totals are set using Distribution ratio - Maintenance - Distribution ratio settings screen on the menu bar.

* Weighting factor balance : The total of balances calculated from the conversion coefficients for each fan speed and the capacities of indoor units, only for thermostat On (high, medium, low fan speed) time.

Weighting factor = (fan speed x fan speed conversion value) x indoor unit capacity

* The Adapter value display uses the same time (hhmm) as the adapter, but the Balance total and Weighting factor balance total displays use the time with minutes converted to the equivalent number of hours.

For example 3:30 becomes 3.50. (The same is true for Excel output, so this method is used to facilitate time calculations when the data is loaded into Excel).

4-2-1. Display method

4-2-1-1. Selecting the display type

The thermostat times are displayed when the Adapter Value button has been clicked on and remains depressed.

The thermostat time balance total value for the specified term is displayed when the Balance total button has been clicked on and remains depressed.

The weighting factor balance total value for thermostat time in the specified term is displayed when the Weight factor balance total button has been clicked on and remains depressed.

* Any button can be selected. It is not possible to select multiple buttons at the same time.

4-2-1-2. Sorting lists

Click on one of the sort buttons to change the display order of a list. The currently pressed button is the one which determines the sort order.

The list is displayed in tenant units when the Tenants button has been clicked on and remains depressed.

The list is displayed for individual indoor units when the ID unit button has been clicked on and remains depressed.

Click on the buttons to change the list orders.

* Any button can be selected. It is not possible to select multiple buttons at the same time.

* The order for sorting by tenant units is to display in order of tenant number.

16. Intelligent Management System

4-2-1-5. Specifying the time range

Click on the  button on the right of the term setting space to display the list of display types.

Term setting 01/06/2009 to 30/06/2009 **All hours** Select the type to display.

All hours	Regular hour : The time value set as the regular hours range setting on the Distribution Ratio Setting screen.
Out of hour	Out of hour : The value for time other than that set as the regular hours range setting on the Distribution Ratio Setting screen.
Specified day	Specified day : Days displayed in red on the calendar on the Distribution Ratio Setting screen.
All hours	All hours : All hours (including regular hours, out of hours and specified days) (0:00-24:00)

Once data collation is complete, the balance total or the weighting factor balance total for the term is displayed.

* If data has been collated for a specified term, the displayed data can be switched just by changing the display type.

4-2-1-6. Excel output

Currently displayed history can be saved as a file in CSV format, which can be displayed by Microsoft Excel and similar applications. Refer to "4-1-2 Excel output" for the operation method. The file name is assigned automatically.

- Adapter values

TS ON Adaptor Value 16072009_1056(Tenants).CSV
Name DDMYYYYY hmmm

- Balance total

TS ON Balance total 14062009to13062009 (All hours, Tenants).CSV
Name Specified display term Display type

- Weighting factor balance total

TS ON Weigh.factor balance total 14062009to13072009 (All hours, Tenants).CSV
Name Specified display term Display type

* Even if the screen display is set to display only T/S ON data, the output as CSV will include T/S OFF data.
* The worksheet name used for Excel can have up to 31 characters. If the CSV file name exceeds 31 characters, it is not possible to display all of them as the worksheet name.
* In Excel, it is not possible to calculate for times exceeding 10,000 hours, so balance total and weighting factor balance total are handled as numerical values. The unit is "hours".

16. Intelligent Management System

4-3. Distribution ratio calculation

On the menu bar, select "Distribution ratio" - "Distribution ratio calculation".
 The distribution ratio calculation for the air conditioner within the specified term is displayed. There are two types of distribution ratio calculation: Simple distribution and Load distribution. To switch between Simple distribution and Load distribution, select "Distribution ratio" - "Maintenance" - "Distribution ratio settings" from the menu bar and select Distrib. mode in the Distribution ratio settings dialog box.

*** Simple distribution**
 With simple distribution, the distribution can be set for outdoor unit electricity and for indoor unit electricity. Make settings under "Distribution ratio" - "Maintenance" - "Distribution ratio settings" on the menu bar. Gas distribution for outdoor units is performed automatically.
*** Load distribution**
 With load distribution, it is not possible to set electricity distributions for individual indoor units. We recommend use of simple distribution if it is necessary to distribute electricity between indoor units.

4-3-1. Screen display

4-3-1-1. Simple distribution

Tenant calculation
 If multiple distribution groups are registered for a given tenant, the same tenant name is displayed for each distribution group, so it is necessary to recalculate for each tenant. Click on the **TenantTotal** button to calculate for each tenant.

No.	Name	Distribution Ratio	Total
1	Tenant1	0.00	113300
2	Tenant2	0.00	190000
3	Tenant3	0.00	100000
4	Tenant4	0.00	100000
5	Tenant5	0.00	100000
6	Tenant6	0.00	100000
7	Tenant7	0.00	100000
8	Tenant8	0.00	100000
9	Tenant9	0.00	100000
10	Tenant10	0.00	100000
11	Tenant11	0.00	100000
12	Tenant12	0.00	100000
13	Tenant13	0.00	100000
14	Tenant14	0.00	100000
15	Tenant15	0.00	100000
16	Tenant16	0.00	100000
17	Tenant17	0.00	100000
18	Tenant18	0.00	100000
19	Tenant19	0.00	100000
20	Tenant20	0.00	100000
21	Tenant21	0.00	100000
22	Tenant22	0.00	100000
23	Tenant23	0.00	100000
24	Tenant24	0.00	100000
25	Tenant25	0.00	100000
26	Tenant26	0.00	100000
27	Tenant27	0.00	100000
28	Tenant28	0.00	100000
29	Tenant29	0.00	100000
30	Tenant30	0.00	100000
31	Tenant31	0.00	100000
32	Tenant32	0.00	100000
33	Tenant33	0.00	100000
34	Tenant34	0.00	100000
35	Tenant35	0.00	100000
36	Tenant36	0.00	100000
37	Tenant37	0.00	100000
38	Tenant38	0.00	100000
39	Tenant39	0.00	100000
40	Tenant40	0.00	100000
41	Tenant41	0.00	100000
42	Tenant42	0.00	100000
43	Tenant43	0.00	100000
44	Tenant44	0.00	100000
45	Tenant45	0.00	100000
46	Tenant46	0.00	100000
47	Tenant47	0.00	100000
48	Tenant48	0.00	100000
49	Tenant49	0.00	100000
50	Tenant50	0.00	100000

* On the Tenant Calculation screen, it is not possible to display tenant units, individual indoor units and basic data.

Individual indoor units
 Distribution ratios for electricity and gas are displayed for individual indoor units.

No.	Name	Distribution Ratio	Total
1	Tenant1	0.00	113300
2	Tenant2	0.00	190000
3	Tenant3	0.00	100000
4	Tenant4	0.00	100000
5	Tenant5	0.00	100000
6	Tenant6	0.00	100000
7	Tenant7	0.00	100000
8	Tenant8	0.00	100000
9	Tenant9	0.00	100000
10	Tenant10	0.00	100000
11	Tenant11	0.00	100000
12	Tenant12	0.00	100000
13	Tenant13	0.00	100000
14	Tenant14	0.00	100000
15	Tenant15	0.00	100000
16	Tenant16	0.00	100000
17	Tenant17	0.00	100000
18	Tenant18	0.00	100000
19	Tenant19	0.00	100000
20	Tenant20	0.00	100000
21	Tenant21	0.00	100000
22	Tenant22	0.00	100000
23	Tenant23	0.00	100000
24	Tenant24	0.00	100000
25	Tenant25	0.00	100000
26	Tenant26	0.00	100000
27	Tenant27	0.00	100000
28	Tenant28	0.00	100000
29	Tenant29	0.00	100000
30	Tenant30	0.00	100000
31	Tenant31	0.00	100000
32	Tenant32	0.00	100000
33	Tenant33	0.00	100000
34	Tenant34	0.00	100000
35	Tenant35	0.00	100000
36	Tenant36	0.00	100000
37	Tenant37	0.00	100000
38	Tenant38	0.00	100000
39	Tenant39	0.00	100000
40	Tenant40	0.00	100000
41	Tenant41	0.00	100000
42	Tenant42	0.00	100000
43	Tenant43	0.00	100000
44	Tenant44	0.00	100000
45	Tenant45	0.00	100000
46	Tenant46	0.00	100000
47	Tenant47	0.00	100000
48	Tenant48	0.00	100000
49	Tenant49	0.00	100000
50	Tenant50	0.00	100000

Tenant units
 Distribution ratios for electricity and gas are displayed for tenant units.

No.	Name	Distribution Ratio	Total
1	Tenant1	0.00	113300
2	Tenant2	0.00	190000
3	Tenant3	0.00	100000
4	Tenant4	0.00	100000
5	Tenant5	0.00	100000
6	Tenant6	0.00	100000
7	Tenant7	0.00	100000
8	Tenant8	0.00	100000
9	Tenant9	0.00	100000
10	Tenant10	0.00	100000
11	Tenant11	0.00	100000
12	Tenant12	0.00	100000
13	Tenant13	0.00	100000
14	Tenant14	0.00	100000
15	Tenant15	0.00	100000
16	Tenant16	0.00	100000
17	Tenant17	0.00	100000
18	Tenant18	0.00	100000
19	Tenant19	0.00	100000
20	Tenant20	0.00	100000
21	Tenant21	0.00	100000
22	Tenant22	0.00	100000
23	Tenant23	0.00	100000
24	Tenant24	0.00	100000
25	Tenant25	0.00	100000
26	Tenant26	0.00	100000
27	Tenant27	0.00	100000
28	Tenant28	0.00	100000
29	Tenant29	0.00	100000
30	Tenant30	0.00	100000
31	Tenant31	0.00	100000
32	Tenant32	0.00	100000
33	Tenant33	0.00	100000
34	Tenant34	0.00	100000
35	Tenant35	0.00	100000
36	Tenant36	0.00	100000
37	Tenant37	0.00	100000
38	Tenant38	0.00	100000
39	Tenant39	0.00	100000
40	Tenant40	0.00	100000
41	Tenant41	0.00	100000
42	Tenant42	0.00	100000
43	Tenant43	0.00	100000
44	Tenant44	0.00	100000
45	Tenant45	0.00	100000
46	Tenant46	0.00	100000
47	Tenant47	0.00	100000
48	Tenant48	0.00	100000
49	Tenant49	0.00	100000
50	Tenant50	0.00	100000

:Use to specify the term for which to display values.

:Calculate in tenant units.

:Selects the display order.

:Displays basic data.

Term setting
Tenant Total
Tenants
ID Unit
Basic data

Key

Simple distribution

- Address
 - Name
 - Tenant
 - O/D Distr.
 - WF:T/S ON time
 - *1 • WF:T/S ON/OFF
 - *2 • O/D Elec. ratio (%)
 - *2 • O/D Elec. usage (kWh)
 - *2 • O/D Elec. cost (£)
 - *3 • O/D Gas ratio (%)
 - *3 • O/D Gas usage (m³)
 - *3 • O/D Gas. cost (£)
- :Displays the addresses of indoor units.
 - :Displays indoor unit names or tenant names.
 - :Displays tenant group numbers.
 - :Displays distribution group numbers for outdoor units.
 - :Displays weighted thermostat On operation times. (When basic data is displayed)
 - :Displays the total weighted thermostat On and Off operation times. (When basic data is displayed)
 - :When used with PAC, the distribution ratio for each distribution group is calculated on the basis of thermostat On operation time.
 - :The electricity used during thermostat On time is calculated from the electricity distribution ratio.
 - :The amount of electricity used is multiplied by the price rate of electric power to calculate the charge. (Calculated for charges within the same price band).
 - :The distribution rate for each distribution group is calculated, on the basis of the thermostat On operation time, and displayed. (Only for GHP systems)
 - :The amount of gas used is calculated from the distribution ratio within the thermostat On operation time. (Only for GHP systems)
 - :Calculated by multiplying the gas usage by the price rate of gas. (Calculated for charges within the same price band).

16. Intelligent Management System

- *4 • I/D Distr :Displays distribution group numbers for indoor units.
- *4 • I/D Elec. ratio (%) :The distribution ratio for each indoor distribution group is calculated on the basis of weighted thermostat On and Off times.
- *4 • I/D Elec. usage (kWh) :The electricity used during thermostat On time is calculated from the indoor electricity distribution ratio.
- *4 • I/D Elec. cost (£) :The amount of electricity used indoors is multiplied by the price rate of electric power to calculate the charge.(Calculated for charges within the same price band).
- *4 • Total Elec. Usage (kWh) :The total electricity used by the outdoor units and indoor units is displayed.
- *4 • Total cost (£) :The total of the electricity charge and gas charge is displayed.

*1: This is displayed when the Basic data button is pressed.
 *2: This is displayed when Yes is selected for Outdoor electricity distribution under Distribution ratio settings.
 *3: This is displayed if GHP is used.
 *4: This is displayed when Yes is selected for indoor electricity distribution under Distribution ratio settings.
 * Use "Distribution ratio" - "Maintenance" - "I/D unit master data settings" screen to assemble the indoor unit included within tenant groups.

4-3-1-2. Load distribution

- Tenant calculation
 If multiple distribution groups are registered for a given tenant, the same tenant name is displayed for each distribution group, so it is necessary to recalculate for each tenant. Click on the **Tenant Total** button to calculate for each tenant.

No.	Address	Name	I/D Elec. Ratio	I/D Elec. Usage	I/D Elec. Cost	Total Elec. Usage
1	Tenant 1	Tenant 1	0.00	0.00	0.00	0.00
2	Tenant 2	Tenant 2	0.00	0.00	0.00	0.00
3	Charge group 1	Charge group 1	0.00	0.00	0.00	0.00
4	Charge group 2	Charge group 2	0.00	0.00	0.00	0.00
5	Charge group 3	Charge group 3	0.00	0.00	0.00	0.00
6	Charge group 4	Charge group 4	0.00	0.00	0.00	0.00
7	Charge group 5	Charge group 5	0.00	0.00	0.00	0.00
8	Charge group 6	Charge group 6	0.00	0.00	0.00	0.00

- Individual indoor units
 Distribution ratios for electricity and gas are displayed for individual indoor units.

Distribution method display

Balance total calculation term specification

Basic data display

Display for individual indoor units

Distribution method display

Calculation term specification

Basic data display

Display for tenant units

- Tenant units
 Distribution ratios for electricity and gas are displayed for tenant units.

- Term setting** :Use to specify the term for which to display values.
- Tenant Total** :Calculate in tenant units.
- Tenants** :Selects the display order.
- ID unit** :Displays basic data.

Key

- Load distribution**
 - Address :Displays the addresses of indoor units.
 - Name :Displays indoor unit names or tenant names.
 - Tenant :Displays tenant group numbers.
 - O/D Distr :Displays distribution group numbers for outdoor units.
- *1 • Electric operation :Displays the electrical operation capacity.
- *1 • Gas operation capacity :Displays the gas operation capacity.
- *1 • O/D Elec ratio (%) :Distribution ratios are calculated for each distribution group, based on the load distribution specification of each PAC Espira, PAC Multi and GHP.
- O/D Elec usage (kWh) :The electricity used during thermostat On time is calculated from the electricity distribution ratio.
- O/D Elec cost (£) :The amount of electricity used is multiplied by the price rate of electric power to calculate the charge.
- *2 • O/D Gas ratio (%) :Distribution ratio for each distribution group are calculated on the basis of load distribution specifications.
- *2 • O/D Gas usage (m³) :The amount of gas used is calculated from the gas distribution ratio.
- O/D Gas cost (£) :Only for GHP systems
 :Calculated by multiplying the gas usage by the price rate of gas.
- Total cost (£) :Calculated for charges within the same price band.
 :The total of the electricity charge and gas charge is displayed.

*1: This is displayed when the Basic Data button is pressed.
 *2: This is displayed if GHP is used.
 * : Use Distribution ratio - Maintenance - I/D Unit Settings screen to assemble the indoor unit included within tenant groups.



16. Intelligent Management System

4-3-2. Display method 4-3-2-1. Selecting the display type

When the button has been clicked on and remains depressed, the total distribution calculation ratios are displayed for tenant units.

When the button has been clicked and does not remain depressed, the distribution ratio is calculated depending on the pressed status of the following buttons.

When the button has been clicked on and the "I/D unit" remains depressed, the distribution calculation ratios are displayed for indoor units.

When the button has been clicked on and the "Tenants" remains depressed, the distribution calculation ratios are displayed for tenant units.

* When you first access this screen, the display shows the previously specified term.

* If the display type is switched after the display term has been specified, it will be possible to display tenant total, indoor units and tenant units for the specified term.

4-3-2-2. How to specify the display range term

Click on the button to display the Term Setting screen.

Click on the buttons on the right of the date display spaces to display the calendar.

Click on the calendar dates to select the term of data items to display.

Refer to "4.3 Calendar" in the basic software operation manual for the calendar operation method.

Specify the start and end dates.

Alternatively, click on the or button.

The term is set to the month leading up to the cutoff date of the preceding month.

The term is set to the period from the day after the preceding cutoff date to the present.

Specify the display term and click on the button to begin data collation.

Wait...

No other operations can be performed during data collation.

Once data collation is complete, the balance total or the weighting factor balance total for the term is displayed. To close the Term Setting screen, click on the button.

4-3-2-3. Specifying the time range

Click on the button on the right of the term setting space to display the list of display types.

The results are displayed once data calculation is complete.

* If data has been calculated for a specified term, the displayed data can be switched just by changing the display type.

4-3-3. Printing 4-3-3-1. Print screen

Refer to "4-1-1 Print screen" for details of how to operate this screen.

4-3-3-2. Excel output

Currently displayed history can be saved as a file in CSV format, which can be displayed by Microsoft Excel and similar applications.


Refer to "4-1-2 Excel output" for the operation method.

The file name is assigned automatically.

• Tenant calculation


Distr. Ratio 01072009to16072009 (All hours, Tenant Total).CSV
Name Specified display term Display type

16. Intelligent Management System

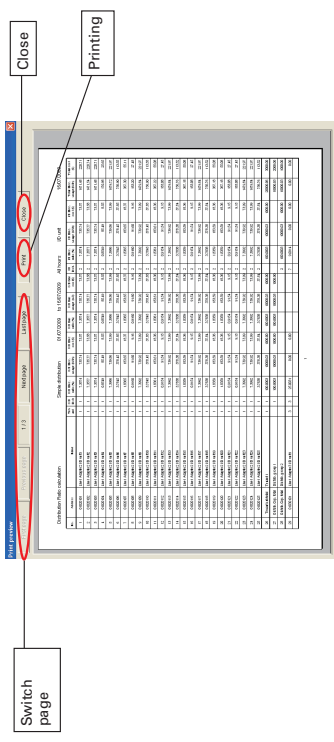

- First page** : Move to the first page.
- Previous page** : Move to the preceding page.
- 1 / 3** : The current displayed page number / the total number of pages
- Next page** : Move to the next page.
- Last page** : Move to the last page.
- Print** : Specify a range to print out.
- Close** : Closes the window.

• Printing
 Click on the **Print** button to display the dialog box for specifying the print range.
 The dialog box can be used to specify the range that will be printed.

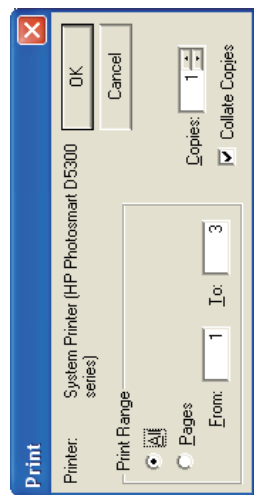

The default printer (*****) will use (*****).
 Print all pages or specify which pages to print in the Print Range.
 Under Copies, specify the number of copies to print.
 Click on the [OK] button to start printing.
 Click on the [Cancel] button to close the dialog box.

- Individual indoor units
 Distr. Ratio_01072009to16072009 (All hours, ID unit).CSV
 Name Specified display term Display type

The screenshot shows a spreadsheet with columns for 'DISTR. RATIO', 'I/D UNIT', 'DISTR. RATIO', 'I/D UNIT', 'DISTR. RATIO', 'I/D UNIT', 'DISTR. RATIO', 'I/D UNIT', 'DISTR. RATIO', 'I/D UNIT'. It contains 24 rows of data.

- Tenant units
 Distr. Ratio_01072009to16072009 (All hours, Tenants).CSV
 Name Specified display term Display type

The screenshot shows a spreadsheet with columns for 'DISTR. RATIO', 'I/D UNIT', 'DISTR. RATIO', 'I/D UNIT', 'DISTR. RATIO', 'I/D UNIT', 'DISTR. RATIO', 'I/D UNIT', 'DISTR. RATIO', 'I/D UNIT'. It contains 24 rows of data.

4-3-3-3. Print list
 [Procedure]
 On the menu bar, select "Print" – "Print list".
 This is only enabled on the I/D unit distribution ratio calculation screen.
 This prints out the table of I/D unit distribution ratio calculation, as displayed on the screen. The printed range is the entire page. Other tables cannot be printed.

4-3-3-4. List print preview
 [Procedure]
 On the menu bar, select "Print" – "List print preview".
 This is only enabled on the I/D unit distribution ratio calculation screen.
 This displays a print preview of the table of I/D unit distribution ratio calculation, as displayed on the screen. Other tables cannot be printed.

16. Intelligent Management System

3

- Total value
This displays the total value of accumulated pulses on the adapter over the specified term.

Term total value

Displayed gas

Total value term specification

- Key**
- Address
 - Name
 - Distr
 - Type
 - All hours
 - Regular hour
 - Out of hour
 - Specified day
- :Displays the addresses of indoor units.
 - :Displays the names of accumulated pulse meters.
 - :Displays distribution group numbers.
 - :Displays the types of pulse meter.
 - :Displays the meter values for all hours (regular hours, out of hours and special days) within the specified term.
 - :Displays the time value set as the Regular hour range settings on the Distribution Ratio Setting screen.
 - :Displays the time value set as the out of Regular hour range settings on the Distribution Ratio Setting screen.
 - :Displays days for which the calendar display is set to red on the Distribution Ratio Setting screen.
(0:00-24:00)

* Register accumulated value meters under "Distribution ratio" - "Maintenance" - "Accumulated value" screen on the menu bar.
 * The current value is updated at 15-minute intervals.
 * Meter values are displayed as the total of an arbitrary value plus balance data.
 * Make settings for special days and regular hours under "Distribution ratio" - "Maintenance" - "Distribution Ratio Settings" screen on the menu bar.

- Form printing

Distributor Rate overview		Sleep duration		01:00:00		In 16:00:00		All hours		16:07:00	
No.	Address	Name	Distr.	Type	All hours	In 16:00:00	Out 16:00:00	All hours	In 16:00:00	Out 16:00:00	All hours
1	10000001	1st FLOOR	1	1	10000	10000	10000	10000	10000	10000	10000
2	10000002	2nd FLOOR	2	2	20000	20000	20000	20000	20000	20000	20000
3	10000003	3rd FLOOR	3	3	30000	30000	30000	30000	30000	30000	30000
4	10000004	4th FLOOR	4	4	40000	40000	40000	40000	40000	40000	40000
5	10000005	5th FLOOR	5	5	50000	50000	50000	50000	50000	50000	50000
6	10000006	6th FLOOR	6	6	60000	60000	60000	60000	60000	60000	60000
7	10000007	7th FLOOR	7	7	70000	70000	70000	70000	70000	70000	70000
8	10000008	8th FLOOR	8	8	80000	80000	80000	80000	80000	80000	80000
9	10000009	9th FLOOR	9	9	90000	90000	90000	90000	90000	90000	90000
10	10000010	10th FLOOR	10	10	100000	100000	100000	100000	100000	100000	100000
11	10000011	11th FLOOR	11	11	110000	110000	110000	110000	110000	110000	110000
12	10000012	12th FLOOR	12	12	120000	120000	120000	120000	120000	120000	120000
13	10000013	13th FLOOR	13	13	130000	130000	130000	130000	130000	130000	130000
14	10000014	14th FLOOR	14	14	140000	140000	140000	140000	140000	140000	140000
15	10000015	15th FLOOR	15	15	150000	150000	150000	150000	150000	150000	150000
16	10000016	16th FLOOR	16	16	160000	160000	160000	160000	160000	160000	160000
17	10000017	17th FLOOR	17	17	170000	170000	170000	170000	170000	170000	170000
18	10000018	18th FLOOR	18	18	180000	180000	180000	180000	180000	180000	180000
19	10000019	19th FLOOR	19	19	190000	190000	190000	190000	190000	190000	190000
20	10000020	20th FLOOR	20	20	200000	200000	200000	200000	200000	200000	200000
21	10000021	21st FLOOR	21	21	210000	210000	210000	210000	210000	210000	210000
22	10000022	22nd FLOOR	22	22	220000	220000	220000	220000	220000	220000	220000
23	10000023	23rd FLOOR	23	23	230000	230000	230000	230000	230000	230000	230000
24	10000024	24th FLOOR	24	24	240000	240000	240000	240000	240000	240000	240000
25	10000025	25th FLOOR	25	25	250000	250000	250000	250000	250000	250000	250000
26	10000026	26th FLOOR	26	26	260000	260000	260000	260000	260000	260000	260000
27	10000027	27th FLOOR	27	27	270000	270000	270000	270000	270000	270000	270000
28	10000028	28th FLOOR	28	28	280000	280000	280000	280000	280000	280000	280000
29	10000029	29th FLOOR	29	29	290000	290000	290000	290000	290000	290000	290000
30	10000030	30th FLOOR	30	30	300000	300000	300000	300000	300000	300000	300000

4-4. Accumulated value

- Procedure
- On the menu bar, select "Distribution ratio" - "Accumulated value".

The accumulated values from the electricity and gas meters connected to the adapter are displayed.
 • Adapter values
 This displays the current value of the adaptor's accumulated pulses.

Adapter values

- Key**
- Address
 - Name
 - Distr.
 - Type
 - Adapter value
 - Meter value
- :Displays the addresses of indoor units.
 - :Displays the names of accumulated pulse meters.
 - :Displays distribution group numbers.
 - :Displays the types of pulse meter.
 - :Displays the current values of the adapters on the pulse meter.
 - :This displays the value with the addition of balance data between an arbitrary value for the pulse meter and the adapter value.

16. Intelligent Management System


4-4-1. Display method 4-4-1-1. Selecting the display type

The adaptor values and meter values are displayed when the **Adaptor value** button has been clicked on and remains depressed. The total of meter values for the specified term is displayed when the **Total value** button has been clicked on and remains depressed.

* Any button can be selected. It is not possible to select multiple buttons at the same time.

4-4-1-2. Term setting (term total value)

Click on the **Term setting** button to display the Term setting screen.

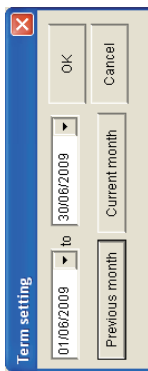

Click on the **Previous month** button on the right of the date display spaces to display the calendar. Click on the calendar dates to select the term of data items to display. Refer to "4.3 Calendar" in the basic software operation manual for the calendar operation method.

Specify the start and end dates.

Alternatively, click on the **Previous month** or **Current month** button.

Previous month: The term is set to the month leading up to the cutoff date of the preceding month.

Current month: The term is set to the period from the day after the preceding cutoff date to the present.


Specify the display term and click on the **OK** button to begin data collation.



No other operations can be performed during data collation.

Once data collation is complete, the balance total or the weighting factor balance total for the term is displayed. To close the Term Setting screen, click on the **Cancel** button.

4-4-1-3. Display selection for the gas calculation method



Display when **Total Gas** is selected. Display of items that are inapplicable when **Gas for A/C** or **Gas for Generator** is selected.

No.	Address	Name	Distr.	Type	All hours	Regular hour	Out of hour	Specified day
1	C010201	Line1 Adaptor2 PulseCounter1	1	Gas	31629 m3	31629 m3	0 m3	0 m3
2	C010202	Line1 Adaptor2 PulseCounter2	1	Elec.	31629 kWh	31629 kWh	0 kWh	0 kWh
3	C010203	Line1 Adaptor2 PulseCounter3	2	Power Consumption	0 m3	0 m3	0 m3	0 m3

Display of only items that are applicable when **Gas** for **A/C** or **Gas for Generator** is selected.

4-4-2.

Changing the meter value

Move the cursor to the row to change the meter value for, then right click to display the Meter Value Settings menu and click on it.

Elec.	12100 kWh	Meter value settings	12600 kWh
Elec.	12600 kWh		

The password screen appears, so input password level 2.



The Meter value settings screen appears. Use it to change the Meter pulse count.

After completing the change, click on the **OK** button to update the data.

Click on the **Cancel** button to revert to the data from before the change.

Click on the **Close** button to close the Meter value settings screen.

16. Intelligent Management System

4-5. Distribution ratio setting

- [Procedure]
- On the menu bar, select "Distribution ratio" - "Maintenance" - "Distribution ratio settings".
- (Password level 1)

Make settings for Distribution mode, Specified days, Regular hour range setting, Cut-off days, Conversion factors and charge Price rate.

4-5-1. Setting distribution method

Set the distribution method. If the air conditioner is compatible with new distribution, loaded distribution can be selected for the calculation, but calculation will be disabled if it is selected with a non-compatible air conditioner. In that case, select simple distribution. For details of the distribution methods, refer to the distribution ratio calculation methods in the Reference appendix to the manual. For more information, contact your dealer or service provider.

When Simple Distribution is selected When Loaded Distribution is selected

Distrib. mode	<input checked="" type="radio"/> Simple	<input type="radio"/> Load
Gas distrib/Gen	<input checked="" type="radio"/> Yes	<input type="radio"/> No
Charge tenant	<input checked="" type="radio"/> Yes	<input type="radio"/> No
Billing method	<input checked="" type="radio"/> Distrib. ratio	<input type="radio"/> ID unit capacity
Energy saving distrib.	<input checked="" type="radio"/> The number of ID	<input type="radio"/> O/D system
O/D ele. Distr.	<input checked="" type="radio"/> Distrib. group	<input type="radio"/> Yes
ID ele. Distr.	<input checked="" type="radio"/> Yes	<input type="radio"/> No

4-4-3. Printing

4-4-3-1. Print screen

Refer to "4-1-1 Print screen" for details of how to operate this screen.

4-4-3-2. Excel output

Currently displayed history can be saved as a file in CSV format, which can be displayed by Microsoft Excel and similar applications. Refer to "4-1-2 Excel output" for the operation method. The file name is assigned automatically.

Accumulated value Total value 01072009to16072009.CSV

Name Display type Specified display term


16. Intelligent Management System

Energy saving distrib. O/D system
 Dis trib. group

: Select whether operating efficiency improvements achieved by running energy-saving model, such as 3-way systems or ice heat accumulation, should be shared only within the system concerned or shared throughout the distribution group, which also includes ordinary model.

4-5-2. Editing specified day

4-5-2-1. Changing the calendar



Click on the button to display the preceding month.
 Click on the button to display the next month.
 Click on the button to return to the current month.

4-5-2-2. Setting specified day

To set a day as a specified day, click on the day. Its color will change to . Click again to cancel the setting. The color for that day reverts to .

4-5-3. Setting the regular hour range settings

4-5-3-1. Setting enable/disable for the regular hour range

To enable the setting for the regular hour range, click on Regular hour Valid, and add the check mark. Click there again to remove the check mark, disabling the setting.

4-5-3-2. Setting times for Regular hour

Set the start and end times for Regular hours.
 To set times, click on the button next to the hour or minute of the .
 A dropdown list of 0-23 is displayed for the hour, and of 0, 30 for the minutes.
 Use them to select the right time.



4-5-4. Setting accumulated data

4-5-4-1. Setting the cut-off day

Set the monthly cut-off day for accumulated data. Click on the button to the right of the cut-off day to display a drop-down list offering 1-28 and month end. Select the right date.
 If the cut-off date is set to "20", one month's data is from the 21st of the preceding month to the 20th of the current month, and the accumulated data is calculated accordingly.
 * Among the accumulated distribution data set under Automatic Excel Output, the files related to cut-off date are created on the day after the cut-off date set here.



4-5-1-1. Selecting distribution method

Distrib. mode Simple Load
 : Select simple distribution or load distribution.

4-5-1-2. Settings for simple distribution

The following can be selected when simple distribution is used.

- OID ele. Distr. Yes No
 : Sets whether or not to use simple distribution for outdoor unit electricity.
 Yes : Use simple distribution for outdoor unit electricity.
 No : Do not use simple distribution for outdoor unit electricity.
- I/D ele. Distr. Yes No
 : Sets whether or not to use simple distribution for indoor unit electricity.
 Yes : Use simple distribution for indoor unit electricity.
 No : Do not use simple distribution for indoor unit electricity.

* The distribution of electricity for indoor units and outdoor units can be calculated separately for individual distribution groups.(This function is only for simple distribution).

4-5-1-3. Settings for load distribution

The following can be selected when load distribution is used.


- Gas distr. w/Gen Yes No
 : Select whether or not to distribute gas used for power generation.
 Yes : Gas for air conditioning and gas for power generation will be separated.
 No : All gas will be treated as air conditioning gas, without distinction between gas for air conditioning and gas for power generation.
- Charge tenant Yes No
 : Select whether or not to bill tenants for gas used for power generation.
 Yes : Gas used for power generation will also be calculated for the tenants.
 No : Gas used for power generation will not be calculated for the tenants. (In that case, the amount of gas used for power generation will not be calculated, and will be at the expense of the owner.)
- Billing method Distrib. ratio I/D unit capacity The number of I/D
 : Specify the distribution method to use for gas for power generation. Add gas for air conditioning to the power generation gas distributed to tenants.
 Distrib. ratio : Assign it to each tenant proportionally to their distribution ratio.
 I/D unit capacity : Assign it to each tenant proportionally to the total capacity of indoor units included for that tenant. If the tenant has a smaller number of units, but of larger capacity, it will be assigned more than others.
 The number of I/D : Assign it to each tenant proportionally to the total number of indoor units included for that tenant. This method is unrelated to the size of indoor units. Even if the indoor units are of high capacity, the amount assigned to the tenant will be smaller than others if the number of units is lower.

16. Intelligent Management System

4-5-4-2.

Setting conversion factor

When calculating the distribution for the weighting factor balance total, applying weighting according to fan speeds.

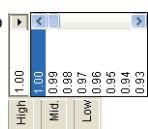

Click on the button to the right of High, Mid, and Low.

Drop down lists showing the range 1.00-0.50 in steps of 0.01 are displayed, so select the relevant coefficients.


For example, if High is set to 1.00 and Mid, to 0.80, the distribution calculation would apply a 20% lower weighting to operation at medium fan speed than to operation at high fan speed.

4-6. Register distribution group name

(Procedure)

On the menu bar, select "Distribution ratio" - "Maintenance" - "Register distribution group name" - (Password level 1)

Distribution groups can be added and deleted. Distribution groups must be registered on this screen before they can be selected on the Accumulated Value master and the Indoor Unit master.

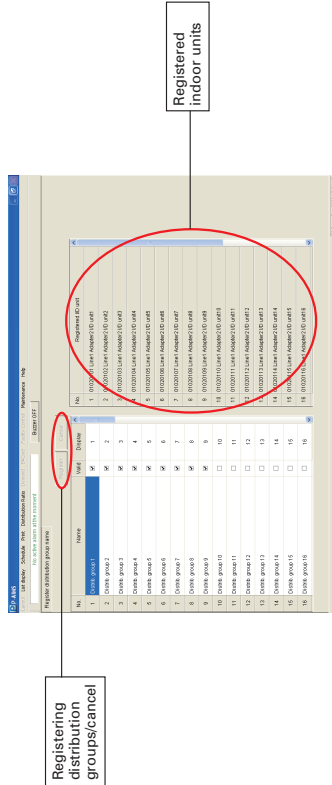

4-5-5.

Registering unit prices

4-5-5-1. Registering Price rate of electric power

Set Price rate of electric power. The distribution ratios, calculated using simple distribution or Load distribution, are multiplied by the electricity usage calculated from the power quantity from the pulse meter, and then by the electricity unit price to produce the charge for each tenant.

Unit price can be set in the range 0.000-9.999€/kWh.

If the time zone totals calculation function is used for the calculation, separate unit prices are set for regular hours, out of hours, and specified days, so it is possible to set, for example, a slightly higher rate for out of hours usage, to vary the level of billing with the time zone. Conversely, if the unit price was set for "All hours", a single calculation can be performed, regardless of time zones.

The results of these two calculation types are displayed together in the "All hours" list.

3-386

4-5-5-2.

Registering Price rate of gas cost

Set the unit price for gas charges. The distribution ratios, calculated using simple distribution or Load distribution, are multiplied by the gas usage calculated from the gas quantity from the pulse meter, and then by the gas unit price to produce the charge for each tenant.

Unit price can be set in the range 0.000-9.999€/m³.

If the time zone totals calculation function is used for the calculation, separate unit prices are set for regular hours, out of hours, and special days, so it is possible to set, for example, a slightly higher rate for out of hours usage, to vary the level of billing with the time zone. Conversely, if the unit price was set for "All hours", a single calculation can be performed, regardless of time zones.

The results of these two calculation types are displayed together in the "All hours" list.

4-5-6.

Registering settings

4-5-6-1. Registering settings

Click on the button to register the set content.

4-5-6-2.

Deleting settings

Click on the button to delete the set content and revert to the previously registered content.

4-5-6-3.

Deleting

Click on the button to close the Distribution Ratio Settings screen.

31

32

Register

Cancel

Key

- Name
- Valid
- Display
- Registered I/D unit

: Register settings.

: Revert to the previously registered state.

: Displays distribution group names.

: Sets enabled/disabled.

: Displays the order in which the distribution groups are displayed.

: This displays the names and other information on the indoor units that have been registered to the distribution group concerned.


* If the display order numbers are the same, tenants in the same distribution group will be displayed ahead of other tenants. In that case, the display order will be as specified in the tenant name registration.

16. Intelligent Management System

4-7. Register tenant name

- [Procedure]
- On the menu bar, select "Distribution ratio" - "Maintenance" - "Register tenant name".
- (Password level 1)

Register tenant names.

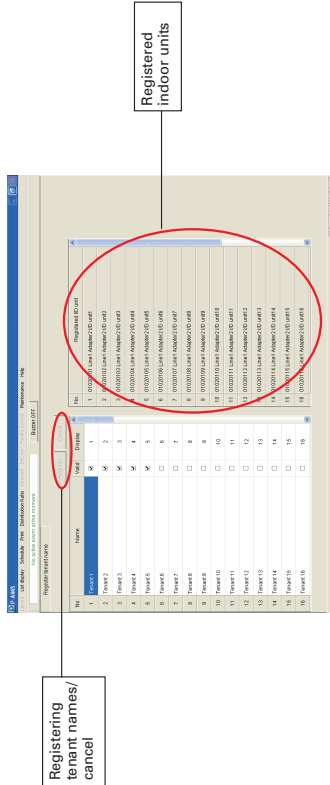

Registering tenant names/
Cancel

Register
Cancel

: Register settings.
: Revert to the previously registered state.

Key

- Name : Displays the name of the billed party (the tenant) for the invoice.
- Valid : Sets enabled/disabled.
- Display : Indicates the order in which tenants are displayed on the list screen.
- Registered I/D unit : Displays the names and other information on the indoor units that have been registered to the tenant name concerned.

* If the display order numbers for the distribution group are the same, the tenant in the same distribution group will be displayed ahead of the other tenant. In that case, the display order will be as specified in the tenant name registration.

4-6-1. Editing distribution group names

To register distribution group names, input the registered names in the item cells to register. The previously displayed name is deleted and replaced by the new name. To edit, double click on the item cell to revise. The cursor is displayed in the selected item cell, enabling editing.

4-6-1-2. Enabling/disabling registration

To enable registration, a check mark, as illustrated on the left, must be added to this enabled cell.
 (Click to add the check mark. Click again to remove the check mark.)

4-6-1-3. Registering display orders

When a distribution group is registered to another master, the pull-down list is displayed. Input the display order on the list. ("0" means display at the end of the list.)

4-6-2. Saving and revising edited distribution groups

After editing, the Register and Cancel buttons are enabled. Once you have finished editing the distribution group, click on the Register button at top of the screen.
 The edited distribution group is saved.
 Click on the Cancel button to return the edited distribution group to its previous state, without registering changes. Added and deleted items are also restored to their previous states.

4-6-3. Change confirmation

If you have changed the distribution groups and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.



Click on the Yes button to discard changes and switch screens.
 Click on the No button to continue using this screen.

16. Intelligent Management System

4-7-1. Editing tenants

4-7-1-1. Editing tenant names

To register tenant names, input the registered names in the item cells to register. The previously displayed name is deleted and replaced by the new name. To edit, double click on the item cell to revise. The cursor is displayed in the selected item cell, enabling editing.

4-7-1-2. Enabling/disabling registration

To enable registration, a check mark, as illustrated on the left, must be added to this enabled cell. (Click to add the check mark. Click again to remove the check mark.)

4-7-1-3. Registering display orders

When a distribution group is registered to another master, the pulldown list is displayed. Input the display order on the list. ("0" means display at the end of the list.)

4-7-2. Saving and discarding edited tenants

After editing, the Register and Cancel buttons are enabled.

Once you have finished editing the tenant, click on the **Register** button at top of the screen. The edited tenant is saved.

Click on the **Cancel** button to return the edited tenant to its previous state, without registering changes. Added and deleted items are also restored to their previous states.

4-7-3. Change confirmation

If you have changed the tenants and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.




Click on the **Yes** button to discard changes and switch screens. Click on the **No** button to continue using this screen.

4-8. Indoor unit settings

- [Procedure]
- On the menu bar, select "Distribution ratio" - "Maintenance" - "I/D unit settings".
- (Password level 2)

Set associations between indoor units, distribution groups and tenants. Also set the current added values etc. for electric heaters and indoor fans.

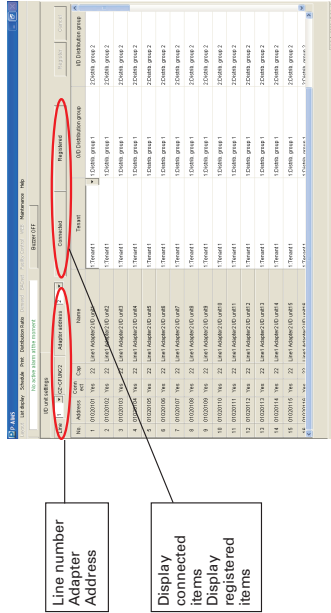

- Line 1 | CZ-OFUNC2 | Adaptor address 1
 - Connected
 - Registered
 - Register
 - Cancel
- Key
- Address
 - Connect
 - Cap.
 - Name
 - Tenant
 - O/D distribution group
 - I/D distribution group
 - Elec. heater
 - I/D fan
 - Fix cap.
- : Specify communication line numbers and adaptor addresses.
- : Only displayed when the connection column is "Yes".
- : Only those that are registered in the I/D unit master data settings are displayed.
- : Register settings.
- : Revert to the previously registered state.

- : Displays the addresses of indoor units.
- : Displays "Yes" for data that is connected to indoor units.
- : Displays the capacities of indoor units.
- : Displays the names of indoor units.
- : Specify associations with tenant names.
- : Specify associations with distribution groups for outdoor units.
- : Specify associations with distribution groups for indoor units. (This is displayed when "Yes" is selected for indoor distribution under Distribution ratio settings).
- : Specify electric heater capacities.
- : Specify current added values for fans of indoor units.
- : Specify the capacities of indoor units.

16. Intelligent Management System

4-8-1. Registering indoor units

4-8-1-1. Registering tenants

To specify tenants registered under Register Tenant Name, click on the tenant column for the indoor unit concerned, to display a combo box.

Click on the button on the right to display the pull-down menu, then click on the relevant tenant.

The pull-down menu displays the tenants registered under Register Tenant Name.

The same procedure can be used to make changes.

4-8-2.

Saving and discarding edited indoor unit settings

After editing, the Register and Cancel buttons are enabled. Once you have finished editing the indoor unit settings, click on the button at top of the screen.

The edited tenant is saved.

Click on the button to return the edited tenant to its previous state, without registering changes.

Added and deleted items are also restored to their previous states.

4-8-3.

Change confirmation

If you have changed the indoor unit settings and attempt to switch to another screen without first saving the changes, the change confirmation message is displayed.



Click on the button to discard changes and switch screens.

Click on the button to continue using this screen.

4-8-1-2. Registering distribution groups

To specify distribution groups registered under Register Distribution group name, click on the distribution group column for the indoor unit concerned, to display a combo box.

Click on the button on the right to display the pull-down menu, then click on the relevant distribution group.

The pull-down menu displays the distribution groups registered under Register Distribution Group Name. The same procedure can be used to make changes.

4-8-1-3. Registering electric heater capacities

Specify the electric heater capacities of indoor units that are equipped with electric heaters. Input capacities in kW units. They are used in loaded distribution calculations.

4-8-1-4. Registering indoor fans

When calculating loaded distribution, input the indoor fan current added values required for calculating the fan power of indoor units. The initial value is set to "0.02".

4-8-1-5. Registering fixed capacities

The capacities of indoor units are acquired automatically and displayed in the Cap column. There are some models from which the data cannot be acquired automatically, so input the capacities of those in kW units. If the value in the Fix cap. column is "0", the data in the Cap. column will be used to calculate distribution.

4-8-1-6. Enabling/disabling registration

To enable registration, a check mark, as illustrated on the left, must be added to this enabled cell.

(Click to add the check mark. Click again to remove the check mark.)

16. Intelligent Management System

- Cut off processing for the previous day is performed every day for a few minutes after midnight. The system may not respond to user input during this processing.
- After the settings of an indoor unit are changed from the P-AIMS System, the display may revert temporarily to the former settings. This is more likely to occur with all-unit operations. The cause is communications delay, not any malfunction in the system. If you wait a few minutes, the display will show the correct information.
- When errors occur while operating during a thunderstorm or because of electromagnetic interference.
Power the terminal off and then on again.
As a rule, the system should be powered off only in cases such as the above.
Correct management of air conditioning is not possible when the system is powered off.
- About distribution ratios and energy usage
The formulas used by this system to calculate air conditioning distribution ratios and energy usage are only approximations. They normally do not yield the same amounts that appear on bills from electric and gas utilities.
Depending on operating conditions, there may be a margin of error between distribution ratios and actual air conditioning amounts.
There may also be a small margin of error between the following, due to the rounding algorithms used in distribution ratio calculations.
 - "Distribution ratios of tenants in a group" and "100.0000%"
 - "Total of distribution ratios" and "Overall tenant distribution ratio"
 - "Total of usage by each tenant" and "Total usage indicated by pulse meters"
 - "Total of usage during regular hour, out of hours, and specified days time zones" and "Total of all hours time zones"
 This product does not measure energy directly, but uses the ratios of loads estimated for each indoor unit to calculate distribution (proportional allocation). The results of the calculations should be regarded as approximations.
- About operating time totals
Air conditioning distributions and air conditioner operating times are calculated only for periods in which the system is powered on and in which there are no communications errors between the system and the air conditioners.
Therefore, no totals are accumulated for times when the system is powered off or in which communications errors occur.
You should be aware that errors in distribution ratios will become larger if conditions like the above continue for a longer period of time.

40

5. Supplementary Information

- Personal Computers
Use a personal computer exclusively for the P-AIMS System.
Sharing the PC with any other system could cause problems.
- Data backup
The PC used with the P-AIMS System could break down, so you are advised to back up data to an external hard drive or other storage. For more information, contact your dealer or service provider.
NOTE: When the drive name of an external hard disk drive is changed, it is not possible to back up.
- Power outages
We recommend use of a UPS device (uninterruptible power supply) to protect the P-AIMS in the event of a power outage. For more information, contact your dealer or service provider.
- Please note that we will not provide compensation in the following circumstances:
Any fault caused by a third party becoming aware of a password.
Any fault caused by sharing a PC between P-AIMS and another application.
- Acquisition of accumulated data
When accumulated data is acquired, it passes through two communication lines, from the indoor unit group to the AMY adapter, and from there to the P-AIMS system. Please note, it is possible that regular hours data may be received as out of hours data, due to the timing of communications and any related delays.
- Limitations on changing settings
Some types of air conditioners are limited in the settings which they support.
For example, cooling-only air conditioners cannot be set to heating.
Floor-type models typically support only high fan speeds.
Ceiling mounted models do not have flaps, and therefore cannot change the fan direction.
You should be aware of the limitations of the air conditioner models in your system.
For more information, contact your dealer or service provider.
- Standby power
The system performs distribution calculations on the basis of indoor unit operating time. Therefore it does not count power consumed while stopped (on standby).
For example, if no units are operated over the course of a month, no standby power consumption is distributed to any tenant. However if a unit is operated for even one minute, then all of the standby power consumption is distributed to the corresponding tenant.
For load distribution, distribution is made with standby power added.
- Only alarm codes are displayed in the notification bar and alarm log display.
The content of an alarm can vary for different models, even if the alarm code is the same. Consult the documentation of the various models to determine the content of the alarm.
- Because of data transmission delay, the totals and distribution data displayed by the system for different time zone (regular hours, out of hours, special days) may not be counted in a completely accurate fashion.

39


16. Intelligent Management System

- Situations in which major errors are likely to occur in calculations of distribution ratios etc. In some of the semi-central-type and floor-type air conditioners and older models with electric heaters, major errors are likely to occur in calculations of air conditioning distribution ratios and other figures. Also, if pan-type humidifiers with high power consumption are used, the distribution calculation does not reflect humidification operation time, so major errors result. For more information, contact your dealer or service provider.
- Setting the current date and time
The current date and time should be set on a regular basis, since the clock of an ordinary PC can gain or lose up to about two minutes per month.
- Passwords
Passwords should be recorded and saved in a safe place. They should never be disclosed to third parties.
If you forget your password, contact your dealer or service provider.
- Interface adaptors (sold separately)
Interface adaptors (CZ-CAPCZ)
You can use on/off local adaptors to connect equipment that can be turned on and off (fans, room air conditioners and so on) to the system.
However, note that the following limitations apply.
For details, refer to the documentation of the equipment or contact your dealer or service provider.
- ▲ About distribution calculations **Important**
 - [1] Fan speed data
Accumulated operation time for each fan speed is fixed at medium fan speed.
Accumulated time for thermostat On is counted as fixed to Medium fan speed even when a thermostat On signal input is connected to the local adaptor.
 - [2] Indoor unit capacity value
Values cannot be loaded automatically.
Contact your dealer or service provider about settings.
 - [3] Product type
It is not possible to distinguish between PAC and GHP models.
Contact your dealer or service provider about settings.
 - [4] Distribution between indoor units
They are only compatible with simple distribution. No load distribution can be made.
Contact your dealer or service provider for details.
- ▲ As long as it conforms to the contact specifications of the interface adaptors, any type of equipment can be connected to the system. However, you should avoid connecting equipment whose operation can have grave consequences for life or property.

16. Intelligent Management System


Performing License Certification

1. A License Certification screen such as the following appears when you start a P-AIMS systems for which license certification is not finished.

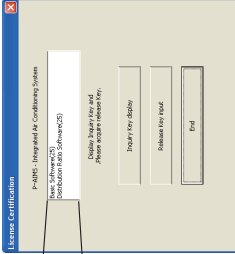

"Distribution Ratio Software (25)" means that the number of remaining days that you can use the Distribution Ratio Software is "25." It is not displayed after you finish license certification.

* After you start a P-AIMS system for which license certification is not finished, the License Certification screen will appear at 9:00 a.m. and 3:00 p.m. This screen is not displayed after you finish license certification.
If you install optional software, the License Certification screen will appear until license certification is finished for all of the software.

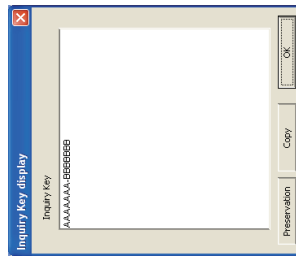

2. If you click the **Inquiry Key display** button in the License Certification screen, the Inquiry Key display screen appears, and the inquiry key is displayed in the screen. Send the key displayed in this screen to the Product ID Issuance Desk (cmc_productid_desk@gg.jp.panasonic.com) by e-mail. At the same time, also notify us of the following items.
 - (1) Product name (required)
 - (2) Company name/contact person
 - (3) Phone number
 - (4) E-mail address (required)
 You will be registered as a user and issued a release key.

Preservation

Copy

OK

:Clicking this button saves the inquiry key as a text file. Follow the instructions on the screen to save the text file. Enter the product name, company name/contact person, phone number, and e-mail address in this saved text file, and send the text file to the Product ID Issuance Desk by e-mail.

:Clicking this button copies the inquiry key to the Windows clipboard. Paste the inquiry key into your mail.

:Clicking this button closes the Inquiry Key display screen.

6. License Certification

Before you can use the Distribution Ratio Software for P-AIMS system, you need to first perform a work procedure called "license certification."

To perform license certification, make an inquiry by sending the inquiry key to the inquiry e-mail address below. You will be registered as a user and issued a release key, and then receive a reply.

<Contact information>

Product ID Issuance Desk.

E-mail address: cmc_productid_desk@gg.jp.panasonic.com

When you make an inquiry, send the following information together with the inquiry in order to be registered as a user and issued a release key.

- (1) Product name
- (2) Company name/contact person
- (3) Phone number
- (4) E-mail address
- (5) Inquiry key

* If you do not input a release key, you will no longer be able to use the system after 30 days elapses. Obtain a release key and perform license certification as soon as possible.
* Make an inquiry as soon as possible because it may sometimes take several days to be issued a release key.

License Certification Procedure


The procedure from after the P-AIMS system is installed up until the end of license certification is described below.

- (1) Check the inquiry key from the License Certification screen.
- (2) Send the inquiry key to the Product ID Issuance Desk (cmc_productid_desk@gg.jp.panasonic.com). Also notify us of the product name, company name/contact person, phone number, and e-mail address.
- (3) A release key is issued. You are registered as a user and a release key is issued. A reply is sent to the registered mail address.
- (4) Input the release key from the License Certification screen.
- (5) The license certification procedure is finished.

16. Intelligent Management System

7. Preparation 7-1. Installation

3. When you receive the release key, restart the P-AIMS system. See "2. Startup and shutdown" for how to restart the P-AIMS system, and then restart the system.

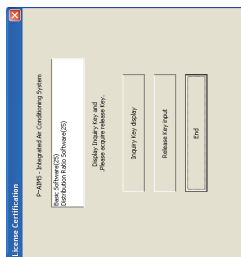

If license certification is not finished for the P-AIMS system, the License Certification screen on the right appears before the P-AIMS system restarts.

Click the button to display the Release Key input screen, and enter the release key.




* If you install multiple P-AIMS system software, the same number of license certifications is required. In such a case, the number of release keys sent will be the same as the number of inquiry keys. Enter all of the received release keys sequentially, and perform license certification. (There is no set order for entering release keys, so they can be entered in any order.)

License certification is finished once all of the release keys have been entered.


Click the button. The License Certification screen closes, and the P-AIMS system starts.

* The P-AIMS system will start even if you click the button without entering the release key. You can use the system as is until license certification is finished. (The system can be used for a period of 30 days.)


1. First, stop the P-AIMS system. Insert the Fare Calculate Software CZ-CSWAC2 CD of the air-conditioning integrated system (P-AIMS system) you purchased into the CD-ROM drive. The program on the CD-ROM starts automatically and makes preparations for installation. If installation does not start, double-click "Setup.exe" of the CD-ROM drive to start it. Enter the Product ID in the Input Product ID screen that appears. For the Product ID, see the "Product ID Issuance Certificate" supplied with the software.

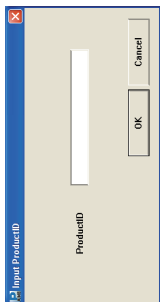


* Keep the "Product ID Issuance Certificate" in a safe place. The Product ID is required to install the air-conditioning integrated system. The "product ID Issuance Certificate" will not be reissued.

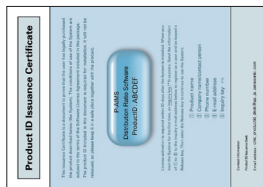

2. The InstallShield(R) Wizard prepares to install the P-AIMS system.

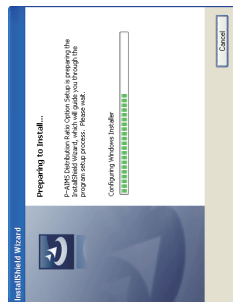

3. After a short while, the "The InstallShield(R) Wizard will install P-AIMS Distribution Ratio Option on your computer. To continue, click Next." message appears. Click the button.

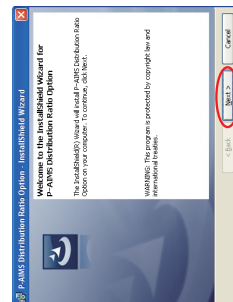

16. Intelligent Management System

7-2. Display after restart

After the system restarts, the fee calculation functions are enabled and the menu item Distribution ratio is selectable.




7-3 Settings


Once installation is complete, you must make registrations and settings such as "Distribution ratio setting," "Register distribution group name," "Register tenant name," "Accumulated value master data," and "/J/D unit master data." Refer to the explanations in the corresponding sections for information on these settings.

Entrust the registration of "Accumulated value master data" and "/J/D unit settings" to the place of purchase or the service company.

- Next, the License Agreement screen appears. Carefully read the license agreement, and click "I accept the terms in the license agreement" if you agree to the terms of the license agreement. The button becomes active. Click the button. (The software cannot be installed if you do not agree to the terms of the license agreement.)

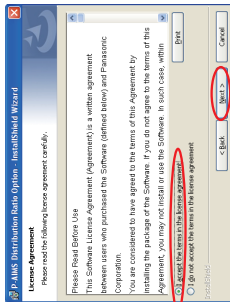


- The "The wizard is ready to begin installation. Click Install to begin the installation." message appears. Click the button.

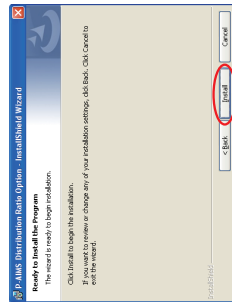


- The installation of the P-AIMS system begins.

Please wait a while.

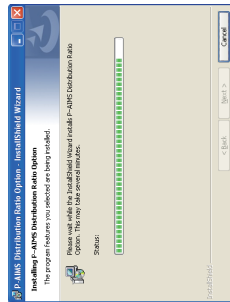

- When the P-AIMS system setup is finished, the installation complete screen appears. Click the button to complete the installation.

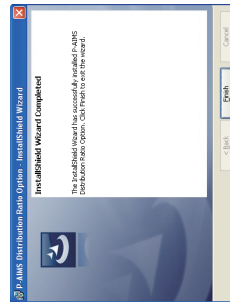

* When installing the Distribution Ratio software, it is possible to install this system without stopping the P-AIMS system, but the functions of the Distribution Ratio software will not be added. Restart the P-AIMS system.

16. Intelligent Management System

Reference

■ Distribution ratio calculation (for simple distribution)

This section explains how air conditioning consumption distribution ratio and charges etc. are calculated by the P-AIMS system. The P-AIMS system is a common product for both electric package air conditioners (PAC) and gas heat pump air conditioners (GHP), so distribution ratios and air conditioning consumption are calculated by different methods for PAC and GHP.

1. Parameters as listed below are used for calculations:

- ① RHHi : Accumulated operation time for indoor unit i (High fan speed)
- ② RHi : Accumulated operation time for indoor unit i (Medium fan speed)
- ③ RLi : Accumulated operation time for indoor unit i (Low fan speed)
- ④ SHHi : Thermostat ON accumulated time for indoor unit i (High fan speed)
- ⑤ SHi : Thermostat ON accumulated time for indoor unit i (Medium fan speed)
- ⑥ SLi : Thermostat ON accumulated time for indoor unit i (low fan speed)
- ⑦ PSI : Capacity of indoor unit i (equivalent kW value)
- ⑧ αHH : Weighting coefficient for high fan speed (0.50-1.00).
- ⑨ αH : Weighting coefficient for medium fan speed (0.50-1.00).
- ⑩ αL : Weighting coefficient for low fan speed (0.50-1.00).

* ①-③ are the sums of thermostat ON accumulated operation time and thermostat Off accumulated operation time at each fan speed.

④-⑩ are the thermostat ON accumulated operation times at each fan speed.

2. Distribution ratio calculation formulae

Use the following formulae to find suitable power consumption indices for indoor unit i.

(1) Outdoor unit distribution

For a PAC system

$$TEI = (SHHi \times \alpha HH + SHi \times \alpha H + SLi \times \alpha L) \times PSI$$

The convenient outdoor power consumption index TEOi for indoor unit i is

$$TEI = (SHHi \times \alpha HH + SHi \times \alpha H + SLi \times \alpha L) \times PSI$$

The convenient outdoor energy consumption index TGi for indoor unit i is

$$TGI = 0$$

For GHP systems

The convenient outdoor power consumption index TEOi for indoor unit i is

$$TEI = (RHHi \times \alpha HH + RHi \times \alpha H + RLi \times \alpha L) \times PSI$$

The convenient outdoor energy consumption index TGi for indoor unit i is

$$TGI = (SHHi \times \alpha HH + SHi \times \alpha H + SLi \times \alpha L) \times PSI$$

(2) Indoor unit distribution

Common for both PAC and GHP

The convenient outdoor power consumption index TEIi for indoor unit i is

$$TEIi = (RHHi \times \alpha HH + RHi \times \alpha H + RLi \times \alpha L) \times PSI$$

The outdoor electricity consumption index TOTALOe and outdoor gas consumption index TOTALg, and indoor electricity consumption index TOTALEi for the distribution group as a whole are the totals of TEOi, TGi and TEIi for all indoor units in the group (m units).

$$TOTALOe = TEO1 + TEO2 + \dots + TEOm$$

$$TOTALg = TG1 + TG2 + \dots + TGm$$

$$TOTALE = TEI1 + TEI2 + \dots + TEIm$$

Therefore, the outdoor electricity consumption distribution ratio REO_i, outdoor gas consumption distribution ratio RGi and indoor electricity consumption distribution ratio REI_i for indoor unit i are the ratios of the consumption indices between the indoor unit concerned and the group as a whole, so

$$REO_i(\%) = \frac{TEO_i}{TOTALO_e} \times 100$$

$$RGI(\%) = \frac{TGI}{TOTALg} \times 100$$

$$REI_i(\%) = \frac{TEI_i}{TOTALE} \times 100$$

(Distribution groups can be set separately for outdoor units and indoor units.)
Outdoor electricity usage distribution ratio NEO_j, outdoor gas usage distribution ratio NG_j and indoor electricity usage distribution ratio NEI_j in tenant units can be calculated as follows, where n is the number of indoor units belonging to tenant j.

$$NEO_j(\%) = REO1 + REO2 + \dots + REOn$$

$$NG_j(\%) = RG1 + RG2 + \dots + RGN$$

$$NEI_j(\%) = REI1 + REI2 + \dots + REIn$$

* Distribution ratios are rounded at the fifth decimal place and shown to the fourth decimal place.

3. Air conditioning usage calculation method

- ① NEO_j : Outdoor electricity usage distribution ratio (%) for tenant j.
- ② NG_j : Outdoor gas distribution ratio (%) for tenant j.
- ③ NEI_j : Indoor electricity usage distribution ratio (%) for tenant j.
- ④ PeO : Accumulated outdoor electricity usage value for the group concerned.
- ⑤ Pel : Accumulated indoor electricity usage value for the group concerned.
- ⑥ Pg : Accumulated outdoor gas value for the group concerned.
- ⑦ @E : Unit charge for electricity charges (£) (0.000-9.999).
- ⑧ @G : Unit charge for gas charges (£) (0.000-9.999).

Air conditioning usage for each tenant is found by allocating the usage for the group as a whole according to the distribution ratio for each tenant, so in the following formulae, MME_j is the electricity usage and MMG_j is the gas usage for tenant j.

$$MMEO_j(\text{kWh}) = PeO \times NEO_j$$

$$MMG_j(\text{m}^3) = Pg \times NG_j$$

$$MMEI_j(\text{kWh}) = Pel \times NEI_j$$

Outdoor electricity usage charge MEO_j, outdoor gas usage charge MG_j, and indoor electricity usage charge MEI_j for tenant j are

$$MEO_j(\text{£}) = MMEO_j \times @E$$

$$MG_j(\text{£}) = MMG_j \times @G$$

$$MEI_j(\text{£}) = MMEI_j \times @E$$

4. Screen Display

NEO_j (%) is displayed in the outdoor electricity distribution ratio space.
NG_j (%) is displayed in the outdoor gas distribution ratio space.
NEI_j (%) is displayed in the indoor electricity distribution ratio space.

MMEO_j (kWh) is displayed in the outdoor electricity usage space.
MMG_j (m³) is displayed in the outdoor gas usage space.
MMEI_j (kWh) is displayed in the indoor electricity usage space.

MEO_j (£) is displayed in the outdoor electricity charge space.
MG_j (£) is displayed in the outdoor gas charge space.
MEI_j (£) is displayed in the indoor electricity charge space.


MEO_j(£) + MG_j(£) + MEI_j(£) is displayed in the total charge space.



16. Intelligent Management System

■ Distribution ratio calculation (for loaded distribution)

1. Data flow chart

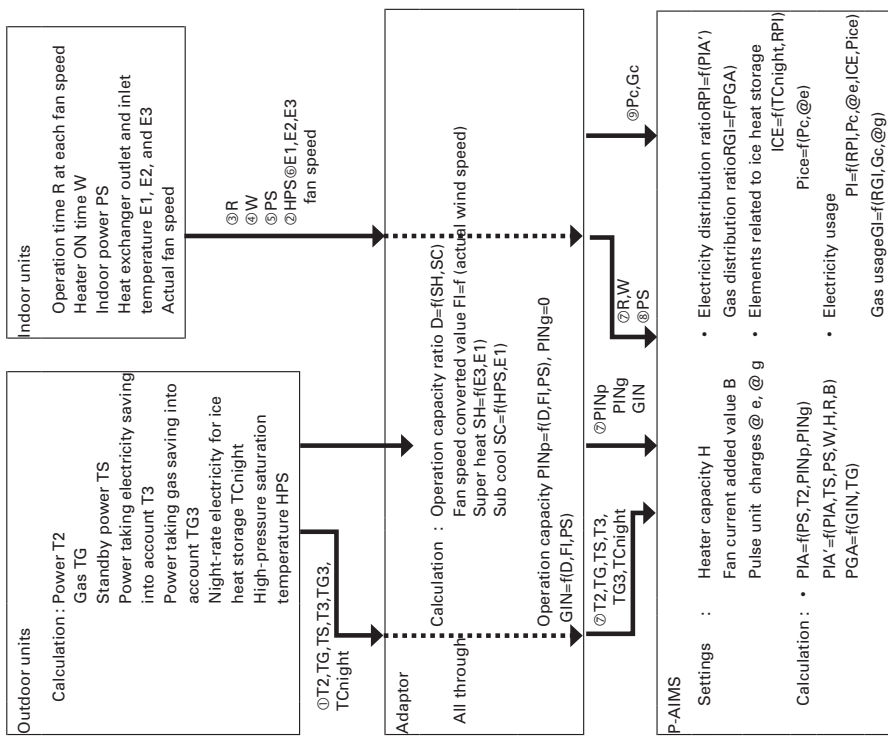

"f" means function. For example:

Operation capacity ratio $D=f(SH,SC)$ means that the operation capacity ratio is calculated using super heat SH and sub cool SC.

2. Distribution ratio calculation method
The following parameters are used.

- ① NEJ : Electricity distribution ratio (%) for tenant j
- ② NGJ : Gas distribution ratio (%) for tenant j
- ③ PE1 : Accumulated pulse value from electricity meter 1 for the group concerned.
- ④ PE2 : Accumulated pulse value from electricity meter 2 for the group concerned.
- ⑤ PG : Accumulated pulse value from the gas meter for the group concerned.
- ⑥ @E : Unit charge for electricity usage (£/kWh) (0.000-9.999).
- ⑦ @G : Unit charge for gas usage (£/m³) (0.000-9.999).
- ⑧, ④ and ⑤ are the accumulated pulse counter values of the electricity and gas meters registered for the use of the group concerned.
- When multiple pulse meters are registered for a single distribution group, the totaled values each for electricity and for gas are used.
- ⑥ and ⑦ are user-specified currency values indicating the £ equivalent of a unit of usage input from the pulse meter.

The usage charge for each tenant is found by allocating the usage charge for the distribution group as a whole according to the distribution ratio for each tenant, so in the following formulae, MEJ is the electricity usage charge and MGJ is the gas usage charge for tenant j.

$$MEJ(£) = PE1 \times @E \times NEJ$$

$$MGJ(£) = PG1 \times @G \times NGJ$$

For PAC systems, NGJ=0%, so MGJ is Y0.
However, for a HOT system,

$$MGJ(£) = PG1 \times @G \times NGJ$$

16. Intelligent Management System

Note

User memo space

If you fill this out at the time of purchase, it is convenient when ordering repairs etc.

Serial No.	
Date of installation	
Dealer	Telephone No. ()

16. Intelligent Management System

3. Web Software (CZ-CSWWC2)

Operation Manual

Air Conditioning

Intelligent Management System

CZ-CSWWC2

Web Software

P-AIMS

Thank you for purchasing our monitoring and control system.

Before using the system, be sure to read this manual carefully. After reading the manual, store it in a convenient location for easy reference.

Contents

■ Precautions on Using This Product.....	i
■ Introduction.....	ii
■ P-AIMS System Settings and Operations	1
1. Quick Reference.....	2
2. Using the System.....	2
2-1. Web Basic Settings.....	3
2-1-1. Alarm email recipient settings screen.....	3
2-1-1-1. How to enter and change email address.....	4
2-1-1-2. How to change user name.....	4
2-1-1-3. Enable/disable settings.....	4
2-1-1-4. Adapter communication alarm email.....	4
2-1-1-5. I/D unit disconnection alarm email.....	4
2-1-1-6. Saving the settings.....	4
2-2. WEB User Registration.....	5
2-2-1. Registration.....	5
2-2-1-1. How to enter and change user ID.....	6
2-2-1-2. How to enter and change password.....	6
2-2-1-3. Changing privileges.....	6
2-2-1-4. User privileges.....	6
2-2-1-5. How to change I/D unit, control group, and tenant.....	7
2-2-1-5-1. How to move units between unsupported and supported column.....	8
2-2-1-5-2. How to register / cancel supported units.....	8
2-2-1-6. Registering changed data.....	8
2-2-1-7. Cancelling the setting.....	8
2-2-1-8. Confirmation message.....	8
2-3. Alarm Email Log.....	9
2-3-1. Email log display for a mail address.....	9

Contents

■ Precautions on Using This Product.....	i
■ Introduction.....	ii
■ P-AIMS System Settings and Operations	1
1. Quick Reference.....	1
2. Using the System.....	2
2-1. Web Basic Settings.....	3
2-1-1. Alarm email recipient settings screen.....	3
2-1-1-1. How to enter and change email address.....	4
2-1-1-2. How to change user name.....	4
2-1-1-3. Enable/disable settings.....	4
2-1-1-4. Adapter communication alarm email.....	4
2-1-1-5. I/D unit disconnection alarm email.....	4
2-1-1-6. Saving the settings.....	4
2-2. WEB User Registration.....	5
2-2-1. Registration.....	5
2-2-1-1. How to enter and change user ID.....	6
2-2-1-2. How to enter and change password.....	6
2-2-1-3. Changing privileges.....	6
2-2-1-4. User privileges.....	6
2-2-1-5. How to change I/D unit, control group, and tenant.....	7
2-2-1-5-1. How to move units between unsupported and supported column.....	8
2-2-1-5-2. How to register / cancel supported units.....	8
2-2-1-6. Registering changed data.....	8
2-2-1-7. Cancelling the setting.....	8
2-2-1-8. Confirmation message.....	8
2-3. Alarm Email Log.....	9
2-3-1. Email log display for a mail address.....	9

Web Browser Settings and Operations

■ Web Browser Settings and Operations	10
3. Quick Reference.....	11
4. Using the System.....	11
4-1. Access and Operation through Web Browser.....	11
4-1-1. Computer environment requirements.....	11
4-1-2. Login.....	11
4-2. Common display area.....	12
4-2-1. Alarm display list box.....	12
4-2-2. Refresh window.....	13
4-3. Layout Screens (Option).....	14
4-3-1. Layout screen display method.....	15
4-3-1-1. Layout screen selection method.....	15
4-3-1-2. Layout screens.....	15
4-3-2. Layout screen operations.....	16
4-3-2-1. Confirming indoor unit names.....	16
4-3-2-2. How to display popup menu.....	16
4-3-2-3. Popup menu "Unit details".....	16
4-3-2-4. "R/C" Popup menu (Start/stop control method).....	17
4-4. Status/Operation.....	18
4-4-1. Display method.....	19
4-4-1-1. Selecting displayed floor and area.....	19
4-4-1-2. Displaying alarms.....	19
4-4-1-3. Sorting lists.....	20
4-4-1-4. Displaying sub-units.....	20
4-4-2. Start and stop control method.....	20
4-4-2-1. Indoor unit selection method.....	20
4-4-2-2. Start and stop operation method.....	21

16. Intelligent Management System

■ Precautions on Using This Product

★ IMPORTANT ★

- Before you can use the P-AIMS Web software, first perform a work procedure called "license certification".
- Please perform the license certification referring to "6.License certification".
- Duplication of all or part of this software and documentation without the express consent of the holder of the rights to the above, and transfer of the software to another party, are prohibited by law.
- This software and manual are not to be reproduced, in whole or in part, without permission.
- In principle, each set of this software is purchased for use on a single computer.
- Please note that we bear no responsibility for any effects resulting from the use of this software and manual.
- Panasonic will not be liable for any claim based on errors in calculations of distribution ratios and utility usage caused by faults in this equipment or software.
- The specifications of this software, and the content of this manual, are subject to change without notice, for the sake of improvement.
- This software is used to calculate distribution ratios and charges according to the load ratios estimated for each indoor unit.
- It is not based on the Measurement Act, so it cannot be used for public transactions and similar purposes.
- The content of this manual is limited to explanation of how to use this software.
- It does not cover the usage methods for the operated machinery and optional features, or for the OS etc., so refer also to the relevant manuals for those elements.
- The screen image examples presented in this manual are intended to illustrate the explanation of layouts, and do not represent actual operating conditions. The tenant names displayed are also fictional.
- Displays and operations may differ from the examples in this manual, depending on versions of Excel and the OS used.
- Refer to "Please Read Before Use" for the warranty terms for this software.
- Panasonic will not be liable for any violation of the rights of any third party stemming from use of information in this manual, or for violation of other rights.
- Microsoft, Windows XP and Microsoft Excel are trademarks of Microsoft Corporation in the United States and other countries.
- Other product names are trademarks or registered trademarks of the corresponding companies.
- Other products are copyrights of the corresponding companies.

4-5.	Alarm list & alarm log.....	22
4-5-1.	Alarm list.....	22
4-5-2.	Alarm log.....	23
4-5-2-1.	Display method.....	24
4-5-2-2.	Refining the displayed data.....	24
4-5-2-3.	Display range term specification method.....	24
4-5-2-4.	Alarm confirmation.....	25
4-5-2-5.	Downloading alarm log.....	26
4-6.	Schedule/Results.....	27
4-6-1.	Display method.....	28
4-6-1-1.	Selecting displayed floor and area.....	28
4-6-1-2.	Sort lists.....	28
4-6-1-3.	Changing display date.....	28
4-7.	Mode setting (calendar).....	29
4-7-1.	Display method.....	30
4-7-1-1.	Calendar display.....	30
4-7-2.	Calendar operation.....	30
4-7-2-1.	Registering modes/holidays.....	30
4-7-2-2.	Registering an edited calendar.....	30
4-7-2-3.	Registering in day-of-the-week units.....	31
4-7-2-4.	Registering mode comments.....	31
4-8.	Schedule Operation Time Setting.....	32
4-8-1.	Changing schedule times.....	33
4-8-1-1.	Mode selection.....	33
4-8-1-2.	Setting schedule times.....	33
4-8-1-3.	Confirming schedule time settings.....	34
4-8-1-4.	Editing schedule times.....	34
4-8-1-5.	Registering changed data.....	34
4-9.	Schedule Changes.....	35
4-9-1.	Changing schedule times.....	36
4-9-1-1.	Selecting the date to display.....	36
4-9-1-2.	Setting schedule times.....	36
4-9-1-3.	Confirming schedule time settings.....	37
4-9-1-4.	Editing schedule times.....	37
4-9-1-5.	Registering changed data.....	37
4-10.	Operation time with thermostat on.....	38
4-10-1.	Display method.....	39
4-10-1-1.	Sorting lists.....	39
4-10-1-2.	Detailed display with thermostats off.....	39
4-11.	Accumulated value.....	40
4-12.	Download.....	41
4-12-1.	Downloading.....	41
4-12-1-1.	How to download.....	41
<Reference>	How to Display the File Download Screen.....	43
5.	Supplementary Information.....	44
6.	License Certification.....	45
7.	Preparation.....	48
7-1.	Firewall setting.....	48
7-2.	Installation.....	50
7-3.	Display after restart.....	55
7-4.	Settings.....	55
7-5.	WEB Software Pre-check Sheet.....	56

16. Intelligent Management System

■ Introduction

CZ-CSWW/C2 Web Software is used to manage the Air Conditioning Intelligent Management (P-AIMS) System over the Web.


This Web Software must be installed on the same personal computer that runs the P-AIMS System (basic software). By connecting the personal computer to a LAN, the air conditioners can be managed and controlled easily using a Web browser. The user logs into the Web browser using a user ID and password. The authority to operate different air conditioners can be set for each user ID, which enables air conditioners to be operated from a personal computer by each tenant, control group, or indoor unit.

This operation manual describes operations using the Web Software. It does not duplicate explanations of basic functions that appear in the basic software operation manual. Refer also to the basic software operation manual and other optional software operation manuals.

■ P-AIMS System Settings and Operations

1. Quick Reference

Menu List

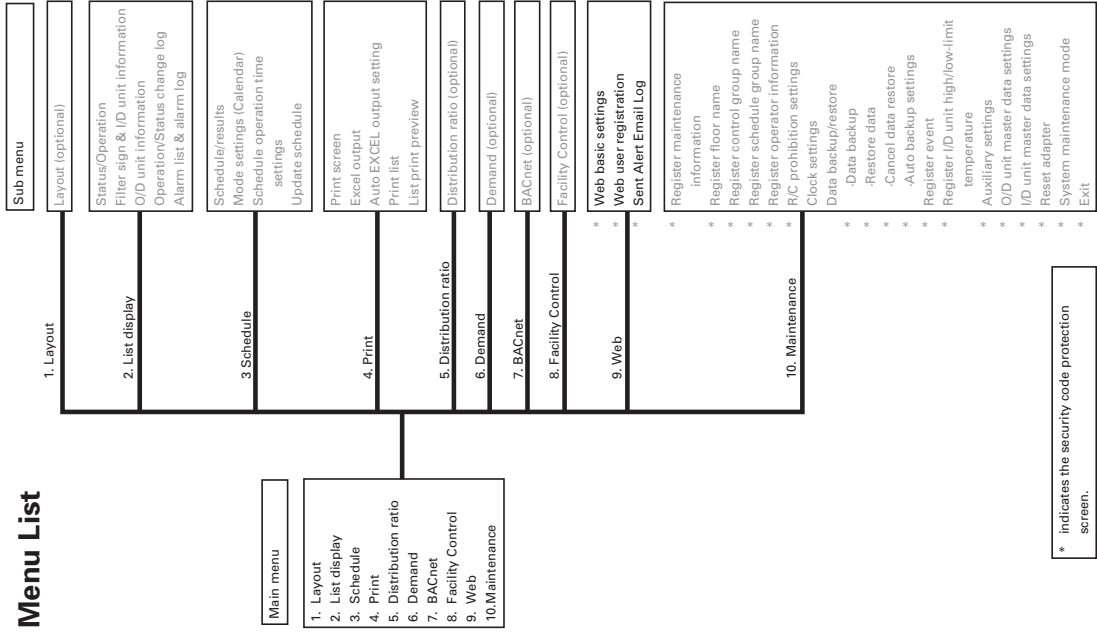

* indicates the security code protection screen.

16. Intelligent Management System

2. Using the System

2-1. Web Basic Settings

- [Procedure]
- On the menu bar, select Web – Web basic settings. (Password: level 2)

On this screen, the site name that uses P-AIMS, and alarm e-mail setting can be made. Set the site name and alarm email setting.

Site name

Site name P-aims Web

Send alarm email

Sender's SMTP

Email address

Register email address

Use SMTP authentication

Account name

Password

DHCP Enabled

IP address

Subnet mask

Default gateway

DNS

WINS

Computer name

HP13251107234

OK

Cancel

Close

: Enter the site name (40 one-byte characters max.)

: Check the checkbox to send alarm emails.

: Enter the IP address (or domain name) of the separately subscribed mail (SMTP) server.

: Enter a sender account name (40 one-byte characters max.)

: Click here to display the Alarm email recipient settings screen.

: Check the checkbox to use SMTP authentication to block unwanted email. Enter the account name and password.

: Displays network information of the personnel computer.

: Registers the entered WEB basic settings.

: Restores the previous settings.

: Closes the WEB basic settings screen.

2

2-1-1. Alarm email recipient settings screen

The Alarm email recipient settings screen is displayed when the "Send test mail" button is clicked. Email addresses and user names can be registered on this screen.

: Click the Send Test Email button to send a test email. (Use this button to check the recipient email address.)

Send test mail

OK

Cancel

Close

: Registers the entered WEB basic settings.

: Restores the previous settings.

: Closes the WEB basic settings screen.

Key

- Mail address
 - User name
 - Valid
 - Adapter Com. Error
 - I/D unit Disc.
- : Enter the recipient email address (recipient account name)
 : Select the user name registered on the "Web user registration screen". An alarm email is sent to the user when an air conditioner that is registered with the user enters alarm status.
 : Sets valid/invalid.
 : An alarm email is sent to the user name when an adaptor that is registered with the user enters communication error status. An alarm email is not sent when the checkbox is not checked.
 : An alarm email is sent to the user when an I/D unit that is registered with the user is disconnected. An alarm email is not sent when the checkbox is not checked.


3

16. Intelligent Management System

2-2. WEB User Registration

- [Procedure]
- On the menu bar, select WEB – user registration
- <Password: level 2>

Set user IDs and passwords to access to the Web software, their privileges and operable indoor units.

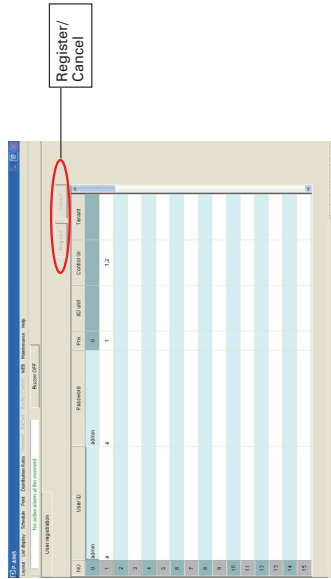

Register
Cancel

: Registers changed settings.
: Restores the previous settings.

Key

- User ID :Enter the user ID (20 one-byte characters max.).
- Password :Enter the password (10 one-byte characters max.).
- Priv. :Specify the privilege for the user.
- I/D unit :Specify the indoor unit
- Control Gr. :Specify the control group name.
- Tenant :Specify the tenant name.

* Click the I/D unit, Control Gr. or Tenant column to display the screen for specifying the indoor unit, control group, or tenant.

2-1-1-1. How to enter and change email address
Double click the existing email address to change a part of it. Just enter an address to change the existing email address. The new email address overwrites the existing one. (40 one-byte characters max.)

2-1-1-2. How to change user name
Move the cursor to the user name column to display the user name combo box. User names registered on the Web user registration screen are displayed. Click and select the corresponding user name.

2-1-1-3. Enable/disable settings
To enable the registered content, click in the Enable space to add a check mark. Click there again to remove the check mark, disabling the setting.

2-1-1-4. Adapter communication alarm email
Check the check box to send an alarm email to the user when an adapter that is registered with the user enters communication error status.

2-1-1-5. I/D unit disconnection alarm email
Check the check box to send an alarm email to the user when an I/D unit that is registered with the user is disconnected.


* Note that the I/D unit disconnection alarm email may be sent in large volume if an adaptor error occurs.

2-1-1-6. Saving the settings
The initially disabled button and Close button are in the upper right of the screen.

Click the Close button to close the screen.
When you changed a setting, the disabled button and Close button changes to OK and Cancel buttons.

Click the Cancel button to restore to the previous setting. The OK and Cancel buttons changes to the disabled and Close button.

16. Intelligent Management System

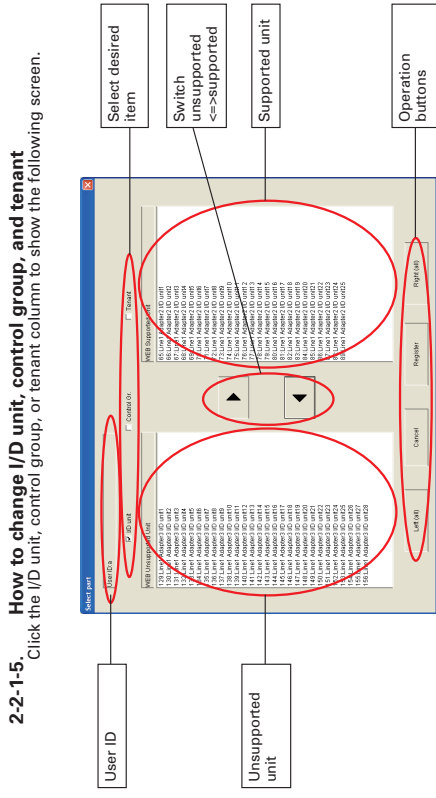

2-2-1-5. How to change I/D unit, control group, and tenant
Click the I/D unit, control group, or tenant column to show the following screen.

- User ID : Displays the user ID.
- I/D unit : Checked item is the object for the setting. More than one can be selected.
- Control Gr. : Moves units between unsupported unit column and supported unit column. The right arrow moves units from unsupported to supported column. The left arrow moves from supported to unsupported column.
- Tenant : Selects all units in the left field.
- Register : Selects all units in the right field.
- Cancel : Registers the current setting and closes the screen.
- Left : Closes the screen without registering changed setting.

2-2-1. Registration

2-2-1-1. How to enter and change user ID
Double click the existing user ID to change a part of it. Just enter a user ID to change the existing one. The new user ID overwrites the existing one. (20 one-byte characters max.)

2-2-1-2. How to enter and change password
Double click the existing password to change a part of it. Just enter a password to change the existing one. The new password overwrites the existing one. (10 one-byte characters max.)

2-2-1-3. Changing privileges
Privilege types are "0: administrative user", "1: special user", and "2: general user." For only No.0, "0: administrative user" can be set. For No.001 and later, "1: special user", and "2: general user" can be set.

2-2-1-4. User privileges

	0: administrative user	1: special user	2: general user
Layout display	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Display plain view	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Check unit details	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
R/C operation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Status/Operation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
R/C operation	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
View alarm log	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Alarm list & alarm log	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Check alarms	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Download alarm log	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Schedule/results	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
View schedule/results	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Check set schedule mode	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Mode settings	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Set schedule mode	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Change schedule mode name	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Check schedule	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Schedule operation	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Set schedule (I/D unit display)	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Schedule operation time settings	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Set schedule (Schedule group display)	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Check schedule	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Update schedule	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Set schedule (I/D unit display)	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Set schedule (Schedule group display)	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T/S ON operation time	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Operation time display	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Accumulated value display	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Download distribution ratio	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Download CSV file	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>


16. Intelligent Management System

2-3. Alarm Email Log

[Procedure]

- On the menu bar, select WEB – Sent Alert Email Log.

This screen displays alarm email log. Up to 200 alarm email records are retained. When the number of records exceeds 200, the oldest records are deleted.

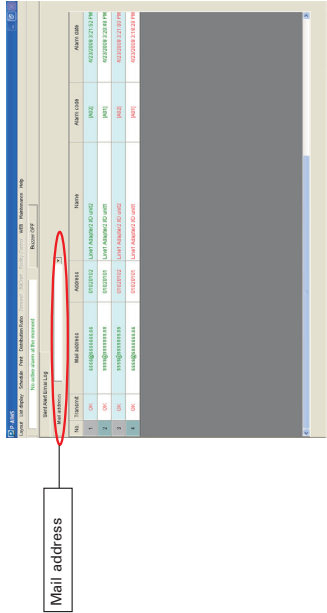

Mail address

Mail address

:Select the email address for alarm email log display.

Key

- Transmit :Displays delivery status (Sent: OK, Fail: NG)
- Mail address :Displays the recipient email address
- Address :Displays the address of the unit for which the alarm occurred.
- Name :Displays the name of the unit for which the alarm occurred.
- Alarm code :Displays the alarm code
- Alarm date :Displays the alarm date
- Date and Time Mail Sent :Displays the date and time alarm email sent

2-3-1. Email log display for a mail address

Select the email address using to display the log for that email address. All logs are displayed when an email address is not selected.

2-2-1-5-1. How to move units between unsupported and supported column

Click a unit in the WEB unsupported (or supported) unit column. The clicked unit is highlighted. If you clicked a wrong one, click a different unit. This unit is highlighted instead.

To select multiple units, click desired units one by one while pressing the [Ctrl] key. Clicked units are highlighted. If you selected a wrong unit, click that unit again to clear the selection.

To select consecutive units, click the topmost unit to highlight it. Then click the unit at the bottom while pressing the [Shift] key. All units between the top and bottom of the consecutive units are highlighted.

Click to move the units from unsupported to supported unit column when units are highlighted.

Click to move the units from supported to unsupported unit column when units are highlighted.

To move inconsecutive units, move them in a few times using the above methods.

2-2-1-5-2. How to register / cancel supported units

Click to register the settings when you moved units between unsupported and supported columns. The screen closes afterwards.

Click to close the screen without registering.

2-2-1-6. Registering changed data

Click to register changed data.

2-2-1-7. Cancelling the setting

Click to restore the previous setting.

2-2-1-8. Confirmation message

A confirmation message appears if you attempt to use another screen without saving the change to the user registration.



Click to close the screen without saving changes.


Click to continue using this screen.

16. Intelligent Management System

■ Web Browser Settings and Operations

3. Quick Reference

Web Menu List

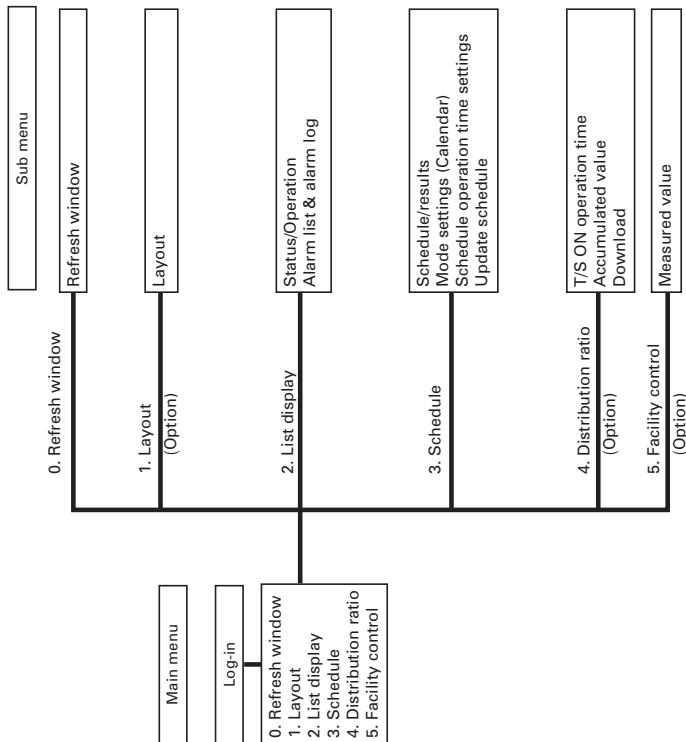

Information
 User authority differs according to the user level. User levels and usable functions are indicated in this manual as shown below.

Administrative user	<input type="radio"/>	Special user	<input type="triangle"/>	General user	<input type="x"/>
---------------------	-----------------------	--------------	--------------------------	--------------	-------------------

※ The user ID defines the authority level. The authority level is not displayed on the Web browser.

- : All functions can be used.
- : Some functions cannot be used.
- : Functions cannot be used.

4. Using the System

4-1. Access and Operation through Web Browser

4-1-1. Computer environment requirements

The following environment is required to connect the Web browser running on the customer's PC to the PC running the P-AIMS Web software in order to monitor/operate air conditioners.

- Supported browser : Internet Explorer 6.0 or later
- Screen resolution : 1024×768 is recommended

4-1-2. Login

Enter the following in the address bar of the Web browser to connect to the PC running the P-AIMS Web software.

http://IP-AIMS address: 808/p-aims/login


or **http://IP-AIMS PC name: 808/p-aims/login**

For example, enter the following if the IP address of the PC running the P-AIMS Web software is "192.168.1.2":

http://192.168.1.2:808/p-aims/login

Or enter the following if DNS is enabled and the name of the PC running the P-AIMS Web software is "p-aims-web":

http://p-aims-web:808/p-aims/login

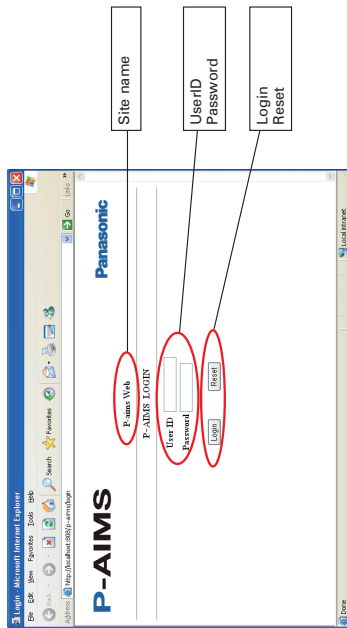

Site name
 User ID
 Password




- : Shows the site name that was set for P-AIMS.
- : Enter the user ID that was set for P-AIMS.
- : Enter the Password that was set for P-AIMS.
- : Click to log in after entering the user ID and password.
- : Click to reset the login screen.

16. Intelligent Management System

4-2. Common display area

The screen shown below appears when you log in to the P-AIMS Web software. The upper part of this screen is common to all screens and is displayed permanently on every screen. Also, any active alarm is displayed in this area. Use the menu to display each screen.

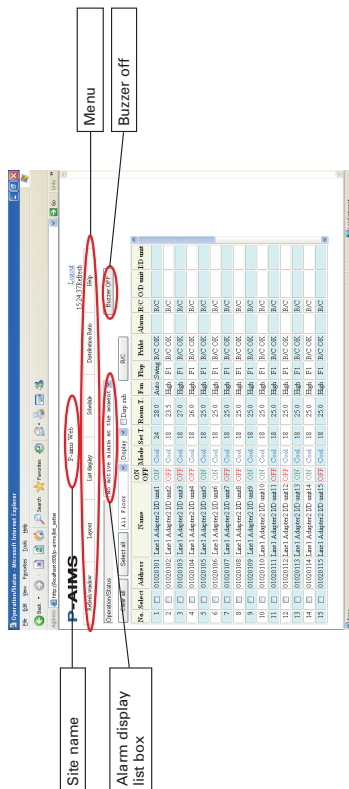


* The menu differs depending on the optional software installed and user authority.
 * The common display area is displayed in every screen. However, because the layout screen is displayed in a different window, this area is not displayed.

4-2-1.

Alarm display list box

When an alarm occurs, the name of the unit in which the alarm occurred is displayed in the list box in the upper part of the screen. Click at the right of the list box to show the list of current alarms. The scroll bar appears if many alarms are active. When the alarm is reset, that unit disappears from the list.

When an alarm occurs, a buzzer sounds. Click to stop the buzzer.

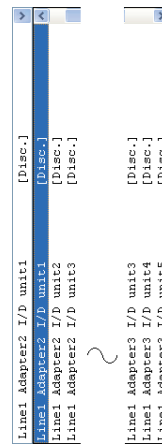


* When an alarm occurs, the alarm information appears in the list box but not on the Status/Operation screen. Refresh the screen to show the alarm information (Refer to 4-2-2 Refresh window).
 * The Status/Operation screen is not refreshed automatically when all alarms are off. Refresh the screen display to show remaining alarm information (Refer to 4-2-2 Refresh window).

4-2-2.

Refresh window

Only the common display area of the P-AIMS Web software screens is refreshed automatically. Each screen displays the latest information when it is opened, but the actual status will change over time. Click Refresh window in the menu to display the latest information and check the status.

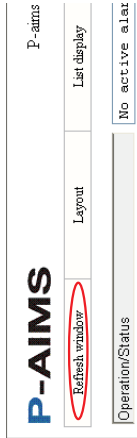

* When an air conditioner is started or stopped using the remote controller, the screen is automatically refreshed after approximately one minute. To refresh earlier, refresh the screen manually.
 * The common display area of the screen is refreshed approximately every minute to show the alarm information. Therefore, alarm information is displayed on the Web browser later than in P-AIMS.
 * The Refresh window menu is enabled in all screens. However, the Layout screen opens in a different window without the common display area. Use the Refresh button in Internet Explorer to refresh the Layout screen.
 * Alternatively, press the [F5] key to refresh screen display.


16. Intelligent Management System

4-3. Layout Screens (Option)

- (Procedure)
- Select Layout - Layout from the menu bar.
- Optional Layout Display software is required.

Administrative user	Special user	General user
---------------------	--------------	--------------

These screens display layout diagrams to check the layout and monitor the status of indoor units. Indoor unit operation can also be started and stopped from this screen.

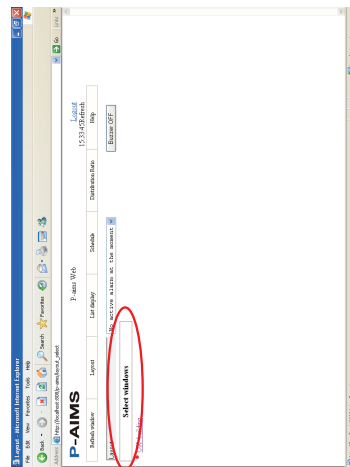

Select windows

- * Only I/D units are displayed in the Web software layout diagram.
- * Only units with a registered user ID are displayed.

4-3-1. Layout screen display method


4-3-1-1. Layout screen selection method

(1) Click the group name "OX building" in the Select windows area. The following names are displayed: "The first floor," "The second floor," "The third floor," and "The fourth floor".

Select windows

- OX building
- The first floor
- The second floor
- The third floor
- The fourth floor

(2) Click "The first floor." The layout of the first floor is displayed in a new window. Each time a name is clicked ("The first floor" to "The fourth floor"), a new window opens to display the layout of the corresponding floor.

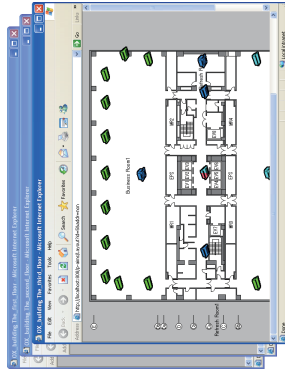

4-3-1-2. Layout screens

The layout is displayed in a new window.

Group name / name

Layout display

16. Intelligent Management System

4-3-2. Layout screen operations

4-3-2-1. Confirming indoor unit names

To check the names of an indoor unit in the layout screen, move the mouse pointer over the desired indoor unit. The mouse pointer changes to a hand icon and the address number and name are displayed.



4-3-2-2. How to display popup menu


To display the popup menu, move the mouse pointer over the desired indoor unit. Right-click the unit when the mouse pointer changes to a hand icon. When an indoor unit is selected, the unit appears enclosed in a square frame. Right-click in the frame to display the popup menu.



* The Unit details menu item is not displayed if the user has General user authority.

4-3-2-3. Popup menu "Unit details"


Select Unit details in the popup menu to display a screen that shows "Unit details," "Error log," and "Schedule."

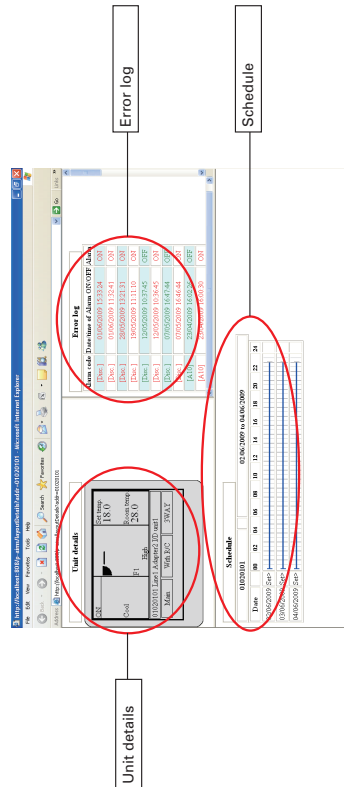

* The screen is not displayed if the user has General user authority.

4-3-2-4. "R/C" Popup menu (Start/stop control method)


Select R/C in the popup menu to display the Remote controller screen. Start, stop, mode, set temperature, fan speed, flaps, and central control can be changed on this screen. Click [Transmit] to transmit the settings to the unit. Click the [Cancel] button to close the R/C screen without transmitting the settings.

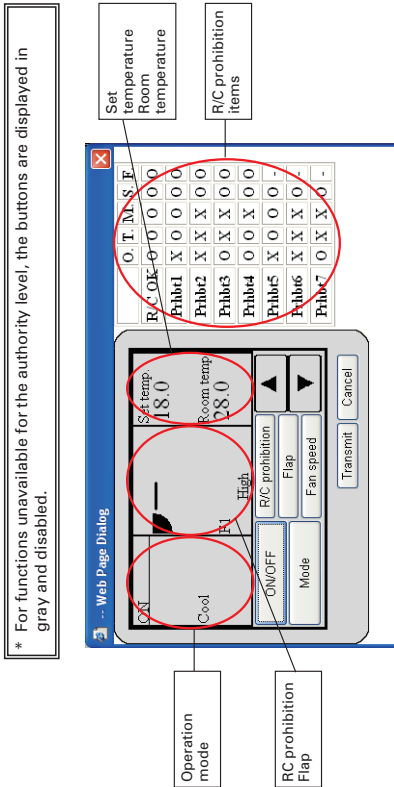

* For functions unavailable for the authority level, the buttons are displayed in gray and disabled.



:Switches between "ON" and "OFF" every time it is clicked.
:Switches between "Auto", "Heat", "Cool", "Fan", and "Dry" every time it is clicked.



:Switches between "RC OK (blank)", "RC Prohibition 1" to "RC Prohibition 7" every time it is clicked.

* RC Prohibitions 1 to 4 are for CZCFUNC2.



:Switches between "swing" and "F1" to "F5" every time it is clicked. Some flap settings are unavailable in some modes.



:Switches between "Auto", "High", "Mid", and "Low" every time it is clicked.



:Changes the room temperature setting.



:Transmits set content to the indoor unit.

* The unit setting is updated in about 1 minute after [Transmit] is clicked.

R/C prohibition items: Displays currently set R/C prohibition items.

O: Operable
X: Prohibited

* Buttons disabled due to user authority restrictions or R/C prohibition settings are displayed gray.

16. Intelligent Management System

4-4. Status/Operation

- (Procedure)
- On the menu, select "List display" - "Status/Operation".

Administrative user Special user General user

Monitor the status of indoor units here. The operation, mode, set temperatures, room temperatures, fan speeds, flaps, central control, alarms, and absence or presence of remote control units can be monitored. Device operation can also be started and Indoor units can be monitored and controlled by floor and area.

The screenshot shows a table of indoor units with columns for No., Select, Address, Name, Mode, Set T., Room T., Fan, Flap, Phibit, Alarm, R/C. A red circle highlights the 'R/C' column header. Callouts point to various parts of the interface: 'Floor area' points to the top navigation bar; 'Select/clear all' points to a button above the table; 'Sort display' points to a dropdown menu above the table; 'Remote control display' points to a button above the table.

Clear all

All Floor

Disp sub

R/C

- Use to clear selections and select all.
- Use to select floor areas.
- Use to select the display order.
- Sub-units are also displayed.
- Use remote control units to stop and start indoor units individually.

Key

- Select : Selects the indoor unit to control. Click to add a check mark.
- Address : Displays the address numbers of indoor units.
- Name : Displays the names of the indoor units.
- Operation : Normal: black, sub unit: blue, W/O connection: red, maintenance: gray. Monitors the operation status of indoor units.
- Mode : ON: Green, OFF: Red. Displays the operation modes of indoor units.
- Set T. : A/Cool, A/Heat: Green, Cool: Blue, Heat: Red, Fan: Gray, Dry: Light blue. Displays the set temperature. The range of temperatures that can be set varies, depending on the connected air conditioner model and the operation mode.
- Room temperature : Displays room temperatures.
- Fan : Displays fan speeds. Automatic (automatic fan speed), High, Mid, Low (Displayed as -- if the model concerned cannot display this information).

- Flap : Displays the directions of flaps. Swing, F1 - F5 (warm, fan: F1 - F5, for cooling: F1 - F3) Displayed as -- if the model concerned cannot display this information.
- Phibit : Central control (local control prohibited) Individual (no prohibition), prohibit 1=prohibit 7 (Settings can be made for various types of central control (Prohibition))
- Alarm : Displays alarm codes if an alarm has been issued by an indoor unit. Displays Maintenance if "Register maintenance information" applies.
- RC : Displays "Yes" for indoor units that have remote control
- I/D unit : Displays outdoor unit codes.

* If it is not possible to communicate with the adapter, or if the model used cannot display the content, the column will display "--".

22	<input type="checkbox"/>	01020125	Line1 Adapter2 ID unit25	ON	Cool	18	25.0	High	F1	R/C	OK	R/C
23	<input type="checkbox"/>	01020126	Line1 Adapter2 ID unit26	---	---	---	---	---	---	---	---	---

The names of indoor units which are unconnected are displayed in red. Their operating status cannot be checked.

4-4-1. Display method

4-4-1-1. Selecting displayed floor and area

First, select the floor and area. If the floor and area is "All Floor", all registered indoor units are displayed. Click the [All Floor] button at the right edge of the floor selection list to display a list of registered floors and areas. From the list, select the floor or area to monitor.

All Floor

+-Floor 1

+-Floor 2

+-Floor 3

+-Floor 4

+-Floor 5

4-4-1-2. Displaying alarms

When an alarm is issued for an indoor unit, the alarm is automatically displayed in the alarm display list box. The Status/Operation screen is not refreshed automatically so that the alarm information is not displayed. Refresh the window to update the status/operation screen. The error code is displayed in the Alarm column as shown below. Nothing is displayed if there are no current alarms.

No.	Select	Address	Name	ON/OFF	Mode	Set T.	Room T.	Fan	Flap	Phibit	Alarm	R/C
1	<input type="checkbox"/>	01020101	Line1 Adapter2 ID unit1	ON	Cool	24	28.0	High	F1	R/C	OK	R/C
2	<input type="checkbox"/>	01020102	Line1 Adapter2 ID unit2	OFF	Cool	18	23.5	High	F1	R/C	OK	R/C

* The alarm display is automatically removed when the alarm has been restored. The Status/Operation screen is not refreshed automatically so that the alarm information remains unchanged. Refresh the window to update the status/operation screen.



16. Intelligent Management System

4-5. Alarm list & alarm log


- [Procedure]
- On the menu bar, select "List display" - "Alarm list & alarm log".



This displays the log of alarm occurrence and restoration to date.

4-5-1. Alarm list

This displays current alarms.

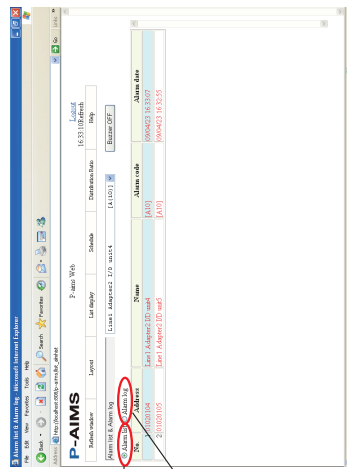

Alarm list display

Alarm log display

- Alarm list
- Alarm log

:Displays the alarm list.
:Displays alarm history.


Key

- Address
- Name
- Alarm code
- Alarm date
- Alarm time

* The Alarm list or Alarm log display is not refreshed automatically when the alarm status changes. Refresh the window to update the display. However, when you switch between the Alarm list and Alarm log display, it is automatically refreshed.

4-5-2. Alarm log

This displays the log of alarm occurrence and restoration to date. Display conditions can be set in order to display only certain alarms.

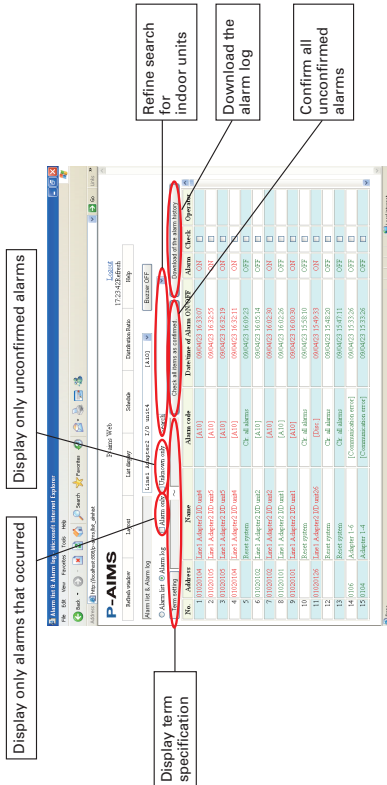

Display term specification

Display only alarms that occurred

Display only unconfirmed alarms

Refine search for indoor units

Download the alarm log

Confirm all unconfirmed alarms

- Alarm list
- Alarm log
- Alarm only
- Unknown only

:Displays the alarm list.
:Displays alarm log.
:Displays only the log of alarms which have occurred.
:Displays only the log of alarms which have not been confirmed.

Search

:Use to select the indoor units to display.

Term setting

:Use to specify the period of log to display.

Check all items as confirmed

:Confirm all unconfirmed alarms.

Download of the alarm history

:Download the alarm log data.

* Check all items as confirmed and Download of the alarm history are not displayed for a Special user.

Key

- Address
- Name
- Alarm code
- Alarm date
- Alarm time
- Check
- Operator

:Displays the addresses of alarms.
:Displays the names of devices which have issued alarms.
:Displays alarm codes at the times alarms are issued/restored.
:Displays dates and times when alarms are issued/restored.
:Displays occurrence/restoration status of alarms.
:Displays the status of alarm confirmation by the operator.
Add a check mark to confirmed alarms.
:Displays the name of the person who confirmed the alarm.

* A Special user cannot change the Check and Operator columns.

16. Intelligent Management System

4-5-2-1. Display method

Click the Alarm log , to display the alarm log. The log of alarms occurring to date, and their restoration Status, can be checked here.

4-5-2-2. Refining the displayed data

Check the Alarm only checkbox to display only alarms which have occurred. Click again to clear the checkmark and revert the display to its previous state.
Check the Unknown only checkbox to display only alarms which have not been confirmed. Click again to clear the checkmark and revert the display to its previous state.

* These two functions can be used in combination.
For example, if both the Alarm only and the Unknown only are checked, the display shows only current alarms that are unconfirmed.

Selecting the indoor unit to display refines the display to cover only that indoor unit.

01020101 Line1 Adapter2 I/D unit1

Click by the Search dropdown list to display the registered I/D units.

01020101 Line1 Adapter2 I/D unit1
 01020101 Line1 Adapter2 I/D unit1
 01020102 Line1 Adapter2 I/D unit2
 01030102 Line1 Adapter3 I/D unit2
 01030103 Line1 Adapter3 I/D unit3
 01030104 Line1 Adapter3 I/D unit4

Click on the indoor unit to display. History is displayed for the selected indoor unit.

The Alarm only and Unknown only can be used together to display only alarms for the selected indoor unit, or only unconfirmed alarms.

* Select the blank at the top of the list to return to display of all logs.

4-5-2-3. Display range term specification method

Click the button to display the Term Setting screen.

Specify the start and end dates. Log is displayed for the specified range.

* Set an end date that is later than the start date. Results will not be displayed correctly if the end date is earlier than the start date.

Specify the display term, and then click the button to display history throughout the specified term.

To close the Term Setting screen, click the button. To cancel the term setting and display the latest log, click the

button without specifying a term.

* Once a term is specified, the term specification will be as same as previous one when this screen is displayed again.
* The maximum number of display items is 2,000.

4-5-2-4. Alarm confirmation

After confirming alarms, the operator should add check marks to those alarms to manage their status.

Click in the Confirmation column for the confirmed alarms to add check marks. Click on a check mark to remove it.

Click the operator column to display the screen shown below.

Click and select the name of the operator.

Click . The selected name is set in the Operator column and the screen closes.

Click to close the screen.

* This setting can only be changed by an Administrative user.
* Alarms cannot be confirmed just by checking the Check column and registering the operator name.


16. Intelligent Management System

4-6. Schedule/Results

[Procedure]
 On the menu bar, select "Schedule" – "Schedule/results".

Administrative user Special user General user

This displays the schedule and results as bar graphs. The display term can be specified to check the presetting status, the working status of a device relative to its schedule, or other information.





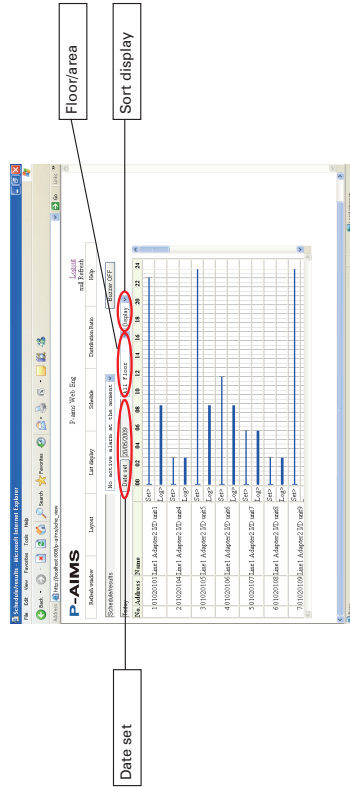


Date set : Use to select the dates to display.
 1.1.1 F Floor : Use to select floor areas.
 Display : Use to select the display order.

Key
 • Address : Displays the addresses of indoor units.
 • Name : Displays the names of the indoor units.
 • Graph : Upper Schedules. Lower: Displays results.

4-5-2-5. Downloading alarm log

The displayed alarm information can be downloaded. The following shows how to save the data.
 (1) Click to display the File Download screen.

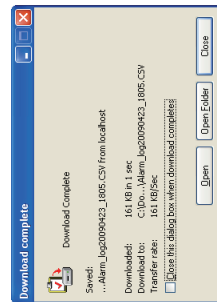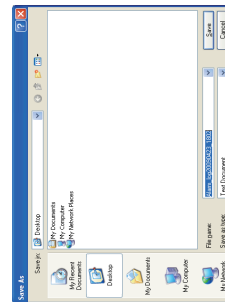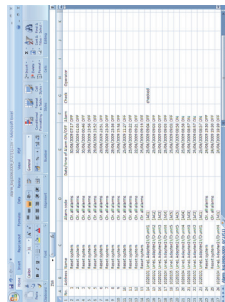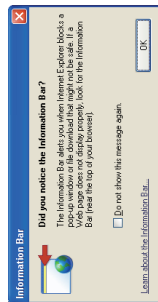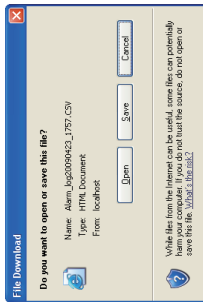

The information bar may be displayed due to the Internet Explorer security settings. If the information bar appears, follow the instructions displayed. A message "Did you notice the Information Bar?" may be displayed, as shown to the right.

(2) Click to download the data and display it in Excel. If Microsoft Excel is not installed, the data is displayed in Internet Explorer. In this case, it may not be possible to display some characters, depending on the language. Save the downloaded file.

(3) Click to open the Save As dialog box. Specify the folder to save the file in.

(4) When the saving is complete, the Download complete screen appears as shown in the right. *It is not displayed depending on the setting.

Click to display the data in Excel. If Excel is not installed, the data is displayed in Notepad.

* We recommend installing Microsoft Excel to review alarms in detail.
 * This setting can only be changed by an Administrative user.

16. Intelligent Management System

4-7. Mode setting (calendar)

- [Procedure]
- On the menu bar, select "Schedule" - "Mode settings (Calendar)".

Administrative user Special user General user

Set the Calendar operation mode.

: Use to change the calendar to be displayed.
 : Use to set the schedule by day of the week.
 : Use to specify the mode.
 : Register/cancel the calendar mode.
 : Register/cancel the mode name.
 : Use to change the mode name.
 :

4-6-1. Display method

4-6-1-1. Selecting displayed floor and area
 First, select the floor and area.
 If the floor and area is "All Floor", all registered indoor units are displayed.
 Click the button on the right edge of the floor selection list to display a list of registered floors and areas.
 From the list, select the floor or area to monitor.
 A list of indoor units registered within that floor and area is displayed.

4-6-1-2. Sort lists

Select the desired display order from the pull-down menu.

Floor : Display is in order of floor name registration.
 O/D unit : Display is in order of outdoor unit addresses, from the most recent.
 Address : Display is order of addresses, from the most recent.
 Display : Display is in order of most recent registrations to the indoor unit master.

4-6-1-3. Changing display date

When the Schedule/results screen is displayed the first time, it displays data for the current day. To display the schedule/results for another day, click . The screen shown to the right is displayed.
 Click and select the date.
 Then, click to change the display date and close the screen.
 Click to close the Date set screen.

Date set -- Web Page Dialog


16. Intelligent Management System

4-7-1. Display method 4-7-1-1. Calendar display

When the Mode setting screen is displayed the first time, the calendar for the current month is displayed.

Click the << >> buttons on the left and right of the place where the current date and month are displayed above the current calendar, to switch the calendar to earlier and later months.

Click the button to display the calendar for the current month.




4-7-2. Calendar operation 4-7-2-1. Registering modes/holidays

Specify the desired mode in the mode registration combo box.

Then click the desired date. The selected mode number is registered in the area below the date. To change to another mode, select another mode number and click the registered date. The mode number will be overwritten. The mode, "Cancel schedule (mode 0)" is used to cancel the set mode. (The mode number below the date is deleted.)

When you select the "Register holiday" mode and then click the date on the calendar, the date is displayed in red. Click again to revert the date display to the original color.

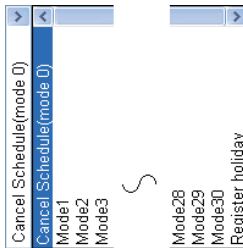


* Even if holidays have been registered on the calendar, the schedule will not necessarily switch to holiday operation. Holiday operation requires registration of a schedule mode number for holidays on the calendar.

4-7-2-2. Registering an edited calendar

Once you have finished editing calendar mode numbers and holiday settings, click the button to register them. Click the button to revert to the settings before editing.

4-7-2-3. Registering in day-of-the-week units

You can specify a set period and only make the mode settings once for each week. Click the button to display the following screen for setting schedule by day of the week.

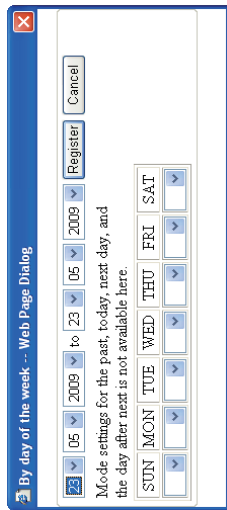

Click by the date displays to specify the term (start and end date) to set the weekly mode.

Click in the combo box for each day of the week and select the mode number. After registering the mode for each day of the week (it is not necessary to set mode numbers for all days of the week), press the button to register the mode number into the calendar for the specified period. Click the button to cancel registration by the day of the week.

4-7-2-4. Registering mode comments

To edit mode comments, click in the comment area of the mode list.

Mode1

Weekday1

When the cursor appears, edit the comment.

Once you have finished editing the comment, click the button to register the setting.

Click the button to restore the setting before editing.

* The schedule mode names are also used as the mode names for settings on the Schedule - Schedule Operation Time Setting screen.
 * Mode registrations to the calendar can be made for a period of one year, starting from the day after the registration is made.
 * Modes cannot be changed for dates that have passed.

<-Information> Requests to the Administrative user
 * To enable other users to change schedules using the Web software, register schedules for units instead of for schedule groups.
 * If the usage by the users can vary according to the day of the week, we recommend setting a different mode for each day of the week. This allows air conditioners to operate on a weekly schedule.

16. Intelligent Management System

4-8. Schedule Operation Time Setting

(Procedure)
 On the menu bar, select "Schedule" - "Schedule Operation Time Setting".
 *The screen and functions differ according to whether or not a schedule group is registered.

Administrative user	Special user	General user
---------------------	--------------	--------------

Screen if no schedule group is registered

Register	Mode	Address	Sub-unit	Temp	Flap	Fan	Prhibit	Set
1	ON	00000101	101	20.00	0	0	0	0
2	OFF	00000102	102	20.00	0	0	0	0
3	ON	00000103	103	20.00	0	0	0	0
4	OFF	00000104	104	20.00	0	0	0	0
5	ON	00000105	105	20.00	0	0	0	0
6	OFF	00000106	106	20.00	0	0	0	0
7	ON	00000107	107	20.00	0	0	0	0
8	OFF	00000108	108	20.00	0	0	0	0
9	ON	00000109	109	20.00	0	0	0	0
10	OFF	00000110	110	20.00	0	0	0	0
11	ON	00000111	111	20.00	0	0	0	0
12	OFF	00000112	112	20.00	0	0	0	0
13	ON	00000113	113	20.00	0	0	0	0
14	OFF	00000114	114	20.00	0	0	0	0
15	ON	00000115	115	20.00	0	0	0	0
16	OFF	00000116	116	20.00	0	0	0	0
17	ON	00000117	117	20.00	0	0	0	0
18	OFF	00000118	118	20.00	0	0	0	0
19	ON	00000119	119	20.00	0	0	0	0
20	OFF	00000120	120	20.00	0	0	0	0

Screen if a schedule group is registered

Register	Mode	Address	Sub-unit	Temp	Flap	Fan	Prhibit	Set
1	ON	00000101	101	20.00	0	0	0	0
2	OFF	00000102	102	20.00	0	0	0	0
3	ON	00000103	103	20.00	0	0	0	0
4	OFF	00000104	104	20.00	0	0	0	0
5	ON	00000105	105	20.00	0	0	0	0
6	OFF	00000106	106	20.00	0	0	0	0
7	ON	00000107	107	20.00	0	0	0	0
8	OFF	00000108	108	20.00	0	0	0	0
9	ON	00000109	109	20.00	0	0	0	0
10	OFF	00000110	110	20.00	0	0	0	0
11	ON	00000111	111	20.00	0	0	0	0
12	OFF	00000112	112	20.00	0	0	0	0
13	ON	00000113	113	20.00	0	0	0	0
14	OFF	00000114	114	20.00	0	0	0	0
15	ON	00000115	115	20.00	0	0	0	0
16	OFF	00000116	116	20.00	0	0	0	0
17	ON	00000117	117	20.00	0	0	0	0
18	OFF	00000118	118	20.00	0	0	0	0
19	ON	00000119	119	20.00	0	0	0	0
20	OFF	00000120	120	20.00	0	0	0	0

:Selects the mode to register.

Weekday1	Time setting	Mode	Set temp.	Flap	Fan	Prhibit	Set
ON	00:00	0	20.00	0	0	0	0
OFF	00:00	0	20.00	0	0	0	0

:Sets details for the schedule.

:Use for editing (copying, pasting and clearing settings).

Copy	Paste
------	-------

:Register/cancel changes.

Register	Cancel
----------	--------

Key

- Address :Displays the address numbers of indoor units. (If no schedule group has been registered)
- Name :Displays the names of indoor units. (If no schedule group has been registered)
- Schedule group name :Displays the schedule group name. (If a schedule group has been registered)
- Schedule time :Displays scheduled times.

* Schedule time registrations can only be applied to the main unit. Sub-units operate according to the schedule of the main unit.
 * The underlined display (08:00) of set items indicates that other related items have also been set, such as modes other than On/Off and set temperatures.

4-8-1. Changing schedule times

4-8-1-1. Mode selection

Select the mode for registering the schedule.

Click to select the mode name to register schedule time.

Weekday1	Weekday1
Weekday2	Weekday2
Weekday3	Weekday3
RESERVE13	RESERVE13
RESERVE14	RESERVE14
RESERVE15	RESERVE15

4-8-1-2. Setting schedule times

Click the cell to set the schedule for. The background turns yellow.

Under this condition, click the button to enable registration of detailed settings.

Time setting	ON	Mode	Set temp.	Flap	Fan	Prhibit	Set
08:00	OFF	0	20.00	0	0	0	0
08:00	OFF	0	20.00	0	0	0	0

Set the set times and necessary items (ON/OFF, modes, set temperatures, fan speeds, flaps and prohibitions).

Click on in each cell and select the item to set.

5	6
---	---


16. Intelligent Management System

4-9. Schedule Changes


[Procedure]
 On the menu bar, select "Schedule" – "Update Schedule".
 *The screen and functions differ according to whether or not a schedule group is registered.

Administrative user	Special user	General user
---------------------	--------------	--------------

Screen if no schedule group is registered

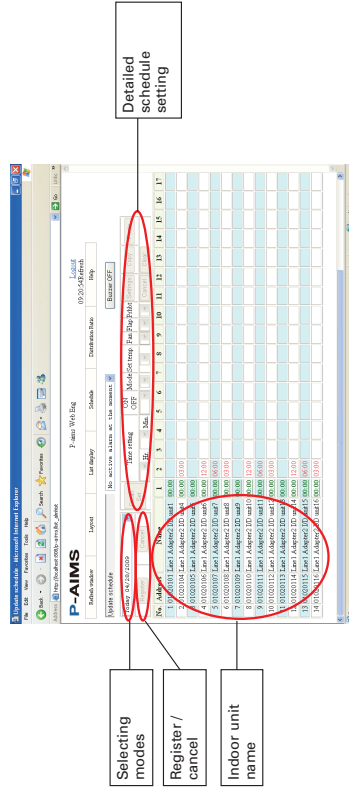

Screen if a schedule group is registered

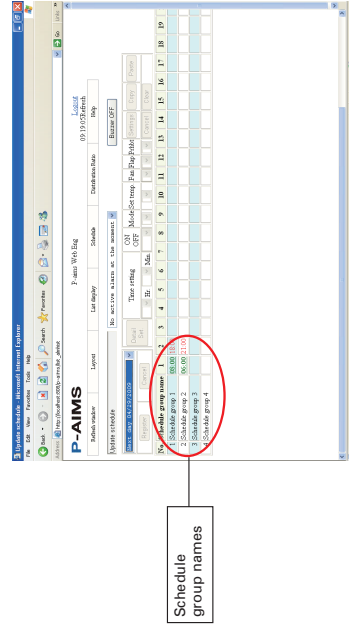

Time setting	ON	Mode	Set temp	Fan	Flap	Print	Set
14:00	OFF	Heat	27	Auto	String	12:00	Cancel

After editing the detailed settings, click the **Set** button
 Click the **Cancel** button to cancel detailed settings.

* When making time settings, start from earlier times and proceed to later times. It is not possible to set the same time as an existing setting.
 Example
 10:00 On: ;17:00 On

With the scheduled operation time settings as shown in the example above, it is only possible to set times between the existing times in the range of 10:01–16:59.

4-8-1-3. Confirming schedule time settings

If you select a time cell with a scheduled time setting, the current settings are displayed in gray in the detailed settings column.

4-8-1-4. Editing schedule times

Use the editing buttons on the screen to edit the schedule times.

Copy : Select by clicking on the time cell to copy.

Click the **Copy** button to store the selected time cell in memory.

Paste : Select the target time cell, and then click the **Paste** button to paste the copied time.

Clear : Select the time cell to clear, and then click the **Clear** button to delete the registered time.

* Pasting into the time cell for the same indoor unit is not possible because the times would be the same for the unit.

* Even on a different indoor unit, pasting is impossible if there is an existing registration for the same time or an earlier time.

4-8-1-5. Registering changed data

If the schedule time has been changed, click the **Register** button at the upper-left of the screen to save the settings. All changed data is saved.

Click the **Cancel** button to return all changed data to its previous state.

16. Intelligent Management System

Today 04/28/2009

Time setting ON OFF Mode Set temp. Fan Flap Prohibit Set

11:00 Hr. Min. On Off Auto Swing 14.00

Copy Paste Register Cancel

:Select the date to change. (The same day, next day, and day after that can be specified).

:Sets details for the schedule.

:Use for editing (copying, pasting and clearing settings).

:Register/cancel changes.

- Key**
- Address :Displays the address numbers of indoor units. (If no schedule group has been registered)
 - Name :Displays the names of indoor units. (If no schedule group has been registered)
 - Schedule group name :Displays the schedule group name. (If a schedule group has been registered)
 - Schedule time :Displays scheduled times.

* Schedule time registrations can only be applied to the main unit. Sub-units operate according to the schedule of the main unit.
 * The underlined display (08:00) of set items indicates that other related items have also been set, such as modes other than On/Off and set temperatures.

4-9-1. Changing schedule times

4-9-1-1. Selecting the date to display

Click and select the date to display.

Today 04/28/2009
 Today 04/28/2009
 Next day 04/29/2009
 Day after next 04/30/2009

4-9-1-2. Setting schedule times

Click the cell to set the schedule for. The background turns yellow.

Under this condition, click the button to enable registration of detailed settings.

Time setting ON OFF Mode Set temp. Fan Flap Prohibit Set

11:00 Hr. Min. On Off Auto Swing 14.00

5 6

Set the set times and necessary items (ON/OFF, modes, set temperatures, fan speeds, flaps and prohibitions).

Click on in each cell and select the item to set.

After editing the detailed settings, click the button

Click the button to cancel detailed settings.

Time setting ON OFF Mode Set temp. Fan Flap Prohibit Set

11:00 Hr. Min. On Off Auto Swing 14.00

5 6

* When making time settings, start from earlier times and proceed to later times. It is not possible to set the same time as an existing setting.
 Example
 10:00 On: :17:00 Off
 With the scheduled operation time settings as shown in the example above, it is only possible to set times between the existing times in the range of 10:01-16:59.

4-9-1-3. Confirming schedule time settings

If you select a time cell with a scheduled time setting, the current settings are displayed in gray in the detailed settings column.

4-9-1-4. Editing schedule times

Use the editing buttons on the screen to edit the schedule times.
 Copy : Select by clicking on the time cell to copy.
 Click the button to store the selected time cell in memory.
 Paste : Select the target time cell, and then click the button to paste the copied time.
 Clear : Select the time cell to clear, and then click the button to delete the registered time.

* Pasting into the time cell for the same indoor unit is not possible because the times would be the same for the unit.
 * Even on a different indoor unit, pasting is impossible if there is an existing registration for the same time or an earlier time.

4-9-1-5. Registering changed data

If the schedule time has been changed, click the button at the upper-left of the screen to save the settings. All changed data is saved.
 Click the button to return all changed data to its previous state.

16. Intelligent Management System

4-10. Operation time with thermostat on

- [Procedure]
- On the menu bar, select "Distribution ratio" - "T/S ON operation time".
- (Optional Distribution Ratio software is required.)

The screenshot shows the P-AIMS software interface. The menu bar includes 'Distribution Ratio' and 'T/S ON operation time'. Below the menu bar, there are buttons for 'Administrative user', 'Special user', and 'General user'. The main window displays a table with columns: No., Address, Name, ON/High, ON/Low, Total T/S ON, and T/S OFF. A callout box labeled 'tenant units individual indoor units' points to the 'Name' column. Another callout box labeled 'Detailed display with thermostats off' points to the 'T/S OFF' column.

No.	Address	Name	ON/High	ON/Low	Total T/S ON	T/S OFF	
1	01020101	Lant Admenc2D unit1	1	245222	6226	6401	220458
2	01020102	Lant Admenc2D unit2	1	245222	6226	6401	220458
3	01020103	Lant Admenc2D unit3	1	245222	6226	6401	220458
4	01020104	Lant Admenc2D unit4	1	245222	6226	6401	220458
5	01020105	Lant Admenc2D unit5	1	245222	6226	6401	220458
6	01020106	Lant Admenc2D unit6	1	245222	6226	6401	220458
7	01020107	Lant Admenc2D unit7	1	245222	6226	6401	220458
8	01020108	Lant Admenc2D unit8	1	245222	6226	6401	220458
9	01020109	Lant Admenc2D unit9	1	245222	6226	6401	220458
10	01020110	Lant Admenc2D unit10	1	245222	6226	6401	220458
11	01020111	Lant Admenc2D unit11	1	245222	6226	6401	220458
12	01020112	Lant Admenc2D unit12	1	245222	6226	6401	220458
13	01020113	Lant Admenc2D unit13	1	245222	6226	6401	220458
14	01020114	Lant Admenc2D unit14	1	245222	6226	6401	220458

4-10-1. Display method

- Click and select the desired display order from the sorting combo box.

Tenants : The list is displayed in tenant units.
 I/D unit : The list is displayed in individual indoor units.

Tenants
 I/D unit

4-10-1-2. Detailed display with thermostats off

When you click T/S OFF details to add a checkmark, "OFF/High", "OFF/Mid", "OFF/Low" are displayed in the list. Click again to clear the checkmark, and "OFF/High", "OFF/Mid", "OFF/Low" disappears.

Tenants : Selects the display order.

T/S OFF details : Displays details of thermostat off times.

Key

- Address : Displays the addresses of indoor units.
- Name : Displays indoor unit names or tenant names.
- Tenant : Displays tenant numbers.
- ON/High : Displays the time of operation with the thermostat on and high fan speed.
- ON/Mid : Displays the time of operation with the thermostat on and medium fan speed.
- ON/Low : Displays the time of operation with the thermostat on and low fan speed.
- Total T/S ON : Displays the total time of operation with the thermostat on and high, medium and low fan speed.
- OFF/High : Displays the time of operation with the thermostat off and high fan speed. (If thermostat off detailed display is used)
- OFF/Mid : Displays the time of operation with the thermostat off and medium fan speed. (If thermostat off detailed display is used)
- OFF/Low : Displays the time of operation with the thermostat off and low fan speed. (If thermostat off detailed display is used)
- Total T/S OFF : Displays the total time of operation with the thermostat off and high, medium and low fan speed.
- T/S ON + T/S OFF : Displays the total operation time at all fan speeds, with the thermostat both on and off.

16. Intelligent Management System

4-11. Accumulated value

- (Procedure)
- On the menu bar, select "Distribution ratio" – "Accumulated value".
- (Optional Distribution Ratio software is required.)

Administrative user	<input type="radio"/>	Special user	<input type="radio"/>	General user	<input type="radio"/>
---------------------	-----------------------	--------------	-----------------------	--------------	-----------------------

This displays the current value of the adaptor's accumulated pulses.

Adaptor No.	Address	Name	Type	Value	Alarm Value
1	031001	Lars Adaptor01 (Name-Owner1)	1	12500	14100
2	031002	Lars Adaptor02 (Name-Owner2)	1	13100	14100
3	031003	Lars Adaptor03 (Name-Owner3)	4	12500	14100
4	031004	Lars Adaptor04 (Name-Owner4)	4	12500	14100
5	031005	Lars Adaptor05 (Name-Owner5)	5	12500	14100
6	031006	Lars Adaptor06 (Name-Owner6)	6	12500	14100
7	031007	Lars Adaptor07 (Name-Owner7)	7	12500	14100
8	031008	Lars Adaptor08 (Name-Owner8)	8	12500	14100
9	031009	Lars Adaptor09 (Name-Owner9)	9	12500	14100


- Key**
- Address
 - Name
 - Distr.
 - Type
 - Adaptor value
 - Meter value
- :Displays the addresses of indoor units.
 :Displays the names of accumulated pulse meters.
 :Displays distribution group numbers.
 :Displays the types of pulse meter.
 :This displays the current values of the adaptors on the pulse meter.
 :This displays the value with the addition of balance data between an arbitrary value for the pulse meter and the adaptor value.

4-12. Download

- (Procedure)
- On the menu bar, select "Distribution ratio" – "Download".
- (Optional Distribution Ratio software is required.)

Administrative user	<input type="radio"/>	Special user	<input type="radio"/>	General user	<input type="radio"/>
---------------------	-----------------------	--------------	-----------------------	--------------	-----------------------

Download CSV files calculated on the cut-off day.

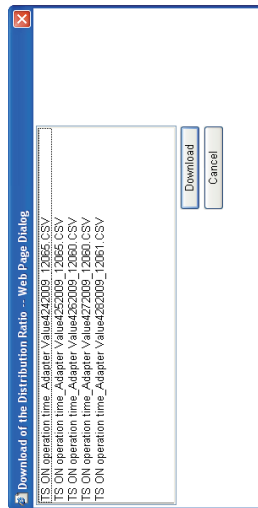


Download	: Use to download
Cancel	: Use to close the Download of the Distribution Ratio screen.

4-12-1. Downloading

4-12-1-1. How to download


- The download procedure is described below.
- (1) Click the file to download to highlight it
 - (2) Click to display the File Download screen.

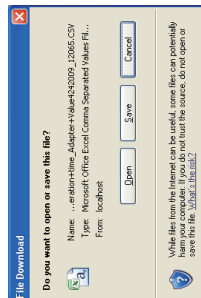


The Information Bar may be displayed due to the Internet Explorer security settings. If the Information Bar appears, follow the instructions displayed. A message "Did you notice the Information Bar?" may be displayed, as shown to the right.

16. Intelligent Management System


(3) Click to download the data and display it in Excel.
 If Microsoft Excel is not installed, the data is displayed in Internet Explorer. In this case, it may not be possible to display some characters, depending on the language. Save the downloaded file.

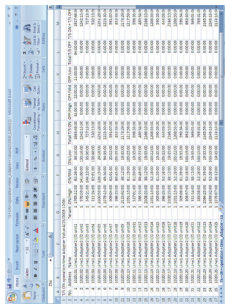

(4) Click to open the Save As dialog box. Specify the folder to save the file in.

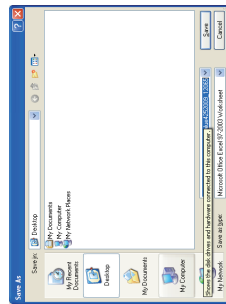

(5) When the saving is complete, the Download complete screen appears as shown in the right.
 * It is not displayed depending on the setting.

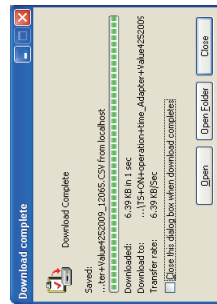


Click to display the data in Excel. If Excel is not installed, the data is displayed in Notepad.


* We recommend installing Microsoft Excel to calculate distribution ratio data.
 * Excel is used to calculate and check data.
 * Only an Administrative user can save this data.

<Reference> How to Display the File Download Screen
 If the File Download screen is not displayed even if you click , follow the procedure below to change the Internet Explorer settings.


(1) On the [Tools] menu of Internet Explorer, click [Internet Options] and the Internet Options screen is displayed. Click the [Security] Tab.

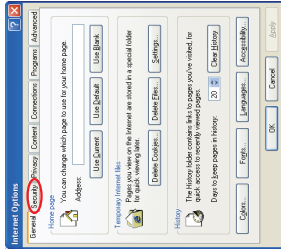

(2) The Internet Options screen switches to the Security Tab.
 Click .

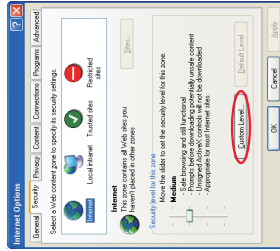

(3) The Security Settings - Internet Zone screen is displayed.

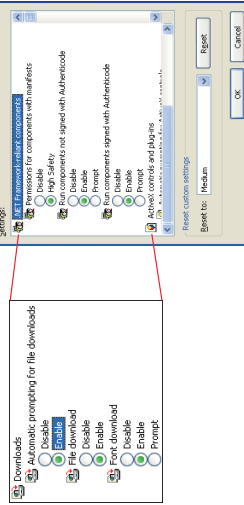

From the list of setting items, find [Downloads], and click [Enable] on the [File download] and [Automatic prompting for file downloads] items.

(4) After you change the settings and click , the question "Are you sure you want to change the settings for this zone?" is displayed. Click the [Yes] button to change the settings. When these settings are changed, [Security level for this zone] in screen (2) changes to [Custom]. Click to close the Internet Options screen.

16. Intelligent Management System

5. Supplementary Information

- This Web Software must be installed on the personal computer running the CZ-CSWKC Basic Software. Refer also to the Supplementary Information in the CZ-CSWKC Basic Software operation manual.
- When connecting P-AIMS through the Internet, take adequate security measures such as installing firewall or antivirus software. To set up the firewall or antivirus software, refer to respective manuals.
- The Administrator user ID and password are provided as default. Change the user ID and password for security reasons. Be sure not to let a third party become aware of the new user ID and password.
- Please note that we will not provide compensation in the following circumstances:
Any fault caused by a third party who became aware of the user ID and password.
Any fault caused by sharing a PC between P-AIMS and another application.
- Limitations on changing settings
Some types of air conditioners are limited in the settings which they support. For example, cooling-only air conditioners cannot be set to heating. Floor-type models typically support only high fan speeds. Ceiling mounted models do not have flaps, and therefore cannot change the fan direction.
You should be aware of the limitations of the air conditioner models in your system.
For more information, contact your dealer or service provider.
- After the settings of an indoor unit are changed from the P-AIMS System, the display may revert temporarily to the former settings. This is more likely to occur with all-unit operations. The cause is communications delay, not any malfunction in the system. If you wait a few minutes, the display will show the correct information.
- Errors occurred while operating during a thunder storm or because of electromagnetic interference.
Power the P-AIMS System off and then on again.
As a rule, the system should be powered off only in cases such as the above.
Correct management of air conditioning is not possible when the system is powered off.

44

6. License Certification

Before using the Web Software, first perform a work procedure called "license certification."

To perform license certification, make an inquiry by sending the inquiry key to the inquiry e-mail address below. You will be registered as a user and issued a release key, and then receive a reply.

<Contact Information>
Product ID Issuance Desk,

E-mail address: cmc_productid_desk@gg.jp.panasonic.com

When you make an inquiry, send the following information together with the inquiry in order to be registered as a user and issued a release key.

- (1) Product name
- (2) Company name/contact person
- (3) Phone number
- (4) E-mail address
- (5) Inquiry key

* If you do not input a release key, you will no longer be able to use the system after 30 days elapses. Obtain a release key and perform license certification as soon as possible.
* Make an inquiry as soon as possible because it may sometimes take several days to be issued a release key.

License Certification Procedure

The procedure from after the P-AIMS system is installed up until the end of license certification is described below.


- (1) Check the inquiry key from the License Certification screen.
- (2) Send the inquiry key to the Product ID Issuance Desk (cmc_productid_desk@gg.jp.panasonic.com).
Also notify us of the product name, company name/contact person, phone number, and e-mail address.
- (3) A release key is issued.
You are registered as a user and a release key is issued. A reply is sent to the registered mail address.
- (4) Input the release key from the License Certification screen.
- (5) The license certification procedure is finished.

45

16. Intelligent Management System


Performing License Certification

1. A License Certification screen such as one shown below appears when you start a P-AIMS system for which license certification is not completed.

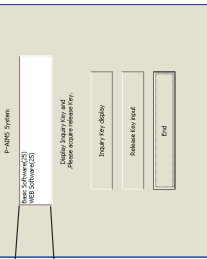

"Web Software (25)" means that the number of remaining days that you can use the Web Software is "25." It is not displayed after you finish license certification.

* After you start a P-AIMS system for which license certification is not finished, the License Certification screen will appear at 9:00 a.m. and 3:00 p.m. This screen is not displayed after you finish license certification. If you install optional software, the License Certification screen will appear until license certification is finished for all of the software.

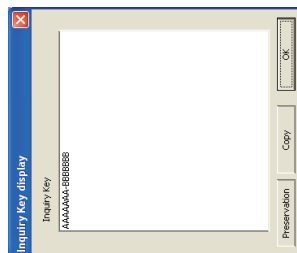


2. If you click the Inquiry Key display button in the License Certification screen, the Inquiry Key display screen appears, and the inquiry key is displayed in the screen. Send the key displayed in this screen to the Product ID Issuance Desk (cmc, productid_desk@gg.jp.panasonic.com) by e-mail. At the same time, also notify us of the following items.
 - (1) Product name (required)
 - (2) Company name/contact person
 - (3) Phone number
 - (4) E-mail address (required)
 You will be registered as a user and issued a release key.



- :Clicking this button saves the inquiry key as a text file. Follow the instructions on the screen to save the text file. Enter the product name, company name/contact person, phone number, and e-mail address in this saved text file, and send the text file to the Product ID Issuance Desk by e-mail.
- :Clicking this button copies the inquiry key to the Windows clipboard. Paste the inquiry key into your mail.
- :Clicking this button closes the Inquiry Key display screen.

3. When you receive the release key, restart the P-AIMS system. If license certification is not finished for the P-AIMS system, the License Certification screen on the right appears before the P-AIMS system restarts. Click the Release Key Input button to display the Release Key input screen, and enter the release key.

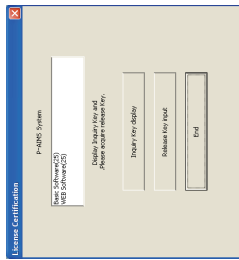

* If you install multiple P-AIMS system software, the same number of license certifications is required. In such a case, the number of release keys sent will be the same as the number of inquiry keys. Enter all of the received release keys sequentially, and perform license certification. (There is no set order for entering release keys, so they can be entered in any order.)

License certification is finished once all of the release keys have been entered. Click the End button. The License Certification screen closes, and the P-AIMS system starts.

* The P-AIMS system will start even if you click the End button without entering the release key. You can use the system as is until license certification is finished. (The system can be used for a period of 30 days.)


16. Intelligent Management System

7. Preparation

7-1. Firewall setting


Set up the firewall before installing the Web Software.

1. Click **start** at the bottom-left corner of the screen to display the menu.
Click "Control Panel".

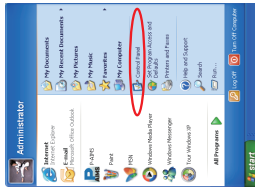

2. The Control Panel window opens.


If the window appears as shown in the right, click "Switch to Classic View" to change the view. (Omit this step if the window already appears as shown in step 3.)

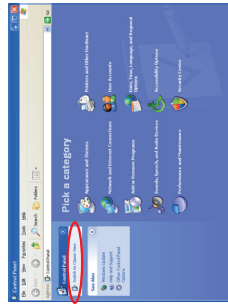

3. Windows classic style Control Panel window appears.
Double click "Windows Firewall".



4. The Windows Firewall screen appears.
Click the Exceptions tab.

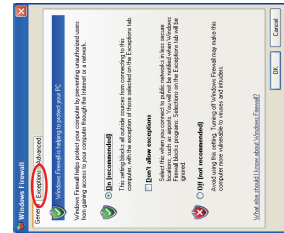

5. Add the port number to exceptions.






6. The Edit a Port screen appears.

Enter the following:
Name : "p-arms"
Port number : "808"



7. Check the list under "Name" in the Exceptions tab.

Has "p-arms" been added?
Is "File and Printer Sharing" checked?
If both are checked, click **OK**

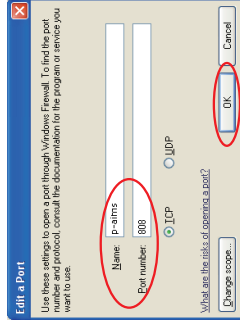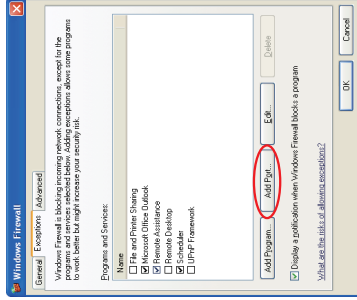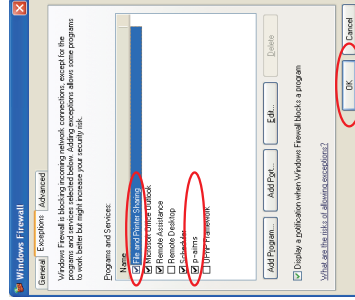

16. Intelligent Management System





7-2. Installation

During installation, a screen prompting restart of the operating system may appear. In that case, restart the operating system.

1. First, stop the P-AIMS system. Insert the Web Software CZ-CSWWWG2 CD of the air-conditioning integrated system (P-AIMS system) you purchased into the CD-ROM drive. The program on the CD-ROM starts automatically and makes preparations for installation. If installation does not start, double-click Setup.exe of the CD-ROM drive to start it.

2. The InstallShield Wizard prepares to install the P-AIMS system.

* Keep the Product ID Issuance Certificate in a safe place. The Product ID is required to install the air-conditioning integrated system. The Product ID Issuance Certificate will not be reissued.

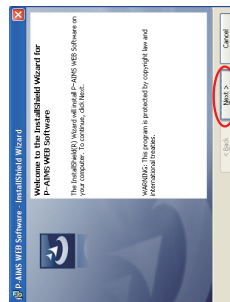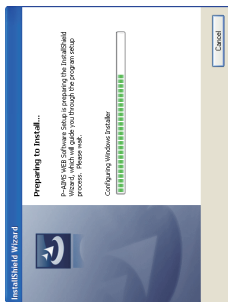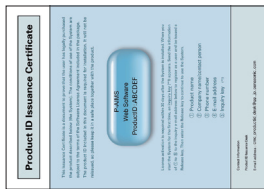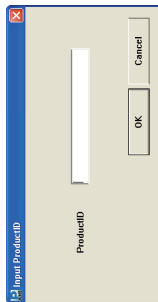





3. After a short while, the "The InstallShield(R) Wizard will install P-AIMS Web Option on your computer. To continue, click Next." message appears. Click the **Next >** button.

4. Next, the License Agreement screen appears. Carefully read the license agreement, and click "I accept the terms in the license agreement" if you agree to the terms of the license agreement. The **Next >** button becomes active. Click the **Next >** button. (The software cannot be installed if you do not agree to the terms of the license agreement.)

5. The "The wizard is ready to begin installation. Click Install to begin the installation." message appears. Click the **Install** button.



6. The installation of the P-AIMS system begins. Please wait a while.

7. The Security Warning screen appears. Click **Run**. This screen may not appear, depending on the computer setting. In that case, proceed directly to the next step.

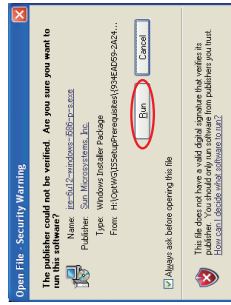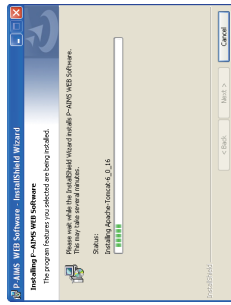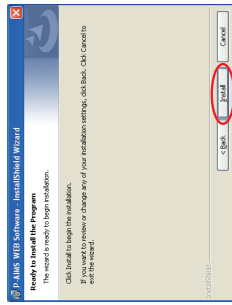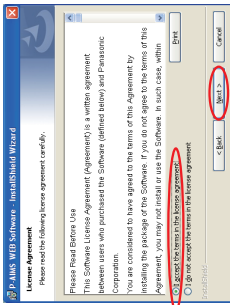


16. Intelligent Management System




8. When the P-AIMS Web Software setup is finished, the Apache Tomcat Setup screen appears.

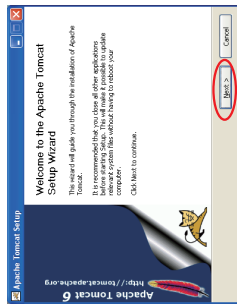

9. The setup screen inquires if you agree with the license agreement. Click

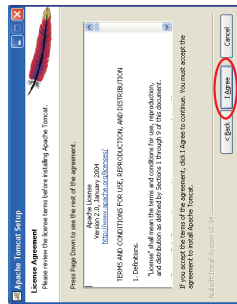


10. Change the Apache Tomcat component settings. Double click "Tomcat" to display functions of Tomcat. Click "Service" to add a checkmark.

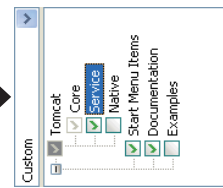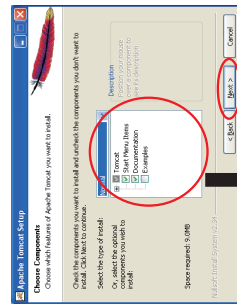



11. Use the default destination folder for Apache Tomcat installation.




Note: Do not change the default destination folder. If it is changed, the Web Software will not operate properly.

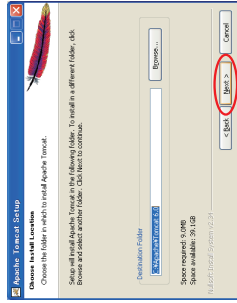


12. Also do not change the configuration setting.

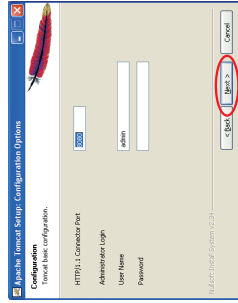

13. Use the default setting for Java installation destination.

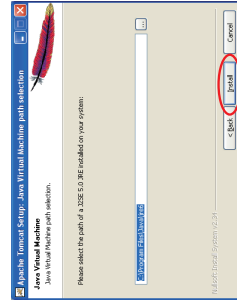

14. The installation of Apache Tomcat begins. Please wait a while.

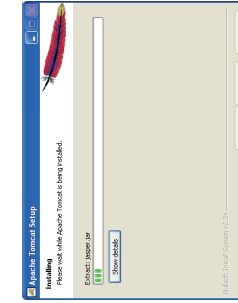

16. Intelligent Management System

15. When the Apache Tomcat installation is finished, the following checkboxes are displayed.

- Run Apache Tomcat
- Show ReadMe

Uncheck both of the checkboxes and click .


16. The Security Warning screen appears.

Click .


This screen may not appear depending on the computer setting. In that case, proceed directly to the next step.





17. Apache HTTP Server is automatically set.


18. Windows Firewall inquires if you want to block Apache HTTP Server.


Click . This screen may not appear depending on the computer setting. In that case, proceed directly to the next step.

19. The Web Software installation is complete.

Click .

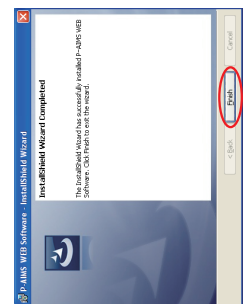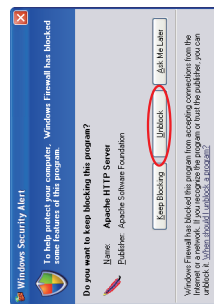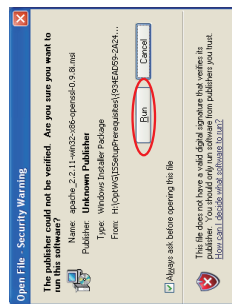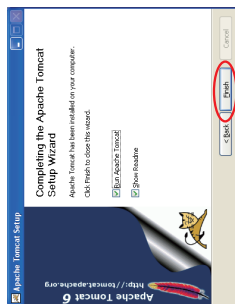

20. When the Web Software installation is complete, a screen prompts you to restart the system. Remove the Web Software CD and click .

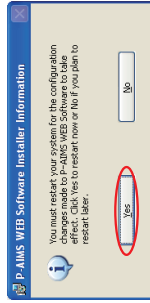

* Caution
If you have not finished the firewall setting described in 7-1, perform the setting first and then restart the system.

7-3. Display after restart

When the system restarts, P-AIMS also starts. The Web functions are enabled and the Web menu item can be selected.



7-4. Settings

Once installation is complete, settings are required for "Web basic settings", "Web user registration", etc. Refer to the explanations in the corresponding sections for information on these settings.

For information on basic operations of the P-AIMS system, refer to the P-AIMS Basic Software operation manual.

16. Intelligent Management System

7-5. WEB Software Pre-check Sheet

The P-AIMS system Web Software (P-AIMS Web Software) requires connection to an intranet or LAN. We need to check the user's personal computer (network) environment before installing the software.
Check the appropriate checkboxes and enter necessary information in the pre-check sheet below and send it to the Panasonic engineer in charge of test operation.

- Requests
Do not connect to the network before the following settings are complete.
Use a Category 5(*) or higher LAN cable.
- * One of the electric characteristic grades of communication cables standardized by the US Telecommunications Industry Association (TIA) and the US Electronic Industries Association (EIA). The Category 5(*) LAN cable is capable of data transmission up to 100MHz bandwidth.)

Take adequate security measures such as setting a firewall or installing antivirus software to protect the network from unauthorized external access.


The following environment is required to connect to the P-AIMS WEB Software from the Web browser on the customer's personal computer to operate the air conditioners. Check the applicable checkboxes.

- a Supported browser : Internet Explorer 6.0 or later
- b Screen resolution : 1024 x 768 or more is recommended
- c Communication protocol : IPV4 (IPV6 is not supported)

Proceed if all checkboxes are checked.

Network Connection Environment Check


- (1) Does the P-AIMS Web Software connect to the personal computer for Web operation on a one-to-one basis?

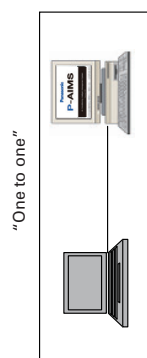

- d Yes → No information required in advance.
The Panasonic engineer in charge of test operation will make the settings during test operation.
 - e No → Go to (2).
- (2) Is the network that you would like to connect to an existing network?
- f Yes → Go to (3).
 - g No → Go to (6).

- (3) Is a DHCP server used?
h Yes → Go to (4).
i No → Go to (5).

Using the DHCP server

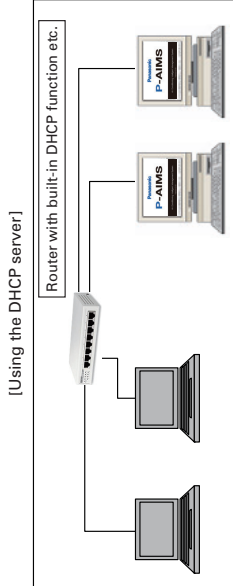

***Enter the device names that are set for the P-AIMS Web Software.**

- (4) Device name for the P-AIMS Web Software

j | _____)


- (5) If connecting to more than one P-AIMS system

k | _____)
l | _____)

→ Go to (7).

- (6) Using a fixed IP address

[Using a fixed IP address]

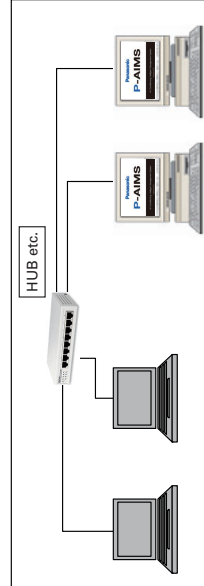

***Enter the IP address that is set for the computer running the P-AIMS Web Software.**

IP address of the computer running the P-AIMS Web Software

l | _____)

If connecting to more than one computer running P-AIMS Web Software

m | _____)
n | _____)

Subnet mask for the computer running P-AIMS Web Software

o | _____)

Default gateway for the computer running P-AIMS Web Software

p | _____)

→ Go to (7).

16. Intelligent Management System

Is the network construction complete? (Responsibility of the user.)

p Yes → Go to (3).
q No → The user is responsible for the network construction. When the network construction is complete, go to (3).

(7) Would you like to use the function to send an email when an alarm occurs?

r Yes → Go to (3).
s No → That is all. We appreciate your cooperation.

Email Delivery Function Check

The P-AIMS Web Software incorporates a function to send an email when an alarm occurs. This function requires the following environment.

t Mail transmission protocol: SMTP (Exchange Server is not supported) if OK, go to (8).

(8) Do you have a contract for a mail server connection?

u Yes → Complete the following.

v [Email delivery server address (SMTP)

w [Sender account name

x [Recipient account name 1

y [Recipient account name 2

z [Recipient account name 3

[]

Thank you for your cooperation.

Glossary

- ⊙ Intranet - In-house network constructed using standard Internet technologies such as TCP/IP communication protocol.
- ⊙ LAN - LAN (Local Area Network) is an in-house communications network. It connects computers and devices such as printers in the same building using twisted pair cables, coaxial cables, or optic-fiber cables for data transmission.
- ⊙ Internet - The Internet is a network of interconnecting networks that use Internet protocols.
- ⊙ WAN - WAN is the abbreviation of Wide Area Network. This word is used as a contrast with LAN, which is constructed, managed, and operated by the user.
- ⊙ Java Applet - Java Applet is a Java application loaded into a Web browser through the network and then implemented.
- ⊙ Communication protocol - Set of protocols when computers communicate through a network. It is sometimes called the communication procedure or networking protocol.
- ⊙ DHCP - A protocol that automatically assigns necessary information such as an IP address to a computer which temporarily connects to the Internet. Information such as Gateway server IP addresses, DNS server IP addresses, and IP address ranges that can be assigned to a subnet mask and client is set in the DHCP server. The DHCP server provides this information to a computer accessing the Internet via a dial-up connection or some other method. When the client ends communication, it automatically recovers the address and assigns it to another computer. DHCP allows users who are not familiar with network settings to connect to the Internet easily. It also allows the network administrator to easily manage many clients.
- ⊙ Hub - Hub (networking device) - A device for connecting multiple network devices with cables when using Ethernet (10BASE-T, 100BASE-TX, etc.), USB, or IEEE 1394.
- ⊙ Router - In the computer network a router is a communication device that relays and connects different networks. It has become widespread since TCP/IP was first used as a communication protocol.
- ⊙ IP address - The IP address is a number for identifying the device that sends and receives packets. It is defined by the IP. It was originally used for the Internet in a limited sense, but is now also used for LAN as the Internet has become more widespread.
- ⊙ Subnet mask - A subnet mask is a number for identifying the network address and host address in the IP address.
- ⊙ SMTP Simple Mail Transfer Protocol - A protocol to send email. The protocol specification is defined by RFC821.
- ⊙ Exchange Server - A mail server released by Microsoft.

16. Intelligent Management System

- ⑥ Account -
In the computer field, an account is the right to log into a specified domain (network or computer.)
A user indicates the user of a computer system.
An account assigned to a user is also called a "user account."
There are accounts for logging into a network and accounts for sending and receiving email.
A password is always associated with an account (ID). A user can log into the network or computer that he or she is authorized for by entering the account ID and password.
In some cases, this right (ID) and password together are referred to as an account.

User memo space

If you fill this out at the time of purchase, it is convenient when ordering repairs etc.

Serial No.	
Date of installation	
Dealer	Telephone No. ()

16. Intelligent Management System

4. Layout Display Software (CZ-CSWGC2)

Operation Manual
Air Conditioning
Intelligent Management System
CZ-CSWGC2
Layout Display Software

P-AIMS

Thank you for purchasing our monitoring and control system.
 Before using the system, be sure to read this manual carefully. After reading it, store it in a convenient location for easy reference.

Operation Manual
 Air Conditioning
 Intelligent Management System
CZ-CSWGC2
Layout Display Software

Contents	
Precautions on Using This Product.....	i
1. Introduction	1
2. Startup and exit	2
3. Quick reference	3
4. Using the system	4
5. Supplementary Information	32
6. License Certification	34
7. Preparation	37
[Reference] Parts list	40

16. Intelligent Management System

Contents

Precautions on Using This Product	i
1. Introduction	1
2. Startup and exit.	2
2-1. Startup	2
2-2. Exit.....	2
3. Quick reference	3
4. Using the system	4
4-1. Layout Display	4
4-1-1. Screen selection method	5
4-1-1-1. Layout screen selection method	6
4-1-1-2. How to display layout screen one at a time	6
4-1-1-3. How to display multiple layout screens	6
4-1-1-4. Operation method when multiple layout screens are displayed	7
4-1-2. Start/stop control method.....	8
4-1-2-1. How to select an I/D unit (digital point)	8
4-1-2-2. Start/stop control method (indoor unit)	8
4-1-2-3. Start/stop control method (digital point)	9
4-1-2-4. Start/stop control method (analog point)	9
4-1-3. Layout operation method.....	10
4-1-3-1. How to confirm unit names	10
4-1-3-2. How to confirm analog data such as temperature	10
4-1-3-3. How to display popup menu	11
4-1-3-4. Popup menu "Unit details"	11
4-1-3-4-1. Indoor unit	11
4-1-3-4-2. Accumulated value	12
4-1-3-4-3. Digital point	12
4-1-3-4-4. Analog point	12
4-1-3-5. Popup menu "Check schedule"	13
4-1-3-6. Popup menu "Error log"	13
4-1-3-7. Popup menu "Maint. ON"	14
4-1-3-8. Popup menu "Name registration"	14
4-1-3-9. Popup menu "Meter value settings"	14
4-1-3-10. Popup menu "High/low-limit alarm settings"	14
4-1-3-11. Popup menu "Output value settings"	15
4-1-3-12. How to check the configuration of indoor units connected to an outdoor unit	15
4-2. Layout Master.....	16
4-2-1. Registering layout diagrams	17
4-2-1-1. How to select registered layout diagrams	18
4-2-1-2. How to select new layout diagrams	19
4-2-1-3. How to allocate parts to layout diagrams	21
4-2-1-4. The Parts List screen	21
4-2-1-5. The Parts screen	22
4-2-1-6. How to allocate parts to layout diagrams	23
4-2-1-7. How to move parts within layout diagrams	24
4-2-1-8. How to delete parts from layout diagrams	24
4-2-1-9. How to delete layout diagrams	25
4-3. Settings.....	26
4-4. Layout backup	27
4-4-1. Starting layout information backup	27
4-4-2. Deleting layout information backups.....	28
4-4-3. Changing the save location for layout information backups	28
4-5. Restoring layouts	29
4-5-1. Starting layout restoration.....	30
4-5-1-1. Starting layout restoration	30
4-5-1-2. Canceling layout restoration	31
4-5-1-3. Re-specifying the layout restoration file	31
5. Supplementary Information	32
6. License Certification	34
7. Preparation	37
7-1. Installation	37
7-2. Display after restart.....	39
7-3. Settings	39
[Reference] Parts list	40

16. Intelligent Management System

■ Precautions on Using This Product

★ IMPORTANT ★

- Before you can use the P-AIMS system, you need to first perform a work procedure called "license certification."
- Please perform the license certification referring to "6.License certification".
- Duplication of all or part of this software and documentation without the express consent of the holder of the rights to the above, and transfer of the software to another party, are prohibited by law.
- This software and manual are not to be reproduced, in whole or in part, without permission.
- In principle, each set of this software is purchased for use on a single computer.
- Please note that we bear no responsibility for any effects resulting from the use of this software and manual.
- Panasonic will not be liable for any claim based on errors in calculations of distribution ratios and utility usage caused by faults in this equipment or software.
- The specifications of this software, and the content of this manual, are subject to change without notice, for the sake of improvement.
- This software is used to calculate distribution ratios and charges according to the load ratios estimated for each indoor unit.
- It is not based on the Measurement Act, so it cannot be used for public transactions and similar purposes.
- The content of this manual is limited to explanation of how to use this software. It does not cover the usage methods for the operated machinery and optional features, or for the OS etc., so refer also to the relevant manuals for those elements.
- The screen image examples presented in this manual are intended to illustrate the explanation of layouts, and do not represent actual operating conditions. The tenant names displayed are also fictional.
- Displays and operations may differ from the examples in this manual, depending on versions of Excel and the OS used.
- Refer to "Read Before Using This System" for the warranty terms for this software.
- Panasonic will not be liable for any violation of the rights of any third party stemming from use of information in this manual, or for violation of other rights.
- Microsoft, Windows XP and Microsoft Excel are trademarks of Microsoft Corporation in the United States and other countries.
- Other product names are trademarks or registered trademarks of the corresponding companies.
- Other products are copyrights of the corresponding companies.

1. Introduction

This layout display software (referred to below as "the system") is intended to present the allocation of air conditioners and other devices in Air Conditioning Intelligent Management System (referred to below as "the P-AIMS system") in layout diagrams and operate them.

This system is installed on the personal computer which runs the P-AIMS System (basic software).

The system displays the layout of the building managed by the P-AIMS system and displays the operation status of the indoor units installed there, set temperatures and room temperatures. It can also control operations such as run, stop and mode changes.

16. Intelligent Management System


2. Startup and exit

2-1. Startup

1. Double click on the P-AIMS shortcut on the desktop.



The window below appears. The system starts up and the Status/Operation screen is displayed.

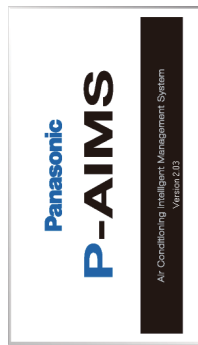

2-2. Exit


1. From the Menu bar, select Maintenance - Exit.



2. The Password authority 2 screen is displayed. Input the password.




3. The System Exit screen is displayed. Click on the button.

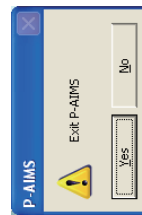

3. Quick reference

Menu List

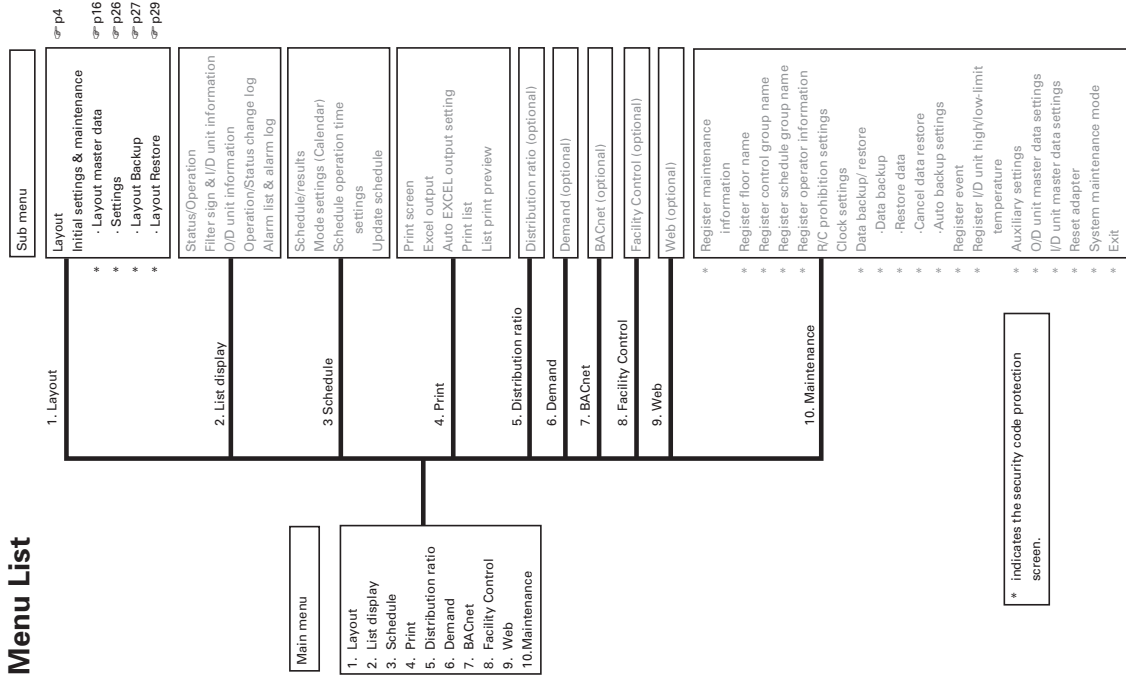


* indicates the security code protection screen.

16. Intelligent Management System

4. Using the system

4-1. Layout Display

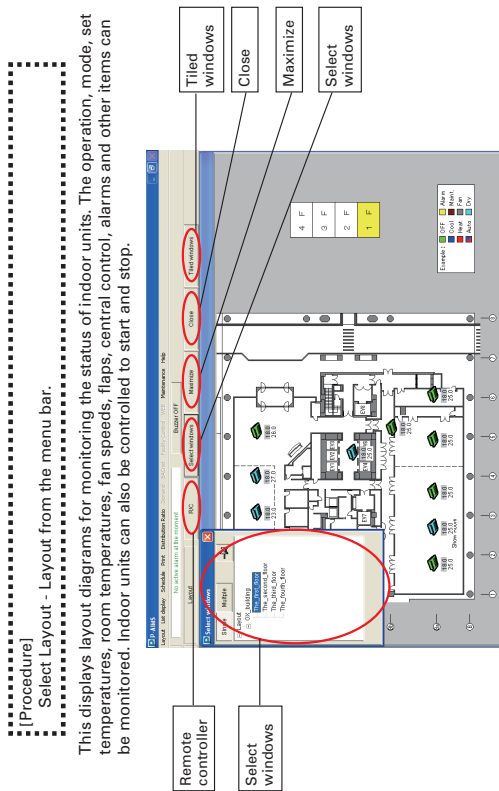


* Icons for indoor unit, outdoor unit, Accumulated value, and Analog input/output etc. vary depending on the unit used.
 * For the accumulated value operations, optional Distribution ratio software is required. For the analog point operations, optional Facility control software is required. For more information, please contact your dealer or service provider.


4-1-1.

Screen selection method

Display the layout screen by selecting it from the Select windows screen. If no layout diagram has been specified before the Layout operation is used, the Select windows screen is displayed. The Select windows screen can also be displayed by clicking on the Select windows button.

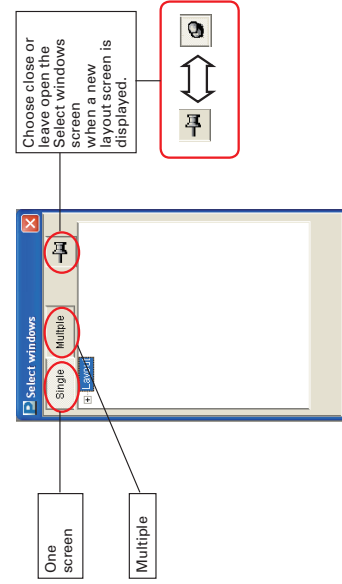

- RIC** : Displays the remote control units that control the operations of indoor units
- Select windows** : Displays the Select windows screen for selecting layout screens.
- Maximize** : Maximizes the layout screen.
- Close** : Closes and deletes the displayed layout diagram.
- Tiled windows** : Arranges the displayed layout diagram.

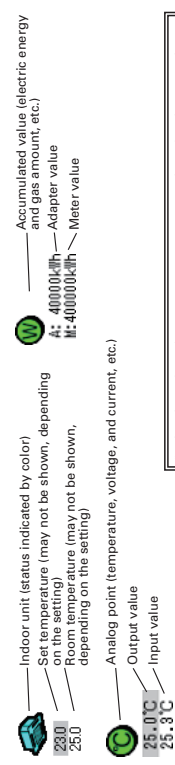


* Analog data (temperature, accumulated value, analog point, etc.) is not displayed depending on the settings.

- Single** : Displays the layout screen as one-screen display. When a screen is selected, the previous screen is closed, and only the newly-selected one is displayed.
- Multiple** : Displays multiple layout screens. Up to four layout screens can be displayed. Screens in excess of the maximum cannot be displayed. The Select windows screen closes when a new layout screen is displayed. This is convenient for displaying one screen at a time.
- Icons** : The Select windows screen remains open even when a new layout screen is displayed. This is convenient for displaying multiple layout screens, or for checking them one by one.

16. Intelligent Management System

4-1-1-1. Layout screen selection method

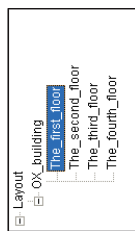

- ① Double click on Layout. Alternatively, click on . 'OX_building', the group name, is displayed.
- ② Double click on 'OX_building'. Alternatively, click on the . '1F' to 4F are displayed for the name.
- ③ Click on 'The_first_floor'. Display the layout for 'OX_building 1F'.

* After you have displayed 'Layout' and 'OX_building' once, the next time you will only have to click on '2F' to display the layout for 'The_second_floor'.

4-1-1-2. How to display layout screen one at a time

Click on the button so that the button remains pressed. Every time a layout screen is selected on Select windows screen, the previous layout screen closes and the newly-selected one is displayed.

When the button is displayed, the Select windows screen closes when a new layout screen is displayed.

When the button is displayed, the Select windows screen remains open even when a new layout screen is displayed. More screens can be selected.

Click on the button in the top right of the select windows screen to close it.

4-1-1-3. How to display multiple layout screens

Click on the button so that the button remains pressed. Even when a layout screen is selected on Select windows screen, the previous layout screen stays open and the newly-selected one is displayed. However, once four screens are open, no more can be displayed.


When the button is displayed, the Select windows screen closes when a new layout screen is displayed.

When the button is displayed, the Select windows screen remains open even when a new layout screen is displayed. More screens can be selected.

Click on the button in the top right of the Select windows screen to close it.

4-1-1-4. Operation method when multiple layout screens are displayed

When multiple layout screens are displayed successively, each is displayed in a slightly different position from the one before, as illustrated below.

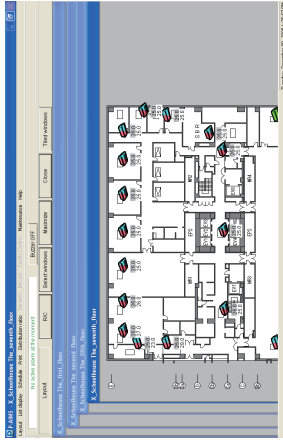


Click on the button to maximize the layout screen that is focused (the one that has blue title bar) to arrange the layout screens tidily. When one screen is maximized, all the others are closed.




(For two screens)

Click on the button to close the layout screen that is focused (the one that has blue title bar).

Click on the button to change the display method to suit the number of layout screens on display.

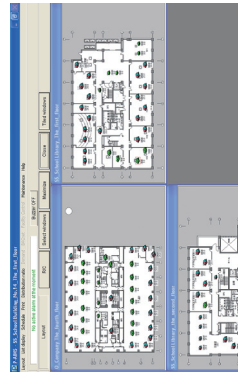

(For three screens)

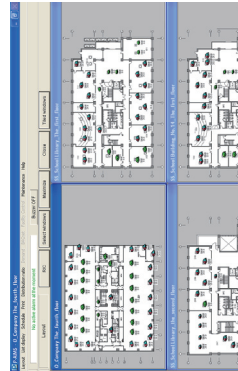

(For four screens)

16. Intelligent Management System

4-1-2. Start/stop control method

Indoor units, digital points, and analog points can be controlled to start and stop.

4-1-2-1. How to select an I/D unit (digital point)

To control start/stop, move the mouse cursor to the target indoor unit (digital point) and click it. The clicked indoor unit (digital point) is displayed with a check mark. Click the icon again to clear the check mark. To select multiple indoor units (digital points), drag the mouse over the area to include the target indoor units (digital points) as illustrated in the left side diagram below. Indoor units (digital points) in the dragged area are displayed with check marks. Perform the same operation to clear the check marks.




- * If an indoor unit with check mark is included among multiple indoor units in the dragged area, the check mark for that indoor unit is cleared.
- * Digital points can be selected using the same method.
- * Indoor units and digital points cannot be selected at the same time.

4-1-2-2. Start/stop control method (indoor unit)

Click the **RIC** button on the upper part of the screen while the indoor unit is selected to display the following R/C screen. On this R/C screen, the operation, mode, set temperatures, fan speeds, flaps, and central control can be changed. Click the **Cancel** button to close the R/C screen without transmitting settings.

- * When the R/C button is clicked without selecting any indoor units, the R/C screen does not appear.
- * When multiple indoor units are selected, the indoor unit operation status is not displayed.

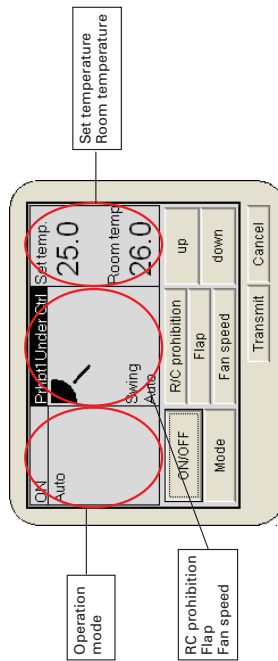

- .Switches between "ON" and "OFF" every time it is clicked.
- .Switches between "Auto", "Heat", "Cool", "Fan", and "Dry" every time it is clicked.
- .Switches between "RC OK (blank)", "RC Prohibition 1" to "RC Prohibition 7" every time it is clicked.

* RC Prohibitions 1 to 4 are for CZ-CFUNC2.

- Flap
- Fan speed
- up
- down
- Transmit

- .Switches between "swing" and "F1" to "F3" every time it is clicked.
- .Switches between "Auto", "High", "Mid", and "Low" every time it is clicked.
- .Changes the room temperature setting.
- *The setting temperature range can be changed on the screen displayed by selecting "Maintenance" - "Register I/D unit high/low-limit temperature".
- .Transmits set content to the I/D unit.

4-1-2-3. Start/stop control method (digital point)

Click the **RIC** button while a digital point is selected to display the ON/OFF screen.

Click the **Cancel** button to close the ON/OFF screen.





- .Click this button to transmit the start signal and close the screen.
- .Click this button to transmit the stop signal and close the screen.

4-1-2-4. Start/stop control method (analog point)

Use this method to change the output value of the analog output.

Display the popup menu for the analog point as shown in "4-1-3-3. How to display popup menu". Click "Output value settings" in the menu to display the "Output value settings" screen. Change the output value.

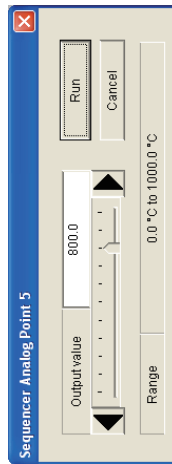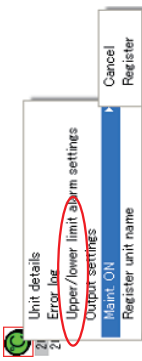

- Then click the **Run** button to set the analog output value and close the screen.
- Click the **Cancel** button to close the screen without changing the value.

16. Intelligent Management System

4-1-3.


Layout operation method

The operations for the indoor unit, outdoor unit, accumulated value, facility control unit (collectively displayed as unit) displayed in the Layout screen are as follows:

4-1-3-1.

How to confirm unit names

To check the names of the units, hold the [Ctrl] key down and move the mouse pointer over the desired unit. This causes the address number and the name of the unit displayed when the pointer is changed to

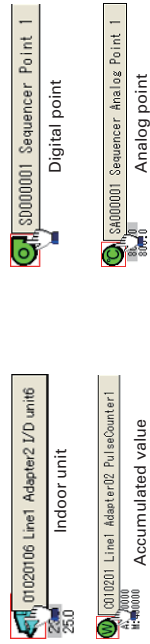

* Icons for indoor unit, Accumulated value, Digital point, and Analog point, etc. vary depending on the unit used.

4-1-3-2.

How to confirm analog data such as temperature

I/D unit displays temperature, distribution ratio displays accumulated value, and analog point displays analog data such as temperature and current. To hide these analog data, follow the setting procedure described in 4-3. Settings. In this case, to display the analog data temporarily, hold the [Shift] key down and move the mouse pointer over the desired unit, then the analog data is displayed when the pointer is changed to




* Icons for I/D unit, Accumulated value, and Analog point, etc. vary depending on the unit used.

4-1-3-3.

How to display popup menu

The mouse pointer is usually presented by, but when a unit is selected, the pointer changes to. Right click to display the Popup menu as illustrated below.

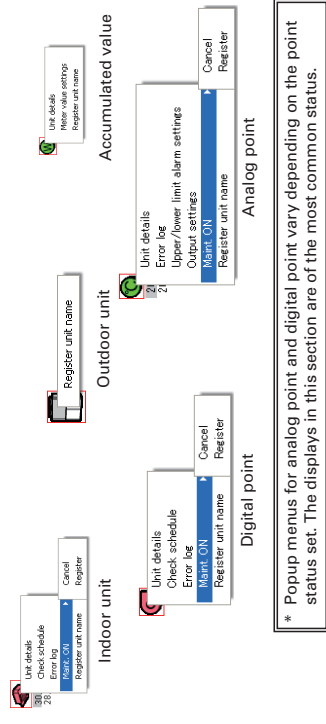

* Popup menus for analog point and digital point vary depending on the point status set. The displays in this section are of the most common status.

4-1-3-4.


Popup menu "Unit details"

Click on the Unit details in the popup menu to display the "Unit details" screen. The "Unit details" screen vary depending on the indoor unit, accumulated value, digital point, and analog point. Details of the each unit are as follows.

4-1-3-4-1.

Indoor unit


Displays details of the operation status of the I/D unit.

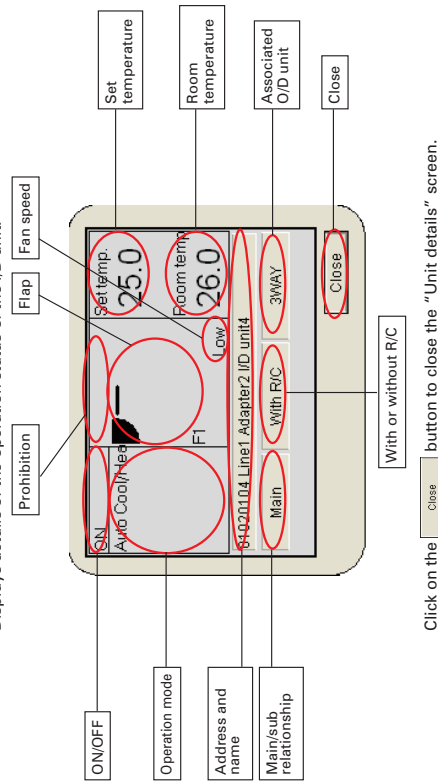

Click on the button to close the "Unit details" screen.


16. Intelligent Management System

4-1-3-4-2. Accumulated value
Displays the detail status of the accumulated value.

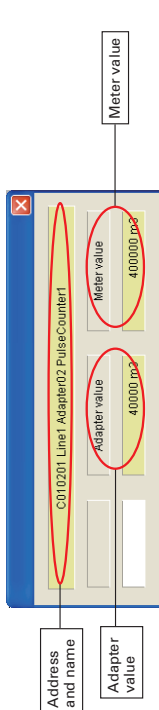


Click on the button to close the "Accumulated value details" screen.

4-1-3-4-3. Digital point
Displays the detail status of the digital point.

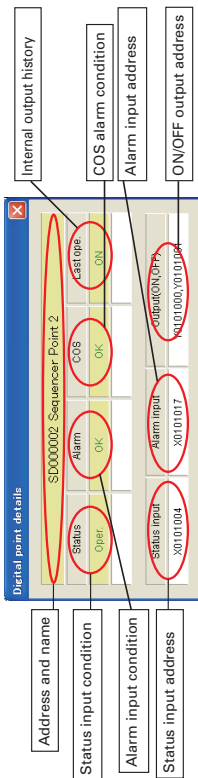

Click on the button to close the "Digital point details" screen.


4-1-3-4-4. Analog point
Displays the detail status of the analog point.

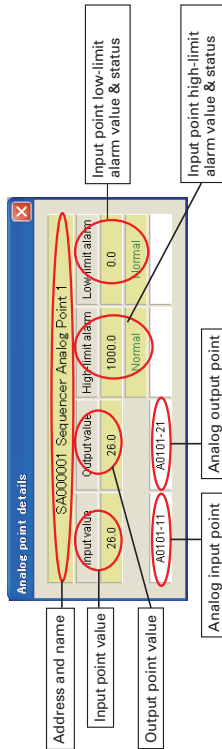

Click on the button to close the "Analog point details" screen.

4-1-3-5. Popup menu "Check schedule"

This menu is for indoor units and digital point (output) units. It displays the operation schedule for the corresponding unit on the current date and the next two days. Click on the Check schedule in the popup menu to display the "Schedule" screen.

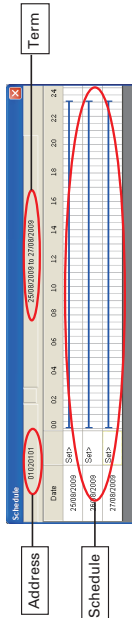

Click on the date on the "Schedule" screen to show the "Detailed schedule" screen for the date concerned, as illustrated on the right.

Click on the button to close the "Schedule" and "Detailed schedule" screens.

Detailed schedule						
Time	ON	Mode	Set T.	Fn	Flap	Prbr
1 08:00	ON	Cool				
2 18:00	OFF					
3						
4						
5						
6						
7						
8						
9						
10						
11						
12						
13						
14						
15						
16						
17						
18						
19						
20						

4-1-3-6. Popup menu "Error log"

This menu displays the error logs for I/D units, digital point, and analog point. Click on the Error log in the popup menu to show the "Error log" screen.

- Key
- Alarm code : Displays alarm codes at the times alarms are issued/restored.
 - Alarm date : Displays dates and times when alarms are issued/restored.
 - Alarm : Displays occurrence/restoration status of alarms.

Click on the button to close the "Error log" screen.

Error log				
Alarm code	Alarm date	Alarm		
[Date]	2009/02/08 09:24:41	OFF		
[Date]	2009/02/08 09:20:26	ON		
[A01]	05/02/09 11:31:26	OFF		
[A01]	05/02/09 11:25:46	ON		
[Date]	2009/02/08 02:20:43	OFF		
[Date]	2009/02/08 02:15:23	ON		
[Date]	16/07/08 16:12:21	OFF		
[Date]	16/07/08 16:08:36	ON		
[A01]	07/07/08 13:22:46	OFF		

16. Intelligent Management System

4-1-3-7. Popup menu "Maint. ON"

Indoor units, digital point, and analog point issue alarms. Alarms can be temporarily suspended for mechanical work or device malfunctions. When you Register, alarm will not be issued when an error occurs. When you Cancel, the alarm function is restored. Start/stop control and alarm display are disabled for devices registered for maintenance.
Click on the Maint. ON in the popup menu, then click on the Cancel or Register in the sub-menu to specify Cancel or Register.

4-1-3-8. Popup menu "Name registration"

Use this menu to change names for any unit.
When the Password screen is displayed by clicking the menu, enter (Password) level 2). When the "Name registration" screen is displayed, change the name.
After changing the name, click on the button to change the name and close the screen.


Click on the button to close the screen without changing the name.

4-1-3-9. Popup menu "Meter value settings"

Use this menu to change the meter value in the accumulated value. When the password screen is displayed by clicking the menu, enter (Password) level 2).
When the "Meter value settings" screen is displayed, change the Meter pulse count. After changing, click on the button to change the data.

Click on the button to restore the data before the change.

Click on the button to close the "Meter value settings" screen.

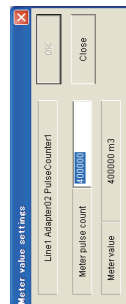


4-1-3-10. Popup menu "High/low-limit alarm settings"

Use this menu to change the high/low-limit alarm value of the analog input. When the password screen is displayed by clicking the menu, enter (Password) level 2).

When the "High/low-limit alarm settings" screen is displayed, change the high-limit alarm value or low-limit alarm value.

After changing, click on the button to change the data and close the screen.

Click on the button to close the screen without changing the data.

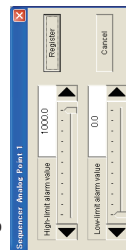


4-1-3-11. Popup menu "Output value settings"

Use this menu to change the output value of the analog output. When the "Output value settings" screen is displayed by clicking the menu, change the Output value.

After changing, click on the button to change the analog output value and close the screen.

Click on the button to close the screen without changing the value.



4-1-3-12. How to check the configuration of indoor units connected to an outdoor unit

Click on an outdoor unit to display a configuration list of all the connected indoor units. Modes and operation status of connected indoor units can be checked.

Key

- Address : Displays the address numbers of indoor units.
- Name : Displays the names of the indoor units.
- Status : Displays ON, OFF, alarm and maintenance.
- Mode : Displays the operation modes of indoor units.

Click on the button to close the "O/D unit" screen.

Address	Name	Status	Mode
03202010	Unit Address 210 unit1	ON	Good
03202010	Unit Address 210 unit2	ON	Good
03202010	Unit Address 210 unit3	ON	Good
03202010	Unit Address 210 unit4	ON	Good
03202010	Unit Address 210 unit5	ON	Good
03202010	Unit Address 210 unit6	ON	Good
03202010	Unit Address 210 unit7	ON	Good
03202010	Unit Address 210 unit8	ON	Good
03202010	Unit Address 210 unit9	ON	Good
03202010	Unit Address 210 unit10	ON	Good


* For the operations of accumulated value, analog point, or digital point, optional Distribution ratio software or Facility control software is required.
For more information, please contact your dealer or service provider.

16. Intelligent Management System

4-2. Layout Master

-[Procedure]
-Select Layout - Initial settings & maintenance - Layout master data from the menu bar.
-(Password level 1)

Layout master data can be used to allocate indoor unit and outdoor unit parts to layout displays and make additions and deletions.

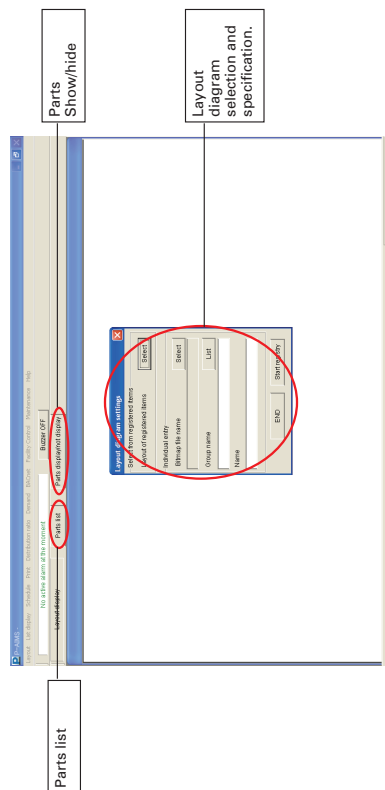


Parts list : Displays a list of all registered parts.

Parts display/not display : Displays or closes the Parts screen every time it is clicked.

* Bitmap files are usable as layout diagrams.
Contact your dealer or service provider about creating, altering or adding bitmap files, and related operations.

4-2-1. Registering layout diagrams

Register the positions of indoor units etc. to previously-created layout displays.

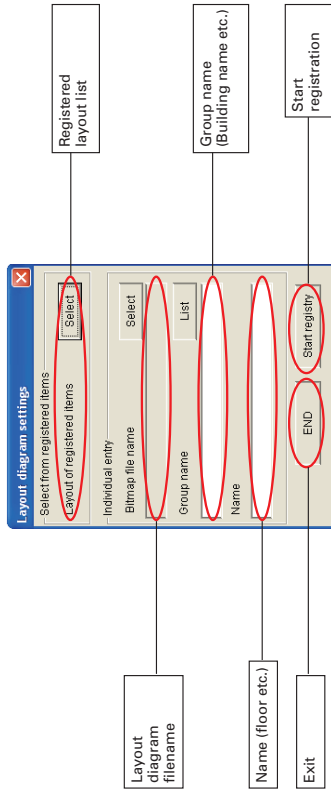

-----Select from registered items -----
Select : Displays a list of registered layout diagrams.

-----Individual entry-----
Select : Displays the Select bitmap screen for selecting layout diagram filenames.

List : Displays the previously-registered Select group screen.


Start registry : Begins registration of indoor units etc. to the layout display.

END : Closes the Layout master data.

16. Intelligent Management System


4-2-1-1. How to select registered layout diagrams

① On the Layout diagram settings screen, click on the **Select** button inside the **Select from registered items** frame. Display the List of registered items screen.

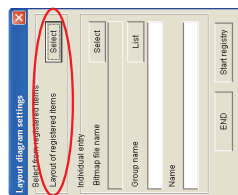


② From the group names and item names on the List of registered items screen, click to select the layout diagram concerned. Selected items are highlighted.

Click or double click on the **OK** button to close the List of registered items screen and display the bitmap filenames, group names and names for the selected layout diagram on the Layout diagram settings screen.

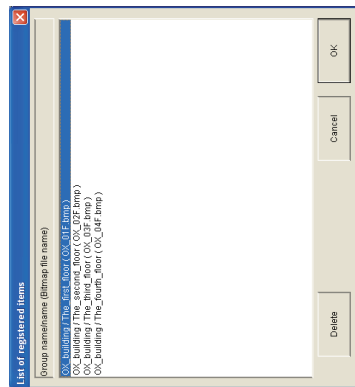


③ Click on the **Start registry** button to switch to the registration screens for indoor and outdoor units. Switch to the screen for part allocation.

Click on the **END** button to close the Layout master data.

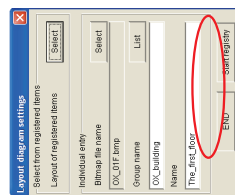

4-2-1-2. How to select new layout diagrams


① On the Layout diagram settings screen, click on the **Select** button inside the **Individual entry** frame. Display the Select bitmap screen.

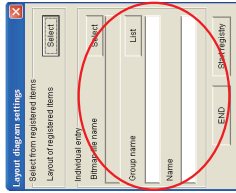


* Layout diagrams cannot be created on this system. Contact your dealer or service provider about creating, altering or adding layout diagrams (bitmap files), and related operations.

② On the Select bitmap screen, clicking to select the filename for the layout diagram to use highlights the selected bitmap name. Click or double click on the **OK** button to close the Select Bitmap screen and display the Bitmap file name on the screen.

Click on the **Cancel** button to exit without doing anything.

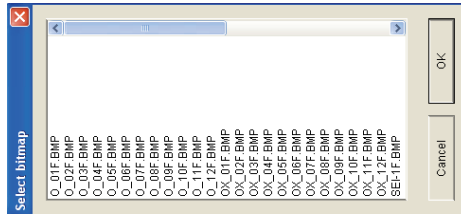


③ The Layout diagram settings screen shows the situation with the filename 'OX_01F.BMP' selected. * If the selected bitmap filename has already been set on the Layout master data, the set name is displayed in the Group name and Name columns.

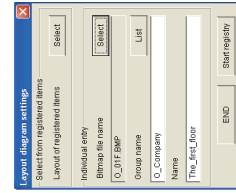


16. Intelligent Management System

④ Input the group name.

If the group name has already been registered, click on the **List** button to display the Select group screen. Click to select the name to use, then click or double click on the **OK** button to exit file selection, leaving the display as illustrated below.

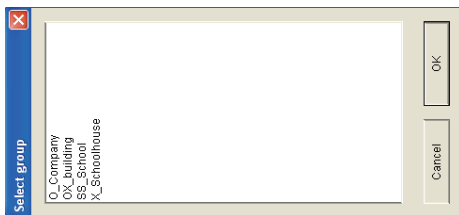


If the group name is not registered, enter it directly into the text box. It will be registered as a new group name.

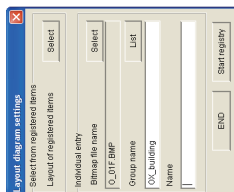

⑤ Input the name. Use direct input.


⑥ Once name registration is complete, click on the **Start registry** button to switch to the registration screens for indoor units etc.

Click on the **END** button to close the Layout master data.

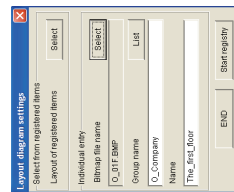

4-2-1-3. How to allocate parts to layout diagrams

Once selection is complete using 4-2-1-1. How to select registered layout diagrams and 4-2-1-2. How to select new layout diagrams, click on the **Start registry** button to switch the the Part Registration screen.

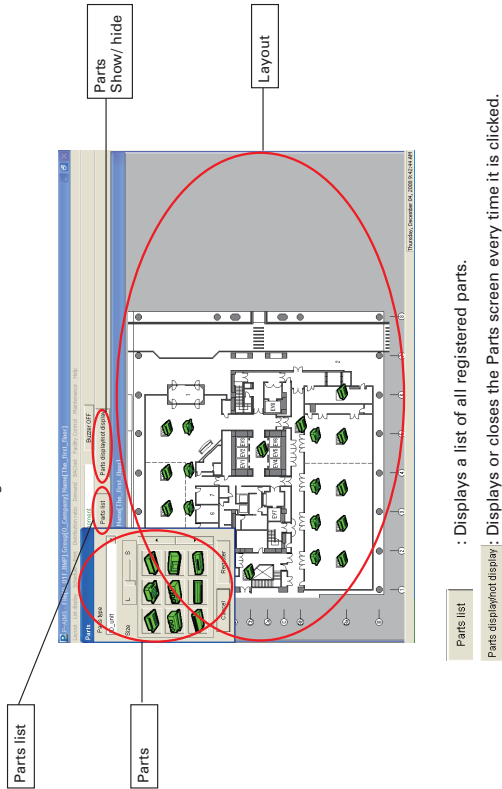

4-2-1-4. The Parts List screen


Click on the **Parts list** button to display a list of the parts registered to the layout diagram.

No.	Address	Partname	Point
1	01020101	ID_unit	187 72
2	01020102	ID_unit	255 72
3	01020103	ID_unit	330 71
4	01020104	ID_unit	432 72
5	01020105	ID_unit	123 242
6	01020106	ID_unit	378 269
7	01020107	ID_unit	429 260
8	01020108	ID_unit	487 425
9	01020109	ID_unit	405 425
10	01020110	ID_unit	288 425
11	01020111	ID_unit	224 425
12	01020112	ID_unit	150 425
13	01020113	ID_unit	153 329
14	01020111	ID_unit	226 329
15	01020110	ID_unit	301 329
16	01020109	ID_unit	407 329
17	01020101	ID_unit	188 117
18	01020102	ID_unit	256 117
19	01020103	ID_unit	325 117

16. Intelligent Management System

4-2-1-5. The Parts screen

To allocate parts to the layout diagram, use the mouse to select them from the Parts screen and release the mouse button where they are to be placed.

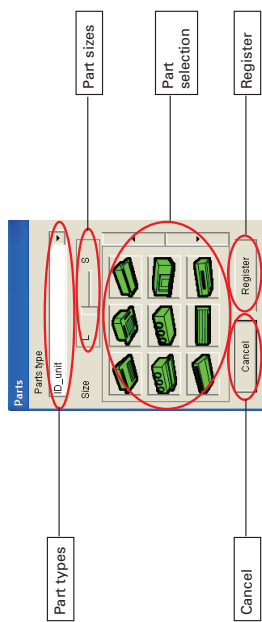

: Use this to select types of parts.



: Click on the button to display a pull-down list and select from that list.



: Specify the sizes of parts. Specify if parts are of the same form but different sizes. Parts may not have been registered if they are not required in the layout diagram.



: Select parts. Move the mouse pointer to the necessary part and click on it. Drag the part with the mouse to the where it should be placed. Release the mouse when the part is in the right position. (Placement is complete, so input the address.)



: Register the layout diagram and close the one you were working on.




: Layout work finishes immediately and the layout diagram closes. (The layout diagram is not registered)

Note: Normally, the Parts screen is displayed, but it may disappear when other

systems are used. In that case, click on the **Parts display/not display** button to show the Parts screen. The **Parts display/not display** button can also be used to hide the Parts screen. Repeated clicking toggles between showing and hiding the screen.

4-2-1-6. How to allocate parts to layout diagrams

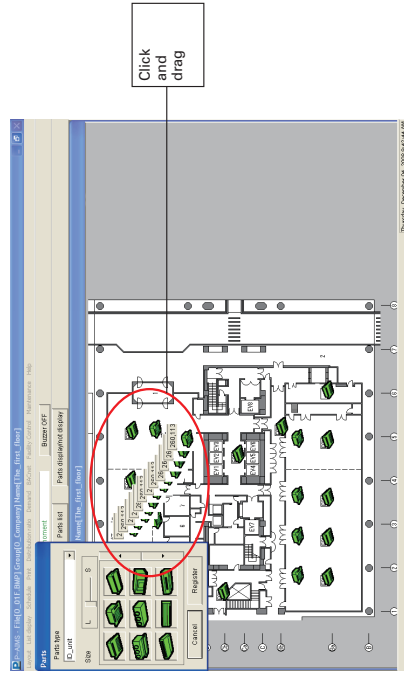


260,113



To allocate and place parts, click on the relevant part on the Parts screen to select it, then drag to move the part into position, leaving a part trail as illustrated above.

Release the mouse when the part is in the correct position. Coordinates are displayed while the part is being dragged with the mouse.

Once the mouse is released, a screen is displayed for entering the address of the part, so enter the address.

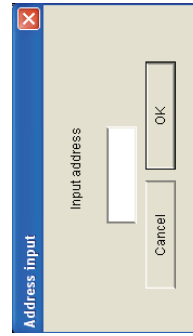

After entering the address, click on the **OK** button or press the Enter key to finish part placement.

Click on the **Cancel** button to cancel part placement.

* Addresses have eight digits for indoor units and six digits for outdoor units. Check addresses in advance.

16. Intelligent Management System

4-2-1-7. How to move parts within layout diagrams

Click on the part to move.
 The edge of the selected part is highlighted in red and its position information is displayed, as illustrated on the left.
 Either drag the part with the mouse or use the [←][↑][↓][→] keys to move it.
 To stop moving the part, click on another part or on the **Register** button.



4-2-1-8. How to delete parts from layout diagrams

Click on the part to delete.
 The edge of the selected part is highlighted in red and its position information is displayed, as illustrated on the left.
 Right click to display a query asking whether you want to delete the part.
 Specify whether or not to delete it.




Click on the **Yes** button to delete.
 Click on the **No** button to avoid deleting.


* When a layout diagram is deleted, it cannot be displayed.
 * Make a backup of the layout before proceeding.
 * Even if the layout diagram is deleted, the master for indoor units and outdoor units is not altered, so only the layout diagram becomes unavailable.

4-2-1-9. How to delete layout diagrams


① On the Layout diagram settings screen, click on the **Select** button inside the Select from registered items frame.
 Display the List of registered items screen.

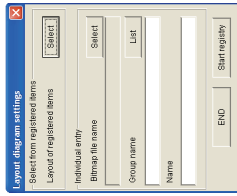

② From "Group name/name (Bitmap file name)" on the List of registered items screen, click to select the layout diagram concerned. Selected items are highlighted.
 Click on the **Delete** button to display the Check deleted layout data screen.

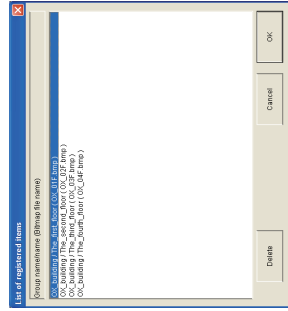


③ On the Check deleted layout data screen, display the group name, name and file name and confirm their deletion.

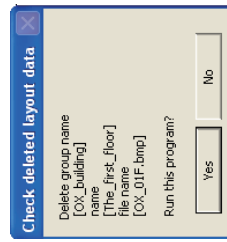

Yes Click on the button to delete.
No Click on the button to avoid deleting.

Once you click on the **Yes** button to delete, the deletion is applied to the Layout diagram settings screen and you can give the next instruction.

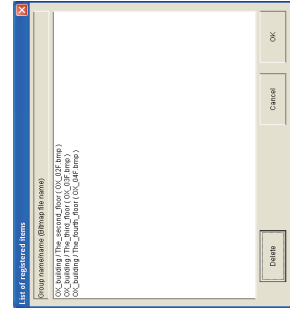

Click on the **Cancel** button to close the Layout diagram settings screen.

16. Intelligent Management System

4-3 Settings

- [Procedure]
- Select Layout - Initial settings & maintenance - Settings from the menu bar. (Password level 1)

Settings can choose whether or not the display should jump to the affected screen when an alarm is issued, and whether or not to display set temperature, room temperature, facility control (analog data), and accumulated (pulse) value.

The screenshot shows the 'Layout diagram settings' dialog box with several options checked and circled in red. Callouts provide detailed explanations for each option:

- At alarm, the display changes to diagram:** Specifies whether or not to display the layout screen of the affected unit when an alarm is issued.
- In Unit:**
 - Set temp display:** Specifies whether or not to display the set temperature.
 - Room temp display:** Specifies whether or not to display the room temperature.
- Analog output value display:** Specifies whether or not to display the analog output value.
- Analog input value display:** Specifies whether or not to display the analog input value.
- Pulse:**
 - Adapter value display:** Specifies whether or not to display the adapter value.
 - Meter value display:** Specifies whether or not to display the meter value.


- OK : Registers settings and close the "Layout diagram settings" screen.
- Cancel : Closes the "Layout diagram settings" screen with no other action.

* For "Facility Control" operations, optional Facility control software is required. If this optional software is not installed, this option cannot be selected.
 * For "Accumulation (pulse)" operations, optional Distribution ratio software is required. If this optional software is not installed, this option cannot be selected.
 For more information, please contact your dealer or service provider.

4-4. Layout backup

- [Procedure]
- Select Layout - Initial settings & maintenance - Layout Backup from the menu bar. (Password level 2)


Make backups of layout information. The initial file name is automatically set to the numbers for "yyyymmdd_hhmm" with "laybak" as the extension.

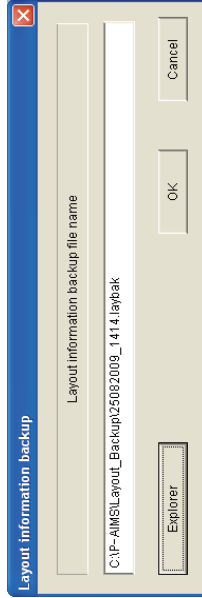

- OK :Make backups of layout information.
- Cancel :Exit.
- Explorer :Use to change the save folder.


4-4-1. Starting layout information backup

Click on the OK button to backup layout information. Save backup data.

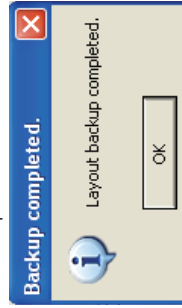

Once the backup is complete, a message such as that on the left is displayed. Click on the OK button. The data backup process ends.

* The message on the right is displayed if the backup fails. Check the available free space on the backup storage drive, etc. Click on the OK button to go back to Layout information backup.

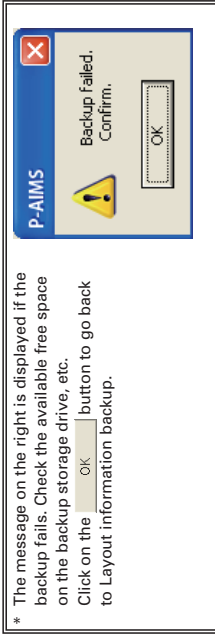


16. Intelligent Management System

4-4-2. Deleting layout information backups


Click on the **Cancel** button to exit without saving the backup data.

4-4-3. Changing the save location for layout information backups

Click on the **Explorer** button to display the "Backup file name" screen and change the save folder.

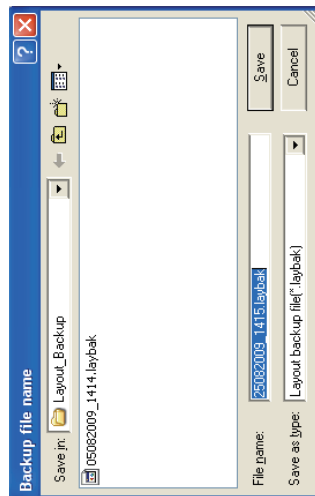

Click on the **Explorer** button beside "Save in" to display a folder list as illustrated below. Select the required folder from the folder list.

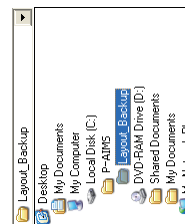

Click on the **Save** button to apply the selected save destination and return to the Layout information backup screen.


Click on the **Cancel** button to return to the Layout information backup screen without doing anything.

4-5. Restoring layouts

[Procedure]

Select Layout - Initial settings & maintenance - Layout restore on the menu bar.
(Password level 2)

Use the file created at the Layout Backup stage to return the layout to its state at the time of the backup.

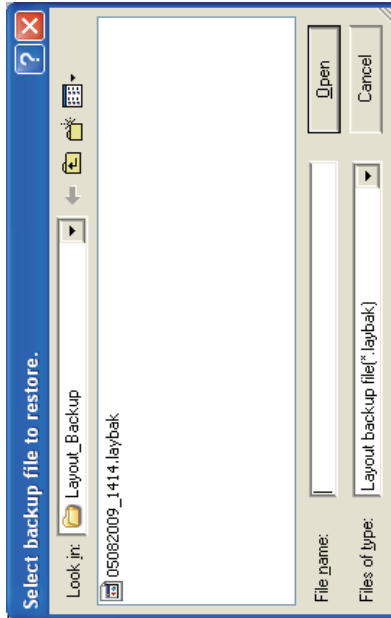

Open

: Click on the relevant filename and specify the file name displayed under "File name".

Cancel


: Exit without doing anything.

When layouts are restored, current layout information is lost. If you need to retain current information, use Layout information backup in advance to backup layouts.


16. Intelligent Management System

4-5-1.

Starting layout restoration

On the "Select backup file to restore" screen, click on the file name to restore. The specified file name is displayed in the "File name" space, then click on the  button.

The Restore layout information screen is displayed.

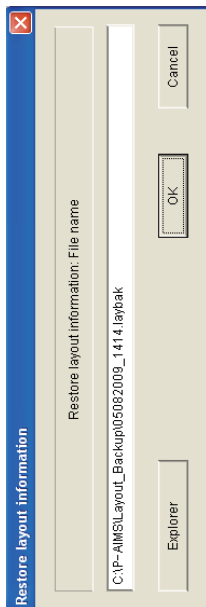

 :Restore the layout information.

 :Exit.


 :Use this when you need to specify a different backup file.

4-5-1-1.

Starting layout restoration

To start layout restoration, click on the  button. A message reading "When restore is complete .." is displayed.



Click on the  button to return to the Restore layout information screen.

Click on the  button to start the restoration process.



Once the restoration is complete, a message such as that on the left is displayed. Click on the  button.

The P-AIMS system exits automatically.

Restart the P-AIMS system.

The layout restoration process ends.

4-5-1-2. Canceling layout restoration

Click on the  button to exit without restoring layouts.

4-5-1-3. Re-specifying the layout restoration file

Click on the  button to re-display the "Select backup file to restore" screen.

16. Intelligent Management System

- If an electrical storm, radio transmissions or other interference during operation caused a malfunction, turn the terminal power off, then on again. As a rule, the system should be powered off only in cases such as the above. Correct management of air conditioning is not possible when the system is powered off.
- Setting the current date and time
The current date and time should be set on a regular basis, since the clock of an ordinary PC can gain or lose up to about two minutes per month.
- Passwords
Passwords should be recorded and saved in a safe place. They should never be disclosed to third parties. If you forget your password, contact your dealer or service provider.


5. Supplementary Information

- Layout diagrams
The layout diagrams used by the P-AIMS System must be drawn up to match the customer's layout, but they cannot be created using this system. For more information about layout creation, contact your dealer or service provider.
- Part icons
Part icons for use with the P-AIMS System are provided in advance for standard parts as shown in [Reference] Parts list at the end of this manual.
Part icons other than shown in the parts list must be provided separately if necessary. These part icons cannot be created using this system. For more information about their creation, contact your dealer or service provider.
- Personal Computers
Use a personal computer exclusively for the P-AIMS System.
Sharing the PC with any other system could cause problems.
- Data backup
The PC used with the P-AIMS System could break down, so you are advised to back up data to an external hard drive or other storage. For more information, contact your dealer or service provider.
Caution: If the drive name of the external hard disk or other back up location changes, backups cannot be done.
NOTE: When the drive name of an external hard disk drive is changed, it is not possible to back up.
- Power outages
We recommend use of a UPS device (uninterruptible power supply) to protect the P-AIMS System in the event of a power outage. For more information, contact your dealer or service provider.
- Please note that we will not provide compensation in the following circumstances:
Any fault caused by a third party becoming aware of a password.
Any fault caused by sharing a PC between P-AIMS System and another application.
- Limitations on changing settings
Some types of air conditioners are limited in the settings which they support.
For example, cooling-only air conditioners cannot be set to heating.
Floor-type models typically support only high fan speeds.
Ceiling mounted models do not have flaps, and therefore cannot change the fan direction.
You should be aware of the limitations of the air conditioner models in your system.
For more information, contact your dealer or service provider.
- Only alarm codes are displayed in the notification bar and alarm log display.
The content of an alarm can vary for different models, even if the alarm code is the same.
Consult the documentation of the various models to determine the content of the alarm.
- After the settings of an indoor unit are changed from the P-AIMS System, the display may revert temporarily to the former settings.
This is more likely to occur with all-unit operations. The cause is communications delay, not any malfunction in the system. If you wait a few minutes, the display will show the correct information.

16. Intelligent Management System


Performing License Certification

1. A License Certification screen such as the following appears when you start a P-AIMS systems for which license certification is not finished.

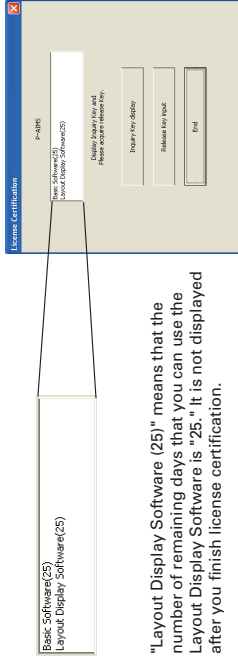

"Layout Display Software (25)" means that the number of remaining days that you can use the Layout Display Software is "25." It is not displayed after you finish license certification.

* After you start a P-AIMS system for which license certification is not finished, the License Certification screen will appear at 9:00 a.m. and 3:00 p.m. This screen is not displayed after you finish license certification. The License Certification screen will appear until license certification is finished for all of the software.

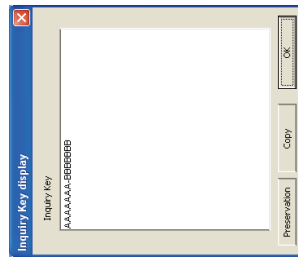

2. If you click the button in the License Certification screen, the Inquiry Key display screen appears, and the inquiry key is displayed in the screen. Send the key displayed in this screen to the Product ID Issuance Desk (cmc_productid_desk@gg.jp.panasonic.com) by e-mail. At the same time, also notify us of the following items.

- (1) Product name (required)
 - (2) Company name/contact person
 - (3) Phone number
 - (4) E-mail address (required)
- You will be registered as a user and issued a release key.

:Clicking this button saves the inquiry key as a text file. Follow the instructions on the screen to save the text file. Enter the product name, company name/contact person, phone number, and e-mail address in this saved text file, and send the text file to the Product ID Issuance Desk by e-mail.

:Clicking this button copies the inquiry key to the Windows clipboard. Paste the inquiry key into your mail.

:Clicking this button closes the Inquiry Key display screen.

Preservation

Copy

OK

6. License Certification

Before you can use the Layout Display Software, you need to first perform a work procedure called "license certification."

To perform license certification, make an inquiry by sending the inquiry key to the inquiry e-mail address below. You will be registered as a user and issued a release key, and then receive a reply.

<Contact Information>
Product ID Issuance Desk,

E-mail address: cmc_productid_desk@gg.jp.panasonic.com

When you make an inquiry, send the following information together with the inquiry in order to be registered as a user and issued a release key.

- (1) Product name
- (2) Company name/contact person
- (3) Phone number
- (4) E-mail address
- (5) Inquiry key

* If you do not input a release key, you will no longer be able to use the system after 30 days elapses. Obtain a release key and perform license certification as soon as possible.
* Make an inquiry as soon as possible because it may sometimes take several days to be issued a release key.

License Certification Procedure


The procedure from after the P-AIMS system is installed up until the end of license certification is described below.

- (1) Check the inquiry key from the License Certification screen.
- (2) Send the inquiry key to the Product ID Issuance Desk (cmc_productid_desk@gg.jp.panasonic.com). Also notify us of the product name, company name/contact person, phone number, and e-mail address.
- (3) A release key is issued. You are registered as a user and a release key is issued. A reply is sent to the registered mail address.
- (4) Input the release key from the License Certification screen.
- (5) The license certification procedure is finished.

16. Intelligent Management System

7. Preparation 7-1. Installation

3. When you receive the release key, restart the P-AIMS system. See "2. Startup and exit" for how to restart the P-AIMS system, and then restart the system.

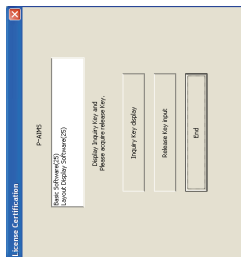

If license certification is not finished for the P-AIMS system, the License Certification screen on the right appears before the P-AIMS system restarts.

Click the **Release Key Input** button to display the Release Key input screen, and enter the release key.





* If you install multiple P-AIMS system software, the same number of license certifications is required. In such a case, the number of release keys sent will be the same as the number of inquiry keys. Enter all of the received release keys sequentially, and perform license certification. (There is no set order for entering release keys, so they can be entered in any order.)

License certification is finished once all of the release keys have been entered.

Click the **End** button. The License Certification screen closes, and the P-AIMS system starts.


* The P-AIMS system will start even if you click the **End** button without entering the release key. You can use the system as is until license certification is finished. (The system can be used for a period of 30 days.)

1. First, stop the P-AIMS system. Insert the Layout Display Software CZ- CSWGC2 CD of the air-conditioning integrated system (P-AIMS system) you purchased into the CD-ROM drive. The program on the CD-ROM starts automatically and makes preparations for installation. If installation does not start, double-click Setup.exe of the CD-ROM drive to start it. Enter the Product ID in the Input Product ID screen that appears. For the Product ID, see the Product ID Issuance Certificate supplied with the software.

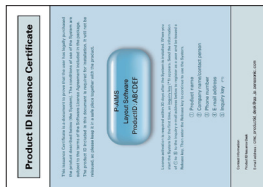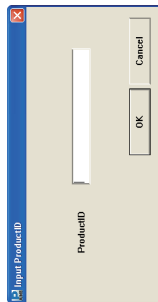


* Keep the Product ID Issuance Certificate in a safe place. The Product ID is required to install the air-conditioning integrated system. The Product ID Issuance Certificate will not be reissued.

2. The InstallShield Wizard prepares to install the P-AIMS system.

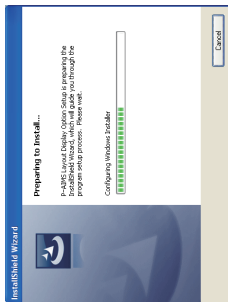


3. After a short while, the "The InstallShield(R) Wizard will install P-AIMS Layout Display Option on your computer. To continue, click Next." message appears. Click the **Next >** button.

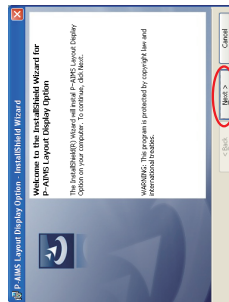

16. Intelligent Management System

7-2. Display after restart

After the system restarts, the layout display function is enabled and the menu item Layout is selectable.

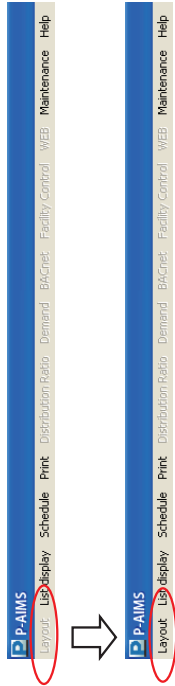


7-3 Settings


Once installation is complete, settings are required for "Layout diagram preparation", "Indoor unit settings", "Outdoor unit settings", etc. Refer to the explanations in the corresponding sections for information on these settings.

* Contact your dealer about "Layout diagram preparation".

4. Next, the License Agreement screen appears. Carefully read the license agreement, and click "I accept the terms in the license agreement" if you agree to the terms of the license agreement. The "Next >" button becomes active. Click the "Next >" button. (The software cannot be installed if you do not agree to the terms of the license agreement.)

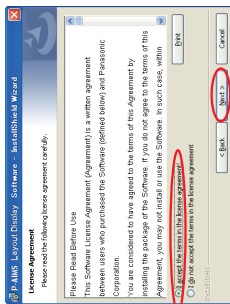


5. The "The wizard is ready to begin installation. Click Install to begin the installation." message appears. Click the "Install" button.

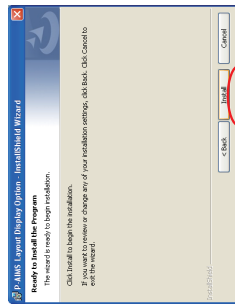


6. The installation of the P-AIMS system begins.

Please wait a while.

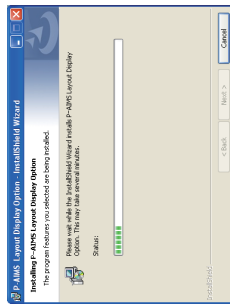

7. When the P-AIMS system setup is finished, the installation complete screen appears. Click the "Finish" button to complete the installation.

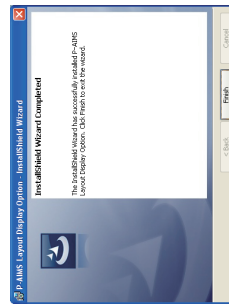












* When installing the Layout Display software, it is possible to install this system without stopping the P-AIMS system, but the functions of the Layout Display software will not be added. Restart the P-AIMS system.






16. Intelligent Management System

[Reference] Parts list




Indoor unit

-  :Unidirectional ceiling cassette
-  :4-directional ceiling cassette
-  :Ceiling built-in cassette
-  :Built-in, all ducts
-  :Ceiling suspended
-  :Wall mounted
-  :Perimeter, floor standing
-  :Floor standing
-  :Bidirectional ceiling cassette
-  :Ceiling-embedded, high static pressure
-  :For kitchen use



Outdoor unit

-  :Single
-  :Single
-  :GHP
-  :GHP
-  :VRF

Accumulated value (optional Distribution ratio software is required)

-  :Watt meter
-  :Gas meter
-  :Water meter

Digital point (optional Facility control software is required)

-  :Fan
-  :Pump
-  :Illumination

Analog point (optional Facility control software is required)

-  :Centigrade temperature
-  :Percentage
-  :Current
-  :Voltage
-  :Fahrenheit temperature

User memo space

If you fill this out at the time of purchase, it is convenient when ordering repairs etc.

Serial No.	
Date of installation	
Dealer	Telephone No. ()

16. Intelligent Management System

5. BACnet™ Software (CZ-CSWBC2)

Operation Manual Air Conditioning Intelligent Management System CZ-CSWBC2 BACnet™ Software P-AIMS

Thank you for purchasing our monitoring and control system.
Before using the system, be sure to read this manual carefully. After reading it, store it in a convenient location for easy reference.

Contents

Precautions on Using This Product i

1. Introduction 1
2. Startup and exit 2
 - 2-1. Startup 2
 - 2-2. Exit 2
3. Quick reference 3
4. Using the system 4
 - 4-1. BACnet 5
 - 4-1-1. Operation time with thermostat on 5
 - 4-1-2. BACnet Maintenance Settings 6
 - 4-1-2-1. Setting Method 6
 - 4-1-2-2. Cancellation Method 7
5. Supplementary Information 7
6. License Certification 8
 - License Certification Procedure 8
 - Performing License Certification 9
7. Preparation 11
 - 7-1. Installation 11
 - 7-2. Display at restart 13
 - 7-3. Settings 13

Contents

Precautions on Using This Product i

1. Introduction 1
2. Startup and exit 2
3. Quick reference 3
4. Using the system 4
5. Supplementary Information 7
6. License Certification 8
7. Preparation 11

16. Intelligent Management System

■ Precautions on Using This Product

★ IMPORTANT ★

- Before you can use the BACnet Software for the P-AIMS system, you need to first perform a work procedure called "license certification".
- Please perform the license certification referring to "6.License certification".
- Duplication of all or part of this software and documentation without the express consent of the holder of the rights to the above, and transfer of the software to another party, are prohibited by law.
- In principle, each set of this software is purchased for use on a single computer.
- Panasonic bears no responsibility whatsoever for any damage or loss to the user or any third party that may arise from the use of this software or documentation. Furthermore, Panasonic bears no responsibility whatsoever for any hindrance to BACnet communication caused by faults in this software etc.
- The specifications of this software and contents of this manual are subject to change without notice.
- The content of this manual is limited to the explanation of how to use this software. It does not cover usage methods for the operating computer or optional features, or for the OS etc., so refer also to the relevant manuals for those elements.
- Displays and operations may differ from the examples in this manual depending of the OS version used.
- Refer to "Please Read Before Use" for the warranty terms for this software.
- Panasonic will not be liable for any violation of the rights of any third party stemming from use of information in this manual, or for violation of other rights.
- Microsoft, Windows XP and Microsoft Excel are trademarks of Microsoft Corporation in the United States and other countries.
- BACnet is a trademark of the American Society of Heating, Refrigerating and Air-Conditioning Engineers.
- Other product names are trademarks or registered trademarks of the corresponding companies.
- Other products are copyrights of the corresponding companies.

1. Introduction

BACnet™ Software is a communication control software for air conditioning units connected via the BACnet/IP, which is designed to provide a building automation service with increased added value for Air Conditioning Intelligent Management System (referred to below as the P-AIMS system). This software uses the international standard building automation communication protocol BACnet (ISO 16484-5) for communication between building equipments.


This instruction manual describes the operation and setting methods as well as the specifications of BACnet/IP. However, this manual does not contain details on other basic communication functions that are shared with the "Basic Software Instruction Manual". Therefore, please also refer to the CZ-CSWKC2 "Basic Software Instruction Manual" and the instruction manuals for other optional software as well as this manual.

16. Intelligent Management System

2. Startup and exit

2-1. Startup

1. Double click on the P-AIMS shortcut on the desktop.

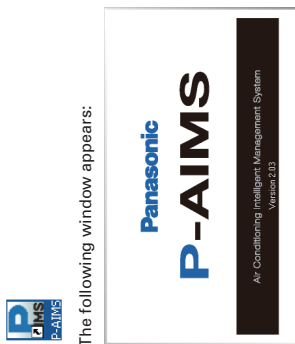


The following window appears:

The system starts up and the Status/Operation screen is displayed.

2-2. Exit


1. From the Menu bar, select "Maintenance" - "Exit".

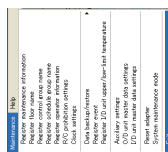

2. The Password Input screen is displayed. Input the password.



3. The System Exit screen is displayed. Click on the Yes button.

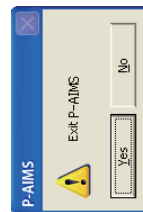

3. Quick Reference

Menu List

Main menu	Sub menu
1. Layout	Layout (options)
2. List display	Status/Operation Filter sign & I/D unit information O/D unit information Operation/Status change log Alarm list & alarm log
3. Schedule	Schedule/results Mode settings (Calendar) Schedule operation time settings Update schedule
4. Print	Print screen EXCEL output Auto EXCEL output setting Print list List Print preview
5. Distribution ratio	Distribution ratio (optional)
6. Demand	Demand (optional)
7. BACnet	BACnet basic settings BACnet indoor unit number settings BACnet setting CSV output Create exception schedule T/S ON operation time I/D unit settings (capacity) BACnet maintenance settings
8. Facility Control	Facility Control (optional)
9. Web	Web (optional)
10. Maintenance	Register maintenance information Register floor name Register control group name Register schedule group name Register operator information R/C prohibition settings Clock settings Data backup/restore -Data backup -Restore data -Cancel data restore -Auto backup settings Register event Register I/D unit high/low-limit temperature Auxiliary settings O/D unit master data settings I/D unit master data settings Reset adapter System maintenance mode Exit

* indicates the security code protection screen.

16. Intelligent Management System

4. Using the system

4-1. BACnet

4-1-1. Operation time with thermostat on

[Procedure]
On the menu bar, select "BACnet" – "T/S ON operating time".

The BACnet number, I/D unit capacity, high, mid-, low, and weighting factor total are displayed.

No.	ADDRESS	NAME	FAN SPEEDS	1.00	1.00	1.00	1.00	I/D CAP	WEIGHTING FACTOR TOTAL
1	00000001	Unit Address 01 Unit 1	1	22	382171	82.26	36111	1812.64	1812.64
2	00000002	Unit Address 02 Unit 2	2	22	382171	82.26	36111	1812.64	1812.64
3	00000003	Unit Address 03 Unit 3	3	22	382171	82.26	36111	1812.64	1812.64
4	00000004	Unit Address 04 Unit 4	4	22	428433	138.15	2414	1812.64	1812.64
5	00000005	Unit Address 05 Unit 5	5	22	428433	138.15	2414	1812.64	1812.64
6	00000006	Unit Address 06 Unit 6	6	22	220505	418.36	8436	15187.71	15187.71
7	00000007	Unit Address 07 Unit 7	7	22	112237	82.01	2082	2088.66	2088.66
8	00000008	Unit Address 08 Unit 8	8	22	51126	84.65	19126	1912.64	1912.64
9	00000009	Unit Address 09 Unit 9	9	22	428099	381.72	19126	1912.64	1912.64
10	00000010	Unit Address 10 Unit 10	10	22	222107	81.19	19124	1912.64	1912.64
11	00000011	Unit Address 11 Unit 11	11	22	222107	81.19	19124	1912.64	1912.64
12	00000012	Unit Address 12 Unit 12	12	22	428118	381.82	19126	1912.64	1912.64
13	00000013	Unit Address 13 Unit 13	13	22	428118	381.82	19126	1912.64	1912.64
14	00000014	Unit Address 14 Unit 14	14	22	221447	82.16	19122	1912.64	1912.64
15	00000015	Unit Address 15 Unit 15	15	22	118186	81.99	19126	2088.62	2088.62
16	00000016	Unit Address 16 Unit 16	16	22	58111	82.19	19822	1982.21	1982.21

- BACnet number :Number assigned to the indoor unit by BACnet communication with the central monitor.
- I/D cap. :Displays the capacity of the indoor unit. (Weighted value)
- High, Mid, Low :Operating time of each mode.
- Weighting factor total :Total weighted operating time; this value is output on BACnet.
- Fan weight, fact. :Displays the weighted value for each fan speed.

* To return to the Status/Operation screen, select List Display - Status/Operation from the menu.

4-1-2. BACnet Maintenance Settings

[Procedure]
From the menu bar, select "BACnet" – "BACnet maintenance settings".

These maintenance settings are used to temporarily stop monitoring an indoor unit with a BACnet indoor unit number during construction work or if a fault has occurred with the unit. Cancelling maintenance can also be performed from this screen.

No.	ADDRESS	NAME	BACNET NUMBER	MAINTENANCE STATUS
1	00000001	Unit Address 01 Unit 1	1	ON
2	00000002	Unit Address 02 Unit 2	2	ON
3	00000003	Unit Address 03 Unit 3	3	ON
4	00000004	Unit Address 04 Unit 4	4	ON
5	00000005	Unit Address 05 Unit 5	5	ON
6	00000006	Unit Address 06 Unit 6	6	ON
7	00000007	Unit Address 07 Unit 7	7	ON
8	00000008	Unit Address 08 Unit 8	8	ON
9	00000009	Unit Address 09 Unit 9	9	ON
10	00000010	Unit Address 10 Unit 10	10	ON
11	00000011	Unit Address 11 Unit 11	11	ON
12	00000012	Unit Address 12 Unit 12	12	ON
13	00000013	Unit Address 13 Unit 13	13	ON
14	00000014	Unit Address 14 Unit 14	14	ON
15	00000015	Unit Address 15 Unit 15	15	ON
16	00000016	Unit Address 16 Unit 16	16	ON

- BACnet number :Number assigned to the indoor unit from BACnet communication with the central monitor.
- Maintenance status :Displays the maintenance setting status.

4-1-2-1. Setting Method

1. Click the I/D unit to be set to add a check to the selection column.

No.	Select
1	<input checked="" type="checkbox"/>
2. When **Maint. ON.** is clicked, the "Set maintenance ON as for the selected I/D units (Out_Of_Service=TRUE)" message is displayed.

Yes :Settings are performed.

No :Settings are not performed.
3. When the settings are performed, "Executing maintenance..." is displayed in the maintenance status column.

Maintenance status	Executing maintenance...
--------------------	--------------------------

16. Intelligent Management System

5. Supplementary Information

- This system is installed on the computer that is running the CZ-CSWK2 basic software. Please refer to this along with the Supplementary Information section of the CZ-CSWK2 basic software instruction manual.
 - Selecting Objects (Control Items) if the maximum 256 air conditioning units are connected and the number of object specifications is increased, the processing speed decreases because the number of objects to be controlled increases. If faster processing speeds are required, it is necessary to increase the number of BACnet computers to reduce the number of air conditioning units connected to each.
 - Restarting P-AIMS
 - When shutting down and restarting the P-AIMS system, wait for more than 10 seconds after shutdown before restarting the system. When BACnet is operating, the programs that are performing various operations require time to shut down, and may not restart if the system is restarted too soon.
 - BACnet Standby Time
 - Approximately 10 seconds ~ 5 minutes time is required for BACnet connection to start after P-AIMS is started (differs depending on the number of air conditioners connected). We do not recommend restarting unless absolutely necessary.
 - Instance Number
 - The instance number is assigned to each item (function) that is controlled on each air conditioning unit. The number decided by the central monitor manufacturer cannot be changed without permission from the central monitor manufacturer. Changing this number may cause malfunctions such as communication errors.
 - Vendor ID
 - ID of the BACnet device vendor. Each vendor obtains a different vendor ID. The vendor ID for Sanyo Electric CO., Ltd. is 146.
 - BACnet™
 - BACnet™ is the abbreviation for the Building Automation and Control networking protocol, and is the protocol for the building automation system proposed by ASHRAE (American Society of Heating, Refrigerating and Air-Conditioning Engineers). Furthermore, for details on the BACnet/IP specifications stipulated by ASHRAE, refer to the specifications published by ASHRAE, or the BAS standard interface specifications (IEE/P-003 2000) and addendum (IEEJ-P-A) published by the Institute of Electrical Installation Engineers of Japan.
- References
1. ANSI/ASHRAE 135-1995 BACnet: A Data Communication Protocol for Building Automation and Control Networks, 1995
 2. ANSI/ASHRAE Standard 135-2001 BACnet: A Data Communication Protocol for Building Automation and Control Networks, 2001
 3. Institute of Electrical Installation Engineers of Japan BAS Standard Interface Specifications (IEEJ-P-0003:2000), 2000
 4. Institute of Electrical Installation Engineers of Japan BAS Standard Interface Specifications (IEEJ-P-0003:2000-a), 2002

4-1-2-2. Cancellation Method

Click the indoor unit to be cancelled to add a check mark to the selection column.

No.	Select
1	<input checked="" type="checkbox"/>



2. When **Maint. CLR.** is clicked, the "Set maintenance OFF as for the selected ID units (Out_Of_Service=FALSE)" message is displayed.


Yes No

•Settings are performed.
•Settings are not performed.

16. Intelligent Management System


Performing License Certification

1. A License Certification screen such as the following appears when you start a P-AIMS systems for which license certification is not finished.

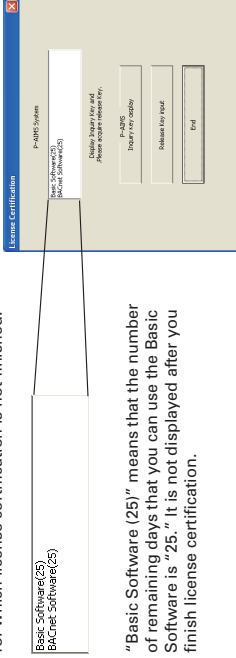

"Basic Software (25)" means that the number of remaining days that you can use the Basic Software is "25." It is not displayed after you finish license certification.

* After you start a P-AIMS system for which license certification is not finished, the License Certification screen will appear at 9:00 a.m. and 3:00 p.m. This screen is not displayed after you finish license certification.
If you install optional software, the License Certification screen will appear until license certification is finished for all of the software.

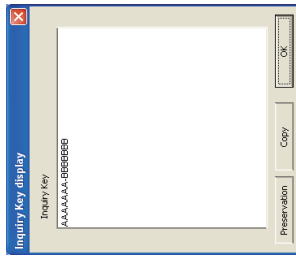

2. If you click the Inquiry Key display button in the License Certification screen, the Inquiry Key display screen appears, and the inquiry key is displayed in the screen. Send the key displayed in this screen to the Product ID Issuance Desk (cmc_productid_desk@gg.jp.panasonic.com) by e-mail. At the same time, also notify us of the following items.

- (1) Product name (required)
- (2) Company name/contact person
- (3) Phone number
- (4) E-mail address (required)

You will be registered as a user and issued a release key.

Preservation

:Clicking this button saves the inquiry key as a text file. Follow the instructions on the screen to save the text file. Enter the product name, company name/contact person, phone number, and e-mail address in this saved text file, and send the text file to the Product ID Issuance Desk by e-mail.

Copy

:Clicking this button copies the inquiry key to the Windows clipboard. Paste the inquiry key into your mail.

OK

:Clicking this button closes the Inquiry Key display screen.

6. License Certification

Before using the BACnet Software in the P-AIMS system, you need to first perform a work procedure called "License Certification".

To perform license certification, make an inquiry by sending the inquiry key to the inquiry e-mail address below. You will be registered as a user and issued a release key, and then receive a reply.

<Contact Information>

Product ID Issuance Desk,

E-mail address: cmc_productid_desk@gg.jp.panasonic.com

When you make an inquiry, send the following information together with the inquiry in order to be registered as a user and issued a release key.

- (1) Product name
- (2) Company name/contact person
- (3) Phone number
- (4) E-mail address
- (5) Inquiry key

* If you do not input a release key, you will no longer be able to use the system after 30 days elapses. Obtain a release key and perform license certification as soon as possible.
* Make an inquiry as soon as possible because it may sometimes take several days to be issued a release key.

License Certification Procedure


The procedure from after the P-AIMS system is installed up until the end of license certification is described below.

- (1) Check the inquiry key from the License Certification screen.
- (2) Send the inquiry key to the Product ID Issuance Desk (cmc_productid_desk@gg.jp.panasonic.com). Also notify us of the product name, company name/contact person, phone number, and e-mail address.
- (3) A release key is issued. You are registered as a user and a release key is issued. A reply is sent to the registered mail address.
- (4) Input the release key from the License Certification screen.
- (5) The license certification procedure is finished.

16. Intelligent Management System

7. Preparation 7-1. Installation

- When you receive the release key, restart the P-AIMS system. See "2. Startup and shutdown" for how to restart the P-AIMS system, and then restart the system.

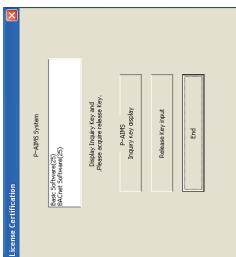

If license certification is not finished for the P-AIMS system, the License Certification screen on the right appears before the P-AIMS system restarts. Click the button to display the Release Key input screen, and enter the release key.





* If you install multiple P-AIMS system software, the same number of license certifications is required. In such a case, the number of release keys sent will be the same as the number of inquiry keys. Enter all of the received release keys sequentially, and perform license certification. (There is no set order for entering release keys, so they can be entered in any order.)

License certification is finished once all of the release keys have been entered. Click the button. The License Certification screen closes, and the P-AIMS system starts.


* The P-AIMS system will start even if you click the button without entering the release key. You can use the system as is until license certification is finished. (The system can be used for a period of 30 days.)

- First, stop the P-AIMS system. Insert the BACnet Software CZ-CSWBC2 CD for your total air conditioning system (P-AIMS system) into the CD-ROM drive. The program on the CD-ROM starts automatically and makes preparations for installation. If installation does not start, double-click "Setup.exe" of the CD-ROM drive to start it. Enter the Product ID in the Input Product ID screen that appears. For the Product ID, see the "Product ID Issuance Certificate" supplied with the software.

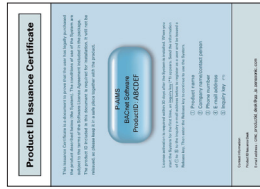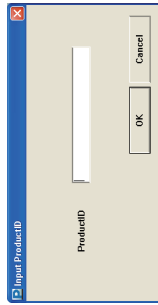


* Keep the "Product ID Issuance Certificate" in a safe place. The Product ID is required to install the air-conditioning integrated system. The "product ID Issuance Certificate" will not be reissued.

- The InstallShield(R) Wizard prepares to install the P-AIMS system.

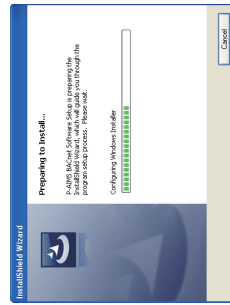


- After a short while, the "The InstallShield(R) Wizard will install P-AIMS BACnet Software on your computer. To continue, click Next." message appears. Click the button.

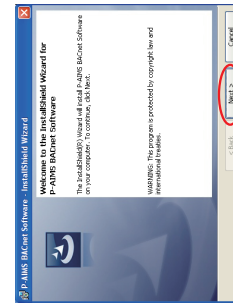

16. Intelligent Management System

7-2. Display at restart

After restart, the BACnet functions become active and "BACnet" can be selected in the menu.

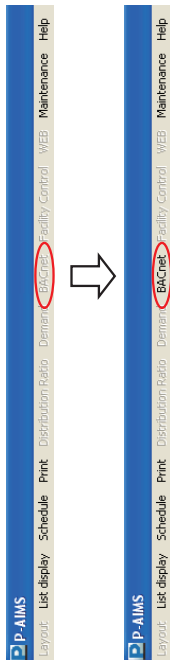


7-3 Settings


After installation is completed, registration and settings such as "BACnet basic settings" and "BACnet indoor unit number settings" are required.

Entrust the registration of "BACnet basic settings" and "BACnet indoor unit number settings" to the place of purchase or a service company.


4. Next, the License Agreement screen appears. Carefully read the license agreement, and click "I accept the terms in the license agreement" if you agree to the terms of the license agreement. The button becomes active. Click the button. (The software cannot be installed if you do not agree to the terms of the license agreement.)

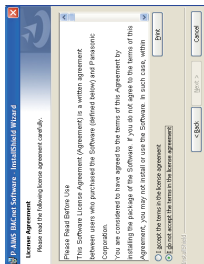


5. The "The wizard is ready to begin installation. Click Install to begin the installation." message appears. Click the button.

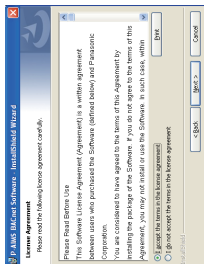

The installation of the P-AIMS system begins. Please wait a while.

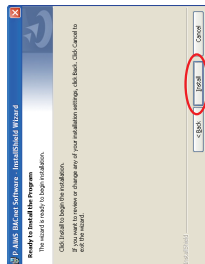

6. When the P-AIMS system setup is finished, the installation complete screen appears. Click the button to complete the installation.

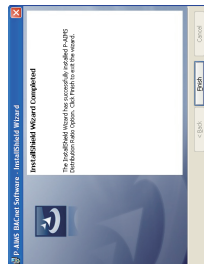

* When installing the BACnet Software, it is possible to install this system without stopping the P-AIMS system. However, the BACnet Software functions are not added. In this case, restart the P-AIMS system.

16. Intelligent Management System

3

User memo space

If you fill this out at the time of purchase, it is convenient when ordering repairs etc.

Serial No.	
Date of installation	
Dealer	Telephone No. ()

17. RAC Interface Adaptor (CZ-CAPRA1)

RAC Interface Adaptor (CZ-CAPRA1)

ENGLISH

About This Adaptor

■ Overview

This adaptor serves as an interface required to connect a central control device such as an intelligent controller with a room air conditioner. Using this adaptor can operate or monitor the room air conditioner from the central control device. Panasonic room air conditioners equipped with the CN-CNT terminal are supported.

■ Features

- The following operations from the central control device can be performed.
- Operations to start/stop the room air conditioner, switch the operation mode, and set the temperature, fan speed and fan direction (up/down).
- Monitoring the operation status and abnormality of room air conditioner.
- Prohibiting the remote control operation of room air conditioner
 - When the prohibition setting of the remote controller is set, all operation by the user is prohibited. Make the air conditioner setting by the central control device with due consideration about the ambient situation.
- Using ON/OFF contact of external connection can start/stop the room air conditioner, prohibit/permit the remote control operation, and perform the emergency stop. A coin timer or card key can also be connected.
- Retrieving the operation signal or abnormal signal of room air conditioner (An external power source (DC12V) is separately required).

■ Restricted matters for controlling the room air conditioner from the central control device

- The group control is not possible.
- The energy-save function, quiet operation function and demand function cannot be set.
- The outdoor unit status, and the fan or sensor status of indoor unit cannot be monitored.
- Room air conditioner-specific functions (iAUTO-X, NANO-E-G, MILD DRY, POWERFUL, QUIET, AIR SWING (◀/▶) etc.) cannot be set.
- Room air conditioner-specific functions may be cancelled by operating the central control device.

■ Capacity setting on the central control device side

When calculating the proportional distribution on the central control device, set the capacity of the room air conditioner on the central control device side.

■ Alarm indications

If an abnormality is detected by this adaptor, any of the following alarms is displayed on the central control device.

- C14: An alarm has occurred on the room air conditioner
For details of the alarm, check the operating instructions of the room air conditioner.
- C15: Abnormal communication between this adaptor and room air conditioner
Check the wiring condition.
- C19: Duplication of the adaptor address
Set the address switch not to duplicate the adaptor address.

17. RAC Interface Adaptor (CZ-CAPRA1)





CONTENTS

- Safety Precautions2
- About This Adaptor20
- Specifications21
- Supplied accessories.....21
- Dimensions21
- Installation Precautions21
- Basic Wiring Diagram22
- Mounting and Wiring.....23
- Connecting External Equipment25
- Setup26


Specifications

Model No.	CZ-CAPRA1
Dimensions (H x W x D)	120 x 70 x 32.5 (mm)
Weight	130 g
Temperature/ Humidity range	0 °C to 40 °C / 20 % to 80 % (no condensation) *Indoor use only.
Power Source	DC12 V (supplied with room air conditioner)

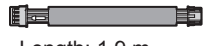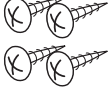Supplied accessories

RAC connection wiring (1) 5P White 4P Red  Length: 1.9 m	Screw (4)  M3.8 x 16
Clamper (3) 	Installation Instructions (1) 

Dimensions

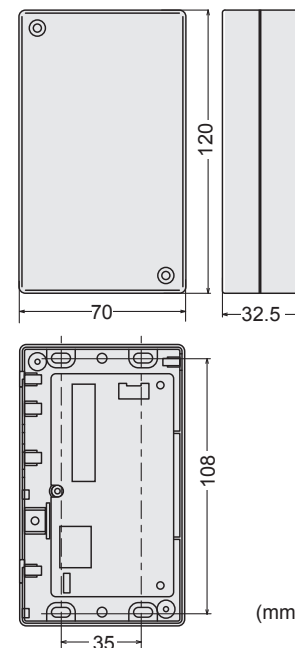

ENGLISH

*Wirings other than the RAC connection wiring are not included (field supplied item).

*When outputting the operation status or alarm status, a 12 V DC external power source for relays is required (field supplied item).

Installation Precautions


■ Installation Location

- Avoid the following locations for installation.
 - Location where the controller will be splashed with water or affected by dampness or humidity
 - Under direct sunlight
 - Location near heat source
 - Uneven surface
 - Location that is subject to excessive vibration or physical impacts. (Fixing screws may come off, and the controller may drop.)
- Install the controller away from any sources of electrical noise.
- Install the controller at a location with suitable temperature and humidity for using.

(EN) 21

17. RAC Interface Adaptor (CZ-CAPRA1)

Basic Wiring Diagram

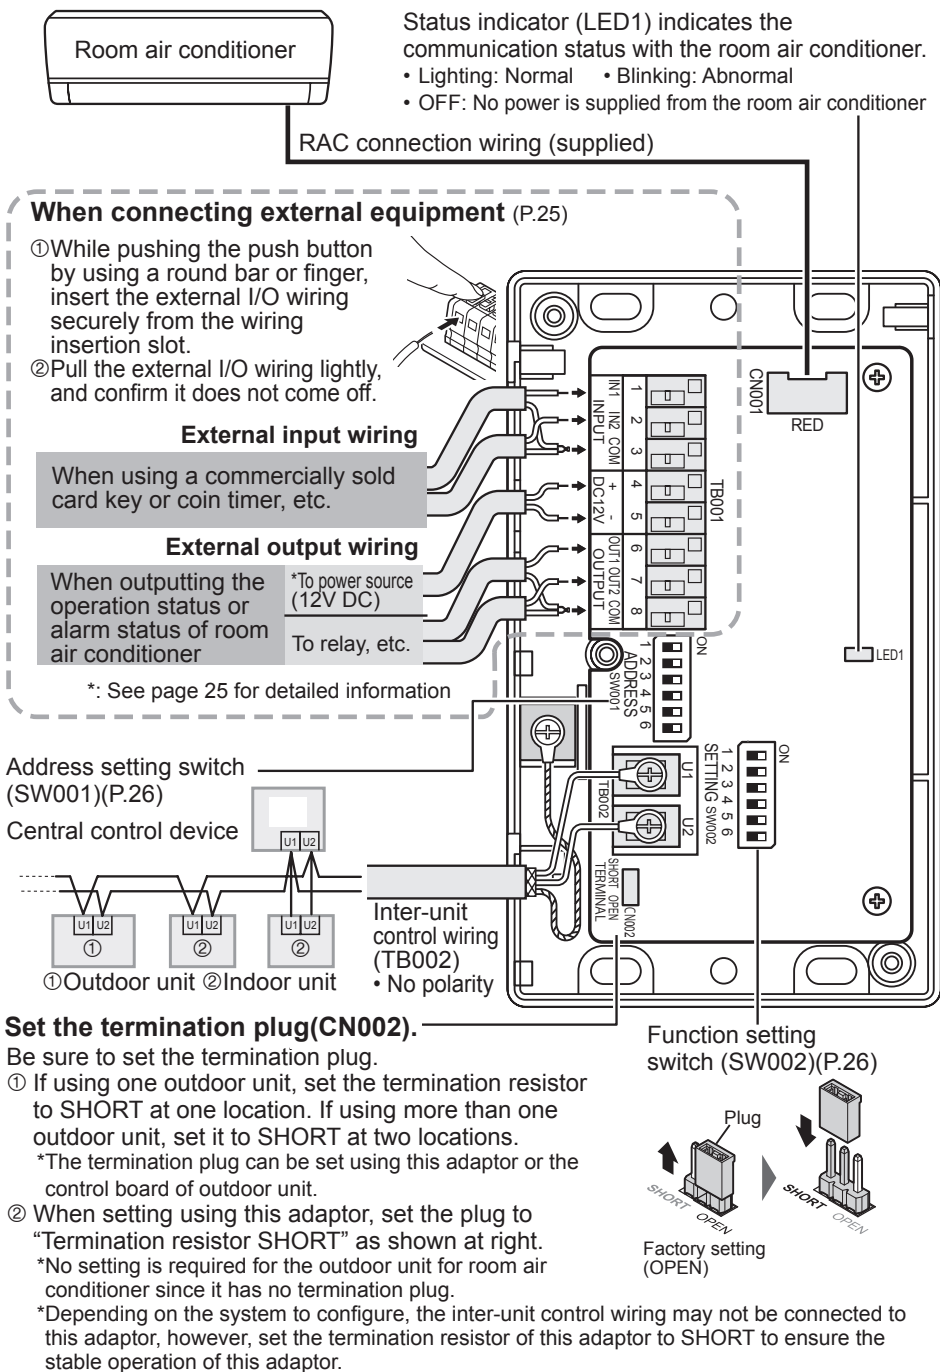

17. RAC Interface Adaptor (CZ-CAPRA1)

Mounting and Wiring

■ General Precautions on Wiring

- Regulations on wire diameters differ from locality to locality. For field wiring rules, please refer to your LOCAL ELECTRICAL CODES before beginning. You must ensure that installation complies with all relevant rules and regulations.
- Use the field supplied wiring with at least 1 mm in thickness of insulation part including the sheath.
- Connect all wiring tightly to prevent the terminal board from loosening when the wiring connection part is pulled by an external force. (Otherwise, fire or overheating may occur.)


■ Inter-Unit Control Wiring

- Type of wiring
Use a flexible shield wiring of 0.5 to 2 mm².
- Total wire length: 1000 m or less
- Number of connectable units and devices
(Up to total of 100 units and devices can be connected.)

Indoor unit	Up to 64 units*
Outdoor unit	Up to 30 units
Central control device	Up to 10 units


*: The number of indoor units includes the Interface Adaptor and this adaptor.

- Attach the ring pressure terminal (field supplied item).

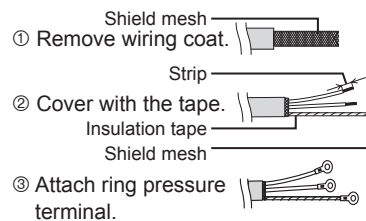

Attention

- Ground the shield on both sides of shield wiring, otherwise an operation error from noise may occur.



■ Mounting and Wiring Method


1 Connect the RAC connection wiring (supplied) to the room air conditioner.

For attachment/removal of the front panel grille of the room air conditioner, connector position, printed circuit board position and wiring arrangement, refer to the [Installation Instructions] of the room air conditioner.

- 1 Connect the RAC connection wiring to the CN-CNT connector of the room air conditioner.


- 2 Determine the installation position of this adaptor, and make a wiring arrangement to suit the position.

- Secure space as shown in the figure when pulling the wiring out of the opening.

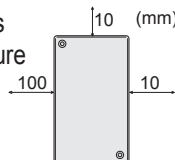

- 3 Attach the front panel grille of the room air conditioner.

- Bundle excess wirings, and store them in the room air conditioner.

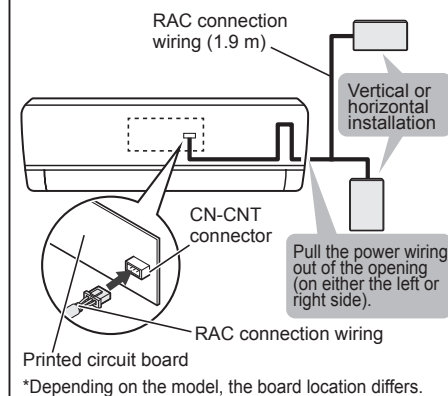


(EN)

23

ENGLISH

17. RAC Interface Adaptor (CZ-CAPRA1)


2 Remove the top case.
(Case-fixing screws: 2)

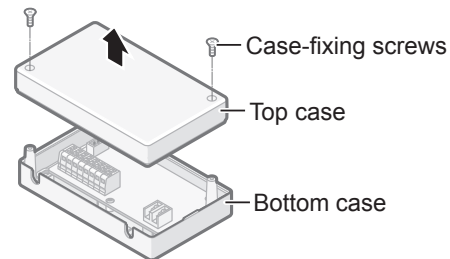

3 Mount the bottom case to the wall.


4 Connect the RAC connection wiring (supplied).

- Arrange the wires along the groove.

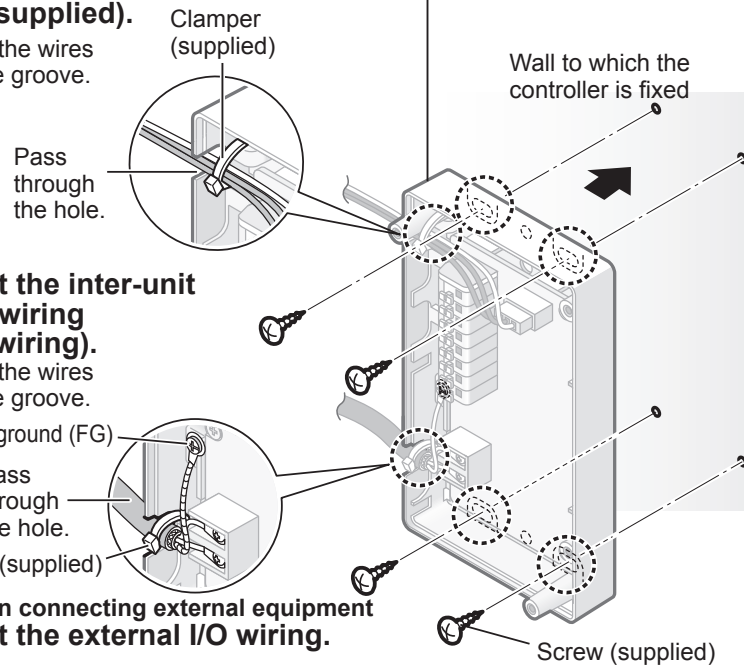


5 Connect the inter-unit control wiring (shield wiring).

- Arrange the wires along the groove.

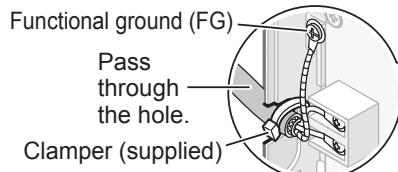

6 Only when connecting external equipment
Connect the external I/O wiring.
(P.25)

- Cut here with a nipper and remove the burr with a file.
- As shown in step 4 or 5, pass the clammer (supplied) through the hole, and fix the wiring.
- When the settings are complete (P.26), attach the top case.

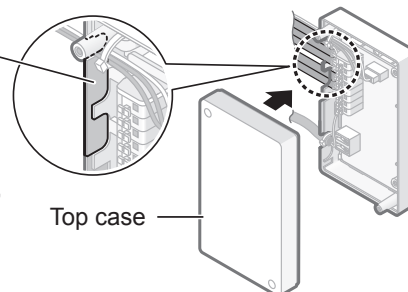

17. RAC Interface Adaptor (CZ-CAPRA1)


Connecting External Equipment

External Input Wiring

- Type of wiring
Use a flexible wiring of 0.5 to 0.75 mm².
- Total Wire Length
100 m or less
If a longer length is needed, use a relay.

Attention

- Use only a single wiring or stranded wiring.
- Wiring tip arrangement.
- Arrange the external output wiring as well.



Connection Specifications

	Controller side		External equipment side		
	Condition	Terminal name	Terminal	Circuit example	Condition
Control input	Non-voltage contact "a" Static or Pulse • Contact allowable voltage: DC5 V ± 10% • Contact allowable current: Max. 10 mA	Input 1 (IN 1) <input type="checkbox"/> Input 2 (IN 2) <input type="checkbox"/> Common (COM) <input type="checkbox"/>	1 2 3		• Pulse width: 300 msec or more

External Output Wiring

- External output wiring specification is the same as external input wiring.
- When outputting the operation status or alarm status, a 12 V DC external power source for relays is required.
 - Recommended product: COSEL PBA10F-12
 - Allowable wattage: 15 W or less
- Use the following specifications for DC power wiring.
 - Type of wiring: Use a flexible wiring of 0.5 to 0.75 mm²
 - Arrange the power line as short as possible.

Connection Specifications

	Controller side		External equipment side		
	Condition	Terminal name	Terminal	Circuit example	Condition
DC Power input	Non-voltage contact "a" Static or Pulse There is a polarity. (Make sure that the polarity (+/-) is correct before connecting.)	DC power + (DC 12 V +) <input type="checkbox"/> DC power - (DC 12 V -) <input type="checkbox"/>	4 5		• Power Supply for relays (Supply 12 V DC externally)
Status output	Voltage contact "a" Static (Relay output) • Contact allowable voltage: Max. DC12 V • Contact allowable current: Max. 100 mA • Minimum application load: DC5 V 1 mA	Alarm output (OUT 1) <input type="checkbox"/> Operation Output (OUT 2) <input type="checkbox"/> Common (COM) <input type="checkbox"/>	6 7 8		• Rated coil voltage: 12 V DC

(EN) 25

ENGLISH

18. Intelligent Controller (CZ-256ESMC3)

1. Installation Instructions

ENGLISH

Safety Precautions

Please Read Before Starting

This controller must be installed by the sales dealer or installer. These instructions are all you need for most installation sites and maintenance conditions. If you require help for a special problem, contact our sales/service outlet or your certified dealer for additional instructions.

⚠ WARNING
This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

⚠ CAUTION
This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

- We assume no responsibility for accidents or damages resulting from methods other than those described in the installation instructions or methods without using specified parts. Malfunctions that occurred due to the unauthorised installation methods are not covered by the product warranty.
- This controller shall be installed in accordance with National Wiring Regulations.
- After the installation is complete, perform test operation to confirm that no abnormality is present.
- Read the installation instructions of devices to be connected as well.
- When relocating or repairing this controller, provide the installation instructions to the servicing personnel.

⚠ WARNING

ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. ONLY A QUALIFIED, EXPERIENCED ELECTRICIAN SHOULD ATTEMPT TO WIRE THIS SYSTEM.

- Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring.
- Improper connections and inadequate grounding can cause **accidental injury or death**.
- This controller is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD). Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown.

Earth Leakage Circuit Breaker (ELCB) must be incorporated in the fixed wiring in accordance with the wiring regulations. The Earth Leakage Circuit

Breaker (ELCB) must be an approved 10 A, having a contact separation by 3 mm in all poles.

- Provide a power outlet to be used exclusively for this controller.
- Turn off the circuit breaker of the controllers before installation.
- Do not supply power to the controller until all wiring is completed or reconnected and checked.
- Fix the power supply wiring securely with the clamp so that the power supply terminal board is free of tension (external force) when pulled.
- Loose connection of the terminal board may occur fire.
- To prevent possible hazards from insulation failure, the controller must be grounded.
- Select an installation location which is rigid and strong enough to support or hold the controller, and select a location for easy maintenance.
- This product must not be modified or disassembled under any circumstances. Modified or disassembled controller may cause fire, electric shock or injury.
- Do not clean inside the controller by users.
- Engage authorized dealer or specialist for cleaning.
- Do not operate with wet hands.

⚠ CAUTION

- Ground yourself to discharge static electricity before performing any wiring.
- Do not use the controller at the following locations.
 - Areas where leakage of flammable gas may be expected
 - Places where large amounts of oil mist exist
 - Locations where external air may enter the room directly (This may cause "condensation")
 - Locations where high-frequency emissions are generated
 - Locations where voltage fluctuation frequently occurs
 - Do not wash with water.

(NOTICE)
The English text is the original instructions. Other languages are translation of the original instructions.

Specifications


Model No.	Dimensions (H x W x D)	Weight	Temperature/ Humidity range (no condensation) Indoor use only.	Rated voltage/ Rated frequency	Power consumption	Precision Clock	± 30 seconds/month (at normal temperature 25 °C) *Adjust periodically. 100 days (at normal temperature 25 °C with full charge) *Approx. 8 hours are required for full charge.
CZ-256ESMC3	240 × 280 × (20 + 65) mm	2.7 Kg	0 °C to 40 °C / 20 % to 80 %	Single phase 100-240 V ~ 50/60 Hz	Max. 20 W	Holding time	Up to 100 units of the combined total of the following • Indoor unit - Up to 64 units* • Outdoor unit - Up to 30 units • Central control device - Up to 10 units

*1: The maximum number of connectable units is shown below.
• When using only this unit: 128 indoor units and 60 outdoor units
• When connecting a Communication Adaptor: 256 indoor units and 120 outdoor units

*2: The number of indoor units includes the Interface Adaptor.

Panasonic®

Installation Instructions Intelligent Controller Model No. CZ-256ESMC3



ENGLISH	ENGLISH
Read through the Installation Instructions before you proceed with the installation. In particular, you will need to read under the "Safety Precautions" on page 2.	2-5
FRANÇAIS Lisez les instructions d'installation avant de commencer l'installation. En particulier, vous devez lire la section « Consignes de sécurité » en page 6. Pour des instructions plus détaillées, veuillez vous référer au DVD fourni.	FRANÇAIS
ESPAÑOL Lea las instrucciones de instalación antes de proceder con la instalación del equipo. En concreto, deberá leer detenidamente la sección "Precauciones de seguridad" situada en la página 7. Si desea instrucciones más detalladas, consulte el DVD suministrado.	ESPAÑOL
DEUTSCH Lesen Sie die Installationsanleitung aufmerksam durch, bevor Sie mit der Installation beginnen. Lesen Sie insbesondere die „Sicherheitshinweise“ auf S. 8 sorgfältig durch. Weitere detaillierte Anweisungen finden Sie auf der beigefügten DVD.	DEUTSCH
ITALIANO Leggere le istruzioni di installazione prima di procedere con l'installazione. Prestare particolare attenzione alla sezione "Precauzioni di Sicurezza" a pagina 9. Per istruzioni più dettagliate, fare riferimento al DVD in dotazione.	ITALIANO
NEDERLANDS Lees de installatie-instructies voordat u verder gaat met de installatie. U moet in het bijzonder de "Veiligheidsvoorschriften" op pagina 10 lezen. Voor gedetailleerdere instructies, verwijzen wij u naar de bijgeleverde DVD.	NEDERLANDS
PORTUGUÊS Leia cuidadosamente as instruções de instalação antes de prosseguir com a instalação. Em particular, é necessário ler as informações na secção "Precauções de segurança" na página 11. Para instruções mais detalhadas, por favor consulte o DVD fornecido.	PORTUGUÊS
TÜRKÇE Kurulumla başlamadan önce Kurulum Talimatlarını baştan sona okuyun. Özellikle 12. sayfadaki "Güvenlik Önlemleri" kısmını okumanız gerekecektir. Daha detaylı talimatlar için lütfen ürününe birliktede verilen DVD'ye bakınız.	TÜRKÇE
POLSKI Przed przystąpieniem do instalacji należy przeczytać instrukcję instalacyjną, a w szczególności „Środki ostrożności” na stronie 13. Bardziej szczegółowe instrukcje można znaleźć na dołączonej płycie DVD.	POLSKI
РУССКИЙ Прежде чем приступить к установке, прочитайте инструкцию по установке. В частности, следует прочитать раздел «Меры безопасности» на стр. 14. Для получения более подробных инструкций, пожалуйста, обращайтесь к поставляемому в комплекте DVD-диск.	РУССКИЙ
УКРАЇНСЬКА Перед початком установки уважно прочитайте інструкції. Особливу увагу зверніть на розділ «Запобіжні заходи» на ст. 15. Щоб отримати більш детальні інструкції, будь ласка, зверніться до DVD-диска, який постачається в комплекті.	УКРАЇНСЬКА



Panasonic Corporation
1006 Kadoma, Kadoma City, Osaka, Japan
Pанasonic Corporation
http://www.panasonic.com

H0916-0
CV6233334141

85464369910010


18. Intelligent Controller (CZ-256ESMC3)

Installation Precautions

- **Installation Location**
 - Avoid the following locations for installation.
 - Under direct sunlight
 - Location near heat source
 - Location where the controller will be splashed with water or affected by dampness or humidity
 - Uneven surface
 - Location that is subject to excessive vibration or physical impacts. (Fixing screws may come off, and the controller may drop.)
 - Install the controller vertically to the floor.
 - Install the controller at a location with suitable temperature and humidity for using.
 - Do not install controller at the locations with the equipment (medical equipment, etc.) which generates the high-frequency emissions. (It may interfere with the equipment and may cause accidents due to malfunction.)
 - Install at least 1 m away from TV, radio, PC, etc. (To prevent fuzzy images or noise)
- **General Precautions on Wiring**
 - Regulations on wire diameters differ from locality to locality.
 - For field wiring rules, please refer to your LOCAL ELECTRICAL CODES before beginning. You must ensure that installation complies with all relevant rules and regulations.
 - Use the field supplied wiring with at least 1 mm in thickness of insulation part including the sheath.
 - Connect all wiring tightly to prevent the terminal board from loosening when the wiring connection part is pulled by an external force. (Otherwise, fire or overheating may occur.)
 - Using putty (field supplied item), etc., fill the hole of the control box through which the wiring passes.
 - Do not pass the power supply wiring and other wirings through the same wire tube. Keep as long a distance as possible between them to alleviate the influence of noise.
 - Do not store the power supply wiring and other wiring in the same metal tube or bundle them together. (An operational error from noise may occur.)
 - Do not bury the wiring in the ground.

Supplied accessories		<->: Number of pieces
Screw <4> (M4×10)	Washer <4>	
Nut <4> (M4)	Clamper <4>	
Instructions and License List (DVD) Quick Reference, Installation Instructions		
* Wiring are not included (field supplied item).		

Dimensions (Part Names)

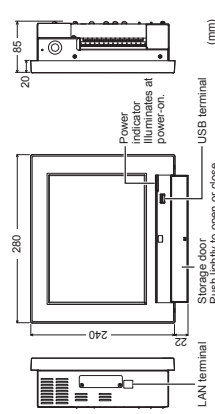


Symbols on the controller
 This symbol refers to "Protective earth".

Caution for Network Connection

- Connecting to internet will enable you to operate the unit and check the status using a PC from a remote location.
- When connecting to internet, implement security measures against illegal access from outside.
- For detailed connection and setup method, consult the network administrator.


Mounting

■ Design Control Box

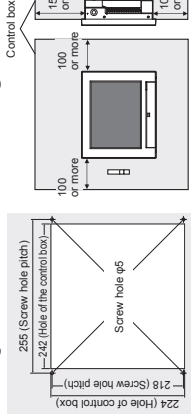

To ensure proper airflow (for heat dissipation) inside the control box, provide vents (slits, etc.) both on the upper part and lower part (or bottom side) of the right and left sides.
 • Do not allow the temperature inside the control box to exceed 40 °C.
 • Be careful not to block the above vents during installation.

■ How to Mount (Control Box)

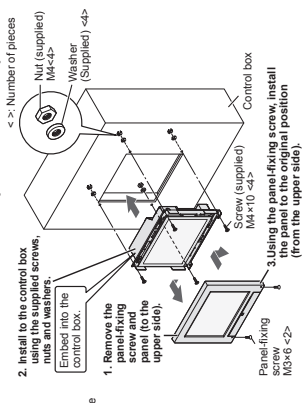

Preparations for Wiring

- **Power Supply Wiring**
 - Be sure to use a dedicated line for power source.
 - Be sure to earth this controller.
 - Do not connect the earth wiring to those of gas pipe, water pipe, lightning rod, telephone, etc.
 - **Type of wiring**
 - Use a flexible wiring of 2 mm² (Recommended).
 - Use the standard power supply wiring for Europe (such as H05RN-F or H07RN-F which conform to CENELEC (HAR) rating specifications) or use the wiring based on IEC standard (60245 IEC57, 60245 IEC66).
 - **Total Wire Length** : 30 m or less
- **Inter-Unit Control Wiring**
 - **Type of wiring**
 - Use a flexible shield wiring of 0.5 to 2 mm².
 - No polarity
 - **Total Wire Length** : 1000 m or less
 - **Number of connectable units and devices** : (→ P.2 "Specifications")

Attention

Ground the shield on both sides of shield wiring, otherwise an operation error from noise may occur.

Wiring




4. Wiring

- ① **Connect the power supply wiring.**
 - Connect the power supply wiring and the earth wiring to the power supply terminal board and the earth terminal board* (on the sheet metal case) respectively.
 - *3: Use earth terminal board as protective earth.
 - Do not over-tighten. (The screw may be damaged.)
- ② **Connect the inter-unit control wiring.**
 - Connect the shield part of the shield wiring to No. 0 (FG*) of the signal terminal board (TB2).
 - *4: Functional Ground
 - Do not over-tighten. (The screw may be damaged.)
 - There is no polarity.
- ③ **Connect the Communication Adaptor control wiring.**
 - Make sure the polarities (+/-) are correct.

* Read the "Installation Instructions" supplied with the Communication Adaptor.

④ Connecting external equipment

- ④ **Connecting external equipment**
 - See "Connecting to External Equipment" (P.5).
- ⑤ **Fix the power supply wiring and other communication wirings with the clamper (supplied) securely.**
 - (Do not apply tensile force on the terminal connection part.)
- ⑥ **Connect the LAN cable.**
- ⑦ **After all wiring arrangements are complete, turn the circuit breaker on.**
 - Before power on, measure the voltage of the power supply terminal board, and check it for the specified voltage. Turning the power on with a voltage other than the specified one may blow the fuse. If this occurs, no power is supplied, and this unit may need to be replaced.

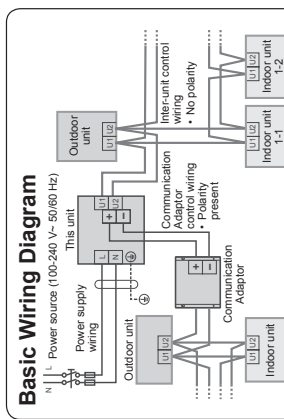

1. Turn the circuit breaker off before connecting the wiring



2. How to Attach the Ring Pressure Terminal

- **For power supply wiring**
 - Process the end of each wiring, and attach the ring pressure terminal (field supplied item).
- **For shield wiring**
 - Process the end of the each wiring and attach the ring pressure terminal (field supplied item).
 - ① Remove wiring coat.
 - ② Cover with the tape.
 - ③ Attach ring pressure terminal.
- **Remove the power switch cover**
 - Power switch cover
 - Power-in port
 - Screw

18. Intelligent Controller (CZ-256ESMC3)

3


Wiring (continued)

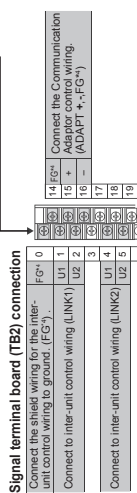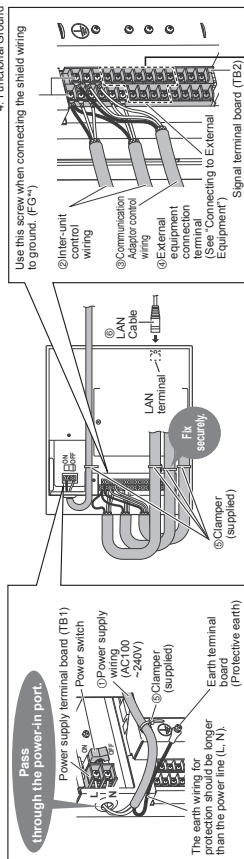

- If the power supply wiring is mistakenly connected to a terminal board other than the power supply terminal board, the device connected to this controller or this controller will malfunction.

Connecting to External Equipment

- Non-voltage contact "a"
- Keep the external I/O wiring lengths of 20 meters or less. If a longer length is needed, use a Communication Adaptor or relay.
- A voltage of DC5 V (approx. 10 mA) is applied to the contact to detect the input signal.
- Do not apply an external voltage to the input terminal.
- The contact allowable voltage and current for the output signal terminal are max. DC30 V and 0.5 A respectively.

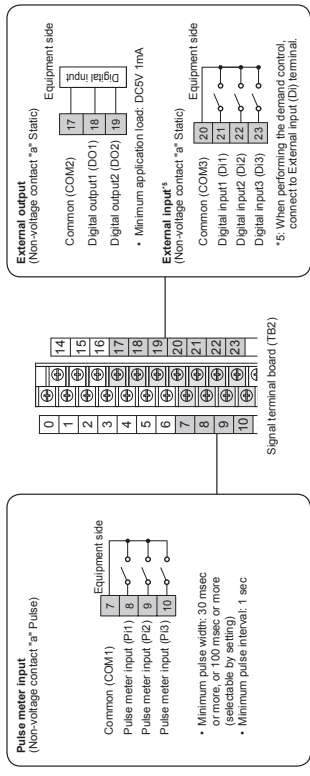

Setting and Test Operation


- 1 Turn on all of the indoor units and the outdoor units.
- 2 Turn on the Communication Adaptor (only when connected), and make the necessary settings. (See "Installation Instructions" supplied with the Communication Adaptor.)
- 3 Turn on this unit.
- 4 Attach the power switch cover to the original position.
 - Do not allow the wirings to be caught.
- 5 Refer to "Quick Reference" and check the following.
 - Check if the clock setting and the number of connected units are correctly displayed.
- 6 Set the central address.
 - Make other necessary settings (unit name, area setting, distribution setting, etc.).
 - Check if the indoor unit, etc. can be operated properly using this unit, and correct statuses are displayed.
- 7 Refer to one of "Service Manual", "Test Run Service Manual" and "Technical Data", and check the following.
 - Make the communication setting with the air conditioner.
 - Check and confirm the connection configuration.

Authorized representative in EU
Panasonic Testing Centre
Panasonic Marketing Europe GmbH
Winsbergring 15, 22525 Hamburg, Germany

© Panasonic Corporation 2016
Printed in Japan

18. Intelligent Controller (CZ-256ESMC3)

2. Quick Reference

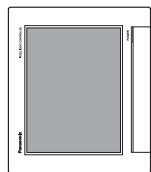

Panasonic®

Quick Reference
Intelligent Controller
Model No. **CZ-256ESMC3**

Contents

	Check	Operation	Setting
Safety precautions	2	5	10
Specifications	3	5	12
Operating precautions	4	5	14
Installation precautions	4	5	16
Parts and their functions	4	7	17
Operations on this unit		5	18
Basic operation of the touch panel		5	21
Buttons and boxes		5	23
How to read the screens		7	25
Checking the settings on the indoor unit		8	27
Changing the settings on the indoor unit		10	28
Settings after completing installation		12	
Setting the language and time zone		14	
Setting the date and time		16	
Confirming system configuration		17	
Basic settings on the indoor unit		18	
Changing the name of the area group		21	
Changing the name of the distribution group		23	
Basic settings for the pulse meter		25	
Set the distribution mode		27	
Basic settings for distribution calculation		28	

Installation Instructions
Separately Attached.

ENGLISH Before operating the unit, read these operating instructions thoroughly and keep them for future reference.
FRANÇAIS Avant d'utiliser l'appareil, lisez ce mode d'emploi dans son intégralité et conservez-le pour toute référence ultérieure.
ESPAÑOL Antes de operar la unidad, lea atentamente estas instrucciones de funcionamiento y guárdelas para futuras consultas.
DEUTSCH Bevor Sie das Gerät in Betrieb nehmen, lesen Sie bitte diese Bedienungsanleitung aufmerksam durch und bewahren Sie sie für die künftige Verwendung auf.
ITALIANO Prima di utilizzare l'unità, leggere a fondo queste istruzioni per l'uso e conservarle per riferimento futuro.
NEEDERLANDS Lees deze gebruikershandleiding aandachtig voordat u het apparaat gebruikt en bewaar ze voor toekomstig gebruik.
PORTUGUÊS Antes de utilizar o aparelho, leia completamente este manual de instruções e guarde-o para futuras referências.
TÜRKÇE Üniteyi çalıştırmadan önce bu çalıştırma talimatlarını baştan sona okuyun ve ileride başvurmak üzere saklayın.
POLSKI Przed uruchomieniem urządzenia należy dokładnie przeczytać instrukcję obsługi i zachować ją do wykorzystania w przyszłości.
РУССКИЙ Перед использованием этого устройства внимательно прочитайте настоящую инструкцию по эксплуатации и сохраните ее для дальнейшего справки.
UKRAЇНСЬКА Уважно прочитайте цей посібник з експлуатації перед тим, як увімкнути пристрій, та зберігайте його на майбутнє.

CE Panasonic Corporation
1006 Kadoma, Kadoma City, Osaka, Japan

85464608354010
Panasonic Corporation
<http://www.panasonic.com>

F0916-0
CY6233334134

- Read the Operating Instructions carefully for safe use. This manual describes the Operating Instructions of the intelligent controller. Read this manual as well as operating instructions supplied with indoor units and outdoor units.
- **Be sure to read the "Safety precautions" (below) before using.**
- **Find detailed operating instructions in the "Operating Instructions" (PDF) on the DVD included with this unit.**
- Keep this manual with operating instructions supplied with indoor units and outdoor units in a safe place.
- Be sure to keep this manual in a place easily accessible by users. In the case of user change, be sure to give this manual to the new user.

NOTICE

The English text is the original instructions. Other languages are translation of the original instructions.

Safety precautions



WARNING
This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



CAUTION
This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.



! Matters to be observed



! Prohibited matters



! **WARNING**



! Do not use this appliance in a potentially explosive atmosphere.



! In case of malfunction of this appliance, do not repair by yourself. Contact the sales or service dealer for repair.



! In case of emergency, remove the power plug from the socket or switch off the circuit breaker or the means by which the system is isolated from the mains power.



! **CAUTION**



! This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



! Do not operate with wet hands.
! Do not wash with water.

18. Intelligent Controller (CZ-256ESMC3)

Specifications

Model No.	CZ-256ESMC3	
Dimensions [H x W x D]	240 x 280 x (20 + 65) mm	
Weight	2.7 kg	
Temperature/Humidity range	0 °C to 40 °C / 20% to 80% (no condensation) Indoor use only.	
Rated voltage/Rated frequency	Single phase 100-240 V ~ 50/60 Hz	
Power consumption	Max. 20 W	
Clock	Precision	+30 seconds/month (at normal temperature 25 °C) * Adjust periodically.
	Holding time	100 days (at normal temperature 25 °C with full charge) * Approx. 8 hours are required for full charge.
Number of connectable units per link ¹⁾	Indoor unit - Up to 64 units ²⁾ Outdoor unit - Up to 30 units	
Computer environment for remote control	Browsers	Internet Explorer 11 or later or Google Chrome
	Screen resolution	1280x1024 (recommended)
USB memory devices that can be used	Standard type (USB2.0) Capacity: 4 GB or more Cautions before use <ul style="list-style-type: none"> • Proper operation is not guaranteed even if you use a computer that meets the above specifications. • Encryption (with security software) etc., cannot be used. • Panasonic accepts no responsibility for any loss of data. 	

¹⁾: The maximum number of connectable units is shown below.

- When using only this unit: 128 indoor units and 60 outdoor units
- When connecting a Communication Adaptor:

256 indoor units and 120 outdoor units

²⁾: Includes the number of Interface Adaptors.

Check


Operating precautions

- Do not use in the following locations
 - Where flammable gases, etc. may leak
 - Near the ocean or other areas with a lot of salt
 - In areas where sulphurous gases occur such as natural spa areas
 - In places where there may be airborne water or oil (including machinery lubricants, etc.) or steam
 - Where there are large fluctuations in voltage
 - Where machinery emitting electromagnetic waves are located
 - Where there may be airborne organic solvents
- Do not apply strong shocks (This may cause malfunction)
- Do not use heaters near the controller (This may cause deformation or discolouration)
- Do not use hard or pointy objects (This may cause scratches or malfunction)
- Do not hit the touch panel or push on it too strongly (This may cause malfunction)

Installation precautions

- Do not install in locations with high humidity, lots of oil, vibrations, where direct sunlight can reach the unit, or near sources of heating (This may cause malfunction)
- Do not install in noisy locations (This may cause incorrect operation)
- Install at least 1 m away from televisions, radios, personal computers, etc. (The unit may cause picture distortion and noise)

Parts and their functions

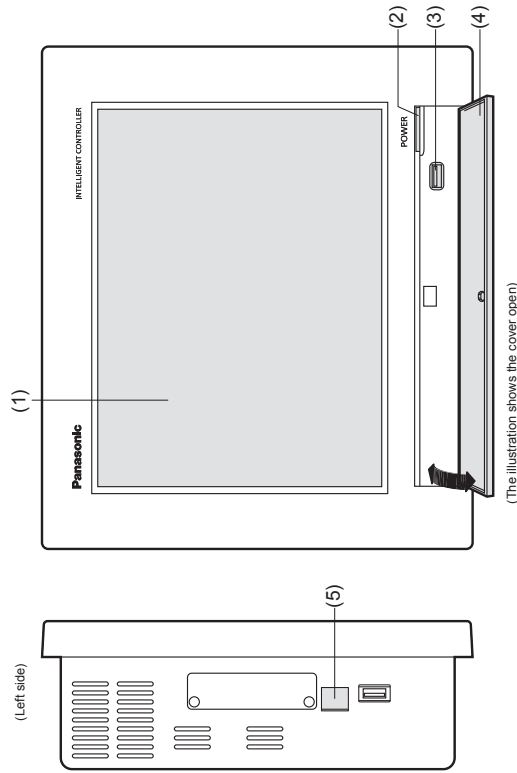

Name	Explanation
(1) Colour liquid crystal display with touch panel	You can operate the unit by touching the screen with your fingers.
(2) Power lamp	This lights when the power is on.
(3) USB jack	Connect a USB memory device here to backup data from this unit (settings, accumulation/distribution).
(4) Cover	Open this cover to connect a USB memory device to the USB jack. To open, gently push on the cover and then allow to drop down. To close, lift the cover and gently press closed.
(5) LAN jack	Connect to a network with a cable.

4

3

18. Intelligent Controller (CZ-256ESMC3)

Parts and their functions

Check boxes

These are mainly used to switch on or off item selection and functions.

Display example	Status	Explanation
auto shutoff <input type="checkbox"/> Valid	Unselected	In this state the item is not selected.
auto shutoff <input checked="" type="checkbox"/> Valid	Selected	In this state the item is selected. (In this example, the automatic stop feature will operate.) A check mark appears when you touch it. The check mark disappears when you touch it again.

Spin boxes

These are used to switch the display of items and to set numeric items such as time.

Display example	Explanation
Control Cr. 1-5 Gr.2	▶ takes you to the next item. ◀ takes you to the previous item. Items may cycle around in the following way: Group 1 ↔ Group 2 ↔ ... ↔ Group 5
09 : 00	◀ increases the numeric figure. ▶ decreases the numeric figure. The numbers will change continuously if you continue to touch the button. The numbers cycle around in the following way. For example: When the number is an hour: (blank) ↔ "00" ↔ "01" ↔ ... ↔ "23"

Text boxes

These are used when you need to edit some text.

Display example	Explanation
IP address XXXXXX.XXXXXX	The touchscreen keyboard appears when you touch the text box. Use the touchscreen keyboard to enter the text.

Dialogues

These are elements that appear on the screen and are mainly used for settings. They close automatically once you have registered the settings. Touch ⓧ to close the dialogue without changing the setting. (There may also be cases where you touch ⓧ at the top right of the screen to register the setting.)




Operations on this unit

Operations on this unit are performed by following menus. The screens used for operations all follow a common pattern, with the screens being easy to read and easy to use.


Basic operation of the touch panel

This section describes the basic operations on the touch panel.

Touch
This is a light touch with a finger on the buttons or text boxes displayed on the touch panel.




Picker
This is an up and down movement of the finger touching the screen, used to pick settings in elements such as spin boxes.

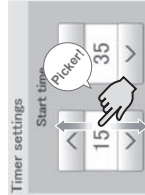

Swipe

This is an operation where the finger is slid in a direction (up or down) on the touch panel. This is used to scroll slowly.

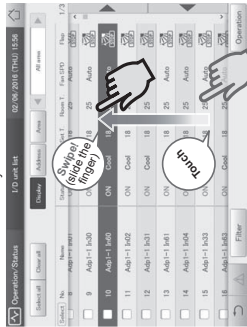

Flick

This is an operation where the finger on the touch panel is flicked in a direction (up or down). This is used to scroll quickly.



Check

Operation

Buttons and boxes

There are a variety of buttons and boxes on the screen that you use to perform operations and settings on the touch panel.

Buttons

These are used to switch screens, save settings, switch settings on or off, select items, and similar operations.

Display example	Status	Explanation
OFF	Setting is off	In this state the setting is off.
OFF	Setting is on	In this state the setting is on.
OFF	Setting unavailable	This indicates that the setting is currently unavailable due to other conditions.


Display example

Display example	Status	Explanation
Ope. <input checked="" type="radio"/> OFF	Selected	The highlighted item is the one that is currently selected.
Authentiaotr <input type="radio"/> LOGIN <input checked="" type="radio"/> CRAM-HDS	Selection disabled	This indicates that the selection is currently unavailable due to other conditions.
Ope. <input type="radio"/> OFF <input checked="" type="radio"/> LOGIN <input type="radio"/> CRAM-HDA	Selection disabled	This indicates that the selection is currently unavailable due to other conditions.


18. Intelligent Controller (CZ-256ESMC3)

Checking the settings on the indoor unit

You can check the setting status of all indoor units connected to this unit in a list. You can also change the display to show by area.

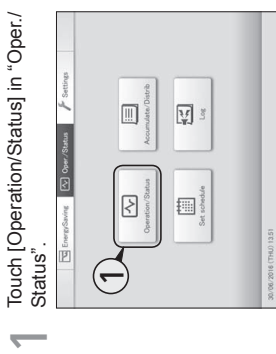

1 Touch [Operation/Status] in "Oper./Status".

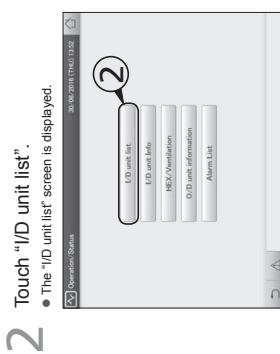


2 Touch "ID unit list".

- The "ID unit list" screen is displayed.

3 Checking the status of settings.

- Refer to P.9 for details about the screen.

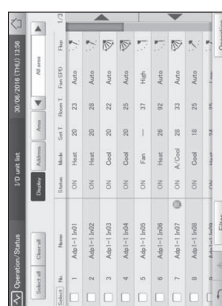

Note
You can select indoor units to change their settings. (→ "Changing the settings on the indoor unit" (P.10))

Operation

How to read the screens

There are some items and icons common to the operations and settings screens. The follow explains the items and icons.



Name	Explanation
A. Submenu name	This displays the submenu name.
B. Operations/Settings screen name	This displays the operations/settings screen name.
C. Date and time	The current date and time is displayed.
D. "Home" icon	Touch this to display the top menu.
E. Scroll buttons	Touch on the right side of the screen to scroll to the right. Touch to scroll to the left. The display changes according to the direction you can scroll.
F. "Back" icon	Touch this to go back to the previous menu.
G. "Warning" icon	The "Alarm List" screen is displayed when you touch this.

Notations in this document

Menu names, screen names, etc., are shown as follows in this document.


Type	Notation	Example
Top menus	"xxx"	"Oper./Status"
Screen names	"ID unit list"	"ID unit list" screen
Screen display items	-Select column-	"ON/OFF"
Submenu names	[xxx]	[Operation/Status]
Button names	[ID unit list]	[ID unit list]
Button names	[Operation]	[Operation]

18. Intelligent Controller (CZ-256ESMC3)


Changing the settings on the indoor unit

You can select indoor units to change settings, for example, start or stop them, or change their set temperature, etc.. Change settings in the "Settings" dialogue.
You can also select multiple indoor units and operate them using the same settings.

1 Touch [Operation/Status] in "Oper./Status".

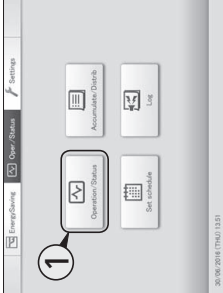


• The "Settings" dialogue is displayed.



Note

- There may be differences in the items you can set in the "Settings" dialogue, depending on the model of the indoor unit.
- When you have selected multiple units, setting items in common are displayed in the "Settings" dialogue.

5 Change the settings of the items.

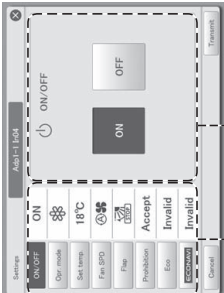


Common display area
Operation display area

Select an item from the common display area and set the operation in the operation display area.


Item	Explanation
ON/OFF	Set whether to start or stop operation. 1) Touch [ON/OFF]. 2) Select "On" or "Off".
Op. mode	Set the operating mode. 1) Touch [Op. mode]. 2) Select the operating mode (heating), (cooling), (fan), (automatic).

2 Touch "ID unit list".

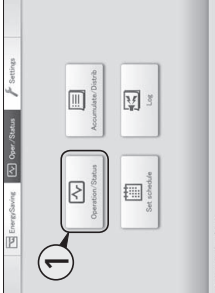

• The "ID unit list" screen is displayed.

3 Put a check mark in the "Select" column.

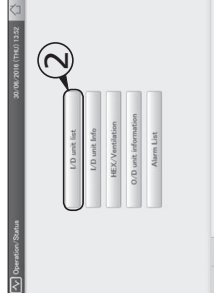

• Select the indoor units whose settings you want to change.
• You can touch [Select all] to change the settings in a batch.



"ID unit list" screen

A: [Select all]/[Clear all] buttons
Select all indoor units.
Cancel selection of all indoor units.

B: Change list order.
Display: The display follows the order set in "ID unit settings".
Address: The display follows the address order set in "ID unit settings".

C: Select the area to display in the list.
The area changes each time you touch and touch "Select Area" to display the "Select Area" dialogue.
(All area → "Area1" → "Area2" → ... → "AreaXXX" → All area)
• "XXX" stands for the number of the last of the registered areas.

D: The settings of the indoor units are displayed in a list.
You can scroll up or down by swiping or flicking the screen.
• Each time you touch the item name, the order switches between ascending (▲) and descending (▼).
• Some items are not displayed for some models.

Item	Explanation
[Select]	Select the indoor units you want to operate.
Name	The names of the indoor units are displayed. When an alarm is displayed to the right of the name, this indicates that some situation has occurred. Alarm: The indoor unit filters need cleaning. : An alarm has occurred.
Status	This indicates the current operating status (ON/OFF). (P.10)
Mode	The current operating mode (heat, dry, cool, fan, auto cool/heat) is displayed. (P.10)
Set T.	The current temperature setting is displayed. (P.11)
Room T.	The current room temperature is displayed.
Fan SPD	The current fan speed (high, mid, low, auto) is displayed. (P.11)
Flap	The airflow direction is displayed. (P.11)
Prntb.	This indicates the remote controller operation "Accept" or "Prntbt" to "Prntbt". (P.11)
Sche.	This indicates the setting status of the schedule (set, not set, stopped). Yes: This indicates that a schedule is set. - -: This indicates that a schedule is not set.
Eco	OFF: This indicates that a schedule is set, but that the schedule has not started because indoor units are off or similar. • is displayed when the energy saving setting is running. (P.11)
ECONAVI	ECONAVI is displayed when the ECONAVI setting is running. (Only for models with ECONAVI) (P.11)
e-Cut	• is displayed when the e-Cut function is running.

E: After cleaning the filters, touch to clear the filter icon from the display.
F: The "Settings" dialogue of the indoor unit selected at D is displayed.
You can change the settings for the selected indoor unit in the "Settings". (→ "Changing the settings on the indoor unit" (P.10))
• There may be differences in the items you can set depending on the model of the indoor unit.
• When you have selected multiple units, setting items in common are displayed in the "Settings" dialogue.

18. Intelligent Controller (CZ-256ESMC3)

Settings after completing installation

Basic settings flow

- 1** Set the language and time zone on this unit.
→ Setting the language and time zone (Language/Timezone settings) P.14
 - 2** Set the time and date on this unit.
→ Setting the date and time (Date settings) P.16
 - 3** Confirm the configuration of the air conditioning system.
→ Confirming system configuration (Check configuration) P.17
 - 4** Set addresses and group memberships for the indoor units.
→ Basic settings on the indoor unit (IID unit settings) P.18
 - 5** Name the area groups.
→ Changing the name of the area group (Area group name settings) P.21
- Setting finished


Setup flow for different operating styles

Step	Category step	Setting	Screen menu names	Operation		
				Air conditioning operations only	Distribution rate display only	Quantity used, charges display
1	Date settings	Setting the current date and time	Date setting			
2	Composition loading	Confirming system configuration	Check configuration			
3	Unit related	Central address*1	IID unit settings			
		Name of the indoor units	IID unit settings			
		Distribution group	IID unit settings			
		Area group	IID unit settings			
		Control group	IID unit settings			
4	Group related	Not batch, not managed	IID unit settings			
		Name of the outdoor units	O/D unit settings			
		Local remote controller prohibition setting	空調機との通信設定			
		Name of the area group	Area group name settings			
		Name of the distribution group	Distribution group settings			
5	Pulse meter related	Name of the schedule group	Schedule group name settings			
		Association with the distribution group	Pulse meter settings			
		Type of pulse meter (electricity/gas), multiplying factor (number of pulse units)	Pulse meter settings			
		Name of the pulse meter	Pulse meter settings			

○: Settings required. △: Settings may be required. ×: Settings not required.

6 Touch [Transmit].

- The settings are registered and the "Settings" dialogue closes.
- To cancel the settings, touch [Cancel].

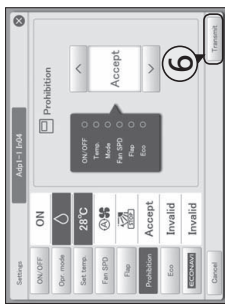

Note

- Touch \uparrow (or \downarrow) at the upper value (or lower value) of the set temperature and the set value becomes a blank (no setting). Furthermore, touch \leftarrow (or \rightarrow) and the upper value (or lower value) is displayed.
- For example: If upper value 30 °C and lower value 18 °C (when cooling)
 - 19 °C
 - 18 °C (lower limit value)
 - (blank)
 - 30 °C (upper limit value)
 - 29 °C

Setting

Item	Explanation
Set temp.	Set the temperature. 1) Touch [Set temp]. 2) Set the temperature with \uparrow and \downarrow . → Setting C steps → Setting C steps • In cooling or drying mode: Between 18 °C and 30 °C • In heating mode: Between 16 °C and 30 °C*1 • Automatic: Between 17 °C and 27 °C *1 The upper limit for gas heat pump air conditioners is 28 °C.
Fan SPD	Set the strength of the fan. 1) Touch [Fan SPD]. 2) Select the fan speed (high, automatic, low) (自動 (automatic)).
Flap	Set the direction of the airflow. 1) Touch [Flap]. 2) Set the flap to the desired position (F1, F2, F3, F4, F5). Touch \leftarrow (Swing). Touch \rightarrow during the swing to stop the flap at the desired position. • Setting the flap to automatic (heating) can be adjusted in 5 steps and cooling can be adjusted in 3 steps. • You can set either "Swing" or "STOP" if the mode does not support airflow direction settings.
Prohibition*2	Set whether to allow or prohibit use of the local remote controller. 1) Touch [Prohibition]. 2) Use \leftarrow (Accept) to select from "Accept", "Prohibit", "Prohibit", "Prohibit". Accept: Allows operations with the remote controller. Prohibit to 4: Operations on the remote controller are restricted.
Eco	Enable or disable energy saving operation. 1) Touch [Eco]. 2) Select "Valid" or "Invalid".
ECONAVI	Enable or disable ECONAVI setting. 1) Touch [ECONAVI]. 2) Select "Valid" or "Invalid".

*2 Example of prohibiting or enabling remote controller use (factory setting)

	ON/OFF	Opr. mode	Fan SPD	Flap	Energy saving settings
Accept	○	○	○	○	○
Prohibit	×	○	○	○	○
Prohibit	×	×	×	○	○
Prohibit	○	×	×	○	○
Prohibit	○	×	○	○	○


○: Operation and setting with the remote controller is possible
×: Operation and setting with the remote controller is not possible

18. Intelligent Controller (CZ-256ESMC3)


Setting the date and time

Manually set the date and time.


- 1 Touch [InteliContrir main] in "Settings".
 - The "Intelligent Controller maintenance" screen is displayed.

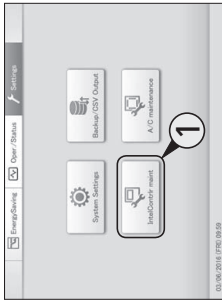


- 2 Touch [Date settings].
 - The "Date setting" screen is displayed.

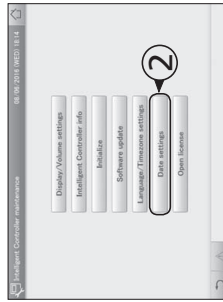

- 6 Select the time zone to display.
 - You can select [Tokyo(+9)], [Shanghai(+8)], [Singapore(+8)], [Taipei(+8)], [Bangkok(+7)], [Jakarta(+7)], [Calcutta(+5.5)], [UTC-14] to [UTC-1], [UTC], and [UTC+1].
 - The settings are registered and the "Timezone Set" dialog box closes.

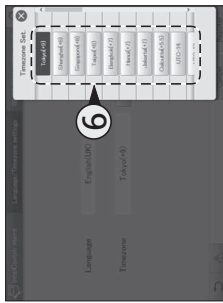

- 7 Touch [Register].
 - The settings are registered and the unit automatically reboots.
 - To cancel the settings, touch [Cancel].

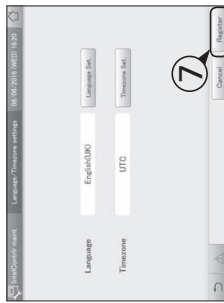


- 3 Setting the date and time.



Item	Explanation
Year	Set the date. Use [▲] [▼] to set "Year", "Month", and "Day".
Month	
Day	
Hours*	Set the time. Use [▲] [▼] to set "Hours", "Minutes", and "Seconds".
Minutes	
Seconds	* The time system for "Hours" is 24 hours.

- 4 Touch [Register].
 - To cancel the settings, touch [Cancel].

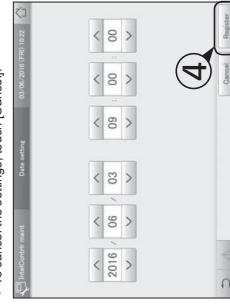

Setting


18. Intelligent Controller (CZ-256ESMC3)

Confirming system configuration

Confirm the current configuration of the air conditioning system.


1 Touch [System Settings] in "Settings".

- The "System settings" screen is displayed.
- To cancel confirmation of the configuration, touch [Cancel].

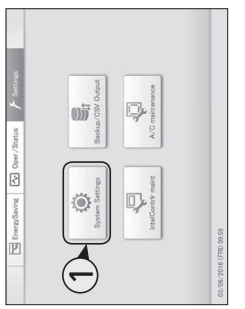

4 Touch [Start configuration].

- The current status of the system is rechecked and the results are then confirmed.
- To cancel confirmation of the configuration, touch [Cancel].

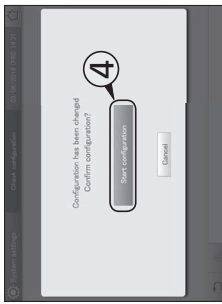


2 Touch [Check configuration].

- The "Check configuration" screen is displayed.



3 Touch [Check configuration].

- Confirmation of the configuration starts.
- If there are changes to the configuration of the air conditioning system after confirming the configuration, the message "Configuration has been changed. Confirm configuration?" is displayed.

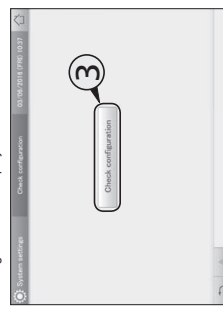


Basic settings on the indoor unit

Set details about indoor units (indoor unit addresses, groups belonged to, etc.).


1 Touch [System Settings] in "Settings".

- The "System settings" screen is displayed.

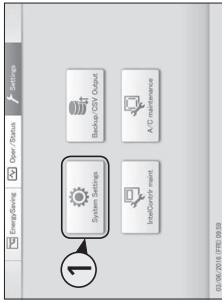


4 Touch [Set].

- The "Edit unit settings" dialog box is displayed.

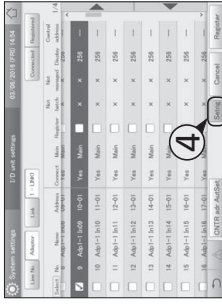


2 Touch [I/D unit settings].

- The "I/D unit settings" screen is displayed.

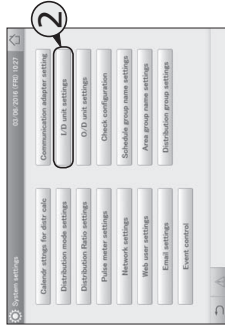


5 Change the settings.

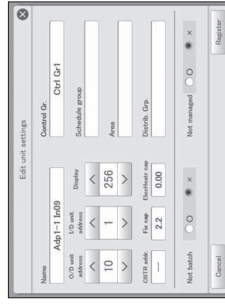

Item	Explanation
Name	Change the name of the indoor unit. Touch the text box and enter with the touchscreen keyboard. You can enter up to 16 letters or numbers (8 full-width characters).
O/D unit address	Use \uparrow \downarrow to set the addresses of the outdoor units (1 to 31). (*1) is set for local adaptors.
I/D unit address	Use \uparrow \downarrow to set the addresses of the indoor units (1 to 64).
Display	Use \uparrow \downarrow to set the order when displayed in a list (0 to 256).

3 Put a check mark in the "Select" column.

- You can select more than one.

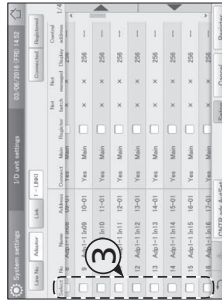

Setting




18. Intelligent Controller (CZ-256ESMC3)

3

Basic settings on the indoor unit

Automatically setting central addresses

- Put a check mark in the "Register" column.
- Select the indoor units you want to manage.

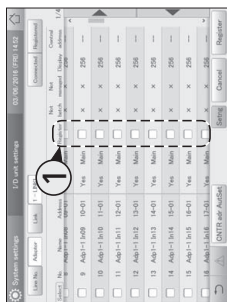


Touch [CNTR adr AutSet].



- Note**
- The central address is shared with other centralised controllers (system controllers, multi-controllers, etc.). Do not change unless necessary.
 - After setting the central address in the "Edit unit settings" dialogue, and then enable [CNTR adr AutSet], the central addresses will be overwritten.


Put a check mark in the "Register" column.

- Select the indoor units you want to manage.
- This procedure is not necessary if centralised have been automatically set. (→ Automatically setting central addresses (P.25))

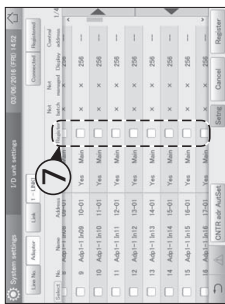

Touch [Register].

- To cancel the settings, touch [Cancel].

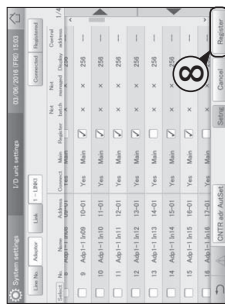


- Note**
- Do not allocate PAC and GHP to the same area or distribution groups when using time distribution (P.27).

Item	Explanation
CNTR adr.	Set the central addresses (1 to 64), touch the text box and enter with the touchscreen numeric keypad. Note <ul style="list-style-type: none"> The central address is shared with other centralised controllers (system controllers, multi-controllers, etc.). Do not change unless necessary. An error message is displayed if you set the same address to multiple indoor units. This cannot be set if multiple indoor units are selected.
Fix cap	Set the fixed capacity values of the indoor unit. (When local adaptors are installed). Touch the text box and enter with the touchscreen numeric keypad.
ElechHeat cap	Set the capacity of the electric heater if the model has an electric heater. (when calculating load distribution). Touch the text box and enter with the touchscreen numeric keypad.
Group registration	Register the group the unit belongs to. The group names are displayed when you touch the text boxes. Note <ul style="list-style-type: none"> By putting a check mark in the "Select" column of the indoor units belonging to the same time and register them all together.
Not batch	Select "O" if the device is not to be subject to operations and select "X" if it is to be subject to operations.
Not managed	Select "O" if the device is to be removed as a subject of management by this unit, and select "X" if it is to be subject of management by this unit.

6 Touch [Register].

- To cancel the settings, touch [Cancel].

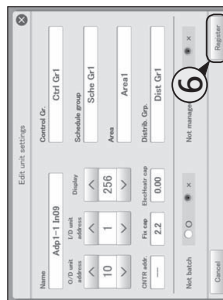


18. Intelligent Controller (CZ-256ESMC3)

Changing the name of the area group

Edit the name of the area group.


1 Touch [System Settings] in "Settings".

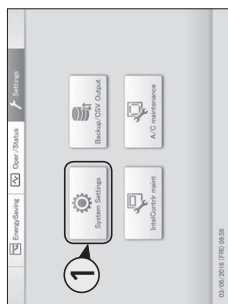

The "System settings" screen is displayed.




2 Touch [Area group name settings].

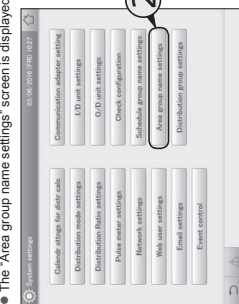

The "Area group name settings" screen is displayed.



3 Put a check mark in the "Select" column.

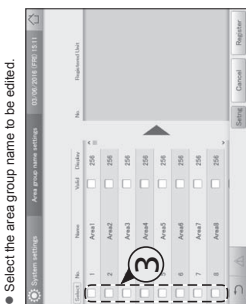


Select the area group name to be edited.

Use the up/down arrows to set the order when displayed in a list.

Continued on next page


Changing the name of the area group

6 Touch [Register].

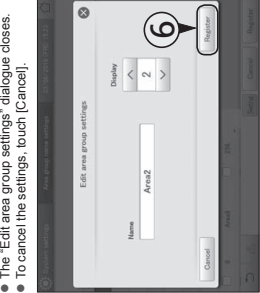


The "Edit area group settings" dialogue closes.
To cancel the settings, touch [Cancel].

7 Put a check mark in the "Valid" column.

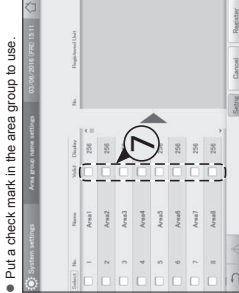

Put a check mark in the area group to use.

8 Touch [Register].

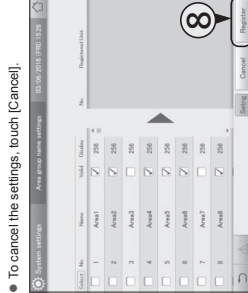

To cancel the settings, touch [Cancel].

Setting


Item	Explanation
Name	Change the name of the area group. You can enter up to 16 letters or numbers (8 full-width characters).
Display	Use the up/down arrows to set the order when displayed in a list.

18. Intelligent Controller (CZ-256ESMC3)


Changing the name of the distribution group

Edit the name of the distribution group.


1 Touch [System Settings] in "Settings".

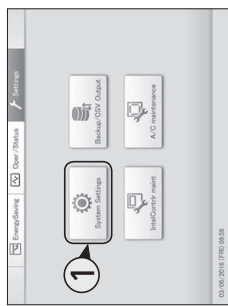

4 Touch [Setng].

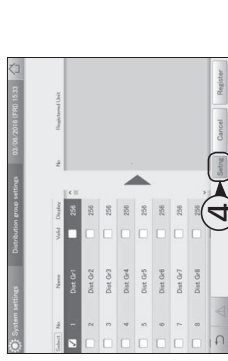

2 Touch [Distribution group settings].

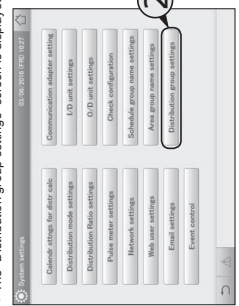

5 Change the settings.



3 Put a check mark in the "Select" column.



• Select the distribution group name to be edited.

Changing the name of the distribution group

6 Touch [Register].




• The "Edit distribution group settings" dialog box closes.


• To cancel the settings, touch [Cancel].

7 Put a check mark in the "Valid" column.

• Put a check mark in the distribution group to use in distribution calculations.

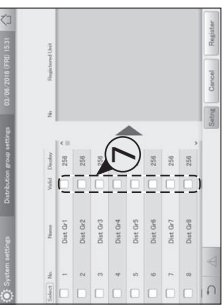

8 Touch [Register].

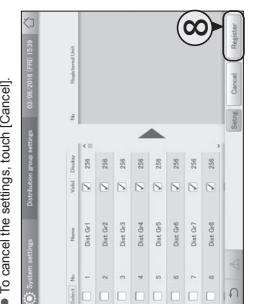

• To cancel the settings, touch [Cancel].

Setting

Item	Explanation
Name	Change the name of the distribution group. You can enter up to 16 letters or numbers (6 full-width characters).
Display	Use \uparrow \downarrow to set the order when displayed in a list.


Continued on next page

18. Intelligent Controller (CZ-256ESMC3)

Basic settings for the pulse meter

Make allocations between pulse meters and distribution groups.

1 Touch [System Settings] in "Settings".

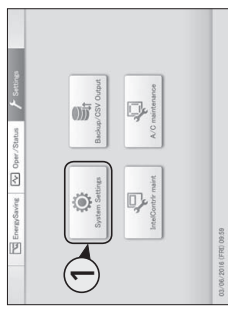

4 Touch [Setng].




The "Edit pulse meter settings" dialog box is displayed.

2 Touch [Pulse meter settings].

The "Pulse meter settings" screen is displayed.



5 Change the settings.

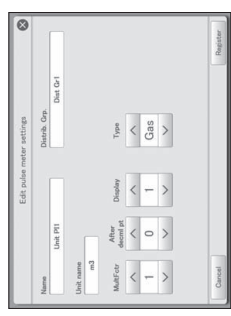

3 Put a check mark in the "Select" column.

Select the pulse meter to be edited.




Basic settings for the pulse meter

Item	Explanation
Distrib. Grp.	Configure a distribution group to be measured. The "Distrib. Grp." dialogue is displayed when you touch this. Select the distribution group to be measured and touch [Select].

6 Touch [Register].


The "Edit pulse meter settings" dialog box closes.

To cancel the settings, touch [Cancel].

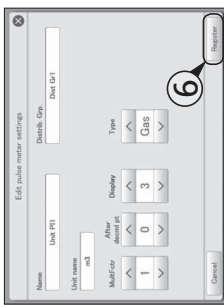

7 Put a check mark in the "Register" column.


Put a check mark next to the pulse meters you want to enable.

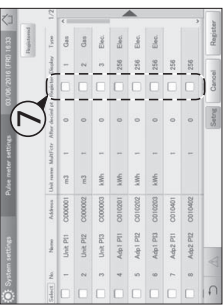

8

Touch [Register].

To cancel the settings, touch [Cancel].

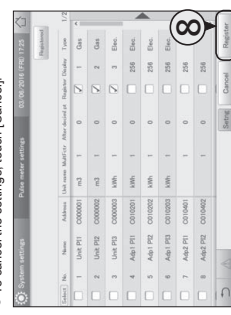

Setting

Item	Explanation
Name	Change the pulse meter name. You can enter up to 16 letters or numbers (6 full-width characters).
Unit name	Enter the units to be displayed for the pulse meter.
MultiFctr	Use \uparrow \downarrow to set the multiplying factor to be displayed for the pulse meter.
After decimal pt	Use \uparrow \downarrow to set the number of decimal places to be displayed for the pulse meter. (0 to 3)
Display	Use \uparrow \downarrow to set the order when displayed in a list.
Type	Use \uparrow \downarrow to set the pulse meter type. Select from "Elec", "Gas", "PWR", "TPWR", and "Ice".

Continued on next page


18. Intelligent Controller (CZ-256ESMC3)

Set the distribution mode

Set the mode used for distributing when calculating charges. There are two methods for distribution. Time distribution: This method calculates distribution ratios based on the operating times of the indoor units (thermostat ON cumulative time and thermostat OFF cumulative time). Load distribution: This method calculates distribution ratios based on the electricity/gas usage (including standby power) of the indoor units and outdoor units.


1 Touch [System Settings] in "Settings".

- The "System settings" screen is displayed.

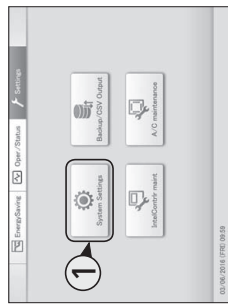


2 Touch [Distribution mode settings].

- The "Distribution mode settings" screen is displayed.

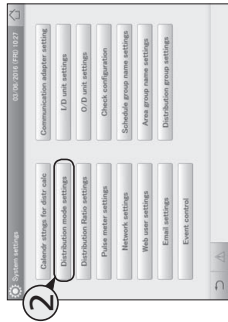


3 Change the settings.

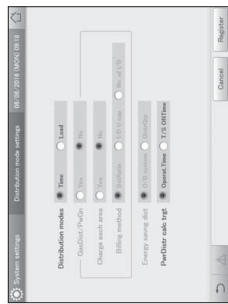

Item	Explanation
Distribution modes	Set the distribution mode (time distribution or load distribution).
GasDist/PwGn	Select whether to calculate distributions when using gas for power generation. <ul style="list-style-type: none"> When set to "No", you cannot set charge each area and billing method.
Charge each area	Select whether to use charge each area for gas power generation. <ul style="list-style-type: none"> When set to "No", you cannot set billing method.
Billing method	Set the billing method for gas power generation.
Energy saving dist	Set the range of energy savings effects for multi-function air conditioners or ice thermal storage modes in calculations for distribution. When load distribution only is selected, only the air conditioning distribution of the area of the outdoor system is reflected. <ul style="list-style-type: none"> With "DistGn", the air conditioning distribution of all areas in the entire distribution group is reflected.
PwdDist calc trig	Set the target of electricity distribution calculation. <ul style="list-style-type: none"> "Operat. Time" is distributed between the electricity for both outdoor units and indoor units. "7/5 ON Time" is distributed to the electricity for only indoor units.

4 Touch [Register].

- To cancel the settings, touch [Cancel].

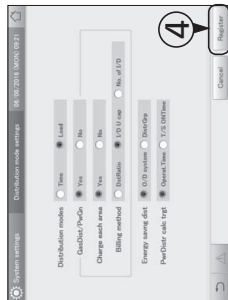


Basic settings for distribution calculation

Set specified days, cut-off days, particular time slots (regular hour ranges) and days of the week for calculating distributions.

1 Touch [System Settings] in "Settings".

- The "System settings" screen is displayed.

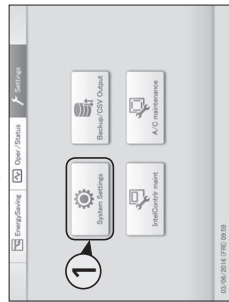


2 Touch [Calendr stngs for distr calc].

- The "Calendr stngs for distr calc" screen is displayed.




4 Touch [Register].

- To cancel the settings, touch [Cancel].

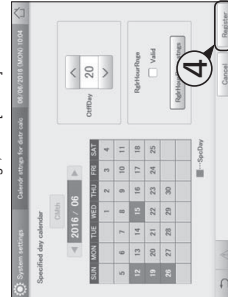

3 Change the settings.

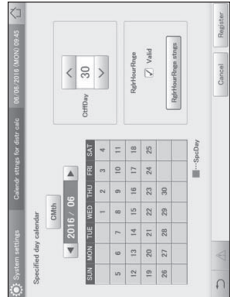

Item	Explanation
Specified day calendar	Set specified days (days where the whole day will have a special distribution setting, such as holidays, when the time slot doesn't matter). These are the days for the current month and up to 2 years in the future. <ul style="list-style-type: none"> Registering specified days (P.29)
CNDay	Set the monthly cut-off days ("1" to "28" / 月末). <ul style="list-style-type: none"> Registering cut-off days (P.29)
RgtrHourRng	Set the distribution time slots for each day of the month. <ul style="list-style-type: none"> Regular hour range settings possible if you put a check mark in "Valid". The "Regular hour range settings" dialogue is displayed when you touch [RgtrHourRng strings]. Set the target time slots for distribution calculation (P.30)


Setting


18. Intelligent Controller (CZ-256ESMC3)


Basic settings for distribution calculation


Set the target time slots for distribution calculation


- 1** Touch [Rgt]HourRnge stngs].

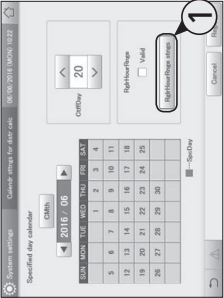
 - The "Regular hour range settings" dialogue is displayed.
- 2** Touch the cell to be entered.

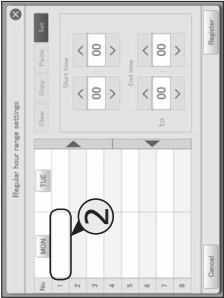 - You can select all of the time slots for a day of the week by touching the day of the week column.
- 3** Set the start and end times.

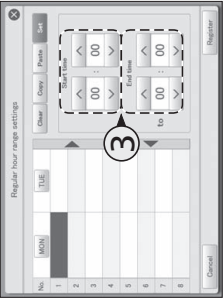 - Use [^] and [v] to set "Hours" and "Minutes".
- 4** Touch [Set].

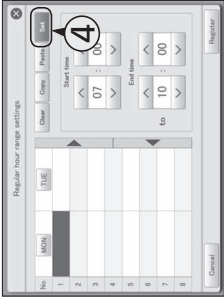
 - The set time is displayed in the cell.
 - To delete the set time slot, select the time slot to delete and touch [Clear].
 - To copy the set time slot, select the time slot to copy and touch [Copy]. Next select the place you want to paste to and touch [Paste].
- 5** Touch [Register].

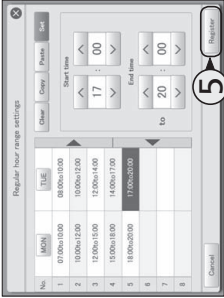 - The "Regular hour range settings" dialogue closes.
 - To cancel the settings, touch [Cancel].
- 6** Put a check mark next to "Valid".

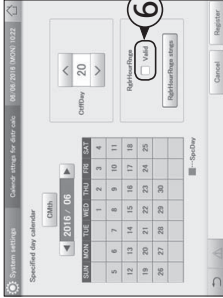


Registering out-of days

- 1** Touch [^] and [v].

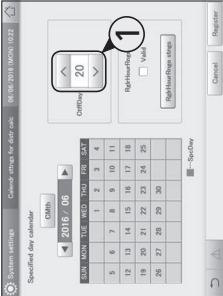 - Touch [^] to move the days forward, touch [v] to move the days back.

Registering specified days

- 1** Touch the date for the specified day.

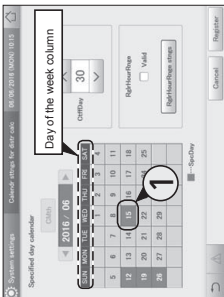 - Use [left] and [right] to select the registered month. Touch [CMth] to return to the current month.
 - The colour of the date column changes when you touch this. Touch again to return to the original. You cannot set a date in the past, however.
 - Touch the day of the week column to set the specified day by day of the week.

Setting

18. Intelligent Controller (CZ-256ESMC3)

ITALIANO

Precauzioni di sicurezza

ATTENZIONE	CAUTELA
Questo simbolo si riferisce a rischi o pratiche non sicure che possono causare serie ferite alla persona o persino la morte.	Questo simbolo si riferisce a rischi o pratiche non sicure che possono causare ferite alla persona o danni al prodotto o alla proprietà.
Regole da osservare	Operazioni proibite
ATTENZIONE	ATTENZIONE
Non utilizzare questo apparecchio in un'atmosfera potenzialmente esplosiva.	Non utilizzare questo apparecchio in un'atmosfera potenzialmente esplosiva.
In caso di malfunzionamento di questo apparecchio, evitare di riparare da soli. Contattare il rivenditore o l' fornitore di servizi per la riparazione.	In caso di malfunzionamento di questo apparecchio, evitare di riparare da soli. Contattare il rivenditore o l' fornitore di servizi per la riparazione.
In caso di emergenza, rimuovere la spina di alimentazione dalla presa o spegnere l'unità tramite l'interruttore di circuito o altro mezzo tramite cui il sistema può essere isolato dall'alimentazione principale.	In caso di emergenza, rimuovere la spina di alimentazione dalla presa o spegnere l'unità tramite l'interruttore di circuito o altro mezzo tramite cui il sistema può essere isolato dall'alimentazione principale.
CAUTELA	CAUTELA
Questo apparecchio è stato progettato per essere utilizzato da utenti esperti o addestrati in negozi, industrie leggere o fattorie, o per scopi commerciali da parte di non addetti.	Questo apparecchio è stato progettato per essere utilizzato da utenti esperti o addestrati in negozi, industrie leggere o fattorie, o per scopi commerciali da parte di non addetti.
Questo apparecchio può essere utilizzato da bambini con più di 8 anni di età e da persone con ridotte capacità fisiche, sensorie e mentali o con scarsa esperienza o conoscenza, se sotto supervisione o se gli saranno date istruzioni sull'utilizzo sicuro dell'apparecchio, e previa comprensione dei relativi rischi.	Questo apparecchio può essere utilizzato da bambini con più di 8 anni di età e da persone con ridotte capacità fisiche, sensorie e mentali o con scarsa esperienza o conoscenza, se sotto supervisione o se gli saranno date istruzioni sull'utilizzo sicuro dell'apparecchio, e previa comprensione dei relativi rischi.
Non lavorare con le mani bagnate.	Non lavorare con le mani bagnate.
Non lavare con acqua.	Non lavare con acqua.

AVISO
Le istruzioni originali sono rappresentate dal testo in inglese. Le versioni in altre lingue sono traduzioni delle istruzioni originali.

Specifiche

Modello n°: CZ-256ESMC3
Dimensioni (H) x (L) x (P): 240 x 280 x (20 + 65) mm
Peso: 2,17 kg
Plagio di Temperatura/Umidità: 0 °C a 40 °C / 20 % a 80 % (senza condensazione)
Intervalle temperatura/umidità: Da 0 °C a 40 °C / dav 20 % a 80 % (Niente condensazione)
Solo uso interno.
Fonte di Alimentazione: Fase singola da 100 a 240 V ~ 50/60 Hz
Consumo energetico: Massimo 20 W
Orologio
 Precisione: ± 30 secondi/mese (alla temperatura normale di 25 °C)
 Regolare periodicamente.
Temperatura di lavoro: 100 giorni (a temperatura normale di 25 °C con carica completa)
 * Circa 8 ore sono necessarie per la ricarica completa.
Numero di unità collegabili per ciascun collegamento*1: Unità interna - Fino a 64 unità
 Unità esterna - Fino a 30 unità
Ambiente computer per controllo a distanza
Browser: Internet Explorer 11 o superiore, o Google Chrome
Risoluzione dello schermo: 1280x1024 (consigliata)
Dispositivi di memorizzazione USB utilizzabili: Tipo standard (USB2.0)
 Standard (USB2.0)
 * Il numero massimo di unità collegabili è mostrato di seguito.
 * Quando si utilizza solo questa unità: 128 unità interne e 60 unità esterne
 * Quando si collega un adattatore per la comunicazione: 256 unità interne e 120 unità esterne
 *2: Include il numero di adattatori di interfaccia.

DEUTSCH

Sicherheitshinweise

WARNUNG	VORSICHT
Dieses Symbol weist auf Gefahrensituationen hin, die zu schweren Verletzungen oder zum Tod führen können.	Dieses Symbol weist auf Gefahrensituationen hin, die zu Verletzungen oder Sachschäden führen können.
Zu beachten	Zu unterlassen
WARNUNG	WARNUNG
Das Gerät darf nicht an Orten installiert werden, wo brennbare oder explosive Gase entstehen können.	Das Gerät darf nicht an Orten installiert werden, wo brennbare oder explosive Gase entstehen können.
Im Falle von Störungen, die einer Reparatur bedürfen, wenden Sie sich bitte an Ihren Fachhändler oder den Kundendienst.	Im Falle von Störungen, die einer Reparatur bedürfen, wenden Sie sich bitte an Ihren Fachhändler oder den Kundendienst.
Führen Sie nur im Notfall die Stromzufuhr zum Gerät wie folgt zurück unterbrechen: Ziehen Sie den Netzstecker aus der Steckdose oder betätigen Sie den Sicherungsautomaten bzw. einen anderen, eventuelle vorhandenen Trennschalter.	Führen Sie nur im Notfall die Stromzufuhr zum Gerät wie folgt zurück unterbrechen: Ziehen Sie den Netzstecker aus der Steckdose oder betätigen Sie den Sicherungsautomaten bzw. einen anderen, eventuelle vorhandenen Trennschalter.
VORSICHT	VORSICHT
Dieses Gerät ist für eine Nutzung durch Fachkräfte oder geschulte Nutzer in Geschäften, Kleinbetrieben und landwirtschaftlichen Betrieben oder für eine kommerzielle Nutzung durch Laien vorgesehen.	Dieses Gerät ist für eine Nutzung durch Fachkräfte oder geschulte Nutzer in Geschäften, Kleinbetrieben und landwirtschaftlichen Betrieben oder für eine kommerzielle Nutzung durch Laien vorgesehen.
Das Gerät kann von Kindern ab 8 Jahren, von Personen mit eingeschränkter körperlicher, geistiger oder sensorischer Fähigkeiten sowie von Personen ohne ausreichende Erfahrung und Kenntnisse bedient werden, vorausgesetzt, sie werden während der Bedienung beaufsichtigt, über die potenziellen Gefahren aufgeklärt und erhalten eine entsprechende Anleitung zur sicheren Bedienung des Geräts.	Das Gerät kann von Kindern ab 8 Jahren, von Personen mit eingeschränkter körperlicher, geistiger oder sensorischer Fähigkeiten sowie von Personen ohne ausreichende Erfahrung und Kenntnisse bedient werden, vorausgesetzt, sie werden während der Bedienung beaufsichtigt, über die potenziellen Gefahren aufgeklärt und erhalten eine entsprechende Anleitung zur sicheren Bedienung des Geräts.
Benutzen Sie das Gerät nicht mit nassen Händen.	Benutzen Sie das Gerät nicht mit nassen Händen.
Waschen Sie es nicht mit Wasser.	Waschen Sie es nicht mit Wasser.

HINWEIS
Bei den englischen Textfassungen handelt es sich um das Original. In anderen Sprachen sind Übersetzungen des Originals.

Spezifikationen

Modellbezeichnung: CZ-256ESMC3
Abmessungen (H x B x T): 240 x 280 x (20 + 65) mm
Peso: 2,17 kg
Plagio di Temperatura/Umfeuchtigkeit: 0 bis 40 °C / 20 bis 80 % (keine Kondensation)
Temperatur/Umfeuchtigkeit: Nur für den Einsatz in Innenräumen vorgesehen.
Spannungsversorgung: Einphasig, 100 bis 240 V / 50/60 Hz
Leistungsaufnahme: Max. 20 W
Uhr
 Genauigkeit: ± 30 Sekunden/Monat (bei Normtemperatur 25 °C)
 Regelmäßig nachstellen.
Laufzeit: 100 Tage (bei Normtemperatur 25 °C mit voller Ladung)
 * Vollständige Aufladung dauert ca. 8 Stunden.
Anzahl der anschließbaren Geräte pro Link*1: Interne Einheit: max. 64
 Außereinheit: max. 30
Computerverwaltung für Fernsteuerung
Browser: Internet Explorer 11 oder höher, Google Chrome
Bildschirmauflösung: 1280x1024 (empfohlen)
Kompatible USB-Speichergeräte: Standard (USB2.0)
 Standard (USB2.0)
 * Ein ordnungsgemäßer Betrieb kann nicht garantiert werden, auch wenn ein Computer verwendet wird, der den oben genannten Spezifikationen entspricht.
 * Verschlüsselung (mit Sicherheitssoftware) usw. kann nicht verwendet werden.
 * Panasonic übernimmt keinerlei Haftung für Datenverluste irgendwelcher Art.
 *1: Insgesamt an diese Bedieneinheit anschließbare Anzahl von Geräten:
 * An die Bedieneinheit alleine: Intergeräte: 128, Außengeräte: 60
 * An die Bedieneinheit mit Kommunikationsadapter: Intergeräte: 256, Außengeräte: 120
 *2: Einschließlich Anzahl der Schnittstellenadapter.

ESPAÑOL

Precauciones de seguridad

ADVERTENCIA	PRECAUCIÓN
Este símbolo hace referencia a un peligro o práctica no segura que pueden producir daños personales, graves o, incluso, la muerte.	Este símbolo hace referencia a un peligro o práctica no segura que pueden producir daños personales, graves o, incluso, la muerte.
Elementos que deben observarse	Elementos prohibidos
ADVERTENCIA	ADVERTENCIA
No utilice este aparato en un entorno potencialmente explosivo.	No utilice este aparato en un entorno potencialmente explosivo.
Si el aparato no funciona correctamente, no intente repararlo usted mismo. Póngase en contacto con el vendedor o el servicio técnico para su reparación.	Si el aparato no funciona correctamente, no intente repararlo usted mismo. Póngase en contacto con el vendedor o el servicio técnico para su reparación.
En caso de emergencia, retire el enchufe de alimentación de la toma o apague el disyuntor del circuito o el medio mediante el cual el sistema queda aislado de la red eléctrica.	En caso de emergencia, retire el enchufe de alimentación de la toma o apague el disyuntor del circuito o el medio mediante el cual el sistema queda aislado de la red eléctrica.
PRECAUCIÓN	PRECAUCIÓN
Este aparato está diseñado para ser utilizado por personas cualificadas, en tiendas, fábricas o granjas, o para el uso comercial por parte de personas no expertas.	Este aparato está diseñado para ser utilizado por personas cualificadas, en tiendas, fábricas o granjas, o para el uso comercial por parte de personas no expertas.
Este producto puede ser utilizado por niños mayores de 8 años y personas con capacidades físicas, sensoriales o mentales reducidas o fallos de experiencia o conocimiento si reciben la supervisión o instrucción adecuadas respecto al uso seguro del aparato y entienden los riesgos que ello supone.	Este producto puede ser utilizado por niños mayores de 8 años y personas con capacidades físicas, sensoriales o mentales reducidas o fallos de experiencia o conocimiento si reciben la supervisión o instrucción adecuadas respecto al uso seguro del aparato y entienden los riesgos que ello supone.
No utilizar con las manos mojadas.	No utilizar con las manos mojadas.
No lavar con agua.	No lavar con agua.

AVISO
El texto en inglés constituye las instrucciones originales. El resto de los idiomas son traducciones de las instrucciones originales.

Setting

Especificaciones

N.º de modelo: CZ-256ESMC3
Dimensiones (Al. x An. x Pr.): 240 x 280 x (20 + 65) mm
Peso: 2,17 kg
Plagio de Temperatura/Umfeuchtigkeit: 0 °C a 40 °C / 20 % a 80 % (sin condensación)
Solo para uso interior.
Fuente de alimentación: Monofásica de 100 a 240 V ~ 50/60 Hz
Consumo eléctrico: Máx. 20 W
Reloj
 Precisión: ± 30 segundos/mes (a una temperatura normal de 25 °C)
 * Ajuste periódicamente.
Tiempo de espera: 100 días (a temperatura normal 25 °C con carga completa)
 * Necesarios unos 8 horas para una carga completa.
Numero de unidades que se pueden conectar por enlace*1: Unidad interior - Hasta 64 unidades
 Unidad exterior - Hasta 30 unidades
Entorno informático para control remoto
Navegadores: Internet Explorer 11 o posterior o Google Chrome
Risolución de pantalla: 1280x1024 (recomendada)
Dispositivo de memoria USB que se pueden utilizar: Tipo estándar (USB2.0)
 Tipo estándar (USB2.0)
 Precauciones antes del uso
 * El funcionamiento correcto no está garantizado, incluso aunque utilice un ordenador que posea las especificaciones precedentes.
 * El cifrado (con software de seguridad) etc. no puede utilizarse.
 * Panasonic no acepta ninguna responsabilidad por cualquier pérdida de datos.
 *1: El número máximo de unidades que se puede conectar tal como se muestra a continuación:
 * Al utilizar este aparato solamente:
 128 unidades interiores y 60 unidades exteriores
 * Al conectar un Adaptador de Comunicación:
 256 unidades interiores y 120 unidades exteriores
 *2: Incluye el número de Adaptadores de interfaz.

FRANÇAIS

Consignes de sécurité

AVERTISSEMENT	MISE EN GARDE
Signale un danger ou une pratique dangereuse susceptible de blesser gravement ou mortellement.	Signale un danger ou une pratique dangereuse susceptible de blesser gravement ou mortellement.
Points à observer	Actes interdits
AVERTISSEMENT	AVERTISSEMENT
Ne pas installer l'appareil dans un milieu où pourraient se trouver des substances explosives.	Ne pas installer l'appareil dans un milieu où pourraient se trouver des substances explosives.
En cas de dysfonctionnement de l'appareil, ne le réparez pas vous-même. Contactez le vendeur ou le service d'assistance pour faire réparer l'appareil.	En cas de dysfonctionnement de l'appareil, ne le réparez pas vous-même. Contactez le vendeur ou le service d'assistance pour faire réparer l'appareil.
En cas d'urgence, retirez la fiche d'alimentation de la prise ou coupez le disjoncteur ou les moyens par lesquels le système est isolé du secteur électrique.	En cas d'urgence, retirez la fiche d'alimentation de la prise ou coupez le disjoncteur ou les moyens par lesquels le système est isolé du secteur électrique.
MISE EN GARDE	MISE EN GARDE
Cet appareil est destiné à être utilisé par des experts ou des utilisateurs formés dans des magasins, industries légères et dans des fermes ou pour un usage commercial par des profanes.	Cet appareil est destiné à être utilisé par des experts ou des utilisateurs formés dans des magasins, industries légères et dans des fermes ou pour un usage commercial par des profanes.
Cet appareil peut être utilisé par des enfants âgés d'au moins 8 ans et par des personnes ayant des capacités physiques, sensorielles ou mentales réduites ou un manque d'expérience et de connaissances, à condition d'être surveillés ou d'avoir reçu des instructions concernant l'utilisation de l'appareil en toute sécurité et de comprendre les dangers que cela implique.	Cet appareil peut être utilisé par des enfants âgés d'au moins 8 ans et par des personnes ayant des capacités physiques, sensorielles ou mentales réduites ou un manque d'expérience et de connaissances, à condition d'être surveillés ou d'avoir reçu des instructions concernant l'utilisation de l'appareil en toute sécurité et de comprendre les dangers que cela implique.
Ne pas utiliser avec les mains mouillées.	Ne pas utiliser avec les mains mouillées.
Ne pas laver à l'eau.	Ne pas laver à l'eau.

NOTIFICATION
Les textes anglais correspondent aux instructions d'origine. Les autres langues sont les traductions des instructions d'origine.

Spécifications

Modèle n°: CZ-256ESMC3
Dimensions (H x L x P): 240 x 280 x (20 + 65) mm
Peso: 2,17 kg
Plagio de Temperatura/Umfeuchtigkeit: 0 °C a 40 °C / 20 % a 80 % (pas de condensation)
Usage intérieur uniquement.
Source d'alimentation: 100 à 240 V monophasé - 50/60 Hz
Consommation électrique: Max. 20 W
Horloge
 Précision : ± 30 secondes/mois (à une température normale de 25 °C)
 * Ajustez-la périodiquement.
Autonomie (à une température normale de 25 °C et à pleine charge)
 * Environ 8 heures sont nécessaires pour une recharge complète.
Nombre d'unités connectables par maillon*1: Unité intérieure - Jusqu'à 64 unités
 Unité extérieure - Jusqu'à 30 unités
Environnement informatique pour la télécommande
Navigateurs: Internet Explorer 11 ou ultérieur ou Google Chrome
Résolution de l'écran: 1280x1024 (recommandée)
Les clés USB qui peuvent être utilisées: Type standard (USB2.0)
 Type standard (USB2.0)
 * Le fonctionnement correct n'est pas garanti même si vous utilisez un ordinateur qui possède les spécifications précédentes.
 * Le chiffrement (avec logiciel de sécurité) etc. ne peut pas être utilisé.
 * Panasonic n'est en aucun cas responsable des données perdues.
 *1: Le nombre maximum d'unités connectables est indiqué ci-dessous.
 * Lorsque vous n'utilisez que cette unité :
 128 unités internes et 60 unités externes
 * Lors de la connexion à un adaptateur communiquant :
 256 unités internes et 120 unités externes
 *2: Comprend le nombre d'adaptateurs d'interface.

18. Intelligent Controller (CZ-256ESMC3)

NEEDERLANDS

Veiligheidsvoorschriften

WAARSCHUWING	OPGELET
Dit symbool wijst naar een gevaar of onveilige praktijk die tot een ernstig letsel of de dood kan leiden.	Dit symbool wijst naar een gevaar of onveilige praktijk die tot een ernstig letsel of de dood kan leiden.
Dingen die moeten worden nageliefd	Dingen die verboden zijn
WAARSCHUWING	WAARSCHUWING
Gebruik dit apparaat niet in een mogelijke explosieve omgeving.	Gebruik dit apparaat niet in een mogelijke explosieve omgeving.
Herstel dit apparaat niet zelf als het defect is. Neem contact op met de dienst verkoop of klantendienst van de vervaardiger voor herstelling.	Herstel dit apparaat niet zelf als het defect is. Neem contact op met de dienst verkoop of klantendienst van de vervaardiger voor herstelling.
Haal in geval van nood de stekker uit het stopcontact of schakel de stroomonderbreker of de middelen waarmee het systeem op het voedingsnetwerk is aangesloten uit.	Haal in geval van nood de stekker uit het stopcontact of schakel de stroomonderbreker of de middelen waarmee het systeem op het voedingsnetwerk is aangesloten uit.
OPGELET	OPGELET
Dit apparaat is bedoeld om te worden gebruikt door ervaren of opgeleide gebruikers in werkplaatsen, in de lichte industrie en in landbouwbedrijven, of voor commercieel gebruik door leken.	Dit apparaat kan worden gebruikt door kinderen van 8 jaar en ouder en personen met verminderde lichamelijke, zintuiglijke of geestelijke vermogens, of met gebrek aan ervaring en kennis, mits deze onder toezicht worden gehouden of het veilige gebruik van het apparaat hen werd aangeleerd en ze de betrokken gevaren begrijpen.
OPMERKING	OPMERKING
De Engelse tekst zijn de originele instructies. De andere talen zijn vertalingen van de originele instructies.	De Engelse tekst zijn de originele instructies. De andere talen zijn vertalingen van de originele instructies.

PORTUGUÊS

Precauções de segurança

AVISO	CUIDADO
Este símbolo refere-se a um perigo ou a uma prática não segura que pode resultar em ferimentos pessoais graves ou morte.	Este símbolo refere-se a um perigo ou a uma prática não segura que pode resultar em ferimentos pessoais graves ou morte.
Aspetos a ter em conta	Aspetos proibidos
AVISO	AVISO
Não utilize este aparelho numa atmosfera potencialmente explosiva.	Não utilize este aparelho numa atmosfera potencialmente explosiva.
Se ocorrer uma avaria com este dispositivo, não a tente reparar sozinho. Contacte o fornecedor ou o centro de assistência para reparação.	Se ocorrer uma avaria com este dispositivo, não a tente reparar sozinho. Contacte o fornecedor ou o centro de assistência para reparação.
Em caso de emergência, retire a ficha de alimentação da tomada ou desligue o disjuntor ou o meio atávico do qual o sistema fica ligado da fonte de alimentação.	Em caso de emergência, retire a ficha de alimentação da tomada ou desligue o disjuntor ou o meio atávico do qual o sistema fica ligado da fonte de alimentação.
CUIDADO	CUIDADO
Este aparelho destina-se a ser utilizado por peritos ou utilizadores com formação em estabelecimentos, na indústria ligeira e em quintas, ou para utilização comercial por pessoas não especializadas.	Este aparelho destina-se a ser utilizado por peritos ou utilizadores com formação em estabelecimentos, na indústria ligeira e em quintas, ou para utilização comercial por pessoas não especializadas.
Este aparelho pode ser utilizado por crianças a partir dos 8 anos de idade e por pessoas com capacidades físicas, sensoriais ou mentais reduzidas, ou falta de experiência e conhecimento, se tiverem supervisão ou tiverem recebido instruções relacionadas com o uso do aparelho de forma segura e compreenderem os riscos envolvidos.	Este aparelho pode ser utilizado por crianças a partir dos 8 anos de idade e por pessoas com capacidades físicas, sensoriais ou mentais reduzidas, ou falta de experiência e conhecimento, se tiverem supervisão ou tiverem recebido instruções relacionadas com o uso do aparelho de forma segura e compreenderem os riscos envolvidos.
AVISO	AVISO
Não utilize com as mãos molhadas.	Não utilize com as mãos molhadas.
Não lave com água.	Não lave com água.
AVISO	AVISO
As instruções foram redigidas originalmente em inglês. As versões noutras línguas são traduções da redacção original.	As instruções foram redigidas originalmente em inglês. As versões noutras línguas são traduções da redacção original.

TÜRKÇE

Güvenlik önlemleri

UYARI	DIKKAT
Bu simge, ciddi hasarı yaralama ya da ölüme sebep olabilen tehlikeli veya güvenli olmayan bir uygulamayı belirtir.	Bu simge, ciddi hasarı yaralama ya da ölüme sebep olabilen tehlikeli veya güvenli olmayan bir uygulamayı belirtir.
Dikkat edilecek durumlar	İzin verilmeyen durumlar
UYARI	UYARI
Bu cihaz, patlama olasılığı olan bir atmosferde kullanılmayın.	Bu cihaz, patlama olasılığı olan bir atmosferde kullanılmayın.
Çihazın arızalanması durumunda kendi kendinize tamir etmeyin. Tamir için satış veya servis bayisine iletişime geçin.	Çihazın arızalanması durumunda kendi kendinize tamir etmeyin. Tamir için satış veya servis bayisine iletişime geçin.
Açık duruma, çıkış için ilgili çekim veya sportları ya da sistemi ana şebekeye ana yolumu kapatın.	Açık duruma, çıkış için ilgili çekim veya sportları ya da sistemi ana şebekeye ana yolumu kapatın.
DIKKAT	DIKKAT
Bu cihazın, mağazalarda, telifli alanlarda ve diğer yerlerde kullanılması yasaktır.	Bu cihazın, mağazalarda, telifli alanlarda ve diğer yerlerde kullanılması yasaktır.
Bu cihaz, 8 yaş ve üstü çocuklar ve fiziksel, duyu ve zihinsel engelli veya demiyen kişiler için tasarlanmıştır. Çocukların aklında tutulması veya yanlış kullanılması tehlikeli olabilir. Bu cihazın güvenli olmayan bir şekilde kullanılması tehlikeli olabilir.	Bu cihaz, 8 yaş ve üstü çocuklar ve fiziksel, duyu ve zihinsel engelli veya demiyen kişiler için tasarlanmıştır. Çocukların aklında tutulması veya yanlış kullanılması tehlikeli olabilir. Bu cihazın güvenli olmayan bir şekilde kullanılması tehlikeli olabilir.
BİLDİRİM	BİLDİRİM
İngilizce metin orijinal talimatlandır. Diğer diller, orijinal talimatların çeviridir.	İngilizce metin orijinal talimatlandır. Diğer diller, orijinal talimatların çeviridir.

POLSKI

Środki ostrożności

NIEBEZPIECZESTWO	OSTRZEŻENIE
Ten symbol odnosi się do zagrożenia lub niebezpiecznych praktyk, które mogą skutkować obrażeniami lub śmiercią ludzi.	Ten symbol odnosi się do zagrożenia lub niebezpiecznych praktyk, które mogą skutkować obrażeniami lub śmiercią ludzi.
Wskazania których należy przestrzegać	Zachowanie zabronione
NIEBEZPIECZESTWO	NIEBEZPIECZESTWO
Nie używać tego urządzenia w potencjalnie wybuchowej atmosferze.	Nie używać tego urządzenia w potencjalnie wybuchowej atmosferze.
W przypadku niesprawności urządzenia nie naprawiać go samodzielnie. Skontaktować się ze sprzedawcą lub serwisem.	W przypadku niesprawności urządzenia nie naprawiać go samodzielnie. Skontaktować się ze sprzedawcą lub serwisem.
W sytuacji awaryjnego wyłączenia wyzycie z gniazda sieciowego lub użyć przycisku wyłączenia obwodu (bezpiecznik) lub wyłączyć linie złączenia oddzielające system od zasilania.	W sytuacji awaryjnego wyłączenia wyzycie z gniazda sieciowego lub użyć przycisku wyłączenia obwodu (bezpiecznik) lub wyłączyć linie złączenia oddzielające system od zasilania.
OSTRZEŻENIE	OSTRZEŻENIE
Urządzenie jest przeznaczony do obsługi przez specjalistów lub przeszkoleny użytkowników w sklepach, w pracowniach technicznych, w biurach inżynierskich lub do użytku komercyjnego przez osoby prywatne.	Urządzenie jest przeznaczony do obsługi przez specjalistów lub przeszkoleny użytkowników w sklepach, w pracowniach technicznych, w biurach inżynierskich lub do użytku komercyjnego przez osoby prywatne.
Urządzenie może być obsługiwane przez dzieci w wieku do lat 8 lat, osoby o ograniczonej sprawności fizycznej, sensorycznej lub umysłowej, lub osoby o ograniczonej wiedzy, jeśli zezwoli na to nadzorca osoby odpowiedzialnej za ich bezpieczeństwo lub osoba la przekała im odpowiednie instrukcje dotyczące bezpiecznego korzystania z urządzenia i rozumieją one niebezpieczeństwo związane z jego obsługą.	Urządzenie może być obsługiwane przez dzieci w wieku do lat 8 lat, osoby o ograniczonej sprawności fizycznej, sensorycznej lub umysłowej, lub osoby o ograniczonej wiedzy, jeśli zezwoli na to nadzorca osoby odpowiedzialnej za ich bezpieczeństwo lub osoba la przekała im odpowiednie instrukcje dotyczące bezpiecznego korzystania z urządzenia i rozumieją one niebezpieczeństwo związane z jego obsługą.
UWAGA	UWAGA
Oryginalnym tekstem instrukcji jest język angielski. Tekst w innych językach jest przekładem tekstu oryginalnego.	Oryginalnym tekstem instrukcji jest język angielski. Tekst w innych językach jest przekładem tekstu oryginalnego.

Specificaties

Modelnummer: CZ-256ESMC3	Netto gewicht: 2,7 kg
Netto afmetingen: W x D x H: 240 x 280 x (20 + 65) mm	Temperatuurvochtigheidsbereik: 0 °C tot 40 °C / 20 % tot 80 % (niet condensierend)
Uitsluitend voor gebruik binnenshuis.	Voedingbron: Enkelefasig 100 tot 240 V - 50/60 Hz
Stroomverbruik: Max. 20 W	Kluis
Precisie: ± 30 seconden/maand (bij een normale temperatuur van 25 °C)	Precisie: ± 30 seconden/maand (bij een normale temperatuur van 25 °C)
Beveiliging: Fenderlek, antistatisch.	Beveiliging: Fenderlek, antistatisch.
100 dagen (bij normale temperatuur 25 °C met volle accu)	100 dagen (bij normale temperatuur 25 °C met volle accu)
* Circa 6 uren zijn nodig om volledig op te laden.	* Circa 6 uren zijn nodig om volledig op te laden.
Aantal aansluitbare eenheden per koppeling: Binnenneheid - Maximaal 64 eenheden* Buiteneheid - Maximaal 30 eenheden	Aantal aansluitbare eenheden per koppeling: Binnenneheid - Maximaal 64 eenheden* Buiteneheid - Maximaal 30 eenheden
Computerovergang voor afstandsbediening	Computerovergang voor afstandsbediening
Browsers: Internet Explorer 11 of nieuwer of Google Chrome	Browsers: Internet Explorer 11 of nieuwer of Google Chrome
Bio-identificatie: 1280x1024 (aansluiten)	Bio-identificatie: 1280x1024 (aansluiten)
USB-geheugenapparaten die gebruikt kunnen worden: Standaard type (USB2.0)	USB-geheugenapparaten die gebruikt kunnen worden: Standaard type (USB2.0)
Capaciteit: 4 GB of meer	Capaciteit: 4 GB of meer
Voorzorgzaam te gebruiken voor het gebruik	Voorzorgzaam te gebruiken voor het gebruik
• De correcte werking wordt niet gegarandeerd, zelfs niet als u een computer gebruikt die aan bovenstaande specificaties voldoet	• De correcte werking wordt niet gegarandeerd, zelfs niet als u een computer gebruikt die aan bovenstaande specificaties voldoet
• Versleuteling (met veiligheidssoftware) enz. kan niet gebruikt worden.	• Versleuteling (met veiligheidssoftware) enz. kan niet gebruikt worden.
• Panasonic aanvaardt geen aansprakelijkheid voor enig verlies van gegevens.	• Panasonic aanvaardt geen aansprakelijkheid voor enig verlies van gegevens.

*1: Het maximum aantal aansluitbare eenheden wordt hieronder weergegeven.
 *2: Bij het gebruik van alleen deze eenheid:
 128 binneneenheden en 60 buiteneenheden
 • Bij het aansluiten van een CommunicatieAdapter:
 256 binneneenheden en 120 buiteneenheden
 *3: Inclusief het aantal Interface Adapters.

Características técnicas

Nº de modelo: CZ-256ESMC3	Peso: 2,7 kg
Dimensiones: W x D x H: 240 x 280 x (20 + 65) mm	Intervalo de temperatura/humedad: 0 °C a 40 °C / 20 % a 80 % (sem condensação)
Uso exclusivo para uso doméstico.	Apenas utilização interior.
Consumo de energia: Máximo de 20 W	Relógio
Precisão: ± 30 segundos/mês (a uma temperatura normal de 25 °C)	Precisão: ± 30 segundos/mês (a uma temperatura normal de 25 °C)
Proteção: Fenderlek, antistático.	Proteção: Fenderlek, antistático.
100 dias (em temperatura normal de 25 °C, com carga completa)	100 dias (em temperatura normal de 25 °C, com carga completa)
* São necessárias aprox. 6 horas para carregamento total.	* São necessárias aprox. 6 horas para carregamento total.
Número de unidades conectáveis por ligação*: Unidade interior - Até 64 unidades* Unidade exterior - Até 30 unidades	Número de unidades conectáveis por ligação*: Unidade interior - Até 64 unidades* Unidade exterior - Até 30 unidades
Ambiente Informático de comando a distância	Ambiente Informático de comando a distância
Browsers: Internet Explorer 11 ou versões mais atualizadas, ou Google Chrome	Browsers: Internet Explorer 11 ou versões mais atualizadas, ou Google Chrome
Resolução de ecrã: 1280x1024 (recomendado)	Resolução de ecrã: 1280x1024 (recomendado)
Dispositivos de memória USB que podem ser utilizados: Tipo padrão (USB2.0)	Dispositivos de memória USB que podem ser utilizados: Tipo padrão (USB2.0)
Capacidade: 4 GB ou mais	Capacidade: 4 GB ou mais
Precauções antes da utilização	Precauções antes da utilização
• Não é garantido o correto funcionamento mesmo se utilizar um computador que cumpra os requisitos supramencionados.	• Não é garantido o correto funcionamento mesmo se utilizar um computador que cumpra os requisitos supramencionados.
• Encrypted (com o software de segurança) etc., não pode ser utilizada.	• Encrypted (com o software de segurança) etc., não pode ser utilizada.
• A Panasonic não se responsabiliza por quaisquer perdas de dados.	• A Panasonic não se responsabiliza por quaisquer perdas de dados.

*1: O número máximo de unidades conectáveis é mostrado abaixo.
 *2: Ao utilizar apenas esta unidade:
 128 unidades interiores e 60 unidades exteriores
 • Ao conectar um Adaptador de Comunicação:
 256 unidades interiores e 120 unidades exteriores
 *3: Inclui o número de Adaptadores de Interface.

Teknik Özellikler

Model Numarası: CZ-256ESMC3	Ağırlık: 2,7 kg
Boyutları (Y x G x D): 240 x 280 x (20 + 65) mm	Sıcaklık/Nem aralığı: 0 °C'ye kadar / 20 %'e kadar (buğulanmaz)
Sadece iç mekan kullanımına uygundur.	Sadece iç mekan kullanımına uygundur.
Tekele enerji: Maks. 20 W	Saat
Hassasiyet: ± 30 saniye/ay (25 °C normal sıcaklıkta)	Hassasiyet: ± 30 saniye/ay (25 °C normal sıcaklıkta)
Beleme süresi: 100 gün (25 °C normal sıcaklıkta, tam şarjı olduğunda)	Beleme süresi: 100 gün (25 °C normal sıcaklıkta, tam şarjı olduğunda)
* Tam şarj için yaklaşık 6 saat gereklidir.	* Tam şarj için yaklaşık 6 saat gereklidir.
Bağlantı için bağlanabilir üniteler: İç ünite - 64 üniteye kadar	Bağlantı için bağlanabilir üniteler: İç ünite - 64 üniteye kadar
Uzaktan kumanda için bilgisayar ortamı	Uzaktan kumanda için bilgisayar ortamı
Tarayıcılar: Internet Explorer 11 veya üzeri ya da Google Chrome	Tarayıcılar: Internet Explorer 11 veya üzeri ya da Google Chrome
Ekran çözünürlüğü: 1280 x 1024 (tavsiye edilen)	Ekran çözünürlüğü: 1280 x 1024 (tavsiye edilen)
Kullanılabilir USB bellekleri: Standart tip (USB2.0)	Kullanılabilir USB bellekleri: Standart tip (USB2.0)
Kapasite: 4 GB veya daha fazla	Kapasite: 4 GB veya daha fazla
Kullanmadan önce dikkat edilecek hususlar	Kullanmadan önce dikkat edilecek hususlar
• Ürünlerin güvenli çalışmasını sağlamak için bilgisayar kullanılsa bile dışarıdan	• Ürünlerin güvenli çalışmasını sağlamak için bilgisayar kullanılsa bile dışarıdan
• Sıkılaşmış (güvenlik yazılımı) vs. kullanılması.	• Sıkılaşmış (güvenlik yazılımı) vs. kullanılması.
• Panasonic herhangi bir veri kaybından dolayı hiçbir sorumluluk kabul etmez.	• Panasonic herhangi bir veri kaybından dolayı hiçbir sorumluluk kabul etmez.

*1: Bağlanabilir maksimum ünite sayısı aşağıdaki gibidir:
 *2: Sadece bu üniteyi kullanırken: 128 iç ve 60 dış ünite
 • Bir İletişim Adaptörünü bağlarken: 256 iç ve 120 dış ünite
 *3: Arayüz Adaptörlerini sayısız içerir.

Dane techniczne

Nr modelu: CZ-256ESMC3	Wymiary (wys. x szer. x gł.): 240 x 280 x (20 + 65) mm
Masa: 2,7 kg	Temperatura/zakres wilgotności: 0 °C do 40 °C / 20 % do 80 % (bez skraplania)
Wyłącznie do użytku w pomieszczeniach wewnętrznych.	Zakres energii: Maks. 20 W
Zożycie energii: Maks. 20 W	Zożycie energii: Maks. 20 W
Dokładność: ± 30 sekund/mies. (przy normalnej temperaturze 25 °C)	Dokładność: ± 30 sekund/mies. (przy normalnej temperaturze 25 °C)
Czas podtrzymywania: 100 dni (w normalnej temperaturze 25 °C przy pełnym naładowaniu)	Czas podtrzymywania: 100 dni (w normalnej temperaturze 25 °C przy pełnym naładowaniu)
* Do pełnego naładowania potrzeba ok. 8 godzin.	* Do pełnego naładowania potrzeba ok. 8 godzin.
Liczba jednostek, które można podłączyć: przyspajalica na jedno połączenie: Wewnętrzne - do 64 urządzeń* Zewnętrzne - do 30 urządzeń	Liczba jednostek, które można podłączyć: przyspajalica na jedno połączenie: Wewnętrzne - do 64 urządzeń* Zewnętrzne - do 30 urządzeń
Przeglądarki komputerowe: Internet Explorer 11 lub nowsza lub Google Chrome	Przeglądarki komputerowe: Internet Explorer 11 lub nowsza lub Google Chrome
Rozdzielczość ekranu: 1280x1024 (zalecana)	Rozdzielczość ekranu: 1280x1024 (zalecana)
Pamięć USB dopuszczalne do stosowania: Typ standard (USB2.0)	Pamięć USB dopuszczalne do stosowania: Typ standard (USB2.0)
Pojemność: 4 GB lub więcej	Pojemność: 4 GB lub więcej
Środki ostrożności przed użyciem	Środki ostrożności przed użyciem
• Prawidłowe użyczenie nie można zagwarantować nawet w przypadku	• Prawidłowe użyczenie nie można zagwarantować nawet w przypadku
• Wyłączenia (z oprogramowaniem bezpieczeństwa) itp.	• Wyłączenia (z oprogramowaniem bezpieczeństwa) itp.
• Firma Panasonic nie ponosi odpowiedzialności za utratę danych.	• Firma Panasonic nie ponosi odpowiedzialności za utratę danych.

*1: Maksymalna liczba urządzeń, które można podłączyć, jest przedstawiona poniżej.
 *2: Przy użyciu tylko tego urządzenia:
 128 urządzeń wewnętrznych i 60 urządzeń zewnętrznych
 • Po podłączeniu adaptera komunikacyjnego:
 256 urządzeń wewnętrznych i 120 urządzeń zewnętrznych
 *3: Zawiera liczbę interfejsów sieciowych.



18. Intelligent Controller (CZ-256ESMC3)

This product incorporates the following software:
 (1) the software for Panasonic Corporation, (2) the software owned by third party and licensed to Panasonic Corporation, (3) the software licensed under the GNU General Public License, Version 2.0 (GPL V2.0), (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL V2.1), and/or (5) open source software other than the software licensed under the GPL V2.0 and/or LGPL V2.1.
 The software categorized as (3) - (5) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refer to the detailed terms and conditions thereof shown in the attached License List (License List Disc).
 At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL V2.0, LGPL V2.1, or the other licenses with the obligation to do so, as well as the respective copyright notice thereof.
 For details of the source code, refer to the supplied License List Disc.

Информация для пользователей в РФ

Импортер:
 Панасоник Корпорэйшн
 1006 Карома, Карома Сити, Осака, Япония

Импортер на территории РФ:
 ООО «Панасоник Рус», РФ, 115191, г. Москва, ул. Большая
 Тульская, д. 11, 3 этаж.

Информация для користувачів в Україні

Договір про Відповідність
 Територія: Територія держави Небезпечних Ресурсів в
 електричному та
 електронному обладданні
 (затвердженого Постановою №1057 Кабінету Міністрів України)

Виріб відповідає вимогам Технічного Регламенту Обмеження Використання деяких Небезпечних Ресурсів в електричному та електронному обладданні (ТР ОВНР).

Вміст небезпечних ресурсів у виробках, не обумовлених в Додатку №2 ТР ОВНР:

1. свинець (Pb) - не перевищує 0,1wt % ваги ресурсів або в концентрації до 1000 частин на мільйон;
2. кадій (Cd) - не перевищує 0,01wt % ваги ресурсів або в концентрації до 100 частин на мільйон;
3. ртуть (Hg) - не перевищує 0,1wt % ваги ресурсів або в концентрації до 1000 частин на мільйон;
4. шестивалентний хром (Cr6+) - не перевищує 0,1wt % ваги ресурсів або в концентрації до 1000 частин на мільйон;
5. поліароматичні вуглеводороди (ПАВ) - не перевищує 0,1wt % ваги ресурсів або в концентрації до 1000 частин на мільйон;
6. поліаромафеноліві ефіри (ПФЕ) - не перевищує 0,1wt % ваги ресурсів або в концентрації до 1000 частин на мільйон.



Уповноважений Представник:
 ТОВ «ПАНАСОНІК УКРАЇНА ЛТД»
 провулок Охтирський, Будинок 7,
 місто Київ, 03022, Україна

Information for users in the Republic of Kazakhstan in Kazakh language

Қазақстан Республикасына территориясында өнім сатуға болатын наразылықтары қабылдайтын уәкілетті ұйым:
 АҚ «Панасоник Маркетинг СНГ», Қазақстан, 050057, Алматы қ., Тимирязев көш. 42, 30-шы ғимарат

Республика экспорт агенттігі:
 8-8000-5109-809 - Алматы мен Орта Азиядан келетіндер үшін
 8-8000-5109-809 - Қазақстан бойынша станцияларды телефондау арқылы тіні

Информация для пользователей в Республике Казахстан

Организация, уполномоченная на принятие претензий по качеству продукции на территории Республики Казахстан:
 Представительство АО «Панасоник Маркетинг СНГ», Казахстан, 050057 г. Алматы, ул. Тимирязева 42, здание 30.

Информационный центр Республики Казахстан:
 +7 (727) 298-09-09. Для звонков из Алматы и Центральной Азии.
 8-8000-5109-809 - Звонки по Казахстану со стационарных телефонов бесплатны

Authorized representative in EU
 Panasonic Testing Centre
 Panasonic Marketing Europe GmbH
 Winsberg 15, 22525 Hamburg, Germany

© Panasonic Corporation 2016
 Printed in Japan

УКРАЇНСЬКА

Запобіжні заходи

⚠️ ЗАСТЕРЕЖЕННЯ Цей символ означає небезпечні умови, які можуть виникнути при використанні продукту. Уважно прочитайте довідку, щоб уникнути або зменшити ризик травми або смерті.	⚠️ ПОПЕРЕДЖЕННЯ Цей символ означає небезпечні умови, які можуть виникнути при використанні продукту. Уважно прочитайте довідку, щоб уникнути або зменшити ризик травми або смерті.
🚫 Інструкції, яких потрібно дотримуватися	🔒 Заборонено дії
🚫 Не використовуйте цей пристрій в потенційно вибухонебезпечній атмосфері.	⚠️ ЗАСТЕРЕЖЕННЯ Не використовуйте цей пристрій в потенційно вибухонебезпечній атмосфері.
🚫 В разі несправності цього пристрою намагайтеся ремонтувати його самостійно. Зверніться за допомогою до спеціаліста або обслуговуючої мережі проведення ремонту.	🚫 Не використовуйте цей пристрій, якщо він не відповідає вимогам безпеки, вказаним у довідці, або якщо він не відповідає вимогам безпеки, вказаним у довідці, або якщо він не відповідає вимогам безпеки, вказаним у довідці.
⚠️ В разі використання мікрохвильової печі, вилучіть з розетки пристрій, щоб уникнути ризику електричного удару. Не використовуйте пристрій, якщо він не відповідає вимогам безпеки, вказаним у довідці, або якщо він не відповідає вимогам безпеки, вказаним у довідці.	⚠️ ПОПЕРЕДЖЕННЯ Цей пристрій призначений для застосування експертами або підготовленим персоналом в металевих, на підприємствах легкої промисловості та офісному обладданні, або для комерційного використання в спеціальних умовах.
🚫 Цей пристрій не призначено для використання особами (у тому числі дітьми) з обмеженими фізичними, сенсорними, інтелектуальними або мовними здібностями, а також особами, які не читали або не розуміють інструкції, або не отримували належної підготовки, або якщо вони не отримували належної підготовки, або якщо вони не отримували належної підготовки.	🚫 Не користуйтеся пристроєм голями руками.
🚫 Не користуйтеся пристроєм голями руками.	🚫 Не мийте пристрій водою.

ПРИМІТКА

Мовною оригіналу інструкції є англійська. Інструкції на всіх інших мовах є перекладами з мови оригіналу.

Технічні характеристики

№ моделі: CZ-256ESMC3
Розмір [В x Ш x Г]: 240 x 280 x (20 + 65) мм
Вага: 2,7 кг

Діапазон робочих температур/вологості:
 Від 0 °C до 40 °C / від 20 % до 80 % (без конденсації)
 Лише при використанні в режимі підтримки температури.
Діапазон частоти: 50/60 Гц
Споживана потужність: До 20 Вт

Годинник:
 ± 30 секунд/місяць (при нормальній температурі 25 °C)
 * Потрібно періодичного налаштування.

Час автономної роботи:
 100 днів (при нормальній температурі 25 °C з повним зарядом)
 * Приблизно. Для повної зарядки потрібно 8 годин.
 * Потрібно періодично заряджати.

Кількість пристроїв в мережі на канал зв'язку*1:
 Внутрішній блок - до 64 одиниць
 Зовнішній блок - до 64 одиниць

Комп'ютерна середовище для підключення до мережі:
Браузер: Internet Explorer 11 або новіший версії, Google Chrome
Роздільна здатність екрана: 1280 x 1024 (рекомендовано)
Сумісність USB-накопичувачів:
 Стандартного типу (USB 2.0)
 Об'єм пам'яті: 4 Гб або більше

Запобіжні заходи перед використанням

- Належніше розгляньте інструкції, що входить до комплекту.
- Належніше розгляньте інструкції, що входить до комплекту, на предмет вимог щодо безпеки.
- Не можна використовувати пристрій, якщо він не відповідає вимогам безпеки, вказаним у довідці.
- Не можна використовувати пристрій, якщо він не відповідає вимогам безпеки, вказаним у довідці.
- Компанія Panasonic не несе відповідальності за будь-яку травму, дані.

*1: Максимальна кількість пристроїв в мережі, показана нижче.

- При використанні тільки одного блоку: 128 внутрішніх блоків, 60 зовнішніх блоків
- При підключенні адаптера за зв'язку: 256 внутрішніх блоків і 120 зовнішніх блоків

РУССКИЙ

Важные инструкции по безопасности

Класс защиты: I

⚠️ ПРЕДУПРЕЖДЕНИЕ Этот символ обозначает опасность, которая может возникнуть при использовании продукта. Внимательно прочитайте руководство по эксплуатации, чтобы избежать травм или смерти.	⚠️ ПРЕДУПРЕЖДЕНИЕ Этот символ обозначает опасность, которая может возникнуть при использовании продукта. Внимательно прочитайте руководство по эксплуатации, чтобы избежать травм или смерти.
🚫 Правильные действия	🚫 Неправильные действия
🚫 Не используйте данный прибор в потенциально взрывоопасной среде.	⚠️ ПРЕДУПРЕЖДЕНИЕ Не используйте данный прибор в потенциально взрывоопасной среде.
🚫 В случае неисправности этого прибора не пытайтесь отремонтировать его самостоятельно. Обратитесь за помощью к специалисту или обслуживающей сети.	🚫 Не используйте этот прибор, если он не соответствует требованиям безопасности, указанным в руководстве, или если он не соответствует требованиям безопасности, указанным в руководстве.
⚠️ В случае использования микроволновой печи, выньте прибор из розетки, чтобы избежать риска поражения электрическим током. Не используйте прибор, если он не соответствует требованиям безопасности, указанным в руководстве, или если он не соответствует требованиям безопасности, указанным в руководстве.	⚠️ ПРЕДУПРЕЖДЕНИЕ Данный прибор предназначен для использования опытными или обученными специалистами в металлургических, легкомысловых и офисных условиях, или для коммерческого использования в специальных условиях.
🚫 Этот прибор не предназначен для использования лицами (в том числе детьми) с ограниченными физическими, сенсорными, интеллектуальными или речевыми способностями, а также лицами, которые не читали или не понимают инструкции, или не получили надлежащего обучения, или если они не получили надлежащего обучения.	🚫 Не пользуйтесь прибором голыми руками.
🚫 Не пользуйтесь прибором голыми руками.	🚫 Не мойте водой.

УВЕДОМЛЕНИЕ

Английский текст является оригинальной инструкцией. Все остальные языки являются переводом оригинальной инструкции.

Характеристики

№ модели: CZ-256ESMC3
Габариты [В x Ш x Г]: 240 x 280 x (20 + 65) мм
Вес: 2,7 кг

Диапазон температур/влажности:
 от 0 °C до 40 °C / от 20 % до 80 % (без конденсата)
 Только при использовании в режиме поддержания температуры.
Диапазон частот: 50/60 Гц
Потребляемая энергия: Макс. 20 Вт

Часы:
 ± 30 секунд/месяц (при нормальной температуре 25 °C)
 * Требуется периодическая корректировка.

Время зарядки:
 100 дней (при нормальной температуре 25 °C с полным зарядом)
 * Приблизно. 8 часов требуется для полной зарядки.
 * Требуется периодическая зарядка.

Количество подключаемых блоков на канал*1:
 Внутренний блок - до 64 блоков
 Внешний блок - до 64 блоков

Компьютерная среда для дистанционного управления:
Браузер: Internet Explorer 11 или более поздняя версия либо Google Chrome
Разрешение экрана: 1280 x 1024 (рекомендуемое)
Совместимость устройств памяти USB:
 Стандартного типа (USB 2.0)
 Объем: не менее 4 Гб

Меры предосторожности перед использованием

- Належніше розгляньте інструкції, що входить до комплекту.
- Належніше розгляньте інструкції, що входить до комплекту, на предмет вимог щодо безпеки.
- Не можна використовувати пристрій, якщо він не відповідає вимогам безпеки, вказаним у довідці.
- Не можна використовувати пристрій, якщо він не відповідає вимогам безпеки, вказаним у довідці.
- Компанія Panasonic не несе відповідальності за будь-яку травму, дані.

*1: Максимальное количество подключаемых блоков, показано ниже.

- При использовании только одного блока: 128 внутренних блоков, 60 внешних блоков
- При подключении адаптера связи: 256 внутренних блоков и 120 внешних блоков

19. System Controller(CZ-64ESMC3)

1. Installation Instructions

Part Names

Control panel

1) Return button
Returns to the previous screen.

2) LCD screen

3) Menu button
Displays the menu screen.

11) Select button
Switches the screen.
• Switches the operation/setting target among [All], [Zone] and [Group].
• Switches the basic operation screen among [Oper], Prohibit R/C [Lock], and [Vent/Misc].

10) Energy saving button
(When using a gas heat pump air conditioner: Switches Energy saving/Normal operation.)

8) Timer button
Performs the timer reservation.

9) Operation indicator (Green)
Illuminates during operation.
Blinks during alarm.
• If at least one unit is operating or alarming, the indicator illuminates or blinks.

7) Enter button
Fixes the selected content.

6) Cross key buttons
Selects an item.
Up
Down
Left
Right

Note/Remarque/Nota/Hinweis/Nota/Ormerking/Nota/Not/Uwaga/Примечание/Примітка

Press centre
Appuyez au centre
Pulsar en el centro
Mittlere Taste drücken
Premere al centro
Druk in het midden
Premir no centro
Ortaya basın
Nacisnać środek
Нажимайте по центру
Натисніть на центр


No glove
Pas de gant
Guantes no
Ohne Handschuh
Nessun guanto
Geen handschoen
Não usar luva
Eldiven kullanmayın
Nie używać rękawic
Не використовуйте рукавички

No pen
Pas de stylo
Bolígrafo no
Ohne Stift
Nessuna penna
Geen pen
Não usar pen
Kalem kullanmayın
Nie używać długopisu
Не використовуйте ручку

Panasonic®

Installation Instructions
System Controller
CZ-64ESMC3

Model No. CZ-64ESMC3

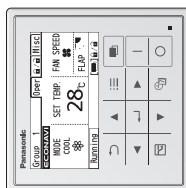

ENGLISH 2-27
Read through the Installation Instructions before you proceed with the installation.
In particular, you will need to read under the "Safety Precautions" on page 6.

FRANÇAIS 2-5, 28-49
Lisez les instructions d'installation avant de commencer l'installation.
En particulier, vous devez lire la section « Consignes de sécurité » en page 28.

ESPAÑOL 2-5, 50-71
Lea las Instrucciones de instalación antes de proceder con la instalación del equipo.
En concreto, deberá leer detenidamente la sección "Precauciones de seguridad" situada en la página 50.

DEUTSCH 2-5, 72-93
Lesen Sie die Einbauanleitung, bevor Sie mit der Installation beginnen.
Insbesondere müssen die „Sicherheitsvorkehrungen“ auf Seite 72 gründlich durchgelesen werden.

ITALIANO 2-5, 94-115
Leggere le istruzioni di installazione prima di procedere con l'installazione.
Prestare particolare attenzione alla sezione "Precauzioni di Sicurezza" a pagina 94.

NEDERLANDS 2-5, 116-137
Lees de installatie-instructies voordat u verder gaat met de installatie.
U moet in het bijzonder de "Veiligheidsvoorschriften" op pagina 116 lezen.

PORTUGUÊS 2-5, 138-159
Leia cuidadosamente as instruções de instalação antes de prosseguir com a instalação.
Em particular, é necessário ler as informações na secção "Precauções de segurança" na página 138.

TÜRKÇE 2-5, 160-181
Kurulumla başlamadan önce Kurulum Talimatlarını baştan sona okuyun.
Özellikle 160. sayfadaki "Güvenlik Önemli" kısmını okumanız gerekecektir.

POLSKI 2-5, 182-203
Przed przystąpieniem do instalacji należy przeczytać instrukcję instalacyjną,
a w szczególności „Środki ostrożności” na stronie 182.

РУССКИЙ 2-5, 204-225
Прежде чем приступать к установке, прочитайте инструкцию по установке.
В частности, следует прочитать раздел «Меры безопасности» на стр. 204.

УКРАЇНСЬКА 2-5, 226-247
Перед початком установки уважно прочитайте інструкції.
Особливу увагу зверніть на розділ «Запобіжні заходи» на ст. 226.

CE Panasonic Corporation
1006 Kadoma, Kadoma City, Osaka, Japan

Panasonic Corporation
http://www.panasonic.com

85464369887010

H0316-0
CV6233324470

2

19. System Controller (CZ-64ESMC3)

Part Names (continued)

FRANÇAIS	8)	Bouton minuterie	9)	Indicateur de fonctionnement (Vert)	10)	Bouton Économie d'énergie
		Efficace la réservation de la minuterie.		S'allume pendant le fonctionnement. Clignote en cas d'alarme. * Si au moins une unité est en fonction ou en état d'alarme, l'indicateur s'allume ou clignote.		(Lors de l'utilisation d'un climatiseur avec pompe de chauffage à gaz. Passe au fonctionnement efficace.) Commute entre les modes Normal et Économie d'énergie.
ESPAÑOL		Botón del temporizador		Indicador de funcionamiento (Verde)		Botón ahorro de energía
		Realiza la reserva del temporizador.		Se ilumina durante el funcionamiento. Parpadea durante la alarma. * El indicador se ilumina o parpadea si al menos una unidad está en funcionamiento o con la alarma activada.		(Solo cuando se utilice un aire acondicionado con bomba de calor a gas: Realiza el funcionamiento eficiente.) Alterna el funcionamiento entre la operación de Ahorro de energía/Normal.
DEUTSCH		Timer-Taste		Betriebsanzeige (grün)		Energiespar-Taste
		Führt die Timer-Reservierung aus.		Leuchtet während des Betrieb. Blinkt während eines Alarms. * Wenn mindestens eines der Geräte arbeitet oder einen Alarm abgibt, leuchtet oder blinkt die Anzeige.		Bei Verwendung einer Gaswärmepumpen-Klimaanlage: Führt den effizienten Betrieb aus.) Schaltet zwischen Energiepar/Normalbetrieb.
ITALIANO		Tasto timer		Indicatore funzione (Verde)		Tasto risparmio energia
		Effettua la prenotazione timer.		Si illumina durante il funzionamento. Lampeggia durante l'allarme. * Se almeno un'unità è funzionante o in stato di allarme, l'indicatore si illumina o lampeggia.		(Se si utilizza un condizionatore con pompa calore a gas: Effettua il funzionamento efficiente.) Passa da Risparmio energia a Funzione normale e viceversa.
NEDERLANDS		Timer-toets		Werkingsindicator (Groen)		Energiebesparingstoets
		Voert de timer-reservering uit.		Brandt tijdens de werking. Knippert bij een alarm. * De indicator brandt of knippert als er ten minste één unit werkt.		(Wanneer een airconditioner met gaswärmepomp wordt gebruikt: Voert een efficiënte werking uit.) Wisselt tussen energiebesparing/normale werking.
PORTUGUÊS		Botão temporizador		Indicador de funcionamento (Verde)		Botão de poupança de energia
		Realiza a reserva de temporizador.		Acende durante a operação. Pisca durante alarme. * Se pelo menos uma unidade está operando ou alarmando, o indicador acende ou pisca.		(Quando utilizar um condicionador de ar de bomba de aquecimento a gás: Realiza a operação eficiente.) Alterna a operação Poupança de energia/Normal.
TÜRKÇE		Zamanlayıcı düğmesi		Çalışma göstergesi (Yeşil)		Enerji tasarrufu düğmesi
		Zamanlayıcı ayıma/gerçekleştirir.		Çalışma sırasında yanar. Alarm sırasında yavaş sönür. * En az bir ünite çalışıyor veya alarm veriyorsa gösterge yanar ya da yavaş sönür.		(Gazlı ısı pompalı klima kullandığınızda: Verimli çalışma gerçekleştirir.) Enerji tasarrufu/Normal çalışma arasına geçiş yapar.
POLSKI		Przycisk programatora		Wskaźnik działania (zielony)		Przycisk oszczędzania energii
		Umożliwia ustawienie programatora.		Świeci podczas pracy. Miga w czasie alarmu. * Jeśli działa lub alarmuje co najmniej jedno urządzenie lub wskaźnik świeci albo miga.		(W klimatyzatorze z gazową pompą ciepła: Wykonuje skuteczne działanie.) Przełącza tryby oszczędzania energii / eksploatacji normalnej.
РУССКИЙ		Кнопка таймера		Индикатор работы (зеленый)		Кнопка энергосбережения
		Задание времени работы.		Подтверждает работу. Мигает во время тревоги. * Если хотя бы один блок работает или подает сигнал тревоги, этот индикатор светится или мигает.		(При использовании кондиционера с газовым тепловым насосом: включает режим эффективной работы.) Переключает между режимами энергосбережения/нормальной работы.
УКРАЇНСЬКА		Кнопка таймеру		Індикатор роботи (зелений)		Кнопка енергозбереження
		Налаштування таймеру.		Світиться під час роботи. Блимає при наявності несправності. * У разі знаходження одного з блоків у стані роботи або несправності індикатор світиться або блимає.		(У разі використання кондиціонера з газовим тепловим насосом: вмикається функція Економічна робота.) Перемикає режими Енергозбереження / Нормальна робота.

FRANÇAIS	1)	Bouton Retour	3)	Bouton Menu	4/5)	MARCHE/ARRÊT	6)	Boutons directionnels	7)	Bouton Entrée
		Retourne à l'écran précédent.		Affiche l'écran du menu.		Démarre/Arrête le fonctionnement.		Sélectionne un élément.		Fixe le contenu sélectionné.
ESPAÑOL		Botón Volver		Botón Menú		Inicio/Paro		Botones de dirección		Botón Enter
		Regresa a la pantalla anterior.		Muestra la pantalla de menú.		Del inicio/funcionamiento.		Seleccionan un elemento.		Fija el contenido seleccionado.
DEUTSCH		Return-Taste		Menü-Taste		START/STOPP		Navigationstasten		Eingabe-Taste
		Kehrt zum vorherigen Anzeigebild zurück.		Zeigt das Menü-Anzeigebild an.		Start/Betrieb.		Zum Auswählen eines Elements.		Taste auswählten Inhalt fest.
ITALIANO		Tasto return		Tasto menù		Tasto AVVIO/STOP		Tasti croce		Tasto Fissa
		Ritorna alla schermata precedente.		Visualizza la schermata del menù.		Avvia la funzione/Ferma il funzionamento.		Seleziona un elemento.		Fissa il contenuto selezionato.
NEDERLANDS		Terugkeer-toets		Menu-toets		START/STOP		Pijltoetsen		Enter-toets
		Keert terug naar het vorige scherm.		Toont het menuscherm.		Start/stop de werking.		Selecteert een item.		Legt de inhoud vast.
PORTUGUÊS		Botão de retorno		Botão de menu		Botão INICIAR/PARE		Botões chave		Botão Enter
		Retorna à tela anterior.		Apresenta a tela de menu.		Inicia/interrompe a operação.		cruzada Seleciona um item.		Fixa o conteúdo selecionado.
TÜRKÇE		Geri Dön düğmesi		Menü ekranı		BAŞLAT/DURDUR		Yön düğmeleri		Gir düğmesi
		Önceki ekrana döner.		Ekranı görüntüler.		Çalışmayı başlatır/durdurur.		Bir öğe seçer.		Seyilen içeriği sabitler.
POLSKI		Przycisk powrotu		Przycisk menu		Przycisk START/STOP		Przyciski nawigacyjne		Przycisk Enter
		Porzaca do poprzedniego ekranu.		Wyświetla ekran menu.		Rozpoczyna/ Zatrzymuje działanie.		Służą do wybierania pozycji.		Zatwierdza treść.
РУССКИЙ		Кнопка возврата		Кнопка меню		Кнопка ПУСК/СТОП		Кнопки перемещения		Кнопка ввода
		Возврат на предыдущий экран.		Отображение экрана меню.		Начало работы/ Остановка работы.		Выбор пункта.		Подтверждение выбора.
УКРАЇНСЬКА		Кнопка повернення		Кнопка Меню		Кнопка ПУСК/СТОП		Кнопки курсора		Кнопка вводу
		Повернення на попередній екран.		Відображення екрану меню.		Початок роботи/ Припиняє роботу.		Вибір елементів меню.		Підтверджує вибір.

19. System Controller (CZ-64ESMC3)

ENGLISH

Safety Precautions

Please Read Before Starting

- This controller must be installed by the sales dealer or installer. These instructions are all you need for most installation sites and maintenance conditions. If you require help for a special problem, contact our sales/service outlet or your certified dealer for additional instructions.

**WARNING**

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

**CAUTION**

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

- We assume no responsibility for accidents or damages resulting from methods other than those described in the installation instructions or methods without using specified parts. Malfunctions that occurred due to the unauthorised installation methods are not covered by the product warranty.
- This controller shall be installed in accordance with National Wiring Regulations.
- After the installation is complete, perform test operation to confirm that no abnormality is present.
- Read the installation instructions of devices to be connected as well.
- When relocating or repairing this controller, provide the Installation Instructions to the servicing personnel

**WARNING**

ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. ONLY A QUALIFIED, EXPERIENCED ELECTRICIAN SHOULD ATTEMPT TO WIRE THIS SYSTEM.

- Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding can cause **accidental injury or death.**
- This controller is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD). Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown. Earth Leakage Circuit Breaker (ELCB) must be incorporated in the fixed wiring in accordance with the wiring regulations. The Earth Leakage Circuit Breaker (ELCB) must be an approved 10 A, having a contact separation by 3 mm in all poles.

11)	
FRANÇAIS	<p>Bouton de sélection</p> <ul style="list-style-type: none"> • Commute l'écran. • Commute la cible de l'opération / du réglage entre [Tout], [Zone] et [Groupe]. • Commute l'écran d'opérations de base entre [Opér] (Opération), [A / B] (Intériorité télécommande) et [Vent/Div.] (Ventilation/Autre).
ESPAÑOL	<p>Botón de selección</p> <ul style="list-style-type: none"> • Cambia la pantalla. • Cambia el destino de la operación/configuración entre [Todo], [Zona] y [Grupo]. • Cambia la pantalla de operaciones básicas entre [Op.] (Operación), [A / B] (Prohibir Control Remoto), [Ven./Var.] (Ventilación/Otros).
DEUTSCH	<p>Wählen-Taste</p> <ul style="list-style-type: none"> • Schaltet das Anzeigebild um. • Schaltet das Bedienungs-/Einstellungsziel unter [Betri] (Betrieb), [A / B] (FB sperren) und [Luft/Versch] (Belüftung/Sonst) um.
ITALIANO	<p>Selezionare tasto</p> <ul style="list-style-type: none"> • Cambia la schermata. • Cambia l'oggetto della funzione/impostazione tra [Tutti], [Zona] e [Gruppo]. • Cambia la schermata funzioni di base tra [Funz] (Funzione), [A / B] (Remoto non consentito) e [Vent/Misc] (Ventilazione/Altro).
NEDERLANDS	<p>Selectie-toets</p> <ul style="list-style-type: none"> • Wisselt het scherm. • Wisselt het werking-/instellingsdoel tussen [All] (Alle), [Zone] (Zone) en [Group] (Groep). • Wisselt het basisbedieningsdoel tussen [Opér] (Werking), [A / B] (Verbod R/C) en [Vent/Misc] (Ventilatie/Anderre).
PORTUGUÊS	<p>Botão selecionar</p> <ul style="list-style-type: none"> • Alterna a tela. • Alterna a operação/configuração entre [All] (Todos), [Zona] (Zona) e [Grupo] (Grupo). • Alterna a Tela de operações básicas entre [Opér] (Operação), [A / B] (Proibir R/C) e [Vent/Misc] (Vent/Otros).
TÜRKÇE	<p>Seç düğmesi</p> <ul style="list-style-type: none"> • Ekranı değiştirir. • Çalışma/Ayar hedefini [All] (Tümü), [Zone] (Bölge) ve [Group] (Grup) arasından değiştirir. • Temel çalışma ekranını [Opér] (Çalışma), [A / B] (Uzaktan Kumandayı Yasakla) ve [Vent/Misc] (Havalandırma/Diğer) arasından değiştirir.
POLSKI	<p>Przycoisk wyboru</p> <ul style="list-style-type: none"> • Przełącza ekran. • Przełącza działanie / ustawienie spośród pozycji docelowych [All] (Wszystkie), [Zone] (Strefa) i [Group] (Grupa). • Przełącza ekran działań podstawowych pomiędzy [Opér] (Działanie), [A / B] i [Odłączenie R/C] and [Vent/Misc] (Wentylacja/Inne).
РУССКИЙ	<p>Кнопка выбора</p> <ul style="list-style-type: none"> • Переключает экран. • Переключает цели управления/настройки между [All] (Все), [Zone] (Зона) и [Group] (Группа). • Переключает экран основных операций между [Opér] (Операция), [A / B] (Запрет ДУ) и [Vent/Misc] (Вентиляция/Другое).
УКРАЇНСЬКА	<p>Кнопка вибору</p> <ul style="list-style-type: none"> • Перемикає екран. • Перемикає керування/налаштування між елементами [All] (Усі), [Zone] (Зона) та [Group] (Група). • Перемикає екрану основних дій між [Opér] (Робота), [A / B] (Заборона дистанційного керування) та [Vent/Misc] (Вентиляція/Інше).






19. System Controller (CZ-64ESMC3)

CONTENTS

- Part Names 2
- Safety Precautions 6
- Specifications 8
- Supplied accessories 8
- Air-conditioning Control System 9
- Dimensions 10
- Installation Precautions 10
- Wiring 11
- Mounting 15
- Setting 16
- Language 16
- Clock 16
- Zone/Group name 18
- Service contact 18
- Controller setup 19
- Test Operation 21
- Central Address Setting 25
- Outdoor Peak Cut Setting 27

Specifications

Model No.	CZ-64ESMC3
Dimensions	(H) 120 mm x (W) 120 mm x (D) 16 + 51.9 mm
Weight	520 g
Temperature/Humidity range	0 °C to 40 °C / 20 % to 80 % (no condensation) *Indoor use only.
Power Source	Single phase 100-240 V ~ 50/60 Hz
Power consumption	Max. 1.3 W
Clock	Precision ± 30 seconds/month (at normal temperature 25 °C) *Adjust periodically.
	Holding time 100 hours (when fully charged) *Approx. 8 hours are required for full charge.
Number of connected indoor units	Up to 64 groups (64 units)

Supplied accessories			
Operating Instructions (1)	Quick Reference (1)	Installation Instructions (1)	Switch Box (1)
			
			Machine Screw M4 x 25 (2) (For Switch Box)
			

* Wiring are not included (field supplied item).

! WARNING

- Provide a power outlet to be used exclusively for this controller.
- Turn off the circuit breaker of the controllers before installation.
- Do not supply power to the controller until all wiring is completed or reconnected and checked.
- Fix the power supply wiring securely with the clasper so that the power supply terminal board part is free of tension (external force) when pulled. Loose connection of the terminal board may occur fire.
- To prevent possible hazards from insulation failure, the controller must be grounded.
- Select an installation location which is rigid and strong enough to support or hold the controller, and select a location for easy maintenance.
- This product must not be modified or disassembled under any circumstances.
Modified or disassembled controller may cause fire, electric shock or injury.
- Do not clean inside the controller by users.
Engage authorized dealer or specialist for cleaning.
- Do not operate with wet hands.

! CAUTIONS

- Ground yourself to discharge static electricity before performing any wiring.
- Do not use the controller at the following locations.
 - Areas where leakage of flammable gas may be expected
 - Places where large amounts of oil mist exist
 - Locations where external air may enter the room directly (This may cause "condensation").
 - Locations where high-frequency emissions are generated
 - Location where voltage fluctuation frequently occurs
- Do not wash with water.

NOTICE

The English text is the original instructions. Other languages are translation of the original instructions.

ENGLISH


(EN) 8

7

(EN)

19. System Controller (CZ-64ESMC3)

Dimensions

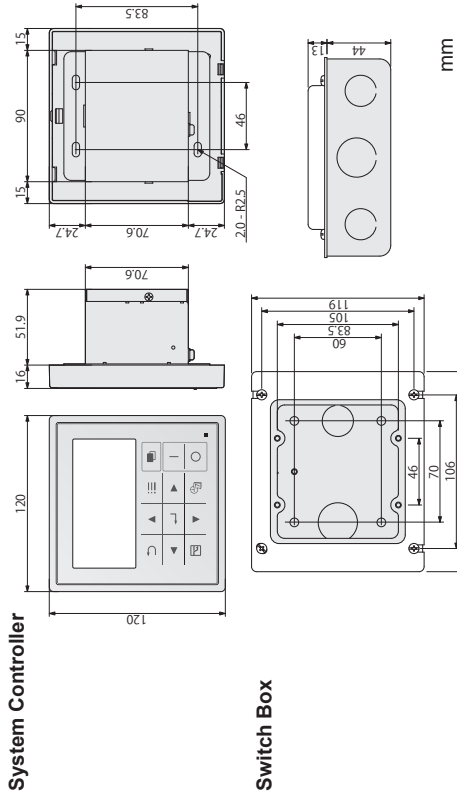

Installation Precautions

Installation location

- Avoid the following locations for installation.
 - Under direct sunlight
 - Location near heat source
 - Locations where the controller will be splashed with water or affected by dampness or humidity
 - Location that is subject to excessive vibration or physical impacts. (Fixing screws may come off, and the controller may drop.)
- Install the controller away from any sources of electrical noise.
- Install the controller to the locations where is suitable to the temperature for using or environment.
- When installing more than 1 controller next to each other, keep distance of 5 mm or more on the right and left and 50 mm or more on top and bottom.

General precautions on wiring

- Regulations on wire diameters differ from locality. For field wiring rules, please refer to your LOCAL ELECTRICAL CODES before beginning. You must ensure that installation complies with all relevant rules and regulations.
- Use the field supplied wiring with at least 1 mm in thickness of insulation part including the sheath.
- Connect all wiring tightly to prevent the terminal board from loosening when the wiring connection part is pulled by an external force. (Otherwise, fire or overheating may occur.)
- Do not bury the inter-unit control wiring in the ground.
- Do not store the power supply wiring and other wiring in the same metal tube or bundle them together. (An operational error or noise may occur.)

Air-conditioning Control System

The most suitable air-conditioning control system can be selected according to the scale of the control/monitoring area.


Controlling indoor units

This unit alone enables multi-functional operations: Up to 64 indoor units can be controlled individually or collectively.

* 64 indoor units are divided into up to 4 zones, and can be controlled on All, Zone or Group basis.

All	<ul style="list-style-type: none"> • Operates and sets up to 64 indoor units.
Zone	<ul style="list-style-type: none"> • Registers multiple indoor units with up to 4 zones, and operates and sets each zone collectively.
Group	<ul style="list-style-type: none"> • Operates and sets each group. * The remote control operation is performed by the group.

ENGLISH

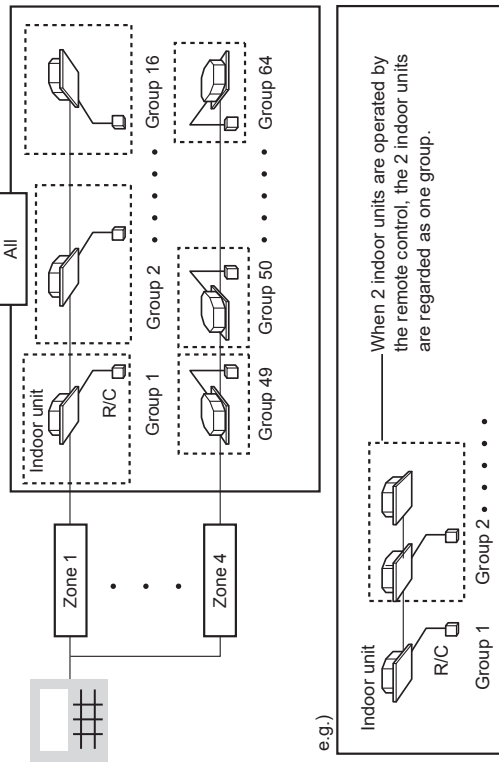

- The above example shows this unit is connected as the central controller.

19. System Controller (CZ-64ESMC3)

Wiring

Power supply wiring

- Be sure to use a dedicated line for power source.
- Be sure to earth this controller.
- Do not connect the earth wiring to those of gas pipe, water pipe, lighting rod, telephone, etc.

Type of wiring:

- Use a flexible wiring of 2 mm² (Recommended).
- Use the standard power supply wiring for Europe (such as H05RN-F or H07RN-F which conform to CENELEC (HAR) rating specifications) or use the wiring based on IEC standard (60245 IEC57, 60245 IEC66).

Total Wire Length: 30 m or less

Power supply terminal screw: M4

Inter-unit control wiring

Type of wiring:

- Use a flexible shield wiring of 0.5 to 2 mm².

Total wire length:	Indoor unit	Up to 64 units (*1)
	Outdoor unit	Up to 30 units
	Central control device	Up to 10 units

(*1) The number of indoor units includes the interface adaptor.


External I/O wiring

Type of wiring:

- Use a flexible wiring of 0.5 to 2 mm².

Total Wire Length:
• 100 m or less

Basic wiring diagram

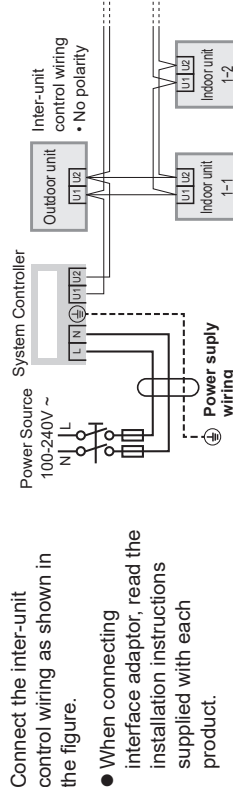

Connect the inter-unit control wiring as shown in the figure.


- When connecting interface adaptor, read the installation instructions supplied with each product.

Wiring (continued)


Before connecting wiring, be sure to turn the circuit breaker off. After all wiring arrangements are complete, turn the circuit breaker on. If the power supply wiring is mistakenly connected to a terminal board other than the power supply terminal board, the devices to be connected to this controller or this controller will malfunction. After connecting wiring, confirm that the power supply wiring is properly connected.

How to attach the ring pressure terminal

- #### For power supply wiring
- Process the end of each wiring and attach the ring pressure terminal (field supplied item).



- #### For shield wiring
- Process the end of the each wiring and attach the ring pressure terminal (field supplied item).
- ① Remove wiring coat.
 - ② Cover with the tape.
 - ③ Attach ring pressure terminal.

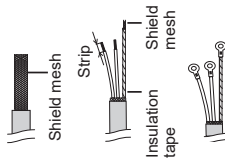

Attention

- Ground the shield on both sides of shield wiring, otherwise an operation error from noise may occur.




19. System Controller (CZ-64ESMC3)

Wiring (continued)

Connecting to external equipment

- Keep the signal input line lengths to 100 meters or less. For distances greater than this, use a relay.


Name	Input/Output item	System controller side	External equipment side	
Contact Input/output terminal	Status output	Condition Non-voltage contact "a" Static (Relay output) Contact allowable voltage: Max. DC30 V Contact allowable current: Max. 0.5 A Minimum application load: DC5 V 1 mA	Terminal name Output Alarm output (DO 1) Operation output (DO 2) Common1 (COM 1)	Circuit example
	Control input	All stop: Voltage contact "a" Pulse (When batch stop input is ON, the stop signal is sent periodically.) Pulse width: 300 msec or more All operation: Voltage contact "a" Pulse Pulse width: 300 msec or more Demand 1 input (Di 3) Demand 2 input (Di 4) Voltage contact "a" Static Contact allowable voltage: DC24 V±10 % Contact allowable current: Max. 10 mA	Terminal name Input 1 All stop input (Di 1) All operation input (Di 2) Common 2 (COM 2) Input 2 Demand 1 input (Di 3) Demand 2 input (Di 4) Common 3 (COM 3)	

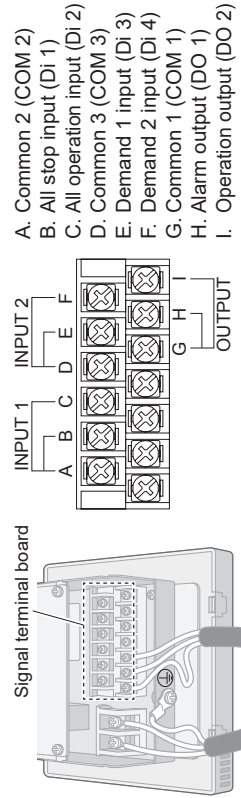

14 (EN)

Connecting wiring

- ① Remove the 2 screws for fixing the cover, and remove the power source cover.
- ② Connect the power supply wiring to the power supply terminal board. Be sure to connect the earth wiring to the earth terminal.
- ③ Connect the inter-unit control wiring to the U1 and U2 terminals.
- ④ When connecting to external equipment, refer to "Connecting to external equipment" (P. 14)
- ⑤ Attach the power source cover, and tighten the 2 screws for fixing the cover.

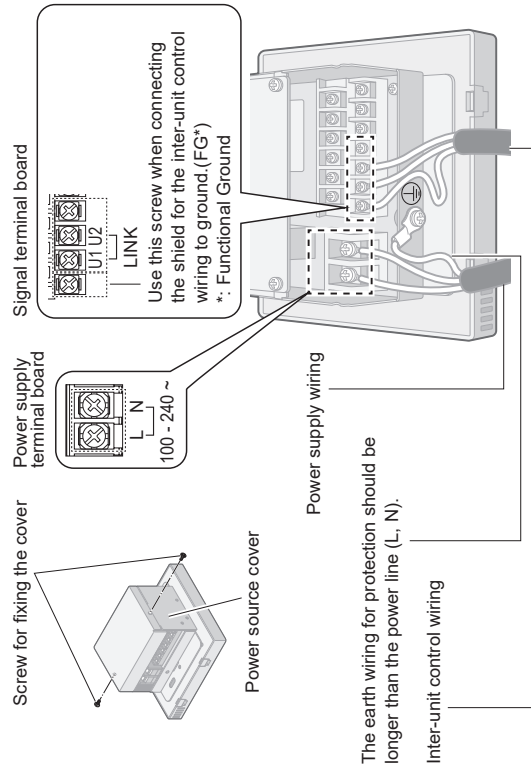

Note

- There is no polarity for the inter-unit control wiring.

Attention

- Do not run the inter-unit control wiring through the same conduit as the power supply, or run close to the power supply line.
- Use different inter-unit control wiring and power supply wiring so they can be differentiated visually.

Symbols on the controller

- ⚡ This symbol refers to "Protective earth".

13 (EN)

19. System Controller (CZ-64ESMC3)

Mounting


When mounting the bottom case (step 2)

- Tighten the screws securely until they reach the bottom case. (Otherwise, loose screw heads may hit the PCB and cause malfunction when mounting the top case.)
- Do not over-tighten the screws. (The bottom case may be deformed, resulting in fall of the unit.)


Embed the included switch box into the wall beforehand.

1 Preparation to attach the controller

- Remove the control panel.

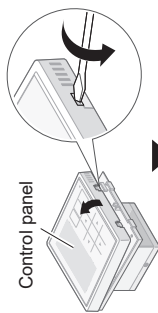


- Remove the connector.

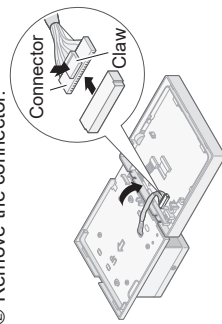

3 Connect the connector, and attach the control panel.

- Connect the connector.

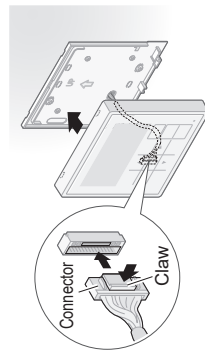

Push in until the claw clicks.


- Attach it from above.



Do not allow the wires to come in contact with parts on the PCB. (Caught wires may destroy the PCB.)

- Push in until a clicking sound is heard.


Cross-section view (Embedded state)

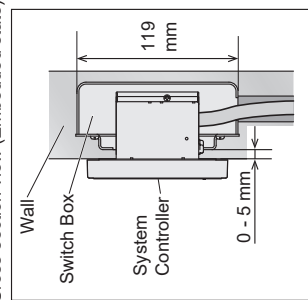

Pull out the connector while pushing the claw.

2 Mount to the switch box.


- Insert the controller to the switch box (supplied) that has been embedded in the wall.
- Mount the bottom case, (with the power supply part attached) of the controller to the switch box (with small screws (supplied))
 - Do not allow the connection to be exposed to the external force of wiring.

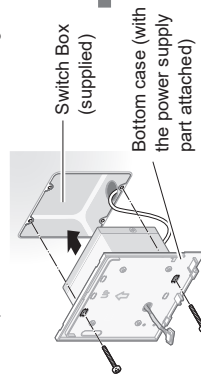

Setting

Language / Clock / Zone/Group name

1 Press to select [Initial settings].

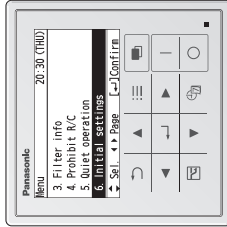


2 Select the item to set.




Language

3 Set.




Clock

3 Set the date and time.



Zone/Group name

3 Select the item to set.



19. System Controller (CZ-64ESMC3)

Setting (continued)

■ Zone name

4 Select the item to give a name to.

▲ ▼ → []

*Select the zone from zone 1 to 4.

5 Enter the name.

▲ ▼ ◀ ▶ → []

(Repeat the same procedure for all character)

■ Group name

4 Select the item to give a name to.

▲ ▼ → []

*Select the group from group 1 to 64.

5 Enter the name.

▲ ▼ ◀ ▶ → []

(Repeat the same procedure for all character)

■ How to input a name

- Zone: Up to 14 characters
- Group: Up to 16 characters
Space is included in the number of characters.

● To change the character type

Select the character type with
▲ ▼ and press []

● To enter space

Select [Space] with ▲ ▼ ◀ ▶ and
press []

● To delete 1 character

Select [BS] with
▲ ▼ ◀ ▶ and press []

● Select [Conf].

▲ ▼ ◀ ▶ → []

Zone name	Not RGSTR
Zone 1	Not RGSTR
Zone 2	Not RGSTR
Zone 3	Not RGSTR
Zone 4	Not RGSTR
▼ Sel.	[←]Set

Zone 1:	ABC/abc	0-9/Other
ABCEFGHIJKLNPQR	Space	
STUVWXYZ	abcdefghi	BS
JKLmnopqrstuvwxy	Conf	
↵ Sel.		

Group name	Unit No.	Name
1	1-1	Not RGSTR
2	1-2	Not RGSTR
3	1-3	Not RGSTR
↵ Sel.		[←]Set

Group 1:	ABC/abc	0-9/Other
ABCEFGHIJKLNPQR	Space	
STUVWXYZ	abcdefghi	BS
JKLmnopqrstuvwxy	Conf	
↵ Sel.		

Group 1:	ABC/abc	0-9/Other
0123456789	!"#\$%&'Space	
()*+,-./:;<=>?@[\]_	BS	
-{}~	Conf	
↵ Sel.		

Group 1:	ABC/abc	0-9/Other	Character type
0123456789	!"#\$%&'Space		
()*+,-./:;<=>?@[\]_	BS		
-{}~	Conf		
↵ Sel.			

Group 1: room A	ABC/abc	0-9/Other
ABCEFGHIJKLNPQR	Space	
STUVWXYZ	abcdefghi	BS
JKLmnopqrstuvwxy	Conf	
↵ Sel.		[←]Confirm

Service contact / Controller setup

Service contact

1 Press and hold the 3 buttons for 4 seconds or more simultaneously.

[] [] []

2 Select [Service contact].

▲ ▼ → []

3 Select the item to set.

▲ ▼ → []

4 Enter the name.

▲ ▼ ◀ ▶ → []

(Repeat the same procedure for all characters.)

● To change the character type

Select the character type with
▲ ▼ and press []

● To enter space

Select [Space] with ▲ ▼ ◀ ▶ and press []

5 Select [Conf].

▲ ▼ ◀ ▶ → []

6 Select on the screen for step 3.

(Contact number)
▲ ▼ → []

7 Enter the name.

▲ ▼ ◀ ▶ → []

(Repeat the same procedure for all characters.)

8 Select [Conf].

▲ ▼ ◀ ▶ → []

All	Zone	Group	20:30 (THU)
Running	0Grp	Stopping	64Grps
	[←]Over		[] Zone

Maintenance func	20:30 (THU)
1. ECOMAVI	
2. Outdoor unit error data	
3. Service contact	
4. Controller setup	
↵ Sel.	Page [←]Confirm

Service contact	20:30 (THU)
Name	Unset
Contact number	Unset
↵ Sel.	[←]Confirm

Name:	ABC/abc	0-9/Other
ABCEFGHIJKLNPQR	Space	
STUVWXYZ	abcdefghi	BS
JKLmnopqrstuvwxy	Conf	
↵ Sel.		

● To delete 1 character

Select [BS] with ▲ ▼ ◀ ▶ and
press []

Name:	XXXXXXXXXXXXXXXX	0-9/Other
ABCEFGHIJKLNPQR	Space	
STUVWXYZ	abcdefghi	BS
JKLmnopqrstuvwxy	Conf	
↵ Sel.		[←]Confirm

Contact number:	1	2	3	+	-	Space
	4	5	6	()	BS
	7	8	9	*	#	Conf
↵ Sel.						[←]Enter

Contact number:	XXXXXXXXXXXXXXXX
	1 2 3 + - Space
	4 5 6 () BS
	7 8 9 0 * # Conf
↵ Sel.	[←]Confirm

ENGLISH

17 (EN)

18 (EN)

19. System Controller (CZ-64ESMC3)

Setting (continued)

Item code	Set contents	Set data
06	Flap setting Disables switching operation of airflow direction and disables the airflow display.	<ul style="list-style-type: none"> • 0000: Display and operation enabled* • 0001: Display and operation disabled
07	Alarm output delay function Delays the relay output ON when an alarm occurs.	<ul style="list-style-type: none"> • 0000: No delay* • 0001: 00'15" • 0001: 1 min. • 0015: 15 min (1-minute interval)
09	Password auto lock Locks the password during no operation when the password is temporarily unlocked.	<ul style="list-style-type: none"> • 0000: Auto lock not set • 0001: 5 min • 0006: 30 min (5-minute interval)*
0A	Screen auto off Clears the LCD display during no operation.	<ul style="list-style-type: none"> • 0000: Not set* • 0001: 30 min
0C	Peak cut function Schedule peak cut/Schedule energy saving/External input peak cut Switches among the 3 functions.	<ul style="list-style-type: none"> • 0000: Schedule peak cut* • 0001: Schedule energy saving • 0002: External input peak cut
0E	Temp display setting Set the type of temperature display.	<ul style="list-style-type: none"> • 0000: °C* • 0001: °F
2F	Password change Enables changing the password for the password setting function.	<ul style="list-style-type: none"> • 0000 to 9999: • 0000: *
36	Display of operation lock cancelling method Set whether to display the operation lock cancelling method on the lock screen while operation is locked. (For the lock screen, see the "Part Names" section in the Quick Reference.)	<ul style="list-style-type: none"> • 0000: Displayed* • 0001: Not displayed

*Factory default

Number-of-controlled-units mode

In combination of the item code 03 "All/Zone mode" and the item code 05 "Central control/Remote control mode", the following ① to ⑩ modes can be set.

Number-of-controlled-units mode	Central control/Remote control mode		Control target
	Central control mode	Remote control mode	
All mode	Disabling the setting function can be used.	Disabling the setting function cannot be used.	Group
Zone 1 mode	① All central control	⑥ All remote control	1 to 64
Zone 2 mode	② Zone 1 central control	⑦ Zone 1 remote control	1 to 16
Zone 3 mode	③ Zone 2 central control	⑧ Zone 2 remote control	17 to 32
Zone 4 mode	④ Zone 3 central control	⑨ Zone 3 remote control	33 to 48
	⑤ Zone 4 central control	⑩ Zone 4 remote control	49 to 64

Controller setup



1 Press and hold the 3 buttons for 4 seconds or more simultaneously.



2 Select the item to set.



3 Set.



*Factory default

Item code	Set contents	Set data
01	Main/Sub setting ① Set "Main" when using a single unit of the system controller. ② Set "Sub" when using in combination of a central control device such as intelligent controller. ③ When using multiple system controllers in a case other than ②, set "Main" only for one unit. In zone mode, set "Main" for one unit in each zone. It is recommended to set "Main" for the system controller whose item code 03 "All/Zone mode" is set to "All mode".	<ul style="list-style-type: none"> 0000: Sub 0001: Main*
02	System Controller address setting Up to 10 system controller (CZ-64ESMC3) can be connected on the inter-unit control wiring. When installing more than one unit, assign self addresses to avoid duplication.	<ul style="list-style-type: none"> • 0000: Address 1* • 0001 to 0009: Address 2 to 10
03	All/Zone mode ● All mode Sets all the indoor units. ● Zone 1, Zone 2, Zone 3 and Zone 4 mode Sets only the indoor units in any of the Zone 1, Zone 2, Zone 3 and Zone 4. Can control for each zone and each group. See "Number-of-controlled-units mode" as well.	<ul style="list-style-type: none"> • 0000: All mode* • 0001: Zone 1 mode • 0002: Zone 2 mode • 0003: Zone 3 mode • 0004: Zone 4 mode
04	R/C prohibited setting Sets Enable/Disable of the R/C prohibited setting function. When the item code 05 "Central control/Remote control mode" is set to "Remote control mode", this is disabled.	<ul style="list-style-type: none"> • 0000: Disabling the setting function set* • 0001: Disabling the setting function not set
05	Central control/Remote control mode ● Central control mode Disabling the setting function can be used. ● Remote control mode Disabling the setting function cannot be used. The Prohibit R/C setting is disabled. See "Number-of-controlled-units mode" as well.	<ul style="list-style-type: none"> • 0000: Central control mode* • 0001: Remote control mode

19. System Controller (CZ-64ESMC3)

Test Operation (continued)


■ Group

3 Select the operation target.

Press ◀▶ to select the zone. →



4 ▲▼ →




5 Finish the test operation.

Perform step 1 and 2, and then select [OFF] in step 4. ([TEST] display disappears.)

Attention

- Do not use this mode for purposes other than the test operation. (To prevent overload of the units)
- Read the installation instructions supplied with the units.
- Any of the Heat, Cool and Fan operations can only be performed.
- Temperature cannot be changed.
- Outdoor units do not operate for approx. 3 minutes after the power is turned on or operation is stopped.

▲▼ → (Press [Menu] → [F] to finish.)



Test Operation

Test operation for the system controller

(Preparation) Referring to the operating instructions for indoor units and outdoor units, perform the test operation beforehand.


① Turn on the system controller

(Assigning blinks, and the indoor unit connection group is automatically checked.)

② Confirm that the number of connected indoor units (Only main units when controlling in group) is the same as the number of groups displayed on the system controller

*If not the same, see central address setting (P.25), and make the setting.


*When connecting the interface adaptor, set the central address.




Indoor unit test operation

Test operation ON/OFF procedure

1 Press and hold the 3 buttons for 4 seconds or more simultaneously.




2 Select the item to set.




■ All/Zone

3 Select the operation target.



4 ▲▼ → (Press [Menu] → [F] to finish.)



ENGLISH

19. System Controller (CZ-64ESMC3)

Central Address Setting

After the test operation for the air conditioner has finished, set the central address according to the following procedure.


1 Press and hold the 3 buttons for 4 seconds or more simultaneously.



2 Select the item to set.




* If there is any duplication of central address, this message appears when the individual setting is complete or the Central address setting has finished.

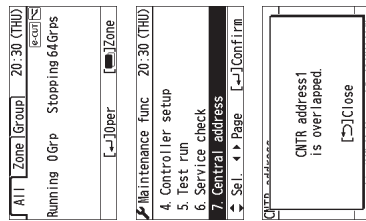

Individual setting


3 Select the Unit No. to set.



4 Select the CNTR address to set.




* To delete the setting, press




Automatic setting

3 Press




4 [YES]



5 Search

* The setting operation is complete when Assign goes off.



Central Address Setting (continued)

When setting the central address from the wired remote control

After the setting is complete, turn on the system controller again.

Setting from wired remote controllers (CZ-RTC4)

Make the setting while stopped.

1 Press and hold the 2 buttons for several simultaneously.




2 Select the Code no.



3 Select the Set data.




The indicator illuminates after blinking. Press .

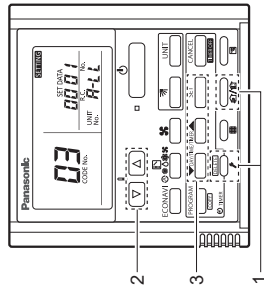


Setting from wired remote controllers (CZ-RTC3, CZ-RTC5)

1 Press and hold the 3 buttons for 4 seconds or more simultaneously.

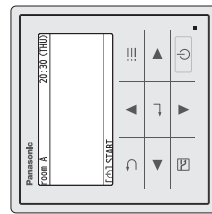

2 Select [Simple settings]





3 Set

Do not change the Unit No. from the initial setting.

Select the item code 03. Change the setting data, and set the central address.

Press at the Unit No. selection position to finish the setting.




ENGLISH

19. System Controller (CZ-64ESMC3)


Outdoor Peak Cut Setting

Demand 1 and Demand 2 for outdoor units can be changed. Depending on the type of outdoor unit, it cannot be changed.

- 1 Press and hold the 3 buttons for 4 seconds or more simultaneously.**




- 2 Select the item to set.**



* After the setting is complete, this unit and outdoor units restart. Be sure to make this setting while stopped.


* The displayed demand value is not the cut value, but the maximum power. (Same as the EEPROM setting for the outdoor maintenance remote control)

- 3 Select O/D unit No. to set.**




- 4 Press ◀▶ to select the setting target (Demand 1 or 2).**

Press ▲▼ to change the demand value. Press [↵]. The demand setting is complete.




- 5 To finish the Outdoor peak cut**

Press [↵] → ◀▶ → and select [YES].



- 6 The restart operation of outdoor units is complete.**



ENGLISH

19. System Controller (CZ-64ESMC3)

2. Quick Reference

Safety Precautions

	WARNING		CAUTION
This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.		This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.	
	Matters to be observed		Prohibited matters
WARNING			
	Do not use this appliance in a potentially explosive atmosphere.		
	In case of malfunction of this appliance, do not repair by yourself. Contact the sales or service dealer for repair.		
	In case of emergency, remove the power plug from the socket or switch off the circuit breaker or the means by which the system is isolated from the mains power.		

Panasonic®

Quick Reference
System Controller
Model No. **CZ-64ESMC3**



Installation Instructions
Separately/Attached.



Be sure to read the "Safety Precautions" before using. Keep them for future reference. Also, read the operating instructions supplied with the air conditioner.

Veillez à lire les « Consignes de sécurité » avant l'utilisation. Conservez-le pour toute référence ultérieure.

Lire également les consignes d'utilisation fournies avec l'appareil de climatisation.

Asegúrese de leer las "Precauciones de seguridad" antes de utilizar el aparato. Guárdelas para futuras consultas.

Además, lea las instrucciones de funcionamiento suministradas con el acondicionador de aire.

Insbesondere müssen die „Sicherheitshinweise“ vor der Inbetriebnahme durchgelesen werden. Bewahren Sie sie für die künftige Verwendung auf.

Lesen Sie auch die Betriebsanleitung, die mit der Klimaanlage geliefert wurde.

Assicurarsi di leggere le "Precauzioni di Sicurezza" prima dell'utilizzo. Conservarle come riferimento futuro.

Si prega inoltre di leggere le istruzioni d'uso fornite con il condizionatore.

Lees de "Veiligheidsvoorschriften" voor gebruik. Bewaar ze om ze later te raadplegen.

Lees ook de gebruikershandleiding die met de airconditioner wordt meegeleverd.

Antes de utilizar, leia as "Precauções de segurança". Guarde-o para futuras referências.

Leia também as instruções de funcionamento fornecidas com o aparelho de ar condicionado.

Kullanmadan önce "Güvenlik Önlemleri" kısmını okuduğunuzdan emin olun.

Klimaya birlikte sağlanan kullanım talimatlarını da okuyun.

W szczególności, przed rozpoczęciem korzystania z urządzenia, należy przeczytać część „Środki ostrożności”. Zachowaj ją do dalszego wykorzystania.

Należy także przeczytać instrukcję obsługi dostarczoną wraz z klimatyzatorem.

Прежде чем приступить к эксплуатации, обязательно прочитайте раздел «Меры по технике безопасности Класс защиты I». Сохраните ее для дальнейших справок. Также прочтите инструкции по эксплуатации, которые входят в комплект поставки кондиционера.

Обов'язково ознайомтеся з розділом «Запобіжні заходи» перед використанням.

Збережіть її на майбутнє. Також прочитайте інструкції з експлуатації, що додаються до кондиціонера.



Panasonic Corporation
1006 Kadoma, Kadoma City, Osaka, Japan

Panasonic Corporation
<http://www.panasonic.com>

85464609345011

H0316-1096
CV6233324463

2

19. System Controller (CZ-64ESMC3)

Part Names

Control panel

Return button
Returns to the previous screen.

Menu button
Displays the menu screen

Select button
Switches the screen.
• Switches the operation/ setting target among [All], [Zone] and [Group].
• Switches the basic operation screen among [Oper] (Operation), [Prohibit R(C)] and [Vent/Misc] (Ventilation/Other).

Energy saving button
(When using a gas heat pump air conditioner: Performs the Efficient operation.)
Switches Energy saving/ Normal operation.

Timer button
Performs the timer reservation.

Enter button
Fixes the selected content.

START button
Starts operation.

STOP button
Stops operation.

Operation indicator (Green)
Illuminates during operation.
Blinks during alarm.
• If at least one unit is operating or alarming, the indicator illuminates or blinks.

Cross key buttons
Selects an item. (Left/Down/Right/Up)

Note

- Press centre
- No glove
- No pen

Note

- If a password has been set, the password entry screen is displayed after any of the following operations.
 - After operating [1. Energy saving] in the menu
 - After operating the Menu button and Timer button
 - After operating all buttons

CAUTIONS

This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Do not operate with wet hands.
Do not wash with water.

Specifications

Model No.	CZ-64ESMC3	
Dimensions	(H) 120 mm x (W) 120 mm x (D) 16 + 51.9 mm	
Weight	520 g	
Temperature/ Humidity range	0 °C to 40 °C / 20 % to 80 % (No condensation) *Indoor use only.	
Power Source	Single phase 100 to 240 V ~ 50/60 Hz	
Power consumption	Max. 1.3 W	
Clock	Precision	± 30 seconds/month (at normal temperature 25 °C) *Adjust periodically.
	Holding time	100 hours (When fully charged) *Approx. 8 hours are required for full charge.
Number of connected indoor units	Up to 64 groups (64 units)	

19. System Controller (CZ-64ESMC3)

Switching Displays

Standby screen
Select the indoor unit to operate and set.

Operation screen

- **Basic operation screen**
Set the operation mode, temperature, fan speed and airflow direction.
- **Prohibit R/C screen**
Disable the remote control operation.
- **Vent (Ventilation)/Misc (Other) screen**
Set ventilation.

Menu screen
Various settings are available using menus.

Weekly timer setting screen
Set the operation schedule on a daily basis.

Standby screen (Press [Zone]) → **Zone** → **Group**

Standby screen (Press [Oper]) → **All** → **Operation screen (Press [Oper])** → **Basic operation screen** → **Prohibit R/C screen** → **Vent (Ventilation)/ Misc (Other) screen**

Standby screen (Press [Menu]) → **Menu screen (Press [Menu])**

Standby screen (Press [Timer]) → **Weekly timer setting screen (Press [Timer])**

Screen display

Screen display

● Basic operation screen

Operation/Setting target (All, ECONAVI, MODE HEAT)

Screen switching (Oper, e-CUT, Vent)

Setting information icon (Fan speed, Flap)

Operation mode (Running)

Set temperature (18°C)

Operation guide (FAN SPEED, FLAP)

3-507

Setting information icon example (Displayed on the basic operation screen and standby screen)
According to the setting status, the number of icons and the display positions vary.

● Icon

- | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|----|----|----|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
| | | | | | | | | | | | |

- 1 The indoor unit filter needs to be cleaned.
- 2 The engine oil needs to be replaced. (Only when using a gas heat pump air conditioner.)
- 3 Switching operation modes is prohibited. (Switching to Auto mode is also prohibited.)
- 4 Remote control operation is restricted by a central control device. (Only in the remote control mode)
- 5 The key operation is locked.
- 6 The weekly timer or Holiday is set.
- 7 The weekly timer is not set.
- 8 Energy saving operation is in process. (Only when connecting a commercially sold fan.)
- 9 Fresh air is used for ventilation. (Only when connecting a commercially sold fan.)
- 10 The energy saving setting function is set.
- 11 The energy saving setting function is operating.
- 12 The operation capacity of the outdoor unit is restricted.

*1: May not be displayed if there are too many icon indications that overflow from the display area.



19. System Controller (CZ-64ESMC3)

Selecting All, Zone or Group

- 1 Switch the screen.**
Press . (* For All, press .)
- 2 Select the item.**
Press .
Pressing switches to the setting screen.

All (Select the zone.)

- Press .
- Select the zone from zone 1 to 4.


Group (Select the group.)

- Press .
- Select the zone, and select the group.

- Press to select the zone, press to select the group, and press .

Note

- Groups can be selected on the zone screen.

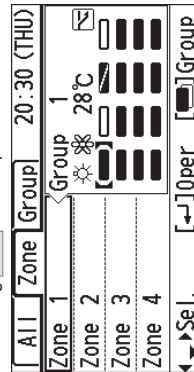


Basic Operations

This section describes the basic operations to use this unit.

- 1 Select All, Zone or Group.**
- 2 Set the operation mode, temperature, fan speed and airflow direction.**

Press .

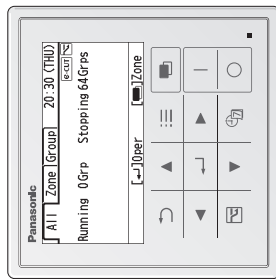


All Select all indoor units.

Zone Select Zone*.

Group Select Group.

* In Zone mode, only the specified zones can be operated.

Press .

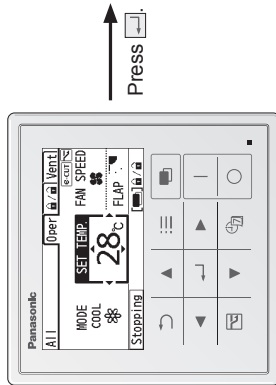

MODE Switch among COOL, HEAT, DRY, FAN and AUTO.

SET TEMP Set the temperature.

FAN SPEED Set the fan speed.

FLAP Set the airflow direction.

- Switching the screen using the button can make the settings below.
 - (Prohibit R/C) screen**
Disabling the remote control operation and settings.
 - Ventilation/Other screen**
Set the ventilation to ON/OFF.


19. System Controller (CZ-64ESMC3)

Setting Operation Mode, Temperature, Fan Speed and Airflow Direction

Make each setting for the selected indoor unit.


1 Display the operation screen.

Press .

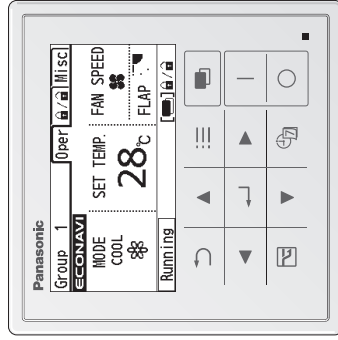

2 Select the item to set.

Press  .


• When the cursor is not visible, press .


3 Set the selected item.

Press  .

(The cursor disappears.)
The unit returns to the standby screen.

3 Perform operation.


Press .

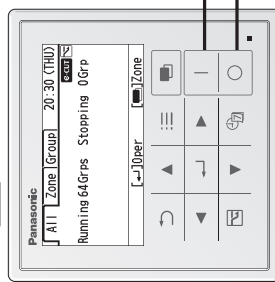

4 Finish operation.


Press .

Start operation.




- The pop-up screen appears. (4 sec.)
- The operation indicator illuminates.


Stop operation.




- The pop-up screen appears. (4 sec.)


* To clear the pop-up screen, press .

Note

- Pressing  after recovery from blackout will resume operation with the contents before blackout has occurred.
- If no operation is performed for a certain period of time, the back light turns off to save electricity. (Press any button for illumination.)

About energy saving

- The energy-saving operation restricts the maximum current value, maximum engine rotation speed, etc., resulting in decreased cooling/heating performance. (If the outdoor unit operates with the restricted value or less, there is no restriction.)
- If all of the indoor units are not equipped with the energy-saving function, pressing the Energy saving  button will display the screen shown on the right.




Note

- Operation modes that cannot be set are not displayed.
- The airflow direction display differs from the actual flap angle.
- If no operation is performed for a certain period of time, the back light turns off to save electricity. (Press any button for illumination.)
- The temperature range that can be set varies depending on the model.
- The temperature range can be changed using this unit.
- Some models do not display the airflow direction.
- For [All] or [Zone], one typical indoor unit setting is displayed as an example. Not all of the indoor units have the same setting as displayed.

19. System Controller (CZ-64ESMC3)

Operation mode (e.g. Cool, Heat, etc.)


1 Press ◀.

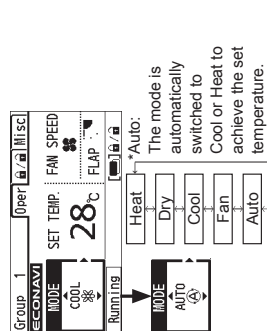

Temperature


1 Press ▲▼.

- Cool/Dry: 18 °C to 30 °C
 - Heat : 16 °C to 30 °C
 - Auto : 17 °C to 27 °C
- * The upper limit temperature of gas heat pump air conditioner is 26 °C.

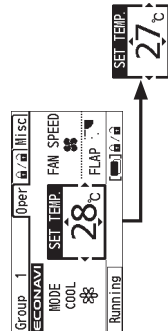

Fan speed

1 Press ▶.

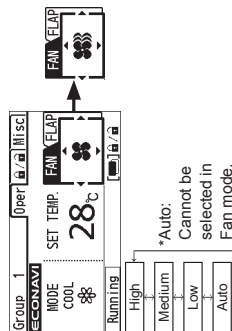

Flap

1 Press ▶ 2 times.

- : Swing
- Pressing ▲▼ during swing can stop the flap at your preferred position.
- 5-level adjustment is possible during HEAT, FAN and AUTO (HEAT) modes. 3-level adjustment is possible during COOL and DRY modes.

ENGLISH

NOTICE

The English text is the original instructions. Other languages are translation of the original instructions.

FRAANÇAIS

NOTIFICATION

Le texte anglais correspond aux instructions d'origine. Les autres langues sont les traductions des instructions d'origine.

ESPAÑOL

AVISO

El texto en inglés constituye las instrucciones originales. El resto de los idiomas son traducciones de las instrucciones originales.

DEUTSCH

HINWEIS

Bei der englischen Textfassung handelt es sich um das Original. Bei den Anleitungen in anderen Sprachen handelt es sich um Übersetzungen des Originals.

ITALIANO

AVVISO

Le istruzioni originali sono il testo in inglese. Le altre lingue sono traduzioni delle istruzioni originali.

NEDERLANDS

OPMERKING

De Engelse tekst zijn de originele instructies. De andere talen zijn vertalingen van de originele instructies.

PORTUGUÉS

AVISO

As instruções foram redigidas originalmente em inglês. As versões noutras línguas são traduções da redacção original.

TÜRKÇE

BİLDİRİM

İngilizce metin orijinal talimatlarıdır. Diğer diller, orijinal talimatların çevirisidir.

POLSKI

UWAGA

Originalnym tekstem instrukcji jest język angielski. Tekst w innych językach jest przekładem tekstu oryginalnego.

РУССКИЙ

УВЕДОМЛЕНИЕ

Английский текст является оригинальной инструкцией. Все остальные языки являются переводом оригинальной инструкции.

УКРАЇНСЬКА

ПРИМІТКА

Мовою оригіналу інструкціїєанглійська. Інструкція всіх інших мов є перекладами з мови оригіналу.

20. Remote Sensor (CZ-CSRC3)

1. Installation Instructions

Panasonic®

Installation Instructions
Remote Sensor

Model No. **CZ-CSRC3**

Safety Precautions

Read before installation

- Read the Installation Instructions carefully to install the unit correctly and safely.
Be sure to read the Safety Precautions in particular before installation.
- After the installation is complete, perform test operation to confirm that no abnormality is present.

WARNING

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

WARNING

- Turn off the circuit breaker of the units before installation.
- Ask your dealer or professionals for installation and electric work.
- This remote sensor shall be installed in accordance with National Wiring Regulations.
- Securely connect and fix the specified cables for wiring.
- Do not allow the connection to be exposed to the external force of the cables.
- Choose an installation location that sufficiently supports the weight of the remote sensor.

NOTICE

The English text is the original instructions.
Other languages are translation of the original instructions.


ENGLISH

Supplied accessories

Wood screw
M3.8 × 16
(2)



Clamper
(1)



- We assume no responsibility for accidents or damages resulting from methods other than those described in the installation instructions or methods without using specified parts.
Malfunctions that occurred due to the unauthorised installation methods are not covered by the product warranty.
- Read the installation instructions supplied with indoor units as well.

CAUTION

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

CAUTION

- Do not use at the following locations.
 - Location where condensation occurs
 - Location where flammable gases, etc. may leak
 - Location where corrosive gases, etc. may leak
 - Location with lots of water or oil droplets (including machine oil)
 - Location where voltage fluctuation frequently occurs
 - Location where there is a machine producing electromagnetic radiation
 - Location where droplets of organic solvents spread
 - Location where acidic or alkaline solutions or special sprays are frequently used
- Do not operate with wet hands.
- Do not wash with water.

20. Remote Sensor (CZ-CSRC3)


Note:

- This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- FCC Caution: To assure continued compliance, follow the attached installation instructions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Specifications

Model No.	CZ-CSRC3
Dimensions	(H) 120 mm × (W) 70 mm × (D) 17 mm
Weight	70 g
Temperature/Humidity range	0 °C to 40 °C / 20 % to 80 % (No condensation) *Indoor use only.
Power Source	DC16 V (supplied from indoor unit)
Number of connected indoor units	Up to 8 units


Dimensions

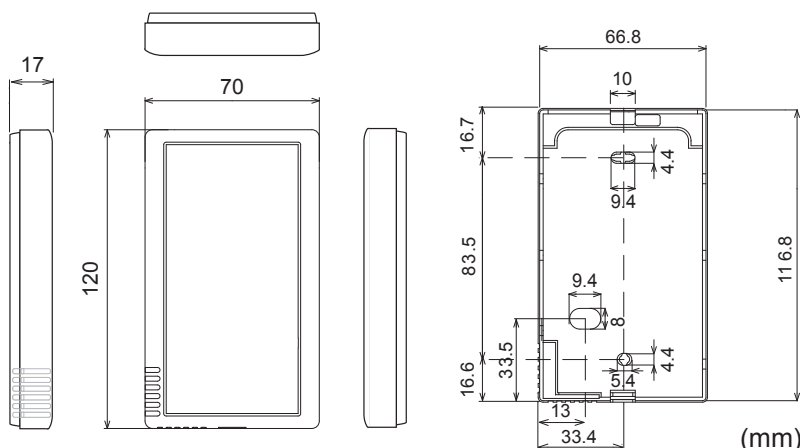

20. Remote Sensor (CZ-CSRC3)


Installation Precautions

Installation location

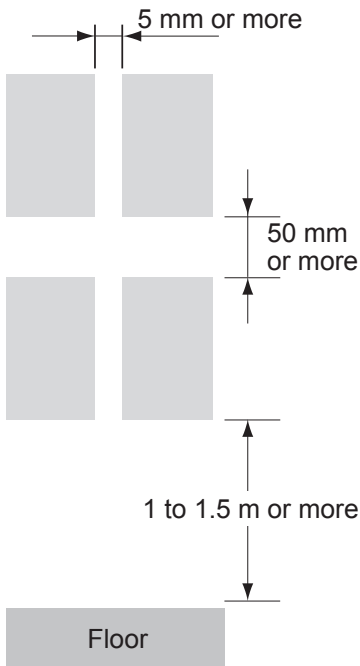

Wiring for the remote sensor

■ Wiring diagram

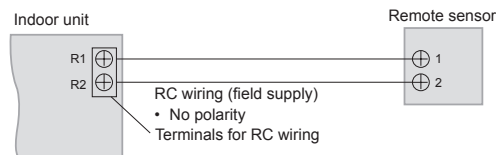

■ Type of wiring

Use cables of 0.5 to 1.25 mm².

Use the field supplied RC wiring with at least 1 mm in thickness of insulation part including the sheath.

Regulations on wire diameters differ from locally to locally.

For field wiring rules, please refer to your LOCAL ELECTRICAL CODES before beginning.

You must ensure that installation complies with relevant rules and regulations.

■ Total wire length: 500 m or less

(The wire length between indoor units should be 200 m or less.)


■ Number of connectable units

Remote controller and remote sensor: Max. 2 (including remote sensor),
Indoor unit: Max. 8

Attention

- Be careful not to connect cables to other terminals of indoor units (e.g. power source wiring terminal). Malfunction may occur.
- Do not bundle together with the power source wiring or store in the same metal tube. Operation error may occur.
- If noise is induced to the unit power supply, attach a noise filter.


*Wiring as shown below is prohibited.

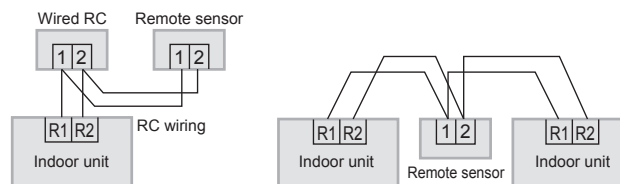


Installation when setting Main/Sub for the remote controller and the remote sensor

■ Using 1 indoor unit

Installation example

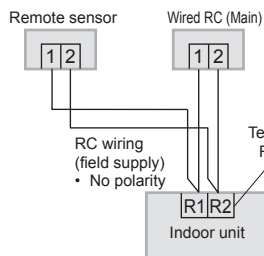

■ Using more than 1 indoor unit

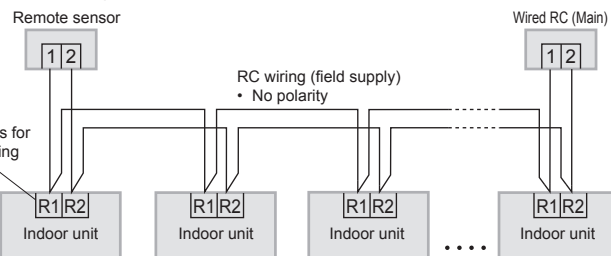

Be sure to set the wired remote controller to [Main].


Note

The remote controller and the remote sensor can be connected to any indoor unit.

20. Remote Sensor (CZ-CSRC3)


Mounting

1 Remove the bottom case.

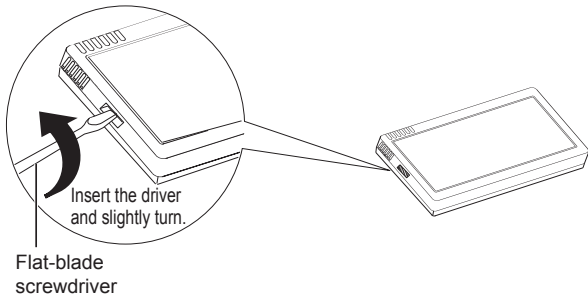

2 Mount to the wall.

Exposed type

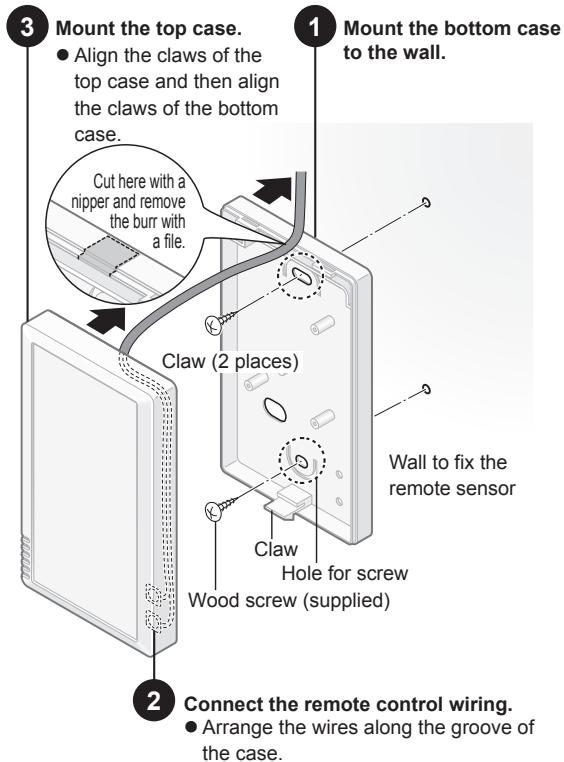


Attention

Mounting the bottom case




- Tighten the screws securely until the screw heads touch the bottom case. (Otherwise, loose screw heads may hit the PCB and cause malfunction when mounting the top case.)
- Do not over-tighten the screws. (The bottom case may be deformed, resulting in fall of the unit.)

Connecting the remote control wiring

- Arrange the wires as shown in the illustration for 2 in step 2, avoiding unnecessary wires being stored in the case. (Caught wires may destroy the PCB.)
- Avoid wires touching parts on the PCB. (Caught wires may destroy the PCB.)

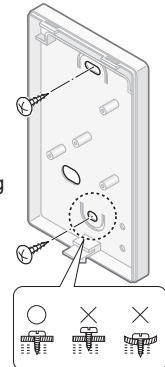


Embedded type

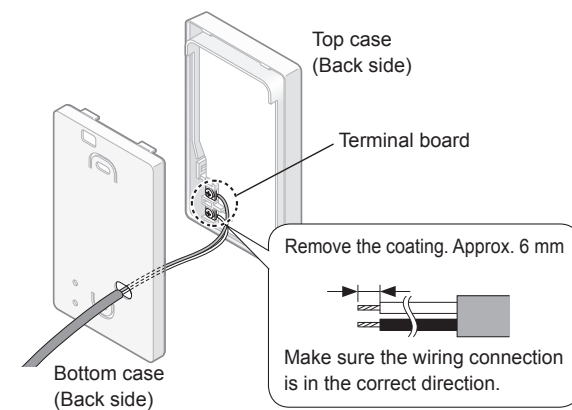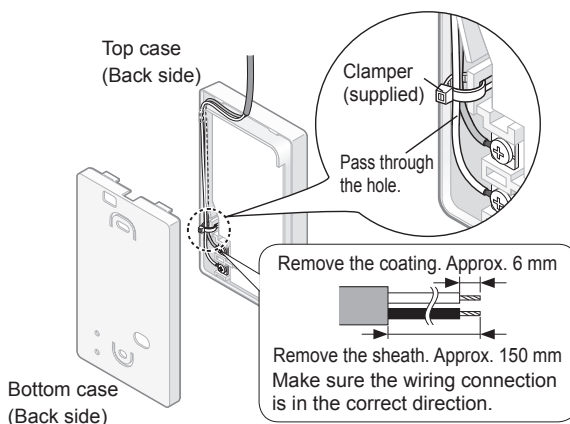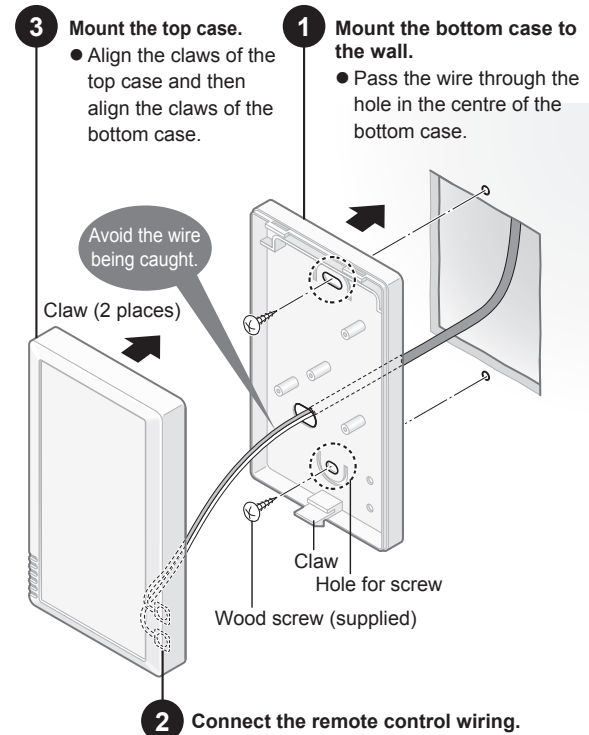

21. Cloud Adaptor (CZ-CFUSCC1)

1. Installation Instructions

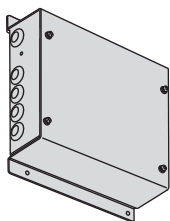

Panasonic®

Installation Instructions Cloud adaptor

Model No. **CZ-CFUSCC1**

Safety Precautions

Please Read Before Starting

This controller must be installed by the sales dealer or installer. These instructions are all you need for most installation sites and maintenance conditions. If you require help for a special problem, contact our sales/service outlet or your certified dealer for additional instructions.

⚠ WARNING This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

⚠ CAUTION This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.


- We assume no responsibility for accidents or damages resulting from methods other than those described in the installation instructions or methods without using specified parts. Malfunctions that occurred due to the unauthorised installation methods are not covered by the product warranty.
- This controller shall be installed in accordance with National Wiring Regulations.
- After the installation is complete, perform test operation to confirm that no abnormality is present.
- Read the installation instructions of devices to be connected as well.
- When relocating or repairing this controller, provide the Installation Instructions to the servicing personnel.

⚠ WARNING

⚡ ELECTRICAL SHOCK CAN CAUSE SEVERE PERSONAL INJURY OR DEATH. ONLY A QUALIFIED, EXPERIENCED ELECTRICIAN SHOULD ATTEMPT TO WIRE THIS SYSTEM.

- Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding can cause **accidental injury or death**.
- This controller is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD). Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown. Earth Leakage Circuit Breaker (ELCB) must be incorporated in the fixed wiring in accordance with the wiring regulations. The Earth Leakage

Circuit Breaker (ELCB) must be an approved 10 A, having a contact separation by 3 mm in all poles.

- Provide a power outlet to be used exclusively for this controller.
- Turn off the circuit breaker of the controllers before installation.
- Do not supply power to the controller until all wiring is completed or reconnected and checked.
- Fix the power supply wiring securely with the clammer so that the power supply terminal board is free of tension (external force) when pulled. Loose connection of the terminal board may occur fire.
- To prevent possible hazards from insulation failure, the controller must be grounded. 
- Select an installation location which is rigid and strong enough to support or hold the controller, and select a location for easy maintenance.
- This product must not be modified or disassembled under any circumstances. Modified or disassembled controller may cause fire, electric shock or injury.
- Do not clean inside the controller by users. Engage authorized dealer or specialist for cleaning.
- Do not operate with wet hands.

⚠ CAUTION

- Ground yourself to discharge static electricity before performing any wiring.
- Do not use the controller at the following locations.
 - Areas where leakage of flammable gas may be expected
 - Places where large amounts of oil mist exist
 - Locations where external air may enter the room directly (This may cause "condensation".)
 - Locations where high-frequency emissions are generated
 - Locations where voltage fluctuation frequently occurs
- Do not wash with water.



Panasonic Corporation
1006 Kadoma, Kadoma City, Osaka, Japan

21. Cloud Adaptor (CZ-CFUSCC1)

CONTENTS



Safety Precautions	1	Basic Wiring Diagram	3
Specifications	2	How to Attach the Ring Pressure Terminal	4
Dimensions (Part Names)	2	Connecting Wiring	4
Caution for Network Connection	2	Connecting to External Equipment	4
Installation Precautions	2	Setting	5
Installation Location	2	Preparation before Setting	5
General Precautions on Wiring	2	Adaptor Updating	6
Mounting	3	Adaptor Setting	7
Mounting Position	3	Air Conditioner Setting	8
How to Mount (Control Box)	3	Pulse Meter Setting	9
Wiring	3	Network Setting	10
Power Supply Wiring	3	Preparation before Operation	10
Inter-Unit Control Wiring	3	Test Operation	11
External I/O Wiring	3		
LAN Cable	3		

Specifications

Model No.	CZ-CFUSCC1
Dimensions (mm)	<H> 255 x <W> 275 x <D> 80
Weight	1.9 kg
Temperature/ Humidity range	0 °C to 40 °C / 20 % to 80 % (no condensation)
Rated voltage/ Rated frequency	Single phase 100-240 V ~ 50/60 Hz
Power consumption	Max. 15 W
Number of connectable units	Indoor unit - Up to 64 units per link* Outdoor unit - Up to 30 units per link


*: The number of indoor units includes the Interface Adaptor.

Supplied accessories

Installation Instructions (1)		License List Disc (1)	
----------------------------------	---	--------------------------	---

* Wiring are not included (field supplied item).

Dimensions (Part Names)

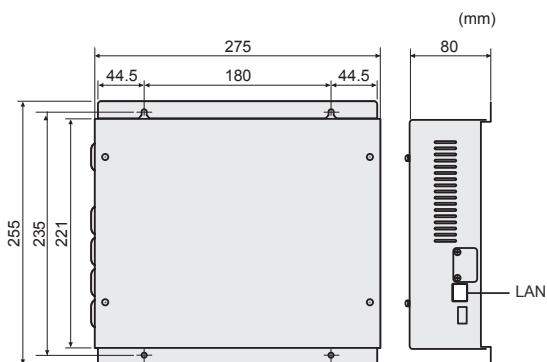

Caution for Network Connection

When connecting to Internet, implement security measures against illegal access from outside. For detailed connection and setup method, consult the network administrator.

Installation Precautions



■ Installation Location



- Avoid the following locations for installation.
 - Under direct sunlight
 - Location near heat source
 - Location where the controller will be splashed with water or affected by dampness or humidity
 - Uneven surface
 - Location that is subject to excessive vibration or physical impacts. (Fixing screws may come off, and the controller may drop.)
- Install the controller away from any sources of electrical noise.
- Install the controller at a location with suitable temperature and humidity for using.

■ General Precautions on Wiring

- Regulations on wire diameters differ from locality to locality. For field wiring rules, please refer to your LOCAL ELECTRICAL CODES before beginning. You must ensure that installation complies with all relevant rules and regulations.
- Use the field supplied wiring with at least 1 mm in thickness of insulation part including the sheath.
- Connect all wiring tightly to prevent the terminal board from loosening when the wiring connection part is pulled by an external force. (Otherwise, fire or overheating may occur.)
- Do not bury the wiring in the ground.
- Do not store the power supply wiring and other wiring in the same metal tube or bundle them together. (An operational error from noise may occur.)

Symbols on the controller

-  This symbol refers to "Protective earth".
-  This symbol refers to "Caution of Electrostatic".

-  This symbol refers to "ON (power)".
-  This symbol refers to "OFF (power)".

21. Cloud Adaptor (CZ-CFUSCC1)


Mounting

■ Mounting Position

Secure space as shown below when mounting 2 or more of this controller or mounting other devices side by side.


Up, down, left and right direction:
100 mm or more

Front: 50 mm or more

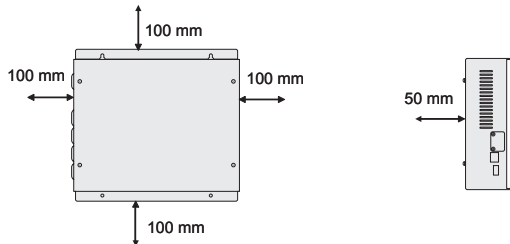

■ How to Mount (Control Box)

1. Attach the controller to the control box so that the wiring can be taken out from the left side. (See the illustration below.) (Screws (field supply): 4)
 - Tighten the screw securely.
2. Remove the upper cover. (Cover-fixing screws: 4)
 - After the connection and setting (pages 4 to 10) are complete, attach the upper cover. (Cover-fixing screws: 4)

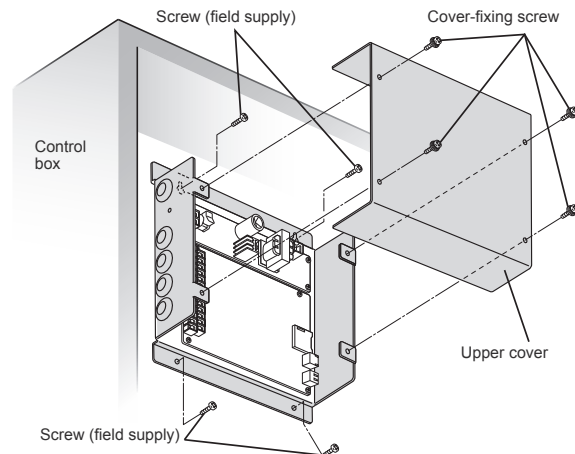

Wiring

■ Power Supply Wiring

- Be sure to use a dedicated line for power source.
- Be sure to earth this controller.
- Do not connect the earth wiring to those of gas pipe, water pipe, lighting rod, telephone, etc.
- Type of wiring
 - Use a flexible wiring of 2 mm² (Recommended).
 - Use the standard power supply wiring for Europe (such as H05RN-F or H07RN-F which conform to CENELEC (HAR) rating specifications) or use the wiring based on IEC standard (60245 IEC57, 60245 IEC66).
- Total Wire Length
30 m or less

■ Inter-Unit Control Wiring

- Type of wiring
 - Use a flexible shield wiring of 0.5 to 2 mm².
- Total Wire Length
1000 m or less
- Number of connectable units and devices
(Up to total of 100 units and devices can be connected.)

Indoor unit	Up to 64 units per link *
Outdoor unit	Up to 30 units per link
Central control device	Up to 10 units

*: The number of indoor units includes the Interface Adaptor.


■ External I/O Wiring

- Type of wiring
 - Use a flexible wiring of 0.5 to 2 mm².
- Attention**
 - When using the controller at a location susceptible to noise, use a shield wiring.
- Total Wire Length
20 m or less

■ LAN Cable

- Type of wiring
 - Category 5 or above straight cable
- Total Wire Length
100 m or less

■ Basic Wiring Diagram

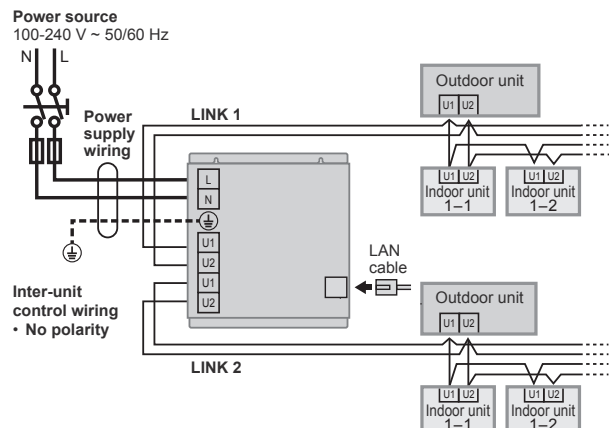


21. Cloud Adaptor (CZ-CFUSCC1)

Wiring (continued)

Before connecting the wiring, be sure to turn the circuit breaker off. After all wiring arrangements are complete, turn the circuit breaker on. If the power supply wiring is mistakenly connected to a terminal board other than the power supply terminal board, the devices to be connected to this controller or this controller will malfunction. After connecting the wiring, confirm that the power supply wiring is properly connected.


How to Attach the Ring Pressure Terminal

- For power supply wiring
 - Process the end of each wiring, and attach the ring pressure terminal (field supplied item).




- For shield wiring
 - Process the end of the each wiring, and attach the ring pressure terminal (field supplied item).


① Remove wiring coat.



② Cover with the tape.




③ Attach ring pressure terminal.




Connecting Wiring

- When connecting external equipment, refer to the "Connecting to external equipment" section below.

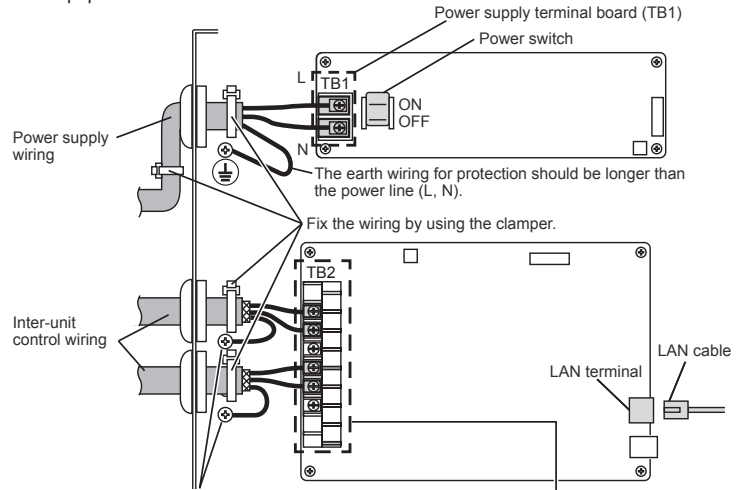


Use this screw when connecting the shield for the inter-unit control wiring to ground. (FG*)
*: Functional Ground

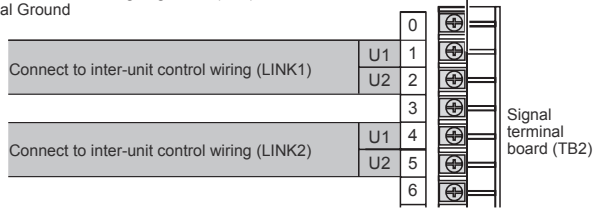

Attention

- Ground the shield on both sides of shield wiring, otherwise an operation error from noise may occur.

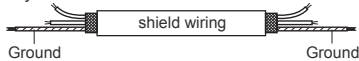


- Do not run the inter-unit control wiring through the same conduit as the power supply wiring, or run close to the power supply wiring (maintain at least 30 cm separation).
- Use different inter-unit control wiring and power supply wiring so they can be differentiated visually.

Connecting to External Equipment

- Outputs of Pulse meter (Gas meter, Power meter and Heat meter) can be input to signal terminal board.
- Keep the external I/O wiring lengths of 20 meters or less. If a longer length is needed, use a relay.

Controller side		External equipment side		
Condition	Terminal name	Terminal	Circuit example	Condition
Non-voltage contact "a" Pulse • Contact allowable voltage : DC5 V±10 % • Contact allowable current : Max. 10 mA	Common (COM)	7	COM	• Pulse width : 30 msec or more / 100 msec or more • Pulse interval : 1 sec or more
	Pulse meter input 1 (Pi1)	8		
	Pulse meter input 2 (Pi2)	9		
	Pulse meter input 3 (Pi3)	10		

Signal terminal board (TB2)

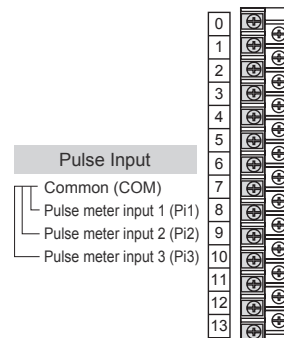


21. Cloud Adaptor (CZ-CFUSCC1)


Setting

Preparation before Setting


- 1** Confirm the power is turned off.

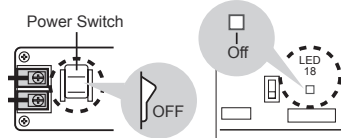

- 2** Using the LAN cable, connect the PC for maintenance directly to the cloud adaptor.

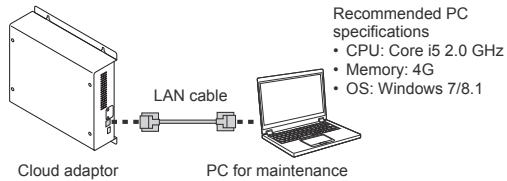


- 3** Using the DIP switch, set the mode of the cloud adaptor to the maintenance mode.

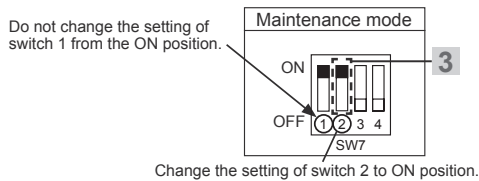

- 4** Turn the power on.

- Confirm that the Orange LED (LED 17) is lighting, Green LED (LED 16) is blinking at a slow speed, and the Green LED (LED 18) is lighting.

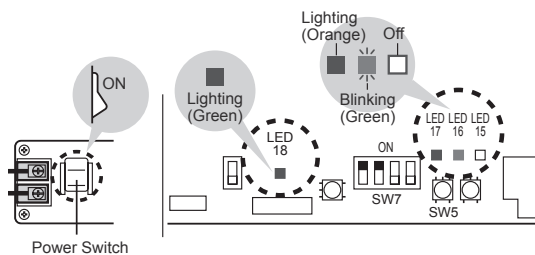

- If the Orange LED (LED 17) does not light and the Green LED (LED 16) does not blink at a slow speed. Refer to the "Test Operation" section (page 11).

- 5** Start up the PC, and set if the network settings as follows.

IP address	192. 168. 1. 100
Subnet mask	255. 255. 255. 0
Default gateway	192. 168. 1. 254

- 6** Enter the following URL in the Web browser, and access the cloud adaptor. <http://192.168.1.1/>

Recommended Web browser specifications

- Internet Explorer (IE) 11

- The login screen appears.



- If the login screen does not appear

Check if the LAN port LED on the PC is blinking.

Not blinking

→Connect the LAN cable correctly.


Blinking

→Check the settings in step 5.

- 7** Enter the user name and password shown below.

- user : ca_user
- password : KYJN2015ca

- 8** Press .

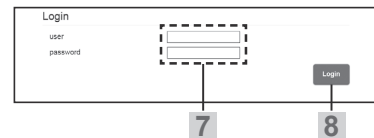


Note

- If you fail to login 10 consecutive times, login operation will be disabled for 30 minutes.
- If no operation is performed for 30 minutes, the login screen will appear at the next operation.

- 9** Enter the current (old) password and new password (twice).

- Change the password to the one actually used.

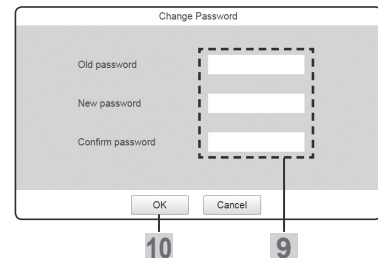

- 10** Press .

- To cancel


Press .

21. Cloud Adaptor (CZ-CFUSCC1)

Setting (continued)

Indoor unit (I/D) and Outdoor (O/D) unit are included in Air conditioner (A/C unit).


The setting contents described on pages 6 to 10 can be set on the main menu.

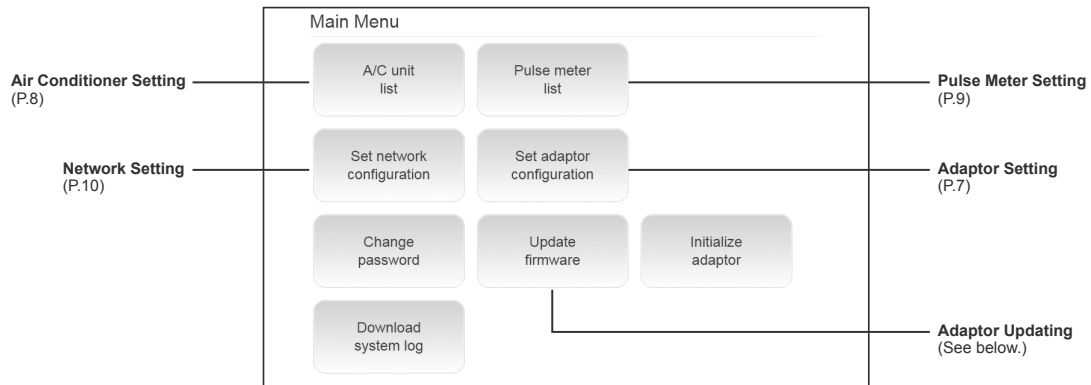

Adaptor Updating


If the latest firmware of the cloud adaptor is available, store the FW (firmware) file on the PC for maintenance and update the cloud adaptor.

1 Press  .

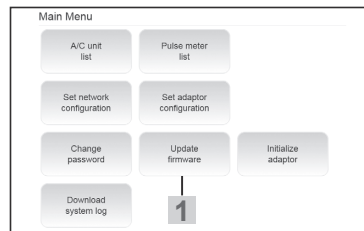

2 Press  .

- Select the FW (firmware) file on the PC using the file selection dialogue. Its path is displayed in the text box.

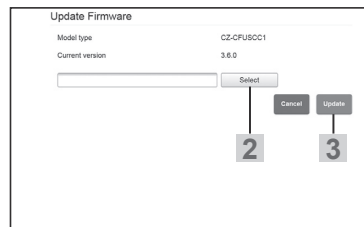


3 Press  .

- (The adaptor updating is started.)
- To cancel it during update, press [Cancel] on the progress screen.
- Approx. 2 minutes after completing update, the login screen is automatically displayed. Log in again to move to the next step.

21. Cloud Adaptor (CZ-CFUSCC1)

Adaptor Setting

1 Press .

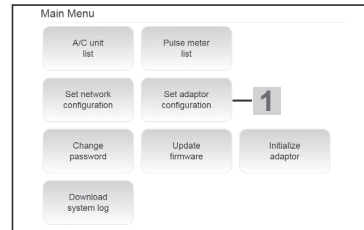


2 Enter the time for the cloud adaptor to determine the communication with the air conditioner has failed.
(Possible input range: 5 to 99 minutes)

3 Enter [Communication interval with A/C unit].
(Possible input range: 5 to 99 minutes)

4 Select either [enable] or [disable] for [Link No.1] and [Link No.2] respectively.


5 Select [Minimum pulse input detection time setting].
(30ms, 100ms)


6 Select [Timezone].
(1-hour increments: -12:00, ..., +14:00)

7 Press .


(The adaptor setting is stored.)

■ **To cancel**

- Press .
- If the setting items are changed, press [Yes] to cancel on the confirmation screen and return to the main screen.

8 Press .

(The main menu is displayed.)

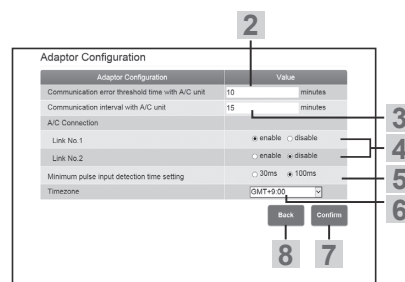

21. Cloud Adaptor (CZ-CFUSCC1)

Setting (continued)

Air Conditioner Setting

1 Press .

When "Now initializing. Please wait." is displayed, wait for the A/C unit list to be displayed.

2 Press .

(Air conditioners connected to the cloud adaptor are detected, and the A/C unit list is updated.)

- The following message is displayed if abnormality is found on the air conditioner.

Confirm the message, and press [Close].

- Scan the A/C units again after fixing the abnormality.

Message	Meaning
ODU missing	The outdoor unit for refrigerant system of the indoor unit is missing.
ODU main unit missing	The outdoor sub unit without the main unit is found.
IDU main unit missing	The indoor sub unit without the main unit is found.
Central address duplicate	Central address is duplicated.
Scan Time Out Error	A time-out occurred while scanning.

3 Check if the connected indoor units are all displayed, and confirm that the number of the connected outdoor units and the number of detected units correspond with each other.

- If some of the indoor units are not displayed/unexpected indoor units are displayed.

Check if wiring is properly done, or the address setting for air conditioners is correct.


→After correction, redo from step 2.

4 Enter the central address.

- To assign manually

Select the central address text box of the indoor unit on the [A/C Unit List] screen, and enter it.

- To assign automatically

Press  .

(Values that have been unused within the same link no. are input in the blank field in ascending order.)

5 Press .


(The input central address is applied to all the indoor units.)

Attention

- Be sure to set the central address for the indoor unit to control and monitor using the cloud adaptor.


Note

- If the text box is blank or any duplication is present between main indoor units, an alarm is displayed.

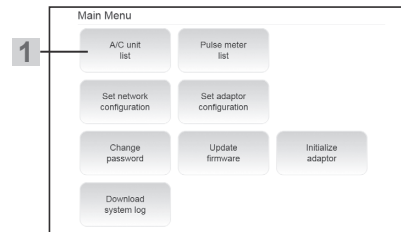

1

If the red characters are displayed, confirm and adjust the connections/settings of the air conditioner.

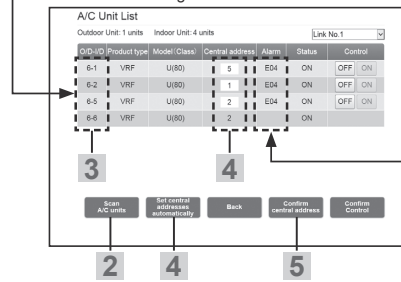

2

4

5

An alarm that has occurred on the indoor unit is displayed. (This screen is updated every 10 seconds.) If the alarm code is related to the configuration error, check and fix the connections/settings of the air conditioners.

Air Conditioner Test Operation


1 Check if and properly work.

2 Press .

- Check if pressing the button switches the ON/OFF display in the control field of the corresponding indoor units and the ON/OFF operation of the actual indoor units.
- Check all the indoor units for proper operation.
- Check the status while communicating over a radio device with the PC operator.

3 Press .

- The main menu is displayed.
- If [Confirm central address] button is not pressed after changing the central address, a confirmation screen is displayed. →Selecting [YES] discards the changed contents.

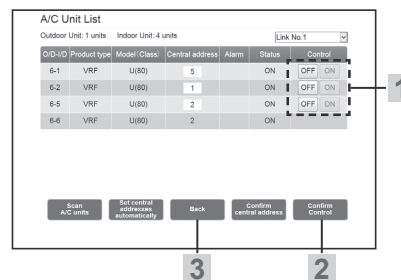

1

3


2

21. Cloud Adaptor (CZ-CFUSCC1)

Pulse Meter Setting

1 Press **Pulse meter list**.

(The ports that can be set are displayed.)

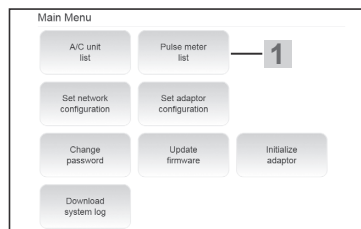

2 Set [Meter type].


3 Set [Pulse unit value (/Pulse)].

4 Repeat steps 2 to 3 for all of the ports.

5 Press **Confirm**.

(The changed settings are enabled. (Setting complete))

- If **Confirm** is not pressed after changing the pulse meter a confirmation screen is displayed.
→Selecting [YES] discards the changed contents.

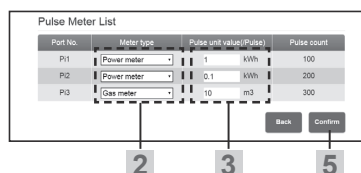

Attention

- Please take note of the input contents displayed when the confirm button is pressed.

Pulse Meter Test Operation

1 Remove one end of the wiring connected to the pulse meter.

(Do not remove the other end connected to the cloud adaptor.)

2 Short-circuit at the pulse meter side using wire, etc., and check if the number of pulses of the corresponding port increases each time it is short-circuited.


Note

- While short-circuiting, communicate over a radio device with the PC operator.

3 Press **Back**.

(The main menu is displayed.)

4 Restore one end of the wiring connected to the pulse meter.

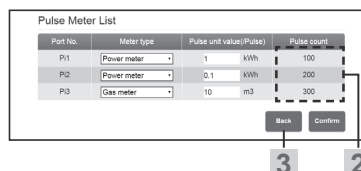


21. Cloud Adaptor (CZ-CFUSCC1)


Setting (continued)

Network Setting


- 1** Press **Set network configuration**.
- Make the setting according to the cloud adaptor setting instructions.

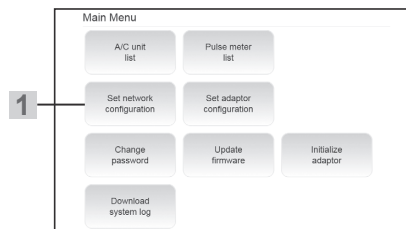

- 2** ■ **When DHCP is used in the network environment**
Add a check mark for [DHCP Enabled].
- **When other than the above**
Remove the check mark for [DHCP Enabled], and enter IP address, Subnet mask and Default gateway of the cloud adaptor.

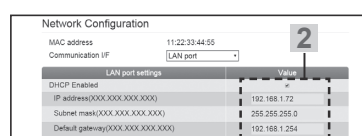

- 3** ■ **When the DNS server information can be automatically obtained in the current environment**
Add a check mark for [Obtain DNS server address automatically].
- **When other than the above**
Remove the check mark for [Obtain DNS server address automatically], and enter the IP address of DNS server 1 and DNS server 2.

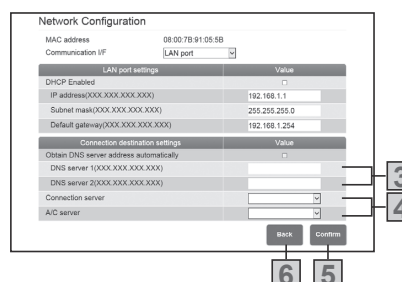

- 4** Select [Connection server] and [A/C server].

■ **To cancel**

Press **Back**.


- If the setting items are changed, press [Yes] to cancel on the confirmation screen and return to the main screen.

- 5** Press **[Confirm]**.
(The setting items are stored.)


- 6** Press **Back**.
(The main menu is displayed.)

Preparation before Operation


- 1** Turn off the power switch while the main menu is displayed.

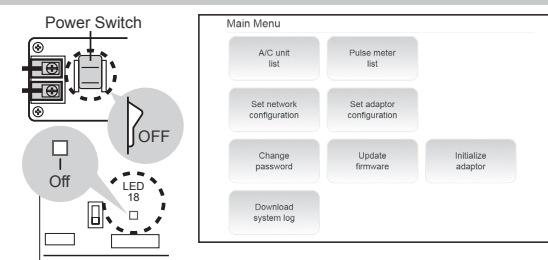

- 2** Using the DIP switch, set the mode of the cloud adaptor to the operation mode.

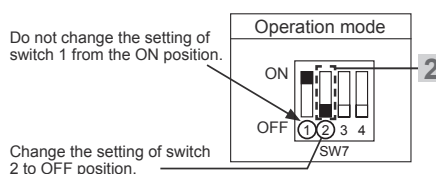


- 3** Remove the LAN cable from the cloud adaptor, and connect the other to the network.

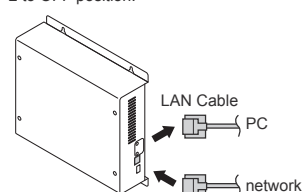

21. Cloud Adaptor (CZ-CFUSCC1)

Test Operation


- 1** Confirm that the DIP switch is in the operation mode.

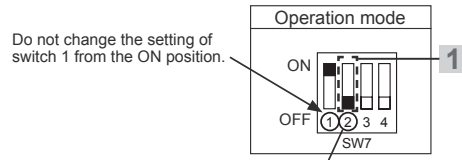

- 2** Turn the power on.
 • Make sure at least 30 seconds have passed after power-off. Then, turn the power on.




When the green LED (LED16) changes from blinking to lighting, the set up procedures are complete.

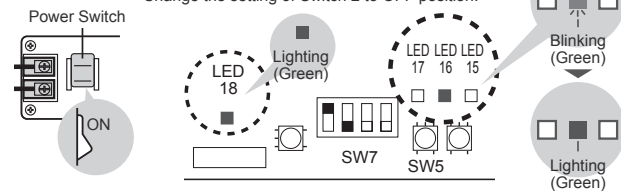

Self-diagnostics table and detected contents

- Blinking or lighting pattern table (LED 15 to 17)
 Check the table below and Service Manual.

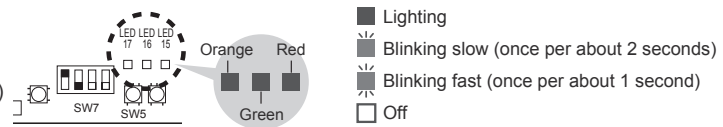

LED	Status and Solution	LED	Status and Solution
	The cloud adaptor is in the maintenance mode. (page 10) →After maintenance, change it to the operation mode.		Updating the firmware. →Wait until the firmware is completely updated.
	Communication failure (Both Link 1 and 2) →Check if the inter-unit control wiring between the air conditioners and the cloud adaptor is correct. (Both Link 1 and 2)		Initializing. →Wait until the initialization is completed. When the initialization is not completed by 40 minutes after connecting the network, contact our sales/service outlet or your certified dealer for additional instructions.
	Communication failure (Link 1 only) →Check if the inter-unit control wiring between the air conditioners and the cloud adaptor is correct. (Link 1 only)		Communication is prohibited. →When the maintenance work is done for air conditioners, press the communication prohibition button (SW5).
	Communication failure (Link 2 only) →Check if the inter-unit control wiring between the air conditioners and the cloud adaptor is correct. (Link 2 only)		The authentication information cannot be updated. →Contact our sales/service outlet or your certified dealer for additional instructions., and check if the authentication information has been registered.
	Network connection failure →Restart the cloud adaptor in the maintenance mode, and check if the network settings are correct. (page 10)		The service has not started yet. →If this blinking pattern is observed even after the scheduled service start date, contact our sales/service outlet or your certified dealer for additional instructions.
	Internal failure has occurred. →Turn the cloud adaptor off, and contact our sales/service outlet or your certified dealer for additional instructions.		Configuration error of the air conditioner or the cloud adaptor →Check the following, and scan the A/C units again. • Are the number of the indoor/outdoor units, address, main-sub relationship, and the central address correct? • Is the adaptor configuration correct?
	Memory card failure →Turn the cloud adaptor off, and contact our sales/service outlet or your certified dealer for additional instructions.		

- 3** Attach the upper cover to the cloud adaptor. (page 3)

21. Cloud Adaptor (CZ-CFUSCC1)

Starting Panasonic AC Smart Cloud


Launch your Web browser and enter the specified URL to display the login screen.

(<https://ac.smartcloud.panasonic.com/>)

You must enter a password to log in to Panasonic AC Smart Cloud.

Enter a user ID and password. If the language in the Language field is incorrect, change the language.

If you forget your password, contact our sales/service outlet or your certified dealer.

(1)	User ID	Enter a user ID.
(2)	Password	Enter a password. If the password is entered incorrectly 10 times, the Password entry field is locked for one hour, and password cannot be entered. The lock is removed after one hour.
(3)	Language	Select a language. (English, Italian, German, French, or Spanish)
(4)		After entering the user ID and password, click this button to log in.
(5)	Change Password	Change the password. The effective period for a password is 60 days. It is necessary to change the password periodically.

This product incorporates the following software:

(1) the software developed independently by or for Panasonic Corporation, (2) the software owned by third party and licensed to Panasonic Corporation, (3) the software licensed under the GNU General Public License, Version 2.0 (GPL V2.0), (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL V2.1), and/or (5) open source software other than the software licensed under the GPL V2.0 and/or LGPL V2.1.

The software categorized as (3) - (5) are distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. Please refer to the detailed terms and conditions thereof shown in the attached License List (License List Disc).

At least three (3) years from delivery of this product, Panasonic will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL V2.0, LGPL V2.1 or the other licenses with the obligation to do so, as well as the respective copyright notice thereof.

For details of the source code, refer to the supplied License List Disc.

Contents**4. 2WAY SYSTEM UNIT SPECIFICATIONS**

1. Outdoor Unit	4-2
1-1. Specifications	4-2
1-2. Dimensional Data	4-17
1-3. Multiple Unit Installation Example	4-20
1-4. Position of Center of Gravity	4-21
1-5. Refrigerant Flow Diagram	4-23
1-6. Noise Criterion Curves	4-26

1. Outdoor Unit

1-1. Specifications

Unit specifications (1)

Outdoor Unit		MODEL	Space saving combination			Space saving combination			Space saving combination		
			U-8ME2E8			U-10ME2E8			U-12ME2E8		
Performance test condition			EN14511			EN14511			EN14511		
Power supply		ø,Hz	3ø 50Hz			3ø 50Hz			3ø 50Hz		
		V	380	400	415	380	400	415	380	400	415
C O O L I N G	Capacity	kW	22.4	22.4	22.4	28.0	28.0	28.0	33.5	33.5	33.5
		BTU/h	76500	76500	76500	95600	95600	95600	114300	114300	114300
	Current	A	7.79	7.40	7.14	10.7	10.2	9.80	13.7	13.0	12.5
	Input power	W	4.77k	4.77k	4.77k	6.41k	6.41k	6.41k	8.47k	8.47k	8.47k
	EER	(W/W)	4.70	4.70	4.70	4.37	4.37	4.37	3.96	3.96	3.96
	Power factor	%	93	93	93	91	91	91	94	94	94
N O I S E	Noise outdoor	dB-A (Normal)	54.0			56.0			59.0		
		Power Level dB (Normal)	75.0			77.0			80.0		
		dB-A (Silent)	51.0			53.0			56.0		
H E A T I N G	Capacity	kW	25.0	25.0	25.0	31.5	31.5	31.5	37.5	37.5	37.5
		BTU/h	85300	85300	85300	107500	107500	107500	128000	128000	128000
	Current	A	7.96	7.56	7.29	11.10	10.5	10.1	12.9	12.3	11.8
	Input power	W	4.87k	4.87k	4.87k	6.62k	6.62k	6.62k	7.92k	7.92k	7.92k
	COP	(W / W)	5.13	5.13	5.13	4.76	4.76	4.76	4.73	4.73	4.73
Power factor	%	93	93	93	91	91	91	93	93	93	
Max Current (A) / Max Input power (W)			10.2 / 6.24k	10.2 / 6.57k	10.2 / 6.82k	14.5 / 8.68k	14.5 / 9.14k	14.5 / 9.48k	18.2 / 11.3k	18.2 / 11.9k	18.2 / 12.3k
Starting current (A)			1	1	1	1	1	1	1	1	1
Time Delay fuse max size (A)			20			25			30		
Fan motor output		W / Pole number	750 / 8			750 / 8			750 / 8		
External static pressure		Pa	0 ~ 80			0 ~ 80			0 ~ 80		
Air flow		m ³ /min	224			224			232		
Refrigerant type / amount g			R410A / 5.6k			R410A / 5.6k			R410A / 8.3k		
P R O D U C T	dimension	Height mm	1842			1842			1842		
		Width mm	770			770			1180		
		Depth mm	1000			1000			1000		
P A C K I N G	dimension	Height mm	1977			1977			1977		
		Width mm	870			870			1280		
		Depth mm	1100			1100			1100		
W E I G H T	(NET) kg	210			210			270			
	(GROSS) kg	225			225			285			
Layers limit			1			1			1		
O P E R A T I O N	condition	Cool (DBT)	-10°C ~ 52°C			-10°C ~ 52°C			-10°C ~ 52°C		
		Heat (WBST)	-25°C ~ 18°C			-25°C ~ 18°C			-25°C ~ 18°C		
M A X. W O R K I N G P R E S S U R E	High side bar (MPa)		38.0 (3.80)			38.0 (3.80)			38.0 (3.80)		
		Low side bar (MPa)	31.1 (3.11)			31.1 (3.11)			31.1 (3.11)		
P I P I N G	Pipe diameter mm (inch)	(Under 90m for ultimate Indoor unit.)	(Liquid) 9.52(3/8) (Gas) 19.05(3/4)			(Liquid) 9.52(3/8) (Gas) 22.22(7/8)			(Liquid) 12.7(1/2) (Gas) 25.4(1)		
		(Over 90m for ultimate Indoor unit.) *1	(Liquid) 12.7(1/2) (Gas) 22.22(7/8)			(Liquid) 12.7(1/2) (Gas) 25.4(1)			(Liquid) 15.88(5/8) (Gas) 28.58(1-1/8)		
	Balance pipe mm (inch)	6.35(1/4)			6.35(1/4)			6.35(1/4)			
	Connecting method	flared(Liquid) , brazing(Gas) flared(Balance)			flared(Liquid) , brazing(Gas) flared(Balance)			flared(Liquid) , brazing(Gas) flared(Balance)			
	Max tubing length m	7.5	~	200	7.5	~	200	7.5	~	200	
	Total Max tubing length m	7.5	~	1000	7.5	~	1000	7.5	~	1000	
	Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m	50 / 40			50 / 40			50 / 40			
	Max connectable indoor units pcs.	13			16			19			
Max allowable indoor/outdoor capacity ratio %			50 ~ 130 *2			50 ~ 130 *2			50 ~ 130 *2		

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (2)

Outdoor Unit		MODEL	Space saving combination			Space saving combination		
			U-14ME2E8			U-16ME2E8		
Performance test condition		EN14511						
Power supply		ø,Hz	3ø 50Hz			3ø 50Hz		
		V	380	400	415	380	400	415
C O O L I N G	Capacity	kW	40.0	40.0	40.0	45.0	45.0	45.0
		BTU/h	136500	136500	136500	153600	153600	153600
	Current	A	17.4	16.5	15.9	21.1	20.1	19.4
	Input power	W	10.3k	10.3k	10.3k	12.8k	12.8k	12.8k
	EER	(W/W)	3.88	3.88	3.88	3.52	3.52	3.52
	Power factor	%	90	90	90	92	92	92
N O I S E	Noise outdoor	dB-A (Normal)	60.0			61.0		
		Power Level dB (Normal)	81.0			82.0		
		dB-A (Silent)	57.0			58.0		
H E A T I N G	Capacity	kW	45.0	45.0	45.0	50.0	50.0	50.0
		BTU/h	153600	153600	153600	170600	170600	170600
	Current	A	16.6	15.8	15.2	18.9	17.9	17.3
	Input power	W	9.86k	9.86k	9.86k	11.3k	11.3k	11.3k
	COP	(W / W)	4.56	4.56	4.56	4.42	4.42	4.42
	Power factor	%	90	90	90	91	91	91
Max Current (A) / Max Input power (W)			23.4 / 13.9k	23.4 / 14.6k	23.4 / 15.1k	28.5 / 17.3k	28.5 / 18.2k	28.5 / 18.8k
Starting current (A)			2	2	2	2	2	2
Time Delay fuse max size (A)			35			40		
Fan motor output	W / Pole number		750 / 8			750 / 8		
External static pressure		Pa	0 ~ 80			0 ~ 80		
Air flow		m ³ /min	232			232		
Refrigerant type / amount g			R410A / 8.3k			R410A / 8.3k		
P R O D U C T	dimension	Height mm	1842			1842		
		Width mm	1180			1180		
		Depth mm	1000			1000		
P A C K I N G	dimension	Height mm	1977			1977		
		Width mm	1280			1280		
		Depth mm	1100			1100		
W E I G H T	(NET) kg		315			315		
	(GROSS) kg		330			330		
Layers limit			1			1		
O P E R A T I O N	condition	Cool (DBT)	-10°C ~ 52°C			-10°C ~ 52°C		
		Heat (WBST)	-25°C ~ 18°C			-25°C ~ 18°C		
M A X. W O R K I N G P R E S S U R E	High side bar (MPa)		38.0 (3.80)			38.0 (3.80)		
	Low side bar (MPa)		31.1 (3.11)			31.1 (3.11)		
P I P I N G	Pipe diameter mm (inch)		(Liquid) 12.7(1/2)			(Liquid) 12.7(1/2)		
	(Under 90m for ultimate Indoor unit.)		(Gas) 25.4(1)			(Gas) 28.58(1-1/8)		
	Pipe diameter mm (inch) *1		(Liquid) 15.88(5/8)			(Liquid) 15.88(5/8)		
	(Over 90m for ultimate Indoor unit.)		(Gas) 28.58(1-1/8)			(Gas) 31.75(1-1/4)		
	Balance pipe mm (inch)		6.35(1/4)			6.35(1/4)		
	Connecting method		flared(Liquid) , brazing(Gas)			flared(Liquid) , brazing(Gas)		
			flared(Balance)			flared(Balance)		
	Max tubing length m		7.5	~	200	7.5	~	200
Total Max tubing length m		7.5	~	1000	7.5	~	1000	
Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m			50 / 40			50 / 40		
Max connectable indoor units pcs.			23			26		
Max allowable indoor/outdoor capacity ratio %			50 ~ 130 *2			50 ~ 130 *2		

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (3)

Outdoor Unit		MODEL	Space saving combination			Space saving combination		
			U-18ME2E8			U-20ME2E8		
Performance test condition		EN14511						
Power supply		ø,Hz	3ø 50Hz			3ø 50Hz		
		V	380	400	415	380	400	415
C O O L I N G	Capacity	kW	50.0	50.0	50.0	56.0	56.0	56.0
		BTU/h	170600	170600	170600	191100	191100	191100
	Current	A	23.2	22.0	21.2	26.7	25.4	24.5
	Input power	W	14.2k	14.2k	14.2k	16.7k	16.7k	16.7k
	EER	(W/W)	3.52	3.52	3.52	3.35	3.35	3.35
	Power factor	%	93	93	93	95	95	95
N O I S E	Noise outdoor	dB-A (Normal)	59.0			60.0		
		Power Level dB (Normal)	80.0			81.0		
		dB-A (Silent)	56.0			57.0		
H E A T I N G	Capacity	kW	56.0	56.0	56.0	63.0	63.0	63.0
		BTU/h	191100	191100	191100	215000	215000	215000
	Current	A	21.1	20.1	19.4	25.9	24.6	23.7
	Input power	W	12.8k	12.8k	12.8k	16.0k	16.0k	16.0k
	COP	(W / W)	4.38	4.38	4.38	3.94	3.94	3.94
	Power factor	%	92	92	92	94	94	94
Max Current (A) / Max Input power (W)			31.5 / 19.3k	31.5 / 20.3k	31.5 / 21.1k	36.4 / 22.8k	36.4 / 24.0k	36.4 / 24.9k
Starting current (A)			2	2	2	2	2	2
Time Delay fuse max size (A)			50			60		
Fan motor output	W / Pole number		750×2 / 8			750×2 / 8		
External static pressure		Pa	0 ~ 80			0 ~ 80		
Air flow		m ³ / min	405			405		
Refrigerant type / amount g			R410A / 9.5k			R410A / 9.5k		
P r o d u c t d i m e n s i o n	Product dimension	Height mm	1842			1842		
		Width mm	1540			1540		
		Depth mm	1000			1000		
P a c k i n g d i m e n s i o n	Packing dimension	Height mm	1977			1977		
		Width mm	1640			1640		
		Depth mm	1100			1100		
W e i g h t	(NET) kg		375			375		
	(GROSS) kg		395			395		
Layers limit			1			1		
O p e r a t i o n c o n d i t i o n (O u t d o o r)	Cool (DBT)		-10°C ~ 52°C			-10°C ~ 52°C		
	Heat (WBT)		-25°C ~ 18°C			-25°C ~ 18°C		
M A X. W O R K I N G P R E S S U R E	High side bar (MPa)		38.0 (3.80)			38.0 (3.80)		
	Low side bar (MPa)		31.1 (3.11)			31.1 (3.11)		
P I P I N G	Pipe diameter mm (inch) (Under 90m for ultimate Indoor unit.)		(Liquid) 15.88(5/8) (Gas) 28.58(1-1/8)			(Liquid) 15.88(5/8) (Gas) 28.58(1-1/8)		
	Pipe diameter mm (inch) *1 (Over 90m for ultimate Indoor unit.)		(Liquid) 19.05(3/4) (Gas) 31.75(1-1/4)			(Liquid) 19.05(3/4) (Gas) 31.75(1-1/4)		
	Balance pipe mm (inch)		6.35(1/4)			6.35(1/4)		
	Connecting method		flared(Liquid) , brazing(Gas) flared(Balance)			flared(Liquid) , brazing(Gas) flared(Balance)		
	Max tubing length m		7.5	~	200	7.5	~	200
	Total Max tubing length m		7.5	~	1000	7.5	~	1000
Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m			50 / 40			50 / 40		
Max connectable indoor units pcs.			29			33		
Max allowable indoor/outdoor capacity ratio %			50 ~ 130 *2			50 ~ 130 *2		

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (4)

		Space saving combination			Space saving combination			Space saving combination			
Outdoor Unit	MODEL	U-10ME2E8 U-12ME2E8			U-12ME2E8 U-12ME2E8			U-10ME2E8 U-16ME2E8			
Performance test condition		EN14511			EN14511			EN14511			
Power supply		3ø 50Hz			3ø 50Hz			3ø 50Hz			
		ø,Hz									
		V	380	400	415	380	400	415	380	400	415
C O O L I N G	Capacity	kW	61.5	61.5	61.5	68.0	68.0	68.0	73.0	73.0	73.0
		BTU/h	209900	209900	209900	232100	232100	232100	249100	249100	249100
	Current	A	24.3	23.1	22.3	28.0	26.6	25.6	31.7	30.1	29.0
	Input power	W	14.9k	14.9k	14.9k	17.3k	17.3k	17.3k	19.2k	19.2k	19.2k
	EER	(W/W)	4.13	4.13	4.13	3.93	3.93	3.93	3.80	3.80	3.80
	Power factor	%	93	93	93	94	94	94	92	92	92
N O I S E	Noise outdoor	dB-A (Normal)	61.0			62.0			62.5		
		Power Level dB (Normal)	82.0			83.0			83.5		
		dB-A (Silent)	58.0			59.0			59.5		
H E A T I N G	Capacity	kW	69.0	69.0	69.0	76.5	76.5	76.5	81.5	81.5	81.5
		BTU/h	235500	235500	235500	261100	261100	261100	278200	278200	278200
	Current	A	23.9	22.7	21.9	26.6	25.3	24.4	29.9	28.4	27.4
	Input power	W	14.5k	14.5k	14.5k	16.3k	16.3k	16.3k	17.9k	17.9k	17.9k
	COP	(W / W)	4.76	4.76	4.76	4.69	4.69	4.69	4.55	4.55	4.55
Power factor	%	92	92	92	93	93	93	91	91	91	
Max Current (A) / Max Input power (W)			32.7 / 19.9k	32.7 / 21.0k	32.7 / 21.8k	36.4 / 22.5k	36.4 / 23.7k	36.4 / 24.6k	43.0 / 25.9k	43.0 / 27.3k	43.0 / 28.3k
Starting current (A)			1+1	1+1	1+1	1+1	1+1	1+1	1+2	1+2	1+2
Time Delay fuse max size (A)			25+30			30+30			25+40		
Fan motor output		W / Pole number	750+750 / 8		750+750 / 8		750+750 / 8		750+750 / 8		
External static pressure		Pa	0 ~ 80			0 ~ 80			0 ~ 80		
Air flow		m ³ / min	224+232			232+232			224+232		
Refrigerant type / amount g			R410A / 13.9k			R410A / 16.6k			R410A / 13.9k		
P R O D U C T	dimension	Height	mm 1842			mm 1842			mm 1842		
		Width	mm (770)+(1180)+60			mm (1180)+(1180)+60			mm (770)+(1180)+60		
		Depth	mm 1000			mm 1000			mm 1000		
P A C K I N G	dimension	Height	mm -			mm -			mm -		
		Width	mm -			mm -			mm -		
		Depth	mm -			mm -			mm -		
W E I G H T	(NET) kg	(210)+(270)			(270)+(270)			(210)+(315)			
	(GROSS) kg	-			-			-			
Layers limit			-			-			-		
O P E R A T I O N	condition (Outdoor)	Cool (DBT)	-10°C ~ 52°C			-10°C ~ 52°C			-10°C ~ 52°C		
		Heat (WBT)	-25°C ~ 18°C			-25°C ~ 18°C			-25°C ~ 18°C		
M A X. W O R K I N G P R E S S U R E	High side bar (MPa)		38.0 (3.80)			38.0 (3.80)			38.0 (3.80)		
	Low side bar (MPa)		31.1 (3.11)			31.1 (3.11)			31.1 (3.11)		
P I P I N G	Pipe diameter mm (inch)		(Liquid) 15.88(5/8) (Gas) 28.58(1-1/8)			(Liquid) 15.88(5/8) (Gas) 28.58(1-1/8)			(Liquid) 19.05(3/4) (Gas) 31.75(1-1/4)		
	Pipe diameter mm (inch) *1		(Liquid) 19.05(3/4) (Gas) 31.75(1-1/4)			(Liquid) 19.05(3/4) (Gas) 31.75(1-1/4)			(Liquid) 22.22(7/8) (Gas) 38.1(1-1/2)		
	Balance pipe mm (inch)		6.35(1/4)			6.35(1/4)			6.35(1/4)		
	Connecting method		-			-			-		
	Max tubing length m		7.5 ~ 200			7.5 ~ 200			7.5 ~ 200		
	Total Max tubing length m		7.5 ~ 1000			7.5 ~ 1000			7.5 ~ 1000		
Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m			50 / 40			50 / 40			50 / 40		
Max connectable indoor units pcs.			36			40			43		
Max allowable indoor/outdoor capacity ratio %			50 ~ 130 *2			50 ~ 130 *2			50 ~ 130 *2		

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (5)

Outdoor Unit		MODEL	Space saving combination			Space saving combination			Space saving combination		
			U-12ME2E8 U-16ME2E8			U-14ME2E8 U-16ME2E8			U-16ME2E8 U-16ME2E8		
Performance test condition			EN14511			EN14511			EN14511		
Power supply		φ,Hz	3φ 50Hz			3φ 50Hz			3φ 50Hz		
		V	380	400	415	380	400	415	380	400	415
C O O L I N G	Capacity	kW	78.5	78.5	78.5	85.0	85.0	85.0	90.0	90.0	90.0
		BTU/h	267900	267900	267900	290100	290100	290100	307200	307200	307200
	Current	A	34.8	33.1	31.9	38.6	36.6	35.3	42.3	40.2	38.7
	Input power	W	21.3k	21.3k	21.3k	23.1k	23.1k	23.1k	25.6k	25.6k	25.6k
	EER	(W/W)	3.69	3.69	3.69	3.68	3.68	3.68	3.52	3.52	3.52
	Power factor	%	93	93	93	91	91	91	92	92	92
N O I S E	Noise outdoor	dB-A (Normal)	63.5			63.5			64.0		
		Power Level dB (Normal)	84.5			84.5			85.0		
		dB-A (Silent)	60.5			60.5			61.0		
H E A T I N G	Capacity	kW	87.5	87.5	87.5	95.0	95.0	95.0	100	100	100
		BTU/h	298600	298600	298600	324200	324200	324200	341300	341300	341300
	Current	A	31.7	30.1	29.0	35.4	33.6	32.4	37.7	35.8	34.6
	Input power	W	19.2k	19.2k	19.2k	21.2k	21.2k	21.2k	22.6k	22.6k	22.6k
	COP	(W / W)	4.56	4.56	4.56	4.48	4.48	4.48	4.42	4.42	4.42
Power factor	%	92	92	92	91	91	91	91	91	91	
Max Current (A) / Max Input power (W)			46.7 / 28.5k	46.7 / 30.0k	46.7 / 31.1k	51.9 / 31.1k	51.9 / 32.8k	51.9 / 34.0k	57.0 / 34.5k	57.0 / 36.3k	57.0 / 37.7k
Starting current (A)			-	1+2	1+2	2+2	2+2	2+2	2+2	2+2	2+2
Time Delay fuse max size (A)			30+40			35+40			40+40		
Fan motor output	W / Pole number		750+750 / 8			750+750 / 8			750+750 / 8		
External static pressure		Pa	0 ~ 80			0 ~ 80			0 ~ 80		
Air flow		m ³ /min	232+232			232+232			232+232		
Refrigerant type / amount g			R410A / 16.6k			R410A / 16.6k			R410A / 16.6k		
P R O D U C T	dimension	Height mm	1842			1842			1842		
		Width mm	(1180)+(1180)+60			(1180)+(1180)+60			(1180)+(1180)+60		
		Depth mm	1000			1000			1000		
P A C K I N G	dimension	Height mm	-			-			-		
		Width mm	-			-			-		
		Depth mm	-			-			-		
W E I G H T	(NET) kg	(270)+(315)			(315)+(315)			(315)+(315)			
	(GROSS) kg	-			-			-			
Layers limit			-			-			-		
O P E R A T I O N	condition	Cool (DBT)	-10°C ~ 52°C			-10°C ~ 52°C			-10°C ~ 52°C		
		Heat (WBT)	-25°C ~ 18°C			-25°C ~ 18°C			-25°C ~ 18°C		
M A X. W O R K I N G P R E S S U R E	High side bar (MPa)		38.0 (3.80)			38.0 (3.80)			38.0 (3.80)		
		Low side bar (MPa)	31.1 (3.11)			31.1 (3.11)			31.1 (3.11)		
P I P I N G	Pipe diameter mm (inch)	(Under 90m for ultimate Indoor unit.)	(Liquid) 19.05(3/4) (Gas) 31.75(1-1/4)			(Liquid) 19.05(3/4) (Gas) 31.75(1-1/4)			(Liquid) 19.05(3/4) (Gas) 31.75(1-1/4)		
		(Over 90m for ultimate Indoor unit.) *1	(Liquid) 22.22(7/8) (Gas) 38.1(1-1/2)			(Liquid) 22.22(7/8) (Gas) 38.1(1-1/2)			(Liquid) 22.22(7/8) (Gas) 38.1(1-1/2)		
	Balance pipe mm (inch)	6.35(1/4)			6.35(1/4)			6.35(1/4)			
	Connecting method	-			-			-			
	Max tubing length m	7.5	~	200	7.5	~	200	7.5	~	200	
	Total Max tubing length m	7.5	~	1000	7.5	~	1000	7.5	~	1000	
	Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m	50 / 40			50 / 40			50 / 40			
	Max connectable indoor units pcs.	46			50			53			
Max allowable indoor/outdoor capacity ratio %		50 ~ 130 *2			50 ~ 130 *2			50 ~ 130 *2			

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (6)

Outdoor Unit		MODEL	Space saving combination			Space saving combination			Space saving combination		
			U-14ME2E8 U-20ME2E8			U-16ME2E8 U-20ME2E8			U-18ME2E8 U-20ME2E8		
Performance test condition			EN14511			EN14511			EN14511		
Power supply		φ,Hz	3φ 50Hz			3φ 50Hz			3φ 50Hz		
		V	380	400	415	380	400	415	380	400	415
C O O L I N G	Capacity	kW	96.0	96.0	96.0	101	101	101	107	107	107
		BTU/h	327600	327600	327600	344700	344700	344700	365200	365200	365200
	Current	A	44.1	41.9	40.4	47.7	45.3	43.7	50.6	48.1	46.3
	Input power	W	27.0k	27.0k	27.0k	29.5k	29.5k	29.5k	31.3k	31.3k	31.3k
	EER	(W/W)	3.56	3.56	3.56	3.42	3.42	3.42	3.42	3.42	3.42
	Power factor	%	93	93	93	94	94	94	94	94	94
N O I S E	Noise outdoor	dB-A (Normal)	63.0			63.5			62.5		
		Power Level dB (Normal)	84.0			84.5			83.5		
		dB-A (Silent)	60.0			60.5			59.5		
H E A T I N G	Capacity	kW	108	108	108	113	113	113	119	119	119
		BTU/h	368600	368600	368600	385700	385700	385700	406100	406100	406100
	Current	A	42.8	40.6	39.2	44.6	42.4	40.8	47.1	44.7	43.1
	Input power	W	25.9k	25.9k	25.9k	27.3k	27.3k	27.3k	28.8k	28.8k	28.8k
	COP	(W / W)	4.17	4.17	4.17	4.14	4.14	4.14	4.13	4.13	4.13
Power factor	%	92	92	92	93	93	93	93	93	93	
Max Current (A) / Max Input power (W)			59.8 / 36.6k	59.8 / 38.5k	59.8 / 40.0k	64.9 / 40.0k	64.9 / 42.1k	64.9 / 43.7k	67.9 / 42.0k	67.9 / 44.3k	67.9 / 45.9k
Starting current (A)			2+2	2+2	2+2	2+2	2+2	2+2	2+2	2+2	2+2
Time Delay fuse max size (A)			35+60			40+60			50+60		
Fan motor output	W / Pole number		750+750×2 / 8			750+750×2 / 8			750×2+750×2 / 8		
External static pressure		Pa	0 ~ 80			0 ~ 80			0 ~ 80		
Air flow		m ³ / min	232+405			232+405			405+405		
Refrigerant type / amount g			R410A / 17.8k			R410A / 17.8k			R410A / 19.0k		
P R O D U C T	dimension	Height mm	1842			1842			1842		
		Width mm	(1180)+(1540)+60			(1180)+(1540)+60			(1540)+(1540)+60		
		Depth mm	1000			1000			1000		
P A C K I N G	dimension	Height mm	-			-			-		
		Width mm	-			-			-		
		Depth mm	-			-			-		
W E I G H T	(NET) kg	(315)+(375)			(315)+(375)			(375)+(375)			
	(GROSS) kg	-			-			-			
Layers limit			-			-			-		
O P E R A T I O N	condition	Cool (DBT)	-10°C ~ 52°C			-10°C ~ 52°C			-10°C ~ 52°C		
		Heat (WBT)	-25°C ~ 18°C			-25°C ~ 18°C			-25°C ~ 18°C		
M A X. W O R K I N G P R E S S U R E	High side bar (MPa)		38.0 (3.80)			38.0 (3.80)			38.0 (3.80)		
	Low side bar (MPa)		31.1 (3.11)			31.1 (3.11)			31.1 (3.11)		
P I P E I N G	Pipe diameter mm (inch)		(Liquid) 19.05(3/4) (Gas) 31.75(1-1/4)			(Liquid) 19.05(3/4) (Gas) 38.1(1-1/2)			(Liquid) 19.05(3/4) (Gas) 38.1(1-1/2)		
	Pipe diameter mm (inch) *1		(Liquid) 22.22(7/8) (Gas) 38.1(1-1/2)			(Liquid) 22.22(7/8) (Gas) 41.28(1-5/8)			(Liquid) 22.22(7/8) (Gas) 41.28(1-5/8)		
	Balance pipe mm (inch)		6.35(1/4)			6.35(1/4)			6.35(1/4)		
	Connecting method		-			-			-		
	Max tubing length m		7.5	~	200	7.5	~	200	7.5	~	200
	Total Max tubing length m		7.5	~	1000	7.5	~	1000	7.5	~	1000
	Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m		50 / 40			50 / 40			50 / 40		
Max connectable indoor units pcs.			56			59			63		
Max allowable indoor/outdoor capacity ratio %			50 ~ 130 *2			50 ~ 130 *2			50 ~ 130 *2		

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (7)

Outdoor Unit		MODEL	Space saving combination		
			U-20ME2E8		
			U-20ME2E8		
Performance test condition			EN14511		
Power supply		ø,Hz	3ø 50Hz		
		V	380	400	415
C O O L I N G	Capacity	kW	113	113	113
		BTU/h	385700	385700	385700
	Current	A	54.1	51.4	49.5
	Input power	W	33.8k	33.8k	33.8k
	EER	(W/W)	3.34	3.34	3.34
	Power factor	%	95	95	95
	Noise outdoor		dB-A (Normal)	63.0	
		Power Level dB (Normal)	84.0		
		dB-A (Silent)	60.0		
H E A T I N G	Capacity	kW	127	127	127
		BTU/h	433400	433400	433400
	Current	A	52.4	49.8	48.0
	Input power	W	32.4k	32.4k	32.4k
	COP	(W / W)	3.92	3.92	3.92
Power factor	%	94	94	94	
Max Current (A) / Max Input power (W)			72.8 / 45.5k	72.8 / 47.9k	72.8 / 49.7k
Starting current (A)			2+2	2+2	2+2
Time Delay fuse max size (A)			60+60		
Fan motor output	W / Pole number		750×2+750×2 / 8		
External static pressure	Pa		0 ~ 80		
Air flow	m ³ / min		405+405		
Refrigerant type / amount g			R410A / 19.0k		
Product dimension	Height	mm	1842		
	Width	mm	(1540)+(1540)+60		
	Depth	mm	1000		
Packing dimension	Height	mm	-		
	Width	mm	-		
	Depth	mm	-		
Weight	(NET) kg		(375)+(375)		
	(GROSS) kg		-		
Layers limit			-		
Operation condition (Outdoor)	Cool (DBT)		-10°C ~ 52°C		
	Heat (WBT)		-25°C ~ 18°C		
MAX. WORKING PRESSURE	High side bar (MPa)		38.0 (3.80)		
	Low side bar (MPa)		31.1 (3.11)		
P I P I N G	Pipe diameter mm (inch)		(Liquid) 19.05(3/4)		
	(Under 90m for ultimate Indoor unit.)		(Gas) 38.1(1-1/2)		
	Pipe diameter mm (inch) *1		(Liquid) 22.22(7/8)		
	(Over 90m for ultimate Indoor unit.)		(Gas) 41.28(1-5/8)		
	Balance pipe mm (inch)		6.35(1/4)		
	Connecting method		-		
	Max tubing length m		7.5	~	200
	Total Max tubing length m		7.5	~	1000
Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m		50 / 40			
Max connectable indoor units pcs.		64			
Max allowable indoor/outdoor capacity ratio %		50 ~ 130 *2			

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (8)

Outdoor Unit		MODEL	Space saving combination			Space saving combination			Space saving combination		
			U-10ME2E8	U-16ME2E8	U-16ME2E8	U-12ME2E8	U-16ME2E8	U-16ME2E8	U-14ME2E8	U-16ME2E8	U-16ME2E8
Performance test condition			EN14511			EN14511			EN14511		
Power supply		ø,Hz	3ø 50Hz			3ø 50Hz			3ø 50Hz		
		V	380	400	415	380	400	415	380	400	415
C O O L I N G	Capacity	kW	118	118	118	124	124	124	130	130	130
		BTU/h	402700	402700	402700	423200	423200	423200	443700	443700	443700
	Current	A	52.8	50.2	48.4	56.0	53.2	51.3	59.9	56.9	54.9
	Input power	W	32.0k	32.0k	32.0k	34.3k	34.3k	34.3k	35.9k	35.9k	35.9k
	EER	(W/W)	3.69	3.69	3.69	3.62	3.62	3.62	3.62	3.62	3.62
	Power factor	%	92	92	92	93	93	93	91	91	91
	Noise outdoor	dB-A (Normal)	65.0			65.5			65.5		
Power Level dB (Normal)		86.0			86.5			86.5			
dB-A (Silent)		62.0			62.5			62.5			
H E A T I N G	Capacity	kW	132	132	132	138	138	138	145	145	145
		BTU/h	450500	450500	450500	471000	471000	471000	494900	494900	494900
	Current	A	49.1	46.6	44.9	50.7	48.2	46.4	54.3	51.5	49.7
	Input power	W	29.4k	29.4k	29.4k	30.7k	30.7k	30.7k	32.5k	32.5k	32.5k
	COP	(W / W)	4.49	4.49	4.49	4.50	4.50	4.50	4.46	4.46	4.46
Power factor	%	91	91	91	92	92	92	91	91	91	
Max Current (A) / Max Input power (W)			71.5 / 43.2k	71.5 / 45.5k	71.5 / 47.2k	75.2 / 45.8k	75.2 / 48.2k	75.2 / 50.0k	80.4 / 48.4k	80.4 / 50.9k	80.4 / 52.8k
Starting current (A)			1+2+2	1+2+2	1+2+2	1+2+2	1+2+2	1+2+2	2+2+2	2+2+2	2+2+2
Time Delay fuse max size (A)			25+40+40			30+40+40			35+40+40		
Fan motor output		W / Pole number	750+750+750 / 8			750+750+750 / 8			750+750+750 / 8		
External static pressure		Pa	0 ~ 80			0 ~ 80			0 ~ 80		
Air flow		m ³ /min	224+232+232			232+232+232			232+232+232		
Refrigerant type / amount g			R410A / 22.2k			R410A / 24.9k			R410A / 24.9k		
Product dimension	Height	mm	1842			1842			1842		
	Width	mm	(770)+(1180)+(1180)+120			(1180)+(1180)+(1180)+120			(1180)+(1180)+(1180)+120		
	Depth	mm	1000			1000			1000		
Packing dimension	Height	mm	-			-			-		
	Width	mm	-			-			-		
	Depth	mm	-			-			-		
Weight	(NET) kg	(210)+(315)+(315)			(270)+(315)+(315)			(315)+(315)+(315)			
	(GROSS) kg	-			-			-			
Layers limit			-			-			-		
Operation condition (Outdoor)		Cool (DBT)	-10°C ~ 52°C			-10°C ~ 52°C			-10°C ~ 52°C		
		Heat (WBT)	-25°C ~ 18°C			-25°C ~ 18°C			-25°C ~ 18°C		
MAX. WORKING PRESSURE	High side bar (MPa)	38.0 (3.80)			38.0 (3.80)			38.0 (3.80)			
	Low side bar (MPa)	31.1 (3.11)			31.1 (3.11)			31.1 (3.11)			
P I P I N G	Pipe diameter mm (inch) (Under 90m for ultimate Indoor unit.)	(Liquid) 19.05(3/4) (Gas) 38.1(1-1/2)			(Liquid) 19.05(3/4) (Gas) 38.1(1-1/2)			(Liquid) 19.05(3/4) (Gas) 38.1(1-1/2)			
	Pipe diameter mm (inch) *1 (Over 90m for ultimate Indoor unit.)	(Liquid) 22.22(7/8) (Gas) 41.28(1-5/8)			(Liquid) 22.22(7/8) (Gas) 41.28(1-5/8)			(Liquid) 22.22(7/8) (Gas) 41.28(1-5/8)			
	Balance pipe mm (inch)	6.35(1/4)			6.35(1/4)			6.35(1/4)			
	Connecting method	-			-			-			
	Max tubing length m	75	~	200	75	~	200	75	~	200	
	Total Max tubing length m	75	~	1000	75	~	1000	75	~	1000	
	Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m	50 / 40			50 / 40			50 / 40			
Max connectable indoor units pcs.	64			64			64				
Max allowable indoor/outdoor capacity ratio %		50 ~ 130 *2			50 ~ 130 *2			50 ~ 130 *2			

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100 kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (9)

		Space saving combination			Space saving combination			Space saving combination			
Outdoor Unit	MODEL	U-16ME2E8 U-16ME2E8 U-16ME2E8			U-14ME2E8 U-16ME2E8 U-20ME2E8			U-16ME2E8 U-16ME2E8 U-20ME2E8			
Performance test condition		EN14511			EN14511			EN14511			
Power supply	ø,Hz	3ø 50Hz			3ø 50Hz			3ø 50Hz			
	V	380	400	415	380	400	415	380	400	415	
C O O L I N G	Capacity	kW	135	135	135	140	140	140	145	145	145
		BTU/h	460800	460800	460800	477800	477800	477800	494900	494900	494900
	Current	A	63.4	60.2	58.1	64.4	61.1	58.9	68.5	65.0	62.7
	Input power	W	38.4k	38.4k	38.4k	39.4k	39.4k	39.4k	41.9k	41.9k	41.9k
	EER	(W/W)	3.52	3.52	3.52	3.55	3.55	3.55	3.46	3.46	3.46
	Power factor	%	92	92	92	93	93	93	93	93	93
	Noise outdoor	dB-A (Normal)	66.0			65.5			65.5		
Power Level dB (Normal)		87.0			86.5			86.5			
dB-A (Silent)		63.0			62.5			62.5			
H E A T I N G	Capacity	kW	150	150	150	155	155	155	160	160	160
		BTU/h	511900	511900	511900	529000	529000	529000	546100	546100	546100
	Current	A	56.6	53.8	51.8	59.6	56.6	54.6	61.9	58.8	56.7
	Input power	W	33.9k	33.9k	33.9k	36.1k	36.1k	36.1k	37.5k	37.5k	37.5k
	COP	(W / W)	4.42	4.42	4.42	4.29	4.29	4.29	4.27	4.27	4.27
Power factor	%	91	91	91	92	92	92	92	92	92	
Max Current (A) / Max Input power (W)		85.5 / 51.8k	85.5 / 54.5k	85.5 / 56.5k	88.3 / 53.9k	88.3 / 56.7k	88.3 / 58.8k	93.4 / 57.3k	93.4 / 60.3k	93.4 / 62.6k	
Starting current (A)		2+2+2	2+2+2	2+2+2	2+2+2	2+2+2	2+2+2	2+2+2	2+2+2	2+2+2	
Time Delay fuse max size (A)		40+40+40			35+40+60			40+40+60			
Fan motor output		W / Pole number 750+750+750 / 8			750+750+750×2 / 8			750+750+750×2 / 8			
External static pressure		Pa 0 ~ 80			0 ~ 80			0 ~ 80			
Air flow		m ³ /min 232+232+232			232+232+405			232+232+405			
Refrigerant type / amount g		R410A / 24.9k			R410A / 26.1k			R410A / 26.1k			
Product dimension	Height	mm	1842			1842			1842		
	Width	mm	(1180)+(1180)+(1180)+120			(1180)+(1180)+(1540)+120			(1180)+(1180)+(1540)+120		
	Depth	mm	1000			1000			1000		
Packing dimension	Height	mm	-			-			-		
	Width	mm	-			-			-		
	Depth	mm	-			-			-		
Weight	(NET) kg	(315)+(315)+(315)			(315)+(315)+(375)			(315)+(315)+(375)			
	(GROSS) kg	-			-			-			
Layers limit		-			-			-			
Operation condition (Outdoor)	Cool (DBT)	-10°C ~ 52°C			-10°C ~ 52°C			-10°C ~ 52°C			
	Heat (WBT)	-25°C ~ 18°C			-25°C ~ 18°C			-25°C ~ 18°C			
MAX. WORKING PRESSURE	High side bar (MPa)	38.0 (3.80)			38.0 (3.80)			38.0 (3.80)			
	Low side bar (MPa)	31.1 (3.11)			31.1 (3.11)			31.1 (3.11)			
P I P I N G	Pipe diameter mm (inch) (Under 90m for ultimate Indoor unit.)	(Liquid) 19.05(3/4) (Gas) 38.1(1-1/2)			(Liquid) 19.05(3/4) (Gas) 38.1(1-1/2)			(Liquid) 19.05(3/4) (Gas) 38.1(1-1/2)			
	Pipe diameter mm (inch) *1 (Over 90m for ultimate Indoor unit.)	(Liquid) 22.22(7/8) (Gas) 41.28(1-5/8)			(Liquid) 22.22(7/8) (Gas) 41.28(1-5/8)			(Liquid) 22.22(7/8) (Gas) 41.28(1-5/8)			
	Balance pipe mm (inch)	6.35(1/4)			6.35(1/4)			6.35(1/4)			
	Connecting method	-			-			-			
	Max tubing length m	7.5	~	200	7.5	~	200	7.5	~	200	
	Total Max tubing length m	7.5	~	1000	7.5	~	1000	7.5	~	1000	
	Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m	50 / 40			50 / 40			50 / 40			
Max connectable indoor units pcs.	64			64			64				
Max allowable indoor/outdoor capacity ratio %		50 ~ 130 *2			50 ~ 130 *2			50 ~ 130 *2			

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (10)

		Space saving combination			Space saving combination			Space saving combination			
Outdoor Unit	MODEL	U-14ME2E8 U-20ME2E8 U-20ME2E8			U-16ME2E8 U-20ME2E8 U-20ME2E8			U-18ME2E8 U-20ME2E8 U-20ME2E8			
Performance test condition		EN14511			EN14511			EN14511			
Power supply	ø,Hz	3ø 50Hz			3ø 50Hz			3ø 50Hz			
	V	380	400	415	380	400	415	380	400	415	
C O O L I N G	Capacity	kW	151	151	151	156	156	156	162	162	162
		BTU/h	515400	515400	515400	532400	532400	532400	552900	552900	552900
	Current	A	70.0	66.5	64.1	74.0	70.3	67.8	76.9	73.1	70.4
	Input power	W	43.3k	43.3k	43.3k	45.8k	45.8k	45.8k	47.6k	47.6k	47.6k
	EER	(W/W)	3.49	3.49	3.49	3.41	3.41	3.41	3.40	3.40	3.40
	Power factor	%	94	94	94	94	94	94	94	94	94
	Noise outdoor	dB-A (Normal)	65.0			65.5			64.5		
Power Level dB (Normal)		86.0			86.5			85.5			
dB-A (Silent)		62.0			62.5			61.5			
H E A T I N G	Capacity	kW	169	169	169	175	175	175	182	182	182
		BTU/h	576800	576800	576800	597300	597300	597300	621200	621200	621200
	Current	A	67.1	63.8	61.5	70.1	66.6	64.2	73.2	69.5	67.0
	Input power	W	41.1k	41.1k	41.1k	42.9k	42.9k	42.9k	44.8k	44.8k	44.8k
	COP	(W / W)	4.11	4.11	4.11	4.08	4.08	4.08	4.06	4.06	4.06
Power factor	%	93	93	93	93	93	93	93	93	93	
Max Current (A) / Max Input power (W)		96.2 / 59.4k	96.2 / 62.5k	96.2 / 64.9k	101.3 / 62.8k	101.3 / 66.1k	101.3 / 68.6k	104.3 / 64.8k	104.3 / 68.2k	104.3 / 70.8k	
Starting current (A)		2+2+2	2+2+2	2+2+2	-	2+2+2	2+2+2	-	2+2+2	2+2+2	
Time Delay fuse max size (A)		35+60+60			40+60+60			50+60+60			
Fan motor output W / Pole number		750+750×2+750×2 / 8			750+750×2+750×2 / 8			750×2+750×2+750×2 / 8			
External static pressure Pa		0 ~ 80			0 ~ 80			0 ~ 80			
Air flow m ³ /min		232+405+405			232+405+405			405+405+405			
Refrigerant type / amount g		R410A / 27.3k			R410A / 27.3k			R410A / 28.5k			
Product dimension	Height	mm	1842			1842			1842		
	Width	mm	(1180)+(1540)+(1540)+120			(1180)+(1540)+(1540)+120			(1540)+(1540)+(1540)+120		
	Depth	mm	1000			1000			1000		
Packing dimension	Height	mm	-			-			-		
	Width	mm	-			-			-		
	Depth	mm	-			-			-		
Weight	(NET) kg	(315)+(375)+(375)			(315)+(375)+(375)			(375)+(375)+(375)			
	(GROSS) kg	-			-			-			
Layers limit		-			-			-			
Operation condition (Outdoor)	Cool (DBT)	-10°C ~ 52°C			-10°C ~ 52°C			-10°C ~ 52°C			
	Heat (WBT)	-25°C ~ 18°C			-25°C ~ 18°C			-25°C ~ 18°C			
MAX. WORKING PRESSURE	High side bar (MPa)	38.0 (3.80)			38.0 (3.80)			38.0 (3.80)			
	Low side bar (MPa)	31.1 (3.11)			31.1 (3.11)			31.1 (3.11)			
P I P I N G	Pipe diameter mm (inch) (Under 90m for ultimate Indoor unit.)	(Liquid) 19.05(3/4) (Gas) 38.1(1-1/2)			(Liquid) 19.05(3/4) (Gas) 38.1(1-1/2)			(Liquid) 19.05(3/4) (Gas) 38.1(1-1/2)			
	Pipe diameter mm (inch) *1 (Over 90m for ultimate Indoor unit.)	(Liquid) 22.22(7/8) (Gas) 41.28(1-5/8)			(Liquid) 22.22(7/8) (Gas) 41.28(1-5/8)			(Liquid) 22.22(7/8) (Gas) 41.28(1-5/8)			
	Balance pipe mm (inch)	6.35(1/4)			6.35(1/4)			6.35(1/4)			
	Connecting method	-			-			-			
	Max tubing length m	7.5	~	200	7.5	~	200	7.5	~	200	
	Total Max tubing length m	7.5	~	1000	7.5	~	1000	7.5	~	1000	
	Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m	50 / 40			50 / 40			50 / 40			
Max connectable indoor units pcs.	64			64			64				
Max allowable indoor/outdoor capacity ratio %		50 ~ 130 *2			50 ~ 130 *2			50 ~ 130 *2			

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (11)

Unit specifications (11)		Space saving combination			
Outdoor Unit	MODEL	U-20ME2E8 U-20ME2E8 U-20ME2E8			
Performance test condition		EN14511			
Power supply	ø,Hz	3ø 50Hz			
	V	380	400	415	
C O O L I N G	Capacity	kW	168	168	168
		BTU/h	573400	573400	573400
	Current	A	80.1	76.1	73.4
	Input power	W	50.1k	50.1k	50.1k
	EER	(W/W)	3.35	3.35	3.35
	Power factor	%	95	95	95
	Noise outdoor	dB-A (Normal)	65.0		
Power Level dB (Normal)		86.0			
dB-A (Silent)		62.0			
H E A T I N G	Capacity	kW	189	189	189
		BTU/h	645100	645100	645100
	Current	A	77.6	73.7	71.0
	Input power	W	48.0k	48.0k	48.0k
	COP	(W / W)	3.94	3.94	3.94
	Power factor	%	94	94	94
Max Current (A) / Max Input power (W)		109.2 / 68.3k	109.2 / 71.9k	109.2 / 74.6k	
Starting current (A)		-	2+2+2	2+2+2	
Time Delay fuse max size (A)		60+60+60			
Fan motor output		W / Pole number 750×2+750×2+750×2 / 8			
External static pressure		Pa 0 ~ 80			
Air flow		m ³ / min 405+405+405			
Refrigerant type / amount g		R410A / 28.5k			
Product dimension	Height	mm	1842		
	Width	mm	(1540)+(1540)+(1540)+120		
	Depth	mm	1000		
Packing dimension	Height	mm	-		
	Width	mm	-		
	Depth	mm	-		
Weight	(NET) kg		(375)+(375)+(375)		
	(GROSS) kg		-		
Layers limit		-			
Operation condition (Outdoor)	Cool (DBT)	-10°C ~ 52°C			
	Heat (WBT)	-25°C ~ 18°C			
MAX. WORKING PRESSURE	High side bar (MPa)	38.0 (3.80)			
	Low side bar (MPa)	31.1 (3.11)			
P I P I N G	Pipe diameter mm (inch) (Under 90m for ultimate Indoor unit.)	(Liquid) 19.05(3/4) (Gas) 38.1(1-1/2)			
	Pipe diameter mm (inch) *1 (Over 90m for ultimate Indoor unit.)	(Liquid) 22.22(7/8) (Gas) 41.28(1-5/8)			
	Balance pipe mm (inch)	6.35(1/4)			
	Connecting method	-			
	Max tubing length m	7.5	~	200	
	Total Max tubing length m	7.5	~	1000	
	Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m	50 / 40			
Max connectable indoor units pcs.	64				
Max allowable indoor/outdoor capacity ratio %	50 ~ 130 *2				

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (12)

Outdoor Unit		MODEL	Space saving combination			Space saving combination			Space saving combination		
			U-14ME2E8	U-16ME2E8	U-16ME2E8	U-16ME2E8	U-16ME2E8	U-16ME2E8	U-10ME2E8	U-16ME2E8	U-20ME2E8
Performance test condition			EN14511			EN14511			EN14511		
Power supply		φ,Hz	3φ 50Hz			3φ 50Hz			3φ 50Hz		
		V	380	400	415	380	400	415	380	400	415
C O O L I N G	Capacity	kW	174	174	174	180	180	180	185	185	185
		BTU/h	593900	593900	593900	614300	614300	614300	631400	631400	631400
	Current	A	79.8	75.8	73.0	84.6	80.3	77.4	85.0	80.8	77.8
	Input power	W	48.3k	48.3k	48.3k	51.2k	51.2k	51.2k	52.6k	52.6k	52.6k
	EER	(W/W)	3.60	3.60	3.60	3.52	3.52	3.52	3.52	3.52	3.52
	Power factor	%	92	92	92	92	92	92	94	94	94
	Noise outdoor	dB-A (Normal)	67.0			67.0			66.0		
Power Level dB (Normal)		88.0			88.0			87.0			
dB-A (Silent)		64.0			64.0			63.0			
H E A T I N G	Capacity	kW	195	195	195	201	201	201	207	207	207
		BTU/h	665500	665500	665500	686000	686000	686000	706500	706500	706500
	Current	A	73.1	69.5	67.0	76.0	72.2	69.6	81.2	77.1	74.3
	Input power	W	43.8k	43.8k	43.8k	45.5k	45.5k	45.5k	49.7k	49.7k	49.7k
	COP	(W / W)	4.45	4.45	4.45	4.42	4.42	4.42	4.16	4.16	4.16
Power factor	%	91	91	91	91	91	91	93	93	93	
Max Current (A) / Max Input power (W)			108.9 / 65.6k	108.9 / 69.1k	108.9 / 71.7k	114.0 / 69.0k	114.0 / 72.7k	114.0 / 75.4k	115.8 / 71.5k	115.8 / 75.2k	115.8 / 78.0k
Starting current (A)			-	2+2+2+2	2+2+2+2	2+2+2+2	2+2+2+2	2+2+2+2	1+2+2+2	1+2+2+2	1+2+2+2
Time Delay fuse max size (A)			35+40+40+40			40+40+40+40			25+40+60+60		
Fan motor output		W / Pole number	750+750+750+750 / 8			750+750+750+750 / 8			750+750+750×2+750×2 / 8		
External static pressure		Pa	0 ~ 80			0 ~ 80			0 ~ 80		
Air flow		m ³ /min	232+232+232+232			232+232+232+232			224+232+405+405		
Refrigerant type / amount g			R410A / 33.2k			R410A / 33.2k			R410A / 32.9k		
Product dimension	Height	mm	1842			1842			1842		
	Width	mm	(1180)+(1180)+(1180)+180			(1180)+(1180)+(1180)+180			(770)+(1180)+(1540)+(1540)+180		
	Depth	mm	1000			1000			1000		
Packing dimension	Height	mm	-			-			-		
	Width	mm	-			-			-		
	Depth	mm	-			-			-		
Weight	(NET) kg	(315)+(315)+(315)+(315)			(315)+(315)+(315)+(315)			(210)+(315)+(375)+(375)			
	(GROSS) kg	-			-			-			
Layers limit			-			-			-		
Operation condition	Cool (DBT)	-10°C ~ 52°C			-10°C ~ 52°C			-10°C ~ 52°C			
	Heat (WBT)	-25°C ~ 18°C			-25°C ~ 18°C			-25°C ~ 18°C			
MAX. WORKING PRESSURE	High side bar (MPa)	38.0 (3.80)			38.0 (3.80)			38.0 (3.80)			
	Low side bar (MPa)	31.1 (3.11)			31.1 (3.11)			31.1 (3.11)			
P I P I N G	Pipe diameter mm (inch)	(Liquid) 19.05(3/4)			(Liquid) 19.05(3/4)			(Liquid) 19.05(3/4)			
	(Under 90m for ultimate Indoor unit.)	(Gas) 41.28(1-5/8)			(Gas) 41.28(1-5/8)			(Gas) 41.28(1-5/8)			
	Pipe diameter mm (inch) *1	(Liquid) 22.22(7/8)			(Liquid) 22.22(7/8)			(Liquid) 22.22(7/8)			
	(Over 90m for ultimate Indoor unit.)	(Gas) 44.45(1-3/4)			(Gas) 44.45(1-3/4)			(Gas) 44.45(1-3/4)			
	Balance pipe mm (inch)	6.35(1/4)			6.35(1/4)			6.35(1/4)			
	Connecting method	-			-			-			
	Max tubing length m	7.5	~	200	7.5	~	200	7.5	~	200	
Total Max tubing length m	7.5	~	1000	7.5	~	1000	7.5	~	1000		
Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m	50 / 40			50 / 40			50 / 40				
Max connectable indoor units pcs.		64			64			64			
Max allowable indoor/outdoor capacity ratio %		50 ~ 130 *2			50 ~ 130 *2			50 ~ 130 *2			

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (13)

Outdoor Unit		MODEL	Space saving combination			Space saving combination			Space saving combination		
			U-12ME2E8	U-16ME2E8	U-20ME2E8	U-20ME2E8	U-10ME2E8	U-20ME2E8	U-20ME2E8	U-16ME2E8	U-16ME2E8
Performance test condition			EN14511			EN14511			EN14511		
Power supply		φ,Hz	3φ 50Hz			3φ 50Hz			3φ 50Hz		
		V	380	400	415	380	400	415	380	400	415
C O O L I N G	Capacity	kW	190	190	190	196	196	196	202	202	202
		BTU/h	648500	648500	648500	668900	668900	668900	689400	689400	689400
	Current	A	88.1	83.7	80.7	91.3	86.8	83.6	95.4	90.6	87.3
	Input power	W	54.5k	54.5k	54.5k	56.5k	56.5k	56.5k	59.0k	59.0k	59.0k
	EER	(W/W)	3.49	3.49	3.49	3.47	3.47	3.47	3.42	3.42	3.42
	Power factor	%	94	94	94	94	94	94	94	94	94
	Noise outdoor	dB-A (Normal)	66.5			65.5			66.5		
Power Level dB (Normal)		87.5			86.5			87.5			
dB-A (Silent)		63.5			62.5			63.5			
H E A T I N G	Capacity	kW	213	213	213	219	219	219	226	226	226
		BTU/h	727000	727000	727000	747400	747400	747400	771300	771300	771300
	Current	A	83.3	79.2	76.3	87.4	83.1	80.1	89.2	84.7	81.7
	Input power	W	51.0k	51.0k	51.0k	54.1k	54.1k	54.1k	54.6k	54.6k	54.6k
	COP	(W / W)	4.18	4.18	4.18	4.05	4.05	4.05	4.14	4.14	4.14
Power factor	%	93	93	93	94	94	94	93	93	93	
Max Current (A) / Max Input power (W)			119.5 / 74.0k	119.5 / 77.9k	119.5 / 80.9k	123.7 / 77.0k	123.7 / 81.0k	123.7 / 84.1k	129.8 / 80.0k	129.8 / 84.2k	129.8 / 87.4k
Starting current (A)			1+2+2+2	1+2+2+2	1+2+2+2	1+2+2+2	1+2+2+2	1+2+2+2	2+2+2+2	2+2+2+2	2+2+2+2
Time Delay fuse max size (A)			30+40+60+60			25+60+60+60			40+40+60+60		
Fan motor output		W / Pole number	750+750+750×2+750×2 / 8			750+750×2+750×2+750×2 / 8			750+750+750×2+750×2 / 8		
External static pressure		Pa	0 ~ 80			0 ~ 80			0 ~ 80		
Air flow		m ³ /min	232+232+405+405			224+405+405+405			232+232+405+405		
Refrigerant type / amount g			R410A / 35.6k			R410A / 34.1k			R410A / 35.8k		
Product dimension	Height	mm	1842			1842			1842		
	Width	mm	(1180)+(1180)+(1540)+(1540)+180			(770)+(1540)+(1540)+(1540)+180			(1180)+(1180)+(1540)+(1540)+180		
	Depth	mm	1000			1000			1000		
Packing dimension	Height	mm	-			-			-		
	Width	mm	-			-			-		
	Depth	mm	-			-			-		
Weight	(NET) kg	(270)+(315)+(375)+(375)			(210)+(375)+(375)+(375)			(315)+(315)+(375)+(375)			
	(GROSS) kg	-			-			-			
Layers limit			-			-			-		
Operation condition	Cool (DBT)	-10°C ~ 52°C			-10°C ~ 52°C			-10°C ~ 52°C			
	Heat (WBT)	-25°C ~ 18°C			-25°C ~ 18°C			-25°C ~ 18°C			
MAX. WORKING PRESSURE	High side bar (MPa)	38.0 (3.80)			38.0 (3.80)			38.0 (3.80)			
	Low side bar (MPa)	31.1 (3.11)			31.1 (3.11)			31.1 (3.11)			
P I P I N G	Pipe diameter mm (inch)	(Liquid) 22.22(7/8)			(Liquid) 22.22(7/8)			(Liquid) 22.22(7/8)			
	(Under 90m for ultimate Indoor unit.)	(Gas) 41.28(1-5/8)			(Gas) 41.28(1-5/8)			(Gas) 44.45(1-3/4)			
	Pipe diameter mm (inch) *1	(Liquid) 25.4(1)			(Liquid) 25.4(1)			(Liquid) 25.4(1)			
	(Over 90m for ultimate Indoor unit.)	(Gas) 44.45(1-3/4)			(Gas) 44.45(1-3/4)			(Gas) 50.8(2)			
	Balance pipe mm (inch)	6.35(1/4)			6.35(1/4)			6.35(1/4)			
	Connecting method	-			-			-			
	Max tubing length m	7.5	~	200	7.5	~	200	7.5	~	200	
Total Max tubing length m	7.5	~	1000	7.5	~	1000	7.5	~	1000		
Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m		50 / 40			50 / 40			50 / 40			
Max connectable indoor units pcs.			64			64			64		
Max allowable indoor/outdoor capacity ratio %			50 ~ 130 *2			50 ~ 130 *2			50 ~ 130 *2		

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (14)

Outdoor Unit		MODEL	Space saving combination			Space saving combination			Space saving combination		
			U-16ME2E8	U-18ME2E8	U-20ME2E8	U-20ME2E8	U-20ME2E8	U-18ME2E8	U-20ME2E8	U-20ME2E8	U-20ME2E8
Performance test condition			EN14511			EN14511			EN14511		
Power supply		φ,Hz	3φ 50Hz			3φ 50Hz			3φ 50Hz		
		V	380	400	415	380	400	415	380	400	415
C O O L I N G	Capacity	kW	208	208	208	213	213	213	219	219	219
		BTU/h	709900	709900	709900	727000	727000	727000	747400	747400	747400
	Current	A	98.3	93.4	90.0	101.7	96.6	93.1	103.5	98.3	94.7
	Input power	W	60.8k	60.8k	60.8k	62.9k	62.9k	62.9k	64.7k	64.7k	64.7k
	EER	(W/W)	3.42	3.42	3.42	3.39	3.39	3.39	3.38	3.38	3.38
	Power factor	%	94	94	94	94	94	94	95	95	95
	Noise outdoor	dB-A (Normal)	66.5			66.5			66.0		
Power Level dB (Normal)		87.5			87.5			87.0			
dB-A (Silent)		63.5			63.5			63.0			
H E A T I N G	Capacity	kW	233	233	233	239	239	239	245	245	245
		BTU/h	795200	795200	795200	815700	815700	815700	836200	836200	836200
	Current	A	92.3	87.7	84.5	96.9	92.0	88.7	98.3	93.4	90.0
	Input power	W	56.5k	56.5k	56.5k	59.3k	59.3k	59.3k	60.8k	60.8k	60.8k
	COP	(W / W)	4.12	4.12	4.12	4.03	4.03	4.03	4.03	4.03	4.03
Power factor	%	93	93	93	93	93	93	94	94	94	
Max Current (A) / Max Input power (W)			132.8 / 82.1k	132.8 / 86.4k	132.8 / 89.6k	137.7 / 85.5k	137.7 / 90.0k	137.7 / 93.4k	140.7 / 87.6k	140.7 / 92.2k	140.7 / 95.6k
Starting current (A)			2+2+2+2	2+2+2+2	2+2+2+2	2+2+2+2	2+2+2+2	2+2+2+2	2+2+2+2	2+2+2+2	2+2+2+2
Time Delay fuse max size (A)			40+50+60+60			40+60+60+60			50+60+60+60		
Fan motor output		W / Pole number	750+750×2+750×2+750×2 / 8			750+750×2+750×2+750×2 / 8			750×2+750×2+750×2+750×2 / 8		
External static pressure		Pa	0 ~ 80			0 ~ 80			0 ~ 80		
Air flow		m ³ /min	232+405+405+405			232+405+405+405			405+405+405+405		
Refrigerant type / amount g			R410A / 36.8k			R410A / 36.8k			R410A / 38.0k		
Product dimension	Height	mm	1842			1842			1842		
	Width	mm	(1180)+(1540)+(1540)+180			(1180)+(1540)+(1540)+180			(1540)+(1540)+(1540)+(1540)+180		
	Depth	mm	1000			1000			1000		
Packing dimension	Height	mm	-			-			-		
	Width	mm	-			-			-		
	Depth	mm	-			-			-		
Weight	(NET) kg	(315)+(375)+(375)+(375)			(315)+(375)+(375)+(375)			(375)+(375)+(375)+(375)			
	(GROSS) kg	-			-			-			
Layers limit			-			-			-		
Operation condition	Cool (DBT)	-10°C ~ 52°C			-10°C ~ 52°C			-10°C ~ 52°C			
	Heat (WBT)	-25°C ~ 18°C			-25°C ~ 18°C			-25°C ~ 18°C			
MAX. WORKING PRESSURE	High side bar (MPa)	38.0 (3.80)			38.0 (3.80)			38.0 (3.80)			
	Low side bar (MPa)	31.1 (3.11)			31.1 (3.11)			31.1 (3.11)			
P I P I N G	Pipe diameter mm (inch)	(Liquid) 22.22(7/8)			(Liquid) 22.22(7/8)			(Liquid) 22.22(7/8)			
	(Under 90m for ultimate Indoor unit.)	(Gas) 44.45(1-3/4)			(Gas) 44.45(1-3/4)			(Gas) 44.45(1-3/4)			
	Pipe diameter mm (inch) *1	(Liquid) 25.4(1)			(Liquid) 25.4(1)			(Liquid) 25.4(1)			
	(Over 90m for ultimate Indoor unit.)	(Gas) 50.8(2)			(Gas) 50.8(2)			(Gas) 50.8(2)			
	Balance pipe mm (inch)	6.35(1/4)			6.35(1/4)			6.35(1/4)			
	Connecting method	-			-			-			
	Max tubing length m	7.5	~	200	7.5	~	200	7.5	~	200	
Total Max tubing length m	7.5	~	1000	7.5	~	1000	7.5	~	1000		
Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m		50 / 40			50 / 40			50 / 40			
Max connectable indoor units pcs.			64			64			64		
Max allowable indoor/outdoor capacity ratio %			50 ~ 130 *2			50 ~ 130 *2			50 ~ 130 *2		

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.

The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.

Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-1. Specifications

Unit specifications (15)

Outdoor Unit		MODEL	Space saving combination			
			U-20ME2E8 U-20ME2E8 U-20ME2E8 U-20ME2E8			
Performance test condition		EN14511				
Power supply	φ,Hz	3φ 50Hz				
	V	380	400	415		
C O O L I N G	Capacity	kW	224	224	224	
		BTU/h	764500	764500	764500	
	Current	A	106.8	101.5	97.8	
	Input power	W	66.8k	66.8k	66.8k	
	EER	(W/W)	3.35	3.35	3.35	
	Power factor	%	95	95	95	
	Noise outdoor	dB-A (Normal)		66.0		
		Power Level dB (Normal)		87.0		
dB-A (Silent)		63.0				
H E A T I N G	Capacity	kW	252	252	252	
		BTU/h	860100	860100	860100	
	Current	A	103.4	98.3	94.7	
	Input power	W	64.0k	64.0k	64.0k	
	COP	(W / W)	3.94	3.94	3.94	
Power factor	%	94	94	94		
Max Current (A) / Max Input power (W)		145.6 / 91.0k	145.6 / 95.8k	145.6 / 99.4k		
Starting current (A)		2+2+2+2	2+2+2+2	2+2+2+2		
Time Delay fuse max size (A)		60+60+60+60				
Fan motor output	W / Pole number	750×2+750×2+750×2+750×2 / 8				
External static pressure	Pa	0 ~ 80				
Air flow	m ³ / min	405+405+405+405				
Refrigerant type / amount g		R410A / 38.0k				
Product dimension	Height	mm	1842			
	Width	mm	(1540)+(1540)+(1540)+(1540)+180			
	Depth	mm	1000			
Packing dimension	Height	mm	-			
	Width	mm	-			
	Depth	mm	-			
Weight	(NET) kg	(375)+(375)+(375)+(375)				
	(GROSS) kg	-				
Layers limit		-				
Operation condition	Cool (DBT)	-10°C ~ 52°C				
	Heat (WBT)	-25°C ~ 18°C				
MAX. WORKING PRESSURE	High side bar (MPa)	38.0 (3.80)				
	Low side bar (MPa)	31.1 (3.11)				
P I P I N G	Pipe diameter mm (inch)		(Liquid) 22.22(7/8)			
	(Under 90m for ultimate Indoor unit.)		(Gas) 44.45(1-3/4)			
	Pipe diameter mm (inch) *1		(Liquid) 25.4(1)			
	(Over 90m for ultimate Indoor unit.)		(Gas) 50.8(2)			
	Balance pipe mm (inch)		6.35(1/4)			
	Connecting method		-			
	Max tubing length m		7.5	~	200	
Total Max tubing length m		7.5	~	1000		
Indoor unit & Outdoor unit height difference (Outdoor unit upper / Outdoor unit Lower) m		50 / 40				
Max connectable indoor units pcs.		64				
Max allowable indoor/outdoor capacity ratio %		50 ~ 130 *2				

*1: If the longest tubing equivalent length exceeds 90m, increase the sizes of the main tubes by 1 rank for gas tubes and liquid tubes.

*2: If the following conditions are satisfied, the effective range is above 130 % and below 200 %.

- i) Obey the limited number of connectable indoor units.
- ii) The lower limit of operating range for heating outdoor temperature is limited to -10°CWB (standard -25°CWB).
- iii) Simultaneous operation is limited to less than 130 % of connectable indoor units.







The number of max connectable outdoor units are 4.

Necessary amount of additional refrigerant charge per outdoor unit, for 8HP or 10HP is 5.5kg, for 12HP or 14HP or 16HP or 18HP or 20HP is 7.0kg.


Max total refrigerant amount of 1 outdoor unit is 50kg, for 2 outdoor units is 80kg, for 3 or 4 outdoor units is 100kg.

1. Outdoor Unit

1-2. Dimensional Data U-8ME2E8, U-10ME2E8

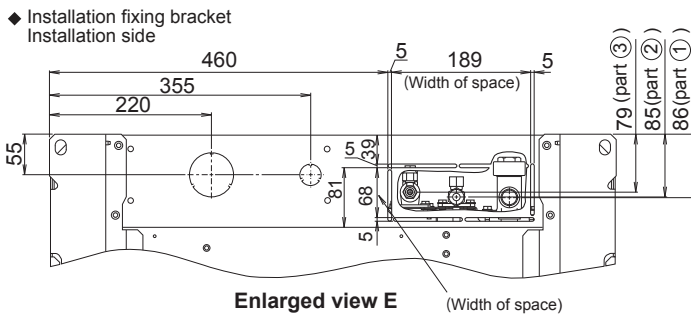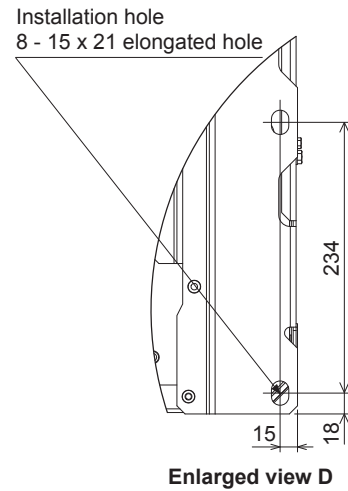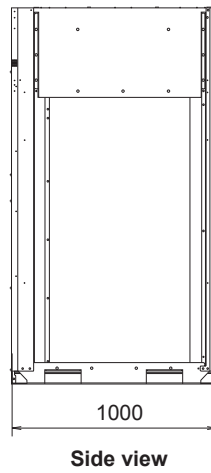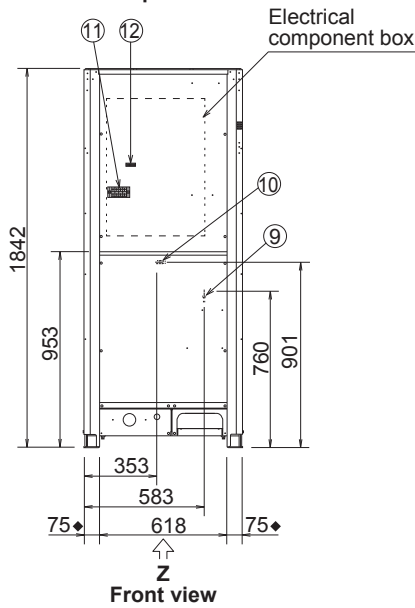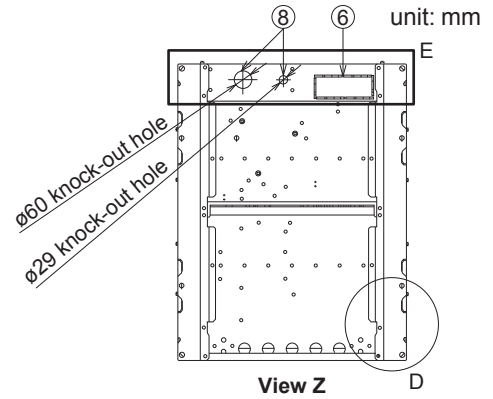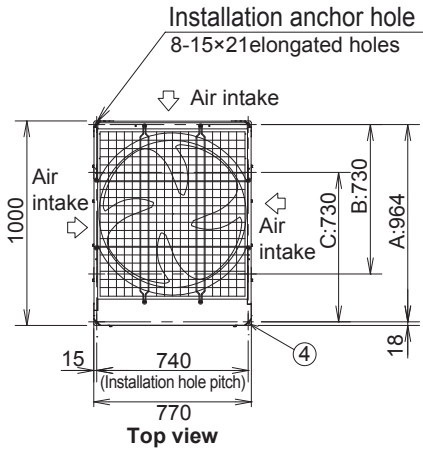

Position of refrigerant tube connection

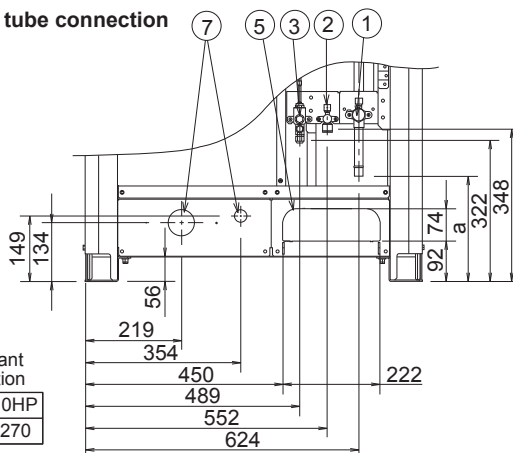

Dimension of refrigerant tube connecting position

Types of unit	8HP	10HP
a	240	270


According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".
 A : 964 (Installation hole pitch) * The tubing is routed out from the front.
 B : 730 (Installation hole pitch) * The tubing is routed out from the bottom.
 C : 730 (Installation hole pitch)

Types of unit		8HP	10HP
①	Refrigerant tubing (gas tube) brazed connection	ø19.05	ø22.22
②	Refrigerant tubing (liquid tube) flared connection	ø9.52	ø9.52
③	Refrigerant tubing (balance tube) flared connection	ø6.35	ø6.35
④	Installation holes(8-15x21 elongated holes), anchor bolts M12 or larger		
⑤	Refrigerant tubing port (front: knock-out hole)		
⑥	Refrigerant tubing port (bottom: slit hole)		
⑦	Electrical wiring port (front: ø60, ø29 knock-out hole - for conduit connection)		
⑧	Electrical wiring port (bottom: ø60, ø29 knock-out hole - for conduit connection)		
⑨	Pressure outlet port (for high pressure: ø7.94 Schrader-type connection)		
⑩	Pressure outlet port (for low pressure: ø7.94 Schrader-type connection)		
⑪	Terminal plate		
⑫	Terminal plate for inter-unit control wiring and/or inter-outdoor unit control wiring		


1. Outdoor Unit

1-2. Dimensional Data (continued)


U-12ME2E8, U-14ME2E8, U-16ME2E8

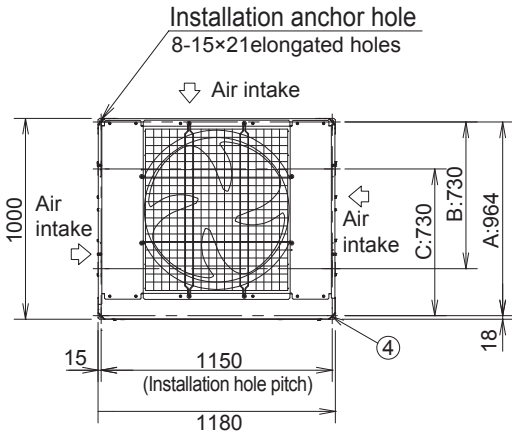


Top view

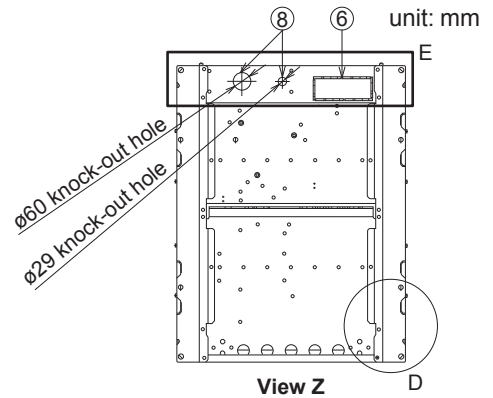


View Z

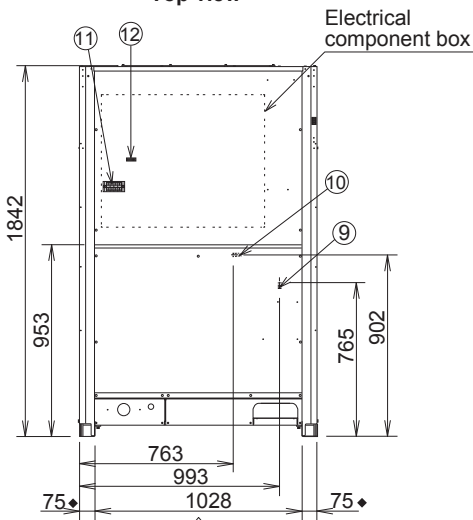

Front view

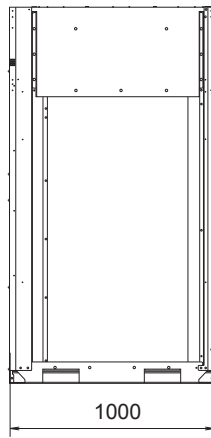


Side view

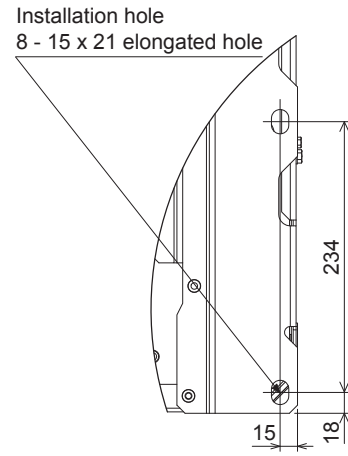


Enlarged view D

◆ Installation fixing bracket
Installation side

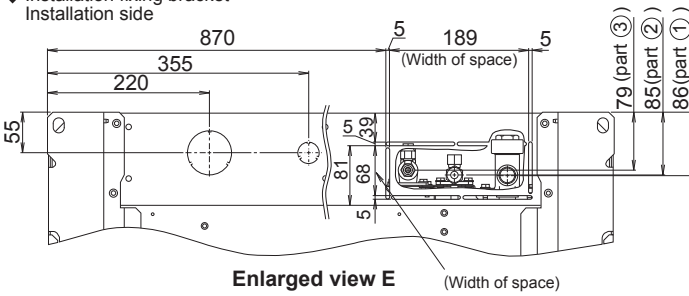

Enlarged view E

Position of refrigerant tube connection

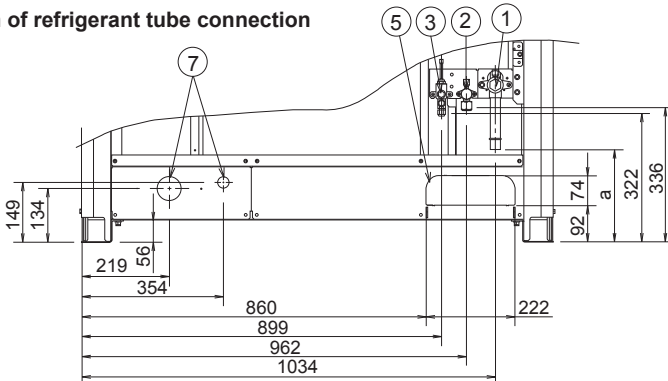

Dimension of refrigerant tube connecting position

Types of unit	12HP	14HP	16HP
a	231	231	154

• 16hp unit dimensions shows a case using the connection tubing supplied with the unit.






According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".
A : 964 (Installation hole pitch) * The tubing is routed out from the front.
B : 730 (Installation hole pitch) * The tubing is routed out from the bottom.
C : 730 (Installation hole pitch)

Types of unit		12HP	14HP	16HP
①	Refrigerant tubing (gas tube)	brazed connection ø25.4	ø25.4	ø28.58
②	Refrigerant tubing (liquid tube)	flared connection ø12.7	ø12.7	ø12.7
③	Refrigerant tubing (balance tube)	flared connection ø6.35	ø6.35	ø6.35
④	Installation holes(8-15x21 elongated holes), anchor bolts M12 or larger			
⑤	Refrigerant tubing port (front: knock-out hole)			
⑥	Refrigerant tubing port (bottom: slit hole)			
⑦	Electrical wiring port (front: ø60, ø29 knock-out hole - for conduit connection)			
⑧	Electrical wiring port (bottom: ø60, ø29 knock-out hole - for conduit connection)			
⑨	Pressure outlet port (for high pressure: ø7.94 Schrader-type connection)			
⑩	Pressure outlet port (for low pressure: ø7.94 Schrader-type connection)			
⑪	Terminal plate			
⑫	Terminal plate for inter-unit control wiring and/or inter-outdoor unit control wiring			

1. Outdoor Unit

1-2. Dimensional Data (continued)

U-18ME2E8, U-20ME2E8

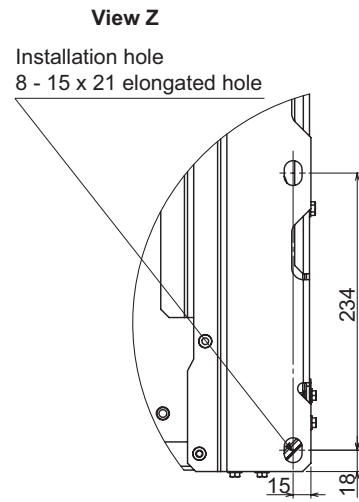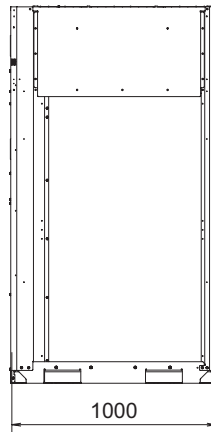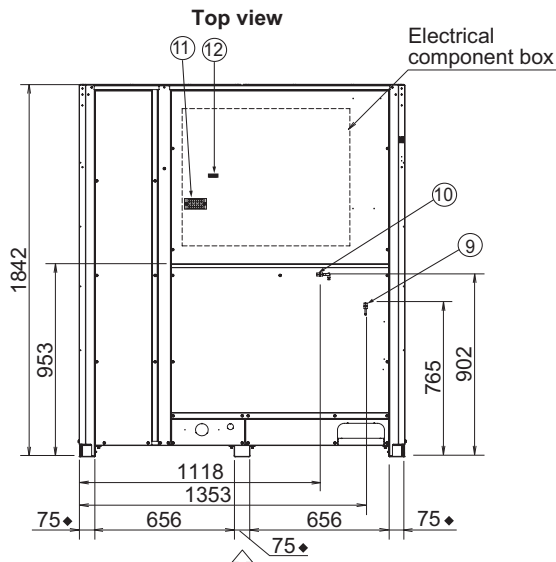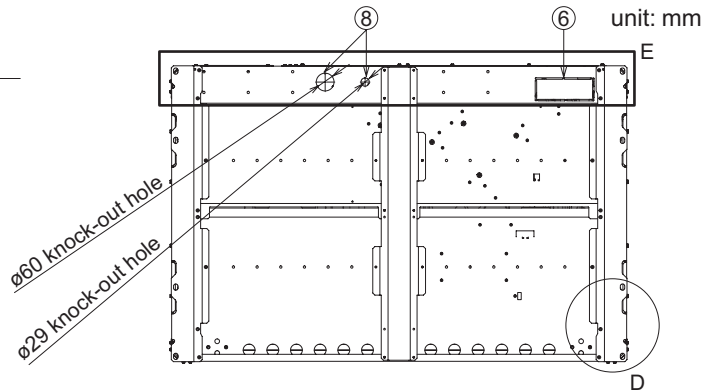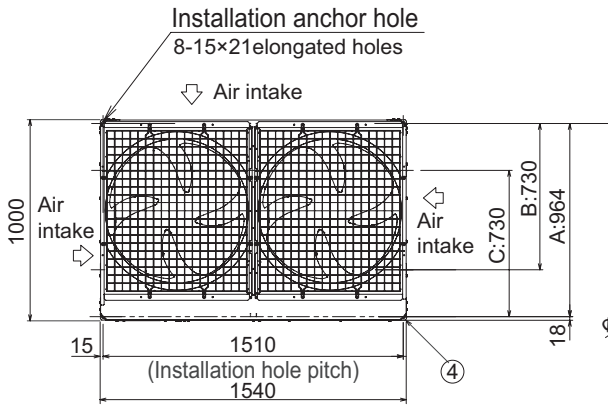


◆ Installation fixing bracket
Installation side

Front view


Side view

Enlarged view D

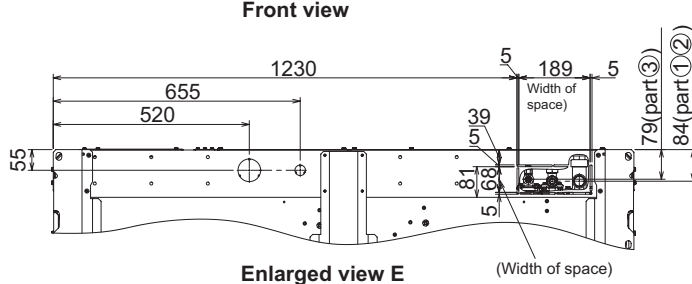

Enlarged view E

Position of refrigerant tube connection

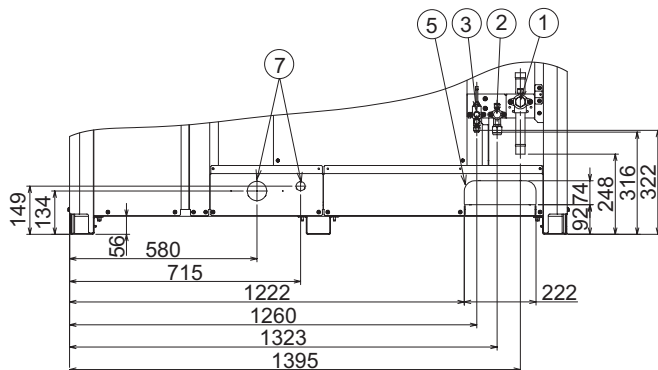

According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".
A : 964 (Installation hole pitch) * The tubing is routed out from the front.
B : 730 (Installation hole pitch) * The tubing is routed out from the bottom.
C : 730 (Installation hole pitch)

Types of unit		18HP	20HP
①	Refrigerant tubing (gas tube) brazed connection	ø28.58	ø28.58
②	Refrigerant tubing (liquid tube) flared connection	ø15.88	ø15.88
③	Refrigerant tubing (balance tube) flared connection	ø6.35	ø6.35
④	Installation holes(8-15x21 elongated holes), anchor bolts M12 or larger		
⑤	Refrigerant tubing port (front: knock-out hole)		
⑥	Refrigerant tubing port (bottom: slit hole)		
⑦	Electrical wiring port (front: ø60, ø29 knock-out hole - for conduit connection)		
⑧	Electrical wiring port (bottom: ø60, ø29 knock-out hole - for conduit connection)		
⑨	Pressure outlet port (for high pressure: ø7.94 Schrader-type connection)		
⑩	Pressure outlet port (for low pressure: ø7.94 Schrader-type connection)		
⑪	Terminal plate		
⑫	Terminal plate for inter-unit control wiring and/or inter-outdoor unit control wiring		


* It is also possible to route the refrigerant tubing and the wiring connection out through the bottom.

1. Outdoor Unit

1-3. Multiple Unit Installation Example

● Diagrams for 8HP ~ 80HP

Unit: mm

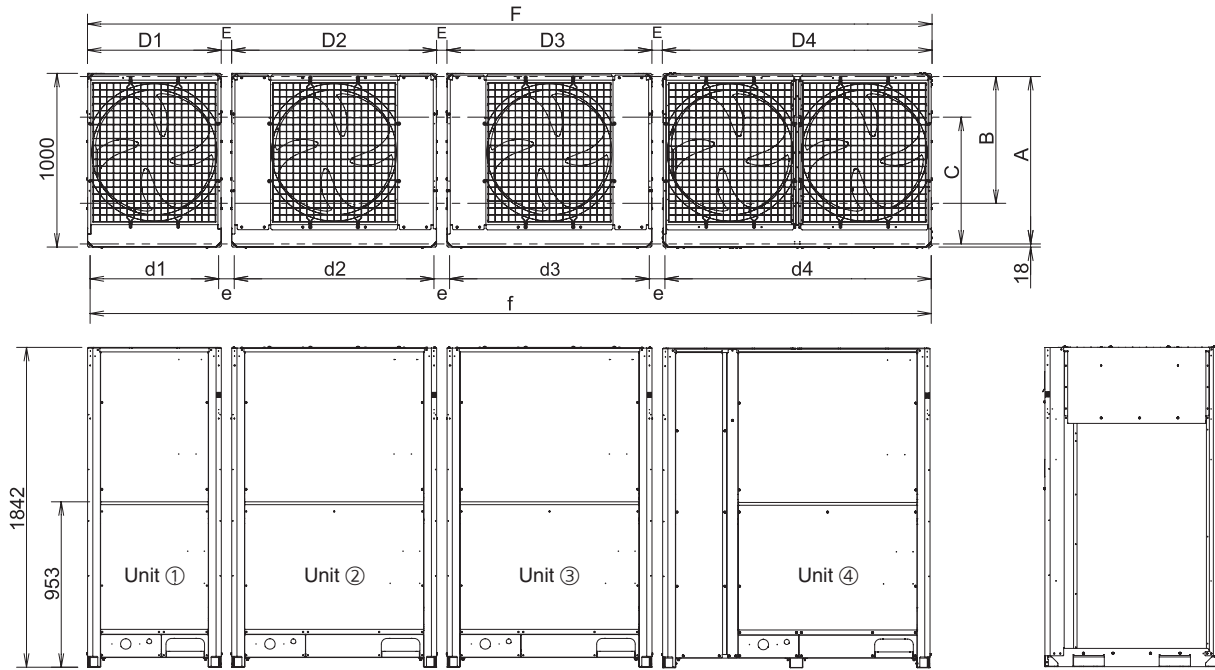

Capacity	Combination				Dimensions of single unit				Distance between units		Dimensions of combination unit		Dimensions of single unit installation hole				Distance between unit installation hole		Dimensions of combination unit installation hole		
	①	②	③	④	D1	D2	D3	D4	E(+1)	E(+2)	F(+1)	F(+2)	d1	d2	d3	d4	e(+1)	e(+2)	f(+1)	f(+2)	
8HP	8	—	—	—	770	—	—	—	—	—	770	770	740	—	—	—	—	—	—	740	740
10HP	10	—	—	—	770	—	—	—	—	—	770	770	740	—	—	—	—	—	—	740	740
12HP	12	—	—	—	1180	—	—	—	—	—	1180	1180	1150	—	—	—	—	—	—	1150	1150
14HP	14	—	—	—	1180	—	—	—	—	—	1180	1180	1150	—	—	—	—	—	—	1150	1150
16HP	16	—	—	—	1180	—	—	—	—	—	1180	1180	1150	—	—	—	—	—	—	1150	1150
18HP	18	—	—	—	1540	—	—	—	—	—	1540	1540	1510	—	—	—	—	—	—	1510	1510
20HP	20	—	—	—	1540	—	—	—	—	—	1540	1540	1510	—	—	—	—	—	—	1510	1510
22HP	10	12	—	—	770	1180	—	—	60	180	2010	2130	740	1150	—	—	90	210	1980	2100	
24HP	12	12	—	—	1180	1180	—	—	60	180	2420	2540	1150	1150	—	—	90	210	2390	2510	
26HP	10	16	—	—	770	1180	—	—	60	180	2010	2130	740	1150	—	—	90	210	1980	2100	
28HP	12	16	—	—	1180	1180	—	—	60	180	2420	2540	1150	1150	—	—	90	210	2390	2510	
30HP	14	16	—	—	1180	1180	—	—	60	180	2420	2540	1150	1150	—	—	90	210	2390	2510	
32HP	16	16	—	—	1180	1180	—	—	60	180	2420	2540	1150	1150	—	—	90	210	2390	2510	
34HP	14	20	—	—	1180	1540	—	—	60	180	2780	2900	1150	1510	—	—	90	210	2750	2870	
36HP	16	20	—	—	1180	1540	—	—	60	180	2780	2900	1150	1510	—	—	90	210	2750	2870	
38HP	18	20	—	—	1540	1540	—	—	60	180	3140	3260	1510	1510	—	—	90	210	3110	3230	
40HP	20	20	—	—	1540	1540	—	—	60	180	3140	3260	1510	1510	—	—	90	210	3110	3230	
42HP	10	16	16	—	770	1180	1180	—	60	180	3250	3490	740	1150	1150	—	90	210	3220	3460	
44HP	12	16	16	—	1180	1180	1180	—	60	180	3660	3900	1150	1150	1150	—	90	210	3630	3870	
46HP	14	16	16	—	1180	1180	1180	—	60	180	3660	3900	1150	1150	1150	—	90	210	3630	3870	
48HP	16	16	16	—	1180	1180	1180	—	60	180	3660	3900	1150	1150	1150	—	90	210	3630	3870	
50HP	14	16	20	—	1180	1180	1540	—	60	180	4020	4260	1150	1150	1510	—	90	210	3990	4230	
52HP	16	16	20	—	1180	1180	1540	—	60	180	4020	4260	1150	1150	1510	—	90	210	3990	4230	
54HP	14	20	20	—	1180	1540	1540	—	60	180	4380	4620	1150	1510	1510	—	90	210	4350	4590	
56HP	16	20	20	—	1180	1540	1540	—	60	180	4380	4620	1150	1510	1510	—	90	210	4350	4590	
58HP	18	20	20	—	1540	1540	1540	—	60	180	4740	4980	1510	1510	1510	—	90	210	4710	4950	
60HP	20	20	20	—	1540	1540	1540	—	60	180	4740	4980	1510	1510	1510	—	90	210	4710	4950	
62HP	14	16	16	16	1180	1180	1180	1180	60	180	4900	5260	1150	1150	1150	1150	90	210	4870	5230	
64HP	16	16	16	16	1180	1180	1180	1180	60	180	4900	5260	1150	1150	1150	1150	90	210	4870	5230	
66HP	10	16	20	20	770	1180	1540	1540	60	180	5210	5570	740	1150	1510	1510	90	210	5180	5540	
68HP	12	16	20	20	1180	1180	1540	1540	60	180	5620	5980	1150	1150	1510	1510	90	210	5590	5950	
70HP	10	20	20	20	770	1540	1540	1540	60	180	5570	5930	740	1510	1510	1510	90	210	5540	5900	
72HP	16	16	20	20	1180	1180	1540	1540	60	180	5620	5980	1150	1150	1510	1510	90	210	5590	5950	
74HP	16	18	20	20	1180	1540	1540	1540	60	180	5980	6340	1150	1510	1510	1510	90	210	5950	6310	
76HP	16	20	20	20	1180	1540	1540	1540	60	180	5980	6340	1150	1510	1510	1510	90	210	5950	6310	
78HP	18	20	20	20	1540	1540	1540	1540	60	180	6340	6700	1510	1510	1510	1510	90	210	6310	6670	
80HP	20	20	20	20	1540	1540	1540	1540	60	180	6340	6700	1510	1510	1510	1510	90	210	6310	6670	

According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from A, B or C.

A: 964: (Installation hole pitch) : For removing tube forward. Use the data with the asterisk (*) in combination of each unit dimension.

B: 730: (Installation hole pitch) : For removing tube downward. Use the data with the asterisk (*) in combination of each unit dimension.


C: 730: (Installation hole pitch) : Use the data with the asterisk (*) in combination of each unit dimension.

1. Outdoor Unit

1-4. Position of Center of Gravity


U-8ME2E8, U-10ME2E8

Unit: mm

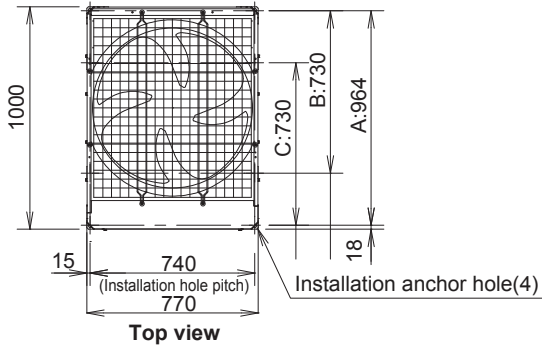

Position of center of gravity

Model	Position of center of gravity			Weight (kg)
	X	Y	Z	
U-8ME2E8	375	455	890	210
U-10ME2E8	375	455	890	210

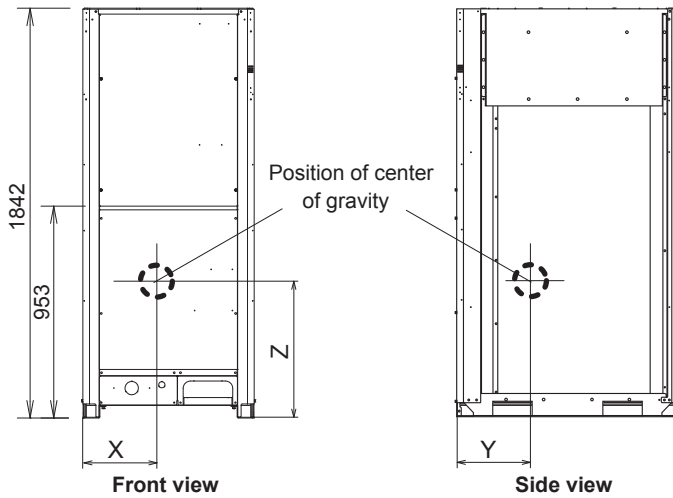


• According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".

A : 964 (Installation hole pitch) * The tubing is routed out from the front.
B : 730 (Installation hole pitch) * The tubing is routed out from the bottom.
C : 730 (Installation hole pitch)


U-12ME2E8, U-14ME2E8, U-16ME2E8

Unit: mm

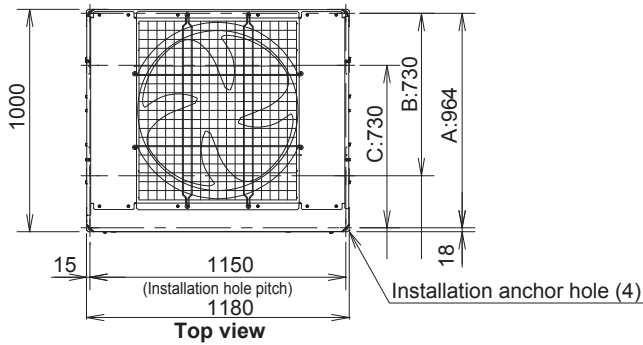

Position of center of gravity

Model	Position of center of gravity			Weight (kg)
	X	Y	Z	
U-12ME2E8	630	480	870	270
U-14ME2E8	615	440	785	315
U-16ME2E8	615	440	785	315

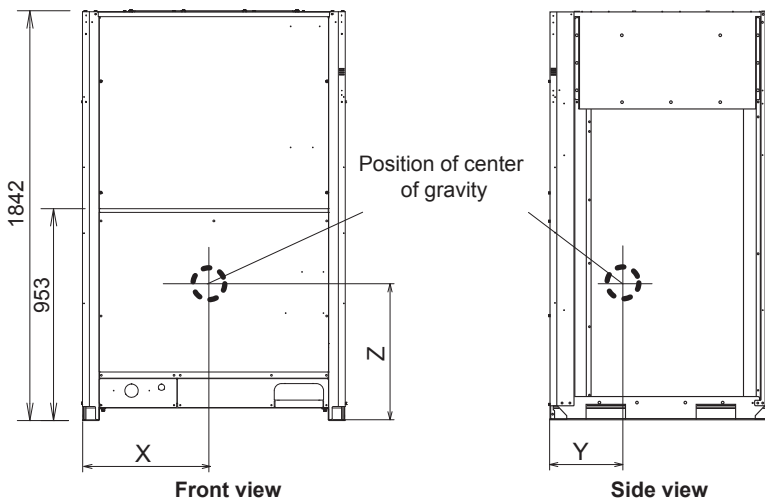

• According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".


A : 964 (Installation hole pitch) * The tubing is routed out from the front.
B : 730 (Installation hole pitch) * The tubing is routed out from the bottom.
C : 730 (Installation hole pitch)

1. Outdoor Unit

1-4. Position of Center of Gravity (continued)

U-18ME2E8, U-20ME2E8


Unit: mm

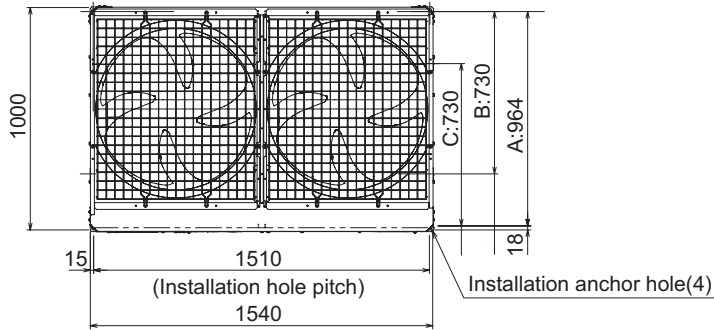

Top view

Position of center of gravity

Model	Position of center of gravity			Weight (kg)
	X	Y	Z	
U-18ME2E8	860	455	820	375
U-20ME2E8	860	455	820	375

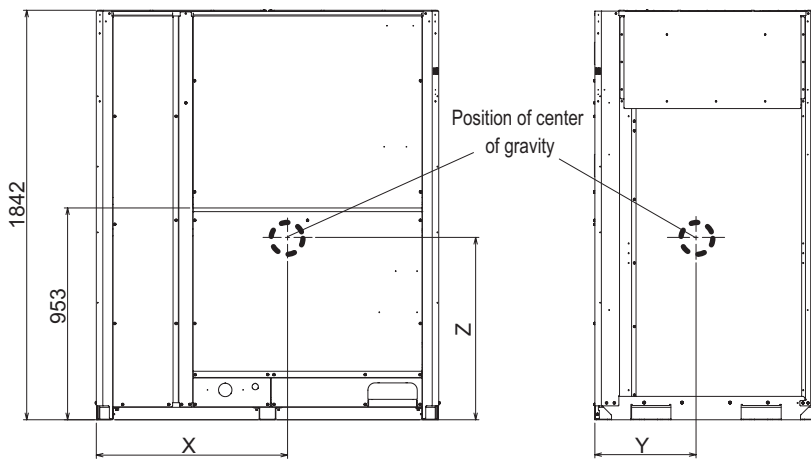

Front view

Side view

• According to the installation site, you may choose the setting position in the depth direction of the anchor bolt from "A", "B" or "C".


A : 964 (Installation hole pitch) * The tubing is routed out from the front.
B : 730 (Installation hole pitch) * The tubing is routed out from the bottom.
C : 730 (Installation hole pitch)

1. Outdoor Unit

1-5. Refrigerant Flow Diagram

U-8ME2E8, U-10ME2E8, U-12ME2E8

Ex.	Name
	Thermistor
	Filter
	Capillary tube
	Solenoid valve
	Check valve
	Electronic control valve
	Closed
	Schrader valve

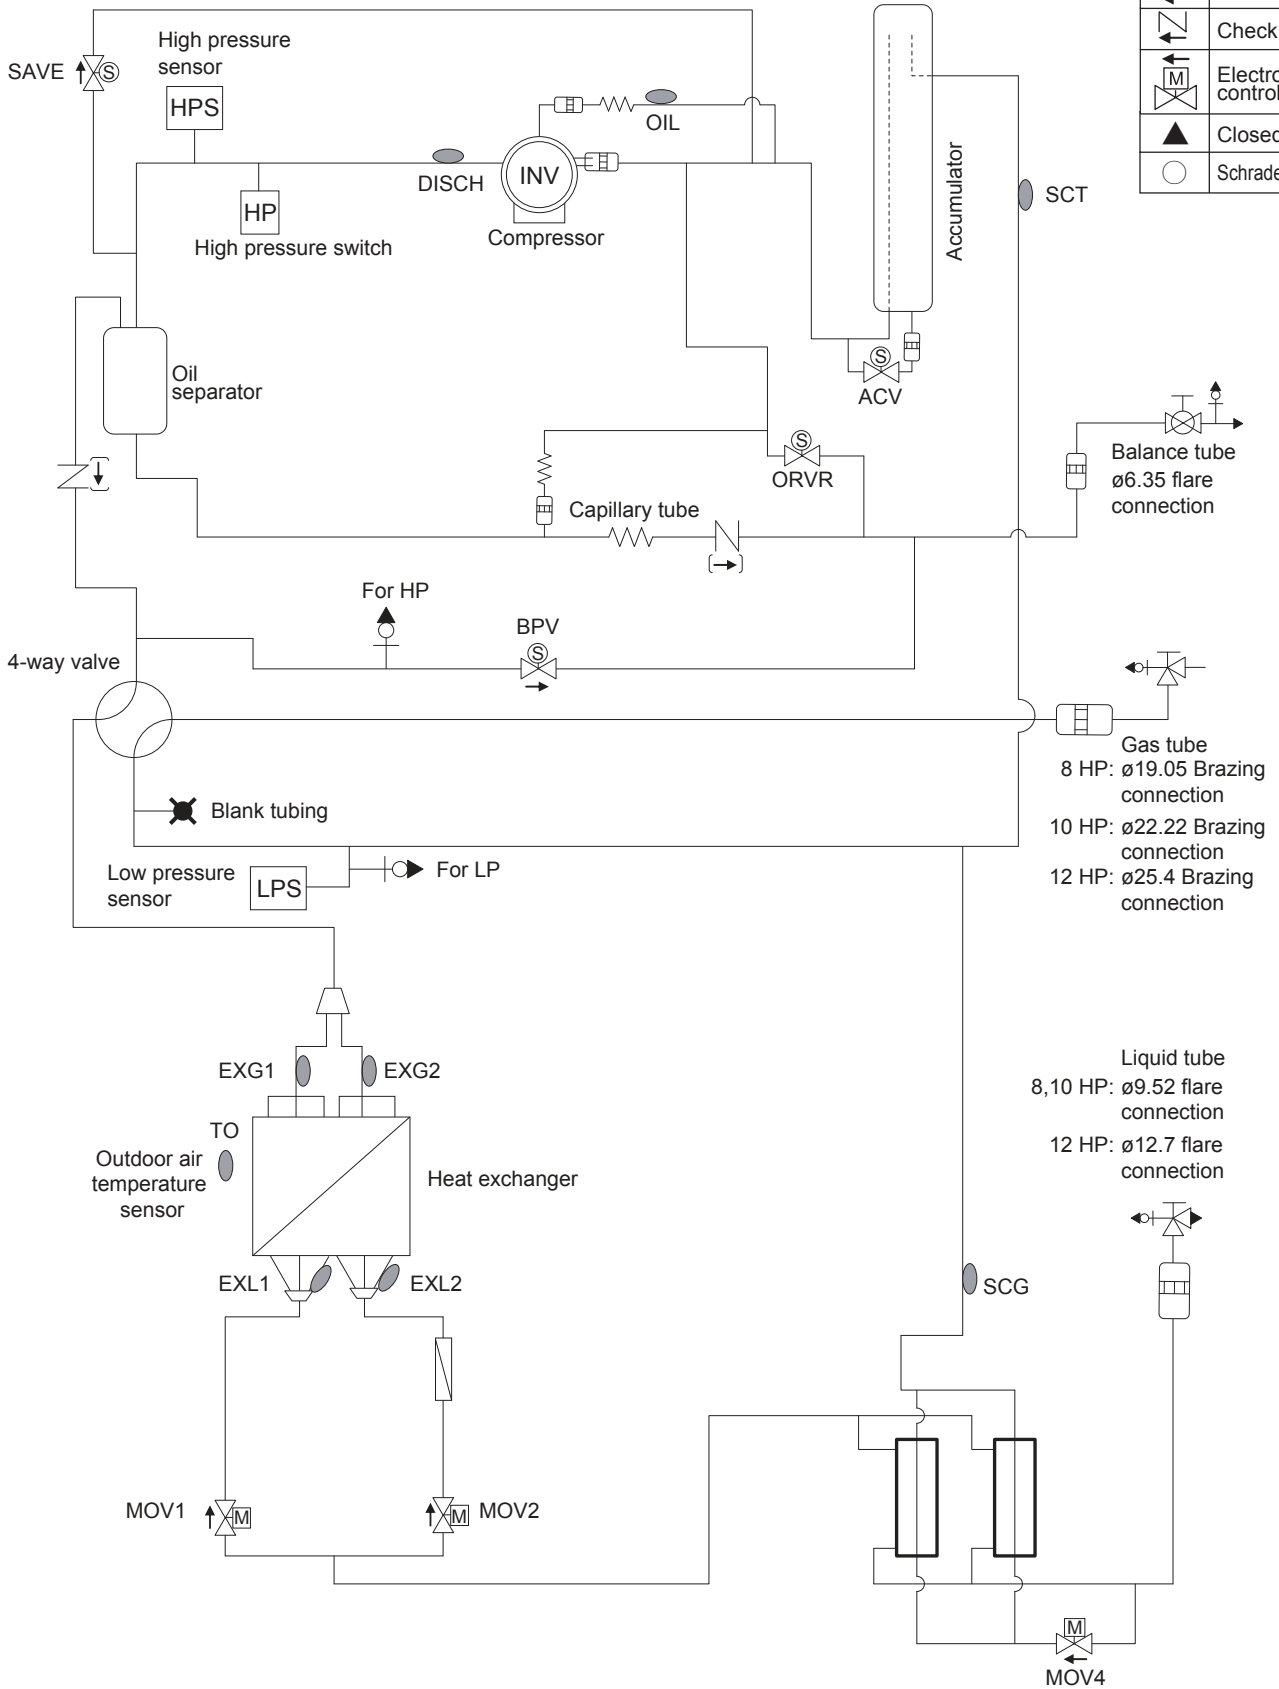

- Balance tube
ø6.35 flare connection
- Gas tube
8 HP: ø19.05 Brazing connection
10 HP: ø22.22 Brazing connection
12 HP: ø25.4 Brazing connection
- Liquid tube
8,10 HP: ø9.52 flare connection
12 HP: ø12.7 flare connection




1. Outdoor Unit

1-5. Refrigerant Flow Diagram (continued)

U-14ME2E8, U-16ME2E8


Ex.	Name
	Thermistor
	Filter
	Capillary tube
	Solenoid valve
	Check valve
	Electronic control valve
	Closed
	Schrader valve

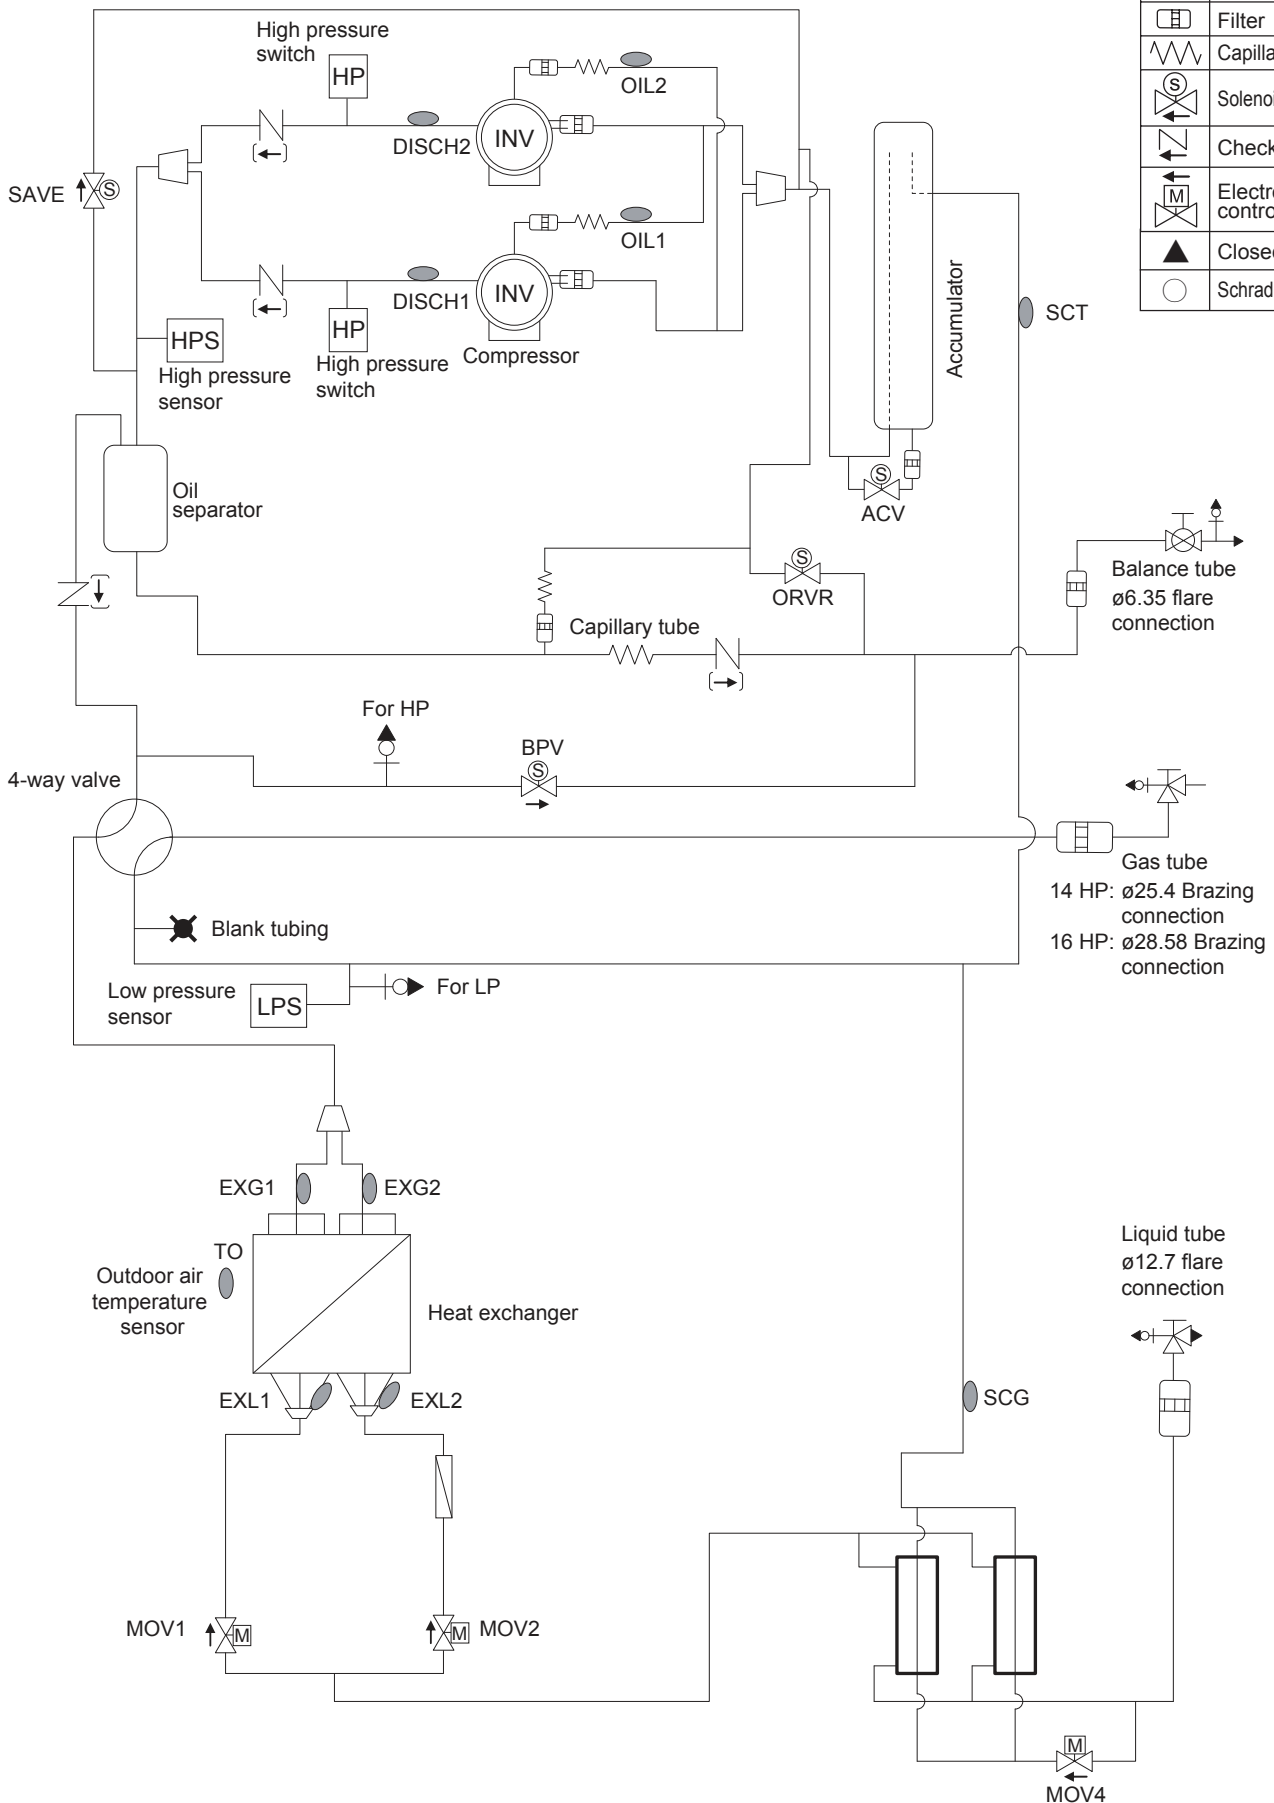

4

1. Outdoor Unit

1-5. Refrigerant Flow Diagram (continued)
U-18ME2E8, U-20ME2E8


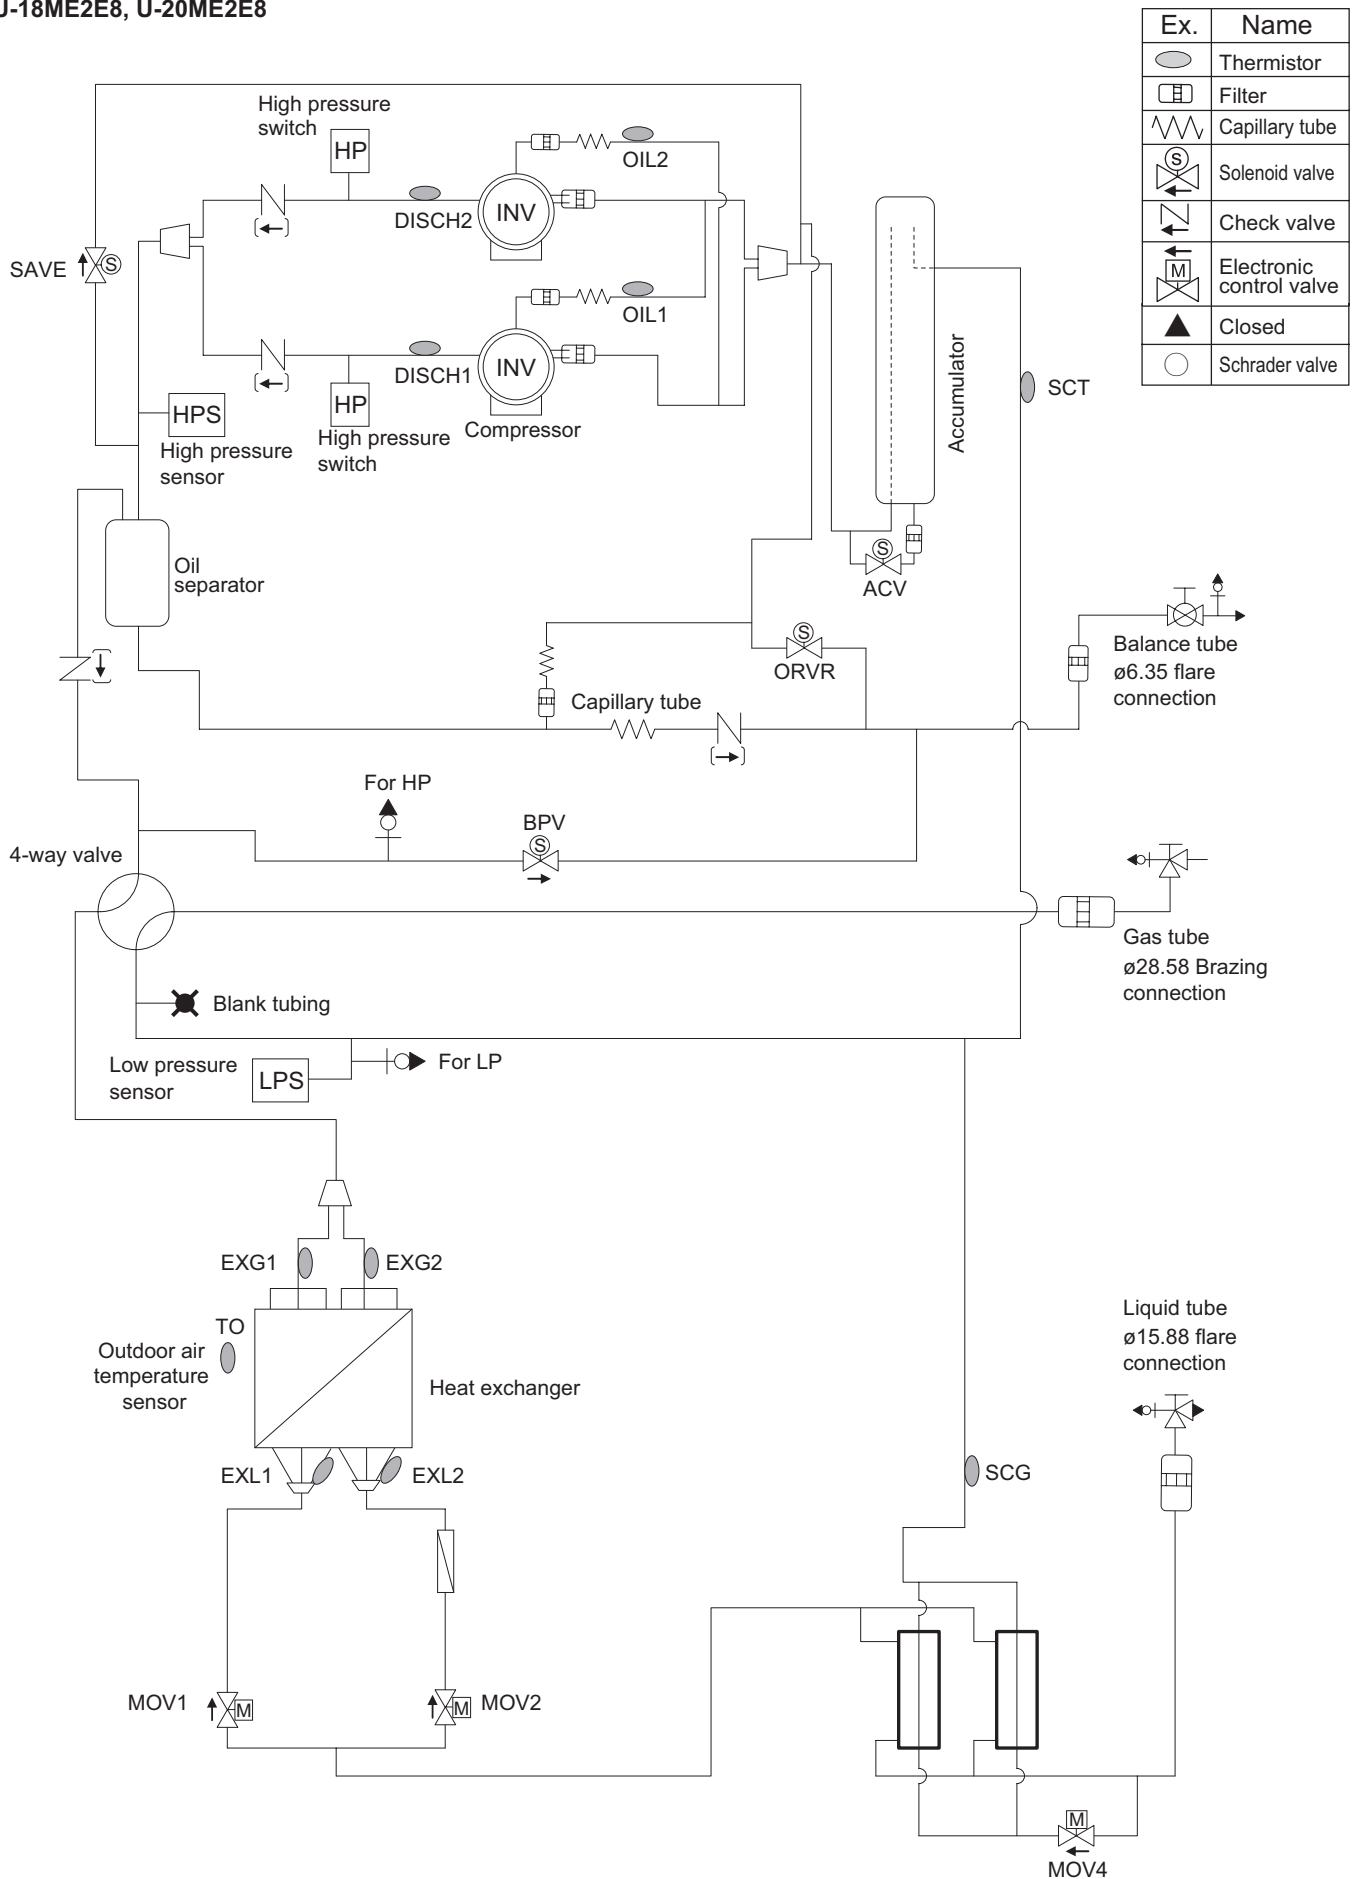


1. Outdoor Unit

1-6. Noise Criterion Curves



MODEL	U-8ME2E8	50Hz ● Standard mode -●- Quiet mode
SOUND LEVEL dB(A) (Cooling/Heating)	54.0 (Quiet mode 51.0)	
CONDITION	1 m in front at height of 1.5 m	

MODEL	U-10ME2E8	50Hz ● Standard mode -●- Quiet mode
SOUND LEVEL dB(A) (Cooling/Heating)	56.0 (Quiet mode 53.0)	
CONDITION	1 m in front at height of 1.5 m	

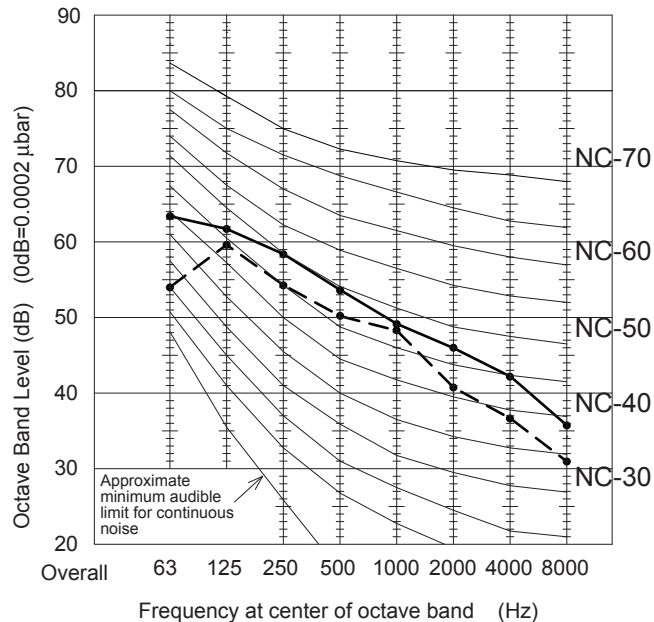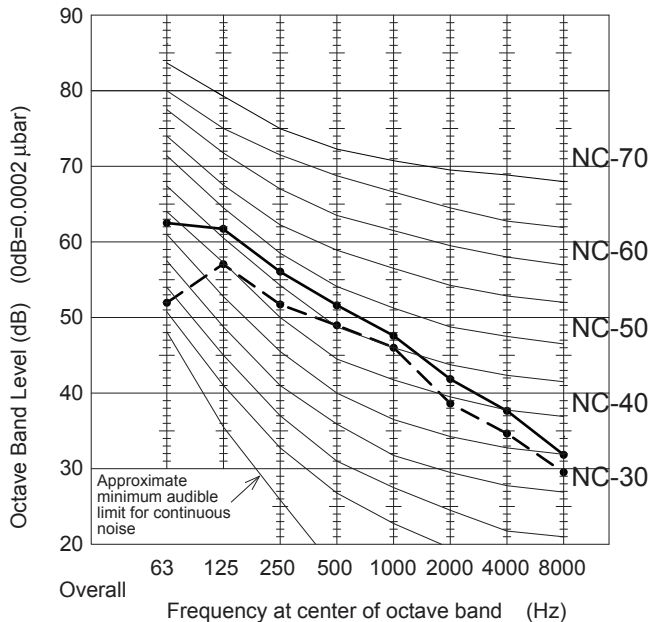

MODEL	U-12ME2E8	50Hz ● Standard mode -●- Quiet mode
SOUND LEVEL dB(A) (Cooling/Heating)	59.0 (Quiet mode 56.0)	
CONDITION	1 m in front at height of 1.5 m	

MODEL	U-14ME2E8	50Hz ● Standard mode -●- Quiet mode
SOUND LEVEL dB(A) (Cooling/Heating)	60.0 (Quiet mode 57.0)	
CONDITION	1 m in front at height of 1.5 m	

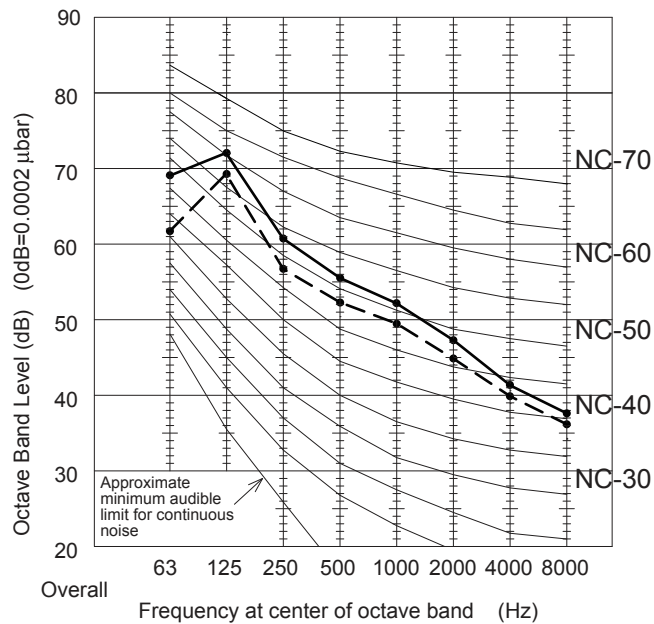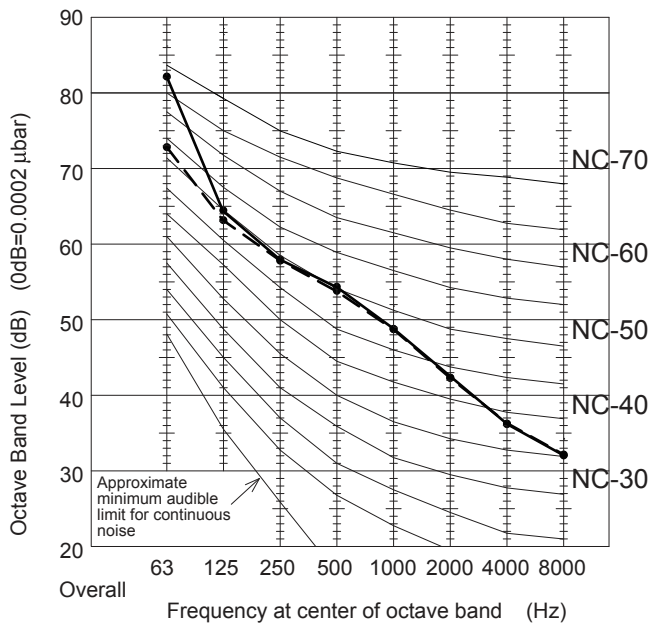


4


1. Outdoor Unit

1-6. Noise Criterion Curves (continued)


MODEL	U-16ME2E8	50Hz ● Standard mode ● Quiet mode
SOUND LEVEL dB(A) (Cooling/Heating)	61.0 (Quiet mode 58.0)	
CONDITION	1 m in front at height of 1.5 m	

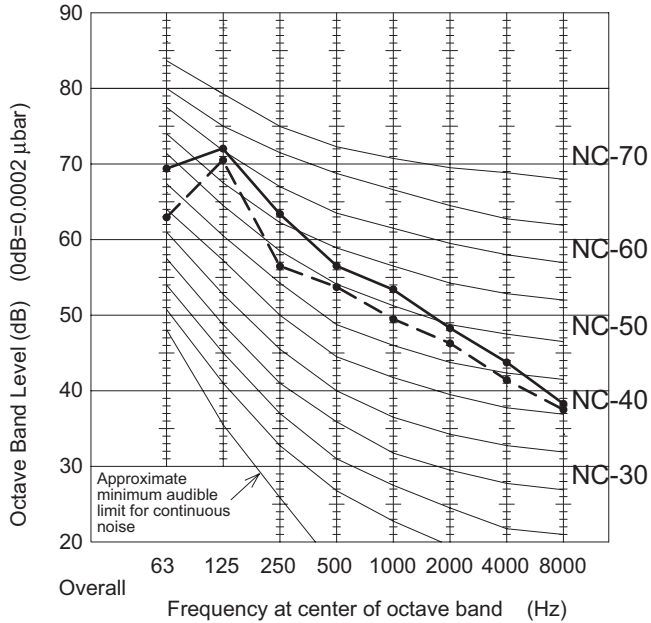

MODEL	U-18ME2E8	50Hz ● Standard mode ● Quiet mode
SOUND LEVEL dB(A) (Cooling/Heating)	59.0 (Quiet mode 56.0)	
CONDITION	1 m in front at height of 1.5 m	

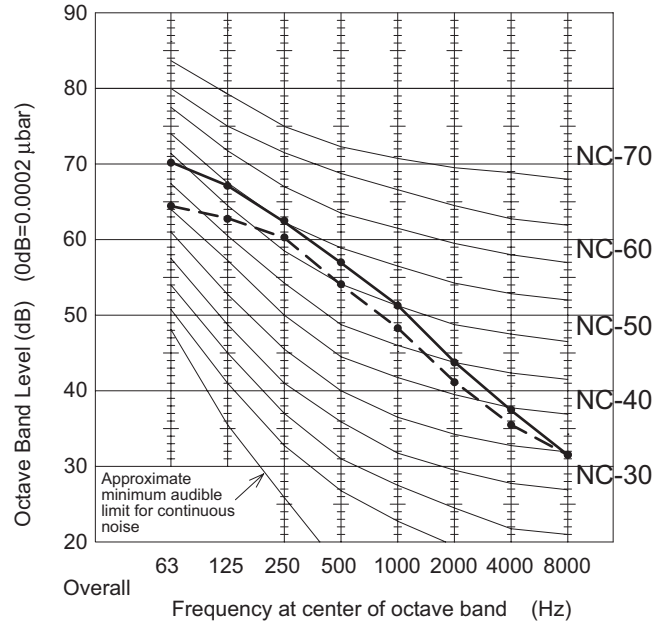

MODEL	U-20ME2E8	50Hz ● Standard mode ● Quiet mode
SOUND LEVEL dB(A) (Cooling/Heating)	60.0 (Quiet mode 57.0)	
CONDITION	1 m in front at height of 1.5 m	

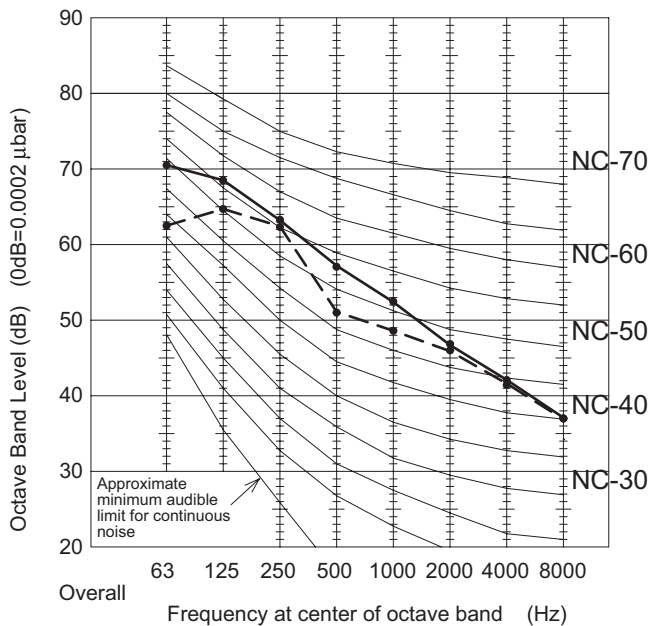

Contents

5. TEST RUN


- 1. Preparing for Test Run 5-2
- 2. Test Run Procedure 5-3
- 3. Main Outdoor Unit PCB Setting..... 5-4
- 4. Auto Address Setting 5-7
- 5. Remote Controller Test Run Settings 5-15
- 6. Caution for Pump Down 5-16
- 7. Self-Diagnosis Function Table and Contents of Alarm Display..... 5-16

1. Preparing for Test Run


1. Preparing for Test Run

● Before attempting to start the air conditioner, check the following.

- (1) All loose matter is removed from the cabinet especially steel filings, bits of wire, and clips.
- (2) The control wiring is correctly connected and all electrical connections are tight.
- (3) The protective spacers for the compressor used for transportation have been removed. If not, remove them now.
- (4) The transportation pads for the indoor fan have been removed. If not, remove them now.
- (5) The power has been connected to the unit for at least 5 hours before starting the compressor. The bottom of the compressor should be warm to the touch and the crankcase heater around the feet of the compressor should be hot to the touch.

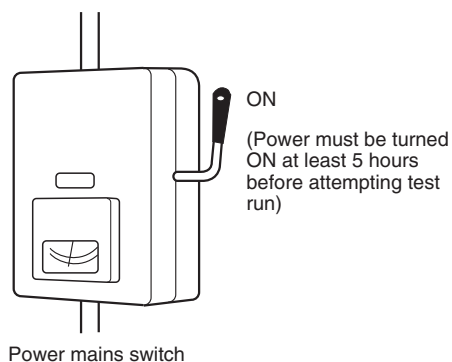

- (6) Both the gas and liquid tube service valves are open. If not, open them now.

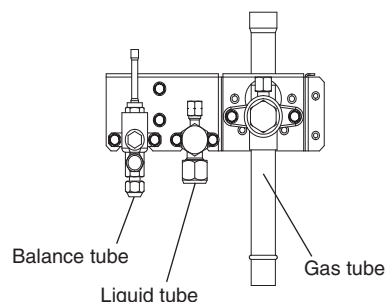


- (7) Request that the customer be present for the trial run. Explain the contents of the operating instructions, then have the customer actually operate the system.
- (8) Be sure to give the operating instructions and warranty certificate to the customer.
- (9) When replacing the control PCB, be sure to make all the same settings on the new PCB as were in use before replacement.
The existing EEPROM is not changed, and is connected to the new control PCB.

2. Test Run Procedure

2. Test Run Procedure


Notes:

1. Use caution when making the settings. If there are duplicated system addresses, or if the settings for the number of indoor units are not consistent, an alarm will occur and the system will not start.
2. These settings are not made on the indoor unit P.C. board.

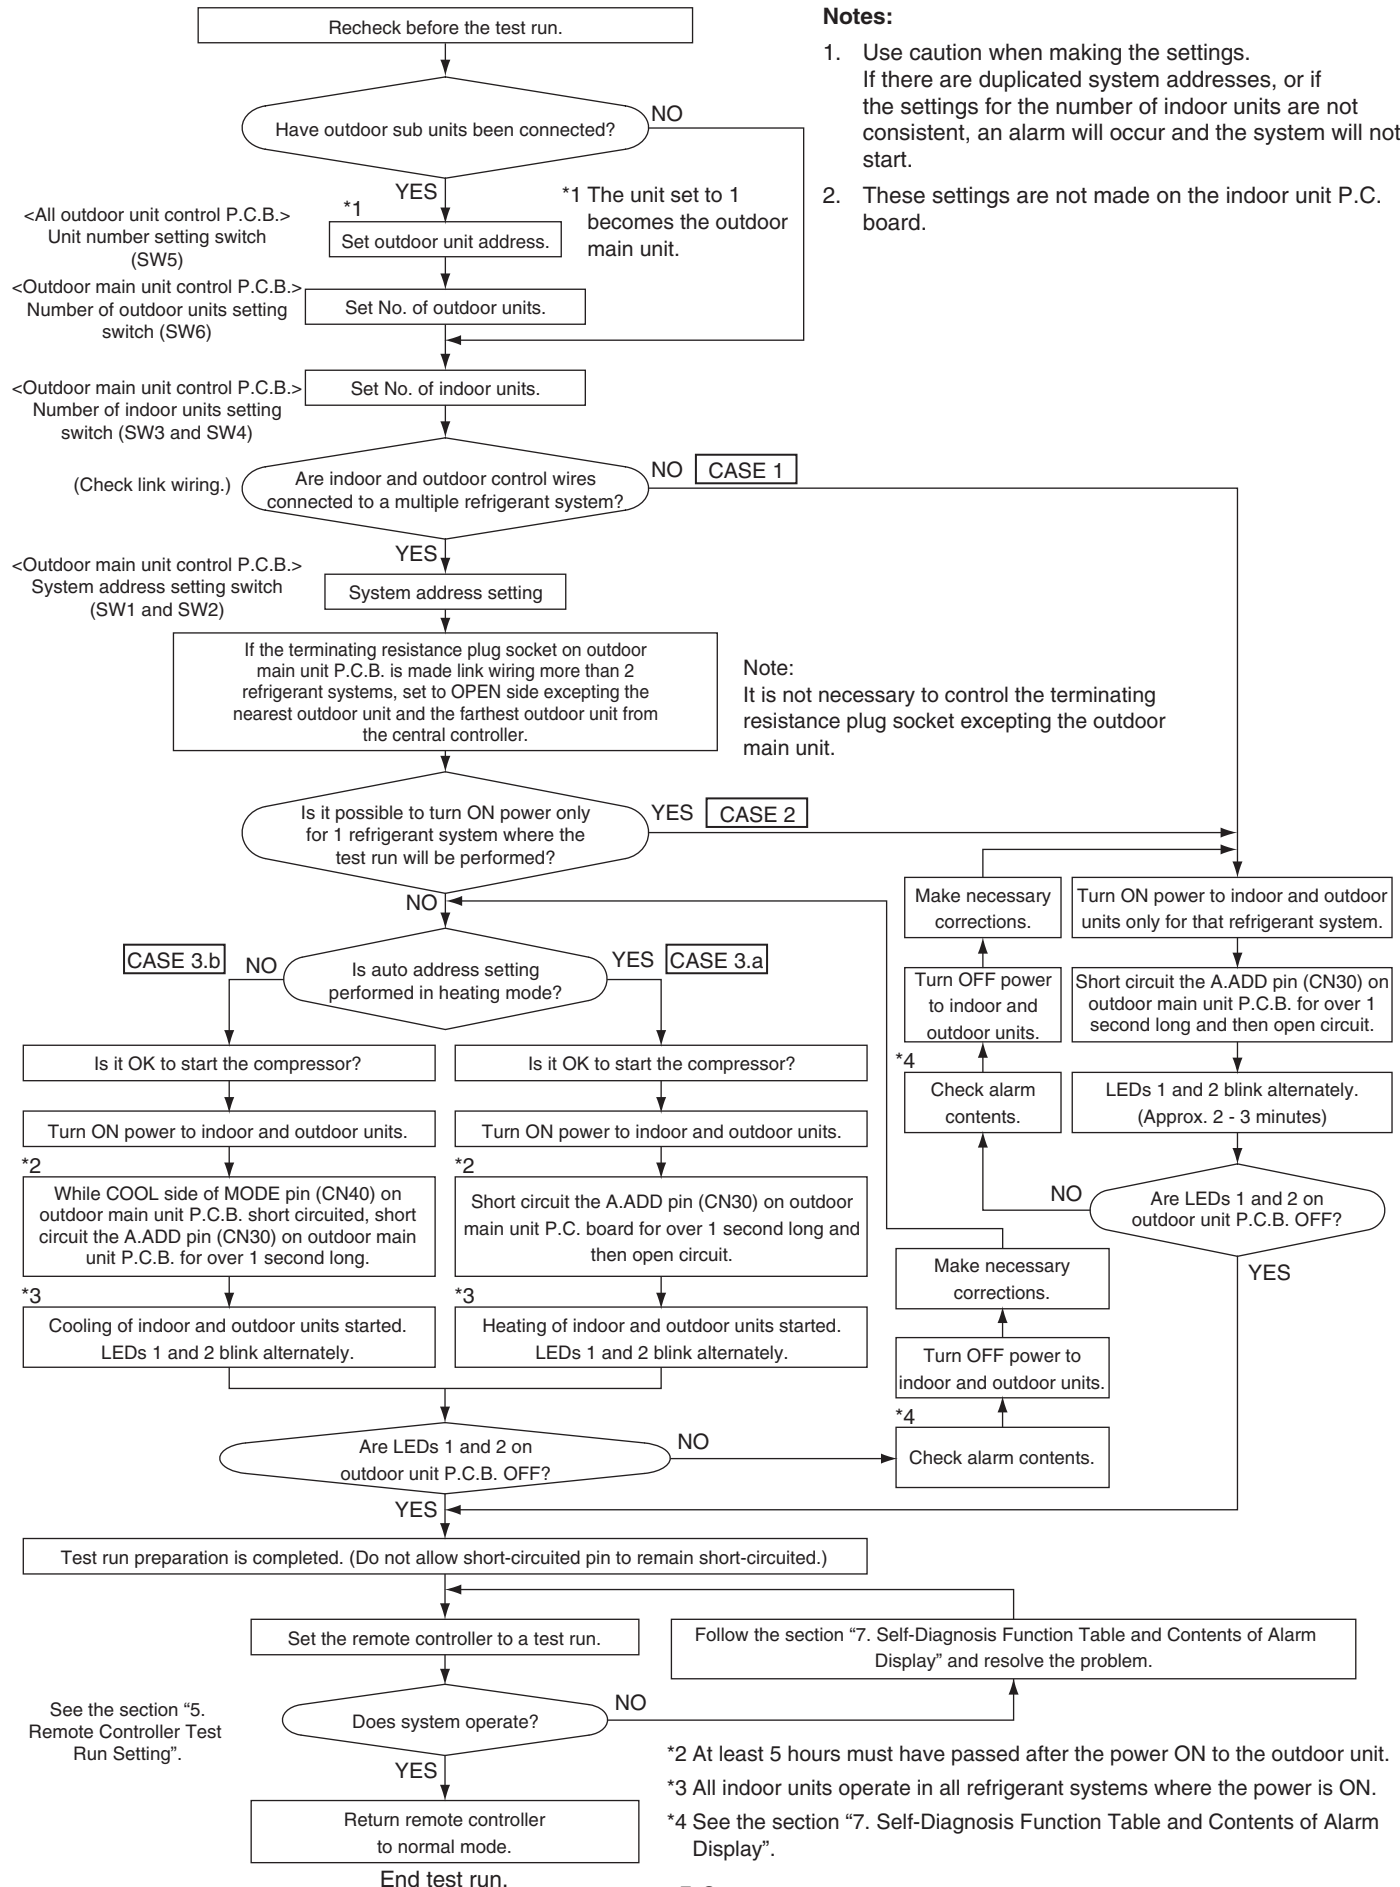



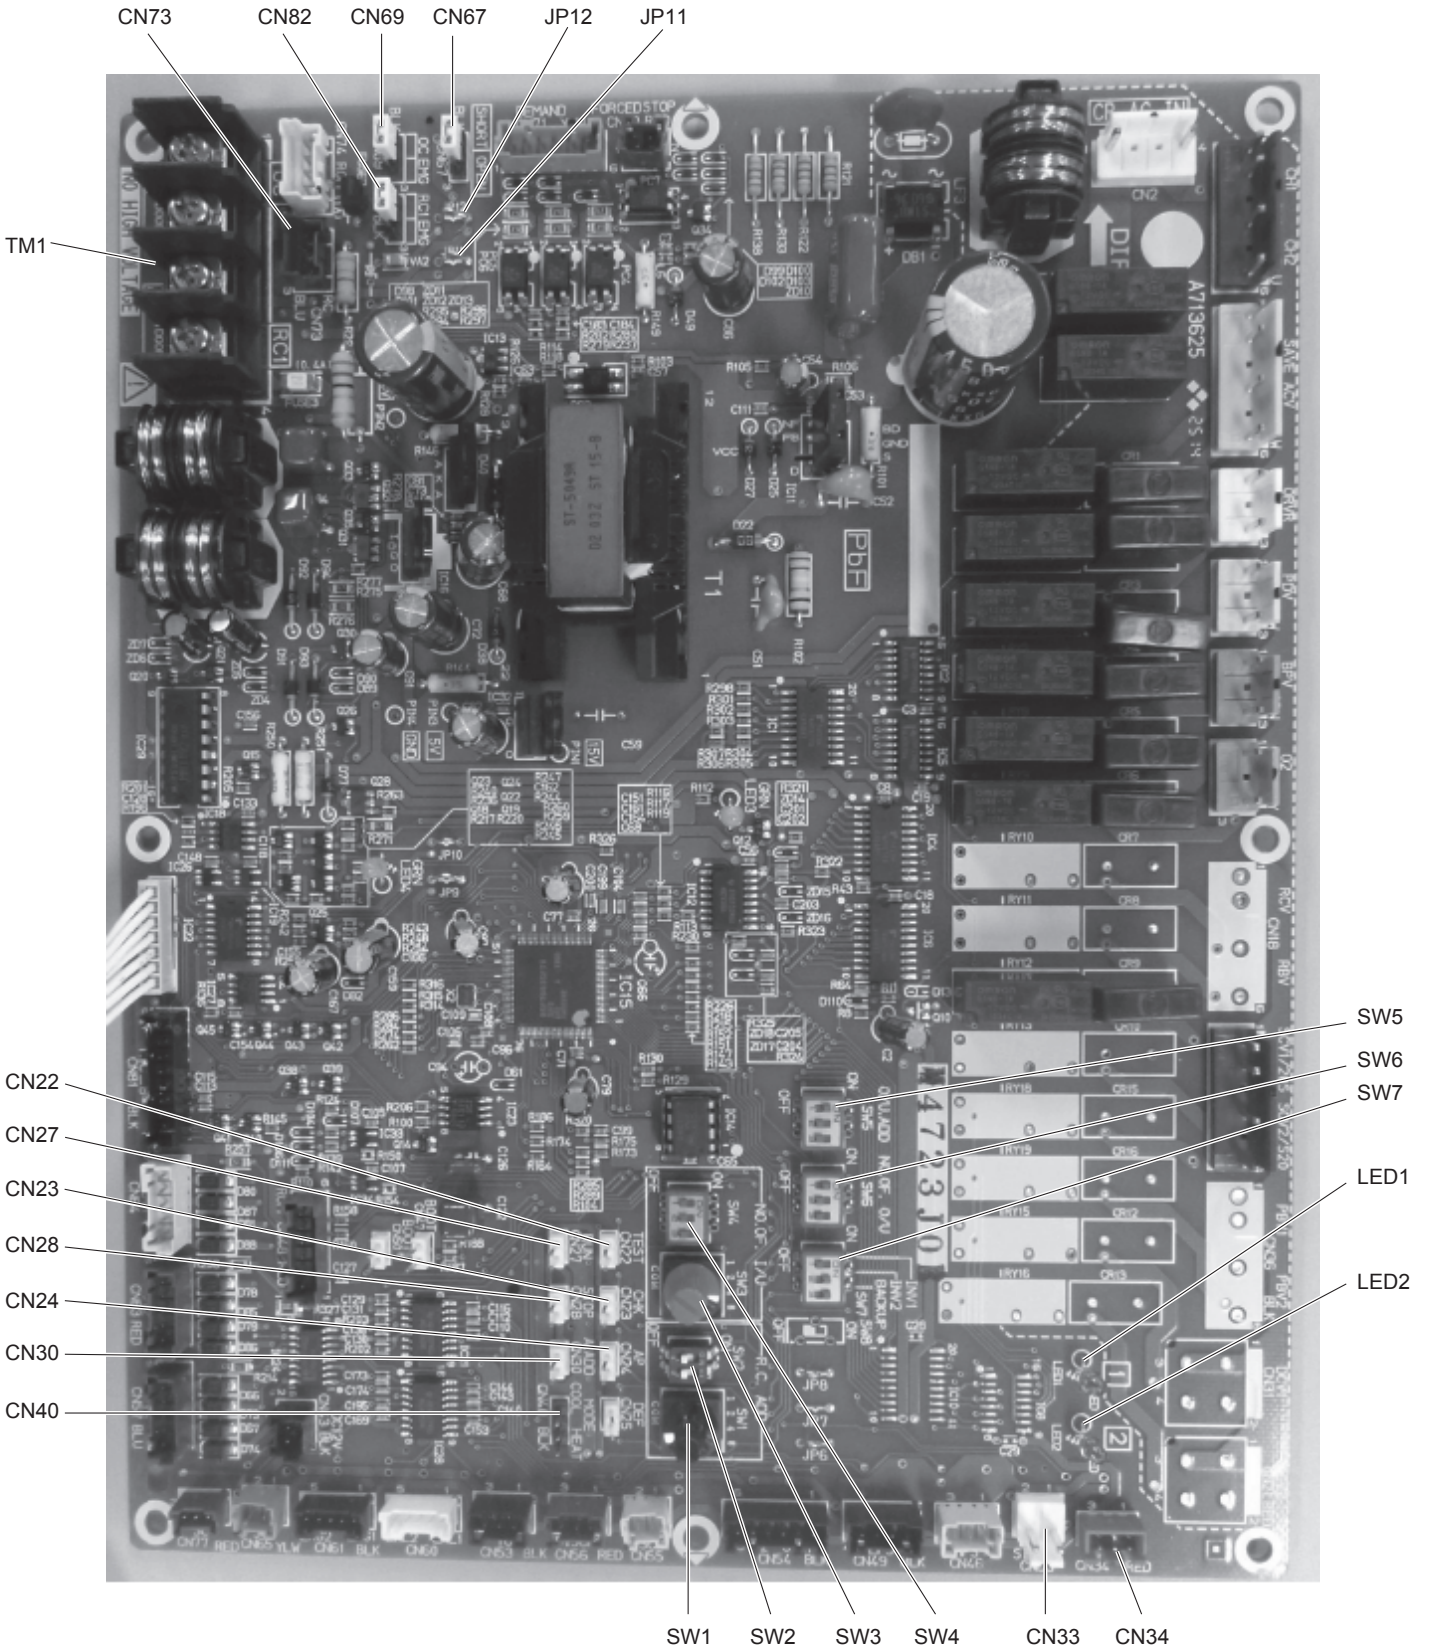



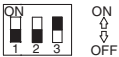







3. Main Outdoor Unit PCB Setting

3. Main Outdoor Unit PCB Setting

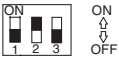









3. Main Outdoor Unit PCB Setting





● Examples of the No. of indoor units settings (SW4, SW3)

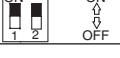No. of indoor units	Indoor unit setting (SW4) (3P DIP switch) 10 20 30	Indoor unit setting (SW3) (Rotary switch)
1 unit (factory setting)	All OFF  ON OFF	 Set to 1
11 units	1 ON  ON OFF	 Set to 1
21 units	2 ON  ON OFF	 Set to 1
31 units	3 ON  ON OFF	 Set to 1
40 units	1 & 3 ON  ON OFF	 Set to 0
58 units	2 & 3 ON  ON OFF	 Set to 8
64 units	All ON  ON OFF	 Set to 4


● Examples of refrigerant circuit (R.C.) address settings (required when link wiring is used) (SW2, SW1)

System address No.	System address (SW2) (2P DIP switch) 10 20	System address (SW1) (Rotary switch)
System 1 (factory setting)	Both OFF  ON OFF	 Set to 1
System 11	1 ON  ON OFF	 Set to 1
System 21	2 ON  ON OFF	 Set to 1
System 30	1 & 2 ON  ON OFF	 Set to 0




● Examples of the No. of outdoor units settings (SW6)

No. of outdoor units	Outdoor unit setting (SW6) (3P DIP switch)
1 unit (factory setting)	1 ON  ON OFF
2 units	2 ON  ON OFF
3 units	1 & 2 ON  ON OFF
4 units	3 ON  ON OFF

● Address setting of main outdoor unit (SW5)


Unit No. setting	Address setting of outdoor unit (SW5) (3P DIP switch)
Unit No. 1 (main unit) (factory setting)	 ON OFF

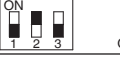● Address setting of sub outdoor unit

Unit No. setting	Address setting of outdoor unit (SW5) (3P DIP switch)
Unit No. 2 (sub unit)	2 ON  ON OFF
Unit No. 3 (sub unit)	1 & 2 ON  ON OFF
Unit No. 4 (sub unit)	3 ON  ON OFF

The sub unit control PCB contains the same switches as the main unit control PCB for No. of indoor units, No. of outdoor units, and system address. However it is not necessary to set these switches.

3. Main Outdoor Unit PCB Setting

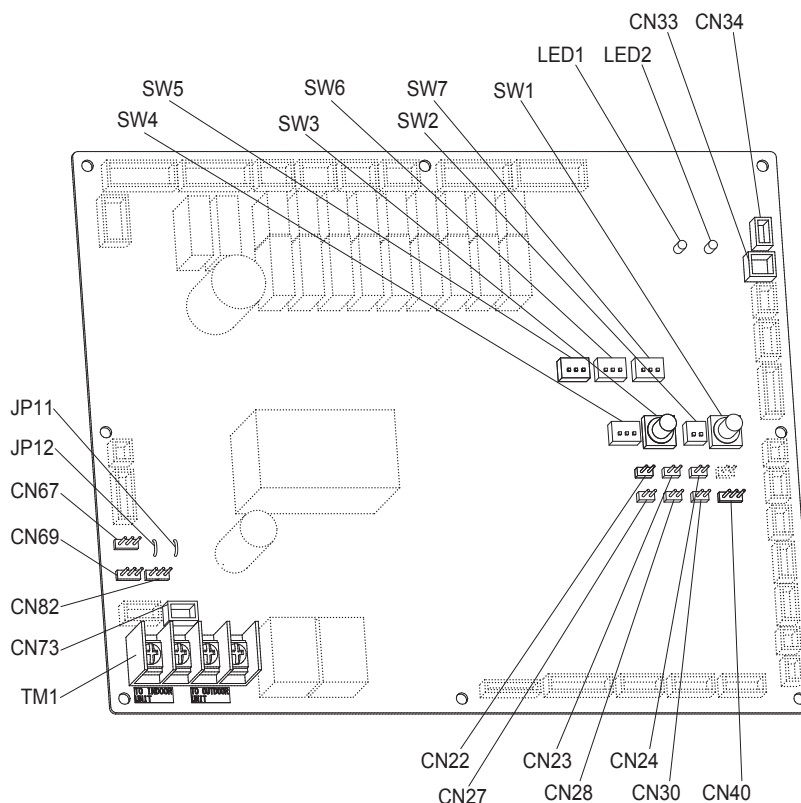

● Name And Function Of Each Switch On Outdoor Unit Control P.C. Board

Function Switch	Remarks
MODE pin (3P, BLK) (CN40)	Changes to cooling/heating mode. (Outdoor main unit is only usable.) When in normal operation: When short circuited the COOL side, indoor unit operation in the same refrigerant system changes to all cooling mode. When short circuited the HEAT side, indoor unit operation in the same refrigerant system changes to all heating mode. When in auto address setting: Changes to heating mode with open-circuit.
A.ADD pin (2P, WHT) (CN30)	Short circuited for over 1 second long → Auto address setting starts with open-circuit. If short circuit lasts for over 1 second long during auto address setting, the setting is interrupted.
CHK pin (2P, WHT) (CN23)	When short circuited, test run begins. (If the remote controller is connected in test run mode, it is automatically cancelled after 1 hour.) Also, if short-circuit is cancelled, test run mode is cancelled.
RC plug (3P, BLU) (CN73)	Connects to outdoor unit maintenance remote controller and content of alarm message will be checked.
RUN pin (2P, WHT) (CN27)	When short circuited and pulse signal is given, all indoor units operate in the same refrigerant system.
STOP pin (2P, WHT) (CN28)	When short circuited and pulse signal is given, all indoor units stop in the same refrigerant system. (When short circuited, operation cannot be performed by the indoor unit's remote controller.)
AP pin (2P, WHT) (CN24)	Can be used when vacuuming the outdoor unit.
SNOW plug (3P, RED) (CN34)	Can be used when installing a snowfall sensor device.
SILENT plug (2P, WHT) (CN33)	Can be used when setting the outdoor unit fan in sound absorbing mode.
OC EMG terminal (3P, BLK) (CN69)	If "TO INDOOR UNIT" accidentally connected to high voltage, use the terminal base TM1. Method: 1. Replace the pins 1 and 2 of CN69 with the pins 2 and 3. 2. Disconnect JP11.
RC1 EMG terminal (3P, BLK) (CN82)	If "TO OUTDOOR UNIT" accidentally connected to high voltage, use the terminal base TM1. Method: 1. Replace the pins 1 and 2 of CN82 with the pins 2 and 3. 2. Disconnect JP12.

4. Auto Address Setting



4. Auto Address Setting

Example: Basic Wiring Diagram (1)

- Case of no link wiring

(Inter-unit control wiring is not connected to a multiple system.)

Indoor unit address setting is possible without starting the compressor.

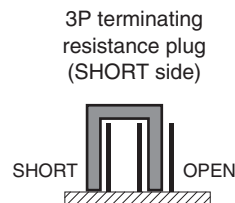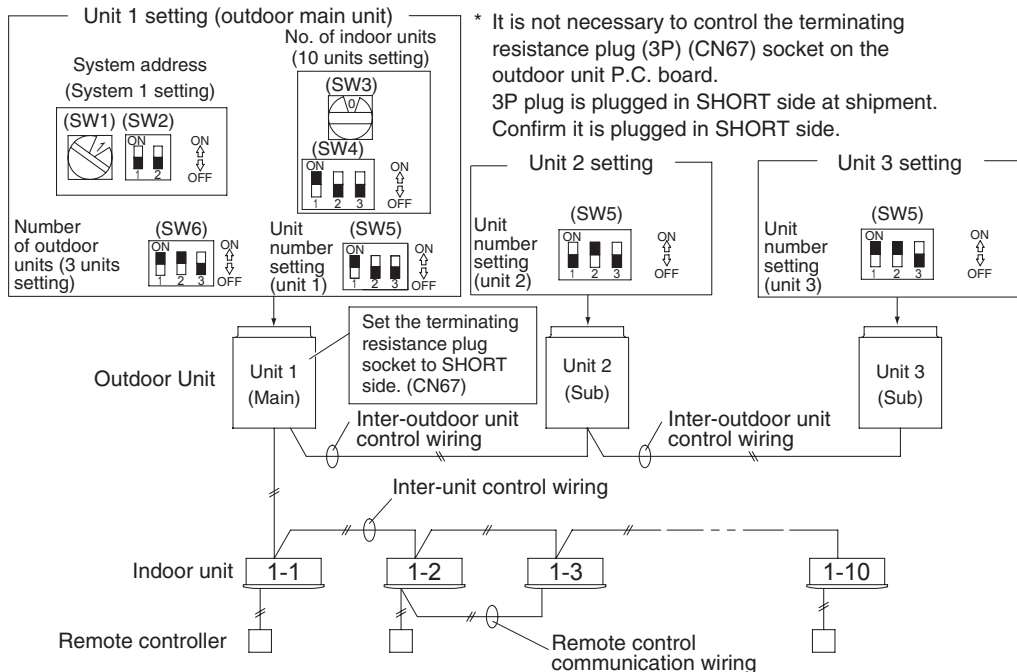

Case 1


Auto Address Control from Outdoor Unit

1. Regarding the number of outdoor units, set the Dip switch (SW6) for setting the number of outdoor units on Unit 1 control P.C.B to 3 units



This unit becomes the outdoor main unit.


2. Set the Unit Number Setting switch (SW5) on unit 2 control P.C. board to unit number 2.



Set the Unit Number Setting switch (SW5) on unit 3 control P.C. board to unit number 3.



3. Check the refrigerant system's Address Setting Rotary switch (SW1) on outdoor main unit control P.C. board to "1" and the Dip switch (SW2) to "0" (at shipment).



4. Regarding the setting of the number of indoor units connected to the outdoor unit, set the Dip switch (SW4) for setting the number of indoor units on outdoor main unit control P.C. board connected to the outdoor unit to "1".



If the Rotary switch (SW3) set to "0", 10 units can be prepared for operation.

5. Turn on power to indoor and outdoor units.
6. Short circuit the A.ADD pin (CN30) on outdoor main unit control P.C. board for over 1 second long and open circuit. Communication for auto address setting begins.

* To cancel, short circuit the A.ADD pin (CN30) again for over 1 second long and then open circuit. The LED that indicates auto address setting goes out and the process is stopped. Be sure to perform auto address setting again.

Auto address setting is completed when LEDs 1 and 2 on outdoor main unit control P.C. board go out.



7. Remote control operation is now available.

* When auto address setting is controlled by the remote controller, perform auto address setting by the remote controller after step 5 described above.


4. Auto Address Setting

Example: Basic Wiring Diagram (2)


• Case of link wiring

* See the section "ATTENTION!".


No. 1 refrigerant system

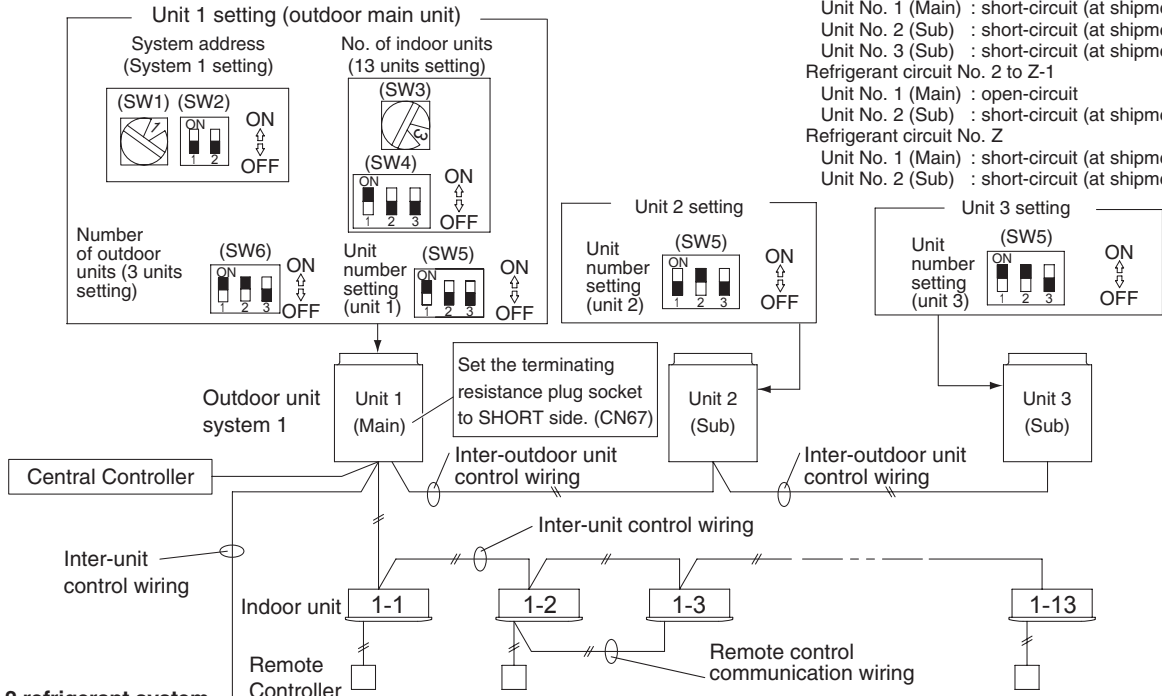

No. 2 refrigerant system

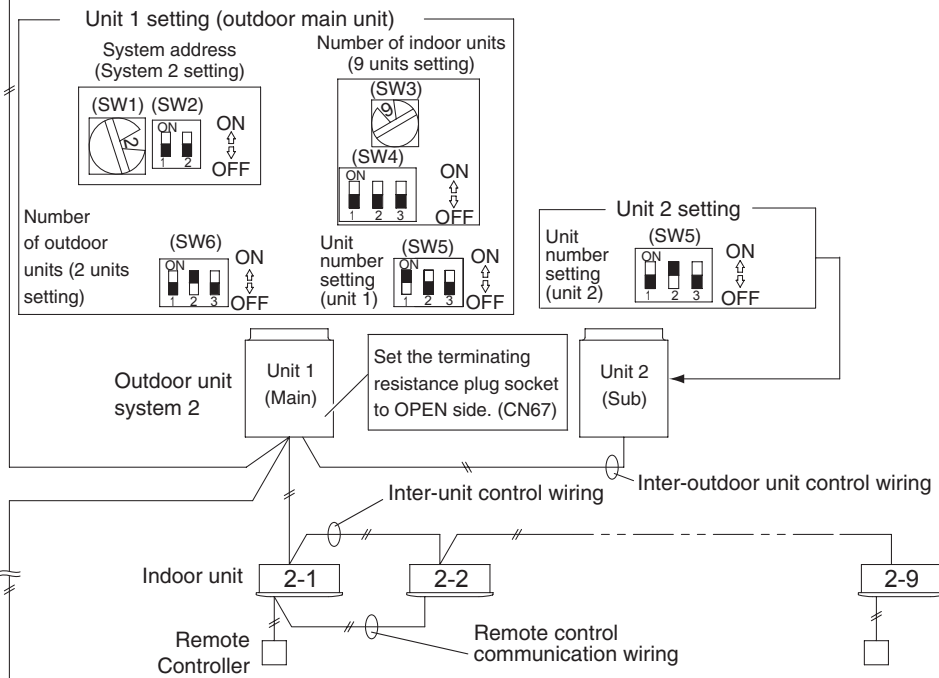

No. Z refrigerant system

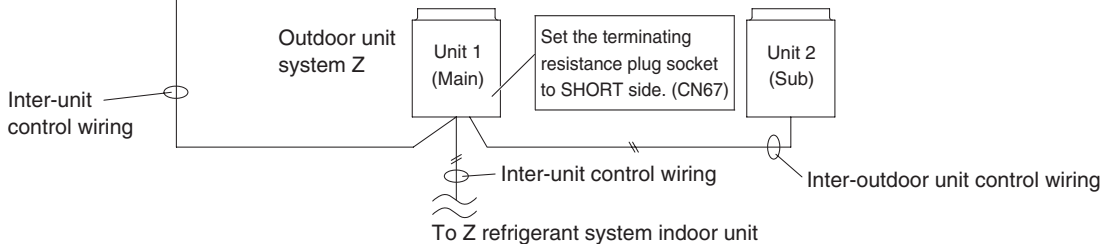

4. Auto Address Setting

● Final check before operation

Final check must be done under the conditions of inter-outdoor unit control wiring connected to the centralized control system and the resistor between conductors must be measured by a Megger. Check if it is showing between 30Ω and 120Ω.

If the resistance value is out of range, check adjustment of the termination resistor again. Even if it is out of range, the problem is caused by wiring.


- Is the wiring connection properly completed?
- Are there any scratches or deterioration on the coverage?
- Measure between conductors and also between wiring and ground by 500V Megger insulation resistance tester.

Make sure the Megger is showing more than 100MΩ.

When measuring, remove both ends of the wiring from the terminal board.

If not removed, it will be damaged.

If it is less than 100MΩ, a new wiring connection should be made.

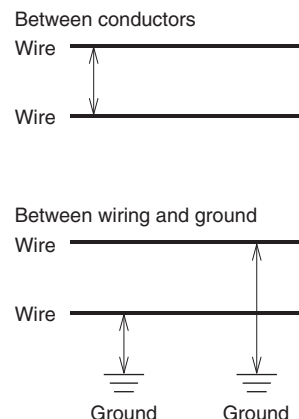


● Make settings according to each case as described below.

- In case of possibility of turning ON power to indoor/outdoor units for each refrigerant system → **Case 2**
- In case of impossibility of turning ON power to indoor/outdoor units for each refrigerant system
 - Auto address setting in heating mode → **Case 3.a**
 - Auto address setting in cooling mode → **Case 3.b**


Case 2 Possibility of turning ON power to indoor/outdoor units for each refrigerant system


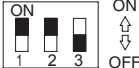

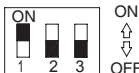
Indoor unit address setting can be made without starting the compressor.

How to Control Auto Address Setting from Outdoor Unit

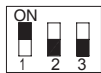- Set the unit number setting switch (SW5) on unit 1 (outdoor main unit) control P.C. board to:
 

Unit 1: This unit becomes the outdoor main unit.

Set the unit number setting switch (SW5) on unit 2 control P.C. board to:
 

Set the unit number setting switch (SW5) on unit 3 control P.C. board to:
 
- Regarding the number of outdoor units, set the Dip switch (SW6) for setting the number of outdoor units on outdoor main unit control P.C. board to 3 units.
 
- Check that the refrigerant system address Rotary switch (SW1) on outdoor main unit control P.C. board in 1 refrigerant system is set to "1" and the Dip switch (SW2) is set to "0" (at shipment).
 
- Regarding the number of indoor units connected to the outdoor unit, set the Dip switch (SW4) for setting the number on indoor units on outdoor main unit control P.C. board to "1"
 
 and set the Rotary switch (SW3) to "3".

Total of 13 units installation are made.
- Turn ON power to all indoor and outdoor units in one refrigerant system.
- Short circuit the A.ADD pin (CN30) of outdoor main unit for over 1 second long and then open circuit. Communication for auto address setting begins.

* To cancel, again short circuit the A.ADD pin (CN30) for over 1 second long and then open circuit. LEDs 1 and 2 that indicate auto address setting is in progress go out and that process is stopped.

Be sure to perform auto address setting again.

Auto address setting is completed when the compressor stops and LEDs 1 and 2 on outdoor main unit control P.C. board go out.
- Turn ON power to indoor and outdoor units only for another refrigerant system and repeat steps 1 to 5 described above. Complete auto address setting for each refrigerant system.
- Remote control operation is now available.

* When performing auto address setting by the remote controller, perform auto address setting by the remote controller after step 5.

- See the section "Auto Address Setting from Remote Controller".

4. Auto Address Setting

Case 3.a Auto Address Setting in Heating Mode

- In case of impossibility of turning ON power to indoor/outdoor units in each refrigerant system:
Indoor unit auto address setting cannot be made unless the compressor is started.

How to Control Auto Address from Outdoor Unit

1. Make all settings following the same procedure described under steps 1 to 4 in [Case 2](#).
5. Turn ON power to all indoor and outdoor units in all refrigerant systems.



6. If you wish to make auto address setting in [heating mode](#), short circuit the A.ADD pin (CN30) on outdoor main unit control P.C. board for the desired auto address setting in a refrigerant system for over 1 second long and then open circuit.

Be sure to make settings in each refrigerant system. It is impossible to perform auto address setting in a multiple refrigerant system simultaneously.



Communication for auto address setting begins and the compressor is started and auto address setting in heating mode begins. All indoor units can also be operated.



- * To cancel, again short circuit the A.ADD pin (CN30) for over 1 second long and then open circuit. LEDs 1 and 2 that indicate auto address setting is in progress go out and that process is stopped.

Be sure to perform auto address setting again.

Auto address setting is completed when the compressor stops and LEDs 1 and 2 on outdoor main unit control P.C. board go out.



7. Short circuit the A.ADD pin (CN30) on outdoor main unit in another refrigerant system for over 1 second long and then open circuit.



Repeat the same procedure and complete auto address setting.

8. Remote control operation is now available.

* When installing auto address setting by the remote controller, control auto address setting by the remote controller after step 5.

- See the section "Auto Address Setting from Remote Controller".

4. Auto Address Setting

Case 3.b Auto Address Setting in Cooling Mode

- In case of impossibility of turning ON power to indoor/outdoor units in each refrigerant system:
The indoor unit auto address setting cannot be made unless the compressor is started.

How to Control Auto Address from Outdoor Unit

1. Make all settings following the same procedure described under steps 1 to 4 of **Case 2**.
5. Turn ON power to all indoor and outdoor units in all refrigerant systems.
6. If you wish to make auto address setting in **cooling mode**, while short circuiting COOL side of the MODE pin (CN40) on outdoor main unit control P.C. board for the desired auto address setting, short circuit the A.ADD pin (CN30) for over 1 second long and then open circuit.

Be sure to install address settings in each refrigerant system. It is impossible to perform auto address setting in a multiple refrigerant system simultaneously.



Communication for auto address setting begins and the compressor starts and auto address setting in cooling mode begins. All indoor units can also be operated.



- * To cancel, again short circuit the A.ADD pin (CN30) for over 1 second long and then open circuit. LEDs 1 and 2 that indicate auto address setting is in progress go out and that process is stopped.

Be sure to perform auto address setting again.

Auto address setting is completed when the compressor stops and LEDs 1 and 2 on outdoor main unit control P.C. board go out.



7. Short circuit the A.ADD pin (CN30) on outdoor main unit in another refrigerant system for over 1 second long and then open circuit.



Repeat the same procedure and complete auto address setting.



8. Remote control operation is now available.


* **It is impossible to perform auto address setting in cooling mode by the remote controller.**

4. Auto Address Setting

Auto Address Setting from the High-spec Wired Remote Controller (CZ-RTC3 / CZ-RTC5 / CZ-RTC5A)

- Keep pressing the , and buttons simultaneously for 4 or more seconds.
The "Maintenance func" screen appears on the LCD display.
- Press the or button to see each menu.
If you wish to see the next screen instantly, press the or button.
Select "9. Auto address" on the LCD display and press the button.

Maintenance func	20:30 (THU)
9. Auto address	
10. Set elec. consumption	
11. Set touch key	
12. Check touch key	
◆ Sel. ◀ Page [↵] Confirm	

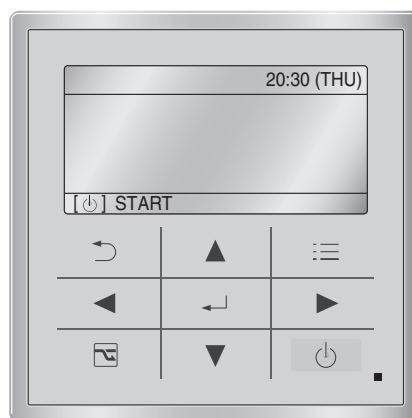

CZ-RTC3 / CZ-RTC5 / CZ-RTC5A

- The "Auto address" screen appears on the LCD display.
Change the "Code no." to "A1" by pressing the or button.

Auto address	20:30 (THU)
Code no.	O/D unit no.
A1	1
◆ Sel. ▶ Next	

- Select the "O/D unit no." by pressing the or button.
Select one of the "O/D unit no." for auto address by pressing the or button.
Approximately about 10 minutes are required.
When auto address setting is completed, the units return to normal stopped status.


Auto Address Setting* from the Remote Controller (CZ-RTC4)

* Auto address setting in Cooling mode cannot be done from the remote controller.

NOTE

- Selecting each refrigerant system individually for auto address setting
- Auto address setting for each system
: Item code "A1"

- Press the remote controller timer time button and button at the same time.
(Press and hold for 4 seconds or longer.)
- Next, press either the temperature setting / button. (Check that the item code is "A1".)
- Use either the button to set the system No. to perform auto address setting.
- Then press the button.
(Auto address setting for one refrigerant system begins.) (When auto address setting for one system is completed, the system returns to normal stopped status.)
<Approximately 4 – 5 minutes is required.>
(During auto address setting, "SETTING" is displayed on the remote controller.
This message disappears when auto address setting is completed.)
- Repeat the same steps to perform auto address setting for each successive system.

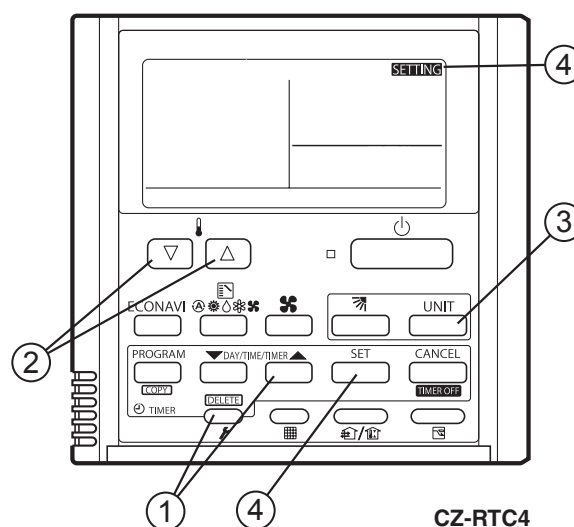


CZ-RTC4

4. Auto Address Setting

Display During Auto Address Setting

- On the surface of outdoor unit control P.C. board

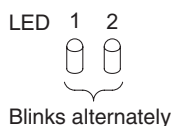

- * Do not short circuit the A.ADD pin (CN30) again during auto address setting. LEDs 1 and 2 go out and address setting is interrupted.
- * When auto address setting is normally completed, both LEDs 1 and 2 go out. In other cases, correct settings referring to the following table and perform auto address setting again.


- Contents of LEDs 1 and 2 on outdoor unit control P.C. board

- ☀ : Illuminating
- ⚡ : Blinking
- : Go out


LED 1	LED 2	Contents of display
☀	☀	After turned ON power (not during auto address setting), it is entirely impossible to communicate with the indoor unit in the system.
●	☀	After turned ON power (not during auto address setting), although the indoor units more than 1 unit in the system are recognized, there are inconsistencies between the number of indoor units and setting number of indoor units.
⚡	⚡	Under auto address setting
Alternately		
●	●	Auto address setting completed
⚡	⚡	There are inconsistencies between the number of indoor units and setting number of indoor units. (at the time of auto address setting)
Simultaneously		
⚡	⚡	See the section "7. Self-Diagnosis Function Table and Contents of Alarm Display".
Alternating		

- Display of remote controller

CZ-RTC3 / CZ-RTC5 / CZ-RTC5A

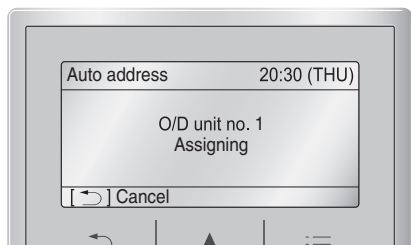

CZ-RTC4

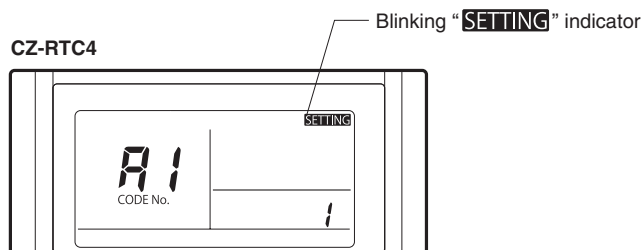

Request concerning recording the indoor/outdoor unit combination Nos.

After auto address setting has been completed, be sure to record them for future reference.

List the outdoor main unit system address and the addresses of the indoor units in that system in an easily visible location (next to the nameplate), using a permanent marking pen or similar means that cannot be abraded easily.

Example: (Outdoor) 1 - (Indoor) 1-1, 1-2, 1-3... (Outdoor) 2 - (Indoor) 2-1, 2-2, 2-3...

These numbers are necessary for later maintenance. Please be sure to indicate them.


4. Auto Address Setting

Checking the indoor unit addresses


Use the remote controller to check the indoor unit address.

CZ-RTC3 / CZ-RTC5 / CZ-RTC5A (High-spec wired remote controller)


- Keep pressing the , and buttons simultaneously for 4 or more seconds.
The "Maintenance func" screen appears on the LCD display.

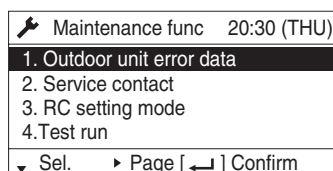


- The "Simple settings" screen appears on the LCD display. Select the "Unit no." by pressing the or button for changes.

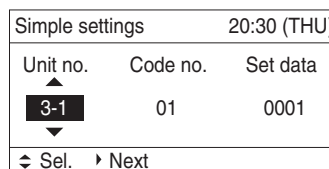

- Press the or button to see each menu.
If you wish to see the next screen instantly, press the or button.
Select "7. Simple settings" on the LCD display and press the button.

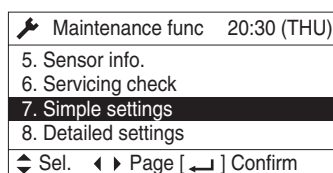

The indoor unit fan operates only at the selected indoor unit.

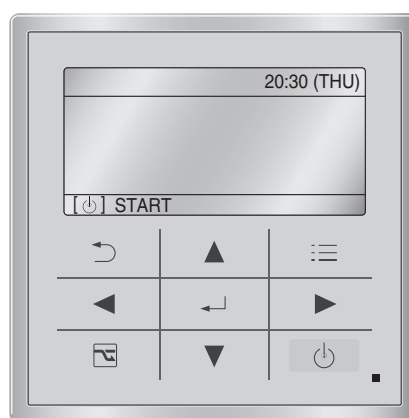


CZ-RTC3 / CZ-RTC5 / CZ-RTC5A

CZ-RTC4 (Timer remote controller)

<If 1 indoor unit is connected to 1 remote controller>

- Press and hold the button and button for 4 seconds or longer (simple settings mode).
- The address is displayed for the indoor unit that is connected to the remote controller.
(Only the address of the indoor unit that is connected to the remote controller can be checked.)
- Press the button again to return to normal remote controller mode.

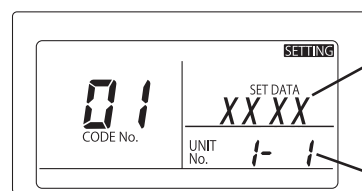


Number changes to indicate which indoor unit is currently selected.

Indoor unit address

<If multiple indoor units are connected to 1 remote controller (group control)>

- Press and hold the button and button for 4 seconds or longer (simple settings mode).
- "ALL" is displayed on the remote controller.
- Next, press the button.
- The address is displayed for 1 of the indoor units which is connected to the remote controller. Check that the fan of that indoor unit starts and that air is discharged.
- Press the button again and check the address of each indoor unit in sequence.
- Press the button again to return to normal remote controller mode.

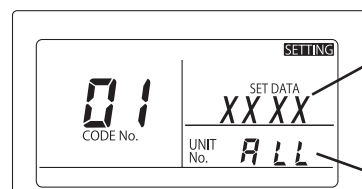

Number changes to indicate which indoor unit is currently selected.


Indoor unit address

5. Remote Controller Test Run Settings


5. Remote Controller Test Run Settings

CZ-RTC3 / CZ-RTC5 / CZ-RTC5A (High-spec wired remote controller)


- Keep pressing the , and buttons simultaneously for 4 or more seconds.
The "Maintenance func" screen appears on the LCD display.

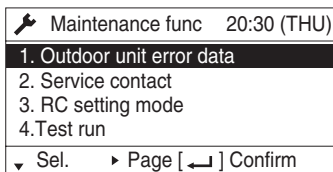

- Press the or button to see each menu.
If you wish to see the next screen instantly, press the or button.
Select "4. Test run" on the LCD display and press the button.

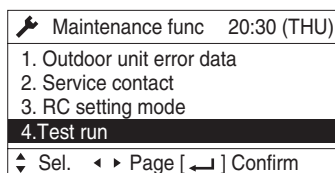

Change the display from OFF to ON by pressing the or button. Then press the button.

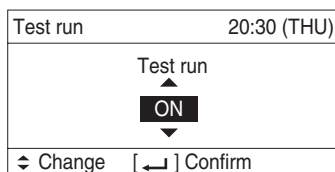

CZ-RTC4 (Timer remote controller)

- Press the remote controller button for 4 seconds or longer.
Then press the button.
 - "TEST" appears on the LCD display while the test run is in progress.
 - The temperature cannot be adjusted when in Test Run mode.
(This mode places a heavy load on the machines. Therefore use it only when performing the test run.)
- The test run can be performed using the HEAT, COOL, or FAN operation modes.

NOTE

The outdoor units will not operate for approximately 3 minutes after the power is turned ON and after operation is stopped.


- If correct operation is not possible, a code is displayed on the remote controller LCD display.
(See the section "7. Self-Diagnostic Function Table and Contents of Alarm Display" and correct the problem.)
- After the test run is completed, press the button again.
Check that "TEST" disappears from the LCD display.
(To prevent continuous test runs, this remote controller includes a timer function that cancels the test run after 60 minutes.)

* If the test run is performed using the wired remote controller, operation is possible even if the cassette-type ceiling panel has not been installed. ("P09" display does not occur.)





CZ-RTC3 / CZ-RTC5 / CZ-RTC5A

- Press the button. "TEST" will be displayed on the LCD display.

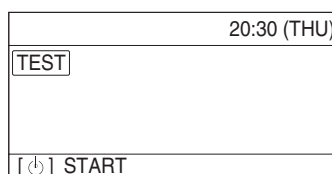

- Press the button. Test run will be started.
Test run setting mode screen appears on the LCD display.

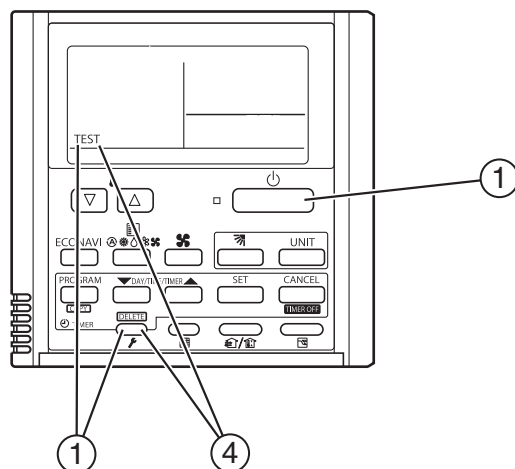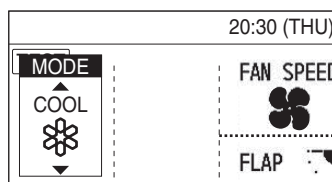

CZ-RTC4

6. Caution for Pump Down

7. Self-Diagnosis Function Table and Contents of Alarm Display

6. Caution for Pump Down

Pump down means refrigerant gas in the system is returned to the outdoor unit.

Pump down is used when the unit is to be moved, or before servicing the refrigerant circuit.

(Refer to the section 3 in the Service Manual & Test Run Service Manual)



CAUTION

- This outdoor unit cannot collect more than the rated refrigerant amount as shown by the nameplate on the back.
- If the amount of refrigerant is more than that recommended, do not conduct pump down. In this case use another refrigerant collecting system.

7. Self-Diagnosis Function Table and Contents of Alarm Display

How to know LEDs 1 and 2 alarm display on outdoor unit control P.C. board

LED 1	LED 2	Contents of Alarm Display													
✱	✱	Alarm display													
Alternating		After LED1 blinks M times, LED2 blinks N times. This will be repeated.													
		M	<table border="1"> <thead> <tr> <th>Number of blinks</th> <th>Type of alarm</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">2</td> <td>Alarm P</td> </tr> <tr> <td style="text-align: center;">3</td> <td>Alarm H</td> </tr> <tr> <td style="text-align: center;">4</td> <td>Alarm E</td> </tr> <tr> <td style="text-align: center;">5</td> <td>Alarm F</td> </tr> <tr> <td style="text-align: center;">6</td> <td>Alarm L</td> </tr> </tbody> </table>	Number of blinks	Type of alarm	2	Alarm P	3	Alarm H	4	Alarm E	5	Alarm F	6	Alarm L
Number of blinks	Type of alarm														
2	Alarm P														
3	Alarm H														
4	Alarm E														
5	Alarm F														
6	Alarm L														
		N = number of alarm No.													
		For example: After LED1 blinks twice, LED2 blinks 17 times. This will be repeated. The alarm shows "P17".													

(✱ : Blink) Connect the outdoor unit maintenance remote controller to the RC plug (3P, BLU) on outdoor main unit control P.C. board and make confirmation.

■ Self-Diagnosis Function Table

- Cause and countermeasure against the symptom of auto address failure

Symptom	Cause and countermeasure
<ul style="list-style-type: none"> ● When turning ON power to the outdoor main unit, LEDs 1 and 2 illuminate or blink excluding going out. Auto address setting is not available. 	See "Contents of Alarm Display" and make corrections.
<ul style="list-style-type: none"> ● When auto address setting by the remote controller begins, the alarm display appears immediately. 	
<ul style="list-style-type: none"> ● When auto address setting by the remote controller begins, no display appears. 	Are remote control wiring and inter-unit control wiring connected properly? Is indoor unit turned ON power?

- Auto address setting begins but finishes improperly.

Symptom	Cause and countermeasure
<ul style="list-style-type: none"> ● Soon after a few seconds or after a few minutes, the alarm content is displayed on the remote controller. 	See "Contents of Alarm Display" and make a correction.
<ul style="list-style-type: none"> ● After a few minutes when auto address setting begins, the compressor may occasionally start and stop several times. LEDs 1 and 2 on outdoor unit control P.C. board show the display of auto address setting with blinking alternately but LEDs 1 and 2 do not indicate the completion of auto address setting (go out). 	Are remote control wiring and inter-unit control wiring connected properly? Is indoor unit turned ON power?

7. Self-Diagnosis Function Table and Contents of Alarm Display

- If the alarm display “E15”, “E16” and “E20” appear after auto address setting began, check the following items.

Alarm display	Alarm contents
E15	Recognized number of indoor units at the time of auto address setting are fewer than that of indoor units set by SW3 and SW4 on outdoor main unit P.C. board.
E16	Recognized number of indoor units at the time of auto address setting are more than that of indoor units set by SW3 and SW4 on outdoor main unit P.C. board.
E20	Outdoor unit could not entirely receive serial communication signal from the indoor unit within 90 seconds after auto address setting began.

Check	E15	E16	E20
Have you forgotten to turn ON power to indoor unit?	○		○
Are indoor and outdoor control wiring connected properly? (Check for incorrect wiring to open & short-circuit, terminal plug and remote control terminal.)	○	○	○
Is remote control wiring connected properly? (Check for open & short-circuit, wrong connection to indoor/outdoor unit control wiring terminal, inter-unit control wiring.)	○		○
Are the number of the connecting indoor units set by SW3 and SW4 of outdoor main unit control P.C. board connected properly?	○	○	
Is additional appropriate amount of refrigerant charge? (Compressor ON at the time of auto address setting)	○		
Is the refrigerant tubing connected properly? (Compressor ON at the time of auto address setting)	○	○	
Are E1 and E3 sensors of indoor unit normal? (Compressor ON at the time of auto address setting)	○		
Are there any wrong system address installed in indoor units caused by manual or incorrect auto address control?		○	

- When auto address setting from outdoor main unit control P.C. board or remote controller begins, “Under Setting” appears on the remote controller as for normal indoor units under the inter-unit control wirings and remote control wirings. LEDs 1 and 2 indicators on outdoor main unit control P.C. board blink alternately.
 - If there is an error at the inter-unit control wiring of the remote controller when in the indoor unit group control, address setting may not occasionally be made although “under setting” is displayed.
 - Although the alarm “E15” and “E16” are displayed, addresses will be installed in the recognized indoor units. The installed addresses can be checked by the remote controller. See the section “Checking the indoor unit address”.
- When operating the remote controller after auto address setting completed (LEDs 1 and 2 indicators on outdoor main unit control P.C. board go out), correct the symptom if the following alarms appear on the remote controller.

Remote control display	Cause
No display	Remote controller is not connected properly. (Power failure) When auto address setting was completed, the power of indoor unit was turned off.
E01	Remote controller is not connected properly. (Receiving failure from remote control) Indoor unit address was mistakenly controlled by undesired indoor unit remote controller. (Impossible to communicate with outdoor unit)
E02	Remote controller is not connected properly. (Impossible to communicate with indoor unit by remote controller)
P09	Connector of indoor unit ceiling panel is not connected properly.

If any other alarm appear on the display, refer to the section 6 in the Service Manual & Test Run Service Manual.

- Alarm display can be checked by the outdoor maintenance remote controller. When operating, refer to the section 6 in the Service Manual & Test Run Service Manual.
Alarm display can also be checked by number of blinking of LEDs 1 and 2 on outdoor unit control P.C. board.
(See the section “How to know LEDs 1 and 2 alarm display on outdoor unit control P.C. board” under the section “7. Self-Diagnosis Function Table and Contents of Alarm Display”.)

Remote control display	Alarm contents
E06	Outdoor unit receiving failure from indoor unit
E12	Prohibit starting auto address setting
E15	Auto address alarm (A small number of indoor units)
E16	Auto address alarm (A large number of indoor units)

7. Self-Diagnosis Function Table and Contents of Alarm Display

Remote control display	Alarm contents
E20	No indoor unit during auto address setting
E21	Receiving failure of main system from sub system when link wiring is used for outdoor units
E22	Receiving failure of sub system from main system when link wiring is used for outdoor units
E24	Receiving failure of relay control unit from outdoor unit(s)
E25	Failure of outdoor unit address setting (Duplicative)
E26	Inconsistencies in number of outdoor units
E29	Failure of outdoor unit to receive relay control unit
E30	Failure of transferring outdoor unit serial
E31	Wiring error between the P.C. board ([L-Pow], [HIC] wire)
F04	Compressor 1 discharge temperature sensor abnormal [DISCH1]
F05	Compressor 2 discharge temperature sensor abnormal [DISCH2]
F06	Outdoor unit heat exchanger 1 gas (inlet) temperature sensor abnormal [EXG1]
F07	Outdoor unit heat exchanger 1 liquid (outlet) temperature sensor abnormal [EXL1]
F08	Outdoor temperature sensor abnormal [TO]
F12	Compressor inlet temperature sensor abnormal [SCT]
F14	Supercooling gas temperature sensor abnormal [SCG]
F16	High pressure sensor abnormal, high-load [HPS]
F17	Low pressure sensor abnormal [LPS]
F23	Outdoor unit heat exchanger 2 gas (inlet) temperature sensor abnormal [EXG2]
F24	Outdoor unit heat exchanger 2 liquid (outlet) temperature sensor abnormal [EXL2]
F31	Outdoor unit nonvolatile memory (EEPROM) error
H01	Compressor 1 abnormal current values (Overcurrent)
H03	Compressor 1 CT sensor disconnected, short-circuit
H05	Compressor 1 discharge temperature sensor disconnected
H06	Low pressure abnormal lowering
H07	Oil loss - error
H08	Oil sensor (connection) error 1
H11	Compressor 2 abnormal current values (Overcurrent)
H13	Compressor 2 CT sensor disconnected, short-circuit
H15	Compressor 2 discharge temperature sensor disconnected
H21	Compressor 2 HIC alarm
H27	Oil sensor (connection) error 2
H31	Compressor 1 HIC alarm
L04	Outdoor unit address settings duplicated
L05	Indoor unit priority duplicated (For priority indoor)
L06	Indoor unit priority duplicated (Not for priority indoor) and outdoor unit
L10	Outdoor unit capacity settings not made
L17	Inconsistencies in outdoor unit models
L18	4-way valve coil disconnected, line disconnected
P03	Compressor 1 discharge temperature error
P04	Actuation of high pressure switch
P05	Compressor 1 open-phase detection
P11	Cooling water freeze (chiller)
P14	Actuation of O ₂ sensor
P15	Compressor 2 open-phase detection
P16	Compressor 1 secondary overcurrent
P17	Compressor 2 discharge temperature error
P19	Compressor 2 start failure (compressor lock, compressor wiring open phase, DCCT failure)
P20	High load (Forgot to open valves)
P22	Outdoor unit fan1 failure (IPM damage, overcurrent, inverter failure, DC fan lock, hole IC open-phase)
P23	Inter lock not cancellation (chiller)
P24	Outdoor unit fan2 failure (IPM damage, overcurrent, inverter failure, DC fan lock, hole IC open-phase)
P26	Compressor 2 secondary overcurrent
P29	Compressor 1 start failure (compressor lock, compressor wiring open phase, DCCT failure)

7. Self-Diagnosis Function Table and Contents of Alarm Display

- Contents of alarm display on remote controller

For the remote controller, there are other alarm contents listed on the following table besides the alarm display on outdoor main unit control P.C. board.

Wired remote control display	Detected contents	
<E01>	Remote controller detects abnormal signal transmitted from the indoor unit.	<ul style="list-style-type: none"> Failure of remote controller to receive. (For group control, signal from the main unit.) No setting of system address, indoor unit address, indoor unit individualization / main / sub (Auto address setting not completed.)
<E02>		Remote controller not connected properly.
<<E03>>	Indoor unit failed to receive serial signal by remote controller (or central controller).	
E04	Indoor unit detects abnormal signal from outdoor main unit control P.C. board.	<ul style="list-style-type: none"> Receiving failure of remote controller (For group control, signal from the main unit.) Inconsistencies in number of connected units and setting units when outdoor unit is turned ON power. (Excepting the system address "0")
E08	Setting failure	Indoor unit address settings duplicated
<<E09>>		Main remote control settings duplicated
E18	Indoor unit communication error in group control wiring	Main indoor unit failed to receive serial signal from sub indoor unit.
<<L02>>	Setting failure	Indoor unit connected to multiple outdoor units is not for multiple type.
<L03>		Main unit settings duplicated in group control indoor units
L07		Group control wiring connected to individual control indoor unit
L08		Indoor unit address settings not made
<<L09>>		Outdoor unit capacity settings not made
<<F01>>		Indoor unit thermistor failure
<<F02>>	Water heat exchanger temperature sensor E2 (chiller)	
<<F03>>	Heat exchanger temperature sensor E3	
<<F10>>	Inlet temperature sensor	
<<F11>>	Outlet temperature sensor	
<<P09>>	Connection failure of ceiling panel or connector	
<<P01>>	Indoor unit protection	Fan protection thermostat
<<P10>>		Float switch
<<P12>>		Actuation of fan inverter protecting function
F29	Nonvolatile memory IC (EEPROM) failure on indoor unit control P.C. board	

- The parentheses of << >> used in the table of alarm display does not affect anything the operation of other indoor units.
- The parentheses of < > used in the table of alarm display implies that there are two cases : according to the content of the symptom, some affect the operation of other indoor units and others do not affect anything.

Alarm messages displayed on system controller			
Serial communication errors Mis-setting	Error in transmitting serial communication signal	Indoor or main outdoor unit is not operating correctly. Mis-wiring of control wiring between indoor unit, main outdoor unit and system controller.	C05
	Error in receiving serial communication signal	Indoor or main outdoor unit is not operating correctly. Mis-wiring of control wiring between indoor unit, main outdoor unit and system controller. CN1 is not connected properly.	C06
Activation of protective device	Protective device of sub indoor unit in group control is activated.	When using wireless remote controller or system controller, in order to check the alarm message in detail, connect wired remote controller to indoor unit temporarily.	P30

NOTE

- Alarm messages in << >> do not affect other indoor unit operations.
- Alarm messages in < > sometimes affect other indoor unit operations depending on the fault.

7. Self-Diagnosis Function Table and Contents of Alarm Display

ATTENTION!

Adjustment of terminating resistance (plug) is necessary.

Communication failure will occur unless adjustment is made correctly.

- Terminating resistance (plug) is mounted on outdoor unit control P.C. board.
- When connecting central controller, interface or peripheral equipment, adjustment of terminating resistance (plug) is necessary. Although the connection is not made, confirmation is necessary for VRF systems.
- In the case of a refrigerant system, the terminating resistance (plug) for this inter-unit control wiring (S-LINK wiring) is one location (See the section "4. Auto Address Setting").
For 2 or more refrigerant systems, 2 locations should be valid ("SHORT" for VRF systems at shipment). See the section "4. Auto Address Setting".
In order to make 2 locations valid, let the terminating resistance (plug) of the nearest outdoor unit and the farthest outdoor unit be valid (SHORT side) from the location of central controller.
In other refrigerant systems excepting 2 locations described above, make them invalid (OPEN side).
It is prohibited making more than 3 locations of terminating resistance valid.
- Since the use of linking the sub outdoor units of VRF systems is not connected to the inter-unit control wiring, it is not necessary to make the terminating resistance invalid "OPEN side".


Make final confirmation regarding the central controller or interface & inter-unit control wiring (S-LINK wiring) connected to the peripheral equipment.

Measure the line resistance with a tester and check whether the values are in the range of $30\Omega - 120\Omega$.

If the resistance values are out of range, check again the terminating resistance.

Nevertheless, if the values are out of range, the problem comes from wiring.

- Is the connection properly made?
- Are there any scratches or damages on the coated surface?
- Measure the line, between wires and ground with the 500V megger (insulation resistance meter) and check the values are over $100M\Omega$.
- When measuring, be sure to remove both edges of the wire from the terminal board. If not removed, it will be damaged.
- If the line resistance is within $100M\Omega$, newly carry out the wiring work.

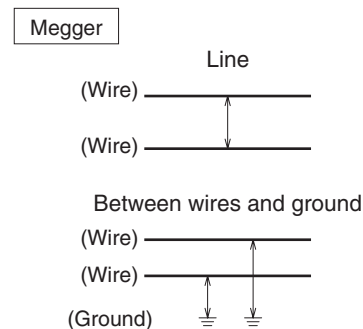

Contents

6. ELECTRICAL DATA

1. Outdoor Unit 6-2


- (1) Electric Wiring Diagram U-8ME2E8, U-10ME2E8, U-12ME2E8 6-2
- (2) Electric Wiring Diagram U-14ME2E8, U-16ME2E8 6-4
- (3) Electric Wiring Diagram U-18ME2E8, U-20ME2E8 6-6

1. Outdoor Unit

(1) Electric Wiring Diagram U-8ME2E8, U-10ME2E8, U-12ME2E8

ACXF22-01160

ELECTRIC WIRING DIAGRAM

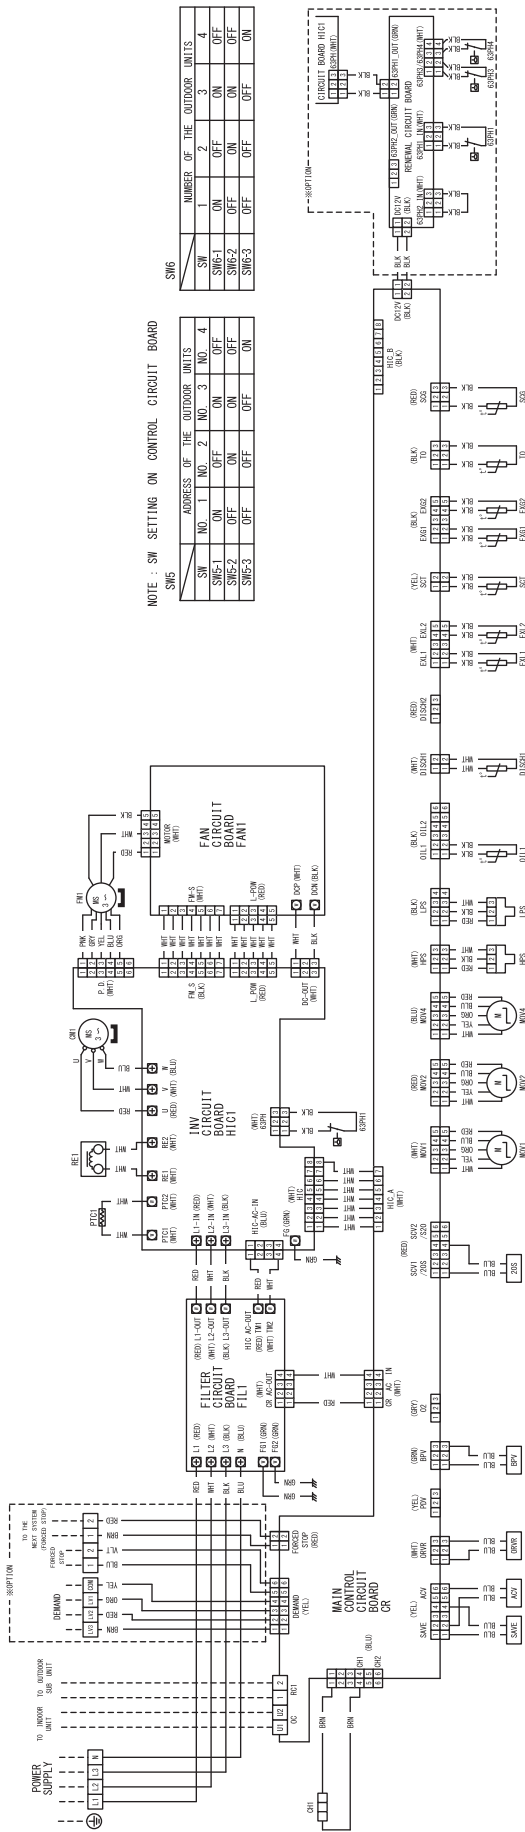

NOTE : SW SETTING ON CONTROL CIRCUIT BOARD

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW5

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW6

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW7

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW8

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW9

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW10

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW11

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW12

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW13

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW14

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW15

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW16

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW17

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW18

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW19

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW20

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW21

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW22

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW23

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW24

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW25

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW26

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW27

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW28

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW29

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW30

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW31

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW32

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW33

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW34

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW35

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW36

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW37

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW38

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW39

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW40

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW41

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW42

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW43

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW44

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON

SW45

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2	OFF	ON	OFF	ON
SW3	OFF	OFF	OFF	ON


SW46

SW	NO. 1	NO. 2	NO. 3	NO. 4
SW1	ON	OFF	ON	OFF
SW2				

1. Outdoor Unit

(2) Electric Wiring Diagram U-14ME2E8, U-16ME2E8


ACXF22-01170

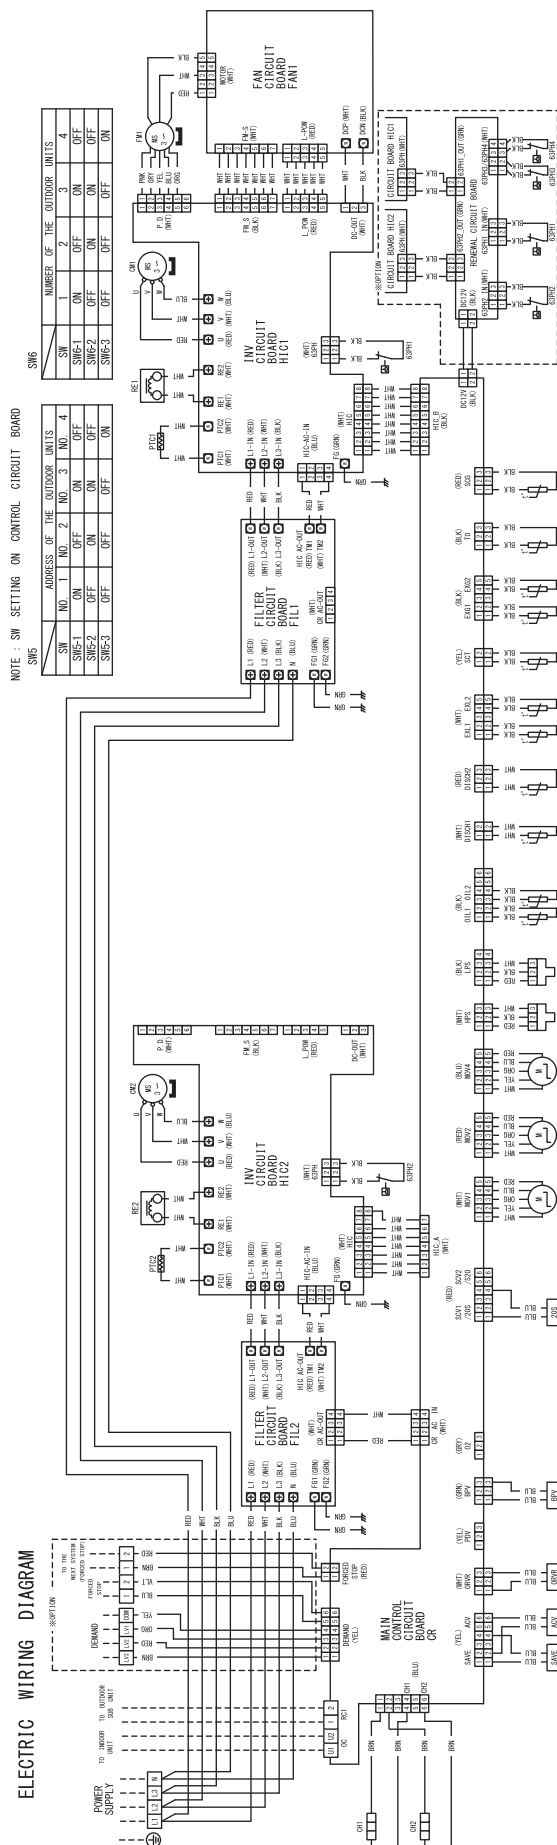

1. Outdoor Unit


(3) Electric Wiring Diagram U-18ME2E8, U-20ME2E8

ACXF22-01180

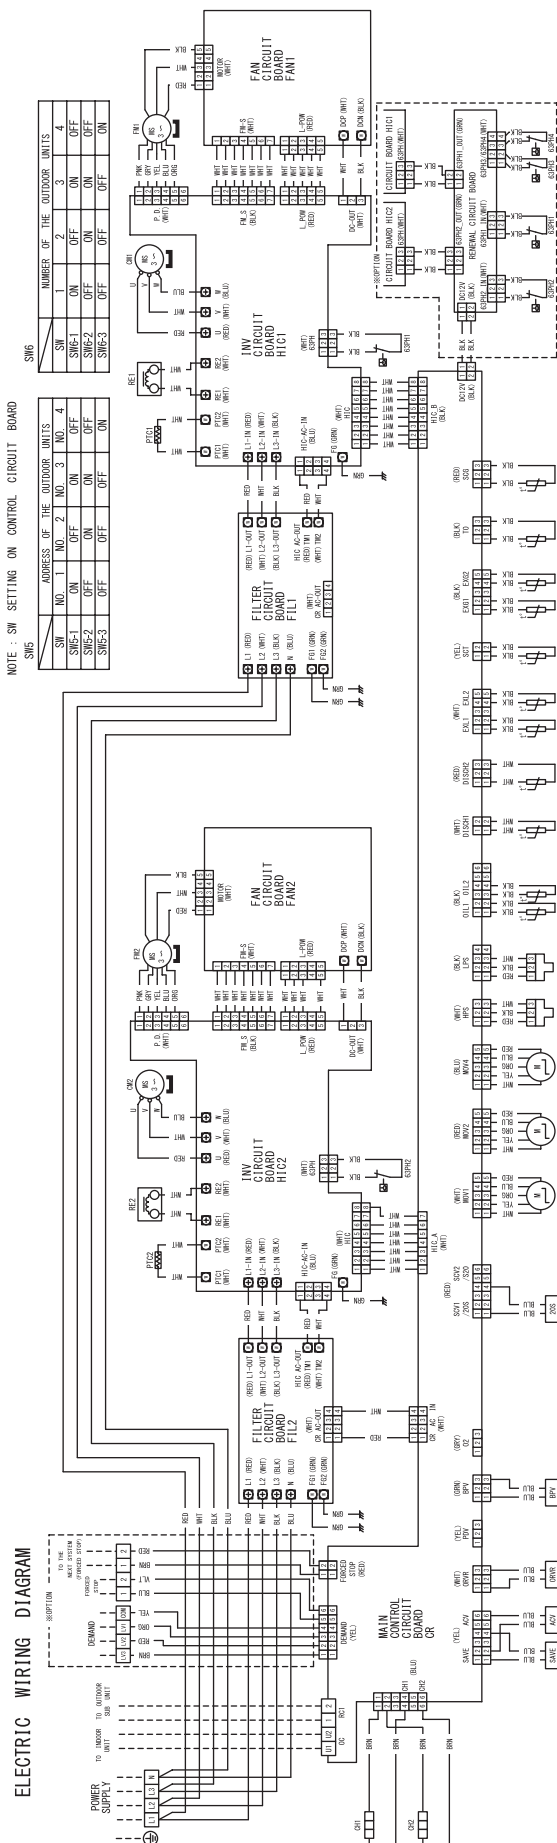

1. Outdoor Unit

Schematic Diagram U-18ME2E8, U-20ME2E8

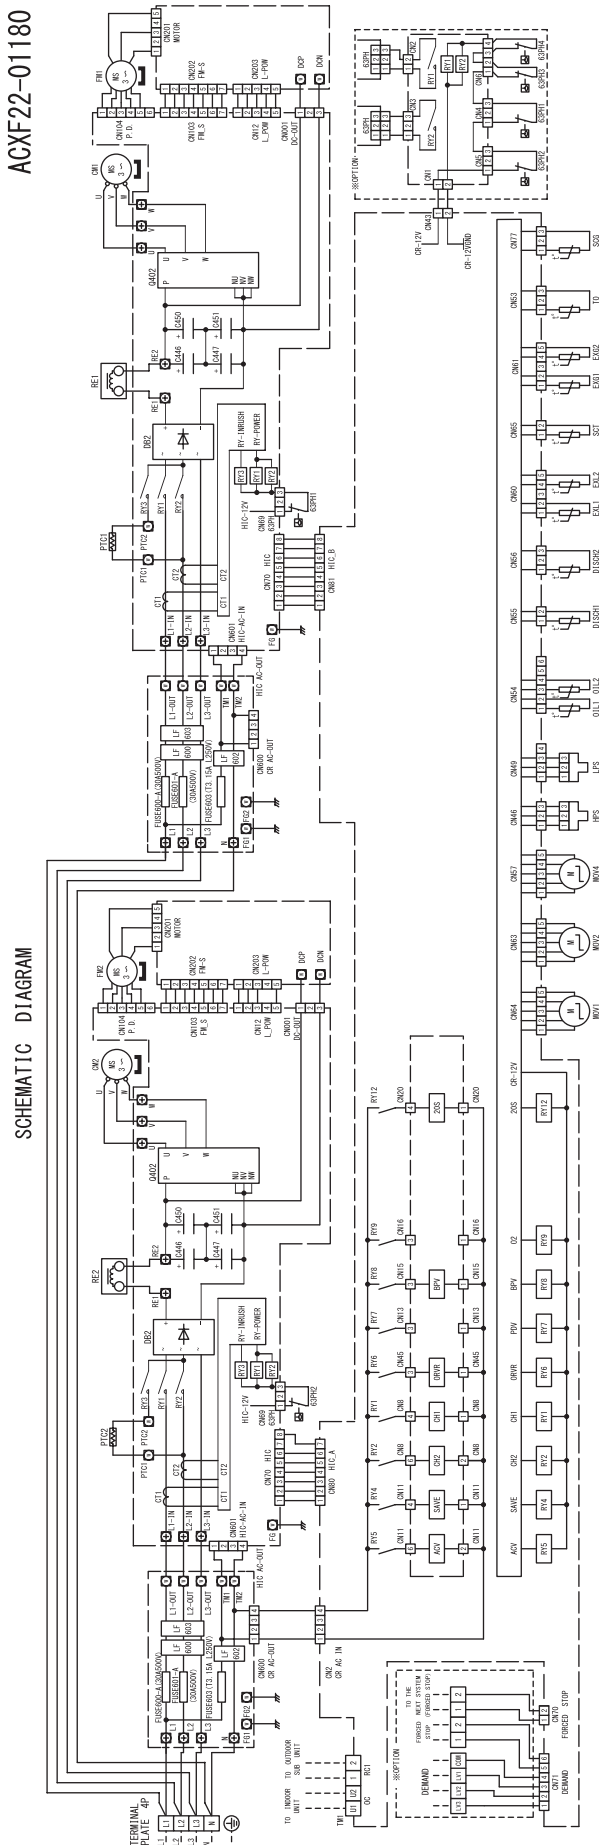

SYMBOLS	DESCRIPTION	SYMBOLS	DESCRIPTION	SYMBOLS	DESCRIPTION	SYMBOLS	DESCRIPTION
CH1, CH2	COMPRESSOR MOTOR	20S	FOUR WAY VALVE	CT1, 2	CURRENT TRANSFORMER	CH1, CH2	CRANK CASE HEATER
FM1, FM2	OUTDOOR FAN MOTOR	MOV1, 2, 4	MOTOR OPERATED VALVE	PTC1, PTC2	PTC THERMISTOR	C446, C447 C450, C451	ELECTROLYTIC CAPACITOR
ACV	ACCUMULATOR CONTROL VALVE	FUSE600-A FUSE601-A FUSE603	OPERATION CIRCUIT FUSE	RY3 (HIC)	INRUSH RELAY	Q402	IPM
SAVE	SAVE VALVE	LF600 LF603 LF602	NOISE FILTER (ON THE P. C. B.)	RY1, 2 (HIC)	POWER RELAY	63PH1, 2, 3, 4 RY1, 2, 4 ~ 9, 12 (GR) RY1, 2 (RENEWAL)	HIGH PRESSURE SWITCH
ORVR	OIL RECOVERY VALVE			DB2	BRIDGE DIODE		RELAY
BPV	BYPASS VALVE			RE1, RE2	REACTOR		

WARNING DANGER! HIGH VOLTAGE! DO NOT TOUCH ANY ELECTRONIC COMPONENTS WHILE OPERATING. WAIT UNTIL 5 MINUTES AFTER TURNING OFF THE POWER. MEASURE THE POWER VOLTAGE OF INV CIRCUIT BOARD Q402 S "+p" (+) TERMINAL AND "NU, NV, NW" (-) WITH THE TESTER.


Contents

7. PCB AND FUNCTIONS

- 1. Outdoor Unit Control PCB 7-2**
 - 1-1. Outdoor Unit Control PCB 7-2
 - 1-2. Outdoor Unit HIC PCB 7-3
 - 1-3. Outdoor Unit FIL PCB 7-4
 - 1-4. Outdoor Unit FIL PCB 7-4
 - 1-5. Functions 7-5


1. Outdoor Unit Control PCB

1-1. Outdoor Unit Control PCB

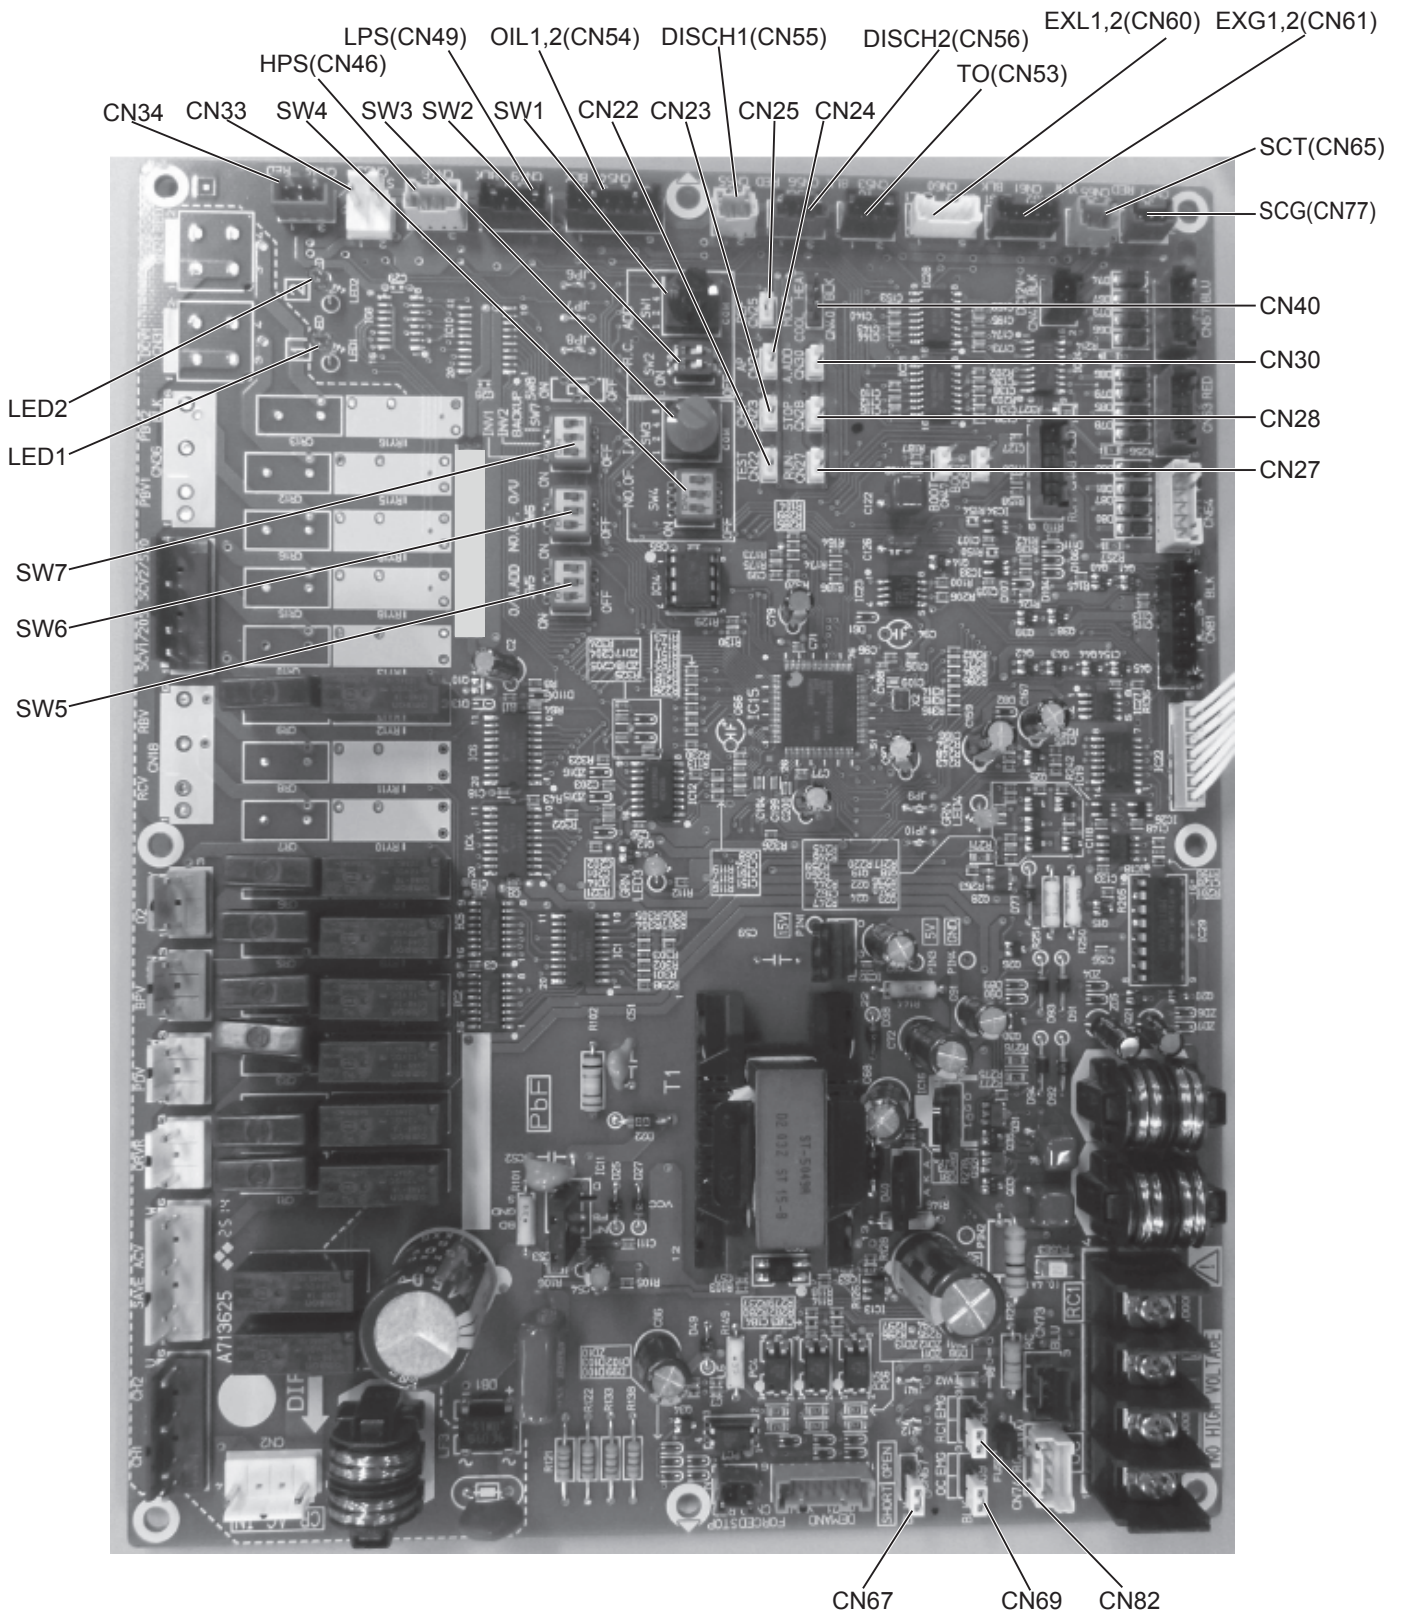


1. Outdoor Unit Control PCB

1-2. Outdoor Unit HIC PCB

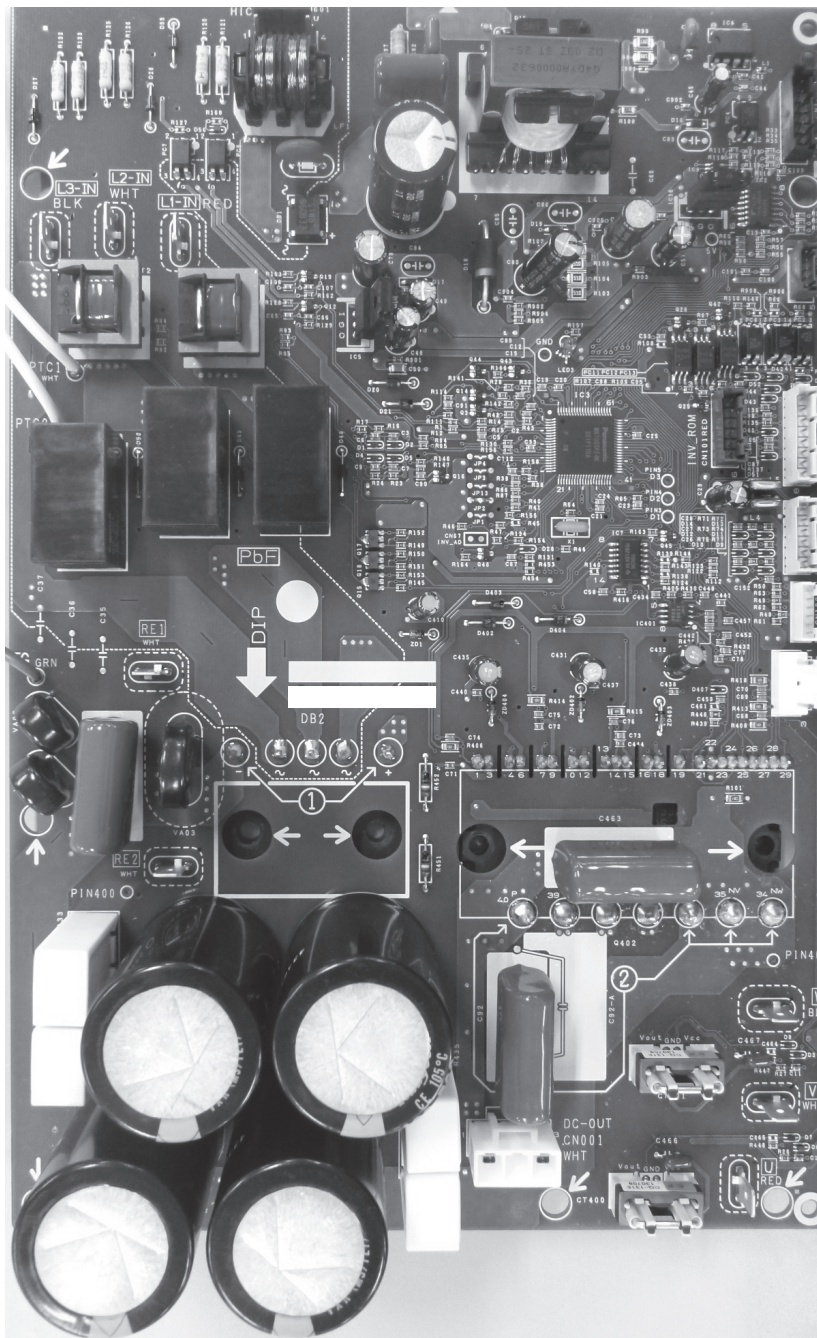


1. Outdoor Unit Control PCB

1-3. Outdoor Unit FIL PCB

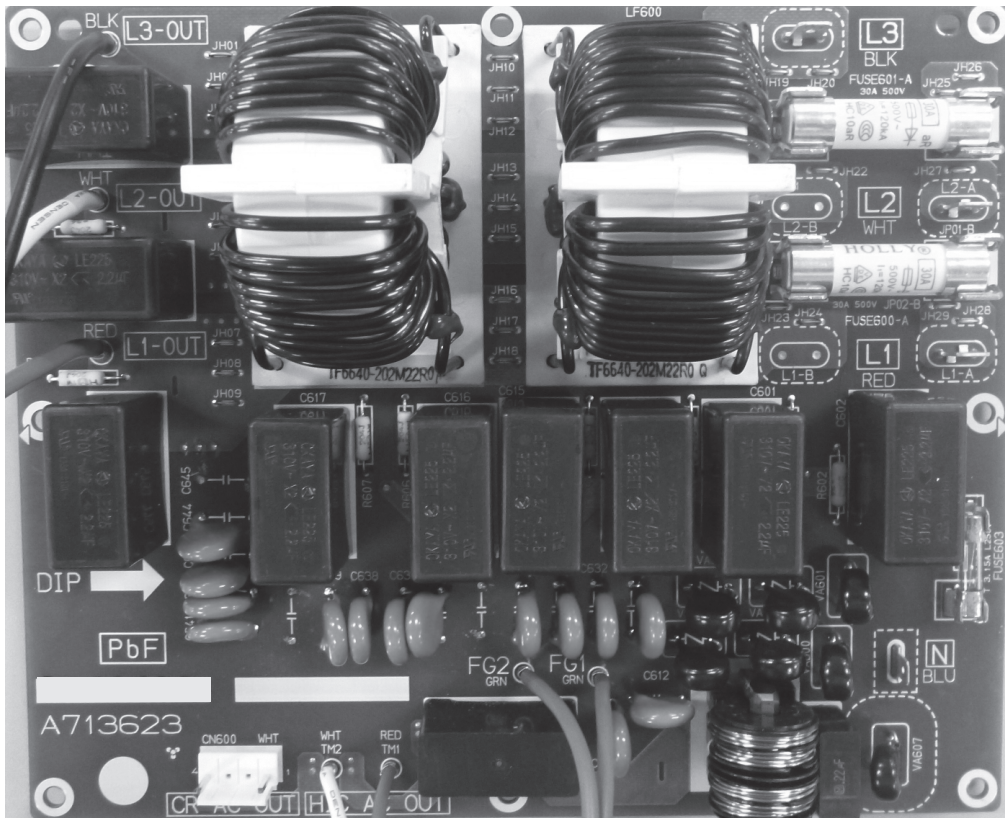

1-4. Outdoor Unit FIL PCB

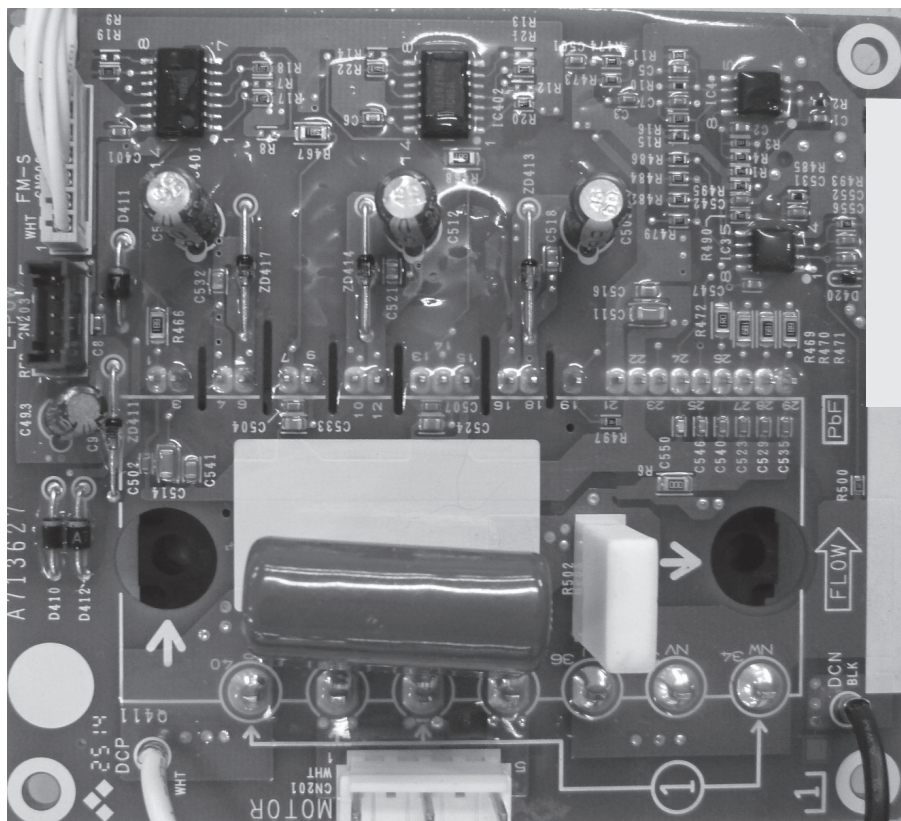

7

1. Outdoor Unit Control PCB

1-5. Functions

<p>A. ADD pin (2P, White) (CN30)</p>	<p>Auto address setting pin</p> <ul style="list-style-type: none"> • Short-circuit this pin for 1 second or longer to automatically set the addresses at the indoor units that are connected to that outdoor unit and are within the same system. • The system address is "1" at the time of shipment. Auto address setting is necessary even for communications lines in a single system where the inter-unit control wiring does not cross to any other systems. • While auto address setting is in progress, the 2 LEDs (LED1, 2: Red) on the outdoor unit control PCB blink alternately. (Short-circuiting this pin while auto address setting is in progress will stop the auto address setting operation.)
<p>SW1 Rotary switch (10 positions, Black)</p>	<p>Outdoor system address setting switch</p> <ul style="list-style-type: none"> • The setting is "1" at the time of shipment. It is not necessary to change the setting if wiring is connected only to an outdoor unit and indoor units in a single system and the inter-unit control wiring does not cross multiple systems. • If wiring links the inter-unit control wiring for multiple systems to the same communications lines, then a different address must be set for each refrigerant tubing system. • If wiring links multiple systems, a maximum of 30 systems (up to 64 indoor units) can be connected. This setting can be set up to "39," however control will be for 30 systems even if the setting is set to higher than 30. An alarm will be displayed if system addresses are duplicated. (For details, see Table 7-1.)
<p>SW2 DIP switch (2P, Black)</p>	<p>Switches for setting system address 10s digit and 20s digit</p> <ul style="list-style-type: none"> • If 10 systems or more are set, the setting is made by a combination of this DIP switch and S002. • If 10 - 19 systems are set, set switch 1 (10s digit) to ON. • If 20 - 29 systems are set, set switch 2 (20s digit) to ON, and set switch 1 (10s digit) to OFF. • If 30 systems are set, set both switch 1 (10s digit) and switch 2 (20s digit) to ON. (For details, see Table 7-1.)
<p>SW3 Rotary switch (10 positions, Red)</p>	<p>Switch for setting the number of connected indoor units. In order to allow the outdoor unit to manage indoor units in the same refrigerant system, set the number of connected indoor units. (For details, see Table 7-2.)</p>
<p>SW4 DIP switch (3P, Black)</p>	<p>Switches for setting the 10s, 20s, and 30s digit for the number of connected indoor units</p> <ul style="list-style-type: none"> • If 10 systems or more are set, the setting is made by a combination of this DIP switch and S003. • If 10 - 19 systems are set, set only switch 1 (10s digit) to ON. • If 20 - 29 systems are set, set switch 2 (20s digit) to ON, and set switch 1 (10s digit) to OFF. • If 30 - 39 systems are set, set only switch 3 (30s digit) to ON. • If 40 - 49 systems are set, set switch 3 (30s digit) to ON, and set switch 1 (10s digit) to ON. • If 50 - 59 systems are set, set switch 3 (30s digit) to ON, and set switch 2 (20s digit) to ON. • If 60 - 64 systems are set, set switch 3 (30s digit) to ON, and set switch 2 (20s digit) to ON, and set switch 1 (10s digit) to ON. (For details, see Table 7-2.)
<p>SW5 DIP switch (3P, Black)</p>	<p>Unit address setting switch</p> <ul style="list-style-type: none"> • The setting is "1" at the time of shipment. (For details, see Table 7-4.)
<p>SW6 DIP switch (3P, Black)</p>	<p>Setting of the number of outdoor units</p> <ul style="list-style-type: none"> • Turn the switches ON according to the number of outdoor units (1 - 4). (For details, see Table 7-3.)
<p>SW7 DIP switch (3P, Black)</p>	<p>Backup operation switch If an INV1 compressor has malfunctioned, turn INV1 ON and BACKUP SW ON to operate the outdoor unit using only INV2 compressor. If an INV2 compressor has malfunctioned, turn INV2 ON and BACKUP SW ON to operate the outdoor unit using only the INV1 compressor.</p>

1. Outdoor Unit Control PCB

Terminal pin (3P, Black) (CN67)	<p>For communications circuit impedance matching</p> <ul style="list-style-type: none"> • A connecting socket (3P, Black) is attached to the terminal plug at the time of shipment from the factory. • In the case of link wiring which combines the inter-unit control wiring for multiple systems into a single communications circuit, When using, refer to the item "4. Auto Address Setting" under the section "7. TEST RUN" in the Service Manual & Test Run Service Manual.
LED1, 2 (2P, Red)	<ul style="list-style-type: none"> • LED 1 and 2 blink alternately while auto address setting is in progress. • Display the alarm contents for alarms which were detected by the outdoor unit.
RUN pin (2P, White) (CN27)	<p>Start pin</p> <p>Short-circuit this pin and apply a pulse signal to start all indoor units in that refrigerant system.</p>
STOP pin (2P, White) (CN28)	<p>Stop pin</p> <p>Short-circuit this pin and apply a pulse signal to stop all indoor units in that refrigerant system.</p>
AP pin (2P, White) (CN24)	<p>Vacuuming pin</p> <ul style="list-style-type: none"> • To perform vacuuming of the outdoor unit, short-circuit this pin and then turn the power ON. All solenoid valves turn ON and vacuuming begins smoothly. (Do not perform auto address setting at this time.) • Release the short-circuit to return the unit to normal status.
MODE pin (3P, Black) (CN40)	<p>Indoor unit Heating/Cooling mode change pin</p> <ul style="list-style-type: none"> • During the summer season, short-circuit this pin in the cooling mode. Then, perform auto address setting. When auto address setting is completed, release the short-circuit to return the unit to normal status. • When heating mode is short-circuited, heating operation can be used. • When cooling mode is short-circuited, cooling operation can be used.
TEST pin (2P, White) (CN22)	<ul style="list-style-type: none"> • This pin is used to test the PCB at the factory. • When the power is turned ON after this pin has been short-circuited, all output signals will be output in sequence. (Sequential output does not occur if this pin is short-circuited when the power is already ON.) Releasing this pin returns the unit to normal control.
CHK pin (2P, White) (CN23)	<p>When set to short-circuit, changes to test run mode. (Test run mode is automatically cancelled after an hour.) When short-circuit is cancelled, test run mode is cancelled.</p>
DEF pin (2P, White) (CN25)	<p>When the pin of the main unit is short-circuit in heating mode, defrosting operation is started. Even if short circuited, defrosting will not be activated immediately.</p>
SNOW plug (3P, Red) (CN34)	<p>Can be used when installing a snowfall sensor device.</p>
SILENT plug (2P, White) (CN33)	<p>Can be used when setting the outdoor unit fan in sound absorbing mode.</p>
OC EMG terminal (3P, Black) (CN69)	<p>If "TO INDOOR UNIT" accidentally connected to high voltage, use the terminal base TM1. Method: 1. Replace the pins 1 and 2 of CN69 with the pins 2 and 3. 2. Disconnect JP11.</p>
RC1 EMG terminal (3P, Black) (CN82)	<p>If "TO OUTDOOR UNIT" accidentally connected to high voltage, use the terminal base TM1. Method: 1. Replace the pins 1 and 2 of CN82 with the pins 2 and 3. 2. Disconnect JP12.</p>

1. Outdoor Unit Control PCB

Table 7-1.

Setting the System Address

[SW1: Rotary switch (Black), SW2: 2P DIP (Black)]

	Outdoor system address	SW1 setting	SW2 setting	
			1P (10s digit)	2P (20s digit)
1 refrigerant system only	1	0	OFF	OFF
	1	1	OFF	OFF
	2	2	OFF	OFF
	3	3	OFF	OFF
	4	4	OFF	OFF
	5	5	OFF	OFF
	6	6	OFF	OFF
	7	7	OFF	OFF
	8	8	OFF	OFF
Link wiring	9	9	OFF	OFF
	10	0	ON	OFF
	11	1	ON	OFF
	12	2	ON	OFF
	13	3	ON	OFF
	14	4	ON	OFF
	15	5	ON	OFF
	16	6	ON	OFF
	17	7	ON	OFF
	18	8	ON	OFF
	19	9	ON	OFF

	Outdoor system address	SW1 setting	SW2 setting	
			1P (10s digit)	2P (20s digit)
Link wiring	20	0	OFF	ON
	21	1	OFF	ON
	22	2	OFF	ON
	23	3	OFF	ON
	24	4	OFF	ON
	25	5	OFF	ON
	26	6	OFF	ON
	27	7	OFF	ON
	28	8	OFF	ON
	29	9	OFF	ON
	30	0	ON	ON

Table 7-2.

Setting the Number of Indoor Units

[SW3: Rotary switch (Red), SW4: 3P DIP (Black)]

Number of Indoor Units	SW3 Setting	SW4 Setting		
		1	2	3
1	1	OFF	OFF	OFF
2	2	OFF	OFF	OFF
3	3	OFF	OFF	OFF
9	9	OFF	OFF	OFF
10	0	ON	OFF	OFF
11	1	ON	OFF	OFF
19	9	ON	OFF	OFF
20	0	OFF	ON	OFF
21	1	OFF	ON	OFF
29	9	OFF	ON	OFF
30	0	OFF	OFF	ON
31	1	OFF	OFF	ON
39	9	OFF	OFF	ON
40	0	ON	OFF	ON
41	1	ON	OFF	ON
49	9	ON	OFF	ON
50	0	OFF	ON	ON
51	1	OFF	ON	ON
59	9	OFF	ON	ON
60	0	ON	ON	ON
61	1	ON	ON	ON
62	2	ON	ON	ON
63	3	ON	ON	ON
64	4	ON	ON	ON

Table 7-3.

Setting the Number of Outdoor Units

[SW6: DIP switch (Black)]

Number of Outdoor Units	SW6 Setting		
	1	2	3
1	ON	OFF	OFF
2	OFF	ON	OFF
3	ON	ON	OFF
4	OFF	OFF	ON

Table 7-4.

Setting the Outdoor Unit address

[SW5: DIP switch (Black)]

Outdoor Unit Address	SW5 Setting		
	1	2	3
1	ON	OFF	OFF
2	OFF	ON	OFF
3	ON	ON	OFF
4	OFF	OFF	ON

Contents

8. CAPACITY TABLE

1. Capacity of Outdoor Unit	8-4
1-1. U-8ME2E8 (Cooling)	8-4
1-2. U-8ME2E8 (Heating)	8-7
1-3. U-10ME2E8 (Cooling)	8-10
1-4. U-10ME2E8 (Heating)	8-13
1-5. U-12ME2E8 (Cooling)	8-16
1-6. U-12ME2E8 (Heating)	8-19
1-7. U-14ME2E8 (Cooling)	8-22
1-8. U-14ME2E8 (Heating)	8-25
1-9. U-16ME2E8 (Cooling)	8-28
1-10. U-16ME2E8 (Heating)	8-31
1-11. U-18ME2E8 (Cooling)	8-34
1-12. U-18ME2E8 (Heating)	8-37
1-13. U-20ME2E8 (Cooling)	8-40
1-14. U-20ME2E8 (Heating)	8-43
2. Cooling Capacity of Indoor Unit	8-46
2-1. 4-Way Cassette (Type U2)	8-46
2-2. 4-Way Cassette (Type U1)	8-57
2-3. 4-Way Cassette 60×60 (Type Y2)	8-68
2-4. 2-Way Cassette (Type L1)	8-74
2-5. Wall Mounted (Type K2)	8-80
2-6. Wall Mounted (Type K1)	8-84
2-7. Ceiling (Type T2)	8-88
2-8. Low Silhouette Ducted (Type F2)	8-94
2-9. Floor Standing (Type P1)	8-106
2-10. Concealed Floor Standing (Type R1)	8-112
2-11. 1-Way Cassette (Type D1)	8-118
2-12. Slim Low Static Ducted (Type M1)	8-123
2-13. High Static Pressure Ducted (Type E2)	8-129
3. Part Load of Outdoor Unit	8-133
3-1. U-8ME2E8 (Cooling)	8-133
3-2. U-8ME2E8 (Heating)	8-135
3-3. U-10ME2E8 (Cooling)	8-137
3-4. U-10ME2E8 (Heating)	8-139
3-5. U-12ME2E8 (Cooling)	8-141
3-6. U-12ME2E8 (Heating)	8-143
3-7. U-14ME2E8 (Cooling)	8-145
3-8. U-14ME2E8 (Heating)	8-147
3-9. U-16ME2E8 (Cooling)	8-149
3-10. U-16ME2E8 (Heating)	8-151
3-11. U-18ME2E8 (Cooling)	8-153
3-12. U-18ME2E8 (Heating)	8-155
3-13. U-20ME2E8 (Cooling)	8-157
3-14. U-20ME2E8 (Heating)	8-159

Contents

3-15. 22HP (Cooling) U-10ME2E8+U-12ME2E8.....	8-161
3-16. 22HP (Heating) U-10ME2E8+U-12ME2E8.....	8-163
3-17. 24HP (Cooling) U-12ME2E8+U-12ME2E8.....	8-165
3-18. 24HP (Heating) U-12ME2E8+U-12ME2E8.....	8-167
3-19. 26HP (Cooling) U-10ME2E8+U-16ME2E8.....	8-169
3-20. 26HP (Heating) U-10ME2E8+U-16ME2E8.....	8-171
3-21. 28HP (Cooling) U-12ME2E8+U-16ME2E8.....	8-173
3-22. 28HP (Heating) U-12ME2E8+U-16ME2E8.....	8-175
3-23. 30HP (Cooling) U-14ME2E8+U-16ME2E8.....	8-177
3-24. 30HP (Heating) U-14ME2E8+U-16ME2E8.....	8-179
3-25. 32HP (Cooling) U-16ME2E8+U-16ME2E8.....	8-181
3-26. 32HP (Heating) U-16ME2E8+U-16ME2E8.....	8-183
3-27. 34HP (Cooling) U-14ME2E8+U-20ME2E8.....	8-185
3-28. 34HP (Heating) U-14ME2E8+U-20ME2E8.....	8-187
3-29. 36HP (Cooling) U-16ME2E8+U-20ME2E8.....	8-189
3-30. 36HP (Heating) U-16ME2E8+U-20ME2E8.....	8-191
3-31. 38HP (Cooling) U-18ME2E8+U-20ME2E8.....	8-193
3-32. 38HP (Heating) U-18ME2E8+U-20ME2E8.....	8-195
3-33. 40HP (Cooling) U-20ME2E8+U-20ME2E8.....	8-197
3-34. 40HP (Heating) U-20ME2E8+U-20ME2E8.....	8-199
3-35. 42HP (Cooling) U-10ME2E8+U-16ME2E8+U-16ME2E8.....	8-201
3-36. 42HP (Heating) U-10ME2E8+U-16ME2E8+U-16ME2E8.....	8-203
3-37. 44HP (Cooling) U-12ME2E8+U-16ME2E8+U-16ME2E8.....	8-205
3-38. 44HP (Heating) U-12ME2E8+U-16ME2E8+U-16ME2E8.....	8-207
3-39. 46HP (Cooling) U-14ME2E8+U-16ME2E8+U-16ME2E8.....	8-209
3-40. 46HP (Heating) U-14ME2E8+U-16ME2E8+U-16ME2E8.....	8-211
3-41. 48HP (Cooling) U-16ME2E8+U-16ME2E8+U-16ME2E8.....	8-213
3-42. 48HP (Heating) U-16ME2E8+U-16ME2E8+U-16ME2E8.....	8-215
3-43. 50HP (Cooling) U-14ME2E8+U-16ME2E8+U-20ME2E8.....	8-217
3-44. 50HP (Heating) U-14ME2E8+U-16ME2E8+U-20ME2E8.....	8-219
3-45. 52HP (Cooling) U-16ME2E8+U-16ME2E8+U-20ME2E8.....	8-221
3-46. 52HP (Heating) U-16ME2E8+U-16ME2E8+U-20ME2E8.....	8-223
3-47. 54HP (Cooling) U-14ME2E8+U-20ME2E8+U-20ME2E8.....	8-225
3-48. 54HP (Heating) U-14ME2E8+U-20ME2E8+U-20ME2E8.....	8-227
3-49. 56HP (Cooling) U-16ME2E8+U-20ME2E8+U-20ME2E8.....	8-229
3-50. 56HP (Heating) U-16ME2E8+U-20ME2E8+U-20ME2E8.....	8-231
3-51. 58HP (Cooling) U-18ME2E8+U-20ME2E8+U-20ME2E8.....	8-233
3-52. 58HP (Heating) U-18ME2E8+U-20ME2E8+U-20ME2E8.....	8-235
3-53. 60HP (Cooling) U-20ME2E8+U-20ME2E8+U-20ME2E8.....	8-237
3-54. 60HP (Heating) U-20ME2E8+U-20ME2E8+U-20ME2E8.....	8-239
3-55. 62HP (Cooling) U-14ME2E8+U-16ME2E8+U-16ME2E8+U-16ME2E8.....	8-241
3-56. 62HP (Heating) U-14ME2E8+U-16ME2E8+U-16ME2E8+U-16ME2E8.....	8-243
3-57. 64HP (Cooling) U-16ME2E8+U-16ME2E8+U-16ME2E8+U-16ME2E8.....	8-245
3-58. 64HP (Heating) U-16ME2E8+U-16ME2E8+U-16ME2E8+U-16ME2E8.....	8-247
3-59. 66HP (Cooling) U-10ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8.....	8-249
3-60. 66HP (Heating) U-10ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8.....	8-251
3-61. 68HP (Cooling) U-12ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8.....	8-253
3-62. 68HP (Heating) U-12ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8.....	8-255

Contents

3-63. 70HP (Cooling) U-10ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8	8-257
3-64. 70HP (Heating) U-10ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8	8-259
3-65. 72HP (Cooling) U-16ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8	8-261
3-66. 72HP (Heating) U-16ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8	8-263
3-67. 74HP (Cooling) U-16ME2E8+U-18ME2E8+U-20ME2E8+U-20ME2E8	8-265
3-68. 74HP (Heating) U-16ME2E8+U-18ME2E8+U-20ME2E8+U-20ME2E8	8-267
3-69. 76HP (Cooling) U-16ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8	8-269
3-70. 76HP (Heating) U-16ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8	8-271
3-71. 78HP (Cooling) U-18ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8	8-273
3-72. 78HP (Heating) U-18ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8	8-275
3-73. 80HP (Cooling) U-20ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8	8-277
3-74. 80HP (Heating) U-20ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8	8-279

1. Capacity of Outdoor Unit

1-1. U-8ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
130%	-10.0	19.4	2.12	23.3	2.54	24.1	2.63	24.1	2.63	27.3	2.99	30.5	3.34	33.7	3.69
	-5.0	19.4	2.12	23.3	2.55	24.1	2.64	24.1	2.64	27.3	2.99	30.5	3.34	33.7	3.69
	0.0	19.4	2.13	23.3	2.55	24.1	2.64	24.1	2.64	27.3	2.99	30.5	3.35	33.7	3.70
	5.0	19.4	2.13	23.3	2.56	24.1	2.65	24.1	2.65	27.3	3.00	30.5	3.35	33.7	3.70
	10.0	19.4	2.14	23.3	2.56	24.1	2.66	24.1	2.66	27.3	3.02	30.5	3.38	33.7	3.73
	15.0	19.4	2.14	23.3	2.58	24.1	2.70	24.1	2.70	27.3	3.08	30.5	3.46	33.7	3.82
	20.0	19.4	2.20	23.3	2.67	24.1	2.86	24.1	2.86	27.3	3.28	30.5	3.84	33.7	4.45
	25.0	19.4	2.53	23.3	3.14	24.1	3.52	24.1	3.52	27.3	4.16	30.5	4.86	33.7	5.61
	30.0	19.4	3.17	23.3	3.93	24.1	4.35	24.1	4.35	27.3	5.13	30.5	5.95	33.4	6.68
	35.0	19.4	3.85	23.3	4.77	24.1	5.25	24.1	5.25	27.3	6.16	29.6	6.68	30.8	6.68
	40.0	19.4	4.59	23.3	5.67	24.1	6.22	24.1	6.22	26.1	6.68	27.2	6.68	28.4	6.68
43.0	19.4	5.06	23.3	6.25	23.7	6.68	23.7	6.68	24.8	6.68	25.8	6.53	26.5	6.24	
46.0	19.2	5.09	19.3	5.09	19.3	5.09	19.3	5.09	20.0	4.90	20.8	4.75	21.7	4.65	
52.0	8.1	2.01	8.6	2.01	8.6	2.01	8.6	2.01	9.5	2.08	10.6	2.16	11.7	2.24	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
120%	-10.0	17.9	1.96	21.5	2.35	23.5	2.57	23.5	2.57	26.7	2.92	29.8	3.26	32.9	3.60
	-5.0	17.9	1.96	21.5	2.35	23.5	2.58	23.5	2.58	26.7	2.92	29.8	3.26	32.9	3.60
	0.0	17.9	1.96	21.5	2.36	23.5	2.58	23.5	2.58	26.7	2.92	29.8	3.27	32.9	3.61
	5.0	17.9	1.97	21.5	2.36	23.5	2.59	23.5	2.59	26.7	2.93	29.8	3.27	32.9	3.62
	10.0	17.9	1.97	21.5	2.37	23.5	2.59	23.5	2.59	26.7	2.95	29.8	3.30	32.9	3.65
	15.0	17.9	1.98	21.5	2.38	23.5	2.63	23.5	2.63	26.7	3.01	29.8	3.38	32.9	3.73
	20.0	17.9	2.03	21.5	2.47	23.5	2.78	23.5	2.78	26.7	3.20	29.8	3.70	32.9	4.29
	25.0	17.9	2.34	21.5	2.90	23.5	3.41	23.5	3.41	26.7	4.02	29.8	4.69	32.9	5.40
	30.0	17.9	2.93	21.5	3.62	23.5	4.22	23.5	4.22	26.7	4.96	29.8	5.75	32.9	6.60
	35.0	17.9	3.56	21.5	4.39	23.5	5.09	23.5	5.09	26.7	5.97	29.3	6.68	30.6	6.68
	40.0	17.9	4.24	21.5	5.23	23.5	6.03	23.5	6.03	25.9	6.68	27.0	6.68	28.2	6.68
43.0	17.9	4.67	21.5	5.76	23.5	6.63	23.5	6.63	24.6	6.68	25.7	6.57	26.3	6.26	
46.0	17.7	5.08	19.2	5.10	19.2	5.10	19.2	5.10	19.8	4.90	20.6	4.74	21.5	4.62	
52.0	7.5	1.98	8.3	1.98	8.4	1.98	8.4	1.98	9.3	2.04	10.3	2.11	11.4	2.18	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
110%	-10.0	16.4	1.80	19.7	2.16	23.0	2.51	23.0	2.51	26.0	2.85	29.1	3.18	32.1	3.52
	-5.0	16.4	1.80	19.7	2.16	23.0	2.52	23.0	2.52	26.0	2.85	29.1	3.19	32.1	3.52
	0.0	16.4	1.80	19.7	2.16	23.0	2.52	23.0	2.52	26.0	2.86	29.1	3.19	32.1	3.52
	5.0	16.4	1.81	19.7	2.17	23.0	2.53	23.0	2.53	26.0	2.86	29.1	3.20	32.1	3.53
	10.0	16.4	1.81	19.7	2.17	23.0	2.53	23.0	2.53	26.0	2.87	29.1	3.22	32.1	3.56
	15.0	16.4	1.82	19.7	2.18	23.0	2.57	23.0	2.57	26.0	2.93	29.1	3.30	32.1	3.64
	20.0	16.4	1.86	19.7	2.27	23.0	2.71	23.0	2.71	26.0	3.11	29.1	3.56	32.1	4.12
	25.0	16.4	2.16	19.7	2.66	23.0	3.30	23.0	3.30	26.0	3.89	29.1	4.52	32.1	5.21
	30.0	16.4	2.69	19.7	3.32	23.0	4.08	23.0	4.08	26.0	4.79	29.1	5.55	32.1	6.37
	35.0	16.4	3.27	19.7	4.02	23.0	4.93	23.0	4.93	26.0	5.77	29.1	6.67	30.3	6.68
	40.0	16.4	3.89	19.7	4.79	23.0	5.84	23.0	5.84	25.7	6.68	26.8	6.68	28.0	6.68
43.0	16.4	4.29	19.7	5.27	23.0	6.43	23.0	6.43	24.5	6.68	25.5	6.62	26.1	6.29	
46.0	16.3	4.66	19.1	5.13	19.1	5.13	19.1	5.13	19.7	4.91	20.4	4.74	21.2	4.60	
52.0	7.0	1.95	7.6	1.95	8.2	1.95	8.2	1.95	9.1	2.01	10.0	2.07	11.1	2.13	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	-10.0	14.9	1.63	17.9	1.96	20.9	2.29	22.4	2.45	25.4	2.78	28.4	3.10	31.4	3.43
	-5.0	14.9	1.64	17.9	1.96	20.9	2.29	22.4	2.45	25.4	2.78	28.4	3.11	31.4	3.43
	0.0	14.9	1.64	17.9	1.97	20.9	2.29	22.4	2.46	25.4	2.79	28.4	3.11	31.4	3.44
	5.0	14.9	1.64	17.9	1.97	20.9	2.30	22.4	2.46	25.4	2.79	28.4	3.12	31.4	3.45
	10.0	14.9	1.65	17.9	1.98	20.9	2.31	22.4	2.47	25.4	2.80	28.4	3.14	31.4	3.47
	15.0	14.9	1.66	17.9	1.99	20.9	2.33	22.4	2.50	25.4	2.85	28.4	3.21	31.4	3.55
	20.0	14.9	1.70	17.9	2.06	20.9	2.44	22.4	2.63	25.4	3.02	28.4	3.42	31.4	3.96
	25.0	14.9	1.98	17.9	2.43	20.9	2.92	22.4	3.19	25.4	3.75	28.4	4.36	31.4	5.01
	30.0	14.9	2.46	17.9	3.02	20.9	3.63	22.4	3.95	25.4	4.63	28.4	5.36	31.4	6.14
	35.0	14.9	2.98	17.9	3.66	20.9	4.39	22.4	4.77	25.4	5.58	28.4	6.44	30.0	6.68
	40.0	14.9	3.55	17.9	4.35	20.9	5.21	22.4	5.66	25.4	6.61	26.6	6.68	27.7	6.68
43.0	14.9	3.91	17.9	4.79	20.9	5.73	22.4	6.23	24.3	6.68	25.4	6.68	25.9	6.33	
46.0	14.8	4.24	17.7	5.20	18.8	5.29	19.0	5.15	19.6	4.92	20.2	4.73	21.0	4.59	
52.0	6.4	1.85	7.0	1.87	7.7	1.90	8.1	1.92	8.9	1.97	9.8	2.02	10.8	2.08	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-8ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
90%	-10.0	13.4	1.47	16.1	1.77	18.8	2.06	20.2	2.21	22.8	2.50	25.5	2.79	28.2	3.09
	-5.0	13.4	1.47	16.1	1.77	18.8	2.06	20.2	2.21	22.8	2.50	25.5	2.80	28.2	3.09
	0.0	13.4	1.48	16.1	1.77	18.8	2.07	20.2	2.21	22.8	2.51	25.5	2.80	28.2	3.10
	5.0	13.4	1.48	16.1	1.77	18.8	2.07	20.2	2.22	22.8	2.51	25.5	2.81	28.2	3.10
	10.0	13.4	1.48	16.1	1.78	18.8	2.08	20.2	2.22	22.8	2.52	25.5	2.82	28.2	3.12
	15.0	13.4	1.49	16.1	1.79	18.8	2.09	20.2	2.24	22.8	2.55	25.5	2.87	28.2	3.19
	20.0	13.4	1.51	16.1	1.84	18.8	2.17	20.2	2.34	22.8	2.68	25.5	3.03	28.2	3.38
	25.0	13.4	1.74	16.1	2.14	18.8	2.55	20.2	2.77	22.8	3.24	25.5	3.74	28.2	4.27
	30.0	13.4	2.19	16.1	2.66	18.8	3.18	20.2	3.45	22.8	4.01	25.5	4.62	28.2	5.26
	35.0	13.4	2.65	16.1	3.23	18.8	3.85	20.2	4.17	22.8	4.85	25.5	5.57	28.2	6.33
	40.0	13.4	3.15	16.1	3.84	18.8	4.57	20.2	4.95	22.8	5.75	25.5	6.59	26.7	6.68
43.0	13.4	3.47	16.1	4.23	18.8	5.03	20.2	5.45	22.8	6.33	24.5	6.68	25.4	6.57	
46.0	13.3	3.77	16.0	4.59	18.6	5.47	18.8	5.31	19.1	5.01	19.5	4.77	20.1	4.57	
52.0	6.2	1.80	6.6	1.80	7.2	1.80	7.5	1.81	8.1	1.83	8.9	1.86	9.7	1.90	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
80%	-10.0	11.9	1.31	14.3	1.57	16.7	1.83	17.9	1.96	20.3	2.22	22.7	2.48	25.1	2.75
	-5.0	11.9	1.31	14.3	1.57	16.7	1.83	17.9	1.96	20.3	2.23	22.7	2.49	25.1	2.75
	0.0	11.9	1.31	14.3	1.57	16.7	1.84	17.9	1.97	20.3	2.23	22.7	2.49	25.1	2.75
	5.0	11.9	1.32	14.3	1.58	16.7	1.84	17.9	1.97	20.3	2.23	22.7	2.50	25.1	2.76
	10.0	11.9	1.32	14.3	1.58	16.7	1.85	17.9	1.98	20.3	2.24	22.7	2.50	25.1	2.77
	15.0	11.9	1.33	14.3	1.59	16.7	1.85	17.9	1.99	20.3	2.26	22.7	2.53	25.1	2.81
	20.0	11.9	1.34	14.3	1.62	16.7	1.91	17.9	2.05	20.3	2.35	22.7	2.65	25.1	2.96
	25.0	11.9	1.51	14.3	1.86	16.7	2.20	17.9	2.38	20.3	2.76	22.7	3.17	25.1	3.60
	30.0	11.9	1.93	14.3	2.32	16.7	2.75	17.9	2.97	20.3	3.44	22.7	3.94	25.1	4.46
	35.0	11.9	2.33	14.3	2.82	16.7	3.34	17.9	3.60	20.3	4.17	22.7	4.76	25.1	5.38
	40.0	11.9	2.77	14.3	3.35	16.7	3.97	17.9	4.29	20.3	4.95	22.7	5.65	25.1	6.38
43.0	11.9	3.05	14.3	3.69	16.7	4.37	17.9	4.72	20.3	5.45	22.7	6.22	24.5	6.68	
46.0	11.8	3.31	14.2	4.01	16.6	4.75	17.7	5.13	18.8	5.22	19.0	4.91	19.4	4.65	
52.0	5.9	1.77	6.3	1.74	6.7	1.73	6.9	1.72	7.4	1.72	8.0	1.73	8.6	1.74	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
70%	-10.0	10.5	1.15	12.5	1.37	14.6	1.60	15.7	1.72	17.8	1.95	19.9	2.17	22.0	2.40
	-5.0	10.5	1.15	12.5	1.38	14.6	1.60	15.7	1.72	17.8	1.95	19.9	2.18	22.0	2.41
	0.0	10.5	1.15	12.5	1.38	14.6	1.61	15.7	1.72	17.8	1.95	19.9	2.18	22.0	2.41
	5.0	10.5	1.15	12.5	1.38	14.6	1.61	15.7	1.73	17.8	1.96	19.9	2.19	22.0	2.42
	10.0	10.5	1.16	12.5	1.39	14.6	1.62	15.7	1.73	17.8	1.96	19.9	2.19	22.0	2.42
	15.0	10.5	1.16	12.5	1.39	14.6	1.62	15.7	1.74	17.8	1.97	19.9	2.21	22.0	2.44
	20.0	10.5	1.17	12.5	1.41	14.6	1.65	15.7	1.77	17.8	2.03	19.9	2.28	22.0	2.54
	25.0	10.5	1.28	12.5	1.58	14.6	1.88	15.7	2.03	17.8	2.33	19.9	2.65	22.0	2.99
	30.0	10.5	1.68	12.5	2.01	14.6	2.35	15.7	2.53	17.8	2.91	19.9	3.31	22.0	3.72
	35.0	10.5	2.03	12.5	2.43	14.6	2.86	15.7	3.07	17.8	3.53	19.9	4.01	22.0	4.51
	40.0	10.5	2.41	12.5	2.89	14.6	3.40	15.7	3.66	17.8	4.20	19.9	4.77	22.0	5.36
43.0	10.5	2.65	12.5	3.19	14.6	3.75	15.7	4.03	17.8	4.63	19.9	5.25	22.0	5.90	
46.0	10.3	2.88	12.4	3.46	14.5	4.07	15.5	4.38	17.6	5.03	18.7	5.20	18.9	4.87	
52.0	5.8	1.77	6.0	1.71	6.3	1.67	6.5	1.66	6.8	1.63	7.3	1.62	7.8	1.61	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
60%	-10.0	9.0	0.98	10.8	1.18	12.5	1.37	13.4	1.47	15.2	1.67	17.0	1.86	18.8	2.06
	-5.0	9.0	0.98	10.8	1.18	12.5	1.38	13.4	1.47	15.2	1.67	17.0	1.87	18.8	2.06
	0.0	9.0	0.99	10.8	1.18	12.5	1.38	13.4	1.48	15.2	1.67	17.0	1.87	18.8	2.07
	5.0	9.0	0.99	10.8	1.18	12.5	1.38	13.4	1.48	15.2	1.68	17.0	1.87	18.8	2.07
	10.0	9.0	0.99	10.8	1.19	12.5	1.39	13.4	1.48	15.2	1.68	17.0	1.88	18.8	2.08
	15.0	9.0	1.00	10.8	1.20	12.5	1.39	13.4	1.49	15.2	1.69	17.0	1.89	18.8	2.09
	20.0	9.0	1.01	10.8	1.21	12.5	1.41	13.4	1.51	15.2	1.72	17.0	1.93	18.8	2.15
	25.0	9.0	1.07	10.8	1.31	12.5	1.56	13.4	1.67	15.2	1.93	17.0	2.18	18.8	2.44
	30.0	9.0	1.45	10.8	1.71	12.5	1.99	13.4	2.13	15.2	2.42	17.0	2.73	18.8	3.06
	35.0	9.0	1.75	10.8	2.07	12.5	2.41	13.4	2.58	15.2	2.95	17.0	3.32	18.8	3.71
	40.0	9.0	2.07	10.8	2.46	12.5	2.87	13.4	3.08	15.2	3.51	17.0	3.95	18.8	4.42
43.0	9.0	2.27	10.8	2.71	12.5	3.16	13.4	3.39	15.2	3.87	17.0	4.36	18.8	4.87	
46.0	8.9	2.46	10.6	2.94	12.4	3.43	13.3	3.68	15.1	4.20	16.9	4.74	18.6	5.30	
52.0	5.6	1.78	5.8	1.71	6.0	1.64	6.1	1.62	6.3	1.57	6.6	1.54	7.0	1.50	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-8ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
50%	-10.0	7.5	0.82	9.0	0.98	10.5	1.15	11.2	1.23	12.7	1.39	14.2	1.55	15.7	1.72
	-5.0	7.5	0.82	9.0	0.98	10.5	1.15	11.2	1.23	12.7	1.39	14.2	1.56	15.7	1.72
	0.0	7.5	0.82	9.0	0.99	10.5	1.15	11.2	1.23	12.7	1.39	14.2	1.56	15.7	1.72
	5.0	7.5	0.82	9.0	0.99	10.5	1.15	11.2	1.23	12.7	1.40	14.2	1.56	15.7	1.73
	10.0	7.5	0.83	9.0	0.99	10.5	1.16	11.2	1.24	12.7	1.40	14.2	1.57	15.7	1.73
	15.0	7.5	0.83	9.0	1.00	10.5	1.16	11.2	1.24	12.7	1.41	14.2	1.57	15.7	1.74
	20.0	7.5	0.84	9.0	1.01	10.5	1.17	11.2	1.25	12.7	1.42	14.2	1.59	15.7	1.76
	25.0	7.5	0.87	9.0	1.06	10.5	1.25	11.2	1.34	12.7	1.55	14.2	1.75	15.7	1.96
	30.0	7.5	1.23	9.0	1.43	10.5	1.64	11.2	1.75	12.7	1.98	14.2	2.21	15.7	2.45
	35.0	7.5	1.48	9.0	1.73	10.5	1.99	11.2	2.12	12.7	2.40	14.2	2.69	15.7	2.98
	40.0	7.5	1.74	9.0	2.05	10.5	2.37	11.2	2.53	12.7	2.86	14.2	3.20	15.7	3.56
43.0	7.5	1.91	9.0	2.25	10.5	2.60	11.2	2.78	12.7	3.15	14.2	3.53	15.7	3.92	
46.0	7.4	2.06	8.9	2.44	10.3	2.83	11.1	3.02	12.6	3.43	14.0	3.84	15.5	4.27	
52.0	5.5	1.84	5.6	1.74	5.7	1.66	5.8	1.62	6.0	1.55	6.1	1.49	6.4	1.44	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
40%	-10.0	6.0	0.66	7.2	0.79	8.4	0.92	9.0	0.98	10.2	1.11	11.3	1.24	12.5	1.38
	-5.0	6.0	0.66	7.2	0.79	8.4	0.92	9.0	0.98	10.2	1.11	11.3	1.25	12.5	1.38
	0.0	6.0	0.66	7.2	0.79	8.4	0.92	9.0	0.99	10.2	1.12	11.3	1.25	12.5	1.38
	5.0	6.0	0.66	7.2	0.79	8.4	0.92	9.0	0.99	10.2	1.12	11.3	1.25	12.5	1.38
	10.0	6.0	0.66	7.2	0.79	8.4	0.93	9.0	0.99	10.2	1.12	11.3	1.25	12.5	1.39
	15.0	6.0	0.67	7.2	0.80	8.4	0.93	9.0	1.00	10.2	1.13	11.3	1.26	12.5	1.39
	20.0	6.0	0.67	7.2	0.81	8.4	0.94	9.0	1.01	10.2	1.14	11.3	1.27	12.5	1.40
	25.0	6.0	0.69	7.2	0.83	8.4	0.97	9.0	1.04	10.2	1.19	11.3	1.35	12.5	1.50
	30.0	6.0	1.02	7.2	1.18	8.4	1.33	9.0	1.41	10.2	1.57	11.3	1.74	12.5	1.91
	35.0	6.0	1.22	7.2	1.41	8.4	1.60	9.0	1.70	10.2	1.91	11.3	2.11	12.5	2.33
	40.0	6.0	1.43	7.2	1.66	8.4	1.90	9.0	2.02	10.2	2.26	11.3	2.52	12.5	2.77
43.0	6.0	1.56	7.2	1.82	8.4	2.08	9.0	2.22	10.2	2.49	11.3	2.77	12.5	3.06	
46.0	5.9	1.68	7.1	1.97	8.3	2.26	8.9	2.41	10.1	2.71	11.2	3.01	12.4	3.32	
52.0	4.8	1.68	5.5	1.84	5.6	1.73	5.6	1.68	5.7	1.59	5.8	1.51	5.9	1.44	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
30%	-10.0	4.5	0.49	5.4	0.59	6.3	0.69	6.7	0.74	7.6	0.84	8.5	0.93	9.4	1.03
	-5.0	4.5	0.49	5.4	0.59	6.3	0.69	6.7	0.74	7.6	0.84	8.5	0.94	9.4	1.03
	0.0	4.5	0.49	5.4	0.59	6.3	0.69	6.7	0.74	7.6	0.84	8.5	0.94	9.4	1.04
	5.0	4.5	0.50	5.4	0.59	6.3	0.69	6.7	0.74	7.6	0.84	8.5	0.94	9.4	1.04
	10.0	4.5	0.50	5.4	0.60	6.3	0.70	6.7	0.74	7.6	0.84	8.5	0.94	9.4	1.04
	15.0	4.5	0.50	5.4	0.60	6.3	0.70	6.7	0.75	7.6	0.85	8.5	0.95	9.4	1.05
	20.0	4.5	0.51	5.4	0.61	6.3	0.71	6.7	0.75	7.6	0.86	8.5	0.95	9.4	1.05
	25.0	4.5	0.52	5.4	0.62	6.3	0.72	6.7	0.77	7.6	0.87	8.5	0.98	9.4	1.08
	30.0	4.5	0.83	5.4	0.94	6.3	1.04	6.7	1.10	7.6	1.21	8.5	1.32	9.4	1.43
	35.0	4.5	0.98	5.4	1.11	6.3	1.25	6.7	1.31	7.6	1.45	8.5	1.59	9.4	1.73
	40.0	4.5	1.13	5.4	1.30	6.3	1.46	6.7	1.55	7.6	1.72	8.5	1.89	9.4	2.06
43.0	4.5	1.23	5.4	1.41	6.3	1.60	6.7	1.69	7.6	1.88	8.5	2.07	9.4	2.27	
46.0	4.4	1.32	5.3	1.52	6.2	1.73	6.7	1.83	7.5	2.04	8.4	2.25	9.3	2.46	
52.0	3.6	1.32	4.4	1.52	5.1	1.73	5.4	1.83	5.5	1.74	5.6	1.63	5.6	1.53	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-2. U-8ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
130%	-24.9	-25.0	12.5	5.11	12.2	5.04	11.5	4.89	11.2	4.81	10.2	4.54	9.4	4.33	7.6	3.71
	-19.8	-20.0	14.6	5.28	14.2	5.20	13.5	5.03	13.1	4.94	11.9	4.64	11.1	4.41	8.9	3.76
	-14.7	-15.0	16.9	5.51	16.5	5.42	15.6	5.23	15.2	5.13	13.8	4.80	12.9	4.55	10.4	3.86
	-9.6	-10.0	19.5	5.86	19.1	5.76	18.1	5.54	17.6	5.43	16.1	5.07	15.0	4.80	12.2	4.04
	-4.4	-5.0	22.7	6.30	22.1	6.20	21.0	5.98	20.5	5.86	18.7	5.45	17.5	5.14	14.2	4.27
	-1.8	-2.5	24.4	6.44	23.9	6.34	22.7	6.10	22.1	5.98	20.1	5.57	18.8	5.26	15.3	4.39
	0.8	0.0	26.3	6.55	25.6	6.44	24.4	6.19	23.7	6.06	21.7	5.63	20.2	5.32	16.4	4.43
	2.8	2.0	27.8	6.62	27.2	6.50	25.8	6.25	25.1	6.12	23.0	5.68	21.5	5.36	16.9	4.27
	6.0	5.0	30.4	6.72	29.7	6.61	27.9	6.21	26.9	5.98	23.9	5.30	21.9	4.85	16.9	3.78
	7.0	6.0	30.9	6.59	29.9	6.36	27.9	5.92	26.9	5.70	23.9	5.06	21.9	4.64	16.9	3.63
	8.6	7.5	30.9	6.09	29.9	5.89	27.9	5.48	26.9	5.28	23.9	4.70	21.9	4.32	16.9	3.40
	11.2	10.0	30.9	5.30	29.9	5.13	27.9	4.79	26.9	4.63	23.9	4.14	21.9	3.82	16.9	3.03
16.4	15.0	30.9	3.89	29.9	3.78	27.9	3.57	26.9	3.46	23.9	3.14	21.9	2.93	16.9	2.39	
24.0	18.0	30.9	3.85	29.9	3.74	27.9	3.52	26.9	3.40	23.9	3.07	21.9	2.84	16.9	2.29	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
120%	-24.9	-25.0	12.5	5.05	12.2	4.99	11.5	4.84	11.2	4.76	10.1	4.49	9.4	4.29	7.5	3.67
	-19.8	-20.0	14.6	5.22	14.2	5.14	13.4	4.98	13.0	4.89	11.8	4.59	11.0	4.37	8.8	3.72
	-14.7	-15.0	16.8	5.46	16.4	5.37	15.6	5.18	15.1	5.08	13.8	4.75	12.8	4.51	10.3	3.82
	-9.6	-10.0	19.5	5.81	19.0	5.71	18.1	5.50	17.6	5.39	16.0	5.02	15.0	4.76	12.1	4.00
	-4.4	-5.0	22.7	6.23	22.1	6.13	21.0	5.92	20.4	5.80	18.7	5.40	17.4	5.10	14.1	4.25
	-1.8	-2.5	24.4	6.36	23.8	6.26	22.6	6.03	22.0	5.91	20.1	5.51	18.8	5.21	15.2	4.35
	0.8	0.0	26.2	6.47	25.6	6.36	24.3	6.12	23.7	5.99	21.6	5.57	20.2	5.26	16.4	4.39
	2.8	2.0	27.8	6.53	27.1	6.42	25.8	6.17	25.1	6.04	22.9	5.61	21.4	5.29	16.5	4.12
	6.0	5.0	30.1	6.55	29.2	6.33	27.2	5.90	26.3	5.68	23.3	5.05	21.4	4.64	16.5	3.64
	7.0	6.0	30.1	6.23	29.2	6.02	27.2	5.61	26.3	5.41	23.3	4.82	21.4	4.44	16.5	3.49
	8.6	7.5	30.1	5.75	29.2	5.56	27.2	5.20	26.3	5.02	23.3	4.48	21.4	4.13	16.5	3.27
	11.2	10.0	30.1	5.00	29.2	4.84	27.2	4.54	26.3	4.39	23.3	3.95	21.4	3.65	16.5	2.92
16.4	15.0	30.1	3.77	29.2	3.66	27.2	3.44	26.3	3.33	23.3	3.01	21.4	2.80	16.5	2.30	
24.0	18.0	30.1	3.77	29.2	3.66	27.2	3.44	26.3	3.33	23.3	3.01	21.4	2.79	16.5	2.24	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
110%	-24.9	-25.0	12.4	5.00	12.1	4.93	11.5	4.79	11.1	4.71	10.1	4.44	9.4	4.24	7.5	3.64
	-19.8	-20.0	14.5	5.17	14.1	5.09	13.4	4.92	13.0	4.84	11.8	4.54	11.0	4.32	8.8	3.68
	-14.7	-15.0	16.8	5.41	16.4	5.32	15.5	5.13	15.1	5.03	13.7	4.71	12.8	4.47	10.3	3.79
	-9.6	-10.0	19.5	5.73	19.0	5.66	18.0	5.46	17.5	5.34	16.0	4.98	14.9	4.72	12.1	3.97
	-4.4	-5.0	22.6	6.16	22.1	6.07	21.0	5.86	20.4	5.74	18.6	5.35	17.4	5.06	14.1	4.22
	-1.8	-2.5	24.4	6.29	23.8	6.18	22.6	5.96	22.0	5.84	20.1	5.44	18.7	5.15	15.1	4.30
	0.8	0.0	26.2	6.38	25.6	6.28	24.3	6.04	23.6	5.91	21.6	5.50	20.1	5.19	16.1	4.28
	2.8	2.0	27.8	6.45	27.1	6.33	25.7	6.09	25.0	5.96	22.8	5.51	20.9	5.06	16.1	3.96
	6.0	5.0	29.4	6.19	28.5	5.99	26.6	5.59	25.6	5.40	22.8	4.82	20.9	4.44	16.1	3.51
	7.0	6.0	29.4	5.88	28.5	5.69	26.6	5.32	25.6	5.14	22.8	4.60	20.9	4.24	16.1	3.36
	8.6	7.5	29.4	5.42	28.5	5.26	26.6	4.92	25.6	4.76	22.8	4.27	20.9	3.95	16.1	3.15
	11.2	10.0	29.4	4.71	28.5	4.57	26.6	4.30	25.6	4.17	22.8	3.76	20.9	3.49	16.1	2.81
16.4	15.0	29.4	3.69	28.5	3.58	26.6	3.37	25.6	3.26	22.8	2.94	20.9	2.73	16.1	2.22	
24.0	18.0	29.4	3.69	28.5	3.58	26.6	3.37	25.6	3.26	22.8	2.94	20.9	2.73	16.1	2.20	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
100%	-24.9	-25.0	12.4	4.95	12.1	4.88	11.4	4.74	11.1	4.66	10.0	4.40	9.3	4.20	7.4	3.60
	-19.8	-20.0	14.5	5.12	14.1	5.04	13.3	4.88	12.9	4.79	11.7	4.50	10.9	4.28	8.7	3.65
	-14.7	-15.0	16.8	5.36	16.3	5.27	15.5	5.09	15.0	4.99	13.7	4.67	12.7	4.43	10.2	3.75
	-9.6	-10.0	19.5	5.72	19.0	5.59	18.0	5.41	17.5	5.30	15.9	4.94	14.9	4.68	12.0	3.94
	-4.4	-5.0	22.6	6.09	22.1	6.00	20.9	5.79	20.4	5.68	18.6	5.30	17.3	5.01	14.0	4.19
	-1.8	-2.5	24.4	6.21	23.8	6.11	22.6	5.89	21.9	5.77	20.0	5.38	18.6	5.09	15.1	4.26
	0.8	0.0	26.2	6.30	25.6	6.19	24.3	5.96	23.6	5.84	21.5	5.43	20.1	5.13	15.7	4.12
	2.8	2.0	27.7	6.36	27.1	6.25	25.7	6.02	25.0	5.89	22.2	5.26	20.4	4.84	15.7	3.81
	6.0	5.0	28.7	5.84	27.8	5.66	25.9	5.30	25.0	5.12	22.2	4.59	20.4	4.24	15.7	3.37
	7.0	6.0	28.7	5.54	27.8	5.37	25.9	5.04	25.0	4.87	22.2	4.37	20.4	4.05	15.7	3.23
	8.6	7.5	28.7	5.11	27.8	4.96	25.9	4.66	25.0	4.51	22.2	4.06	20.4	3.77	15.7	3.03
	11.2	10.0	28.7	4.42	27.8	4.30	25.9	4.06	25.0	3.94	22.2	3.58	20.4	3.33	15.7	2.71
16.4	15.0	28.7	3.61	27.8	3.50	25.9	3.30	25.0	3.19	22.2	2.88	20.4	2.67	15.7	2.15	
24.0	18.0	28.7	3.61	27.8	3.50	25.9	3.30	25.0	3.19	22.2	2.88	20.4	2.67	15.7	2.15	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-8ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
90%	-24.9	-25.0	12.3	4.75	11.9	4.68	11.3	4.55	10.9	4.47	9.9	4.22	9.1	4.03	7.3	3.47
	-19.8	-20.0	14.3	4.93	13.9	4.85	13.2	4.69	12.8	4.60	11.6	4.32	10.7	4.12	8.6	3.51
	-14.7	-15.0	16.6	5.18	16.2	5.10	15.3	4.91	14.9	4.82	13.5	4.50	12.5	4.27	10.1	3.62
	-9.6	-10.0	19.4	5.57	18.9	5.48	17.9	5.26	17.4	5.14	15.8	4.79	14.7	4.53	11.8	3.81
	-4.4	-5.0	22.5	5.82	22.0	5.73	20.8	5.54	20.2	5.43	18.4	5.08	17.1	4.82	13.8	4.04
	-1.8	-2.5	24.3	5.92	23.7	5.82	22.4	5.62	21.8	5.51	19.8	5.14	18.3	4.83	14.2	3.86
	0.8	0.0	25.8	5.88	25.0	5.72	23.3	5.39	22.5	5.22	20.0	4.72	18.3	4.38	14.2	3.52
	2.8	2.0	25.8	5.36	25.0	5.21	23.3	4.92	22.5	4.78	20.0	4.33	18.3	4.04	14.2	3.29
	6.0	5.0	25.8	4.65	25.0	4.55	23.3	4.33	22.5	4.22	20.0	3.88	18.3	3.62	14.2	2.94
	7.0	6.0	25.8	4.54	25.0	4.43	23.3	4.19	22.5	4.07	20.0	3.70	18.3	3.45	14.2	2.81
	8.6	7.5	25.8	4.18	25.0	4.07	23.3	3.86	22.5	3.76	20.0	3.43	18.3	3.21	14.2	2.64
	11.2	10.0	25.8	3.60	25.0	3.52	23.3	3.36	22.5	3.28	20.0	3.02	18.3	2.84	14.2	2.36
16.4	15.0	25.8	3.29	25.0	3.19	23.3	3.01	22.5	2.91	20.0	2.63	18.3	2.44	14.2	1.98	
24.0	18.0	25.8	3.29	25.0	3.19	23.3	3.01	22.5	2.91	20.0	2.63	18.3	2.44	14.2	1.98	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
80%	-24.9	-25.0	12.2	4.59	11.8	4.53	11.1	4.39	10.8	4.32	9.7	4.08	9.0	3.90	7.1	3.35
	-19.8	-20.0	14.2	4.77	13.8	4.70	13.1	4.54	12.7	4.46	11.4	4.19	10.6	3.99	8.4	3.40
	-14.7	-15.0	16.6	5.04	16.1	4.96	15.2	4.78	14.8	4.68	13.4	4.37	12.4	4.15	9.9	3.52
	-9.6	-10.0	19.3	5.38	18.8	5.31	17.8	5.13	17.3	5.03	15.7	4.67	14.6	4.41	11.6	3.71
	-4.4	-5.0	22.6	5.59	22.0	5.51	20.7	5.31	20.0	5.17	17.8	4.71	16.3	4.39	12.6	3.57
	-1.8	-2.5	23.0	5.18	22.2	5.06	20.7	4.81	20.0	4.68	17.8	4.28	16.3	4.01	12.6	3.29
	0.8	0.0	23.0	4.61	22.2	4.52	20.7	4.33	20.0	4.23	17.8	3.90	16.3	3.67	12.6	3.04
	2.8	2.0	23.0	4.27	22.2	4.19	20.7	4.02	20.0	3.92	17.8	3.63	16.3	3.42	12.6	2.84
	6.0	5.0	23.0	3.78	22.2	3.72	20.7	3.57	20.0	3.49	17.8	3.24	16.3	3.05	12.6	2.53
	7.0	6.0	23.0	3.67	22.2	3.59	20.7	3.43	20.0	3.35	17.8	3.09	16.3	2.91	12.6	2.43
	8.6	7.5	23.0	3.36	22.2	3.30	20.7	3.16	20.0	3.09	17.8	2.87	16.3	2.71	12.6	2.28
	11.2	10.0	23.0	2.96	22.2	2.88	20.7	2.74	20.0	2.69	17.8	2.52	16.3	2.39	12.6	2.04
16.4	15.0	23.0	2.96	22.2	2.88	20.7	2.72	20.0	2.63	17.8	2.38	16.3	2.22	12.6	1.80	
24.0	18.0	23.0	2.96	22.2	2.88	20.7	2.72	20.0	2.63	17.8	2.38	16.3	2.22	12.6	1.80	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
70%	-24.9	-25.0	12.2	4.50	11.8	4.44	11.1	4.31	10.8	4.23	9.7	4.00	9.0	3.82	7.1	3.29
	-19.8	-20.0	14.3	4.69	13.9	4.62	13.1	4.46	12.7	4.38	11.4	4.11	10.6	3.91	8.4	3.34
	-14.7	-15.0	16.7	4.97	16.2	4.89	15.3	4.71	14.9	4.62	13.4	4.31	12.4	4.09	9.9	3.46
	-9.6	-10.0	19.5	5.27	19.0	5.20	17.9	5.04	17.4	4.95	15.6	4.56	14.3	4.26	11.0	3.45
	-4.4	-5.0	20.1	4.52	19.4	4.43	18.1	4.26	17.5	4.17	15.6	3.87	14.3	3.65	11.0	3.04
	-1.8	-2.5	20.1	4.13	19.4	4.05	18.1	3.90	17.5	3.82	15.6	3.56	14.3	3.36	11.0	2.82
	0.8	0.0	20.1	3.75	19.4	3.69	18.1	3.55	17.5	3.48	15.6	3.25	14.3	3.08	11.0	2.60
	2.8	2.0	20.1	3.45	19.4	3.40	18.1	3.29	17.5	3.23	15.6	3.02	14.3	2.87	11.0	2.43
	6.0	5.0	20.1	3.04	19.4	3.00	18.1	2.90	17.5	2.85	15.6	2.68	14.3	2.55	11.0	2.16
	7.0	6.0	20.1	2.92	19.4	2.87	18.1	2.77	17.5	2.72	15.6	2.56	14.3	2.43	11.0	2.08
	8.6	7.5	20.1	2.66	19.4	2.63	18.1	2.55	17.5	2.51	15.6	2.37	14.3	2.26	11.0	1.95
	11.2	10.0	20.1	2.64	19.4	2.57	18.1	2.42	17.5	2.35	15.6	2.13	14.3	2.00	11.0	1.75
16.4	15.0	20.1	2.64	19.4	2.57	18.1	2.42	17.5	2.35	15.6	2.13	14.3	1.99	11.0	1.62	
24.0	18.0	20.1	2.64	19.4	2.57	18.1	2.42	17.5	2.35	15.6	2.13	14.3	1.99	11.0	1.62	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
60%	-24.9	-25.0	12.5	4.54	12.1	4.47	11.4	4.34	11.0	4.26	9.9	4.02	9.2	3.84	7.2	3.31
	-19.8	-20.0	14.7	4.74	14.3	4.67	13.4	4.51	13.0	4.42	11.7	4.15	10.8	3.94	8.6	3.36
	-14.7	-15.0	17.2	5.07	16.7	4.95	15.6	4.71	15.0	4.59	13.3	4.21	12.2	3.95	9.4	3.26
	-9.6	-10.0	17.2	4.31	16.7	4.24	15.6	4.09	15.0	4.01	13.3	3.74	12.2	3.54	9.4	2.95
	-4.4	-5.0	17.2	3.64	16.7	3.59	15.6	3.48	15.0	3.41	13.3	3.20	12.2	3.04	9.4	2.58
	-1.8	-2.5	17.2	3.32	16.7	3.27	15.6	3.17	15.0	3.12	13.3	2.93	12.2	2.79	9.4	2.38
	0.8	0.0	17.2	3.00	16.7	2.96	15.6	2.88	15.0	2.83	13.3	2.68	12.2	2.56	9.4	2.20
	2.8	2.0	17.2	2.75	16.7	2.72	15.6	2.66	15.0	2.62	13.3	2.48	12.2	2.37	9.4	2.05
	6.0	5.0	17.2	2.40	16.7	2.38	15.6	2.33	15.0	2.30	13.3	2.18	12.2	2.09	9.4	1.81
	7.0	6.0	17.2	2.32	16.7	2.26	15.6	2.20	15.0	2.18	13.3	2.08	12.2	2.00	9.4	1.75
	8.6	7.5	17.2	2.32	16.7	2.26	15.6	2.13	15.0	2.07	13.3	1.93	12.2	1.86	9.4	1.65
	11.2	10.0	17.2	2.32	16.7	2.26	15.6	2.13	15.0	2.07	13.3	1.88	12.2	1.76	9.4	1.48
16.4	15.0	17.2	2.32	16.7	2.26	15.6	2.13	15.0	2.07	13.3	1.88	12.2	1.76	9.4	1.45	
24.0	18.0	17.2	2.32	16.7	2.26	15.6	2.13	15.0	2.07	13.3	1.88	12.2	1.76	9.4	1.45	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-8ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
50%	-24.9	-25.0	13.3	4.77	12.9	4.70	12.1	4.55	11.7	4.48	10.5	4.22	9.7	4.02	7.7	3.46
	-19.8	-20.0	14.4	4.52	13.9	4.43	13.0	4.25	12.5	4.15	11.1	3.85	10.2	3.63	7.9	3.04
	-14.7	-15.0	14.4	4.01	13.9	3.95	13.0	3.81	12.5	3.73	11.1	3.43	10.2	3.25	7.9	2.71
	-9.6	-10.0	14.4	3.44	13.9	3.40	13.0	3.29	12.5	3.24	11.1	3.04	10.2	2.90	7.9	2.47
	-4.4	-5.0	14.4	2.89	13.9	2.86	13.0	2.78	12.5	2.74	11.1	2.60	10.2	2.49	7.9	2.14
	-1.8	-2.5	14.4	2.62	13.9	2.59	13.0	2.54	12.5	2.50	11.1	2.38	10.2	2.28	7.9	1.98
	0.8	0.0	14.4	2.36	13.9	2.34	13.0	2.30	12.5	2.27	11.1	2.17	10.2	2.09	7.9	1.83
	2.8	2.0	14.4	2.16	13.9	2.15	13.0	2.11	12.5	2.09	11.1	2.01	10.2	1.94	7.9	1.70
	6.0	5.0	14.4	2.00	13.9	1.95	13.0	1.84	12.5	1.80	11.1	1.74	10.2	1.69	7.9	1.51
	7.0	6.0	14.4	2.00	13.9	1.95	13.0	1.84	12.5	1.79	11.1	1.66	10.2	1.62	7.9	1.46
	8.6	7.5	14.4	2.00	13.9	1.95	13.0	1.84	12.5	1.79	11.1	1.63	10.2	1.53	7.9	1.37
	11.2	10.0	14.4	2.00	13.9	1.95	13.0	1.84	12.5	1.79	11.1	1.63	10.2	1.53	7.9	1.27
	16.4	15.0	14.4	2.00	13.9	1.95	13.0	1.84	12.5	1.79	11.1	1.63	10.2	1.53	7.9	1.27
24.0	18.0	14.4	2.00	13.9	1.95	13.0	1.84	12.5	1.79	11.1	1.63	10.2	1.53	7.9	1.27	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
40%	-24.9	-25.0	11.5	3.97	11.1	3.90	10.4	3.77	10.0	3.69	8.9	3.46	8.1	3.29	6.3	2.81
	-19.8	-20.0	11.5	3.54	11.1	3.48	10.4	3.34	10.0	3.27	8.9	3.05	8.1	2.89	6.3	2.46
	-14.7	-15.0	11.5	3.12	11.1	3.08	10.4	3.00	10.0	2.95	8.9	2.77	8.1	2.62	6.3	2.21
	-9.6	-10.0	11.5	2.67	11.1	2.64	10.4	2.58	10.0	2.54	8.9	2.41	8.1	2.31	6.3	2.00
	-4.4	-5.0	11.5	2.23	11.1	2.21	10.4	2.17	10.0	2.15	8.9	2.06	8.1	1.98	6.3	1.74
	-1.8	-2.5	11.5	2.02	11.1	2.01	10.4	1.98	10.0	1.96	8.9	1.89	8.1	1.82	6.3	1.62
	0.8	0.0	11.5	1.81	11.1	1.80	10.4	1.78	10.0	1.77	8.9	1.71	8.1	1.66	6.3	1.48
	2.8	2.0	11.5	1.68	11.1	1.63	10.4	1.62	10.0	1.61	8.9	1.57	8.1	1.53	6.3	1.38
	6.0	5.0	11.5	1.68	11.1	1.63	10.4	1.55	10.0	1.51	8.9	1.38	8.1	1.34	6.3	1.23
	7.0	6.0	11.5	1.68	11.1	1.63	10.4	1.55	10.0	1.51	8.9	1.38	8.1	1.30	6.3	1.19
	8.6	7.5	11.5	1.68	11.1	1.63	10.4	1.55	10.0	1.51	8.9	1.38	8.1	1.30	6.3	1.13
	11.2	10.0	11.5	1.68	11.1	1.63	10.4	1.55	10.0	1.51	8.9	1.38	8.1	1.30	6.3	1.09
	16.4	15.0	11.5	1.68	11.1	1.63	10.4	1.55	10.0	1.51	8.9	1.38	8.1	1.30	6.3	1.09
24.0	18.0	11.5	1.68	11.1	1.63	10.4	1.55	10.0	1.51	8.9	1.38	8.1	1.30	6.3	1.09	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
30%	-24.9	-25.0	8.6	2.97	8.3	2.92	7.8	2.82	7.5	2.77	6.7	2.61	6.1	2.49	4.7	2.16
	-19.8	-20.0	8.6	2.68	8.3	2.64	7.8	2.52	7.5	2.48	6.7	2.32	6.1	2.21	4.7	1.90
	-14.7	-15.0	8.6	2.32	8.3	2.30	7.8	2.24	7.5	2.21	6.7	2.11	6.1	2.02	4.7	1.72
	-9.6	-10.0	8.6	1.98	8.3	1.97	7.8	1.93	7.5	1.91	6.7	1.83	6.1	1.77	4.7	1.56
	-4.4	-5.0	8.6	1.65	8.3	1.64	7.8	1.62	7.5	1.61	6.7	1.56	6.1	1.51	4.7	1.36
	-1.8	-2.5	8.6	1.47	8.3	1.47	7.8	1.46	7.5	1.46	6.7	1.42	6.1	1.39	4.7	1.26
	0.8	0.0	8.6	1.35	8.3	1.32	7.8	1.31	7.5	1.31	6.7	1.29	6.1	1.26	4.7	1.16
	2.8	2.0	8.6	1.35	8.3	1.32	7.8	1.26	7.5	1.23	6.7	1.19	6.1	1.17	4.7	1.09
	6.0	5.0	8.6	1.35	8.3	1.32	7.8	1.26	7.5	1.23	6.7	1.14	6.1	1.07	4.7	0.98
	7.0	6.0	8.6	1.35	8.3	1.32	7.8	1.26	7.5	1.23	6.7	1.14	6.1	1.07	4.7	0.95
	8.6	7.5	8.6	1.35	8.3	1.32	7.8	1.26	7.5	1.23	6.7	1.14	6.1	1.07	4.7	0.92
	11.2	10.0	8.6	1.35	8.3	1.32	7.8	1.26	7.5	1.23	6.7	1.14	6.1	1.07	4.7	0.92
	16.4	15.0	8.6	1.35	8.3	1.32	7.8	1.26	7.5	1.23	6.7	1.14	6.1	1.07	4.7	0.92
24.0	18.0	8.6	1.35	8.3	1.32	7.8	1.26	7.5	1.23	6.7	1.14	6.1	1.07	4.7	0.92	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-3. U-10ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
130%	-10.0	24.3	2.88	29.1	3.45	30.1	3.58	30.1	3.58	34.1	4.05	38.1	4.53	42.1	5.00
	-5.0	24.3	2.88	29.1	3.46	30.1	3.58	30.1	3.58	34.1	4.06	38.1	4.53	42.1	5.01
	0.0	24.3	2.88	29.1	3.46	30.1	3.58	30.1	3.58	34.1	4.06	38.1	4.54	42.1	5.01
	5.0	24.3	2.89	29.1	3.47	30.1	3.59	30.1	3.59	34.1	4.07	38.1	4.55	42.1	5.02
	10.0	24.3	2.90	29.1	3.47	30.1	3.60	30.1	3.60	34.1	4.09	38.1	4.58	42.1	5.06
	15.0	24.3	2.90	29.1	3.49	30.1	3.65	30.1	3.65	34.1	4.16	38.1	4.67	42.1	5.16
	20.0	24.3	2.97	29.1	3.60	30.1	3.83	30.1	3.83	34.1	4.39	38.1	5.14	42.1	5.98
	25.0	24.3	3.36	29.1	4.20	30.1	4.71	30.1	4.71	34.1	5.58	38.1	6.53	42.1	7.55
	30.0	24.3	4.23	29.1	5.26	30.1	5.85	30.1	5.85	34.1	6.89	38.1	8.02	41.7	8.97
	35.0	24.3	5.16	29.1	6.41	30.1	7.06	30.1	7.06	34.1	8.30	36.9	8.97	38.5	8.97
	40.0	24.3	6.17	29.1	7.64	30.1	8.38	30.1	8.38	32.6	8.97	34.0	8.97	35.5	8.97
43.0	24.3	6.81	29.1	8.42	29.6	8.97	29.6	8.97	31.0	8.97	32.3	8.80	33.1	8.41	
46.0	24.0	6.84	24.2	6.84	24.2	6.84	24.2	6.84	25.0	6.58	26.0	6.39	27.2	6.24	
52.0	10.1	2.66	10.7	2.66	10.7	2.66	10.7	2.66	11.9	2.76	13.2	2.86	14.6	2.97	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
120%	-10.0	22.4	2.66	26.9	3.19	29.4	3.49	29.4	3.49	33.3	3.96	37.2	4.42	41.2	4.89
	-5.0	22.4	2.66	26.9	3.19	29.4	3.50	29.4	3.50	33.3	3.96	37.2	4.43	41.2	4.89
	0.0	22.4	2.66	26.9	3.20	29.4	3.50	29.4	3.50	33.3	3.97	37.2	4.43	41.2	4.90
	5.0	22.4	2.67	26.9	3.20	29.4	3.51	29.4	3.51	33.3	3.97	37.2	4.44	41.2	4.91
	10.0	22.4	2.68	26.9	3.21	29.4	3.52	29.4	3.52	33.3	3.99	37.2	4.47	41.2	4.94
	15.0	22.4	2.68	26.9	3.23	29.4	3.56	29.4	3.56	33.3	4.06	37.2	4.56	41.2	5.04
	20.0	22.4	2.74	26.9	3.33	29.4	3.73	29.4	3.73	33.3	4.28	37.2	4.95	41.2	5.75
	25.0	22.4	3.11	26.9	3.87	29.4	4.56	29.4	4.56	33.3	5.39	37.2	6.30	41.2	7.27
	30.0	22.4	3.91	26.9	4.85	29.4	5.66	29.4	5.66	33.3	6.67	37.2	7.75	41.2	8.90
	35.0	22.4	4.76	26.9	5.90	29.4	6.84	29.4	6.84	33.3	8.04	36.6	8.97	38.1	8.97
	40.0	22.4	5.69	26.9	7.03	29.4	8.12	29.4	8.12	32.3	8.97	33.7	8.97	35.2	8.97
43.0	22.4	6.28	26.9	7.75	29.4	8.94	29.4	8.94	30.8	8.97	32.1	8.86	32.9	8.44	
46.0	22.2	6.83	24.0	6.86	24.0	6.86	24.0	6.86	24.8	6.59	25.7	6.37	26.8	6.21	
52.0	9.4	2.62	10.3	2.62	10.5	2.62	10.5	2.62	11.6	2.70	12.9	2.80	14.2	2.89	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
110%	-10.0	20.5	2.44	24.6	2.93	28.7	3.41	28.7	3.41	32.5	3.86	36.4	4.32	40.2	4.77
	-5.0	20.5	2.44	24.6	2.93	28.7	3.41	28.7	3.41	32.5	3.87	36.4	4.32	40.2	4.78
	0.0	20.5	2.44	24.6	2.93	28.7	3.42	28.7	3.42	32.5	3.87	36.4	4.33	40.2	4.78
	5.0	20.5	2.45	24.6	2.94	28.7	3.42	28.7	3.42	32.5	3.88	36.4	4.33	40.2	4.79
	10.0	20.5	2.45	24.6	2.94	28.7	3.43	28.7	3.43	32.5	3.89	36.4	4.36	40.2	4.82
	15.0	20.5	2.46	24.6	2.96	28.7	3.47	28.7	3.47	32.5	3.96	36.4	4.45	40.2	4.92
	20.0	20.5	2.51	24.6	3.05	28.7	3.63	28.7	3.63	32.5	4.16	36.4	4.76	40.2	5.53
	25.0	20.5	2.86	24.6	3.54	28.7	4.41	28.7	4.41	32.5	5.21	36.4	6.07	40.2	7.00
	30.0	20.5	3.59	24.6	4.44	28.7	5.48	28.7	5.48	32.5	6.44	36.4	7.48	40.2	8.58
	35.0	20.5	4.37	24.6	5.40	28.7	6.62	28.7	6.62	32.5	7.77	36.3	8.95	37.8	8.97
	40.0	20.5	5.22	24.6	6.43	28.7	7.87	28.7	7.87	32.1	8.97	33.5	8.97	34.9	8.97
43.0	20.5	5.75	24.6	7.09	28.7	8.67	28.7	8.67	30.5	8.97	31.9	8.93	32.6	8.48	
46.0	20.3	6.26	23.9	6.89	23.9	6.89	23.9	6.89	24.6	6.60	25.5	6.36	26.5	6.18	
52.0	8.7	2.58	9.6	2.58	10.3	2.58	10.3	2.58	11.4	2.65	12.6	2.74	13.9	2.82	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	-10.0	18.7	2.22	22.4	2.66	26.1	3.10	28.0	3.33	31.7	3.77	35.5	4.21	39.2	4.66
	-5.0	18.7	2.22	22.4	2.66	26.1	3.11	28.0	3.33	31.7	3.77	35.5	4.22	39.2	4.66
	0.0	18.7	2.22	22.4	2.67	26.1	3.11	28.0	3.33	31.7	3.78	35.5	4.22	39.2	4.67
	5.0	18.7	2.23	22.4	2.67	26.1	3.12	28.0	3.34	31.7	3.78	35.5	4.23	39.2	4.67
	10.0	18.7	2.23	22.4	2.68	26.1	3.12	28.0	3.35	31.7	3.80	35.5	4.25	39.2	4.70
	15.0	18.7	2.24	22.4	2.69	26.1	3.15	28.0	3.38	31.7	3.86	35.5	4.33	39.2	4.80
	20.0	18.7	2.29	22.4	2.78	26.1	3.28	28.0	3.53	31.7	4.05	35.5	4.58	39.2	5.31
	25.0	18.7	2.61	22.4	3.22	26.1	3.90	28.0	4.26	31.7	5.02	35.5	5.85	39.2	6.74
	30.0	18.7	3.27	22.4	4.03	26.1	4.86	28.0	5.30	31.7	6.22	35.5	7.21	39.2	8.27
	35.0	18.7	3.98	22.4	4.90	26.1	5.89	28.0	6.41	31.7	7.51	35.5	8.68	37.5	8.97
	40.0	18.7	4.75	22.4	5.84	26.1	7.01	28.0	7.62	31.7	8.91	33.2	8.97	34.6	8.97
43.0	18.7	5.23	22.4	6.43	26.1	7.72	28.0	8.39	30.3	8.97	31.7	8.97	32.4	8.53	
46.0	18.5	5.69	22.2	7.00	23.6	7.12	23.8	6.93	24.4	6.61	25.3	6.36	26.2	6.16	
52.0	8.1	2.44	8.8	2.46	9.6	2.51	10.1	2.54	11.1	2.60	12.2	2.68	13.5	2.76	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-10ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
90%	-10.0	16.8	2.00	20.2	2.40	23.5	2.79	25.2	2.99	28.6	3.39	31.9	3.79	35.3	4.19
	-5.0	16.8	2.00	20.2	2.40	23.5	2.80	25.2	3.00	28.6	3.40	31.9	3.80	35.3	4.20
	0.0	16.8	2.00	20.2	2.40	23.5	2.80	25.2	3.00	28.6	3.40	31.9	3.80	35.3	4.20
	5.0	16.8	2.01	20.2	2.41	23.5	2.81	25.2	3.01	28.6	3.41	31.9	3.81	35.3	4.21
	10.0	16.8	2.01	20.2	2.41	23.5	2.81	25.2	3.01	28.6	3.41	31.9	3.82	35.3	4.23
	15.0	16.8	2.02	20.2	2.42	23.5	2.83	25.2	3.03	28.6	3.45	31.9	3.88	35.3	4.30
	20.0	16.8	2.05	20.2	2.48	23.5	2.92	25.2	3.14	28.6	3.60	31.9	4.06	35.3	4.52
	25.0	16.8	2.31	20.2	2.83	23.5	3.39	25.2	3.69	28.6	4.32	31.9	5.01	35.3	5.74
	30.0	16.8	2.90	20.2	3.55	23.5	4.24	25.2	4.61	28.6	5.38	31.9	6.21	35.3	7.08
	35.0	16.8	3.53	20.2	4.32	23.5	5.16	25.2	5.59	28.6	6.52	31.9	7.50	35.3	8.53
	40.0	16.8	4.21	20.2	5.14	23.5	6.14	25.2	6.66	28.6	7.74	31.9	8.89	33.4	8.97
43.0	16.8	4.64	20.2	5.67	23.5	6.77	25.2	7.34	28.6	8.53	30.5	8.97	31.7	8.86	
46.0	16.6	5.05	20.0	6.17	23.3	7.36	23.4	7.14	23.9	6.74	24.4	6.41	25.1	6.14	
52.0	7.7	2.38	8.3	2.37	8.9	2.38	9.3	2.39	10.1	2.42	11.1	2.46	12.1	2.50	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
80%	-10.0	14.9	1.78	17.9	2.13	20.9	2.48	22.4	2.66	25.4	3.02	28.4	3.37	31.4	3.73
	-5.0	14.9	1.78	17.9	2.13	20.9	2.49	22.4	2.66	25.4	3.02	28.4	3.38	31.4	3.73
	0.0	14.9	1.78	17.9	2.13	20.9	2.49	22.4	2.67	25.4	3.02	28.4	3.38	31.4	3.74
	5.0	14.9	1.78	17.9	2.14	20.9	2.50	22.4	2.67	25.4	3.03	28.4	3.39	31.4	3.74
	10.0	14.9	1.79	17.9	2.15	20.9	2.50	22.4	2.68	25.4	3.04	28.4	3.39	31.4	3.75
	15.0	14.9	1.80	17.9	2.15	20.9	2.51	22.4	2.69	25.4	3.06	28.4	3.43	31.4	3.80
	20.0	14.9	1.81	17.9	2.19	20.9	2.57	22.4	2.76	25.4	3.16	28.4	3.56	31.4	3.97
	25.0	14.9	2.00	17.9	2.46	20.9	2.92	22.4	3.17	25.4	3.68	28.4	4.23	31.4	4.82
	30.0	14.9	2.54	17.9	3.08	20.9	3.66	22.4	3.97	25.4	4.60	28.4	5.28	31.4	5.99
	35.0	14.9	3.10	17.9	3.76	20.9	4.46	22.4	4.82	25.4	5.59	28.4	6.39	31.4	7.24
	40.0	14.9	3.69	17.9	4.49	20.9	5.32	22.4	5.75	25.4	6.66	28.4	7.60	31.4	8.60
43.0	14.9	4.07	17.9	4.95	20.9	5.87	22.4	6.34	25.4	7.34	28.4	8.38	30.5	8.97	
46.0	14.8	4.43	17.7	5.38	20.7	6.38	22.2	6.90	23.5	7.02	23.8	6.60	24.3	6.25	
52.0	7.4	2.34	7.8	2.29	8.4	2.27	8.6	2.27	9.3	2.26	10.0	2.27	10.8	2.29	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
70%	-10.0	13.1	1.55	15.7	1.86	18.3	2.17	19.6	2.33	22.2	2.64	24.8	2.95	27.4	3.26
	-5.0	13.1	1.56	15.7	1.87	18.3	2.18	19.6	2.33	22.2	2.64	24.8	2.95	27.4	3.26
	0.0	13.1	1.56	15.7	1.87	18.3	2.18	19.6	2.34	22.2	2.65	24.8	2.96	27.4	3.27
	5.0	13.1	1.56	15.7	1.87	18.3	2.18	19.6	2.34	22.2	2.65	24.8	2.96	27.4	3.27
	10.0	13.1	1.57	15.7	1.88	18.3	2.19	19.6	2.35	22.2	2.66	24.8	2.97	27.4	3.28
	15.0	13.1	1.57	15.7	1.89	18.3	2.20	19.6	2.35	22.2	2.67	24.8	2.99	27.4	3.31
	20.0	13.1	1.58	15.7	1.90	18.3	2.23	19.6	2.40	22.2	2.73	24.8	3.08	27.4	3.42
	25.0	13.1	1.71	15.7	2.10	18.3	2.49	19.6	2.68	22.2	3.09	24.8	3.53	27.4	3.99
	30.0	13.1	2.21	15.7	2.65	18.3	3.12	19.6	3.37	22.2	3.88	24.8	4.42	27.4	4.99
	35.0	13.1	2.69	15.7	3.23	18.3	3.81	19.6	4.10	22.2	4.73	24.8	5.38	27.4	6.06
	40.0	13.1	3.20	15.7	3.86	18.3	4.55	19.6	4.90	22.2	5.64	24.8	6.41	27.4	7.21
43.0	13.1	3.53	15.7	4.26	18.3	5.02	19.6	5.41	22.2	6.22	24.8	7.07	27.4	7.95	
46.0	12.9	3.84	15.5	4.63	18.1	5.46	19.4	5.89	22.0	6.77	23.4	7.00	23.7	6.55	
52.0	7.2	2.33	7.5	2.25	7.9	2.20	8.1	2.18	8.5	2.14	9.1	2.12	9.7	2.11	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
60%	-10.0	11.2	1.33	13.4	1.60	15.7	1.86	16.8	2.00	19.0	2.26	21.3	2.53	23.5	2.80
	-5.0	11.2	1.33	13.4	1.60	15.7	1.87	16.8	2.00	19.0	2.27	21.3	2.53	23.5	2.80
	0.0	11.2	1.34	13.4	1.60	15.7	1.87	16.8	2.00	19.0	2.27	21.3	2.54	23.5	2.80
	5.0	11.2	1.34	13.4	1.61	15.7	1.87	16.8	2.01	19.0	2.27	21.3	2.54	23.5	2.81
	10.0	11.2	1.34	13.4	1.61	15.7	1.88	16.8	2.01	19.0	2.28	21.3	2.55	23.5	2.81
	15.0	11.2	1.35	13.4	1.62	15.7	1.89	16.8	2.02	19.0	2.29	21.3	2.55	23.5	2.83
	20.0	11.2	1.36	13.4	1.63	15.7	1.90	16.8	2.04	19.0	2.32	21.3	2.61	23.5	2.90
	25.0	11.2	1.43	13.4	1.75	15.7	2.07	16.8	2.23	19.0	2.57	21.3	2.89	23.5	3.25
	30.0	11.2	1.89	13.4	2.25	15.7	2.62	16.8	2.82	19.0	3.22	21.3	3.64	23.5	4.08
	35.0	11.2	2.30	13.4	2.74	15.7	3.20	16.8	3.43	19.0	3.93	21.3	4.44	23.5	4.97
	40.0	11.2	2.73	13.4	3.27	15.7	3.82	16.8	4.11	19.0	4.69	21.3	5.30	23.5	5.93
43.0	11.2	3.01	13.4	3.60	15.7	4.22	16.8	4.53	19.0	5.18	21.3	5.85	23.5	6.55	
46.0	11.1	3.27	13.3	3.92	15.5	4.59	16.6	4.93	18.8	5.64	21.1	6.37	23.3	7.13	
52.0	7.0	2.35	7.2	2.25	7.5	2.16	7.6	2.12	7.9	2.06	8.3	2.01	8.7	1.97	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-10ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
50%	-10.0	9.3	1.11	11.2	1.33	13.1	1.55	14.0	1.67	15.9	1.89	17.7	2.11	19.6	2.33
	-5.0	9.3	1.11	11.2	1.33	13.1	1.56	14.0	1.67	15.9	1.89	17.7	2.11	19.6	2.33
	0.0	9.3	1.11	11.2	1.34	13.1	1.56	14.0	1.67	15.9	1.89	17.7	2.11	19.6	2.34
	5.0	9.3	1.12	11.2	1.34	13.1	1.56	14.0	1.67	15.9	1.90	17.7	2.12	19.6	2.34
	10.0	9.3	1.12	11.2	1.34	13.1	1.57	14.0	1.68	15.9	1.90	17.7	2.12	19.6	2.35
	15.0	9.3	1.12	11.2	1.35	13.1	1.57	14.0	1.68	15.9	1.91	17.7	2.13	19.6	2.35
	20.0	9.3	1.13	11.2	1.36	13.1	1.58	14.0	1.69	15.9	1.92	17.7	2.15	19.6	2.39
	25.0	9.3	1.17	11.2	1.42	13.1	1.67	14.0	1.80	15.9	2.07	17.7	2.34	19.6	2.60
	30.0	9.3	1.60	11.2	1.87	13.1	2.16	14.0	2.31	15.9	2.61	17.7	2.93	19.6	3.26
	35.0	9.3	1.93	11.2	2.28	13.1	2.63	14.0	2.81	15.9	3.19	17.7	3.58	19.6	3.98
	40.0	9.3	2.29	11.2	2.71	13.1	3.14	14.0	3.36	15.9	3.82	17.7	4.28	19.6	4.76
43.0	9.3	2.52	11.2	2.98	13.1	3.47	14.0	3.71	15.9	4.21	17.7	4.73	19.6	5.26	
46.0	9.2	2.73	11.1	3.24	12.9	3.77	13.9	4.04	15.7	4.58	17.6	5.15	19.4	5.72	
52.0	6.9	2.43	7.0	2.29	7.1	2.18	7.2	2.12	7.4	2.03	7.7	1.96	8.0	1.89	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
40%	-10.0	7.5	0.89	9.0	1.07	10.5	1.24	11.2	1.33	12.7	1.51	14.2	1.69	15.7	1.87
	-5.0	7.5	0.89	9.0	1.07	10.5	1.25	11.2	1.33	12.7	1.51	14.2	1.69	15.7	1.87
	0.0	7.5	0.89	9.0	1.07	10.5	1.25	11.2	1.34	12.7	1.51	14.2	1.69	15.7	1.87
	5.0	7.5	0.89	9.0	1.07	10.5	1.25	11.2	1.34	12.7	1.52	14.2	1.70	15.7	1.87
	10.0	7.5	0.90	9.0	1.07	10.5	1.25	11.2	1.34	12.7	1.52	14.2	1.70	15.7	1.88
	15.0	7.5	0.90	9.0	1.08	10.5	1.26	11.2	1.35	12.7	1.53	14.2	1.71	15.7	1.89
	20.0	7.5	0.91	9.0	1.09	10.5	1.27	11.2	1.36	12.7	1.54	14.2	1.72	15.7	1.90
	25.0	7.5	0.92	9.0	1.11	10.5	1.30	11.2	1.40	12.7	1.60	14.2	1.81	15.7	2.01
	30.0	7.5	1.32	9.0	1.52	10.5	1.73	11.2	1.84	12.7	2.06	14.2	2.29	15.7	2.52
	35.0	7.5	1.58	9.0	1.84	10.5	2.11	11.2	2.24	12.7	2.52	14.2	2.80	15.7	3.09
	40.0	7.5	1.86	9.0	2.18	10.5	2.51	11.2	2.67	12.7	3.00	14.2	3.35	15.7	3.69
43.0	7.5	2.04	9.0	2.40	10.5	2.76	11.2	2.94	12.7	3.31	14.2	3.69	15.7	4.08	
46.0	7.4	2.21	8.9	2.60	10.3	3.00	11.1	3.20	12.6	3.61	14.0	4.02	15.5	4.44	
52.0	6.0	2.21	6.9	2.42	6.9	2.27	7.0	2.21	7.1	2.08	7.2	1.98	7.4	1.88	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
30%	-10.0	5.6	0.67	6.7	0.80	7.8	0.93	8.4	1.00	9.5	1.13	10.6	1.27	11.8	1.40
	-5.0	5.6	0.67	6.7	0.80	7.8	0.94	8.4	1.00	9.5	1.14	10.6	1.27	11.8	1.40
	0.0	5.6	0.67	6.7	0.80	7.8	0.94	8.4	1.00	9.5	1.14	10.6	1.27	11.8	1.40
	5.0	5.6	0.67	6.7	0.80	7.8	0.94	8.4	1.00	9.5	1.14	10.6	1.27	11.8	1.41
	10.0	5.6	0.67	6.7	0.81	7.8	0.94	8.4	1.01	9.5	1.14	10.6	1.28	11.8	1.41
	15.0	5.6	0.68	6.7	0.81	7.8	0.95	8.4	1.01	9.5	1.15	10.6	1.28	11.8	1.42
	20.0	5.6	0.68	6.7	0.82	7.8	0.95	8.4	1.02	9.5	1.16	10.6	1.29	11.8	1.43
	25.0	5.6	0.70	6.7	0.83	7.8	0.97	8.4	1.04	9.5	1.17	10.6	1.32	11.8	1.46
	30.0	5.6	1.06	6.7	1.20	7.8	1.35	8.4	1.42	9.5	1.57	10.6	1.72	11.8	1.87
	35.0	5.6	1.25	6.7	1.44	7.8	1.62	8.4	1.71	9.5	1.90	10.6	2.09	11.8	2.28
	40.0	5.6	1.46	6.7	1.69	7.8	1.91	8.4	2.03	9.5	2.26	10.6	2.49	11.8	2.72
43.0	5.6	1.60	6.7	1.85	7.8	2.10	8.4	2.23	9.5	2.48	10.6	2.74	11.8	3.01	
46.0	5.5	1.72	6.7	2.00	7.8	2.28	8.3	2.42	9.4	2.70	10.5	2.98	11.6	3.27	
52.0	4.5	1.72	5.4	1.99	6.4	2.27	6.8	2.41	6.9	2.29	6.9	2.14	7.0	2.01	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-4. U-10ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
130%	-24.9	-25.0	15.9	6.92	15.5	6.82	14.6	6.62	14.2	6.51	12.9	6.13	12.0	5.84	9.7	4.99
	-19.8	-20.0	18.5	7.13	18.0	7.03	17.1	6.79	16.6	6.67	15.1	6.26	14.1	5.95	11.3	5.05
	-14.7	-15.0	21.3	7.43	20.8	7.31	19.7	7.05	19.2	6.91	17.5	6.46	16.3	6.13	13.2	5.17
	-9.6	-10.0	24.6	7.86	24.0	7.73	22.8	7.44	22.2	7.29	20.3	6.80	19.0	6.44	15.5	5.41
	-4.4	-5.0	28.5	8.50	27.8	8.35	26.5	8.02	25.8	7.84	23.6	7.24	22.1	6.87	18.0	5.73
	-1.8	-2.5	30.7	8.75	30.0	8.60	28.5	8.29	27.8	8.11	25.5	7.54	23.8	7.12	19.4	5.92
	0.8	0.0	33.0	8.93	32.2	8.78	30.7	8.44	29.9	8.26	27.4	7.66	25.6	7.23	20.9	5.99
	2.8	2.0	34.9	9.04	34.1	8.88	32.5	8.53	31.6	8.34	29.0	7.73	27.2	7.28	21.3	5.71
	6.0	5.0	38.1	9.18	37.2	9.02	35.1	8.51	33.9	8.17	30.1	7.19	27.6	6.56	21.3	5.05
	7.0	6.0	38.9	9.09	37.6	8.76	35.1	8.11	33.9	7.79	30.1	6.86	27.6	6.26	21.3	4.83
	8.6	7.5	38.9	8.40	37.6	8.10	35.1	7.51	33.9	7.22	30.1	6.37	27.6	5.83	21.3	4.52
	11.2	10.0	38.9	7.31	37.6	7.05	35.1	6.56	33.9	6.31	30.1	5.60	27.6	5.14	21.3	4.03
16.4	15.0	38.9	5.35	37.6	5.19	35.1	4.87	33.9	4.71	30.1	4.24	27.6	3.93	21.3	3.16	
24.0	18.0	38.9	5.02	37.6	4.87	35.1	4.57	33.9	4.43	30.1	3.98	27.6	3.69	21.3	2.95	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
120%	-24.9	-25.0	15.8	6.84	15.4	6.75	14.6	6.54	14.2	6.43	12.9	6.06	12.0	5.78	9.6	4.94
	-19.8	-20.0	18.4	7.05	18.0	6.95	17.0	6.72	16.5	6.59	15.0	6.19	14.0	5.88	11.3	5.00
	-14.7	-15.0	21.3	7.35	20.7	7.23	19.7	6.98	19.1	6.84	17.4	6.39	16.3	6.07	13.2	5.12
	-9.6	-10.0	24.6	7.79	24.0	7.66	22.8	7.38	22.2	7.23	20.3	6.74	18.9	6.38	15.4	5.36
	-4.4	-5.0	28.5	8.43	27.8	8.28	26.5	7.96	25.8	7.79	23.6	7.22	22.1	6.79	18.0	5.68
	-1.8	-2.5	30.7	8.65	30.0	8.51	28.5	8.19	27.8	8.02	25.4	7.46	23.8	7.05	19.3	5.86
	0.8	0.0	33.0	8.82	32.2	8.66	30.7	8.33	29.8	8.15	27.3	7.57	25.5	7.14	20.8	5.93
	2.8	2.0	34.9	8.92	34.1	8.76	32.5	8.41	31.6	8.23	28.9	7.63	27.0	7.14	20.8	5.49
	6.0	5.0	38.0	9.02	36.8	8.70	34.3	8.06	33.1	7.75	29.4	6.85	27.0	6.26	20.8	4.85
	7.0	6.0	38.0	8.57	36.8	8.27	34.3	7.67	33.1	7.38	29.4	6.53	27.0	5.98	20.8	4.65
	8.6	7.5	38.0	7.92	36.8	7.64	34.3	7.10	33.1	6.84	29.4	6.06	27.0	5.56	20.8	4.35
	11.2	10.0	38.0	6.87	36.8	6.65	34.3	6.20	33.1	5.98	29.4	5.33	27.0	4.91	20.8	3.88
16.4	15.0	38.0	5.02	36.8	4.87	34.3	4.59	33.1	4.45	29.4	4.02	27.0	3.74	20.8	3.04	
24.0	18.0	38.0	4.91	36.8	4.77	34.3	4.48	33.1	4.33	29.4	3.90	27.0	3.61	20.8	2.89	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
110%	-24.9	-25.0	15.8	6.76	15.4	6.67	14.5	6.47	14.1	6.36	12.8	5.99	11.9	5.71	9.6	4.88
	-19.8	-20.0	18.4	6.98	17.9	6.87	17.0	6.64	16.5	6.52	15.0	6.12	13.9	5.82	11.2	4.94
	-14.7	-15.0	21.2	7.28	20.7	7.16	19.6	6.91	19.1	6.77	17.4	6.33	16.2	6.00	13.1	5.07
	-9.6	-10.0	24.5	7.73	23.9	7.59	22.7	7.31	22.1	7.16	20.2	6.68	18.9	6.32	15.3	5.31
	-4.4	-5.0	28.5	8.34	27.8	8.20	26.4	7.90	25.7	7.73	23.5	7.17	22.0	6.76	17.9	5.63
	-1.8	-2.5	30.7	8.54	29.9	8.40	28.5	8.10	27.7	7.93	25.4	7.38	23.7	6.97	19.3	5.80
	0.8	0.0	33.0	8.70	32.2	8.55	30.6	8.22	29.8	8.05	27.3	7.47	25.5	7.05	20.3	5.70
	2.8	2.0	34.9	8.80	34.1	8.64	32.4	8.30	31.6	8.12	28.7	7.46	26.3	6.82	20.3	5.28
	6.0	5.0	37.1	8.50	35.9	8.21	33.5	7.63	32.3	7.35	28.7	6.52	26.3	5.98	20.3	4.67
	7.0	6.0	37.1	8.08	35.9	7.80	33.5	7.26	32.3	6.99	28.7	6.21	26.3	5.71	20.3	4.47
	8.6	7.5	37.1	7.45	35.9	7.20	33.5	6.72	32.3	6.48	28.7	5.77	26.3	5.31	20.3	4.18
	11.2	10.0	37.1	6.46	35.9	6.26	33.5	5.86	32.3	5.66	28.7	5.07	26.3	4.68	20.3	3.73
16.4	15.0	37.1	4.80	35.9	4.66	33.5	4.38	32.3	4.24	28.7	3.82	26.3	3.57	20.3	2.92	
24.0	18.0	37.1	4.80	35.9	4.66	33.5	4.38	32.3	4.24	28.7	3.82	26.3	3.54	20.3	2.83	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
100%	-24.9	-25.0	15.7	6.68	15.3	6.59	14.5	6.39	14.1	6.29	12.8	5.92	11.9	5.65	9.5	4.83
	-19.8	-20.0	18.3	6.90	17.9	6.79	16.9	6.57	16.4	6.45	14.9	6.05	13.9	5.75	11.2	4.89
	-14.7	-15.0	21.2	7.21	20.7	7.09	19.6	6.84	19.0	6.70	17.3	6.26	16.2	5.94	13.0	5.02
	-9.6	-10.0	24.5	7.66	23.9	7.53	22.7	7.24	22.1	7.10	20.2	6.61	18.8	6.26	15.3	5.26
	-4.4	-5.0	28.4	8.25	27.8	8.12	26.4	7.82	25.7	7.66	23.5	7.12	21.9	6.71	17.8	5.56
	-1.8	-2.5	30.6	8.44	29.9	8.30	28.4	8.00	27.7	7.83	25.3	7.29	23.6	6.88	19.2	5.73
	0.8	0.0	33.0	8.59	32.2	8.44	30.6	8.11	29.7	7.94	27.2	7.38	25.4	6.96	19.8	5.48
	2.8	2.0	34.9	8.68	34.1	8.52	32.4	8.19	31.5	8.01	28.0	7.10	25.7	6.51	19.8	5.07
	6.0	5.0	36.2	8.01	35.0	7.74	32.7	7.22	31.5	6.96	28.0	6.20	25.7	5.70	19.8	4.47
	7.0	6.0	36.2	7.60	35.0	7.35	32.7	6.87	31.5	6.62	28.0	5.90	25.7	5.43	19.8	4.29
	8.6	7.5	36.2	7.00	35.0	6.78	32.7	6.34	31.5	6.12	28.0	5.48	25.7	5.05	19.8	4.01
	11.2	10.0	36.2	6.06	35.0	5.88	32.7	5.52	31.5	5.34	28.0	4.81	25.7	4.46	19.8	3.58
16.4	15.0	36.2	4.70	35.0	4.56	32.7	4.29	31.5	4.15	28.0	3.74	25.7	3.46	19.8	2.79	
24.0	18.0	36.2	4.70	35.0	4.56	32.7	4.29	31.5	4.15	28.0	3.74	25.7	3.46	19.8	2.77	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-10ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
90%	-24.9	-25.0	15.5	6.37	15.1	6.29	14.3	6.10	13.8	6.00	12.5	5.66	11.6	5.40	9.3	4.62
	-19.8	-20.0	18.1	6.60	17.6	6.50	16.7	6.28	16.2	6.17	14.7	5.79	13.6	5.51	10.9	4.68
	-14.7	-15.0	21.0	6.92	20.5	6.81	19.4	6.57	18.8	6.43	17.1	6.01	15.9	5.71	12.8	4.82
	-9.6	-10.0	24.4	7.42	23.8	7.27	22.5	6.99	21.9	6.85	19.9	6.38	18.6	6.04	15.0	5.07
	-4.4	-5.0	28.3	7.86	27.7	7.74	26.2	7.47	25.5	7.32	23.2	6.83	21.7	6.47	17.5	5.40
	-1.8	-2.5	30.5	8.00	29.8	7.87	28.3	7.59	27.5	7.44	25.0	6.93	23.1	6.46	17.9	5.11
	0.8	0.0	32.6	8.00	31.5	7.76	29.4	7.28	28.4	7.05	25.2	6.33	23.1	5.86	17.9	4.66
	2.8	2.0	32.6	7.29	31.5	7.08	29.4	6.66	28.4	6.45	25.2	5.80	23.1	5.41	17.9	4.37
	6.0	5.0	32.6	6.32	31.5	6.17	29.4	5.87	28.4	5.71	25.2	5.21	23.1	4.84	17.9	3.88
	7.0	6.0	32.6	6.20	31.5	6.03	29.4	5.67	28.4	5.50	25.2	4.97	23.1	4.61	17.9	3.72
	8.6	7.5	32.6	5.70	31.5	5.54	29.4	5.23	28.4	5.08	25.2	4.60	23.1	4.29	17.9	3.48
	11.2	10.0	32.6	4.90	31.5	4.78	29.4	4.54	28.4	4.42	25.2	4.04	23.1	3.78	17.9	3.11
16.4	15.0	32.6	4.27	31.5	4.15	29.4	3.90	28.4	3.78	25.2	3.41	23.1	3.16	17.9	2.54	
24.0	18.0	32.6	4.27	31.5	4.15	29.4	3.90	28.4	3.78	25.2	3.41	23.1	3.16	17.9	2.54	
80%	-24.9	-25.0	15.3	6.10	14.9	6.02	14.1	5.84	13.6	5.74	12.3	5.42	11.4	5.17	9.1	4.44
	-19.8	-20.0	17.9	6.34	17.4	6.24	16.5	6.03	16.0	5.92	14.4	5.55	13.4	5.28	10.7	4.50
	-14.7	-15.0	20.8	6.68	20.3	6.57	19.2	6.33	18.6	6.20	16.9	5.79	15.7	5.49	12.5	4.64
	-9.6	-10.0	24.3	7.17	23.6	7.06	22.4	6.80	21.7	6.65	19.7	6.17	18.4	5.83	14.7	4.89
	-4.4	-5.0	28.3	7.48	27.5	7.37	26.1	7.12	25.2	6.93	22.4	6.29	20.5	5.85	15.9	4.71
	-1.8	-2.5	28.9	7.00	28.0	6.82	26.1	6.46	25.2	6.27	22.4	5.71	20.5	5.32	15.9	4.34
	0.8	0.0	28.9	6.25	28.0	6.09	26.1	5.81	25.2	5.67	22.4	5.21	20.5	4.88	15.9	4.01
	2.8	2.0	28.9	5.76	28.0	5.64	26.1	5.39	25.2	5.26	22.4	4.85	20.5	4.55	15.9	3.75
	6.0	5.0	28.9	5.11	28.0	5.01	26.1	4.80	25.2	4.69	22.4	4.33	20.5	4.06	15.9	3.33
	7.0	6.0	28.9	4.98	28.0	4.86	26.1	4.63	25.2	4.50	22.4	4.13	20.5	3.87	15.9	3.19
	8.6	7.5	28.9	4.56	28.0	4.46	26.1	4.26	25.2	4.15	22.4	3.83	20.5	3.60	15.9	2.99
	11.2	10.0	28.9	3.90	28.0	3.83	26.1	3.68	25.2	3.60	22.4	3.35	20.5	3.17	15.9	2.67
16.4	15.0	28.9	3.85	28.0	3.74	26.1	3.52	25.2	3.41	22.4	3.08	20.5	2.86	15.9	2.31	
24.0	18.0	28.9	3.85	28.0	3.74	26.1	3.52	25.2	3.41	22.4	3.08	20.5	2.86	15.9	2.31	
70%	-24.9	-25.0	15.2	5.90	14.8	5.82	13.9	5.65	13.5	5.55	12.2	5.24	11.3	5.00	8.9	4.30
	-19.8	-20.0	17.8	6.15	17.4	6.05	16.4	5.85	15.9	5.74	14.3	5.38	13.3	5.12	10.5	4.36
	-14.7	-15.0	20.8	6.51	20.3	6.40	19.1	6.16	18.5	6.04	16.8	5.64	15.6	5.35	12.4	4.52
	-9.6	-10.0	24.3	6.94	23.7	6.84	22.4	6.62	21.7	6.49	19.6	6.03	18.0	5.60	13.9	4.52
	-4.4	-5.0	25.3	6.06	24.5	5.93	22.9	5.67	22.1	5.54	19.6	5.12	18.0	4.82	13.9	3.99
	-1.8	-2.5	25.3	5.51	24.5	5.41	22.9	5.20	22.1	5.08	19.6	4.71	18.0	4.44	13.9	3.70
	0.8	0.0	25.3	5.01	24.5	4.92	22.9	4.73	22.1	4.63	19.6	4.31	18.0	4.07	13.9	3.40
	2.8	2.0	25.3	4.62	24.5	4.54	22.9	4.38	22.1	4.29	19.6	4.00	18.0	3.79	13.9	3.18
	6.0	5.0	25.3	4.06	24.5	4.00	22.9	3.87	22.1	3.80	19.6	3.55	18.0	3.37	13.9	2.83
	7.0	6.0	25.3	3.92	24.5	3.86	22.9	3.71	22.1	3.63	19.6	3.39	18.0	3.21	13.9	2.71
	8.6	7.5	25.3	3.58	24.5	3.53	22.9	3.41	22.1	3.34	19.6	3.13	18.0	2.98	13.9	2.54
	11.2	10.0	25.3	3.42	24.5	3.32	22.9	3.13	22.1	3.04	19.6	2.75	18.0	2.62	13.9	2.27
16.4	15.0	25.3	3.42	24.5	3.32	22.9	3.13	22.1	3.04	19.6	2.75	18.0	2.55	13.9	2.07	
24.0	18.0	25.3	3.42	24.5	3.32	22.9	3.13	22.1	3.04	19.6	2.75	18.0	2.55	13.9	2.07	
60%	-24.9	-25.0	15.4	5.85	15.0	5.76	14.1	5.59	13.6	5.49	12.3	5.18	11.3	4.95	9.0	4.25
	-19.8	-20.0	18.1	6.11	17.6	6.01	16.6	5.80	16.0	5.69	14.5	5.34	13.4	5.08	10.6	4.32
	-14.7	-15.0	21.2	6.51	20.6	6.36	19.4	6.14	18.8	6.01	16.8	5.55	15.4	5.19	11.9	4.27
	-9.6	-10.0	21.7	5.71	21.0	5.61	19.6	5.40	18.9	5.29	16.8	4.92	15.4	4.64	11.9	3.84
	-4.4	-5.0	21.7	4.83	21.0	4.75	19.6	4.59	18.9	4.50	16.8	4.21	15.4	3.99	11.9	3.36
	-1.8	-2.5	21.7	4.39	21.0	4.33	19.6	4.19	18.9	4.11	16.8	3.86	15.4	3.66	11.9	3.10
	0.8	0.0	21.7	3.97	21.0	3.92	19.6	3.80	18.9	3.74	16.8	3.52	15.4	3.35	11.9	2.86
	2.8	2.0	21.7	3.64	21.0	3.60	19.6	3.50	18.9	3.45	16.8	3.26	15.4	3.11	11.9	2.67
	6.0	5.0	21.7	3.18	21.0	3.15	19.6	3.07	18.9	3.03	16.8	2.87	15.4	2.75	11.9	2.36
	7.0	6.0	21.7	3.03	21.0	3.00	19.6	2.92	18.9	2.88	16.8	2.73	15.4	2.62	11.9	2.27
	8.6	7.5	21.7	2.99	21.0	2.91	19.6	2.75	18.9	2.66	16.8	2.53	15.4	2.43	11.9	2.13
	11.2	10.0	21.7	2.99	21.0	2.91	19.6	2.75	18.9	2.66	16.8	2.42	15.4	2.25	11.9	1.91
16.4	15.0	21.7	2.99	21.0	2.91	19.6	2.75	18.9	2.66	16.8	2.42	15.4	2.25	11.9	1.84	
24.0	18.0	21.7	2.99	21.0	2.91	19.6	2.75	18.9	2.66	16.8	2.42	15.4	2.25	11.9	1.84	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-10ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
50%	-24.9	-25.0	16.2	6.03	15.7	5.94	14.7	5.76	14.3	5.66	12.8	5.33	11.8	5.09	9.3	4.37
	-19.8	-20.0	18.1	5.96	17.5	5.84	16.3	5.59	15.8	5.46	14.0	5.05	12.8	4.77	9.9	3.98
	-14.7	-15.0	18.1	5.28	17.5	5.19	16.3	5.00	15.8	4.89	14.0	4.50	12.8	4.23	9.9	3.53
	-9.6	-10.0	18.1	4.52	17.5	4.46	16.3	4.32	15.8	4.24	14.0	3.98	12.8	3.78	9.9	3.21
	-4.4	-5.0	18.1	3.79	17.5	3.75	16.3	3.65	15.8	3.59	14.0	3.39	12.8	3.24	9.9	2.78
	-1.8	-2.5	18.1	3.44	17.5	3.40	16.3	3.32	15.8	3.27	14.0	3.10	12.8	2.97	9.9	2.56
	0.8	0.0	18.1	3.09	17.5	3.07	16.3	3.00	15.8	2.96	14.0	2.82	12.8	2.71	9.9	2.36
	2.8	2.0	18.1	2.83	17.5	2.81	16.3	2.76	15.8	2.73	14.0	2.61	12.8	2.51	9.9	2.20
	6.0	5.0	18.1	2.57	17.5	2.50	16.3	2.38	15.8	2.36	14.0	2.27	12.8	2.20	9.9	1.94
	7.0	6.0	18.1	2.57	17.5	2.50	16.3	2.36	15.8	2.29	14.0	2.16	12.8	2.10	9.9	1.87
	8.6	7.5	18.1	2.57	17.5	2.50	16.3	2.36	15.8	2.29	14.0	2.09	12.8	1.95	9.9	1.76
	11.2	10.0	18.1	2.57	17.5	2.50	16.3	2.36	15.8	2.29	14.0	2.09	12.8	1.95	9.9	1.61
	16.4	15.0	18.1	2.57	17.5	2.50	16.3	2.36	15.8	2.29	14.0	2.09	12.8	1.95	9.9	1.61
24.0	18.0	18.1	2.57	17.5	2.50	16.3	2.36	15.8	2.29	14.0	2.09	12.8	1.95	9.9	1.61	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
40%	-24.9	-25.0	14.5	5.20	14.0	5.11	13.1	4.92	12.6	4.83	11.2	4.52	10.3	4.29	7.9	3.65
	-19.8	-20.0	14.5	4.60	14.0	4.54	13.1	4.36	12.6	4.27	11.2	3.97	10.3	3.76	7.9	3.18
	-14.7	-15.0	14.5	4.08	14.0	4.03	13.1	3.91	12.6	3.84	11.2	3.60	10.3	3.39	7.9	2.85
	-9.6	-10.0	14.5	3.48	14.0	3.44	13.1	3.36	12.6	3.31	11.2	3.13	10.3	3.00	7.9	2.59
	-4.4	-5.0	14.5	2.90	14.0	2.88	13.1	2.82	12.6	2.79	11.2	2.66	10.3	2.56	7.9	2.24
	-1.8	-2.5	14.5	2.62	14.0	2.61	13.1	2.56	12.6	2.54	11.2	2.44	10.3	2.35	7.9	2.07
	0.8	0.0	14.5	2.35	14.0	2.34	13.1	2.31	12.6	2.30	11.2	2.22	10.3	2.14	7.9	1.90
	2.8	2.0	14.5	2.14	14.0	2.12	13.1	2.10	12.6	2.09	11.2	2.03	10.3	1.97	7.9	1.77
	6.0	5.0	14.5	2.14	14.0	2.09	13.1	1.98	12.6	1.92	11.2	1.76	10.3	1.72	7.9	1.57
	7.0	6.0	14.5	2.14	14.0	2.09	13.1	1.98	12.6	1.92	11.2	1.76	10.3	1.65	7.9	1.51
	8.6	7.5	14.5	2.14	14.0	2.09	13.1	1.98	12.6	1.92	11.2	1.76	10.3	1.65	7.9	1.43
	11.2	10.0	14.5	2.14	14.0	2.09	13.1	1.98	12.6	1.92	11.2	1.76	10.3	1.65	7.9	1.37
	16.4	15.0	14.5	2.14	14.0	2.09	13.1	1.98	12.6	1.92	11.2	1.76	10.3	1.65	7.9	1.37
24.0	18.0	14.5	2.14	14.0	2.09	13.1	1.98	12.6	1.92	11.2	1.76	10.3	1.65	7.9	1.37	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
30%	-24.9	-25.0	10.9	3.86	10.5	3.80	9.8	3.67	9.5	3.60	8.4	3.39	7.7	3.23	6.0	2.78
	-19.8	-20.0	10.9	3.48	10.5	3.42	9.8	3.28	9.5	3.22	8.4	3.01	7.7	2.86	6.0	2.45
	-14.7	-15.0	10.9	3.01	10.5	2.97	9.8	2.90	9.5	2.86	8.4	2.72	7.7	2.60	6.0	2.21
	-9.6	-10.0	10.9	2.56	10.5	2.54	9.8	2.49	9.5	2.47	8.4	2.36	7.7	2.27	6.0	2.00
	-4.4	-5.0	10.9	2.13	10.5	2.12	9.8	2.10	9.5	2.08	8.4	2.01	7.7	1.95	6.0	1.74
	-1.8	-2.5	10.9	1.90	10.5	1.90	9.8	1.89	9.5	1.88	8.4	1.82	7.7	1.77	6.0	1.60
	0.8	0.0	10.9	1.72	10.5	1.68	9.8	1.68	9.5	1.68	8.4	1.65	7.7	1.61	6.0	1.47
	2.8	2.0	10.9	1.72	10.5	1.68	9.8	1.59	9.5	1.55	8.4	1.51	7.7	1.48	6.0	1.37
	6.0	5.0	10.9	1.72	10.5	1.68	9.8	1.59	9.5	1.55	8.4	1.43	7.7	1.35	6.0	1.23
	7.0	6.0	10.9	1.72	10.5	1.68	9.8	1.59	9.5	1.55	8.4	1.43	7.7	1.35	6.0	1.19
	8.6	7.5	10.9	1.72	10.5	1.68	9.8	1.59	9.5	1.55	8.4	1.43	7.7	1.35	6.0	1.14
	11.2	10.0	10.9	1.72	10.5	1.68	9.8	1.59	9.5	1.55	8.4	1.43	7.7	1.35	6.0	1.14
	16.4	15.0	10.9	1.72	10.5	1.68	9.8	1.59	9.5	1.55	8.4	1.43	7.7	1.35	6.0	1.14
24.0	18.0	10.9	1.72	10.5	1.68	9.8	1.59	9.5	1.55	8.4	1.43	7.7	1.35	6.0	1.14	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-5. U-12ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
130%	-10.0	29.0	3.76	34.8	4.51	36.0	4.67	36.0	4.67	40.8	5.29	45.6	5.92	50.4	6.54
	-5.0	29.0	3.76	34.8	4.52	36.0	4.67	36.0	4.67	40.8	5.30	45.6	5.92	50.4	6.54
	0.0	29.0	3.77	34.8	4.52	36.0	4.68	36.0	4.68	40.8	5.30	45.6	5.93	50.4	6.55
	5.0	29.0	3.77	34.8	4.53	36.0	4.69	36.0	4.69	40.8	5.32	45.6	5.95	50.4	6.57
	10.0	29.0	3.78	34.8	4.54	36.0	4.72	36.0	4.72	40.8	5.37	45.6	6.01	50.4	6.64
	15.0	29.0	3.80	34.8	4.58	36.0	4.81	36.0	4.81	40.8	5.49	45.6	6.16	50.4	6.80
	20.0	29.0	3.92	34.8	4.77	36.0	5.09	36.0	5.09	40.8	5.83	45.6	6.81	50.4	7.91
	25.0	29.0	4.49	34.8	5.58	36.0	6.25	36.0	6.25	40.8	7.39	45.6	8.63	50.4	9.96
	30.0	29.0	5.62	34.8	6.97	36.0	7.73	36.0	7.73	40.8	9.10	45.6	10.57	49.9	11.86
	35.0	29.0	6.84	34.8	8.47	36.0	9.32	36.0	9.32	40.8	10.94	44.2	11.86	46.1	11.86
	40.0	29.0	8.15	34.8	10.08	36.0	11.04	36.0	11.04	39.0	11.86	40.7	11.86	42.5	11.86
43.0	29.0	8.99	34.8	11.10	35.5	11.86	35.5	11.86	37.1	11.86	38.6	11.60	39.6	11.08	
46.0	28.7	9.03	28.9	9.03	28.9	9.03	28.9	9.03	29.9	8.70	31.1	8.44	32.5	8.25	
52.0	12.1	3.57	12.8	3.57	12.8	3.57	12.8	3.57	14.2	3.70	15.8	3.83	17.5	3.97	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
120%	-10.0	26.8	3.47	32.2	4.17	35.2	4.56	35.2	4.56	39.9	5.17	44.6	5.78	49.2	6.38
	-5.0	26.8	3.48	32.2	4.17	35.2	4.57	35.2	4.57	39.9	5.18	44.6	5.78	49.2	6.39
	0.0	26.8	3.48	32.2	4.17	35.2	4.57	35.2	4.57	39.9	5.18	44.6	5.79	49.2	6.40
	5.0	26.8	3.49	32.2	4.18	35.2	4.58	35.2	4.58	39.9	5.19	44.6	5.81	49.2	6.42
	10.0	26.8	3.49	32.2	4.19	35.2	4.60	35.2	4.60	39.9	5.24	44.6	5.87	49.2	6.49
	15.0	26.8	3.51	32.2	4.23	35.2	4.69	35.2	4.69	39.9	5.36	44.6	6.02	49.2	6.64
	20.0	26.8	3.62	32.2	4.40	35.2	4.96	35.2	4.96	39.9	5.68	44.6	6.56	49.2	7.61
	25.0	26.8	4.15	32.2	5.15	35.2	6.05	35.2	6.05	39.9	7.14	44.6	8.32	49.2	9.60
	30.0	26.8	5.20	32.2	6.43	35.2	7.49	35.2	7.49	39.9	8.80	44.6	10.22	49.2	11.73
	35.0	26.8	6.32	32.2	7.80	35.2	9.03	35.2	9.03	39.9	10.59	43.9	11.86	45.7	11.86
	40.0	26.8	7.53	32.2	9.28	35.2	10.71	35.2	10.71	38.7	11.86	40.4	11.86	42.2	11.86
43.0	26.8	8.30	32.2	10.22	35.2	11.78	35.2	11.78	36.9	11.85	38.4	11.67	39.3	11.12	
46.0	26.5	9.02	28.8	9.06	28.8	9.06	28.8	9.06	29.7	8.70	30.8	8.42	32.1	8.21	
52.0	11.3	3.52	12.4	3.52	12.6	3.52	12.6	3.52	13.9	3.63	15.4	3.75	17.0	3.88	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
110%	-10.0	24.6	3.18	29.5	3.82	34.3	4.45	34.3	4.45	38.9	5.05	43.5	5.64	48.1	6.23
	-5.0	24.6	3.19	29.5	3.82	34.3	4.46	34.3	4.46	38.9	5.05	43.5	5.65	48.1	6.24
	0.0	24.6	3.19	29.5	3.83	34.3	4.46	34.3	4.46	38.9	5.06	43.5	5.65	48.1	6.24
	5.0	24.6	3.20	29.5	3.84	34.3	4.47	34.3	4.47	38.9	5.07	43.5	5.67	48.1	6.27
	10.0	24.6	3.21	29.5	3.84	34.3	4.49	34.3	4.49	38.9	5.11	43.5	5.73	48.1	6.33
	15.0	24.6	3.22	29.5	3.88	34.3	4.57	34.3	4.57	38.9	5.22	43.5	5.87	48.1	6.49
	20.0	24.6	3.32	29.5	4.04	34.3	4.82	34.3	4.82	38.9	5.53	43.5	6.32	48.1	7.32
	25.0	24.6	3.83	29.5	4.72	34.3	5.85	34.3	5.85	38.9	6.90	43.5	8.03	48.1	9.24
	30.0	24.6	4.78	29.5	5.89	34.3	7.25	34.3	7.25	38.9	8.51	43.5	9.86	48.1	11.31
	35.0	24.6	5.81	29.5	7.15	34.3	8.75	34.3	8.75	38.9	10.25	43.4	11.79	45.3	11.86
	40.0	24.6	6.91	29.5	8.50	34.3	10.38	34.3	10.38	38.4	11.86	40.1	11.86	41.8	11.86
43.0	24.6	7.61	29.5	9.36	34.3	11.42	34.3	11.42	36.6	11.86	38.2	11.76	39.1	11.18	
46.0	24.3	8.27	28.6	9.10	28.6	9.10	28.6	9.10	29.4	8.71	30.5	8.41	31.7	8.17	
52.0	10.5	3.46	11.4	3.46	12.3	3.46	12.3	3.46	13.6	3.56	15.0	3.67	16.6	3.78	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	-10.0	22.3	2.90	26.8	3.48	31.3	4.05	33.5	4.34	38.0	4.92	42.4	5.50	46.9	6.08
	-5.0	22.3	2.90	26.8	3.48	31.3	4.06	33.5	4.35	38.0	4.93	42.4	5.51	46.9	6.09
	0.0	22.3	2.90	26.8	3.48	31.3	4.06	33.5	4.35	38.0	4.93	42.4	5.51	46.9	6.09
	5.0	22.3	2.91	26.8	3.49	31.3	4.07	33.5	4.36	38.0	4.94	42.4	5.53	46.9	6.12
	10.0	22.3	2.92	26.8	3.50	31.3	4.08	33.5	4.38	38.0	4.98	42.4	5.58	46.9	6.18
	15.0	22.3	2.93	26.8	3.53	31.3	4.14	33.5	4.45	38.0	5.08	42.4	5.72	46.9	6.33
	20.0	22.3	3.02	26.8	3.68	31.3	4.35	33.5	4.69	38.0	5.38	42.4	6.08	46.9	7.03
	25.0	22.3	3.51	26.8	4.31	31.3	5.19	33.5	5.66	38.0	6.66	42.4	7.74	46.9	8.90
	30.0	22.3	4.37	26.8	5.37	31.3	6.45	33.5	7.02	38.0	8.22	42.4	9.52	46.9	10.90
	35.0	22.3	5.30	26.8	6.50	31.3	7.79	33.5	8.47	38.0	9.91	42.4	11.44	44.9	11.86
	40.0	22.3	6.30	26.8	7.72	31.3	9.25	33.5	10.05	38.0	11.73	39.8	11.86	41.5	11.86
43.0	22.3	6.93	26.8	8.50	31.3	10.18	33.5	11.06	36.3	11.86	38.0	11.86	38.8	11.24	
46.0	22.1	7.53	26.5	9.24	28.2	9.40	28.5	9.15	29.2	8.73	30.2	8.40	31.4	8.15	
52.0	9.6	3.28	10.5	3.31	11.5	3.37	12.1	3.41	13.3	3.49	14.6	3.59	16.1	3.70	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-12ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
90%	-10.0	20.1	2.61	24.1	3.13	28.1	3.65	30.2	3.91	34.2	4.43	38.2	4.95	42.2	5.48
	-5.0	20.1	2.61	24.1	3.13	28.1	3.65	30.2	3.91	34.2	4.44	38.2	4.96	42.2	5.48
	0.0	20.1	2.61	24.1	3.14	28.1	3.66	30.2	3.92	34.2	4.44	38.2	4.96	42.2	5.49
	5.0	20.1	2.62	24.1	3.14	28.1	3.67	30.2	3.93	34.2	4.45	38.2	4.97	42.2	5.50
	10.0	20.1	2.63	24.1	3.15	28.1	3.67	30.2	3.94	34.2	4.47	38.2	5.01	42.2	5.55
	15.0	20.1	2.63	24.1	3.17	28.1	3.71	30.2	3.99	34.2	4.54	38.2	5.11	42.2	5.68
	20.0	20.1	2.70	24.1	3.28	28.1	3.87	30.2	4.17	34.2	4.78	38.2	5.39	42.2	6.00
	25.0	20.1	3.10	24.1	3.79	28.1	4.53	30.2	4.92	34.2	5.75	38.2	6.64	42.2	7.59
	30.0	20.1	3.88	24.1	4.73	28.1	5.64	30.2	6.12	34.2	7.13	38.2	8.20	42.2	9.35
	35.0	20.1	4.71	24.1	5.73	28.1	6.83	30.2	7.40	34.2	8.61	38.2	9.89	42.2	11.24
	40.0	20.1	5.59	24.1	6.82	28.1	8.12	30.2	8.80	34.2	10.21	38.2	11.71	40.0	11.86
43.0	20.1	6.16	24.1	7.51	28.1	8.94	30.2	9.68	34.2	11.24	36.6	11.86	38.0	11.67	
46.0	19.9	6.69	23.9	8.15	27.9	9.71	28.0	9.43	28.5	8.90	29.2	8.47	30.1	8.12	
52.0	9.2	3.20	9.9	3.19	10.7	3.20	11.1	3.21	12.1	3.25	13.2	3.31	14.4	3.37	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
80%	-10.0	17.9	2.32	21.4	2.78	25.0	3.24	26.8	3.48	30.4	3.94	33.9	4.40	37.5	4.87
	-5.0	17.9	2.32	21.4	2.78	25.0	3.25	26.8	3.48	30.4	3.94	33.9	4.41	37.5	4.87
	0.0	17.9	2.32	21.4	2.79	25.0	3.25	26.8	3.48	30.4	3.95	33.9	4.41	37.5	4.88
	5.0	17.9	2.33	21.4	2.79	25.0	3.26	26.8	3.49	30.4	3.96	33.9	4.42	37.5	4.89
	10.0	17.9	2.33	21.4	2.80	25.0	3.27	26.8	3.50	30.4	3.97	33.9	4.44	37.5	4.92
	15.0	17.9	2.35	21.4	2.81	25.0	3.29	26.8	3.53	30.4	4.01	33.9	4.51	37.5	5.01
	20.0	17.9	2.38	21.4	2.88	25.0	3.40	26.8	3.66	30.4	4.19	33.9	4.73	37.5	5.26
	25.0	17.9	2.69	21.4	3.31	25.0	3.91	26.8	4.23	30.4	4.90	33.9	5.63	37.5	6.39
	30.0	17.9	3.42	21.4	4.13	25.0	4.88	26.8	5.28	30.4	6.11	33.9	6.99	37.5	7.92
	35.0	17.9	4.14	21.4	5.01	25.0	5.92	26.8	6.39	30.4	7.40	33.9	8.45	37.5	9.56
	40.0	17.9	4.92	21.4	5.96	25.0	7.05	26.8	7.61	30.4	8.79	33.9	10.03	37.5	11.33
43.0	17.9	5.42	21.4	6.56	25.0	7.76	26.8	8.38	30.4	9.68	33.9	11.04	36.6	11.86	
46.0	17.7	5.88	21.2	7.12	24.8	8.43	26.5	9.11	28.1	9.27	28.5	8.72	29.0	8.26	
52.0	8.9	3.15	9.4	3.09	10.0	3.06	10.3	3.05	11.1	3.05	12.0	3.06	12.9	3.08	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
70%	-10.0	15.6	2.03	18.8	2.43	21.9	2.84	23.5	3.04	26.6	3.45	29.7	3.85	32.8	4.26
	-5.0	15.6	2.03	18.8	2.44	21.9	2.84	23.5	3.05	26.6	3.45	29.7	3.86	32.8	4.26
	0.0	15.6	2.03	18.8	2.44	21.9	2.85	23.5	3.05	26.6	3.46	29.7	3.86	32.8	4.27
	5.0	15.6	2.04	18.8	2.44	21.9	2.85	23.5	3.06	26.6	3.46	29.7	3.87	32.8	4.28
	10.0	15.6	2.04	18.8	2.45	21.9	2.86	23.5	3.06	26.6	3.47	29.7	3.88	32.8	4.29
	15.0	15.6	2.05	18.8	2.46	21.9	2.87	23.5	3.08	26.6	3.49	29.7	3.92	32.8	4.35
	20.0	15.6	2.07	18.8	2.50	21.9	2.94	23.5	3.16	26.6	3.62	29.7	4.08	32.8	4.54
	25.0	15.6	2.29	18.8	2.82	21.9	3.34	23.5	3.60	26.6	4.14	29.7	4.71	32.8	5.31
	30.0	15.6	2.98	18.8	3.56	21.9	4.18	23.5	4.50	26.6	5.17	29.7	5.87	32.8	6.61
	35.0	15.6	3.61	18.8	4.32	21.9	5.07	23.5	5.45	26.6	6.27	29.7	7.12	32.8	8.01
	40.0	15.6	4.28	18.8	5.14	21.9	6.04	23.5	6.50	26.6	7.46	29.7	8.47	32.8	9.51
43.0	15.6	4.71	18.8	5.66	21.9	6.65	23.5	7.16	26.6	8.22	29.7	9.33	32.8	10.48	
46.0	15.5	5.11	18.6	6.14	21.7	7.23	23.2	7.79	26.3	8.94	28.0	9.24	28.3	8.65	
52.0	8.6	3.13	9.0	3.04	9.4	2.96	9.7	2.94	10.2	2.89	10.9	2.87	11.6	2.85	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
60%	-10.0	13.4	1.74	16.1	2.09	18.8	2.43	20.1	2.61	22.8	2.96	25.5	3.30	28.1	3.65
	-5.0	13.4	1.74	16.1	2.09	18.8	2.44	20.1	2.61	22.8	2.96	25.5	3.31	28.1	3.66
	0.0	13.4	1.74	16.1	2.09	18.8	2.44	20.1	2.61	22.8	2.96	25.5	3.31	28.1	3.66
	5.0	13.4	1.75	16.1	2.10	18.8	2.45	20.1	2.62	22.8	2.97	25.5	3.32	28.1	3.67
	10.0	13.4	1.75	16.1	2.10	18.8	2.45	20.1	2.63	22.8	2.98	25.5	3.33	28.1	3.67
	15.0	13.4	1.76	16.1	2.11	18.8	2.46	20.1	2.63	22.8	2.99	25.5	3.34	28.1	3.70
	20.0	13.4	1.77	16.1	2.13	18.8	2.50	20.1	2.68	22.8	3.06	25.5	3.44	28.1	3.83
	25.0	13.4	1.91	16.1	2.34	18.8	2.78	20.1	2.99	22.8	3.44	25.5	3.88	28.1	4.34
	30.0	13.4	2.57	16.1	3.03	18.8	3.52	20.1	3.78	22.8	4.30	25.5	4.85	28.1	5.43
	35.0	13.4	3.10	16.1	3.68	18.8	4.28	20.1	4.58	22.8	5.23	25.5	5.90	28.1	6.59
	40.0	13.4	3.67	16.1	4.36	18.8	5.09	20.1	5.46	22.8	6.23	25.5	7.02	28.1	7.85
43.0	13.4	4.03	16.1	4.80	18.8	5.60	20.1	6.02	22.8	6.86	25.5	7.74	28.1	8.65	
46.0	13.3	4.37	15.9	5.21	18.6	6.09	19.9	6.54	22.6	7.46	25.2	8.42	27.9	9.41	
52.0	8.4	3.16	8.6	3.03	8.9	2.92	9.1	2.87	9.5	2.79	9.9	2.72	10.5	2.67	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-12ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
50%	-10.0	11.2	1.45	13.4	1.74	15.6	2.03	16.8	2.17	19.0	2.46	21.2	2.75	23.5	3.04
	-5.0	11.2	1.45	13.4	1.74	15.6	2.03	16.8	2.18	19.0	2.47	21.2	2.76	23.5	3.05
	0.0	11.2	1.45	13.4	1.74	15.6	2.03	16.8	2.18	19.0	2.47	21.2	2.76	23.5	3.05
	5.0	11.2	1.46	13.4	1.75	15.6	2.04	16.8	2.18	19.0	2.47	21.2	2.77	23.5	3.06
	10.0	11.2	1.46	13.4	1.75	15.6	2.04	16.8	2.19	19.0	2.48	21.2	2.77	23.5	3.06
	15.0	11.2	1.47	13.4	1.76	15.6	2.05	16.8	2.20	19.0	2.49	21.2	2.78	23.5	3.07
	20.0	11.2	1.48	13.4	1.77	15.6	2.07	16.8	2.22	19.0	2.52	21.2	2.83	23.5	3.14
	25.0	11.2	1.55	13.4	1.89	15.6	2.24	16.8	2.41	19.0	2.77	21.2	3.13	23.5	3.49
	30.0	11.2	2.18	13.4	2.54	15.6	2.92	16.8	3.11	19.0	3.51	21.2	3.92	23.5	4.35
	35.0	11.2	2.62	13.4	3.07	15.6	3.54	16.8	3.77	19.0	4.27	21.2	4.77	23.5	5.30
	40.0	11.2	3.08	13.4	3.63	15.6	4.20	16.8	4.49	19.0	5.08	21.2	5.69	23.5	6.32
43.0	11.2	3.38	13.4	3.99	15.6	4.62	16.8	4.94	19.0	5.60	21.2	6.27	23.5	6.96	
46.0	11.1	3.66	13.3	4.33	15.5	5.02	16.6	5.37	18.8	6.08	21.0	6.82	23.2	7.57	
52.0	8.3	3.26	8.4	3.09	8.5	2.94	8.7	2.87	8.9	2.75	9.2	2.65	9.5	2.56	
40%	-10.0	8.9	1.16	10.7	1.39	12.5	1.62	13.4	1.74	15.2	1.97	17.0	2.20	18.8	2.44
	-5.0	8.9	1.16	10.7	1.39	12.5	1.63	13.4	1.74	15.2	1.97	17.0	2.21	18.8	2.44
	0.0	8.9	1.16	10.7	1.40	12.5	1.63	13.4	1.74	15.2	1.98	17.0	2.21	18.8	2.44
	5.0	8.9	1.17	10.7	1.40	12.5	1.63	13.4	1.75	15.2	1.98	17.0	2.21	18.8	2.45
	10.0	8.9	1.17	10.7	1.40	12.5	1.64	13.4	1.75	15.2	1.99	17.0	2.22	18.8	2.45
	15.0	8.9	1.18	10.7	1.41	12.5	1.64	13.4	1.76	15.2	1.99	17.0	2.23	18.8	2.46
	20.0	8.9	1.18	10.7	1.42	12.5	1.66	13.4	1.77	15.2	2.01	17.0	2.24	18.8	2.48
	25.0	8.9	1.21	10.7	1.47	12.5	1.73	13.4	1.86	15.2	2.13	17.0	2.41	18.8	2.68
	30.0	8.9	1.82	10.7	2.08	12.5	2.36	13.4	2.50	15.2	2.79	17.0	3.09	18.8	3.39
	35.0	8.9	2.16	10.7	2.50	12.5	2.85	13.4	3.02	15.2	3.38	17.0	3.75	18.8	4.13
	40.0	8.9	2.53	10.7	2.95	12.5	3.37	13.4	3.58	15.2	4.02	17.0	4.47	18.8	4.92
43.0	8.9	2.77	10.7	3.23	12.5	3.70	13.4	3.94	15.2	4.42	17.0	4.92	18.8	5.42	
46.0	8.8	2.99	10.6	3.50	12.4	4.01	13.3	4.27	15.0	4.81	16.8	5.35	18.6	5.90	
52.0	7.2	2.98	8.2	3.26	8.3	3.07	8.4	2.98	8.5	2.82	8.6	2.68	8.8	2.55	
30%	-10.0	6.7	0.87	8.0	1.05	9.4	1.22	10.1	1.31	11.4	1.48	12.7	1.65	14.1	1.83
	-5.0	6.7	0.87	8.0	1.05	9.4	1.22	10.1	1.31	11.4	1.48	12.7	1.66	14.1	1.83
	0.0	6.7	0.87	8.0	1.05	9.4	1.22	10.1	1.31	11.4	1.48	12.7	1.66	14.1	1.83
	5.0	6.7	0.88	8.0	1.05	9.4	1.22	10.1	1.31	11.4	1.49	12.7	1.66	14.1	1.84
	10.0	6.7	0.88	8.0	1.05	9.4	1.23	10.1	1.32	11.4	1.49	12.7	1.67	14.1	1.84
	15.0	6.7	0.88	8.0	1.06	9.4	1.23	10.1	1.32	11.4	1.50	12.7	1.67	14.1	1.85
	20.0	6.7	0.89	8.0	1.07	9.4	1.24	10.1	1.33	11.4	1.51	12.7	1.68	14.1	1.86
	25.0	6.7	0.91	8.0	1.08	9.4	1.27	10.1	1.36	11.4	1.55	12.7	1.74	14.1	1.93
	30.0	6.7	1.48	8.0	1.66	9.4	1.85	10.1	1.95	11.4	2.14	12.7	2.34	14.1	2.54
	35.0	6.7	1.73	8.0	1.97	9.4	2.21	10.1	2.33	11.4	2.58	12.7	2.83	14.1	3.08
	40.0	6.7	2.01	8.0	2.30	9.4	2.59	10.1	2.74	11.4	3.04	12.7	3.35	14.1	3.65
43.0	6.7	2.18	8.0	2.51	9.4	2.84	10.1	3.00	11.4	3.34	12.7	3.68	14.1	4.02	
46.0	6.6	2.34	8.0	2.70	9.3	3.07	9.9	3.25	11.3	3.62	12.6	3.99	13.9	4.37	
52.0	5.4	2.34	6.5	2.70	7.6	3.06	8.1	3.25	8.3	3.08	8.3	2.89	8.4	2.72	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-6. U-12ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
130%	-24.9	-25.0	19.1	8.37	18.6	8.24	17.5	7.97	17.0	7.83	15.4	7.35	14.3	6.99	11.3	5.92
	-19.8	-20.0	22.3	8.70	21.7	8.56	20.5	8.25	19.9	8.09	18.0	7.55	16.7	7.16	13.4	6.02
	-14.7	-15.0	25.9	9.18	25.3	9.01	23.9	8.66	23.2	8.48	21.0	7.88	19.5	7.45	15.7	6.22
	-9.6	-10.0	30.2	9.87	29.4	9.68	27.8	9.28	27.0	9.07	24.6	8.40	22.9	7.92	18.4	6.57
	-4.4	-5.0	35.1	10.69	34.2	10.49	32.4	10.07	31.5	9.84	28.7	9.09	26.7	8.54	21.4	7.00
	-1.8	-2.5	37.8	10.95	36.9	10.75	34.9	10.30	33.9	10.06	30.8	9.29	28.7	8.73	23.1	7.18
	0.8	0.0	40.5	11.09	39.6	10.95	37.5	10.48	36.5	10.23	33.2	9.44	30.9	8.86	25.0	7.29
	2.8	2.0	42.6	11.09	42.0	11.09	39.9	10.64	38.7	10.39	35.3	9.59	32.8	8.97	25.4	6.90
	6.0	5.0	45.9	11.09	44.8	10.86	41.8	10.09	40.3	9.71	35.8	8.60	32.8	7.87	25.4	6.10
	7.0	6.0	46.3	10.70	44.8	10.34	41.8	9.61	40.3	9.26	35.8	8.21	32.8	7.52	25.4	5.84
	8.6	7.5	46.3	9.90	44.8	9.57	41.8	8.91	40.3	8.59	35.8	7.63	32.8	7.00	25.4	5.46
	11.2	10.0	46.3	8.64	44.8	8.36	41.8	7.81	40.3	7.53	35.8	6.72	32.8	6.19	25.4	4.86
16.4	15.0	46.3	6.38	44.8	6.20	41.8	5.84	40.3	5.66	35.8	5.11	32.8	4.74	25.4	3.81	
24.0	18.0	46.3	6.25	44.8	6.06	41.8	5.68	40.3	5.49	35.8	4.92	32.8	4.54	25.4	3.59	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
120%	-24.9	-25.0	19.1	8.29	18.5	8.17	17.5	7.90	17.0	7.76	15.3	7.29	14.2	6.93	11.3	5.88
	-19.8	-20.0	22.3	8.63	21.7	8.48	20.5	8.18	19.9	8.02	18.0	7.49	16.7	7.10	13.3	5.97
	-14.7	-15.0	25.9	9.11	25.2	8.94	23.8	8.60	23.1	8.41	21.0	7.82	19.5	7.39	15.6	6.18
	-9.6	-10.0	30.1	9.80	29.4	9.61	27.8	9.22	27.0	9.01	24.5	8.35	22.8	7.87	18.3	6.52
	-4.4	-5.0	35.1	10.59	34.2	10.40	32.4	9.98	31.5	9.76	28.6	9.02	26.6	8.48	21.4	6.96
	-1.8	-2.5	37.8	10.84	36.8	10.64	34.9	10.20	33.9	9.96	30.8	9.21	28.7	8.65	23.0	7.11
	0.8	0.0	40.6	11.05	39.6	10.84	37.5	10.37	36.4	10.13	33.1	9.34	30.9	8.78	24.8	7.18
	2.8	2.0	42.8	11.09	42.0	11.01	39.8	10.54	38.7	10.29	35.0	9.38	32.1	8.58	24.8	6.64
	6.0	5.0	45.2	10.64	43.8	10.29	40.8	9.58	39.4	9.24	35.0	8.21	32.1	7.53	24.8	5.87
	7.0	6.0	45.2	10.12	43.8	9.79	40.8	9.13	39.4	8.80	35.0	7.83	32.1	7.19	24.8	5.62
	8.6	7.5	45.2	9.36	43.8	9.05	40.8	8.46	39.4	8.16	35.0	7.28	32.1	6.70	24.8	5.25
	11.2	10.0	45.2	8.15	43.8	7.90	40.8	7.40	39.4	7.15	35.0	6.41	32.1	5.91	24.8	4.68
16.4	15.0	45.2	6.11	43.8	5.92	40.8	5.55	39.4	5.37	35.0	4.86	32.1	4.52	24.8	3.66	
24.0	18.0	45.2	6.11	43.8	5.92	40.8	5.55	39.4	5.37	35.0	4.81	32.1	4.44	24.8	3.51	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
110%	-24.9	-25.0	19.0	8.22	18.5	8.10	17.4	7.84	16.9	7.70	15.3	7.23	14.2	6.87	11.2	5.83
	-19.8	-20.0	22.2	8.56	21.6	8.42	20.4	8.12	19.8	7.95	17.9	7.43	16.6	7.04	13.3	5.93
	-14.7	-15.0	25.9	9.04	25.2	8.88	23.8	8.53	23.1	8.35	20.9	7.77	19.4	7.34	15.6	6.13
	-9.6	-10.0	30.1	9.72	29.3	9.55	27.8	9.16	27.0	8.96	24.5	8.29	22.8	7.81	18.3	6.48
	-4.4	-5.0	35.1	10.50	34.2	10.31	32.4	9.90	31.4	9.68	28.6	8.95	26.6	8.42	21.3	6.92
	-1.8	-2.5	37.8	10.73	36.8	10.53	34.8	10.10	33.8	9.87	30.7	9.12	28.6	8.57	22.9	7.05
	0.8	0.0	40.6	10.94	39.6	10.72	37.5	10.27	36.4	10.03	33.1	9.25	30.8	8.70	24.2	6.91
	2.8	2.0	43.0	11.09	42.0	10.90	39.8	10.44	38.4	10.08	34.2	8.95	31.3	8.22	24.2	6.39
	6.0	5.0	44.1	10.06	42.7	9.74	39.9	9.10	38.4	8.78	34.2	7.83	31.3	7.20	24.2	5.64
	7.0	6.0	44.1	9.56	42.7	9.26	39.9	8.66	38.4	8.36	34.2	7.47	31.3	6.87	24.2	5.40
	8.6	7.5	44.1	8.84	42.7	8.56	39.9	8.02	38.4	7.75	34.2	6.94	31.3	6.40	24.2	5.05
	11.2	10.0	44.1	7.69	42.7	7.46	39.9	7.01	38.4	6.78	34.2	6.10	31.3	5.65	24.2	4.50
16.4	15.0	44.1	5.97	42.7	5.79	39.9	5.43	38.4	5.25	34.2	4.70	31.3	4.34	24.2	3.52	
24.0	18.0	44.1	5.97	42.7	5.79	39.9	5.43	38.4	5.25	34.2	4.70	31.3	4.34	24.2	3.44	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
100%	-24.9	-25.0	19.0	8.15	18.5	8.03	17.4	7.78	16.9	7.64	15.2	7.17	14.1	6.82	11.2	5.79
	-19.8	-20.0	22.2	8.49	21.6	8.35	20.4	8.05	19.8	7.89	17.9	7.37	16.6	6.99	13.2	5.88
	-14.7	-15.0	25.8	8.98	25.2	8.82	23.8	8.48	23.1	8.30	20.9	7.71	19.4	7.29	15.5	6.09
	-9.6	-10.0	30.1	9.70	29.3	9.48	27.7	9.11	26.9	8.90	24.4	8.24	22.7	7.76	18.2	6.43
	-4.4	-5.0	35.1	10.40	34.2	10.22	32.4	9.81	31.4	9.60	28.5	8.88	26.5	8.36	21.2	6.87
	-1.8	-2.5	37.8	10.63	36.8	10.43	34.8	10.00	33.8	9.77	30.7	9.04	28.5	8.50	22.9	6.99
	0.8	0.0	40.6	10.83	39.6	10.62	37.5	10.17	36.4	9.93	33.1	9.17	30.6	8.53	23.6	6.65
	2.8	2.0	43.1	10.99	41.7	10.64	38.9	9.93	37.5	9.58	33.3	8.55	30.6	7.86	23.6	6.15
	6.0	5.0	43.1	9.51	41.7	9.21	38.9	8.63	37.5	8.34	33.3	7.46	30.6	6.87	23.6	5.41
	7.0	6.0	43.1	9.03	41.7	8.76	38.9	8.21	37.5	7.92	33.3	7.10	30.6	6.55	23.6	5.19
	8.6	7.5	43.1	8.32	41.7	8.07	38.9	7.58	37.5	7.33	33.3	6.60	30.6	6.10	23.6	4.85
	11.2	10.0	43.1	7.23	41.7	7.03	38.9	6.63	37.5	6.42	33.3	5.81	30.6	5.40	23.6	4.33
16.4	15.0	43.1	5.83	41.7	5.66	38.9	5.30	37.5	5.13	33.3	4.60	30.6	4.24	23.6	3.36	
24.0	18.0	43.1	5.83	41.7	5.66	38.9	5.30	37.5	5.13	33.3	4.60	30.6	4.24	23.6	3.36	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-12ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
			TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
90%	°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
	-24.9	-25.0	18.9	7.94	18.4	7.83	17.3	7.57	16.8	7.43	15.1	6.98	14.0	6.64	11.1	5.64
	-19.8	-20.0	22.2	8.29	21.6	8.15	20.3	7.86	19.7	7.70	17.8	7.19	16.5	6.82	13.1	5.74
	-14.7	-15.0	25.8	8.80	25.1	8.64	23.7	8.30	23.0	8.12	20.8	7.55	19.3	7.13	15.4	5.95
	-9.6	-10.0	30.2	9.56	29.4	9.38	27.8	8.97	26.9	8.73	24.4	8.09	22.7	7.61	18.1	6.30
	-4.4	-5.0	35.2	10.10	34.3	9.92	32.4	9.53	31.4	9.32	28.5	8.64	26.4	8.14	21.1	6.72
	-1.8	-2.5	37.9	10.30	36.9	10.11	34.9	9.70	33.8	9.44	30.0	8.49	27.5	7.85	21.3	6.23
	0.8	0.0	38.8	9.60	37.5	9.33	35.0	8.79	33.8	8.51	30.0	7.68	27.5	7.12	21.3	5.67
	2.8	2.0	38.8	8.75	37.5	8.51	35.0	8.03	33.8	7.79	30.0	7.04	27.5	6.54	21.3	5.28
	6.0	5.0	38.8	7.61	37.5	7.43	35.0	7.06	33.8	6.86	30.0	6.26	27.5	5.83	21.3	4.68
	7.0	6.0	38.8	7.37	37.5	7.17	35.0	6.78	33.8	6.58	30.0	5.97	27.5	5.56	21.3	4.48
	8.6	7.5	38.8	6.77	37.5	6.60	35.0	6.26	33.8	6.08	30.0	5.54	27.5	5.17	21.3	4.19
	11.2	10.0	38.8	5.85	37.5	5.72	35.0	5.44	33.8	5.30	30.0	4.86	27.5	4.56	21.3	3.74
16.4	15.0	38.8	5.29	37.5	5.13	35.0	4.81	33.8	4.65	30.0	4.17	27.5	3.86	21.3	3.06	
24.0	18.0	38.8	5.29	37.5	5.13	35.0	4.81	33.8	4.65	30.0	4.17	27.5	3.86	21.3	3.06	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
			TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
80%	°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
	-24.9	-25.0	19.0	7.85	18.5	7.73	17.4	7.48	16.9	7.35	15.2	6.90	14.0	6.56	11.1	5.58
	-19.8	-20.0	22.4	8.22	21.7	8.08	20.5	7.78	19.8	7.62	17.9	7.12	16.5	6.74	13.1	5.68
	-14.7	-15.0	26.1	8.75	25.4	8.59	24.0	8.25	23.2	8.07	21.0	7.49	19.4	7.07	15.4	5.90
	-9.6	-10.0	30.6	9.49	29.8	9.32	28.1	8.95	27.2	8.74	24.6	8.01	22.8	7.57	18.2	6.25
	-4.4	-5.0	34.4	9.42	33.3	9.18	31.1	8.69	30.0	8.44	26.7	7.68	24.4	7.15	18.9	5.76
	-1.8	-2.5	34.4	8.48	33.3	8.28	31.1	7.86	30.0	7.64	26.7	6.97	24.4	6.50	18.9	5.29
	0.8	0.0	34.4	7.59	33.3	7.43	31.1	7.09	30.0	6.91	26.7	6.35	24.4	5.95	18.9	4.86
	2.8	2.0	34.4	7.00	33.3	6.86	31.1	6.55	30.0	6.39	26.7	5.88	24.4	5.52	18.9	4.52
	6.0	5.0	34.4	6.17	33.3	6.05	31.1	5.79	30.0	5.65	26.7	5.20	24.4	4.88	18.9	3.99
	7.0	6.0	34.4	5.91	33.3	5.79	31.1	5.52	30.0	5.39	26.7	4.96	24.4	4.65	18.9	3.83
	8.6	7.5	34.4	5.42	33.3	5.31	31.1	5.08	30.0	4.96	26.7	4.59	24.4	4.32	18.9	3.58
	11.2	10.0	34.4	4.74	33.3	4.60	31.1	4.40	30.0	4.31	26.7	4.01	24.4	3.80	18.9	3.19
16.4	15.0	34.4	4.74	33.3	4.60	31.1	4.31	30.0	4.17	26.7	3.75	24.4	3.47	18.9	2.76	
24.0	18.0	34.4	4.74	33.3	4.60	31.1	4.31	30.0	4.17	26.7	3.75	24.4	3.47	18.9	2.76	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
			TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
70%	°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
	-24.9	-25.0	19.5	7.94	19.0	7.82	17.9	7.57	17.3	7.43	15.5	6.97	14.4	6.63	11.3	5.63
	-19.8	-20.0	23.0	8.34	22.3	8.19	21.0	7.89	20.3	7.73	18.3	7.21	16.9	6.82	13.4	5.74
	-14.7	-15.0	26.9	8.91	26.2	8.74	24.6	8.39	23.9	8.20	21.5	7.61	19.9	7.18	15.8	5.98
	-9.6	-10.0	30.1	9.02	29.2	8.81	27.2	8.38	26.3	8.16	23.3	7.45	21.4	6.94	16.5	5.56
	-4.4	-5.0	30.1	7.46	29.2	7.31	27.2	7.01	26.3	6.84	23.3	6.31	21.4	5.93	16.5	4.89
	-1.8	-2.5	30.1	6.79	29.2	6.66	27.2	6.39	26.3	6.25	23.3	5.78	21.4	5.44	16.5	4.50
	0.8	0.0	30.1	6.14	29.2	6.03	27.2	5.80	26.3	5.67	23.3	5.26	21.4	4.96	16.5	4.13
	2.8	2.0	30.1	5.64	29.2	5.55	27.2	5.34	26.3	5.23	23.3	4.87	21.4	4.60	16.5	3.83
	6.0	5.0	30.1	4.92	29.2	4.84	27.2	4.67	26.3	4.57	23.3	4.26	21.4	4.03	16.5	3.35
	7.0	6.0	30.1	4.65	29.2	4.57	27.2	4.41	26.3	4.33	23.3	4.05	21.4	3.84	16.5	3.23
	8.6	7.5	30.1	4.24	29.2	4.18	27.2	4.05	26.3	3.98	23.3	3.74	21.4	3.56	16.5	3.02
	11.2	10.0	30.1	4.19	29.2	4.07	27.2	3.82	26.3	3.70	23.3	3.33	21.4	3.12	16.5	2.69
16.4	15.0	30.1	4.19	29.2	4.07	27.2	3.82	26.3	3.70	23.3	3.33	21.4	3.08	16.5	2.46	
24.0	18.0	30.1	4.19	29.2	4.07	27.2	3.82	26.3	3.70	23.3	3.33	21.4	3.08	16.5	2.46	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
			TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
60%	°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
	-24.9	-25.0	20.6	8.32	20.0	8.19	18.8	7.91	18.2	7.76	16.3	7.28	15.1	6.92	11.9	5.87
	-19.8	-20.0	24.3	8.75	23.6	8.59	22.2	8.27	21.5	8.10	19.3	7.54	17.8	7.14	14.0	5.99
	-14.7	-15.0	25.8	8.34	25.0	8.12	23.3	7.71	22.5	7.50	20.0	6.86	18.3	6.42	14.2	5.24
	-9.6	-10.0	25.8	7.14	25.0	7.01	23.3	6.73	22.5	6.59	20.0	6.11	18.3	5.76	14.2	4.73
	-4.4	-5.0	25.8	5.99	25.0	5.89	23.3	5.68	22.5	5.56	20.0	5.19	18.3	4.90	14.2	4.10
	-1.8	-2.5	25.8	5.42	25.0	5.34	23.3	5.16	22.5	5.06	20.0	4.73	18.3	4.49	14.2	3.77
	0.8	0.0	25.8	4.88	25.0	4.81	23.3	4.66	22.5	4.58	20.0	4.30	18.3	4.08	14.2	3.45
	2.8	2.0	25.8	4.46	25.0	4.40	23.3	4.28	22.5	4.21	20.0	3.96	18.3	3.77	14.2	3.19
	6.0	5.0	25.8	3.79	25.0	3.75	23.3	3.66	22.5	3.60	20.0	3.41	18.3	3.26	14.2	2.78
	7.0	6.0	25.8	3.64	25.0	3.54	23.3	3.45	22.5	3.41	20.0	3.24	18.3	3.10	14.2	2.68
	8.6	7.5	25.8	3.64	25.0	3.54	23.3	3.33	22.5	3.22	20.0	2.99	18.3	2.87	14.2	2.51
	11.2	10.0	25.8	3.64	25.0	3.54	23.3	3.33	22.5	3.22	20.0	2.90	18.3	2.69	14.2	2.23
16.4	15.0	25.8	3.64	25.0	3.54	23.3	3.33	22.5	3.22	20.0	2.90	18.3	2.69	14.2	2.16	
24.0	18.0	25.8	3.64	25.0	3.54	23.3	3.33	22.5	3.22	20.0	2.90	18.3	2.69	14.2	2.16	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-12ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
50%	-24.9	-25.0	21.5	8.59	20.8	8.42	19.4	8.07	18.8	7.89	16.7	7.32	15.3	6.91	11.8	5.76
	-19.8	-20.0	21.5	7.41	20.8	7.25	19.4	6.94	18.8	6.78	16.7	6.26	15.3	5.90	11.8	4.90
	-14.7	-15.0	21.5	6.62	20.8	6.51	19.4	6.25	18.8	6.10	16.7	5.59	15.3	5.25	11.8	4.33
	-9.6	-10.0	21.5	5.64	20.8	5.56	19.4	5.37	18.8	5.27	16.7	4.93	15.3	4.67	11.8	3.92
	-4.4	-5.0	21.5	4.69	20.8	4.63	19.4	4.50	18.8	4.42	16.7	4.16	15.3	3.96	11.8	3.36
	-1.8	-2.5	21.5	4.23	20.8	4.18	19.4	4.07	18.8	4.01	16.7	3.79	15.3	3.61	11.8	3.09
	0.8	0.0	21.5	3.78	20.8	3.75	19.4	3.66	18.8	3.61	16.7	3.42	15.3	3.27	11.8	2.81
	2.8	2.0	21.5	3.40	20.8	3.37	19.4	3.30	18.8	3.26	16.7	3.11	15.3	2.98	11.8	2.59
	6.0	5.0	21.5	3.10	20.8	3.01	19.4	2.83	18.8	2.76	16.7	2.67	15.3	2.58	11.8	2.27
	7.0	6.0	21.5	3.10	20.8	3.01	19.4	2.83	18.8	2.74	16.7	2.53	15.3	2.45	11.8	2.18
	8.6	7.5	21.5	3.10	20.8	3.01	19.4	2.83	18.8	2.74	16.7	2.48	15.3	2.30	11.8	2.04
	11.2	10.0	21.5	3.10	20.8	3.01	19.4	2.83	18.8	2.74	16.7	2.48	15.3	2.30	11.8	1.86
16.4	15.0	21.5	3.10	20.8	3.01	19.4	2.83	18.8	2.74	16.7	2.48	15.3	2.30	11.8	1.86	
24.0	18.0	21.5	3.10	20.8	3.01	19.4	2.83	18.8	2.74	16.7	2.48	15.3	2.30	11.8	1.86	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
40%	-24.9	-25.0	17.2	6.52	16.7	6.40	15.6	6.16	15.0	6.04	13.3	5.63	12.2	5.34	9.4	4.51
	-19.8	-20.0	17.2	5.78	16.7	5.66	15.6	5.43	15.0	5.31	13.3	4.92	12.2	4.65	9.4	3.90
	-14.7	-15.0	17.2	5.07	16.7	5.00	15.6	4.85	15.0	4.76	13.3	4.44	12.2	4.16	9.4	3.47
	-9.6	-10.0	17.2	4.30	16.7	4.25	15.6	4.13	15.0	4.07	13.3	3.84	12.2	3.66	9.4	3.12
	-4.4	-5.0	17.2	3.55	16.7	3.51	15.6	3.44	15.0	3.39	13.3	3.23	12.2	3.10	9.4	2.67
	-1.8	-2.5	17.2	3.16	16.7	3.14	15.6	3.08	15.0	3.04	13.3	2.91	12.2	2.80	9.4	2.44
	0.8	0.0	17.2	2.77	16.7	2.75	15.6	2.72	15.0	2.70	13.3	2.60	12.2	2.51	9.4	2.22
	2.8	2.0	17.2	2.55	16.7	2.48	15.6	2.44	15.0	2.43	13.3	2.36	12.2	2.29	9.4	2.04
	6.0	5.0	17.2	2.55	16.7	2.48	15.6	2.34	15.0	2.27	13.3	2.05	12.2	1.98	9.4	1.80
	7.0	6.0	17.2	2.55	16.7	2.48	15.6	2.34	15.0	2.27	13.3	2.05	12.2	1.91	9.4	1.73
	8.6	7.5	17.2	2.55	16.7	2.48	15.6	2.34	15.0	2.27	13.3	2.05	12.2	1.91	9.4	1.62
	11.2	10.0	17.2	2.55	16.7	2.48	15.6	2.34	15.0	2.27	13.3	2.05	12.2	1.91	9.4	1.56
16.4	15.0	17.2	2.55	16.7	2.48	15.6	2.34	15.0	2.27	13.3	2.05	12.2	1.91	9.4	1.56	
24.0	18.0	17.2	2.55	16.7	2.48	15.6	2.34	15.0	2.27	13.3	2.05	12.2	1.91	9.4	1.56	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
30%	-24.9	-25.0	12.9	4.77	12.5	4.69	11.7	4.53	11.3	4.44	10.0	4.16	9.2	3.96	7.1	3.38
	-19.8	-20.0	12.9	4.28	12.5	4.20	11.7	4.02	11.3	3.94	10.0	3.67	9.2	3.47	7.1	2.94
	-14.7	-15.0	12.9	3.67	12.5	3.63	11.7	3.54	11.3	3.49	10.0	3.30	9.2	3.14	7.1	2.64
	-9.6	-10.0	12.9	3.09	12.5	3.07	11.7	3.01	11.3	2.97	10.0	2.83	9.2	2.72	7.1	2.36
	-4.4	-5.0	12.9	2.49	12.5	2.48	11.7	2.45	11.3	2.43	10.0	2.34	9.2	2.27	7.1	2.01
	-1.8	-2.5	12.9	2.20	12.5	2.19	11.7	2.18	11.3	2.17	10.0	2.11	9.2	2.05	7.1	1.84
	0.8	0.0	12.9	2.00	12.5	1.95	11.7	1.92	11.3	1.92	10.0	1.89	9.2	1.84	7.1	1.67
	2.8	2.0	12.9	2.00	12.5	1.95	11.7	1.84	11.3	1.79	10.0	1.71	9.2	1.69	7.1	1.55
	6.0	5.0	12.9	2.00	12.5	1.95	11.7	1.84	11.3	1.79	10.0	1.63	9.2	1.52	7.1	1.37
	7.0	6.0	12.9	2.00	12.5	1.95	11.7	1.84	11.3	1.79	10.0	1.63	9.2	1.52	7.1	1.32
	8.6	7.5	12.9	2.00	12.5	1.95	11.7	1.84	11.3	1.79	10.0	1.63	9.2	1.52	7.1	1.26
	11.2	10.0	12.9	2.00	12.5	1.95	11.7	1.84	11.3	1.79	10.0	1.63	9.2	1.52	7.1	1.26
16.4	15.0	12.9	2.00	12.5	1.95	11.7	1.84	11.3	1.79	10.0	1.63	9.2	1.52	7.1	1.26	
24.0	18.0	12.9	2.00	12.5	1.95	11.7	1.84	11.3	1.79	10.0	1.63	9.2	1.52	7.1	1.26	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-7. U-14ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
130%	-10.0	34.7	4.62	41.6	5.54	43.0	5.74	43.0	5.74	48.7	6.50	54.5	7.27	60.2	8.03
	-5.0	34.7	4.62	41.6	5.55	43.0	5.74	43.0	5.74	48.7	6.51	54.5	7.27	60.2	8.04
	0.0	34.7	4.63	41.6	5.55	43.0	5.75	43.0	5.75	48.7	6.51	54.5	7.28	60.2	8.04
	5.0	34.7	4.63	41.6	5.56	43.0	5.76	43.0	5.76	48.7	6.53	54.5	7.30	60.2	8.07
	10.0	34.7	4.64	41.6	5.57	43.0	5.79	43.0	5.79	48.7	6.58	54.5	7.37	60.2	8.14
	15.0	34.7	4.66	41.6	5.62	43.0	5.88	43.0	5.88	48.7	6.71	54.5	7.52	60.2	8.30
	20.0	34.7	4.78	41.6	5.81	43.0	6.17	43.0	6.17	48.7	7.06	54.5	8.26	60.2	9.61
	25.0	34.7	5.40	41.6	6.75	43.0	7.57	43.0	7.57	48.7	8.97	54.5	10.49	60.2	12.13
	30.0	34.7	6.80	41.6	8.46	43.0	9.39	43.0	9.39	48.7	11.08	54.5	12.89	59.5	14.42
	35.0	34.7	8.30	41.6	10.30	43.0	11.35	43.0	11.35	48.7	13.34	52.7	14.42	54.9	14.42
	40.0	34.7	9.91	41.6	12.27	43.0	13.46	43.0	13.46	46.5	14.42	48.6	14.42	50.7	14.42
43.0	34.7	10.94	41.6	13.54	42.3	14.42	42.3	14.42	44.3	14.42	46.1	14.15	47.3	13.52	
46.0	34.3	10.99	34.5	10.99	34.5	10.99	34.5	10.99	35.7	10.58	37.1	10.26	38.8	10.03	
52.0	14.4	4.28	15.3	4.28	15.3	4.28	15.3	4.28	17.0	4.43	18.9	4.59	20.9	4.76	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
120%	-10.0	32.0	4.27	38.4	5.12	42.0	5.60	42.0	5.60	47.6	6.35	53.2	7.10	58.8	7.85
	-5.0	32.0	4.27	38.4	5.12	42.0	5.61	42.0	5.61	47.6	6.36	53.2	7.11	58.8	7.85
	0.0	32.0	4.27	38.4	5.13	42.0	5.62	42.0	5.62	47.6	6.36	53.2	7.11	58.8	7.86
	5.0	32.0	4.28	38.4	5.14	42.0	5.62	42.0	5.62	47.6	6.38	53.2	7.13	58.8	7.88
	10.0	32.0	4.29	38.4	5.14	42.0	5.65	42.0	5.65	47.6	6.42	53.2	7.19	58.8	7.95
	15.0	32.0	4.31	38.4	5.19	42.0	5.74	42.0	5.74	47.6	6.54	53.2	7.34	58.8	8.11
	20.0	32.0	4.42	38.4	5.36	42.0	6.01	42.0	6.01	47.6	6.88	53.2	7.95	58.8	9.24
	25.0	32.0	4.99	38.4	6.21	42.0	7.32	42.0	7.32	47.6	8.67	53.2	10.12	58.8	11.69
	30.0	32.0	6.27	38.4	7.79	42.0	9.09	42.0	9.09	47.6	10.71	53.2	12.45	58.8	14.31
	35.0	32.0	7.65	38.4	9.48	42.0	10.99	42.0	10.99	47.6	12.91	52.3	14.42	54.5	14.42
	40.0	32.0	9.14	38.4	11.30	42.0	13.05	42.0	13.05	46.2	14.42	48.2	14.42	50.3	14.42
43.0	32.0	10.08	38.4	12.46	42.0	14.37	42.0	14.37	43.9	14.42	45.8	14.24	47.0	13.56	
46.0	31.7	10.97	34.3	11.03	34.3	11.03	34.3	11.03	35.4	10.58	36.8	10.24	38.3	9.98	
52.0	13.5	4.21	14.8	4.21	15.0	4.21	15.0	4.21	16.6	4.34	18.4	4.49	20.3	4.65	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
110%	-10.0	29.3	3.91	35.2	4.69	41.0	5.47	41.0	5.47	46.5	6.20	51.9	6.93	57.4	7.66
	-5.0	29.3	3.92	35.2	4.70	41.0	5.48	41.0	5.48	46.5	6.21	51.9	6.94	57.4	7.67
	0.0	29.3	3.92	35.2	4.70	41.0	5.48	41.0	5.48	46.5	6.21	51.9	6.94	57.4	7.67
	5.0	29.3	3.93	35.2	4.71	41.0	5.49	41.0	5.49	46.5	6.22	51.9	6.96	57.4	7.70
	10.0	29.3	3.93	35.2	4.72	41.0	5.51	41.0	5.51	46.5	6.26	51.9	7.02	57.4	7.76
	15.0	29.3	3.95	35.2	4.76	41.0	5.59	41.0	5.59	46.5	6.38	51.9	7.17	57.4	7.92
	20.0	29.3	4.05	35.2	4.92	41.0	5.85	41.0	5.85	46.5	6.70	51.9	7.65	57.4	8.88
	25.0	29.3	4.59	35.2	5.69	41.0	7.08	41.0	7.08	46.5	8.37	51.9	9.76	57.4	11.25
	30.0	29.3	5.76	35.2	7.13	41.0	8.80	41.0	8.80	46.5	10.35	51.9	12.01	57.4	13.79
	35.0	29.3	7.02	35.2	8.67	41.0	10.64	41.0	10.64	46.5	12.49	51.8	14.39	54.0	14.42
	40.0	29.3	8.38	35.2	10.33	41.0	12.65	41.0	12.65	45.8	14.42	47.8	14.42	49.9	14.42
43.0	29.3	9.24	35.2	11.39	41.0	13.92	41.0	13.92	43.6	14.42	45.6	14.34	46.6	13.63	
46.0	29.0	10.05	34.2	11.08	34.2	11.08	34.2	11.08	35.2	10.60	36.4	10.22	37.9	9.94	
52.0	12.5	4.14	13.7	4.14	14.7	4.14	14.7	4.14	16.2	4.26	17.9	4.39	19.8	4.54	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	-10.0	26.7	3.56	32.0	4.27	37.3	4.98	40.0	5.34	45.3	6.05	50.7	6.76	56.0	7.47
	-5.0	26.7	3.56	32.0	4.27	37.3	4.99	40.0	5.34	45.3	6.06	50.7	6.77	56.0	7.48
	0.0	26.7	3.57	32.0	4.28	37.3	4.99	40.0	5.35	45.3	6.06	50.7	6.77	56.0	7.49
	5.0	26.7	3.57	32.0	4.29	37.3	5.00	40.0	5.35	45.3	6.07	50.7	6.79	56.0	7.51
	10.0	26.7	3.58	32.0	4.29	37.3	5.01	40.0	5.37	45.3	6.11	50.7	6.85	56.0	7.57
	15.0	26.7	3.59	32.0	4.33	37.3	5.07	40.0	5.45	45.3	6.21	50.7	6.98	56.0	7.73
	20.0	26.7	3.69	32.0	4.48	37.3	5.29	40.0	5.70	45.3	6.52	50.7	7.36	56.0	8.53
	25.0	26.7	4.19	32.0	5.18	37.3	6.26	40.0	6.84	45.3	8.07	50.7	9.40	56.0	10.83
	30.0	26.7	5.26	32.0	6.48	37.3	7.81	40.0	8.51	45.3	10.00	50.7	11.59	56.0	13.29
	35.0	26.7	6.40	32.0	7.88	37.3	9.47	40.0	10.30	45.3	12.07	50.7	13.95	53.5	14.42
	40.0	26.7	7.63	32.0	9.38	37.3	11.26	40.0	12.24	45.3	14.31	47.4	14.42	49.5	14.42
43.0	26.7	8.41	32.0	10.34	37.3	12.40	40.0	13.49	43.3	14.42	45.3	14.42	46.3	13.71	
46.0	26.4	9.14	31.7	11.25	33.7	11.44	34.0	11.13	34.9	10.62	36.1	10.22	37.5	9.90	
52.0	11.5	3.91	12.5	3.95	13.7	4.03	14.4	4.07	15.9	4.18	17.5	4.30	19.3	4.43	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-14ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
90%	-10.0	24.0	3.20	28.8	3.84	33.6	4.48	36.0	4.80	40.8	5.45	45.6	6.09	50.4	6.73
	-5.0	24.0	3.21	28.8	3.85	33.6	4.49	36.0	4.81	40.8	5.45	45.6	6.09	50.4	6.73
	0.0	24.0	3.21	28.8	3.85	33.6	4.49	36.0	4.81	40.8	5.46	45.6	6.10	50.4	6.74
	5.0	24.0	3.21	28.8	3.86	33.6	4.50	36.0	4.82	40.8	5.46	45.6	6.11	50.4	6.75
	10.0	24.0	3.22	28.8	3.87	33.6	4.51	36.0	4.83	40.8	5.48	45.6	6.14	50.4	6.81
	15.0	24.0	3.23	28.8	3.88	33.6	4.55	36.0	4.88	40.8	5.56	45.6	6.25	50.4	6.94
	20.0	24.0	3.30	28.8	4.00	33.6	4.71	36.0	5.07	40.8	5.80	45.6	6.54	50.4	7.27
	25.0	24.0	3.72	28.8	4.54	33.6	5.45	36.0	5.93	40.8	6.95	45.6	8.04	50.4	9.22
	30.0	24.0	4.65	28.8	5.70	33.6	6.82	36.0	7.41	40.8	8.65	45.6	9.97	50.4	11.38
	35.0	24.0	5.67	28.8	6.93	33.6	8.28	36.0	8.98	40.8	10.47	45.6	12.05	50.4	13.71
	40.0	24.0	6.76	28.8	8.27	33.6	9.86	36.0	10.70	40.8	12.44	45.6	14.29	47.7	14.42
43.0	24.0	7.46	28.8	9.11	33.6	10.87	36.0	11.79	40.8	13.71	43.6	14.42	45.3	14.23	
46.0	23.8	8.11	28.5	9.91	33.3	11.83	33.5	11.48	34.1	10.83	34.9	10.30	35.9	9.87	
52.0	11.0	3.81	11.8	3.80	12.8	3.82	13.3	3.83	14.5	3.88	15.8	3.95	17.2	4.02	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
80%	-10.0	21.3	2.85	25.6	3.42	29.9	3.99	32.0	4.27	36.3	4.84	40.5	5.41	44.8	5.98
	-5.0	21.3	2.85	25.6	3.42	29.9	3.99	32.0	4.27	36.3	4.85	40.5	5.42	44.8	5.99
	0.0	21.3	2.85	25.6	3.42	29.9	3.99	32.0	4.28	36.3	4.85	40.5	5.42	44.8	5.99
	5.0	21.3	2.86	25.6	3.43	29.9	4.00	32.0	4.29	36.3	4.86	40.5	5.43	44.8	6.00
	10.0	21.3	2.86	25.6	3.44	29.9	4.01	32.0	4.29	36.3	4.87	40.5	5.45	44.8	6.03
	15.0	21.3	2.88	25.6	3.45	29.9	4.03	32.0	4.32	36.3	4.92	40.5	5.52	44.8	6.12
	20.0	21.3	2.91	25.6	3.52	29.9	4.15	32.0	4.46	36.3	5.10	40.5	5.74	44.8	6.39
	25.0	21.3	3.23	25.6	3.96	29.9	4.69	32.0	5.09	36.3	5.91	40.5	6.80	44.8	7.75
	30.0	21.3	4.08	25.6	4.96	29.9	5.89	32.0	6.37	36.3	7.40	40.5	8.48	44.8	9.62
	35.0	21.3	4.98	25.6	6.04	29.9	7.17	32.0	7.74	36.3	8.98	40.5	10.28	44.8	11.64
	40.0	21.3	5.94	25.6	7.21	29.9	8.55	32.0	9.25	36.3	10.70	40.5	12.22	44.8	13.82
43.0	21.3	6.54	25.6	7.95	29.9	9.43	32.0	10.19	36.3	11.79	40.5	13.46	43.6	14.42	
46.0	21.1	7.12	25.3	8.64	29.6	10.25	31.7	11.09	33.5	11.28	34.0	10.61	34.7	10.04	
52.0	10.6	3.75	11.2	3.68	11.9	3.65	12.3	3.64	13.3	3.64	14.3	3.65	15.4	3.67	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
70%	-10.0	18.7	2.49	22.4	2.99	26.1	3.49	28.0	3.74	31.7	4.24	35.5	4.74	39.2	5.23
	-5.0	18.7	2.49	22.4	2.99	26.1	3.49	28.0	3.74	31.7	4.24	35.5	4.74	39.2	5.24
	0.0	18.7	2.50	22.4	3.00	26.1	3.50	28.0	3.75	31.7	4.24	35.5	4.74	39.2	5.24
	5.0	18.7	2.50	22.4	3.00	26.1	3.50	28.0	3.75	31.7	4.25	35.5	4.75	39.2	5.25
	10.0	18.7	2.51	22.4	3.01	26.1	3.51	28.0	3.76	31.7	4.26	35.5	4.76	39.2	5.26
	15.0	18.7	2.52	22.4	3.02	26.1	3.52	28.0	3.77	31.7	4.28	35.5	4.80	39.2	5.32
	20.0	18.7	2.54	22.4	3.06	26.1	3.59	28.0	3.86	31.7	4.41	35.5	4.96	39.2	5.52
	25.0	18.7	2.76	22.4	3.38	26.1	4.01	28.0	4.31	31.7	4.97	35.5	5.67	39.2	6.41
	30.0	18.7	3.55	22.4	4.26	26.1	5.02	28.0	5.41	31.7	6.24	35.5	7.10	39.2	8.02
	35.0	18.7	4.32	22.4	5.20	26.1	6.12	28.0	6.59	31.7	7.60	35.5	8.64	39.2	9.73
	40.0	18.7	5.15	22.4	6.20	26.1	7.31	28.0	7.88	31.7	9.06	35.5	10.30	39.2	11.58
43.0	18.7	5.67	22.4	6.84	26.1	8.06	28.0	8.69	31.7	10.00	35.5	11.35	39.2	12.77	
46.0	18.5	6.17	22.2	7.44	25.9	8.77	27.7	9.46	31.4	10.88	33.4	11.24	33.8	10.52	
52.0	10.3	3.73	10.7	3.62	11.2	3.53	11.5	3.49	12.2	3.44	13.0	3.41	13.8	3.38	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
60%	-10.0	16.0	2.14	19.2	2.56	22.4	2.99	24.0	3.20	27.2	3.63	30.4	4.06	33.6	4.49
	-5.0	16.0	2.14	19.2	2.57	22.4	2.99	24.0	3.21	27.2	3.64	30.4	4.06	33.6	4.49
	0.0	16.0	2.14	19.2	2.57	22.4	3.00	24.0	3.21	27.2	3.64	30.4	4.07	33.6	4.50
	5.0	16.0	2.14	19.2	2.57	22.4	3.00	24.0	3.22	27.2	3.64	30.4	4.07	33.6	4.50
	10.0	16.0	2.15	19.2	2.58	22.4	3.01	24.0	3.22	27.2	3.65	30.4	4.08	33.6	4.51
	15.0	16.0	2.16	19.2	2.59	22.4	3.02	24.0	3.23	27.2	3.66	30.4	4.10	33.6	4.54
	20.0	16.0	2.17	19.2	2.61	22.4	3.05	24.0	3.28	27.2	3.74	30.4	4.20	33.6	4.67
	25.0	16.0	2.31	19.2	2.82	22.4	3.35	24.0	3.60	27.2	4.13	30.4	4.65	33.6	5.22
	30.0	16.0	3.04	19.2	3.61	22.4	4.21	24.0	4.53	27.2	5.17	30.4	5.85	33.6	6.55
	35.0	16.0	3.69	19.2	4.40	22.4	5.14	24.0	5.51	27.2	6.31	30.4	7.13	33.6	7.99
	40.0	16.0	4.39	19.2	5.25	22.4	6.14	24.0	6.60	27.2	7.54	30.4	8.52	33.6	9.53
43.0	16.0	4.84	19.2	5.79	22.4	6.78	24.0	7.28	27.2	8.32	30.4	9.40	33.6	10.52	
46.0	15.8	5.26	19.0	6.29	22.2	7.37	23.8	7.92	26.9	9.06	30.1	10.23	33.3	11.45	
52.0	10.0	3.77	10.3	3.61	10.6	3.47	10.8	3.41	11.3	3.31	11.9	3.23	12.5	3.16	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-14ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
50%	-10.0	13.3	1.78	16.0	2.14	18.7	2.49	20.0	2.67	22.7	3.03	25.3	3.38	28.0	3.74
	-5.0	13.3	1.78	16.0	2.14	18.7	2.50	20.0	2.67	22.7	3.03	25.3	3.39	28.0	3.74
	0.0	13.3	1.79	16.0	2.14	18.7	2.50	20.0	2.68	22.7	3.03	25.3	3.39	28.0	3.75
	5.0	13.3	1.79	16.0	2.15	18.7	2.50	20.0	2.68	22.7	3.04	25.3	3.40	28.0	3.75
	10.0	13.3	1.79	16.0	2.15	18.7	2.51	20.0	2.69	22.7	3.04	25.3	3.40	28.0	3.76
	15.0	13.3	1.80	16.0	2.16	18.7	2.52	20.0	2.70	22.7	3.05	25.3	3.41	28.0	3.77
	20.0	13.3	1.81	16.0	2.17	18.7	2.53	20.0	2.71	22.7	3.09	25.3	3.46	28.0	3.84
	25.0	13.3	1.88	16.0	2.29	18.7	2.71	20.0	2.91	22.7	3.34	25.3	3.77	28.0	4.20
	30.0	13.3	2.56	16.0	3.01	18.7	3.47	20.0	3.71	22.7	4.20	25.3	4.71	28.0	5.23
	35.0	13.3	3.10	16.0	3.66	18.7	4.23	20.0	4.51	22.7	5.13	25.3	5.75	28.0	6.40
	40.0	13.3	3.68	16.0	4.35	18.7	5.05	20.0	5.40	22.7	6.13	25.3	6.88	28.0	7.65
43.0	13.3	4.04	16.0	4.79	18.7	5.57	20.0	5.96	22.7	6.77	25.3	7.60	28.0	8.45	
46.0	13.2	4.39	15.8	5.21	18.5	6.05	19.8	6.49	22.4	7.37	25.1	8.27	27.7	9.20	
52.0	9.9	3.90	10.0	3.68	10.2	3.49	10.3	3.41	10.6	3.27	11.0	3.14	11.4	3.03	
40%	-10.0	10.7	1.43	12.8	1.71	14.9	2.00	16.0	2.14	18.1	2.42	20.3	2.71	22.4	2.99
	-5.0	10.7	1.43	12.8	1.71	14.9	2.00	16.0	2.14	18.1	2.43	20.3	2.71	22.4	3.00
	0.0	10.7	1.43	12.8	1.71	14.9	2.00	16.0	2.14	18.1	2.43	20.3	2.71	22.4	3.00
	5.0	10.7	1.43	12.8	1.72	14.9	2.00	16.0	2.15	18.1	2.43	20.3	2.72	22.4	3.00
	10.0	10.7	1.43	12.8	1.72	14.9	2.01	16.0	2.15	18.1	2.44	20.3	2.72	22.4	3.01
	15.0	10.7	1.44	12.8	1.73	14.9	2.01	16.0	2.16	18.1	2.45	20.3	2.73	22.4	3.02
	20.0	10.7	1.45	12.8	1.74	14.9	2.03	16.0	2.17	18.1	2.46	20.3	2.75	22.4	3.04
	25.0	10.7	1.48	12.8	1.79	14.9	2.10	16.0	2.26	18.1	2.59	20.3	2.92	22.4	3.25
	30.0	10.7	2.12	12.8	2.45	14.9	2.78	16.0	2.96	18.1	3.31	20.3	3.68	22.4	4.05
	35.0	10.7	2.54	12.8	2.96	14.9	3.38	16.0	3.59	18.1	4.04	20.3	4.50	22.4	4.96
	40.0	10.7	2.99	12.8	3.50	14.9	4.02	16.0	4.29	18.1	4.83	20.3	5.37	22.4	5.93
43.0	10.7	3.28	12.8	3.85	14.9	4.43	16.0	4.73	18.1	5.32	20.3	5.93	22.4	6.55	
46.0	10.6	3.56	12.7	4.18	14.8	4.82	15.8	5.14	18.0	5.79	20.1	6.46	22.2	7.14	
52.0	8.6	3.55	9.8	3.89	9.9	3.65	10.0	3.54	10.1	3.35	10.3	3.17	10.5	3.02	
30%	-10.0	8.0	1.07	9.6	1.28	11.2	1.50	12.0	1.60	13.6	1.82	15.2	2.03	16.8	2.25
	-5.0	8.0	1.07	9.6	1.29	11.2	1.50	12.0	1.61	13.6	1.82	15.2	2.03	16.8	2.25
	0.0	8.0	1.07	9.6	1.29	11.2	1.50	12.0	1.61	13.6	1.82	15.2	2.04	16.8	2.25
	5.0	8.0	1.07	9.6	1.29	11.2	1.50	12.0	1.61	13.6	1.82	15.2	2.04	16.8	2.25
	10.0	8.0	1.08	9.6	1.29	11.2	1.51	12.0	1.61	13.6	1.83	15.2	2.04	16.8	2.26
	15.0	8.0	1.08	9.6	1.30	11.2	1.51	12.0	1.62	13.6	1.84	15.2	2.05	16.8	2.27
	20.0	8.0	1.09	9.6	1.31	11.2	1.52	12.0	1.63	13.6	1.85	15.2	2.06	16.8	2.28
	25.0	8.0	1.11	9.6	1.32	11.2	1.55	12.0	1.66	13.6	1.89	15.2	2.12	16.8	2.35
	30.0	8.0	1.70	9.6	1.93	11.2	2.16	12.0	2.28	13.6	2.51	15.2	2.76	16.8	3.00
	35.0	8.0	2.01	9.6	2.30	11.2	2.60	12.0	2.74	13.6	3.05	15.2	3.36	16.8	3.67
	40.0	8.0	2.35	9.6	2.71	11.2	3.07	12.0	3.25	13.6	3.62	15.2	4.00	16.8	4.38
43.0	8.0	2.56	9.6	2.96	11.2	3.37	12.0	3.58	13.6	3.99	15.2	4.41	16.8	4.83	
46.0	7.9	2.76	9.5	3.21	11.1	3.65	11.9	3.88	13.5	4.33	15.0	4.79	16.6	5.26	
52.0	6.5	2.76	7.8	3.20	9.1	3.65	9.7	3.87	9.9	3.67	9.9	3.44	10.0	3.23	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-8. U-14ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
130%	-24.9	-25.0	22.5	9.98	21.9	9.84	20.7	9.52	20.1	9.36	18.2	8.80	16.9	8.37	13.5	7.12
	-19.8	-20.0	26.2	10.34	25.5	10.18	24.1	9.82	23.4	9.64	21.3	9.01	19.8	8.56	15.8	7.23
	-14.7	-15.0	30.4	10.85	29.6	10.67	28.0	10.27	27.2	10.06	24.8	9.37	23.0	8.87	18.5	7.44
	-9.6	-10.0	35.2	11.61	34.3	11.39	32.6	10.94	31.7	10.70	28.9	9.94	26.9	9.39	21.7	7.83
	-4.4	-5.0	40.9	12.62	40.0	12.39	37.9	11.89	36.9	11.61	33.6	10.72	31.4	10.07	25.3	8.31
	-1.8	-2.5	44.1	12.97	43.0	12.74	40.8	12.22	39.7	11.95	36.2	11.05	33.8	10.40	27.3	8.58
	0.8	0.0	47.4	13.25	46.3	13.00	43.9	12.45	42.7	12.16	38.9	11.23	36.3	10.56	29.4	8.70
	2.8	2.0	50.2	13.45	49.0	13.18	46.5	12.62	45.3	12.33	41.3	11.38	38.6	10.70	30.5	8.46
	6.0	5.0	54.9	13.80	53.7	13.56	50.2	12.60	48.4	12.10	43.0	10.66	39.4	9.73	30.5	7.49
	7.0	6.0	55.5	13.45	53.8	12.96	50.2	12.01	48.4	11.55	43.0	10.18	39.4	9.30	30.5	7.18
	8.6	7.5	55.5	12.46	53.8	12.02	50.2	11.15	48.4	10.73	43.0	9.48	39.4	8.67	30.5	6.72
	11.2	10.0	55.5	10.90	53.8	10.53	50.2	9.79	48.4	9.43	43.0	8.37	39.4	7.68	30.5	6.00
16.4	15.0	55.5	8.11	53.8	7.87	50.2	7.37	48.4	7.13	43.0	6.40	39.4	5.92	30.5	4.73	
24.0	18.0	55.5	7.46	53.8	7.24	50.2	6.79	48.4	6.57	43.0	5.90	39.4	5.45	30.5	4.34	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
120%	-24.9	-25.0	22.4	9.87	21.8	9.73	20.6	9.43	20.0	9.26	18.1	8.71	16.8	8.29	13.4	7.05
	-19.8	-20.0	26.1	10.24	25.5	10.08	24.1	9.73	23.4	9.54	21.2	8.93	19.7	8.47	15.8	7.16
	-14.7	-15.0	30.3	10.76	29.5	10.57	28.0	10.18	27.2	9.97	24.7	9.29	23.0	8.79	18.5	7.38
	-9.6	-10.0	35.2	11.51	34.3	11.30	32.5	10.85	31.6	10.62	28.8	9.86	26.8	9.31	21.6	7.76
	-4.4	-5.0	40.9	12.50	39.9	12.27	37.9	11.79	36.8	11.52	33.5	10.65	31.3	10.01	25.2	8.22
	-1.8	-2.5	44.1	12.83	43.0	12.59	40.8	12.09	39.6	11.82	36.1	10.94	33.7	10.29	27.2	8.49
	0.8	0.0	47.4	13.09	46.2	12.84	43.8	12.30	42.6	12.02	38.8	11.11	36.2	10.44	29.3	8.61
	2.8	2.0	50.2	13.28	48.9	13.02	46.5	12.47	45.2	12.18	41.3	11.26	38.5	10.58	29.8	8.14
	6.0	5.0	54.3	13.35	52.5	12.88	49.0	11.95	47.3	11.50	42.0	10.17	38.5	9.30	29.8	7.21
	7.0	6.0	54.3	12.71	52.5	12.26	49.0	11.39	47.3	10.97	42.0	9.71	38.5	8.89	29.8	6.91
	8.6	7.5	54.3	11.77	52.5	11.36	49.0	10.57	47.3	10.18	42.0	9.04	38.5	8.29	29.8	6.47
	11.2	10.0	54.3	10.28	52.5	9.94	49.0	9.28	47.3	8.95	42.0	7.98	38.5	7.34	29.8	5.77
16.4	15.0	54.3	7.63	52.5	7.40	49.0	6.96	47.3	6.74	42.0	6.09	38.5	5.65	29.8	4.54	
24.0	18.0	54.3	7.30	52.5	7.08	49.0	6.65	47.3	6.43	42.0	5.77	38.5	5.34	29.8	4.25	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
110%	-24.9	-25.0	22.3	9.77	21.7	9.64	20.5	9.33	19.9	9.17	18.0	8.62	16.7	8.21	13.3	6.99
	-19.8	-20.0	26.1	10.14	25.4	9.98	24.0	9.63	23.3	9.45	21.1	8.84	19.6	8.39	15.7	7.09
	-14.7	-15.0	30.2	10.67	29.5	10.48	27.9	10.09	27.1	9.88	24.6	9.20	22.9	8.71	18.4	7.31
	-9.6	-10.0	35.1	11.43	34.3	11.22	32.5	10.77	31.5	10.54	28.7	9.78	26.7	9.23	21.6	7.70
	-4.4	-5.0	40.9	12.38	39.9	12.16	37.8	11.68	36.8	11.42	33.5	10.57	31.2	9.94	25.1	8.18
	-1.8	-2.5	44.0	12.68	42.9	12.45	40.7	11.96	39.6	11.69	36.0	10.82	33.6	10.19	27.1	8.41
	0.8	0.0	47.3	12.94	46.2	12.69	43.8	12.16	42.5	11.88	38.8	10.98	36.1	10.33	29.0	8.45
	2.8	2.0	50.1	13.12	48.9	12.87	46.4	12.33	45.1	12.04	41.0	11.06	37.6	10.11	29.0	7.83
	6.0	5.0	53.0	12.61	51.3	12.18	47.8	11.34	46.1	10.92	41.0	9.69	37.6	8.89	29.0	6.93
	7.0	6.0	53.0	12.00	51.3	11.59	47.8	10.80	46.1	10.41	41.0	9.25	37.6	8.49	29.0	6.64
	8.6	7.5	53.0	11.10	51.3	10.74	47.8	10.02	46.1	9.66	41.0	8.61	37.6	7.92	29.0	6.22
	11.2	10.0	53.0	9.69	51.3	9.38	47.8	8.78	46.1	8.48	41.0	7.59	37.6	7.01	29.0	5.55
16.4	15.0	53.0	7.16	51.3	6.97	47.8	6.57	46.1	6.38	41.0	5.78	37.6	5.39	29.0	4.37	
24.0	18.0	53.0	7.14	51.3	6.93	47.8	6.50	46.1	6.29	41.0	5.65	37.6	5.23	29.0	4.16	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
100%	-24.9	-25.0	22.3	9.67	21.7	9.54	20.5	9.24	19.8	9.08	18.0	8.54	16.7	8.13	13.3	6.92
	-19.8	-20.0	26.0	10.05	25.3	9.89	23.9	9.54	23.2	9.36	21.0	8.76	19.5	8.31	15.6	7.02
	-14.7	-15.0	30.2	10.57	29.4	10.39	27.8	10.00	27.0	9.79	24.5	9.12	22.8	8.63	18.3	7.25
	-9.6	-10.0	35.1	11.34	34.2	11.13	32.4	10.69	31.5	10.46	28.6	9.71	26.7	9.16	21.5	7.63
	-4.4	-5.0	40.8	12.25	39.8	12.04	37.8	11.57	36.7	11.32	33.4	10.49	31.1	9.87	25.0	8.13
	-1.8	-2.5	44.0	12.54	42.9	12.31	40.7	11.82	39.5	11.56	35.9	10.70	33.5	10.08	27.0	8.33
	0.8	0.0	47.3	12.78	46.1	12.54	43.7	12.02	42.5	11.74	38.7	10.86	36.0	10.21	28.3	8.13
	2.8	2.0	50.1	12.97	48.9	12.72	46.4	12.19	45.0	11.88	40.0	10.54	36.7	9.67	28.3	7.53
	6.0	5.0	51.7	11.90	50.0	11.51	46.7	10.74	45.0	10.36	40.0	9.23	36.7	8.48	28.3	6.65
	7.0	6.0	51.7	11.32	50.0	10.95	46.7	10.23	45.0	9.86	40.0	8.80	36.7	8.10	28.3	6.37
	8.6	7.5	51.7	10.45	50.0	10.12	46.7	9.47	45.0	9.14	40.0	8.18	36.7	7.54	28.3	5.97
	11.2	10.0	51.7	9.10	50.0	8.83	46.7	8.29	45.0	8.02	40.0	7.22	36.7	6.69	28.3	5.34
16.4	15.0	51.7	6.98	50.0	6.77	46.7	6.36	45.0	6.15	40.0	5.53	36.7	5.12	28.3	4.14	
24.0	18.0	51.7	6.98	50.0	6.77	46.7	6.36	45.0	6.15	40.0	5.53	36.7	5.11	28.3	4.08	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-14ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
90%	-24.9	-25.0	22.0	9.32	21.4	9.19	20.2	8.90	19.6	8.75	17.7	8.23	16.4	7.84	13.0	6.68
	-19.8	-20.0	25.8	9.70	25.1	9.55	23.7	9.21	23.0	9.04	20.8	8.45	19.3	8.02	15.3	6.79
	-14.7	-15.0	30.0	10.25	29.2	10.07	27.6	9.69	26.8	9.49	24.3	8.84	22.5	8.36	18.0	7.02
	-9.6	-10.0	35.0	11.09	34.1	10.87	32.2	10.35	31.3	10.17	28.4	9.43	26.4	8.90	21.2	7.41
	-4.4	-5.0	40.8	11.77	39.7	11.57	37.6	11.13	36.5	10.90	33.1	10.12	30.8	9.54	24.7	7.90
	-1.8	-2.5	43.9	12.01	42.8	11.79	40.5	11.33	39.3	11.08	35.7	10.27	33.0	9.61	25.5	7.59
	0.8	0.0	46.5	11.91	45.0	11.56	42.0	10.85	40.5	10.50	36.0	9.43	33.0	8.72	25.5	6.93
	2.8	2.0	46.5	10.87	45.0	10.56	42.0	9.94	40.5	9.62	36.0	8.67	33.0	8.04	25.5	6.46
	6.0	5.0	46.5	9.47	45.0	9.24	42.0	8.76	40.5	8.51	36.0	7.75	33.0	7.19	25.5	5.75
	7.0	6.0	46.5	9.23	45.0	8.97	42.0	8.45	40.5	8.19	36.0	7.40	33.0	6.87	25.5	5.51
	8.6	7.5	46.5	8.51	45.0	8.28	42.0	7.81	40.5	7.58	36.0	6.87	33.0	6.39	25.5	5.17
	11.2	10.0	46.5	7.37	45.0	7.19	42.0	6.82	40.5	6.63	36.0	6.05	33.0	5.66	25.5	4.62
16.4	15.0	46.5	6.33	45.0	6.15	42.0	5.77	40.5	5.59	36.0	5.03	33.0	4.66	25.5	3.72	
24.0	18.0	46.5	6.33	45.0	6.15	42.0	5.77	40.5	5.59	36.0	5.03	33.0	4.66	25.5	3.72	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
80%	-24.9	-25.0	22.0	9.07	21.4	8.94	20.1	8.66	19.5	8.51	17.6	8.01	16.3	7.63	12.9	6.51
	-19.8	-20.0	25.8	9.47	25.1	9.31	23.6	8.98	22.9	8.81	20.7	8.24	19.1	7.82	15.2	6.62
	-14.7	-15.0	30.0	10.04	29.2	9.86	27.6	9.48	26.8	9.28	24.2	8.64	22.4	8.18	17.9	6.86
	-9.6	-10.0	35.1	10.87	34.2	10.68	32.3	10.26	31.3	10.02	28.4	9.25	26.3	8.72	21.0	7.25
	-4.4	-5.0	40.9	11.41	39.9	11.22	37.3	10.66	36.0	10.34	32.0	9.37	29.3	8.71	22.7	7.00
	-1.8	-2.5	41.3	10.46	40.0	10.20	37.3	9.65	36.0	9.38	32.0	8.53	29.3	7.94	22.7	6.44
	0.8	0.0	41.3	9.35	40.0	9.14	37.3	8.71	36.0	8.48	32.0	7.77	29.3	7.27	22.7	5.93
	2.8	2.0	41.3	8.65	40.0	8.46	37.3	8.07	36.0	7.87	32.0	7.23	29.3	6.77	22.7	5.54
	6.0	5.0	41.3	7.67	40.0	7.51	37.3	7.17	36.0	7.00	32.0	6.44	29.3	6.03	22.7	4.93
	7.0	6.0	41.3	7.41	40.0	7.24	37.3	6.88	36.0	6.70	32.0	6.14	29.3	5.75	22.7	4.72
	8.6	7.5	41.3	6.81	40.0	6.66	37.3	6.35	36.0	6.19	32.0	5.70	29.3	5.35	22.7	4.42
	11.2	10.0	41.3	5.86	40.0	5.75	37.3	5.51	36.0	5.39	32.0	5.00	29.3	4.72	22.7	3.96
16.4	15.0	41.3	5.69	40.0	5.53	37.3	5.19	36.0	5.03	32.0	4.53	29.3	4.20	22.7	3.37	
24.0	18.0	41.3	5.69	40.0	5.53	37.3	5.19	36.0	5.03	32.0	4.53	29.3	4.20	22.7	3.37	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
70%	-24.9	-25.0	22.2	9.00	21.6	8.87	20.3	8.58	19.7	8.44	17.7	7.93	16.4	7.56	12.9	6.45
	-19.8	-20.0	26.1	9.42	25.4	9.26	23.9	8.93	23.1	8.75	20.8	8.18	19.3	7.76	15.3	6.57
	-14.7	-15.0	30.5	10.02	29.7	9.84	28.0	9.46	27.1	9.26	24.5	8.61	22.7	8.14	18.0	6.82
	-9.6	-10.0	35.7	10.81	34.8	10.63	32.7	10.19	31.5	9.90	28.0	8.99	25.7	8.34	19.8	6.72
	-4.4	-5.0	36.2	9.09	35.0	8.91	32.7	8.52	31.5	8.32	28.0	7.67	25.7	7.21	19.8	5.94
	-1.8	-2.5	36.2	8.31	35.0	8.15	32.7	7.81	31.5	7.63	28.0	7.05	25.7	6.63	19.8	5.48
	0.8	0.0	36.2	7.54	35.0	7.40	32.7	7.10	31.5	6.95	28.0	6.44	25.7	6.07	19.8	5.04
	2.8	2.0	36.2	6.95	35.0	6.83	32.7	6.57	31.5	6.42	28.0	5.97	25.7	5.63	19.8	4.70
	6.0	5.0	36.2	6.11	35.0	6.01	32.7	5.79	31.5	5.67	28.0	5.28	25.7	4.98	19.8	4.15
	7.0	6.0	36.2	5.83	35.0	5.73	32.7	5.51	31.5	5.40	28.0	5.02	25.7	4.75	19.8	4.00
	8.6	7.5	36.2	5.34	35.0	5.25	32.7	5.07	31.5	4.97	28.0	4.65	25.7	4.42	19.8	3.74
	11.2	10.0	36.2	5.05	35.0	4.90	32.7	4.61	31.5	4.47	28.0	4.07	25.7	3.89	19.8	3.34
16.4	15.0	36.2	5.05	35.0	4.90	32.7	4.61	31.5	4.47	28.0	4.03	25.7	3.74	19.8	3.02	
24.0	18.0	36.2	5.05	35.0	4.90	32.7	4.61	31.5	4.47	28.0	4.03	25.7	3.74	19.8	3.02	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
60%	-24.9	-25.0	23.0	9.21	22.4	9.07	21.0	8.78	20.4	8.62	18.3	8.10	16.9	7.71	13.3	6.58
	-19.8	-20.0	27.1	9.66	26.3	9.49	24.8	9.15	24.0	8.96	21.6	8.37	19.9	7.94	15.7	6.70
	-14.7	-15.0	31.0	9.98	30.0	9.78	28.0	9.30	27.0	9.05	24.0	8.28	22.0	7.75	17.0	6.34
	-9.6	-10.0	31.0	8.64	30.0	8.48	28.0	8.14	27.0	7.96	24.0	7.38	22.0	6.95	17.0	5.70
	-4.4	-5.0	31.0	7.29	30.0	7.17	28.0	6.91	27.0	6.76	24.0	6.30	22.0	5.96	17.0	4.98
	-1.8	-2.5	31.0	6.63	30.0	6.52	28.0	6.30	27.0	6.17	24.0	5.77	22.0	5.47	17.0	4.60
	0.8	0.0	31.0	5.98	30.0	5.90	28.0	5.71	27.0	5.60	24.0	5.25	22.0	4.99	17.0	4.22
	2.8	2.0	31.0	5.49	30.0	5.42	28.0	5.26	27.0	5.17	24.0	4.86	22.0	4.62	17.0	3.93
	6.0	5.0	31.0	4.76	30.0	4.70	28.0	4.57	27.0	4.49	24.0	4.24	22.0	4.05	17.0	3.45
	7.0	6.0	31.0	4.49	30.0	4.44	28.0	4.32	27.0	4.26	24.0	4.03	22.0	3.86	17.0	3.33
	8.6	7.5	31.0	4.41	30.0	4.28	28.0	4.03	27.0	3.92	24.0	3.73	22.0	3.58	17.0	3.12
	11.2	10.0	31.0	4.41	30.0	4.28	28.0	4.03	27.0	3.91	24.0	3.54	22.0	3.29	17.0	2.79
16.4	15.0	31.0	4.41	30.0	4.28	28.0	4.03	27.0	3.91	24.0	3.54	22.0	3.29	17.0	2.67	
24.0	18.0	31.0	4.41	30.0	4.28	28.0	4.03	27.0	3.91	24.0	3.54	22.0	3.29	17.0	2.67	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-14ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
50%	-24.9	-25.0	24.8	9.85	24.1	9.70	22.6	9.38	21.9	9.21	19.6	8.64	18.1	8.22	14.2	6.95
	-19.8	-20.0	25.8	8.93	25.0	8.75	23.3	8.33	22.5	8.13	20.0	7.52	18.3	7.09	14.2	5.91
	-14.7	-15.0	25.8	7.98	25.0	7.84	23.3	7.52	22.5	7.33	20.0	6.73	18.3	6.32	14.2	5.24
	-9.6	-10.0	25.8	6.83	25.0	6.72	23.3	6.50	22.5	6.37	20.0	5.96	18.3	5.65	14.2	4.75
	-4.4	-5.0	25.8	5.71	25.0	5.64	23.3	5.47	22.5	5.38	20.0	5.07	18.3	4.82	14.2	4.11
	-1.8	-2.5	25.8	5.17	25.0	5.11	23.3	4.97	22.5	4.90	20.0	4.63	18.3	4.42	14.2	3.79
	0.8	0.0	25.8	4.65	25.0	4.60	23.3	4.49	22.5	4.43	20.0	4.20	18.3	4.02	14.2	3.48
	2.8	2.0	25.8	4.25	25.0	4.21	23.3	4.12	22.5	4.06	20.0	3.86	18.3	3.70	14.2	3.21
	6.0	5.0	25.8	3.76	25.0	3.66	23.3	3.50	22.5	3.47	20.0	3.33	18.3	3.22	14.2	2.82
	7.0	6.0	25.8	3.76	25.0	3.66	23.3	3.45	22.5	3.35	20.0	3.17	18.3	3.07	14.2	2.73
	8.6	7.5	25.8	3.76	25.0	3.66	23.3	3.45	22.5	3.35	20.0	3.04	18.3	2.85	14.2	2.56
	11.2	10.0	25.8	3.76	25.0	3.66	23.3	3.45	22.5	3.35	20.0	3.04	18.3	2.83	14.2	2.31
	16.4	15.0	25.8	3.76	25.0	3.66	23.3	3.45	22.5	3.35	20.0	3.04	18.3	2.83	14.2	2.31
24.0	18.0	25.8	3.76	25.0	3.66	23.3	3.45	22.5	3.35	20.0	3.04	18.3	2.83	14.2	2.31	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
40%	-24.9	-25.0	20.7	7.82	20.0	7.69	18.7	7.40	18.0	7.25	16.0	6.77	14.7	6.42	11.3	5.44
	-19.8	-20.0	20.7	6.94	20.0	6.81	18.7	6.53	18.0	6.39	16.0	5.93	14.7	5.61	11.3	4.72
	-14.7	-15.0	20.7	6.14	20.0	6.05	18.7	5.86	18.0	5.75	16.0	5.36	14.7	5.01	11.3	4.21
	-9.6	-10.0	20.7	5.22	20.0	5.16	18.7	5.02	18.0	4.94	16.0	4.67	14.7	4.45	11.3	3.81
	-4.4	-5.0	20.7	4.34	20.0	4.30	18.7	4.21	18.0	4.15	16.0	3.95	14.7	3.79	11.3	3.29
	-1.8	-2.5	20.7	3.92	20.0	3.89	18.7	3.81	18.0	3.77	16.0	3.61	14.7	3.47	11.3	3.03
	0.8	0.0	20.7	3.47	20.0	3.45	18.7	3.40	18.0	3.36	16.0	3.23	14.7	3.12	11.3	2.76
	2.8	2.0	20.7	3.12	20.0	3.10	18.7	3.07	18.0	3.04	16.0	2.95	14.7	2.86	11.3	2.56
	6.0	5.0	20.7	3.12	20.0	3.04	18.7	2.87	18.0	2.79	16.0	2.55	14.7	2.50	11.3	2.27
	7.0	6.0	20.7	3.12	20.0	3.04	18.7	2.87	18.0	2.79	16.0	2.54	14.7	2.38	11.3	2.18
	8.6	7.5	20.7	3.12	20.0	3.04	18.7	2.87	18.0	2.79	16.0	2.54	14.7	2.38	11.3	2.05
	11.2	10.0	20.7	3.12	20.0	3.04	18.7	2.87	18.0	2.79	16.0	2.54	14.7	2.38	11.3	1.96
	16.4	15.0	20.7	3.12	20.0	3.04	18.7	2.87	18.0	2.79	16.0	2.54	14.7	2.38	11.3	1.96
24.0	18.0	20.7	3.12	20.0	3.04	18.7	2.87	18.0	2.79	16.0	2.54	14.7	2.38	11.3	1.96	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
30%	-24.9	-25.0	15.5	5.76	15.0	5.66	14.0	5.47	13.5	5.36	12.0	5.03	11.0	4.79	8.5	4.11
	-19.8	-20.0	15.5	5.18	15.0	5.08	14.0	4.87	13.5	4.77	12.0	4.45	11.0	4.22	8.5	3.60
	-14.7	-15.0	15.5	4.47	15.0	4.42	14.0	4.31	13.5	4.25	12.0	4.02	11.0	3.83	8.5	3.23
	-9.6	-10.0	15.5	3.79	15.0	3.76	14.0	3.69	13.5	3.64	12.0	3.48	11.0	3.34	8.5	2.92
	-4.4	-5.0	15.5	3.11	15.0	3.09	14.0	3.05	13.5	3.02	12.0	2.92	11.0	2.82	8.5	2.51
	-1.8	-2.5	15.5	2.76	15.0	2.76	14.0	2.73	13.5	2.72	12.0	2.64	11.0	2.57	8.5	2.30
	0.8	0.0	15.5	2.48	15.0	2.43	14.0	2.43	13.5	2.42	12.0	2.37	11.0	2.32	8.5	2.11
	2.8	2.0	15.5	2.48	15.0	2.42	14.0	2.29	13.5	2.23	12.0	2.17	11.0	2.13	8.5	1.96
	6.0	5.0	15.5	2.48	15.0	2.42	14.0	2.29	13.5	2.23	12.0	2.04	11.0	1.92	8.5	1.76
	7.0	6.0	15.5	2.48	15.0	2.42	14.0	2.29	13.5	2.23	12.0	2.04	11.0	1.92	8.5	1.69
	8.6	7.5	15.5	2.48	15.0	2.42	14.0	2.29	13.5	2.23	12.0	2.04	11.0	1.92	8.5	1.61
	11.2	10.0	15.5	2.48	15.0	2.42	14.0	2.29	13.5	2.23	12.0	2.04	11.0	1.92	8.5	1.61
	16.4	15.0	15.5	2.48	15.0	2.42	14.0	2.29	13.5	2.23	12.0	2.04	11.0	1.92	8.5	1.61
24.0	18.0	15.5	2.48	15.0	2.42	14.0	2.29	13.5	2.23	12.0	2.04	11.0	1.92	8.5	1.61	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-9. U-16ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
130%	-10.0	39.0	5.78	46.8	6.93	48.4	7.17	48.4	7.17	54.8	8.13	61.3	9.09	67.7	10.04
	-5.0	39.0	5.78	46.8	6.94	48.4	7.18	48.4	7.18	54.8	8.14	61.3	9.09	67.7	10.05
	0.0	39.0	5.79	46.8	6.94	48.4	7.19	48.4	7.19	54.8	8.14	61.3	9.10	67.7	10.06
	5.0	39.0	5.79	46.8	6.95	48.4	7.19	48.4	7.19	54.8	8.16	61.3	9.13	67.7	10.09
	10.0	39.0	5.80	46.8	6.96	48.4	7.23	48.4	7.23	54.8	8.21	61.3	9.20	67.7	10.16
	15.0	39.0	5.82	46.8	7.01	48.4	7.34	48.4	7.34	54.8	8.36	61.3	9.37	67.7	10.34
	20.0	39.0	5.96	46.8	7.22	48.4	7.65	48.4	7.65	54.8	8.75	61.3	10.25	67.7	11.94
	25.0	39.0	6.67	46.8	8.36	48.4	9.39	48.4	9.39	54.8	11.14	61.3	13.04	67.7	15.09
	30.0	39.0	8.42	46.8	10.50	48.4	11.67	48.4	11.67	54.8	13.77	61.3	16.04	66.9	17.92
	35.0	39.0	10.29	46.8	12.79	48.4	14.11	48.4	14.11	54.8	16.61	59.2	17.92	61.7	17.92
	40.0	39.0	12.31	46.8	15.27	48.4	16.76	48.4	16.76	52.3	17.92	54.6	17.92	57.0	17.92
43.0	39.0	13.60	46.8	16.85	47.6	17.92	47.6	17.92	49.7	17.92	51.8	17.61	53.2	16.82	
46.0	38.6	13.67	38.8	13.67	38.8	13.67	38.8	13.67	40.1	13.15	41.8	12.76	43.7	12.47	
52.0	16.2	5.27	17.2	5.27	17.2	5.27	17.2	5.27	19.1	5.45	21.2	5.66	23.5	5.87	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
120%	-10.0	36.0	5.33	43.2	6.40	47.3	7.01	47.3	7.01	53.6	7.94	59.9	8.88	66.2	9.81
	-5.0	36.0	5.34	43.2	6.41	47.3	7.01	47.3	7.01	53.6	7.95	59.9	8.88	66.2	9.82
	0.0	36.0	5.34	43.2	6.41	47.3	7.02	47.3	7.02	53.6	7.95	59.9	8.89	66.2	9.82
	5.0	36.0	5.35	43.2	6.42	47.3	7.03	47.3	7.03	53.6	7.97	59.9	8.91	66.2	9.85
	10.0	36.0	5.36	43.2	6.43	47.3	7.06	47.3	7.06	53.6	8.02	59.9	8.98	66.2	9.93
	15.0	36.0	5.38	43.2	6.48	47.3	7.16	47.3	7.16	53.6	8.16	59.9	9.15	66.2	10.10
	20.0	36.0	5.50	43.2	6.67	47.3	7.46	47.3	7.46	53.6	8.52	59.9	9.86	66.2	11.48
	25.0	36.0	6.16	43.2	7.69	47.3	9.08	47.3	9.08	53.6	10.76	59.9	12.58	66.2	14.53
	30.0	36.0	7.76	43.2	9.66	47.3	11.29	47.3	11.29	53.6	13.31	59.9	15.49	66.2	17.81
	35.0	36.0	9.49	43.2	11.77	47.3	13.67	47.3	13.67	53.6	16.07	58.8	17.92	61.2	17.92
	40.0	36.0	11.35	43.2	14.05	47.3	16.24	47.3	16.24	51.9	17.92	54.2	17.92	56.5	17.92
43.0	36.0	12.53	43.2	15.50	46.9	17.70	46.9	17.70	49.4	17.92	51.6	17.73	52.8	16.88	
46.0	35.6	13.64	38.6	13.71	38.6	13.71	38.6	13.71	39.8	13.15	41.4	12.73	43.1	12.40	
52.0	15.2	5.18	16.6	5.18	16.9	5.18	16.9	5.18	18.7	5.35	20.7	5.53	22.9	5.73	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
110%	-10.0	33.0	4.89	39.6	5.87	46.1	6.84	46.1	6.84	52.3	7.75	58.4	8.67	64.6	9.58
	-5.0	33.0	4.90	39.6	5.87	46.1	6.85	46.1	6.85	52.3	7.76	58.4	8.67	64.6	9.58
	0.0	33.0	4.90	39.6	5.88	46.1	6.85	46.1	6.85	52.3	7.77	58.4	8.68	64.6	9.59
	5.0	33.0	4.91	39.6	5.89	46.1	6.86	46.1	6.86	52.3	7.78	58.4	8.70	64.6	9.62
	10.0	33.0	4.92	39.6	5.90	46.1	6.89	46.1	6.89	52.3	7.82	58.4	8.77	64.6	9.69
	15.0	33.0	4.93	39.6	5.94	46.1	6.98	46.1	6.98	52.3	7.95	58.4	8.93	64.6	9.86
	20.0	33.0	5.05	39.6	6.12	46.1	7.26	46.1	7.26	52.3	8.30	58.4	9.49	64.6	11.02
	25.0	33.0	5.65	39.6	7.03	46.1	8.77	46.1	8.77	52.3	10.38	58.4	12.12	64.6	13.99
	30.0	33.0	7.12	39.6	8.83	46.1	10.93	46.1	10.93	52.3	12.86	58.4	14.95	64.6	17.17
	35.0	33.0	8.70	39.6	10.76	46.1	13.23	46.1	13.23	52.3	15.54	58.3	17.91	60.7	17.92
	40.0	33.0	10.40	39.6	12.84	46.1	15.73	46.1	15.73	51.5	17.92	53.7	17.92	56.1	17.92
43.0	33.0	11.48	39.6	14.16	46.1	17.34	46.1	17.34	49.0	17.92	51.3	17.86	52.5	16.96	
46.0	32.7	12.49	38.4	13.77	38.4	13.77	38.4	13.77	39.6	13.17	41.0	12.71	42.6	12.35	
52.0	14.1	5.09	15.4	5.09	16.5	5.09	16.5	5.09	18.3	5.24	20.2	5.41	22.3	5.59	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	-10.0	30.0	4.45	36.0	5.34	42.0	6.23	45.0	6.67	51.0	7.56	57.0	8.46	63.0	9.35
	-5.0	30.0	4.45	36.0	5.34	42.0	6.23	45.0	6.68	51.0	7.57	57.0	8.46	63.0	9.35
	0.0	30.0	4.46	36.0	5.35	42.0	6.24	45.0	6.69	51.0	7.58	57.0	8.47	63.0	9.36
	5.0	30.0	4.46	36.0	5.36	42.0	6.25	45.0	6.69	51.0	7.59	57.0	8.49	63.0	9.38
	10.0	30.0	4.47	36.0	5.36	42.0	6.26	45.0	6.71	51.0	7.63	57.0	8.55	63.0	9.45
	15.0	30.0	4.49	36.0	5.40	42.0	6.33	45.0	6.80	51.0	7.75	57.0	8.70	63.0	9.62
	20.0	30.0	4.59	36.0	5.57	42.0	6.57	45.0	7.07	51.0	8.08	57.0	9.12	63.0	10.58
	25.0	30.0	5.16	36.0	6.39	42.0	7.75	45.0	8.47	51.0	10.01	57.0	11.67	63.0	13.46
	30.0	30.0	6.49	36.0	8.02	42.0	9.68	45.0	10.56	51.0	12.42	57.0	14.41	63.0	16.54
	35.0	30.0	7.92	36.0	9.77	42.0	11.76	45.0	12.80	51.0	15.02	57.0	17.37	60.2	17.92
	40.0	30.0	9.46	36.0	11.65	42.0	14.00	45.0	15.23	51.0	17.82	53.3	17.92	55.6	17.92
43.0	30.0	10.44	36.0	12.85	42.0	15.43	45.0	16.79	48.6	17.92	51.0	17.92	52.1	17.07	
46.0	29.7	11.35	35.6	13.98	37.9	14.23	38.3	13.84	39.3	13.20	40.6	12.70	42.1	12.30	
52.0	12.9	4.81	14.1	4.86	15.5	4.95	16.2	5.01	17.9	5.14	19.7	5.29	21.7	5.45	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-16ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
90%	-10.0	27.0	4.00	32.4	4.81	37.8	5.61	40.5	6.01	45.9	6.81	51.3	7.61	56.7	8.41
	-5.0	27.0	4.01	32.4	4.81	37.8	5.61	40.5	6.01	45.9	6.81	51.3	7.62	56.7	8.42
	0.0	27.0	4.01	32.4	4.81	37.8	5.62	40.5	6.02	45.9	6.82	51.3	7.62	56.7	8.42
	5.0	27.0	4.02	32.4	4.82	37.8	5.62	40.5	6.03	45.9	6.83	51.3	7.63	56.7	8.44
	10.0	27.0	4.03	32.4	4.83	37.8	5.63	40.5	6.04	45.9	6.85	51.3	7.67	56.7	8.50
	15.0	27.0	4.04	32.4	4.85	37.8	5.68	40.5	6.09	45.9	6.94	51.3	7.79	56.7	8.64
	20.0	27.0	4.11	32.4	4.98	37.8	5.86	40.5	6.30	45.9	7.21	51.3	8.11	56.7	9.01
	25.0	27.0	4.57	32.4	5.60	37.8	6.73	40.5	7.33	45.9	8.61	51.3	9.98	56.7	11.44
	30.0	27.0	5.74	32.4	7.04	37.8	8.44	40.5	9.18	45.9	10.73	51.3	12.39	56.7	14.15
	35.0	27.0	7.01	32.4	8.59	37.8	10.28	40.5	11.15	45.9	13.02	51.3	14.98	56.7	17.07
	40.0	27.0	8.37	32.4	10.26	37.8	12.26	40.5	13.30	45.9	15.48	51.3	17.79	53.6	17.92
43.0	27.0	9.24	32.4	11.32	37.8	13.52	40.5	14.66	45.9	17.06	49.0	17.92	51.0	17.72	
46.0	26.7	10.06	32.1	12.32	37.4	14.71	37.7	14.28	38.3	13.47	39.3	12.80	40.4	12.26	
52.0	12.4	4.68	13.3	4.67	14.4	4.69	15.0	4.71	16.3	4.77	17.8	4.85	19.4	4.94	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
80%	-10.0	24.0	3.56	28.8	4.27	33.6	4.98	36.0	5.34	40.8	6.05	45.6	6.77	50.4	7.48
	-5.0	24.0	3.56	28.8	4.28	33.6	4.99	36.0	5.34	40.8	6.06	45.6	6.77	50.4	7.48
	0.0	24.0	3.57	28.8	4.28	33.6	4.99	36.0	5.35	40.8	6.06	45.6	6.78	50.4	7.49
	5.0	24.0	3.57	28.8	4.29	33.6	5.00	36.0	5.36	40.8	6.07	45.6	6.78	50.4	7.50
	10.0	24.0	3.58	28.8	4.29	33.6	5.01	36.0	5.36	40.8	6.08	45.6	6.80	50.4	7.53
	15.0	24.0	3.59	28.8	4.31	33.6	5.03	36.0	5.40	40.8	6.14	45.6	6.88	50.4	7.64
	20.0	24.0	3.63	28.8	4.39	33.6	5.16	36.0	5.55	40.8	6.34	45.6	7.13	50.4	7.93
	25.0	24.0	3.99	28.8	4.87	33.6	5.78	36.0	6.27	40.8	7.31	45.6	8.42	50.4	9.60
	30.0	24.0	5.02	28.8	6.11	33.6	7.28	36.0	7.89	40.8	9.17	45.6	10.52	50.4	11.95
	35.0	24.0	6.14	28.8	7.47	33.6	8.88	36.0	9.60	40.8	11.15	45.6	12.77	50.4	14.47
	40.0	24.0	7.34	28.8	8.93	33.6	10.61	36.0	11.48	40.8	13.29	45.6	15.20	50.4	17.20
43.0	24.0	8.10	28.8	9.86	33.6	11.71	36.0	12.67	40.8	14.66	45.6	16.76	49.0	17.92	
46.0	23.8	8.82	28.5	10.73	33.3	12.74	35.6	13.79	37.7	14.03	38.3	13.19	39.0	12.48	
52.0	11.9	4.61	12.6	4.52	13.4	4.48	13.9	4.46	14.9	4.46	16.1	4.48	17.4	4.51	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
70%	-10.0	21.0	3.12	25.2	3.74	29.4	4.36	31.5	4.67	35.7	5.30	39.9	5.92	44.1	6.54
	-5.0	21.0	3.12	25.2	3.74	29.4	4.37	31.5	4.68	35.7	5.30	39.9	5.93	44.1	6.55
	0.0	21.0	3.12	25.2	3.75	29.4	4.37	31.5	4.68	35.7	5.31	39.9	5.93	44.1	6.56
	5.0	21.0	3.13	25.2	3.75	29.4	4.38	31.5	4.69	35.7	5.31	39.9	5.94	44.1	6.56
	10.0	21.0	3.13	25.2	3.76	29.4	4.38	31.5	4.70	35.7	5.32	39.9	5.95	44.1	6.58
	15.0	21.0	3.14	25.2	3.77	29.4	4.40	31.5	4.71	35.7	5.35	39.9	5.99	44.1	6.64
	20.0	21.0	3.16	25.2	3.81	29.4	4.48	31.5	4.81	35.7	5.49	39.9	6.17	44.1	6.86
	25.0	21.0	3.41	25.2	4.17	29.4	4.94	31.5	5.31	35.7	6.13	39.9	7.01	44.1	7.94
	30.0	21.0	4.35	25.2	5.24	29.4	6.19	31.5	6.69	35.7	7.72	39.9	8.80	44.1	9.94
	35.0	21.0	5.31	25.2	6.41	29.4	7.57	31.5	8.15	35.7	9.42	39.9	10.72	44.1	12.09
	40.0	21.0	6.35	25.2	7.67	29.4	9.05	31.5	9.77	35.7	11.25	39.9	12.80	44.1	14.41
43.0	21.0	7.01	25.2	8.47	29.4	10.00	31.5	10.79	35.7	12.42	39.9	14.12	44.1	15.89	
46.0	20.8	7.63	24.9	9.22	29.1	10.89	31.2	11.75	35.3	13.52	37.6	13.98	38.0	13.08	
52.0	11.6	4.58	12.0	4.44	12.6	4.33	13.0	4.28	13.7	4.22	14.6	4.17	15.6	4.15	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
60%	-10.0	18.0	2.67	21.6	3.21	25.2	3.74	27.0	4.01	30.6	4.54	34.2	5.08	37.8	5.61
	-5.0	18.0	2.67	21.6	3.21	25.2	3.74	27.0	4.01	30.6	4.54	34.2	5.08	37.8	5.61
	0.0	18.0	2.68	21.6	3.21	25.2	3.75	27.0	4.01	30.6	4.55	34.2	5.08	37.8	5.62
	5.0	18.0	2.68	21.6	3.22	25.2	3.75	27.0	4.02	30.6	4.56	34.2	5.09	37.8	5.63
	10.0	18.0	2.69	21.6	3.22	25.2	3.76	27.0	4.03	30.6	4.56	34.2	5.10	37.8	5.63
	15.0	18.0	2.69	21.6	3.23	25.2	3.77	27.0	4.04	30.6	4.58	34.2	5.12	37.8	5.67
	20.0	18.0	2.71	21.6	3.25	25.2	3.81	27.0	4.09	30.6	4.66	34.2	5.23	37.8	5.81
	25.0	18.0	2.86	21.6	3.49	25.2	4.13	27.0	4.44	30.6	5.10	34.2	5.73	37.8	6.44
	30.0	18.0	3.72	21.6	4.43	25.2	5.18	27.0	5.58	30.6	6.38	34.2	7.23	37.8	8.11
	35.0	18.0	4.53	21.6	5.42	25.2	6.35	27.0	6.81	30.6	7.81	34.2	8.84	37.8	9.91
	40.0	18.0	5.41	21.6	6.48	25.2	7.60	27.0	8.17	30.6	9.35	34.2	10.57	37.8	11.84
43.0	18.0	5.97	21.6	7.16	25.2	8.39	27.0	9.02	30.6	10.33	34.2	11.68	37.8	13.07	
46.0	17.8	6.49	21.4	7.79	24.9	9.14	26.7	9.83	30.3	11.25	33.9	12.72	37.4	14.24	
52.0	11.3	4.63	11.6	4.42	12.0	4.25	12.2	4.18	12.7	4.06	13.3	3.95	14.0	3.87	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-16ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
50%	-10.0	15.0	2.23	18.0	2.67	21.0	3.12	22.5	3.34	25.5	3.79	28.5	4.23	31.5	4.68
	-5.0	15.0	2.23	18.0	2.67	21.0	3.12	22.5	3.34	25.5	3.79	28.5	4.23	31.5	4.68
	0.0	15.0	2.23	18.0	2.68	21.0	3.12	22.5	3.35	25.5	3.79	28.5	4.24	31.5	4.68
	5.0	15.0	2.23	18.0	2.68	21.0	3.13	22.5	3.35	25.5	3.80	28.5	4.24	31.5	4.69
	10.0	15.0	2.24	18.0	2.69	21.0	3.13	22.5	3.36	25.5	3.80	28.5	4.25	31.5	4.70
	15.0	15.0	2.25	18.0	2.69	21.0	3.14	22.5	3.37	25.5	3.82	28.5	4.26	31.5	4.71
	20.0	15.0	2.26	18.0	2.71	21.0	3.16	22.5	3.39	25.5	3.85	28.5	4.32	31.5	4.79
	25.0	15.0	2.34	18.0	2.84	21.0	3.36	22.5	3.60	25.5	4.14	28.5	4.66	31.5	5.18
	30.0	15.0	3.12	18.0	3.67	21.0	4.25	22.5	4.55	25.5	5.17	28.5	5.80	31.5	6.46
	35.0	15.0	3.79	18.0	4.49	21.0	5.21	22.5	5.56	25.5	6.33	28.5	7.11	31.5	7.92
	40.0	15.0	4.51	18.0	5.36	21.0	6.23	22.5	6.67	25.5	7.58	28.5	8.52	31.5	9.48
43.0	15.0	4.97	18.0	5.91	21.0	6.88	22.5	7.37	25.5	8.38	28.5	9.42	31.5	10.48	
46.0	14.9	5.40	17.8	6.43	20.8	7.49	22.3	8.03	25.2	9.13	28.2	10.26	31.2	11.42	
52.0	11.1	4.79	11.3	4.52	11.5	4.28	11.6	4.18	12.0	4.00	12.3	3.84	12.8	3.70	
40%	-10.0	12.0	1.78	14.4	2.14	16.8	2.49	18.0	2.67	20.4	3.03	22.8	3.39	25.2	3.74
	-5.0	12.0	1.78	14.4	2.14	16.8	2.50	18.0	2.67	20.4	3.03	22.8	3.39	25.2	3.75
	0.0	12.0	1.79	14.4	2.14	16.8	2.50	18.0	2.68	20.4	3.03	22.8	3.39	25.2	3.75
	5.0	12.0	1.79	14.4	2.15	16.8	2.50	18.0	2.68	20.4	3.04	22.8	3.40	25.2	3.75
	10.0	12.0	1.79	14.4	2.15	16.8	2.51	18.0	2.69	20.4	3.04	22.8	3.40	25.2	3.76
	15.0	12.0	1.80	14.4	2.16	16.8	2.52	18.0	2.69	20.4	3.05	22.8	3.41	25.2	3.77
	20.0	12.0	1.81	14.4	2.17	16.8	2.53	18.0	2.71	20.4	3.07	22.8	3.43	25.2	3.80
	25.0	12.0	1.84	14.4	2.22	16.8	2.62	18.0	2.81	20.4	3.21	22.8	3.62	25.2	4.02
	30.0	12.0	2.56	14.4	2.97	16.8	3.40	18.0	3.61	20.4	4.06	22.8	4.51	25.2	4.98
	35.0	12.0	3.09	14.4	3.61	16.8	4.15	18.0	4.40	20.4	4.97	22.8	5.54	25.2	6.12
	40.0	12.0	3.66	14.4	4.30	16.8	4.95	18.0	5.28	20.4	5.95	22.8	6.64	25.2	7.34
43.0	12.0	4.02	14.4	4.73	16.8	5.46	18.0	5.83	20.4	6.57	22.8	7.34	25.2	8.11	
46.0	11.9	4.36	14.3	5.14	16.6	5.94	17.8	6.34	20.2	7.16	22.6	7.99	24.9	8.84	
52.0	9.7	4.35	11.1	4.78	11.2	4.48	11.2	4.35	11.4	4.10	11.6	3.88	11.9	3.69	
30%	-10.0	9.0	1.34	10.8	1.61	12.6	1.87	13.5	2.01	15.3	2.27	17.1	2.54	18.9	2.81
	-5.0	9.0	1.34	10.8	1.61	12.6	1.87	13.5	2.01	15.3	2.28	17.1	2.54	18.9	2.81
	0.0	9.0	1.34	10.8	1.61	12.6	1.88	13.5	2.01	15.3	2.28	17.1	2.55	18.9	2.81
	5.0	9.0	1.34	10.8	1.61	12.6	1.88	13.5	2.01	15.3	2.28	17.1	2.55	18.9	2.82
	10.0	9.0	1.35	10.8	1.61	12.6	1.88	13.5	2.02	15.3	2.28	17.1	2.55	18.9	2.82
	15.0	9.0	1.35	10.8	1.62	12.6	1.89	13.5	2.02	15.3	2.29	17.1	2.56	18.9	2.83
	20.0	9.0	1.36	10.8	1.63	12.6	1.90	13.5	2.03	15.3	2.30	17.1	2.57	18.9	2.84
	25.0	9.0	1.38	10.8	1.65	12.6	1.93	13.5	2.06	15.3	2.35	17.1	2.64	18.9	2.93
	30.0	9.0	2.04	10.8	2.32	12.6	2.61	13.5	2.76	15.3	3.06	17.1	3.36	18.9	3.67
	35.0	9.0	2.43	10.8	2.79	12.6	3.16	13.5	3.34	15.3	3.73	17.1	4.11	18.9	4.50
	40.0	9.0	2.85	10.8	3.30	12.6	3.76	13.5	3.98	15.3	4.45	17.1	4.92	18.9	5.39
43.0	9.0	3.12	10.8	3.62	12.6	4.13	13.5	4.39	15.3	4.90	17.1	5.43	18.9	5.95	
46.0	8.9	3.37	10.7	3.93	12.5	4.49	13.4	4.77	15.1	5.34	16.9	5.91	18.7	6.49	
52.0	7.3	3.37	8.7	3.92	10.2	4.48	10.9	4.76	11.1	4.51	11.2	4.22	11.3	3.95	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-10. U-16ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
130%	-24.9	-25.0	24.4	10.87	23.8	10.72	22.5	10.39	21.9	10.22	19.9	9.62	18.5	9.16	14.8	7.81
	-19.8	-20.0	28.4	11.23	27.7	11.06	26.2	10.69	25.5	10.49	23.2	9.83	21.6	9.34	17.4	7.92
	-14.7	-15.0	32.8	11.72	32.0	11.53	30.4	11.11	29.5	10.89	26.9	10.17	25.1	9.64	20.3	8.12
	-9.6	-10.0	37.9	12.44	37.0	12.22	35.2	11.76	34.2	11.52	31.3	10.72	29.2	10.14	23.8	8.51
	-4.4	-5.0	43.9	13.47	42.9	13.21	40.8	12.63	39.8	12.33	36.4	11.49	34.0	10.84	27.7	9.01
	-1.8	-2.5	47.3	14.00	46.2	13.74	44.0	13.20	42.8	12.91	39.2	11.96	36.7	11.26	29.8	9.32
	0.8	0.0	50.9	14.34	49.7	14.08	47.3	13.51	46.0	13.20	42.1	12.22	39.4	11.50	32.1	9.49
	2.8	2.0	53.9	14.57	52.6	14.29	50.1	13.69	48.8	13.38	44.7	12.36	41.8	11.63	33.8	9.48
	6.0	5.0	58.7	14.90	57.4	14.61	54.7	14.00	53.3	13.68	47.8	12.15	43.8	11.04	33.8	8.42
	7.0	6.0	60.5	15.03	59.2	14.75	55.7	13.84	53.8	13.27	47.8	11.62	43.8	10.57	33.8	8.07
	8.6	7.5	61.7	14.50	59.7	13.95	55.7	12.88	53.8	12.35	47.8	10.84	43.8	9.87	33.8	7.57
	11.2	10.0	61.7	12.72	59.7	12.25	55.7	11.33	53.8	10.88	47.8	9.59	43.8	8.75	33.8	6.77
16.4	15.0	61.7	9.53	59.7	9.21	55.7	8.58	53.8	8.27	47.8	7.37	43.8	6.78	33.8	5.36	
24.0	18.0	61.7	8.08	59.7	7.85	55.7	7.37	53.8	7.13	47.8	6.42	43.8	5.94	33.8	4.75	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
120%	-24.9	-25.0	24.3	10.75	23.7	10.60	22.4	10.27	21.8	10.10	19.8	9.51	18.4	9.06	14.8	7.73
	-19.8	-20.0	28.3	11.11	27.6	10.94	26.2	10.57	25.4	10.38	23.1	9.73	21.5	9.24	17.3	7.84
	-14.7	-15.0	32.8	11.61	31.9	11.41	30.3	11.00	29.4	10.78	26.8	10.07	25.0	9.54	20.2	8.05
	-9.6	-10.0	37.9	12.33	37.0	12.12	35.1	11.66	34.1	11.42	31.2	10.63	29.1	10.05	23.7	8.43
	-4.4	-5.0	43.9	13.39	42.9	13.14	40.8	12.58	39.7	12.29	36.3	11.39	34.0	10.75	27.6	8.93
	-1.8	-2.5	47.3	13.84	46.2	13.60	43.9	13.06	42.8	12.78	39.1	11.85	36.6	11.16	29.7	9.24
	0.8	0.0	50.9	14.17	49.7	13.91	47.2	13.35	46.0	13.05	42.1	12.07	39.3	11.36	32.0	9.39
	2.8	2.0	53.9	14.38	52.6	14.11	50.0	13.52	48.7	13.21	44.6	12.21	41.7	11.49	33.1	9.12
	6.0	5.0	58.7	14.71	57.4	14.43	54.4	13.74	52.5	13.19	46.7	11.58	42.8	10.55	33.1	8.09
	7.0	6.0	60.3	14.74	58.3	14.19	54.4	13.11	52.5	12.59	46.7	11.07	42.8	10.09	33.1	7.76
	8.6	7.5	60.3	13.67	58.3	13.17	54.4	12.19	52.5	11.71	46.7	10.32	42.8	9.42	33.1	7.28
	11.2	10.0	60.3	11.98	58.3	11.55	54.4	10.72	52.5	10.31	46.7	9.12	42.8	8.35	33.1	6.51
16.4	15.0	60.3	8.95	58.3	8.66	54.4	8.10	52.5	7.82	46.7	7.00	42.8	6.46	33.1	5.15	
24.0	18.0	60.3	7.91	58.3	7.68	54.4	7.22	52.5	6.98	46.7	6.29	42.8	5.82	33.1	4.66	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
110%	-24.9	-25.0	24.3	10.63	23.6	10.48	22.4	10.16	21.7	9.99	19.7	9.40	18.3	8.96	14.7	7.65
	-19.8	-20.0	28.3	10.99	27.5	10.82	26.1	10.46	25.3	10.26	23.0	9.62	21.4	9.14	17.2	7.75
	-14.7	-15.0	32.7	11.49	31.9	11.30	30.2	10.89	29.4	10.67	26.7	9.97	24.9	9.45	20.1	7.97
	-9.6	-10.0	37.8	12.23	36.9	12.01	35.0	11.56	34.1	11.31	31.1	10.53	29.1	9.97	23.6	8.35
	-4.4	-5.0	43.9	13.28	42.9	13.04	40.7	12.51	39.6	12.22	36.2	11.29	33.9	10.60	27.5	8.86
	-1.8	-2.5	47.3	13.69	46.2	13.45	43.9	12.92	42.7	12.65	39.0	11.72	36.5	11.05	29.6	9.15
	0.8	0.0	50.8	14.00	49.6	13.73	47.2	13.18	45.9	12.89	42.0	11.93	39.2	11.23	31.9	9.29
	2.8	2.0	53.8	14.20	52.6	13.93	50.0	13.35	48.6	13.05	44.5	12.07	41.6	11.36	32.3	8.77
	6.0	5.0	58.7	14.53	56.9	14.05	53.1	13.01	51.3	12.51	45.6	11.03	41.8	10.07	32.3	7.78
	7.0	6.0	58.8	13.89	56.9	13.39	53.1	12.41	51.3	11.93	45.6	10.53	41.8	9.63	32.3	7.46
	8.6	7.5	58.8	12.88	56.9	12.43	53.1	11.53	51.3	11.10	45.6	9.82	41.8	8.99	32.3	6.99
	11.2	10.0	58.8	11.27	56.9	10.89	53.1	10.13	51.3	9.76	45.6	8.68	41.8	7.97	32.3	6.26
16.4	15.0	58.8	8.40	56.9	8.14	53.1	7.64	51.3	7.39	45.6	6.65	41.8	6.16	32.3	4.95	
24.0	18.0	58.8	7.74	56.9	7.51	53.1	7.06	51.3	6.83	45.6	6.15	41.8	5.70	32.3	4.57	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
100%	-24.9	-25.0	24.2	10.51	23.6	10.36	22.3	10.04	21.6	9.88	19.6	9.30	18.2	8.86	14.6	7.56
	-19.8	-20.0	28.2	10.87	27.5	10.70	26.0	10.34	25.2	10.15	22.9	9.52	21.3	9.04	17.1	7.67
	-14.7	-15.0	32.6	11.38	31.8	11.19	30.1	10.78	29.3	10.57	26.7	9.87	24.8	9.35	20.0	7.89
	-9.6	-10.0	37.8	12.13	36.8	11.91	35.0	11.46	34.0	11.22	31.0	10.44	29.0	9.88	23.5	8.28
	-4.4	-5.0	43.9	13.16	42.8	12.93	40.7	12.42	39.6	12.14	36.2	11.23	33.8	10.56	27.4	8.78
	-1.8	-2.5	47.2	13.53	46.1	13.29	43.8	12.78	42.6	12.50	38.9	11.60	36.3	10.93	29.4	9.06
	0.8	0.0	50.8	13.82	49.6	13.56	47.1	13.02	45.8	12.73	41.8	11.78	39.1	11.09	31.5	9.09
	2.8	2.0	53.8	14.01	52.5	13.75	49.9	13.18	48.5	12.88	44.4	11.92	40.7	10.91	31.5	8.42
	6.0	5.0	57.4	13.75	55.6	13.27	51.9	12.32	50.0	11.86	44.4	10.49	40.7	9.60	31.5	7.46
	7.0	6.0	57.4	13.09	55.6	12.64	51.9	11.75	50.0	11.30	44.4	10.01	40.7	9.17	31.5	7.15
	8.6	7.5	57.4	12.12	55.6	11.70	51.9	10.89	50.0	10.49	44.4	9.32	40.7	8.56	31.5	6.71
	11.2	10.0	57.4	10.58	55.6	10.23	51.9	9.55	50.0	9.22	44.4	8.24	40.7	7.59	31.5	6.01
16.4	15.0	57.4	7.89	55.6	7.67	51.9	7.22	50.0	7.00	44.4	6.32	40.7	5.87	31.5	4.72	
24.0	18.0	57.4	7.57	55.6	7.35	51.9	6.91	50.0	6.68	44.4	6.02	40.7	5.58	31.5	4.47	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-16ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
			TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
90%	°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
	-24.9	-25.0	23.9	10.04	23.2	9.91	21.9	9.60	21.3	9.44	19.3	8.90	17.9	8.49	14.2	7.26
	-19.8	-20.0	27.9	10.42	27.1	10.26	25.7	9.91	24.9	9.73	22.6	9.12	21.0	8.67	16.8	7.36
	-14.7	-15.0	32.3	10.95	31.5	10.77	29.8	10.37	28.9	10.16	26.3	9.49	24.5	8.99	19.6	7.59
	-9.6	-10.0	37.6	11.68	36.6	11.52	34.7	11.07	33.7	10.84	30.7	10.08	28.6	9.53	23.0	7.98
	-4.4	-5.0	43.7	12.60	42.6	12.39	40.4	11.93	39.3	11.68	35.8	10.86	33.3	10.25	26.9	8.50
	-1.8	-2.5	47.1	12.88	45.9	12.66	43.5	12.17	42.3	11.91	38.5	11.06	35.9	10.44	28.3	8.45
	0.8	0.0	50.6	13.11	49.4	12.88	46.7	12.31	45.0	11.89	40.0	10.62	36.7	9.79	28.3	7.72
	2.8	2.0	51.7	12.45	50.0	12.06	46.7	11.30	45.0	10.92	40.0	9.76	36.7	9.06	28.3	7.24
	6.0	5.0	51.7	10.87	50.0	10.59	46.7	10.01	45.0	9.71	40.0	8.80	36.7	8.13	28.3	6.45
	7.0	6.0	51.7	10.67	50.0	10.34	46.7	9.69	45.0	9.37	40.0	8.40	36.7	7.77	28.3	6.19
	8.6	7.5	51.7	9.84	50.0	9.55	46.7	8.97	45.0	8.68	40.0	7.81	36.7	7.24	28.3	5.80
11.2	10.0	51.7	8.55	50.0	8.32	46.7	7.84	45.0	7.61	40.0	6.90	36.7	6.42	28.3	5.20	
16.4	15.0	51.7	6.88	50.0	6.68	46.7	6.29	45.0	6.09	40.0	5.49	36.7	5.09	28.3	4.10	
24.0	18.0	51.7	6.88	50.0	6.68	46.7	6.29	45.0	6.09	40.0	5.49	36.7	5.09	28.3	4.10	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
			TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
80%	°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
	-24.9	-25.0	23.6	9.64	22.9	9.51	21.6	9.22	21.0	9.07	18.9	8.55	17.5	8.15	13.9	6.98
	-19.8	-20.0	27.6	10.03	26.9	9.87	25.4	9.54	24.6	9.36	22.2	8.77	20.6	8.34	16.4	7.09
	-14.7	-15.0	32.1	10.59	31.3	10.41	29.5	10.02	28.7	9.82	26.0	9.16	24.1	8.68	19.3	7.32
	-9.6	-10.0	37.4	11.44	36.4	11.23	34.5	10.76	33.5	10.49	30.4	9.77	28.3	9.23	22.7	7.72
	-4.4	-5.0	43.6	12.05	42.5	11.85	40.2	11.43	39.0	11.19	35.4	10.43	32.6	9.71	25.2	7.76
	-1.8	-2.5	45.9	11.85	44.4	11.52	41.5	10.87	40.0	10.54	35.6	9.54	32.6	8.86	25.2	7.16
	0.8	0.0	45.9	10.64	44.4	10.34	41.5	9.82	40.0	9.56	35.6	8.73	32.6	8.15	25.2	6.62
	2.8	2.0	45.9	9.84	44.4	9.61	41.5	9.14	40.0	8.90	35.6	8.14	32.6	7.61	25.2	6.20
	6.0	5.0	45.9	8.77	44.4	8.57	41.5	8.17	40.0	7.96	35.6	7.30	32.6	6.81	25.2	5.53
	7.0	6.0	45.9	8.55	44.4	8.33	41.5	7.88	40.0	7.65	35.6	6.97	32.6	6.50	25.2	5.30
	8.6	7.5	45.9	7.87	44.4	7.67	41.5	7.28	40.0	7.08	35.6	6.47	32.6	6.06	25.2	4.97
11.2	10.0	45.9	6.80	44.4	6.65	41.5	6.34	40.0	6.19	35.6	5.70	32.6	5.36	25.2	4.46	
16.4	15.0	45.9	6.20	44.4	6.02	41.5	5.67	40.0	5.49	35.6	4.96	32.6	4.60	25.2	3.72	
24.0	18.0	45.9	6.20	44.4	6.02	41.5	5.67	40.0	5.49	35.6	4.96	32.6	4.60	25.2	3.72	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
			TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
70%	°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
	-24.9	-25.0	23.5	9.37	22.9	9.24	21.5	8.96	20.8	8.81	18.8	8.30	17.4	7.92	13.8	6.79
	-19.8	-20.0	27.6	9.77	26.8	9.62	25.3	9.29	24.5	9.11	22.1	8.54	20.5	8.12	16.2	6.90
	-14.7	-15.0	32.2	10.36	31.3	10.18	29.5	9.80	28.6	9.60	25.9	8.95	24.0	8.48	19.1	7.15
	-9.6	-10.0	37.6	11.16	36.6	10.98	34.5	10.58	33.5	10.36	30.3	9.56	28.2	9.04	22.0	7.39
	-4.4	-5.0	40.2	10.20	38.9	9.97	36.3	9.50	35.0	9.26	31.1	8.52	28.5	8.00	22.0	6.57
	-1.8	-2.5	40.2	9.33	38.9	9.14	36.3	8.74	35.0	8.53	31.1	7.86	28.5	7.38	22.0	6.08
	0.8	0.0	40.2	8.50	38.9	8.33	36.3	7.98	35.0	7.80	31.1	7.20	28.5	6.78	22.0	5.61
	2.8	2.0	40.2	7.86	38.9	7.71	36.3	7.40	35.0	7.23	31.1	6.70	28.5	6.31	22.0	5.25
	6.0	5.0	40.2	6.96	38.9	6.84	36.3	6.57	35.0	6.43	31.1	5.97	28.5	5.63	22.0	4.68
	7.0	6.0	40.2	6.72	38.9	6.58	36.3	6.30	35.0	6.16	31.1	5.70	28.5	5.37	22.0	4.49
	8.6	7.5	40.2	6.16	38.9	6.05	36.3	5.81	35.0	5.69	31.1	5.29	28.5	5.00	22.0	4.21
11.2	10.0	40.2	5.51	38.9	5.36	36.3	5.05	35.0	4.95	31.1	4.65	28.5	4.42	22.0	3.78	
16.4	15.0	40.2	5.51	38.9	5.36	36.3	5.05	35.0	4.89	31.1	4.43	28.5	4.12	22.0	3.34	
24.0	18.0	40.2	5.51	38.9	5.36	36.3	5.05	35.0	4.89	31.1	4.43	28.5	4.12	22.0	3.34	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
			TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
60%	°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
	-24.9	-25.0	23.9	9.33	23.2	9.20	21.8	8.92	21.1	8.76	19.0	8.26	17.6	7.87	13.9	6.75
	-19.8	-20.0	28.1	9.77	27.3	9.61	25.7	9.27	24.9	9.09	22.4	8.51	20.7	8.09	16.4	6.87
	-14.7	-15.0	32.8	10.40	31.9	10.21	30.1	9.82	29.1	9.61	26.3	8.95	24.3	8.48	18.9	6.97
	-9.6	-10.0	34.4	9.55	33.3	9.37	31.1	8.99	30.0	8.79	26.7	8.13	24.4	7.65	18.9	6.23
	-4.4	-5.0	34.4	8.12	33.3	7.98	31.1	7.67	30.0	7.51	26.7	6.98	24.4	6.59	18.9	5.51
	-1.8	-2.5	34.4	7.41	33.3	7.28	31.1	7.02	30.0	6.88	26.7	6.41	24.4	6.07	18.9	5.10
	0.8	0.0	34.4	6.72	33.3	6.61	31.1	6.39	30.0	6.26	26.7	5.86	24.4	5.56	18.9	4.70
	2.8	2.0	34.4	6.19	33.3	6.10	31.1	5.90	30.0	5.79	26.7	5.44	24.4	5.17	18.9	4.39
	6.0	5.0	34.4	5.42	33.3	5.36	31.1	5.20	30.0	5.11	26.7	4.81	24.4	4.57	18.9	3.88
	7.0	6.0	34.4	5.17	33.3	5.10	31.1	4.94	30.0	4.86	26.7	4.58	24.4	4.37	18.9	3.75
	8.6	7.5	34.4	4.83	33.3	4.69	31.1	4.55	30.0	4.48	26.7	4.24	24.4	4.06	18.9	3.52
11.2	10.0	34.4	4.83	33.3	4.69	31.1	4.43	30.0	4.29	26.7	3.90	24.4	3.63	18.9	3.16	
16.4	15.0	34.4	4.83	33.3	4.69	31.1	4.43	30.0	4.29	26.7	3.90	24.4	3.63	18.9	2.97	
24.0	18.0	34.4	4.83	33.3	4.69	31.1	4.43	30.0	4.29	26.7	3.90	24.4	3.63	18.9	2.97	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-16ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
50%	-24.9	-25.0	25.2	9.70	24.4	9.56	23.0	9.26	22.2	9.09	19.9	8.56	18.4	8.16	14.5	6.98
	-19.8	-20.0	28.7	9.82	27.8	9.61	25.9	9.19	25.0	8.97	22.2	8.28	20.4	7.80	15.7	6.50
	-14.7	-15.0	28.7	8.76	27.8	8.59	25.9	8.22	25.0	7.99	22.2	7.36	20.4	6.92	15.7	5.74
	-9.6	-10.0	28.7	7.54	27.8	7.42	25.9	7.16	25.0	7.02	22.2	6.56	20.4	6.22	15.7	5.23
	-4.4	-5.0	28.7	6.35	27.8	6.26	25.9	6.07	25.0	5.97	22.2	5.61	20.4	5.34	15.7	4.55
	-1.8	-2.5	28.7	5.77	27.8	5.70	25.9	5.54	25.0	5.45	22.2	5.14	20.4	4.90	15.7	4.20
	0.8	0.0	28.7	5.20	27.8	5.15	25.9	5.02	25.0	4.94	22.2	4.69	20.4	4.48	15.7	3.87
	2.8	2.0	28.7	4.77	27.8	4.73	25.9	4.62	25.0	4.56	22.2	4.34	20.4	4.16	15.7	3.61
	6.0	5.0	28.7	4.14	27.8	4.08	25.9	4.00	25.0	3.95	22.2	3.78	20.4	3.65	15.7	3.18
	7.0	6.0	28.7	4.14	27.8	4.03	25.9	3.81	25.0	3.75	22.2	3.60	20.4	3.48	15.7	3.08
	8.6	7.5	28.7	4.14	27.8	4.03	25.9	3.81	25.0	3.70	22.2	3.37	20.4	3.24	15.7	2.90
	11.2	10.0	28.7	4.14	27.8	4.03	25.9	3.81	25.0	3.70	22.2	3.37	20.4	3.14	15.7	2.61
	16.4	15.0	28.7	4.14	27.8	4.03	25.9	3.81	25.0	3.70	22.2	3.37	20.4	3.14	15.7	2.59
24.0	18.0	28.7	4.14	27.8	4.03	25.9	3.81	25.0	3.70	22.2	3.37	20.4	3.14	15.7	2.59	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
40%	-24.9	-25.0	23.0	8.54	22.2	8.39	20.7	8.08	20.0	7.92	17.8	7.40	16.3	7.02	12.6	5.96
	-19.8	-20.0	23.0	7.58	22.2	7.44	20.7	7.14	20.0	6.98	17.8	6.49	16.3	6.14	12.6	5.18
	-14.7	-15.0	23.0	6.74	22.2	6.65	20.7	6.43	20.0	6.31	17.8	5.87	16.3	5.52	12.6	4.63
	-9.6	-10.0	23.0	5.77	22.2	5.70	20.7	5.54	20.0	5.45	17.8	5.15	16.3	4.91	12.6	4.21
	-4.4	-5.0	23.0	4.83	22.2	4.78	20.7	4.67	20.0	4.61	17.8	4.39	16.3	4.21	12.6	3.66
	-1.8	-2.5	23.0	4.37	22.2	4.34	20.7	4.25	20.0	4.20	17.8	4.02	16.3	3.86	12.6	3.38
	0.8	0.0	23.0	3.93	22.2	3.91	20.7	3.85	20.0	3.81	17.8	3.65	16.3	3.52	12.6	3.11
	2.8	2.0	23.0	3.55	22.2	3.54	20.7	3.49	20.0	3.46	17.8	3.34	16.3	3.24	12.6	2.89
	6.0	5.0	23.0	3.45	22.2	3.37	20.7	3.19	20.0	3.10	17.8	2.91	16.3	2.84	12.6	2.57
	7.0	6.0	23.0	3.45	22.2	3.37	20.7	3.19	20.0	3.10	17.8	2.83	16.3	2.71	12.6	2.48
	8.6	7.5	23.0	3.45	22.2	3.37	20.7	3.19	20.0	3.10	17.8	2.83	16.3	2.66	12.6	2.34
	11.2	10.0	23.0	3.45	22.2	3.37	20.7	3.19	20.0	3.10	17.8	2.83	16.3	2.66	12.6	2.22
	16.4	15.0	23.0	3.45	22.2	3.37	20.7	3.19	20.0	3.10	17.8	2.83	16.3	2.66	12.6	2.22
24.0	18.0	23.0	3.45	22.2	3.37	20.7	3.19	20.0	3.10	17.8	2.83	16.3	2.66	12.6	2.22	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
30%	-24.9	-25.0	17.2	6.30	16.7	6.20	15.6	5.99	15.0	5.88	13.3	5.52	12.2	5.26	9.4	4.53
	-19.8	-20.0	17.2	5.68	16.7	5.56	15.6	5.34	15.0	5.24	13.3	4.89	12.2	4.65	9.4	3.97
	-14.7	-15.0	17.2	4.94	16.7	4.88	15.6	4.76	15.0	4.69	13.3	4.44	12.2	4.23	9.4	3.58
	-9.6	-10.0	17.2	4.21	16.7	4.18	15.6	4.09	15.0	4.04	13.3	3.86	12.2	3.71	9.4	3.25
	-4.4	-5.0	17.2	3.52	16.7	3.50	15.6	3.45	15.0	3.41	13.3	3.28	12.2	3.18	9.4	2.82
	-1.8	-2.5	17.2	3.14	16.7	3.13	15.6	3.10	15.0	3.08	13.3	2.99	12.2	2.90	9.4	2.60
	0.8	0.0	17.2	2.78	16.7	2.78	15.6	2.77	15.0	2.76	13.3	2.70	12.2	2.63	9.4	2.40
	2.8	2.0	17.2	2.77	16.7	2.70	15.6	2.57	15.0	2.51	13.3	2.48	12.2	2.43	9.4	2.24
	6.0	5.0	17.2	2.77	16.7	2.70	15.6	2.57	15.0	2.50	13.3	2.30	12.2	2.17	9.4	2.01
	7.0	6.0	17.2	2.77	16.7	2.70	15.6	2.57	15.0	2.50	13.3	2.30	12.2	2.17	9.4	1.94
	8.6	7.5	17.2	2.77	16.7	2.70	15.6	2.57	15.0	2.50	13.3	2.30	12.2	2.17	9.4	1.84
	11.2	10.0	17.2	2.77	16.7	2.70	15.6	2.57	15.0	2.50	13.3	2.30	12.2	2.17	9.4	1.84
	16.4	15.0	17.2	2.77	16.7	2.70	15.6	2.57	15.0	2.50	13.3	2.30	12.2	2.17	9.4	1.84
24.0	18.0	17.2	2.77	16.7	2.70	15.6	2.57	15.0	2.50	13.3	2.30	12.2	2.17	9.4	1.84	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-11. U-18ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
130%	-10.0	43.3	5.92	52.0	7.10	53.8	7.36	53.8	7.36	60.9	8.34	68.1	9.32	75.3	10.29
	-5.0	43.3	5.93	52.0	7.11	53.8	7.38	53.8	7.38	60.9	8.36	68.1	9.34	75.3	10.31
	0.0	43.3	5.95	52.0	7.13	53.8	7.40	53.8	7.40	60.9	8.38	68.1	9.36	75.3	10.33
	5.0	43.3	5.97	52.0	7.16	53.8	7.43	53.8	7.43	60.9	8.41	68.1	9.41	75.3	10.39
	10.0	43.3	6.00	52.0	7.19	53.8	7.49	53.8	7.49	60.9	8.53	68.1	9.58	75.3	10.59
	15.0	43.3	6.05	52.0	7.30	53.8	7.76	53.8	7.76	60.9	8.92	68.1	10.06	75.3	11.09
	20.0	43.3	6.38	52.0	7.86	53.8	8.66	53.8	8.66	60.9	10.04	68.1	11.61	75.3	13.33
	25.0	43.3	7.99	52.0	9.70	53.8	10.74	53.8	10.74	60.9	12.52	68.1	14.44	75.3	16.52
	30.0	43.3	9.76	52.0	11.87	53.8	13.05	53.8	13.05	60.9	15.18	68.1	17.48	75.2	19.88
	35.0	43.3	11.66	52.0	14.19	53.8	15.53	53.8	15.53	60.9	18.06	66.6	19.88	69.4	19.88
	40.0	43.3	13.71	52.0	16.70	53.8	18.21	53.8	18.21	58.9	19.88	61.4	19.88	64.1	19.88
43.0	43.3	15.01	52.0	18.30	53.4	19.75	53.4	19.75	56.0	19.88	57.6	19.08	59.1	18.28	
46.0	42.9	15.08	43.2	15.08	43.2	15.08	43.2	15.08	44.6	14.55	46.4	14.16	48.5	13.86	
52.0	18.0	6.57	19.1	6.57	19.1	6.57	19.1	6.57	21.3	6.76	23.6	6.97	26.1	7.18	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
120%	-10.0	40.0	5.47	48.0	6.56	52.5	7.19	52.5	7.19	59.5	8.15	66.5	9.10	73.5	10.05
	-5.0	40.0	5.48	48.0	6.57	52.5	7.21	52.5	7.21	59.5	8.16	66.5	9.12	73.5	10.07
	0.0	40.0	5.50	48.0	6.59	52.5	7.23	52.5	7.23	59.5	8.19	66.5	9.15	73.5	10.09
	5.0	40.0	5.52	48.0	6.62	52.5	7.26	52.5	7.26	59.5	8.22	66.5	9.19	73.5	10.15
	10.0	40.0	5.55	48.0	6.65	52.5	7.31	52.5	7.31	59.5	8.32	66.5	9.36	73.5	10.34
	15.0	40.0	5.59	48.0	6.75	52.5	7.56	52.5	7.56	59.5	8.68	66.5	9.83	73.5	10.84
	20.0	40.0	5.90	48.0	7.27	52.5	8.41	52.5	8.41	59.5	9.75	66.5	11.22	73.5	12.86
	25.0	40.0	7.47	48.0	9.02	52.5	10.43	52.5	10.43	59.5	12.13	66.5	13.97	73.5	15.96
	30.0	40.0	9.10	48.0	11.02	52.5	12.67	52.5	12.67	59.5	14.72	66.5	16.92	73.5	19.28
	35.0	40.0	10.85	48.0	13.16	52.5	15.08	52.5	15.08	59.5	17.51	66.1	19.88	68.8	19.88
	40.0	40.0	12.73	48.0	15.46	52.5	17.69	52.5	17.69	58.4	19.88	61.0	19.88	63.6	19.88
43.0	40.0	13.93	48.0	16.93	52.5	19.36	52.5	19.36	55.6	19.88	57.3	19.19	58.7	18.34	
46.0	39.6	15.05	42.9	15.13	42.9	15.13	42.9	15.13	44.3	14.56	45.9	14.12	47.9	13.80	
52.0	16.8	6.48	18.5	6.48	18.8	6.48	18.8	6.48	20.8	6.65	23.0	6.84	25.4	7.04	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
110%	-10.0	36.7	5.02	44.0	6.02	51.3	7.02	51.3	7.02	58.1	7.95	64.9	8.89	71.8	9.81
	-5.0	36.7	5.03	44.0	6.03	51.3	7.03	51.3	7.03	58.1	7.97	64.9	8.91	71.8	9.84
	0.0	36.7	5.05	44.0	6.05	51.3	7.06	51.3	7.06	58.1	8.00	64.9	8.93	71.8	9.86
	5.0	36.7	5.07	44.0	6.08	51.3	7.08	51.3	7.08	58.1	8.02	64.9	8.97	71.8	9.91
	10.0	36.7	5.10	44.0	6.11	51.3	7.13	51.3	7.13	58.1	8.12	64.9	9.12	71.8	10.09
	15.0	36.7	5.14	44.0	6.19	51.3	7.36	51.3	7.36	58.1	8.45	64.9	9.56	71.8	10.58
	20.0	36.7	5.41	44.0	6.68	51.3	8.16	51.3	8.16	58.1	9.46	64.9	10.84	71.8	12.40
	25.0	36.7	6.96	44.0	8.36	51.3	10.12	51.3	10.12	58.1	11.75	64.9	13.51	71.8	15.41
	30.0	36.7	8.45	44.0	10.18	51.3	12.30	51.3	12.30	58.1	14.27	64.9	16.37	71.8	18.63
	35.0	36.7	10.04	44.0	12.13	51.3	14.64	51.3	14.64	58.1	16.97	64.9	19.46	68.3	19.88
	40.0	36.7	11.77	44.0	14.24	51.3	17.17	51.3	17.17	57.7	19.70	60.5	19.87	63.1	19.88
43.0	36.7	12.86	44.0	15.58	51.3	18.80	51.3	18.80	55.2	19.88	57.0	19.33	58.3	18.42	
46.0	36.3	13.89	42.7	15.18	42.7	15.18	42.7	15.18	43.9	14.58	45.5	14.10	47.4	13.74	
52.0	15.6	6.39	17.1	6.39	18.4	6.39	18.4	6.39	20.3	6.54	22.4	6.71	24.7	6.89	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	-10.0	33.3	4.57	40.0	5.48	46.7	6.39	50.0	6.85	56.7	7.76	63.3	8.67	70.0	9.58
	-5.0	33.3	4.58	40.0	5.49	46.7	6.41	50.0	6.86	56.7	7.78	63.3	8.69	70.0	9.60
	0.0	33.3	4.60	40.0	5.51	46.7	6.43	50.0	6.89	56.7	7.80	63.3	8.71	70.0	9.62
	5.0	33.3	4.62	40.0	5.54	46.7	6.46	50.0	6.91	56.7	7.83	63.3	8.75	70.0	9.67
	10.0	33.3	4.65	40.0	5.57	46.7	6.49	50.0	6.95	56.7	7.91	63.3	8.89	70.0	9.85
	15.0	33.3	4.69	40.0	5.64	46.7	6.64	50.0	7.16	56.7	8.21	63.3	9.30	70.0	10.32
	20.0	33.3	4.93	40.0	6.09	46.7	7.30	50.0	7.91	56.7	9.17	63.3	10.47	70.0	11.95
	25.0	33.3	6.46	40.0	7.71	46.7	9.08	50.0	9.82	56.7	11.37	63.3	13.06	70.0	14.87
	30.0	33.3	7.80	40.0	9.36	46.7	11.04	50.0	11.93	56.7	13.82	63.3	15.84	70.0	17.99
	35.0	33.3	9.25	40.0	11.13	46.7	13.15	50.0	14.20	56.7	16.45	63.3	18.83	67.7	19.88
	40.0	33.3	10.81	40.0	13.04	46.7	15.42	50.0	16.67	56.7	19.29	60.0	19.88	62.5	19.88
43.0	33.3	11.80	40.0	14.25	46.7	16.87	50.0	18.24	54.8	19.88	56.8	19.48	57.9	18.52	
46.0	33.0	12.73	39.6	15.40	42.1	15.64	42.5	15.26	43.6	14.61	45.1	14.10	46.8	13.70	
52.0	14.4	6.10	15.7	6.15	17.2	6.25	18.0	6.31	19.8	6.44	21.9	6.59	24.1	6.75	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-18ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
90%	-10.0	30.0	4.12	36.0	4.93	42.0	5.75	45.0	6.16	51.0	6.98	57.0	7.81	63.0	8.63
	-5.0	30.0	4.13	36.0	4.95	42.0	5.77	45.0	6.18	51.0	7.00	57.0	7.82	63.0	8.65
	0.0	30.0	4.14	36.0	4.96	42.0	5.79	45.0	6.20	51.0	7.02	57.0	7.85	63.0	8.67
	5.0	30.0	4.16	36.0	4.98	42.0	5.81	45.0	6.22	51.0	7.05	57.0	7.87	63.0	8.70
	10.0	30.0	4.18	36.0	5.02	42.0	5.84	45.0	6.25	51.0	7.09	57.0	7.95	63.0	8.83
	15.0	30.0	4.22	36.0	5.06	42.0	5.93	45.0	6.38	51.0	7.30	57.0	8.24	63.0	9.21
	20.0	30.0	4.37	36.0	5.37	42.0	6.41	45.0	6.94	51.0	8.05	57.0	9.16	63.0	10.29
	25.0	30.0	5.68	36.0	6.90	42.0	8.05	45.0	8.66	51.0	9.95	57.0	11.34	63.0	12.83
	30.0	30.0	7.04	36.0	8.36	42.0	9.78	45.0	10.53	51.0	12.11	57.0	13.78	63.0	15.57
	35.0	30.0	8.33	36.0	9.93	42.0	11.64	45.0	12.52	51.0	14.42	57.0	16.41	63.0	18.52
	40.0	30.0	9.72	36.0	11.62	42.0	13.65	45.0	14.71	51.0	16.92	57.0	19.25	60.3	19.88
43.0	30.0	10.60	36.0	12.70	42.0	14.93	45.0	16.09	51.0	18.52	55.2	19.88	56.7	19.19	
46.0	29.7	11.42	35.6	13.71	41.6	16.14	41.9	15.70	42.6	14.88	43.6	14.20	44.9	13.65	
52.0	13.8	5.98	14.8	5.96	16.0	5.98	16.6	6.00	18.1	6.07	19.8	6.15	21.6	6.24	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
80%	-10.0	26.7	3.66	32.0	4.39	37.3	5.12	40.0	5.48	45.3	6.21	50.7	6.94	56.0	7.67
	-5.0	26.7	3.67	32.0	4.40	37.3	5.13	40.0	5.49	45.3	6.23	50.7	6.96	56.0	7.69
	0.0	26.7	3.68	32.0	4.41	37.3	5.15	40.0	5.51	45.3	6.25	50.7	6.98	56.0	7.71
	5.0	26.7	3.70	32.0	4.43	37.3	5.17	40.0	5.54	45.3	6.27	50.7	7.01	56.0	7.74
	10.0	26.7	3.72	32.0	4.46	37.3	5.20	40.0	5.57	45.3	6.30	50.7	7.04	56.0	7.80
	15.0	26.7	3.76	32.0	4.50	37.3	5.25	40.0	5.63	45.3	6.42	50.7	7.23	56.0	8.06
	20.0	26.7	3.84	32.0	4.68	37.3	5.57	40.0	6.01	45.3	6.96	50.7	7.92	56.0	8.89
	25.0	26.7	4.81	32.0	6.06	37.3	7.09	40.0	7.59	45.3	8.64	50.7	9.76	56.0	10.96
	30.0	26.7	6.32	32.0	7.42	37.3	8.60	40.0	9.22	45.3	10.52	50.7	11.89	56.0	13.34
	35.0	26.7	7.45	32.0	8.80	37.3	10.23	40.0	10.96	45.3	12.53	50.7	14.17	56.0	15.89
	40.0	26.7	8.67	32.0	10.28	37.3	11.98	40.0	12.86	45.3	14.70	50.7	16.63	56.0	18.66
43.0	26.7	9.44	32.0	11.22	37.3	13.09	40.0	14.07	45.3	16.09	50.7	18.21	55.2	19.88	
46.0	26.4	10.16	31.7	12.10	37.0	14.14	39.6	15.20	41.9	15.44	42.5	14.59	43.4	13.88	
52.0	13.3	5.90	14.0	5.81	14.9	5.77	15.4	5.76	16.6	5.75	17.9	5.77	19.3	5.80	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
70%	-10.0	23.3	3.21	28.0	3.84	32.7	4.48	35.0	4.80	39.7	5.44	44.3	6.08	49.0	6.71
	-5.0	23.3	3.21	28.0	3.85	32.7	4.49	35.0	4.81	39.7	5.45	44.3	6.09	49.0	6.73
	0.0	23.3	3.22	28.0	3.86	32.7	4.51	35.0	4.83	39.7	5.47	44.3	6.11	49.0	6.75
	5.0	23.3	3.24	28.0	3.88	32.7	4.53	35.0	4.85	39.7	5.49	44.3	6.13	49.0	6.78
	10.0	23.3	3.26	28.0	3.91	32.7	4.55	35.0	4.88	39.7	5.52	44.3	6.16	49.0	6.81
	15.0	23.3	3.29	28.0	3.95	32.7	4.59	35.0	4.91	39.7	5.58	44.3	6.26	49.0	6.96
	20.0	23.3	3.35	28.0	4.04	32.7	4.77	35.0	5.14	39.7	5.93	44.3	6.73	49.0	7.54
	25.0	23.3	3.99	28.0	5.02	32.7	6.07	35.0	6.56	39.7	7.44	44.3	8.33	49.0	9.27
	30.0	23.3	5.64	28.0	6.54	32.7	7.51	35.0	8.01	39.7	9.05	44.3	10.15	49.0	11.30
	35.0	23.3	6.62	28.0	7.73	32.7	8.90	35.0	9.49	39.7	10.77	44.3	12.10	49.0	13.48
	40.0	23.3	7.67	28.0	9.00	32.7	10.41	35.0	11.13	39.7	12.63	44.3	14.20	49.0	15.83
43.0	23.3	8.33	28.0	9.81	32.7	11.36	35.0	12.16	39.7	13.81	44.3	15.54	49.0	17.33	
46.0	23.1	8.96	27.7	10.57	32.3	12.26	34.7	13.13	39.3	14.93	41.8	15.39	42.2	14.48	
52.0	12.8	5.88	13.4	5.73	14.0	5.61	14.4	5.57	15.3	5.51	16.2	5.46	17.3	5.43	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
60%	-10.0	20.0	2.75	24.0	3.30	28.0	3.84	30.0	4.12	34.0	4.66	38.0	5.21	42.0	5.76
	-5.0	20.0	2.76	24.0	3.30	28.0	3.85	30.0	4.13	34.0	4.67	38.0	5.22	42.0	5.77
	0.0	20.0	2.77	24.0	3.32	28.0	3.86	30.0	4.14	34.0	4.69	38.0	5.24	42.0	5.79
	5.0	20.0	2.78	24.0	3.33	28.0	3.88	30.0	4.16	34.0	4.71	38.0	5.26	42.0	5.81
	10.0	20.0	2.80	24.0	3.35	28.0	3.91	30.0	4.18	34.0	4.74	38.0	5.29	42.0	5.84
	15.0	20.0	2.83	24.0	3.39	28.0	3.94	30.0	4.22	34.0	4.77	38.0	5.33	42.0	5.91
	20.0	20.0	2.88	24.0	3.44	28.0	4.03	30.0	4.32	34.0	4.96	38.0	5.61	42.0	6.27
	25.0	20.0	3.24	24.0	4.06	28.0	4.90	30.0	5.29	34.0	6.19	38.0	7.04	42.0	7.76
	30.0	20.0	5.00	24.0	5.72	28.0	6.48	30.0	6.88	34.0	7.70	38.0	8.56	42.0	9.45
	35.0	20.0	5.82	24.0	6.72	28.0	7.66	30.0	8.13	34.0	9.15	38.0	10.19	42.0	11.27
	40.0	20.0	6.71	24.0	7.80	28.0	8.93	30.0	9.51	34.0	10.70	38.0	11.94	42.0	13.23
43.0	20.0	7.28	24.0	8.48	28.0	9.73	30.0	10.37	34.0	11.69	38.0	13.06	42.0	14.48	
46.0	19.8	7.81	23.8	9.12	27.7	10.49	29.7	11.19	33.7	12.63	37.6	14.12	41.6	15.66	
52.0	12.5	5.93	12.9	5.71	13.3	5.54	13.6	5.47	14.2	5.34	14.8	5.24	15.6	5.15	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-18ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
50%	-10.0	16.7	2.29	20.0	2.75	23.3	3.21	25.0	3.43	28.3	3.89	31.7	4.35	35.0	4.80
	-5.0	16.7	2.30	20.0	2.76	23.3	3.21	25.0	3.44	28.3	3.90	31.7	4.36	35.0	4.81
	0.0	16.7	2.31	20.0	2.77	23.3	3.22	25.0	3.45	28.3	3.91	31.7	4.37	35.0	4.83
	5.0	16.7	2.32	20.0	2.78	23.3	3.24	25.0	3.47	28.3	3.93	31.7	4.39	35.0	4.85
	10.0	16.7	2.33	20.0	2.80	23.3	3.26	25.0	3.49	28.3	3.95	31.7	4.41	35.0	4.87
	15.0	16.7	2.36	20.0	2.82	23.3	3.29	25.0	3.52	28.3	3.99	31.7	4.45	35.0	4.91
	20.0	16.7	2.40	20.0	2.88	23.3	3.34	25.0	3.57	28.3	4.06	31.7	4.57	35.0	5.08
	25.0	16.7	2.58	20.0	3.18	23.3	3.83	25.0	4.12	28.3	4.82	31.7	5.50	35.0	6.18
	30.0	16.7	4.39	20.0	4.95	23.3	5.54	25.0	5.84	28.3	6.46	31.7	7.11	35.0	7.78
	35.0	16.7	5.07	20.0	5.78	23.3	6.51	25.0	6.86	28.3	7.65	31.7	8.44	35.0	9.25
	40.0	16.7	5.80	20.0	6.66	23.3	7.54	25.0	7.99	28.3	8.91	31.7	9.86	35.0	10.84
43.0	16.7	6.27	20.0	7.22	23.3	8.20	25.0	8.70	28.3	9.72	31.7	10.77	35.0	11.85	
46.0	16.5	6.70	19.8	7.75	23.1	8.82	24.8	9.36	28.1	10.48	31.4	11.63	34.7	12.80	
52.0	12.3	6.08	12.5	5.81	12.8	5.57	12.9	5.47	13.3	5.28	13.7	5.12	14.2	4.98	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
40%	-10.0	13.3	1.84	16.0	2.20	18.7	2.57	20.0	2.75	22.7	3.12	25.3	3.48	28.0	3.85
	-5.0	13.3	1.84	16.0	2.21	18.7	2.57	20.0	2.76	22.7	3.12	25.3	3.49	28.0	3.85
	0.0	13.3	1.85	16.0	2.22	18.7	2.58	20.0	2.77	22.7	3.13	25.3	3.50	28.0	3.87
	5.0	13.3	1.86	16.0	2.23	18.7	2.59	20.0	2.78	22.7	3.15	25.3	3.51	28.0	3.88
	10.0	13.3	1.87	16.0	2.24	18.7	2.61	20.0	2.79	22.7	3.17	25.3	3.53	28.0	3.90
	15.0	13.3	1.89	16.0	2.26	18.7	2.64	20.0	2.82	22.7	3.20	25.3	3.57	28.0	3.94
	20.0	13.3	1.93	16.0	2.31	18.7	2.68	20.0	2.87	22.7	3.24	25.3	3.62	28.0	4.00
	25.0	13.3	2.01	16.0	2.43	18.7	2.88	20.0	3.09	22.7	3.59	25.3	4.08	28.0	4.58
	30.0	13.3	3.82	16.0	4.24	18.7	4.67	20.0	4.89	22.7	5.34	25.3	5.80	28.0	6.28
	35.0	13.3	4.36	16.0	4.89	18.7	5.43	20.0	5.69	22.7	6.27	25.3	6.84	28.0	7.43
	40.0	13.3	4.94	16.0	5.58	18.7	6.24	20.0	6.58	22.7	7.26	25.3	7.95	28.0	8.66
43.0	13.3	5.31	16.0	6.03	18.7	6.76	20.0	7.13	22.7	7.89	25.3	8.66	28.0	9.45	
46.0	13.2	5.65	15.8	6.44	18.5	7.25	19.8	7.66	22.4	8.49	25.1	9.33	27.7	10.19	
52.0	10.8	5.64	12.3	6.07	12.4	5.77	12.5	5.64	12.7	5.39	12.9	5.17	13.2	4.97	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
30%	-10.0	10.0	1.38	12.0	1.66	14.0	1.93	15.0	2.07	17.0	2.34	19.0	2.62	21.0	2.89
	-5.0	10.0	1.39	12.0	1.66	14.0	1.94	15.0	2.07	17.0	2.35	19.0	2.62	21.0	2.90
	0.0	10.0	1.39	12.0	1.67	14.0	1.94	15.0	2.08	17.0	2.35	19.0	2.63	21.0	2.90
	5.0	10.0	1.40	12.0	1.68	14.0	1.95	15.0	2.09	17.0	2.36	19.0	2.64	21.0	2.92
	10.0	10.0	1.41	12.0	1.69	14.0	1.96	15.0	2.10	17.0	2.38	19.0	2.66	21.0	2.93
	15.0	10.0	1.42	12.0	1.70	14.0	1.98	15.0	2.12	17.0	2.40	19.0	2.68	21.0	2.96
	20.0	10.0	1.45	12.0	1.73	14.0	2.02	15.0	2.16	17.0	2.44	19.0	2.72	21.0	3.01
	25.0	10.0	1.52	12.0	1.81	14.0	2.09	15.0	2.23	17.0	2.55	19.0	2.86	21.0	3.19
	30.0	10.0	3.30	12.0	3.58	14.0	3.88	15.0	4.03	17.0	4.33	19.0	4.64	21.0	4.95
	35.0	10.0	3.69	12.0	4.06	14.0	4.44	15.0	4.62	17.0	5.01	19.0	5.40	21.0	5.79
	40.0	10.0	4.12	12.0	4.58	14.0	5.04	15.0	5.27	17.0	5.74	19.0	6.21	21.0	6.69
	43.0	10.0	4.39	12.0	4.90	14.0	5.42	15.0	5.68	17.0	6.20	19.0	6.73	21.0	7.26
	46.0	9.9	4.65	11.9	5.21	13.9	5.78	14.9	6.06	16.8	6.64	18.8	7.22	20.8	7.80
52.0	8.1	4.64	9.7	5.20	11.3	5.77	12.2	6.05	12.3	5.80	12.4	5.50	12.5	5.24	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-12. U-18ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
130%	-24.9	-25.0	28.7	13.11	27.9	12.93	26.4	12.53	25.6	12.32	23.2	11.60	21.5	11.07	17.2	9.50
	-19.8	-20.0	33.5	13.59	32.6	13.38	30.9	12.93	29.9	12.69	27.2	11.90	25.2	11.32	20.2	9.65
	-14.7	-15.0	38.8	14.25	37.8	14.01	35.8	13.50	34.8	13.23	31.6	12.35	29.4	11.72	23.7	9.93
	-9.6	-10.0	45.1	15.21	44.0	14.94	41.7	14.36	40.5	14.05	36.9	13.08	34.4	12.37	27.7	10.41
	-4.4	-5.0	52.4	16.50	51.2	16.16	48.5	15.43	47.2	15.13	43.0	14.01	40.1	13.21	32.3	11.00
	-1.8	-2.5	56.5	17.18	55.1	16.85	52.3	16.14	50.8	15.76	46.3	14.56	43.2	13.70	34.8	11.36
	0.8	0.0	60.7	17.64	59.2	17.29	56.2	16.54	54.6	16.15	49.8	14.90	46.4	14.01	37.6	11.61
	2.8	2.0	64.2	17.92	62.8	17.60	59.6	16.83	57.9	16.43	52.9	15.15	49.1	14.11	37.9	10.95
	6.0	5.0	69.0	17.92	66.9	17.33	62.4	16.08	60.2	15.47	53.5	13.70	49.1	12.56	37.9	9.82
	7.0	6.0	69.1	17.18	66.9	16.58	62.4	15.40	60.2	14.82	53.5	13.14	49.1	12.06	37.9	9.46
	8.6	7.5	69.1	16.03	66.9	15.48	62.4	14.40	60.2	13.87	53.5	12.32	49.1	11.32	37.9	8.92
	11.2	10.0	69.1	14.19	66.9	13.72	62.4	12.80	60.2	12.34	53.5	11.02	49.1	10.16	37.9	8.08
16.4	15.0	69.1	10.93	66.9	10.60	62.4	9.96	60.2	9.64	53.5	8.70	49.1	8.09	37.9	6.58	
24.0	18.0	69.1	9.62	66.9	9.36	62.4	8.84	60.2	8.58	53.5	7.80	49.1	7.27	37.9	5.97	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
120%	-24.9	-25.0	28.6	12.99	27.9	12.80	26.3	12.42	25.5	12.20	23.1	11.50	21.4	10.97	17.1	9.42
	-19.8	-20.0	33.4	13.47	32.5	13.26	30.8	12.81	29.8	12.57	27.1	11.79	25.1	11.21	20.1	9.57
	-14.7	-15.0	38.8	14.13	37.8	13.89	35.7	13.38	34.7	13.12	31.5	12.25	29.3	11.62	23.6	9.85
	-9.6	-10.0	45.0	15.09	43.9	14.82	41.6	14.25	40.4	13.95	36.8	12.98	34.3	12.28	27.6	10.33
	-4.4	-5.0	52.4	16.42	51.1	16.09	48.5	15.38	47.1	15.01	42.9	13.91	40.0	13.11	32.2	10.92
	-1.8	-2.5	56.4	17.03	55.0	16.70	52.2	16.00	50.7	15.62	46.2	14.44	43.0	13.59	34.7	11.28
	0.8	0.0	60.7	17.45	59.2	17.10	56.1	16.37	54.5	15.98	49.7	14.75	46.3	13.87	37.0	11.33
	2.8	2.0	64.3	17.77	62.7	17.40	59.5	16.64	57.9	16.25	52.3	14.77	47.9	13.54	37.0	10.57
	6.0	5.0	67.5	17.04	65.3	16.46	61.0	15.31	58.8	14.75	52.3	13.11	47.9	12.05	37.0	9.48
	7.0	6.0	67.5	16.29	65.3	15.74	61.0	14.66	58.8	14.13	52.3	12.57	47.9	11.56	37.0	9.13
	8.6	7.5	67.5	15.19	65.3	14.69	61.0	13.70	58.8	13.21	52.3	11.78	47.9	10.86	37.0	8.62
	11.2	10.0	67.5	13.44	65.3	13.02	61.0	12.17	58.8	11.76	52.3	10.54	47.9	9.74	37.0	7.80
16.4	15.0	67.5	10.33	65.3	10.04	61.0	9.46	58.8	9.17	52.3	8.32	47.9	7.76	37.0	6.36	
24.0	18.0	67.5	9.44	65.3	9.18	61.0	8.67	58.8	8.42	52.3	7.65	47.9	7.14	37.0	5.86	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
110%	-24.9	-25.0	28.5	12.86	27.8	12.68	26.2	12.29	25.4	12.09	23.0	11.39	21.3	10.87	17.0	9.34
	-19.8	-20.0	33.3	13.34	32.5	13.13	30.7	12.69	29.8	12.46	27.0	11.69	25.0	11.12	20.0	9.49
	-14.7	-15.0	38.7	14.01	37.7	13.78	35.7	13.27	34.6	13.01	31.4	12.15	29.2	11.53	23.5	9.77
	-9.6	-10.0	45.0	14.98	43.8	14.71	41.5	14.14	40.4	13.84	36.7	12.88	34.2	12.19	27.5	10.25
	-4.4	-5.0	52.4	16.31	51.1	15.99	48.4	15.31	47.0	14.95	42.8	13.78	39.9	12.95	32.1	10.84
	-1.8	-2.5	56.4	16.86	55.0	16.53	52.1	15.85	50.6	15.48	46.1	14.32	42.9	13.48	34.5	11.19
	0.8	0.0	60.6	17.26	59.1	16.92	56.0	16.19	54.4	15.81	49.6	14.60	46.2	13.74	36.1	10.94
	2.8	2.0	64.2	17.57	62.7	17.22	59.4	16.47	57.4	15.91	51.0	14.14	46.8	12.98	36.1	10.21
	6.0	5.0	65.9	16.16	63.8	15.62	59.5	14.58	57.4	14.06	51.0	12.54	46.8	11.55	36.1	9.15
	7.0	6.0	65.9	15.44	63.8	14.94	59.5	13.95	57.4	13.46	51.0	12.02	46.8	11.09	36.1	8.81
	8.6	7.5	65.9	14.39	63.8	13.93	59.5	13.03	57.4	12.58	51.0	11.27	46.8	10.41	36.1	8.32
	11.2	10.0	65.9	12.73	63.8	12.34	59.5	11.58	57.4	11.20	51.0	10.08	46.8	9.34	36.1	7.54
16.4	15.0	65.9	9.76	63.8	9.50	59.5	8.98	57.4	8.73	51.0	7.95	46.8	7.44	36.1	6.15	
24.0	18.0	65.9	9.25	63.8	9.00	59.5	8.50	57.4	8.25	51.0	7.50	46.8	7.01	36.1	5.76	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	-24.9	-25.0	28.5	12.74	27.7	12.56	26.1	12.18	25.3	11.98	22.9	11.29	21.3	10.78	16.9	9.26
	-19.8	-20.0	33.3	13.22	32.4	13.02	30.6	12.58	29.7	12.34	26.9	11.58	24.9	11.02	19.9	9.41
	-14.7	-15.0	38.6	13.90	37.6	13.66	35.6	13.17	34.5	12.90	31.3	12.05	29.1	11.43	23.4	9.70
	-9.6	-10.0	44.9	14.88	43.8	14.61	41.5	14.04	40.3	13.75	36.6	12.79	34.1	12.10	27.4	10.18
	-4.4	-5.0	52.3	16.20	51.0	15.88	48.3	15.22	47.0	14.87	42.7	13.73	39.8	12.91	32.0	10.76
	-1.8	-2.5	56.4	16.69	54.9	16.37	52.0	15.69	50.6	15.33	46.0	14.19	42.8	13.36	34.4	11.10
	0.8	0.0	60.6	17.07	59.1	16.73	55.9	16.02	54.4	15.65	49.5	14.45	45.6	13.41	35.3	10.55
	2.8	2.0	64.2	17.39	62.2	16.85	58.1	15.72	56.0	15.16	49.8	13.52	45.6	12.45	35.3	9.85
	6.0	5.0	64.3	15.31	62.2	14.82	58.1	13.87	56.0	13.39	49.8	11.99	45.6	11.06	35.3	8.82
	7.0	6.0	64.3	14.63	62.2	14.17	58.1	13.26	56.0	12.80	49.8	11.48	45.6	10.61	35.3	8.49
	8.6	7.5	64.3	13.60	62.2	13.19	58.1	12.36	56.0	11.96	49.8	10.75	45.6	9.96	35.3	8.02
	11.2	10.0	64.3	12.02	62.2	11.67	58.1	10.99	56.0	10.64	49.8	9.63	45.6	8.96	35.3	7.29
16.4	15.0	64.3	9.24	62.2	9.01	58.1	8.54	56.0	8.31	49.8	7.59	45.6	7.11	35.3	5.87	
24.0	18.0	64.3	9.06	62.2	8.82	58.1	8.33	56.0	8.09	49.8	7.36	45.6	6.87	35.3	5.66	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-18ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
90%	-24.9	-25.0	28.2	12.33	27.4	12.16	25.9	11.79	25.1	11.59	22.6	10.93	21.0	10.44	16.6	8.99
	-19.8	-20.0	33.0	12.81	32.1	12.62	30.3	12.19	29.4	11.97	26.6	11.23	24.6	10.68	19.6	9.14
	-14.7	-15.0	38.5	13.52	37.4	13.28	35.4	12.80	34.3	12.54	31.1	11.72	28.8	11.12	23.0	9.43
	-9.6	-10.0	44.8	14.52	43.7	14.25	41.3	13.70	40.1	13.40	36.4	12.46	33.8	11.79	27.1	9.91
	-4.4	-5.0	52.3	15.69	50.9	15.41	48.2	14.80	46.8	14.47	42.4	13.42	39.4	12.65	31.6	10.51
	-1.8	-2.5	56.3	16.07	54.8	15.77	51.9	15.13	50.3	14.79	44.8	13.33	41.1	12.35	31.7	9.90
	0.8	0.0	57.9	15.24	56.0	14.80	52.3	13.92	50.4	13.49	44.8	12.18	41.1	11.30	31.7	9.12
	2.8	2.0	57.9	14.03	56.0	13.64	52.3	12.85	50.4	12.46	44.8	11.29	41.1	10.50	31.7	8.57
	6.0	5.0	57.9	12.38	56.0	12.08	52.3	11.47	50.4	11.16	44.8	10.19	41.1	9.51	31.7	7.74
	7.0	6.0	57.9	12.09	56.0	11.76	52.3	11.10	50.4	10.77	44.8	9.78	41.1	9.12	31.7	7.46
	8.6	7.5	57.9	11.23	56.0	10.94	52.3	10.35	50.4	10.05	44.8	9.16	41.1	8.57	31.7	7.05
	11.2	10.0	57.9	9.90	56.0	9.66	52.3	9.18	50.4	8.94	44.8	8.20	41.1	7.70	31.7	6.41
16.4	15.0	57.9	8.31	56.0	8.09	52.3	7.65	50.4	7.43	44.8	6.78	41.1	6.34	31.7	5.24	
24.0	18.0	57.9	8.31	56.0	8.09	52.3	7.65	50.4	7.43	44.8	6.78	41.1	6.34	31.7	5.24	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
80%	-24.9	-25.0	28.2	12.05	27.4	11.89	25.8	11.53	25.0	11.33	22.5	10.69	20.8	10.21	16.5	8.81
	-19.8	-20.0	33.1	12.56	32.2	12.36	30.3	11.94	29.4	11.72	26.5	11.00	24.5	10.47	19.5	8.96
	-14.7	-15.0	38.6	13.29	37.5	13.06	35.4	12.58	34.3	12.32	31.0	11.51	28.8	10.91	22.9	9.26
	-9.6	-10.0	45.1	14.37	43.9	14.07	41.5	13.50	40.2	13.21	36.4	12.27	33.8	11.60	26.9	9.75
	-4.4	-5.0	51.4	14.80	49.8	14.42	46.5	13.65	44.8	13.26	39.8	12.07	36.5	11.26	28.2	9.19
	-1.8	-2.5	51.4	13.47	49.8	13.14	46.5	12.46	44.8	12.12	39.8	11.07	36.5	10.35	28.2	8.53
	0.8	0.0	51.4	12.17	49.8	11.91	46.5	11.36	44.8	11.07	39.8	10.19	36.5	9.57	28.2	7.93
	2.8	2.0	51.4	11.35	49.8	11.11	46.5	10.61	44.8	10.36	39.8	9.55	36.5	8.98	28.2	7.47
	6.0	5.0	51.4	10.19	49.8	9.98	46.5	9.55	44.8	9.32	39.8	8.61	36.5	8.10	28.2	6.74
	7.0	6.0	51.4	9.87	49.8	9.65	46.5	9.20	44.8	8.97	39.8	8.26	36.5	7.78	28.2	6.51
	8.6	7.5	51.4	9.16	49.8	8.97	46.5	8.57	44.8	8.37	39.8	7.74	36.5	7.31	28.2	6.16
	11.2	10.0	51.4	8.05	49.8	7.90	46.5	7.59	44.8	7.43	39.8	6.93	36.5	6.57	28.2	5.61
16.4	15.0	51.4	7.55	49.8	7.36	46.5	6.97	44.8	6.78	39.8	6.19	36.5	5.80	28.2	4.83	
24.0	18.0	51.4	7.55	49.8	7.36	46.5	6.97	44.8	6.78	39.8	6.19	36.5	5.80	28.2	4.83	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
70%	-24.9	-25.0	28.6	12.01	27.8	11.84	26.2	11.48	25.3	11.29	22.8	10.65	21.1	10.17	16.6	8.77
	-19.8	-20.0	33.6	12.55	32.7	12.35	30.8	11.92	29.8	11.70	26.8	10.97	24.8	10.44	19.6	8.93
	-14.7	-15.0	39.3	13.32	38.2	13.09	36.0	12.60	34.9	12.34	31.5	11.51	29.2	10.91	23.1	9.25
	-9.6	-10.0	45.0	14.03	43.6	13.69	40.7	13.00	39.2	12.64	34.8	11.49	31.9	10.75	24.7	8.82
	-4.4	-5.0	45.0	11.82	43.6	11.58	40.7	11.10	39.2	10.84	34.8	10.04	31.9	9.47	24.7	7.92
	-1.8	-2.5	45.0	10.89	43.6	10.69	40.7	10.25	39.2	10.02	34.8	9.30	31.9	8.79	24.7	7.38
	0.8	0.0	45.0	9.98	43.6	9.80	40.7	9.42	39.2	9.22	34.8	8.58	31.9	8.12	24.7	6.87
	2.8	2.0	45.0	9.29	43.6	9.12	40.7	8.79	39.2	8.61	34.8	8.03	31.9	7.61	24.7	6.46
	6.0	5.0	45.0	8.29	43.6	8.15	40.7	7.86	39.2	7.71	34.8	7.21	31.9	6.84	24.7	5.81
	7.0	6.0	45.0	7.95	43.6	7.81	40.7	7.53	39.2	7.38	34.8	6.91	31.9	6.57	24.7	5.64
	8.6	7.5	45.0	7.37	43.6	7.25	40.7	7.01	39.2	6.88	34.8	6.47	31.9	6.17	24.7	5.34
	11.2	10.0	45.0	6.80	43.6	6.63	40.7	6.29	39.2	6.12	34.8	5.79	31.9	5.56	24.7	4.87
16.4	15.0	45.0	6.80	43.6	6.63	40.7	6.29	39.2	6.12	34.8	5.61	31.9	5.27	24.7	4.42	
24.0	18.0	45.0	6.80	43.6	6.63	40.7	6.29	39.2	6.12	34.8	5.61	31.9	5.27	24.7	4.42	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
60%	-24.9	-25.0	29.8	12.34	29.0	12.17	27.2	11.79	26.3	11.58	23.7	10.92	21.8	10.42	17.2	8.98
	-19.8	-20.0	35.1	12.93	34.1	12.71	32.1	12.27	31.0	12.03	27.9	11.27	25.8	10.72	20.3	9.15
	-14.7	-15.0	38.6	12.77	37.3	12.49	34.8	11.90	33.6	11.61	29.9	10.68	27.4	10.05	21.2	8.36
	-9.6	-10.0	38.6	11.22	37.3	11.03	34.8	10.61	33.6	10.38	29.9	9.66	27.4	9.13	21.2	7.58
	-4.4	-5.0	38.6	9.64	37.3	9.48	34.8	9.15	33.6	8.97	29.9	8.39	27.4	7.97	21.2	6.78
	-1.8	-2.5	38.6	8.85	37.3	8.72	34.8	8.43	33.6	8.27	29.9	7.76	27.4	7.39	21.2	6.33
	0.8	0.0	38.6	8.09	37.3	7.98	34.8	7.73	33.6	7.60	29.9	7.16	27.4	6.83	21.2	5.89
	2.8	2.0	38.6	7.51	37.3	7.41	34.8	7.20	33.6	7.08	29.9	6.69	27.4	6.40	21.2	5.55
	6.0	5.0	38.6	6.63	37.3	6.55	34.8	6.37	33.6	6.28	29.9	5.95	27.4	5.71	21.2	4.97
	7.0	6.0	38.6	6.31	37.3	6.24	34.8	6.08	33.6	6.00	29.9	5.71	27.4	5.49	21.2	4.84
	8.6	7.5	38.6	6.05	37.3	5.90	34.8	5.67	33.6	5.60	29.9	5.36	27.4	5.17	21.2	4.59
	11.2	10.0	38.6	6.05	37.3	5.90	34.8	5.61	33.6	5.46	29.9	5.03	27.4	4.73	21.2	4.20
16.4	15.0	38.6	6.05	37.3	5.90	34.8	5.61	33.6	5.46	29.9	5.03	27.4	4.73	21.2	4.01	
24.0	18.0	38.6	6.05	37.3	5.90	34.8	5.61	33.6	5.46	29.9	5.03	27.4	4.73	21.2	4.01	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-18ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
50%	-24.9	-25.0	32.1	13.19	31.1	12.95	29.0	12.44	28.0	12.18	24.9	11.34	22.8	10.74	17.6	9.09
	-19.8	-20.0	32.1	11.43	31.1	11.21	29.0	10.76	28.0	10.52	24.9	9.79	22.8	9.27	17.6	7.86
	-14.7	-15.0	32.1	10.39	31.1	10.21	29.0	9.78	28.0	9.53	24.9	8.84	22.8	8.35	17.6	7.06
	-9.6	-10.0	32.1	9.04	31.1	8.91	29.0	8.62	28.0	8.47	24.9	7.96	22.8	7.59	17.6	6.49
	-4.4	-5.0	32.1	7.73	31.1	7.63	29.0	7.42	28.0	7.30	24.9	6.91	22.8	6.61	17.6	5.74
	-1.8	-2.5	32.1	7.09	31.1	7.01	29.0	6.83	28.0	6.73	24.9	6.39	22.8	6.13	17.6	5.36
	0.8	0.0	32.1	6.47	31.1	6.40	29.0	6.26	28.0	6.18	24.9	5.89	22.8	5.67	17.6	4.99
	2.8	2.0	32.1	5.98	31.1	5.93	29.0	5.80	28.0	5.73	24.9	5.48	22.8	5.28	17.6	4.68
	6.0	5.0	32.1	5.29	31.1	5.17	29.0	5.08	28.0	5.03	24.9	4.86	22.8	4.71	17.6	4.23
	7.0	6.0	32.1	5.29	31.1	5.17	29.0	4.93	28.0	4.81	24.9	4.67	22.8	4.54	17.6	4.11
	8.6	7.5	32.1	5.29	31.1	5.17	29.0	4.93	28.0	4.81	24.9	4.44	22.8	4.28	17.6	3.92
	11.2	10.0	32.1	5.29	31.1	5.17	29.0	4.93	28.0	4.81	24.9	4.44	22.8	4.20	17.6	3.60
	16.4	15.0	32.1	5.29	31.1	5.17	29.0	4.93	28.0	4.81	24.9	4.44	22.8	4.20	17.6	3.59
24.0	18.0	32.1	5.29	31.1	5.17	29.0	4.93	28.0	4.81	24.9	4.44	22.8	4.20	17.6	3.59	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
40%	-24.9	-25.0	25.7	10.16	24.9	9.99	23.2	9.65	22.4	9.47	19.9	8.89	18.3	8.48	14.1	7.30
	-19.8	-20.0	25.7	9.10	24.9	8.94	23.2	8.60	22.4	8.43	19.9	7.89	18.3	7.50	14.1	6.45
	-14.7	-15.0	25.7	8.18	24.9	8.07	23.2	7.83	22.4	7.70	19.9	7.20	18.3	6.82	14.1	5.84
	-9.6	-10.0	25.7	7.10	24.9	7.02	23.2	6.85	22.4	6.75	19.9	6.41	18.3	6.15	14.1	5.38
	-4.4	-5.0	25.7	6.06	24.9	6.01	23.2	5.89	22.4	5.82	19.9	5.57	18.3	5.37	14.1	4.76
	-1.8	-2.5	25.7	5.56	24.9	5.52	23.2	5.43	22.4	5.37	19.9	5.15	18.3	4.98	14.1	4.45
	0.8	0.0	25.7	5.02	24.9	4.99	23.2	4.92	22.4	4.88	19.9	4.72	18.3	4.58	14.1	4.14
	2.8	2.0	25.7	4.59	24.9	4.58	23.2	4.54	22.4	4.51	19.9	4.38	18.3	4.28	14.1	3.90
	6.0	5.0	25.7	4.54	24.9	4.44	23.2	4.25	22.4	4.15	19.9	3.92	18.3	3.84	14.1	3.56
	7.0	6.0	25.7	4.54	24.9	4.44	23.2	4.25	22.4	4.15	19.9	3.86	18.3	3.71	14.1	3.46
	8.6	7.5	25.7	4.54	24.9	4.44	23.2	4.25	22.4	4.15	19.9	3.86	18.3	3.67	14.1	3.31
	11.2	10.0	25.7	4.54	24.9	4.44	23.2	4.25	22.4	4.15	19.9	3.86	18.3	3.67	14.1	3.18
	16.4	15.0	25.7	4.54	24.9	4.44	23.2	4.25	22.4	4.15	19.9	3.86	18.3	3.67	14.1	3.18
24.0	18.0	25.7	4.54	24.9	4.44	23.2	4.25	22.4	4.15	19.9	3.86	18.3	3.67	14.1	3.18	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
30%	-24.9	-25.0	19.3	7.68	18.7	7.57	17.4	7.34	16.8	7.22	14.9	6.82	13.7	6.54	10.6	5.72
	-19.8	-20.0	19.3	6.99	18.7	6.86	17.4	6.62	16.8	6.50	14.9	6.13	13.7	5.86	10.6	5.11
	-14.7	-15.0	19.3	6.18	18.7	6.12	17.4	5.98	16.8	5.90	14.9	5.63	13.7	5.40	10.6	4.68
	-9.6	-10.0	19.3	5.38	18.7	5.34	17.4	5.25	16.8	5.19	14.9	4.99	13.7	4.82	10.6	4.31
	-4.4	-5.0	19.3	4.57	18.7	4.55	17.4	4.49	16.8	4.46	14.9	4.32	13.7	4.21	10.6	3.83
	-1.8	-2.5	19.3	4.16	18.7	4.15	17.4	4.12	16.8	4.10	14.9	4.00	13.7	3.91	10.6	3.59
	0.8	0.0	19.3	3.79	18.7	3.77	17.4	3.76	16.8	3.75	14.9	3.69	13.7	3.62	10.6	3.37
	2.8	2.0	19.3	3.79	18.7	3.71	17.4	3.57	16.8	3.50	14.9	3.45	13.7	3.40	10.6	3.20
	6.0	5.0	19.3	3.79	18.7	3.71	17.4	3.57	16.8	3.50	14.9	3.28	13.7	3.13	10.6	2.95
	7.0	6.0	19.3	3.79	18.7	3.71	17.4	3.57	16.8	3.50	14.9	3.28	13.7	3.13	10.6	2.88
	8.6	7.5	19.3	3.79	18.7	3.71	17.4	3.57	16.8	3.50	14.9	3.28	13.7	3.13	10.6	2.77
	11.2	10.0	19.3	3.79	18.7	3.71	17.4	3.57	16.8	3.50	14.9	3.28	13.7	3.13	10.6	2.77
	16.4	15.0	19.3	3.79	18.7	3.71	17.4	3.57	16.8	3.50	14.9	3.28	13.7	3.13	10.6	2.77
24.0	18.0	19.3	3.79	18.7	3.71	17.4	3.57	16.8	3.50	14.9	3.28	13.7	3.13	10.6	2.77	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-13. U-20ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
130%	-10.0	48.5	7.04	58.2	8.45	60.2	8.75	60.2	8.75	68.2	9.92	76.3	11.08	84.3	12.24
	-5.0	48.5	7.05	58.2	8.46	60.2	8.77	60.2	8.77	68.2	9.94	76.3	11.10	84.3	12.26
	0.0	48.5	7.07	58.2	8.48	60.2	8.80	60.2	8.80	68.2	9.96	76.3	11.13	84.3	12.28
	5.0	48.5	7.09	58.2	8.51	60.2	8.82	60.2	8.82	68.2	10.00	76.3	11.18	84.3	12.35
	10.0	48.5	7.13	58.2	8.54	60.2	8.89	60.2	8.89	68.2	10.13	76.3	11.37	84.3	12.56
	15.0	48.5	7.18	58.2	8.66	60.2	9.19	60.2	9.19	68.2	10.55	76.3	11.88	84.3	13.11
	20.0	48.5	7.54	58.2	9.27	60.2	10.16	60.2	10.16	68.2	11.76	76.3	13.62	84.3	15.66
	25.0	48.5	9.30	58.2	11.34	60.2	12.58	60.2	12.58	68.2	14.70	76.3	16.99	84.3	19.46
	30.0	48.5	11.41	58.2	13.92	60.2	15.33	60.2	15.33	68.2	17.87	76.3	20.61	84.1	23.38
	35.0	48.5	13.67	58.2	16.69	60.2	18.28	60.2	18.28	68.2	21.30	74.5	23.38	77.6	23.38
	40.0	48.5	16.11	58.2	19.68	60.2	21.48	60.2	21.48	65.8	23.38	68.7	23.38	71.7	23.38
43.0	48.5	17.66	58.2	21.59	59.8	23.31	59.8	23.31	62.6	23.38	64.5	22.51	66.2	21.56	
46.0	48.0	17.75	48.3	17.75	48.3	17.75	48.3	17.75	50.0	17.12	52.0	16.65	54.3	16.30	
52.0	20.2	7.60	21.4	7.60	21.4	7.60	21.4	7.60	23.8	7.83	26.4	8.08	29.2	8.34	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
120%	-10.0	44.8	6.50	53.8	7.80	58.8	8.55	58.8	8.55	66.6	9.69	74.5	10.83	82.3	11.96
	-5.0	44.8	6.52	53.8	7.82	58.8	8.57	58.8	8.57	66.6	9.71	74.5	10.85	82.3	11.98
	0.0	44.8	6.53	53.8	7.84	58.8	8.59	58.8	8.59	66.6	9.73	74.5	10.87	82.3	12.00
	5.0	44.8	6.56	53.8	7.87	58.8	8.62	58.8	8.62	66.6	9.76	74.5	10.92	82.3	12.06
	10.0	44.8	6.59	53.8	7.90	58.8	8.68	58.8	8.68	66.6	9.88	74.5	11.10	82.3	12.27
	15.0	44.8	6.64	53.8	8.01	58.8	8.95	58.8	8.95	66.6	10.27	74.5	11.61	82.3	12.80
	20.0	44.8	6.97	53.8	8.57	58.8	9.87	58.8	9.87	66.6	11.42	74.5	13.15	82.3	15.10
	25.0	44.8	8.68	53.8	10.53	58.8	12.21	58.8	12.21	66.6	14.23	74.5	16.43	82.3	18.79
	30.0	44.8	10.62	53.8	12.91	58.8	14.88	58.8	14.88	66.6	17.32	74.5	19.94	82.3	22.75
	35.0	44.8	12.70	53.8	15.46	58.8	17.75	58.8	17.75	66.6	20.65	73.9	23.38	77.0	23.38
	40.0	44.8	14.95	53.8	18.21	58.8	20.86	58.8	20.86	65.3	23.38	68.2	23.38	71.1	23.38
43.0	44.8	16.38	53.8	19.96	58.8	22.85	58.8	22.85	62.2	23.37	64.2	22.65	65.7	21.63	
46.0	44.4	17.72	48.1	17.80	48.1	17.80	48.1	17.80	49.6	17.13	51.5	16.61	53.7	16.22	
52.0	18.9	7.50	20.7	7.50	21.0	7.50	21.0	7.50	23.3	7.70	25.8	7.93	28.5	8.16	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
110%	-10.0	41.1	5.97	49.3	7.16	57.4	8.35	57.4	8.35	65.1	9.46	72.7	10.57	80.4	11.67
	-5.0	41.1	5.98	49.3	7.17	57.4	8.36	57.4	8.36	65.1	9.48	72.7	10.59	80.4	11.70
	0.0	41.1	6.00	49.3	7.19	57.4	8.39	57.4	8.39	65.1	9.50	72.7	10.62	80.4	11.72
	5.0	41.1	6.02	49.3	7.22	57.4	8.42	57.4	8.42	65.1	9.53	72.7	10.66	80.4	11.78
	10.0	41.1	6.05	49.3	7.26	57.4	8.47	57.4	8.47	65.1	9.63	72.7	10.83	80.4	11.97
	15.0	41.1	6.10	49.3	7.35	57.4	8.71	57.4	8.71	65.1	9.99	72.7	11.30	80.4	12.50
	20.0	41.1	6.40	49.3	7.87	57.4	9.58	57.4	9.58	65.1	11.09	72.7	12.70	80.4	14.56
	25.0	41.1	8.07	49.3	9.74	57.4	11.84	57.4	11.84	65.1	13.78	72.7	15.88	80.4	18.14
	30.0	41.1	9.84	49.3	11.91	57.4	14.44	57.4	14.44	65.1	16.78	72.7	19.29	80.4	21.98
	35.0	41.1	11.75	49.3	14.24	57.4	17.22	57.4	17.22	65.1	20.01	72.7	22.97	76.3	23.38
	40.0	41.1	13.80	49.3	16.75	57.4	20.24	57.4	20.24	64.6	23.26	67.6	23.37	70.5	23.38
43.0	41.1	15.10	49.3	18.35	57.4	22.17	57.4	22.17	61.7	23.38	63.9	22.81	65.3	21.73	
46.0	40.7	16.33	47.8	17.87	47.8	17.87	47.8	17.87	49.2	17.15	51.0	16.59	53.1	16.15	
52.0	17.5	7.39	19.1	7.39	20.6	7.39	20.6	7.39	22.7	7.58	25.1	7.78	27.7	7.99	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	-10.0	37.3	5.43	44.8	6.52	52.3	7.60	56.0	8.14	63.5	9.23	70.9	10.31	78.4	11.39
	-5.0	37.3	5.45	44.8	6.53	52.3	7.62	56.0	8.16	63.5	9.25	70.9	10.33	78.4	11.41
	0.0	37.3	5.46	44.8	6.55	52.3	7.64	56.0	8.18	63.5	9.27	70.9	10.36	78.4	11.44
	5.0	37.3	5.48	44.8	6.58	52.3	7.67	56.0	8.21	63.5	9.30	70.9	10.40	78.4	11.49
	10.0	37.3	5.52	44.8	6.61	52.3	7.70	56.0	8.26	63.5	9.39	70.9	10.55	78.4	11.68
	15.0	37.3	5.56	44.8	6.69	52.3	7.87	56.0	8.48	63.5	9.72	70.9	10.99	78.4	12.19
	20.0	37.3	5.83	44.8	7.17	52.3	8.58	56.0	9.29	63.5	10.75	70.9	12.26	78.4	14.02
	25.0	37.3	7.48	44.8	8.97	52.3	10.60	56.0	11.48	63.5	13.33	70.9	15.34	78.4	17.49
	30.0	37.3	9.08	44.8	10.93	52.3	12.94	56.0	14.00	63.5	16.24	70.9	18.65	78.4	21.22
	35.0	37.3	10.81	44.8	13.04	52.3	15.45	56.0	16.70	63.5	19.38	70.9	22.22	75.6	23.38
	40.0	37.3	12.66	44.8	15.31	52.3	18.15	56.0	19.64	63.5	22.76	67.1	23.38	69.9	23.38
43.0	37.3	13.85	44.8	16.76	52.3	19.88	56.0	21.51	61.2	23.38	63.6	23.00	64.9	21.85	
46.0	37.0	14.95	44.4	18.13	47.1	18.42	47.6	17.96	48.9	17.19	50.5	16.58	52.4	16.10	
52.0	16.1	7.05	17.5	7.11	19.2	7.22	20.2	7.29	22.2	7.46	24.5	7.64	27.0	7.83	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-20ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
90%	-10.0	33.6	4.89	40.3	5.87	47.0	6.84	50.4	7.33	57.1	8.31	63.8	9.28	70.6	10.26
	-5.0	33.6	4.90	40.3	5.88	47.0	6.86	50.4	7.35	57.1	8.32	63.8	9.30	70.6	10.28
	0.0	33.6	4.92	40.3	5.90	47.0	6.88	50.4	7.37	57.1	8.35	63.8	9.33	70.6	10.31
	5.0	33.6	4.94	40.3	5.92	47.0	6.90	50.4	7.40	57.1	8.38	63.8	9.35	70.6	10.34
	10.0	33.6	4.97	40.3	5.96	47.0	6.94	50.4	7.43	57.1	8.42	63.8	9.44	70.6	10.48
	15.0	33.6	5.01	40.3	6.00	47.0	7.03	50.4	7.56	57.1	8.65	63.8	9.76	70.6	10.89
	20.0	33.6	5.17	40.3	6.34	47.0	7.55	50.4	8.17	57.1	9.45	63.8	10.75	70.6	12.05
	25.0	33.6	6.59	40.3	8.00	47.0	9.37	50.4	10.10	57.1	11.64	63.8	13.29	70.6	15.06
	30.0	33.6	8.17	40.3	9.75	47.0	11.44	50.4	12.33	57.1	14.21	63.8	16.20	70.6	18.33
	35.0	33.6	9.71	40.3	11.61	47.0	13.65	50.4	14.70	57.1	16.96	63.8	19.34	70.6	21.85
	40.0	33.6	11.36	40.3	13.63	47.0	16.04	50.4	17.30	57.1	19.94	63.8	22.72	70.6	23.38
43.0	33.6	12.41	40.3	14.91	47.0	17.56	50.4	18.95	57.1	21.85	61.7	23.38	63.5	22.64	
46.0	33.3	13.39	39.9	16.11	46.6	19.01	46.9	18.48	47.7	17.51	48.9	16.71	50.3	16.05	
52.0	15.4	6.90	16.5	6.88	17.9	6.91	18.6	6.93	20.3	7.01	22.1	7.11	24.1	7.22	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
80%	-10.0	29.9	4.35	35.8	5.22	41.8	6.09	44.8	6.52	50.8	7.39	56.7	8.25	62.7	9.12
	-5.0	29.9	4.36	35.8	5.23	41.8	6.10	44.8	6.53	50.8	7.40	56.7	8.27	62.7	9.14
	0.0	29.9	4.37	35.8	5.24	41.8	6.12	44.8	6.55	50.8	7.42	56.7	8.29	62.7	9.16
	5.0	29.9	4.39	35.8	5.27	41.8	6.14	44.8	6.58	50.8	7.45	56.7	8.32	62.7	9.19
	10.0	29.9	4.42	35.8	5.30	41.8	6.17	44.8	6.61	50.8	7.48	56.7	8.36	62.7	9.26
	15.0	29.9	4.46	35.8	5.34	41.8	6.22	44.8	6.68	50.8	7.61	56.7	8.57	62.7	9.55
	20.0	29.9	4.55	35.8	5.54	41.8	6.57	44.8	7.09	50.8	8.20	56.7	9.31	62.7	10.44
	25.0	29.9	5.59	35.8	7.02	41.8	8.23	44.8	8.82	50.8	10.08	56.7	11.42	62.7	12.84
	30.0	29.9	7.31	35.8	8.63	41.8	10.03	44.8	10.77	50.8	12.31	56.7	13.95	62.7	15.68
	35.0	29.9	8.66	35.8	10.27	41.8	11.97	44.8	12.83	50.8	14.71	56.7	16.66	62.7	18.72
	40.0	29.9	10.11	35.8	12.03	41.8	14.05	44.8	15.11	50.8	17.30	56.7	19.60	62.7	22.01
43.0	29.9	11.03	35.8	13.15	41.8	15.38	44.8	16.54	50.8	18.95	56.7	21.48	61.7	23.38	
46.0	29.6	11.89	35.5	14.20	41.4	16.63	44.4	17.89	46.9	18.18	47.6	17.17	48.6	16.31	
52.0	14.8	6.81	15.7	6.71	16.7	6.65	17.3	6.64	18.6	6.64	20.0	6.65	21.6	6.69	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
70%	-10.0	26.1	3.81	31.4	4.57	36.6	5.33	39.2	5.71	44.4	6.47	49.7	7.22	54.9	7.98
	-5.0	26.1	3.82	31.4	4.58	36.6	5.34	39.2	5.72	44.4	6.48	49.7	7.24	54.9	8.00
	0.0	26.1	3.83	31.4	4.59	36.6	5.35	39.2	5.73	44.4	6.50	49.7	7.26	54.9	8.02
	5.0	26.1	3.85	31.4	4.61	36.6	5.37	39.2	5.76	44.4	6.52	49.7	7.29	54.9	8.05
	10.0	26.1	3.87	31.4	4.64	36.6	5.41	39.2	5.79	44.4	6.56	49.7	7.32	54.9	8.08
	15.0	26.1	3.90	31.4	4.68	36.6	5.45	39.2	5.83	44.4	6.62	49.7	7.42	54.9	8.25
	20.0	26.1	3.96	31.4	4.78	36.6	5.64	39.2	6.08	44.4	7.00	49.7	7.93	54.9	8.88
	25.0	26.1	4.66	31.4	5.84	36.6	7.05	39.2	7.61	44.4	8.65	49.7	9.71	54.9	10.83
	30.0	26.1	6.50	31.4	7.58	36.6	8.72	39.2	9.32	44.4	10.56	49.7	11.87	54.9	13.25
	35.0	26.1	7.66	31.4	8.99	36.6	10.39	39.2	11.09	44.4	12.62	49.7	14.19	54.9	15.84
	40.0	26.1	8.91	31.4	10.51	36.6	12.18	39.2	13.04	44.4	14.83	49.7	16.70	54.9	18.64
43.0	26.1	9.71	31.4	11.47	36.6	13.32	39.2	14.27	44.4	16.24	49.7	18.29	54.9	20.43	
46.0	25.9	10.46	31.0	12.38	36.2	14.39	38.8	15.43	44.0	17.57	46.8	18.12	47.3	17.04	
52.0	14.4	6.78	15.0	6.60	15.7	6.47	16.1	6.42	17.1	6.34	18.2	6.29	19.4	6.25	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
60%	-10.0	22.4	3.27	26.9	3.92	31.4	4.57	33.6	4.89	38.1	5.54	42.6	6.20	47.0	6.85
	-5.0	22.4	3.28	26.9	3.93	31.4	4.58	33.6	4.90	38.1	5.56	42.6	6.21	47.0	6.86
	0.0	22.4	3.29	26.9	3.94	31.4	4.59	33.6	4.92	38.1	5.57	42.6	6.23	47.0	6.88
	5.0	22.4	3.30	26.9	3.95	31.4	4.61	33.6	4.94	38.1	5.59	42.6	6.25	47.0	6.90
	10.0	22.4	3.32	26.9	3.98	31.4	4.64	33.6	4.96	38.1	5.62	42.6	6.28	47.0	6.94
	15.0	22.4	3.35	26.9	4.01	31.4	4.68	33.6	5.01	38.1	5.66	42.6	6.33	47.0	7.01
	20.0	22.4	3.41	26.9	4.07	31.4	4.77	33.6	5.12	38.1	5.87	42.6	6.63	47.0	7.40
	25.0	22.4	3.80	26.9	4.74	31.4	5.71	33.6	6.16	38.1	7.20	42.6	8.17	47.0	9.02
	30.0	22.4	5.73	26.9	6.60	31.4	7.51	33.6	7.98	38.1	8.96	42.6	9.98	47.0	11.04
	35.0	22.4	6.72	26.9	7.79	31.4	8.91	33.6	9.47	38.1	10.68	42.6	11.92	47.0	13.21
	40.0	22.4	7.78	26.9	9.07	31.4	10.42	33.6	11.11	38.1	12.53	42.6	14.01	47.0	15.54
43.0	22.4	8.45	26.9	9.89	31.4	11.38	33.6	12.14	38.1	13.72	42.6	15.34	47.0	17.03	
46.0	22.2	9.08	26.6	10.65	31.0	12.28	33.3	13.11	37.7	14.83	42.1	16.60	46.6	18.44	
52.0	14.0	6.84	14.4	6.59	14.9	6.38	15.2	6.30	15.8	6.15	16.6	6.02	17.5	5.92	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-20ME2E8 (Cooling)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
50%	-10.0	18.7	2.73	22.4	3.27	26.1	3.81	28.0	4.08	31.7	4.62	35.5	5.17	39.2	5.71
	-5.0	18.7	2.73	22.4	3.28	26.1	3.82	28.0	4.09	31.7	4.63	35.5	5.18	39.2	5.72
	0.0	18.7	2.74	22.4	3.29	26.1	3.83	28.0	4.10	31.7	4.65	35.5	5.19	39.2	5.74
	5.0	18.7	2.75	22.4	3.30	26.1	3.85	28.0	4.12	31.7	4.66	35.5	5.21	39.2	5.76
	10.0	18.7	2.77	22.4	3.32	26.1	3.87	28.0	4.14	31.7	4.69	35.5	5.24	39.2	5.79
	15.0	18.7	2.80	22.4	3.35	26.1	3.90	28.0	4.18	31.7	4.73	35.5	5.28	39.2	5.83
	20.0	18.7	2.84	22.4	3.40	26.1	3.95	28.0	4.23	31.7	4.81	35.5	5.40	39.2	6.01
	25.0	18.7	3.03	22.4	3.74	26.1	4.48	28.0	4.83	31.7	5.63	35.5	6.41	39.2	7.20
	30.0	18.7	5.01	22.4	5.68	26.1	6.38	28.0	6.74	31.7	7.48	35.5	8.25	39.2	9.05
	35.0	18.7	5.83	22.4	6.66	26.1	7.53	28.0	7.96	31.7	8.89	35.5	9.83	39.2	10.81
	40.0	18.7	6.69	22.4	7.71	26.1	8.77	28.0	9.30	31.7	10.40	35.5	11.53	39.2	12.70
43.0	18.7	7.25	22.4	8.38	26.1	9.55	28.0	10.15	31.7	11.36	35.5	12.62	39.2	13.90	
46.0	18.5	7.77	22.2	9.01	25.9	10.29	27.7	10.94	31.4	12.27	35.1	13.63	38.8	15.04	
52.0	13.8	7.03	14.0	6.70	14.3	6.42	14.5	6.30	14.9	6.08	15.4	5.89	15.9	5.72	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
40%	-10.0	14.9	2.19	17.9	2.62	20.9	3.05	22.4	3.27	25.4	3.70	28.4	4.14	31.4	4.57
	-5.0	14.9	2.19	17.9	2.63	20.9	3.06	22.4	3.28	25.4	3.71	28.4	4.15	31.4	4.58
	0.0	14.9	2.20	17.9	2.63	20.9	3.07	22.4	3.29	25.4	3.72	28.4	4.16	31.4	4.59
	5.0	14.9	2.21	17.9	2.64	20.9	3.08	22.4	3.30	25.4	3.74	28.4	4.17	31.4	4.61
	10.0	14.9	2.22	17.9	2.66	20.9	3.10	22.4	3.32	25.4	3.76	28.4	4.20	31.4	4.63
	15.0	14.9	2.24	17.9	2.68	20.9	3.13	22.4	3.34	25.4	3.79	28.4	4.23	31.4	4.67
	20.0	14.9	2.28	17.9	2.73	20.9	3.18	22.4	3.40	25.4	3.84	28.4	4.28	31.4	4.73
	25.0	14.9	2.37	17.9	2.86	20.9	3.39	22.4	3.64	25.4	4.22	28.4	4.79	31.4	5.37
	30.0	14.9	4.34	17.9	4.84	20.9	5.35	22.4	5.61	25.4	6.15	28.4	6.70	31.4	7.26
	35.0	14.9	4.98	17.9	5.61	20.9	6.25	22.4	6.57	25.4	7.25	28.4	7.93	31.4	8.63
	40.0	14.9	5.67	17.9	6.44	20.9	7.22	22.4	7.62	25.4	8.43	28.4	9.26	31.4	10.10
43.0	14.9	6.10	17.9	6.96	20.9	7.84	22.4	8.28	25.4	9.18	28.4	10.10	31.4	11.04	
46.0	14.8	6.51	17.7	7.46	20.7	8.42	22.2	8.90	25.1	9.89	28.1	10.90	31.0	11.92	
52.0	12.1	6.50	13.8	7.02	13.9	6.66	14.0	6.50	14.2	6.20	14.4	5.94	14.8	5.70	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
		14.0		16.0		18.0		19.0		21.0		23.0		25.0	
		TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
30%	-10.0	11.2	1.64	13.4	1.97	15.7	2.29	16.8	2.46	19.0	2.78	21.3	3.11	23.5	3.43
	-5.0	11.2	1.65	13.4	1.97	15.7	2.30	16.8	2.46	19.0	2.79	21.3	3.12	23.5	3.44
	0.0	11.2	1.65	13.4	1.98	15.7	2.31	16.8	2.47	19.0	2.80	21.3	3.12	23.5	3.45
	5.0	11.2	1.66	13.4	1.99	15.7	2.32	16.8	2.48	19.0	2.81	21.3	3.14	23.5	3.46
	10.0	11.2	1.67	13.4	2.00	15.7	2.33	16.8	2.49	19.0	2.82	21.3	3.15	23.5	3.48
	15.0	11.2	1.69	13.4	2.02	15.7	2.35	16.8	2.51	19.0	2.85	21.3	3.18	23.5	3.51
	20.0	11.2	1.72	13.4	2.05	15.7	2.39	16.8	2.55	19.0	2.89	21.3	3.23	23.5	3.56
	25.0	11.2	1.79	13.4	2.13	15.7	2.47	16.8	2.63	19.0	3.00	21.3	3.38	23.5	3.76
	30.0	11.2	3.71	13.4	4.05	15.7	4.40	16.8	4.58	19.0	4.94	21.3	5.31	23.5	5.68
	35.0	11.2	4.18	13.4	4.62	15.7	5.07	16.8	5.28	19.0	5.75	21.3	6.21	23.5	6.68
	40.0	11.2	4.69	13.4	5.23	15.7	5.78	16.8	6.06	19.0	6.62	21.3	7.18	23.5	7.75
43.0	11.2	5.01	13.4	5.62	15.7	6.24	16.8	6.55	19.0	7.17	21.3	7.80	23.5	8.44	
46.0	11.1	5.32	13.3	5.99	15.5	6.66	16.6	7.00	18.8	7.69	21.1	8.38	23.3	9.08	
52.0	9.1	5.31	10.9	5.98	12.7	6.65	13.6	6.99	13.8	6.69	13.9	6.34	14.0	6.02	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

1-14. U-20ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
130%	-24.9	-25.0	32.3	16.04	31.4	15.81	29.7	15.33	28.8	15.06	26.1	14.20	24.2	13.55	19.3	11.66
	-19.8	-20.0	37.7	16.63	36.7	16.37	34.7	15.81	33.7	15.52	30.5	14.56	28.4	13.86	22.7	11.85
	-14.7	-15.0	43.7	17.43	42.6	17.14	40.3	16.51	39.1	16.18	35.5	15.12	33.1	14.35	26.6	12.19
	-9.6	-10.0	50.7	18.60	49.5	18.27	46.9	17.56	45.6	17.19	41.5	16.00	38.7	15.14	31.2	12.77
	-4.4	-5.0	59.0	20.14	57.6	19.75	54.6	18.93	53.1	18.50	48.4	17.13	45.1	16.15	36.4	13.48
	-1.8	-2.5	63.6	21.06	62.0	20.62	58.8	19.72	57.1	19.24	52.1	17.75	48.5	16.70	39.1	13.88
	0.8	0.0	68.3	21.81	66.6	21.36	63.2	20.40	61.4	19.91	56.0	18.35	52.2	17.25	42.2	14.29
	2.8	2.0	72.4	22.28	70.6	21.81	67.0	20.83	65.2	20.32	59.5	18.72	55.2	17.43	42.6	13.54
	6.0	5.0	77.8	22.37	75.3	21.57	70.2	20.00	67.7	19.23	60.2	17.01	55.2	15.59	42.6	12.20
	7.0	6.0	77.8	21.44	75.3	20.68	70.2	19.19	67.7	18.46	60.2	16.35	55.2	14.99	42.6	11.77
	8.6	7.5	77.8	20.08	75.3	19.38	70.2	18.00	67.7	17.33	60.2	15.38	55.2	14.13	42.6	11.14
	11.2	10.0	77.8	17.90	75.3	17.29	70.2	16.11	67.7	15.53	60.2	13.83	55.2	12.75	42.6	10.14
	16.4	15.0	77.8	14.01	75.3	13.58	70.2	12.73	67.7	12.31	60.2	11.09	55.2	10.30	42.6	8.37
24.0	18.0	77.8	12.01	75.3	11.67	70.2	11.00	67.7	10.67	60.2	9.69	55.2	9.05	42.6	7.48	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
120%	-24.9	-25.0	32.2	15.88	31.3	15.66	29.6	15.19	28.7	14.93	26.0	14.07	24.1	13.43	19.2	11.56
	-19.8	-20.0	37.6	16.48	36.6	16.22	34.6	15.67	33.6	15.38	30.4	14.43	28.2	13.74	22.6	11.75
	-14.7	-15.0	43.6	17.29	42.5	17.00	40.2	16.37	39.0	16.05	35.5	15.00	33.0	14.24	26.5	12.10
	-9.6	-10.0	50.7	18.47	49.4	18.13	46.8	17.43	45.5	17.06	41.4	15.88	38.5	15.03	31.0	12.67
	-4.4	-5.0	59.0	20.00	57.5	19.61	54.5	18.79	53.0	18.36	48.3	17.00	45.0	16.03	36.2	13.38
	-1.8	-2.5	63.5	20.92	61.9	20.50	58.7	19.60	57.1	19.13	51.9	17.65	48.4	16.60	39.0	13.80
	0.8	0.0	68.3	21.59	66.6	21.15	63.1	20.21	61.3	19.72	55.9	18.18	52.1	17.09	41.7	13.98
	2.8	2.0	72.3	22.05	70.5	21.59	66.9	20.61	65.1	20.12	58.8	18.27	53.9	16.73	41.7	13.08
	6.0	5.0	76.0	21.25	73.5	20.51	68.6	19.06	66.2	18.36	58.8	16.29	53.9	14.97	41.7	11.79
	7.0	6.0	76.0	20.36	73.5	19.66	68.6	18.29	66.2	17.62	58.8	15.66	53.9	14.40	41.7	11.38
	8.6	7.5	76.0	19.06	73.5	18.41	68.6	17.15	66.2	16.53	58.8	14.73	53.9	13.56	41.7	10.77
	11.2	10.0	76.0	16.98	73.5	16.43	68.6	15.34	66.2	14.81	58.8	13.25	53.9	12.24	41.7	9.81
	16.4	15.0	76.0	13.27	73.5	12.88	68.6	12.12	66.2	11.74	58.8	10.62	53.9	9.89	41.7	8.10
24.0	18.0	76.0	11.51	73.5	11.21	68.6	10.61	66.2	10.31	58.8	9.41	53.9	8.81	41.7	7.31	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
110%	-24.9	-25.0	32.1	15.74	31.2	15.52	29.5	15.05	28.6	14.79	25.9	13.95	24.0	13.31	19.1	11.47
	-19.8	-20.0	37.5	16.33	36.5	16.08	34.5	15.53	33.5	15.25	30.3	14.31	28.1	13.62	22.5	11.66
	-14.7	-15.0	43.5	17.15	42.4	16.86	40.1	16.24	38.9	15.92	35.3	14.88	32.9	14.12	26.4	12.00
	-9.6	-10.0	50.6	18.33	49.3	18.00	46.7	17.30	45.4	16.94	41.3	15.76	38.4	14.92	30.9	12.58
	-4.4	-5.0	58.9	19.83	57.4	19.40	54.4	18.66	52.9	18.24	48.1	16.88	44.8	15.92	36.1	13.28
	-1.8	-2.5	63.4	20.76	61.9	20.34	58.6	19.46	57.0	19.00	51.8	17.54	48.3	16.50	38.8	13.71
	0.8	0.0	68.2	21.38	66.5	20.93	63.0	20.01	61.2	19.53	55.8	18.01	52.0	16.93	40.7	13.50
	2.8	2.0	72.3	21.82	70.5	21.37	66.9	20.41	64.6	19.71	57.4	17.49	52.6	16.06	40.7	12.64
	6.0	5.0	74.1	20.17	71.8	19.49	67.0	18.16	64.6	17.51	57.4	15.60	52.6	14.37	40.7	11.40
	7.0	6.0	74.1	19.32	71.8	18.68	67.0	17.42	64.6	16.80	57.4	14.99	52.6	13.82	40.7	10.99
	8.6	7.5	74.1	18.08	71.8	17.49	67.0	16.33	64.6	15.77	57.4	14.10	52.6	13.02	40.7	10.41
	11.2	10.0	74.1	16.10	71.8	15.59	67.0	14.60	64.6	14.12	57.4	12.68	52.6	11.75	40.7	9.48
	16.4	15.0	74.1	12.57	71.8	12.22	67.0	11.53	64.6	11.18	57.4	10.17	52.6	9.50	40.7	7.84
24.0	18.0	74.1	11.29	71.8	10.99	67.0	10.41	64.6	10.11	57.4	9.24	52.6	8.65	40.7	7.19	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	-24.9	-25.0	32.0	15.60	31.2	15.38	29.4	14.91	28.5	14.66	25.8	13.82	23.9	13.20	19.0	11.38
	-19.8	-20.0	37.4	16.19	36.4	15.94	34.4	15.40	33.4	15.11	30.2	14.19	28.0	13.51	22.4	11.57
	-14.7	-15.0	43.5	17.01	42.3	16.73	40.0	16.12	38.9	15.79	35.2	14.76	32.8	14.01	26.3	11.91
	-9.6	-10.0	50.5	18.20	49.3	17.87	46.7	17.18	45.3	16.82	41.2	15.65	38.3	14.81	30.8	12.49
	-4.4	-5.0	58.9	19.77	57.4	19.36	54.4	18.48	52.8	18.02	48.0	16.77	44.7	15.80	35.9	13.19
	-1.8	-2.5	63.4	20.59	61.8	20.18	58.5	19.31	56.9	18.86	51.7	17.41	48.1	16.38	38.7	13.62
	0.8	0.0	68.2	21.16	66.5	20.73	62.9	19.81	61.2	19.34	55.7	17.84	51.3	16.55	39.7	13.04
	2.8	2.0	72.3	21.61	70.0	20.92	65.3	19.50	63.0	18.80	56.0	16.75	51.3	15.42	39.7	12.21
	6.0	5.0	72.3	19.14	70.0	18.52	65.3	17.30	63.0	16.70	56.0	14.94	51.3	13.77	39.7	10.99
	7.0	6.0	72.3	18.33	70.0	17.74	65.3	16.59	63.0	16.00	56.0	14.33	51.3	13.24	39.7	10.61
	8.6	7.5	72.3	17.11	70.0	16.57	65.3	15.52	63.0	15.00	56.0	13.47	51.3	12.47	39.7	10.05
	11.2	10.0	72.3	15.23	70.0	14.77	65.3	13.88	63.0	13.44	56.0	12.14	51.3	11.28	39.7	9.18
	16.4	15.0	72.3	11.92	70.0	11.61	65.3	10.98	63.0	10.66	56.0	9.72	51.3	9.09	39.7	7.50
24.0	18.0	72.3	11.06	70.0	10.78	65.3	10.21	63.0	9.92	56.0	9.07	51.3	8.49	39.7	7.07	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.



1. Capacity of Outdoor Unit

U-20ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
90%	-24.9	-25.0	31.7	15.10	30.9	14.89	29.1	14.44	28.2	14.20	25.5	13.40	23.6	12.80	18.7	11.06
	-19.8	-20.0	37.2	15.70	36.2	15.46	34.1	14.94	33.1	14.66	29.9	13.77	27.7	13.11	22.0	11.24
	-14.7	-15.0	43.3	16.56	42.1	16.27	39.8	15.68	38.6	15.37	35.0	14.36	32.4	13.63	25.9	11.60
	-9.6	-10.0	50.5	17.77	49.2	17.45	46.5	16.76	45.1	16.41	40.9	15.26	38.0	14.44	30.4	12.18
	-4.4	-5.0	58.8	19.34	57.3	18.97	54.2	18.17	52.6	17.76	47.7	16.41	44.4	15.44	35.5	12.83
	-1.8	-2.5	63.3	19.90	61.7	19.51	58.4	18.69	56.6	18.26	50.4	16.45	46.2	15.23	35.7	12.23
	0.8	0.0	65.1	18.93	63.0	18.38	58.8	17.27	56.7	16.72	50.4	15.09	46.2	14.00	35.7	11.31
	2.8	2.0	65.1	17.50	63.0	17.00	58.8	16.01	56.7	15.51	50.4	14.03	46.2	13.05	35.7	10.66
	6.0	5.0	65.1	15.55	63.0	15.16	58.8	14.37	56.7	13.97	50.4	12.74	46.2	11.88	35.7	9.69
	7.0	6.0	65.1	15.20	63.0	14.77	58.8	13.93	56.7	13.51	50.4	12.25	46.2	11.42	35.7	9.35
	8.6	7.5	65.1	14.18	63.0	13.80	58.8	13.04	56.7	12.66	50.4	11.52	46.2	10.76	35.7	8.87
	11.2	10.0	65.1	12.60	63.0	12.28	58.8	11.65	56.7	11.33	50.4	10.38	46.2	9.74	35.7	8.11
16.4	15.0	65.1	10.18	63.0	9.92	58.8	9.41	56.7	9.15	50.4	8.38	46.2	7.87	35.7	6.62	
24.0	18.0	65.1	10.18	63.0	9.92	58.8	9.41	56.7	9.15	50.4	8.38	46.2	7.87	35.7	6.58	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
80%	-24.9	-25.0	31.7	14.78	30.9	14.58	29.1	14.14	28.1	13.90	25.4	13.12	23.4	12.54	18.5	10.85
	-19.8	-20.0	37.2	15.40	36.2	15.16	34.1	14.65	33.0	14.38	29.8	13.50	27.6	12.86	21.9	11.03
	-14.7	-15.0	43.4	16.29	42.3	16.01	39.9	15.42	38.7	15.11	34.9	14.12	32.4	13.40	25.8	11.40
	-9.6	-10.0	50.8	17.55	49.4	17.22	46.7	16.53	45.3	16.18	41.0	15.04	38.0	14.22	30.3	11.99
	-4.4	-5.0	57.9	18.31	56.0	17.83	52.3	16.86	50.4	16.37	44.8	14.89	41.1	13.89	31.7	11.35
	-1.8	-2.5	57.9	16.74	56.0	16.31	52.3	15.46	50.4	15.03	44.8	13.72	41.1	12.83	31.7	10.58
	0.8	0.0	57.9	15.20	56.0	14.86	52.3	14.15	50.4	13.79	44.8	12.67	41.1	11.90	31.7	9.88
	2.8	2.0	57.9	14.23	56.0	13.92	52.3	13.27	50.4	12.94	44.8	11.91	41.1	11.20	31.7	9.34
	6.0	5.0	57.9	12.84	56.0	12.57	52.3	12.00	50.4	11.71	44.8	10.80	41.1	10.16	31.7	8.47
	7.0	6.0	57.9	12.46	56.0	12.17	52.3	11.59	50.4	11.29	44.8	10.39	41.1	9.78	31.7	8.20
	8.6	7.5	57.9	11.62	56.0	11.36	52.3	10.84	50.4	10.58	44.8	9.77	41.1	9.22	31.7	7.78
	11.2	10.0	57.9	10.30	56.0	10.10	52.3	9.68	50.4	9.47	44.8	8.81	41.1	8.35	31.7	7.13
16.4	15.0	57.9	9.29	56.0	9.07	52.3	8.61	50.4	8.38	44.8	7.69	41.1	7.24	31.7	6.09	
24.0	18.0	57.9	9.29	56.0	9.07	52.3	8.61	50.4	8.38	44.8	7.69	41.1	7.24	31.7	6.09	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
70%	-24.9	-25.0	32.2	14.75	31.3	14.55	29.5	14.10	28.5	13.86	25.7	13.08	23.7	12.51	18.7	10.82
	-19.8	-20.0	37.9	15.40	36.8	15.16	34.7	14.64	33.6	14.37	30.2	13.48	28.0	12.84	22.1	11.01
	-14.7	-15.0	44.3	16.34	43.1	16.06	40.6	15.46	39.3	15.14	35.5	14.14	32.9	13.41	26.1	11.40
	-9.6	-10.0	50.6	17.20	49.0	16.77	45.7	15.86	44.1	15.40	39.2	14.09	35.9	13.18	27.8	10.86
	-4.4	-5.0	50.6	14.69	49.0	14.39	45.7	13.77	44.1	13.45	39.2	12.44	35.9	11.73	27.8	9.84
	-1.8	-2.5	50.6	13.59	49.0	13.33	45.7	12.77	44.1	12.48	39.2	11.57	35.9	10.93	27.8	9.20
	0.8	0.0	50.6	12.51	49.0	12.28	45.7	11.79	44.1	11.53	39.2	10.72	35.9	10.15	27.8	8.59
	2.8	2.0	50.6	11.68	49.0	11.47	45.7	11.03	44.1	10.80	39.2	10.07	35.9	9.54	27.8	8.12
	6.0	5.0	50.6	10.50	49.0	10.32	45.7	9.94	44.1	9.74	39.2	9.09	35.9	8.62	27.8	7.34
	7.0	6.0	50.6	10.09	49.0	9.91	45.7	9.54	44.1	9.34	39.2	8.73	35.9	8.30	27.8	7.14
	8.6	7.5	50.6	9.40	49.0	9.25	45.7	8.93	44.1	8.76	39.2	8.22	35.9	7.84	27.8	6.79
	11.2	10.0	50.6	8.41	49.0	8.21	45.7	7.97	44.1	7.84	39.2	7.42	35.9	7.11	27.8	6.24
16.4	15.0	50.6	8.41	49.0	8.21	45.7	7.81	44.1	7.61	39.2	7.01	35.9	6.61	27.8	5.61	
24.0	18.0	50.6	8.41	49.0	8.21	45.7	7.81	44.1	7.61	39.2	7.01	35.9	6.61	27.8	5.61	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
60%	-24.9	-25.0	33.6	15.17	32.7	14.95	30.7	14.49	29.7	14.24	26.7	13.43	24.6	12.82	19.4	11.07
	-19.8	-20.0	39.6	15.88	38.4	15.62	36.1	15.08	35.0	14.79	31.5	13.86	29.1	13.19	22.9	11.29
	-14.7	-15.0	43.4	15.65	42.0	15.30	39.2	14.59	37.8	14.23	33.6	13.12	30.8	12.35	23.8	10.32
	-9.6	-10.0	43.4	13.90	42.0	13.65	39.2	13.12	37.8	12.84	33.6	11.93	30.8	11.27	23.8	9.40
	-4.4	-5.0	43.4	12.02	42.0	11.82	39.2	11.40	37.8	11.17	33.6	10.44	30.8	9.92	23.8	8.47
	-1.8	-2.5	43.4	11.09	42.0	10.92	39.2	10.54	37.8	10.35	33.6	9.71	30.8	9.24	23.8	7.94
	0.8	0.0	43.4	10.19	42.0	10.04	39.2	9.72	37.8	9.55	33.6	8.99	30.8	8.57	23.8	7.42
	2.8	2.0	43.4	9.50	42.0	9.37	39.2	9.09	37.8	8.93	33.6	8.43	30.8	8.07	23.8	7.01
	6.0	5.0	43.4	8.45	42.0	8.34	39.2	8.11	37.8	7.98	33.6	7.56	30.8	7.25	23.8	6.33
	7.0	6.0	43.4	8.07	42.0	7.97	39.2	7.76	37.8	7.65	33.6	7.27	30.8	6.99	23.8	6.17
	8.6	7.5	43.4	7.52	42.0	7.44	39.2	7.27	37.8	7.18	33.6	6.85	30.8	6.61	23.8	5.88
	11.2	10.0	43.4	7.52	42.0	7.35	39.2	7.01	37.8	6.84	33.6	6.32	30.8	6.01	23.8	5.42
16.4	15.0	43.4	7.52	42.0	7.35	39.2	7.01	37.8	6.84	33.6	6.32	30.8	5.98	23.8	5.12	
24.0	18.0	43.4	7.52	42.0	7.35	39.2	7.01	37.8	6.84	33.6	6.32	30.8	5.98	23.8	5.12	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

1. Capacity of Outdoor Unit

U-20ME2E8 (Heating)

Capacity Ratio 30-130%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
50%	-24.9	-25.0	36.2	16.16	35.0	15.87	32.7	15.25	31.5	14.92	28.0	13.91	25.7	13.18	19.8	11.19
	-19.8	-20.0	36.2	14.02	35.0	13.76	32.7	13.21	31.5	12.93	28.0	12.05	25.7	11.42	19.8	9.72
	-14.7	-15.0	36.2	12.81	35.0	12.56	32.7	11.98	31.5	11.73	28.0	10.90	25.7	10.31	19.8	8.76
	-9.6	-10.0	36.2	11.24	35.0	11.08	32.7	10.72	31.5	10.52	28.0	9.90	25.7	9.43	19.8	8.08
	-4.4	-5.0	36.2	9.69	35.0	9.57	32.7	9.29	31.5	9.15	28.0	8.65	25.7	8.28	19.8	7.22
	-1.8	-2.5	36.2	8.93	35.0	8.83	32.7	8.60	31.5	8.47	28.0	8.04	25.7	7.72	19.8	6.77
	0.8	0.0	36.2	8.20	35.0	8.11	32.7	7.92	31.5	7.82	28.0	7.45	25.7	7.17	19.8	6.33
	2.8	2.0	36.2	7.62	35.0	7.54	32.7	7.37	31.5	7.28	28.0	6.96	25.7	6.71	19.8	5.97
	6.0	5.0	36.2	6.67	35.0	6.63	32.7	6.52	31.5	6.46	28.0	6.23	25.7	6.04	19.8	5.44
	7.0	6.0	36.2	6.64	35.0	6.49	32.7	6.25	31.5	6.20	28.0	6.00	25.7	5.83	19.8	5.30
	8.6	7.5	36.2	6.64	35.0	6.49	32.7	6.21	31.5	6.07	28.0	5.67	25.7	5.53	19.8	5.07
	11.2	10.0	36.2	6.64	35.0	6.49	32.7	6.21	31.5	6.07	28.0	5.64	25.7	5.35	19.8	4.69
	16.4	15.0	36.2	6.64	35.0	6.49	32.7	6.21	31.5	6.07	28.0	5.64	25.7	5.35	19.8	4.64
24.0	18.0	36.2	6.64	35.0	6.49	32.7	6.21	31.5	6.07	28.0	5.64	25.7	5.35	19.8	4.64	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
40%	-24.9	-25.0	28.9	12.49	28.0	12.30	26.1	11.88	25.2	11.66	22.4	10.97	20.5	10.46	15.9	9.05
	-19.8	-20.0	28.9	11.21	28.0	11.02	26.1	10.62	25.2	10.41	22.4	9.76	20.5	9.30	15.9	8.03
	-14.7	-15.0	28.9	10.16	28.0	10.03	26.1	9.72	25.2	9.55	22.4	8.91	20.5	8.48	15.9	7.31
	-9.6	-10.0	28.9	8.89	28.0	8.79	26.1	8.57	25.2	8.44	22.4	8.02	20.5	7.71	15.9	6.77
	-4.4	-5.0	28.9	7.66	28.0	7.60	26.1	7.44	25.2	7.35	22.4	7.04	20.5	6.79	15.9	6.05
	-1.8	-2.5	28.9	7.07	28.0	7.02	26.1	6.89	25.2	6.81	22.4	6.54	20.5	6.33	15.9	5.68
	0.8	0.0	28.9	6.42	28.0	6.39	26.1	6.29	25.2	6.24	22.4	6.03	20.5	5.86	15.9	5.31
	2.8	2.0	28.9	5.92	28.0	5.90	26.1	5.84	25.2	5.80	22.4	5.63	20.5	5.50	15.9	5.03
	6.0	5.0	28.9	5.75	28.0	5.64	26.1	5.41	25.2	5.29	22.4	5.08	20.5	4.99	15.9	4.63
	7.0	6.0	28.9	5.75	28.0	5.64	26.1	5.41	25.2	5.29	22.4	4.95	20.5	4.83	15.9	4.51
	8.6	7.5	28.9	5.75	28.0	5.64	26.1	5.41	25.2	5.29	22.4	4.95	20.5	4.72	15.9	4.33
	11.2	10.0	28.9	5.75	28.0	5.64	26.1	5.41	25.2	5.29	22.4	4.95	20.5	4.72	15.9	4.15
	16.4	15.0	28.9	5.75	28.0	5.64	26.1	5.41	25.2	5.29	22.4	4.95	20.5	4.72	15.9	4.15
24.0	18.0	28.9	5.75	28.0	5.64	26.1	5.41	25.2	5.29	22.4	4.95	20.5	4.72	15.9	4.15	

Combination :Indoor/outdoor capacity ratio	Outdoor air temp.		Indoor air temp. : °CDB													
			16.0		17.0		19.0		20.0		23.0		25.0		30.0	
	°CDB	°CWB	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
30%	-24.9	-25.0	21.7	9.52	21.0	9.38	19.6	9.10	18.9	8.95	16.8	8.48	15.4	8.14	11.9	7.17
	-19.8	-20.0	21.7	8.67	21.0	8.49	19.6	8.25	18.9	8.10	16.8	7.65	15.4	7.33	11.9	6.45
	-14.7	-15.0	21.7	7.75	21.0	7.68	19.6	7.51	18.9	7.41	16.8	7.07	15.4	6.78	11.9	5.94
	-9.6	-10.0	21.7	6.81	21.0	6.76	19.6	6.64	18.9	6.57	16.8	6.32	15.4	6.12	11.9	5.51
	-4.4	-5.0	21.7	5.85	21.0	5.82	19.6	5.75	18.9	5.70	16.8	5.54	15.4	5.40	11.9	4.94
	-1.8	-2.5	21.7	5.37	21.0	5.35	19.6	5.31	18.9	5.28	16.8	5.16	15.4	5.04	11.9	4.66
	0.8	0.0	21.7	4.90	21.0	4.90	19.6	4.89	18.9	4.87	16.8	4.79	15.4	4.70	11.9	4.39
	2.8	2.0	21.7	4.87	21.0	4.78	19.6	4.61	18.9	4.56	16.8	4.51	15.4	4.45	11.9	4.19
	6.0	5.0	21.7	4.87	21.0	4.78	19.6	4.61	18.9	4.52	16.8	4.27	15.4	4.09	11.9	3.90
	7.0	6.0	21.7	4.87	21.0	4.78	19.6	4.61	18.9	4.52	16.8	4.27	15.4	4.09	11.9	3.81
	8.6	7.5	21.7	4.87	21.0	4.78	19.6	4.61	18.9	4.52	16.8	4.27	15.4	4.09	11.9	3.68
	11.2	10.0	21.7	4.87	21.0	4.78	19.6	4.61	18.9	4.52	16.8	4.27	15.4	4.09	11.9	3.67
	16.4	15.0	21.7	4.87	21.0	4.78	19.6	4.61	18.9	4.52	16.8	4.27	15.4	4.09	11.9	3.67
24.0	18.0	21.7	4.87	21.0	4.78	19.6	4.61	18.9	4.52	16.8	4.27	15.4	4.09	11.9	3.67	

* Use the above table when choosing the model of outdoor unit.
See "1-7. Calculation of Actual Capacity of Indoor Unit" under the section 2.

2. Cooling Capacity of Indoor Unit

2-1. 4-Way Cassette (Type U2)

● S-22MU2E5A

Power supply :220/230/240V 1phase-50,60Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.2 kW		AIR FLOW RATE : 14.5 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
15		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
16		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.0	0.7	
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7
17		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.8	0.6	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
18		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8	
	21	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.5	0.4	
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.0	0.8	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.1	0.8
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8
19		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.1	0.8	
	21	SHC	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.5	0.2	0.1	
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.7	0.6
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.1	0.8
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.1	0.8
20		TC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8	
	23	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.7	0.4	0.3	
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	1.0	0.8
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.1	0.8
	29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8
21		TC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	1.9	1.2	0.9
	23	SHC	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.4	0.2	0.1	
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.9	0.7	0.6
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	1.2	0.9
	29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.9	1.2	0.9
22		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.4	2.0	1.2	0.9	
	25	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.8	0.7	0.4	0.3	
	27	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.3	1.2	0.9	0.8	
	29	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.7	1.2	0.9
	31	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.0	1.2	0.9
23		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.6	2.6	2.5	2.0	1.3	1.0	
	25	SHC	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.5	0.5	0.5	0.4	0.1	0.1	
	27	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.9	0.6	0.6	
	29	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.4	1.2	1.0	
	31	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.9	1.3	1.0	

2. Cooling Capacity of Indoor Unit

● S-28MU2E5A

Power supply :220/230/240V 1phase-50,60Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.8 kW		AIR FLOW RATE : 14.5 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8
15		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
16		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.3	0.9	
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
17		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9	
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.1	0.9	
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.3	0.9	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.3	0.9	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.3	0.9	
18		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0	
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.9	0.8	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.4	1.0	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.4	1.0	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.4	1.0	
19		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.4	1.0	
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.6	0.5	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.1	1.0	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.4	1.0	
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	1.4	1.0	
20		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.4	1.1	
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	0.8	0.7	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.4	1.1	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.4	1.1	
	29	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	1.4	1.1	
21		TC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.0	2.4	1.5	1.1	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	1.1	0.9	0.6	0.4	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.6	1.4	1.1	1.0	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.9	1.5	1.1	
	29	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.4	1.5	1.1
22		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	3.1	2.5	1.5	1.2	
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.1	0.8	0.7	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.9	1.8	1.6	1.3	1.2	
	29	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.4	2.4	2.2	1.5	1.2	
	31	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9	2.9	2.5	1.5	1.2	
23		TC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.3	3.2	2.5	1.6	1.2	
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.8	0.5	0.4	
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.6	1.6	1.3	1.1	0.9	
	29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.1	2.1	1.8	1.6	1.2	
	31	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.6	2.6	2.4	1.6	1.2	

2. Cooling Capacity of Indoor Unit

● S-36MU2E5A

Power supply :220/230/240V 1phase-50,60Hz

TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		3.6 kW		AIR FLOW RATE : 14.5 m ³ /min																
EVAPORATOR		CONDENSER																		
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																		
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52
14		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0
15		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.6	1.1
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1
16		TC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1
	21	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.6	1.1
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	1.6	1.1
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1
29	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1
17		TC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	1.7	1.2
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.5	1.2
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.7	1.2
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	1.7	1.2
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	1.7	1.2
29	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	1.7	1.2	
18		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.2	1.0
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.7	1.2
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.7	1.2
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	1.7	1.2
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	1.7	1.2
31	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	1.7	1.2	
19		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.3
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	0.9	0.8
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.5	1.3
	25	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	1.8	1.3
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	1.8	1.3
	29	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	1.8	1.3
31	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	1.8	1.3	
20		TC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	1.9	1.4
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.2	1.0
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.7	1.4
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.9	1.4
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	1.9	1.4
31	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	1.9	1.4	
21		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.9	3.1	1.9	1.4
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.6	1.3	0.9	0.7
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.1	1.8	1.4	1.3
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.4	1.9	1.4
	29	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	1.9	1.4
31	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	1.9	1.4	
22		TC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	4.0	3.2	2.0	1.5
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.6	1.2	1.0
	27	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.4	2.4	2.1	1.7	1.5
	29	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9	2.9	2.6	2.0	1.5
	31	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.4	3.1	2.0	1.5
23		TC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.3	4.2	4.1	3.2	2.1	1.6
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.6	1.5	1.3	0.9	0.8
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.1	2.0	1.8	1.4	1.3
	29	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.6	2.6	2.3	1.9	1.6
	31	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	3.1	3.1	2.8	2.1	1.6

2. Cooling Capacity of Indoor Unit

● S-45MU2E5A

Power supply :220/230/240V 1phase-50,60Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		4.5 kW		AIR FLOW RATE : 15.5 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
15		TC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4	
	21	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.0	1.4	
	23	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4	
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4	
16		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4	
	21	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.0	1.4	
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.1	1.4	
	25	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4	
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4	
29	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
17		TC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.7	1.5	
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.1	1.5	
	25	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.5	
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	2.1	1.5	
29	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	2.1	1.5		
18		TC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5	
	21	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.4	1.2	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.0	1.5	
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	2.2	1.5	
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.7	2.2	1.5
	29	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5
31	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5	
19		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.2	1.6	
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.7	1.1	0.9	
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.2	1.6	1.4	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.8	2.2	1.6	
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.4	2.2	1.6	
	29	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.6
31	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.2	1.6	
20		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.9	2.3	1.7	
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.4	1.2	
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.5	1.9	1.7
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.1	2.3	1.7
	29	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.6	2.3	1.7
31	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	3.9	2.3	1.7	
21		TC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	4.9	3.9	2.4	1.8	
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.6	1.1	0.9	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.2	1.6	1.4
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.7	2.2	1.8
	29	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.3	2.4	1.8
31	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.2	3.9	2.4	1.8	
22		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	5.0	4.0	2.5	1.9	
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	2.2	1.8	1.4	1.2	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.8	2.4	1.9	1.7	
	29	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.4	3.3	3.0	2.5	1.9
	31	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	3.9	3.5	2.5	1.9
23		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.4	5.2	5.1	4.1	2.6	2.0	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.9	1.9	1.5	1.1	0.9	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.5	2.4	2.1	1.6	1.4	
	29	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.0	3.0	2.7	2.2	2.0	
31	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.7	3.7	3.6	3.5	3.2	2.6	2.0	

2. Cooling Capacity of Indoor Unit

● S-56MU2E5A

Power supply :220/230/240V 1phase-50,60Hz

TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		5.6 kW		AIR FLOW RATE : 16.5 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
	21	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.4	1.6	
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
15		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7	
	21	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.5	1.7	
	23	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	2.5	1.7	
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7	
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7	
16		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8	
	21	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.3	1.8	
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.6	1.8	
	25	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	2.6	1.8	
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	2.6	1.8	
17		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.7	2.6	1.8	
	21	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	1.9	1.6	
	23	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	2.5	1.8	
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.6	1.8	
	27	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	2.6	1.8	
18		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	2.7	1.9	
	21	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.4	1.6	1.3	
	23	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.0	2.2	1.9	
	25	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	2.7	1.9	
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	2.7	1.9	
19		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.8	2.8	2.0	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.1	1.3	1.0	
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	1.9	
	25	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.5	2.0	
	27	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	2.8	2.0	
20		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	4.8	2.9	2.1	
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.3	1.6	1.3	
	25	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.9	2.2	1.9	
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	3.5	2.8	2.1	
	29	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.1	2.9	2.1
21		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.1	4.9	3.0	2.2	
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.0	1.3	1.0	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.6	1.9	1.6	
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.1	2.5	2.2
	29	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	3.8	3.0	2.2
22		TC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.4	6.2	5.0	3.1	2.3
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.7	2.7	2.2	1.6	1.3
	27	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.3	3.3	2.8	2.2	1.9
	29	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.9	3.9	3.4	2.8	2.3
	31	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.4	4.0	3.1	2.3
23		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.7	6.5	6.3	5.1	3.2	2.4
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	2.4	2.3	1.9	1.3	1.0
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.0	3.0	2.9	2.5	1.8	1.6
	29	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.7	3.6	3.6	3.5	3.1	2.4	2.2
	31	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.3	4.2	4.2	4.1	3.7	3.0	2.4

2. Cooling Capacity of Indoor Unit

● S-60MU2E5A

Power supply :220/230/240V 1phase-50,60Hz

TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		6.0 kW		AIR FLOW RATE : 21.0 m ³ /min																
EVAPORATOR		CONDENSER																		
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																		
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52
14		TC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7
	21	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7
	23	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7
	25	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7
15		TC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.7	1.8
	21	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	2.7	1.8
	23	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.7	1.8
	25	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.7	1.8
	27	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.7	1.8
16		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	2.7	1.9
	21	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.7	1.9
	23	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	2.7	1.9
	25	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	2.7	1.9
	27	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	2.7	1.9
17		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.0	2.8	2.0
	21	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.3	2.0
	23	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	2.8	2.0
	25	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	2.7	2.0
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	2.8	2.0
18		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.0	2.9	2.1
	21	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.7	1.9	1.6
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.4	2.6	2.1
	25	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.2	2.9	2.1
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.0	2.9	2.1
19		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.1	3.0	2.2
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.3	1.5	1.2
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	2.2	2.0
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.8	3.0	2.2
	27	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.5	3.0	2.2
20		TC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.3	5.2	3.1	2.3
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.6	1.8	1.6
	25	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.3	2.6	2.3
	27	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	3.1	2.3
	29	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	4.9	3.1
21		TC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.7	6.5	5.2	3.2	2.4
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.1	1.4	1.2
	25	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.9	2.2	1.9
	27	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.1	3.6	2.9	2.4
	29	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.9	4.9	4.4	3.2	2.4
22		TC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	6.8	6.6	5.3	3.3	2.5
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.9	2.5	1.8	1.5
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.7	3.7	3.2	2.6	2.3
	29	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.4	4.0	3.3	2.5
	31	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.2	4.7	3.3	2.5
23		TC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.5	7.2	7.0	6.8	5.4	3.4	2.6
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.6	2.6	2.5	2.0	1.4	1.2
	27	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.3	3.2	2.8	2.1	1.9
	29	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	4.0	3.5	2.9	2.6
	31	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.9	4.9	4.8	4.3	3.4	2.6

2. Cooling Capacity of Indoor Unit

● S-73MU2E5A

Power supply :220/230/240V 1phase-50,60Hz

TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:			7.3 kW		AIR FLOW RATE : 22.5 m ³ /min																	
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1		
	21	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	3.2	2.1		
	23	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1	
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1	
	27	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1	
15		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2		
	21	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	3.3	2.2		
	23	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.2	3.3	2.2	
	25	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2	
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2	
16		TC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3		
	21	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.0	2.3		
	23	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	3.3	2.3	
	25	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	3.3	2.3	
	27	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3	
17		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.1	3.4	2.4	
	21	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.7	2.6	2.2	
	23	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	3.4	2.4	
	25	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.4	2.4	
	27	SHC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.1	3.4	2.4
18		TC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.1	3.5	2.5	
	21	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.2	2.2	1.8	
	23	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.0	3.0	2.5	
	25	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	4.8	3.5	2.5	
	27	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.6	3.5	2.5
19		TC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	6.2	3.6	2.6	
	21	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.7	1.7	1.4	
	23	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.5	2.5	2.2
	25	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.3	3.3	2.6	
	27	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.2	3.6	2.6
20		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	6.3	3.8	2.8	
	23	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	2.1	1.8	
	25	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	3.9	2.9	2.6
	27	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.2	4.7	3.8	2.8
	29	SHC	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	5.5	3.8	2.8
21		TC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.2	7.9	6.4	3.9	2.9	
	23	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.1	2.6	1.7	1.4	
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.9	3.4	2.5	2.2	
	27	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	4.2	3.3	2.9
	29	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.0	3.9	2.9
22		TC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.6	8.3	8.1	6.5	4.0	3.0	
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.5	2.9	2.1	1.8	
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	4.3	3.7	2.9	2.6	
	29	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.2	5.1	4.6	3.7	3.0	
	31	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.1	6.0	5.9	5.4	4.0	3.0	
23		TC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.1	8.8	8.5	8.3	6.6	4.2	3.2	
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	3.1	3.0	2.5	1.7	1.4		
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.9	3.8	3.3	2.5	2.2		
	29	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.9	4.8	4.7	4.7	4.1	3.3	3.0	
	31	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.7	5.6	5.5	4.9	4.1	3.2	

2. Cooling Capacity of Indoor Unit

● S-90MU2E5A

Power supply :220/230/240V 1phase-50,60Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		9.0 kW		AIR FLOW RATE : 23.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.9	2.6		
	21	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.2	3.9	2.6		
	23	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.9	2.6	
	25	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.9	2.6	
	27	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.9	2.6	
15		TC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	4.0	2.7		
	21	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	3.8	2.7		
	23	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.8	4.0	2.7	
	25	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	4.0	2.7	
	27	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	4.0	2.7	
16		TC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	4.1	2.8		
	21	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.7	3.4	2.8		
	23	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.1	2.8	
	25	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.4	4.1	2.8	
	27	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	4.1	2.8	
17		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.5	4.2	3.0	
	21	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.3	2.9	2.5	
	23	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.2	3.8	3.0	
	25	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.0	4.2	3.0	
	27	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	6.9	4.2	3.0
18		TC	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	7.6	4.4	3.1	
	21	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.5	2.0	
	23	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.7	3.3	2.8	
	25	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.5	4.2	3.1	
	27	SHC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.4	4.4	3.1	
19		TC	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	7.7	4.5	3.2	
	21	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.3	2.1	1.6	
	23	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.2	2.9	2.4	
	25	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.0	3.7	3.2	
	27	SHC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	5.8	4.5	3.2
20		TC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.5	7.7	4.6	3.4	
	23	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.3	3.6	2.4	2.0	
	25	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.4	3.3	2.8	
	27	SHC	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.0	5.3	4.1	3.4
	29	SHC	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.2	4.6	3.4
21		TC	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.1	9.7	7.9	4.8	3.6	
	23	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.8	3.1	2.0	1.6	
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	4.7	4.0	2.8	2.4	
	27	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.5	4.8	3.7	3.3	
	29	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	6.3	5.7	4.5	3.6
22		TC	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.6	10.3	9.9	8.0	5.0	3.8	
	25	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.3	4.2	3.5	2.4	2.0	
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.2	5.0	4.3	3.2	2.9	
	29	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.1	6.0	5.9	5.1	4.1	3.7
	31	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.9	6.7	6.0	4.9	3.8
23		TC	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.2	10.8	10.5	10.2	8.1	5.1	3.9		
	25	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.1	3.9	3.8	3.7	3.0	2.0	1.6		
	27	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.9	4.8	4.6	4.5	3.8	2.8	2.4		
	29	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.6	5.5	5.4	4.6	3.6	3.2	
	31	SHC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.5	6.4	6.2	5.5	4.4	3.9	

2. Cooling Capacity of Indoor Unit

● S-106MU2E5A

Power supply :220/230/240V 1phase-50,60Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		10.6 kW		AIR FLOW RATE : 34.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1	
	21	SHC	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	6.9	4.6	3.1	
	23	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1	
	25	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1	
	27	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1	
15		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2	
	21	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	4.7	3.2	
	23	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2	
	25	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2	
	27	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2	
16		TC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3	
	21	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	4.5	3.3	
	23	SHC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	4.9	3.3	
	25	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	4.9	3.3	
	27	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	4.9	3.3	
29	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3	
17		TC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.8	5.0	3.5	
	21	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.4	3.8	3.3	
	23	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	5.0	3.5	
	25	SHC	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	5.0	3.5	
	27	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	5.0	3.5	
29	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.8	5.0	3.5	
18		TC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	8.9	5.1	3.6	
	21	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	4.6	3.2	2.6	
	23	SHC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	4.4	3.6	
	25	SHC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.1	5.1	3.6	
	27	SHC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	5.1	3.6	
	29	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	5.1	3.6	
31	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	8.9	5.1	3.6	
19		TC	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	9.0	5.3	3.8	
	21	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.9	2.5	2.0	
	23	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.2	3.8	3.3	
	25	SHC	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	6.4	5.0	3.8	
	27	SHC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	5.3	3.8	
	29	SHC	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	5.3	3.8	
31	SHC	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	9.0	5.3	3.8	
20		TC	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.2	9.1	5.5	4.0
	23	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.2	4.4	3.1	2.6
	25	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	5.6	4.4	3.9
	27	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	6.9	5.5	4.0
	29	SHC	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	8.1	5.5	4.0
	31	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.2	9.1	5.5
21		TC	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	11.8	11.5	9.3	5.6	4.2
	23	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.5	3.7	2.5	2.0
	25	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	5.8	5.0	3.7	3.2
	27	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.0	6.2	4.9	4.2
	29	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	8.3	7.5	5.6	4.2
	31	SHC	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.6	9.5	8.7	5.6	4.2
22		TC	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.5	12.1	11.7	9.4	5.8	4.4	
	25	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.2	5.0	4.2	3.1	2.6	
	27	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.4	6.3	5.5	4.3	3.8	
	29	SHC	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.8	7.7	7.5	6.7	5.5	4.4
	31	SHC	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	8.9	8.8	8.0	5.8	4.4
23		TC	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.2	12.8	12.4	12.0	9.6	6.1	4.6	
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	4.6	4.5	4.4	3.5	2.4	2.0	
	27	SHC	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.0	5.9	5.7	5.6	4.8	3.6	3.2	
	29	SHC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.1	7.0	6.9	6.0	4.9	4.4	
	31	SHC	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.5	8.4	8.2	8.1	7.3	6.1	4.6

2. Cooling Capacity of Indoor Unit

● S-140MU2E5A

Power supply :220/230/240V 1phase-50,60Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		14.0 kW		AIR FLOW RATE : 36.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0	
	21	SHC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.2	6.1	4.0	
	23	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0
	25	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0
	27	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0
15		TC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.2	6.3	4.2	
	21	SHC	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.8	6.0	4.2	
	23	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	6.3	4.2
	25	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.2	6.3	4.2
	27	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.2	6.3	4.2
16		TC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.1	6.4	4.4	
	21	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	5.3	4.4	
	23	SHC	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	6.4	4.4
	25	SHC	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.0	6.4	4.4
	27	SHC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.1	6.4	4.4
17		TC	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	11.7	6.6	4.6
	21	SHC	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	6.7	4.6	3.8	
	23	SHC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.1	5.9	4.6
	25	SHC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.4	6.6	4.6
	27	SHC	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	10.8	6.6	4.6
18		TC	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	11.8	6.8	4.8
	21	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.0	3.9	3.1
	23	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.3	5.2	4.4
	25	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.6	6.5	4.8
	27	SHC	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	9.9	6.8	4.8
19		TC	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	11.9	7.0	5.0
	21	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.1	3.2	2.5
	23	SHC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	6.4	4.5	3.8
	25	SHC	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	7.7	5.8	5.0
	27	SHC	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	9.1	7.0	5.0
20		TC	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.8	12.1	7.2	5.3
	23	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	5.6	3.8	3.1
	25	SHC	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	7.0	5.1	4.4
	27	SHC	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	8.3	6.4	5.3
	29	SHC	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	9.6	7.2	5.3
21		TC	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.6	15.1	12.2	7.4	5.6
	23	SHC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.2	5.9	4.8	3.1	2.5
	25	SHC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.5	7.3	6.2	4.4	3.8
	27	SHC	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.8	8.6	7.5	5.7	5.1
	29	SHC	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.1	9.9	8.8	7.0
22		TC	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.5	16.0	15.5	12.4	7.7	5.8
	25	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	6.9	6.7	6.5	5.4	3.8	3.1
	27	SHC	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.3	8.1	7.8	6.7	5.0	4.4
	29	SHC	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.6	9.4	9.2	8.0	6.4	5.7
	31	SHC	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	10.9	10.7	10.5	9.3	7.6	5.8
23		TC	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.4	16.9	16.3	15.8	12.6	8.0	6.1
	25	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.3	6.2	5.9	5.7	4.6	3.1	2.5
	27	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	7.5	7.2	7.0	5.9	4.4	3.8
	29	SHC	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.0	8.8	8.5	8.4	7.2	5.7	5.0
	31	SHC	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.3	10.1	9.9	9.7	8.6	7.0	6.1

2. Cooling Capacity of Indoor Unit

● S-160MU2E5A

Power supply :220/230/240V 1phase-50,60Hz

TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		16.0 kW		AIR FLOW RATE : 37.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.6	7.0	4.6	
	21	SHC	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.0	7.0	4.6	
	23	SHC	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	7.0	4.6	
	25	SHC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.6	7.0	4.6
	27	SHC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.6	7.0	4.6
15		TC	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.6	7.2	4.8	
	21	SHC	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	6.5	4.8	
	23	SHC	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	9.9	7.2	4.8
	25	SHC	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.3	7.2	4.8
	27	SHC	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.6	7.2	4.8
16		TC	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.7	7.3	5.0	
	21	SHC	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	5.7	4.8	
	23	SHC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.5	7.1	5.0
	25	SHC	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	10.9	7.3	5.0
	27	SHC	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.3	7.3	5.0
17		TC	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.3	7.5	5.2	
	21	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.5	5.0	4.1	
	23	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.9	6.4	5.2
	25	SHC	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.3	7.5	5.2
	27	SHC	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.7	7.5	5.2
18		TC	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	13.5	7.7	5.5	
	21	SHC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	6.7	4.3	3.4	
	23	SHC	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.0	5.6	4.8
	25	SHC	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	9.4	7.0	5.5
	27	SHC	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	10.8	7.7	5.5
19		TC	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	13.6	8.0	5.8	
	21	SHC	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	5.8	3.6	2.8	
	23	SHC	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	7.2	4.9	4.1
	25	SHC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	8.5	6.3	5.5
	27	SHC	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	9.9	7.6	5.8
20		TC	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	16.9	13.8	8.2	6.0
	23	SHC	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.6	6.4	4.2	3.4
	25	SHC	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.0	7.7	5.6	4.8
	27	SHC	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.4	9.0	6.9	6.0
	29	SHC	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.7	10.4	8.2	6.0
21		TC	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	17.9	17.3	14.0	8.5	6.4
	23	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	6.8	5.5	3.5	2.8
	25	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.2	6.9	4.8	4.1
	27	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.8	9.6	8.2	6.2	5.5
	29	SHC	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.2	11.0	9.6	7.5	6.4
22		TC	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	18.9	18.3	17.7	14.2	8.8	6.7
	25	SHC	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	7.9	7.6	7.4	6.0	4.1	3.5
	27	SHC	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.2	9.0	8.8	7.4	5.5	4.8
	29	SHC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.6	10.4	10.1	8.7	6.8	6.1
	31	SHC	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	11.9	11.7	11.5	10.1	8.2	6.7
23		TC	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	19.9	19.3	18.7	18.1	14.4	9.1	7.0
	25	SHC	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.3	7.1	6.8	6.6	5.3	3.5	2.8
	27	SHC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.7	8.4	8.2	8.0	6.6	4.8	4.1
	29	SHC	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.0	9.8	9.5	9.3	7.9	6.1	5.4
	31	SHC	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.4	11.1	10.9	10.7	9.3	7.4	6.8

2. Cooling Capacity of Indoor Unit

2-2. 4-Way Cassette (Type U1)

● S-22MU1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:				2.2 kW AIR FLOW RATE : 14.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
15		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
16		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.0	0.7	
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
17		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.8	0.6	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
18		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8	
	21	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.5	0.3	
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.0	0.8	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.1	0.8	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8
19		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.1	0.8
	21	SHC	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.5	0.2	0.1	
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.7	0.6	
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.1	0.8
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8
20		TC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8
	23	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.7	0.4	0.3
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	0.9	0.8
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.1	0.8
	29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8
21		TC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.2	0.9
	23	SHC	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.4	0.2	0.1
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.9	0.7	0.6
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	1.2	0.9
	29	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.2	0.9
22		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.0	1.2	0.9
	25	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.7	0.4	0.3
	27	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.2	0.9	0.8
	29	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.2	0.9
	31	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.0	1.2	0.9
23		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.7	2.5	2.0	1.3	1.0
	25	SHC	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.6	0.5	0.4	0.1	0.1
	27	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.9	0.6	0.6
	29	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.4	1.1	1.0
	31	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.9	1.3	1.0

2. Cooling Capacity of Indoor Unit

● S-28MU1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.8 kW		AIR FLOW RATE : 14.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8		
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
15		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8		
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8		
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8		
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8		
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8		
16		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.3	0.9		
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
	29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
17		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9		
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.2	0.9		
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.3	0.9		
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9	
	29	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9	
18		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0		
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.9	0.8		
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.4	1.0	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.4	1.0	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0
	29	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0
	31	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0	
19		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.4	1.0		
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.6	0.5		
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.1	1.0	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.4	1.0	
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.4	1.4	1.0	
	29	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.4	1.0
	31	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.4	1.0	
20		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.4	1.1		
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	0.8	0.7	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.3	1.1	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.4	1.1	
	29	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.4	1.4	1.1
	31	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.4	1.1	
21		TC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.4	1.5	1.1	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.9	0.6	0.5	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.4	1.1	1.0	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.5	1.1
	29	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.4	1.5	1.1
	31	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.4	1.5	1.1
22		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.5	1.5	1.2	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.2	0.8	0.7	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.9	1.7	1.3	1.2	
	29	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.4	2.2	1.5	1.2	
	31	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9	2.5	1.5	1.2	
23		TC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.2	2.5	1.6	1.2		
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	1.1	0.9	0.6	0.5		
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.6	1.4	1.1	0.9	
	29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.1	1.8	1.6	1.2	
	31	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.6	2.3	1.6	1.2	

2. Cooling Capacity of Indoor Unit

● S-36MU1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		3.6 kW		AIR FLOW RATE : 14.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
15		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1		
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.1		
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1		
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1		
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1		
16		TC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1		
	21	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.6	1.1		
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	1.6	1.1		
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1		
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1		
17		TC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	1.7	1.2		
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.4	1.2		
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.7	1.2		
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	1.7	1.2		
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	1.7	1.2		
18		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2	
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.6	1.1	1.0	
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.1	1.7	1.2	
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	1.7	1.2	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.0	1.7	1.2	
19		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.3	
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	0.9	0.7	
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.4	1.2	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.8	1.3	
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.9	1.8	1.3
20		TC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	1.9	1.4	
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.6	1.1	1.0	
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.1	1.6	1.4	
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.6	1.9	1.4	
	29	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.1	1.9	1.4	
21		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.1	1.9	1.4
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.9	0.7	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.8	1.4	1.2	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.3	1.9	1.4
	29	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.8	1.9	1.4
22		TC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.2	2.0	1.5	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.5	1.1	1.0
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.0	1.6	1.5
	29	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.5	2.0	1.5
	31	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.0	2.0	1.5
23		TC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.3	4.1	3.2	2.1	1.6		
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.6	1.5	1.2	0.9	0.7	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.1	2.0	1.7	1.4	1.2	
	29	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.6	2.5	2.2	1.9	1.6	
	31	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.1	3.0	2.7	2.1	1.6	

2. Cooling Capacity of Indoor Unit

● S-45MU1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		4.5 kW		AIR FLOW RATE : 15.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
15		TC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.0	1.4		
	23	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
16		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.9	1.4		
	23	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.1	1.4		
	25	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
17		TC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.6	1.4	
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.1	1.5	
	25	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.1	1.5	
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5	
18		TC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5	
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	1.1	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.5	1.9	1.5	
	25	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.2	1.5	
	27	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.6	2.2	1.5
19		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.2	1.6	
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	1.0	0.8	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.6	1.3	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	2.1	1.6	
	27	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.3	2.2	1.6	
20		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.9	2.3	1.7	
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.3	1.1	
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.8	1.6	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.9	2.3	1.7	
	29	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.5	2.3	1.7
21		TC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	4.0	2.5	1.9	
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.5	1.0	0.8
	25	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.1	1.6	1.3	
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.6	2.1	1.8
	29	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	2.4	1.8
22		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	4.0	2.5	1.9	
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	2.2	1.8	1.3	1.1
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.3	1.8	1.6
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.8	2.3	1.9
	31	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	3.4	2.5	1.9
23		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.4	5.1	4.1	2.6	2.0		
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.8	1.5	1.0	0.8	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.5	2.3	2.0	1.5	1.3	
	29	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.9	2.5	2.0	1.9	
	31	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.5	3.4	3.1	2.6	2.0	

2. Cooling Capacity of Indoor Unit

● S-56MU1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		5.6 kW		AIR FLOW RATE : 16.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	21	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.4	1.6		
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
15		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
	21	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.5	1.7		
	23	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	2.5	1.7		
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
16		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8		
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.2	1.8		
	23	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.6	1.8		
	25	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	2.6	1.8		
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	2.6	1.8		
17		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	2.6	1.8		
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	1.8	1.5		
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.4	1.8		
	25	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.8		
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	2.6	1.8		
18		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	2.7	1.9		
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.3	1.5	1.2		
	23	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.1	1.8		
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.6	1.9		
	27	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	2.7	1.9		
19		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.8	2.8	2.0		
	21	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.0	1.2	0.9		
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.8	1.5		
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.3	2.0		
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.8	2.0		
20		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	4.8	2.9	2.1		
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.2	1.5	1.2		
	25	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.7	2.0	1.8		
	27	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	2.6	2.1		
	29	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.9	2.1		
21		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	4.9	3.0	2.2		
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.8	1.2	0.9		
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.7	1.5		
	27	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.3	2.0		
	29	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.9	2.2		
22		TC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.3	5.0	3.1	2.3	
	25	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.1	1.4	1.2	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	3.1	2.7	2.0	1.7	
	29	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	3.7	3.2	2.6	2.3
	31	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.3	3.8	3.1	2.3
23		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.7	6.4	5.1	3.2	2.4	
	25	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.3	2.2	1.7	1.1	0.9	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.8	2.3	1.7	1.4
	29	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.5	3.4	2.9	2.3	2.0
	31	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.0	3.9	3.5	2.9	2.4	

2. Cooling Capacity of Indoor Unit

● S-60MU1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		6.0 kW		AIR FLOW RATE : 21.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7		
	21	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7		
	23	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7		
	25	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7		
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7		
15		TC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.7	1.8		
	21	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	2.7	1.8		
	23	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.7	1.8		
	25	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.7	1.8		
	27	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.7	1.8		
16		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	2.7	1.9		
	21	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.7	1.9		
	23	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	2.7	1.9		
	25	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	2.7	1.9		
	27	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	2.7	1.9		
17		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.0	2.8	2.0		
	21	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.3	2.0		
	23	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	2.8	2.0	
	25	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.7	2.8	2.0	
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.0	2.8	2.0	
18		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.0	2.9	2.1		
	21	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.7	1.9	1.6	
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.4	2.6	2.1	
	25	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.2	2.9	2.1	
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.0	2.9	2.1	
19		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.1	3.0	2.2		
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.3	1.5	1.2	
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	2.2	2.0	
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.8	3.0	2.2	
	27	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.5	3.0	2.2	
20		TC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	5.2	3.1	2.3		
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.6	1.8	1.6	
	25	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.3	2.6	2.3	
	27	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.1	3.1	2.3	
	29	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	4.9	3.1	2.3	
21		TC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.7	5.2	3.2	2.4	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.1	1.4	1.2	
	25	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.9	2.2	1.9	
	27	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.6	2.9	2.4	
	29	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.9	4.4	3.2	2.4	
22		TC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	6.8	5.3	3.3	2.5	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.5	1.8	1.5	
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.7	3.2	2.6	2.3
	29	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.0	3.3	2.5
	31	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	4.7	3.3	2.5	
23		TC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.5	7.2	6.8	5.4	3.4	2.6	
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.6	2.5	2.0	1.4	1.2	
	27	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.2	2.8	2.1	1.9
	29	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.0	3.5	2.9	2.6
	31	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.9	4.8	4.3	3.4	2.6	

2. Cooling Capacity of Indoor Unit

● S-73MU1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		7.3 kW		AIR FLOW RATE : 22.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1		
	21	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	3.2	2.1	
	23	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1	
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1
	27	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1
15		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2		
	21	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.3	3.3	2.2	
	23	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.1	3.3	2.2	
	25	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2
16		TC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3	
	21	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.9	2.3	
	23	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.3	2.3
	25	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	3.3	2.3
	27	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3
17		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.1	3.4	2.4	
	21	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	2.5	2.1	
	23	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	3.3	2.4	
	25	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.2	3.4	2.4
	27	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.1	3.4	2.4
18		TC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.1	3.5	2.5	
	21	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.1	2.1	1.7	
	23	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.9	2.9	2.5
	25	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.7	3.5	2.5
	27	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.5	3.5	2.5
19		TC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	6.2	3.6	2.6	
	21	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.7	1.7	1.3	
	23	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.4	2.5	2.1	
	25	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.2	3.3	2.6
	27	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.1	3.6	2.6
20		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	6.3	3.8	2.8	
	23	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.0	2.1	1.7
	25	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	3.8	2.9	2.5
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.6	3.6	2.8
	29	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.4	3.8	2.8
21		TC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.2	6.4	3.9	2.9
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.5	1.7	1.3
	25	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.3	2.4	2.1
	27	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.1	3.2	2.9
	29	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	4.9	3.9	2.9
22		TC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.2	6.5	4.0	3.0
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.5	2.9	2.0
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	4.3	3.6	2.8
	29	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.2	5.1	4.4	3.6
	31	SHC	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.0	5.9	5.2	4.0
23		TC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.1	8.8	8.3	6.6	4.2	3.2	
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	3.0	2.4	1.6	1.3
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.8	3.2	2.4
	29	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.7	4.6	4.0	3.2
	31	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.4	4.8	4.0	3.2

2. Cooling Capacity of Indoor Unit

● S-90MU1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		9.0 kW		AIR FLOW RATE : 23.0 m ³ /min																			
EVAPORATOR		CONDENSER																					
AIR INTAKE TEMP.		AMBIENT TEMP. (°C)																					
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52			
14		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.9	2.6			
	21	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	3.9	2.6			
	23	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.9	2.6		
	25	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.9	2.6		
	27	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.9	2.6		
15		TC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	4.0	2.7		
	21	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.7	2.7		
	23	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	4.0	2.7		
	25	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	4.0	2.7	
	27	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	4.0	2.7		
16		TC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	4.1	2.8		
	21	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	3.2	2.6		
	23	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	4.0	2.8		
	25	SHC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.2	4.1	2.8	
	27	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	4.1	2.8	
	29	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	4.1	2.8	
17		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.5	4.2	3.0		
	21	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.1	2.7	2.2		
	23	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	3.5	3.0		
	25	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.8	4.2	3.0	
	27	SHC	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.7	4.2	3.0	
18		TC	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	7.6	4.4	3.1	
	21	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.6	2.3	1.8	
	23	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.5	3.1	2.6	
	25	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.3	3.9	3.1	
	27	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.2	4.4	3.1	
	29	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.0	4.4	3.1	
19		TC	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	7.7	4.5	3.2	
	21	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.1	1.8	1.4	
	23	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.0	2.7	2.2	
	25	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	4.8	3.5	3.0	
	27	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	5.6	4.3	3.2	
	29	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	6.5	4.5	3.2	
20		TC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	7.7	4.6	3.4	
	23	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.4	2.2	1.8	
	25	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.2	3.0	2.6	
	27	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.1	3.9	3.4	
	29	SHC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	5.9	4.6	3.4	
21		TC	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.1	7.9	4.8	3.6	
	23	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	2.9	1.8	1.4	
	25	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.6	3.7	2.6	2.2
	27	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.4	4.6	3.4	3.0
	29	SHC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.3	5.4	4.3	3.6
	31	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	6.3	4.8	3.6	
22		TC	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.6	10.1	8.0	5.0	3.8		
	25	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.0	3.2	2.2	1.8		
	27	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	4.9	4.1	3.0	2.6	
	29	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	5.7	4.9	3.8	3.4		
23		TC	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.2	10.8	10.2	8.1	5.1	3.9		
	25	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.7	3.5	2.7	1.7	1.3		
	27	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.7	4.5	4.3	3.5	2.6	2.2		
	29	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.5	5.4	5.2	4.4	3.4	3.0		
	31	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.4	6.2	6.0	5.2	4.2	3.8		

2. Cooling Capacity of Indoor Unit

● S-106MU1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		10.6 kW		AIR FLOW RATE : 33.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1		
	21	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	4.6	3.1		
	23	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1		
	25	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1	
	27	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1	
15		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2		
	21	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.1	4.7	3.2		
	23	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.3	4.7	3.2		
	25	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2	
	27	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2	
16		TC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3		
	21	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	4.2	3.3		
	23	SHC	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	4.9	3.3		
	25	SHC	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.1	4.9	3.3		
	27	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3	
17	29	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3	
		TC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.8	5.0	3.5	
	21	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.1	3.5	2.9		
	23	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.3	4.7	3.5	
	25	SHC	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.5	5.0	3.5	
18	27	SHC	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.7	5.0	3.5	
	29	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.8	5.0	3.5	
		TC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	5.1	3.6	
	21	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.4	2.9	2.3	
	23	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.6	4.0	3.5	
19	25	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	6.8	5.1	3.6	
	27	SHC	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.0	5.1	3.6	
	29	SHC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	8.9	5.1	3.6	
	31	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	5.1	3.6	
		TC	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	9.0	5.3	3.8	
20	21	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	3.6	2.2	1.7		
	23	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	4.8	3.4	2.9	
	25	SHC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.1	4.6	3.8	
	27	SHC	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.3	5.3	3.8	
	29	SHC	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	8.4	5.3	3.8
21	31	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	9.0	5.3	3.8	
		TC	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	9.1	5.5	4.0	
	23	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.1	2.8	2.3	
	25	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	5.3	4.0	3.5	
	27	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	6.5	5.2	4.0	
22	29	SHC	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	7.7	5.5	4.0	
	31	SHC	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	8.9	5.5	4.0	
		TC	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.5	11.9	9.4	5.8	4.4
	25	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	4.8	3.9	2.7	2.3
	27	SHC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.2	6.0	5.1	3.9	3.5
23	29	SHC	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.2	6.3	5.1	4.4	
	31	SHC	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.6	8.4	7.5	5.8	4.4
		TC	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.2	12.8	12.0	9.6	6.1	4.6
	25	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.3	4.1	3.2	2.1	1.7
	27	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.5	5.3	4.4	3.3	2.8
23	29	SHC	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	6.9	6.7	6.5	5.6	4.5	4.0
	31	SHC	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	7.9	7.7	6.8	5.6	4.6

2. Cooling Capacity of Indoor Unit

● S-140MU1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		14.0 kW		AIR FLOW RATE : 35.0 m³/min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0		
	21	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	6.1	4.0		
	23	SHC	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.0	6.1	4.0	
	25	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0	
	27	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0	
15		TC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.2	6.3	4.2		
	21	SHC	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.4	5.6	4.2		
	23	SHC	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	6.3	4.2	
	25	SHC	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.0	6.3	4.2	
	27	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.2	6.3	4.2	
16		TC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.1	6.4	4.4		
	21	SHC	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	6.9	4.8	4.0		
	23	SHC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.2	6.1	4.4	
	25	SHC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	6.4	4.4	
	27	SHC	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	6.4	4.4
29	SHC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.1	6.4	4.4		
17		TC	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	11.7	6.6	4.6	
	21	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.4	4.2	3.3		
	23	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	5.4	4.6	
	25	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.0	6.6	4.6	
	27	SHC	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.3	6.6	4.6	
29	SHC	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.6	6.6	4.6		
18		TC	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	11.8	6.8	4.8	
	21	SHC	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	5.6	3.4	2.7	
	23	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	6.8	4.7	3.9	
	25	SHC	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.1	6.0	4.8	
	27	SHC	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	9.4	6.8	4.8	
29	SHC	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	10.7	6.8	4.8	
31	SHC	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	11.8	6.8	4.8		
19		TC	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	11.9	7.0	5.0	
	21	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.7	2.7	2.0	
	23	SHC	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.0	4.0	3.3	
	25	SHC	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	7.3	5.3	4.6	
	27	SHC	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	8.6	6.6	5.0	
29	SHC	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	9.9	7.0	5.0	
31	SHC	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	11.2	7.0	5.0	
20		TC	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	12.1	7.2	5.3	
	23	SHC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	5.2	3.4	2.7	
	25	SHC	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	6.5	4.6	3.9	
	27	SHC	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	7.8	5.9	5.2	
	29	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	9.1	7.2	5.3	
31	SHC	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	10.4	7.2	5.3	
21		TC	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.7	12.2	7.4	5.6
	23	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.8	4.4	2.7	2.0	
	25	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	5.7	3.9	3.3	
	27	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	7.0	5.2	4.6	
	29	SHC	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.7	8.3	6.5	5.6
31	SHC	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.0	9.5	7.4	5.6	
22		TC	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.5	15.8	12.4	7.7	5.8	
	25	SHC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.5	6.3	4.9	3.3	2.6	
	27	SHC	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.8	7.5	6.2	4.5	3.9
	29	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.1	8.8	7.5	5.8	5.1
	31	SHC	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.4	10.1	8.7	7.0	5.8
23		TC	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.4	16.9	15.9	12.6	8.0	6.1	
	25	SHC	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	5.9	5.7	5.4	4.2	2.6	2.0	
	27	SHC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.2	7.0	6.7	5.4	3.9	3.3	
	29	SHC	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.5	8.3	7.9	6.7	5.1	4.5	
	31	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.8	9.6	9.2	8.0	6.4	5.7	

2. Cooling Capacity of Indoor Unit

● S-160MU1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		16.0 kW		AIR FLOW RATE : 36.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.6	7.0	4.6	
	21	SHC	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	6.8	4.6	
	23	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	7.0	4.6	
	25	SHC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.6	7.0	4.6
	27	SHC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.6	7.0	4.6
15		TC	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.6	7.2	4.8
	21	SHC	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.1	6.1	4.8	
	23	SHC	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	7.2	4.8	
	25	SHC	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.8	7.2	4.8
	27	SHC	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.6	7.2	4.8
16		TC	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.7	7.3	5.0	
	21	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	5.3	4.3	
	23	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.1	6.6	5.0	
	25	SHC	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	7.3	5.0	
	27	SHC	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.8	7.3	5.0
17		TC	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.3	7.5	5.2
	21	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.1	4.5	3.6	
	23	SHC	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.4	5.8	4.9
	25	SHC	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	9.8	7.2	5.2
	27	SHC	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.1	7.5	5.2
18		TC	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	13.5	7.7	5.5
	21	SHC	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.3	3.8	3.0
	23	SHC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	7.6	5.2	4.3
	25	SHC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.0	6.5	5.5
	27	SHC	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.3	7.7	5.5
19		TC	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	13.6	8.0	5.8
	21	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	5.4	3.1	2.3
	23	SHC	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	6.7	4.5	3.6
	25	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.1	5.8	4.9
	27	SHC	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	9.4	7.1	5.8
20		TC	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	13.8	8.2	6.0
	23	SHC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	5.9	3.7	2.9
	25	SHC	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	7.3	5.0	4.2
	27	SHC	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	8.6	6.4	5.5
	29	SHC	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	9.9	7.7	6.0
21		TC	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	17.9	14.0	8.5	6.4
	23	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.7	5.1	3.0	2.3
	25	SHC	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.0	6.4	4.3	3.6
	27	SHC	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.3	7.8	5.6	4.9
	29	SHC	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.7	9.1	7.0	6.2
22		TC	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	18.9	18.0	14.2	8.8	6.7
	25	SHC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.5	7.1	5.6	3.7	3.0
	27	SHC	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.8	8.4	6.9	4.9	4.3
	29	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.1	9.8	8.2	6.3	5.6
	31	SHC	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.5	11.1	9.6	7.5	6.7
23		TC	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	19.9	19.3	18.2	14.4	9.1	7.0
	25	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	6.9	6.7	6.2	4.8	3.0	2.3
	27	SHC	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.2	8.0	7.5	6.1	4.3	3.6
	29	SHC	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.7	9.6	9.3	8.8	7.4	5.6	4.9
	31	SHC	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	10.9	10.6	10.2	8.7	6.9	6.2

2. Cooling Capacity of Indoor Unit

2-3. 4-Way Cassette 60×60 (Type Y2)

● S-15MY2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		1.5 kW		AIR FLOW RATE : 8.9 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4		
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4		
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4		
	25	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4		
	27	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4		
15		TC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5		
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5		
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5		
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5		
	27	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5		
16		TC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5		
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5		
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5		
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5		
	27	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5		
17		TC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5		
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.5		
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5		
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5		
	27	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5		
18		TC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.7	0.5		
	21	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.5	0.5		
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5		
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.7	0.5	
	27	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.7	0.5	
19		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.7	0.5		
	21	SHC	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.6	0.4	0.3		
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.7	0.5		
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5		
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.7	0.5	
20		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.8	0.6		
	23	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.7	0.6	0.5		
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.8	0.6		
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.8	0.6		
	29	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.8	0.6	
21		TC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.8	0.6		
	23	SHC	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.5	0.4	0.3		
	25	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.7	0.6		
	27	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.8	0.6	
	29	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.8	0.6	
22		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	0.8	0.6		
	25	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.7	0.5	0.4	
	27	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.8	0.6	
	29	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.8	0.6	
	31	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	0.8	0.6	
23		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.7	1.4	0.9	0.7		
	25	SHC	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.6	0.5	0.4	0.3		
	27	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.7	0.6		
	29	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.3	1.2	0.9	0.7	
	31	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.4	0.9	0.7	

2. Cooling Capacity of Indoor Unit

● S-22MY2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.2 kW		AIR FLOW RATE : 9.1 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
15		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.0	0.7		
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
16		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7		
	21	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	1.0	0.7		
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
17		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7	
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.8	0.6		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.0	0.7	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.0	0.7	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7	
18		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8		
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.6	0.5		
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.9	0.8	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.1	0.8	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.1	0.8	
19		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.1	0.8	
	21	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.7	0.4	0.3	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.7	0.6	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.1	0.8	
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.1	0.8	
20		TC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8	
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.8	0.5	0.4	
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.9	0.8	
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.1	0.8	
	29	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.1	0.8	
21		TC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.2	0.9	
	23	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.6	0.4	0.3	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.7	0.6	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	1.0	0.9	
	29	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	1.2	0.9	
22		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.0	1.2	0.9	
	25	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.8	0.5	0.4	
	27	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.1	0.9	0.8	
	29	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.5	1.2	0.9
	31	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.2	0.9	
23		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.7	2.5	2.0	1.3	1.0	
	25	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.7	0.6	0.3	0.3	
	27	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	1.1	1.1	0.9	0.7	0.6	
	29	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.3	1.0	0.9	
	31	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.8	1.8	1.6	1.3	1.0	

2. Cooling Capacity of Indoor Unit

● S-28MY2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.8 kW		AIR FLOW RATE : 9.3 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP.		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8		
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
15		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8		
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	0.8		
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
16		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.2	0.9		
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.3	0.9		
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
17		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9		
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.0	0.8		
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.3	0.9	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.3	0.9	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9	
18		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0	
	21	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.8	0.7	
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.2	1.0	
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.4	1.0	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.4	1.0
19		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.4	1.0	
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.6	0.5	
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.0	0.9	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.3	1.0	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.4	1.0	
20		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.4	1.1	
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	0.8	0.7	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.2	1.0	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.4	1.1	
	29	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.2	1.4	1.1	
21		TC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.4	1.5	1.1
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.9	0.6	0.5	
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.3	1.0	0.8
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	1.3	1.1
	29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.0	1.5	1.1
22		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.5	1.5	1.2
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.1	0.8	0.7
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.7	1.5	1.1	1.0
	29	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.8	1.5	1.2
	31	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.4	2.2	1.5	1.2
23		TC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.2	2.5	1.6	1.2	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.9	0.6	0.5
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.2	0.9	0.8
	29	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.6	1.3	1.2
	31	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.9	1.6	1.2

2. Cooling Capacity of Indoor Unit

● S-36MY2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		3.6 kW		AIR FLOW RATE : 9.7 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
	21	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.6	1.0		
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
15		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1		
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.6	1.1		
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.1		
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1		
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1		
16		TC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1		
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.4	1.1		
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.6	1.1		
	25	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	1.6	1.1		
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1		
17		TC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	1.7	1.2		
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.2	1.0		
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.6	1.2		
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	1.7	1.2	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.7	1.2		
18		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2		
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.0	0.8	
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.4	1.2	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.7	1.2	
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.6	1.7	1.2	
19		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.3	
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.8	0.6	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.2	1.0	
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.1	1.5	1.3	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.8	1.3	
20		TC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	1.9	1.4	
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.0	0.8	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.8	1.4	1.2	
	27	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.2	1.7	1.4	
	29	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.6	1.9	1.4	
21		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.1	1.9	1.4	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.2	0.8	0.6	
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.6	1.2	
	27	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.5	1.3
	29	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.3	1.9	1.4	
22		TC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.2	2.0	1.5	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.7	1.4	1.0	0.8	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.1	1.7	1.3	1.2	
	29	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.1	1.7	1.5	
	31	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.5	2.0	1.5	
23		TC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.3	4.1	3.2	2.1	1.6		
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.5	1.2	0.8	0.6		
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.8	1.5	1.2	1.0	
	29	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.3	2.2	1.9	1.5	1.4	
	31	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.6	2.6	2.3	1.9	1.6		

2. Cooling Capacity of Indoor Unit

● S-45MY2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		4.5 kW		AIR FLOW RATE : 10.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP.		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.0	1.3		
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.0	1.3		
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
15		TC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.8	1.4		
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.0	1.4		
	25	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.0	1.4	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4	
16		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
	21	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.6	1.3		
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.0	1.4		
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.1	1.4		
	27	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.1	1.4	
17		TC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5	
	21	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.4	1.1		
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	1.7	1.5	
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.1	1.5	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.1	1.5	
18		TC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5	
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.2	0.9	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.6	1.3	
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.6	1.9	1.5	
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.0	2.2	1.5	
19		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.2	1.6	
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	0.9	0.7	
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.0	1.3	1.1	
	25	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.4	1.7	1.5	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	2.1	1.6	
20		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.9	2.3	1.7	
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.8	1.1	0.9	
	25	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.1	1.5	1.3	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.5	1.9	1.7	
	29	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.9	2.3	1.7	
21		TC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	3.9	2.4	1.8	
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.5	0.9	0.7	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.9	1.3	1.1
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.3	1.7	1.5
	29	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.6	2.1	1.8	
22		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	4.0	2.5	1.9	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.7	1.1	0.9
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.0	1.5	1.3
	29	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9	2.4	1.9	1.7
	31	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.8	2.3	1.9
23		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.4	5.1	4.1	2.6	2.0		
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.9	1.8	1.4	0.9	0.7	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.2	1.8	1.3	1.1	
	29	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.6	2.2	1.7	1.5	
	31	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.9	2.6	2.1	1.9	

2. Cooling Capacity of Indoor Unit

● S-56MY2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		5.6 kW		AIR FLOW RATE : 10.4 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
	21	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.3	1.6	
	23	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.4	1.6	
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
15		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7	
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.1	1.7	
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.5	1.7	
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.5	1.7	
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7	
16		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8	
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	1.9	1.5	
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.3	1.8	
	25	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.5	2.6	1.8
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	2.6	1.8
17		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.7	2.6	1.8
	21	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	1.6	1.3
	23	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.0	1.7
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	2.4	1.8
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.6	1.8
18		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	2.7	1.9	
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.3	1.4	1.1
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.7	1.8	1.5
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.1	2.2	1.9
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.5	2.6	1.9
	29	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.9	2.7	1.9
19		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.8	2.8	2.0	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.0	1.2	0.9	
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.6	1.3	
	25	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.8	2.0	1.7	
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.2	2.4	2.0
	29	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.6	2.8	2.0
20		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	4.8	2.9	2.1	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.1	1.4	1.1	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.5	1.8	1.5	
	27	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.9	2.2	1.9
	29	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.3	2.6	2.1
21		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	4.9	3.0	2.2
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.2	0.9	
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.3	1.5	1.3
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.7	1.9	1.7
	29	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.1	2.3	2.1
22		TC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.3	5.0	3.1	2.3
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.6	2.0	1.3	1.1	
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.0	2.4	1.7	1.5	
	29	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.5	3.4	2.8	2.1	1.9	
23		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.7	6.4	5.1	3.2	2.4	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	2.3	1.8	1.1	0.9	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.8	2.7	2.2	1.5	1.2	
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.2	3.1	2.6	1.9	1.6	
	31	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.6	3.5	3.0	2.3	2.0	

2. Cooling Capacity of Indoor Unit

2-4. 2-Way Cassette (Type L1)

● S-22ML1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:				2.2 kW AIR FLOW RATE : 8.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP.		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
15		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.7		
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
16		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7		
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.0	0.7		
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.0	0.7		
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
17		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7	
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.9	0.7		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.7		
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.0	0.7	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7	
18		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8		
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.8	0.6		
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.1	0.8		
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.1	0.8	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.1	0.8	
19		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.1	0.8	
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.6	0.5	
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.9	0.8	
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.1	0.8	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.1	0.8
20		TC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.7	0.6	
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.0	0.8	
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.1	0.8	
	29	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.1	0.8	
21		TC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.2	0.9	
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.8	0.6	0.5	
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.1	0.9	0.8	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	1.2	0.9	
	29	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.2	0.9	
22		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.0	1.2	0.9	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	1.0	0.7	0.6
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.3	1.0	0.9
	29	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.6	1.2	0.9
	31	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.9	1.2	0.9
23		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.7	2.5	2.0	1.3	1.0	
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	1.0	1.0	0.8	0.6	0.5	
	27	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.3	1.3	1.1	0.9	0.8	
	29	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.6	1.6	1.4	1.2	1.0	
	31	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.7	1.3	1.0	

2. Cooling Capacity of Indoor Unit

● S-28ML1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.8 kW		AIR FLOW RATE : 9.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8		
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.2	0.8		
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
15		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8		
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.8		
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.3	0.8	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
16		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.2	0.9		
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.3	0.9		
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
17		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9		
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	0.9	0.8		
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.9		
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.9	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9	
18		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0		
	21	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.8	0.6		
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.1	1.0	
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.4	1.0	
	27	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.4	1.0	
19		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.4	1.0		
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.6	0.5		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.9	0.8	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	1.0	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.4	1.0	
20		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.4	1.1		
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.1	0.7	0.6	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.4	1.1	1.0	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.4	1.1	
	29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.1	1.4	1.1	
21		TC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.4	1.5	1.1	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.9	0.6	0.5	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.2	0.9	0.8	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.6	1.2	1.1
	29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.5	1.1	
22		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.5	1.5	1.2	
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.3	1.1	0.7	0.6	
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.4	1.1	1.0
	29	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	2.0	1.7	1.4	1.2
	31	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.3	2.0	1.5	1.2
23		TC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.2	2.5	1.6	1.2	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.9	0.6	0.4	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.2	0.9	0.8
	29	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.8	1.5	1.2	1.1

2. Cooling Capacity of Indoor Unit

● S-36ML1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		3.6 kW		AIR FLOW RATE : 9.7 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.6	1.0	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
15		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.5	1.1	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.1	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
16		TC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.3	1.1	
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.6	1.1	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
17		TC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	1.7	1.2	
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.1	0.9	
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.5	1.2	
	25	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.7	1.2	
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	1.7	1.2	
18		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2	
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	0.9	0.7	
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.3	1.1	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.6	1.2	
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.5	1.7	1.2
19		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.3	
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.7	0.6	
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.6	1.1	0.9	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.5	1.3	
	27	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.3	1.8	1.3	
20		TC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	1.9	1.4	
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.4	0.9	0.8	
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.7	1.3	1.1	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.1	1.6	1.4	
	29	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.5	1.9	1.4	
21		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.1	1.9	1.4	
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.2	0.7	0.5	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.5	1.1	0.9	
	27	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.9	1.4	1.3
	29	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.2	1.8	1.4	
22		TC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.2	2.0	1.5	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.9	0.7	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.7	1.2	1.1
	29	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.0	1.6	1.4
	31	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.4	2.0	1.5
23		TC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.3	4.1	3.2	2.1	1.6	
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.4	1.1	0.7	0.6	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.8	1.4	1.1	0.9
	29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	2.1	1.8	1.4	1.3	
	31	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.5	2.5	2.1	1.8	1.6	

2. Cooling Capacity of Indoor Unit

● S-45ML1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		4.5 kW		AIR FLOW RATE : 11.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.0	1.3		
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.0	1.3		
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
15		TC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.8	1.4		
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.0	1.4		
	25	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.0	1.4	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4	
16		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
	21	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.6	1.3		
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.0	1.4		
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.1	1.4	
	27	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.1	1.4	
17		TC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5	
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.3	1.1		
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.7	1.5	
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.1	1.5	
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.1	1.5	
18		TC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5	
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.1	0.8	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.5	1.3	
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.6	1.9	1.5	
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.0	2.2	1.5	
19		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.2	1.6	
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.5	0.9	0.6	
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.3	1.0	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.3	1.7	1.5	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	2.1	1.6	
20		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.9	2.3	1.7	
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.7	1.1	0.9	
	25	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.1	1.5	1.3	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.5	1.9	1.7	
	29	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.9	2.3	1.7	
21		TC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	3.9	2.4	1.8	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.4	0.9	0.7
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.8	1.3	1.1	
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.2	1.7	1.5	
	29	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.6	2.1	1.8	
22		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	4.0	2.5	1.9	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.6	1.1	0.9
	27	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.0	1.5	1.3
	29	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.4	1.9	1.7
	31	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.8	2.3	1.9	
23		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.4	5.1	4.1	2.6	2.0		
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.8	1.7	1.4	0.8	0.6	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.2	2.1	1.8	1.2	1.0	
	29	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.6	2.5	2.2	1.6	1.4	
	31	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.1	2.9	2.6	2.0	1.8	

2. Cooling Capacity of Indoor Unit

● S-56ML1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		5.6 kW		AIR FLOW RATE : 11.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	21	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.2	1.6		
	23	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.4	1.6		
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
15		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.0	1.6		
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.4	1.7		
	25	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.5	1.7		
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
16		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8		
	21	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	1.8	1.4		
	23	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.2	1.8		
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.6	1.8		
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	2.6	1.8	
17		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.7	2.6	1.8	
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	1.5	1.2	
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	1.9	1.6	
	25	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.4	1.8	
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.6	1.8
18		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	2.7	1.9		
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.3	1.0	
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.6	1.7	1.4	
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.0	2.1	1.8	
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.4	2.5	1.9
	29	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.9	2.7	1.9	
19		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.8	2.8	2.0		
	21	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.4	1.5	1.2	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.8	1.9	1.6	
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.2	2.3	2.0	
	29	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.6	2.7	2.0	
20		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	4.8	2.9	2.1		
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.1	1.3	1.0	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.5	1.7	1.4	
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.9	2.1	1.8	
	29	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.3	2.5	2.1	
21		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	4.9	3.0	2.2	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.8	1.1	0.8	
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.2	1.5	1.2	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.6	1.9	1.6	
	29	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.0	2.3	2.0	
22		TC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.3	5.0	3.1	2.3	
	25	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.5	2.0	1.3	1.0	
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.9	2.4	1.7	1.4	
	29	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.3	2.8	2.1	1.8
23		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.7	6.4	5.1	3.2	2.4	
	25	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.2	1.7	1.0	0.8	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.8	2.6	2.1	1.4	1.2
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	3.1	2.5	1.8	1.6

2. Cooling Capacity of Indoor Unit

● S-73ML1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		7.3 kW		AIR FLOW RATE : 19.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1	
	21	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.2	2.1	
	23	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	3.2	2.1	
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1
	27	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1
15		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2	
	21	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.7	2.8	2.2
	23	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.3	2.2	
	25	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	3.3	2.2	
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2
16		TC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3	
	21	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.4	2.0	
	23	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.1	2.3	
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	3.3	2.3	
	27	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	3.3	2.3	
29	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3	
17		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.1	3.4	2.4	
	21	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	2.0	1.6	
	23	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	2.7	2.3	
	25	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.6	3.4	2.4
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.4	2.4
29	SHC	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	3.4	2.4	
18		TC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.1	3.5	2.5	
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	1.6	1.2	
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.4	2.3	1.9
	25	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.1	3.0	2.5
	27	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	4.8	3.5	2.5
	29	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.5	3.5	2.5
31	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.1	3.5	2.5	
19		TC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	6.2	3.6	2.6	
	21	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.3	1.2	0.9	
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.9	1.6	
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.7	2.6	2.3
	27	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.4	3.3	2.6
	29	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.1	3.6	2.6
31	SHC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	5.8	3.6	2.6	
20		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	6.3	3.8	2.8	
	23	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.5	1.6	1.2	
	25	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.2	2.3	1.9
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.9	3.0	2.6
	29	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	4.7	3.7	2.8
	31	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.4	3.8	2.8
21		TC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.2	6.4	3.9	2.9
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.1	1.2	0.8
	25	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.5	2.8	1.9	1.5
	27	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	3.5	2.6	2.2
	29	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.9	4.2	3.3	2.9
31	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	4.9	3.9	2.9	
22		TC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.6	8.2	6.5	4.0	3.0
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	3.0	2.4	1.5	1.2
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	3.7	3.1	2.2	1.9
	29	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.6	4.4	3.8	2.9	2.5
	31	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	4.5	3.6	3.0
23		TC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.1	8.8	8.3	6.6	4.2	3.2
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.7	2.6	2.0	1.2	0.8
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.5	3.4	3.3	2.6	1.8	1.5
	29	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.2	4.0	3.3	2.5	2.2
	31	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.9	4.7	4.1	3.2	2.9	2.9

2. Cooling Capacity of Indoor Unit

2-5. Wall Mounted (Type K2)

● S-15MK2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:				1.5 kW AIR FLOW RATE : 7.9 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4		
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4	
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4	
	25	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4	
	27	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4	
15		TC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5	
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.5	
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5	
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5	
	27	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5	
16		TC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5	
	21	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.7	0.5	
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5	
	27	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5	
17		TC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5	
	21	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.6	0.5	
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5	
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5	
	27	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5	
18		TC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.7	0.5	
	21	SHC	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.5	0.4	
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.7	0.5	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.7	0.5
	27	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.7	0.5
19		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.7	0.5	
	21	SHC	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.6	0.3	0.3	
	23	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.5	0.5	
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.7	0.5	
	27	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.7	0.5
20		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.8	0.6	
	23	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.7	0.5	0.4	
	25	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.7	0.6	
	27	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.8	0.6	
	29	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.8	0.6	
21		TC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.8	0.6	
	23	SHC	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.5	0.4	0.3	
	25	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.7	0.6	0.5	
	27	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.8	0.6	
	29	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.8	0.6	
22		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	0.8	0.6	
	25	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.6	0.5	0.4	
	27	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.8	0.7	0.6	
	29	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.8	0.6	
	31	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	0.8	0.6	
23		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.7	1.4	0.9	0.7	
	25	SHC	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.6	0.5	0.4	0.3	
	27	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.7	0.6	0.5	
	29	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.9	0.8	0.7	
	31	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.1	0.9	0.7	

2. Cooling Capacity of Indoor Unit

● S-22MK2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:				2.2 kW AIR FLOW RATE : 9.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.0	0.6		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
15		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
	21	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.0	0.7		
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
16		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7		
	21	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.9	0.7		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.0	0.7		
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.0	0.7	
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
17		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7	
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.8	0.6		
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.0	0.7		
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7	
18		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8		
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.7	0.5		
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.9	0.8		
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.1	0.8	
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.1	0.8	
19		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.1	0.8	
	21	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.5	0.4	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.8	0.6	
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.0	0.8	
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.1	0.8	
20		TC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8	
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.9	0.6	0.5	
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.9	0.7	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.1	0.8	
	29	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.6	1.1	0.8	
21		TC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.2	0.9	
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.8	0.5	0.4	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.7	0.6	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.2	1.0	0.9	
	29	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.2	0.9	
22		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.0	1.2	0.9	
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.9	0.6	0.5	
	27	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.1	0.8	0.7	
	29	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.4	1.1	0.9
	31	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.6	1.2	0.9	
23		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.7	2.5	2.0	1.3	1.0	
	25	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.7	0.5	0.4	
	27	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	1.2	1.1	1.0	0.7	0.6	
	29	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.2	1.0	0.9	
	31	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.4	1.2	1.0	

2. Cooling Capacity of Indoor Unit

● S-28MK2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.8 kW		AIR FLOW RATE : 9.5 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8		
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.2	0.8		
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
15		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8		
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.2	0.8		
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.3	0.8		
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
16		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.1	0.9		
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.9		
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.3	0.9		
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
17		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9		
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.9	0.7		
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.2	0.9		
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.3	0.9	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.3	0.9	
18		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0		
	21	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.8	0.6		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.9		
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	1.0	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.4	1.0	
19		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.4	1.0		
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.6	0.5		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.9	0.7	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.1	1.0	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.4	1.0	
20		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.4	1.1		
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.1	0.7	0.6		
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	1.0	0.9		
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	1.2	1.1	
	29	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.4	1.1	
21		TC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.4	1.5	1.1	
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.9	0.6	0.5	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.2	0.9	0.7	
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.5	1.1	1.0
	29	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.7	1.4	1.1	
22		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.5	1.5	1.2	
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.1	0.7	0.6	
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.3	1.0	0.9	
	29	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	1.2	1.1
	31	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.1	1.8	1.5	1.2
23		TC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.2	2.5	1.6	1.2	
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	1.2	0.9	0.6	0.5	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.2	0.8	0.7
	29	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.7	1.4	1.1	1.0
	31	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.7	1.3	1.2	

2. Cooling Capacity of Indoor Unit

● S-36MK2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		3.6 kW		AIR FLOW RATE : 10.9 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP.		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.6	1.0		
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.6	1.0		
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
15		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1		
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.4	1.1		
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.6	1.1		
	25	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.6	1.1		
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1		
16		TC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1		
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.2	1.0		
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.5	1.1		
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.1		
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	1.6	1.1		
17		TC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	1.7	1.2	
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.1	0.9		
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.4	1.2		
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.7	1.2		
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.7	1.2		
18		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2	
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	0.9	0.7	
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.2	1.0	
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.1	1.5	1.2	
	27	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	1.7	1.2	
19		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.3	
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.8	0.6	
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.6	1.1	0.9	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.4	1.2	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.7	1.3	
20		TC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	1.9	1.4	
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.4	0.9	0.8	
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.7	1.2	1.1	
	27	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.0	1.5	1.3	
	29	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.3	1.8	1.4	
21		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.1	1.9	1.4
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.2	0.8	0.6	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.5	1.1	0.9	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.8	1.3	1.2	
	29	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.1	1.6	1.4	
22		TC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.2	2.0	1.5
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.4	0.9	0.7
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	2.0	1.6	1.2	1.0
	29	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.3	1.9	1.5	1.3
	31	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.6	2.2	1.8	1.5
23		TC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.3	4.1	3.2	2.1	1.6	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.6	1.5	1.2	0.8	0.6	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.9	1.8	1.4	1.1	0.9	
	29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	2.2	2.1	1.7	1.3	1.2	
	31	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.4	2.4	2.0	1.6	1.5	

2. Cooling Capacity of Indoor Unit

2-6. Wall Mounted (Type K1)

● S-45MK1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		4.5 kW		AIR FLOW RATE : 12.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.0	1.3		
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
15		TC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	21	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.0	1.4		
	23	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.0	1.4		
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
16		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.4		
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.1	1.4		
	25	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.1	1.4		
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
29	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
17		TC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5	
	21	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.6	1.4	
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.0	1.5	
	25	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.1	1.5	
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	2.1	1.5	
29	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5	
18		TC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5	
	21	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.4	1.1	
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	1.8	1.5	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.9	2.2	1.5	
	27	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	2.2	1.5	
	29	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.8	2.2	1.5	
31	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5	
19		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.2	1.6	
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.7	1.1	0.9	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.5	1.3	
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.6	2.0	1.6	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.1	2.2	1.6	
	29	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.5	2.2	1.6
31	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.6	
20		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.9	2.3	1.7	
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.3	1.1	
	25	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.4	1.8	1.6	
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.8	2.2	1.7	
	29	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.3	2.3	1.7	
31	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.7	2.3	1.7	
21		TC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	3.9	2.4	1.8
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.7	1.1	0.9	
	25	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.1	1.6	1.4	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.5	2.0	1.8
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	2.4	1.8
31	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	3.4	2.4	1.8
22		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	4.0	2.5	1.9	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.2	1.8	1.3	1.1
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.3	1.8	1.6
	29	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.7	2.2	1.9
	31	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.2	2.5	1.9
23		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.4	5.1	4.1	2.6	2.0	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.0	1.9	1.6	1.1	0.9
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.4	2.0	1.6	1.4
	29	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.9	2.8	2.5	2.0	1.8
31	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.3	2.9	2.4	2.0

2. Cooling Capacity of Indoor Unit

● S-56MK1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		5.6 kW		AIR FLOW RATE : 14.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP.		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	21	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.4	1.6		
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
15		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
	21	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.5	1.7		
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.5	1.7		
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
16		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8		
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.2	1.8		
	23	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.6	1.8		
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	2.6	1.8		
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	2.6	1.8		
17		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.7	2.6	1.8	
	21	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	1.9	1.6	
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.4	1.8	
	25	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.6	1.8	
	27	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.6	1.8	
18		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	2.7	1.9		
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.6	1.3	
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.9	2.1	1.8	
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.5	2.7	1.9	
	27	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.0	2.7	1.9	
19		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.8	2.8	2.0		
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.1	1.3	1.1	
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.6	1.8	1.6	
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.2	2.4	2.0	
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.7	2.8	2.0	
20		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	4.8	2.9	2.1	
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.3	1.6	1.3	
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.8	2.1	1.8	
	27	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.4	2.6	2.1	
	29	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	3.9	2.9	2.1	
21		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	4.9	3.0	2.2	
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.0	1.3	1.0	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.5	1.8	1.6	
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.0	2.3	2.1	
	29	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.6	2.9	2.2	
22		TC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.3	5.0	3.1	2.3
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.7	2.2	1.6	1.3
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.2	2.7	2.1	1.8
	29	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.7	3.2	2.6	2.3
	31	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.3	3.8	3.1	2.3
23		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.7	6.4	5.1	3.2	2.4	
	25	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.5	2.4	1.9	1.3	1.0
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.0	2.9	2.4	1.8	1.6
	29	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.5	3.4	3.0	2.3	2.1
	31	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.1	3.9	3.5	2.8	2.4	2.4

2. Cooling Capacity of Indoor Unit

● S-73MK1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		7.3 kW		AIR FLOW RATE : 18.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP.		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1		
	21	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.3	3.2	2.1		
	23	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1		
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1	
	27	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1	
15		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2		
	21	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.2	2.2		
	23	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.3	2.2		
	25	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2	
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2	
16		TC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3		
	21	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	2.8	2.3		
	23	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	3.3	2.3		
	25	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	3.3	2.3		
	27	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3		
17		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.1	3.4	2.4		
	21	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	2.4	2.0		
	23	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	3.1	2.4		
	25	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	3.4	2.4		
	27	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	3.4	2.4	
18		TC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.1	3.5	2.5		
	21	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.1	2.1	1.7		
	23	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.8	2.7	2.3		
	25	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.5	3.4	2.5	
	27	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.2	3.5	2.5	
19		TC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	6.2	3.6	2.6		
	21	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.7	1.7	1.4		
	23	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.4	2.4	2.0	
	25	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.1	3.0	2.6	
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.8	3.6	2.6	
20		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	6.3	3.8	2.8		
	23	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.0	2.1	1.7	
	25	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	3.7	2.7	2.4	
	27	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.3	3.4	2.8	
	31	SHC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	5.7	3.8	2.8	
21		TC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.2	6.4	3.9	2.9	
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.6	1.7	1.4	
	25	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.3	2.4	2.0	
	27	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.6	3.9	3.1	2.7
	31	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.3	3.9	2.9	
22		TC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.6	8.2	6.5	4.0	3.0	
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.5	2.9	2.0	1.7	
	27	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.3	4.2	3.5	2.7	2.3
	29	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	4.9	4.2	3.3	3.0
	31	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.7	5.5	4.9	4.0	3.0
23		TC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.1	8.8	8.3	6.6	4.2	3.2	
	25	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.1	2.5	1.7	1.4
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.9	3.8	3.1	2.3	2.0
	29	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.7	4.6	4.4	3.8	3.0	2.7
	31	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.4	5.3	5.1	4.5	3.7	3.2	2.7

2. Cooling Capacity of Indoor Unit

● S-106MK1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		10.6 kW		AIR FLOW RATE : 19.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1		
	21	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.4	3.1	
	23	SHC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.3	4.6	3.1	
	25	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1	
	27	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1	
15		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2	
	21	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.4	4.0	3.2		
	23	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	4.7	3.2	
	25	SHC	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	4.7	3.2
	27	SHC	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.6	4.7	3.2	
16		TC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3		
	21	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	3.6	2.9		
	23	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	4.3	3.3	
	25	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.7	4.9	3.3	
	27	SHC	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.4	4.9	3.3	
17		TC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.8	5.0	3.5	
	21	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.9	3.2	2.6	
	23	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.7	3.9	3.3
	25	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.4	4.6	3.5
	27	SHC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.1	5.0	3.5	
18		TC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	8.9	5.1	3.6	
	21	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.5	2.8	2.2	
	23	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.2	3.5	2.9	
	25	SHC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	5.9	4.2	3.6	
	27	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	6.6	5.0	3.6	
19		TC	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	9.0	5.3	3.8	
	21	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.0	2.5	1.9	
	23	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	4.7	3.2	2.6	
	25	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	5.4	3.9	3.3	
	27	SHC	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.2	4.6	3.8	
20		TC	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	9.1	5.5	4.0	
	23	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	4.2	2.8	2.2	
	25	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.0	3.5	2.9	
	27	SHC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	5.7	4.2	3.6	
	29	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	6.4	4.9	4.0	
21		TC	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	11.9	9.3	5.6	4.2
	23	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	3.8	2.4	1.9	
	25	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	4.5	3.1	2.6	
	27	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.4	5.2	3.8	3.3
	29	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	6.0	4.5	4.0
22		TC	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.5	11.9	9.4	5.8	4.4	
	25	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.4	5.1	4.1	2.7	2.2	
	27	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.1	5.9	4.8	3.4	2.9	
	29	SHC	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.8	6.6	5.5	4.1	3.6	
	31	SHC	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.6	7.3	6.2	4.9	4.3	
23		TC	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.2	12.8	12.0	9.6	6.1	4.6	
	25	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.1	5.0	4.6	3.6	2.4	1.9	
	27	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.7	5.3	4.3	3.1	2.6	
	29	SHC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.4	6.0	5.1	3.8	3.3	
	31	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.3	7.1	6.8	5.8	4.5	4.0		

2. Cooling Capacity of Indoor Unit

2-7. Ceiling (Type T2)

● S-36MT2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		3.6 kW		AIR FLOW RATE : 14.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
15		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.1	
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
16		TC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
	21	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.6	1.1	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	1.6	1.1	
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
17		TC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	1.7	1.2	
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.5	1.2	
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.7	1.2	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	1.7	1.2	
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	1.7	1.2	
18		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2	
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.2	1.0	
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.7	1.2	
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	1.7	1.2	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.0	1.7	1.2	
19		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.3	
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	1.0	0.8	
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.4	1.3	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.8	1.3	
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.9	1.8	1.3	
20		TC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	1.9	1.4	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	1.2	1.1	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.1	1.7	1.4	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.6	1.9	1.4	
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.1	1.9	1.4	
21		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.1	1.9	1.4	
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.3	0.9	0.8	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.8	1.4	1.3	
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.3	1.9	1.4
	29	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.8	1.9	1.4	
22		TC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.2	2.0	1.5	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	1.2	1.0	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.1	1.7	1.5	
	29	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.5	2.0	1.5
	31	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.0	2.0	1.5	
23		TC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.3	4.1	3.2	2.1	1.6		
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.6	1.3	0.9	0.8	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.1	1.8	1.4	1.3	
	29	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.5	2.2	1.9	1.6	
	31	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.1	3.0	2.7	2.1	1.6	

2. Cooling Capacity of Indoor Unit

● S-45MT2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		4.5 kW		AIR FLOW RATE : 15.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
15		TC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.0	1.4		
	23	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
16		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.0	1.4		
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.1	1.4		
	25	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
17		TC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.7	1.5		
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.1	1.5	
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.1	1.5	
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5	
18		TC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5	
	21	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.4	1.2	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.0	1.5	
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.1	2.2	1.5	
	27	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.6	2.2	1.5	
19		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.2	1.6	
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.7	1.1	0.9	
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.2	1.6	1.4	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.8	2.2	1.6	
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.3	2.2	1.6	
20		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.9	2.3	1.7	
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.0	1.4	1.2	
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.5	1.9	1.7	
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	2.3	1.7	
	29	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.5	2.3	1.7	
21		TC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	3.9	2.4	1.8	
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.6	1.1	0.9	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.2	1.6	1.4	
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.7	2.2	1.8	
	29	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.2	2.4	1.8
22		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	4.0	2.5	1.9	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.3	1.9	1.4	1.2	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.4	1.9	1.7
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.9	2.4	1.9
	31	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	3.4	2.5	1.9
23		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.4	5.1	4.1	2.6	2.0	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.9	1.6	1.1	0.9	
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.5	2.1	1.6	1.5	
	29	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.1	3.0	2.6	2.1	2.0
	31	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.5	3.1	2.6	2.0	2.0

2. Cooling Capacity of Indoor Unit

● S-56MT2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		5.6 kW		AIR FLOW RATE : 15.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP.		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	21	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.4	1.6		
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
15		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
	21	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.4	1.7		
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.5	1.7		
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
16		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8		
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.2	1.8		
	23	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.6	1.8		
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	2.6	1.8		
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	2.6	1.8		
17		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.7	2.6	1.8	
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	1.8	1.5	
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.4	1.8	
	25	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.6	1.8	
	27	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.3	2.6	1.8	
18		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	2.7	1.9	
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.6	1.3	
	23	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.9	2.1	1.8	
	25	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.4	2.6	1.9	
	27	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.0	2.7	1.9	
19		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.8	2.8	2.0	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.1	1.3	1.0	
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.6	1.8	1.5	
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.1	2.3	2.0	
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.7	2.8	2.0	
20		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	4.8	2.9	2.1	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.3	1.5	1.3	
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.8	2.1	1.8	
	27	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.3	2.6	2.1	
	29	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	3.8	2.9	2.1	
21		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	4.9	3.0	2.2	
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.0	1.3	1.0	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.5	1.8	1.5	
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.0	2.3	2.0	
	29	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.5	2.8	2.2	
22		TC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.3	5.0	3.1	2.3
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.2	1.5	1.3
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	2.7	2.0	1.8
	29	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	3.7	3.2	2.5	2.3
	31	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.2	3.7	3.1	2.3
23		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.7	6.4	5.1	3.2	2.4	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	2.3	1.9	1.2	1.0
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.9	2.4	1.8	1.5
	29	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.5	3.4	2.9	2.3	2.0
	31	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.1	4.0	3.9	3.4	2.8	2.4	

2. Cooling Capacity of Indoor Unit

● S-73MT2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		7.3 kW		AIR FLOW RATE : 21.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1	
	21	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.2	2.1	
	23	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1
	27	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1
15		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2	
	21	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	3.3	2.2	
	23	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	3.3	2.2
	25	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2
16		TC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3	
	21	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.9	2.3	
	23	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.3	2.3
	25	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	3.3	2.3
	27	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3
29	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3	
17		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.1	3.4	2.4	
	21	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.7	2.5	2.2
	23	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	3.3	2.4
	25	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.1	3.4	2.4
	27	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.4	2.4
29	SHC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.1	3.4	2.4	
18		TC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.1	3.5	2.5	
	21	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.2	2.2	1.8
	23	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.9	2.9	2.5
	25	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.7	3.5	2.5
	27	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.4	3.5	2.5
	29	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.1	3.5	2.5
31	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.1	3.5	2.5	
19		TC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	6.2	3.6	2.6	
	21	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.7	1.8	1.4
	23	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.5	2.5	2.1
	25	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.2	3.2	2.6
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.0	3.6	2.6
	29	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	5.7	3.6	2.6
31	SHC	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.2	3.6	2.6	
20		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	6.3	3.8	2.8	
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.1	2.1	1.8
	25	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	3.8	2.9	2.5
	27	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	4.5	3.6	2.8
	29	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.3	3.8	2.8
31	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.0	3.8	2.8	
21		TC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.2	6.4	3.9	2.9
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.6	1.8	1.4
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.3	2.5	2.2
	27	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.1	3.2	2.9
	29	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.5	4.8	3.9	2.9
31	SHC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	5.6	3.9	2.9	
22		TC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.6	8.2	6.5	4.0	3.0
	25	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.7	3.6	2.9	2.1	1.8
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	4.3	3.7	2.8	2.5
	29	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.2	5.0	4.4	3.5	3.0
31	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	5.8	5.2	4.0	3.0	
23		TC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.1	8.8	8.3	6.6	4.2	3.2
	25	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.1	2.5	1.7	1.4
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.8	3.2	2.5	2.1
	29	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	4.7	4.5	4.0	3.2
31	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.5	5.3	4.7	3.9	3.2	

2. Cooling Capacity of Indoor Unit

● S-106MT2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		10.6 kW		AIR FLOW RATE : 30.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1		
	21	SHC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	4.6	3.1		
	23	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1		
	25	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1	
	27	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1	
15		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2		
	21	SHC	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	4.7	3.2		
	23	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	4.7	3.2		
	25	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2	
	27	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2	
16		TC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3		
	21	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	4.1	3.3		
	23	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	4.9	3.3		
	25	SHC	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.8	4.9	3.3	
	27	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3	
	29	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3	
17		TC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.8	5.0	3.5	
	21	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.1	3.6	3.0		
	23	SHC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.2	4.6	3.5		
	25	SHC	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.3	5.0	3.5	
	27	SHC	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.4	5.0	3.5	
	29	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.8	5.0	3.5	
18		TC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	5.1	3.6	
	21	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.5	3.0	2.4	
	23	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.6	4.1	3.5	
	25	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	6.7	5.1	3.6	
	27	SHC	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	7.7	5.1	3.6	
	29	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.8	5.1	3.6	
	31	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	8.9	5.1	3.6	
19		TC	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	9.0	5.3	3.8	
	21	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.9	2.5	1.9	
	23	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.9	3.5	3.0	
	25	SHC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.0	4.5	3.8	
	27	SHC	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.1	5.3	3.8	
	29	SHC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.1	5.3	3.8	
	31	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.0	5.3	3.8	
20		TC	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	9.1	5.5	4.0		
	23	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.3	3.0	2.4	
	25	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	5.4	4.0	3.5	
	27	SHC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	6.4	5.1	4.0	
	29	SHC	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	7.5	5.5	4.0	
	31	SHC	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	8.6	5.5	4.0	
21		TC	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	11.9	9.3	5.6	4.2	
	23	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	3.7	2.4	1.9	
	25	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.7	4.7	3.4	2.9	
	27	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	5.8	4.5	4.0
	29	SHC	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	6.8	5.5	4.2	
	31	SHC	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	8.9	7.9	5.6	4.2
22		TC	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.5	11.9	9.4	5.8	4.4	
	25	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	4.1	2.9	2.4	
	27	SHC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.3	6.1	5.2	3.9	3.5	
	29	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.1	6.2	5.0	4.4	
	31	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	8.2	7.3	5.8	4.4	
23		TC	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.2	12.8	12.0	9.6	6.1	4.6	
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	4.6	4.4	3.5	2.4	1.9	
	27	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.8	5.7	5.4	4.5	3.4	2.9	
	29	SHC	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	6.9	6.7	6.5	5.6	4.5	4.0	
	31	SHC	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	7.9	7.8	7.5	6.6	5.5	4.6	

2. Cooling Capacity of Indoor Unit

● S-140MT2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		14.0 kW		AIR FLOW RATE : 32.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP.		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0		
	21	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	6.1	4.0		
	23	SHC	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	8.9	6.1	4.0		
	25	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0	
	27	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0	
15		TC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.2	6.3	4.2		
	21	SHC	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	5.7	4.2		
	23	SHC	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.6	6.3	4.2		
	25	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.8	6.3	4.2	
	27	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.2	6.3	4.2	
16		TC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.1	6.4	4.4		
	21	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	5.0	4.2		
	23	SHC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	6.2	4.4		
	25	SHC	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	6.4	4.4		
	27	SHC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.6	6.4	4.4	
	29	SHC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.1	6.4	4.4	
17		TC	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	11.7	6.6	4.6	
	21	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.7	4.4	3.6		
	23	SHC	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	7.8	5.5	4.6	
	25	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.9	6.6	4.6	
	27	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.1	6.6	4.6	
	29	SHC	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.3	6.6	4.6	
18		TC	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	11.8	6.8	4.8	
	21	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	5.9	3.8	3.0		
	23	SHC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.0	4.9	4.2	
	25	SHC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.2	6.1	4.8	
	27	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.3	6.8	4.8	
	29	SHC	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	11.1	10.5	6.8	4.8	
	31	SHC	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	11.7	6.8	4.8	
19		TC	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	11.9	7.0	5.0	
	21	SHC	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	5.2	3.2	2.4	
	23	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	6.3	4.3	3.6	
	25	SHC	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	7.5	5.5	4.7	
	27	SHC	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	8.6	6.6	5.0	
	29	SHC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	9.8	7.0	5.0	
	31	SHC	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	10.9	7.0	5.0	
20		TC	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	12.1	7.2	5.3	
	23	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	5.6	3.7	3.0	
	25	SHC	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	6.8	4.8	4.2	
	27	SHC	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	7.9	6.0	5.3	
	29	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	9.0	7.1	5.3	
	31	SHC	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	10.2	7.2	5.3	
21		TC	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	12.2	7.4	5.6	
	23	SHC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	4.9	3.1	2.5	
	25	SHC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	6.0	4.2	3.6	
	27	SHC	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.7	8.6	7.2	5.4	4.8
	29	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.8	8.3	6.5	5.6
	31	SHC	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	10.9	9.4	7.4	5.6
22		TC	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.5	15.8	12.4	7.7	5.8	
	25	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.7	5.4	3.7	3.0	
	27	SHC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.1	7.8	6.5	4.8	4.2
	29	SHC	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.2	8.9	7.6	5.9	5.3	
	31	SHC	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.4	10.1	8.8	7.1	5.8
23		TC	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.4	16.9	15.9	12.6	8.0	6.1	
	25	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	6.3	5.9	4.7	3.1	2.5	
	27	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.6	7.4	7.0	5.8	4.2	3.6	
	29	SHC	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.8	8.6	8.2	6.9	5.3	4.7	
	31	SHC	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	9.9	9.7	9.3	8.0	6.5	5.8	

2. Cooling Capacity of Indoor Unit

2-8. Low Silhouette Ducted (Type F2)

● S-15MF2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		1.5 kW		AIR FLOW RATE : 14.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4		
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4		
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4		
	25	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4		
	27	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4		
15		TC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5		
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5		
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5		
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5		
	27	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5		
16		TC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5		
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5		
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5		
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5		
	27	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5		
17		TC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5		
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5		
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5		
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5		
	27	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5		
18		TC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.7	0.5		
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.7	0.5		
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.7	0.5	
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.7	0.5	
	27	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.7	0.5	
19		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.7	0.5		
	21	SHC	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.6	0.4	0.4		
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5		
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.7	0.5	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.7	0.5	
20		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.8	0.6	
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.7	0.6	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.8	0.6	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.8	0.6	
	29	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.8	0.6	
21		TC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.8	0.6	
	23	SHC	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.6	0.4	0.3	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.8	0.6	
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.8	0.6	
	29	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.8	0.6	
22		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	0.8	0.6	
	25	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.8	0.6	0.6	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.8	0.6	
	29	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	0.8	0.6
	31	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	0.8	0.6
23		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.7	1.4	0.9	0.7	
	25	SHC	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.7	0.6	0.4	0.4	
	27	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.9	0.7	
	29	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.4	0.9	0.7	
	31	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.7	1.4	0.9	0.7

2. Cooling Capacity of Indoor Unit

● S-22MF2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.2 kW		AIR FLOW RATE : 14.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
15		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
16		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.0	0.7	
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7
17		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.0	0.7	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
18		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8	
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.8	0.7	
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.1	0.8	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8
19		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.1	0.8	
	21	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.5	0.4	
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	1.1	0.8	
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.1	0.8
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.1	0.8
20		TC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.8	0.7	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.1	0.8	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.1	0.8
	29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8
21		TC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.2	0.9
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.5	0.4	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	1.0	0.9	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.2	0.9
	29	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.2	0.9
22		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.0	1.2	0.9
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.8	0.6
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.2	0.9
	29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.2	0.9
	31	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.0	1.2	0.9
23		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.7	2.5	2.0	1.3	1.0	
	25	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.9	0.9	0.7	0.5	0.4	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.4	1.2	1.0	0.9	
	29	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.7	1.3	1.0
	31	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.0	1.3	1.0	

2. Cooling Capacity of Indoor Unit

● S-28MF2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.8 kW		AIR FLOW RATE : 14.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8		
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
15		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
16		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.3	0.9	
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
17		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9	
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.2	0.9	
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.3	0.9	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9
18		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0	
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.9	0.8	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.4	1.0
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.4	1.0
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0
19		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.4	1.0	
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.6	0.5	
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.2	1.0	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.4	1.0	
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.4	1.4	1.0
20		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.4	1.1	
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	0.9	0.8	
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.7	1.4	1.1	
	27	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.3	1.4	1.1	
	29	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.4	1.1
21		TC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.4	1.5	1.1
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.9	0.6	0.5
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.4	1.1	1.0
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.5	1.1
	29	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.4	1.5	1.1
22		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.5	1.5	1.2
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.2	0.9	0.8
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.9	1.7	1.4	1.2
	29	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.2	1.5	1.2
	31	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.5	1.5	1.2
23		TC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.2	2.5	1.6	1.2	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.9	0.6	0.5	
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.4	1.1	1.0
	29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.9	1.6	1.2
	31	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.4	1.6	1.2

2. Cooling Capacity of Indoor Unit

● S-36MF2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		3.6 kW		AIR FLOW RATE : 14.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
15		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.6	1.1	
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
16		TC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
	21	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.6	1.1	
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
17		TC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	1.7	1.2	
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.5	1.2	
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.7	1.2	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	1.7	1.2	
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	1.7	1.2	
18		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2	
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.2	1.1	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.7	1.2	
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	1.7	1.2
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2
19		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.3	
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.0	0.8	
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.5	1.3	
	25	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.5	1.8	1.3	
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.0	1.8	1.3	
20		TC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	1.9	1.4	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.2	1.1	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.8	1.4	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	1.9	1.4	
	29	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.1	1.9	1.4
21		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.1	1.9	1.4	
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.4	0.9	0.8	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.5	1.3	
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.4	1.9	1.4
	29	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	2.9	1.9	1.4
22		TC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.2	2.0	1.5	
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.9	1.6	1.2	1.1	
	27	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.1	1.7	1.5	
	29	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.6	2.0	1.5	
	31	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.5	3.5	3.2	2.0	1.5
23		TC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.3	4.1	3.2	2.1	1.6	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.6	1.6	1.3	0.9	0.8	
	27	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	2.2	2.1	1.8	1.5	1.3	
	29	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.6	2.3	2.0	1.6	
	31	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	3.1	2.9	2.1	1.6	

2. Cooling Capacity of Indoor Unit

● S-45MF2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		4.5 kW		AIR FLOW RATE : 14.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
15		TC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.0	1.4		
	23	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
16		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.0	1.4		
	23	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.1	1.4		
	25	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
17		TC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.7	1.4		
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.1	1.5		
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	2.1	1.5	
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5	
18		TC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5	
	21	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.4	1.1	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.5	1.9	1.5	
	25	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.2	1.5	
	27	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.6	2.2	1.5
19		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.2	1.6	
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.1	0.9	
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.2	1.6	1.4	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	2.1	1.6	
	27	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.3	2.2	1.6	
20		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.9	2.3	1.7	
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.3	1.1	
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.9	1.6	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.0	2.3	1.7	
	29	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.5	2.3	1.7
21		TC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	4.0	2.5	1.9	
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.6	1.1	0.9	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.1	1.6	1.4
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.6	2.1	1.8
	29	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.2	2.4	1.8
22		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	4.0	2.5	1.9	
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.8	1.3	1.1
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.3	1.8	1.7
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.3	2.9	2.4	1.9
	31	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	3.4	2.5	1.9
23		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.4	5.1	4.1	2.6	2.0		
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.9	1.5	1.1	0.9	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.4	2.1	1.6	1.4	
	29	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.9	2.6	2.1	1.9	
	31	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.6	3.4	3.1	2.6	2.0	

2. Cooling Capacity of Indoor Unit

● S-56MF2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		5.6 kW		AIR FLOW RATE : 16.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	21	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.4	1.6		
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
15		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
	21	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.5	1.7		
	23	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.5	1.7		
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
16		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8		
	21	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.3	1.8		
	23	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	2.6	1.8		
	25	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.3	2.6	1.8		
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	2.6	1.8		
17		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	2.6	1.8		
	21	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.0	1.7		
	23	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.6	1.8		
	25	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	2.6	1.8		
	27	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	2.6	1.8		
18		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	2.7	1.9		
	21	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.5	1.7	1.4		
	23	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.1	2.3	1.9		
	25	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	2.7	1.9		
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	2.7	1.9		
19		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.8	2.8	2.0		
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.1	1.4	1.1		
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	2.0	1.7		
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.3	2.6	2.0		
	27	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	3.9	2.8	2.0		
20		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	4.8	2.9	2.1		
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.7	1.4	
	25	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	2.3	2.0	
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.6	2.9	2.1	
	29	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.2	2.9	2.1	
21		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	5.0	3.1	2.3		
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.0	1.3	1.1	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.6	1.9	1.7	
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.2	2.5	2.2	
	29	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	3.8	3.0	2.2	
22		TC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.3	5.0	3.1	2.3	
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.7	2.3	1.6	1.4	
	27	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.3	2.9	2.2	2.0
	29	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.9	3.5	2.8	2.3
	31	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.5	4.1	3.1	2.3
23		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.7	6.4	5.1	3.2	2.4	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.4	1.9	1.3	1.1	
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.0	2.5	1.9	1.7	
	29	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.7	3.6	3.1	2.5	2.3	
	31	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.3	4.2	3.7	3.1	2.4	

2. Cooling Capacity of Indoor Unit

● S-60MF2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		6.0 kW		AIR FLOW RATE : 21.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7		
	21	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7	
	23	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7	
	25	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7	
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.6	1.7	
15		TC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.7	1.8		
	21	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.7	1.8	
	23	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.7	1.8	
	25	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.7	1.8	
	27	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	2.7	1.8	
16		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	2.7	1.9		
	21	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.7	1.9		
	23	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	2.7	1.9		
	25	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	2.7	1.9	
	27	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	2.7	1.9	
17		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.0	2.8	2.0		
	21	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.4	2.0		
	23	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.1	2.8	2.0		
	25	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.9	2.8	2.0	
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.0	2.8	2.0	
18		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.0	2.9	2.1		
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.8	2.0	1.7		
	23	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.6	2.8	2.1	
	25	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.4	2.9	2.1	
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.0	2.9	2.1	
19		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.1	3.0	2.2		
	21	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.4	1.6	1.3		
	23	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.2	2.4	2.1	
	25	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.0	3.0	2.2	
	27	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	4.7	3.0	2.2	
20		TC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	5.2	3.1	2.3	
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.7	2.0	1.7	
	25	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.5	2.8	2.3	
	27	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.3	3.1	2.3	
	29	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.1	3.1	2.3	
21		TC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.7	5.2	3.2	2.4
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.2	1.6	1.3	
	25	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.5	3.0	2.4	2.1
	27	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.3	3.8	3.1	2.4
	29	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.1	4.6	3.2	2.4
22		TC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	6.8	5.3	3.3	2.5	
	25	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.6	1.9	1.7	
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	3.4	2.7	2.5
	29	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.7	4.2	3.3	2.5
	31	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.5	4.9	3.3	2.5
23		TC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.5	7.2	6.8	5.4	3.4	2.6		
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.7	2.6	2.1	1.5	1.3	
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.5	3.4	2.9	2.3	2.1	
	29	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.3	4.2	3.7	3.1	2.6	
	31	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.1	5.0	4.5	3.4	2.6		

2. Cooling Capacity of Indoor Unit

● S-73MF2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		7.3 kW		AIR FLOW RATE : 21.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1		
	21	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	3.2	2.1	
	23	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1	
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1	
	27	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1	
15		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2		
	21	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.1	3.2	2.2		
	23	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.9	3.3	2.2		
	25	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2	
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2	
16		TC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3		
	21	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	2.7	2.3		
	23	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	3.3	2.3		
	25	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	3.3	2.3		
	27	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3		
17		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.1	3.4	2.4		
	21	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.5	2.3	1.9		
	23	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	3.1	2.4		
	25	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	3.4	2.4		
	27	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	3.4	2.4		
18		TC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.1	3.5	2.5		
	21	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.0	1.9	1.5		
	23	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.7	2.7	2.3	
	25	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.5	3.5	2.5	
	27	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.3	3.5	2.5	
19		TC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	6.2	3.6	2.6		
	21	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.5	1.5	1.1		
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.3	2.3	1.9		
	25	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.0	3.0	2.6	
	27	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	4.9	3.6	2.6	
20		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	6.3	3.8	2.8		
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.8	1.9	1.5		
	25	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.6	2.6	2.3	
	27	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.4	3.4	2.8	
	29	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.2	3.8	2.8	
21		TC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.2	6.4	3.9	2.9	
	23	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.4	1.5	1.1	
	25	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	3.1	2.2	1.9
	27	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	3.9	3.0	2.7
	29	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.4	4.7	3.8	2.9
22		TC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.6	8.2	6.5	4.0	3.0	
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.3	2.7	1.8	1.5	
	27	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.4	2.6	2.2	
	29	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	4.9	4.2	3.3	3.0	
	31	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.8	5.6	5.0	4.0	3.0	
23		TC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.1	8.8	8.3	6.6	4.2	3.2	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.8	2.2	1.4	1.1	
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	3.6	3.0	2.2	1.9
	29	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.5	4.4	3.8	2.9	2.6
	31	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.4	5.3	5.2	4.5	3.7	3.2	

2. Cooling Capacity of Indoor Unit

● S-90MF2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		9.0 kW		AIR FLOW RATE : 25.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.9	2.6		
	21	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	3.9	2.6		
	23	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.9	2.6	
	25	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.9	2.6	
	27	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	3.9	2.6	
15		TC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	4.0	2.7	
	21	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	3.8	2.7		
	23	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.9	4.0	2.7	
	25	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	4.0	2.7	
	27	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	4.0	2.7	
16		TC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	4.1	2.8		
	21	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.6	3.4	2.8	
	23	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.1	2.8	
	25	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	4.1	2.8	
	27	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	4.1	2.8	
17		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.5	4.2	3.0	
	21	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	2.8	2.4	
	23	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.2	3.8	3.0	
	25	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.1	4.2	3.0	
	27	SHC	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.2	7.1	4.2	3.0	
18		TC	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	7.6	4.4	3.1	
	21	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.7	2.4	1.9	
	23	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.6	3.3	2.8	
	25	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.5	4.2	3.1	
	27	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.5	4.4	3.1	
19		TC	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	7.7	4.5	3.2	
	21	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.4	
	23	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.0	2.8	2.3	
	25	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	4.9	3.7	3.2	
	27	SHC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	5.9	4.5	3.2	
20		TC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	7.7	4.6	3.4	
	23	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.4	2.2	1.8	
	25	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	4.3	3.2	2.8	
	27	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.3	4.1	3.4	
	29	SHC	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	6.2	4.6	3.4	
21		TC	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.1	7.9	4.8	3.6
	23	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.7	2.9	1.8	1.4
	25	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	3.8	2.7	2.3	
	27	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.7	3.6	3.2	
	29	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	5.7	4.6	3.6
22		TC	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.6	10.1	8.0	5.0	3.8	
	25	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.3	2.2	1.8	
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.0	4.2	3.1	2.7	
	29	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.1	5.9	5.1	4.1	3.7	
	31	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.8	6.0	5.0	3.8	
23		TC	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.2	10.8	10.2	8.1	5.1	3.9	
	25	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	3.7	3.5	2.7	1.7	1.4	
	27	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.7	4.6	4.4	3.6	2.6	2.3	
	29	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.7	5.5	5.3	4.6	3.5	3.2	
	31	SHC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.5	6.2	5.5	4.5	3.9	

2. Cooling Capacity of Indoor Unit

● S-106MF2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		10.6 kW		AIR FLOW RATE : 32.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	4.6	3.1		
	21	SHC	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	4.6	3.1		
	23	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	4.6	3.1		
	25	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	4.6	3.1		
	27	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	4.6	3.1		
15		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2		
	21	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.5	4.7	3.2		
	23	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2		
	25	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2		
	27	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.7	4.7	3.2		
16		TC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3		
	21	SHC	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	4.6	3.3		
	23	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.3	4.9	3.3		
	25	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3	
	27	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3	
	29	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	4.9	3.3	
17		TC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.8	5.0	3.5		
	21	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.5	3.9	3.4		
	23	SHC	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.7	5.0	3.5	
	25	SHC	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.0	5.0	3.5	
	27	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.8	5.0	3.5	
	29	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	8.8	5.0	3.5	
18		TC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	5.1	3.6	
	21	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	3.3	2.7		
	23	SHC	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.4	6.0	4.5	3.6	
	25	SHC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.2	5.1	3.6	
	27	SHC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.4	5.1	3.6	
	29	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	8.9	5.1	3.6
	31	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	8.9	5.1	3.6	
19		TC	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	9.0	5.3	3.8	
	21	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.0	2.6	2.1	
	23	SHC	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.9	5.3	3.9	3.3	
	25	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	6.5	5.1	3.8	
	27	SHC	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	7.7	5.3	3.8	
	29	SHC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	8.9	5.3	3.8	
	31	SHC	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	9.0	5.3	3.8	
20		TC	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	11.3	9.1	5.5	4.0	
	23	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	4.6	3.2	2.8	
	25	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	5.8	4.5	3.9	
	27	SHC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.0	5.5	4.0	
	29	SHC	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	8.2	5.5	4.0	
	31	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	9.1	5.5	4.0	
21		TC	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	11.9	9.3	5.6	4.2	
	23	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.9	2.6	2.1	
	25	SHC	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	5.1	3.8	3.3	
	27	SHC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	6.3	5.0	4.2	
	29	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	7.5	5.6	4.2	
	31	SHC	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.7	8.7	5.6	4.2
22		TC	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.5	11.9	9.4	5.8	4.4	
	25	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.2	4.4	3.2	2.7	
	27	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.7	6.4	5.6	4.4	3.9
	29	SHC	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	7.9	7.7	6.8	5.6	4.4
	31	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.1	8.9	8.0	5.8	4.4
23		TC	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.2	12.8	12.0	9.6	6.1	4.6	
	25	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.9	4.8	4.5	3.7	2.6	2.1	
	27	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.1	6.0	5.7	4.9	3.8	3.3	
	29	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.3	7.2	6.9	6.1	5.0	4.5	
	31	SHC	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.4	8.2	7.4	6.1	4.6	

2. Cooling Capacity of Indoor Unit

● S-140MF2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		14.0 kW		AIR FLOW RATE : 34.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0		
	21	SHC	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	6.1	4.0	
	23	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0	
	25	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0	
	27	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.2	6.1	4.0	
15		TC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.2	6.3	4.2	
	21	SHC	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.6	5.8	4.2		
	23	SHC	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	8.9	6.3	4.2	
	25	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.2	6.3	4.2	
	27	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.2	6.3	4.2	
16		TC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.1	6.4	4.4		
	21	SHC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.2	5.1	4.3		
	23	SHC	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.5	6.4	4.4		
	25	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.8	6.4	4.4	
	27	SHC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.1	6.4	4.4	
17		TC	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	11.7	6.6	4.6	
	21	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.6	4.4	3.6		
	23	SHC	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	8.1	7.9	5.7	4.6	
	25	SHC	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.2	6.6	4.6	
	27	SHC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.6	6.6	4.6	
18		TC	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	11.8	6.8	4.8	
	21	SHC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	5.7	3.7	2.9	
	23	SHC	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.1	5.0	4.2	
	25	SHC	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	8.4	6.3	4.8	
	27	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	9.7	6.8	4.8
19		TC	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	11.9	7.0	5.0	
	21	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	4.9	3.0	2.3	
	23	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	6.3	4.3	3.6	
	25	SHC	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	7.6	5.6	4.8	
	27	SHC	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	8.9	6.9	5.0	
20		TC	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	12.1	7.2	5.3	
	23	SHC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	5.5	3.6	3.0	
	25	SHC	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	6.8	4.9	4.2	
	27	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	8.1	6.2	5.3	
	29	SHC	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	9.4	7.2	5.3	
21		TC	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.7	12.2	7.4	5.6
	23	SHC	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.1	6.0	4.6	2.9	2.3
	25	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.3	5.9	4.2	3.6	
	27	SHC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.7	7.2	5.5	4.8
	29	SHC	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.0	8.5	6.8	5.6
22		TC	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.5	15.8	12.4	7.7	5.8	
	25	SHC	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.9	6.8	6.5	5.2	3.5	2.9	
	27	SHC	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.1	7.8	6.5	4.8	4.2	
	29	SHC	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.4	9.1	7.8	6.1	5.5	
	31	SHC	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.8	10.7	10.4	9.1	7.4	5.8	
23		TC	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.4	16.9	15.9	12.6	8.0	6.1	
	25	SHC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.2	6.0	5.6	4.4	2.9	2.3	
	27	SHC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.5	7.3	6.9	5.7	4.2	3.6	
	29	SHC	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.8	8.6	8.2	7.0	5.4	4.8	
	31	SHC	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.1	9.9	9.5	8.3	6.7	6.1	

2. Cooling Capacity of Indoor Unit

● S-160MF2E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		16.0 kW		AIR FLOW RATE : 36.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.6	7.0	4.6	
	21	SHC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.7	7.0	4.6	
	23	SHC	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.1	7.0	4.6
	25	SHC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.6	7.0	4.6
	27	SHC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.6	7.0	4.6
15		TC	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.6	7.2	4.8	
	21	SHC	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.3	6.3	4.8	
	23	SHC	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.7	7.2	4.8	
	25	SHC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.1	7.2	4.8
	27	SHC	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.6	7.2	4.8
16		TC	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.7	7.3	5.0	
	21	SHC	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	7.9	5.4	4.5	
	23	SHC	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.3	6.8	5.0
	25	SHC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	7.3	5.0
	27	SHC	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.1	7.3	5.0
	29	SHC	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.7	7.3	5.0
17		TC	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.3	7.5	5.2
	21	SHC	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.2	4.7	3.7	
	23	SHC	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.6	6.1	5.1
	25	SHC	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.3	10.0	7.4	5.2
	27	SHC	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.4	7.5	5.2
	29	SHC	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	12.8	7.5	5.2
18		TC	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	13.5	7.7	5.5
	21	SHC	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	7.0	6.4	3.9	3.1	
	23	SHC	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	8.4	7.8	5.3	4.5
	25	SHC	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.2	6.7	5.5
	27	SHC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	10.6	7.7	5.5
	29	SHC	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	11.9	7.7	5.5
19		TC	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	16.0	13.6	8.0	5.8
	21	SHC	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	6.5	5.5	3.2	2.4	
	23	SHC	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	6.9	4.6	3.8
	25	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	8.3	6.0	5.1
	27	SHC	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	10.7	9.6	7.4	5.8
	29	SHC	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	11.0	8.0	5.8
20		TC	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	17.1	13.8	8.2	6.0
	23	SHC	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	7.4	6.0	3.9	3.1
	25	SHC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	7.4	5.2	4.4
	27	SHC	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	10.2	8.8	6.6	5.8
	29	SHC	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	10.1	7.9	6.0
	31	SHC	13.0	13.0	13.0	13.0	13.0	13.0	13.0	13.0	13.0	13.0	13.0	13.0	13.0	13.0	13.0	13.0	11.5	8.2	6.0
21		TC	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	18.1	17.9	14.0	8.5	6.4
	23	SHC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.7	5.2	3.1	2.4
	25	SHC	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.1	6.5	4.5	3.8
	27	SHC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.5	7.9	5.9	5.1
	29	SHC	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	10.9	9.3	7.2	6.4
	31	SHC	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.3	10.7	8.5	6.4
22		TC	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	18.9	18.0	14.2	8.8	6.7
	25	SHC	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.7	7.5	7.2	5.7	3.8	3.1
	27	SHC	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	9.1	8.9	8.6	7.1	5.1	4.4
	29	SHC	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.3	9.9	8.5	6.5	5.8
	31	SHC	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.7	11.3	9.8	7.9	6.7
23		TC	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	19.9	19.3	18.2	14.4	9.1	7.0
	25	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	6.9	6.7	6.2	4.9	3.0	2.4
	27	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.3	8.1	7.6	6.2	4.4	3.7
	29	SHC	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.9	9.7	9.5	9.0	7.6	5.8	5.1
	31	SHC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.1	10.9	10.4	9.0	7.1	6.4

2. Cooling Capacity of Indoor Unit

2-9. Floor Standing (Type P1)

● S-22MP1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:				2.2 kW AIR FLOW RATE : 7.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.0	0.6		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
15		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.7		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.7		
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
16		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.8	0.7	
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.0	0.7	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.0	0.7	
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7
	29	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7
17		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7	
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.5	
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.9	0.7	
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.0	0.7
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.0	0.7
	29	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
18		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8	
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.6	0.4	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.8	0.7	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.1	0.8	
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.1	0.8
	29	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.1	0.8
	31	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8
19		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.1	0.8	
	21	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.7	0.4	0.3	
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.6	0.5	
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.9	0.8	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.1	0.8	
	29	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.1	0.8
	31	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8
20		TC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8	
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.8	0.5	0.4	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.8	0.6	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	1.0	0.8	
	29	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.1	0.8	
	31	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.1	0.8	
21		TC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.2	0.9	
	23	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.6	0.4	0.3	
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.9	0.6	0.5	
	27	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.1	0.9	0.8	
	29	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	1.1	0.9	
	31	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.2	0.9	
22		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.0	1.2	0.9	
	25	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.8	0.5	0.4	
	27	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.7	0.6	
	29	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	1.0	0.9	
	31	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.5	1.2	0.9
23		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.7	2.5	2.0	1.3	1.0		
	25	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.8	0.8	0.6	0.4	0.3		
	27	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.9	0.6	0.5	
	29	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.1	0.9	0.8	
	31	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.4	1.1	1.0	

2. Cooling Capacity of Indoor Unit

● S-28MP1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.8 kW		AIR FLOW RATE : 7.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8		
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.2	0.8	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8
15		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8		
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.2	0.8		
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.3	0.8	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
16		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.0	0.8		
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.9		
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.3	0.9	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
	29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
17		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9		
	21	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.9	0.7		
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.1	0.9		
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.3	0.9	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.3	0.9	
	29	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9	
18		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0		
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.6		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.0	0.8		
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	1.0	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.4	1.0
	29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.4	1.0	
	31	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0	
19		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.4	1.0		
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.6	0.4		
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	0.8	0.7	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.1	0.9	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.4	1.0	
	29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.4	1.0	
	31	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.3	1.4	1.0	
20		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.4	1.1		
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.1	0.7	0.6		
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.9	0.8		
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.6	1.2	1.1	
	29	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.4	1.1	
	31	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.1	1.4	1.1	
21		TC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.4	1.5	1.1	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.9	0.6	0.4		
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.2	0.8	0.7	
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.4	1.1	0.9	
	29	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.7	1.3	1.1	
	31	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.9	1.5	1.1	
22		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.5	1.5	1.2	
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.3	1.0	0.7	0.6	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.9	0.8	
	29	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.5	1.2	1.1	
	31	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.1	1.8	1.4	1.2	
23		TC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.2	2.5	1.6	1.2		
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.9	0.6	0.4		
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.1	0.8	0.7		
	29	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.4	1.1	0.9		
	31	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.6	1.3	1.2		

2. Cooling Capacity of Indoor Unit

● S-36MP1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		3.6 kW		AIR FLOW RATE : 9.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.6	1.0		
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.6	1.0	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
15		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1		
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.4	1.1		
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.6	1.1		
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1		
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1		
16		TC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1		
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.2	1.0		
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.6	1.1		
	25	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.6	1.1		
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	1.6	1.1		
	29	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1		
17		TC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	1.7	1.2		
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.0	0.8		
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.4	1.2		
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.7	1.2		
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	1.7	1.2		
	29	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	1.7	1.2		
18		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2		
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	0.9	0.7		
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.2	1.0	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.5	1.2	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.7	1.2	
	29	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.7	1.7	1.2	
	31	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.0	1.7	1.2	
19		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.3	
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	0.7	0.5	
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.5	1.0	0.8	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.3	1.2	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.7	1.3	
	29	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.5	1.8	1.3	
	31	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.9	1.8	1.3	
20		TC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	1.9	1.4	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.9	0.7	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	1.2	1.0	
	27	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.0	1.5	1.3	
	29	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.3	1.8	1.4	
	31	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.6	1.9	1.4	
21		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.1	1.9	1.4	
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.1	0.7	0.5	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.4	1.0	0.8	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.8	1.3	1.1
	29	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.1	1.6	1.4	
	31	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.9	1.4	
22		TC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.2	2.0	1.5	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.6	1.2	0.8	0.7	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.6	1.1	1.0	
	29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.5	1.3	
	31	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.6	2.2	1.8	1.5	
23		TC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.3	4.1	3.2	2.1	1.6	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.0	0.6	0.5	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.8	1.7	1.4	1.0	0.8	
	29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.0	1.7	1.3	1.1	
	31	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.3	2.0	1.6	1.5	1.1	

2. Cooling Capacity of Indoor Unit

● S-45MP1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		4.5 kW		AIR FLOW RATE : 12.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.0	1.3	
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3
15		TC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.8	1.4	
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.0	1.4	
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4
16		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4	
	21	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.5	1.3	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.0	1.4	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.1	1.4	
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4
17		TC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	1.0	
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.7	1.5	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.1	1.5
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.1	1.5
18		TC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5	
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.0	0.8	
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.5	1.2
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.6	1.9	1.5
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.0	2.2	1.5
19		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.2	1.6	
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.4	0.8	0.6	
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.2	1.0
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.3	1.7	1.4
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	2.1	1.6
20		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.9	2.3	1.7	
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.6	1.0	0.8	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.1	1.4	1.2
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.5	1.9	1.7
	29	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.9	2.3	1.7
21		TC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	3.9	2.4	1.8	
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	0.8	0.6	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.8	1.2	1.0
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.2	1.6	1.4
	29	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.6	2.1	1.8
22		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	4.0	2.5	1.9	
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.5	1.0	0.8	
	27	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.4	1.9	1.4	1.2
	29	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.4	1.9	1.7
	31	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.8	2.3	1.9
23		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.4	5.1	4.1	2.6	2.0	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.6	1.2	0.7	0.6	
	27	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	2.2	2.1	1.7	1.2	1.0
	29	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.5	2.1	1.6	1.4
	31	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.0	2.9	2.6	2.1	1.9

2. Cooling Capacity of Indoor Unit

● S-56MP1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		5.6 kW		AIR FLOW RATE : 15.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
	21	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.4	1.6	
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6
15		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7	
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.3	1.7	
	23	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.5	1.7	
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7
16		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8	
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	1.9	1.6	
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.5	1.8
	25	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	2.6	1.8
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8
	29	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8
17		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.7	2.6	1.8
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	1.6	1.3
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.2	1.8
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	2.6	1.8
	27	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	2.6	1.8
	29	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.7	2.6	1.8
18		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	2.7	1.9	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.1	1.3	1.0
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.7	1.9	1.6
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.3	2.4	1.9
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.8	2.7	1.9
	29	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.4	2.7	1.9
	31	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	2.7	1.9
19		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.8	2.8	2.0	
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.8	1.0	0.7
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.3	1.6	1.3
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.9	2.1	1.8
	27	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.5	2.7	2.0
	29	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.1	2.8	2.0
	31	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.6	2.8	2.0
20		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	4.8	2.9	2.1	
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.0	1.3	1.0
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.6	1.8	1.5
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	2.4	2.1
	29	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.7	2.9	2.1
	31	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.2	2.9	2.1
21		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	4.9	3.0	2.2	
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.7	1.0	0.7
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.2	1.5	1.3
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.4	2.8	2.1	1.8
	29	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.3	2.6	2.2
	31	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.9	3.0	2.2
22		TC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.3	5.0	3.1	2.3
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.4	1.9	1.2	1.0
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.5	1.8	1.5
	29	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.5	3.0	2.3	2.1
	31	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.1	3.6	2.9	2.3
23		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.7	6.4	5.1	3.2	2.4	
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	2.0	1.6	0.9	0.7	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.7	2.6	2.1	1.5	1.2	
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.1	2.7	2.0	1.8
	31	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	3.8	3.7	3.2	2.6	2.3	

2. Cooling Capacity of Indoor Unit

● S-71MP1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		7.1 kW		AIR FLOW RATE : 17.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	3.1	2.0	
	21	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	2.0	
	23	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.1	2.0	
	25	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	3.1	2.0	
	27	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	3.1	2.0	
15		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	3.2	2.1	
	21	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.7	2.1	
	23	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	3.2	2.1	
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	3.2	2.1	
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	3.2	2.1	
16		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	3.3	2.2	
	21	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	2.4	1.9	
	23	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.0	2.2	
	25	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	3.3	2.2	
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	3.3	2.2	
29	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	3.3	2.2	
17		TC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	5.9	3.3	2.3
	21	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.1	2.0	1.6	
	23	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.6	2.2
	25	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	3.2	2.3
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.0	3.3	2.3
29	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.7	3.3	2.3	
18		TC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.0	3.4	2.4	
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	1.6	1.2	
	23	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.4	2.3	1.9
	25	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.0	2.9	2.4	
	27	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.6	3.4	2.4
	29	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.3	3.4	2.4
31	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.0	3.4	2.4	
19		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	6.0	3.5	2.6	
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.3	1.3	0.9	
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.9	1.9	1.6	
	25	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.6	2.5	2.2	
	27	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.2	3.2	2.6	
	29	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	4.8	3.5	2.6
31	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.5	3.5	2.6	
20		TC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	6.1	3.7	2.7	
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.5	1.6	1.3	
	25	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.2	2.2	1.9	
	27	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	3.8	2.9	2.5	
	29	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	4.4	3.5	2.7	
31	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.1	3.7	2.7	
21		TC	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	6.2	3.8	2.8	
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.1	1.3	0.9	
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.8	1.9	1.5	
	27	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.4	2.5	2.1	
	29	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.0	3.2	2.8	
31	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	4.7	3.8	2.8		
22		TC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	8.0	6.3	3.9	3.0
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	3.1	2.4	1.5	1.2
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.7	3.0	2.2	1.8
	29	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.3	3.7	2.8	2.5
31	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.1	4.9	4.3	3.4	3.0	
23		TC	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	8.8	8.6	8.1	6.4	4.1	3.1
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9	2.6	2.0	1.2	0.9
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.5	3.5	3.3	2.6	1.8	1.5
	29	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.9	3.2	2.5	2.1
31	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	4.7	4.6	3.9	3.1	2.8	

2. Cooling Capacity of Indoor Unit

2-10. Concealed Floor Standing (Type R1)

● S-22MR1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.2 kW		AIR FLOW RATE : 7.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.0	0.6		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6		
15		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.7		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.7		
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7		
16		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7		
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.8	0.7		
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.0	0.7		
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.0	0.7		
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
	29	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
17		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7	
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.6	0.5		
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.9	0.7	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.7	
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.0	0.7	
18		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8		
	21	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.5	0.4	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.8	0.7	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.0	0.8	
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.1	0.8
	29	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.1	0.8
19		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.1	0.8	
	21	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.7	0.4	0.2	
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.9	0.6	0.5	
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.9	0.8	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.1	0.8	
	29	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.1	0.8
20		TC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8	
	23	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.5	0.4	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.7	0.6	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	1.0	0.8	
	29	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.1	0.8	
	31	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.1	0.8	
21		TC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.2	0.9	
	23	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.6	0.4	0.3	
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.9	0.6	0.5	
	27	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.1	0.9	0.8	
	29	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	1.1	0.9	
	31	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	1.2	0.9	
22		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.0	1.2	0.9	
	25	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.7	0.5	0.4	
	27	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.7	0.6	
	29	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.3	1.0	0.9	
	31	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.2	0.9	
23		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.7	2.5	2.0	1.3	1.0	
	25	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.8	0.8	0.6	0.4	0.3	
	27	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.8	0.6	0.5	
	29	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.3	1.3	1.1	0.9	0.8	
	31	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.3	1.1	1.0	

2. Cooling Capacity of Indoor Unit

● S-28MR1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.8 kW		AIR FLOW RATE : 7.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8		
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.2	0.8		
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
15		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8		
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.2	0.8		
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.3	0.8		
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
16		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.0	0.8		
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.9		
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.3	0.9		
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
17		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9		
	21	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.9	0.7		
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.1	0.9		
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.3	0.9	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.3	0.9	
29	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9		
18		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0		
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.6		
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.0	0.8	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	1.0	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.4	1.0
29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.4	1.0	
31	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0	
19		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.4	1.0		
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.6	0.4		
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	0.8	0.7	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.1	0.9	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.4	1.0
29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.4	1.0	
31	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.3	1.4	1.0	
20		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.4	1.1		
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.1	0.7	0.6		
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.9	0.8	
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.6	1.2	1.1	
	29	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.4	1.1	
31	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.1	1.4	1.1		
21		TC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.4	1.5	1.1	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.9	0.6	0.4		
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.2	0.8	0.7	
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.4	1.1	0.9	
	29	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.7	1.3	1.1	
31	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.9	1.5	1.1	
22		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.5	1.5	1.2	
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.3	1.0	0.7	0.6	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.9	0.8	
	29	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.5	1.2	1.1
	31	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.1	1.8	1.4	1.2
23		TC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.2	2.5	1.6	1.2		
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.9	0.6	0.4		
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.1	0.8	0.7	
	29	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.4	1.1	0.9	
31	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.6	1.3	1.2		

2. Cooling Capacity of Indoor Unit

● S-36MR1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		3.6 kW		AIR FLOW RATE : 9.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.6	1.0	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.6	1.0
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0
15		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.4	1.1	
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.6	1.1	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1
16		TC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.2	1.0	
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.6	1.1	
	25	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.6	1.1	
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	1.6	1.1	
17		TC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	1.7	1.2	
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.0	0.8	
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.4	1.2	
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.7	1.2	
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	1.7	1.2	
18		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2	
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	0.9	0.7	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.2	1.0
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.5	1.2
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.7	1.2
19		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.3	
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	0.7	0.5	
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.5	1.0	0.8	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.3	1.2	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.7	1.3
20		TC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	1.9	1.4	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.9	0.7	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	1.2	1.0
	27	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.0	1.5	1.3
	29	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.3	1.8	1.4
21		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.1	1.9	1.4	
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.1	0.7	0.5	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.4	1.0	0.8	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.8	1.3	1.1
	29	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.1	1.6	1.4
22		TC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.2	2.0	1.5	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.6	1.2	0.8	0.7	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.6	1.1	1.0	
	29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.5	1.3
	31	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.6	2.2	1.8	1.5
23		TC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.3	4.1	3.2	2.1	1.6	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.0	0.6	0.5	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.7	1.4	1.0	0.8	
	29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.0	1.7	1.3	1.1	
	31	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.3	2.0	1.6	1.5	

2. Cooling Capacity of Indoor Unit

● S-45MR1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		4.5 kW		AIR FLOW RATE : 12.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3		
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.0	1.3		
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
15		TC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4		
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.8	1.4		
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.0	1.4		
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4	
16		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4		
	21	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.5	1.3		
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.0	1.4		
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.1	1.4	
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4	
17		TC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5	
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	1.0	
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.7	1.5	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.1	1.5
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.1	1.5
18		TC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5	
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.0	0.8	
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.5	1.2	
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.6	1.9	1.5	
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.0	2.2	1.5	
19		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.2	1.6	
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.4	0.8	0.6	
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.2	1.0	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.3	1.7	1.4	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	2.1	1.6	
20		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.9	2.3	1.7	
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.6	1.0	0.8	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.1	1.4	1.2	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.5	1.9	1.7	
	29	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.9	2.3	1.7	
21		TC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	3.9	2.4	1.8	
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	0.8	0.6	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.8	1.2	1.0	
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.2	1.6	1.4
	29	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.6	2.1	1.8	
22		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	4.0	2.5	1.9		
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.5	1.0	0.8	
	27	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.4	1.9	1.4	1.2	
	29	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.4	1.9	1.7	
	31	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.8	2.3	1.9	
23		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.4	5.1	4.1	2.6	2.0		
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.6	1.2	0.7	0.6		
	27	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	2.2	2.1	1.7	1.2	1.0		
	29	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.5	2.1	1.6	1.4		
	31	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.0	2.9	2.6	2.1	1.9		

2. Cooling Capacity of Indoor Unit

● S-56MR1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		5.6 kW		AIR FLOW RATE : 15.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	21	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.4	1.6		
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6		
15		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.3	1.7		
	23	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.5	1.7		
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7		
16		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8		
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	1.9	1.6		
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.5	1.8		
	25	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	2.6	1.8		
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	2.6	1.8		
17		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	2.6	1.8		
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.3		
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.2	1.8		
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.6	1.8		
	27	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	2.6	1.8		
18		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	2.7	1.9		
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.3	1.0		
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.9	1.6		
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.4	1.9		
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	2.7	1.9		
19		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.8	2.8	2.0		
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.0	0.7		
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	1.6	1.3		
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.1	1.8		
	27	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	2.7	2.0		
20		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	4.8	2.9	2.1		
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.3	1.0		
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	1.8	1.5		
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.4	2.1		
	29	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	2.9	2.1		
21		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	4.9	3.0	2.2	
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.0	0.7		
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	1.5	1.3		
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.4	2.1	1.8		
	29	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.3	2.6	2.2	
22		TC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.3	5.0	3.1	2.3	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.4	1.9	1.2	1.0	
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.5	1.8	1.5	
	29	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.5	3.0	2.3	2.1	
	31	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.1	3.6	2.9	2.3	
23		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.7	6.4	5.1	3.2	2.4	
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	2.0	1.6	0.9	0.7	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.7	2.6	2.1	1.5	1.2	
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.1	2.7	2.0	1.8
	31	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	3.8	3.7	3.2	2.6	2.3	

2. Cooling Capacity of Indoor Unit

● S-71MR1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		7.1 kW		AIR FLOW RATE : 17.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	3.1	2.0		
	21	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	2.0		
	23	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.1	2.0		
	25	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	3.1	2.0	
	27	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	3.1	2.0	
15		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	3.2	2.1		
	21	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.7	2.1		
	23	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	3.2	2.1		
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	3.2	2.1	
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	3.2	2.1		
16		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	3.3	2.2		
	21	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	2.4	1.9		
	23	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.0	2.2		
	25	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	3.3	2.2		
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	3.3	2.2		
29	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	3.3	2.2		
17		TC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	5.9	3.3	2.3		
	21	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.1	2.0	1.6		
	23	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.6	2.2	
	25	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	3.2	2.3	
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.0	3.3	2.3	
29	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.7	3.3	2.3		
18		TC	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.6	6.0	3.4	2.4		
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	1.6	1.2		
	23	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.4	2.3	1.9	
	25	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.0	2.9	2.4		
	27	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.6	3.4	2.4	
	29	SHC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.3	3.4	2.4	
31	SHC	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.2	6.0	3.4	2.4		
19		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	6.0	3.5	2.6		
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.3	1.3	0.9		
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.9	1.9	1.6		
	25	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.6	2.5	2.2	
	27	SHC	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.7	4.2	3.2	2.6	
	29	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	4.8	3.5	2.6	
31	SHC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	5.5	3.5	2.6		
20		TC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	6.1	3.7	2.7		
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.5	1.6	1.3		
	25	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.2	2.2	1.9	
	27	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	3.8	2.9	2.5	
	29	SHC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	4.4	3.5	2.7	
	31	SHC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.1	3.7	2.7	
21		TC	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0	6.2	3.8	2.8		
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.1	1.3	0.9		
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.8	1.9	1.5	
	27	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.4	2.5	2.1	
	29	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.0	3.2	2.8	
31	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	4.7	3.8	2.8		
22		TC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	8.0	6.3	3.9	3.0	
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	3.1	2.4	1.5	1.2	
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.7	3.0	2.2	1.8
	29	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.3	3.7	2.8	2.5
	31	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.1	4.9	4.3	3.4	3.0
23		TC	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	8.8	8.6	8.1	6.4	4.1	3.1	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.9	2.6	2.0	1.2	0.9	
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.5	3.5	3.3	2.6	1.8	1.5	
	29	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.9	3.2	2.5	2.1	
	31	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	4.7	4.6	3.9	3.1	2.8	

2. Cooling Capacity of Indoor Unit

2-11. 1-Way Cassette (Type D1)

● S-28MD1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.8 kW		AIR FLOW RATE : 12.0 m ³ /min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8		
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
15		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8		
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.3	0.8		
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8		
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
16		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.9		
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.3	0.9		
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9		
17		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9	
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.1	0.9		
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.3	0.9	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9	
18		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0	
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.9	0.7	
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	1.0	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.4	1.0	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0
19		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.4	1.0	
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.7	0.5	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	1.1	0.9	
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.4	1.0	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.4	1.0	
20		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.4	1.1	
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	0.8	0.7	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.6	1.3	1.1	
	27	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.0	1.4	1.1	
	29	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.4	1.4	1.1
21		TC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.4	1.5	1.1
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.0	0.6	0.5	
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	1.1	0.9	
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.8	1.5	1.1
	29	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.2	1.5	1.1
22		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.5	1.5	1.2	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.1	0.8	0.7	
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.8	1.6	1.2	1.1	
	29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	2.0	1.5	1.2	
	31	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.4	1.5	1.2
23		TC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.2	2.5	1.6	1.2		
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	1.1	0.9	0.6	0.5	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.3	1.0	0.9	
	29	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.7	1.4	1.2	
	31	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.4	2.1	1.6	1.2	

2. Cooling Capacity of Indoor Unit

● S-36MD1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		3.6 kW		AIR FLOW RATE : 12.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	21	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.6	1.0	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0	
15		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.6	1.1	
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1	
16		TC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.5	1.1	
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.1	
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
29	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1	
17		TC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	1.7	1.2	
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.2	1.0	
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.7	1.2	
	25	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	1.7	1.2
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	1.7	1.2
29	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	1.7	1.2	
18		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2	
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.0	0.8	
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.4	1.2	
	25	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	1.7	1.2	
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.8	1.7	1.2
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2
31	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2	
19		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.3	
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.8	0.6	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.2	1.0	
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.1	1.6	1.3	
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.5	1.8	1.3	
	29	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.0	1.8	1.3	
31	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.3		
20		TC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	1.9	1.4	
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.0	0.8	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.4	1.2	
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.3	1.8	1.4
	29	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.7	1.9	1.4
	31	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.1	1.9	1.4
21		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.1	1.9	1.4	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.2	0.8	0.6	
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.6	1.2	1.0	
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.0	1.6	1.4
	29	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.9	1.4
31	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.9	1.9	1.4	
22		TC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.2	2.0	1.5	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.7	1.4	1.0	0.8	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.8	1.4	1.2	
	29	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.2	1.8	1.5	
	31	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.6	2.0	1.5
23		TC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.3	4.1	3.2	2.1	1.6	
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.4	1.1	0.8	0.6	
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.8	1.5	1.2	1.0	
	29	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.3	1.9	1.6	1.4	
31	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.7	2.7	2.4	2.0	1.6	

2. Cooling Capacity of Indoor Unit

● S-45MD1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		4.5 kW		AIR FLOW RATE : 12.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.0	1.3	
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3
15		TC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4	
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.4	
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.0	1.4	
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4
16		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4	
	21	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.7	1.4	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.1	1.4	
	25	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.1	1.4	
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4
17		TC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5
	21	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.4	1.2
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	1.8	1.5
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.1	1.5
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.1	1.5
18		TC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.2	0.9
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.3	1.6	1.3
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.7	2.0	1.5
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.1	2.2	1.5
19		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.2	1.6
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	0.9	0.7
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.0	1.4	1.1
	25	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.4	1.8	1.5
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.8	2.2	1.6
20		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.9	2.3	1.7
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.8	1.1	0.9
	25	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.2	1.5	1.3
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.6	2.0	1.7
	29	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	2.3	1.7
21		TC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	3.9	2.4	1.8
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.5	0.9	0.7
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.9	1.3
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.3	1.8
	29	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.7	2.2	1.8
22		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	4.0	2.5	1.9
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	1.6	1.1
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.1	1.5
	29	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.5	2.0
	31	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.3	2.9	2.4
23		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.4	5.1	4.1	2.6	2.0
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.8	1.4	0.9	0.7
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.2	1.8	1.3
	29	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.6	2.3	1.7
	31	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	3.1	3.0	2.7	2.1	1.9

2. Cooling Capacity of Indoor Unit

● S-56MD1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		5.6 kW		AIR FLOW RATE : 13.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
	21	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.4	1.6	
	23	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.4	1.6	
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
15		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7	
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.2	1.7	
	23	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.5	1.7	
	25	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	2.5	1.7	
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7	
16		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8	
	21	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.0	1.7	
	23	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.5	1.8	
	25	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.7	2.6	1.8
	27	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	2.6	1.8
17		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.7	2.6	1.8
	21	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	1.7	1.4	
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.2	1.8	
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	2.6	1.8
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	2.6	1.8
18		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	2.7	1.9	
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.3	1.5	1.2	
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.8	1.9	1.6	
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.2	2.4	1.9
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.7	2.7	1.9
19		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.8	2.8	2.0	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.0	1.2	0.9	
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.5	1.7	1.4	
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.0	2.1	1.8	
	27	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.4	2.6	2.0
20		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	4.8	2.9	2.1	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.2	1.5	1.2	
	25	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.6	1.9	1.6	
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	2.4	2.1	
	29	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.6	2.8	2.1	
21		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	4.9	3.0	2.2	
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.2	0.9	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.7	1.4	
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.8	2.1	1.8	
	29	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.3	2.6	2.2	
22		TC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.3	5.0	3.1	2.3
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.6	2.1	1.4	1.2
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.6	1.9	1.6
	29	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.5	3.0	2.3	2.1
	31	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.1	4.0	3.5	2.8	2.3
23		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.7	6.4	5.1	3.2	2.4	
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	2.3	1.8	1.2	0.9	
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.9	2.8	2.3	1.6	1.4
	29	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.2	2.7	2.1	1.8	
	31	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	3.8	3.7	3.2	2.5	2.3	

2. Cooling Capacity of Indoor Unit

● S-73MD1E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		7.3 kW		AIR FLOW RATE : 18.0 m ³ /min																				
EVAPORATOR		CONDENSER																						
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																						
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52				
14		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1				
	21	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.1	3.2	2.1			
	23	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.2	2.1			
	25	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1		
	27	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	3.2	2.1		
15		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2			
	21	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	3.0	2.2			
	23	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	3.3	2.2			
	25	SHC	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.3	5.2	3.3	2.2		
	27	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	3.3	2.2		
16		TC	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	5.8	3.3	2.3			
	21	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.6	2.2			
	23	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	3.3	2.3			
	25	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	3.3	2.3			
	27	SHC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	3.3	2.3		
17		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.1	3.4	2.4		
	21	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.3	1.9			
	23	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.1	2.9	2.4		
	25	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.7	3.4	2.4		
	27	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.4	3.4	2.4		
18		TC	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.8	6.1	3.5	2.5		
	21	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.0	2.0	1.6		
	23	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.6	2.6	2.2		
	25	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.3	3.2	2.5		
	27	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.9	3.5	2.5		
19		TC	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	7.3	6.2	3.6	2.6		
	21	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.6	1.6	1.2		
	23	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.3	2.2	1.9		
	25	SHC	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	4.4	3.9	2.9	2.5		
	27	SHC	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0	4.5	3.5	2.6		
20		TC	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	7.8	6.3	3.8	2.8		
	23	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.9	1.9	1.6		
	25	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.5	2.6	2.2		
	27	SHC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.1	3.2	2.8		
	29	SHC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	4.8	3.8	2.8		
21		TC	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.3	8.2	6.4	3.9	2.9	
	23	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.5	1.6	1.2		
	25	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	3.1	2.2	1.9	
	27	SHC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.8	2.5		
	29	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.1	4.4	3.5	2.9	
22		TC	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.8	8.2	6.5	4.0	3.0	
	25	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.4	2.8	1.9	1.5	
	27	SHC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.0	3.4	2.5	2.1	
	29	SHC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.8	4.7	4.0	3.1	2.8	
	31	SHC	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.5	5.4	5.3	4.6	3.7	3.0	
23		TC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.1	8.8	8.3	6.6	4.2	3.2		
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	3.0	2.4	1.6	1.2	
	27	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	3.8	3.6	3.0	2.2	1.9	
	29	SHC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.4	4.3	3.6	2.8	2.5
	31	SHC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.1	4.9	4.3	3.4	3.1	

2. Cooling Capacity of Indoor Unit

2-12. Slim Low Static Ducted (Type M1)

● S-15MM1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:				1.5 kW AIR FLOW RATE : 8.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4	
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4	
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4	
	25	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4	
	27	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.4	
15		TC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5	
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5	
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5	
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5	
	27	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5	
16		TC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5	
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	0.7	0.5	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5	
	27	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.7	0.5	
17		TC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5	
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.7	0.5	
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5	
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5	
	27	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5	
18		TC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.7	0.5	
	21	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.6	0.5	
	23	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.7	0.5	
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.7	0.5
	27	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.7	0.5
19		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.7	0.5	
	21	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.7	0.5	0.4	
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.7	0.5	
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	0.7	0.5
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.7	0.5
20		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.8	0.6	
	23	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.6	0.6	
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.8	0.6	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.8	0.6
	29	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.8	0.6
21		TC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.3	0.8	0.6	
	23	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.7	0.5	0.4	
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.9	0.8	0.6
	27	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.8	0.6
	29	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	0.8	0.6
22		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.7	1.3	0.8	0.6	
	25	SHC	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.9	0.8	0.6	0.5	
	27	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.8	0.6	
	29	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.3	0.8	0.6
	31	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.7	1.3	0.8	0.6
23		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.7	1.7	1.4	0.9	0.7	
	25	SHC	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.8	0.7	0.7	0.7	0.5	0.4	
	27	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	1.0	0.9	0.8	0.7
	29	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.3	1.3	1.2	0.9	0.7
	31	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	0.9	0.7

2. Cooling Capacity of Indoor Unit

● S-22MM1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.2 kW		AIR FLOW RATE : 8.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
	27	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.6	
15		TC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.0	0.7	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
16		TC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7	
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.0	0.7	
	23	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.0	0.7	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7
17		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	0.9	0.7	
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.0	0.7	
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.0	0.7
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.0	0.7
18		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.1	0.8	
	21	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.7	0.6	
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.0	0.8	
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.1	0.8
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.1	0.8
19		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.1	0.8
	21	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.9	0.6	0.5
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	0.9	0.8
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	1.1	0.8
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.1	0.8
20		TC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.1	0.8
	23	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	0.7	0.6
	25	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	1.0	0.8
	27	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.1	0.8
	29	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.1	0.8
21		TC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.9	1.2	0.9
	23	SHC	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	0.8	0.6	0.5
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.1	0.9	0.7
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	1.1	0.9
	29	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.2	0.9
22		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.5	2.0	1.2	0.9
	25	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	1.0	0.7	0.6
	27	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	1.0	0.9
	29	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.2	0.9
	31	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.2	0.9
23		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.7	2.5	2.0	1.3	1.0
	25	SHC	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.1	1.0	1.0	1.0	0.8	0.6	0.5
	27	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	1.1	0.9	0.8
	29	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.3	1.1	1.0
	31	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.6	1.3	1.0

2. Cooling Capacity of Indoor Unit

● S-28MM1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		2.8 kW		AIR FLOW RATE : 8.5 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8	
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.2	0.8	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.2	0.8
15		TC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8	
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.3	0.8	
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.3	0.8	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.8
16		TC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.2	0.9	
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.3	0.9	
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.3	0.9	
17		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9	
	21	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.0	0.8	
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	0.9	
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.3	0.9
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	1.3	0.9
18		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.4	1.0	
	21	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.3	0.9	0.7	
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.2	1.0
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.4	1.0
	27	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.4	1.0
19		TC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.4	1.4	1.0	
	21	SHC	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.2	1.1	0.7	0.6	
	23	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.0	0.9
	25	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.3	1.0
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.4	1.0
20		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.4	1.1	
	23	SHC	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.4	1.2	0.8	0.7
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.5	1.1	1.0
	27	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.8	1.4	1.1
	29	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.1	1.4	1.1
21		TC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.4	1.5	1.1
	23	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.0	0.7	0.6
	25	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.3	1.0	0.8
	27	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.6	1.3	1.1
	29	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.9	1.5	1.1
22		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	3.2	2.5	1.5	1.2
	25	SHC	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.4	1.4	1.2	0.8	0.7
	27	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.7	1.7	1.4	1.1	1.0
	29	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	2.0	1.7	1.4	1.2
	31	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.3	2.0	1.5	1.2
23		TC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.4	3.2	2.5	1.6	1.2	
	25	SHC	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.3	1.2	1.2	1.0	0.7	0.6
	27	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.5	1.3	1.0	0.8
	29	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.6	1.3	1.1
	31	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.1	1.9	1.6	1.2

2. Cooling Capacity of Indoor Unit

● S-36MM1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		3.6 kW		AIR FLOW RATE : 9.0 m ³ /min																			
EVAPORATOR		CONDENSER																					
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																					
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52			
14		TC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0			
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.6	1.0			
	23	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.6	1.0		
15		TC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1			
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.6	1.1			
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.6	1.1			
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1			
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1			
16		TC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1			
	21	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.4	1.1			
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.6	1.1			
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.6	1.1			
	27	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	1.6	1.1			
17		TC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	1.7	1.2		
	21	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.2	1.0			
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.5	1.2			
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.7	1.2			
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	1.7	1.2		
18		TC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.0	1.7	1.2		
	21	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.0	0.8		
	23	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.3	1.1		
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.2	1.6	1.2		
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.5	1.7	1.2		
19		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	1.8	1.3		
	21	SHC	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.6	1.4	0.9	0.7		
	23	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.7	1.2	1.0		
	25	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.0	1.5	1.3		
	27	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.3	1.8	1.3		
20		TC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.1	1.9	1.4		
	23	SHC	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.8	1.5	1.0	0.9		
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.8	1.3	1.2		
	27	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.1	1.7	1.4		
	29	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.4	1.9	1.4		
21		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	3.1	1.9	1.4	
	23	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.3	0.8	0.7	
	25	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.9	1.6	1.2	1.0	
	27	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	1.9	1.5	1.3	
	29	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.2	1.8	1.4	
22		TC	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.3	4.2	4.1	3.2	2.0	1.5
	25	SHC	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.9	1.8	1.8	1.4	1.0	0.8
	27	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.1	2.1	1.7	1.3	1.2
	29	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.4	2.1	1.6	1.5
	31	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.4	1.9	1.5
23		TC	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.6	4.5	4.3	4.1	3.2	2.1	1.6		
	25	SHC	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.7	1.6	1.5	1.2	0.9	0.7
	27	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.9	1.9	1.5	1.2	1.0
	29	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.3	2.3	2.2	1.8	1.5	1.3	
	31	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.6	2.5	2.2	1.8	1.5	1.3	

2. Cooling Capacity of Indoor Unit

● S-45MM1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		4.5 kW		AIR FLOW RATE : 10.5 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3	
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.0	1.3	
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.0	1.3	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.0	1.3
15		TC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4	
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	1.8	1.4	
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.0	1.4	
	25	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.0	1.4	
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.0	1.4	
16		TC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.1	1.4	
	21	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	1.7	1.4	
	23	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.0	1.4	
	25	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.1	1.4	
	27	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	2.1	1.4	
17		TC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.8	2.1	1.5
	21	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.4	1.2	
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	1.8	1.5	
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.1	1.5
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.1	1.5
18		TC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	3.8	2.2	1.5
	21	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	1.9	1.3	1.0
	23	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.3	1.6	1.4
	25	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	2.0	1.5
	27	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.0	2.2	1.5
19		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	3.8	2.2	1.6
	21	SHC	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	1.7	1.0	0.8
	23	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.0	1.4	1.2
	25	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.4	1.8	1.6
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.8	2.1	1.6
20		TC	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	4.8	3.9	2.3	1.7
	23	SHC	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	2.2	1.8	1.2	1.0
	25	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.2	1.6	1.4
	27	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.6	2.0	1.7
	29	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.9	2.3	1.7
21		TC	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.1	5.0	3.9	2.4	1.8
	23	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.6	1.0
	25	SHC	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.4	2.0	1.4	1.2
	27	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.3	1.8	1.6
	29	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.7	2.1	1.8
22		TC	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.4	5.3	5.1	4.0	2.5	1.9
	25	SHC	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.3	2.2	1.8	1.2
	27	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.5	2.1	1.6
	29	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.9	2.5	2.0
	31	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.3	2.9	2.3
23		TC	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.7	5.6	5.4	5.1	4.1	2.6	2.0
	25	SHC	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.1	2.0	1.9	1.5	1.0
	27	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.4	2.3	1.9	1.4
	29	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.8	2.6	2.3	1.8
	31	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	3.0	2.6	2.1	1.9

2. Cooling Capacity of Indoor Unit

● S-56MM1E5A

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		5.6 kW		AIR FLOW RATE : 12.5 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
	21	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	2.4	1.6	
	23	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	2.4	1.6	
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
	27	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	2.4	1.6	
15		TC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7	
	21	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.2	1.7	
	23	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.5	1.7	
	25	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	2.5	1.7	
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	2.5	1.7	
16		TC	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.5	4.4	2.6	1.8	
	21	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.0	1.7	
	23	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	2.5	1.8	
	25	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	2.6	1.8	
	27	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	2.6	1.8	
17		TC	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.9	4.7	2.6	1.8
	21	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.7	1.7	1.4
	23	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.1	2.2	1.8
	25	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	2.6	1.8
	27	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.0	2.6	1.8
18		TC	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	5.2	4.7	2.7	1.9	
	21	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.4	1.5	1.2
	23	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.8	1.9	1.7
	25	SHC	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.3	2.4	1.9
	27	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.7	2.7	1.9
19		TC	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	5.6	4.8	2.8	2.0	
	21	SHC	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.1	1.3	1.0
	23	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.6	1.7	1.4
	25	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.0	2.2	1.9
	27	SHC	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.8	3.4	2.6	2.0
20		TC	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	6.0	4.8	2.9	2.1	
	23	SHC	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.8	2.2	1.5	1.2
	25	SHC	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	3.2	2.7	1.9	1.7
	27	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.1	2.4	2.1
	29	SHC	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	4.1	3.6	2.8	2.1
21		TC	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	6.3	4.9	3.0	2.2	
	23	SHC	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.6	2.0	1.3	1.0
	25	SHC	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	3.0	2.4	1.7	1.4
	27	SHC	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	3.4	2.9	2.1	1.9
	29	SHC	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.9	3.3	2.6	2.2
22		TC	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.7	6.6	6.3	5.0	3.1	2.3
	25	SHC	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.9	2.8	2.7	2.2	1.5	1.2
	27	SHC	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.3	3.2	3.1	2.6	1.9	1.6
	29	SHC	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.7	3.6	3.0	2.4	2.1
	31	SHC	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.2	4.1	4.0	3.5	2.8	2.3
23		TC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.0	6.7	6.4	5.1	3.2	2.4	
	25	SHC	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.7	2.6	2.5	2.4	1.9	1.2	1.0	
	27	SHC	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.0	2.8	2.3	1.7	1.4
	29	SHC	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.6	3.5	3.4	3.3	2.8	2.1	1.9	
	31	SHC	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	4.0	3.9	3.8	3.7	3.2	2.6	2.3	

2. Cooling Capacity of Indoor Unit

2-13. High Static Pressure Ducted (Type E2)

● S-180ME2E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)

This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		18.0 kW		AIR FLOW RATE : 49.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	11.9	7.9	5.2	
	21	SHC	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	10.6	7.9	5.2	
	23	SHC	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	11.9	7.9	5.2
	25	SHC	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	11.9	7.9	5.2
	27	SHC	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	11.9	7.9	5.2
15		TC	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.1	8.0	5.4	
	21	SHC	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	10.0	9.9	7.6	5.4	
	23	SHC	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.8	8.0	5.4
	25	SHC	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.1	8.0	5.4
	27	SHC	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.1	8.0	5.4
16		TC	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.3	8.2	5.6	
	21	SHC	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	9.3	6.6	5.5	
	23	SHC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	8.2	5.6
	25	SHC	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	8.2	5.6
	27	SHC	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.3	8.2	5.6
17		TC	15.6	15.6	15.6	15.6	15.6	15.6	15.6	15.6	15.6	15.6	15.6	15.6	15.6	15.6	15.6	15.6	15.0	8.5	5.9
	21	SHC	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.6	8.3	5.6	4.6
	23	SHC	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.2	7.5	5.9
	25	SHC	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.4	12.1	8.5	5.9
	27	SHC	14.3	14.3	14.3	14.3	14.3	14.3	14.3	14.3	14.3	14.3	14.3	14.3	14.3	14.3	14.3	14.3	14.0	8.5	5.9
18		TC	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	16.8	15.1	8.7	6.2
	21	SHC	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.9	7.2	4.6	3.6
	23	SHC	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.8	9.0	6.4	5.5
	25	SHC	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.0	8.3	6.2
	27	SHC	13.6	13.6	13.6	13.6	13.6	13.6	13.6	13.6	13.6	13.6	13.6	13.6	13.6	13.6	13.6	13.6	12.8	8.7	6.2
19		TC	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	15.3	9.0	6.5
	21	SHC	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	7.1	6.0	3.6	2.7
	23	SHC	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	7.9	5.4	4.5
	25	SHC	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	10.9	9.8	7.3	6.4
	27	SHC	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	12.8	11.6	9.0	6.5
20		TC	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	19.2	15.5	9.3	6.8
	23	SHC	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2	6.7	4.4	3.5
	25	SHC	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	8.6	6.3	5.4
	27	SHC	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	12.0	10.5	8.2	6.8
	29	SHC	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	13.9	12.4	9.3	6.8
21		TC	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.2	15.7	9.6	7.1
	23	SHC	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.4	5.6	3.4	2.6
	25	SHC	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.4	9.3	7.5	5.3	4.5
	27	SHC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	9.3	7.1	6.3
	29	SHC	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.1	13.0	11.2	9.0	7.1
22		TC	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.2	20.3	16.0	9.9	7.5	
	25	SHC	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.5	8.4	8.0	6.4	4.3	3.5
	27	SHC	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.3	9.9	8.3	6.2	5.4
	29	SHC	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.1	11.8	10.1	8.0	7.2
	31	SHC	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.0	13.7	12.0	9.8	7.5
23		TC	22.8	22.8	22.8	22.8	22.8	22.8	22.8	22.8	22.8	22.8	22.8	22.8	22.4	21.7	20.4	16.2	10.3	7.9	
	25	SHC	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.6	7.5	7.3	6.8	5.3	3.4	2.6
	27	SHC	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.5	9.4	9.1	8.7	7.1	5.2	4.4
	29	SHC	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.2	11.0	10.5	9.0	7.0	6.2
	31	SHC	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.1	12.8	12.4	10.8	8.9	7.9

2. Cooling Capacity of Indoor Unit

● S-224ME2E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
 This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		22.4 kW		AIR FLOW RATE : 56.0 m ³ /min																	
EVAPORATOR		CONDENSER																			
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																			
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52	
14		TC	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.8	9.8	6.5	
	21	SHC	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	9.8	6.5	
	23	SHC	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.7	9.8	6.5
	25	SHC	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.8	9.8	6.5
	27	SHC	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.8	9.8	6.5
15		TC	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.3	10.0	6.7	
	21	SHC	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	11.9	9.0	6.7	
	23	SHC	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	14.1	10.0	6.7
	25	SHC	16.3	16.3	16.3	16.3	16.3	16.3	16.3	16.3	16.3	16.3	16.3	16.3	16.3	16.3	16.3	16.3	16.3	10.0	6.7
	27	SHC	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.4	16.3	10.0	6.7
16		TC	17.9	17.9	17.9	17.9	17.9	17.9	17.9	17.9	17.9	17.9	17.9	17.9	17.9	17.9	17.9	17.7	10.3	7.0	
	21	SHC	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.2	11.1	7.8	6.5	
	23	SHC	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.3	13.2	9.9	7.0	
	25	SHC	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.4	10.3	7.0
	27	SHC	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.7	17.6	10.3	7.0
17		TC	19.4	19.4	19.4	19.4	19.4	19.4	19.4	19.4	19.4	19.4	19.4	19.4	19.4	19.4	19.4	18.7	10.5	7.3	
	21	SHC	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.5	10.1	6.6	5.3	
	23	SHC	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.2	8.7	7.3	
	25	SHC	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.5	10.5	7.3
	27	SHC	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.7	10.5	7.3
18		TC	20.9	20.9	20.9	20.9	20.9	20.9	20.9	20.9	20.9	20.9	20.9	20.9	20.9	20.9	20.9	18.8	10.8	7.7	
	21	SHC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	8.7	5.4	4.2	
	23	SHC	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	11.8	10.9	7.5	6.4	
	25	SHC	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	14.0	13.0	9.7	7.7	
	27	SHC	16.2	16.2	16.2	16.2	16.2	16.2	16.2	16.2	16.2	16.2	16.2	16.2	16.2	16.2	16.2	15.3	10.8	7.7	
19		TC	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	19.0	11.2	8.1	
	21	SHC	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	8.9	7.4	4.3	3.1	
	23	SHC	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	11.0	9.5	6.4	5.3	
	25	SHC	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	13.2	11.7	8.6	7.4	
	27	SHC	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	13.8	10.7	8.1	
20		TC	23.9	23.9	23.9	23.9	23.9	23.9	23.9	23.9	23.9	23.9	23.9	23.9	23.9	23.9	23.9	19.3	11.5	8.5	
	23	SHC	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	10.1	8.2	5.3	4.2	
	25	SHC	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.2	12.3	12.3	12.3	10.3	7.4	6.3	
	27	SHC	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	12.5	9.5	8.4	
	29	SHC	16.6	16.6	16.6	16.6	16.6	16.6	16.6	16.6	16.6	16.6	16.6	16.6	16.6	16.6	16.6	14.7	11.5	8.5	
21		TC	25.4	25.4	25.4	25.4	25.4	25.4	25.4	25.4	25.4	25.4	25.4	25.4	25.4	25.4	25.4	19.6	11.9	8.9	
	23	SHC	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.2	9.1	6.9	4.1	3.1	
	25	SHC	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.4	11.2	9.1	6.2	5.2	
	27	SHC	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.5	13.4	11.2	8.4	7.3	
	29	SHC	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.5	13.3	10.4	8.9	
22		TC	26.9	26.9	26.9	26.9	26.9	26.9	26.9	26.9	26.9	26.9	26.9	26.9	26.9	26.9	26.4	25.2	19.9	12.3	9.3
	25	SHC	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.4	10.3	9.8	7.8	5.1	4.2	
	27	SHC	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.7	12.4	11.9	9.9	7.2	6.2	
	29	SHC	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.8	14.5	14.1	12.0	9.3	8.4	
	31	SHC	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.9	16.7	16.2	14.2	11.4	9.3	
23		TC	28.4	28.4	28.4	28.4	28.4	28.4	28.4	28.4	28.4	28.4	28.4	28.4	27.9	27.0	25.4	20.2	12.8	9.8	
	25	SHC	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.6	9.5	9.3	9.0	8.4	6.5	4.0	3.1	
	27	SHC	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.7	11.5	11.1	10.5	8.6	6.1	5.2	
	29	SHC	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.6	13.2	12.7	10.7	8.3	7.3	
	31	SHC	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.9	15.8	15.4	14.8	12.9	10.3	9.4		

2. Cooling Capacity of Indoor Unit

● S-280ME2E5

Power supply :220/230/240V 1phase-50Hz TC : Total Cooling Capacity (kW), SHC : Sensible Heat Capacity (kW)
This data is when the indoor unit connects with U-16ME2E8.

RATING CAPACITY:		28.0 kW		AIR FLOW RATE : 72.0 m³/min																		
EVAPORATOR		CONDENSER																				
AIR INTAKE TEMP		AMBIENT TEMP. (°C)																				
W.B.	D.B.		15	17	19	21	23	25	27	29	31	33	35	37	39	41	43	46	50	52		
14		TC	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.5	12.2	8.1		
	21	SHC	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	12.2	8.1		
	23	SHC	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.5	12.2	8.1		
	25	SHC	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.5	12.2	8.1	
	27	SHC	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.7	18.5	12.2	8.1	
15		TC	20.5	20.5	20.5	20.5	20.5	20.5	20.5	20.5	20.5	20.5	20.5	20.5	20.5	20.5	20.5	20.3	12.5	8.4		
	21	SHC	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.7	15.5	12.0	8.4		
	23	SHC	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	18.4	12.5	8.4		
	25	SHC	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.2	12.5	8.4	
	27	SHC	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.2	12.5	8.4	
16		TC	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.4	22.2	12.8	8.8		
	21	SHC	14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.7	14.6	10.5	8.8		
	23	SHC	17.4	17.4	17.4	17.4	17.4	17.4	17.4	17.4	17.4	17.4	17.4	17.4	17.4	17.4	17.4	17.4	12.8	8.8		
	25	SHC	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.3	20.2	12.8	8.8	
	27	SHC	22.3	22.3	22.3	22.3	22.3	22.3	22.3	22.3	22.3	22.3	22.3	22.3	22.3	22.3	22.3	22.3	22.1	12.8	8.8	
17		TC	24.3	24.3	24.3	24.3	24.3	24.3	24.3	24.3	24.3	24.3	24.3	24.3	24.3	24.3	24.3	23.4	13.2	9.2		
	21	SHC	13.7	13.7	13.7	13.7	13.7	13.7	13.7	13.7	13.7	13.7	13.7	13.7	13.7	13.7	13.7	13.3	9.0	7.4		
	23	SHC	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.1	11.7	9.2		
	25	SHC	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	18.9	13.2	9.2	
	27	SHC	22.1	22.1	22.1	22.1	22.1	22.1	22.1	22.1	22.1	22.1	22.1	22.1	22.1	22.1	22.1	22.1	21.7	13.2	9.2	
18		TC	26.1	26.1	26.1	26.1	26.1	26.1	26.1	26.1	26.1	26.1	26.1	26.1	26.1	26.1	26.1	26.1	23.5	13.6	9.6	
	21	SHC	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	12.6	11.5	7.5	6.0		
	23	SHC	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	15.5	14.3	10.3	8.7	
	25	SHC	18.2	18.2	18.2	18.2	18.2	18.2	18.2	18.2	18.2	18.2	18.2	18.2	18.2	18.2	18.2	18.2	17.1	13.0	9.6	
	27	SHC	21.1	21.1	21.1	21.1	21.1	21.1	21.1	21.1	21.1	21.1	21.1	21.1	21.1	21.1	21.1	21.1	19.9	13.6	9.6	
19		TC	28.0	28.0	28.0	28.0	28.0	28.0	28.0	28.0	28.0	28.0	28.0	28.0	28.0	28.0	28.0	28.0	23.8	14.0	10.1	
	21	SHC	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	11.6	9.8	6.1	4.6		
	23	SHC	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	14.4	12.6	8.8	7.4	
	25	SHC	17.2	17.2	17.2	17.2	17.2	17.2	17.2	17.2	17.2	17.2	17.2	17.2	17.2	17.2	17.2	17.2	15.4	11.5	10.1	
	27	SHC	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	20.0	18.1	14.0	10.1	
20		TC	29.9	29.9	29.9	29.9	29.9	29.9	29.9	29.9	29.9	29.9	29.9	29.9	29.9	29.9	29.9	29.9	24.1	14.4	10.6	
	23	SHC	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4	11.0	7.3	6.0	
	25	SHC	16.1	16.1	16.1	16.1	16.1	16.1	16.1	16.1	16.1	16.1	16.1	16.1	16.1	16.1	16.1	16.1	13.8	10.1	8.7	
	27	SHC	18.9	18.9	18.9	18.9	18.9	18.9	18.9	18.9	18.9	18.9	18.9	18.9	18.9	18.9	18.9	18.9	16.5	12.8	10.6	
	29	SHC	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	21.6	19.3	14.4	10.6	
21		TC	31.7	31.7	31.7	31.7	31.7	31.7	31.7	31.7	31.7	31.7	31.7	31.7	31.7	31.7	31.7	31.4	24.4	14.9	11.1	
	23	SHC	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.1	12.0	9.3	5.9	4.6	
	25	SHC	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.9	14.7	12.1	8.6	7.3	
	27	SHC	17.6	17.6	17.6	17.6	17.6	17.6	17.6	17.6	17.6	17.6	17.6	17.6	17.6	17.6	17.6	17.6	17.5	14.8	11.4	10.1
	29	SHC	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.4	20.3	17.6	14.1	11.1	
22		TC	33.6	33.6	33.6	33.6	33.6	33.6	33.6	33.6	33.6	33.6	33.6	33.6	33.6	33.6	33.0	31.5	24.8	15.4	11.7	
	25	SHC	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.8	13.5	12.9	10.4	7.2	6.0	
	27	SHC	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.5	16.3	15.6	13.1	9.9	8.7	
	29	SHC	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.3	19.1	18.4	15.9	12.6	11.4	
	31	SHC	22.0	22.0	22.0	22.0	22.0	22.0	22.0	22.0	22.0	22.0	22.0	22.0	22.0	22.0	21.8	21.1	18.6	15.3	11.7	
23		TC	35.5	35.5	35.5	35.5	35.5	35.5	35.5	35.5	35.5	35.5	35.5	35.5	35.5	34.8	33.7	31.8	25.3	16.0	12.2	
	25	SHC	12.5	12.5	12.5	12.5	12.5	12.5	12.5	12.5	12.5	12.5	12.5	12.5	12.5	12.2	11.9	11.2	8.9	5.8	4.6	
	27	SHC	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.3	15.0	14.6	13.9	11.6	8.5	7.3	
	29	SHC	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	18.0	17.7	17.4	16.7	14.3	11.2	10.0	
	31	SHC	20.8	20.8	20.8	20.8	20.8	20.8	20.8	20.8	20.8	20.8	20.8	20.8	20.8	20.5	20.1	19.4	17.0	13.9	12.2	

2. Cooling Capacity of Indoor Unit

● S-224ME2E5

Power supply : 220/230/240V 1phase-50Hz

This data is when the indoor unit connects with U-16ME2E8.

TC : Total Cooling Capacity (kW) SHC : Sensible Heat Capacity (kW)

RATING CAPACITY:		22.4kW		28.3 m ³ /min									
EVAPORATOR		CONDENSER											
AIR INTAKE. TEMP		AMBIENT TEMP.(°C)											
W.B.		23	25	27	29	31	33	35	37	39	41	43	46
22	TC	7.9	8.2	8.4	8.5	8.6	8.7	9.8	11.0	12.1	13.3	14.4	12.4
	SHC	2.8	3.8	4.9	6.0	7.1	8.2	9.3	10.3	11.4	12.5	13.6	12.4
24	TC	-	12.0	12.4	12.5	12.5	12.6	12.8	12.8	12.8	13.3	14.4	13.5
	SHC	-	3.8	4.9	6.0	7.1	8.2	9.3	10.3	11.4	12.5	13.6	13.5
26	TC	-	-	16.9	16.9	17.1	17.1	17.2	17.2	17.2	17.2	16.3	14.2
	SHC	-	-	4.9	6.0	7.1	8.2	9.3	10.3	11.4	12.5	13.3	14.2
28	TC	-	-	-	22.0	22.1	22.4	21.7	20.8	19.6	18.5	17.4	14.9
	SHC	-	-	-	6.0	7.1	8.2	9.2	10.0	10.7	11.3	11.3	13.0
30	TC	-	-	-	-	23.9	23.2	22.6	21.9	20.7	19.6	18.5	15.6
	SHC	-	-	-	-	6.0	6.9	7.8	8.3	8.8	9.4	9.7	11.6
32	TC	-	-	-	-	-	24.1	23.4	22.8	22.1	21.1	19.1	16.3
	SHC	-	-	-	-	-	5.5	6.3	7.0	7.5	8.1	8.2	10.4

● S-280ME2E5

Power supply : 220/230/240V 1phase-50Hz

This data is when the indoor unit connects with U-16ME2E8.

TC : Total Cooling Capacity (kW) SHC : Sensible Heat Capacity (kW)

RATING CAPACITY:		28.0kW		35.0 m ³ /min									
EVAPORATOR		CONDENSER											
AIR INTAKE. TEMP		AMBIENT TEMP.(°C)											
W.B.		23	25	27	29	31	33	35	37	39	41	43	46
22	TC	9.8	10.1	10.5	10.6	10.6	10.8	12.2	13.6	15.0	16.5	17.9	15.5
	SHC	3.6	5.1	6.5	7.9	9.3	10.8	12.2	13.6	15.0	16.5	17.9	15.5
24	TC	-	14.8	15.4	15.5	15.6	15.6	15.8	15.8	15.8	16.5	17.9	16.8
	SHC	-	5.1	6.5	7.9	9.3	10.8	12.2	13.6	15.0	16.5	17.9	16.8
26	TC	-	-	21.0	21.0	21.2	21.3	21.4	21.3	21.5	21.4	20.4	18.3
	SHC	-	-	6.5	7.9	9.3	10.8	12.2	13.6	15.0	16.5	17.5	18.3
28	TC	-	-	-	27.3	27.4	28.0	27.2	26.4	24.6	25.0	22.4	18.6
	SHC	-	-	-	7.9	9.3	10.8	12.1	13.2	13.9	15.6	16.0	16.0
30	TC	-	-	-	-	29.9	29.1	28.2	27.4	26.6	25.7	23.1	19.5
	SHC	-	-	-	-	7.9	9.1	10.0	11.0	12.0	12.8	13.1	13.9
32	TC	-	-	-	-	-	30.2	29.3	28.4	27.6	26.3	23.9	20.4
	SHC	-	-	-	-	-	7.2	8.2	9.4	10.0	10.8	11.0	12.2

3. Part Load of Outdoor Unit

3-1. U-8ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	14.9	1.31	17.9	1.57	20.9	1.83	22.4	1.96	25.4	2.22	28.4	2.48	31.4	2.74
		-5.0	14.9	1.31	17.9	1.57	20.9	1.83	22.4	1.96	25.4	2.22	28.4	2.49	31.4	2.75
		0.0	14.9	1.31	17.9	1.58	20.9	1.84	22.4	1.97	25.4	2.23	28.4	2.49	31.4	2.75
		5.0	14.9	1.32	17.9	1.58	20.9	1.84	22.4	1.97	25.4	2.24	28.4	2.50	31.4	2.77
		10.0	14.9	1.33	17.9	1.59	20.9	1.86	22.4	1.99	25.4	2.27	28.4	2.56	31.4	2.83
		15.0	14.9	1.35	17.9	1.64	20.9	1.94	22.4	2.09	25.4	2.40	28.4	2.72	31.4	3.00
		20.0	14.9	1.53	17.9	1.89	20.9	2.28	22.4	2.48	25.4	2.93	28.4	3.42	31.4	3.96
		25.0	14.9	1.98	17.9	2.43	20.9	2.92	22.4	3.19	25.4	3.75	28.4	4.36	31.4	5.01
		30.0	14.9	2.46	17.9	3.02	20.9	3.63	22.4	3.95	25.4	4.63	28.4	5.36	31.4	6.14
		35.0	14.9	2.98	17.9	3.66	20.9	4.39	22.4	4.77	25.4	5.58	28.4	6.44	30.0	6.68
		40.0	14.9	3.55	17.9	4.35	20.9	5.21	22.4	5.66	25.4	6.61	26.6	6.68	27.7	6.68
		43.0	14.9	3.91	17.9	4.79	20.9	5.73	22.4	6.23	24.3	6.68	25.4	6.68	25.9	6.33
46.0	14.8	4.24	17.7	5.20	18.8	5.29	19.0	5.15	19.6	4.92	20.2	4.73	21.0	4.59		
52.0	6.4	1.85	7.0	1.87	7.7	1.90	8.1	1.92	8.9	1.97	9.8	2.02	10.8	2.08		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	13.4	1.05	16.1	1.32	18.8	1.58	20.2	1.71	22.8	1.96	25.5	2.21	28.2	2.45
		-5.0	13.4	1.06	16.1	1.32	18.8	1.59	20.2	1.72	22.8	1.97	25.5	2.22	28.2	2.46
		0.0	13.4	1.06	16.1	1.33	18.8	1.59	20.2	1.72	22.8	1.97	25.5	2.22	28.2	2.46
		5.0	13.4	1.06	16.1	1.33	18.8	1.60	20.2	1.73	22.8	1.98	25.5	2.23	28.2	2.47
		10.0	13.4	1.07	16.1	1.34	18.8	1.60	20.2	1.73	22.8	1.99	25.5	2.25	28.2	2.50
		15.0	13.4	1.08	16.1	1.36	18.8	1.64	20.2	1.78	22.8	2.05	25.5	2.32	28.2	2.59
		20.0	13.4	1.18	16.1	1.51	18.8	1.83	20.2	1.98	22.8	2.29	25.5	2.62	28.2	2.97
		25.0	13.4	1.61	16.1	1.98	18.8	2.36	20.2	2.55	22.8	2.95	25.5	3.37	28.2	3.79
		30.0	13.4	2.06	16.1	2.51	18.8	2.96	20.2	3.19	22.8	3.66	25.5	4.13	28.2	4.62
		35.0	13.4	2.62	16.1	3.16	18.8	3.71	20.2	3.98	22.8	4.54	25.5	5.12	28.2	5.71
		40.0	13.4	3.12	16.1	3.74	18.8	4.36	20.2	4.68	22.8	5.33	25.5	6.00	27.7	6.68
		43.0	13.4	3.43	16.1	4.10	18.8	4.77	20.2	5.12	22.8	5.83	25.4	6.68	25.9	6.33
46.0	13.4	3.67	16.1	4.44	18.8	5.24	19.0	5.15	19.6	4.92	20.2	4.73	21.0	4.59		
52.0	6.4	1.85	7.0	1.87	7.7	1.90	8.1	1.92	8.9	1.97	9.8	2.02	10.8	2.08		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	11.9	0.90	14.3	1.14	16.7	1.38	17.9	1.50	20.3	1.73	22.7	1.95	25.1	2.18
		-5.0	11.9	0.90	14.3	1.15	16.7	1.39	17.9	1.50	20.3	1.73	22.7	1.96	25.1	2.18
		0.0	11.9	0.91	14.3	1.15	16.7	1.39	17.9	1.51	20.3	1.74	22.7	1.96	25.1	2.18
		5.0	11.9	0.91	14.3	1.16	16.7	1.39	17.9	1.51	20.3	1.74	22.7	1.97	25.1	2.19
		10.0	11.9	0.92	14.3	1.16	16.7	1.40	17.9	1.52	20.3	1.75	22.7	1.97	25.1	2.20
		15.0	11.9	0.93	14.3	1.17	16.7	1.41	17.9	1.53	20.3	1.77	22.7	2.00	25.1	2.24
		20.0	11.9	0.96	14.3	1.23	16.7	1.49	17.9	1.62	20.3	1.88	22.7	2.13	25.1	2.37
		25.0	11.9	1.32	14.3	1.60	16.7	1.88	17.9	2.02	20.3	2.31	22.7	2.61	25.1	2.90
		30.0	11.9	1.71	14.3	2.06	16.7	2.40	17.9	2.58	20.3	2.93	22.7	3.28	25.1	3.63
		35.0	11.9	2.21	14.3	2.63	16.7	3.06	17.9	3.27	20.3	3.69	22.7	4.12	25.1	4.54
		40.0	11.9	2.65	14.3	3.14	16.7	3.63	17.9	3.88	20.3	4.37	22.7	4.86	25.1	5.35
		43.0	11.9	2.92	14.3	3.46	16.7	3.99	17.9	4.26	20.3	4.79	22.7	5.33	25.1	5.88
46.0	11.9	3.11	14.3	3.71	16.7	4.32	17.9	4.64	19.6	4.92	20.2	4.73	21.0	4.59		
52.0	6.4	1.85	7.0	1.87	7.7	1.90	8.1	1.92	8.9	1.97	9.8	2.02	10.8	2.08		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	10.5	0.75	12.5	0.96	14.6	1.18	15.7	1.28	17.8	1.49	19.9	1.69	22.0	1.89
		-5.0	10.5	0.75	12.5	0.97	14.6	1.18	15.7	1.28	17.8	1.49	19.9	1.69	22.0	1.89
		0.0	10.5	0.75	12.5	0.97	14.6	1.18	15.7	1.29	17.8	1.49	19.9	1.70	22.0	1.89
		5.0	10.5	0.76	12.5	0.97	14.6	1.19	15.7	1.29	17.8	1.50	19.9	1.70	22.0	1.90
		10.0	10.5	0.76	12.5	0.98	14.6	1.19	15.7	1.30	17.8	1.50	19.9	1.71	22.0	1.91
		15.0	10.5	0.77	12.5	0.99	14.6	1.20	15.7	1.31	17.8	1.51	19.9	1.71	22.0	1.92
		20.0	10.5	0.78	12.5	1.01	14.6	1.23	15.7	1.33	17.8	1.55	19.9	1.76	22.0	1.97
		25.0	10.5	0.97	12.5	1.21	14.6	1.44	15.7	1.55	17.8	1.76	19.9	1.97	22.0	2.17
		30.0	10.5	1.39	12.5	1.65	14.6	1.91	15.7	2.03	17.8	2.28	19.9	2.53	22.0	2.77
		35.0	10.5	1.82	12.5	2.15	14.6	2.47	15.7	2.63	17.8	2.94	19.9	3.24	22.0	3.54
		40.0	10.5	2.20	12.5	2.59	14.6	2.97	15.7	3.15	17.8	3.52	19.9	3.87	22.0	4.22
		43.0	10.5	2.44	12.5	2.87	14.6	3.28	15.7	3.48	17.8	3.87	19.9	4.26	22.0	4.64
46.0	10.5	2.60	12.5	3.06	14.6	3.52	15.7	3.74	17.8	4.20	19.9	4.50	21.0	4.59		
52.0	6.4	1.85	7.0	1.87	7.7	1.90	8.1	1.92	8.9	1.97	9.8	2.02	10.8	2.08		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

U-8ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	9.0	0.59	10.8	0.78	12.5	0.97	13.4	1.06	15.2	1.24	17.0	1.42	18.8	1.59
		-5.0	9.0	0.59	10.8	0.78	12.5	0.97	13.4	1.06	15.2	1.24	17.0	1.42	18.8	1.59
		0.0	9.0	0.60	10.8	0.79	12.5	0.97	13.4	1.06	15.2	1.24	17.0	1.42	18.8	1.60
		5.0	9.0	0.60	10.8	0.79	12.5	0.97	13.4	1.07	15.2	1.25	17.0	1.43	18.8	1.60
		10.0	9.0	0.60	10.8	0.79	12.5	0.98	13.4	1.07	15.2	1.25	17.0	1.43	18.8	1.61
		15.0	9.0	0.61	10.8	0.80	12.5	0.99	13.4	1.08	15.2	1.26	17.0	1.44	18.8	1.61
		20.0	9.0	0.62	10.8	0.81	12.5	1.00	13.4	1.09	15.2	1.27	17.0	1.45	18.8	1.62
		25.0	9.0	0.68	10.8	0.87	12.5	1.06	13.4	1.16	15.2	1.34	17.0	1.52	18.8	1.70
		30.0	9.0	1.10	10.8	1.29	12.5	1.47	13.4	1.55	15.2	1.72	17.0	1.87	18.8	2.03
		35.0	9.0	1.46	10.8	1.71	12.5	1.94	13.4	2.05	15.2	2.26	17.0	2.47	18.8	2.66
		40.0	9.0	1.79	10.8	2.09	12.5	2.37	13.4	2.50	15.2	2.76	17.0	3.00	18.8	3.24
		43.0	9.0	2.00	10.8	2.32	12.5	2.63	13.4	2.78	15.2	3.06	17.0	3.33	18.8	3.59
		46.0	9.0	2.15	10.8	2.49	12.5	2.81	13.4	2.97	15.2	3.29	17.0	3.59	18.8	3.89
52.0	6.4	1.85	7.0	1.87	7.7	1.90	8.1	1.92	8.9	1.97	9.8	2.02	10.8	2.08		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	7.5	0.43	9.0	0.59	10.5	0.75	11.2	0.83	12.7	0.98	14.2	1.14	15.7	1.28
		-5.0	7.5	0.43	9.0	0.59	10.5	0.75	11.2	0.83	12.7	0.99	14.2	1.14	15.7	1.29
		0.0	7.5	0.44	9.0	0.60	10.5	0.75	11.2	0.83	12.7	0.99	14.2	1.14	15.7	1.29
		5.0	7.5	0.44	9.0	0.60	10.5	0.76	11.2	0.84	12.7	0.99	14.2	1.14	15.7	1.29
		10.0	7.5	0.44	9.0	0.60	10.5	0.76	11.2	0.84	12.7	0.99	14.2	1.15	15.7	1.29
		15.0	7.5	0.45	9.0	0.61	10.5	0.77	11.2	0.84	12.7	1.00	14.2	1.15	15.7	1.30
		20.0	7.5	0.46	9.0	0.62	10.5	0.78	11.2	0.85	12.7	1.01	14.2	1.16	15.7	1.31
		25.0	7.5	0.47	9.0	0.63	10.5	0.79	11.2	0.87	12.7	1.02	14.2	1.17	15.7	1.32
		30.0	7.5	0.85	9.0	0.96	10.5	1.02	11.2	1.07	12.7	1.18	14.2	1.30	15.7	1.43
		35.0	7.5	1.14	9.0	1.31	10.5	1.47	11.2	1.54	12.7	1.67	14.2	1.80	15.7	1.91
		40.0	7.5	1.41	9.0	1.63	10.5	1.82	11.2	1.91	12.7	2.08	14.2	2.24	15.7	2.39
		43.0	7.5	1.58	9.0	1.82	10.5	2.04	11.2	2.14	12.7	2.34	14.2	2.51	15.7	2.68
		46.0	7.5	1.75	9.0	1.98	10.5	2.21	11.2	2.31	12.7	2.52	14.2	2.71	15.7	2.89
52.0	6.4	1.85	7.0	1.87	7.7	1.90	8.1	1.92	8.9	1.97	9.8	2.02	10.8	2.08		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	6.0	0.27	7.2	0.40	8.4	0.53	9.0	0.59	10.2	0.72	11.3	0.85	12.5	0.97
		-5.0	6.0	0.27	7.2	0.40	8.4	0.53	9.0	0.60	10.2	0.72	11.3	0.85	12.5	0.97
		0.0	6.0	0.27	7.2	0.40	8.4	0.53	9.0	0.60	10.2	0.72	11.3	0.85	12.5	0.97
		5.0	6.0	0.28	7.2	0.41	8.4	0.54	9.0	0.60	10.2	0.73	11.3	0.85	12.5	0.98
		10.0	6.0	0.28	7.2	0.41	8.4	0.54	9.0	0.60	10.2	0.73	11.3	0.85	12.5	0.98
		15.0	6.0	0.28	7.2	0.41	8.4	0.54	9.0	0.61	10.2	0.73	11.3	0.86	12.5	0.98
		20.0	6.0	0.29	7.2	0.42	8.4	0.55	9.0	0.61	10.2	0.74	11.3	0.86	12.5	0.99
		25.0	6.0	0.30	7.2	0.43	8.4	0.56	9.0	0.62	10.2	0.75	11.3	0.87	12.5	1.00
		30.0	6.0	0.42	7.2	0.50	8.4	0.60	9.0	0.66	10.2	0.77	11.3	0.90	12.5	1.04
		35.0	6.0	0.85	7.2	0.96	8.4	1.06	9.0	1.10	10.2	1.18	11.3	1.27	12.5	1.39
		40.0	6.0	1.07	7.2	1.21	8.4	1.34	9.0	1.39	10.2	1.50	11.3	1.58	12.5	1.66
		43.0	6.0	1.20	7.2	1.37	8.4	1.51	9.0	1.58	10.2	1.70	11.3	1.80	12.5	1.89
		46.0	6.0	1.39	7.2	1.54	8.4	1.69	9.0	1.75	10.2	1.88	11.3	1.98	12.5	2.08
52.0	6.0	1.64	7.0	1.87	7.7	1.90	8.1	1.92	8.9	1.97	9.8	2.02	10.8	2.08		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	4.5	0.11	5.4	0.21	6.3	0.31	6.7	0.36	7.6	0.45	8.5	0.55	9.4	0.65
		-5.0	4.5	0.11	5.4	0.21	6.3	0.31	6.7	0.36	7.6	0.46	8.5	0.55	9.4	0.65
		0.0	4.5	0.11	5.4	0.21	6.3	0.31	6.7	0.36	7.6	0.46	8.5	0.56	9.4	0.65
		5.0	4.5	0.11	5.4	0.21	6.3	0.31	6.7	0.36	7.6	0.46	8.5	0.56	9.4	0.66
		10.0	4.5	0.11	5.4	0.21	6.3	0.31	6.7	0.36	7.6	0.46	8.5	0.56	9.4	0.66
		15.0	4.5	0.11	5.4	0.21	6.3	0.32	6.7	0.37	7.6	0.47	8.5	0.57	9.4	0.66
		20.0	4.5	0.12	5.4	0.22	6.3	0.32	6.7	0.37	7.6	0.47	8.5	0.57	9.4	0.67
		25.0	4.5	0.13	5.4	0.23	6.3	0.33	6.7	0.38	7.6	0.49	8.5	0.58	9.4	0.68
		30.0	4.5	0.15	5.4	0.24	6.3	0.34	6.7	0.40	7.6	0.52	8.5	0.64	9.4	0.75
		35.0	4.5	0.60	5.4	0.66	6.3	0.73	6.7	0.78	7.6	0.88	8.5	0.97	9.4	1.07
		40.0	4.5	0.76	5.4	0.84	6.3	0.92	6.7	0.95	7.6	1.00	8.5	1.04	9.4	1.07
		43.0	4.5	0.86	5.4	0.96	6.3	1.05	6.7	1.08	7.6	1.14	8.5	1.19	9.4	1.23
		46.0	4.5	1.07	5.4	1.17	6.3	1.25	6.7	1.28	7.6	1.35	8.5	1.40	9.4	1.44
52.0	4.5	1.25	5.4	1.38	6.3	1.49	6.7	1.54	7.6	1.58	8.5	1.61	9.4	1.62		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-2. U-8ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	100%	-24.9	-25.0	17.5	5.46	17.1	5.37	16.2	5.17	15.7	5.07	14.3	4.74	13.3	4.49	10.7	3.80
		-19.8	-20.0	18.4	5.57	17.9	5.48	17.0	5.28	16.5	5.17	15.1	4.83	14.0	4.57	11.3	3.86
		-14.7	-15.0	19.6	5.76	19.2	5.64	18.2	5.43	17.7	5.32	16.1	4.96	15.0	4.70	12.1	3.95
		-9.6	-10.0	21.3	5.98	20.8	5.89	19.7	5.68	19.2	5.56	17.5	5.16	16.3	4.86	13.2	4.07
		-4.4	-5.0	23.5	6.15	22.9	6.06	21.7	5.85	21.1	5.73	19.3	5.35	18.0	5.06	14.5	4.23
		-1.8	-2.5	24.8	6.23	24.2	6.13	22.9	5.91	22.3	5.79	20.3	5.39	19.0	5.10	15.3	4.26
		0.8	0.0	26.2	6.30	25.6	6.19	24.3	5.96	23.6	5.84	21.5	5.43	20.1	5.13	15.7	4.12
		2.8	2.0	27.7	6.36	27.1	6.25	25.7	6.02	25.0	5.89	22.2	5.26	20.4	4.84	15.7	3.81
		6.0	5.0	28.7	5.84	27.8	5.66	25.9	5.30	25.0	5.12	22.2	4.59	20.4	4.24	15.7	3.37
		7.0	6.0	28.7	5.54	27.8	5.37	25.9	5.04	25.0	4.87	22.2	4.37	20.4	4.05	15.7	3.23
		8.6	7.5	28.7	5.11	27.8	4.96	25.9	4.66	25.0	4.51	22.2	4.06	20.4	3.77	15.7	3.03
		11.2	10.0	28.7	4.42	27.8	4.30	25.9	4.06	25.0	3.94	22.2	3.58	20.4	3.33	15.7	2.71
		16.4	15.0	28.7	3.24	27.8	3.17	25.9	3.02	25.0	2.95	22.2	2.71	20.4	2.55	15.7	2.11
24.0	18.0	28.7	3.03	27.8	2.95	25.9	2.78	25.0	2.69	22.2	2.43	20.4	2.26	15.7	1.84		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	90%	-24.9	-25.0	17.5	5.46	17.1	5.37	16.2	5.17	15.7	5.07	14.3	4.74	13.3	4.49	10.7	3.80
		-19.8	-20.0	18.4	5.57	17.9	5.48	17.0	5.28	16.5	5.17	15.1	4.83	14.0	4.57	11.3	3.86
		-14.7	-15.0	19.6	5.76	19.2	5.64	18.2	5.43	17.7	5.32	16.1	4.96	15.0	4.70	12.1	3.95
		-9.6	-10.0	21.3	5.98	20.8	5.89	19.7	5.68	19.2	5.56	17.5	5.16	16.3	4.86	13.2	4.07
		-4.4	-5.0	23.5	6.15	22.9	6.06	21.7	5.85	21.1	5.73	19.3	5.35	18.0	5.06	14.2	3.96
		-1.8	-2.5	24.8	6.23	24.2	6.13	22.9	5.91	22.3	5.79	20.0	4.97	18.3	4.61	14.2	3.71
		0.8	0.0	25.8	5.65	25.0	5.50	23.3	5.20	22.5	5.05	20.0	4.59	18.3	4.27	14.2	3.46
		2.8	2.0	25.8	5.14	25.0	5.01	23.3	4.74	22.5	4.61	20.0	4.20	18.3	3.93	14.2	3.23
		6.0	5.0	25.8	4.44	25.0	4.35	23.3	4.16	22.5	4.06	20.0	3.75	18.3	3.51	14.2	2.87
		7.0	6.0	25.8	4.33	25.0	4.23	23.3	4.02	22.5	3.91	20.0	3.58	18.3	3.35	14.2	2.75
		8.6	7.5	25.8	3.97	25.0	3.88	23.3	3.70	22.5	3.60	20.0	3.31	18.3	3.11	14.2	2.58
		11.2	10.0	25.8	3.40	25.0	3.34	23.3	3.20	22.5	3.13	20.0	2.90	18.3	2.74	14.2	2.31
		16.4	15.0	25.8	2.77	25.0	2.69	23.3	2.54	22.5	2.46	20.0	2.23	18.3	2.08	14.2	1.78
24.0	18.0	25.8	2.77	25.0	2.69	23.3	2.54	22.5	2.46	20.0	2.23	18.3	2.08	14.2	1.69		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	80%	-24.9	-25.0	17.5	5.46	17.1	5.37	16.2	5.17	15.7	5.07	14.3	4.74	13.3	4.49	10.7	3.80
		-19.8	-20.0	18.4	5.57	17.9	5.48	17.0	5.28	16.5	5.17	15.1	4.83	14.0	4.57	11.3	3.86
		-14.7	-15.0	19.6	5.76	19.2	5.64	18.2	5.43	17.7	5.32	16.1	4.96	15.0	4.70	12.1	3.95
		-9.6	-10.0	21.3	5.98	20.8	5.89	19.7	5.68	19.2	5.56	17.5	5.16	16.3	4.86	12.6	3.70
		-4.4	-5.0	23.0	5.11	22.2	5.00	20.7	4.77	20.0	4.65	17.8	4.28	16.3	4.02	12.6	3.32
		-1.8	-2.5	23.0	4.70	22.2	4.61	20.7	4.41	20.0	4.31	17.8	3.98	16.3	3.75	12.6	3.13
		0.8	0.0	23.0	4.27	22.2	4.20	20.7	4.05	20.0	3.96	17.8	3.69	16.3	3.50	12.6	2.93
		2.8	2.0	23.0	3.93	22.2	3.87	20.7	3.74	20.0	3.67	17.8	3.43	16.3	3.25	12.6	2.74
		6.0	5.0	23.0	3.46	22.2	3.41	20.7	3.30	20.0	3.24	17.8	3.05	16.3	2.89	12.6	2.44
		7.0	6.0	23.0	3.35	22.2	3.29	20.7	3.17	20.0	3.11	17.8	2.90	16.3	2.75	12.6	2.33
		8.6	7.5	23.0	3.05	22.2	3.00	20.7	2.90	20.0	2.85	17.8	2.68	16.3	2.55	12.6	2.19
		11.2	10.0	23.0	2.59	22.2	2.56	20.7	2.49	20.0	2.46	17.8	2.34	16.3	2.24	12.6	1.95
		16.4	15.0	23.0	2.50	22.2	2.43	20.7	2.30	20.0	2.23	17.8	2.02	16.3	1.89	12.6	1.55
24.0	18.0	23.0	2.50	22.2	2.43	20.7	2.30	20.0	2.23	17.8	2.02	16.3	1.89	12.6	1.55		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	70%	-24.9	-25.0	17.5	5.46	17.1	5.37	16.2	5.17	15.7	5.07	14.3	4.74	13.3	4.49	10.7	3.80
		-19.8	-20.0	18.4	5.57	17.9	5.48	17.0	5.28	16.5	5.17	15.1	4.83	14.0	4.57	11.0	3.86
		-14.7	-15.0	19.6	5.76	19.2	5.64	18.1	5.43	17.5	4.61	15.6	4.27	14.3	4.03	11.0	3.35
		-9.6	-10.0	20.1	4.48	19.4	4.41	18.1	4.25	17.5	4.16	15.6	3.88	14.3	3.67	11.0	3.10
		-4.4	-5.0	20.1	3.91	19.4	3.86	18.1	3.75	17.5	3.69	15.6	3.47	14.3	3.30	11.0	2.81
		-1.8	-2.5	20.1	3.64	19.4	3.60	18.1	3.50	17.5	3.44	15.6	3.25	14.3	3.10	11.0	2.65
		0.8	0.0	20.1	3.36	19.4	3.32	18.1	3.24	17.5	3.19	15.6	3.02	14.3	2.88	11.0	2.48
		2.8	2.0	20.1	3.07	19.4	3.04	18.1	2.98	17.5	2.94	15.6	2.79	14.3	2.67	11.0	2.31
		6.0	5.0	20.1	2.67	19.4	2.65	18.1	2.60	17.5	2.57	15.6	2.46	14.3	2.36	11.0	2.05
		7.0	6.0	20.1	2.55	19.4	2.53	18.1	2.48	17.5	2.45	15.6	2.34	14.3	2.25	11.0	1.97
		8.6	7.5	20.1	2.32	19.4	2.30	18.1	2.26	17.5	2.24	15.6	2.15	14.3	2.08	11.0	1.84
		11.2	10.0	20.1	2.24	19.4	2.18	18.1	2.06	17.5	2.00	15.6	1.87	14.3	1.82	11.0	1.64
		16.4	15.0	20.1	2.24	19.4	2.18	18.1	2.06	17.5	2.00	15.6	1.82	14.3	1.70	11.0	1.40
24.0	18.0	20.1	2.24	19.4	2.18	18.1	2.06	17.5	2.00	15.6	1.82	14.3	1.70	11.0	1.40		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

U-8ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	17.2	4.44	16.7	4.37	15.6	4.23	15.0	4.15	13.3	3.89	12.2	3.68	9.4	3.05
		-19.8	-20.0	17.2	4.17	16.7	4.12	15.6	3.99	15.0	3.92	13.3	3.69	12.2	3.51	9.4	2.96
		-14.7	-15.0	17.2	3.86	16.7	3.81	15.6	3.71	15.0	3.65	13.3	3.45	12.2	3.30	9.4	2.82
		-9.6	-10.0	17.2	3.51	16.7	3.47	15.6	3.39	15.0	3.34	13.3	3.17	12.2	3.03	9.4	2.61
		-4.4	-5.0	17.2	3.09	16.7	3.07	15.6	3.00	15.0	2.97	13.3	2.83	12.2	2.72	9.4	2.36
		-1.8	-2.5	17.2	2.86	16.7	2.84	15.6	2.79	15.0	2.76	13.3	2.64	12.2	2.54	9.4	2.22
		0.8	0.0	17.2	2.62	16.7	2.61	15.6	2.57	15.0	2.55	13.3	2.45	12.2	2.36	9.4	2.08
		2.8	2.0	17.2	2.39	16.7	2.38	15.6	2.36	15.0	2.34	13.3	2.26	12.2	2.19	9.4	1.94
		6.0	5.0	17.2	2.05	16.7	2.05	15.6	2.04	15.0	2.03	13.3	1.97	12.2	1.91	9.4	1.71
		7.0	6.0	17.2	1.97	16.7	1.93	15.6	1.92	15.0	1.91	13.3	1.87	12.2	1.82	9.4	1.65
		8.6	7.5	17.2	1.97	16.7	1.92	15.6	1.82	15.0	1.77	13.3	1.72	12.2	1.69	9.4	1.54
		11.2	10.0	17.2	1.97	16.7	1.92	15.6	1.82	15.0	1.77	13.3	1.62	12.2	1.51	9.4	1.38
		16.4	15.0	17.2	1.97	16.7	1.92	15.6	1.82	15.0	1.77	13.3	1.62	12.2	1.51	9.4	1.26
24.0	18.0	17.2	1.97	16.7	1.92	15.6	1.82	15.0	1.77	13.3	1.62	12.2	1.51	9.4	1.26		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	14.4	3.47	13.9	3.44	13.0	3.36	12.5	3.31	11.1	3.14	10.2	3.01	7.9	2.55
		-19.8	-20.0	14.4	3.29	13.9	3.26	13.0	3.19	12.5	3.15	11.1	2.99	10.2	2.87	7.9	2.48
		-14.7	-15.0	14.4	3.05	13.9	3.03	13.0	2.97	12.5	2.93	11.1	2.80	10.2	2.69	7.9	2.35
		-9.6	-10.0	14.4	2.76	13.9	2.75	13.0	2.70	12.5	2.67	11.1	2.57	10.2	2.47	7.9	2.17
		-4.4	-5.0	14.4	2.42	13.9	2.41	13.0	2.39	12.5	2.37	11.1	2.29	10.2	2.21	7.9	1.96
		-1.8	-2.5	14.4	2.24	13.9	2.23	13.0	2.21	12.5	2.20	11.1	2.13	10.2	2.07	7.9	1.85
		0.8	0.0	14.4	2.04	13.9	2.04	13.0	2.03	12.5	2.03	11.1	1.98	10.2	1.92	7.9	1.73
		2.8	2.0	14.4	1.85	13.9	1.86	13.0	1.86	12.5	1.85	11.1	1.82	10.2	1.78	7.9	1.61
		6.0	5.0	14.4	1.71	13.9	1.67	13.0	1.58	12.5	1.58	11.1	1.56	10.2	1.54	7.9	1.41
		7.0	6.0	14.4	1.71	13.9	1.67	13.0	1.58	12.5	1.54	11.1	1.48	10.2	1.47	7.9	1.37
		8.6	7.5	14.4	1.71	13.9	1.67	13.0	1.58	12.5	1.54	11.1	1.41	10.2	1.36	7.9	1.28
		11.2	10.0	14.4	1.71	13.9	1.67	13.0	1.58	12.5	1.54	11.1	1.41	10.2	1.33	7.9	1.15
		16.4	15.0	14.4	1.71	13.9	1.67	13.0	1.58	12.5	1.54	11.1	1.41	10.2	1.33	7.9	1.11
24.0	18.0	14.4	1.71	13.9	1.67	13.0	1.58	12.5	1.54	11.1	1.41	10.2	1.33	7.9	1.11		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	11.5	2.70	11.1	2.69	10.4	2.64	10.0	2.61	8.9	2.50	8.1	2.41	6.3	2.09
		-19.8	-20.0	11.5	2.56	11.1	2.55	10.4	2.51	10.0	2.48	8.9	2.38	8.1	2.30	6.3	2.02
		-14.7	-15.0	11.5	2.37	11.1	2.36	10.4	2.33	10.0	2.31	8.9	2.23	8.1	2.15	6.3	1.91
		-9.6	-10.0	11.5	2.14	11.1	2.14	10.4	2.12	10.0	2.10	8.9	2.04	8.1	1.98	6.3	1.77
		-4.4	-5.0	11.5	1.88	11.1	1.88	10.4	1.87	10.0	1.86	8.9	1.82	8.1	1.77	6.3	1.60
		-1.8	-2.5	11.5	1.73	11.1	1.73	10.4	1.73	10.0	1.73	8.9	1.70	8.1	1.66	6.3	1.51
		0.8	0.0	11.5	1.57	11.1	1.58	10.4	1.58	10.0	1.58	8.9	1.56	8.1	1.53	6.3	1.41
		2.8	2.0	11.5	1.44	11.1	1.41	10.4	1.43	10.0	1.43	8.9	1.42	8.1	1.40	6.3	1.31
		6.0	5.0	11.5	1.44	11.1	1.41	10.4	1.34	10.0	1.31	8.9	1.23	8.1	1.23	6.3	1.16
		7.0	6.0	11.5	1.44	11.1	1.41	10.4	1.34	10.0	1.31	8.9	1.21	8.1	1.17	6.3	1.12
		8.6	7.5	11.5	1.44	11.1	1.41	10.4	1.34	10.0	1.31	8.9	1.21	8.1	1.14	6.3	1.06
		11.2	10.0	11.5	1.44	11.1	1.41	10.4	1.34	10.0	1.31	8.9	1.21	8.1	1.14	6.3	0.97
		16.4	15.0	11.5	1.44	11.1	1.41	10.4	1.34	10.0	1.31	8.9	1.21	8.1	1.14	6.3	0.97
24.0	18.0	11.5	1.44	11.1	1.41	10.4	1.34	10.0	1.31	8.9	1.21	8.1	1.14	6.3	0.97		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	8.6	2.03	8.3	2.02	7.8	2.00	7.5	1.98	6.7	1.91	6.1	1.85	4.7	1.64
		-19.8	-20.0	8.6	1.93	8.3	1.92	7.8	1.90	7.5	1.89	6.7	1.83	6.1	1.77	4.7	1.58
		-14.7	-15.0	8.6	1.79	8.3	1.78	7.8	1.77	7.5	1.76	6.7	1.71	6.1	1.66	4.7	1.50
		-9.6	-10.0	8.6	1.62	8.3	1.62	7.8	1.61	7.5	1.60	6.7	1.57	6.1	1.53	4.7	1.39
		-4.4	-5.0	8.6	1.40	8.3	1.41	7.8	1.41	7.5	1.41	6.7	1.39	6.1	1.37	4.7	1.26
		-1.8	-2.5	8.6	1.28	8.3	1.29	7.8	1.30	7.5	1.30	6.7	1.29	6.1	1.28	4.7	1.19
		0.8	0.0	8.6	1.18	8.3	1.17	7.8	1.19	7.5	1.19	6.7	1.19	6.1	1.18	4.7	1.11
		2.8	2.0	8.6	1.18	8.3	1.16	7.8	1.10	7.5	1.08	6.7	1.09	6.1	1.09	4.7	1.04
		6.0	5.0	8.6	1.18	8.3	1.16	7.8	1.10	7.5	1.08	6.7	1.00	6.1	0.96	4.7	0.94
		7.0	6.0	8.6	1.18	8.3	1.16	7.8	1.10	7.5	1.08	6.7	1.00	6.1	0.95	4.7	0.91
		8.6	7.5	8.6	1.18	8.3	1.16	7.8	1.10	7.5	1.08	6.7	1.00	6.1	0.95	4.7	0.86
		11.2	10.0	8.6	1.18	8.3	1.16	7.8	1.10	7.5	1.08	6.7	1.00	6.1	0.95	4.7	0.82
		16.4	15.0	8.6	1.18	8.3	1.16	7.8	1.10	7.5	1.08	6.7	1.00	6.1	0.95	4.7	0.82
24.0	18.0	8.6	1.18	8.3	1.16	7.8	1.10	7.5	1.08	6.7	1.00	6.1	0.95	4.7	0.82		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-3. U-10ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	18.7	1.77	22.4	2.13	26.1	2.48	28.0	2.66	31.7	3.01	35.5	3.37	39.2	3.72
		-5.0	18.7	1.77	22.4	2.13	26.1	2.48	28.0	2.66	31.7	3.02	35.5	3.37	39.2	3.72
		0.0	18.7	1.78	22.4	2.13	26.1	2.49	28.0	2.67	31.7	3.02	35.5	3.38	39.2	3.73
		5.0	18.7	1.78	22.4	2.14	26.1	2.50	28.0	2.67	31.7	3.03	35.5	3.39	39.2	3.75
		10.0	18.7	1.79	22.4	2.15	26.1	2.51	28.0	2.70	31.7	3.07	35.5	3.45	39.2	3.82
		15.0	18.7	1.82	22.4	2.21	26.1	2.60	28.0	2.81	31.7	3.22	35.5	3.63	39.2	4.02
		20.0	18.7	2.03	22.4	2.50	26.1	3.02	28.0	3.30	31.7	3.91	35.5	4.58	39.2	5.31
		25.0	18.7	2.61	22.4	3.22	26.1	3.90	28.0	4.26	31.7	5.02	35.5	5.85	39.2	6.74
		30.0	18.7	3.27	22.4	4.03	26.1	4.86	28.0	5.30	31.7	6.22	35.5	7.21	39.2	8.27
		35.0	18.7	3.98	22.4	4.90	26.1	5.89	28.0	6.42	31.7	7.51	35.5	8.68	37.5	8.97
		40.0	18.7	4.75	22.4	5.84	26.1	7.01	28.0	7.62	31.7	8.91	33.2	8.97	34.6	8.97
		43.0	18.7	5.23	22.4	6.43	26.1	7.72	28.0	8.39	30.3	8.97	31.7	8.97	32.4	8.53
		46.0	18.5	5.69	22.2	7.00	23.6	7.12	23.8	6.93	24.4	6.61	25.3	6.36	26.2	6.16
52.0	8.1	2.44	8.8	2.46	9.6	2.51	10.1	2.54	11.1	2.60	12.2	2.68	13.5	2.76		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	16.8	1.43	20.2	1.80	23.5	2.15	25.2	2.32	28.6	2.67	31.9	3.00	35.3	3.33
		-5.0	16.8	1.43	20.2	1.80	23.5	2.15	25.2	2.33	28.6	2.67	31.9	3.01	35.3	3.33
		0.0	16.8	1.44	20.2	1.80	23.5	2.16	25.2	2.33	28.6	2.68	31.9	3.01	35.3	3.34
		5.0	16.8	1.44	20.2	1.81	23.5	2.17	25.2	2.34	28.6	2.68	31.9	3.02	35.3	3.35
		10.0	16.8	1.45	20.2	1.82	23.5	2.17	25.2	2.35	28.6	2.70	31.9	3.04	35.3	3.38
		15.0	16.8	1.46	20.2	1.84	23.5	2.21	25.2	2.40	28.6	2.77	31.9	3.13	35.3	3.49
		20.0	16.8	1.58	20.2	2.01	23.5	2.43	25.2	2.63	28.6	3.03	31.9	3.49	35.3	3.97
		25.0	16.8	2.11	20.2	2.61	23.5	3.13	25.2	3.40	28.6	3.94	31.9	4.50	35.3	5.08
		30.0	16.8	2.73	20.2	3.33	23.5	3.95	25.2	4.26	28.6	4.90	31.9	5.55	35.3	6.22
		35.0	16.8	3.49	20.2	4.22	23.5	4.97	25.2	5.34	28.6	6.10	31.9	6.88	35.3	7.69
		40.0	16.8	4.17	20.2	5.01	23.5	5.86	25.2	6.29	28.6	7.17	31.9	8.08	34.6	8.97
		43.0	16.8	4.58	20.2	5.49	23.5	6.41	25.2	6.88	28.6	7.85	31.7	8.97	32.4	8.53
		46.0	16.8	4.91	20.2	5.96	23.5	7.05	23.8	6.93	24.4	6.61	25.3	6.36	26.2	6.16
52.0	8.1	2.44	8.8	2.46	9.6	2.51	10.1	2.54	11.1	2.60	12.2	2.68	13.5	2.76		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	14.9	1.23	17.9	1.56	20.9	1.88	22.4	2.04	25.4	2.35	28.4	2.65	31.4	2.95
		-5.0	14.9	1.23	17.9	1.56	20.9	1.88	22.4	2.04	25.4	2.35	28.4	2.66	31.4	2.96
		0.0	14.9	1.23	17.9	1.56	20.9	1.89	22.4	2.04	25.4	2.36	28.4	2.66	31.4	2.96
		5.0	14.9	1.24	17.9	1.57	20.9	1.89	22.4	2.05	25.4	2.36	28.4	2.67	31.4	2.97
		10.0	14.9	1.24	17.9	1.58	20.9	1.90	22.4	2.06	25.4	2.37	28.4	2.67	31.4	2.98
		15.0	14.9	1.26	17.9	1.59	20.9	1.91	22.4	2.07	25.4	2.39	28.4	2.71	31.4	3.02
		20.0	14.9	1.30	17.9	1.66	20.9	2.01	22.4	2.18	25.4	2.52	28.4	2.85	31.4	3.17
		25.0	14.9	1.71	17.9	2.09	20.9	2.48	22.4	2.67	25.4	3.07	28.4	3.47	31.4	3.87
		30.0	14.9	2.25	17.9	2.72	20.9	3.19	22.4	3.43	25.4	3.91	28.4	4.39	31.4	4.86
		35.0	14.9	2.92	17.9	3.50	20.9	4.08	22.4	4.37	25.4	4.95	28.4	5.52	31.4	6.10
		40.0	14.9	3.52	17.9	4.20	20.9	4.87	22.4	5.20	25.4	5.86	28.4	6.53	31.4	7.20
		43.0	14.9	3.89	17.9	4.63	20.9	5.35	22.4	5.71	25.4	6.43	28.4	7.17	31.4	7.91
		46.0	14.9	4.15	17.9	4.97	20.9	5.80	22.4	6.23	24.4	6.61	25.3	6.36	26.2	6.16
52.0	8.1	2.44	8.8	2.46	9.6	2.51	10.1	2.54	11.1	2.60	12.2	2.68	13.5	2.76		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	13.1	1.02	15.7	1.31	18.3	1.60	19.6	1.74	22.2	2.02	24.8	2.30	27.4	2.56
		-5.0	13.1	1.02	15.7	1.31	18.3	1.60	19.6	1.74	22.2	2.02	24.8	2.30	27.4	2.57
		0.0	13.1	1.02	15.7	1.32	18.3	1.61	19.6	1.75	22.2	2.03	24.8	2.30	27.4	2.57
		5.0	13.1	1.03	15.7	1.32	18.3	1.61	19.6	1.75	22.2	2.03	24.8	2.31	27.4	2.58
		10.0	13.1	1.03	15.7	1.33	18.3	1.62	19.6	1.76	22.2	2.04	24.8	2.31	27.4	2.58
		15.0	13.1	1.04	15.7	1.34	18.3	1.63	19.6	1.77	22.2	2.05	24.8	2.32	27.4	2.59
		20.0	13.1	1.06	15.7	1.36	18.3	1.66	19.6	1.80	22.2	2.09	24.8	2.38	27.4	2.65
		25.0	13.1	1.28	15.7	1.59	18.3	1.90	19.6	2.05	22.2	2.33	24.8	2.61	27.4	2.89
		30.0	13.1	1.81	15.7	2.17	18.3	2.51	19.6	2.69	22.2	3.02	24.8	3.36	27.4	3.69
		35.0	13.1	2.39	15.7	2.84	18.3	3.28	19.6	3.49	22.2	3.92	24.8	4.33	27.4	4.73
		40.0	13.1	2.92	15.7	3.45	18.3	3.96	19.6	4.21	22.2	4.70	24.8	5.19	27.4	5.66
		43.0	13.1	3.24	15.7	3.82	18.3	4.38	19.6	4.65	22.2	5.19	24.8	5.72	27.4	6.24
		46.0	13.1	3.47	15.7	4.08	18.3	4.70	19.6	5.02	22.2	5.64	24.8	6.04	26.2	6.16
52.0	8.1	2.44	8.8	2.46	9.6	2.51	10.1	2.54	11.1	2.60	12.2	2.68	13.5	2.76		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

U-10ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	11.2	0.81	13.4	1.06	15.7	1.32	16.8	1.44	19.0	1.68	21.3	1.93	23.5	2.16
		-5.0	11.2	0.81	13.4	1.07	15.7	1.32	16.8	1.44	19.0	1.69	21.3	1.93	23.5	2.16
		0.0	11.2	0.81	13.4	1.07	15.7	1.32	16.8	1.44	19.0	1.69	21.3	1.93	23.5	2.17
		5.0	11.2	0.81	13.4	1.07	15.7	1.32	16.8	1.45	19.0	1.69	21.3	1.94	23.5	2.17
		10.0	11.2	0.82	13.4	1.08	15.7	1.33	16.8	1.45	19.0	1.70	21.3	1.94	23.5	2.18
		15.0	11.2	0.83	13.4	1.08	15.7	1.34	16.8	1.46	19.0	1.71	21.3	1.95	23.5	2.19
		20.0	11.2	0.84	13.4	1.10	15.7	1.35	16.8	1.47	19.0	1.72	21.3	1.96	23.5	2.20
		25.0	11.2	0.91	13.4	1.17	15.7	1.43	16.8	1.55	19.0	1.80	21.3	2.04	23.5	2.28
		30.0	11.2	1.42	13.4	1.67	15.7	1.91	16.8	2.03	19.0	2.26	21.3	2.47	23.5	2.68
		35.0	11.2	1.91	13.4	2.24	15.7	2.55	16.8	2.71	19.0	3.00	21.3	3.28	23.5	3.54
		40.0	11.2	2.36	13.4	2.76	15.7	3.14	16.8	3.32	19.0	3.67	21.3	4.01	23.5	4.33
		43.0	11.2	2.63	13.4	3.08	15.7	3.50	16.8	3.70	19.0	4.08	21.3	4.45	23.5	4.81
46.0	11.2	2.85	13.4	3.31	15.7	3.75	16.8	3.97	19.0	4.39	21.3	4.81	23.5	5.22		
52.0		8.1	2.44	8.8	2.46	9.6	2.51	10.1	2.54	11.1	2.60	12.2	2.68	13.5	2.76	

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	9.3	0.59	11.2	0.81	13.1	1.02	14.0	1.13	15.9	1.34	17.7	1.54	19.6	1.75
		-5.0	9.3	0.59	11.2	0.81	13.1	1.02	14.0	1.13	15.9	1.34	17.7	1.55	19.6	1.75
		0.0	9.3	0.59	11.2	0.81	13.1	1.03	14.0	1.13	15.9	1.34	17.7	1.55	19.6	1.75
		5.0	9.3	0.60	11.2	0.82	13.1	1.03	14.0	1.14	15.9	1.35	17.7	1.55	19.6	1.75
		10.0	9.3	0.60	11.2	0.82	13.1	1.03	14.0	1.14	15.9	1.35	17.7	1.56	19.6	1.76
		15.0	9.3	0.61	11.2	0.82	13.1	1.04	14.0	1.15	15.9	1.36	17.7	1.56	19.6	1.76
		20.0	9.3	0.62	11.2	0.83	13.1	1.05	14.0	1.16	15.9	1.36	17.7	1.57	19.6	1.77
		25.0	9.3	0.63	11.2	0.85	13.1	1.07	14.0	1.17	15.9	1.38	17.7	1.59	19.6	1.79
		30.0	9.3	1.07	11.2	1.23	13.1	1.33	14.0	1.40	15.9	1.56	17.7	1.73	19.6	1.91
		35.0	9.3	1.47	11.2	1.70	13.1	1.91	14.0	2.01	15.9	2.19	17.7	2.36	19.6	2.52
		40.0	9.3	1.84	11.2	2.13	13.1	2.40	14.0	2.52	15.9	2.75	17.7	2.97	19.6	3.17
		43.0	9.3	2.07	11.2	2.39	13.1	2.69	14.0	2.83	15.9	3.10	17.7	3.34	19.6	3.56
46.0	9.3	2.30	11.2	2.62	13.1	2.92	14.0	3.07	15.9	3.35	17.7	3.61	19.6	3.85		
52.0		8.1	2.44	8.8	2.46	9.6	2.51	10.1	2.54	11.1	2.60	12.2	2.68	13.5	2.76	

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	7.5	0.37	9.0	0.55	10.5	0.72	11.2	0.81	12.7	0.98	14.2	1.15	15.7	1.32
		-5.0	7.5	0.37	9.0	0.55	10.5	0.73	11.2	0.81	12.7	0.98	14.2	1.15	15.7	1.32
		0.0	7.5	0.37	9.0	0.55	10.5	0.73	11.2	0.81	12.7	0.98	14.2	1.15	15.7	1.32
		5.0	7.5	0.38	9.0	0.55	10.5	0.73	11.2	0.82	12.7	0.99	14.2	1.16	15.7	1.32
		10.0	7.5	0.38	9.0	0.56	10.5	0.73	11.2	0.82	12.7	0.99	14.2	1.16	15.7	1.33
		15.0	7.5	0.38	9.0	0.56	10.5	0.74	11.2	0.82	12.7	0.99	14.2	1.16	15.7	1.33
		20.0	7.5	0.39	9.0	0.57	10.5	0.74	11.2	0.83	12.7	1.00	14.2	1.17	15.7	1.34
		25.0	7.5	0.40	9.0	0.58	10.5	0.76	11.2	0.84	12.7	1.01	14.2	1.18	15.7	1.35
		30.0	7.5	0.54	9.0	0.66	10.5	0.80	11.2	0.88	12.7	1.04	14.2	1.22	15.7	1.40
		35.0	7.5	1.07	9.0	1.22	10.5	1.35	11.2	1.41	12.7	1.51	14.2	1.64	15.7	1.81
		40.0	7.5	1.37	9.0	1.56	10.5	1.73	11.2	1.81	12.7	1.95	14.2	2.07	15.7	2.17
		43.0	7.5	1.55	9.0	1.77	10.5	1.97	11.2	2.06	12.7	2.22	14.2	2.37	15.7	2.49
46.0	7.5	1.81	9.0	2.03	10.5	2.22	11.2	2.31	12.7	2.47	14.2	2.62	15.7	2.75		
52.0		7.5	2.16	8.8	2.46	9.6	2.51	10.1	2.54	11.1	2.60	12.2	2.68	13.5	2.76	

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	5.6	0.15	6.7	0.28	7.8	0.42	8.4	0.49	9.5	0.62	10.6	0.75	11.8	0.88
		-5.0	5.6	0.15	6.7	0.28	7.8	0.42	8.4	0.49	9.5	0.62	10.6	0.75	11.8	0.88
		0.0	5.6	0.15	6.7	0.29	7.8	0.42	8.4	0.49	9.5	0.62	10.6	0.76	11.8	0.89
		5.0	5.6	0.15	6.7	0.29	7.8	0.42	8.4	0.49	9.5	0.63	10.6	0.76	11.8	0.89
		10.0	5.6	0.15	6.7	0.29	7.8	0.43	8.4	0.49	9.5	0.63	10.6	0.76	11.8	0.89
		15.0	5.6	0.16	6.7	0.29	7.8	0.43	8.4	0.50	9.5	0.64	10.6	0.77	11.8	0.90
		20.0	5.6	0.16	6.7	0.30	7.8	0.43	8.4	0.50	9.5	0.64	10.6	0.78	11.8	0.91
		25.0	5.6	0.17	6.7	0.31	7.8	0.44	8.4	0.52	9.5	0.65	10.6	0.79	11.8	0.92
		30.0	5.6	0.20	6.7	0.33	7.8	0.46	8.4	0.54	9.5	0.69	10.6	0.85	11.8	1.00
		35.0	5.6	0.72	6.7	0.81	7.8	0.91	8.4	0.98	9.5	1.11	10.6	1.24	11.8	1.36
		40.0	5.6	0.94	6.7	1.06	7.8	1.16	8.4	1.20	9.5	1.27	10.6	1.32	11.8	1.36
		43.0	5.6	1.08	6.7	1.22	7.8	1.34	8.4	1.39	9.5	1.47	10.6	1.54	11.8	1.59
46.0	5.6	1.38	6.7	1.51	7.8	1.62	8.4	1.67	9.5	1.76	10.6	1.83	11.8	1.88		
52.0		5.6	1.63	6.7	1.80	7.8	1.95	8.4	2.01	9.5	2.08	10.6	2.11	11.8	2.13	

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-4. U-10ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	24.6	8.49	24.0	8.34	22.7	8.01	22.1	7.85	20.1	7.30	18.8	6.89	15.2	5.76
		-19.8	-20.0	25.7	8.66	25.1	8.50	23.8	8.17	23.2	7.99	21.1	7.43	19.7	7.01	16.0	5.85
		-14.7	-15.0	27.4	8.92	26.8	8.75	25.4	8.40	24.7	8.22	22.6	7.62	21.1	7.19	17.1	5.99
		-9.6	-10.0	29.7	9.27	29.0	9.12	27.6	8.74	26.8	8.54	24.5	7.91	22.9	7.45	18.6	6.18
		-4.4	-5.0	31.5	9.27	31.1	9.27	30.4	9.18	29.6	8.95	27.0	8.28	25.3	7.79	19.8	6.15
		-1.8	-2.5	32.8	9.27	32.4	9.27	31.6	9.27	31.2	9.26	28.0	8.32	25.7	7.61	19.8	5.89
		0.8	0.0	34.4	9.27	34.0	9.27	32.7	9.08	31.5	8.73	28.0	7.72	25.7	7.07	19.8	5.48
		2.8	2.0	36.2	9.26	35.0	8.94	32.7	8.32	31.5	8.01	28.0	7.10	25.7	6.51	19.8	5.07
		6.0	5.0	36.2	8.01	35.0	7.74	32.7	7.22	31.5	6.96	28.0	6.20	25.7	5.70	19.8	4.47
		7.0	6.0	36.2	7.60	35.0	7.35	32.7	6.87	31.5	6.62	28.0	5.90	25.7	5.43	19.8	4.29
		8.6	7.5	36.2	7.00	35.0	6.78	32.7	6.34	31.5	6.12	28.0	5.48	25.7	5.05	19.8	4.01
		11.2	10.0	36.2	6.06	35.0	5.88	32.7	5.52	31.5	5.34	28.0	4.81	25.7	4.46	19.8	3.58
		16.4	15.0	36.2	4.41	35.0	4.31	32.7	4.09	31.5	3.98	28.0	3.64	25.7	3.40	19.8	2.79
24.0	18.0	36.2	3.93	35.0	3.82	32.7	3.60	31.5	3.48	28.0	3.15	25.7	2.92	19.8	2.36		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	24.6	8.49	24.0	8.34	22.7	8.01	22.1	7.85	20.1	7.30	18.8	6.89	15.2	5.76
		-19.8	-20.0	25.7	8.66	25.1	8.50	23.8	8.17	23.2	7.99	21.1	7.43	19.7	7.01	16.0	5.85
		-14.7	-15.0	27.4	8.92	26.8	8.75	25.4	8.40	24.7	8.22	22.6	7.62	21.1	7.19	17.1	5.99
		-9.6	-10.0	29.7	9.27	29.0	9.12	27.6	8.74	26.8	8.54	24.5	7.91	22.9	7.45	17.9	5.70
		-4.4	-5.0	31.5	9.27	31.1	9.27	29.4	8.25	28.4	7.98	25.2	7.17	23.1	6.62	17.9	5.25
		-1.8	-2.5	32.6	8.40	31.5	8.15	29.4	7.66	28.4	7.41	25.2	6.67	23.1	6.17	17.9	4.92
		0.8	0.0	32.6	7.70	31.5	7.48	29.4	7.04	28.4	6.82	25.2	6.16	23.1	5.71	17.9	4.58
		2.8	2.0	32.6	6.99	31.5	6.80	29.4	6.42	28.4	6.22	25.2	5.63	23.1	5.26	17.9	4.28
		6.0	5.0	32.6	6.04	31.5	5.91	29.4	5.63	28.4	5.49	25.2	5.04	23.1	4.70	17.9	3.80
		7.0	6.0	32.6	5.92	31.5	5.76	29.4	5.44	28.4	5.28	25.2	4.80	23.1	4.47	17.9	3.63
		8.6	7.5	32.6	5.42	31.5	5.28	29.4	5.01	28.4	4.87	25.2	4.44	23.1	4.15	17.9	3.40
		11.2	10.0	32.6	4.64	31.5	4.53	29.4	4.32	28.4	4.21	25.2	3.88	23.1	3.65	17.9	3.03
		16.4	15.0	32.6	3.58	31.5	3.48	29.4	3.28	28.4	3.18	25.2	2.89	23.1	2.75	17.9	2.33
24.0	18.0	32.6	3.58	31.5	3.48	29.4	3.28	28.4	3.18	25.2	2.87	23.1	2.67	17.9	2.16		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	24.6	8.49	24.0	8.34	22.7	8.01	22.1	7.85	20.1	7.30	18.8	6.89	15.2	5.76
		-19.8	-20.0	25.7	8.66	25.1	8.50	23.8	8.17	23.2	7.99	21.1	7.43	19.7	7.01	15.9	5.85
		-14.7	-15.0	27.4	8.92	26.8	8.75	25.4	8.40	24.7	8.22	22.4	7.62	20.5	6.45	15.9	5.17
		-9.6	-10.0	28.9	7.89	28.0	7.70	26.1	7.29	25.2	7.09	22.4	6.46	20.5	6.02	15.9	4.88
		-4.4	-5.0	28.9	6.90	28.0	6.74	26.1	6.41	25.2	6.24	22.4	5.71	20.5	5.35	15.9	4.37
		-1.8	-2.5	28.9	6.35	28.0	6.21	26.1	5.92	25.2	5.77	22.4	5.31	20.5	4.98	15.9	4.13
		0.8	0.0	28.9	5.78	28.0	5.65	26.1	5.43	25.2	5.31	22.4	4.93	20.5	4.65	15.9	3.87
		2.8	2.0	28.9	5.30	28.0	5.22	26.1	5.02	25.2	4.92	22.4	4.57	20.5	4.32	15.9	3.61
		6.0	5.0	28.9	4.67	28.0	4.60	26.1	4.44	25.2	4.35	22.4	4.07	20.5	3.84	15.9	3.20
		7.0	6.0	28.9	4.54	28.0	4.45	26.1	4.27	25.2	4.17	22.4	3.87	20.5	3.65	15.9	3.06
		8.6	7.5	28.9	4.13	28.0	4.06	26.1	3.91	25.2	3.83	22.4	3.57	20.5	3.38	15.9	2.86
		11.2	10.0	28.9	3.50	28.0	3.45	26.1	3.35	25.2	3.29	22.4	3.10	20.5	2.96	15.9	2.55
		16.4	15.0	28.9	3.24	28.0	3.15	26.1	2.96	25.2	2.87	22.4	2.60	20.5	2.42	15.9	1.97
24.0	18.0	28.9	3.24	28.0	3.15	26.1	2.96	25.2	2.87	22.4	2.60	20.5	2.42	15.9	1.97		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	24.6	8.49	24.0	8.34	22.7	8.01	22.1	7.85	19.6	7.30	18.0	5.85	13.9	4.77
		-19.8	-20.0	25.3	7.27	24.5	7.12	22.9	6.79	22.1	6.62	19.6	6.05	18.0	5.61	13.9	4.59
		-14.7	-15.0	25.3	6.70	24.5	6.56	22.9	6.28	22.1	6.14	19.6	5.67	18.0	5.34	13.9	4.39
		-9.6	-10.0	25.3	6.00	24.5	5.89	22.9	5.66	22.1	5.54	19.6	5.14	18.0	4.85	13.9	4.07
		-4.4	-5.0	25.3	5.22	24.5	5.15	22.9	4.99	22.1	4.90	19.6	4.59	18.0	4.36	13.9	3.68
		-1.8	-2.5	25.3	4.86	24.5	4.80	22.9	4.66	22.1	4.58	19.6	4.30	18.0	4.09	13.9	3.47
		0.8	0.0	25.3	4.48	24.5	4.43	22.9	4.31	22.1	4.24	19.6	3.99	18.0	3.81	13.9	3.25
		2.8	2.0	25.3	4.11	24.5	4.06	22.9	3.96	22.1	3.90	19.6	3.69	18.0	3.53	13.9	3.03
		6.0	5.0	25.3	3.57	24.5	3.54	22.9	3.47	22.1	3.42	19.6	3.26	18.0	3.12	13.9	2.68
		7.0	6.0	25.3	3.44	24.5	3.40	22.9	3.31	22.1	3.26	19.6	3.09	18.0	2.96	13.9	2.57
		8.6	7.5	25.3	3.11	24.5	3.08	22.9	3.02	22.1	2.98	19.6	2.85	18.0	2.74	13.9	2.40
		11.2	10.0	25.3	2.89	24.5	2.81	22.9	2.65	22.1	2.57	19.6	2.47	18.0	2.39	13.9	2.13
		16.4	15.0	25.3	2.89	24.5	2.81	22.9	2.65	22.1	2.57	19.6	2.33	18.0	2.18	13.9	1.78
24.0	18.0	25.3	2.89	24.5	2.81	22.9	2.65	22.1	2.57	19.6	2.33	18.0	2.18	13.9	1.78		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

U-10ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	21.7	5.90	21.0	5.81	19.6	5.60	18.9	5.49	16.8	5.12	15.4	4.83	11.9	3.98
		-19.8	-20.0	21.7	5.55	21.0	5.46	19.6	5.28	18.9	5.18	16.8	4.86	15.4	4.61	11.9	3.86
		-14.7	-15.0	21.7	5.10	21.0	5.04	19.6	4.90	18.9	4.82	16.8	4.54	15.4	4.33	11.9	3.68
		-9.6	-10.0	21.7	4.63	21.0	4.59	19.6	4.47	18.9	4.40	16.8	4.16	15.4	3.98	11.9	3.40
		-4.4	-5.0	21.7	4.09	21.0	4.05	19.6	3.96	18.9	3.91	16.8	3.72	15.4	3.56	11.9	3.08
		-1.8	-2.5	21.7	3.79	21.0	3.76	19.6	3.68	18.9	3.64	16.8	3.47	15.4	3.33	11.9	2.89
		0.8	0.0	21.7	3.47	21.0	3.45	19.6	3.39	18.9	3.35	16.8	3.21	15.4	3.09	11.9	2.70
		2.8	2.0	21.7	3.16	21.0	3.14	19.6	3.10	18.9	3.07	16.8	2.96	15.4	2.86	11.9	2.52
		6.0	5.0	21.7	2.71	21.0	2.71	19.6	2.69	18.9	2.67	16.8	2.59	15.4	2.50	11.9	2.21
		7.0	6.0	21.7	2.57	21.0	2.56	19.6	2.54	18.9	2.52	16.8	2.45	15.4	2.38	11.9	2.13
		8.6	7.5	21.7	2.54	21.0	2.47	19.6	2.33	18.9	2.30	16.8	2.25	15.4	2.20	11.9	1.99
		11.2	10.0	21.7	2.54	21.0	2.47	19.6	2.33	18.9	2.27	16.8	2.06	15.4	1.93	11.9	1.77
		16.4	15.0	21.7	2.54	21.0	2.47	19.6	2.33	18.9	2.27	16.8	2.06	15.4	1.93	11.9	1.59
24.0	18.0	21.7	2.54	21.0	2.47	19.6	2.33	18.9	2.27	16.8	2.06	15.4	1.93	11.9	1.59		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	18.1	4.55	17.5	4.51	16.3	4.40	15.8	4.33	14.0	4.11	12.8	3.93	9.9	3.29
		-19.8	-20.0	18.1	4.32	17.5	4.27	16.3	4.18	15.8	4.12	14.0	3.91	12.8	3.75	9.9	3.22
		-14.7	-15.0	18.1	4.00	17.5	3.97	16.3	3.89	15.8	3.84	14.0	3.66	12.8	3.51	9.9	3.04
		-9.6	-10.0	18.1	3.62	17.5	3.60	16.3	3.53	15.8	3.49	14.0	3.35	12.8	3.22	9.9	2.81
		-4.4	-5.0	18.1	3.17	17.5	3.16	16.3	3.12	15.8	3.09	14.0	2.98	12.8	2.88	9.9	2.54
		-1.8	-2.5	18.1	2.93	17.5	2.92	16.3	2.89	15.8	2.87	14.0	2.77	12.8	2.69	9.9	2.38
		0.8	0.0	18.1	2.67	17.5	2.67	16.3	2.65	15.8	2.64	14.0	2.56	12.8	2.49	9.9	2.23
		2.8	2.0	18.1	2.41	17.5	2.42	16.3	2.42	15.8	2.41	14.0	2.36	12.8	2.30	9.9	2.07
		6.0	5.0	18.1	2.19	17.5	2.13	16.3	2.06	15.8	2.06	14.0	2.03	12.8	1.99	9.9	1.81
		7.0	6.0	18.1	2.19	17.5	2.13	16.3	2.02	15.8	1.96	14.0	1.92	12.8	1.89	9.9	1.75
		8.6	7.5	18.1	2.19	17.5	2.13	16.3	2.02	15.8	1.96	14.0	1.79	12.8	1.75	9.9	1.64
		11.2	10.0	18.1	2.19	17.5	2.13	16.3	2.02	15.8	1.96	14.0	1.79	12.8	1.68	9.9	1.47
		16.4	15.0	18.1	2.19	17.5	2.13	16.3	2.02	15.8	1.96	14.0	1.79	12.8	1.68	9.9	1.40
24.0	18.0	18.1	2.19	17.5	2.13	16.3	2.02	15.8	1.96	14.0	1.79	12.8	1.68	9.9	1.40		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	14.5	3.52	14.0	3.50	13.1	3.43	12.6	3.39	11.2	3.24	10.3	3.12	7.9	2.70
		-19.8	-20.0	14.5	3.33	14.0	3.31	13.1	3.26	12.6	3.22	11.2	3.09	10.3	2.97	7.9	2.60
		-14.7	-15.0	14.5	3.09	14.0	3.07	13.1	3.03	12.6	3.00	11.2	2.89	10.3	2.79	7.9	2.45
		-9.6	-10.0	14.5	2.78	14.0	2.77	13.1	2.75	12.6	2.72	11.2	2.64	10.3	2.55	7.9	2.27
		-4.4	-5.0	14.5	2.43	14.0	2.43	13.1	2.42	12.6	2.40	11.2	2.34	10.3	2.28	7.9	2.05
		-1.8	-2.5	14.5	2.23	14.0	2.24	13.1	2.24	12.6	2.23	11.2	2.18	10.3	2.13	7.9	1.93
		0.8	0.0	14.5	2.03	14.0	2.04	13.1	2.05	12.6	2.05	11.2	2.02	10.3	1.98	7.9	1.80
		2.8	2.0	14.5	1.84	14.0	1.83	13.1	1.85	12.6	1.85	11.2	1.83	10.3	1.81	7.9	1.67
		6.0	5.0	14.5	1.84	14.0	1.79	13.1	1.70	12.6	1.66	11.2	1.57	10.3	1.57	7.9	1.47
		7.0	6.0	14.5	1.84	14.0	1.79	13.1	1.70	12.6	1.66	11.2	1.52	10.3	1.49	7.9	1.42
		8.6	7.5	14.5	1.84	14.0	1.79	13.1	1.70	12.6	1.66	11.2	1.52	10.3	1.43	7.9	1.34
		11.2	10.0	14.5	1.84	14.0	1.79	13.1	1.70	12.6	1.66	11.2	1.52	10.3	1.43	7.9	1.21
		16.4	15.0	14.5	1.84	14.0	1.79	13.1	1.70	12.6	1.66	11.2	1.52	10.3	1.43	7.9	1.21
24.0	18.0	14.5	1.84	14.0	1.79	13.1	1.70	12.6	1.66	11.2	1.52	10.3	1.43	7.9	1.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	10.9	2.63	10.5	2.61	9.8	2.58	9.5	2.56	8.4	2.46	7.7	2.38	6.0	2.10
		-19.8	-20.0	10.9	2.48	10.5	2.48	9.8	2.45	9.5	2.43	8.4	2.35	7.7	2.27	6.0	2.02
		-14.7	-15.0	10.9	2.30	10.5	2.30	9.8	2.28	9.5	2.26	8.4	2.20	7.7	2.13	6.0	1.91
		-9.6	-10.0	10.9	2.08	10.5	2.08	9.8	2.07	9.5	2.06	8.4	2.01	7.7	1.96	6.0	1.77
		-4.4	-5.0	10.9	1.81	10.5	1.81	9.8	1.81	9.5	1.81	8.4	1.78	7.7	1.75	6.0	1.60
		-1.8	-2.5	10.9	1.65	10.5	1.65	9.8	1.67	9.5	1.67	8.4	1.65	7.7	1.63	6.0	1.50
		0.8	0.0	10.9	1.49	10.5	1.49	9.8	1.51	9.5	1.52	8.4	1.52	7.7	1.50	6.0	1.41
		2.8	2.0	10.9	1.49	10.5	1.45	9.8	1.39	9.5	1.37	8.4	1.39	7.7	1.38	6.0	1.31
		6.0	5.0	10.9	1.49	10.5	1.45	9.8	1.39	9.5	1.35	8.4	1.25	7.7	1.21	6.0	1.17
		7.0	6.0	10.9	1.49	10.5	1.45	9.8	1.39	9.5	1.35	8.4	1.25	7.7	1.18	6.0	1.13
		8.6	7.5	10.9	1.49	10.5	1.45	9.8	1.39	9.5	1.35	8.4	1.25	7.7	1.18	6.0	1.07
		11.2	10.0	10.9	1.49	10.5	1.45	9.8	1.39	9.5	1.35	8.4	1.25	7.7	1.18	6.0	1.01
		16.4	15.0	10.9	1.49	10.5	1.45	9.8	1.39	9.5	1.35	8.4	1.25	7.7	1.18	6.0	1.01
24.0	18.0	10.9	1.49	10.5	1.45	9.8	1.39	9.5	1.35	8.4	1.25	7.7	1.18	6.0	1.01		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-5. U-12ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	22.3	2.31	26.8	2.78	31.3	3.24	33.5	3.47	38.0	3.93	42.4	4.40	46.9	4.86
		-5.0	22.3	2.32	26.8	2.78	31.3	3.24	33.5	3.48	38.0	3.94	42.4	4.40	46.9	4.86
		0.0	22.3	2.32	26.8	2.79	31.3	3.25	33.5	3.48	38.0	3.94	42.4	4.41	46.9	4.88
		5.0	22.3	2.33	26.8	2.79	31.3	3.26	33.5	3.49	38.0	3.97	42.4	4.45	46.9	4.93
		10.0	22.3	2.34	26.8	2.81	31.3	3.30	33.5	3.55	38.0	4.05	42.4	4.56	46.9	5.05
		15.0	22.3	2.40	26.8	2.92	31.3	3.46	33.5	3.73	38.0	4.28	42.4	4.83	46.9	5.34
		20.0	22.3	2.74	26.8	3.36	31.3	4.04	33.5	4.41	38.0	5.21	42.4	6.08	46.9	7.03
		25.0	22.3	3.51	26.8	4.31	31.3	5.19	33.5	5.66	38.0	6.66	42.4	7.74	46.9	8.90
		30.0	22.3	4.37	26.8	5.37	31.3	6.45	33.5	7.02	38.0	8.22	42.4	9.52	46.9	10.90
		35.0	22.3	5.30	26.8	6.50	31.3	7.79	33.5	8.48	38.0	9.91	42.4	11.44	44.9	11.86
		40.0	22.3	6.30	26.8	7.72	31.3	9.25	33.5	10.05	38.0	11.73	39.8	11.86	41.5	11.86
		43.0	22.3	6.93	26.8	8.50	31.3	10.18	33.5	11.06	36.3	11.86	38.0	11.86	38.8	11.24
46.0	22.1	7.53	26.5	9.24	28.2	9.40	28.5	9.15	29.2	8.73	30.2	8.40	31.4	8.15		
52.0	9.6	3.28	10.5	3.31	11.5	3.37	12.1	3.41	13.3	3.49	14.6	3.59	16.1	3.70		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	20.1	1.86	24.1	2.34	28.1	2.80	30.2	3.03	34.2	3.48	38.2	3.92	42.2	4.35
		-5.0	20.1	1.87	24.1	2.34	28.1	2.81	30.2	3.04	34.2	3.48	38.2	3.92	42.2	4.35
		0.0	20.1	1.87	24.1	2.35	28.1	2.81	30.2	3.04	34.2	3.49	38.2	3.93	42.2	4.36
		5.0	20.1	1.88	24.1	2.36	28.1	2.82	30.2	3.05	34.2	3.50	38.2	3.94	42.2	4.38
		10.0	20.1	1.89	24.1	2.37	28.1	2.84	30.2	3.07	34.2	3.54	38.2	4.00	42.2	4.45
		15.0	20.1	1.91	24.1	2.42	28.1	2.92	30.2	3.17	34.2	3.66	38.2	4.15	42.2	4.62
		20.0	20.1	2.12	24.1	2.70	28.1	3.26	30.2	3.53	34.2	4.06	38.2	4.65	42.2	5.28
		25.0	20.1	2.86	24.1	3.51	28.1	4.19	30.2	4.53	34.2	5.24	38.2	5.97	42.2	6.72
		30.0	20.1	3.66	24.1	4.45	28.1	5.25	30.2	5.66	34.2	6.49	38.2	7.34	42.2	8.21
		35.0	20.1	4.66	24.1	5.61	28.1	6.58	30.2	7.07	34.2	8.07	38.2	9.09	42.2	10.14
		40.0	20.1	5.54	24.1	6.64	28.1	7.75	30.2	8.31	34.2	9.46	38.2	10.66	41.5	11.86
		43.0	20.1	6.08	24.1	7.27	28.1	8.48	30.2	9.09	34.2	10.35	38.0	11.86	38.8	11.24
46.0	20.1	6.51	24.1	7.88	28.1	9.31	28.5	9.15	29.2	8.73	30.2	8.40	31.4	8.15		
52.0	9.6	3.28	10.5	3.31	11.5	3.37	12.1	3.41	13.3	3.49	14.6	3.59	16.1	3.70		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	17.9	1.59	21.4	2.03	25.0	2.45	26.8	2.65	30.4	3.06	33.9	3.46	37.5	3.85
		-5.0	17.9	1.60	21.4	2.03	25.0	2.45	26.8	2.66	30.4	3.07	33.9	3.47	37.5	3.86
		0.0	17.9	1.60	21.4	2.03	25.0	2.46	26.8	2.66	30.4	3.07	33.9	3.47	37.5	3.86
		5.0	17.9	1.61	21.4	2.04	25.0	2.46	26.8	2.67	30.4	3.08	33.9	3.48	37.5	3.87
		10.0	17.9	1.62	21.4	2.05	25.0	2.47	26.8	2.68	30.4	3.09	33.9	3.50	37.5	3.90
		15.0	17.9	1.63	21.4	2.07	25.0	2.50	26.8	2.72	30.4	3.15	33.9	3.57	37.5	3.98
		20.0	17.9	1.72	21.4	2.20	25.0	2.67	26.8	2.90	30.4	3.36	33.9	3.80	37.5	4.22
		25.0	17.9	2.34	21.4	2.83	25.0	3.33	26.8	3.59	30.4	4.10	33.9	4.62	37.5	5.15
		30.0	17.9	3.04	21.4	3.65	25.0	4.27	26.8	4.58	30.4	5.20	33.9	5.82	37.5	6.45
		35.0	17.9	3.91	21.4	4.67	25.0	5.43	26.8	5.81	30.4	6.56	33.9	7.31	37.5	8.07
		40.0	17.9	4.70	21.4	5.58	25.0	6.45	26.8	6.89	30.4	7.75	33.9	8.62	37.5	9.50
		43.0	17.9	5.18	21.4	6.14	25.0	7.09	26.8	7.56	30.4	8.50	33.9	9.46	37.5	10.43
46.0	17.9	5.52	21.4	6.58	25.0	7.68	26.8	8.23	29.2	8.73	30.2	8.40	31.4	8.15		
52.0	9.6	3.28	10.5	3.31	11.5	3.37	12.1	3.41	13.3	3.49	14.6	3.59	16.1	3.70		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	15.6	1.32	18.8	1.71	21.9	2.08	23.5	2.27	26.6	2.63	29.7	2.99	32.8	3.35
		-5.0	15.6	1.32	18.8	1.71	21.9	2.09	23.5	2.27	26.6	2.64	29.7	3.00	32.8	3.35
		0.0	15.6	1.33	18.8	1.71	21.9	2.09	23.5	2.28	26.6	2.64	29.7	3.00	32.8	3.35
		5.0	15.6	1.33	18.8	1.72	21.9	2.10	23.5	2.28	26.6	2.65	29.7	3.01	32.8	3.36
		10.0	15.6	1.34	18.8	1.73	21.9	2.10	23.5	2.29	26.6	2.66	29.7	3.02	32.8	3.37
		15.0	15.6	1.35	18.8	1.74	21.9	2.12	23.5	2.30	26.6	2.67	29.7	3.04	32.8	3.40
		20.0	15.6	1.38	18.8	1.79	21.9	2.18	23.5	2.38	26.6	2.76	29.7	3.14	32.8	3.51
		25.0	15.6	1.75	18.8	2.17	21.9	2.57	23.5	2.76	26.6	3.14	29.7	3.50	32.8	3.86
		30.0	15.6	2.47	18.8	2.93	21.9	3.38	23.5	3.61	26.6	4.05	29.7	4.48	32.8	4.91
		35.0	15.6	3.23	18.8	3.81	21.9	4.38	23.5	4.66	26.6	5.21	29.7	5.75	32.8	6.28
		40.0	15.6	3.91	18.8	4.60	21.9	5.27	23.5	5.60	26.6	6.24	29.7	6.87	32.8	7.49
		43.0	15.6	4.33	18.8	5.09	21.9	5.82	23.5	6.18	26.6	6.88	29.7	7.57	32.8	8.24
46.0	15.6	4.62	18.8	5.43	21.9	6.24	23.5	6.65	26.6	7.46	29.7	7.98	31.4	8.15		
52.0	9.6	3.28	10.5	3.31	11.5	3.37	12.1	3.41	13.3	3.49	14.6	3.59	16.1	3.70		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

U-12ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	13.4	1.05	16.1	1.38	18.8	1.71	20.1	1.87	22.8	2.19	25.5	2.51	28.1	2.82
		-5.0	13.4	1.05	16.1	1.38	18.8	1.71	20.1	1.88	22.8	2.20	25.5	2.51	28.1	2.82
		0.0	13.4	1.05	16.1	1.39	18.8	1.72	20.1	1.88	22.8	2.20	25.5	2.52	28.1	2.83
		5.0	13.4	1.05	16.1	1.39	18.8	1.72	20.1	1.88	22.8	2.21	25.5	2.52	28.1	2.83
		10.0	13.4	1.06	16.1	1.40	18.8	1.73	20.1	1.89	22.8	2.21	25.5	2.53	28.1	2.84
		15.0	13.4	1.07	16.1	1.41	18.8	1.74	20.1	1.90	22.8	2.22	25.5	2.54	28.1	2.85
		20.0	13.4	1.08	16.1	1.42	18.8	1.76	20.1	1.92	22.8	2.25	25.5	2.57	28.1	2.88
		25.0	13.4	1.22	16.1	1.57	18.8	1.91	20.1	2.07	22.8	2.40	25.5	2.72	28.1	3.03
		30.0	13.4	1.96	16.1	2.29	18.8	2.60	20.1	2.75	22.8	3.05	25.5	3.33	28.1	3.59
		35.0	13.4	2.59	16.1	3.03	18.8	3.44	20.1	3.64	22.8	4.02	25.5	4.38	28.1	4.73
		40.0	13.4	3.18	16.1	3.70	18.8	4.20	20.1	4.44	22.8	4.90	25.5	5.33	28.1	5.75
		43.0	13.4	3.54	16.1	4.12	18.8	4.67	20.1	4.93	22.8	5.43	25.5	5.92	28.1	6.38
46.0	13.4	3.82	16.1	4.41	18.8	4.99	20.1	5.28	22.8	5.84	25.5	6.38	28.1	6.91		
52.0		9.6	3.28	10.5	3.31	11.5	3.37	12.1	3.41	13.3	3.49	14.6	3.59	16.1	3.70	

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	11.2	0.76	13.4	1.05	15.6	1.33	16.8	1.47	19.0	1.74	21.2	2.01	23.5	2.27
		-5.0	11.2	0.77	13.4	1.05	15.6	1.33	16.8	1.47	19.0	1.74	21.2	2.01	23.5	2.28
		0.0	11.2	0.77	13.4	1.05	15.6	1.33	16.8	1.47	19.0	1.75	21.2	2.02	23.5	2.28
		5.0	11.2	0.77	13.4	1.06	15.6	1.34	16.8	1.48	19.0	1.75	21.2	2.02	23.5	2.28
		10.0	11.2	0.78	13.4	1.06	15.6	1.34	16.8	1.48	19.0	1.76	21.2	2.02	23.5	2.29
		15.0	11.2	0.78	13.4	1.07	15.6	1.35	16.8	1.49	19.0	1.76	21.2	2.03	23.5	2.30
		20.0	11.2	0.79	13.4	1.08	15.6	1.36	16.8	1.50	19.0	1.77	21.2	2.04	23.5	2.30
		25.0	11.2	0.83	13.4	1.12	15.6	1.40	16.8	1.54	19.0	1.81	21.2	2.08	23.5	2.35
		30.0	11.2	1.51	13.4	1.70	15.6	1.83	16.8	1.91	19.0	2.11	21.2	2.33	23.5	2.56
		35.0	11.2	2.02	13.4	2.32	15.6	2.60	16.8	2.73	19.0	2.97	21.2	3.19	23.5	3.39
		40.0	11.2	2.51	13.4	2.89	15.6	3.23	16.8	3.39	19.0	3.70	21.2	3.98	23.5	4.24
		43.0	11.2	2.81	13.4	3.23	15.6	3.62	16.8	3.80	19.0	4.15	21.2	4.46	23.5	4.75
46.0	11.2	3.10	13.4	3.52	15.6	3.92	16.8	4.11	19.0	4.47	21.2	4.81	23.5	5.13		
52.0		9.6	3.28	10.5	3.31	11.5	3.37	12.1	3.41	13.3	3.49	14.6	3.59	16.1	3.70	

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	8.9	0.48	10.7	0.71	12.5	0.94	13.4	1.05	15.2	1.27	17.0	1.50	18.8	1.71
		-5.0	8.9	0.48	10.7	0.71	12.5	0.94	13.4	1.05	15.2	1.28	17.0	1.50	18.8	1.72
		0.0	8.9	0.48	10.7	0.71	12.5	0.94	13.4	1.05	15.2	1.28	17.0	1.50	18.8	1.72
		5.0	8.9	0.48	10.7	0.71	12.5	0.94	13.4	1.06	15.2	1.28	17.0	1.50	18.8	1.72
		10.0	8.9	0.49	10.7	0.72	12.5	0.95	13.4	1.06	15.2	1.29	17.0	1.51	18.8	1.73
		15.0	8.9	0.49	10.7	0.72	12.5	0.95	13.4	1.07	15.2	1.29	17.0	1.51	18.8	1.73
		20.0	8.9	0.50	10.7	0.73	12.5	0.96	13.4	1.08	15.2	1.30	17.0	1.52	18.8	1.74
		25.0	8.9	0.52	10.7	0.75	12.5	0.98	13.4	1.09	15.2	1.31	17.0	1.53	18.8	1.76
		30.0	8.9	0.76	10.7	0.90	12.5	1.08	13.4	1.18	15.2	1.38	17.0	1.61	18.8	1.87
		35.0	8.9	1.51	10.7	1.70	12.5	1.87	13.4	1.95	15.2	2.08	17.0	2.25	18.8	2.47
		40.0	8.9	1.89	10.7	2.15	12.5	2.37	13.4	2.47	15.2	2.65	17.0	2.81	18.8	2.94
		43.0	8.9	2.13	10.7	2.42	12.5	2.68	13.4	2.80	15.2	3.01	17.0	3.19	18.8	3.35
46.0	8.9	2.46	10.7	2.74	12.5	2.99	13.4	3.11	15.2	3.33	17.0	3.52	18.8	3.69		
52.0		8.9	2.91	10.5	3.31	11.5	3.37	12.1	3.41	13.3	3.49	14.6	3.59	16.1	3.70	

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	6.7	0.19	8.0	0.36	9.4	0.54	10.1	0.63	11.4	0.80	12.7	0.97	14.1	1.14
		-5.0	6.7	0.19	8.0	0.36	9.4	0.54	10.1	0.63	11.4	0.80	12.7	0.98	14.1	1.14
		0.0	6.7	0.19	8.0	0.36	9.4	0.54	10.1	0.63	11.4	0.81	12.7	0.98	14.1	1.15
		5.0	6.7	0.19	8.0	0.37	9.4	0.54	10.1	0.63	11.4	0.81	12.7	0.98	14.1	1.15
		10.0	6.7	0.19	8.0	0.37	9.4	0.55	10.1	0.64	11.4	0.81	12.7	0.99	14.1	1.16
		15.0	6.7	0.20	8.0	0.37	9.4	0.55	10.1	0.64	11.4	0.82	12.7	0.99	14.1	1.17
		20.0	6.7	0.20	8.0	0.38	9.4	0.56	10.1	0.65	11.4	0.83	12.7	1.00	14.1	1.17
		25.0	6.7	0.21	8.0	0.39	9.4	0.57	10.1	0.66	11.4	0.84	12.7	1.03	14.1	1.21
		30.0	6.7	0.25	8.0	0.41	9.4	0.60	10.1	0.71	11.4	0.93	12.7	1.14	14.1	1.35
		35.0	6.7	1.06	8.0	1.17	9.4	1.30	10.1	1.39	11.4	1.56	12.7	1.73	14.1	1.89
		40.0	6.7	1.34	8.0	1.50	9.4	1.62	10.1	1.68	11.4	1.77	12.7	1.84	14.1	1.89
		43.0	6.7	1.52	8.0	1.70	9.4	1.85	10.1	1.92	11.4	2.03	12.7	2.12	14.1	2.18
46.0	6.7	1.89	8.0	2.07	9.4	2.21	10.1	2.28	11.4	2.39	12.7	2.48	14.1	2.56		
52.0		6.7	2.22	8.0	2.44	9.4	2.64	10.1	2.72	11.4	2.81	12.7	2.86	14.1	2.87	

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-6. U-12ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	100%	-24.9	-25.0	27.6	9.44	26.9	9.27	25.4	8.89	24.7	8.70	22.4	8.07	20.8	7.62	16.6	6.34
		-19.8	-20.0	29.0	9.67	28.3	9.49	26.8	9.10	26.0	8.90	23.6	8.24	21.9	7.77	17.5	6.45
		-14.7	-15.0	31.0	10.01	30.2	9.83	28.6	9.41	27.8	9.20	25.2	8.51	23.4	8.01	18.8	6.62
		-9.6	-10.0	33.7	10.52	32.9	10.32	31.1	9.89	30.2	9.65	27.4	8.87	25.5	8.29	20.4	6.85
		-4.4	-5.0	37.2	10.90	36.2	10.69	34.3	10.25	33.3	10.02	30.2	9.25	28.1	8.70	22.5	7.14
		-1.8	-2.5	39.2	11.07	38.2	10.86	36.1	10.39	35.1	10.15	31.9	9.36	29.6	8.79	23.6	7.15
		0.8	0.0	41.2	11.09	40.4	11.02	38.3	10.54	37.2	10.29	33.3	9.29	30.6	8.53	23.6	6.65
		2.8	2.0	43.1	10.99	41.7	10.64	38.9	9.93	37.5	9.58	33.3	8.55	30.6	7.86	23.6	6.15
		6.0	5.0	43.1	9.51	41.7	9.21	38.9	8.63	37.5	8.34	33.3	7.46	30.6	6.87	23.6	5.41
		7.0	6.0	43.1	9.03	41.7	8.76	38.9	8.21	37.5	7.92	33.3	7.10	30.6	6.55	23.6	5.19
		8.6	7.5	43.1	8.32	41.7	8.07	38.9	7.58	37.5	7.33	33.3	6.60	30.6	6.10	23.6	4.85
		11.2	10.0	43.1	7.23	41.7	7.03	38.9	6.63	37.5	6.42	33.3	5.81	30.6	5.40	23.6	4.33
		16.4	15.0	43.1	5.31	41.7	5.18	38.9	4.92	37.5	4.79	33.3	4.37	30.6	4.08	23.6	3.31
24.0	18.0	43.1	4.85	41.7	4.71	38.9	4.42	37.5	4.27	33.3	3.84	30.6	3.55	23.6	2.82		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	90%	-24.9	-25.0	27.6	9.44	26.9	9.27	25.4	8.89	24.7	8.70	22.4	8.07	20.8	7.62	16.6	6.34
		-19.8	-20.0	29.0	9.67	28.3	9.49	26.8	9.10	26.0	8.90	23.6	8.24	21.9	7.77	17.5	6.45
		-14.7	-15.0	31.0	10.01	30.2	9.83	28.6	9.41	27.8	9.20	25.2	8.51	23.4	8.01	18.8	6.62
		-9.6	-10.0	33.7	10.52	32.9	10.32	31.1	9.89	30.2	9.65	27.4	8.87	25.5	8.29	20.4	6.85
		-4.4	-5.0	37.2	10.90	36.2	10.69	34.3	10.25	33.3	10.02	30.0	8.65	27.5	8.02	21.3	6.39
		-1.8	-2.5	38.8	10.01	37.5	9.74	35.0	9.18	33.8	8.91	30.0	8.05	27.5	7.47	21.3	5.97
		0.8	0.0	38.8	9.17	37.5	8.93	35.0	8.44	33.8	8.19	30.0	7.42	27.5	6.90	21.3	5.55
		2.8	2.0	38.8	8.32	37.5	8.11	35.0	7.68	33.8	7.47	30.0	6.79	27.5	6.33	21.3	5.15
		6.0	5.0	38.8	7.20	37.5	7.05	35.0	6.73	33.8	6.56	30.0	6.02	27.5	5.62	21.3	4.56
		7.0	6.0	38.8	6.96	37.5	6.80	35.0	6.45	33.8	6.28	30.0	5.73	27.5	5.36	21.3	4.36
		8.6	7.5	38.8	6.38	37.5	6.23	35.0	5.94	33.8	5.78	30.0	5.31	27.5	4.97	21.3	4.08
		11.2	10.0	38.8	5.47	37.5	5.36	35.0	5.13	33.8	5.01	30.0	4.64	27.5	4.37	21.3	3.63
		16.4	15.0	38.8	4.40	37.5	4.27	35.0	4.01	33.8	3.88	30.0	3.49	27.5	3.24	21.3	2.73
24.0	18.0	38.8	4.40	37.5	4.27	35.0	4.01	33.8	3.88	30.0	3.49	27.5	3.23	21.3	2.58		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	80%	-24.9	-25.0	27.6	9.44	26.9	9.27	25.4	8.89	24.7	8.70	22.4	8.07	20.8	7.62	16.6	6.34
		-19.8	-20.0	29.0	9.67	28.3	9.49	26.8	9.10	26.0	8.90	23.6	8.24	21.9	7.77	17.5	6.45
		-14.7	-15.0	31.0	10.01	30.2	9.83	28.6	9.41	27.8	9.20	25.2	8.51	23.4	8.01	18.8	6.62
		-9.6	-10.0	33.7	10.52	32.9	10.32	31.1	9.89	30.0	8.56	26.7	7.83	24.4	7.32	18.9	5.95
		-4.4	-5.0	34.4	8.26	33.3	8.08	31.1	7.71	30.0	7.52	26.7	6.91	24.4	6.48	18.9	5.31
		-1.8	-2.5	34.4	7.60	33.3	7.44	31.1	7.12	30.0	6.95	26.7	6.41	24.4	6.03	18.9	4.99
		0.8	0.0	34.4	6.92	33.3	6.80	31.1	6.54	30.0	6.40	26.7	5.95	24.4	5.61	18.9	4.66
		2.8	2.0	34.4	6.35	33.3	6.25	31.1	6.02	30.0	5.90	26.7	5.49	24.4	5.19	18.9	4.33
		6.0	5.0	34.4	5.54	33.3	5.46	31.1	5.27	30.0	5.17	26.7	4.83	24.4	4.56	18.9	3.80
		7.0	6.0	34.4	5.29	33.3	5.20	31.1	5.01	30.0	4.91	26.7	4.58	24.4	4.34	18.9	3.65
		8.6	7.5	34.4	4.81	33.3	4.74	31.1	4.58	30.0	4.50	26.7	4.22	24.4	4.01	18.9	3.40
		11.2	10.0	34.4	4.07	33.3	4.02	31.1	3.92	30.0	3.86	26.7	3.66	24.4	3.50	18.9	3.01
		16.4	15.0	34.4	3.95	33.3	3.84	31.1	3.61	30.0	3.49	26.7	3.14	24.4	2.91	18.9	2.33
24.0	18.0	34.4	3.95	33.3	3.84	31.1	3.61	30.0	3.49	26.7	3.14	24.4	2.91	18.9	2.33		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	70%	-24.9	-25.0	27.6	9.44	26.9	9.27	25.4	8.89	24.7	8.70	22.4	8.07	20.8	7.62	16.5	5.85
		-19.8	-20.0	29.0	9.67	28.3	9.49	26.8	9.10	26.0	8.90	23.3	7.43	21.4	6.95	16.5	5.62
		-14.7	-15.0	30.1	8.08	29.2	7.93	27.2	7.62	26.3	7.45	23.3	6.90	21.4	6.51	16.5	5.38
		-9.6	-10.0	30.1	7.23	29.2	7.11	27.2	6.84	26.3	6.70	23.3	6.26	21.4	5.93	16.5	4.96
		-4.4	-5.0	30.1	6.34	29.2	6.25	27.2	6.06	26.3	5.95	23.3	5.58	21.4	5.30	16.5	4.46
		-1.8	-2.5	30.1	5.87	29.2	5.80	27.2	5.63	26.3	5.53	23.3	5.20	21.4	4.95	16.5	4.19
		0.8	0.0	30.1	5.39	29.2	5.32	27.2	5.18	26.3	5.10	23.3	4.81	21.4	4.58	16.5	3.90
		2.8	2.0	30.1	4.91	29.2	4.86	27.2	4.74	26.3	4.67	23.3	4.42	21.4	4.22	16.5	3.61
		6.0	5.0	30.1	4.21	29.2	4.18	27.2	4.08	26.3	4.03	23.3	3.83	21.4	3.67	16.5	3.14
		7.0	6.0	30.1	3.95	29.2	3.92	27.2	3.84	26.3	3.79	23.3	3.62	21.4	3.48	16.5	3.02
		8.6	7.5	30.1	3.57	29.2	3.55	27.2	3.49	26.3	3.46	23.3	3.32	21.4	3.21	16.5	2.82
		11.2	10.0	30.1	3.50	29.2	3.40	27.2	3.20	26.3	3.10	23.3	2.87	21.4	2.79	16.5	2.49
		16.4	15.0	30.1	3.50	29.2	3.40	27.2	3.20	26.3	3.10	23.3	2.79	21.4	2.59	16.5	2.08
24.0	18.0	30.1	3.50	29.2	3.40	27.2	3.20	26.3	3.10	23.3	2.79	21.4	2.59	16.5	2.08		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

U-12ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	60%	-24.9	-25.0	25.8	7.16	25.0	7.06	23.3	6.82	22.5	6.69	20.0	6.27	18.3	5.93	14.2	4.88
		-19.8	-20.0	25.8	6.76	25.0	6.67	23.3	6.46	22.5	6.35	20.0	5.97	18.3	5.67	14.2	4.74
		-14.7	-15.0	25.8	6.26	25.0	6.19	23.3	6.01	22.5	5.91	20.0	5.57	18.3	5.30	14.2	4.49
		-9.6	-10.0	25.8	5.66	25.0	5.60	23.3	5.46	22.5	5.37	20.0	5.08	18.3	4.85	14.2	4.13
		-4.4	-5.0	25.8	4.95	25.0	4.91	23.3	4.80	22.5	4.74	20.0	4.50	18.3	4.31	14.2	3.71
		-1.8	-2.5	25.8	4.56	25.0	4.53	23.3	4.44	22.5	4.39	20.0	4.18	18.3	4.02	14.2	3.47
		0.8	0.0	25.8	4.15	25.0	4.13	23.3	4.07	22.5	4.02	20.0	3.86	18.3	3.71	14.2	3.23
		2.8	2.0	25.8	3.75	25.0	3.74	23.3	3.70	22.5	3.67	20.0	3.53	18.3	3.40	14.2	2.97
		6.0	5.0	25.8	3.12	25.0	3.12	23.3	3.10	22.5	3.08	20.0	3.00	18.3	2.91	14.2	2.57
		7.0	6.0	25.8	3.05	25.0	2.97	23.3	2.91	22.5	2.90	20.0	2.83	18.3	2.76	14.2	2.48
		8.6	7.5	25.8	3.05	25.0	2.97	23.3	2.79	22.5	2.71	20.0	2.59	18.3	2.54	14.2	2.31
		11.2	10.0	25.8	3.05	25.0	2.97	23.3	2.79	22.5	2.71	20.0	2.45	18.3	2.27	14.2	2.03
		16.4	15.0	25.8	3.05	25.0	2.97	23.3	2.79	22.5	2.71	20.0	2.45	18.3	2.27	14.2	1.84
24.0	18.0	25.8	3.05	25.0	2.97	23.3	2.79	22.5	2.71	20.0	2.45	18.3	2.27	14.2	1.84		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	50%	-24.9	-25.0	21.5	5.61	20.8	5.55	19.4	5.41	18.8	5.33	16.7	5.04	15.3	4.82	11.8	4.03
		-19.8	-20.0	21.5	5.30	20.8	5.25	19.4	5.12	18.8	5.05	16.7	4.79	15.3	4.58	11.8	3.92
		-14.7	-15.0	21.5	4.89	20.8	4.85	19.4	4.75	18.8	4.69	16.7	4.46	15.3	4.28	11.8	3.68
		-9.6	-10.0	21.5	4.40	20.8	4.37	19.4	4.29	18.8	4.24	16.7	4.06	15.3	3.90	11.8	3.38
		-4.4	-5.0	21.5	3.82	20.8	3.80	19.4	3.75	18.8	3.72	16.7	3.58	15.3	3.46	11.8	3.03
		-1.8	-2.5	21.5	3.50	20.8	3.49	19.4	3.46	18.8	3.43	16.7	3.32	15.3	3.21	11.8	2.84
		0.8	0.0	21.5	3.17	20.8	3.17	19.4	3.15	18.8	3.14	16.7	3.04	15.3	2.95	11.8	2.62
		2.8	2.0	21.5	2.80	20.8	2.81	19.4	2.81	18.8	2.80	16.7	2.74	15.3	2.67	11.8	2.40
		6.0	5.0	21.5	2.60	20.8	2.53	19.4	2.39	18.8	2.33	16.7	2.32	15.3	2.28	11.8	2.09
		7.0	6.0	21.5	2.60	20.8	2.53	19.4	2.39	18.8	2.31	16.7	2.19	15.3	2.16	11.8	2.01
		8.6	7.5	21.5	2.60	20.8	2.53	19.4	2.39	18.8	2.31	16.7	2.10	15.3	1.99	11.8	1.87
		11.2	10.0	21.5	2.60	20.8	2.53	19.4	2.39	18.8	2.31	16.7	2.10	15.3	1.95	11.8	1.65
		16.4	15.0	21.5	2.60	20.8	2.53	19.4	2.39	18.8	2.31	16.7	2.10	15.3	1.95	11.8	1.59
24.0	18.0	21.5	2.60	20.8	2.53	19.4	2.39	18.8	2.31	16.7	2.10	15.3	1.95	11.8	1.59		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	40%	-24.9	-25.0	17.2	4.30	16.7	4.26	15.6	4.18	15.0	4.13	13.3	3.94	12.2	3.79	9.4	3.26
		-19.8	-20.0	17.2	4.05	16.7	4.02	15.6	3.95	15.0	3.91	13.3	3.74	12.2	3.60	9.4	3.13
		-14.7	-15.0	17.2	3.73	16.7	3.71	15.6	3.66	15.0	3.62	13.3	3.48	12.2	3.36	9.4	2.94
		-9.6	-10.0	17.2	3.34	16.7	3.33	15.6	3.29	15.0	3.27	13.3	3.16	12.2	3.06	9.4	2.70
		-4.4	-5.0	17.2	2.88	16.7	2.88	15.6	2.87	15.0	2.85	13.3	2.77	12.2	2.70	9.4	2.41
		-1.8	-2.5	17.2	2.60	16.7	2.61	15.6	2.61	15.0	2.60	13.3	2.55	12.2	2.49	9.4	2.24
		0.8	0.0	17.2	2.31	16.7	2.32	15.6	2.34	15.0	2.34	13.3	2.31	12.2	2.27	9.4	2.07
		2.8	2.0	17.2	2.16	16.7	2.10	15.6	2.08	15.0	2.08	13.3	2.08	12.2	2.06	9.4	1.90
		6.0	5.0	17.2	2.16	16.7	2.10	15.6	1.98	15.0	1.92	13.3	1.76	12.2	1.76	9.4	1.67
		7.0	6.0	17.2	2.16	16.7	2.10	15.6	1.98	15.0	1.92	13.3	1.75	12.2	1.67	9.4	1.59
		8.6	7.5	17.2	2.16	16.7	2.10	15.6	1.98	15.0	1.92	13.3	1.75	12.2	1.63	9.4	1.49
		11.2	10.0	17.2	2.16	16.7	2.10	15.6	1.98	15.0	1.92	13.3	1.75	12.2	1.63	9.4	1.34
		16.4	15.0	17.2	2.16	16.7	2.10	15.6	1.98	15.0	1.92	13.3	1.75	12.2	1.63	9.4	1.34
24.0	18.0	17.2	2.16	16.7	2.10	15.6	1.98	15.0	1.92	13.3	1.75	12.2	1.63	9.4	1.34		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	30%	-24.9	-25.0	12.9	3.14	12.5	3.13	11.7	3.09	11.3	3.06	10.0	2.94	9.2	2.84	7.1	2.49
		-19.8	-20.0	12.9	2.96	12.5	2.95	11.7	2.92	11.3	2.89	10.0	2.79	9.2	2.70	7.1	2.38
		-14.7	-15.0	12.9	2.72	12.5	2.72	11.7	2.69	11.3	2.68	10.0	2.59	9.2	2.51	7.1	2.23
		-9.6	-10.0	12.9	2.40	12.5	2.41	11.7	2.40	11.3	2.39	10.0	2.33	9.2	2.27	7.1	2.04
		-4.4	-5.0	12.9	2.03	12.5	2.04	11.7	2.06	11.3	2.06	10.0	2.03	9.2	2.00	7.1	1.82
		-1.8	-2.5	12.9	1.83	12.5	1.85	11.7	1.87	11.3	1.88	10.0	1.87	9.2	1.85	7.1	1.70
		0.8	0.0	12.9	1.71	12.5	1.66	11.7	1.68	11.3	1.69	10.0	1.70	9.2	1.69	7.1	1.58
		2.8	2.0	12.9	1.71	12.5	1.66	11.7	1.58	11.3	1.53	10.0	1.54	9.2	1.53	7.1	1.46
		6.0	5.0	12.9	1.71	12.5	1.66	11.7	1.58	11.3	1.53	10.0	1.40	9.2	1.32	7.1	1.29
		7.0	6.0	12.9	1.71	12.5	1.66	11.7	1.58	11.3	1.53	10.0	1.40	9.2	1.31	7.1	1.23
		8.6	7.5	12.9	1.71	12.5	1.66	11.7	1.58	11.3	1.53	10.0	1.40	9.2	1.31	7.1	1.15
		11.2	10.0	12.9	1.71	12.5	1.66	11.7	1.58	11.3	1.53	10.0	1.40	9.2	1.31	7.1	1.10
		16.4	15.0	12.9	1.71	12.5	1.66	11.7	1.58	11.3	1.53	10.0	1.40	9.2	1.31	7.1	1.10
24.0	18.0	12.9	1.71	12.5	1.66	11.7	1.58	11.3	1.53	10.0	1.40	9.2	1.31	7.1	1.10		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-7. U-14ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	26.7	2.84	32.0	3.41	37.3	3.98	40.0	4.26	45.3	4.83	50.7	5.40	56.0	5.97
		-5.0	26.7	2.85	32.0	3.41	37.3	3.98	40.0	4.27	45.3	4.84	50.7	5.40	56.0	5.97
		0.0	26.7	2.85	32.0	3.42	37.3	3.99	40.0	4.27	45.3	4.84	50.7	5.42	56.0	5.99
		5.0	26.7	2.86	32.0	3.43	37.3	4.00	40.0	4.29	45.3	4.87	50.7	5.46	56.0	6.04
		10.0	26.7	2.87	32.0	3.45	37.3	4.04	40.0	4.34	45.3	4.95	50.7	5.57	56.0	6.16
		15.0	26.7	2.93	32.0	3.56	37.3	4.20	40.0	4.53	45.3	5.19	50.7	5.85	56.0	6.46
		20.0	26.7	3.28	32.0	4.01	37.3	4.85	40.0	5.31	45.3	6.29	50.7	7.36	56.0	8.53
		25.0	26.7	4.19	32.0	5.18	37.3	6.26	40.0	6.84	45.3	8.07	50.7	9.40	56.0	10.83
		30.0	26.7	5.26	32.0	6.48	37.3	7.81	40.0	8.51	45.3	10.00	50.7	11.59	56.0	13.29
		35.0	26.7	6.40	32.0	7.88	37.3	9.47	40.0	10.31	45.3	12.07	50.7	13.95	53.5	14.42
		40.0	26.7	7.63	32.0	9.38	37.3	11.26	40.0	12.24	45.3	14.31	47.4	14.42	49.5	14.42
		43.0	26.7	8.41	32.0	10.34	37.3	12.40	40.0	13.49	43.3	14.42	45.3	14.42	46.3	13.71
		46.0	26.4	9.14	31.7	11.25	33.7	11.44	34.0	11.13	34.9	10.62	36.1	10.22	37.5	9.90
52.0	11.5	3.91	12.5	3.95	13.7	4.03	14.4	4.07	15.9	4.18	17.5	4.30	19.3	4.43		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	24.0	2.29	28.8	2.88	33.6	3.45	36.0	3.73	40.8	4.28	45.6	4.81	50.4	5.34
		-5.0	24.0	2.30	28.8	2.88	33.6	3.45	36.0	3.73	40.8	4.28	45.6	4.82	50.4	5.34
		0.0	24.0	2.30	28.8	2.89	33.6	3.46	36.0	3.74	40.8	4.29	45.6	4.82	50.4	5.35
		5.0	24.0	2.31	28.8	2.90	33.6	3.47	36.0	3.75	40.8	4.30	45.6	4.84	50.4	5.37
		10.0	24.0	2.32	28.8	2.91	33.6	3.48	36.0	3.77	40.8	4.34	45.6	4.90	50.4	5.44
		15.0	24.0	2.35	28.8	2.96	33.6	3.57	36.0	3.87	40.8	4.47	45.6	5.05	50.4	5.62
		20.0	24.0	2.56	28.8	3.25	33.6	3.91	36.0	4.24	40.8	4.87	45.6	5.60	50.4	6.38
		25.0	24.0	3.39	28.8	4.20	33.6	5.03	36.0	5.46	40.8	6.33	45.6	7.23	50.4	8.16
		30.0	24.0	4.38	28.8	5.35	33.6	6.35	36.0	6.85	40.8	7.87	45.6	8.92	50.4	9.99
		35.0	24.0	5.60	28.8	6.79	33.6	7.98	36.0	8.58	40.8	9.80	45.6	11.06	50.4	12.36
		40.0	24.0	6.69	28.8	8.05	33.6	9.41	36.0	10.10	40.8	11.52	45.6	12.99	49.5	14.42
		43.0	24.0	7.36	28.8	8.83	33.6	10.31	36.0	11.06	40.8	12.61	45.3	14.42	46.3	13.71
		46.0	24.0	7.89	28.8	9.57	33.6	11.33	34.0	11.13	34.9	10.62	36.1	10.22	37.5	9.90
52.0	11.5	3.91	12.5	3.95	13.7	4.03	14.4	4.07	15.9	4.18	17.5	4.30	19.3	4.43		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	21.3	1.96	25.6	2.49	29.9	3.01	32.0	3.27	36.3	3.77	40.5	4.26	44.8	4.74
		-5.0	21.3	1.97	25.6	2.50	29.9	3.02	32.0	3.27	36.3	3.77	40.5	4.26	44.8	4.74
		0.0	21.3	1.97	25.6	2.50	29.9	3.02	32.0	3.28	36.3	3.78	40.5	4.27	44.8	4.75
		5.0	21.3	1.98	25.6	2.51	29.9	3.03	32.0	3.28	36.3	3.78	40.5	4.27	44.8	4.75
		10.0	21.3	1.99	25.6	2.52	29.9	3.04	32.0	3.29	36.3	3.80	40.5	4.29	44.8	4.78
		15.0	21.3	2.00	25.6	2.54	29.9	3.07	32.0	3.33	36.3	3.86	40.5	4.37	44.8	4.87
		20.0	21.3	2.10	25.6	2.68	29.9	3.24	32.0	3.52	36.3	4.07	40.5	4.60	44.8	5.12
		25.0	21.3	2.75	25.6	3.36	29.9	3.98	32.0	4.29	36.3	4.93	40.5	5.57	44.8	6.22
		30.0	21.3	3.61	25.6	4.37	29.9	5.13	32.0	5.51	36.3	6.28	40.5	7.05	44.8	7.82
		35.0	21.3	4.69	25.6	5.63	29.9	6.56	32.0	7.02	36.3	7.95	40.5	8.87	44.8	9.80
		40.0	21.3	5.65	25.6	6.74	29.9	7.82	32.0	8.35	36.3	9.42	40.5	10.49	44.8	11.57
		43.0	21.3	6.25	25.6	7.43	29.9	8.60	32.0	9.18	36.3	10.34	40.5	11.51	44.8	12.72
		46.0	21.3	6.67	25.6	7.98	29.9	9.32	32.0	10.01	34.9	10.62	36.1	10.22	37.5	9.90
52.0	11.5	3.91	12.5	3.95	13.7	4.03	14.4	4.07	15.9	4.18	17.5	4.30	19.3	4.43		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	18.7	1.63	22.4	2.10	26.1	2.56	28.0	2.79	31.7	3.24	35.5	3.68	39.2	4.11
		-5.0	18.7	1.63	22.4	2.11	26.1	2.57	28.0	2.80	31.7	3.25	35.5	3.69	39.2	4.12
		0.0	18.7	1.64	22.4	2.11	26.1	2.57	28.0	2.80	31.7	3.25	35.5	3.69	39.2	4.12
		5.0	18.7	1.64	22.4	2.12	26.1	2.58	28.0	2.81	31.7	3.26	35.5	3.70	39.2	4.13
		10.0	18.7	1.65	22.4	2.12	26.1	2.59	28.0	2.82	31.7	3.27	35.5	3.70	39.2	4.14
		15.0	18.7	1.66	22.4	2.13	26.1	2.60	28.0	2.83	31.7	3.28	35.5	3.73	39.2	4.17
		20.0	18.7	1.69	22.4	2.18	26.1	2.67	28.0	2.91	31.7	3.38	35.5	3.83	39.2	4.28
		25.0	18.7	2.07	22.4	2.58	26.1	3.06	28.0	3.30	31.7	3.76	35.5	4.21	39.2	4.64
		30.0	18.7	2.91	22.4	3.48	26.1	4.04	28.0	4.31	31.7	4.86	35.5	5.39	39.2	5.92
		35.0	18.7	3.84	22.4	4.56	26.1	5.27	28.0	5.61	31.7	6.29	35.5	6.96	39.2	7.61
		40.0	18.7	4.68	22.4	5.54	26.1	6.36	28.0	6.77	31.7	7.56	35.5	8.33	39.2	9.09
		43.0	18.7	5.20	22.4	6.14	26.1	7.04	28.0	7.48	31.7	8.34	35.5	9.19	39.2	10.02
		46.0	18.7	5.57	22.4	6.56	26.1	7.56	28.0	8.06	31.7	9.06	35.5	9.70	37.5	9.90
52.0	11.5	3.91	12.5	3.95	13.7	4.03	14.4	4.07	15.9	4.18	17.5	4.30	19.3	4.43		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

U-14ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	16.0	1.29	19.2	1.70	22.4	2.11	24.0	2.31	27.2	2.70	30.4	3.09	33.6	3.47
		-5.0	16.0	1.29	19.2	1.71	22.4	2.11	24.0	2.31	27.2	2.70	30.4	3.09	33.6	3.47
		0.0	16.0	1.30	19.2	1.71	22.4	2.11	24.0	2.31	27.2	2.71	30.4	3.10	33.6	3.48
		5.0	16.0	1.30	19.2	1.71	22.4	2.12	24.0	2.32	27.2	2.71	30.4	3.10	33.6	3.48
		10.0	16.0	1.31	19.2	1.72	22.4	2.13	24.0	2.33	27.2	2.72	30.4	3.11	33.6	3.49
		15.0	16.0	1.32	19.2	1.73	22.4	2.14	24.0	2.34	27.2	2.73	30.4	3.12	33.6	3.50
		20.0	16.0	1.33	19.2	1.74	22.4	2.15	24.0	2.36	27.2	2.76	30.4	3.15	33.6	3.53
		25.0	16.0	1.47	19.2	1.90	22.4	2.31	24.0	2.52	27.2	2.91	30.4	3.30	33.6	3.69
		30.0	16.0	2.28	19.2	2.68	22.4	3.07	24.0	3.26	27.2	3.62	30.4	3.97	33.6	4.30
		35.0	16.0	3.06	19.2	3.59	22.4	4.10	24.0	4.35	27.2	4.82	30.4	5.26	33.6	5.69
		40.0	16.0	3.78	19.2	4.43	22.4	5.04	24.0	5.33	27.2	5.90	30.4	6.44	33.6	6.95
		43.0	16.0	4.23	19.2	4.94	22.4	5.62	24.0	5.94	27.2	6.56	30.4	7.16	33.6	7.72
46.0	16.0	4.58	19.2	5.31	22.4	6.02	24.0	6.37	27.2	7.06	30.4	7.73	33.6	8.38		
52.0	11.5	3.91	12.5	3.95	13.7	4.03	14.4	4.07	15.9	4.18	17.5	4.30	19.3	4.43		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	13.3	0.95	16.0	1.29	18.7	1.64	20.0	1.81	22.7	2.15	25.3	2.48	28.0	2.80
		-5.0	13.3	0.95	16.0	1.30	18.7	1.64	20.0	1.81	22.7	2.15	25.3	2.48	28.0	2.80
		0.0	13.3	0.95	16.0	1.30	18.7	1.64	20.0	1.81	22.7	2.15	25.3	2.48	28.0	2.81
		5.0	13.3	0.95	16.0	1.30	18.7	1.65	20.0	1.82	22.7	2.15	25.3	2.49	28.0	2.81
		10.0	13.3	0.96	16.0	1.31	18.7	1.65	20.0	1.82	22.7	2.16	25.3	2.49	28.0	2.82
		15.0	13.3	0.96	16.0	1.32	18.7	1.66	20.0	1.83	22.7	2.17	25.3	2.50	28.0	2.82
		20.0	13.3	0.98	16.0	1.33	18.7	1.67	20.0	1.84	22.7	2.18	25.3	2.51	28.0	2.83
		25.0	13.3	1.01	16.0	1.37	18.7	1.71	20.0	1.88	22.7	2.22	25.3	2.55	28.0	2.87
		30.0	13.3	1.72	16.0	1.97	18.7	2.15	20.0	2.27	22.7	2.53	25.3	2.80	28.0	3.09
		35.0	13.3	2.35	16.0	2.72	18.7	3.07	20.0	3.23	22.7	3.52	25.3	3.80	28.0	4.05
		40.0	13.3	2.95	16.0	3.42	18.7	3.85	20.0	4.05	22.7	4.42	25.3	4.77	28.0	5.09
		43.0	13.3	3.32	16.0	3.84	18.7	4.32	20.0	4.55	22.7	4.97	25.3	5.37	28.0	5.73
46.0	13.3	3.69	16.0	4.21	18.7	4.70	20.0	4.93	22.7	5.38	25.3	5.80	28.0	6.19		
52.0	11.5	3.91	12.5	3.95	13.7	4.03	14.4	4.07	15.9	4.18	17.5	4.30	19.3	4.43		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	10.7	0.59	12.8	0.88	14.9	1.16	16.0	1.30	18.1	1.57	20.3	1.84	22.4	2.11
		-5.0	10.7	0.60	12.8	0.88	14.9	1.16	16.0	1.30	18.1	1.57	20.3	1.85	22.4	2.11
		0.0	10.7	0.60	12.8	0.88	14.9	1.16	16.0	1.30	18.1	1.58	20.3	1.85	22.4	2.12
		5.0	10.7	0.60	12.8	0.88	14.9	1.17	16.0	1.30	18.1	1.58	20.3	1.85	22.4	2.12
		10.0	10.7	0.60	12.8	0.89	14.9	1.17	16.0	1.31	18.1	1.58	20.3	1.86	22.4	2.13
		15.0	10.7	0.61	12.8	0.89	14.9	1.18	16.0	1.31	18.1	1.59	20.3	1.86	22.4	2.13
		20.0	10.7	0.62	12.8	0.90	14.9	1.18	16.0	1.32	18.1	1.60	20.3	1.87	22.4	2.14
		25.0	10.7	0.64	12.8	0.92	14.9	1.20	16.0	1.34	18.1	1.61	20.3	1.88	22.4	2.16
		30.0	10.7	0.89	12.8	1.07	14.9	1.30	16.0	1.43	18.1	1.68	20.3	1.96	22.4	2.27
		35.0	10.7	1.72	12.8	1.96	14.9	2.17	16.0	2.26	18.1	2.43	20.3	2.64	22.4	2.90
		40.0	10.7	2.20	12.8	2.51	14.9	2.78	16.0	2.91	18.1	3.13	20.3	3.33	22.4	3.49
		43.0	10.7	2.49	12.8	2.85	14.9	3.17	16.0	3.31	18.1	3.57	20.3	3.80	22.4	4.00
46.0	10.7	2.91	12.8	3.25	14.9	3.56	16.0	3.71	18.1	3.97	20.3	4.21	22.4	4.42		
52.0	10.7	3.46	12.5	3.95	13.7	4.03	14.4	4.07	15.9	4.18	17.5	4.30	19.3	4.43		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	8.0	0.24	9.6	0.45	11.2	0.67	12.0	0.78	13.6	0.99	15.2	1.20	16.8	1.41
		-5.0	8.0	0.24	9.6	0.45	11.2	0.67	12.0	0.78	13.6	0.99	15.2	1.20	16.8	1.41
		0.0	8.0	0.24	9.6	0.46	11.2	0.67	12.0	0.78	13.6	1.00	15.2	1.21	16.8	1.41
		5.0	8.0	0.24	9.6	0.46	11.2	0.67	12.0	0.78	13.6	1.00	15.2	1.21	16.8	1.42
		10.0	8.0	0.24	9.6	0.46	11.2	0.68	12.0	0.79	13.6	1.00	15.2	1.22	16.8	1.42
		15.0	8.0	0.25	9.6	0.46	11.2	0.68	12.0	0.79	13.6	1.01	15.2	1.22	16.8	1.43
		20.0	8.0	0.25	9.6	0.47	11.2	0.69	12.0	0.80	13.6	1.02	15.2	1.23	16.8	1.44
		25.0	8.0	0.26	9.6	0.48	11.2	0.70	12.0	0.81	13.6	1.03	15.2	1.25	16.8	1.48
		30.0	8.0	0.30	9.6	0.50	11.2	0.73	12.0	0.86	13.6	1.12	15.2	1.38	16.8	1.62
		35.0	8.0	1.16	9.6	1.30	11.2	1.46	12.0	1.57	13.6	1.78	15.2	1.99	16.8	2.19
		40.0	8.0	1.51	9.6	1.70	11.2	1.86	12.0	1.92	13.6	2.04	15.2	2.12	16.8	2.19
		43.0	8.0	1.73	9.6	1.96	11.2	2.14	12.0	2.22	13.6	2.36	15.2	2.47	16.8	2.55
46.0	8.0	2.21	9.6	2.42	11.2	2.60	12.0	2.68	13.6	2.82	15.2	2.94	16.8	3.02		
52.0	8.0	2.61	9.6	2.88	11.2	3.12	12.0	3.23	13.6	3.34	15.2	3.39	16.8	3.42		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-8. U-14ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	31.6	10.78	30.8	10.59	29.1	10.18	28.3	9.97	25.7	9.28	23.9	8.77	19.2	7.35
		-19.8	-20.0	33.2	11.03	32.3	10.82	30.6	10.40	29.7	10.18	27.0	9.46	25.2	8.94	20.2	7.48
		-14.7	-15.0	35.4	11.40	34.5	11.19	32.7	10.74	31.8	10.51	28.9	9.75	26.9	9.20	21.7	7.66
		-9.6	-10.0	38.4	11.96	37.5	11.74	35.5	11.25	34.5	10.99	31.4	10.11	29.3	9.55	23.6	7.92
		-4.4	-5.0	42.4	12.40	41.3	12.18	39.2	11.71	38.1	11.45	34.6	10.61	32.3	9.99	26.0	8.26
		-1.8	-2.5	44.7	12.60	43.6	12.36	41.3	11.87	40.1	11.60	36.5	10.74	34.0	10.11	27.4	8.35
		0.8	0.0	47.3	12.78	46.1	12.54	43.7	12.02	42.5	11.74	38.7	10.86	36.0	10.21	28.3	8.13
		2.8	2.0	50.1	12.97	48.9	12.72	46.4	12.19	45.0	11.88	40.0	10.54	36.7	9.67	28.3	7.53
		6.0	5.0	51.7	11.90	50.0	11.51	46.7	10.74	45.0	10.36	40.0	9.23	36.7	8.48	28.3	6.65
		7.0	6.0	51.7	11.32	50.0	10.95	46.7	10.23	45.0	9.86	40.0	8.80	36.7	8.10	28.3	6.37
		8.6	7.5	51.7	10.45	50.0	10.12	46.7	9.47	45.0	9.14	40.0	8.18	36.7	7.54	28.3	5.97
		11.2	10.0	51.7	9.10	50.0	8.83	46.7	8.29	45.0	8.02	40.0	7.22	36.7	6.69	28.3	5.34
		16.4	15.0	51.7	6.74	50.0	6.57	46.7	6.22	45.0	6.04	40.0	5.49	36.7	5.12	28.3	4.14
		24.0	18.0	51.7	5.83	50.0	5.66	46.7	5.32	45.0	5.15	40.0	4.63	36.7	4.29	28.3	3.44
100%	90%	-24.9	-25.0	31.6	10.78	30.8	10.59	29.1	10.18	28.3	9.97	25.7	9.28	23.9	8.77	19.2	7.35
		-19.8	-20.0	33.2	11.03	32.3	10.82	30.6	10.40	29.7	10.18	27.0	9.46	25.2	8.94	20.2	7.48
		-14.7	-15.0	35.4	11.40	34.5	11.19	32.7	10.74	31.8	10.51	28.9	9.75	26.9	9.20	21.7	7.66
		-9.6	-10.0	38.4	11.96	37.5	11.74	35.5	11.25	34.5	10.99	31.4	10.11	29.3	9.55	23.6	7.92
		-4.4	-5.0	42.4	12.40	41.3	12.18	39.2	11.71	38.1	11.45	34.6	10.61	32.3	9.99	25.5	7.78
		-1.8	-2.5	44.7	12.60	43.6	12.36	41.3	11.87	40.1	11.60	36.0	9.88	33.0	9.15	25.5	7.29
		0.8	0.0	46.5	11.39	45.0	11.07	42.0	10.43	40.5	10.11	36.0	9.13	33.0	8.47	25.5	6.78
		2.8	2.0	46.5	10.36	45.0	10.08	42.0	9.52	40.5	9.24	36.0	8.37	33.0	7.79	25.5	6.31
		6.0	5.0	46.5	8.98	45.0	8.78	42.0	8.36	40.5	8.14	36.0	7.45	33.0	6.95	25.5	5.61
		7.0	6.0	46.5	8.75	45.0	8.52	42.0	8.06	40.5	7.82	36.0	7.11	33.0	6.63	25.5	5.37
		8.6	7.5	46.5	8.03	45.0	7.83	42.0	7.43	40.5	7.22	36.0	6.59	33.0	6.16	25.5	5.03
		11.2	10.0	46.5	6.91	45.0	6.76	42.0	6.44	40.5	6.28	36.0	5.78	33.0	5.43	25.5	4.49
		16.4	15.0	46.5	5.30	45.0	5.15	42.0	4.84	40.5	4.69	36.0	4.31	33.0	4.08	25.5	3.43
		24.0	18.0	46.5	5.30	45.0	5.15	42.0	4.84	40.5	4.69	36.0	4.23	33.0	3.92	25.5	3.15
100%	80%	-24.9	-25.0	31.6	10.78	30.8	10.59	29.1	10.18	28.3	9.97	25.7	9.28	23.9	8.77	19.2	7.35
		-19.8	-20.0	33.2	11.03	32.3	10.82	30.6	10.40	29.7	10.18	27.0	9.46	25.2	8.94	20.2	7.48
		-14.7	-15.0	35.4	11.40	34.5	11.19	32.7	10.74	31.8	10.51	28.9	9.75	26.9	9.20	21.7	7.66
		-9.6	-10.0	38.4	11.96	37.5	11.74	35.5	11.25	34.5	10.99	31.4	10.11	29.3	9.55	22.7	7.22
		-4.4	-5.0	41.3	10.19	40.0	9.96	37.3	9.48	36.0	9.23	32.0	8.46	29.3	7.91	22.7	6.47
		-1.8	-2.5	41.3	9.40	40.0	9.19	37.3	8.77	36.0	8.55	32.0	7.86	29.3	7.37	22.7	6.09
		0.8	0.0	41.3	8.54	40.0	8.38	37.3	8.05	36.0	7.87	32.0	7.29	29.3	6.87	22.7	5.70
		2.8	2.0	41.3	7.87	40.0	7.73	37.3	7.43	36.0	7.27	32.0	6.76	29.3	6.38	22.7	5.31
		6.0	5.0	41.3	6.91	40.0	6.80	37.3	6.56	36.0	6.42	32.0	5.98	29.3	5.65	22.7	4.70
		7.0	6.0	41.3	6.66	40.0	6.54	37.3	6.27	36.0	6.14	32.0	5.70	29.3	5.38	22.7	4.50
		8.6	7.5	41.3	6.07	40.0	5.97	37.3	5.75	36.0	5.63	32.0	5.26	29.3	4.98	22.7	4.21
		11.2	10.0	41.3	5.16	40.0	5.09	37.3	4.94	36.0	4.86	32.0	4.58	29.3	4.37	22.7	3.74
		16.4	15.0	41.3	4.77	40.0	4.63	37.3	4.36	36.0	4.23	32.0	3.82	29.3	3.55	22.7	2.87
		24.0	18.0	41.3	4.77	40.0	4.63	37.3	4.36	36.0	4.23	32.0	3.82	29.3	3.55	22.7	2.87
100%	70%	-24.9	-25.0	31.6	10.78	30.8	10.59	29.1	10.18	28.3	9.97	25.7	9.28	23.9	8.77	19.2	7.35
		-19.8	-20.0	33.2	11.03	32.3	10.82	30.6	10.40	29.7	10.18	27.0	9.46	25.2	8.94	19.8	6.79
		-14.7	-15.0	35.4	11.40	34.5	11.19	32.7	9.29	31.5	9.08	28.0	8.39	25.7	7.90	19.8	6.50
		-9.6	-10.0	36.2	8.87	35.0	8.71	32.7	8.37	31.5	8.19	28.0	7.61	25.7	7.18	19.8	6.02
		-4.4	-5.0	36.2	7.76	35.0	7.65	32.7	7.40	31.5	7.26	28.0	6.80	25.7	6.45	19.8	5.43
		-1.8	-2.5	36.2	7.21	35.0	7.11	32.7	6.89	31.5	6.77	28.0	6.36	25.7	6.04	19.8	5.11
		0.8	0.0	36.2	6.64	35.0	6.55	32.7	6.36	31.5	6.26	28.0	5.89	25.7	5.61	19.8	4.77
		2.8	2.0	36.2	6.07	35.0	6.00	32.7	5.84	31.5	5.75	28.0	5.44	25.7	5.19	19.8	4.43
		6.0	5.0	36.2	5.25	35.0	5.21	32.7	5.09	31.5	5.02	28.0	4.76	25.7	4.55	19.8	3.89
		7.0	6.0	36.2	4.99	35.0	4.94	32.7	4.82	31.5	4.75	28.0	4.52	25.7	4.33	19.8	3.74
		8.6	7.5	36.2	4.52	35.0	4.49	32.7	4.40	31.5	4.35	28.0	4.16	25.7	4.00	19.8	3.50
		11.2	10.0	36.2	4.24	35.0	4.12	32.7	3.89	31.5	3.77	28.0	3.60	25.7	3.49	19.8	3.10
		16.4	15.0	36.2	4.24	35.0	4.12	32.7	3.89	31.5	3.77	28.0	3.41	25.7	3.17	19.8	2.58
		24.0	18.0	36.2	4.24	35.0	4.12	32.7	3.89	31.5	3.77	28.0	3.41	25.7	3.17	19.8	2.58

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

U-14ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	31.0	8.72	30.0	8.58	28.0	8.29	27.0	8.12	24.0	7.58	22.0	7.15	17.0	5.88
		-19.8	-20.0	31.0	8.19	30.0	8.07	28.0	7.81	27.0	7.67	24.0	7.21	22.0	6.85	17.0	5.71
		-14.7	-15.0	31.0	7.60	30.0	7.50	28.0	7.28	27.0	7.16	24.0	6.74	22.0	6.41	17.0	5.44
		-9.6	-10.0	31.0	6.89	30.0	6.81	28.0	6.63	27.0	6.53	24.0	6.17	22.0	5.88	17.0	5.02
		-4.4	-5.0	31.0	6.06	30.0	6.00	28.0	5.86	27.0	5.78	24.0	5.49	22.0	5.25	17.0	4.52
		-1.8	-2.5	31.0	5.60	30.0	5.55	28.0	5.44	27.0	5.37	24.0	5.11	22.0	4.91	17.0	4.25
		0.8	0.0	31.0	5.12	30.0	5.08	28.0	5.00	27.0	4.94	24.0	4.73	22.0	4.55	17.0	3.96
		2.8	2.0	31.0	4.64	30.0	4.62	28.0	4.56	27.0	4.52	24.0	4.35	22.0	4.19	17.0	3.67
		6.0	5.0	31.0	3.95	30.0	3.94	28.0	3.90	27.0	3.87	24.0	3.75	22.0	3.63	17.0	3.20
		7.0	6.0	31.0	3.72	30.0	3.70	28.0	3.67	27.0	3.65	24.0	3.55	22.0	3.45	17.0	3.09
		8.6	7.5	31.0	3.72	30.0	3.61	28.0	3.41	27.0	3.33	24.0	3.26	22.0	3.18	17.0	2.88
		11.2	10.0	31.0	3.72	30.0	3.61	28.0	3.41	27.0	3.31	24.0	3.00	22.0	2.80	17.0	2.56
		16.4	15.0	31.0	3.72	30.0	3.61	28.0	3.41	27.0	3.31	24.0	3.00	22.0	2.80	17.0	2.29
24.0	18.0	31.0	3.72	30.0	3.61	28.0	3.41	27.0	3.31	24.0	3.00	22.0	2.80	17.0	2.29		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	25.8	6.78	25.0	6.70	23.3	6.53	22.5	6.43	20.0	6.09	18.3	5.82	14.2	4.86
		-19.8	-20.0	25.8	6.41	25.0	6.35	23.3	6.20	22.5	6.11	20.0	5.79	18.3	5.54	14.2	4.75
		-14.7	-15.0	25.8	5.94	25.0	5.89	23.3	5.76	22.5	5.69	20.0	5.41	18.3	5.18	14.2	4.48
		-9.6	-10.0	25.8	5.36	25.0	5.32	23.3	5.22	22.5	5.16	20.0	4.94	18.3	4.74	14.2	4.12
		-4.4	-5.0	25.8	4.68	25.0	4.65	23.3	4.59	22.5	4.55	20.0	4.38	18.3	4.22	14.2	3.71
		-1.8	-2.5	25.8	4.30	25.0	4.29	23.3	4.24	22.5	4.21	20.0	4.07	18.3	3.94	14.2	3.48
		0.8	0.0	25.8	3.91	25.0	3.91	23.3	3.89	22.5	3.86	20.0	3.75	18.3	3.65	14.2	3.25
		2.8	2.0	25.8	3.53	25.0	3.54	23.3	3.52	22.5	3.51	20.0	3.42	18.3	3.33	14.2	2.99
		6.0	5.0	25.8	3.19	25.0	3.10	23.3	2.94	22.5	2.94	20.0	2.91	18.3	2.86	14.2	2.61
		7.0	6.0	25.8	3.19	25.0	3.10	23.3	2.93	22.5	2.85	20.0	2.76	18.3	2.72	14.2	2.52
		8.6	7.5	25.8	3.19	25.0	3.10	23.3	2.93	22.5	2.85	20.0	2.59	18.3	2.51	14.2	2.35
		11.2	10.0	25.8	3.19	25.0	3.10	23.3	2.93	22.5	2.85	20.0	2.59	18.3	2.42	14.2	2.09
		16.4	15.0	25.8	3.19	25.0	3.10	23.3	2.93	22.5	2.85	20.0	2.59	18.3	2.42	14.2	2.00
24.0	18.0	25.8	3.19	25.0	3.10	23.3	2.93	22.5	2.85	20.0	2.59	18.3	2.42	14.2	2.00		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	20.7	5.21	20.0	5.17	18.7	5.07	18.0	5.01	16.0	4.78	14.7	4.60	11.3	3.96
		-19.8	-20.0	20.7	4.92	20.0	4.89	18.7	4.81	18.0	4.75	16.0	4.55	14.7	4.38	11.3	3.82
		-14.7	-15.0	20.7	4.54	20.0	4.52	18.7	4.46	18.0	4.41	16.0	4.24	14.7	4.09	11.3	3.59
		-9.6	-10.0	20.7	4.09	20.0	4.07	18.7	4.03	18.0	4.00	16.0	3.86	14.7	3.74	11.3	3.31
		-4.4	-5.0	20.7	3.55	20.0	3.55	18.7	3.53	18.0	3.51	16.0	3.42	14.7	3.33	11.3	2.98
		-1.8	-2.5	20.7	3.26	20.0	3.26	18.7	3.26	18.0	3.25	16.0	3.17	14.7	3.09	11.3	2.79
		0.8	0.0	20.7	2.92	20.0	2.93	18.7	2.94	18.0	2.94	16.0	2.89	14.7	2.84	11.3	2.59
		2.8	2.0	20.7	2.66	20.0	2.60	18.7	2.63	18.0	2.63	16.0	2.62	14.7	2.58	11.3	2.39
		6.0	5.0	20.7	2.66	20.0	2.59	18.7	2.46	18.0	2.39	16.0	2.24	14.7	2.23	11.3	2.10
		7.0	6.0	20.7	2.66	20.0	2.59	18.7	2.46	18.0	2.39	16.0	2.18	14.7	2.12	11.3	2.02
		8.6	7.5	20.7	2.66	20.0	2.59	18.7	2.46	18.0	2.39	16.0	2.18	14.7	2.05	11.3	1.89
		11.2	10.0	20.7	2.66	20.0	2.59	18.7	2.46	18.0	2.39	16.0	2.18	14.7	2.05	11.3	1.71
		16.4	15.0	20.7	2.66	20.0	2.59	18.7	2.46	18.0	2.39	16.0	2.18	14.7	2.05	11.3	1.71
24.0	18.0	20.7	2.66	20.0	2.59	18.7	2.46	18.0	2.39	16.0	2.18	14.7	2.05	11.3	1.71		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	15.5	3.84	15.0	3.83	14.0	3.77	13.5	3.74	12.0	3.60	11.0	3.48	8.5	3.06
		-19.8	-20.0	15.5	3.63	15.0	3.62	14.0	3.58	13.5	3.55	12.0	3.43	11.0	3.31	8.5	2.94
		-14.7	-15.0	15.5	3.35	15.0	3.34	14.0	3.32	13.5	3.29	12.0	3.20	11.0	3.10	8.5	2.77
		-9.6	-10.0	15.5	3.00	15.0	3.00	14.0	2.99	13.5	2.98	12.0	2.90	11.0	2.83	8.5	2.55
		-4.4	-5.0	15.5	2.56	15.0	2.57	14.0	2.58	13.5	2.58	12.0	2.55	11.0	2.50	8.5	2.29
		-1.8	-2.5	15.5	2.33	15.0	2.34	14.0	2.36	13.5	2.37	12.0	2.35	11.0	2.32	8.5	2.14
		0.8	0.0	15.5	2.13	15.0	2.11	14.0	2.14	13.5	2.15	12.0	2.15	11.0	2.13	8.5	2.00
		2.8	2.0	15.5	2.13	15.0	2.08	14.0	1.98	13.5	1.94	12.0	1.96	11.0	1.95	8.5	1.85
		6.0	5.0	15.5	2.13	15.0	2.08	14.0	1.98	13.5	1.93	12.0	1.78	11.0	1.70	8.5	1.65
		7.0	6.0	15.5	2.13	15.0	2.08	14.0	1.98	13.5	1.93	12.0	1.78	11.0	1.67	8.5	1.59
		8.6	7.5	15.5	2.13	15.0	2.08	14.0	1.98	13.5	1.93	12.0	1.78	11.0	1.67	8.5	1.50
		11.2	10.0	15.5	2.13	15.0	2.08	14.0	1.98	13.5	1.93	12.0	1.78	11.0	1.67	8.5	1.42
		16.4	15.0	15.5	2.13	15.0	2.08	14.0	1.98	13.5	1.93	12.0	1.78	11.0	1.67	8.5	1.42
24.0	18.0	15.5	2.13	15.0	2.08	14.0	1.98	13.5	1.93	12.0	1.78	11.0	1.67	8.5	1.42		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-9. U-16ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	30.0	3.55	36.0	4.26	42.0	4.97	45.0	5.33	51.0	6.04	57.0	6.75	63.0	7.46
		-5.0	30.0	3.56	36.0	4.27	42.0	4.98	45.0	5.33	51.0	6.04	57.0	6.75	63.0	7.46
		0.0	30.0	3.56	36.0	4.27	42.0	4.99	45.0	5.34	51.0	6.05	57.0	6.77	63.0	7.48
		5.0	30.0	3.57	36.0	4.28	42.0	4.99	45.0	5.35	51.0	6.08	57.0	6.81	63.0	7.54
		10.0	30.0	3.58	36.0	4.30	42.0	5.04	45.0	5.42	51.0	6.17	57.0	6.93	63.0	7.67
		15.0	30.0	3.65	36.0	4.43	42.0	5.22	45.0	5.62	51.0	6.43	57.0	7.25	63.0	8.01
		20.0	30.0	4.03	36.0	4.93	42.0	5.98	45.0	6.55	51.0	7.78	57.0	9.12	63.0	10.58
		25.0	30.0	5.16	36.0	6.39	42.0	7.75	45.0	8.47	51.0	10.01	57.0	11.67	63.0	13.46
		30.0	30.0	6.49	36.0	8.02	42.0	9.68	45.0	10.56	51.0	12.42	57.0	14.41	63.0	16.54
		35.0	30.0	7.92	36.0	9.77	42.0	11.76	45.0	12.81	51.0	15.02	57.0	17.37	60.2	17.92
		40.0	30.0	9.46	36.0	11.65	42.0	14.00	45.0	15.23	51.0	17.82	53.3	17.92	55.6	17.92
		43.0	30.0	10.44	36.0	12.85	42.0	15.43	45.0	16.79	48.6	17.92	51.0	17.92	52.1	17.07
46.0	29.7	11.35	35.6	13.98	37.9	14.23	38.3	13.84	39.3	13.20	40.6	12.70	42.1	12.30		
52.0	12.9	4.81	14.1	4.86	15.5	4.95	16.2	5.01	17.9	5.14	19.7	5.29	21.7	5.45		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	27.0	2.87	32.4	3.60	37.8	4.31	40.5	4.66	45.9	5.35	51.3	6.02	56.7	6.67
		-5.0	27.0	2.88	32.4	3.61	37.8	4.32	40.5	4.67	45.9	5.35	51.3	6.03	56.7	6.68
		0.0	27.0	2.88	32.4	3.61	37.8	4.33	40.5	4.68	45.9	5.36	51.3	6.03	56.7	6.69
		5.0	27.0	2.89	32.4	3.62	37.8	4.33	40.5	4.68	45.9	5.37	51.3	6.05	56.7	6.71
		10.0	27.0	2.90	32.4	3.63	37.8	4.35	40.5	4.71	45.9	5.42	51.3	6.11	56.7	6.79
		15.0	27.0	2.93	32.4	3.69	37.8	4.45	40.5	4.82	45.9	5.56	51.3	6.28	56.7	6.99
		20.0	27.0	3.17	32.4	4.01	37.8	4.83	40.5	5.23	45.9	6.01	51.3	6.92	56.7	7.89
		25.0	27.0	4.15	32.4	5.16	37.8	6.21	40.5	6.74	45.9	7.84	51.3	8.97	56.7	10.12
		30.0	27.0	5.39	32.4	6.61	37.8	7.85	40.5	8.48	45.9	9.76	51.3	11.07	56.7	12.41
		35.0	27.0	6.92	32.4	8.40	37.8	9.90	40.5	10.65	45.9	12.18	51.3	13.75	56.7	15.38
		40.0	27.0	8.28	32.4	9.98	37.8	11.69	40.5	12.56	45.9	14.32	51.3	16.16	55.6	17.92
		43.0	27.0	9.12	32.4	10.96	37.8	12.81	40.5	13.75	45.9	15.69	51.0	17.92	52.1	17.07
46.0	27.0	9.78	32.4	11.89	37.8	14.09	38.3	13.84	39.3	13.20	40.6	12.70	42.1	12.30		
52.0	12.9	4.81	14.1	4.86	15.5	4.95	16.2	5.01	17.9	5.14	19.7	5.29	21.7	5.45		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	24.0	2.46	28.8	3.12	33.6	3.77	36.0	4.09	40.8	4.71	45.6	5.32	50.4	5.92
		-5.0	24.0	2.46	28.8	3.13	33.6	3.77	36.0	4.09	40.8	4.72	45.6	5.33	50.4	5.93
		0.0	24.0	2.47	28.8	3.13	33.6	3.78	36.0	4.10	40.8	4.72	45.6	5.34	50.4	5.94
		5.0	24.0	2.48	28.8	3.14	33.6	3.79	36.0	4.11	40.8	4.73	45.6	5.34	50.4	5.94
		10.0	24.0	2.49	28.8	3.15	33.6	3.80	36.0	4.11	40.8	4.74	45.6	5.36	50.4	5.97
		15.0	24.0	2.50	28.8	3.17	33.6	3.83	36.0	4.16	40.8	4.81	45.6	5.45	50.4	6.07
		20.0	24.0	2.61	28.8	3.32	33.6	4.03	36.0	4.37	40.8	5.05	45.6	5.70	50.4	6.34
		25.0	24.0	3.34	28.8	4.11	33.6	4.89	36.0	5.28	40.8	6.08	45.6	6.88	50.4	7.70
		30.0	24.0	4.42	28.8	5.38	33.6	6.33	36.0	6.81	40.8	7.77	45.6	8.73	50.4	9.69
		35.0	24.0	5.77	28.8	6.95	33.6	8.12	36.0	8.70	40.8	9.86	45.6	11.02	50.4	12.18
		40.0	24.0	6.98	28.8	8.35	33.6	9.69	36.0	10.36	40.8	11.70	45.6	13.04	50.4	14.39
		43.0	24.0	7.73	28.8	9.21	33.6	10.67	36.0	11.40	40.8	12.85	45.6	14.32	50.4	15.82
46.0	24.0	8.26	28.8	9.90	33.6	11.58	36.0	12.44	39.3	13.20	40.6	12.70	42.1	12.30		
52.0	12.9	4.81	14.1	4.86	15.5	4.95	16.2	5.01	17.9	5.14	19.7	5.29	21.7	5.45		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	21.0	2.04	25.2	2.63	29.4	3.21	31.5	3.50	35.7	4.06	39.9	4.61	44.1	5.14
		-5.0	21.0	2.05	25.2	2.64	29.4	3.21	31.5	3.50	35.7	4.06	39.9	4.61	44.1	5.15
		0.0	21.0	2.05	25.2	2.64	29.4	3.22	31.5	3.50	35.7	4.07	39.9	4.62	44.1	5.15
		5.0	21.0	2.06	25.2	2.65	29.4	3.23	31.5	3.51	35.7	4.07	39.9	4.62	44.1	5.16
		10.0	21.0	2.06	25.2	2.66	29.4	3.24	31.5	3.52	35.7	4.08	39.9	4.63	44.1	5.17
		15.0	21.0	2.08	25.2	2.67	29.4	3.25	31.5	3.53	35.7	4.10	39.9	4.66	44.1	5.21
		20.0	21.0	2.11	25.2	2.72	29.4	3.33	31.5	3.62	35.7	4.20	39.9	4.77	44.1	5.33
		25.0	21.0	2.53	25.2	3.16	29.4	3.76	31.5	4.06	35.7	4.63	39.9	5.19	44.1	5.73
		30.0	21.0	3.55	25.2	4.26	29.4	4.96	31.5	5.31	35.7	5.99	39.9	6.66	44.1	7.32
		35.0	21.0	4.71	25.2	5.62	29.4	6.50	31.5	6.93	35.7	7.78	39.9	8.61	44.1	9.43
		40.0	21.0	5.77	25.2	6.84	29.4	7.87	31.5	8.38	35.7	9.37	39.9	10.34	44.1	11.29
		43.0	21.0	6.42	25.2	7.59	29.4	8.72	31.5	9.27	35.7	10.35	39.9	11.41	44.1	12.45
46.0	21.0	6.88	25.2	8.12	29.4	9.37	31.5	9.99	35.7	11.25	39.9	12.05	42.1	12.30		
52.0	12.9	4.81	14.1	4.86	15.5	4.95	16.2	5.01	17.9	5.14	19.7	5.29	21.7	5.45		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

U-16ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	18.0	1.62	21.6	2.13	25.2	2.64	27.0	2.89	30.6	3.38	34.2	3.86	37.8	4.34
		-5.0	18.0	1.62	21.6	2.14	25.2	2.64	27.0	2.89	30.6	3.38	34.2	3.87	37.8	4.34
		0.0	18.0	1.63	21.6	2.14	25.2	2.65	27.0	2.90	30.6	3.39	34.2	3.87	37.8	4.35
		5.0	18.0	1.63	21.6	2.15	25.2	2.65	27.0	2.90	30.6	3.39	34.2	3.88	37.8	4.35
		10.0	18.0	1.64	21.6	2.15	25.2	2.66	27.0	2.91	30.6	3.40	34.2	3.89	37.8	4.36
		15.0	18.0	1.65	21.6	2.16	25.2	2.67	27.0	2.92	30.6	3.41	34.2	3.90	37.8	4.37
		20.0	18.0	1.66	21.6	2.18	25.2	2.69	27.0	2.94	30.6	3.44	34.2	3.93	37.8	4.41
		25.0	18.0	1.82	21.6	2.35	25.2	2.87	27.0	3.12	30.6	3.62	34.2	4.10	37.8	4.58
		30.0	18.0	2.75	21.6	3.26	25.2	3.75	27.0	3.99	30.6	4.44	34.2	4.87	37.8	5.29
		35.0	18.0	3.73	21.6	4.40	25.2	5.04	27.0	5.34	30.6	5.93	34.2	6.49	37.8	7.03
		40.0	18.0	4.64	21.6	5.45	25.2	6.21	27.0	6.58	30.6	7.29	34.2	7.96	37.8	8.61
		43.0	18.0	5.20	21.6	6.09	25.2	6.94	27.0	7.34	30.6	8.12	34.2	8.87	37.8	9.58
		46.0	18.0	5.64	21.6	6.56	25.2	7.45	27.0	7.89	30.6	8.74	34.2	9.58	37.8	10.40
52.0	12.9	4.81	14.1	4.86	15.5	4.95	16.2	5.01	17.9	5.14	19.7	5.29	21.7	5.45		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	15.0	1.19	18.0	1.62	21.0	2.05	22.5	2.27	25.5	2.69	28.5	3.10	31.5	3.50
		-5.0	15.0	1.19	18.0	1.63	21.0	2.06	22.5	2.27	25.5	2.69	28.5	3.10	31.5	3.51
		0.0	15.0	1.19	18.0	1.63	21.0	2.06	22.5	2.27	25.5	2.69	28.5	3.11	31.5	3.51
		5.0	15.0	1.20	18.0	1.63	21.0	2.06	22.5	2.28	25.5	2.70	28.5	3.11	31.5	3.52
		10.0	15.0	1.20	18.0	1.64	21.0	2.07	22.5	2.28	25.5	2.70	28.5	3.12	31.5	3.52
		15.0	15.0	1.21	18.0	1.65	21.0	2.08	22.5	2.29	25.5	2.71	28.5	3.12	31.5	3.53
		20.0	15.0	1.22	18.0	1.66	21.0	2.09	22.5	2.31	25.5	2.72	28.5	3.14	31.5	3.54
		25.0	15.0	1.26	18.0	1.70	21.0	2.13	22.5	2.35	25.5	3.11	28.5	3.18	31.5	3.59
		30.0	15.0	2.05	18.0	2.38	21.0	2.62	22.5	2.78	25.5	3.11	28.5	3.46	31.5	3.83
		35.0	15.0	2.84	18.0	3.31	21.0	3.74	22.5	3.94	25.5	4.31	28.5	4.66	31.5	4.97
		40.0	15.0	3.60	18.0	4.18	21.0	4.72	22.5	4.97	25.5	5.44	28.5	5.87	31.5	6.27
		43.0	15.0	4.06	18.0	4.72	21.0	5.32	22.5	5.60	25.5	6.13	28.5	6.62	31.5	7.07
		46.0	15.0	4.53	18.0	5.18	21.0	5.79	22.5	6.08	25.5	6.64	28.5	7.16	31.5	7.66
52.0	12.9	4.81	14.1	4.86	15.5	4.95	16.2	5.01	17.9	5.14	19.7	5.29	21.7	5.45		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	12.0	0.75	14.4	1.10	16.8	1.45	18.0	1.63	20.4	1.97	22.8	2.31	25.2	2.65
		-5.0	12.0	0.75	14.4	1.11	16.8	1.46	18.0	1.63	20.4	1.97	22.8	2.31	25.2	2.65
		0.0	12.0	0.75	14.4	1.11	16.8	1.46	18.0	1.63	20.4	1.98	22.8	2.32	25.2	2.65
		5.0	12.0	0.75	14.4	1.11	16.8	1.46	18.0	1.64	20.4	1.98	22.8	2.32	25.2	2.66
		10.0	12.0	0.76	14.4	1.11	16.8	1.47	18.0	1.64	20.4	1.98	22.8	2.32	25.2	2.66
		15.0	12.0	0.76	14.4	1.12	16.8	1.47	18.0	1.65	20.4	1.99	22.8	2.33	25.2	2.67
		20.0	12.0	0.77	14.4	1.13	16.8	1.48	18.0	1.66	20.4	2.00	22.8	2.34	25.2	2.68
		25.0	12.0	0.80	14.4	1.15	16.8	1.50	18.0	1.67	20.4	2.01	22.8	2.35	25.2	2.70
		30.0	12.0	1.08	14.4	1.32	16.8	1.62	18.0	1.77	20.4	2.09	22.8	2.44	25.2	2.82
		35.0	12.0	2.05	14.4	2.35	16.8	2.61	18.0	2.73	20.4	2.94	22.8	3.20	25.2	3.53
		40.0	12.0	2.65	14.4	3.04	16.8	3.38	18.0	3.54	20.4	3.82	22.8	4.07	25.2	4.27
		43.0	12.0	3.02	14.4	3.47	16.8	3.86	18.0	4.05	20.4	4.37	22.8	4.66	25.2	4.91
		46.0	12.0	3.55	14.4	3.98	16.8	4.37	18.0	4.55	20.4	4.89	22.8	5.18	25.2	5.45
52.0	12.0	4.24	14.1	4.86	15.5	4.95	16.2	5.01	17.9	5.14	19.7	5.29	21.7	5.45		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	9.0	0.30	10.8	0.57	12.6	0.84	13.5	0.98	15.3	1.24	17.1	1.51	18.9	1.76
		-5.0	9.0	0.30	10.8	0.57	12.6	0.84	13.5	0.98	15.3	1.25	17.1	1.51	18.9	1.77
		0.0	9.0	0.30	10.8	0.57	12.6	0.85	13.5	0.98	15.3	1.25	17.1	1.51	18.9	1.77
		5.0	9.0	0.30	10.8	0.58	12.6	0.85	13.5	0.98	15.3	1.25	17.1	1.52	18.9	1.78
		10.0	9.0	0.31	10.8	0.58	12.6	0.85	13.5	0.99	15.3	1.26	17.1	1.52	18.9	1.78
		15.0	9.0	0.31	10.8	0.58	12.6	0.86	13.5	0.99	15.3	1.26	17.1	1.53	18.9	1.79
		20.0	9.0	0.32	10.8	0.59	12.6	0.86	13.5	1.00	15.3	1.28	17.1	1.54	18.9	1.80
		25.0	9.0	0.33	10.8	0.60	12.6	0.88	13.5	1.02	15.3	1.29	17.1	1.57	18.9	1.84
		30.0	9.0	0.37	10.8	0.63	12.6	0.91	13.5	1.07	15.3	1.39	17.1	1.70	18.9	2.00
		35.0	9.0	1.35	10.8	1.52	12.6	1.72	13.5	1.86	15.3	2.12	17.1	2.38	18.9	2.64
		40.0	9.0	1.79	10.8	2.03	12.6	2.22	13.5	2.31	15.3	2.45	17.1	2.56	18.9	2.64
		43.0	9.0	2.07	10.8	2.35	12.6	2.58	13.5	2.68	15.3	2.85	17.1	2.99	18.9	3.09
		46.0	9.0	2.68	10.8	2.94	12.6	3.17	13.5	3.27	15.3	3.44	17.1	3.58	18.9	3.70
52.0	9.0	3.18	10.8	3.52	12.6	3.82	13.5	3.96	15.3	4.09	17.1	4.16	18.9	4.19		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-10. U-16ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	100%	-24.9	-25.0	34.1	11.58	33.2	11.38	31.5	10.96	30.6	10.74	27.9	10.02	26.0	9.49	21.0	7.99
		-19.8	-20.0	35.7	11.81	34.9	11.61	33.1	11.17	32.2	10.95	29.3	10.20	27.4	9.66	22.1	8.11
		-14.7	-15.0	38.1	12.18	37.2	11.96	35.3	11.51	34.3	11.27	31.3	10.48	29.2	9.91	23.7	8.30
		-9.6	-10.0	41.3	12.73	40.3	12.47	38.3	11.98	37.3	11.72	34.0	10.88	31.8	10.28	25.8	8.57
		-4.4	-5.0	45.5	13.35	44.4	13.12	42.2	12.62	41.1	12.35	37.5	11.45	35.0	10.79	28.4	8.94
		-1.8	-2.5	48.0	13.60	46.9	13.36	44.5	12.84	43.3	12.56	39.6	11.64	36.9	10.97	29.9	9.09
		0.8	0.0	50.8	13.82	49.6	13.56	47.1	13.02	45.8	12.73	41.8	11.78	39.1	11.09	31.5	9.09
		2.8	2.0	53.8	14.01	52.5	13.75	49.9	13.18	48.5	12.88	44.4	11.92	40.7	10.91	31.5	8.42
		6.0	5.0	57.4	13.75	55.6	13.27	51.9	12.32	50.0	11.86	44.4	10.49	40.7	9.60	31.5	7.46
		7.0	6.0	57.4	13.09	55.6	12.64	51.9	11.75	50.0	11.30	44.4	10.01	40.7	9.17	31.5	7.15
		8.6	7.5	57.4	12.12	55.6	11.70	51.9	10.89	50.0	10.49	44.4	9.32	40.7	8.56	31.5	6.71
		11.2	10.0	57.4	10.58	55.6	10.23	51.9	9.55	50.0	9.22	44.4	8.24	40.7	7.59	31.5	6.01
		16.4	15.0	57.4	7.89	55.6	7.67	51.9	7.22	50.0	7.00	44.4	6.32	40.7	5.87	31.5	4.72
24.0	18.0	57.4	6.46	55.6	6.28	51.9	5.92	50.0	5.74	44.4	5.18	40.7	4.80	31.5	3.84		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	90%	-24.9	-25.0	34.1	11.58	33.2	11.38	31.5	10.96	30.6	10.74	27.9	10.02	26.0	9.49	21.0	7.99
		-19.8	-20.0	35.7	11.81	34.9	11.61	33.1	11.17	32.2	10.95	29.3	10.20	27.4	9.66	22.1	8.11
		-14.7	-15.0	38.1	12.18	37.2	11.96	35.3	11.51	34.3	11.27	31.3	10.48	29.2	9.91	23.7	8.30
		-9.6	-10.0	41.3	12.73	40.3	12.47	38.3	11.98	37.3	11.72	34.0	10.88	31.8	10.28	25.8	8.57
		-4.4	-5.0	45.5	13.35	44.4	13.12	42.2	12.62	41.1	12.35	37.5	11.45	35.0	10.79	28.3	8.94
		-1.8	-2.5	48.0	13.60	46.9	13.36	44.5	12.84	43.3	12.56	39.6	11.64	36.7	10.97	28.3	8.12
		0.8	0.0	50.8	13.82	49.6	13.56	46.7	11.85	45.0	11.46	40.0	10.29	36.7	9.51	28.3	7.55
		2.8	2.0	51.7	11.88	50.0	11.54	46.7	10.84	45.0	10.50	40.0	9.43	36.7	8.78	28.3	7.08
		6.0	5.0	51.7	10.33	50.0	10.08	46.7	9.57	45.0	9.30	40.0	8.48	36.7	7.86	28.3	6.30
		7.0	6.0	51.7	10.13	50.0	9.83	46.7	9.25	45.0	8.96	40.0	8.09	36.7	7.50	28.3	6.03
		8.6	7.5	51.7	9.32	50.0	9.06	46.7	8.54	45.0	8.28	40.0	7.50	36.7	6.98	28.3	5.65
		11.2	10.0	51.7	8.05	50.0	7.84	46.7	7.43	45.0	7.23	40.0	6.60	36.7	6.17	28.3	5.06
		16.4	15.0	51.7	5.85	50.0	5.73	46.7	5.49	45.0	5.37	40.0	4.97	36.7	4.69	28.3	3.92
24.0	18.0	51.7	5.78	50.0	5.61	46.7	5.29	45.0	5.12	40.0	4.63	36.7	4.31	28.3	3.49		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	80%	-24.9	-25.0	34.1	11.58	33.2	11.38	31.5	10.96	30.6	10.74	27.9	10.02	26.0	9.49	21.0	7.99
		-19.8	-20.0	35.7	11.81	34.9	11.61	33.1	11.17	32.2	10.95	29.3	10.20	27.4	9.66	22.1	8.11
		-14.7	-15.0	38.1	12.18	37.2	11.96	35.3	11.51	34.3	11.27	31.3	10.48	29.2	9.91	23.7	8.30
		-9.6	-10.0	41.3	12.73	40.3	12.47	38.3	11.98	37.3	11.72	34.0	10.88	31.8	10.28	25.2	8.57
		-4.4	-5.0	45.5	13.35	44.4	13.12	41.5	10.68	40.0	10.38	35.6	9.46	32.6	8.83	25.2	7.18
		-1.8	-2.5	45.9	10.67	44.4	10.42	41.5	9.90	40.0	9.63	35.6	8.81	32.6	8.24	25.2	6.78
		0.8	0.0	45.9	9.75	44.4	9.51	41.5	9.10	40.0	8.89	35.6	8.20	32.6	7.71	25.2	6.36
		2.8	2.0	45.9	8.97	44.4	8.80	41.5	8.43	40.0	8.24	35.6	7.62	32.6	7.17	25.2	5.94
		6.0	5.0	45.9	7.93	44.4	7.79	41.5	7.49	40.0	7.32	35.6	6.80	32.6	6.39	25.2	5.28
		7.0	6.0	45.9	7.72	44.4	7.55	41.5	7.21	40.0	7.03	35.6	6.48	32.6	6.09	25.2	5.06
		8.6	7.5	45.9	7.05	44.4	6.91	41.5	6.62	40.0	6.47	35.6	5.99	32.6	5.65	25.2	4.73
		11.2	10.0	45.9	6.02	44.4	5.92	41.5	5.71	40.0	5.59	35.6	5.23	32.6	4.97	25.2	4.23
		16.4	15.0	45.9	5.21	44.4	5.07	41.5	4.78	40.0	4.63	35.6	4.20	32.6	3.91	25.2	3.25
24.0	18.0	45.9	5.21	44.4	5.07	41.5	4.78	40.0	4.63	35.6	4.20	32.6	3.91	25.2	3.18		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	70%	-24.9	-25.0	34.1	11.58	33.2	11.38	31.5	10.96	30.6	10.74	27.9	10.02	26.0	9.49	21.0	7.99
		-19.8	-20.0	35.7	11.81	34.9	11.61	33.1	11.17	32.2	10.95	29.3	10.20	27.4	9.66	22.0	8.11
		-14.7	-15.0	38.1	12.18	37.2	11.96	35.3	11.51	34.3	11.27	31.1	10.48	28.5	9.91	22.0	7.12
		-9.6	-10.0	40.2	9.97	38.9	9.77	36.3	9.36	35.0	9.15	31.1	8.46	28.5	7.97	22.0	6.65
		-4.4	-5.0	40.2	8.71	38.9	8.58	36.3	8.28	35.0	8.12	31.1	7.58	28.5	7.17	22.0	6.02
		-1.8	-2.5	40.2	8.13	38.9	8.00	36.3	7.74	35.0	7.59	31.1	7.10	28.5	6.73	22.0	5.68
		0.8	0.0	40.2	7.51	38.9	7.40	36.3	7.17	35.0	7.04	31.1	6.60	28.5	6.27	22.0	5.32
		2.8	2.0	40.2	6.89	38.9	6.80	36.3	6.61	35.0	6.49	31.1	6.11	28.5	5.82	22.0	4.96
		6.0	5.0	40.2	6.02	38.9	5.95	36.3	5.80	35.0	5.72	31.1	5.40	28.5	5.15	22.0	4.40
		7.0	6.0	40.2	5.79	38.9	5.71	36.3	5.54	35.0	5.45	31.1	5.14	28.5	4.90	22.0	4.21
		8.6	7.5	40.2	5.26	38.9	5.20	36.3	5.07	35.0	4.99	31.1	4.74	28.5	4.54	22.0	3.94
		11.2	10.0	40.2	4.65	38.9	4.52	36.3	4.34	35.0	4.30	31.1	4.12	28.5	3.98	22.0	3.51
		16.4	15.0	40.2	4.65	38.9	4.52	36.3	4.27	35.0	4.14	31.1	3.76	28.5	3.51	22.0	2.87
24.0	18.0	40.2	4.65	38.9	4.52	36.3	4.27	35.0	4.14	31.1	3.76	28.5	3.51	22.0	2.87		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

U-16ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	34.1	11.58	33.2	11.38	31.1	9.18	30.0	8.99	26.7	8.35	24.4	7.82	18.9	6.45
		-19.8	-20.0	34.4	9.12	33.3	8.98	31.1	8.66	30.0	8.49	26.7	7.94	24.4	7.52	18.9	6.23
		-14.7	-15.0	34.4	8.41	33.3	8.30	31.1	8.05	30.0	7.91	26.7	7.43	24.4	7.07	18.9	5.99
		-9.6	-10.0	34.4	7.66	33.3	7.57	31.1	7.36	30.0	7.24	26.7	6.82	24.4	6.50	18.9	5.54
		-4.4	-5.0	34.4	6.77	33.3	6.70	31.1	6.53	30.0	6.44	26.7	6.10	24.4	5.83	18.9	5.01
		-1.8	-2.5	34.4	6.28	33.3	6.22	31.1	6.08	30.0	6.00	26.7	5.70	24.4	5.46	18.9	4.72
		0.8	0.0	34.4	5.76	33.3	5.72	31.1	5.61	30.0	5.54	26.7	5.28	24.4	5.07	18.9	4.41
		2.8	2.0	34.4	5.25	33.3	5.22	31.1	5.14	30.0	5.08	26.7	4.87	24.4	4.69	18.9	4.11
		6.0	5.0	34.4	4.53	33.3	4.51	31.1	4.46	30.0	4.42	26.7	4.26	24.4	4.12	18.9	3.61
		7.0	6.0	34.4	4.29	33.3	4.27	31.1	4.22	30.0	4.18	26.7	4.04	24.4	3.91	18.9	3.48
		8.6	7.5	34.4	4.09	33.3	3.98	31.1	3.85	30.0	3.82	26.7	3.72	24.4	3.62	18.9	3.26
		11.2	10.0	34.4	4.09	33.3	3.98	31.1	3.76	30.0	3.65	26.7	3.33	24.4	3.17	18.9	2.91
		16.4	15.0	34.4	4.09	33.3	3.98	31.1	3.76	30.0	3.65	26.7	3.33	24.4	3.11	18.9	2.56
24.0	18.0	34.4	4.09	33.3	3.98	31.1	3.76	30.0	3.65	26.7	3.33	24.4	3.11	18.9	2.56		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	28.7	7.46	27.8	7.37	25.9	7.18	25.0	7.07	22.2	6.69	20.4	6.38	15.7	5.36
		-19.8	-20.0	28.7	7.07	27.8	7.00	25.9	6.82	25.0	6.72	22.2	6.37	20.4	6.10	15.7	5.22
		-14.7	-15.0	28.7	6.56	27.8	6.50	25.9	6.36	25.0	6.27	22.2	5.96	20.4	5.71	15.7	4.94
		-9.6	-10.0	28.7	5.94	27.8	5.90	25.9	5.78	25.0	5.71	22.2	5.46	20.4	5.24	15.7	4.56
		-4.4	-5.0	28.7	5.22	27.8	5.19	25.9	5.11	25.0	5.06	22.2	4.86	20.4	4.69	15.7	4.12
		-1.8	-2.5	28.7	4.81	27.8	4.80	25.9	4.74	25.0	4.70	22.2	4.53	20.4	4.38	15.7	3.87
		0.8	0.0	28.7	4.40	27.8	4.39	25.9	4.35	25.0	4.32	22.2	4.19	20.4	4.07	15.7	3.62
		2.8	2.0	28.7	3.99	27.8	3.99	25.9	3.97	25.0	3.96	22.2	3.86	20.4	3.76	15.7	3.37
		6.0	5.0	28.7	3.53	27.8	3.43	25.9	3.38	25.0	3.38	22.2	3.32	20.4	3.25	15.7	2.95
		7.0	6.0	28.7	3.53	27.8	3.43	25.9	3.25	25.0	3.19	22.2	3.15	20.4	3.10	15.7	2.85
		8.6	7.5	28.7	3.53	27.8	3.43	25.9	3.25	25.0	3.16	22.2	2.91	20.4	2.87	15.7	2.67
		11.2	10.0	28.7	3.53	27.8	3.43	25.9	3.25	25.0	3.16	22.2	2.89	20.4	2.71	15.7	2.39
		16.4	15.0	28.7	3.53	27.8	3.43	25.9	3.25	25.0	3.16	22.2	2.89	20.4	2.71	15.7	2.25
24.0	18.0	28.7	3.53	27.8	3.43	25.9	3.25	25.0	3.16	22.2	2.89	20.4	2.71	15.7	2.25		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	23.0	5.74	22.2	5.69	20.7	5.58	20.0	5.51	17.8	5.26	16.3	5.06	12.6	4.36
		-19.8	-20.0	23.0	5.43	22.2	5.39	20.7	5.30	20.0	5.24	17.8	5.01	16.3	4.82	12.6	4.22
		-14.7	-15.0	23.0	5.03	22.2	5.00	20.7	4.93	20.0	4.88	17.8	4.69	16.3	4.52	12.6	3.97
		-9.6	-10.0	23.0	4.54	22.2	4.52	20.7	4.47	20.0	4.43	17.8	4.28	16.3	4.15	12.6	3.67
		-4.4	-5.0	23.0	3.97	22.2	3.96	20.7	3.94	20.0	3.92	17.8	3.81	16.3	3.71	12.6	3.32
		-1.8	-2.5	23.0	3.65	22.2	3.66	20.7	3.65	20.0	3.63	17.8	3.55	16.3	3.47	12.6	3.13
		0.8	0.0	23.0	3.33	22.2	3.34	20.7	3.34	20.0	3.34	17.8	3.28	16.3	3.21	12.6	2.92
		2.8	2.0	23.0	2.98	22.2	2.99	20.7	3.01	20.0	3.01	17.8	2.98	16.3	2.93	12.6	2.70
		6.0	5.0	23.0	2.96	22.2	2.89	20.7	2.74	20.0	2.67	17.8	2.56	16.3	2.54	12.6	2.39
		7.0	6.0	23.0	2.96	22.2	2.89	20.7	2.74	20.0	2.67	17.8	2.45	16.3	2.43	12.6	2.30
		8.6	7.5	23.0	2.96	22.2	2.89	20.7	2.74	20.0	2.67	17.8	2.45	16.3	2.31	12.6	2.17
		11.2	10.0	23.0	2.96	22.2	2.89	20.7	2.74	20.0	2.67	17.8	2.45	16.3	2.31	12.6	1.95
		16.4	15.0	23.0	2.96	22.2	2.89	20.7	2.74	20.0	2.67	17.8	2.45	16.3	2.31	12.6	1.95
24.0	18.0	23.0	2.96	22.2	2.89	20.7	2.74	20.0	2.67	17.8	2.45	16.3	2.31	12.6	1.95		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	17.2	4.26	16.7	4.24	15.6	4.18	15.0	4.14	13.3	3.99	12.2	3.85	9.4	3.40
		-19.8	-20.0	17.2	4.03	16.7	4.01	15.6	3.97	15.0	3.93	13.3	3.80	12.2	3.68	9.4	3.27
		-14.7	-15.0	17.2	3.73	16.7	3.72	15.6	3.69	15.0	3.66	13.3	3.55	12.2	3.45	9.4	3.09
		-9.6	-10.0	17.2	3.37	16.7	3.37	15.6	3.35	15.0	3.33	13.3	3.25	12.2	3.17	9.4	2.86
		-4.4	-5.0	17.2	2.92	16.7	2.93	15.6	2.94	15.0	2.93	13.3	2.88	12.2	2.82	9.4	2.58
		-1.8	-2.5	17.2	2.67	16.7	2.68	15.6	2.70	15.0	2.70	13.3	2.67	12.2	2.63	9.4	2.43
		0.8	0.0	17.2	2.40	16.7	2.42	15.6	2.45	15.0	2.46	13.3	2.46	12.2	2.43	9.4	2.27
		2.8	2.0	17.2	2.40	16.7	2.34	15.6	2.24	15.0	2.23	13.3	2.24	12.2	2.23	9.4	2.12
		6.0	5.0	17.2	2.40	16.7	2.34	15.6	2.24	15.0	2.18	13.3	2.02	12.2	1.96	9.4	1.90
		7.0	6.0	17.2	2.40	16.7	2.34	15.6	2.24	15.0	2.18	13.3	2.02	12.2	1.91	9.4	1.83
		8.6	7.5	17.2	2.40	16.7	2.34	15.6	2.24	15.0	2.18	13.3	2.02	12.2	1.91	9.4	1.73
		11.2	10.0	17.2	2.40	16.7	2.34	15.6	2.24	15.0	2.18	13.3	2.02	12.2	1.91	9.4	1.64
		16.4	15.0	17.2	2.40	16.7	2.34	15.6	2.24	15.0	2.18	13.3	2.02	12.2	1.91	9.4	1.64
24.0	18.0	17.2	2.40	16.7	2.34	15.6	2.24	15.0	2.18	13.3	2.02	12.2	1.91	9.4	1.64		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-11. U-18ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	33.3	3.67	40.0	4.40	46.7	5.12	50.0	5.49	56.7	6.22	63.3	6.95	70.0	7.68
		-5.0	33.3	3.68	40.0	4.41	46.7	5.14	50.0	5.51	56.7	6.24	63.3	6.97	70.0	7.70
		0.0	33.3	3.70	40.0	4.43	46.7	5.17	50.0	5.54	56.7	6.27	63.3	7.00	70.0	7.73
		5.0	33.3	3.73	40.0	4.47	46.7	5.20	50.0	5.57	56.7	6.32	63.3	7.10	70.0	7.86
		10.0	33.3	3.76	40.0	4.51	46.7	5.30	50.0	5.71	56.7	6.55	63.3	7.41	70.0	8.23
		15.0	33.3	3.91	40.0	4.81	46.7	5.77	50.0	6.26	56.7	7.27	63.3	8.31	70.0	9.22
		20.0	33.3	4.98	40.0	6.22	46.7	7.29	50.0	7.87	56.7	9.11	63.3	10.47	70.0	11.95
		25.0	33.3	6.46	40.0	7.71	46.7	9.08	50.0	9.82	56.7	11.37	63.3	13.06	70.0	14.87
		30.0	33.3	7.80	40.0	9.36	46.7	11.04	50.0	11.93	56.7	13.82	63.3	15.84	70.0	17.99
		35.0	33.3	9.25	40.0	11.13	46.7	13.15	50.0	14.21	56.7	16.45	63.3	18.83	67.7	19.88
		40.0	33.3	10.81	40.0	13.04	46.7	15.42	50.0	16.67	56.7	19.29	60.0	19.88	62.5	19.88
		43.0	33.3	11.80	40.0	14.25	46.7	16.87	50.0	18.24	54.8	19.88	56.8	19.48	57.9	18.52
46.0	33.0	12.73	39.6	15.40	42.1	15.64	42.5	15.26	43.6	14.61	45.1	14.10	46.8	13.70		
52.0	14.4	6.10	15.7	6.15	17.2	6.25	18.0	6.31	19.8	6.44	21.9	6.59	24.1	6.75		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	30.0	2.90	36.0	3.66	42.0	4.40	45.0	4.76	51.0	5.47	57.0	6.17	63.0	6.85
		-5.0	30.0	2.91	36.0	3.67	42.0	4.41	45.0	4.78	51.0	5.49	57.0	6.19	63.0	6.88
		0.0	30.0	2.93	36.0	3.69	42.0	4.44	45.0	4.80	51.0	5.52	57.0	6.22	63.0	6.90
		5.0	30.0	2.96	36.0	3.72	42.0	4.47	45.0	4.83	51.0	5.55	57.0	6.25	63.0	6.95
		10.0	30.0	3.00	36.0	3.76	42.0	4.51	45.0	4.88	51.0	5.64	57.0	6.39	63.0	7.14
		15.0	30.0	3.06	36.0	3.89	42.0	4.74	45.0	5.16	51.0	6.01	57.0	6.85	63.0	7.68
		20.0	30.0	3.67	36.0	4.74	42.0	5.80	45.0	6.31	51.0	7.31	57.0	8.24	63.0	9.21
		25.0	30.0	5.49	36.0	6.49	42.0	7.52	45.0	8.06	51.0	9.15	57.0	10.28	63.0	11.44
		30.0	30.0	6.71	36.0	7.92	42.0	9.17	45.0	9.80	51.0	11.08	57.0	12.40	63.0	13.76
		35.0	30.0	8.29	36.0	9.76	42.0	11.26	45.0	12.03	51.0	13.57	57.0	15.16	63.0	16.81
		40.0	30.0	9.65	36.0	11.35	42.0	13.08	45.0	13.95	51.0	15.74	57.0	17.61	62.5	19.88
		43.0	30.0	10.49	36.0	12.34	42.0	14.21	45.0	15.16	51.0	17.13	56.8	19.48	57.9	18.52
46.0	30.0	11.14	36.0	13.27	42.0	15.51	42.5	15.26	43.6	14.61	45.1	14.10	46.8	13.70		
52.0	14.4	6.10	15.7	6.15	17.2	6.25	18.0	6.31	19.8	6.44	21.9	6.59	24.1	6.75		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	26.7	2.47	32.0	3.16	37.3	3.83	40.0	4.16	45.3	4.81	50.7	5.44	56.0	6.06
		-5.0	26.7	2.48	32.0	3.17	37.3	3.84	40.0	4.17	45.3	4.82	50.7	5.46	56.0	6.08
		0.0	26.7	2.50	32.0	3.19	37.3	3.86	40.0	4.19	45.3	4.84	50.7	5.48	56.0	6.11
		5.0	26.7	2.52	32.0	3.21	37.3	3.89	40.0	4.22	45.3	4.87	50.7	5.51	56.0	6.13
		10.0	26.7	2.55	32.0	3.25	37.3	3.93	40.0	4.26	45.3	4.91	50.7	5.55	56.0	6.19
		15.0	26.7	2.61	32.0	3.30	37.3	4.00	40.0	4.35	45.3	5.05	50.7	5.75	56.0	6.43
		20.0	26.7	2.84	32.0	3.67	37.3	4.49	40.0	4.90	45.3	5.69	50.7	6.46	56.0	7.20
		25.0	26.7	4.70	32.0	5.45	37.3	6.21	40.0	6.60	45.3	7.39	50.7	8.20	56.0	9.01
		30.0	26.7	5.76	32.0	6.70	37.3	7.65	40.0	8.12	45.3	9.08	50.7	10.04	56.0	11.01
		35.0	26.7	7.15	32.0	8.31	37.3	9.48	40.0	10.06	45.3	11.23	50.7	12.39	56.0	13.57
		40.0	26.7	8.35	32.0	9.71	37.3	11.06	40.0	11.73	45.3	13.08	50.7	14.44	56.0	15.81
		43.0	26.7	9.09	32.0	10.57	37.3	12.05	40.0	12.78	45.3	14.25	50.7	15.74	56.0	17.26
46.0	26.7	9.60	32.0	11.26	37.3	12.96	40.0	13.83	43.6	14.61	45.1	14.10	46.8	13.70		
52.0	14.4	6.10	15.7	6.15	17.2	6.25	18.0	6.31	19.8	6.44	21.9	6.59	24.1	6.75		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	23.3	2.04	28.0	2.65	32.7	3.25	35.0	3.54	39.7	4.12	44.3	4.69	49.0	5.25
		-5.0	23.3	2.05	28.0	2.66	32.7	3.26	35.0	3.55	39.7	4.13	44.3	4.71	49.0	5.27
		0.0	23.3	2.06	28.0	2.67	32.7	3.27	35.0	3.57	39.7	4.15	44.3	4.72	49.0	5.28
		5.0	23.3	2.08	28.0	2.69	32.7	3.30	35.0	3.59	39.7	4.18	44.3	4.75	49.0	5.31
		10.0	23.3	2.11	28.0	2.72	32.7	3.33	35.0	3.62	39.7	4.21	44.3	4.78	49.0	5.34
		15.0	23.3	2.15	28.0	2.77	32.7	3.37	35.0	3.67	39.7	4.25	44.3	4.83	49.0	5.41
		20.0	23.3	2.23	28.0	2.88	32.7	3.54	35.0	3.86	39.7	4.50	44.3	5.12	49.0	5.73
		25.0	23.3	3.35	28.0	4.07	32.7	4.74	35.0	5.07	39.7	5.69	44.3	6.29	49.0	6.87
		30.0	23.3	4.89	28.0	5.60	32.7	6.29	35.0	6.63	39.7	7.31	44.3	7.98	49.0	8.64
		35.0	23.3	6.09	28.0	6.99	32.7	7.87	35.0	8.30	39.7	9.15	44.3	9.98	49.0	10.80
		40.0	23.3	7.14	28.0	8.20	32.7	9.23	35.0	9.74	39.7	10.74	44.3	11.71	49.0	12.67
		43.0	23.3	7.79	28.0	8.95	32.7	10.08	35.0	10.63	39.7	11.72	44.3	12.79	49.0	13.85
46.0	23.3	8.20	28.0	9.46	32.7	10.73	35.0	11.36	39.7	12.63	44.3	13.44	46.8	13.70		
52.0	14.4	6.10	15.7	6.15	17.2	6.25	18.0	6.31	19.8	6.44	21.9	6.59	24.1	6.75		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

U-18ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	20.0	1.60	24.0	2.13	28.0	2.65	30.0	2.91	34.0	3.42	38.0	3.92	42.0	4.41
		-5.0	20.0	1.61	24.0	2.14	28.0	2.66	30.0	2.92	34.0	3.43	38.0	3.93	42.0	4.42
		0.0	20.0	1.62	24.0	2.15	28.0	2.68	30.0	2.93	34.0	3.44	38.0	3.94	42.0	4.44
		5.0	20.0	1.63	24.0	2.17	28.0	2.69	30.0	2.95	34.0	3.46	38.0	3.96	42.0	4.46
		10.0	20.0	1.65	24.0	2.19	28.0	2.72	30.0	2.98	34.0	3.49	38.0	3.99	42.0	4.48
		15.0	20.0	1.69	24.0	2.23	28.0	2.75	30.0	3.01	34.0	3.53	38.0	4.03	42.0	4.52
		20.0	20.0	1.75	24.0	2.28	28.0	2.81	30.0	3.07	34.0	3.58	38.0	4.10	42.0	4.60
		25.0	20.0	2.11	24.0	2.69	28.0	3.24	30.0	3.50	34.0	4.03	38.0	4.54	42.0	5.03
		30.0	20.0	4.12	24.0	4.62	28.0	5.10	30.0	5.33	34.0	5.78	38.0	6.20	42.0	6.61
		35.0	20.0	5.13	24.0	5.79	28.0	6.42	30.0	6.72	34.0	7.30	38.0	7.86	42.0	8.39
		40.0	20.0	6.02	24.0	6.82	28.0	7.58	30.0	7.95	34.0	8.65	38.0	9.33	42.0	9.97
		43.0	20.0	6.57	24.0	7.46	28.0	8.30	30.0	8.70	34.0	9.48	38.0	10.23	42.0	10.94
46.0	20.0	6.95	24.0	7.87	28.0	8.78	30.0	9.22	34.0	10.09	38.0	10.94	42.0	11.77		
52.0	14.4	6.10	15.7	6.15	17.2	6.25	18.0	6.31	19.8	6.44	21.9	6.59	24.1	6.75		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	16.7	1.15	20.0	1.60	23.3	2.05	25.0	2.26	28.3	2.70	31.7	3.12	35.0	3.54
		-5.0	16.7	1.16	20.0	1.61	23.3	2.05	25.0	2.27	28.3	2.71	31.7	3.13	35.0	3.55
		0.0	16.7	1.17	20.0	1.62	23.3	2.06	25.0	2.28	28.3	2.72	31.7	3.14	35.0	3.56
		5.0	16.7	1.18	20.0	1.63	23.3	2.08	25.0	2.30	28.3	2.73	31.7	3.16	35.0	3.58
		10.0	16.7	1.20	20.0	1.65	23.3	2.10	25.0	2.32	28.3	2.75	31.7	3.18	35.0	3.60
		15.0	16.7	1.22	20.0	1.68	23.3	2.12	25.0	2.34	28.3	2.78	31.7	3.21	35.0	3.63
		20.0	16.7	1.27	20.0	1.72	23.3	2.17	25.0	2.39	28.3	2.82	31.7	3.25	35.0	3.67
		25.0	16.7	1.37	20.0	1.82	23.3	2.26	25.0	2.48	28.3	3.32	31.7	3.34	35.0	3.76
		30.0	16.7	3.43	20.0	3.67	23.3	3.59	25.0	3.64	28.3	3.83	31.7	4.09	35.0	4.39
		35.0	16.7	4.26	20.0	4.72	23.3	5.14	25.0	5.34	28.3	5.70	31.7	6.04	35.0	6.35
		40.0	16.7	5.00	20.0	5.57	23.3	6.10	25.0	6.35	28.3	6.82	31.7	7.25	35.0	7.64
		43.0	16.7	5.46	20.0	6.10	23.3	6.70	25.0	6.97	28.3	7.50	31.7	7.99	35.0	8.44
46.0	16.7	5.82	20.0	6.48	23.3	7.10	25.0	7.39	28.3	7.96	31.7	8.49	35.0	8.99		
52.0	14.4	6.10	15.7	6.15	17.2	6.25	18.0	6.31	19.8	6.44	21.9	6.59	24.1	6.75		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	13.3	0.70	16.0	1.06	18.7	1.42	20.0	1.60	22.7	1.96	25.3	2.31	28.0	2.66
		-5.0	13.3	0.70	16.0	1.07	18.7	1.43	20.0	1.61	22.7	1.96	25.3	2.32	28.0	2.67
		0.0	13.3	0.71	16.0	1.08	18.7	1.44	20.0	1.62	22.7	1.97	25.3	2.33	28.0	2.68
		5.0	13.3	0.72	16.0	1.09	18.7	1.45	20.0	1.63	22.7	1.98	25.3	2.34	28.0	2.69
		10.0	13.3	0.73	16.0	1.10	18.7	1.46	20.0	1.64	22.7	2.00	25.3	2.35	28.0	2.71
		15.0	13.3	0.75	16.0	1.12	18.7	1.48	20.0	1.66	22.7	2.02	25.3	2.38	28.0	2.74
		20.0	13.3	0.78	16.0	1.15	18.7	1.52	20.0	1.69	22.7	2.05	25.3	2.41	28.0	2.77
		25.0	13.3	0.85	16.0	1.22	18.7	1.57	20.0	1.75	22.7	2.10	25.3	2.46	28.0	2.82
		30.0	13.3	1.56	16.0	1.62	18.7	1.84	20.0	1.98	22.7	2.27	25.3	2.65	28.0	3.10
		35.0	13.3	3.49	16.0	3.78	18.7	4.04	20.0	4.15	22.7	4.36	25.3	4.61	28.0	4.94
		40.0	13.3	4.07	16.0	4.45	18.7	4.79	20.0	4.95	22.7	5.22	25.3	5.46	28.0	5.67
		43.0	13.3	4.43	16.0	4.87	18.7	5.26	20.0	5.44	22.7	5.76	25.3	6.05	28.0	6.29
46.0	13.3	4.83	16.0	5.26	18.7	5.66	20.0	5.84	22.7	6.18	25.3	6.48	28.0	6.75		
52.0	13.3	5.53	15.7	6.15	17.2	6.25	18.0	6.31	19.8	6.44	21.9	6.59	24.1	6.75		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	10.0	0.24	12.0	0.51	14.0	0.80	15.0	0.94	17.0	1.22	19.0	1.50	21.0	1.77
		-5.0	10.0	0.24	12.0	0.52	14.0	0.80	15.0	0.95	17.0	1.23	19.0	1.51	21.0	1.78
		0.0	10.0	0.24	12.0	0.52	14.0	0.81	15.0	0.95	17.0	1.24	19.0	1.52	21.0	1.79
		5.0	10.0	0.25	12.0	0.53	14.0	0.82	15.0	0.96	17.0	1.25	19.0	1.53	21.0	1.81
		10.0	10.0	0.26	12.0	0.54	14.0	0.83	15.0	0.98	17.0	1.27	19.0	1.55	21.0	1.83
		15.0	10.0	0.27	12.0	0.55	14.0	0.85	15.0	1.00	17.0	1.29	19.0	1.58	21.0	1.86
		20.0	10.0	0.30	12.0	0.58	14.0	0.87	15.0	1.03	17.0	1.33	19.0	1.62	21.0	1.90
		25.0	10.0	0.34	12.0	0.62	14.0	0.92	15.0	1.08	17.0	1.38	19.0	1.67	21.0	1.98
		30.0	10.0	0.46	12.0	0.71	14.0	1.00	15.0	1.19	17.0	1.59	19.0	2.00	21.0	2.38
		35.0	10.0	2.80	12.0	2.97	14.0	3.17	15.0	3.30	17.0	3.56	19.0	3.81	21.0	4.06
		40.0	10.0	3.23	12.0	3.46	14.0	3.66	15.0	3.74	17.0	3.87	19.0	3.98	21.0	4.06
		43.0	10.0	3.50	12.0	3.78	14.0	4.00	15.0	4.10	17.0	4.27	19.0	4.40	21.0	4.51
46.0	10.0	3.95	12.0	4.21	14.0	4.44	15.0	4.54	17.0	4.72	19.0	4.86	21.0	4.98		
52.0	10.0	4.45	12.0	4.80	14.0	5.10	15.0	5.24	17.0	5.38	19.0	5.45	21.0	5.47		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-12. U-18ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	43.0	15.56	41.9	15.27	39.6	14.64	38.5	14.31	35.0	13.25	32.5	12.49	26.1	10.36
		-19.8	-20.0	45.2	15.94	44.0	15.63	41.7	14.97	40.5	14.63	36.8	13.53	34.2	12.74	27.5	10.54
		-14.7	-15.0	48.2	16.50	47.0	16.17	44.5	15.47	43.3	15.11	39.3	13.95	36.6	13.11	29.4	10.81
		-9.6	-10.0	52.4	17.28	51.1	16.92	48.4	16.17	47.0	15.77	42.8	14.52	39.8	13.63	32.0	11.17
		-4.4	-5.0	56.8	17.92	56.3	17.92	53.3	17.06	51.8	16.60	47.1	15.18	43.9	14.18	35.3	11.62
		-1.8	-2.5	58.9	17.92	58.2	17.92	56.2	17.63	54.6	17.17	49.7	15.72	45.6	14.42	35.3	11.14
		0.8	0.0	61.6	17.92	60.8	17.92	58.1	17.31	56.0	16.65	49.8	14.71	45.6	13.45	35.3	10.39
		2.8	2.0	64.3	17.75	62.2	17.14	58.1	15.93	56.0	15.33	49.8	13.57	45.6	12.43	35.3	9.64
		6.0	5.0	64.3	15.49	62.2	14.97	58.1	13.94	56.0	13.43	49.8	11.94	45.6	10.93	35.3	8.54
		7.0	6.0	64.3	14.76	62.2	14.27	58.1	13.30	56.0	12.80	49.8	11.38	45.6	10.46	35.3	8.19
		8.6	7.5	64.3	13.66	62.2	13.21	58.1	12.33	56.0	11.90	49.8	10.61	45.6	9.76	35.3	7.69
		11.2	10.0	64.3	11.97	62.2	11.59	58.1	10.86	56.0	10.49	49.8	9.41	45.6	8.69	35.3	6.90
		16.4	15.0	64.3	8.99	62.2	8.75	58.1	8.24	56.0	7.99	49.8	7.23	45.6	6.71	35.3	5.38
24.0	18.0	64.3	7.35	62.2	7.14	58.1	6.71	56.0	6.50	49.8	5.86	45.6	5.43	35.3	4.36		
100%	90%	-24.9	-25.0	43.0	15.56	41.9	15.27	39.6	14.64	38.5	14.31	35.0	13.25	32.5	12.49	26.1	10.36
		-19.8	-20.0	45.2	15.94	44.0	15.63	41.7	14.97	40.5	14.63	36.8	13.53	34.2	12.74	27.5	10.54
		-14.7	-15.0	48.2	16.50	47.0	16.17	44.5	15.47	43.3	15.11	39.3	13.95	36.6	13.11	29.4	10.81
		-9.6	-10.0	52.4	17.28	51.1	16.92	48.4	16.17	47.0	15.77	42.8	14.52	39.8	13.63	31.7	11.17
		-4.4	-5.0	56.8	17.92	56.0	16.69	52.3	15.65	50.4	15.13	44.8	13.57	41.1	12.53	31.7	9.91
		-1.8	-2.5	57.9	15.98	56.0	15.51	52.3	14.56	50.4	14.09	44.8	12.67	41.1	11.71	31.7	9.30
		0.8	0.0	57.9	14.70	56.0	14.28	52.3	13.43	50.4	13.00	44.8	11.72	41.1	10.85	31.7	8.66
		2.8	2.0	57.9	13.42	56.0	13.05	52.3	12.29	50.4	11.92	44.8	10.77	41.1	10.00	31.7	8.07
		6.0	5.0	57.9	11.68	56.0	11.40	52.3	10.83	50.4	10.54	44.8	9.61	41.1	8.94	31.7	7.19
		7.0	6.0	57.9	11.37	56.0	11.06	52.3	10.44	50.4	10.13	44.8	9.18	41.1	8.54	31.7	6.89
		8.6	7.5	57.9	10.47	56.0	10.20	52.3	9.65	50.4	9.37	44.8	8.53	41.1	7.95	31.7	6.46
		11.2	10.0	57.9	9.07	56.0	8.85	52.3	8.42	50.4	8.19	44.8	7.51	41.1	7.03	31.7	5.78
		16.4	15.0	57.9	6.69	56.0	6.50	52.3	6.23	50.4	6.09	44.8	5.65	41.1	5.33	31.7	4.45
24.0	18.0	57.9	6.69	56.0	6.50	52.3	6.11	50.4	5.92	44.8	5.35	41.1	4.96	31.7	4.00		
100%	80%	-24.9	-25.0	43.0	15.56	41.9	15.27	39.6	14.64	38.5	14.31	35.0	13.25	32.5	12.49	26.1	10.36
		-19.8	-20.0	45.2	15.94	44.0	15.63	41.7	14.97	40.5	14.63	36.8	13.53	34.2	12.74	27.5	10.54
		-14.7	-15.0	48.2	16.50	47.0	16.17	44.5	15.47	43.3	15.11	39.3	13.95	36.6	13.11	28.2	9.71
		-9.6	-10.0	51.4	14.92	49.8	14.55	46.5	13.78	44.8	13.40	39.8	12.19	36.5	11.36	28.2	9.17
		-4.4	-5.0	51.4	13.09	49.8	12.78	46.5	12.15	44.8	11.82	39.8	10.81	36.5	10.10	28.2	8.24
		-1.8	-2.5	51.4	12.09	49.8	11.82	46.5	11.26	44.8	10.97	39.8	10.06	36.5	9.42	28.2	7.76
		0.8	0.0	51.4	11.03	49.8	10.82	46.5	10.36	44.8	10.12	39.8	9.35	36.5	8.80	28.2	7.27
		2.8	2.0	51.4	10.18	49.8	9.99	46.5	9.58	44.8	9.37	39.8	8.67	36.5	8.17	28.2	6.78
		6.0	5.0	51.4	8.97	49.8	8.81	46.5	8.47	44.8	8.29	39.8	7.70	36.5	7.25	28.2	6.01
		7.0	6.0	51.4	8.64	49.8	8.47	46.5	8.11	44.8	7.92	39.8	7.33	36.5	6.91	28.2	5.76
		8.6	7.5	51.4	7.90	49.8	7.75	46.5	7.45	44.8	7.29	39.8	6.79	36.5	6.42	28.2	5.39
		11.2	10.0	51.4	6.75	49.8	6.65	46.5	6.43	44.8	6.32	39.8	5.93	36.5	5.64	28.2	4.81
		16.4	15.0	51.4	6.03	49.8	5.86	46.5	5.52	44.8	5.35	39.8	4.83	36.5	4.49	28.2	3.66
24.0	18.0	51.4	6.03	49.8	5.86	46.5	5.52	44.8	5.35	39.8	4.83	36.5	4.49	28.2	3.64		
100%	70%	-24.9	-25.0	43.0	15.56	41.9	15.27	39.6	14.64	38.5	14.31	34.8	11.77	31.9	10.99	24.7	8.95
		-19.8	-20.0	45.0	13.69	43.6	13.40	40.7	12.78	39.2	12.45	34.8	11.36	31.9	10.53	24.7	8.60
		-14.7	-15.0	45.0	12.63	43.6	12.37	40.7	11.84	39.2	11.57	34.8	10.68	31.9	10.04	24.7	8.23
		-9.6	-10.0	45.0	11.34	43.6	11.13	40.7	10.69	39.2	10.45	34.8	9.69	31.9	9.16	24.7	7.65
		-4.4	-5.0	45.0	9.97	43.6	9.82	40.7	9.48	39.2	9.30	34.8	8.68	31.9	8.23	24.7	6.91
		-1.8	-2.5	45.0	9.28	43.6	9.14	40.7	8.84	39.2	8.67	34.8	8.12	31.9	7.71	24.7	6.50
		0.8	0.0	45.0	8.55	43.6	8.43	40.7	8.17	39.2	8.03	34.8	7.54	31.9	7.17	24.7	6.08
		2.8	2.0	45.0	7.83	43.6	7.73	40.7	7.52	39.2	7.39	34.8	6.97	31.9	6.64	24.7	5.65
		6.0	5.0	45.0	6.80	43.6	6.73	40.7	6.56	39.2	6.46	34.8	6.11	31.9	5.83	24.7	4.97
		7.0	6.0	45.0	6.45	43.6	6.38	40.7	6.22	39.2	6.12	34.8	5.80	31.9	5.55	24.7	4.79
		8.6	7.5	45.0	5.86	43.6	5.81	40.7	5.68	39.2	5.61	34.8	5.35	31.9	5.14	24.7	4.48
		11.2	10.0	45.0	5.37	43.6	5.22	40.7	4.92	39.2	4.83	34.8	4.65	31.9	4.50	24.7	3.98
		16.4	15.0	45.0	5.37	43.6	5.22	40.7	4.92	39.2	4.77	34.8	4.32	31.9	4.02	24.7	3.27
24.0	18.0	45.0	5.37	43.6	5.22	40.7	4.92	39.2	4.77	34.8	4.32	31.9	4.02	24.7	3.27		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

U-18ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	60%	-24.9	-25.0	38.6	11.09	37.3	10.91	34.8	10.53	33.6	10.32	29.9	9.61	27.4	9.05	21.2	7.45
		-19.8	-20.0	38.6	10.42	37.3	10.28	34.8	9.95	33.6	9.77	29.9	9.16	27.4	8.69	21.2	7.21
		-14.7	-15.0	38.6	9.70	37.3	9.57	34.8	9.28	33.6	9.12	29.9	8.57	27.4	8.15	21.2	6.91
		-9.6	-10.0	38.6	8.81	37.3	8.70	34.8	8.46	33.6	8.32	29.9	7.85	27.4	7.48	21.2	6.37
		-4.4	-5.0	38.6	7.76	37.3	7.68	34.8	7.49	33.6	7.38	29.9	7.00	27.4	6.69	21.2	5.75
		-1.8	-2.5	38.6	7.18	37.3	7.11	34.8	6.96	33.6	6.86	29.9	6.53	27.4	6.25	21.2	5.40
		0.8	0.0	38.6	6.57	37.3	6.52	34.8	6.40	33.6	6.33	29.9	6.04	27.4	5.80	21.2	5.04
		2.8	2.0	38.6	5.98	37.3	5.94	34.8	5.85	33.6	5.79	29.9	5.56	27.4	5.36	21.2	4.68
		6.0	5.0	38.6	5.09	37.3	5.07	34.8	5.00	33.6	4.96	29.9	4.80	27.4	4.64	21.2	4.08
		7.0	6.0	38.6	4.77	37.3	4.76	34.8	4.71	33.6	4.68	29.9	4.54	27.4	4.41	21.2	3.94
		8.6	7.5	38.6	4.70	37.3	4.58	34.8	4.32	33.6	4.28	29.9	4.18	27.4	4.08	21.2	3.69
		11.2	10.0	38.6	4.70	37.3	4.58	34.8	4.32	33.6	4.19	29.9	3.81	27.4	3.57	21.2	3.28
16.4	15.0	38.6	4.70	37.3	4.58	34.8	4.32	33.6	4.19	29.9	3.81	27.4	3.55	21.2	2.91		
24.0	18.0	38.6	4.70	37.3	4.58	34.8	4.32	33.6	4.19	29.9	3.81	27.4	3.55	21.2	2.91		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	50%	-24.9	-25.0	32.1	8.62	31.1	8.52	29.0	8.30	28.0	8.17	24.9	7.73	22.8	7.38	17.6	6.19
		-19.8	-20.0	32.1	8.16	31.1	8.08	29.0	7.88	28.0	7.77	24.9	7.36	22.8	7.03	17.6	6.02
		-14.7	-15.0	32.1	7.57	31.1	7.50	29.0	7.33	28.0	7.23	24.9	6.87	22.8	6.58	17.6	5.68
		-9.6	-10.0	32.1	6.83	31.1	6.78	29.0	6.65	28.0	6.57	24.9	6.28	22.8	6.03	17.6	5.24
		-4.4	-5.0	32.1	5.97	31.1	5.94	29.0	5.86	28.0	5.80	24.9	5.57	22.8	5.37	17.6	4.72
		-1.8	-2.5	32.1	5.50	31.1	5.48	29.0	5.42	28.0	5.38	24.9	5.19	22.8	5.02	17.6	4.43
		0.8	0.0	32.1	5.01	31.1	5.01	29.0	4.97	28.0	4.94	24.9	4.79	22.8	4.65	17.6	4.13
		2.8	2.0	32.1	4.52	31.1	4.52	29.0	4.50	28.0	4.47	24.9	4.36	22.8	4.24	17.6	3.81
		6.0	5.0	32.1	4.04	31.1	3.94	29.0	3.77	28.0	3.77	24.9	3.72	22.8	3.66	17.6	3.33
		7.0	6.0	32.1	4.04	31.1	3.94	29.0	3.72	28.0	3.62	24.9	3.53	22.8	3.48	17.6	3.21
		8.6	7.5	32.1	4.04	31.1	3.94	29.0	3.72	28.0	3.62	24.9	3.30	22.8	3.22	17.6	3.01
		11.2	10.0	32.1	4.04	31.1	3.94	29.0	3.72	28.0	3.62	24.9	3.30	22.8	3.08	17.6	2.68
16.4	15.0	32.1	4.04	31.1	3.94	29.0	3.72	28.0	3.62	24.9	3.30	22.8	3.08	17.6	2.55		
24.0	18.0	32.1	4.04	31.1	3.94	29.0	3.72	28.0	3.62	24.9	3.30	22.8	3.08	17.6	2.55		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	40%	-24.9	-25.0	25.7	6.62	24.9	6.56	23.2	6.43	22.4	6.36	19.9	6.07	18.3	5.83	14.1	5.02
		-19.8	-20.0	25.7	6.25	24.9	6.21	23.2	6.10	22.4	6.03	19.9	5.77	18.3	5.55	14.1	4.84
		-14.7	-15.0	25.7	5.78	24.9	5.75	23.2	5.66	22.4	5.61	19.9	5.39	18.3	5.19	14.1	4.56
		-9.6	-10.0	25.7	5.20	24.9	5.18	23.2	5.13	22.4	5.08	19.9	4.91	18.3	4.75	14.1	4.21
		-4.4	-5.0	25.7	4.53	24.9	4.53	23.2	4.50	22.4	4.48	19.9	4.36	18.3	4.24	14.1	3.79
		-1.8	-2.5	25.7	4.15	24.9	4.16	23.2	4.14	22.4	4.13	19.9	4.03	18.3	3.93	14.1	3.55
		0.8	0.0	25.7	3.72	24.9	3.73	23.2	3.74	22.4	3.74	19.9	3.68	18.3	3.61	14.1	3.29
		2.8	2.0	25.7	3.38	24.9	3.32	23.2	3.35	22.4	3.36	19.9	3.34	18.3	3.29	14.1	3.04
		6.0	5.0	25.7	3.38	24.9	3.30	23.2	3.13	22.4	3.04	19.9	2.86	18.3	2.85	14.1	2.69
		7.0	6.0	25.7	3.38	24.9	3.30	23.2	3.13	22.4	3.04	19.9	2.78	18.3	2.71	14.1	2.58
		8.6	7.5	25.7	3.38	24.9	3.30	23.2	3.13	22.4	3.04	19.9	2.78	18.3	2.61	14.1	2.42
		11.2	10.0	25.7	3.38	24.9	3.30	23.2	3.13	22.4	3.04	19.9	2.78	18.3	2.61	14.1	2.19
16.4	15.0	25.7	3.38	24.9	3.30	23.2	3.13	22.4	3.04	19.9	2.78	18.3	2.61	14.1	2.19		
24.0	18.0	25.7	3.38	24.9	3.30	23.2	3.13	22.4	3.04	19.9	2.78	18.3	2.61	14.1	2.19		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	30%	-24.9	-25.0	19.3	4.88	18.7	4.86	17.4	4.79	16.8	4.74	14.9	4.57	13.7	4.41	10.6	3.89
		-19.8	-20.0	19.3	4.61	18.7	4.59	17.4	4.54	16.8	4.50	14.9	4.35	13.7	4.21	10.6	3.73
		-14.7	-15.0	19.3	4.26	18.7	4.25	17.4	4.21	16.8	4.18	14.9	4.06	13.7	3.94	10.6	3.52
		-9.6	-10.0	19.3	3.81	18.7	3.81	17.4	3.79	16.8	3.78	14.9	3.69	13.7	3.59	10.6	3.24
		-4.4	-5.0	19.3	3.26	18.7	3.28	17.4	3.29	16.8	3.29	14.9	3.24	13.7	3.18	10.6	2.91
		-1.8	-2.5	19.3	2.96	18.7	2.98	17.4	3.01	16.8	3.02	14.9	3.00	13.7	2.96	10.6	2.73
		0.8	0.0	19.3	2.72	18.7	2.69	17.4	2.73	16.8	2.74	14.9	2.75	13.7	2.72	10.6	2.55
		2.8	2.0	19.3	2.72	18.7	2.66	17.4	2.53	16.8	2.48	14.9	2.50	13.7	2.49	10.6	2.37
		6.0	5.0	19.3	2.72	18.7	2.66	17.4	2.53	16.8	2.46	14.9	2.27	13.7	2.18	10.6	2.12
		7.0	6.0	19.3	2.72	18.7	2.66	17.4	2.53	16.8	2.46	14.9	2.27	13.7	2.14	10.6	2.04
		8.6	7.5	19.3	2.72	18.7	2.66	17.4	2.53	16.8	2.46	14.9	2.27	13.7	2.14	10.6	1.92
		11.2	10.0	19.3	2.72	18.7	2.66	17.4	2.53	16.8	2.46	14.9	2.27	13.7	2.14	10.6	1.82
16.4	15.0	19.3	2.72	18.7	2.66	17.4	2.53	16.8	2.46	14.9	2.27	13.7	2.14	10.6	1.82		
24.0	18.0	19.3	2.72	18.7	2.66	17.4	2.53	16.8	2.46	14.9	2.27	13.7	2.14	10.6	1.82		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 “1. Capacity of Outdoor Unit”.

3. Part Load of Outdoor Unit

3-13. U-20ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	37.3	4.36	44.8	5.22	52.3	6.09	56.0	6.52	63.5	7.39	70.9	8.26	78.4	9.12
		-5.0	37.3	4.37	44.8	5.24	52.3	6.11	56.0	6.55	63.5	7.42	70.9	8.29	78.4	9.15
		0.0	37.3	4.39	44.8	5.26	52.3	6.14	56.0	6.57	63.5	7.44	70.9	8.31	78.4	9.18
		5.0	37.3	4.42	44.8	5.30	52.3	6.17	56.0	6.61	63.5	7.50	70.9	8.42	78.4	9.33
		10.0	37.3	4.46	44.8	5.35	52.3	6.28	56.0	6.76	63.5	7.75	70.9	8.76	78.4	9.72
		15.0	37.3	4.62	44.8	5.67	52.3	6.79	56.0	7.36	63.5	8.53	70.9	9.73	78.4	10.79
		20.0	37.3	5.78	44.8	7.20	52.3	8.47	56.0	9.16	63.5	10.64	70.9	12.26	78.4	14.02
		25.0	37.3	7.48	44.8	8.97	52.3	10.60	56.0	11.48	63.5	13.33	70.9	15.34	78.4	17.49
		30.0	37.3	9.08	44.8	10.93	52.3	12.94	56.0	14.00	63.5	16.24	70.9	18.65	78.4	21.22
		35.0	37.3	10.81	44.8	13.04	52.3	15.45	56.0	16.71	63.5	19.38	70.9	22.22	75.6	23.38
		40.0	37.3	12.66	44.8	15.31	52.3	18.15	56.0	19.64	63.5	22.76	67.1	23.38	69.9	23.38
		43.0	37.3	13.85	44.8	16.76	52.3	19.88	56.0	21.51	61.2	23.38	63.6	23.00	64.9	21.85
		46.0	37.0	14.95	44.4	18.13	47.1	18.42	47.6	17.96	48.9	17.19	50.5	16.58	52.4	16.10
52.0	16.1	7.05	17.5	7.11	19.2	7.22	20.2	7.29	22.2	7.46	24.5	7.64	27.0	7.83		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	33.6	3.46	40.3	4.35	47.0	5.23	50.4	5.66	57.1	6.51	63.8	7.34	70.6	8.15
		-5.0	33.6	3.47	40.3	4.37	47.0	5.25	50.4	5.68	57.1	6.53	63.8	7.36	70.6	8.17
		0.0	33.6	3.49	40.3	4.39	47.0	5.28	50.4	5.71	57.1	6.56	63.8	7.39	70.6	8.20
		5.0	33.6	3.52	40.3	4.43	47.0	5.31	50.4	5.74	57.1	6.59	63.8	7.42	70.6	8.25
		10.0	33.6	3.56	40.3	4.47	47.0	5.35	50.4	5.80	57.1	6.69	63.8	7.58	70.6	8.46
		15.0	33.6	3.63	40.3	4.61	47.0	5.60	50.4	6.10	57.1	7.09	63.8	8.08	70.6	9.05
		20.0	33.6	4.29	40.3	5.53	47.0	6.75	50.4	7.34	57.1	8.50	63.8	9.60	70.6	10.75
		25.0	33.6	6.32	40.3	7.51	47.0	8.75	50.4	9.38	57.1	10.69	63.8	12.04	70.6	13.42
		30.0	33.6	7.77	40.3	9.22	47.0	10.71	50.4	11.46	57.1	13.00	63.8	14.57	70.6	16.19
		35.0	33.6	9.65	40.3	11.41	47.0	13.20	50.4	14.11	57.1	15.95	63.8	17.85	70.6	19.81
		40.0	33.6	11.27	40.3	13.30	47.0	15.36	50.4	16.41	57.1	18.54	63.8	20.76	69.9	23.38
		43.0	33.6	12.28	40.3	14.48	47.0	16.71	50.4	17.85	57.1	20.19	63.6	23.00	64.9	21.85
		46.0	33.6	13.06	40.3	15.60	47.0	18.26	47.6	17.96	48.9	17.19	50.5	16.58	52.4	16.10
52.0	16.1	7.05	17.5	7.11	19.2	7.22	20.2	7.29	22.2	7.46	24.5	7.64	27.0	7.83		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	29.9	2.95	35.8	3.76	41.8	4.56	44.8	4.95	50.8	5.72	56.7	6.47	62.7	7.21
		-5.0	29.9	2.96	35.8	3.78	41.8	4.57	44.8	4.97	50.8	5.74	56.7	6.49	62.7	7.23
		0.0	29.9	2.98	35.8	3.80	41.8	4.59	44.8	4.99	50.8	5.76	56.7	6.52	62.7	7.26
		5.0	29.9	3.00	35.8	3.82	41.8	4.62	44.8	5.02	50.8	5.79	56.7	6.55	62.7	7.29
		10.0	29.9	3.04	35.8	3.86	41.8	4.66	44.8	5.06	50.8	5.83	56.7	6.59	62.7	7.35
		15.0	29.9	3.09	35.8	3.91	41.8	4.74	44.8	5.16	50.8	5.99	56.7	6.81	62.7	7.62
		20.0	29.9	3.35	35.8	4.32	41.8	5.28	44.8	5.75	50.8	6.68	56.7	7.57	62.7	8.44
		25.0	29.9	5.37	35.8	6.27	41.8	7.18	44.8	7.65	50.8	8.59	56.7	9.55	62.7	10.52
		30.0	29.9	6.64	35.8	7.76	41.8	8.89	44.8	9.46	50.8	10.61	56.7	11.75	62.7	12.91
		35.0	29.9	8.28	35.8	9.68	41.8	11.07	44.8	11.77	50.8	13.16	56.7	14.55	62.7	15.95
		40.0	29.9	9.72	35.8	11.35	41.8	12.96	44.8	13.76	50.8	15.37	56.7	16.98	62.7	18.62
		43.0	29.9	10.61	35.8	12.38	41.8	14.13	44.8	15.01	50.8	16.76	56.7	18.53	62.7	20.35
		46.0	29.9	11.22	35.8	13.19	41.8	15.22	44.8	16.26	48.9	17.19	50.5	16.58	52.4	16.10
52.0	16.1	7.05	17.5	7.11	19.2	7.22	20.2	7.29	22.2	7.46	24.5	7.64	27.0	7.83		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	26.1	2.43	31.4	3.16	36.6	3.87	39.2	4.22	44.4	4.91	49.7	5.58	54.9	6.25
		-5.0	26.1	2.45	31.4	3.17	36.6	3.88	39.2	4.23	44.4	4.92	49.7	5.60	54.9	6.26
		0.0	26.1	2.46	31.4	3.19	36.6	3.90	39.2	4.25	44.4	4.94	49.7	5.62	54.9	6.29
		5.0	26.1	2.48	31.4	3.21	36.6	3.92	39.2	4.27	44.4	4.97	49.7	5.65	54.9	6.31
		10.0	26.1	2.51	31.4	3.24	36.6	3.96	39.2	4.31	44.4	5.00	49.7	5.68	54.9	6.34
		15.0	26.1	2.55	31.4	3.29	36.6	4.00	39.2	4.35	44.4	5.05	49.7	5.74	54.9	6.42
		20.0	26.1	2.64	31.4	3.41	36.6	4.18	39.2	4.56	44.4	5.31	49.7	6.05	54.9	6.77
		25.0	26.1	3.85	31.4	4.70	36.6	5.49	39.2	5.87	44.4	6.60	49.7	7.31	54.9	7.99
		30.0	26.1	5.60	31.4	6.44	36.6	7.27	39.2	7.68	44.4	8.49	49.7	9.29	54.9	10.07
		35.0	26.1	7.03	31.4	8.10	36.6	9.15	39.2	9.66	44.4	10.67	49.7	11.67	54.9	12.64
		40.0	26.1	8.28	31.4	9.55	36.6	10.78	39.2	11.38	44.4	12.57	49.7	13.73	54.9	14.88
		43.0	26.1	9.05	31.4	10.44	36.6	11.79	39.2	12.45	44.4	13.75	49.7	15.02	54.9	16.28
		46.0	26.1	9.55	31.4	11.06	36.6	12.56	39.2	13.31	44.4	14.82	49.7	15.79	52.4	16.10
52.0	16.1	7.05	17.5	7.11	19.2	7.22	20.2	7.29	22.2	7.46	24.5	7.64	27.0	7.83		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

U-20ME2E8 (Cooling)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	22.4	1.91	26.9	2.54	31.4	3.16	33.6	3.47	38.1	4.07	42.6	4.67	47.0	5.25
		-5.0	22.4	1.92	26.9	2.55	31.4	3.17	33.6	3.48	38.1	4.09	42.6	4.68	47.0	5.26
		0.0	22.4	1.93	26.9	2.57	31.4	3.19	33.6	3.50	38.1	4.10	42.6	4.70	47.0	5.28
		5.0	22.4	1.95	26.9	2.58	31.4	3.21	33.6	3.51	38.1	4.12	42.6	4.72	47.0	5.30
		10.0	22.4	1.97	26.9	2.61	31.4	3.23	33.6	3.54	38.1	4.15	42.6	4.75	47.0	5.33
		15.0	22.4	2.01	26.9	2.65	31.4	3.27	33.6	3.58	38.1	4.19	42.6	4.79	47.0	5.37
		20.0	22.4	2.08	26.9	2.71	31.4	3.33	33.6	3.64	38.1	4.25	42.6	4.86	47.0	5.45
		25.0	22.4	2.47	26.9	3.14	31.4	3.79	33.6	4.11	38.1	4.73	42.6	5.34	47.0	5.93
		30.0	22.4	4.68	26.9	5.27	31.4	5.85	33.6	6.12	38.1	6.66	42.6	7.17	47.0	7.66
		35.0	22.4	5.88	26.9	6.67	31.4	7.42	33.6	7.78	38.1	8.47	42.6	9.14	47.0	9.78
		40.0	22.4	6.94	26.9	7.90	31.4	8.81	33.6	9.24	38.1	10.09	42.6	10.89	47.0	11.66
		43.0	22.4	7.60	26.9	8.66	31.4	9.66	33.6	10.15	38.1	11.08	42.6	11.97	47.0	12.82
46.0	22.4	8.06	26.9	9.16	31.4	10.24	33.6	10.77	38.1	11.81	42.6	12.82	47.0	13.81		
52.0	16.1	7.05	17.5	7.11	19.2	7.22	20.2	7.29	22.2	7.46	24.5	7.64	27.0	7.83		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	18.7	1.38	22.4	1.92	26.1	2.44	28.0	2.70	31.7	3.22	35.5	3.72	39.2	4.22
		-5.0	18.7	1.39	22.4	1.92	26.1	2.45	28.0	2.71	31.7	3.23	35.5	3.73	39.2	4.23
		0.0	18.7	1.40	22.4	1.93	26.1	2.46	28.0	2.72	31.7	3.24	35.5	3.75	39.2	4.24
		5.0	18.7	1.41	22.4	1.95	26.1	2.48	28.0	2.74	31.7	3.25	35.5	3.76	39.2	4.26
		10.0	18.7	1.43	22.4	1.97	26.1	2.50	28.0	2.76	31.7	3.28	35.5	3.78	39.2	4.28
		15.0	18.7	1.46	22.4	2.00	26.1	2.53	28.0	2.79	31.7	3.31	35.5	3.81	39.2	4.31
		20.0	18.7	1.51	22.4	2.05	26.1	2.58	28.0	2.84	31.7	3.35	35.5	3.86	39.2	4.35
		25.0	18.7	1.61	22.4	2.15	26.1	2.68	28.0	2.94	31.7	3.92	35.5	3.96	39.2	4.45
		30.0	18.7	3.86	22.4	4.15	26.1	4.11	28.0	4.19	31.7	4.44	35.5	4.77	39.2	5.14
		35.0	18.7	4.84	22.4	5.38	26.1	5.89	28.0	6.12	31.7	6.56	35.5	6.97	39.2	7.33
		40.0	18.7	5.72	22.4	6.41	26.1	7.04	28.0	7.33	31.7	7.89	35.5	8.40	39.2	8.88
		43.0	18.7	6.27	22.4	7.04	26.1	7.75	28.0	8.08	31.7	8.71	35.5	9.29	39.2	9.83
46.0	18.7	6.72	22.4	7.50	26.1	8.24	28.0	8.59	31.7	9.26	35.5	9.90	39.2	10.50		
52.0	16.1	7.05	17.5	7.11	19.2	7.22	20.2	7.29	22.2	7.46	24.5	7.64	27.0	7.83		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	14.9	0.84	17.9	1.28	20.9	1.71	22.4	1.92	25.4	2.34	28.4	2.76	31.4	3.17
		-5.0	14.9	0.85	17.9	1.28	20.9	1.71	22.4	1.93	25.4	2.35	28.4	2.76	31.4	3.18
		0.0	14.9	0.85	17.9	1.29	20.9	1.72	22.4	1.93	25.4	2.35	28.4	2.77	31.4	3.19
		5.0	14.9	0.86	17.9	1.30	20.9	1.73	22.4	1.95	25.4	2.37	28.4	2.79	31.4	3.21
		10.0	14.9	0.88	17.9	1.32	20.9	1.75	22.4	1.96	25.4	2.38	28.4	2.80	31.4	3.23
		15.0	14.9	0.90	17.9	1.34	20.9	1.77	22.4	1.98	25.4	2.40	28.4	2.83	31.4	3.25
		20.0	14.9	0.93	17.9	1.37	20.9	1.80	22.4	2.02	25.4	2.44	28.4	2.86	31.4	3.29
		25.0	14.9	1.01	17.9	1.44	20.9	1.87	22.4	2.08	25.4	2.49	28.4	2.91	31.4	3.34
		30.0	14.9	1.77	17.9	1.88	20.9	2.16	22.4	2.32	25.4	2.67	28.4	3.12	31.4	3.65
		35.0	14.9	3.91	17.9	4.26	20.9	4.57	22.4	4.70	25.4	4.95	28.4	5.25	31.4	5.65
		40.0	14.9	4.61	17.9	5.07	20.9	5.47	22.4	5.65	25.4	5.98	28.4	6.27	31.4	6.52
		43.0	14.9	5.04	17.9	5.57	20.9	6.03	22.4	6.25	25.4	6.63	28.4	6.97	31.4	7.26
46.0	14.9	5.53	17.9	6.05	20.9	6.53	22.4	6.74	25.4	7.15	28.4	7.51	31.4	7.83		
52.0	14.9	6.37	17.5	7.11	19.2	7.22	20.2	7.29	22.2	7.46	24.5	7.64	27.0	7.83		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	11.2	0.29	13.4	0.62	15.7	0.96	16.8	1.13	19.0	1.46	21.3	1.79	23.5	2.11
		-5.0	11.2	0.30	13.4	0.63	15.7	0.96	16.8	1.13	19.0	1.47	21.3	1.80	23.5	2.12
		0.0	11.2	0.30	13.4	0.63	15.7	0.97	16.8	1.14	19.0	1.48	21.3	1.81	23.5	2.14
		5.0	11.2	0.31	13.4	0.64	15.7	0.98	16.8	1.15	19.0	1.50	21.3	1.83	23.5	2.16
		10.0	11.2	0.32	13.4	0.65	15.7	0.99	16.8	1.17	19.0	1.51	21.3	1.85	23.5	2.18
		15.0	11.2	0.33	13.4	0.67	15.7	1.01	16.8	1.19	19.0	1.54	21.3	1.88	23.5	2.21
		20.0	11.2	0.36	13.4	0.69	15.7	1.04	16.8	1.22	19.0	1.57	21.3	1.92	23.5	2.25
		25.0	11.2	0.41	13.4	0.73	15.7	1.09	16.8	1.27	19.0	1.63	21.3	1.97	23.5	2.34
		30.0	11.2	0.53	13.4	0.83	15.7	1.18	16.8	1.40	19.0	1.86	21.3	2.33	23.5	2.77
		35.0	11.2	3.09	13.4	3.29	15.7	3.53	16.8	3.68	19.0	3.99	21.3	4.30	23.5	4.60
		40.0	11.2	3.60	13.4	3.88	15.7	4.11	16.8	4.21	19.0	4.37	21.3	4.50	23.5	4.60
		43.0	11.2	3.93	13.4	4.25	15.7	4.53	16.8	4.65	19.0	4.85	21.3	5.01	23.5	5.13
46.0	11.2	4.48	13.4	4.80	15.7	5.08	16.8	5.20	19.0	5.41	21.3	5.58	23.5	5.71		
52.0	11.2	5.08	13.4	5.50	15.7	5.86	16.8	6.03	19.0	6.19	21.3	6.27	23.5	6.30		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-14. U-20ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	47.1	18.30	45.9	17.96	43.4	17.24	42.2	16.86	38.3	15.64	35.6	14.77	28.6	12.33
		-19.8	-20.0	49.5	18.73	48.2	18.37	45.7	17.62	44.3	17.23	40.3	15.96	37.5	15.05	30.1	12.54
		-14.7	-15.0	52.9	19.37	51.5	18.99	48.8	18.19	47.4	17.77	43.1	16.44	40.1	15.48	32.2	12.85
		-9.6	-10.0	57.4	20.28	56.0	19.87	53.0	19.00	51.5	18.54	46.9	17.10	43.6	16.07	35.1	13.26
		-4.4	-5.0	63.3	21.44	61.7	20.95	58.4	19.93	56.8	19.53	51.6	17.93	48.1	16.81	38.6	13.77
		-1.8	-2.5	66.8	22.23	65.1	21.73	61.6	20.70	59.9	20.16	54.5	18.49	50.7	17.30	39.7	13.69
		0.8	0.0	69.8	22.40	68.9	22.32	65.2	21.25	63.0	20.50	56.0	18.12	51.3	16.58	39.7	12.86
		2.8	2.0	72.3	21.99	70.0	21.22	65.3	19.71	63.0	18.97	56.0	16.79	51.3	15.38	39.7	11.98
		6.0	5.0	72.3	19.33	70.0	18.67	65.3	17.38	63.0	16.74	56.0	14.87	51.3	13.63	39.7	10.69
		7.0	6.0	72.3	18.47	70.0	17.85	65.3	16.62	63.0	16.00	56.0	14.23	51.3	13.07	39.7	10.28
		8.6	7.5	72.3	17.18	70.0	16.61	65.3	15.49	63.0	14.94	56.0	13.32	51.3	12.26	39.7	9.69
		11.2	10.0	72.3	15.18	70.0	14.70	65.3	13.75	63.0	13.29	56.0	11.90	51.3	11.00	39.7	8.77
		16.4	15.0	72.3	11.68	70.0	11.34	65.3	10.68	63.0	10.34	56.0	9.34	51.3	8.67	39.7	6.99
24.0	18.0	72.3	9.66	70.0	9.39	65.3	8.83	63.0	8.55	56.0	7.70	51.3	7.13	39.7	5.72		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	90%	-24.9	-25.0	47.1	18.30	45.9	17.96	43.4	17.24	42.2	16.86	38.3	15.64	35.6	14.77	28.6	12.33
		-19.8	-20.0	49.5	18.73	48.2	18.37	45.7	17.62	44.3	17.23	40.3	15.96	37.5	15.05	30.1	12.54
		-14.7	-15.0	52.9	19.37	51.5	18.99	48.8	18.19	47.4	17.77	43.1	16.44	40.1	15.48	32.2	12.85
		-9.6	-10.0	57.4	20.28	56.0	19.87	53.0	19.00	51.5	18.54	46.9	17.10	43.6	16.07	35.1	13.26
		-4.4	-5.0	63.3	21.44	61.7	20.95	58.4	19.93	56.7	19.53	50.4	16.67	46.2	15.40	35.7	12.23
		-1.8	-2.5	65.1	19.72	63.0	19.13	58.8	17.96	56.7	17.37	50.4	15.62	46.2	14.45	35.7	11.52
		0.8	0.0	65.1	18.22	63.0	17.69	58.8	16.63	56.7	16.10	50.4	14.51	46.2	13.44	35.7	10.77
		2.8	2.0	65.1	16.72	63.0	16.24	58.8	15.30	56.7	14.83	50.4	13.40	46.2	12.45	35.7	10.09
		6.0	5.0	65.1	14.68	63.0	14.32	58.8	13.58	56.7	13.21	50.4	12.04	46.2	11.21	35.7	9.06
		7.0	6.0	65.1	14.30	63.0	13.91	58.8	13.12	56.7	12.72	50.4	11.53	46.2	10.73	35.7	8.71
		8.6	7.5	65.1	13.25	63.0	12.90	58.8	12.19	56.7	11.84	50.4	10.76	46.2	10.04	35.7	8.20
		11.2	10.0	65.1	11.60	63.0	11.32	58.8	10.74	56.7	10.45	50.4	9.57	46.2	8.97	35.7	7.40
		16.4	15.0	65.1	8.69	63.0	8.52	58.8	8.16	56.7	7.97	50.4	7.38	46.2	6.96	35.7	5.84
24.0	18.0	65.1	8.31	63.0	8.09	58.8	7.64	56.7	7.42	50.4	6.75	46.2	6.30	35.7	5.18		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	80%	-24.9	-25.0	47.1	18.30	45.9	17.96	43.4	17.24	42.2	16.86	38.3	15.64	35.6	14.77	28.6	12.33
		-19.8	-20.0	49.5	18.73	48.2	18.37	45.7	17.62	44.3	17.23	40.3	15.96	37.5	15.05	30.1	12.54
		-14.7	-15.0	52.9	19.37	51.5	18.99	48.8	18.19	47.4	17.77	43.1	16.44	40.1	15.48	31.7	12.85
		-9.6	-10.0	57.4	20.28	56.0	19.87	52.3	16.92	50.4	16.44	44.8	14.96	41.1	13.95	31.7	11.29
		-4.4	-5.0	57.9	16.18	56.0	15.79	52.3	15.00	50.4	14.60	44.8	13.35	41.1	12.49	31.7	10.24
		-1.8	-2.5	57.9	15.01	56.0	14.67	52.3	13.96	50.4	13.60	44.8	12.47	41.1	11.70	31.7	9.67
		0.8	0.0	57.9	13.76	56.0	13.49	52.3	12.91	50.4	12.61	44.8	11.65	41.1	10.96	31.7	9.10
		2.8	2.0	57.9	12.76	56.0	12.52	52.3	12.00	50.4	11.73	44.8	10.86	41.1	10.23	31.7	8.53
		6.0	5.0	57.9	11.34	56.0	11.13	52.3	10.69	50.4	10.46	44.8	9.71	41.1	9.15	31.7	7.63
		7.0	6.0	57.9	10.95	56.0	10.73	52.3	10.26	50.4	10.03	44.8	9.28	41.1	8.76	31.7	7.34
		8.6	7.5	57.9	10.08	56.0	9.89	52.3	9.50	50.4	9.29	44.8	8.64	41.1	8.18	31.7	6.91
		11.2	10.0	57.9	8.73	56.0	8.59	52.3	8.30	50.4	8.14	44.8	7.64	41.1	7.27	31.7	6.23
		16.4	15.0	57.9	7.54	56.0	7.34	52.3	6.95	50.4	6.75	44.8	6.15	41.1	5.75	31.7	4.88
24.0	18.0	57.9	7.54	56.0	7.34	52.3	6.95	50.4	6.75	44.8	6.15	41.1	5.75	31.7	4.76		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	70%	-24.9	-25.0	47.1	18.30	45.9	17.96	43.4	17.24	42.2	16.86	38.3	15.64	35.6	14.77	27.8	11.01
		-19.8	-20.0	49.5	18.73	48.2	18.37	45.7	17.62	44.1	15.19	39.2	13.81	35.9	12.94	27.8	10.61
		-14.7	-15.0	50.6	15.51	49.0	15.20	45.7	14.55	44.1	14.21	39.2	13.13	35.9	12.35	27.8	10.15
		-9.6	-10.0	50.6	14.01	49.0	13.75	45.7	13.19	44.1	12.90	39.2	11.97	35.9	11.33	27.8	9.51
		-4.4	-5.0	50.6	12.41	49.0	12.21	45.7	11.78	44.1	11.55	39.2	10.80	35.9	10.24	27.8	8.65
		-1.8	-2.5	50.6	11.59	49.0	11.42	45.7	11.04	44.1	10.83	39.2	10.14	35.9	9.64	27.8	8.17
		0.8	0.0	50.6	10.74	49.0	10.59	45.7	10.25	44.1	10.07	39.2	9.46	35.9	9.00	27.8	7.68
		2.8	2.0	50.6	9.90	49.0	9.77	45.7	9.48	44.1	9.33	39.2	8.79	35.9	8.38	27.8	7.18
		6.0	5.0	50.6	8.69	49.0	8.59	45.7	8.37	44.1	8.24	39.2	7.78	35.9	7.44	27.8	6.38
		7.0	6.0	50.6	8.28	49.0	8.18	45.7	7.96	44.1	7.83	39.2	7.42	35.9	7.10	27.8	6.17
		8.6	7.5	50.6	7.58	49.0	7.50	45.7	7.33	44.1	7.23	39.2	6.89	35.9	6.62	27.8	5.80
		11.2	10.0	50.6	6.77	49.0	6.60	45.7	6.38	44.1	6.31	39.2	6.07	35.9	5.87	27.8	5.23
		16.4	15.0	50.6	6.77	49.0	6.60	45.7	6.25	44.1	6.08	39.2	5.55	35.9	5.20	27.8	4.33
24.0	18.0	50.6	6.77	49.0	6.60	45.7	6.25	44.1	6.08	39.2	5.55	35.9	5.20	27.8	4.33		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

U-20ME2E8 (Heating)

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	43.4	13.62	42.0	13.40	39.2	12.93	37.8	12.68	33.6	11.81	30.8	11.10	23.8	9.24
		-19.8	-20.0	43.4	12.84	42.0	12.66	39.2	12.26	37.8	12.04	33.6	11.30	30.8	10.74	23.8	8.93
		-14.7	-15.0	43.4	12.00	42.0	11.84	39.2	11.48	37.8	11.28	33.6	10.61	30.8	10.11	23.8	8.62
		-9.6	-10.0	43.4	10.96	42.0	10.82	39.2	10.52	37.8	10.35	33.6	9.77	30.8	9.33	23.8	8.00
		-4.4	-5.0	43.4	9.72	42.0	9.62	39.2	9.38	37.8	9.25	33.6	8.77	30.8	8.40	23.8	7.27
		-1.8	-2.5	43.4	9.05	42.0	8.96	39.2	8.76	37.8	8.64	33.6	8.22	30.8	7.89	23.8	6.86
		0.8	0.0	43.4	8.34	42.0	8.27	39.2	8.11	37.8	8.01	33.6	7.65	30.8	7.36	23.8	6.44
		2.8	2.0	43.4	7.64	42.0	7.59	39.2	7.47	37.8	7.39	33.6	7.09	30.8	6.84	23.8	6.02
		6.0	5.0	43.4	6.59	42.0	6.56	39.2	6.47	37.8	6.41	33.6	6.20	30.8	6.00	23.8	5.32
		7.0	6.0	43.4	6.21	42.0	6.19	39.2	6.13	37.8	6.08	33.6	5.90	30.8	5.74	23.8	5.16
		8.6	7.5	43.4	6.00	42.0	5.85	39.2	5.64	37.8	5.61	33.6	5.48	30.8	5.35	23.8	4.86
		11.2	10.0	43.4	6.00	42.0	5.85	39.2	5.55	37.8	5.40	33.6	4.96	30.8	4.75	23.8	4.38
		16.4	15.0	43.4	6.00	42.0	5.85	39.2	5.55	37.8	5.40	33.6	4.96	30.8	4.66	23.8	3.91
24.0	18.0	43.4	6.00	42.0	5.85	39.2	5.55	37.8	5.40	33.6	4.96	30.8	4.66	23.8	3.91		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	36.2	10.67	35.0	10.55	32.7	10.27	31.5	10.12	28.0	9.59	25.7	9.16	19.8	7.75
		-19.8	-20.0	36.2	10.13	35.0	10.03	32.7	9.78	31.5	9.65	28.0	9.15	25.7	8.77	19.8	7.56
		-14.7	-15.0	36.2	9.43	35.0	9.35	32.7	9.14	31.5	9.02	28.0	8.59	25.7	8.24	19.8	7.17
		-9.6	-10.0	36.2	8.58	35.0	8.51	32.7	8.35	31.5	8.25	28.0	7.89	25.7	7.60	19.8	6.65
		-4.4	-5.0	36.2	7.57	35.0	7.53	32.7	7.42	31.5	7.35	28.0	7.07	25.7	6.83	19.8	6.04
		-1.8	-2.5	36.2	7.02	35.0	7.00	32.7	6.91	31.5	6.85	28.0	6.62	25.7	6.41	19.8	5.71
		0.8	0.0	36.2	6.45	35.0	6.44	32.7	6.38	31.5	6.34	28.0	6.16	25.7	5.98	19.8	5.36
		2.8	2.0	36.2	5.87	35.0	5.86	32.7	5.83	31.5	5.80	28.0	5.65	25.7	5.51	19.8	4.98
		6.0	5.0	36.2	5.23	35.0	5.11	32.7	4.98	31.5	4.97	28.0	4.91	25.7	4.82	19.8	4.43
		7.0	6.0	36.2	5.23	35.0	5.11	32.7	4.86	31.5	4.73	28.0	4.68	25.7	4.61	19.8	4.29
		8.6	7.5	36.2	5.23	35.0	5.11	32.7	4.86	31.5	4.73	28.0	4.36	25.7	4.31	19.8	4.05
		11.2	10.0	36.2	5.23	35.0	5.11	32.7	4.86	31.5	4.73	28.0	4.36	25.7	4.11	19.8	3.67
		16.4	15.0	36.2	5.23	35.0	5.11	32.7	4.86	31.5	4.73	28.0	4.36	25.7	4.11	19.8	3.49
24.0	18.0	36.2	5.23	35.0	5.11	32.7	4.86	31.5	4.73	28.0	4.36	25.7	4.11	19.8	3.49		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	28.9	8.28	28.0	8.22	26.1	8.06	25.2	7.96	22.4	7.62	20.5	7.34	15.9	6.38
		-19.8	-20.0	28.9	7.86	28.0	7.80	26.1	7.67	25.2	7.59	22.4	7.27	20.5	7.01	15.9	6.18
		-14.7	-15.0	28.9	7.30	28.0	7.26	26.1	7.16	25.2	7.09	22.4	6.83	20.5	6.60	15.9	5.84
		-9.6	-10.0	28.9	6.63	28.0	6.61	26.1	6.53	25.2	6.48	22.4	6.27	20.5	6.08	15.9	5.43
		-4.4	-5.0	28.9	5.84	28.0	5.84	26.1	5.80	25.2	5.77	22.4	5.62	20.5	5.48	15.9	4.95
		-1.8	-2.5	28.9	5.40	28.0	5.40	26.1	5.38	25.2	5.36	22.4	5.24	20.5	5.12	15.9	4.66
		0.8	0.0	28.9	4.89	28.0	4.90	26.1	4.91	25.2	4.91	22.4	4.84	20.5	4.75	15.9	4.37
		2.8	2.0	28.9	4.46	28.0	4.43	26.1	4.46	25.2	4.46	22.4	4.43	20.5	4.38	15.9	4.08
		6.0	5.0	28.9	4.46	28.0	4.36	26.1	4.16	25.2	4.06	22.4	3.88	20.5	3.86	15.9	3.67
		7.0	6.0	28.9	4.46	28.0	4.36	26.1	4.16	25.2	4.06	22.4	3.76	20.5	3.70	15.9	3.54
		8.6	7.5	28.9	4.46	28.0	4.36	26.1	4.16	25.2	4.06	22.4	3.76	20.5	3.56	15.9	3.36
		11.2	10.0	28.9	4.46	28.0	4.36	26.1	4.16	25.2	4.06	22.4	3.76	20.5	3.56	15.9	3.07
		16.4	15.0	28.9	4.46	28.0	4.36	26.1	4.16	25.2	4.06	22.4	3.76	20.5	3.56	15.9	3.07
24.0	18.0	28.9	4.46	28.0	4.36	26.1	4.16	25.2	4.06	22.4	3.76	20.5	3.56	15.9	3.07		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	21.7	6.22	21.0	6.20	19.6	6.12	18.9	6.06	16.8	5.85	15.4	5.67	11.9	5.05
		-19.8	-20.0	21.7	5.91	21.0	5.89	19.6	5.82	18.9	5.78	16.8	5.60	15.4	5.43	11.9	4.87
		-14.7	-15.0	21.7	5.50	21.0	5.49	19.6	5.44	18.9	5.41	16.8	5.26	15.4	5.12	11.9	4.62
		-9.6	-10.0	21.7	4.98	21.0	4.98	19.6	4.95	18.9	4.93	16.8	4.82	15.4	4.71	11.9	4.30
		-4.4	-5.0	21.7	4.33	21.0	4.35	19.6	4.36	18.9	4.36	16.8	4.31	15.4	4.23	11.9	3.92
		-1.8	-2.5	21.7	3.99	21.0	4.01	19.6	4.04	18.9	4.05	16.8	4.02	15.4	3.97	11.9	3.71
		0.8	0.0	21.7	3.69	21.0	3.67	19.6	3.71	18.9	3.72	16.8	3.73	15.4	3.70	11.9	3.50
		2.8	2.0	21.7	3.69	21.0	3.61	19.6	3.46	18.9	3.42	16.8	3.44	15.4	3.43	11.9	3.29
		6.0	5.0	21.7	3.69	21.0	3.61	19.6	3.46	18.9	3.39	16.8	3.17	15.4	3.07	11.9	2.99
		7.0	6.0	21.7	3.69	21.0	3.61	19.6	3.46	18.9	3.39	16.8	3.17	15.4	3.02	11.9	2.90
		8.6	7.5	21.7	3.69	21.0	3.61	19.6	3.46	18.9	3.39	16.8	3.17	15.4	3.02	11.9	2.76
		11.2	10.0	21.7	3.69	21.0	3.61	19.6	3.46	18.9	3.39	16.8	3.17	15.4	3.02	11.9	2.64
		16.4	15.0	21.7	3.69	21.0	3.61	19.6	3.46	18.9	3.39	16.8	3.17	15.4	3.02	11.9	2.64
24.0	18.0	21.7	3.69	21.0	3.61	19.6	3.46	18.9	3.39	16.8	3.17	15.4	3.02	11.9	2.64		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-15. 22HP (Cooling) U-10ME2E8+U-12ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	41.0	4.09	49.2	4.91	57.4	5.73	61.5	6.14	69.7	6.95	77.9	7.77	86.1	8.59
		-5.0	41.0	4.10	49.2	4.92	57.4	5.74	61.5	6.15	69.7	6.97	77.9	7.78	86.1	8.60
		0.0	41.0	4.11	49.2	4.93	57.4	5.75	61.5	6.16	69.7	6.98	77.9	7.80	86.1	8.62
		5.0	41.0	4.12	49.2	4.94	57.4	5.76	61.5	6.18	69.7	7.01	77.9	7.86	86.1	8.69
		10.0	41.0	4.14	49.2	4.97	57.4	5.82	61.5	6.26	69.7	7.13	77.9	8.02	86.1	8.88
		15.0	41.0	4.22	49.2	5.13	57.4	6.07	61.5	6.54	69.7	7.51	77.9	8.48	86.1	9.37
		20.0	41.0	4.77	49.2	5.86	57.4	7.07	61.5	7.72	69.7	9.13	77.9	10.67	86.1	12.35
		25.0	41.0	6.12	49.2	7.54	57.4	9.10	61.5	9.93	69.7	11.70	77.9	13.61	86.1	15.66
		30.0	41.0	7.65	49.2	9.41	57.4	11.32	61.5	12.33	69.7	14.47	77.9	16.75	86.1	19.20
		35.0	41.0	9.29	49.2	11.42	57.4	13.71	61.5	14.91	69.7	17.45	77.9	20.15	82.4	20.86
		40.0	41.0	11.06	49.2	13.58	57.4	16.28	61.5	17.70	69.7	20.67	73.0	20.86	76.1	20.86
		43.0	41.0	12.18	49.2	14.96	57.4	17.92	61.5	19.48	66.6	20.86	69.8	20.86	71.2	19.80
		46.0	40.6	13.24	48.7	16.26	51.7	16.54	52.3	16.10	53.7	15.36	55.5	14.78	57.6	14.33
52.0	17.7	5.72	19.3	5.78	21.1	5.88	22.2	5.95	24.4	6.10	26.9	6.27	29.6	6.46		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	36.9	3.30	44.3	4.14	51.7	4.96	55.4	5.36	62.7	6.16	70.1	6.93	77.5	7.69
		-5.0	36.9	3.31	44.3	4.15	51.7	4.97	55.4	5.37	62.7	6.16	70.1	6.94	77.5	7.70
		0.0	36.9	3.31	44.3	4.16	51.7	4.98	55.4	5.38	62.7	6.18	70.1	6.95	77.5	7.71
		5.0	36.9	3.33	44.3	4.17	51.7	5.00	55.4	5.40	62.7	6.19	70.1	6.97	77.5	7.74
		10.0	36.9	3.35	44.3	4.19	51.7	5.02	55.4	5.43	62.7	6.24	70.1	7.05	77.5	7.84
		15.0	36.9	3.38	44.3	4.27	51.7	5.15	55.4	5.58	62.7	6.44	70.1	7.29	77.5	8.12
		20.0	36.9	3.70	44.3	4.71	51.7	5.69	55.4	6.17	62.7	7.10	70.1	8.15	77.5	9.26
		25.0	36.9	4.98	44.3	6.13	51.7	7.33	55.4	7.94	62.7	9.20	70.1	10.49	77.5	11.82
		30.0	36.9	6.39	44.3	7.79	51.7	9.21	55.4	9.94	62.7	11.41	70.1	12.91	77.5	14.45
		35.0	36.9	8.15	44.3	9.85	51.7	11.56	55.4	12.43	62.7	14.19	70.1	15.99	77.5	17.86
		40.0	36.9	9.72	44.3	11.66	51.7	13.63	55.4	14.62	62.7	16.65	70.1	18.76	76.1	20.86
		43.0	36.9	10.68	44.3	12.78	51.7	14.91	55.4	15.99	62.7	18.22	69.8	20.86	71.2	19.80
		46.0	36.9	11.43	44.3	13.85	51.7	16.39	52.3	16.10	53.7	15.36	55.5	14.78	57.6	14.33
52.0	17.7	5.72	19.3	5.78	21.1	5.88	22.2	5.95	24.4	6.10	26.9	6.27	29.6	6.46		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	32.8	2.83	39.4	3.59	45.9	4.33	49.2	4.70	55.8	5.42	62.3	6.13	68.9	6.82
		-5.0	32.8	2.83	39.4	3.59	45.9	4.34	49.2	4.71	55.8	5.43	62.3	6.13	68.9	6.83
		0.0	32.8	2.84	39.4	3.60	45.9	4.35	49.2	4.72	55.8	5.44	62.3	6.14	68.9	6.84
		5.0	32.8	2.85	39.4	3.61	45.9	4.36	49.2	4.73	55.8	5.45	62.3	6.16	68.9	6.85
		10.0	32.8	2.87	39.4	3.63	45.9	4.38	49.2	4.75	55.8	5.47	62.3	6.18	68.9	6.89
		15.0	32.8	2.89	39.4	3.66	45.9	4.42	49.2	4.80	55.8	5.55	62.3	6.29	68.9	7.02
		20.0	32.8	3.02	39.4	3.86	45.9	4.69	49.2	5.09	55.8	5.88	62.3	6.66	68.9	7.41
		25.0	32.8	4.05	39.4	4.93	45.9	5.82	49.2	6.27	55.8	7.18	62.3	8.10	68.9	9.04
		30.0	32.8	5.29	39.4	6.38	45.9	7.47	49.2	8.02	55.8	9.12	62.3	10.22	68.9	11.33
		35.0	32.8	6.84	39.4	8.19	45.9	9.52	49.2	10.19	55.8	11.52	62.3	12.85	68.9	14.18
		40.0	32.8	8.22	39.4	9.79	45.9	11.33	49.2	12.10	55.8	13.63	62.3	15.17	68.9	16.73
		43.0	32.8	9.08	39.4	10.78	45.9	12.45	49.2	13.29	55.8	14.96	62.3	16.64	68.9	18.37
		46.0	32.8	9.68	39.4	11.56	45.9	13.50	49.2	14.48	53.7	15.36	55.5	14.78	57.6	14.33
52.0	17.7	5.72	19.3	5.78	21.1	5.88	22.2	5.95	24.4	6.10	26.9	6.27	29.6	6.46		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	28.7	2.34	34.4	3.02	40.2	3.69	43.1	4.02	48.8	4.66	54.5	5.30	60.3	5.92
		-5.0	28.7	2.35	34.4	3.03	40.2	3.70	43.1	4.02	48.8	4.67	54.5	5.30	60.3	5.93
		0.0	28.7	2.36	34.4	3.04	40.2	3.70	43.1	4.03	48.8	4.68	54.5	5.31	60.3	5.93
		5.0	28.7	2.36	34.4	3.05	40.2	3.71	43.1	4.04	48.8	4.69	54.5	5.32	60.3	5.95
		10.0	28.7	2.38	34.4	3.06	40.2	3.73	43.1	4.06	48.8	4.71	54.5	5.34	60.3	5.96
		15.0	28.7	2.40	34.4	3.08	40.2	3.75	43.1	4.08	48.8	4.73	54.5	5.37	60.3	6.00
		20.0	28.7	2.44	34.4	3.15	40.2	3.84	43.1	4.19	48.8	4.86	54.5	5.53	60.3	6.17
		25.0	28.7	3.03	34.4	3.76	40.2	4.47	43.1	4.81	48.8	5.48	54.5	6.12	60.3	6.75
		30.0	28.7	4.28	34.4	5.10	40.2	5.90	43.1	6.30	48.8	7.08	54.5	7.85	60.3	8.61
		35.0	28.7	5.62	34.4	6.66	40.2	7.67	43.1	8.17	48.8	9.14	54.5	10.10	60.3	11.03
		40.0	28.7	6.83	34.4	8.06	40.2	9.24	43.1	9.82	48.8	10.96	54.5	12.07	60.3	13.16
		43.0	28.7	7.58	34.4	8.92	40.2	10.21	43.1	10.85	48.8	12.09	54.5	13.30	60.3	14.50
		46.0	28.7	8.10	34.4	9.53	40.2	10.96	43.1	11.68	48.8	13.12	54.5	14.04	57.6	14.33
52.0	17.7	5.72	19.3	5.78	21.1	5.88	22.2	5.95	24.4	6.10	26.9	6.27	29.6	6.46		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

22HP (Cooling) U-10ME2E8+U-12ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	24.6	1.86	29.5	2.45	34.4	3.03	36.9	3.32	41.8	3.89	46.7	4.44	51.7	4.99
		-5.0	24.6	1.86	29.5	2.45	34.4	3.04	36.9	3.32	41.8	3.89	46.7	4.45	51.7	4.99
		0.0	24.6	1.86	29.5	2.46	34.4	3.04	36.9	3.33	41.8	3.90	46.7	4.45	51.7	5.00
		5.0	24.6	1.87	29.5	2.47	34.4	3.05	36.9	3.34	41.8	3.91	46.7	4.46	51.7	5.01
		10.0	24.6	1.88	29.5	2.48	34.4	3.06	36.9	3.35	41.8	3.92	46.7	4.48	51.7	5.02
		15.0	24.6	1.90	29.5	2.49	34.4	3.08	36.9	3.37	41.8	3.94	46.7	4.49	51.7	5.04
		20.0	24.6	1.93	29.5	2.52	34.4	3.11	36.9	3.40	41.8	3.97	46.7	4.53	51.7	5.09
		25.0	24.6	2.13	29.5	2.74	34.4	3.34	36.9	3.63	41.8	4.21	46.7	4.77	51.7	5.32
		30.0	24.6	3.38	29.5	3.96	34.4	4.52	36.9	4.79	41.8	5.31	46.7	5.80	51.7	6.28
		35.0	24.6	4.50	29.5	5.27	34.4	6.00	36.9	6.35	41.8	7.02	46.7	7.67	51.7	8.28
		40.0	24.6	5.54	29.5	6.47	34.4	7.34	36.9	7.77	41.8	8.58	46.7	9.35	51.7	10.09
		43.0	24.6	6.18	29.5	7.20	34.4	8.17	36.9	8.64	41.8	9.53	46.7	10.38	51.7	11.20
		46.0	24.6	6.68	29.5	7.73	34.4	8.75	36.9	9.26	41.8	10.24	46.7	11.21	51.7	12.15
52.0	17.7	5.72	19.3	5.78	21.1	5.88	22.2	5.95	24.4	6.10	26.9	6.27	29.6	6.46		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	20.5	1.36	24.6	1.86	28.7	2.36	30.8	2.60	34.9	3.08	39.0	3.56	43.1	4.03
		-5.0	20.5	1.36	24.6	1.86	28.7	2.36	30.8	2.60	34.9	3.09	39.0	3.56	43.1	4.03
		0.0	20.5	1.36	24.6	1.87	28.7	2.36	30.8	2.61	34.9	3.09	39.0	3.57	43.1	4.04
		5.0	20.5	1.37	24.6	1.87	28.7	2.37	30.8	2.62	34.9	3.10	39.0	3.58	43.1	4.04
		10.0	20.5	1.38	24.6	1.88	28.7	2.38	30.8	2.63	34.9	3.11	39.0	3.59	43.1	4.05
		15.0	20.5	1.39	24.6	1.90	28.7	2.39	30.8	2.64	34.9	3.12	39.0	3.60	43.1	4.07
		20.0	20.5	1.41	24.6	1.92	28.7	2.42	30.8	2.66	34.9	3.14	39.0	3.62	43.1	4.08
		25.0	20.5	1.47	24.6	1.97	28.7	2.47	30.8	2.71	34.9	3.60	39.0	3.67	43.1	4.14
		30.0	20.5	2.58	24.6	2.93	28.7	3.16	30.8	3.32	34.9	3.67	39.0	4.07	43.1	4.47
		35.0	20.5	3.49	24.6	4.02	28.7	4.51	30.8	4.74	34.9	5.17	39.0	5.56	43.1	5.92
		40.0	20.5	4.35	24.6	5.02	28.7	5.63	30.8	5.92	34.9	6.46	39.0	6.96	43.1	7.41
		43.0	20.5	4.88	24.6	5.63	28.7	6.32	30.8	6.64	34.9	7.25	39.0	7.81	43.1	8.33
		46.0	20.5	5.40	24.6	6.15	28.7	6.85	30.8	7.18	34.9	7.82	39.0	8.43	43.1	9.00
52.0	17.7	5.72	19.3	5.78	21.1	5.88	22.2	5.95	24.4	6.10	26.9	6.27	29.6	6.46		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	16.4	0.85	19.7	1.26	23.0	1.66	24.6	1.86	27.9	2.26	31.2	2.65	34.4	3.04
		-5.0	16.4	0.85	19.7	1.26	23.0	1.67	24.6	1.87	27.9	2.26	31.2	2.65	34.4	3.04
		0.0	16.4	0.86	19.7	1.27	23.0	1.67	24.6	1.87	27.9	2.27	31.2	2.66	34.4	3.05
		5.0	16.4	0.86	19.7	1.27	23.0	1.68	24.6	1.88	27.9	2.27	31.2	2.66	34.4	3.05
		10.0	16.4	0.87	19.7	1.28	23.0	1.68	24.6	1.88	27.9	2.28	31.2	2.67	34.4	3.06
		15.0	16.4	0.88	19.7	1.29	23.0	1.69	24.6	1.89	27.9	2.29	31.2	2.68	34.4	3.07
		20.0	16.4	0.89	19.7	1.30	23.0	1.71	24.6	1.91	27.9	2.30	31.2	2.70	34.4	3.09
		25.0	16.4	0.93	19.7	1.33	23.0	1.74	24.6	1.93	27.9	2.33	31.2	2.72	34.4	3.12
		30.0	16.4	1.30	19.7	1.56	23.0	1.89	24.6	2.06	27.9	2.42	31.2	2.83	34.4	3.27
		35.0	16.4	2.58	19.7	2.93	23.0	3.23	24.6	3.36	27.9	3.60	31.2	3.90	34.4	4.28
		40.0	16.4	3.26	19.7	3.71	23.0	4.11	24.6	4.29	27.9	4.61	31.2	4.89	34.4	5.12
		43.0	16.4	3.69	19.7	4.20	23.0	4.66	24.6	4.86	27.9	5.24	31.2	5.57	34.4	5.85
		46.0	16.4	4.27	19.7	4.77	23.0	5.22	24.6	5.43	27.9	5.81	31.2	6.15	34.4	6.46
52.0	16.4	5.07	19.3	5.78	21.1	5.88	22.2	5.95	24.4	6.10	26.9	6.27	29.6	6.46		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	12.3	0.33	14.8	0.65	17.2	0.96	18.5	1.12	20.9	1.42	23.4	1.73	25.8	2.03
		-5.0	12.3	0.34	14.8	0.65	17.2	0.96	18.5	1.12	20.9	1.43	23.4	1.73	25.8	2.03
		0.0	12.3	0.34	14.8	0.65	17.2	0.97	18.5	1.12	20.9	1.43	23.4	1.74	25.8	2.04
		5.0	12.3	0.34	14.8	0.66	17.2	0.97	18.5	1.13	20.9	1.44	23.4	1.74	25.8	2.05
		10.0	12.3	0.35	14.8	0.66	17.2	0.97	18.5	1.13	20.9	1.45	23.4	1.75	25.8	2.06
		15.0	12.3	0.35	14.8	0.67	17.2	0.98	18.5	1.14	20.9	1.46	23.4	1.77	25.8	2.07
		20.0	12.3	0.36	14.8	0.68	17.2	1.00	18.5	1.16	20.9	1.47	23.4	1.78	25.8	2.09
		25.0	12.3	0.39	14.8	0.70	17.2	1.02	18.5	1.18	20.9	1.50	23.4	1.81	25.8	2.14
		30.0	12.3	0.45	14.8	0.74	17.2	1.06	18.5	1.24	20.9	1.62	23.4	1.99	25.8	2.35
		35.0	12.3	1.78	14.8	1.98	17.2	2.21	18.5	2.36	20.9	2.67	23.4	2.96	25.8	3.26
		40.0	12.3	2.28	14.8	2.56	17.2	2.78	18.5	2.88	20.9	3.04	23.4	3.16	25.8	3.26
		43.0	12.3	2.60	14.8	2.92	17.2	3.19	18.5	3.30	20.9	3.50	23.4	3.66	25.8	3.77
		46.0	12.3	3.27	14.8	3.58	17.2	3.84	18.5	3.95	20.9	4.15	23.4	4.31	25.8	4.44
52.0	12.3	3.85	14.8	4.24	17.2	4.59	18.5	4.74	20.9	4.89	23.4	4.97	25.8	5.01		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-16. 22HP (Heating) U-10ME2E8+U-12ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	52.1	17.82	50.8	17.49	48.1	16.81	46.7	16.44	42.4	15.27	39.5	14.43	31.8	12.04
		-19.8	-20.0	54.7	18.22	53.3	17.88	50.5	17.17	49.1	16.80	44.6	15.58	41.6	14.71	33.4	12.24
		-14.7	-15.0	58.4	18.83	56.9	18.47	54.0	17.71	52.4	17.32	47.7	16.05	44.5	15.12	35.8	12.55
		-9.6	-10.0	63.4	19.72	61.8	19.29	58.6	18.48	57.0	18.06	51.9	16.69	48.3	15.70	39.0	12.96
		-4.4	-5.0	69.0	20.30	68.0	20.30	64.6	19.50	62.8	19.04	57.2	17.57	53.3	16.49	42.9	13.53
		-1.8	-2.5	72.0	20.30	71.0	20.30	68.1	19.83	66.2	19.36	60.3	17.85	56.2	16.77	43.4	13.01
		0.8	0.0	75.6	20.30	74.5	20.30	71.6	19.86	69.0	19.13	61.3	16.97	56.2	15.56	43.4	12.10
		2.8	2.0	79.2	20.19	76.7	19.52	71.6	18.20	69.0	17.55	61.3	15.61	56.2	14.33	43.4	11.20
		6.0	5.0	79.2	17.46	76.7	16.91	71.6	15.80	69.0	15.26	61.3	13.63	56.2	12.53	43.4	9.87
		7.0	6.0	79.2	16.58	76.7	16.06	71.6	15.03	69.0	14.50	61.3	12.97	56.2	11.96	43.4	9.45
		8.6	7.5	79.2	15.28	76.7	14.81	71.6	13.88	69.0	13.42	61.3	12.04	56.2	11.13	43.4	8.84
		11.2	10.0	79.2	13.25	76.7	12.87	71.6	12.11	69.0	11.73	61.3	10.59	56.2	9.83	43.4	7.90
		16.4	15.0	79.2	9.70	76.7	9.47	71.6	8.99	69.0	8.75	61.3	8.00	56.2	7.47	43.4	6.09
		24.0	18.0	79.2	8.76	76.7	8.51	71.6	7.99	69.0	7.74	61.3	6.97	56.2	6.45	43.4	5.17

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	90%	-24.9	-25.0	52.1	17.82	50.8	17.49	48.1	16.81	46.7	16.44	42.4	15.27	39.5	14.43	31.8	12.04
		-19.8	-20.0	54.7	18.22	53.3	17.88	50.5	17.17	49.1	16.80	44.6	15.58	41.6	14.71	33.4	12.24
		-14.7	-15.0	58.4	18.83	56.9	18.47	54.0	17.71	52.4	17.32	47.7	16.05	44.5	15.12	35.8	12.55
		-9.6	-10.0	63.4	19.72	61.8	19.29	58.6	18.48	57.0	18.06	51.9	16.69	48.3	15.70	39.0	12.96
		-4.4	-5.0	69.0	20.30	68.0	20.30	64.4	19.50	62.1	17.53	55.2	15.78	50.6	14.60	39.1	11.61
		-1.8	-2.5	71.3	18.36	69.0	17.84	64.4	16.80	62.1	16.27	55.2	14.69	50.6	13.61	39.1	10.87
		0.8	0.0	71.3	16.82	69.0	16.36	64.4	15.43	62.1	14.97	55.2	13.55	50.6	12.58	39.1	10.10
		2.8	2.0	71.3	15.27	69.0	14.87	64.4	14.06	62.1	13.65	55.2	12.40	50.6	11.55	39.1	9.41
		6.0	5.0	71.3	13.19	69.0	12.91	64.4	12.32	62.1	12.01	55.2	11.03	50.6	10.29	39.1	8.34
		7.0	6.0	71.3	12.85	69.0	12.52	64.4	11.86	62.1	11.53	55.2	10.51	50.6	9.81	39.1	7.98
		8.6	7.5	71.3	11.77	69.0	11.49	64.4	10.91	62.1	10.62	55.2	9.72	50.6	9.10	39.1	7.46
		11.2	10.0	71.3	10.08	69.0	9.86	64.4	9.43	62.1	9.20	55.2	8.50	50.6	8.00	39.1	6.64
		16.4	15.0	71.3	7.97	69.0	7.74	64.4	7.27	62.1	7.04	55.2	6.35	50.6	5.98	39.1	5.06
		24.0	18.0	71.3	7.97	69.0	7.74	64.4	7.27	62.1	7.04	55.2	6.35	50.6	5.89	39.1	4.73

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	80%	-24.9	-25.0	52.1	17.82	50.8	17.49	48.1	16.81	46.7	16.44	42.4	15.27	39.5	14.43	31.8	12.04
		-19.8	-20.0	54.7	18.22	53.3	17.88	50.5	17.17	49.1	16.80	44.6	15.58	41.6	14.71	33.4	12.24
		-14.7	-15.0	58.4	18.83	56.9	18.47	54.0	17.71	52.4	17.32	47.7	16.05	44.5	15.12	34.8	11.48
		-9.6	-10.0	63.4	17.32	61.3	16.90	57.2	16.05	55.2	15.61	49.1	14.26	45.0	13.31	34.8	10.80
		-4.4	-5.0	63.4	15.12	61.3	14.78	57.2	14.08	55.2	13.72	49.1	12.59	45.0	11.80	34.8	9.66
		-1.8	-2.5	63.4	13.91	61.3	13.62	57.2	13.01	55.2	12.69	49.1	11.69	45.0	10.97	34.8	9.09
		0.8	0.0	63.4	12.62	61.3	12.40	57.2	11.92	55.2	11.67	49.1	10.83	45.0	10.22	34.8	8.50
		2.8	2.0	63.4	11.61	61.3	11.41	57.2	11.00	55.2	10.77	49.1	10.03	45.0	9.48	34.8	7.92
		6.0	5.0	63.4	10.17	61.3	10.02	57.2	9.68	55.2	9.49	49.1	8.87	45.0	8.39	34.8	7.00
		7.0	6.0	63.4	9.81	61.3	9.63	57.2	9.26	55.2	9.07	49.1	8.43	45.0	7.98	34.8	6.70
		8.6	7.5	63.4	8.91	61.3	8.77	57.2	8.47	55.2	8.31	49.1	7.77	45.0	7.38	34.8	6.25
		11.2	10.0	63.4	7.55	61.3	7.45	57.2	7.25	55.2	7.14	49.1	6.75	45.0	6.45	34.8	5.55
		16.4	15.0	63.4	7.17	61.3	6.97	57.2	6.55	55.2	6.35	49.1	5.73	45.0	5.32	34.8	4.29
		24.0	18.0	63.4	7.17	61.3	6.97	57.2	6.55	55.2	6.35	49.1	5.73	45.0	5.32	34.8	4.29

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	70%	-24.9	-25.0	52.1	17.82	50.8	17.49	48.1	16.81	46.7	16.44	42.4	15.27	39.4	14.43	30.4	10.60
		-19.8	-20.0	54.7	18.22	53.3	17.88	50.1	15.01	48.3	14.65	42.9	13.45	39.4	12.54	30.4	10.19
		-14.7	-15.0	55.5	14.74	53.7	14.46	50.1	13.86	48.3	13.55	42.9	12.55	39.4	11.82	30.4	9.75
		-9.6	-10.0	55.5	13.20	53.7	12.97	50.1	12.47	48.3	12.21	42.9	11.35	39.4	10.73	30.4	9.00
		-4.4	-5.0	55.5	11.52	53.7	11.36	50.1	11.00	48.3	10.81	42.9	10.13	39.4	9.62	30.4	8.12
		-1.8	-2.5	55.5	10.70	53.7	10.56	50.1	10.24	48.3	10.07	42.9	9.47	39.4	9.00	30.4	7.63
		0.8	0.0	55.5	9.83	53.7	9.71	50.1	9.45	48.3	9.30	42.9	8.77	39.4	8.36	30.4	7.12
		2.8	2.0	55.5	8.97	53.7	8.88	50.1	8.66	48.3	8.54	42.9	8.08	39.4	7.72	30.4	6.62
		6.0	5.0	55.5	7.75	53.7	7.69	50.1	7.53	48.3	7.44	42.9	7.07	39.4	6.77	30.4	5.80
		7.0	6.0	55.5	7.37	53.7	7.30	50.1	7.14	48.3	7.04	42.9	6.70	39.4	6.43	30.4	5.58
		8.6	7.5	55.5	6.66	53.7	6.62	50.1	6.50	48.3	6.43	42.9	6.16	39.4	5.93	30.4	5.20
		11.2	10.0	55.5	6.38	53.7	6.20	50.1	5.84	48.3	5.66	42.9	5.32	39.4	5.17	30.4	4.61
		16.4	15.0	55.5	6.38	53.7	6.20	50.1	5.84	48.3	5.66	42.9	5.12	39.4	4.76	30.4	3.86
		24.0	18.0	55.5	6.38	53.7	6.20	50.1	5.84	48.3	5.66	42.9	5.12	39.4	4.76	30.4	3.86

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

22HP (Heating) U-10ME2E8+U-12ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	47.5	13.03	46.0	12.83	42.9	12.39	41.4	12.16	36.8	11.36	33.7	10.72	26.1	8.83
		-19.8	-20.0	47.5	12.24	46.0	12.06	42.9	11.67	41.4	11.46	36.8	10.78	33.7	10.25	26.1	8.57
		-14.7	-15.0	47.5	11.32	46.0	11.19	42.9	10.87	41.4	10.69	36.8	10.08	33.7	9.59	26.1	8.15
		-9.6	-10.0	47.5	10.26	46.0	10.15	42.9	9.89	41.4	9.74	36.8	9.21	33.7	8.80	26.1	7.51
		-4.4	-5.0	47.5	9.01	46.0	8.93	42.9	8.73	41.4	8.61	36.8	8.19	33.7	7.85	26.1	6.76
		-1.8	-2.5	47.5	8.32	46.0	8.25	42.9	8.09	41.4	8.00	36.8	7.63	33.7	7.32	26.1	6.35
		0.8	0.0	47.5	7.59	46.0	7.55	42.9	7.43	41.4	7.35	36.8	7.04	33.7	6.78	26.1	5.92
		2.8	2.0	47.5	6.88	46.0	6.86	42.9	6.77	41.4	6.72	36.8	6.47	33.7	6.25	26.1	5.49
		6.0	5.0	47.5	5.86	46.0	5.84	42.9	5.79	41.4	5.75	36.8	5.57	33.7	5.41	26.1	4.77
		7.0	6.0	47.5	5.58	46.0	5.47	42.9	5.44	41.4	5.41	36.8	5.27	33.7	5.13	26.1	4.60
		8.6	7.5	47.5	5.58	46.0	5.42	42.9	5.12	41.4	4.96	36.8	4.84	33.7	4.73	26.1	4.29
		11.2	10.0	47.5	5.58	46.0	5.42	42.9	5.12	41.4	4.96	36.8	4.50	33.7	4.19	26.1	3.80
		16.4	15.0	47.5	5.58	46.0	5.42	42.9	5.12	41.4	4.96	36.8	4.50	33.7	4.19	26.1	3.42
		24.0	18.0	47.5	5.58	46.0	5.42	42.9	5.12	41.4	4.96	36.8	4.50	33.7	4.19	26.1	3.42

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	39.6	10.13	38.3	10.03	35.8	9.77	34.5	9.63	30.7	9.12	28.1	8.72	21.7	7.30
		-19.8	-20.0	39.6	9.58	38.3	9.49	35.8	9.27	34.5	9.14	30.7	8.68	28.1	8.30	21.7	7.12
		-14.7	-15.0	39.6	8.87	38.3	8.80	35.8	8.61	34.5	8.50	30.7	8.10	28.1	7.76	21.7	6.71
		-9.6	-10.0	39.6	7.99	38.3	7.94	35.8	7.80	34.5	7.71	30.7	7.38	28.1	7.10	21.7	6.18
		-4.4	-5.0	39.6	6.97	38.3	6.94	35.8	6.85	34.5	6.79	30.7	6.54	28.1	6.31	21.7	5.55
		-1.8	-2.5	39.6	6.40	38.3	6.39	35.8	6.33	34.5	6.28	30.7	6.08	28.1	5.89	21.7	5.21
		0.8	0.0	39.6	5.81	38.3	5.82	35.8	5.79	34.5	5.76	30.7	5.60	28.1	5.44	21.7	4.85
		2.8	2.0	39.6	5.24	38.3	5.26	35.8	5.25	34.5	5.23	30.7	5.11	28.1	4.98	21.7	4.47
		6.0	5.0	39.6	4.78	38.3	4.65	35.8	4.40	34.5	4.38	30.7	4.34	28.1	4.27	21.7	3.89
		7.0	6.0	39.6	4.78	38.3	4.65	35.8	4.40	34.5	4.27	30.7	4.11	28.1	4.05	21.7	3.75
		8.6	7.5	39.6	4.78	38.3	4.65	35.8	4.40	34.5	4.27	30.7	3.88	28.1	3.74	21.7	3.50
		11.2	10.0	39.6	4.78	38.3	4.65	35.8	4.40	34.5	4.27	30.7	3.88	28.1	3.63	21.7	3.11
		16.4	15.0	39.6	4.78	38.3	4.65	35.8	4.40	34.5	4.27	30.7	3.88	28.1	3.63	21.7	2.98
		24.0	18.0	39.6	4.78	38.3	4.65	35.8	4.40	34.5	4.27	30.7	3.88	28.1	3.63	21.7	2.98

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	31.7	7.80	30.7	7.75	28.6	7.60	27.6	7.51	24.5	7.17	22.5	6.89	17.4	5.95
		-19.8	-20.0	31.7	7.37	30.7	7.32	28.6	7.20	27.6	7.12	24.5	6.82	22.5	6.56	17.4	5.72
		-14.7	-15.0	31.7	6.80	30.7	6.77	28.6	6.67	27.6	6.61	24.5	6.35	22.5	6.13	17.4	5.38
		-9.6	-10.0	31.7	6.11	30.7	6.09	28.6	6.03	27.6	5.98	24.5	5.78	22.5	5.60	17.4	4.96
		-4.4	-5.0	31.7	5.30	30.7	5.30	28.6	5.28	27.6	5.25	24.5	5.12	22.5	4.98	17.4	4.46
		-1.8	-2.5	31.7	4.86	30.7	4.87	28.6	4.87	27.6	4.85	24.5	4.75	22.5	4.63	17.4	4.17
		0.8	0.0	31.7	4.35	30.7	4.37	28.6	4.39	27.6	4.39	24.5	4.33	22.5	4.24	17.4	3.87
		2.8	2.0	31.7	3.99	30.7	3.88	28.6	3.92	27.6	3.93	24.5	3.91	22.5	3.86	17.4	3.57
		6.0	5.0	31.7	3.99	30.7	3.88	28.6	3.68	27.6	3.57	24.5	3.34	22.5	3.32	17.4	3.14
		7.0	6.0	31.7	3.99	30.7	3.88	28.6	3.68	27.6	3.57	24.5	3.27	22.5	3.16	17.4	3.01
		8.6	7.5	31.7	3.99	30.7	3.88	28.6	3.68	27.6	3.57	24.5	3.27	22.5	3.06	17.4	2.82
		11.2	10.0	31.7	3.99	30.7	3.88	28.6	3.68	27.6	3.57	24.5	3.27	22.5	3.06	17.4	2.55
		16.4	15.0	31.7	3.99	30.7	3.88	28.6	3.68	27.6	3.57	24.5	3.27	22.5	3.06	17.4	2.55
		24.0	18.0	31.7	3.99	30.7	3.88	28.6	3.68	27.6	3.57	24.5	3.27	22.5	3.06	17.4	2.55

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	23.8	5.76	23.0	5.73	21.5	5.66	20.7	5.61	18.4	5.40	16.9	5.21	13.0	4.59
		-19.8	-20.0	23.8	5.44	23.0	5.42	21.5	5.36	20.7	5.31	18.4	5.13	16.9	4.97	13.0	4.40
		-14.7	-15.0	23.8	5.02	23.0	5.01	21.5	4.96	20.7	4.93	18.4	4.79	16.9	4.65	13.0	4.14
		-9.6	-10.0	23.8	4.50	23.0	4.50	21.5	4.48	20.7	4.46	18.4	4.35	16.9	4.24	13.0	3.81
		-4.4	-5.0	23.8	3.83	23.0	3.85	21.5	3.87	20.7	3.86	18.4	3.81	16.9	3.74	13.0	3.42
		-1.8	-2.5	23.8	3.48	23.0	3.50	21.5	3.53	20.7	3.54	18.4	3.52	16.9	3.47	13.0	3.20
		0.8	0.0	23.8	3.19	23.0	3.14	21.5	3.19	20.7	3.21	18.4	3.22	16.9	3.19	13.0	2.98
		2.8	2.0	23.8	3.19	23.0	3.11	21.5	2.96	20.7	2.89	18.4	2.92	16.9	2.91	13.0	2.76
		6.0	5.0	23.8	3.19	23.0	3.11	21.5	2.96	20.7	2.88	18.4	2.65	16.9	2.53	13.0	2.46
		7.0	6.0	23.8	3.19	23.0	3.11	21.5	2.96	20.7	2.88	18.4	2.65	16.9	2.50	13.0	2.36
		8.6	7.5	23.8	3.19	23.0	3.11	21.5	2.96	20.7	2.88	18.4	2.65	16.9	2.50	13.0	2.22
		11.2	10.0	23.8	3.19	23.0	3.11	21.5	2.96	20.7	2.88	18.4	2.65	16.9	2.50	13.0	2.11
		16.4	15.0	23.8	3.19	23.0	3.11	21.5	2.96	20.7	2.88	18.4	2.65	16.9	2.50	13.0	2.11
		24.0	18.0	23.8	3.19	23.0	3.11	21.5	2.96	20.7	2.88	18.4	2.65	16.9	2.50	13.0	2.11

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-17. 24HP (Cooling) U-12ME2E8+U-12ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	45.3	4.73	54.4	5.68	63.5	6.62	68.0	7.09	77.1	8.04	86.1	8.99	95.2	9.93
		-5.0	45.3	4.74	54.4	5.68	63.5	6.63	68.0	7.10	77.1	8.05	86.1	9.00	95.2	9.94
		0.0	45.3	4.75	54.4	5.70	63.5	6.64	68.0	7.12	77.1	8.06	86.1	9.02	95.2	9.97
		5.0	45.3	4.76	54.4	5.71	63.5	6.66	68.0	7.14	77.1	8.11	86.1	9.10	95.2	10.07
		10.0	45.3	4.78	54.4	5.75	63.5	6.75	68.0	7.25	77.1	8.28	86.1	9.31	95.2	10.31
		15.0	45.3	4.90	54.4	5.97	63.5	7.06	68.0	7.62	77.1	8.74	86.1	9.87	95.2	10.90
		20.0	45.3	5.58	54.4	6.84	63.5	8.24	68.0	9.00	77.1	10.63	86.1	12.41	95.2	14.35
		25.0	45.3	7.15	54.4	8.79	63.5	10.59	68.0	11.55	77.1	13.60	86.1	15.80	95.2	18.17
		30.0	45.3	8.91	54.4	10.95	63.5	13.16	68.0	14.33	77.1	16.80	86.1	19.44	95.2	22.27
		35.0	45.3	10.81	54.4	13.27	63.5	15.92	68.0	17.31	77.1	20.24	86.1	23.37	91.1	24.22
		40.0	45.3	12.86	54.4	15.78	63.5	18.89	68.0	20.53	77.1	23.97	80.7	24.21	84.2	24.22
		43.0	45.3	14.16	54.4	17.37	63.5	20.79	68.0	22.59	73.7	24.22	77.2	24.22	78.8	22.97
		46.0	44.9	15.38	53.9	18.87	57.2	19.19	57.8	18.68	59.4	17.83	61.3	17.16	63.7	16.64
52.0	19.6	6.68	21.3	6.75	23.4	6.87	24.5	6.95	27.0	7.13	29.7	7.33	32.7	7.54		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	40.8	3.81	49.0	4.78	57.1	5.73	61.2	6.20	69.4	7.11	77.5	8.01	85.7	8.88
		-5.0	40.8	3.82	49.0	4.79	57.1	5.74	61.2	6.21	69.4	7.12	77.5	8.02	85.7	8.90
		0.0	40.8	3.83	49.0	4.80	57.1	5.75	61.2	6.22	69.4	7.14	77.5	8.03	85.7	8.91
		5.0	40.8	3.84	49.0	4.82	57.1	5.77	61.2	6.23	69.4	7.15	77.5	8.06	85.7	8.95
		10.0	40.8	3.86	49.0	4.84	57.1	5.80	61.2	6.28	69.4	7.23	77.5	8.17	85.7	9.09
		15.0	40.8	3.91	49.0	4.95	57.1	5.97	61.2	6.48	69.4	7.49	77.5	8.47	85.7	9.44
		20.0	40.8	4.33	49.0	5.50	57.1	6.64	61.2	7.20	69.4	8.28	77.5	9.49	85.7	10.78
		25.0	40.8	5.83	49.0	7.16	57.1	8.54	61.2	9.25	69.4	10.71	77.5	12.20	85.7	13.73
		30.0	40.8	7.46	49.0	9.08	57.1	10.72	61.2	11.56	69.4	13.26	77.5	14.99	85.7	16.77
		35.0	40.8	9.50	49.0	11.46	57.1	13.44	61.2	14.44	69.4	16.48	77.5	18.56	85.7	20.72
		40.0	40.8	11.31	49.0	13.56	57.1	15.83	61.2	16.98	69.4	19.32	77.5	21.77	84.2	24.22
		43.0	40.8	12.42	49.0	14.85	57.1	17.31	61.2	18.56	69.4	21.14	77.2	24.22	78.8	22.97
		46.0	40.8	13.29	49.0	16.09	57.1	19.02	57.8	18.68	59.4	17.83	61.3	17.16	63.7	16.64
52.0	19.6	6.68	21.3	6.75	23.4	6.87	24.5	6.95	27.0	7.13	29.7	7.33	32.7	7.54		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	36.3	3.26	43.5	4.14	50.8	5.00	54.4	5.43	61.7	6.26	68.9	7.08	76.2	7.88
		-5.0	36.3	3.27	43.5	4.15	50.8	5.01	54.4	5.44	61.7	6.27	68.9	7.09	76.2	7.89
		0.0	36.3	3.28	43.5	4.16	50.8	5.02	54.4	5.45	61.7	6.28	68.9	7.10	76.2	7.90
		5.0	36.3	3.29	43.5	4.17	50.8	5.04	54.4	5.46	61.7	6.30	68.9	7.11	76.2	7.91
		10.0	36.3	3.31	43.5	4.19	50.8	5.05	54.4	5.48	61.7	6.32	68.9	7.15	76.2	7.97
		15.0	36.3	3.33	43.5	4.23	50.8	5.12	54.4	5.56	61.7	6.44	68.9	7.30	76.2	8.14
		20.0	36.3	3.52	43.5	4.50	50.8	5.46	54.4	5.93	61.7	6.85	68.9	7.75	76.2	8.62
		25.0	36.3	4.76	43.5	5.77	50.8	6.80	54.4	7.32	61.7	8.37	68.9	9.44	76.2	10.52
		30.0	36.3	6.19	43.5	7.44	50.8	8.71	54.4	9.34	61.7	10.61	68.9	11.89	76.2	13.17
		35.0	36.3	7.98	43.5	9.54	50.8	11.09	54.4	11.86	61.7	13.39	68.9	14.93	76.2	16.47
		40.0	36.3	9.58	43.5	11.39	50.8	13.17	54.4	14.06	61.7	15.83	68.9	17.61	76.2	19.41
		43.0	36.3	10.57	43.5	12.53	50.8	14.47	54.4	15.44	61.7	17.37	68.9	19.32	76.2	21.31
		46.0	36.3	11.26	43.5	13.44	50.8	15.68	54.4	16.82	59.4	17.83	61.3	17.16	63.7	16.64
52.0	19.6	6.68	21.3	6.75	23.4	6.87	24.5	6.95	27.0	7.13	29.7	7.33	32.7	7.54		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	31.7	2.70	38.1	3.49	44.4	4.26	47.6	4.64	53.9	5.39	60.3	6.12	66.6	6.84
		-5.0	31.7	2.71	38.1	3.50	44.4	4.27	47.6	4.65	53.9	5.39	60.3	6.13	66.6	6.85
		0.0	31.7	2.72	38.1	3.50	44.4	4.27	47.6	4.65	53.9	5.40	60.3	6.14	66.6	6.86
		5.0	31.7	2.73	38.1	3.51	44.4	4.29	47.6	4.67	53.9	5.42	60.3	6.15	66.6	6.87
		10.0	31.7	2.74	38.1	3.53	44.4	4.30	47.6	4.68	53.9	5.43	60.3	6.16	66.6	6.88
		15.0	31.7	2.76	38.1	3.55	44.4	4.32	47.6	4.71	53.9	5.47	60.3	6.21	66.6	6.95
		20.0	31.7	2.83	38.1	3.65	44.4	4.46	47.6	4.86	53.9	5.65	60.3	6.42	66.6	7.17
		25.0	31.7	3.57	38.1	4.42	44.4	5.23	47.6	5.63	53.9	6.40	60.3	7.15	66.6	7.88
		30.0	31.7	5.03	38.1	5.97	44.4	6.90	47.6	7.35	53.9	8.26	60.3	9.15	66.6	10.02
		35.0	31.7	6.58	38.1	7.77	44.4	8.94	47.6	9.52	53.9	10.64	60.3	11.74	66.6	12.82
		40.0	31.7	7.97	38.1	9.39	44.4	10.76	47.6	11.43	53.9	12.75	60.3	14.03	66.6	15.29
		43.0	31.7	8.84	38.1	10.38	44.4	11.88	47.6	12.61	53.9	14.05	60.3	15.45	66.6	16.84
		46.0	31.7	9.44	38.1	11.09	44.4	12.74	47.6	13.57	53.9	15.24	60.3	16.30	63.7	16.64
52.0	19.6	6.68	21.3	6.75	23.4	6.87	24.5	6.95	27.0	7.13	29.7	7.33	32.7	7.54		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

24HP (Cooling) U-12ME2E8+U-12ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	27.2	2.14	32.6	2.82	38.1	3.50	40.8	3.83	46.2	4.49	51.7	5.13	57.1	5.76
		-5.0	27.2	2.14	32.6	2.83	38.1	3.50	40.8	3.84	46.2	4.49	51.7	5.14	57.1	5.77
		0.0	27.2	2.15	32.6	2.84	38.1	3.51	40.8	3.84	46.2	4.50	51.7	5.15	57.1	5.78
		5.0	27.2	2.16	32.6	2.84	38.1	3.52	40.8	3.85	46.2	4.51	51.7	5.16	57.1	5.79
		10.0	27.2	2.17	32.6	2.86	38.1	3.53	40.8	3.87	46.2	4.52	51.7	5.17	57.1	5.80
		15.0	27.2	2.19	32.6	2.88	38.1	3.55	40.8	3.89	46.2	4.54	51.7	5.19	57.1	5.82
		20.0	27.2	2.22	32.6	2.91	38.1	3.59	40.8	3.93	46.2	4.59	51.7	5.25	57.1	5.89
		25.0	27.2	2.29	32.6	3.21	38.1	3.90	40.8	4.24	46.2	4.90	51.7	5.55	57.1	6.19
		30.0	27.2	3.98	32.6	4.66	38.1	5.30	40.8	5.61	46.2	6.21	51.7	6.78	57.1	7.33
		35.0	27.2	5.29	32.6	6.17	38.1	7.01	40.8	7.41	46.2	8.19	51.7	8.94	57.1	9.64
		40.0	27.2	6.48	32.6	7.55	38.1	8.57	40.8	9.05	46.2	9.99	51.7	10.88	57.1	11.74
		43.0	27.2	7.22	32.6	8.40	38.1	9.52	40.8	10.06	46.2	11.09	51.7	12.08	57.1	13.02
46.0	27.2	7.79	32.6	9.01	38.1	10.19	40.8	10.77	46.2	11.91	51.7	13.03	57.1	14.12		
52.0	19.6	6.68	21.3	6.75	23.4	6.87	24.5	6.95	27.0	7.13	29.7	7.33	32.7	7.54		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	22.7	1.56	27.2	2.14	31.7	2.72	34.0	3.00	38.5	3.56	43.1	4.11	47.6	4.65
		-5.0	22.7	1.57	27.2	2.15	31.7	2.72	34.0	3.00	38.5	3.56	43.1	4.11	47.6	4.66
		0.0	22.7	1.57	27.2	2.15	31.7	2.73	34.0	3.01	38.5	3.57	43.1	4.12	47.6	4.66
		5.0	22.7	1.58	27.2	2.16	31.7	2.73	34.0	3.02	38.5	3.58	43.1	4.13	47.6	4.67
		10.0	22.7	1.59	27.2	2.17	31.7	2.74	34.0	3.03	38.5	3.59	43.1	4.14	47.6	4.68
		15.0	22.7	1.60	27.2	2.18	31.7	2.76	34.0	3.04	38.5	3.60	43.1	4.15	47.6	4.70
		20.0	22.7	1.63	27.2	2.21	31.7	2.78	34.0	3.07	38.5	3.63	43.1	4.17	47.6	4.71
		25.0	22.7	1.70	27.2	2.28	31.7	2.86	34.0	3.14	38.5	3.70	43.1	4.26	47.6	4.80
		30.0	22.7	3.06	27.2	3.47	31.7	3.72	34.0	3.90	38.5	4.31	43.1	4.75	47.6	5.22
		35.0	22.7	4.11	27.2	4.73	31.7	5.30	34.0	5.56	38.5	6.05	43.1	6.51	47.6	6.92
		40.0	22.7	5.11	27.2	5.88	31.7	6.59	34.0	6.92	38.5	7.54	43.1	8.12	47.6	8.64
		43.0	22.7	5.72	27.2	6.59	31.7	7.38	34.0	7.75	38.5	8.46	43.1	9.11	47.6	9.70
46.0	22.7	6.32	27.2	7.18	31.7	7.99	34.0	8.38	38.5	9.12	43.1	9.81	47.6	10.47		
52.0	19.6	6.68	21.3	6.75	23.4	6.87	24.5	6.95	27.0	7.13	29.7	7.33	32.7	7.54		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	18.1	0.98	21.8	1.45	25.4	1.92	27.2	2.15	30.8	2.61	34.5	3.06	38.1	3.51
		-5.0	18.1	0.98	21.8	1.45	25.4	1.92	27.2	2.15	30.8	2.61	34.5	3.06	38.1	3.51
		0.0	18.1	0.98	21.8	1.46	25.4	1.93	27.2	2.16	30.8	2.61	34.5	3.07	38.1	3.52
		5.0	18.1	0.99	21.8	1.46	25.4	1.93	27.2	2.16	30.8	2.62	34.5	3.07	38.1	3.52
		10.0	18.1	0.99	21.8	1.47	25.4	1.94	27.2	2.17	30.8	2.63	34.5	3.08	38.1	3.53
		15.0	18.1	1.01	21.8	1.48	25.4	1.95	27.2	2.18	30.8	2.64	34.5	3.09	38.1	3.55
		20.0	18.1	1.02	21.8	1.50	25.4	1.97	27.2	2.20	30.8	2.66	34.5	3.11	38.1	3.57
		25.0	18.1	1.06	21.8	1.53	25.4	2.00	27.2	2.23	30.8	2.68	34.5	3.13	38.1	3.60
		30.0	18.1	1.55	21.8	1.83	25.4	2.20	27.2	2.40	30.8	2.82	34.5	3.29	38.1	3.81
		35.0	18.1	3.07	21.8	3.46	25.4	3.81	27.2	3.96	30.8	4.24	34.5	4.58	38.1	5.03
		40.0	18.1	3.85	21.8	4.37	25.4	4.83	27.2	5.03	30.8	5.41	34.5	5.73	38.1	6.00
		43.0	18.1	4.34	21.8	4.94	25.4	5.46	27.2	5.70	30.8	6.13	34.5	6.51	38.1	6.84
46.0	18.1	5.01	21.8	5.58	25.4	6.10	27.2	6.34	30.8	6.79	34.5	7.18	38.1	7.53		
52.0	18.1	5.93	21.3	6.75	23.4	6.87	24.5	6.95	27.0	7.13	29.7	7.33	32.7	7.54		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	13.6	0.38	16.3	0.74	19.0	1.10	20.4	1.28	23.1	1.64	25.8	1.99	28.6	2.33
		-5.0	13.6	0.38	16.3	0.74	19.0	1.10	20.4	1.29	23.1	1.64	25.8	1.99	28.6	2.34
		0.0	13.6	0.38	16.3	0.75	19.0	1.11	20.4	1.29	23.1	1.65	25.8	2.00	28.6	2.35
		5.0	13.6	0.39	16.3	0.75	19.0	1.11	20.4	1.30	23.1	1.66	25.8	2.01	28.6	2.36
		10.0	13.6	0.39	16.3	0.76	19.0	1.12	20.4	1.30	23.1	1.66	25.8	2.02	28.6	2.37
		15.0	13.6	0.40	16.3	0.76	19.0	1.13	20.4	1.31	23.1	1.68	25.8	2.03	28.6	2.38
		20.0	13.6	0.41	16.3	0.77	19.0	1.14	20.4	1.33	23.1	1.70	25.8	2.05	28.6	2.40
		25.0	13.6	0.44	16.3	0.80	19.0	1.17	20.4	1.36	23.1	1.72	25.8	2.09	28.6	2.48
		30.0	13.6	0.51	16.3	0.84	19.0	1.22	20.4	1.44	23.1	1.90	25.8	2.33	28.6	2.76
		35.0	13.6	2.14	16.3	2.37	19.0	2.64	20.4	2.82	23.1	3.16	25.8	3.51	28.6	3.84
		40.0	13.6	2.72	16.3	3.04	19.0	3.30	20.4	3.41	23.1	3.59	25.8	3.73	28.6	3.84
		43.0	13.6	3.09	16.3	3.46	19.0	3.77	20.4	3.90	23.1	4.13	25.8	4.31	28.6	4.44
46.0	13.6	3.86	16.3	4.21	19.0	4.51	20.4	4.64	23.1	4.87	25.8	5.06	28.6	5.21		
52.0	13.6	4.52	16.3	4.97	19.0	5.37	20.4	5.55	23.1	5.73	25.8	5.82	28.6	5.86		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-18. 24HP (Heating) U-12ME2E8+U-12ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	56.4	19.43	54.9	19.07	51.9	18.30	50.4	17.90	45.7	16.61	42.4	15.67	33.9	13.04
		-19.8	-20.0	59.2	19.91	57.7	19.53	54.6	18.74	53.0	18.32	48.0	16.97	44.7	16.00	35.8	13.28
		-14.7	-15.0	63.3	20.59	61.7	20.22	58.4	19.37	56.7	18.93	51.4	17.51	47.8	16.48	38.3	13.63
		-9.6	-10.0	68.8	21.65	67.0	21.24	63.4	20.35	61.6	19.86	55.9	18.25	52.0	17.06	41.7	14.09
		-4.4	-5.0	75.8	22.43	73.9	22.01	69.9	21.10	67.9	20.62	61.6	19.04	57.3	17.90	45.9	14.69
		-1.8	-2.5	80.0	22.78	77.9	22.34	73.7	21.39	71.6	20.89	65.0	19.26	60.4	18.10	48.2	14.72
		0.8	0.0	84.0	22.82	82.5	22.67	78.1	21.69	75.8	21.17	68.0	19.12	62.3	17.56	48.2	13.69
		2.8	2.0	87.8	22.62	85.0	21.89	79.3	20.44	76.5	19.73	68.0	17.59	62.3	16.17	48.2	12.66
		6.0	5.0	87.8	19.57	85.0	18.96	79.3	17.76	76.5	17.16	68.0	15.36	62.3	14.13	48.2	11.14
		7.0	6.0	87.8	18.59	85.0	18.02	79.3	16.89	76.5	16.30	68.0	14.61	62.3	13.49	48.2	10.67
		8.6	7.5	87.8	17.12	85.0	16.62	79.3	15.60	76.5	15.10	68.0	13.57	62.3	12.56	48.2	9.99
		11.2	10.0	87.8	14.88	85.0	14.47	79.3	13.64	76.5	13.22	68.0	11.96	62.3	11.11	48.2	8.92
		16.4	15.0	87.8	10.93	85.0	10.66	79.3	10.13	76.5	9.85	68.0	9.00	62.3	8.40	48.2	6.82
		24.0	18.0	87.8	9.99	85.0	9.69	79.3	9.09	76.5	8.79	68.0	7.90	62.3	7.30	48.2	5.81

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	90%	-24.9	-25.0	56.4	19.43	54.9	19.07	51.9	18.30	50.4	17.90	45.7	16.61	42.4	15.67	33.9	13.04
		-19.8	-20.0	59.2	19.91	57.7	19.53	54.6	18.74	53.0	18.32	48.0	16.97	44.7	16.00	35.8	13.28
		-14.7	-15.0	63.3	20.59	61.7	20.22	58.4	19.37	56.7	18.93	51.4	17.51	47.8	16.48	38.3	13.63
		-9.6	-10.0	68.8	21.65	67.0	21.24	63.4	20.35	61.6	19.86	55.9	18.25	52.0	17.06	41.7	14.09
		-4.4	-5.0	75.8	22.43	73.9	22.01	69.9	21.10	67.9	20.62	61.2	17.81	56.1	16.50	43.4	13.14
		-1.8	-2.5	79.1	20.60	76.5	20.04	71.4	18.90	68.9	18.33	61.2	16.57	56.1	15.38	43.4	12.30
		0.8	0.0	79.1	18.86	76.5	18.37	71.4	17.36	68.9	16.85	61.2	15.28	56.1	14.20	43.4	11.42
		2.8	2.0	79.1	17.13	76.5	16.69	71.4	15.81	68.9	15.37	61.2	13.98	56.1	13.04	43.4	10.60
		6.0	5.0	79.1	14.82	76.5	14.51	71.4	13.84	68.9	13.49	61.2	12.38	56.1	11.57	43.4	9.39
		7.0	6.0	79.1	14.33	76.5	13.99	71.4	13.28	68.9	12.92	61.2	11.80	56.1	11.03	43.4	8.98
		8.6	7.5	79.1	13.13	76.5	12.83	71.4	12.22	68.9	11.90	61.2	10.92	56.1	10.23	43.4	8.39
		11.2	10.0	79.1	11.25	76.5	11.03	71.4	10.56	68.9	10.32	61.2	9.54	56.1	8.99	43.4	7.46
		16.4	15.0	79.1	9.06	76.5	8.79	71.4	8.26	68.9	7.99	61.2	7.18	56.1	6.66	43.4	5.62
		24.0	18.0	79.1	9.06	76.5	8.79	71.4	8.26	68.9	7.99	61.2	7.18	56.1	6.64	43.4	5.30

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	80%	-24.9	-25.0	56.4	19.43	54.9	19.07	51.9	18.30	50.4	17.90	45.7	16.61	42.4	15.67	33.9	13.04
		-19.8	-20.0	59.2	19.91	57.7	19.53	54.6	18.74	53.0	18.32	48.0	16.97	44.7	16.00	35.8	13.28
		-14.7	-15.0	63.3	20.59	61.7	20.22	58.4	19.37	56.7	18.93	51.4	17.51	47.8	16.48	38.3	13.63
		-9.6	-10.0	68.8	21.65	67.0	21.24	63.4	20.35	61.2	17.62	54.4	16.12	49.9	15.07	38.5	12.25
		-4.4	-5.0	70.3	17.00	68.0	16.63	63.5	15.87	61.2	15.48	54.4	14.23	49.9	13.34	38.5	10.93
		-1.8	-2.5	70.3	15.63	68.0	15.32	63.5	14.65	61.2	14.30	54.4	13.19	49.9	12.42	38.5	10.27
		0.8	0.0	70.3	14.24	68.0	13.99	63.5	13.46	61.2	13.18	54.4	12.24	49.9	11.55	38.5	9.59
		2.8	2.0	70.3	13.07	68.0	12.86	63.5	12.39	61.2	12.14	54.4	11.31	49.9	10.68	38.5	8.91
		6.0	5.0	70.3	11.40	68.0	11.23	63.5	10.85	61.2	10.65	54.4	9.93	49.9	9.39	38.5	7.82
		7.0	6.0	70.3	10.88	68.0	10.70	63.5	10.32	61.2	10.11	54.4	9.43	49.9	8.93	38.5	7.51
		8.6	7.5	70.3	9.89	68.0	9.75	63.5	9.43	61.2	9.26	54.4	8.69	49.9	8.26	38.5	7.00
		11.2	10.0	70.3	8.38	68.0	8.28	63.5	8.07	61.2	7.95	54.4	7.53	49.9	7.21	38.5	6.20
		16.4	15.0	70.3	8.14	68.0	7.90	63.5	7.42	61.2	7.18	54.4	6.47	49.9	5.99	38.5	4.79
		24.0	18.0	70.3	8.14	68.0	7.90	63.5	7.42	61.2	7.18	54.4	6.47	49.9	5.99	38.5	4.79

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	70%	-24.9	-25.0	56.4	19.43	54.9	19.07	51.9	18.30	50.4	17.90	45.7	16.61	42.4	15.67	33.7	12.04
		-19.8	-20.0	59.2	19.91	57.7	19.53	54.6	18.74	53.0	18.32	47.6	15.29	43.6	14.29	33.7	11.58
		-14.7	-15.0	61.5	16.63	59.5	16.33	55.5	15.67	53.6	15.33	47.6	14.21	43.6	13.39	33.7	11.06
		-9.6	-10.0	61.5	14.87	59.5	14.62	55.5	14.09	53.6	13.80	47.6	12.89	43.6	12.20	33.7	10.21
		-4.4	-5.0	61.5	13.05	59.5	12.87	55.5	12.47	53.6	12.24	47.6	11.48	43.6	10.90	33.7	9.18
		-1.8	-2.5	61.5	12.09	59.5	11.94	55.5	11.58	53.6	11.38	47.6	10.70	43.6	10.18	33.7	8.61
		0.8	0.0	61.5	11.09	59.5	10.96	55.5	10.66	53.6	10.49	47.6	9.90	43.6	9.43	33.7	8.02
		2.8	2.0	61.5	10.10	59.5	10.00	55.5	9.75	53.6	9.61	47.6	9.10	43.6	8.69	33.7	7.43
		6.0	5.0	61.5	8.66	59.5	8.60	55.5	8.41	53.6	8.29	47.6	7.88	43.6	7.55	33.7	6.46
		7.0	6.0	61.5	8.13	59.5	8.07	55.5	7.91	53.6	7.81	47.6	7.46	43.6	7.16	33.7	6.22
		8.6	7.5	61.5	7.35	59.5	7.30	55.5	7.19	53.6	7.12	47.6	6.84	43.6	6.60	33.7	5.79
		11.2	10.0	61.5	7.21	59.5	7.00	55.5	6.58	53.6	6.38	47.6	5.90	43.6	5.73	33.7	5.12
		16.4	15.0	61.5	7.21	59.5	7.00	55.5	6.58	53.6	6.38	47.6	5.75	43.6	5.33	33.7	4.29
		24.0	18.0	61.5	7.21	59.5	7.00	55.5	6.58	53.6	6.38	47.6	5.75	43.6	5.33	33.7	4.29

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

24HP (Heating) U-12ME2E8+U-12ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	52.7	14.74	51.0	14.52	47.6	14.04	45.9	13.78	40.8	12.90	37.4	12.21	28.9	10.04
		-19.8	-20.0	52.7	13.91	51.0	13.72	47.6	13.31	45.9	13.08	40.8	12.28	37.4	11.67	28.9	9.75
		-14.7	-15.0	52.7	12.89	51.0	12.74	47.6	12.38	45.9	12.17	40.8	11.46	37.4	10.91	28.9	9.25
		-9.6	-10.0	52.7	11.65	51.0	11.53	47.6	11.23	45.9	11.06	40.8	10.46	37.4	9.98	28.9	8.50
		-4.4	-5.0	52.7	10.19	51.0	10.10	47.6	9.88	45.9	9.75	40.8	9.26	37.4	8.87	28.9	7.63
		-1.8	-2.5	52.7	9.39	51.0	9.32	47.6	9.14	45.9	9.03	40.8	8.61	37.4	8.27	28.9	7.15
		0.8	0.0	52.7	8.55	51.0	8.50	47.6	8.37	45.9	8.28	40.8	7.94	37.4	7.64	28.9	6.65
		2.8	2.0	52.7	7.72	51.0	7.70	47.6	7.61	45.9	7.54	40.8	7.27	37.4	7.01	28.9	6.12
		6.0	5.0	52.7	6.43	51.0	6.42	47.6	6.38	45.9	6.34	40.8	6.17	37.4	6.00	28.9	5.30
		7.0	6.0	52.7	6.29	51.0	6.11	47.6	5.99	45.9	5.96	40.8	5.83	37.4	5.68	28.9	5.10
		8.6	7.5	52.7	6.29	51.0	6.11	47.6	5.75	45.9	5.57	40.8	5.34	37.4	5.23	28.9	4.75
		11.2	10.0	52.7	6.29	51.0	6.11	47.6	5.75	45.9	5.57	40.8	5.03	37.4	4.67	28.9	4.19
		16.4	15.0	52.7	6.29	51.0	6.11	47.6	5.75	45.9	5.57	40.8	5.03	37.4	4.67	28.9	3.78
24.0	18.0	52.7	6.29	51.0	6.11	47.6	5.75	45.9	5.57	40.8	5.03	37.4	4.67	28.9	3.78		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	43.9	11.54	42.5	11.42	39.7	11.13	38.3	10.97	34.0	10.38	31.2	9.91	24.1	8.29
		-19.8	-20.0	43.9	10.90	42.5	10.80	39.7	10.55	38.3	10.40	34.0	9.86	31.2	9.43	24.1	8.07
		-14.7	-15.0	43.9	10.07	42.5	9.99	39.7	9.78	38.3	9.65	34.0	9.18	31.2	8.80	24.1	7.58
		-9.6	-10.0	43.9	9.05	42.5	8.99	39.7	8.83	38.3	8.73	34.0	8.35	31.2	8.03	24.1	6.96
		-4.4	-5.0	43.9	7.85	42.5	7.82	39.7	7.72	38.3	7.65	34.0	7.37	31.2	7.11	24.1	6.24
		-1.8	-2.5	43.9	7.20	42.5	7.18	39.7	7.12	38.3	7.07	34.0	6.84	31.2	6.62	24.1	5.84
		0.8	0.0	43.9	6.52	42.5	6.52	39.7	6.49	38.3	6.45	34.0	6.26	31.2	6.08	24.1	5.39
		2.8	2.0	43.9	5.77	42.5	5.78	39.7	5.78	38.3	5.76	34.0	5.64	31.2	5.50	24.1	4.95
		6.0	5.0	43.9	5.36	42.5	5.21	39.7	4.91	38.3	4.80	34.0	4.77	31.2	4.70	24.1	4.30
		7.0	6.0	43.9	5.36	42.5	5.21	39.7	4.91	38.3	4.76	34.0	4.50	31.2	4.45	24.1	4.13
		8.6	7.5	43.9	5.36	42.5	5.21	39.7	4.91	38.3	4.76	34.0	4.32	31.2	4.10	24.1	3.84
		11.2	10.0	43.9	5.36	42.5	5.21	39.7	4.91	38.3	4.76	34.0	4.32	31.2	4.02	24.1	3.39
		16.4	15.0	43.9	5.36	42.5	5.21	39.7	4.91	38.3	4.76	34.0	4.32	31.2	4.02	24.1	3.27
24.0	18.0	43.9	5.36	42.5	5.21	39.7	4.91	38.3	4.76	34.0	4.32	31.2	4.02	24.1	3.27		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	35.1	8.84	34.0	8.77	31.7	8.61	30.6	8.50	27.2	8.12	24.9	7.79	19.3	6.70
		-19.8	-20.0	35.1	8.33	34.0	8.28	31.7	8.14	30.6	8.05	27.2	7.70	24.9	7.41	19.3	6.44
		-14.7	-15.0	35.1	7.67	34.0	7.64	31.7	7.53	30.6	7.46	27.2	7.17	24.9	6.91	19.3	6.04
		-9.6	-10.0	35.1	6.87	34.0	6.85	31.7	6.78	30.6	6.73	27.2	6.50	24.9	6.29	19.3	5.55
		-4.4	-5.0	35.1	5.93	34.0	5.93	31.7	5.90	30.6	5.87	27.2	5.71	24.9	5.55	19.3	4.95
		-1.8	-2.5	35.1	5.35	34.0	5.36	31.7	5.37	30.6	5.35	27.2	5.24	24.9	5.12	19.3	4.61
		0.8	0.0	35.1	4.75	34.0	4.78	31.7	4.81	30.6	4.81	27.2	4.76	24.9	4.67	19.3	4.26
		2.8	2.0	35.1	4.44	34.0	4.32	31.7	4.27	30.6	4.29	27.2	4.29	24.9	4.23	19.3	3.92
		6.0	5.0	35.1	4.44	34.0	4.32	31.7	4.08	30.6	3.96	27.2	3.63	24.9	3.62	19.3	3.43
		7.0	6.0	35.1	4.44	34.0	4.32	31.7	4.08	30.6	3.96	27.2	3.60	24.9	3.43	19.3	3.28
		8.6	7.5	35.1	4.44	34.0	4.32	31.7	4.08	30.6	3.96	27.2	3.60	24.9	3.36	19.3	3.06
		11.2	10.0	35.1	4.44	34.0	4.32	31.7	4.08	30.6	3.96	27.2	3.60	24.9	3.36	19.3	2.76
		16.4	15.0	35.1	4.44	34.0	4.32	31.7	4.08	30.6	3.96	27.2	3.60	24.9	3.36	19.3	2.76
24.0	18.0	35.1	4.44	34.0	4.32	31.7	4.08	30.6	3.96	27.2	3.60	24.9	3.36	19.3	2.76		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	26.4	6.47	25.5	6.44	23.8	6.35	23.0	6.29	20.4	6.05	18.7	5.84	14.5	5.13
		-19.8	-20.0	26.4	6.09	25.5	6.07	23.8	6.00	23.0	5.95	20.4	5.75	18.7	5.56	14.5	4.91
		-14.7	-15.0	26.4	5.60	25.5	5.59	23.8	5.54	23.0	5.51	20.4	5.34	18.7	5.18	14.5	4.59
		-9.6	-10.0	26.4	4.95	25.5	4.95	23.8	4.94	23.0	4.92	20.4	4.80	18.7	4.68	14.5	4.21
		-4.4	-5.0	26.4	4.18	25.5	4.21	23.8	4.23	23.0	4.24	20.4	4.19	18.7	4.11	14.5	3.75
		-1.8	-2.5	26.4	3.77	25.5	3.81	23.8	3.85	23.0	3.86	20.4	3.85	18.7	3.80	14.5	3.51
		0.8	0.0	26.4	3.51	25.5	3.42	23.8	3.46	23.0	3.48	20.4	3.50	18.7	3.47	14.5	3.25
		2.8	2.0	26.4	3.51	25.5	3.42	23.8	3.24	23.0	3.15	20.4	3.16	18.7	3.16	14.5	3.00
		6.0	5.0	26.4	3.51	25.5	3.42	23.8	3.24	23.0	3.15	20.4	2.88	18.7	2.72	14.5	2.64
		7.0	6.0	26.4	3.51	25.5	3.42	23.8	3.24	23.0	3.15	20.4	2.88	18.7	2.70	14.5	2.53
		8.6	7.5	26.4	3.51	25.5	3.42	23.8	3.24	23.0	3.15	20.4	2.88	18.7	2.70	14.5	2.38
		11.2	10.0	26.4	3.51	25.5	3.42	23.8	3.24	23.0	3.15	20.4	2.88	18.7	2.70	14.5	2.26
		16.4	15.0	26.4	3.51	25.5	3.42	23.8	3.24	23.0	3.15	20.4	2.88	18.7	2.70	14.5	2.26
24.0	18.0	26.4	3.51	25.5	3.42	23.8	3.24	23.0	3.15	20.4	2.88	18.7	2.70	14.5	2.26		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-19. 26HP (Cooling) U-10ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	48.7	5.32	58.4	6.38	68.1	7.45	73.0	7.98	82.7	9.04	92.5	10.11	102.2	11.17
		-5.0	48.7	5.33	58.4	6.39	68.1	7.46	73.0	7.99	82.7	9.05	92.5	10.12	102.2	11.18
		0.0	48.7	5.34	58.4	6.40	68.1	7.47	73.0	8.00	82.7	9.07	92.5	10.14	102.2	11.20
		5.0	48.7	5.35	58.4	6.42	68.1	7.49	73.0	8.02	82.7	9.10	92.5	10.20	102.2	11.28
		10.0	48.7	5.37	58.4	6.45	68.1	7.55	73.0	8.11	82.7	9.24	92.5	10.38	102.2	11.48
		15.0	48.7	5.46	58.4	6.63	68.1	7.82	73.0	8.42	82.7	9.64	92.5	10.88	102.2	12.02
		20.0	48.7	6.07	58.4	7.42	68.1	9.00	73.0	9.85	82.7	11.69	92.5	13.70	102.2	15.88
		25.0	48.7	7.77	58.4	9.62	68.1	11.64	73.0	12.73	82.7	15.03	92.5	17.51	102.2	20.18
		30.0	48.7	9.76	58.4	12.05	68.1	14.54	73.0	15.86	82.7	18.64	92.5	21.61	102.2	24.80
		35.0	48.7	11.90	58.4	14.67	68.1	17.65	73.0	19.22	82.7	22.52	92.5	26.04	97.7	26.88
		40.0	48.7	14.20	58.4	17.48	68.1	21.00	73.0	22.84	82.7	26.71	86.5	26.88	90.2	26.88
		43.0	48.7	15.66	58.4	19.27	68.1	23.13	73.0	25.16	78.9	26.88	82.7	26.88	84.6	25.58
		46.0	48.2	17.04	57.8	20.97	61.4	21.33	62.1	20.76	63.7	19.80	65.8	19.05	68.4	18.45
52.0	21.0	7.24	22.9	7.32	25.1	7.46	26.3	7.54	29.0	7.74	31.9	7.97	35.1	8.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	43.8	4.30	52.6	5.39	61.3	6.46	65.7	6.98	74.5	8.01	83.2	9.01	92.0	10.00
		-5.0	43.8	4.31	52.6	5.40	61.3	6.47	65.7	6.99	74.5	8.02	83.2	9.02	92.0	10.01
		0.0	43.8	4.32	52.6	5.41	61.3	6.48	65.7	7.00	74.5	8.03	83.2	9.04	92.0	10.02
		5.0	43.8	4.33	52.6	5.43	61.3	6.50	65.7	7.02	74.5	8.05	83.2	9.06	92.0	10.05
		10.0	43.8	4.35	52.6	5.45	61.3	6.52	65.7	7.05	74.5	8.11	83.2	9.14	92.0	10.16
		15.0	43.8	4.39	52.6	5.53	61.3	6.66	65.7	7.22	74.5	8.32	83.2	9.41	92.0	10.47
		20.0	43.8	4.74	52.6	6.02	61.3	7.26	65.7	7.86	74.5	9.05	83.2	10.41	92.0	11.86
		25.0	43.8	6.27	52.6	7.77	61.3	9.34	65.7	10.14	74.5	11.78	83.2	13.46	92.0	15.19
		30.0	43.8	8.11	52.6	9.94	61.3	11.80	65.7	12.74	74.5	14.66	83.2	16.61	92.0	18.62
		35.0	43.8	10.41	52.6	12.62	61.3	14.85	65.7	15.98	74.5	18.27	83.2	20.62	92.0	23.06
		40.0	43.8	12.45	52.6	14.98	61.3	17.54	65.7	18.83	74.5	21.48	83.2	24.23	90.2	26.88
		43.0	43.8	13.70	52.6	16.44	61.3	19.21	65.7	20.62	74.5	23.53	82.7	26.88	84.6	25.58
		46.0	43.8	14.68	52.6	17.83	61.3	21.14	62.1	20.76	63.7	19.80	65.8	19.05	68.4	18.45
52.0	21.0	7.24	22.9	7.32	25.1	7.46	26.3	7.54	29.0	7.74	31.9	7.97	35.1	8.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	38.9	3.68	46.7	4.67	54.5	5.64	58.4	6.12	66.2	7.05	74.0	7.97	81.8	8.87
		-5.0	38.9	3.69	46.7	4.68	54.5	5.65	58.4	6.13	66.2	7.06	74.0	7.98	81.8	8.88
		0.0	38.9	3.70	46.7	4.69	54.5	5.66	58.4	6.14	66.2	7.07	74.0	7.99	81.8	8.89
		5.0	38.9	3.71	46.7	4.70	54.5	5.67	58.4	6.15	66.2	7.09	74.0	8.00	81.8	8.90
		10.0	38.9	3.73	46.7	4.72	54.5	5.69	58.4	6.17	66.2	7.11	74.0	8.03	81.8	8.94
		15.0	38.9	3.75	46.7	4.75	54.5	5.74	58.4	6.23	66.2	7.20	74.0	8.15	81.8	9.09
		20.0	38.9	3.90	46.7	4.98	54.5	6.03	58.4	6.55	66.2	7.56	74.0	8.55	81.8	9.51
		25.0	38.9	5.06	46.7	6.20	54.5	7.36	58.4	7.95	66.2	9.14	74.0	10.35	81.8	11.57
		30.0	38.9	6.67	46.7	8.09	54.5	9.52	58.4	10.24	66.2	11.67	74.0	13.11	81.8	14.55
		35.0	38.9	8.69	46.7	10.45	54.5	12.20	58.4	13.07	66.2	14.80	74.0	16.53	81.8	18.27
		40.0	38.9	10.50	46.7	12.54	54.5	14.55	58.4	15.55	66.2	17.55	74.0	19.55	81.8	21.58
		43.0	38.9	11.62	46.7	13.83	54.5	16.01	58.4	17.10	66.2	19.27	74.0	21.47	81.8	23.72
		46.0	38.9	12.40	46.7	14.86	54.5	17.37	58.4	18.65	63.7	19.80	65.8	19.05	68.4	18.45
52.0	21.0	7.24	22.9	7.32	25.1	7.46	26.3	7.54	29.0	7.74	31.9	7.97	35.1	8.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	34.1	3.06	40.9	3.94	47.7	4.81	51.1	5.23	57.9	6.07	64.7	6.90	71.5	7.70
		-5.0	34.1	3.07	40.9	3.95	47.7	4.81	51.1	5.24	57.9	6.08	64.7	6.90	71.5	7.71
		0.0	34.1	3.07	40.9	3.96	47.7	4.82	51.1	5.25	57.9	6.09	64.7	6.91	71.5	7.72
		5.0	34.1	3.08	40.9	3.97	47.7	4.83	51.1	5.26	57.9	6.10	64.7	6.93	71.5	7.73
		10.0	34.1	3.10	40.9	3.98	47.7	4.85	51.1	5.28	57.9	6.12	64.7	6.94	71.5	7.75
		15.0	34.1	3.12	40.9	4.00	47.7	4.87	51.1	5.30	57.9	6.14	64.7	6.98	71.5	7.79
		20.0	34.1	3.17	40.9	4.08	47.7	4.98	51.1	5.42	57.9	6.29	64.7	7.15	71.5	7.98
		25.0	34.1	3.81	40.9	4.75	47.7	5.66	51.1	6.10	57.9	6.96	64.7	7.80	71.5	8.62
		30.0	34.1	5.36	40.9	6.43	47.7	7.47	51.1	7.99	57.9	9.01	64.7	10.02	71.5	11.01
		35.0	34.1	7.10	40.9	8.46	47.7	9.78	51.1	10.42	57.9	11.70	64.7	12.94	71.5	14.16
		40.0	34.1	8.68	40.9	10.28	47.7	11.83	51.1	12.59	57.9	14.07	64.7	15.52	71.5	16.94
		43.0	34.1	9.66	40.9	11.40	47.7	13.09	51.1	13.92	57.9	15.54	64.7	17.12	71.5	18.68
		46.0	34.1	10.34	40.9	12.20	47.7	14.07	51.1	15.00	57.9	16.88	64.7	18.08	68.4	18.45
52.0	21.0	7.24	22.9	7.32	25.1	7.46	26.3	7.54	29.0	7.74	31.9	7.97	35.1	8.21		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

26HP (Cooling) U-10ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	29.2	2.42	35.0	3.19	40.9	3.95	43.8	4.33	49.6	5.06	55.5	5.79	61.3	6.50
		-5.0	29.2	2.43	35.0	3.20	40.9	3.96	43.8	4.33	49.6	5.07	55.5	5.79	61.3	6.50
		0.0	29.2	2.43	35.0	3.21	40.9	3.96	43.8	4.34	49.6	5.08	55.5	5.80	61.3	6.51
		5.0	29.2	2.44	35.0	3.21	40.9	3.97	43.8	4.35	49.6	5.09	55.5	5.81	61.3	6.52
		10.0	29.2	2.45	35.0	3.23	40.9	3.99	43.8	4.36	49.6	5.10	55.5	5.82	61.3	6.53
		15.0	29.2	2.47	35.0	3.25	40.9	4.01	43.8	4.38	49.6	5.12	55.5	5.84	61.3	6.55
		20.0	29.2	2.50	35.0	3.28	40.9	4.04	43.8	4.41	49.6	5.16	55.5	5.89	61.3	6.60
		25.0	29.2	2.72	35.0	3.52	40.9	4.29	43.8	4.67	49.6	5.41	55.5	6.14	61.3	6.86
		30.0	29.2	4.18	35.0	4.94	40.9	5.67	43.8	6.02	49.6	6.70	55.5	7.35	61.3	7.96
		35.0	29.2	5.64	35.0	6.64	40.9	7.59	43.8	8.05	49.6	8.93	55.5	9.77	61.3	10.57
		40.0	29.2	6.99	35.0	8.20	40.9	9.35	43.8	9.90	49.6	10.96	55.5	11.97	61.3	12.93
		43.0	29.2	7.83	35.0	9.17	40.9	10.43	43.8	11.04	49.6	12.20	55.5	13.31	61.3	14.38
		46.0	29.2	8.49	35.0	9.86	40.9	11.19	43.8	11.85	49.6	13.13	55.5	14.39	61.3	15.61
52.0	21.0	7.24	22.9	7.32	25.1	7.46	26.3	7.54	29.0	7.74	31.9	7.97	35.1	8.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	24.3	1.78	29.2	2.43	34.1	3.08	36.5	3.39	41.4	4.02	46.2	4.64	51.1	5.25
		-5.0	24.3	1.78	29.2	2.44	34.1	3.08	36.5	3.40	41.4	4.03	46.2	4.64	51.1	5.25
		0.0	24.3	1.79	29.2	2.44	34.1	3.08	36.5	3.40	41.4	4.03	46.2	4.65	51.1	5.26
		5.0	24.3	1.79	29.2	2.45	34.1	3.09	36.5	3.41	41.4	4.04	46.2	4.66	51.1	5.27
		10.0	24.3	1.80	29.2	2.46	34.1	3.10	36.5	3.42	41.4	4.05	46.2	4.67	51.1	5.28
		15.0	24.3	1.81	29.2	2.47	34.1	3.12	36.5	3.44	41.4	4.06	46.2	4.68	51.1	5.29
		20.0	24.3	1.84	29.2	2.49	34.1	3.14	36.5	3.46	41.4	4.09	46.2	4.70	51.1	5.31
		25.0	24.3	1.90	29.2	2.55	34.1	3.20	36.5	3.52	41.4	4.15	46.2	4.76	51.1	5.37
		30.0	24.3	3.13	29.2	3.61	34.1	3.96	36.5	4.18	41.4	4.67	46.2	5.19	51.1	5.73
		35.0	24.3	4.31	29.2	5.01	34.1	5.65	36.5	5.95	41.4	6.51	46.2	7.02	51.1	7.49
		40.0	24.3	5.44	29.2	6.31	34.1	7.11	36.5	7.49	41.4	8.20	46.2	8.84	51.1	9.44
		43.0	24.3	6.13	29.2	7.11	34.1	8.01	36.5	8.43	41.4	9.23	46.2	9.96	51.1	10.63
		46.0	24.3	6.83	29.2	7.80	34.1	8.71	36.5	9.15	41.4	9.98	46.2	10.77	51.1	11.51
52.0	21.0	7.24	22.9	7.32	25.1	7.46	26.3	7.54	29.0	7.74	31.9	7.97	35.1	8.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	19.5	1.12	23.4	1.65	27.3	2.18	29.2	2.44	33.1	2.95	37.0	3.46	40.9	3.96
		-5.0	19.5	1.12	23.4	1.65	27.3	2.18	29.2	2.44	33.1	2.95	37.0	3.46	40.9	3.96
		0.0	19.5	1.13	23.4	1.66	27.3	2.18	29.2	2.44	33.1	2.96	37.0	3.47	40.9	3.97
		5.0	19.5	1.13	23.4	1.66	27.3	2.19	29.2	2.45	33.1	2.96	37.0	3.47	40.9	3.98
		10.0	19.5	1.14	23.4	1.67	27.3	2.20	29.2	2.46	33.1	2.97	37.0	3.48	40.9	3.99
		15.0	19.5	1.15	23.4	1.68	27.3	2.21	29.2	2.47	33.1	2.98	37.0	3.49	40.9	4.00
		20.0	19.5	1.16	23.4	1.70	27.3	2.22	29.2	2.48	33.1	3.00	37.0	3.51	40.9	4.02
		25.0	19.5	1.20	23.4	1.73	27.3	2.26	29.2	2.51	33.1	3.03	37.0	3.53	40.9	4.05
		30.0	19.5	1.62	23.4	1.98	27.3	2.42	29.2	2.65	33.1	3.13	37.0	3.66	40.9	4.22
		35.0	19.5	3.12	23.4	3.58	27.3	3.97	29.2	4.14	33.1	4.46	37.0	4.85	40.9	5.35
		40.0	19.5	4.02	23.4	4.61	27.3	5.12	29.2	5.36	33.1	5.78	37.0	6.14	40.9	6.45
		43.0	19.5	4.57	23.4	5.24	27.3	5.84	29.2	6.11	33.1	6.60	37.0	7.03	40.9	7.40
		46.0	19.5	5.36	23.4	6.01	27.3	6.59	29.2	6.86	33.1	7.36	37.0	7.81	40.9	8.20
52.0	19.5	6.40	22.9	7.32	25.1	7.46	26.3	7.54	29.0	7.74	31.9	7.97	35.1	8.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	14.6	0.45	17.5	0.85	20.4	1.26	21.9	1.46	24.8	1.86	27.7	2.26	30.7	2.64
		-5.0	14.6	0.45	17.5	0.86	20.4	1.26	21.9	1.47	24.8	1.87	27.7	2.26	30.7	2.65
		0.0	14.6	0.45	17.5	0.86	20.4	1.27	21.9	1.47	24.8	1.87	27.7	2.27	30.7	2.65
		5.0	14.6	0.46	17.5	0.86	20.4	1.27	21.9	1.47	24.8	1.88	27.7	2.27	30.7	2.66
		10.0	14.6	0.46	17.5	0.87	20.4	1.28	21.9	1.48	24.8	1.89	27.7	2.28	30.7	2.67
		15.0	14.6	0.47	17.5	0.88	20.4	1.29	21.9	1.49	24.8	1.90	27.7	2.30	30.7	2.69
		20.0	14.6	0.48	17.5	0.89	20.4	1.30	21.9	1.51	24.8	1.92	27.7	2.32	30.7	2.71
		25.0	14.6	0.50	17.5	0.91	20.4	1.32	21.9	1.53	24.8	1.94	27.7	2.35	30.7	2.76
		30.0	14.6	0.57	17.5	0.96	20.4	1.37	21.9	1.60	24.8	2.08	27.7	2.55	30.7	3.00
		35.0	14.6	2.08	17.5	2.34	20.4	2.64	21.9	2.84	24.8	3.24	27.7	3.63	30.7	4.01
		40.0	14.6	2.74	17.5	3.09	20.4	3.39	21.9	3.51	24.8	3.72	27.7	3.88	30.7	4.01
		43.0	14.6	3.15	17.5	3.57	20.4	3.92	21.9	4.07	24.8	4.33	27.7	4.53	30.7	4.69
		46.0	14.6	4.06	17.5	4.46	20.4	4.79	21.9	4.94	24.8	5.20	27.7	5.42	30.7	5.58
52.0	14.6	4.81	17.5	5.32	20.4	5.77	21.9	5.97	24.8	6.17	27.7	6.28	30.7	6.32		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-20. 26HP (Heating) U-10ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	58.6	20.02	57.2	19.67	54.2	18.94	52.7	18.54	48.0	17.28	44.8	16.35	36.2	13.73
		-19.8	-20.0	61.5	20.44	60.0	20.08	56.9	19.31	55.3	18.90	50.5	17.60	47.1	16.64	38.1	13.94
		-14.7	-15.0	65.5	21.05	63.9	20.67	60.7	19.87	59.0	19.45	53.9	18.08	50.3	17.08	40.8	14.27
		-9.6	-10.0	71.0	21.95	69.3	21.55	65.8	20.68	64.1	20.22	58.5	18.76	54.7	17.70	44.3	14.72
		-4.4	-5.0	78.2	23.22	76.4	22.79	72.6	21.85	70.6	21.35	64.5	19.73	60.3	18.55	48.8	15.29
		-1.8	-2.5	82.5	23.70	80.6	23.27	76.6	22.33	74.5	21.82	68.1	20.18	63.5	18.98	51.3	15.58
		0.8	0.0	87.3	24.12	85.3	23.66	81.0	22.67	78.8	22.14	72.0	20.45	66.4	18.86	51.3	14.55
		2.8	2.0	92.5	24.48	90.3	23.99	84.5	22.38	81.5	21.53	72.4	19.02	66.4	17.40	51.3	13.48
		6.0	5.0	93.6	21.73	90.6	20.99	84.5	19.52	81.5	18.80	72.4	16.68	66.4	15.28	51.3	11.92
		7.0	6.0	93.6	20.67	90.6	19.97	84.5	18.59	81.5	17.90	72.4	15.90	66.4	14.59	51.3	11.42
		8.6	7.5	93.6	19.10	90.6	18.46	84.5	17.21	81.5	16.59	72.4	14.78	66.4	13.59	51.3	10.70
		11.2	10.0	93.6	16.62	90.6	16.09	84.5	15.06	81.5	14.55	72.4	13.03	66.4	12.04	51.3	9.59
		16.4	15.0	93.6	12.29	90.6	11.96	84.5	11.29	81.5	10.96	72.4	9.95	66.4	9.26	51.3	7.49
		24.0	18.0	93.6	10.26	90.6	9.97	84.5	9.38	81.5	9.08	72.4	8.20	66.4	7.61	51.3	6.14

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	58.6	20.02	57.2	19.67	54.2	18.94	52.7	18.54	48.0	17.28	44.8	16.35	36.2	13.73
		-19.8	-20.0	61.5	20.44	60.0	20.08	56.9	19.31	55.3	18.90	50.5	17.60	47.1	16.64	38.1	13.94
		-14.7	-15.0	65.5	21.05	63.9	20.67	60.7	19.87	59.0	19.45	53.9	18.08	50.3	17.08	40.8	14.27
		-9.6	-10.0	71.0	21.95	69.3	21.55	65.8	20.68	64.1	20.22	58.5	18.76	54.7	17.70	44.3	14.72
		-4.4	-5.0	78.2	23.22	76.4	22.79	72.6	21.85	70.6	21.35	64.5	19.73	59.8	18.55	46.2	13.88
		-1.8	-2.5	82.5	23.70	80.6	23.27	76.1	22.33	73.4	19.81	65.2	17.77	59.8	16.41	46.2	13.02
		0.8	0.0	84.2	20.69	81.5	20.08	76.1	18.86	73.4	18.25	65.2	16.42	59.8	15.20	46.2	12.11
		2.8	2.0	84.2	18.85	81.5	18.32	76.1	17.24	73.4	16.70	65.2	15.04	59.8	14.03	46.2	11.35
		6.0	5.0	84.2	16.35	81.5	15.97	76.1	15.18	73.4	14.77	65.2	13.50	59.8	12.54	46.2	10.08
		7.0	6.0	84.2	16.02	81.5	15.58	76.1	14.68	73.4	14.23	65.2	12.87	59.8	11.96	46.2	9.65
		8.6	7.5	84.2	14.72	81.5	14.32	76.1	13.53	73.4	13.13	65.2	11.93	59.8	11.12	46.2	9.04
		11.2	10.0	84.2	12.67	81.5	12.36	76.1	11.74	73.4	11.43	65.2	10.46	59.8	9.80	46.2	8.08
		16.4	15.0	84.2	9.35	81.5	9.08	76.1	8.63	73.4	8.44	65.2	7.85	59.8	7.43	46.2	6.24
		24.0	18.0	84.2	9.35	81.5	9.08	76.1	8.56	73.4	8.29	65.2	7.50	59.8	6.97	46.2	5.64

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	58.6	20.02	57.2	19.67	54.2	18.94	52.7	18.54	48.0	17.28	44.8	16.35	36.2	13.73
		-19.8	-20.0	61.5	20.44	60.0	20.08	56.9	19.31	55.3	18.90	50.5	17.60	47.1	16.64	38.1	13.94
		-14.7	-15.0	65.5	21.05	63.9	20.67	60.7	19.87	59.0	19.45	53.9	18.08	50.3	17.08	40.8	14.27
		-9.6	-10.0	71.0	21.95	69.3	21.55	65.8	20.68	64.1	20.22	58.0	18.76	53.1	15.92	41.1	12.82
		-4.4	-5.0	74.9	18.43	72.4	17.98	67.6	17.07	65.2	16.60	58.0	15.16	53.1	14.16	41.1	11.54
		-1.8	-2.5	74.9	17.01	72.4	16.61	67.6	15.80	65.2	15.39	58.0	14.10	53.1	13.20	41.1	10.89
		0.8	0.0	74.9	15.52	72.4	15.14	67.6	14.51	65.2	14.18	58.0	13.11	53.1	12.34	41.1	10.21
		2.8	2.0	74.9	14.26	72.4	14.00	67.6	13.44	65.2	13.14	58.0	12.18	53.1	11.48	41.1	9.54
		6.0	5.0	74.9	12.58	72.4	12.37	67.6	11.91	65.2	11.66	58.0	10.85	53.1	10.22	41.1	8.47
		7.0	6.0	74.9	12.24	72.4	11.99	67.6	11.46	65.2	11.19	58.0	10.34	53.1	9.73	41.1	8.11
		8.6	7.5	74.9	11.17	72.4	10.96	67.6	10.51	65.2	10.28	58.0	9.55	53.1	9.03	41.1	7.59
		11.2	10.0	74.9	9.50	72.4	9.35	67.6	9.04	65.2	8.87	58.0	8.33	53.1	7.92	41.1	6.77
		16.4	15.0	74.9	8.44	72.4	8.20	67.6	7.73	65.2	7.50	58.0	6.79	53.1	6.32	41.1	5.19
		24.0	18.0	74.9	8.44	72.4	8.20	67.6	7.73	65.2	7.50	58.0	6.79	53.1	6.32	41.1	5.15

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	58.6	20.02	57.2	19.67	54.2	18.94	52.7	18.54	48.0	17.28	44.8	16.35	35.9	13.73
		-19.8	-20.0	61.5	20.44	60.0	20.08	56.9	19.31	55.3	18.90	50.5	17.60	46.5	16.64	35.9	12.04
		-14.7	-15.0	65.5	21.05	63.4	17.40	59.2	16.63	57.1	16.24	50.7	14.97	46.5	14.07	35.9	11.50
		-9.6	-10.0	65.5	15.95	63.4	15.65	59.2	15.00	57.1	14.67	50.7	13.59	46.5	12.81	35.9	10.71
		-4.4	-5.0	65.5	13.92	63.4	13.71	59.2	13.25	57.1	13.00	50.7	12.15	46.5	11.52	35.9	9.69
		-1.8	-2.5	65.5	12.98	63.4	12.79	59.2	12.38	57.1	12.15	50.7	11.39	46.5	10.81	35.9	9.14
		0.8	0.0	65.5	11.98	63.4	11.82	59.2	11.46	57.1	11.26	50.7	10.58	46.5	10.07	35.9	8.55
		2.8	2.0	65.5	10.99	63.4	10.85	59.2	10.55	57.1	10.38	50.7	9.79	46.5	9.34	35.9	7.97
		6.0	5.0	65.5	9.58	63.4	9.48	59.2	9.26	57.1	9.13	50.7	8.65	46.5	8.26	35.9	7.07
		7.0	6.0	65.5	9.21	63.4	9.10	59.2	8.84	57.1	8.70	50.7	8.22	46.5	7.86	35.9	6.77
		8.6	7.5	65.5	8.35	63.4	8.27	59.2	8.07	57.1	7.96	50.7	7.58	46.5	7.27	35.9	6.33
		11.2	10.0	65.5	7.53	63.4	7.32	59.2	6.91	57.1	6.84	50.7	6.58	46.5	6.36	35.9	5.64
		16.4	15.0	65.5	7.53	63.4	7.32	59.2	6.91	57.1	6.70	50.7	6.09	46.5	5.67	35.9	4.65
		24.0	18.0	65.5	7.53	63.4	7.32	59.2	6.91	57.1	6.70	50.7	6.09	46.5	5.67	35.9	4.65

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

26HP (Heating) U-10ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	56.1	15.57	54.3	15.32	50.7	14.77	48.9	14.47	43.5	13.45	39.8	12.64	30.8	10.42
		-19.8	-20.0	56.1	14.65	54.3	14.42	50.7	13.92	48.9	13.66	43.5	12.78	39.8	12.12	30.8	10.07
		-14.7	-15.0	56.1	13.49	54.3	13.32	50.7	12.93	48.9	12.71	43.5	11.95	39.8	11.38	30.8	9.66
		-9.6	-10.0	56.1	12.28	54.3	12.14	50.7	11.81	48.9	11.62	43.5	10.97	39.8	10.46	30.8	8.93
		-4.4	-5.0	56.1	10.84	54.3	10.74	50.7	10.48	48.9	10.33	43.5	9.80	39.8	9.38	30.8	8.07
		-1.8	-2.5	56.1	10.05	54.3	9.96	50.7	9.75	48.9	9.62	43.5	9.16	39.8	8.78	30.8	7.60
		0.8	0.0	56.1	9.22	54.3	9.16	50.7	8.99	48.9	8.88	43.5	8.49	39.8	8.16	30.8	7.10
		2.8	2.0	56.1	8.40	54.3	8.36	50.7	8.23	48.9	8.15	43.5	7.83	39.8	7.54	30.8	6.61
		6.0	5.0	56.1	7.23	54.3	7.21	50.7	7.14	48.9	7.08	43.5	6.84	39.8	6.61	30.8	5.82
		7.0	6.0	56.1	6.85	54.3	6.83	50.7	6.75	48.9	6.70	43.5	6.48	39.8	6.28	30.8	5.60
		8.6	7.5	56.1	6.62	54.3	6.44	50.7	6.15	48.9	6.12	43.5	5.96	39.8	5.81	30.8	5.24
		11.2	10.0	56.1	6.62	54.3	6.44	50.7	6.09	48.9	5.91	43.5	5.38	39.8	5.09	30.8	4.67
		16.4	15.0	56.1	6.62	54.3	6.44	50.7	6.09	48.9	5.91	43.5	5.38	39.8	5.03	30.8	4.15
24.0	18.0	56.1	6.62	54.3	6.44	50.7	6.09	48.9	5.91	43.5	5.38	39.8	5.03	30.8	4.15		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	46.8	12.00	45.3	11.86	42.3	11.56	40.8	11.39	36.2	10.78	33.2	10.29	25.7	8.66
		-19.8	-20.0	46.8	11.37	45.3	11.26	42.3	10.99	40.8	10.83	36.2	10.27	33.2	9.83	25.7	8.43
		-14.7	-15.0	46.8	10.55	45.3	10.46	42.3	10.23	40.8	10.10	36.2	9.61	33.2	9.21	25.7	7.97
		-9.6	-10.0	46.8	9.55	45.3	9.48	42.3	9.30	40.8	9.20	36.2	8.79	33.2	8.45	25.7	7.36
		-4.4	-5.0	46.8	8.38	45.3	8.34	42.3	8.22	40.8	8.14	36.2	7.82	33.2	7.55	25.7	6.64
		-1.8	-2.5	46.8	7.73	45.3	7.71	42.3	7.62	40.8	7.56	36.2	7.30	33.2	7.06	25.7	6.25
		0.8	0.0	46.8	7.05	45.3	7.05	42.3	6.99	40.8	6.95	36.2	6.75	33.2	6.55	25.7	5.84
		2.8	2.0	46.8	6.39	45.3	6.40	42.3	6.38	40.8	6.35	36.2	6.21	33.2	6.05	25.7	5.43
		6.0	5.0	46.8	5.70	45.3	5.56	42.3	5.43	40.8	5.42	36.2	5.34	33.2	5.24	25.7	4.75
		7.0	6.0	46.8	5.70	45.3	5.56	42.3	5.26	40.8	5.12	36.2	5.06	33.2	4.98	25.7	4.59
		8.6	7.5	46.8	5.70	45.3	5.56	42.3	5.26	40.8	5.12	36.2	4.67	33.2	4.62	25.7	4.31
		11.2	10.0	46.8	5.70	45.3	5.56	42.3	5.26	40.8	5.12	36.2	4.67	33.2	4.38	25.7	3.85
		16.4	15.0	46.8	5.70	45.3	5.56	42.3	5.26	40.8	5.12	36.2	4.67	33.2	4.38	25.7	3.65
24.0	18.0	46.8	5.70	45.3	5.56	42.3	5.26	40.8	5.12	36.2	4.67	33.2	4.38	25.7	3.65		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	37.4	9.25	36.2	9.18	33.8	9.00	32.6	8.89	29.0	8.49	26.6	8.17	20.5	7.05
		-19.8	-20.0	37.4	8.75	36.2	8.69	33.8	8.54	32.6	8.45	29.0	8.09	26.6	7.79	20.5	6.81
		-14.7	-15.0	37.4	8.10	36.2	8.06	33.8	7.94	32.6	7.87	29.0	7.56	26.6	7.30	20.5	6.42
		-9.6	-10.0	37.4	7.31	36.2	7.29	33.8	7.21	32.6	7.15	29.0	6.91	26.6	6.69	20.5	5.93
		-4.4	-5.0	37.4	6.39	36.2	6.38	33.8	6.35	32.6	6.31	29.0	6.15	26.6	5.98	20.5	5.37
		-1.8	-2.5	37.4	5.88	36.2	5.89	33.8	5.88	32.6	5.86	29.0	5.73	26.6	5.59	20.5	5.05
		0.8	0.0	37.4	5.35	36.2	5.37	33.8	5.39	32.6	5.38	29.0	5.29	26.6	5.18	20.5	4.71
		2.8	2.0	37.4	4.79	36.2	4.82	33.8	4.85	32.6	4.85	29.0	4.81	26.6	4.73	20.5	4.36
		6.0	5.0	37.4	4.79	36.2	4.67	33.8	4.44	32.6	4.32	29.0	4.13	26.6	4.10	20.5	3.85
		7.0	6.0	37.4	4.79	36.2	4.67	33.8	4.44	32.6	4.32	29.0	3.97	26.6	3.91	20.5	3.72
		8.6	7.5	37.4	4.79	36.2	4.67	33.8	4.44	32.6	4.32	29.0	3.97	26.6	3.73	20.5	3.50
		11.2	10.0	37.4	4.79	36.2	4.67	33.8	4.44	32.6	4.32	29.0	3.97	26.6	3.73	20.5	3.15
		16.4	15.0	37.4	4.79	36.2	4.67	33.8	4.44	32.6	4.32	29.0	3.97	26.6	3.73	20.5	3.15
24.0	18.0	37.4	4.79	36.2	4.67	33.8	4.44	32.6	4.32	29.0	3.97	26.6	3.73	20.5	3.15		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	28.1	6.88	27.2	6.84	25.4	6.75	24.5	6.68	21.7	6.44	19.9	6.22	15.4	5.50
		-19.8	-20.0	28.1	6.50	27.2	6.48	25.4	6.40	24.5	6.35	21.7	6.14	19.9	5.94	15.4	5.28
		-14.7	-15.0	28.1	6.02	27.2	6.01	25.4	5.96	24.5	5.92	21.7	5.74	19.9	5.58	15.4	4.99
		-9.6	-10.0	28.1	5.44	27.2	5.44	25.4	5.41	24.5	5.38	21.7	5.25	19.9	5.12	15.4	4.63
		-4.4	-5.0	28.1	4.72	27.2	4.74	25.4	4.74	24.5	4.74	21.7	4.66	19.9	4.57	15.4	4.18
		-1.8	-2.5	28.1	4.30	27.2	4.33	25.4	4.36	24.5	4.36	21.7	4.32	19.9	4.25	15.4	3.93
		0.8	0.0	28.1	3.88	27.2	3.91	25.4	3.96	24.5	3.97	21.7	3.97	19.9	3.93	15.4	3.67
		2.8	2.0	28.1	3.88	27.2	3.79	25.4	3.62	24.5	3.60	21.7	3.62	19.9	3.61	15.4	3.42
		6.0	5.0	28.1	3.88	27.2	3.79	25.4	3.62	24.5	3.53	21.7	3.26	19.9	3.17	15.4	3.07
		7.0	6.0	28.1	3.88	27.2	3.79	25.4	3.62	24.5	3.53	21.7	3.26	19.9	3.09	15.4	2.96
		8.6	7.5	28.1	3.88	27.2	3.79	25.4	3.62	24.5	3.53	21.7	3.26	19.9	3.09	15.4	2.80
		11.2	10.0	28.1	3.88	27.2	3.79	25.4	3.62	24.5	3.53	21.7	3.26	19.9	3.09	15.4	2.65
		16.4	15.0	28.1	3.88	27.2	3.79	25.4	3.62	24.5	3.53	21.7	3.26	19.9	3.09	15.4	2.65
24.0	18.0	28.1	3.88	27.2	3.79	25.4	3.62	24.5	3.53	21.7	3.26	19.9	3.09	15.4	2.65		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-21. 28HP (Cooling) U-12ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	52.3	5.87	62.8	7.04	73.3	8.22	78.5	8.80	89.0	9.98	99.4	11.15	109.9	12.33
		-5.0	52.3	5.88	62.8	7.05	73.3	8.23	78.5	8.82	89.0	9.99	99.4	11.16	109.9	12.34
		0.0	52.3	5.89	62.8	7.07	73.3	8.24	78.5	8.83	89.0	10.00	99.4	11.19	109.9	12.37
		5.0	52.3	5.91	62.8	7.08	73.3	8.26	78.5	8.86	89.0	10.06	99.4	11.28	109.9	12.47
		10.0	52.3	5.92	62.8	7.13	73.3	8.35	78.5	8.98	89.0	10.23	99.4	11.51	109.9	12.73
		15.0	52.3	6.05	62.8	7.36	73.3	8.69	78.5	9.37	89.0	10.73	99.4	12.10	109.9	13.37
		20.0	52.3	6.79	62.8	8.30	73.3	10.04	78.5	10.98	89.0	13.01	99.4	15.23	109.9	17.64
		25.0	52.3	8.68	62.8	10.72	73.3	12.96	78.5	14.16	89.0	16.70	99.4	19.44	109.9	22.39
		30.0	52.3	10.88	62.8	13.41	73.3	16.16	78.5	17.61	89.0	20.68	99.4	23.96	109.9	27.48
		35.0	52.3	13.24	62.8	16.30	73.3	19.58	78.5	21.32	89.0	24.96	99.4	28.85	105.1	29.82
		40.0	52.3	15.78	62.8	19.40	73.3	23.28	78.5	25.32	89.0	29.59	93.1	29.81	97.1	29.82
		43.0	52.3	17.40	62.8	21.38	73.3	25.64	78.5	27.88	84.9	29.82	89.0	29.82	90.9	28.34
		46.0	51.8	18.91	62.2	23.25	66.0	23.65	66.7	23.02	68.5	21.96	70.8	21.13	73.5	20.48
52.0	22.6	8.10	24.6	8.19	27.0	8.34	28.3	8.44	31.1	8.66	34.3	8.90	37.8	9.17		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	47.1	4.74	56.5	5.94	65.9	7.12	70.7	7.70	80.1	8.84	89.5	9.94	98.9	11.03
		-5.0	47.1	4.74	56.5	5.95	65.9	7.13	70.7	7.71	80.1	8.85	89.5	9.96	98.9	11.04
		0.0	47.1	4.76	56.5	5.97	65.9	7.15	70.7	7.72	80.1	8.86	89.5	9.97	98.9	11.05
		5.0	47.1	4.77	56.5	5.98	65.9	7.16	70.7	7.74	80.1	8.88	89.5	10.00	98.9	11.11
		10.0	47.1	4.79	56.5	6.00	65.9	7.20	70.7	7.79	80.1	8.96	89.5	10.12	98.9	11.25
		15.0	47.1	4.85	56.5	6.12	65.9	7.38	70.7	8.01	80.1	9.24	89.5	10.44	98.9	11.63
		20.0	47.1	5.30	56.5	6.72	65.9	8.10	70.7	8.78	80.1	10.09	89.5	11.60	98.9	13.20
		25.0	47.1	7.03	56.5	8.69	65.9	10.42	70.7	11.30	80.1	13.11	89.5	14.96	98.9	16.87
		30.0	47.1	9.06	56.5	11.08	65.9	13.13	70.7	14.17	80.1	16.28	89.5	18.44	98.9	20.65
		35.0	47.1	11.60	56.5	14.04	65.9	16.51	70.7	17.75	80.1	20.28	89.5	22.87	98.9	25.56
		40.0	47.1	13.85	56.5	16.65	65.9	19.47	70.7	20.90	80.1	23.81	89.5	26.85	97.1	29.82
		43.0	47.1	15.23	56.5	18.26	65.9	21.32	70.7	22.87	80.1	26.07	89.0	29.82	90.9	28.34
		46.0	47.1	16.31	56.5	19.79	65.9	23.44	66.7	23.02	68.5	21.96	70.8	21.13	73.5	20.48
52.0	22.6	8.10	24.6	8.19	27.0	8.34	28.3	8.44	31.1	8.66	34.3	8.90	37.8	9.17		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	41.9	4.06	50.2	5.15	58.6	6.22	62.8	6.75	71.2	8.01	79.5	8.79	87.9	9.78
		-5.0	41.9	4.07	50.2	5.16	58.6	6.23	62.8	6.75	71.2	8.02	79.5	8.80	87.9	9.79
		0.0	41.9	4.07	50.2	5.17	58.6	6.24	62.8	6.77	71.2	8.03	79.5	8.82	87.9	9.81
		5.0	41.9	4.09	50.2	5.18	58.6	6.26	62.8	6.78	71.2	8.05	79.5	8.83	87.9	9.82
		10.0	41.9	4.11	50.2	5.20	58.6	6.27	62.8	6.80	71.2	8.07	79.5	8.87	87.9	9.88
		15.0	41.9	4.13	50.2	5.24	58.6	6.34	62.8	6.89	71.2	8.18	79.5	9.03	87.9	10.07
		20.0	41.9	4.33	50.2	5.53	58.6	6.71	62.8	7.29	71.2	8.60	79.5	9.52	87.9	10.58
		25.0	41.9	5.70	50.2	6.96	58.6	8.24	62.8	8.89	71.2	10.30	79.5	11.53	87.9	12.87
		30.0	41.9	7.48	50.2	9.05	58.6	10.62	62.8	11.41	71.2	13.10	79.5	14.58	87.9	16.17
		35.0	41.9	9.71	50.2	11.65	58.6	13.57	62.8	14.53	71.2	16.10	79.5	18.35	87.9	20.27
		40.0	41.9	11.70	50.2	13.95	58.6	16.17	62.8	17.27	71.2	19.31	79.5	21.69	87.9	23.93
		43.0	41.9	12.93	50.2	15.37	58.6	17.78	62.8	18.98	71.2	21.39	79.5	23.81	87.9	26.29
		46.0	41.9	13.80	50.2	16.50	58.6	19.28	62.8	20.70	68.5	21.96	70.8	21.13	73.5	20.48
52.0	22.6	8.10	24.6	8.19	27.0	8.34	28.3	8.44	31.1	8.66	34.3	8.90	37.8	9.17		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	36.6	3.37	44.0	4.34	51.3	5.30	55.0	5.77	62.3	6.70	69.6	7.85	76.9	8.50
		-5.0	36.6	3.37	44.0	4.35	51.3	5.31	55.0	5.78	62.3	6.70	69.6	7.86	76.9	8.51
		0.0	36.6	3.38	44.0	4.36	51.3	5.31	55.0	5.79	62.3	6.71	69.6	7.87	76.9	8.52
		5.0	36.6	3.39	44.0	4.37	51.3	5.33	55.0	5.80	62.3	6.73	69.6	7.88	76.9	8.53
		10.0	36.6	3.41	44.0	4.39	51.3	5.35	55.0	5.82	62.3	6.75	69.6	7.89	76.9	8.55
		15.0	36.6	3.43	44.0	4.41	51.3	5.37	55.0	5.84	62.3	6.78	69.6	7.94	76.9	8.61
		20.0	36.6	3.50	44.0	4.52	51.3	5.51	55.0	6.01	62.3	6.98	69.6	8.14	76.9	8.85
		25.0	36.6	4.29	44.0	5.34	51.3	6.34	55.0	6.83	62.3	7.79	69.6	8.88	76.9	9.61
		30.0	36.6	6.03	44.0	7.21	51.3	8.36	55.0	8.93	62.3	10.06	69.6	11.25	76.9	12.26
		35.0	36.6	7.96	44.0	9.45	51.3	10.90	55.0	11.62	62.3	13.02	69.6	14.00	76.9	15.74
		40.0	36.6	9.70	44.0	11.46	51.3	13.17	55.0	14.00	62.3	15.64	69.6	16.92	76.9	18.80
		43.0	36.6	10.77	44.0	12.70	51.3	14.56	55.0	15.47	62.3	17.26	69.6	18.80	76.9	20.72
		46.0	36.6	11.52	44.0	13.58	51.3	15.64	55.0	16.67	62.3	18.74	69.6	20.06	73.5	20.48
52.0	22.6	8.10	24.6	8.19	27.0	8.34	28.3	8.44	31.1	8.66	34.3	8.90	37.8	9.17		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

28HP (Cooling) U-12ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	31.4	2.67	37.7	3.52	44.0	4.35	47.1	4.77	53.4	5.58	59.7	6.38	65.9	7.16
		-5.0	31.4	2.67	37.7	3.52	44.0	4.36	47.1	4.77	53.4	5.59	59.7	6.39	65.9	7.17
		0.0	31.4	2.68	37.7	3.53	44.0	4.37	47.1	4.78	53.4	5.59	59.7	6.39	65.9	7.18
		5.0	31.4	2.69	37.7	3.54	44.0	4.38	47.1	4.79	53.4	5.61	59.7	6.41	65.9	7.19
		10.0	31.4	2.70	37.7	3.55	44.0	4.39	47.1	4.80	53.4	5.62	59.7	6.42	65.9	7.21
		15.0	31.4	2.72	37.7	3.57	44.0	4.41	47.1	4.83	53.4	5.64	59.7	6.44	65.9	7.22
		20.0	31.4	2.75	37.7	3.60	44.0	4.45	47.1	4.87	53.4	5.69	59.7	6.50	65.9	7.30
		25.0	31.4	3.05	37.7	3.93	44.0	4.78	47.1	5.20	53.4	6.03	59.7	6.83	65.9	7.62
		30.0	31.4	4.73	37.7	5.57	44.0	6.37	47.1	6.76	53.4	7.51	59.7	8.22	65.9	8.90
		35.0	31.4	6.35	37.7	7.45	44.0	8.50	47.1	9.00	53.4	9.97	59.7	10.90	65.9	11.78
		40.0	31.4	7.84	37.7	9.17	44.0	10.44	47.1	11.04	53.4	12.21	59.7	13.32	65.9	14.38
		43.0	31.4	8.76	37.7	10.23	44.0	11.62	47.1	12.29	53.4	13.58	59.7	14.81	65.9	15.98
46.0	31.4	9.48	37.7	10.99	44.0	12.46	47.1	13.19	53.4	14.60	59.7	15.99	65.9	17.34		
52.0	22.6	8.10	24.6	8.19	27.0	8.34	28.3	8.44	31.1	8.66	34.3	8.90	37.8	9.17		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	26.2	1.95	31.4	2.67	36.6	3.39	39.3	3.74	44.5	4.43	49.7	5.11	55.0	5.78
		-5.0	26.2	1.96	31.4	2.68	36.6	3.39	39.3	3.74	44.5	4.44	49.7	5.12	55.0	5.79
		0.0	26.2	1.96	31.4	2.68	36.6	3.40	39.3	3.75	44.5	4.44	49.7	5.12	55.0	5.80
		5.0	26.2	1.97	31.4	2.69	36.6	3.40	39.3	3.76	44.5	4.45	49.7	5.13	55.0	5.80
		10.0	26.2	1.98	31.4	2.70	36.6	3.41	39.3	3.77	44.5	4.46	49.7	5.14	55.0	5.82
		15.0	26.2	1.99	31.4	2.72	36.6	3.43	39.3	3.78	44.5	4.48	49.7	5.16	55.0	5.83
		20.0	26.2	2.02	31.4	2.74	36.6	3.46	39.3	3.81	44.5	4.50	49.7	5.18	55.0	5.85
		25.0	26.2	2.09	31.4	2.82	36.6	3.54	39.3	3.89	44.5	4.59	49.7	5.27	55.0	5.94
		30.0	26.2	3.58	31.4	4.10	36.6	4.47	39.3	4.70	44.5	5.23	49.7	5.80	55.0	6.39
		35.0	26.2	4.88	31.4	5.65	36.6	6.36	39.3	6.69	44.5	7.30	49.7	7.87	55.0	8.38
		40.0	26.2	6.12	31.4	7.09	36.6	7.97	39.3	8.38	44.5	9.16	49.7	9.87	55.0	10.53
		43.0	26.2	6.89	31.4	7.97	36.6	8.96	39.3	9.42	44.5	10.30	49.7	11.11	55.0	11.85
46.0	26.2	7.65	31.4	8.72	36.6	9.73	39.3	10.21	44.5	11.13	49.7	12.00	55.0	12.81		
52.0	22.6	8.10	24.6	8.19	27.0	8.34	28.3	8.44	31.1	8.66	34.3	8.90	37.8	9.17		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	20.9	1.23	25.1	1.81	29.3	2.39	31.4	2.68	35.6	3.25	39.8	3.81	44.0	4.36
		-5.0	20.9	1.23	25.1	1.82	29.3	2.40	31.4	2.68	35.6	3.25	39.8	3.81	44.0	4.37
		0.0	20.9	1.23	25.1	1.82	29.3	2.40	31.4	2.69	35.6	3.26	39.8	3.82	44.0	4.37
		5.0	20.9	1.24	25.1	1.83	29.3	2.41	31.4	2.69	35.6	3.26	39.8	3.83	44.0	4.38
		10.0	20.9	1.24	25.1	1.83	29.3	2.42	31.4	2.70	35.6	3.27	39.8	3.83	44.0	4.39
		15.0	20.9	1.26	25.1	1.85	29.3	2.43	31.4	2.71	35.6	3.28	39.8	3.85	44.0	4.41
		20.0	20.9	1.27	25.1	1.86	29.3	2.45	31.4	2.73	35.6	3.30	39.8	3.87	44.0	4.43
		25.0	20.9	1.31	25.1	1.90	29.3	2.48	31.4	2.76	35.6	3.33	39.8	3.89	44.0	4.46
		30.0	20.9	1.85	25.1	2.22	29.3	2.70	31.4	2.95	35.6	3.47	39.8	4.06	44.0	4.69
		35.0	20.9	3.58	25.1	4.07	29.3	4.50	31.4	4.70	35.6	5.04	39.8	5.47	44.0	6.02
		40.0	20.9	4.56	25.1	5.21	29.3	5.78	31.4	6.03	35.6	6.50	39.8	6.90	44.0	7.24
		43.0	20.9	5.17	25.1	5.91	29.3	6.56	31.4	6.86	35.6	7.40	39.8	7.87	44.0	8.28
46.0	20.9	6.03	25.1	6.74	29.3	7.38	31.4	7.68	35.6	8.23	39.8	8.73	44.0	9.16		
52.0	20.9	7.17	24.6	8.19	27.0	8.34	28.3	8.44	31.1	8.66	34.3	8.90	37.8	9.17		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	15.7	0.48	18.8	0.93	22.0	1.38	23.6	1.60	26.7	2.05	29.8	2.48	33.0	2.91
		-5.0	15.7	0.49	18.8	0.94	22.0	1.38	23.6	1.61	26.7	2.05	29.8	2.49	33.0	2.91
		0.0	15.7	0.49	18.8	0.94	22.0	1.39	23.6	1.61	26.7	2.06	29.8	2.49	33.0	2.92
		5.0	15.7	0.49	18.8	0.94	22.0	1.39	23.6	1.62	26.7	2.06	29.8	2.50	33.0	2.93
		10.0	15.7	0.50	18.8	0.95	22.0	1.40	23.6	1.63	26.7	2.07	29.8	2.51	33.0	2.94
		15.0	15.7	0.51	18.8	0.96	22.0	1.41	23.6	1.64	26.7	2.09	29.8	2.53	33.0	2.96
		20.0	15.7	0.52	18.8	0.97	22.0	1.42	23.6	1.65	26.7	2.11	29.8	2.55	33.0	2.98
		25.0	15.7	0.55	18.8	0.99	22.0	1.45	23.6	1.68	26.7	2.13	29.8	2.59	33.0	3.06
		30.0	15.7	0.63	18.8	1.04	22.0	1.51	23.6	1.78	26.7	2.32	29.8	2.85	33.0	3.36
		35.0	15.7	2.42	18.8	2.71	22.0	3.04	23.6	3.26	26.7	3.70	29.8	4.13	33.0	4.55
		40.0	15.7	3.15	18.8	3.54	22.0	3.86	23.6	4.00	26.7	4.23	29.8	4.41	33.0	4.55
		43.0	15.7	3.60	18.8	4.07	22.0	4.45	23.6	4.62	26.7	4.90	29.8	5.12	33.0	5.30
46.0	15.7	4.59	18.8	5.03	22.0	5.40	23.6	5.56	26.7	5.85	29.8	6.09	33.0	6.27		
52.0	15.7	5.41	18.8	5.98	22.0	6.48	23.6	6.70	26.7	6.92	29.8	7.03	33.0	7.08		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-22. 28HP (Heating) U-12ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	61.7	20.97	60.1	20.60	56.9	19.82	55.3	19.40	50.3	18.06	46.8	17.08	37.6	14.30
		-19.8	-20.0	64.7	21.45	63.1	21.06	59.8	20.24	58.1	19.81	52.8	18.41	49.2	17.40	39.6	14.54
		-14.7	-15.0	69.1	22.16	67.4	21.75	63.9	20.88	62.1	20.42	56.5	18.95	52.7	17.89	42.5	14.90
		-9.6	-10.0	75.0	23.26	73.2	22.81	69.4	21.81	67.4	21.26	61.4	19.71	57.3	18.57	46.2	15.39
		-4.4	-5.0	82.6	24.25	80.6	23.81	76.5	22.87	74.3	22.36	67.7	20.70	63.1	19.49	50.9	16.07
		-1.8	-2.5	87.2	24.66	85.0	24.20	80.6	23.22	78.4	22.69	71.4	21.00	66.5	19.75	53.7	16.29
		0.8	0.0	92.2	25.04	90.0	24.56	85.3	23.53	82.9	22.98	75.6	21.23	70.5	19.96	55.1	15.72
		2.8	2.0	97.7	25.42	95.3	24.92	90.5	23.87	87.5	23.11	77.8	20.47	71.3	18.75	55.1	14.56
		6.0	5.0	100.5	23.23	97.2	22.46	90.7	20.93	87.5	20.17	77.8	17.94	71.3	16.45	55.1	12.86
		7.0	6.0	100.5	22.10	97.2	21.37	90.7	19.93	87.5	19.20	77.8	17.09	71.3	15.71	55.1	12.33
		8.6	7.5	100.5	20.41	97.2	19.75	90.7	18.45	87.5	17.80	77.8	15.90	71.3	14.64	55.1	11.55
		11.2	10.0	100.5	17.78	97.2	17.24	90.7	16.16	87.5	15.63	77.8	14.04	71.3	12.98	55.1	10.34
		16.4	15.0	100.5	13.19	97.2	12.84	90.7	12.14	87.5	11.78	77.8	10.69	71.3	9.95	55.1	8.03
24.0	18.0	100.5	11.18	97.2	10.85	90.7	10.20	87.5	9.87	77.8	8.90	71.3	8.24	55.1	6.61		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	90%	-24.9	-25.0	61.7	20.97	60.1	20.60	56.9	19.82	55.3	19.40	50.3	18.06	46.8	17.08	37.6	14.30
		-19.8	-20.0	64.7	21.45	63.1	21.06	59.8	20.24	58.1	19.81	52.8	18.41	49.2	17.40	39.6	14.54
		-14.7	-15.0	69.1	22.16	67.4	21.75	63.9	20.88	62.1	20.42	56.5	18.95	52.7	17.89	42.5	14.90
		-9.6	-10.0	75.0	23.26	73.2	22.81	69.4	21.81	67.4	21.26	61.4	19.71	57.3	18.57	46.2	15.39
		-4.4	-5.0	82.6	24.25	80.6	23.81	76.5	22.87	74.3	22.36	67.7	20.70	63.1	19.49	49.6	15.02
		-1.8	-2.5	87.2	24.66	85.0	24.20	80.6	23.22	78.4	22.69	70.0	19.15	64.2	17.71	49.6	14.08
		0.8	0.0	90.4	22.17	87.5	21.54	81.7	20.26	78.8	19.63	70.0	17.70	64.2	16.40	49.6	13.09
		2.8	2.0	90.4	20.19	87.5	19.63	81.7	18.51	78.8	17.95	70.0	16.23	64.2	15.09	49.6	12.21
		6.0	5.0	90.4	17.49	87.5	17.10	81.7	16.26	78.8	15.83	70.0	14.47	64.2	13.48	49.6	10.85
		7.0	6.0	90.4	17.07	87.5	16.61	81.7	15.69	78.8	15.22	70.0	13.81	64.2	12.85	49.6	10.39
		8.6	7.5	90.4	15.68	87.5	15.28	81.7	14.46	78.8	14.05	70.0	12.80	64.2	11.94	49.6	9.72
		11.2	10.0	90.4	13.50	87.5	13.19	81.7	12.55	78.8	12.23	70.0	11.23	64.2	10.53	49.6	8.68
		16.4	15.0	90.4	10.17	87.5	9.87	81.7	9.29	78.8	9.01	70.0	8.39	64.2	7.93	49.6	6.65
24.0	18.0	90.4	10.17	87.5	9.87	81.7	9.29	78.8	8.99	70.0	8.11	64.2	7.53	49.6	6.06		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	80%	-24.9	-25.0	61.7	20.97	60.1	20.60	56.9	19.82	55.3	19.40	50.3	18.06	46.8	17.08	37.6	14.30
		-19.8	-20.0	64.7	21.45	63.1	21.06	59.8	20.24	58.1	19.81	52.8	18.41	49.2	17.40	39.6	14.54
		-14.7	-15.0	69.1	22.16	67.4	21.75	63.9	20.88	62.1	20.42	56.5	18.95	52.7	17.89	42.5	14.90
		-9.6	-10.0	75.0	23.26	73.2	22.81	69.4	21.81	67.4	21.26	61.4	19.71	57.0	18.57	44.1	13.91
		-4.4	-5.0	80.4	19.79	77.8	19.33	72.6	18.38	70.0	17.89	62.2	16.36	57.0	15.30	44.1	12.48
		-1.8	-2.5	80.4	18.25	77.8	17.85	72.6	17.00	70.0	16.57	62.2	15.21	57.0	14.25	44.1	11.75
		0.8	0.0	80.4	16.58	77.8	16.27	72.6	15.61	70.0	15.25	62.2	14.11	57.0	13.29	44.1	11.00
		2.8	2.0	80.4	15.29	77.8	15.01	72.6	14.42	70.0	14.11	62.2	13.09	57.0	12.34	44.1	10.25
		6.0	5.0	80.4	13.44	77.8	13.22	72.6	12.74	70.0	12.48	62.2	11.61	57.0	10.95	44.1	9.09
		7.0	6.0	80.4	12.99	77.8	12.74	72.6	12.21	70.0	11.93	62.2	11.05	57.0	10.42	44.1	8.70
		8.6	7.5	80.4	11.85	77.8	11.64	72.6	11.19	70.0	10.96	62.2	10.21	57.0	9.66	44.1	8.13
		11.2	10.0	80.4	10.07	77.8	9.93	72.6	9.62	70.0	9.45	62.2	8.89	57.0	8.47	44.1	7.24
		16.4	15.0	80.4	9.16	77.8	8.90	72.6	8.37	70.0	8.11	62.2	7.33	57.0	6.81	44.1	5.51
24.0	18.0	80.4	9.16	77.8	8.90	72.6	8.37	70.0	8.11	62.2	7.33	57.0	6.81	44.1	5.51		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	70%	-24.9	-25.0	61.7	20.97	60.1	20.60	56.9	19.82	55.3	19.40	50.3	18.06	46.8	17.08	37.6	14.30
		-19.8	-20.0	64.7	21.45	63.1	21.06	59.8	20.24	58.1	19.81	52.8	18.41	49.2	17.40	38.6	13.07
		-14.7	-15.0	69.1	22.16	67.4	21.75	63.5	17.97	61.3	17.55	54.4	16.21	49.9	15.24	38.6	12.50
		-9.6	-10.0	70.3	17.18	68.1	16.86	63.5	16.19	61.3	15.84	54.4	14.69	49.9	13.85	38.6	11.59
		-4.4	-5.0	70.3	15.02	68.1	14.80	63.5	14.31	61.3	14.03	54.4	13.13	49.9	12.44	38.6	10.46
		-1.8	-2.5	70.3	13.97	68.1	13.77	63.5	13.33	61.3	13.10	54.4	12.28	49.9	11.66	38.6	9.85
		0.8	0.0	70.3	12.87	68.1	12.70	63.5	12.32	61.3	12.11	54.4	11.39	49.9	10.84	38.6	9.20
		2.8	2.0	70.3	11.77	68.1	11.63	63.5	11.32	61.3	11.14	54.4	10.52	49.9	10.03	38.6	8.55
		6.0	5.0	70.3	10.21	68.1	10.11	63.5	9.88	61.3	9.74	54.4	9.23	49.9	8.82	38.6	7.53
		7.0	6.0	70.3	9.73	68.1	9.62	63.5	9.38	61.3	9.24	54.4	8.76	49.9	8.38	38.6	7.23
		8.6	7.5	70.3	8.82	68.1	8.74	63.5	8.55	61.3	8.45	54.4	8.06	49.9	7.75	38.6	6.75
		11.2	10.0	70.3	8.15	68.1	7.92	63.5	7.46	61.3	7.24	54.4	6.99	49.9	6.76	38.6	6.00
		16.4	15.0	70.3	8.15	68.1	7.92	63.5	7.46	61.3	7.23	54.4	6.55	49.9	6.09	38.6	4.95
24.0	18.0	70.3	8.15	68.1	7.92	63.5	7.46	61.3	7.23	54.4	6.55	49.9	6.09	38.6	4.95		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

28HP (Heating) U-12ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	60%	-24.9	-25.0	60.3	16.84	58.3	16.57	54.4	15.99	52.5	15.67	46.7	14.60	42.8	13.75	33.1	11.30
		-19.8	-20.0	60.3	15.83	58.3	15.59	54.4	15.07	52.5	14.78	46.7	13.87	42.8	13.17	33.1	10.96
		-14.7	-15.0	60.3	14.65	58.3	14.46	54.4	14.04	52.5	13.80	46.7	12.98	42.8	12.35	33.1	10.47
		-9.6	-10.0	60.3	13.30	58.3	13.14	54.4	12.79	52.5	12.59	46.7	11.88	42.8	11.33	33.1	9.66
		-4.4	-5.0	60.3	11.70	58.3	11.59	54.4	11.31	52.5	11.15	46.7	10.58	42.8	10.12	33.1	8.70
		-1.8	-2.5	60.3	10.82	58.3	10.73	54.4	10.50	52.5	10.36	46.7	9.87	42.8	9.46	33.1	8.18
		0.8	0.0	60.3	9.90	58.3	9.83	54.4	9.65	52.5	9.54	46.7	9.12	42.8	8.77	33.1	7.63
		2.8	2.0	60.3	8.99	58.3	8.95	54.4	8.82	52.5	8.73	46.7	8.39	42.8	8.09	33.1	7.08
		6.0	5.0	60.3	7.69	58.3	7.66	54.4	7.57	52.5	7.51	46.7	7.26	42.8	7.03	33.1	6.18
		7.0	6.0	60.3	7.20	58.3	7.19	54.4	7.12	52.5	7.08	46.7	6.87	42.8	6.67	33.1	5.96
		8.6	7.5	60.3	7.14	58.3	6.94	54.4	6.55	52.5	6.46	46.7	6.31	42.8	6.16	33.1	5.56
		11.2	10.0	60.3	7.14	58.3	6.94	54.4	6.55	52.5	6.35	46.7	5.77	42.8	5.38	33.1	4.94
		16.4	15.0	60.3	7.14	58.3	6.94	54.4	6.55	52.5	6.35	46.7	5.77	42.8	5.38	33.1	4.40
24.0	18.0	60.3	7.14	58.3	6.94	54.4	6.55	52.5	6.35	46.7	5.77	42.8	5.38	33.1	4.40		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	50%	-24.9	-25.0	50.2	13.04	48.6	12.90	45.4	12.57	43.8	12.38	38.9	11.72	35.6	11.18	27.5	9.38
		-19.8	-20.0	50.2	12.35	48.6	12.23	45.4	11.93	43.8	11.76	38.9	11.15	35.6	10.66	27.5	9.13
		-14.7	-15.0	50.2	11.44	48.6	11.34	45.4	11.09	43.8	10.95	38.9	10.41	35.6	9.97	27.5	8.61
		-9.6	-10.0	50.2	10.32	48.6	10.25	45.4	10.06	43.8	9.94	38.9	9.50	35.6	9.13	27.5	7.93
		-4.4	-5.0	50.2	9.02	48.6	8.98	45.4	8.85	43.8	8.76	38.9	8.43	35.6	8.13	27.5	7.14
		-1.8	-2.5	50.2	8.30	48.6	8.28	45.4	8.19	43.8	8.12	38.9	7.84	35.6	7.59	27.5	6.70
		0.8	0.0	50.2	7.55	48.6	7.55	45.4	7.50	43.8	7.45	38.9	7.24	35.6	7.03	27.5	6.25
		2.8	2.0	50.2	6.82	48.6	6.83	45.4	6.82	43.8	6.79	38.9	6.62	35.6	6.44	27.5	5.77
		6.0	5.0	50.2	6.13	48.6	5.96	45.4	5.71	43.8	5.71	38.9	5.64	35.6	5.54	27.5	5.03
		7.0	6.0	50.2	6.13	48.6	5.96	45.4	5.64	43.8	5.47	38.9	5.34	35.6	5.26	27.5	4.85
		8.6	7.5	50.2	6.13	48.6	5.96	45.4	5.64	43.8	5.47	38.9	4.98	35.6	4.86	27.5	4.54
		11.2	10.0	50.2	6.13	48.6	5.96	45.4	5.64	43.8	5.47	38.9	4.98	35.6	4.66	27.5	4.04
		16.4	15.0	50.2	6.13	48.6	5.96	45.4	5.64	43.8	5.47	38.9	4.98	35.6	4.66	27.5	3.84
24.0	18.0	50.2	6.13	48.6	5.96	45.4	5.64	43.8	5.47	38.9	4.98	35.6	4.66	27.5	3.84		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	40%	-24.9	-25.0	40.2	10.02	38.9	9.95	36.3	9.75	35.0	9.63	31.1	9.20	28.5	8.83	22.0	7.61
		-19.8	-20.0	40.2	9.47	38.9	9.41	36.3	9.24	35.0	9.14	31.1	8.75	28.5	8.42	22.0	7.34
		-14.7	-15.0	40.2	8.75	38.9	8.70	36.3	8.58	35.0	8.49	31.1	8.16	28.5	7.87	22.0	6.90
		-9.6	-10.0	40.2	7.87	38.9	7.85	36.3	7.76	35.0	7.70	31.1	7.44	28.5	7.20	22.0	6.37
		-4.4	-5.0	40.2	6.84	38.9	6.84	36.3	6.80	35.0	6.77	31.1	6.59	28.5	6.41	22.0	5.74
		-1.8	-2.5	40.2	6.28	38.9	6.29	36.3	6.28	35.0	6.26	31.1	6.13	28.5	5.97	22.0	5.37
		0.8	0.0	40.2	5.65	38.9	5.67	36.3	5.69	35.0	5.68	31.1	5.59	28.5	5.48	22.0	4.99
		2.8	2.0	40.2	5.11	38.9	5.04	36.3	5.08	35.0	5.09	31.1	5.06	28.5	4.99	22.0	4.60
		6.0	5.0	40.2	5.11	38.9	4.98	36.3	4.72	35.0	4.59	31.1	4.33	28.5	4.30	22.0	4.05
		7.0	6.0	40.2	5.11	38.9	4.98	36.3	4.72	35.0	4.59	31.1	4.20	28.5	4.09	22.0	3.90
		8.6	7.5	40.2	5.11	38.9	4.98	36.3	4.72	35.0	4.59	31.1	4.20	28.5	3.94	22.0	3.65
		11.2	10.0	40.2	5.11	38.9	4.98	36.3	4.72	35.0	4.59	31.1	4.20	28.5	3.94	22.0	3.29
		16.4	15.0	40.2	5.11	38.9	4.98	36.3	4.72	35.0	4.59	31.1	4.20	28.5	3.94	22.0	3.29
24.0	18.0	40.2	5.11	38.9	4.98	36.3	4.72	35.0	4.59	31.1	4.20	28.5	3.94	22.0	3.29		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	30%	-24.9	-25.0	30.1	7.40	29.2	7.36	27.2	7.26	26.3	7.19	23.3	6.92	21.4	6.69	16.5	5.89
		-19.8	-20.0	30.1	6.99	29.2	6.96	27.2	6.88	26.3	6.82	23.3	6.59	21.4	6.38	16.5	5.65
		-14.7	-15.0	30.1	6.45	29.2	6.44	27.2	6.38	26.3	6.34	23.3	6.15	21.4	5.97	16.5	5.32
		-9.6	-10.0	30.1	5.80	29.2	5.80	27.2	5.77	26.3	5.74	23.3	5.60	21.4	5.45	16.5	4.91
		-4.4	-5.0	30.1	4.96	29.2	4.98	27.2	4.99	26.3	4.99	23.3	4.92	21.4	4.82	16.5	4.41
		-1.8	-2.5	30.1	4.50	29.2	4.53	27.2	4.57	26.3	4.58	23.3	4.54	21.4	4.48	16.5	4.13
		0.8	0.0	30.1	4.10	29.2	4.07	27.2	4.13	26.3	4.15	23.3	4.16	21.4	4.12	16.5	3.85
		2.8	2.0	30.1	4.10	29.2	4.01	27.2	3.81	26.3	3.74	23.3	3.78	21.4	3.77	16.5	3.57
		6.0	5.0	30.1	4.10	29.2	4.01	27.2	3.81	26.3	3.71	23.3	3.42	21.4	3.28	16.5	3.18
		7.0	6.0	30.1	4.10	29.2	4.01	27.2	3.81	26.3	3.71	23.3	3.42	21.4	3.22	16.5	3.06
		8.6	7.5	30.1	4.10	29.2	4.01	27.2	3.81	26.3	3.71	23.3	3.42	21.4	3.22	16.5	2.89
		11.2	10.0	30.1	4.10	29.2	4.01	27.2	3.81	26.3	3.71	23.3	3.42	21.4	3.22	16.5	2.73
		16.4	15.0	30.1	4.10	29.2	4.01	27.2	3.81	26.3	3.71	23.3	3.42	21.4	3.22	16.5	2.73
24.0	18.0	30.1	4.10	29.2	4.01	27.2	3.81	26.3	3.71	23.3	3.42	21.4	3.22	16.5	2.73		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-23. 30HP (Cooling) U-14ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	56.7	6.39	68.0	7.67	79.3	8.95	85.0	9.59	96.3	10.87	107.7	12.15	119.0	13.42
		-5.0	56.7	6.40	68.0	7.68	79.3	8.96	85.0	9.60	96.3	10.88	107.7	12.16	119.0	13.43
		0.0	56.7	6.41	68.0	7.69	79.3	8.97	85.0	9.61	96.3	10.89	107.7	12.18	119.0	13.47
		5.0	56.7	6.43	68.0	7.71	79.3	8.99	85.0	9.64	96.3	10.95	107.7	12.27	119.0	13.57
		10.0	56.7	6.45	68.0	7.75	79.3	9.08	85.0	9.76	96.3	11.12	107.7	12.50	119.0	13.83
		15.0	56.7	6.58	68.0	7.98	79.3	9.42	85.0	10.15	96.3	11.62	107.7	13.10	119.0	14.47
		20.0	56.7	7.31	68.0	8.94	79.3	10.83	85.0	11.86	96.3	14.06	107.7	16.48	119.0	19.11
		25.0	56.7	9.35	68.0	11.58	79.3	14.01	85.0	15.32	96.3	18.08	107.7	21.07	119.0	24.28
		30.0	56.7	11.74	68.0	14.50	79.3	17.50	85.0	19.08	96.3	22.42	107.7	26.00	119.0	29.83
		35.0	56.7	14.32	68.0	17.65	79.3	21.23	85.0	23.12	96.3	27.09	107.7	31.32	113.7	32.34
		40.0	56.7	17.09	68.0	21.04	79.3	25.26	85.0	27.48	96.3	32.13	100.7	32.34	105.1	32.34
		43.0	56.7	18.85	68.0	23.19	79.3	27.83	85.0	30.27	91.9	32.34	96.3	32.34	98.5	30.77
		46.0	56.1	20.50	67.3	25.23	71.5	25.66	72.3	24.98	74.2	23.82	76.7	22.92	79.6	22.20
52.0	24.5	8.72	26.6	8.81	29.2	8.98	30.6	9.08	33.7	9.32	37.2	9.59	40.9	9.88		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	51.0	5.16	61.2	6.48	71.4	7.76	76.5	8.39	86.7	9.62	96.9	10.83	107.1	12.01
		-5.0	51.0	5.17	61.2	6.49	71.4	7.77	76.5	8.40	86.7	9.63	96.9	10.84	107.1	12.02
		0.0	51.0	5.18	61.2	6.50	71.4	7.78	76.5	8.41	86.7	9.65	96.9	10.85	107.1	12.04
		5.0	51.0	5.20	61.2	6.52	71.4	7.80	76.5	8.43	86.7	9.67	96.9	10.89	107.1	12.09
		10.0	51.0	5.22	61.2	6.54	71.4	7.84	76.5	8.48	86.7	9.75	96.9	11.00	107.1	12.24
		15.0	51.0	5.28	61.2	6.66	71.4	8.02	76.5	8.70	86.7	10.03	96.9	11.33	107.1	12.61
		20.0	51.0	5.73	61.2	7.26	71.4	8.75	76.5	9.47	86.7	10.89	96.9	12.53	107.1	14.27
		25.0	51.0	7.55	61.2	9.36	71.4	11.24	76.5	12.20	86.7	14.17	96.9	16.20	107.1	18.28
		30.0	51.0	9.77	61.2	11.96	71.4	14.20	76.5	15.33	86.7	17.64	96.9	19.99	107.1	22.40
		35.0	51.0	12.53	61.2	15.19	71.4	17.87	76.5	19.23	86.7	21.98	96.9	24.81	107.1	27.74
		40.0	51.0	14.98	61.2	18.03	71.4	21.10	76.5	22.66	86.7	25.84	96.9	29.15	105.1	32.34
		43.0	51.0	16.49	61.2	19.79	71.4	23.12	76.5	24.81	86.7	28.30	96.3	32.34	98.5	30.77
		46.0	51.0	17.67	61.2	21.46	71.4	25.43	72.3	24.98	74.2	23.82	76.7	22.92	79.6	22.20
52.0	24.5	8.72	26.6	8.81	29.2	8.98	30.6	9.08	33.7	9.32	37.2	9.59	40.9	9.88		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	45.3	4.43	54.4	5.61	63.5	6.78	68.0	7.35	77.1	8.48	86.1	9.58	95.2	10.66
		-5.0	45.3	4.43	54.4	5.62	63.5	6.79	68.0	7.36	77.1	8.49	86.1	9.59	95.2	10.67
		0.0	45.3	4.44	54.4	5.63	63.5	6.80	68.0	7.37	77.1	8.50	86.1	9.60	95.2	10.68
		5.0	45.3	4.45	54.4	5.65	63.5	6.81	68.0	7.39	77.1	8.51	86.1	9.61	95.2	10.69
		10.0	45.3	4.47	54.4	5.67	63.5	6.83	68.0	7.40	77.1	8.54	86.1	9.66	95.2	10.75
		15.0	45.3	4.50	54.4	5.71	63.5	6.90	68.0	7.50	77.1	8.66	86.1	9.81	95.2	10.94
		20.0	45.3	4.70	54.4	6.00	63.5	7.27	68.0	7.89	77.1	9.12	86.1	10.30	95.2	11.46
		25.0	45.3	6.10	54.4	7.47	63.5	8.87	68.0	9.57	77.1	11.00	86.1	12.45	95.2	13.92
		30.0	45.3	8.04	54.4	9.75	63.5	11.46	68.0	12.32	77.1	14.05	86.1	15.78	95.2	17.51
		35.0	45.3	10.46	54.4	12.58	63.5	14.68	68.0	15.72	77.1	17.81	86.1	19.89	95.2	21.98
		40.0	45.3	12.64	54.4	15.09	63.5	17.51	68.0	18.71	77.1	21.11	86.1	23.52	95.2	25.96
		43.0	45.3	13.98	54.4	16.64	63.5	19.27	68.0	20.57	77.1	23.19	86.1	25.83	95.2	28.54
		46.0	45.3	14.93	54.4	17.88	63.5	20.90	68.0	22.44	74.2	23.82	76.7	22.92	79.6	22.20
52.0	24.5	8.72	26.6	8.81	29.2	8.98	30.6	9.08	33.7	9.32	37.2	9.59	40.9	9.88		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	39.7	3.67	47.6	4.73	55.5	5.77	59.5	6.29	67.4	7.30	75.4	8.29	83.3	9.26
		-5.0	39.7	3.68	47.6	4.74	55.5	5.78	59.5	6.29	67.4	7.30	75.4	8.29	83.3	9.26
		0.0	39.7	3.69	47.6	4.75	55.5	5.79	59.5	6.30	67.4	7.31	75.4	8.30	83.3	9.28
		5.0	39.7	3.70	47.6	4.76	55.5	5.80	59.5	6.32	67.4	7.33	75.4	8.32	83.3	9.29
		10.0	39.7	3.71	47.6	4.78	55.5	5.82	59.5	6.34	67.4	7.35	75.4	8.33	83.3	9.30
		15.0	39.7	3.74	47.6	4.80	55.5	5.84	59.5	6.36	67.4	7.38	75.4	8.39	83.3	9.37
		20.0	39.7	3.81	47.6	4.91	55.5	5.99	59.5	6.53	67.4	7.58	75.4	8.61	83.3	9.61
		25.0	39.7	4.61	47.6	5.74	55.5	6.83	59.5	7.36	67.4	8.39	75.4	9.40	83.3	10.38
		30.0	39.7	6.46	47.6	7.74	55.5	9.00	59.5	9.62	67.4	10.85	75.4	12.06	83.3	13.25
		35.0	39.7	8.55	47.6	10.18	55.5	11.77	59.5	12.55	67.4	14.08	75.4	15.57	83.3	17.04
		40.0	39.7	10.45	47.6	12.37	55.5	14.24	59.5	15.15	67.4	16.93	75.4	18.67	83.3	20.38
		43.0	39.7	11.62	47.6	13.73	55.5	15.76	59.5	16.75	67.4	18.69	75.4	20.60	83.3	22.47
		46.0	39.7	12.45	47.6	14.69	55.5	16.93	59.5	18.05	67.4	20.31	75.4	21.75	79.6	22.20
52.0	24.5	8.72	26.6	8.81	29.2	8.98	30.6	9.08	33.7	9.32	37.2	9.59	40.9	9.88		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

30HP (Cooling) U-14ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	34.0	2.91	40.8	3.84	47.6	4.75	51.0	5.20	57.8	6.08	64.6	6.95	71.4	7.81
		-5.0	34.0	2.91	40.8	3.84	47.6	4.75	51.0	5.20	57.8	6.09	64.6	6.96	71.4	7.81
		0.0	34.0	2.92	40.8	3.85	47.6	4.76	51.0	5.21	57.8	6.10	64.6	6.97	71.4	7.82
		5.0	34.0	2.93	40.8	3.86	47.6	4.77	51.0	5.22	57.8	6.11	64.6	6.98	71.4	7.83
		10.0	34.0	2.94	40.8	3.87	47.6	4.78	51.0	5.23	57.8	6.12	64.6	6.99	71.4	7.85
		15.0	34.0	2.96	40.8	3.89	47.6	4.81	51.0	5.26	57.8	6.14	64.6	7.01	71.4	7.86
		20.0	34.0	2.99	40.8	3.92	47.6	4.84	51.0	5.30	57.8	6.20	64.6	7.08	71.4	7.94
		25.0	34.0	3.29	40.8	4.25	47.6	5.18	51.0	5.63	57.8	6.53	64.6	7.41	71.4	8.27
		30.0	34.0	5.04	40.8	5.95	47.6	6.83	51.0	7.25	57.8	8.06	64.6	8.84	71.4	9.59
		35.0	34.0	6.79	40.8	8.00	47.6	9.14	51.0	9.69	57.8	10.75	64.6	11.76	71.4	12.72
		40.0	34.0	8.42	40.8	9.88	47.6	11.26	51.0	11.92	57.8	13.19	64.6	14.40	71.4	15.56
		43.0	34.0	9.43	40.8	11.03	47.6	12.55	51.0	13.28	57.8	14.69	64.6	16.02	71.4	17.30
46.0	34.0	10.22	40.8	11.87	47.6	13.47	51.0	14.26	57.8	15.81	64.6	17.31	71.4	18.79		
52.0	24.5	8.72	26.6	8.81	29.2	8.98	30.6	9.08	33.7	9.32	37.2	9.59	40.9	9.88		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	28.3	2.13	34.0	2.92	39.7	3.69	42.5	4.08	48.2	4.83	53.8	5.57	59.5	6.30
		-5.0	28.3	2.14	34.0	2.92	39.7	3.70	42.5	4.08	48.2	4.84	53.8	5.58	59.5	6.31
		0.0	28.3	2.14	34.0	2.93	39.7	3.70	42.5	4.09	48.2	4.84	53.8	5.59	59.5	6.32
		5.0	28.3	2.15	34.0	2.94	39.7	3.71	42.5	4.09	48.2	4.85	53.8	5.59	59.5	6.32
		10.0	28.3	2.16	34.0	2.95	39.7	3.72	42.5	4.11	48.2	4.86	53.8	5.61	59.5	6.34
		15.0	28.3	2.17	34.0	2.96	39.7	3.74	42.5	4.12	48.2	4.88	53.8	5.62	59.5	6.35
		20.0	28.3	2.20	34.0	2.99	39.7	3.77	42.5	4.15	48.2	4.90	53.8	5.64	59.5	6.37
		25.0	28.3	2.28	34.0	3.07	39.7	3.85	42.5	4.23	48.2	4.99	53.8	5.73	59.5	6.46
		30.0	28.3	3.78	34.0	4.35	39.7	4.78	42.5	5.05	48.2	5.64	53.8	6.27	59.5	6.92
		35.0	28.3	5.20	34.0	6.04	39.7	6.81	42.5	7.17	48.2	7.84	53.8	8.46	59.5	9.02
		40.0	28.3	6.55	34.0	7.60	39.7	8.57	42.5	9.02	48.2	9.87	53.8	10.65	59.5	11.36
		43.0	28.3	7.39	34.0	8.56	39.7	9.65	42.5	10.15	48.2	11.11	53.8	11.99	59.5	12.80
46.0	28.3	8.23	34.0	9.39	39.7	10.49	42.5	11.01	48.2	12.02	53.8	12.96	59.5	13.85		
52.0	24.5	8.72	26.6	8.81	29.2	8.98	30.6	9.08	33.7	9.32	37.2	9.59	40.9	9.88		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	22.7	1.34	27.2	1.98	31.7	2.61	34.0	2.93	38.5	3.54	43.1	4.15	47.6	4.76
		-5.0	22.7	1.34	27.2	1.98	31.7	2.62	34.0	2.93	38.5	3.55	43.1	4.16	47.6	4.76
		0.0	22.7	1.35	27.2	1.99	31.7	2.62	34.0	2.93	38.5	3.55	43.1	4.16	47.6	4.77
		5.0	22.7	1.35	27.2	1.99	31.7	2.63	34.0	2.94	38.5	3.56	43.1	4.17	47.6	4.78
		10.0	22.7	1.36	27.2	2.00	31.7	2.64	34.0	2.95	38.5	3.57	43.1	4.18	47.6	4.79
		15.0	22.7	1.37	27.2	2.01	31.7	2.65	34.0	2.96	38.5	3.58	43.1	4.19	47.6	4.80
		20.0	22.7	1.39	27.2	2.03	31.7	2.67	34.0	2.98	38.5	3.60	43.1	4.21	47.6	4.82
		25.0	22.7	1.43	27.2	2.07	31.7	2.70	34.0	3.01	38.5	3.62	43.1	4.24	47.6	4.86
		30.0	22.7	1.97	27.2	2.39	31.7	2.92	34.0	3.20	38.5	3.77	43.1	4.40	47.6	5.09
		35.0	22.7	3.77	27.2	4.31	31.7	4.78	34.0	5.00	38.5	5.37	43.1	5.84	47.6	6.44
		40.0	22.7	4.85	27.2	5.55	31.7	6.17	34.0	6.45	38.5	6.96	43.1	7.39	47.6	7.77
		43.0	22.7	5.51	27.2	6.32	31.7	7.03	34.0	7.36	38.5	7.95	43.1	8.46	47.6	8.91
46.0	22.7	6.46	27.2	7.24	31.7	7.94	34.0	8.26	38.5	8.86	43.1	9.40	47.6	9.88		
52.0	22.7	7.71	26.6	8.81	29.2	8.98	30.6	9.08	33.7	9.32	37.2	9.59	40.9	9.88		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	17.0	0.53	20.4	1.02	23.8	1.51	25.5	1.75	28.9	2.23	32.3	2.71	35.7	3.17
		-5.0	17.0	0.54	20.4	1.03	23.8	1.51	25.5	1.76	28.9	2.24	32.3	2.71	35.7	3.18
		0.0	17.0	0.54	20.4	1.03	23.8	1.52	25.5	1.76	28.9	2.24	32.3	2.72	35.7	3.18
		5.0	17.0	0.54	20.4	1.03	23.8	1.52	25.5	1.77	28.9	2.25	32.3	2.73	35.7	3.19
		10.0	17.0	0.55	20.4	1.04	23.8	1.53	25.5	1.78	28.9	2.26	32.3	2.74	35.7	3.21
		15.0	17.0	0.56	20.4	1.05	23.8	1.54	25.5	1.79	28.9	2.27	32.3	2.75	35.7	3.22
		20.0	17.0	0.57	20.4	1.06	23.8	1.55	25.5	1.80	28.9	2.29	32.3	2.77	35.7	3.24
		25.0	17.0	0.60	20.4	1.08	23.8	1.58	25.5	1.83	28.9	2.32	32.3	2.82	35.7	3.32
		30.0	17.0	0.68	20.4	1.13	23.8	1.64	25.5	1.93	28.9	2.51	32.3	3.08	35.7	3.63
		35.0	17.0	2.51	20.4	2.82	23.8	3.19	25.5	3.43	28.9	3.90	32.3	4.37	35.7	4.83
		40.0	17.0	3.30	20.4	3.73	23.8	4.09	25.5	4.24	28.9	4.49	32.3	4.68	35.7	4.83
		43.0	17.0	3.80	20.4	4.31	23.8	4.73	25.5	4.91	28.9	5.22	32.3	5.46	35.7	5.65
46.0	17.0	4.89	20.4	5.37	23.8	5.78	25.5	5.96	28.9	6.27	32.3	6.52	35.7	6.73		
52.0	17.0	5.79	20.4	6.41	23.8	6.95	25.5	7.19	28.9	7.43	32.3	7.56	35.7	7.61		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-24. 30HP (Heating) U-14ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	65.7	22.39	64.0	22.00	60.6	21.17	58.9	20.74	53.6	19.32	49.9	18.29	40.2	15.36
		-19.8	-20.0	68.9	22.87	67.2	22.47	63.7	21.61	61.9	21.16	56.3	19.69	52.5	18.63	42.4	15.61
		-14.7	-15.0	73.5	23.61	71.7	23.18	68.0	22.27	66.1	21.80	60.2	20.26	56.2	19.14	45.4	15.99
		-9.6	-10.0	79.8	24.76	77.8	24.29	73.8	23.23	71.8	22.65	65.5	21.06	61.0	19.86	49.3	16.51
		-4.4	-5.0	87.9	25.81	85.7	25.36	81.4	24.38	79.1	23.85	72.1	22.11	67.3	20.84	54.3	17.23
		-1.8	-2.5	92.7	26.25	90.5	25.78	85.8	24.75	83.4	24.21	76.1	22.43	71.0	21.13	57.3	17.47
		0.8	0.0	98.1	26.65	95.7	26.16	90.8	25.08	88.3	24.52	80.5	22.67	75.1	21.34	59.8	17.24
		2.8	2.0	103.9	27.04	101.4	26.51	96.2	25.41	93.6	24.83	84.4	22.53	77.4	20.62	59.8	15.98
		6.0	5.0	109.1	25.70	105.6	24.83	98.5	23.11	95.0	22.26	84.4	19.76	77.4	18.11	59.8	14.13
		7.0	6.0	109.1	24.46	105.6	23.64	98.5	22.02	95.0	21.20	84.4	18.84	77.4	17.30	59.8	13.55
		8.6	7.5	109.1	22.61	105.6	21.86	98.5	20.39	95.0	19.67	84.4	17.53	77.4	16.13	59.8	12.70
		11.2	10.0	109.1	19.71	105.6	19.10	98.5	17.88	95.0	17.28	84.4	15.49	77.4	14.31	59.8	11.38
		16.4	15.0	109.1	14.66	105.6	14.27	98.5	13.47	95.0	13.06	84.4	11.84	77.4	11.01	59.8	8.88
24.0	18.0	109.1	12.18	105.6	11.83	98.5	11.13	95.0	10.77	84.4	9.72	77.4	9.01	59.8	7.25		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	65.7	22.39	64.0	22.00	60.6	21.17	58.9	20.74	53.6	19.32	49.9	18.29	40.2	15.36
		-19.8	-20.0	68.9	22.87	67.2	22.47	63.7	21.61	61.9	21.16	56.3	19.69	52.5	18.63	42.4	15.61
		-14.7	-15.0	73.5	23.61	71.7	23.18	68.0	22.27	66.1	21.80	60.2	20.26	56.2	19.14	45.4	15.99
		-9.6	-10.0	79.8	24.76	77.8	24.29	73.8	23.23	71.8	22.65	65.5	21.06	61.0	19.86	49.3	16.51
		-4.4	-5.0	87.9	25.81	85.7	25.36	81.4	24.38	79.1	23.85	72.1	22.11	67.3	20.84	53.8	17.23
		-1.8	-2.5	92.7	26.25	90.5	25.78	85.8	24.75	83.4	24.21	76.0	22.43	69.7	19.44	53.8	15.43
		0.8	0.0	98.1	26.65	95.0	23.74	88.7	22.32	85.5	21.60	76.0	19.45	69.7	18.01	53.8	14.35
		2.8	2.0	98.2	22.29	95.0	21.66	88.7	20.40	85.5	19.77	76.0	17.86	69.7	16.59	53.8	13.41
		6.0	5.0	98.2	19.34	95.0	18.89	88.7	17.96	85.5	17.47	76.0	15.96	69.7	14.84	53.8	11.93
		7.0	6.0	98.2	18.91	95.0	18.39	88.7	17.34	85.5	16.81	76.0	15.23	69.7	14.15	53.8	11.42
		8.6	7.5	98.2	17.38	95.0	16.92	88.7	16.00	85.5	15.53	76.0	14.12	69.7	13.16	53.8	10.70
		11.2	10.0	98.2	14.98	95.0	14.63	88.7	13.90	85.5	13.53	76.0	12.40	69.7	11.62	53.8	9.56
		16.4	15.0	98.2	11.09	95.0	10.77	88.7	10.23	85.5	10.01	76.0	9.30	69.7	8.79	53.8	7.37
24.0	18.0	98.2	11.09	95.0	10.77	88.7	10.14	85.5	9.82	76.0	8.87	69.7	8.24	53.8	6.65		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	65.7	22.39	64.0	22.00	60.6	21.17	58.9	20.74	53.6	19.32	49.9	18.29	40.2	15.36
		-19.8	-20.0	68.9	22.87	67.2	22.47	63.7	21.61	61.9	21.16	56.3	19.69	52.5	18.63	42.4	15.61
		-14.7	-15.0	73.5	23.61	71.7	23.18	68.0	22.27	66.1	21.80	60.2	20.26	56.2	19.14	45.4	15.99
		-9.6	-10.0	79.8	24.76	77.8	24.29	73.8	23.23	71.8	22.65	65.5	21.06	61.0	19.86	47.9	15.21
		-4.4	-5.0	87.3	21.79	84.4	21.26	78.8	20.20	76.0	19.65	67.6	17.95	61.9	16.78	47.9	13.67
		-1.8	-2.5	87.3	20.11	84.4	19.65	78.8	18.70	76.0	18.21	67.6	16.69	61.9	15.63	47.9	12.88
		0.8	0.0	87.3	18.27	84.4	17.92	78.8	17.18	76.0	16.78	67.6	15.51	61.9	14.60	47.9	12.07
		2.8	2.0	87.3	16.86	84.4	16.55	78.8	15.89	76.0	15.54	67.6	14.40	61.9	13.57	47.9	11.27
		6.0	5.0	87.3	14.86	84.4	14.61	78.8	14.07	76.0	13.77	67.6	12.80	61.9	12.06	47.9	10.00
		7.0	6.0	87.3	14.41	84.4	14.11	78.8	13.50	76.0	13.19	67.6	12.19	61.9	11.49	47.9	9.58
		8.6	7.5	87.3	13.15	84.4	12.90	78.8	12.39	76.0	12.13	67.6	11.27	61.9	10.66	47.9	8.96
		11.2	10.0	87.3	11.20	84.4	11.03	78.8	10.67	76.0	10.47	67.6	9.83	61.9	9.36	47.9	7.98
		16.4	15.0	87.3	10.00	84.4	9.72	78.8	9.15	76.0	8.87	67.6	8.03	61.9	7.46	47.9	6.09
24.0	18.0	87.3	10.00	84.4	9.72	78.8	9.15	76.0	8.87	67.6	8.03	61.9	7.46	47.9	6.05		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	65.7	22.39	64.0	22.00	60.6	21.17	58.9	20.74	53.6	19.32	49.9	18.29	40.2	15.36
		-19.8	-20.0	68.9	22.87	67.2	22.47	63.7	21.61	61.9	21.16	56.3	19.69	52.5	18.63	41.9	15.61
		-14.7	-15.0	73.5	23.61	71.7	23.18	68.0	22.27	66.1	21.80	59.1	17.74	54.2	16.67	41.9	13.65
		-9.6	-10.0	76.4	18.87	73.9	18.51	69.0	17.76	66.5	17.37	59.1	16.09	54.2	15.17	41.9	12.68
		-4.4	-5.0	76.4	16.50	73.9	16.25	69.0	15.70	66.5	15.40	59.1	14.40	54.2	13.64	41.9	11.47
		-1.8	-2.5	76.4	15.36	73.9	15.14	69.0	14.65	66.5	14.38	59.1	13.48	54.2	12.79	41.9	10.80
		0.8	0.0	76.4	14.16	73.9	13.97	69.0	13.55	66.5	13.31	59.1	12.51	54.2	11.90	41.9	10.10
		2.8	2.0	76.4	12.98	73.9	12.82	69.0	12.47	66.5	12.27	59.1	11.57	54.2	11.02	41.9	9.40
		6.0	5.0	76.4	11.29	73.9	11.18	69.0	10.91	66.5	10.75	59.1	10.18	54.2	9.72	41.9	8.30
		7.0	6.0	76.4	10.80	73.9	10.67	69.0	10.38	66.5	10.22	59.1	9.67	54.2	9.25	41.9	7.97
		8.6	7.5	76.4	9.80	73.9	9.70	69.0	9.48	66.5	9.36	59.1	8.91	54.2	8.56	41.9	7.45
		11.2	10.0	76.4	8.91	73.9	8.66	69.0	8.17	66.5	8.04	59.1	7.74	54.2	7.48	41.9	6.63
		16.4	15.0	76.4	8.91	73.9	8.66	69.0	8.17	66.5	7.92	59.1	7.18	54.2	6.69	41.9	5.46
24.0	18.0	76.4	8.91	73.9	8.66	69.0	8.17	66.5	7.92	59.1	7.18	54.2	6.69	41.9	5.46		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

30HP (Heating) U-14ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	65.4	18.44	63.3	18.14	59.1	17.50	57.0	17.15	50.7	15.96	46.4	15.00	35.9	12.35
		-19.8	-20.0	65.4	17.34	63.3	17.08	59.1	16.49	57.0	16.18	50.7	15.16	46.4	14.39	35.9	11.95
		-14.7	-15.0	65.4	16.03	63.3	15.82	59.1	15.35	57.0	15.09	50.7	14.19	46.4	13.50	35.9	11.45
		-9.6	-10.0	65.4	14.57	63.3	14.40	59.1	14.01	57.0	13.78	50.7	13.01	46.4	12.40	35.9	10.57
		-4.4	-5.0	65.4	12.84	63.3	12.71	59.1	12.41	57.0	12.23	50.7	11.60	46.4	11.10	35.9	9.54
		-1.8	-2.5	65.4	11.89	63.3	11.79	59.1	11.53	57.0	11.38	50.7	10.83	46.4	10.38	35.9	8.97
		0.8	0.0	65.4	10.90	63.3	10.82	59.1	10.62	57.0	10.49	50.7	10.02	46.4	9.63	35.9	8.38
		2.8	2.0	65.4	9.91	63.3	9.86	59.1	9.71	57.0	9.62	50.7	9.23	46.4	8.90	35.9	7.79
		6.0	5.0	65.4	8.51	63.3	8.48	59.1	8.39	57.0	8.32	50.7	8.02	46.4	7.76	35.9	6.82
		7.0	6.0	65.4	8.01	63.3	7.98	59.1	7.90	57.0	7.84	50.7	7.60	46.4	7.37	35.9	6.58
		8.6	7.5	65.4	7.82	63.3	7.60	59.1	7.20	57.0	7.16	50.7	6.99	46.4	6.82	35.9	6.15
		11.2	10.0	65.4	7.82	63.3	7.60	59.1	7.18	57.0	6.97	50.7	6.34	46.4	5.96	35.9	5.47
		16.4	15.0	65.4	7.82	63.3	7.60	59.1	7.18	57.0	6.97	50.7	6.34	46.4	5.91	35.9	4.86
		24.0	18.0	65.4	7.82	63.3	7.60	59.1	7.18	57.0	6.97	50.7	6.34	46.4	5.91	35.9	4.86

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	54.5	14.25	52.8	14.10	49.3	13.73	47.5	13.52	42.2	12.80	38.7	12.22	29.9	10.26
		-19.8	-20.0	54.5	13.50	52.8	13.37	49.3	13.04	47.5	12.85	42.2	12.18	38.7	11.65	29.9	9.98
		-14.7	-15.0	54.5	12.52	52.8	12.41	49.3	12.13	47.5	11.98	42.2	11.39	38.7	10.91	29.9	9.42
		-9.6	-10.0	54.5	11.31	52.8	11.23	49.3	11.02	47.5	10.89	42.2	10.41	38.7	10.00	29.9	8.69
		-4.4	-5.0	54.5	9.91	52.8	9.86	49.3	9.71	47.5	9.62	42.2	9.25	38.7	8.92	29.9	7.84
		-1.8	-2.5	54.5	9.13	52.8	9.10	49.3	9.00	47.5	8.92	42.2	8.62	38.7	8.34	29.9	7.37
		0.8	0.0	54.5	8.32	52.8	8.31	49.3	8.25	47.5	8.20	42.2	7.96	38.7	7.73	29.9	6.88
		2.8	2.0	54.5	7.53	52.8	7.53	49.3	7.51	47.5	7.48	42.2	7.31	38.7	7.11	29.9	6.37
		6.0	5.0	54.5	6.72	52.8	6.55	49.3	6.34	47.5	6.33	42.2	6.25	38.7	6.13	29.9	5.57
		7.0	6.0	54.5	6.72	52.8	6.55	49.3	6.20	47.5	6.02	42.2	5.92	38.7	5.83	29.9	5.37
		8.6	7.5	54.5	6.72	52.8	6.55	49.3	6.20	47.5	6.02	42.2	5.49	38.7	5.39	29.9	5.03
		11.2	10.0	54.5	6.72	52.8	6.55	49.3	6.20	47.5	6.02	42.2	5.49	38.7	5.14	29.9	4.49
		16.4	15.0	54.5	6.72	52.8	6.55	49.3	6.20	47.5	6.02	42.2	5.49	38.7	5.14	29.9	4.26
		24.0	18.0	54.5	6.72	52.8	6.55	49.3	6.20	47.5	6.02	42.2	5.49	38.7	5.14	29.9	4.26

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	43.6	10.97	42.2	10.88	39.4	10.67	38.0	10.54	33.8	10.06	31.0	9.67	23.9	8.34
		-19.8	-20.0	43.6	10.37	42.2	10.30	39.4	10.12	38.0	10.00	33.8	9.58	31.0	9.21	23.9	8.05
		-14.7	-15.0	43.6	9.59	42.2	9.54	39.4	9.40	38.0	9.30	33.8	8.94	31.0	8.63	23.9	7.57
		-9.6	-10.0	43.6	8.64	42.2	8.61	39.4	8.51	38.0	8.45	33.8	8.16	31.0	7.90	23.9	6.99
		-4.4	-5.0	43.6	7.53	42.2	7.52	39.4	7.48	38.0	7.44	33.8	7.24	31.0	7.04	23.9	6.31
		-1.8	-2.5	43.6	6.92	42.2	6.93	39.4	6.92	38.0	6.90	33.8	6.75	31.0	6.58	23.9	5.93
		0.8	0.0	43.6	6.27	42.2	6.29	39.4	6.30	38.0	6.29	33.8	6.18	31.0	6.05	23.9	5.51
		2.8	2.0	43.6	5.63	42.2	5.60	39.4	5.64	38.0	5.65	33.8	5.61	31.0	5.52	23.9	5.10
		6.0	5.0	43.6	5.63	42.2	5.49	39.4	5.21	38.0	5.07	33.8	4.81	31.0	4.78	23.9	4.50
		7.0	6.0	43.6	5.63	42.2	5.49	39.4	5.21	38.0	5.07	33.8	4.65	31.0	4.55	23.9	4.33
		8.6	7.5	43.6	5.63	42.2	5.49	39.4	5.21	38.0	5.07	33.8	4.65	31.0	4.36	23.9	4.07
		11.2	10.0	43.6	5.63	42.2	5.49	39.4	5.21	38.0	5.07	33.8	4.65	31.0	4.36	23.9	3.66
		16.4	15.0	43.6	5.63	42.2	5.49	39.4	5.21	38.0	5.07	33.8	4.65	31.0	4.36	23.9	3.66
		24.0	18.0	43.6	5.63	42.2	5.49	39.4	5.21	38.0	5.07	33.8	4.65	31.0	4.36	23.9	3.66

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	32.7	8.12	31.7	8.08	29.6	7.96	28.5	7.89	25.3	7.60	23.2	7.34	17.9	6.47
		-19.8	-20.0	32.7	7.67	31.7	7.64	29.6	7.55	28.5	7.49	25.3	7.24	23.2	7.00	17.9	6.22
		-14.7	-15.0	32.7	7.09	31.7	7.08	29.6	7.01	28.5	6.97	25.3	6.76	23.2	6.56	17.9	5.86
		-9.6	-10.0	32.7	6.39	31.7	6.39	29.6	6.36	28.5	6.33	25.3	6.18	23.2	6.02	17.9	5.42
		-4.4	-5.0	32.7	5.50	31.7	5.52	29.6	5.53	28.5	5.52	25.3	5.44	23.2	5.33	17.9	4.88
		-1.8	-2.5	32.7	5.00	31.7	5.03	29.6	5.07	28.5	5.08	25.3	5.04	23.2	4.96	17.9	4.58
		0.8	0.0	32.7	4.54	31.7	4.54	29.6	4.60	28.5	4.62	25.3	4.62	23.2	4.57	17.9	4.28
		2.8	2.0	32.7	4.54	31.7	4.43	29.6	4.22	28.5	4.17	25.3	4.21	23.2	4.19	17.9	3.98
		6.0	5.0	32.7	4.54	31.7	4.43	29.6	4.22	28.5	4.12	25.3	3.80	23.2	3.67	17.9	3.56
		7.0	6.0	32.7	4.54	31.7	4.43	29.6	4.22	28.5	4.12	25.3	3.80	23.2	3.59	17.9	3.42
		8.6	7.5	32.7	4.54	31.7	4.43	29.6	4.22	28.5	4.12	25.3	3.80	23.2	3.59	17.9	3.23
		11.2	10.0	32.7	4.54	31.7	4.43	29.6	4.22	28.5	4.12	25.3	3.80	23.2	3.59	17.9	3.06
		16.4	15.0	32.7	4.54	31.7	4.43	29.6	4.22	28.5	4.12	25.3	3.80	23.2	3.59	17.9	3.06
		24.0	18.0	32.7	4.54	31.7	4.43	29.6	4.22	28.5	4.12	25.3	3.80	23.2	3.59	17.9	3.06

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-25. 32HP (Cooling) U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	60.0	7.10	72.0	8.52	84.0	9.94	90.0	10.65	102.0	12.08	114.0	13.50	126.0	14.92
		-5.0	60.0	7.11	72.0	8.53	84.0	9.95	90.0	10.67	102.0	12.09	114.0	13.51	126.0	14.93
		0.0	60.0	7.12	72.0	8.55	84.0	9.97	90.0	10.68	102.0	12.10	114.0	13.54	126.0	14.96
		5.0	60.0	7.14	72.0	8.56	84.0	9.99	90.0	10.71	102.0	12.16	114.0	13.63	126.0	15.07
		10.0	60.0	7.16	72.0	8.61	84.0	10.09	90.0	10.83	102.0	12.34	114.0	13.87	126.0	15.34
		15.0	60.0	7.30	72.0	8.85	84.0	10.44	90.0	11.25	102.0	12.87	114.0	14.50	126.0	16.01
		20.0	60.0	8.07	72.0	9.86	84.0	11.96	90.0	13.10	102.0	15.55	114.0	18.24	126.0	21.17
		25.0	60.0	10.32	72.0	12.79	84.0	15.50	90.0	16.95	102.0	20.02	114.0	23.35	126.0	26.92
		30.0	60.0	12.98	72.0	16.04	84.0	19.37	90.0	21.13	102.0	24.85	114.0	28.83	126.0	33.08
		35.0	60.0	15.83	72.0	19.54	84.0	23.52	90.0	25.62	102.0	30.03	114.0	34.74	120.4	35.84
		40.0	60.0	18.91	72.0	23.30	84.0	28.00	90.0	30.47	102.0	35.64	106.6	35.83	111.2	35.83
		43.0	60.0	20.87	72.0	25.70	84.0	30.86	90.0	33.57	97.3	35.84	101.9	35.83	104.3	34.13
		46.0	59.4	22.71	71.3	27.97	75.7	28.45	76.5	27.69	78.6	26.41	81.2	25.40	84.3	24.60
52.0	25.9	9.61	28.2	9.72	30.9	9.90	32.4	10.02	35.7	10.28	39.4	10.58	43.3	10.90		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	54.0	5.74	64.8	7.20	75.6	8.63	81.0	9.32	91.8	10.70	102.6	12.04	113.4	13.35
		-5.0	54.0	5.75	64.8	7.21	75.6	8.64	81.0	9.34	91.8	10.71	102.6	12.05	113.4	13.36
		0.0	54.0	5.76	64.8	7.22	75.6	8.65	81.0	9.35	91.8	10.72	102.6	12.06	113.4	13.38
		5.0	54.0	5.78	64.8	7.24	75.6	8.67	81.0	9.37	91.8	10.74	102.6	12.10	113.4	13.43
		10.0	54.0	5.80	64.8	7.26	75.6	8.71	81.0	9.42	91.8	10.83	102.6	12.22	113.4	13.58
		15.0	54.0	5.86	64.8	7.39	75.6	8.90	81.0	9.65	91.8	11.12	102.6	12.56	113.4	13.98
		20.0	54.0	6.33	64.8	8.02	75.6	9.66	81.0	10.46	91.8	12.02	102.6	13.84	113.4	15.79
		25.0	54.0	8.30	64.8	10.32	75.6	12.41	81.0	13.49	91.8	15.68	102.6	17.93	113.4	20.24
		30.0	54.0	10.77	64.8	13.22	75.6	15.71	81.0	16.97	91.8	19.53	102.6	22.14	113.4	24.82
		35.0	54.0	13.84	64.8	16.80	75.6	19.79	81.0	21.30	91.8	24.36	102.6	27.50	113.4	30.75
		40.0	54.0	16.57	64.8	19.96	75.6	23.38	81.0	25.11	91.8	28.65	102.6	32.33	111.2	35.83
		43.0	54.0	18.25	64.8	21.92	75.6	25.62	81.0	27.50	91.8	31.38	101.9	35.83	104.3	34.13
		46.0	54.0	19.56	64.8	23.77	75.6	28.19	76.5	27.69	78.6	26.41	81.2	25.40	84.3	24.60
52.0	25.9	9.61	28.2	9.72	30.9	9.90	32.4	10.02	35.7	10.28	39.4	10.58	43.3	10.90		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	48.0	4.92	57.6	6.24	67.2	7.54	72.0	8.17	81.6	9.42	91.2	10.65	100.8	11.85
		-5.0	48.0	4.93	57.6	6.25	67.2	7.55	72.0	8.18	81.6	9.43	91.2	10.66	100.8	11.86
		0.0	48.0	4.94	57.6	6.26	67.2	7.56	72.0	8.19	81.6	9.45	91.2	10.67	100.8	11.87
		5.0	48.0	4.95	57.6	6.28	67.2	7.57	72.0	8.21	81.6	9.46	91.2	10.68	100.8	11.88
		10.0	48.0	4.97	57.6	6.30	67.2	7.59	72.0	8.23	81.6	9.49	91.2	10.73	100.8	11.95
		15.0	48.0	5.00	57.6	6.34	67.2	7.67	72.0	8.32	81.6	9.62	91.2	10.89	100.8	12.14
		20.0	48.0	5.21	57.6	6.65	67.2	8.05	72.0	8.74	81.6	10.09	91.2	11.41	100.8	12.69
		25.0	48.0	6.69	57.6	8.22	67.2	9.77	72.0	10.56	81.6	12.15	91.2	13.76	100.8	15.40
		30.0	48.0	8.85	57.6	10.75	67.2	12.66	72.0	13.62	81.6	15.54	91.2	17.46	100.8	19.39
		35.0	48.0	11.55	57.6	13.90	67.2	16.23	72.0	17.40	81.6	19.72	91.2	22.03	100.8	24.35
		40.0	48.0	13.96	57.6	16.69	67.2	19.39	72.0	20.72	81.6	23.39	91.2	26.07	100.8	28.78
		43.0	48.0	15.46	57.6	18.42	67.2	21.34	72.0	22.79	81.6	25.70	91.2	28.64	100.8	31.64
		46.0	48.0	16.51	57.6	19.79	67.2	23.15	72.0	24.87	78.6	26.41	81.2	25.40	84.3	24.60
52.0	25.9	9.61	28.2	9.72	30.9	9.90	32.4	10.02	35.7	10.28	39.4	10.58	43.3	10.90		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	42.0	4.09	50.4	5.27	58.8	6.42	63.0	6.99	71.4	8.11	79.8	9.21	88.2	10.29
		-5.0	42.0	4.09	50.4	5.27	58.8	6.43	63.0	7.00	71.4	8.12	79.8	9.22	88.2	10.30
		0.0	42.0	4.10	50.4	5.28	58.8	6.44	63.0	7.01	71.4	8.13	79.8	9.23	88.2	10.31
		5.0	42.0	4.11	50.4	5.29	58.8	6.45	63.0	7.02	71.4	8.15	79.8	9.25	88.2	10.33
		10.0	42.0	4.13	50.4	5.31	58.8	6.47	63.0	7.04	71.4	8.17	79.8	9.26	88.2	10.34
		15.0	42.0	4.16	50.4	5.34	58.8	6.49	63.0	7.07	71.4	8.20	79.8	9.32	88.2	10.41
		20.0	42.0	4.23	50.4	5.45	58.8	6.65	63.0	7.24	71.4	8.41	79.8	9.55	88.2	10.67
		25.0	42.0	5.07	50.4	6.32	58.8	7.53	63.0	8.11	71.4	9.26	79.8	10.38	88.2	11.47
		30.0	42.0	7.09	50.4	8.52	58.8	9.92	63.0	10.61	71.4	11.98	79.8	13.32	88.2	14.65
		35.0	42.0	9.42	50.4	11.23	58.8	13.00	63.0	13.86	71.4	15.57	79.8	17.23	88.2	18.86
		40.0	42.0	11.53	50.4	13.67	58.8	15.74	63.0	16.76	71.4	18.74	79.8	20.68	88.2	22.57
		43.0	42.0	12.84	50.4	15.18	58.8	17.43	63.0	18.54	71.4	20.70	79.8	22.82	88.2	24.90
		46.0	42.0	13.76	50.4	16.25	58.8	18.74	63.0	19.99	71.4	22.49	79.8	24.10	84.3	24.60
52.0	25.9	9.61	28.2	9.72	30.9	9.90	32.4	10.02	35.7	10.28	39.4	10.58	43.3	10.90		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

32HP (Cooling) U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	36.0	3.24	43.2	4.27	50.4	5.28	54.0	5.78	61.2	6.76	68.4	7.73	75.6	8.68
		-5.0	36.0	3.24	43.2	4.27	50.4	5.29	54.0	5.78	61.2	6.77	68.4	7.74	75.6	8.69
		0.0	36.0	3.25	43.2	4.28	50.4	5.29	54.0	5.79	61.2	6.78	68.4	7.75	75.6	8.69
		5.0	36.0	3.26	43.2	4.29	50.4	5.30	54.0	5.80	61.2	6.79	68.4	7.76	75.6	8.71
		10.0	36.0	3.27	43.2	4.31	50.4	5.32	54.0	5.82	61.2	6.81	68.4	7.77	75.6	8.72
		15.0	36.0	3.29	43.2	4.33	50.4	5.34	54.0	5.84	61.2	6.83	68.4	7.79	75.6	8.74
		20.0	36.0	3.33	43.2	4.36	50.4	5.38	54.0	5.89	61.2	6.88	68.4	7.86	75.6	8.82
		25.0	36.0	3.64	43.2	4.70	50.4	5.73	54.0	6.24	61.2	7.23	68.4	8.21	75.6	9.16
		30.0	36.0	5.51	43.2	6.53	50.4	7.50	54.0	7.97	61.2	8.88	68.4	9.75	75.6	10.58
		35.0	36.0	7.46	43.2	8.80	50.4	10.07	54.0	10.69	61.2	11.87	68.4	12.99	75.6	14.06
		40.0	36.0	9.27	43.2	10.89	50.4	12.43	54.0	13.16	61.2	14.58	68.4	15.93	75.6	17.21
		43.0	36.0	10.39	43.2	12.18	50.4	13.87	54.0	14.68	61.2	16.24	68.4	17.73	75.6	19.15
46.0	36.0	11.28	43.2	13.11	50.4	14.90	54.0	15.77	61.2	17.49	68.4	19.17	75.6	20.81		
52.0	25.9	9.61	28.2	9.72	30.9	9.90	32.4	10.02	35.7	10.28	39.4	10.58	43.3	10.90		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	30.0	2.38	36.0	3.25	42.0	4.11	45.0	4.53	51.0	5.37	57.0	6.20	63.0	7.01
		-5.0	30.0	2.38	36.0	3.25	42.0	4.11	45.0	4.54	51.0	5.38	57.0	6.20	63.0	7.01
		0.0	30.0	2.38	36.0	3.26	42.0	4.12	45.0	4.55	51.0	5.39	57.0	6.21	63.0	7.02
		5.0	30.0	2.39	36.0	3.27	42.0	4.13	45.0	4.55	51.0	5.39	57.0	6.22	63.0	7.03
		10.0	30.0	2.40	36.0	3.28	42.0	4.14	45.0	4.57	51.0	5.41	57.0	6.23	63.0	7.04
		15.0	30.0	2.42	36.0	3.29	42.0	4.16	45.0	4.58	51.0	5.42	57.0	6.25	63.0	7.06
		20.0	30.0	2.45	36.0	3.32	42.0	4.18	45.0	4.61	51.0	5.45	57.0	6.27	63.0	7.08
		25.0	30.0	2.53	36.0	3.41	42.0	4.27	45.0	4.70	51.0	6.22	57.0	6.36	63.0	7.17
		30.0	30.0	4.11	36.0	4.75	42.0	5.25	45.0	5.55	51.0	6.22	57.0	6.93	63.0	7.65
		35.0	30.0	5.69	36.0	6.62	42.0	7.48	45.0	7.88	51.0	8.63	57.0	9.31	63.0	9.94
		40.0	30.0	7.19	36.0	8.36	42.0	9.43	45.0	9.94	51.0	10.88	57.0	11.75	63.0	12.54
		43.0	30.0	8.12	36.0	9.43	42.0	10.64	45.0	11.20	51.0	12.26	57.0	13.24	63.0	14.15
46.0	30.0	9.07	36.0	10.36	42.0	11.58	45.0	12.16	51.0	13.28	57.0	14.33	63.0	15.32		
52.0	25.9	9.61	28.2	9.72	30.9	9.90	32.4	10.02	35.7	10.28	39.4	10.58	43.3	10.90		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	24.0	1.50	28.8	2.21	33.6	2.91	36.0	3.26	40.8	3.94	45.6	4.62	50.4	5.29
		-5.0	24.0	1.50	28.8	2.21	33.6	2.91	36.0	3.26	40.8	3.95	45.6	4.63	50.4	5.30
		0.0	24.0	1.50	28.8	2.21	33.6	2.92	36.0	3.26	40.8	3.95	45.6	4.63	50.4	5.30
		5.0	24.0	1.51	28.8	2.22	33.6	2.92	36.0	3.27	40.8	3.96	45.6	4.64	50.4	5.31
		10.0	24.0	1.52	28.8	2.23	33.6	2.93	36.0	3.28	40.8	3.97	45.6	4.65	50.4	5.32
		15.0	24.0	1.53	28.8	2.24	33.6	2.94	36.0	3.29	40.8	3.98	45.6	4.66	50.4	5.34
		20.0	24.0	1.55	28.8	2.26	33.6	2.96	36.0	3.31	40.8	4.00	45.6	4.68	50.4	5.36
		25.0	24.0	1.59	28.8	2.30	33.6	3.00	36.0	3.35	40.8	4.03	45.6	4.71	50.4	5.40
		30.0	24.0	2.15	28.8	2.64	33.6	3.23	36.0	3.54	40.8	4.18	45.6	4.88	50.4	5.64
		35.0	24.0	4.10	28.8	4.70	33.6	5.23	36.0	5.46	40.8	5.88	45.6	6.40	50.4	7.07
		40.0	24.0	5.29	28.8	6.08	33.6	6.77	36.0	7.08	40.8	7.64	45.6	8.13	50.4	8.55
		43.0	24.0	6.03	28.8	6.93	33.6	7.73	36.0	8.09	40.8	8.75	45.6	9.32	50.4	9.82
46.0	24.0	7.10	28.8	7.96	33.6	8.74	36.0	9.10	40.8	9.77	45.6	10.37	50.4	10.90		
52.0	24.0	8.49	28.2	9.72	30.9	9.90	32.4	10.02	35.7	10.28	39.4	10.58	43.3	10.90		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	18.0	0.60	21.6	1.14	25.2	1.68	27.0	1.95	30.6	2.49	34.2	3.01	37.8	3.53
		-5.0	18.0	0.60	21.6	1.15	25.2	1.69	27.0	1.96	30.6	2.49	34.2	3.02	37.8	3.53
		0.0	18.0	0.61	21.6	1.15	25.2	1.69	27.0	1.96	30.6	2.50	34.2	3.02	37.8	3.54
		5.0	18.0	0.61	21.6	1.15	25.2	1.70	27.0	1.97	30.6	2.51	34.2	3.03	37.8	3.55
		10.0	18.0	0.61	21.6	1.16	25.2	1.70	27.0	1.98	30.6	2.52	34.2	3.05	37.8	3.57
		15.0	18.0	0.62	21.6	1.17	25.2	1.71	27.0	1.99	30.6	2.53	34.2	3.06	37.8	3.58
		20.0	18.0	0.64	21.6	1.18	25.2	1.73	27.0	2.01	30.6	2.55	34.2	3.08	37.8	3.60
		25.0	18.0	0.66	21.6	1.21	25.2	1.76	27.0	2.04	30.6	2.58	34.2	3.13	37.8	3.69
		30.0	18.0	0.75	21.6	1.26	25.2	1.82	27.0	2.14	30.6	2.78	34.2	3.40	37.8	4.00
		35.0	18.0	2.69	21.6	3.04	25.2	3.45	27.0	3.72	30.6	4.25	34.2	4.77	37.8	5.28
		40.0	18.0	3.58	21.6	4.05	25.2	4.45	27.0	4.61	30.6	4.89	34.2	5.11	37.8	5.28
		43.0	18.0	4.13	21.6	4.69	25.2	5.16	27.0	5.36	30.6	5.71	34.2	5.98	37.8	6.19
46.0	18.0	5.36	21.6	5.89	25.2	6.34	27.0	6.54	30.6	6.89	34.2	7.17	37.8	7.39		
52.0	18.0	6.35	21.6	7.04	25.2	7.64	27.0	7.91	30.6	8.18	34.2	8.32	37.8	8.38		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-26. 32HP (Heating) U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	68.2	23.16	66.5	22.76	63.0	21.93	61.3	21.47	55.8	20.04	52.0	18.98	42.0	15.97
		-19.8	-20.0	71.5	23.63	69.8	23.23	66.1	22.35	64.3	21.89	58.6	20.40	54.7	19.31	44.2	16.23
		-14.7	-15.0	76.2	24.36	74.4	23.93	70.6	23.01	68.7	22.53	62.6	20.96	58.5	19.82	47.4	16.61
		-9.6	-10.0	82.6	25.46	80.6	24.94	76.6	23.96	74.5	23.44	68.0	21.77	63.5	20.55	51.5	17.14
		-4.4	-5.0	91.0	26.71	88.8	26.24	84.4	25.24	82.1	24.70	75.0	22.91	70.0	21.58	56.7	17.87
		-1.8	-2.5	96.0	27.19	93.7	26.71	89.1	25.68	86.6	25.11	79.1	23.29	73.9	21.95	59.8	18.18
		0.8	0.0	101.6	27.63	99.2	27.12	94.2	26.03	91.7	25.45	83.7	23.56	78.2	22.18	63.0	18.17
		2.8	2.0	107.6	28.03	105.0	27.50	99.8	26.36	97.1	25.76	88.8	23.84	81.5	21.82	63.0	16.85
		6.0	5.0	114.8	27.50	111.1	26.53	103.7	24.64	100.0	23.71	88.9	20.99	81.5	19.19	63.0	14.92
		7.0	6.0	114.8	26.18	111.1	25.27	103.7	23.49	100.0	22.60	88.9	20.02	81.5	18.35	63.0	14.31
		8.6	7.5	114.8	24.23	111.1	23.40	103.7	21.78	100.0	20.98	88.9	18.63	81.5	17.11	63.0	13.42
		11.2	10.0	114.8	21.15	111.1	20.46	103.7	19.11	100.0	18.44	88.9	16.47	81.5	15.19	63.0	12.03
		16.4	15.0	114.8	15.78	111.1	15.33	103.7	14.44	100.0	13.99	88.9	12.64	81.5	11.74	63.0	9.43
		24.0	18.0	114.8	12.91	111.1	12.56	103.7	11.84	100.0	11.48	88.9	10.36	81.5	9.61	63.0	7.67

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	68.2	23.16	66.5	22.76	63.0	21.93	61.3	21.47	55.8	20.04	52.0	18.98	42.0	15.97
		-19.8	-20.0	71.5	23.63	69.8	23.23	66.1	22.35	64.3	21.89	58.6	20.40	54.7	19.31	44.2	16.23
		-14.7	-15.0	76.2	24.36	74.4	23.93	70.6	23.01	68.7	22.53	62.6	20.96	58.5	19.82	47.4	16.61
		-9.6	-10.0	82.6	25.46	80.6	24.94	76.6	23.96	74.5	23.44	68.0	21.77	63.5	20.55	51.5	17.14
		-4.4	-5.0	91.0	26.71	88.8	26.24	84.4	25.24	82.1	24.70	75.0	22.91	70.0	21.58	56.7	17.87
		-1.8	-2.5	96.0	27.19	93.7	26.71	89.1	25.68	86.6	25.11	79.1	23.29	73.3	21.95	56.7	16.23
		0.8	0.0	101.6	27.63	99.2	27.12	93.3	23.69	90.0	22.91	80.0	20.57	73.3	19.02	56.7	15.10
		2.8	2.0	103.3	23.77	100.0	23.07	93.3	21.69	90.0	20.99	80.0	18.87	73.3	17.56	56.7	14.16
		6.0	5.0	103.3	20.66	100.0	20.16	93.3	19.13	90.0	18.60	80.0	16.96	73.3	15.73	56.7	12.59
		7.0	6.0	103.3	20.25	100.0	19.67	93.3	18.50	90.0	17.92	80.0	16.17	73.3	15.01	56.7	12.06
		8.6	7.5	103.3	18.63	100.0	18.12	93.3	17.08	90.0	16.57	80.0	15.01	73.3	13.96	56.7	11.30
		11.2	10.0	103.3	16.09	100.0	15.68	93.3	14.87	90.0	14.45	80.0	13.19	73.3	12.34	56.7	10.11
		16.4	15.0	103.3	11.70	100.0	11.47	93.3	10.99	90.0	10.74	80.0	9.95	73.3	9.38	56.7	7.84
		24.0	18.0	103.3	11.55	100.0	11.23	93.3	10.57	90.0	10.25	80.0	9.27	73.3	8.61	56.7	6.98

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	68.2	23.16	66.5	22.76	63.0	21.93	61.3	21.47	55.8	20.04	52.0	18.98	42.0	15.97
		-19.8	-20.0	71.5	23.63	69.8	23.23	66.1	22.35	64.3	21.89	58.6	20.40	54.7	19.31	44.2	16.23
		-14.7	-15.0	76.2	24.36	74.4	23.93	70.6	23.01	68.7	22.53	62.6	20.96	58.5	19.82	47.4	16.61
		-9.6	-10.0	82.6	25.46	80.6	24.94	76.6	23.96	74.5	23.44	68.0	21.77	63.5	20.55	50.4	17.14
		-4.4	-5.0	91.0	26.71	88.8	26.24	83.0	21.36	80.0	20.76	71.1	18.93	65.2	17.67	50.4	14.36
		-1.8	-2.5	91.9	21.35	88.9	20.84	83.0	19.80	80.0	19.27	71.1	17.62	65.2	16.48	50.4	13.55
		0.8	0.0	91.9	19.50	88.9	19.02	83.0	18.20	80.0	17.77	71.1	16.40	65.2	15.41	50.4	12.71
		2.8	2.0	91.9	17.94	88.9	17.60	83.0	16.87	80.0	16.48	71.1	15.24	65.2	14.35	50.4	11.88
		6.0	5.0	91.9	15.86	88.9	15.58	83.0	14.98	80.0	14.65	71.1	13.59	65.2	12.78	50.4	10.56
		7.0	6.0	91.9	15.43	88.9	15.10	83.0	14.41	80.0	14.06	71.1	12.95	65.2	12.18	50.4	10.12
		8.6	7.5	91.9	14.10	88.9	13.82	83.0	13.24	80.0	12.94	71.1	11.98	65.2	11.31	50.4	9.47
		11.2	10.0	91.9	12.03	88.9	11.83	83.0	11.41	80.0	11.19	71.1	10.47	65.2	9.94	50.4	8.45
		16.4	15.0	91.9	10.43	88.9	10.14	83.0	9.56	80.0	9.27	71.1	8.39	65.2	7.81	50.4	6.49
		24.0	18.0	91.9	10.43	88.9	10.14	83.0	9.56	80.0	9.27	71.1	8.39	65.2	7.81	50.4	6.36

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	68.2	23.16	66.5	22.76	63.0	21.93	61.3	21.47	55.8	20.04	52.0	18.98	42.0	15.97
		-19.8	-20.0	71.5	23.63	69.8	23.23	66.1	22.35	64.3	21.89	58.6	20.40	54.7	19.31	44.1	16.23
		-14.7	-15.0	76.2	24.36	74.4	23.93	70.6	23.01	68.7	22.53	62.2	20.96	57.0	19.82	44.1	14.25
		-9.6	-10.0	80.4	19.93	77.8	19.54	72.6	18.72	70.0	18.29	62.2	16.92	57.0	15.94	44.1	13.30
		-4.4	-5.0	80.4	17.43	77.8	17.16	72.6	16.56	70.0	16.23	62.2	15.15	57.0	14.35	44.1	12.04
		-1.8	-2.5	80.4	16.25	77.8	16.01	72.6	15.48	70.0	15.18	62.2	14.20	57.0	13.47	44.1	11.35
		0.8	0.0	80.4	15.01	77.8	14.80	72.6	14.34	70.0	14.08	62.2	13.21	57.0	12.55	44.1	10.63
		2.8	2.0	80.4	13.79	77.8	13.61	72.6	13.21	70.0	12.99	62.2	12.23	57.0	11.64	44.1	9.91
		6.0	5.0	80.4	12.03	77.8	11.91	72.6	11.60	70.0	11.43	62.2	10.81	57.0	10.31	44.1	8.80
		7.0	6.0	80.4	11.58	77.8	11.42	72.6	11.08	70.0	10.90	62.2	10.28	57.0	9.81	44.1	8.43
		8.6	7.5	80.4	10.51	77.8	10.40	72.6	10.13	70.0	9.99	62.2	9.48	57.0	9.08	44.1	7.88
		11.2	10.0	80.4	9.30	77.8	9.05	72.6	8.68	70.0	8.59	62.2	8.24	57.0	7.96	44.1	7.03
		16.4	15.0	80.4	9.30	77.8	9.05	72.6	8.54	70.0	8.29	62.2	7.52	57.0	7.01	44.1	5.74
		24.0	18.0	80.4	9.30	77.8	9.05	72.6	8.54	70.0	8.29	62.2	7.52	57.0	7.01	44.1	5.74

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

32HP (Heating) U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	68.2	23.16	66.5	22.76	62.2	18.37	60.0	17.99	53.3	16.69	48.9	15.65	37.8	12.91
		-19.8	-20.0	68.9	18.24	66.7	17.95	62.2	17.32	60.0	16.99	53.3	15.87	48.9	15.05	37.8	12.45
		-14.7	-15.0	68.9	16.83	66.7	16.60	62.2	16.10	60.0	15.82	53.3	14.86	48.9	14.13	37.8	11.98
		-9.6	-10.0	68.9	15.32	66.7	15.13	62.2	14.71	60.0	14.47	53.3	13.65	48.9	13.00	37.8	11.08
		-4.4	-5.0	68.9	13.54	66.7	13.40	62.2	13.07	60.0	12.87	53.3	12.20	48.9	11.66	37.8	10.02
		-1.8	-2.5	68.9	12.56	66.7	12.44	62.2	12.16	60.0	11.99	53.3	11.40	48.9	10.92	37.8	9.43
		0.8	0.0	68.9	11.53	66.7	11.44	62.2	11.21	60.0	11.07	53.3	10.57	48.9	10.15	37.8	8.82
		2.8	2.0	68.9	10.51	66.7	10.45	62.2	10.28	60.0	10.17	53.3	9.75	48.9	9.39	37.8	8.21
		6.0	5.0	68.9	9.06	66.7	9.03	62.2	8.92	60.0	8.85	53.3	8.52	48.9	8.23	37.8	7.23
		7.0	6.0	68.9	8.58	66.7	8.54	62.2	8.43	60.0	8.36	53.3	8.08	48.9	7.83	37.8	6.96
		8.6	7.5	68.9	8.18	66.7	7.96	62.2	7.70	60.0	7.65	53.3	7.44	48.9	7.24	37.8	6.52
		11.2	10.0	68.9	8.18	66.7	7.96	62.2	7.52	60.0	7.31	53.3	6.65	48.9	6.34	37.8	5.81
		16.4	15.0	68.9	8.18	66.7	7.96	62.2	7.52	60.0	7.31	53.3	6.65	48.9	6.22	37.8	5.13
24.0	18.0	68.9	8.18	66.7	7.96	62.2	7.52	60.0	7.31	53.3	6.65	48.9	6.22	37.8	5.13		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	57.4	14.92	55.6	14.75	51.9	14.36	50.0	14.14	44.4	13.38	40.7	12.77	31.5	10.72
		-19.8	-20.0	57.4	14.14	55.6	13.99	51.9	13.65	50.0	13.45	44.4	12.74	40.7	12.19	31.5	10.44
		-14.7	-15.0	57.4	13.13	55.6	13.01	51.9	12.71	50.0	12.54	44.4	11.92	40.7	11.42	31.5	9.87
		-9.6	-10.0	57.4	11.88	55.6	11.80	51.9	11.57	50.0	11.43	44.4	10.91	40.7	10.49	31.5	9.12
		-4.4	-5.0	57.4	10.43	55.6	10.38	51.9	10.22	50.0	10.11	44.4	9.72	40.7	9.37	31.5	8.24
		-1.8	-2.5	57.4	9.63	55.6	9.59	51.9	9.48	50.0	9.40	44.4	9.07	40.7	8.77	31.5	7.75
		0.8	0.0	57.4	8.79	55.6	8.78	51.9	8.71	50.0	8.65	44.4	8.39	40.7	8.14	31.5	7.25
		2.8	2.0	57.4	7.97	55.6	7.98	51.9	7.95	50.0	7.91	44.4	7.72	40.7	7.52	31.5	6.73
		6.0	5.0	57.4	7.05	55.6	6.87	51.9	6.76	50.0	6.75	44.4	6.64	40.7	6.51	31.5	5.90
		7.0	6.0	57.4	7.05	55.6	6.87	51.9	6.51	50.0	6.37	44.4	6.30	40.7	6.19	31.5	5.70
		8.6	7.5	57.4	7.05	55.6	6.87	51.9	6.51	50.0	6.32	44.4	5.81	40.7	5.74	31.5	5.34
		11.2	10.0	57.4	7.05	55.6	6.87	51.9	6.51	50.0	6.32	44.4	5.78	40.7	5.42	31.5	4.78
		16.4	15.0	57.4	7.05	55.6	6.87	51.9	6.51	50.0	6.32	44.4	5.78	40.7	5.42	31.5	4.51
24.0	18.0	57.4	7.05	55.6	6.87	51.9	6.51	50.0	6.32	44.4	5.78	40.7	5.42	31.5	4.51		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	45.9	11.48	44.4	11.39	41.5	11.16	40.0	11.03	35.6	10.52	32.6	10.11	25.2	8.72
		-19.8	-20.0	45.9	10.86	44.4	10.79	41.5	10.59	40.0	10.47	35.6	10.03	32.6	9.65	25.2	8.43
		-14.7	-15.0	45.9	10.06	44.4	10.00	41.5	9.85	40.0	9.75	35.6	9.37	32.6	9.04	25.2	7.95
		-9.6	-10.0	45.9	9.08	44.4	9.05	41.5	8.94	40.0	8.87	35.6	8.57	32.6	8.29	25.2	7.35
		-4.4	-5.0	45.9	7.93	44.4	7.93	41.5	7.88	40.0	7.83	35.6	7.62	32.6	7.41	25.2	6.64
		-1.8	-2.5	45.9	7.30	44.4	7.31	41.5	7.30	40.0	7.27	35.6	7.11	32.6	6.93	25.2	6.26
		0.8	0.0	45.9	6.65	44.4	6.68	41.5	6.69	40.0	6.68	35.6	6.56	32.6	6.41	25.2	5.83
		2.8	2.0	45.9	5.95	44.4	5.98	41.5	6.01	40.0	6.02	35.6	5.96	32.6	5.86	25.2	5.40
		6.0	5.0	45.9	5.92	44.4	5.78	41.5	5.49	40.0	5.34	35.6	5.13	32.6	5.09	25.2	4.77
		7.0	6.0	45.9	5.92	44.4	5.78	41.5	5.49	40.0	5.34	35.6	4.91	32.6	4.85	25.2	4.61
		8.6	7.5	45.9	5.92	44.4	5.78	41.5	5.49	40.0	5.34	35.6	4.91	32.6	4.62	25.2	4.33
		11.2	10.0	45.9	5.92	44.4	5.78	41.5	5.49	40.0	5.34	35.6	4.91	32.6	4.62	25.2	3.90
		16.4	15.0	45.9	5.92	44.4	5.78	41.5	5.49	40.0	5.34	35.6	4.91	32.6	4.62	25.2	3.89
24.0	18.0	45.9	5.92	44.4	5.78	41.5	5.49	40.0	5.34	35.6	4.91	32.6	4.62	25.2	3.89		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	34.4	8.52	33.3	8.47	31.1	8.36	30.0	8.28	26.7	7.97	24.4	7.70	18.9	6.80
		-19.8	-20.0	34.4	8.06	33.3	8.03	31.1	7.93	30.0	7.87	26.7	7.60	24.4	7.36	18.9	6.54
		-14.7	-15.0	34.4	7.46	33.3	7.44	31.1	7.38	30.0	7.33	26.7	7.11	24.4	6.90	18.9	6.17
		-9.6	-10.0	34.4	6.74	33.3	6.73	31.1	6.70	30.0	6.67	26.7	6.51	24.4	6.34	18.9	5.73
		-4.4	-5.0	34.4	5.85	33.3	5.87	31.1	5.87	30.0	5.86	26.7	5.77	24.4	5.65	18.9	5.17
		-1.8	-2.5	34.4	5.33	33.3	5.36	31.1	5.39	30.0	5.40	26.7	5.35	24.4	5.26	18.9	4.86
		0.8	0.0	34.4	4.81	33.3	4.84	31.1	4.90	30.0	4.92	26.7	4.91	24.4	4.86	18.9	4.55
		2.8	2.0	34.4	4.80	33.3	4.69	31.1	4.47	30.0	4.45	26.7	4.49	24.4	4.47	18.9	4.23
		6.0	5.0	34.4	4.80	33.3	4.69	31.1	4.47	30.0	4.36	26.7	4.04	24.4	3.92	18.9	3.80
		7.0	6.0	34.4	4.80	33.3	4.69	31.1	4.47	30.0	4.36	26.7	4.04	24.4	3.82	18.9	3.66
		8.6	7.5	34.4	4.80	33.3	4.69	31.1	4.47	30.0	4.36	26.7	4.04	24.4	3.82	18.9	3.46
		11.2	10.0	34.4	4.80	33.3	4.69	31.1	4.47	30.0	4.36	26.7	4.04	24.4	3.82	18.9	3.27
		16.4	15.0	34.4	4.80	33.3	4.69	31.1	4.47	30.0	4.36	26.7	4.04	24.4	3.82	18.9	3.27
24.0	18.0	34.4	4.80	33.3	4.69	31.1	4.47	30.0	4.36	26.7	4.04	24.4	3.82	18.9	3.27		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-27. 34HP (Cooling) U-14ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	64.0	7.40	76.8	8.88	89.6	10.36	96.0	11.10	108.8	12.58	121.6	14.07	134.4	15.54
		-5.0	64.0	7.42	76.8	8.90	89.6	10.38	96.0	11.12	108.8	12.60	121.6	14.08	134.4	15.56
		0.0	64.0	7.43	76.8	8.92	89.6	10.40	96.0	11.14	108.8	12.62	121.6	14.11	134.4	15.60
		5.0	64.0	7.46	76.8	8.94	89.6	10.42	96.0	11.17	108.8	12.69	121.6	14.22	134.4	15.73
		10.0	64.0	7.48	76.8	8.99	89.6	10.54	96.0	11.33	108.8	12.92	121.6	14.54	134.4	16.09
		15.0	64.0	7.65	76.8	9.30	89.6	11.00	96.0	11.87	108.8	13.61	121.6	15.37	134.4	16.99
		20.0	64.0	8.67	76.8	10.63	89.6	12.83	96.0	14.01	108.8	16.56	121.6	19.35	134.4	22.39
		25.0	64.0	11.11	76.8	13.68	89.6	16.50	96.0	18.00	108.8	21.20	121.6	24.66	134.4	28.37
		30.0	64.0	13.88	76.8	17.07	89.6	20.52	96.0	22.35	108.8	26.22	121.6	30.36	134.4	34.78
		35.0	64.0	16.85	76.8	20.70	89.6	24.84	96.0	27.02	108.8	31.61	121.6	36.50	128.6	37.79
		40.0	64.0	20.05	76.8	24.61	89.6	29.50	96.0	32.06	108.8	37.43	113.9	37.79	118.8	37.79
		43.0	64.0	22.08	76.8	27.10	89.6	32.47	96.0	35.28	104.0	37.79	108.9	37.80	111.2	35.87
		46.0	63.4	23.99	76.0	29.46	80.8	29.96	81.6	29.17	83.8	27.84	86.6	26.79	89.9	25.96
52.0	27.6	10.38	30.1	10.49	33.0	10.68	34.6	10.80	38.1	11.08	42.0	11.39	46.2	11.72		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	57.6	5.97	69.1	7.49	80.6	8.97	86.4	9.70	97.9	11.14	109.4	12.54	121.0	13.91
		-5.0	57.6	5.98	69.1	7.50	80.6	8.99	86.4	9.72	97.9	11.15	109.4	12.55	121.0	13.92
		0.0	57.6	5.99	69.1	7.52	80.6	9.01	86.4	9.74	97.9	11.18	109.4	12.58	121.0	13.94
		5.0	57.6	6.02	69.1	7.55	80.6	9.04	86.4	9.77	97.9	11.20	109.4	12.61	121.0	14.00
		10.0	57.6	6.05	69.1	7.58	80.6	9.08	86.4	9.82	97.9	11.30	109.4	12.76	121.0	14.20
		15.0	57.6	6.12	69.1	7.73	80.6	9.32	86.4	10.11	97.9	11.68	109.4	13.21	121.0	14.72
		20.0	57.6	6.72	69.1	8.55	80.6	10.33	86.4	11.20	97.9	12.89	109.4	14.78	121.0	16.79
		25.0	57.6	9.04	69.1	11.13	80.6	13.30	86.4	14.41	97.9	16.68	109.4	19.02	121.0	21.42
		30.0	57.6	11.60	69.1	14.13	80.6	16.71	86.4	18.02	97.9	20.68	109.4	23.39	121.0	26.18
		35.0	57.6	14.79	69.1	17.86	80.6	20.96	86.4	22.53	97.9	25.71	109.4	28.97	121.0	32.36
		40.0	57.6	17.62	69.1	21.14	80.6	24.69	86.4	26.49	97.9	30.17	109.4	33.99	118.8	37.79
		43.0	57.6	19.37	69.1	23.17	80.6	27.02	86.4	28.98	97.9	33.01	108.9	37.80	111.2	35.87
		46.0	57.6	20.72	69.1	25.10	80.6	29.69	81.6	29.17	83.8	27.84	86.6	26.79	89.9	25.96
52.0	27.6	10.38	30.1	10.49	33.0	10.68	34.6	10.80	38.1	11.08	42.0	11.39	46.2	11.72		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	51.2	5.11	61.4	6.49	71.7	7.84	76.8	8.50	87.0	9.80	97.3	11.08	107.5	12.33
		-5.0	51.2	5.12	61.4	6.50	71.7	7.85	76.8	8.51	87.0	9.82	97.3	11.10	107.5	12.35
		0.0	51.2	5.13	61.4	6.52	71.7	7.87	76.8	8.53	87.0	9.84	97.3	11.12	107.5	12.37
		5.0	51.2	5.15	61.4	6.54	71.7	7.89	76.8	8.55	87.0	9.86	97.3	11.14	107.5	12.39
		10.0	51.2	5.18	61.4	6.57	71.7	7.92	76.8	8.58	87.0	9.89	97.3	11.19	107.5	12.46
		15.0	51.2	5.22	61.4	6.62	71.7	8.00	76.8	8.69	87.0	10.05	97.3	11.39	107.5	12.71
		20.0	51.2	5.48	61.4	7.00	71.7	8.50	76.8	9.23	87.0	10.67	97.3	12.07	107.5	13.43
		25.0	51.2	7.37	61.4	8.95	71.7	10.56	76.8	11.38	87.0	13.02	97.3	14.70	107.5	16.39
		30.0	51.2	9.61	61.4	11.57	71.7	13.55	76.8	14.55	87.0	16.53	97.3	18.53	107.5	20.53
		35.0	51.2	12.41	61.4	14.85	71.7	17.27	76.8	18.48	87.0	20.89	97.3	23.29	107.5	25.71
		40.0	51.2	14.92	61.4	17.75	71.7	20.54	76.8	21.93	87.0	24.71	97.3	27.49	107.5	30.31
		43.0	51.2	16.47	61.4	19.54	71.7	22.57	76.8	24.08	87.0	27.10	97.3	30.16	107.5	33.28
		46.0	51.2	17.56	61.4	20.96	71.7	24.46	76.8	26.24	83.8	27.84	86.6	26.79	89.9	25.96
52.0	27.6	10.38	30.1	10.49	33.0	10.68	34.6	10.80	38.1	11.08	42.0	11.39	46.2	11.72		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	44.8	4.24	53.8	5.47	62.7	6.67	67.2	7.27	76.2	8.44	85.1	9.58	94.1	10.71
		-5.0	44.8	4.25	53.8	5.48	62.7	6.68	67.2	7.28	76.2	8.45	85.1	9.60	94.1	10.72
		0.0	44.8	4.26	53.8	5.49	62.7	6.70	67.2	7.29	76.2	8.46	85.1	9.61	94.1	10.74
		5.0	44.8	4.27	53.8	5.51	62.7	6.72	67.2	7.31	76.2	8.48	85.1	9.63	94.1	10.76
		10.0	44.8	4.30	53.8	5.53	62.7	6.74	67.2	7.34	76.2	8.51	85.1	9.66	94.1	10.78
		15.0	44.8	4.34	53.8	5.57	62.7	6.78	67.2	7.37	76.2	8.55	85.1	9.72	94.1	10.86
		20.0	44.8	4.42	53.8	5.70	62.7	6.96	67.2	7.59	76.2	8.81	85.1	10.01	94.1	11.19
		25.0	44.8	5.51	53.8	6.84	62.7	8.12	67.2	8.74	76.2	9.94	85.1	11.11	94.1	12.25
		30.0	44.8	7.79	53.8	9.26	62.7	10.72	67.2	11.43	76.2	12.85	85.1	14.24	94.1	15.61
		35.0	44.8	10.21	53.8	12.09	62.7	13.92	67.2	14.82	76.2	16.58	85.1	18.31	94.1	20.00
		40.0	44.8	12.40	53.8	14.62	62.7	16.76	67.2	17.81	76.2	19.87	85.1	21.88	94.1	23.86
		43.0	44.8	13.75	53.8	16.18	62.7	18.52	67.2	19.66	76.2	21.91	85.1	24.11	94.1	26.28
		46.0	44.8	14.69	53.8	17.28	62.7	19.87	67.2	21.17	76.2	23.77	85.1	25.44	89.9	25.96
52.0	27.6	10.38	30.1	10.49	33.0	10.68	34.6	10.80	38.1	11.08	42.0	11.39	46.2	11.72		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

34HP (Cooling) U-14ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	38.4	3.35	46.1	4.43	53.8	5.48	57.6	6.00	65.3	7.03	73.0	8.04	80.6	9.03
		-5.0	38.4	3.36	46.1	4.43	53.8	5.49	57.6	6.01	65.3	7.04	73.0	8.05	80.6	9.04
		0.0	38.4	3.37	46.1	4.44	53.8	5.50	57.6	6.02	65.3	7.05	73.0	8.06	80.6	9.05
		5.0	38.4	3.38	46.1	4.46	53.8	5.52	57.6	6.04	65.3	7.06	73.0	8.07	80.6	9.06
		10.0	38.4	3.40	46.1	4.48	53.8	5.54	57.6	6.06	65.3	7.09	73.0	8.10	80.6	9.09
		15.0	38.4	3.43	46.1	4.51	53.8	5.57	57.6	6.09	65.3	7.12	73.0	8.13	80.6	9.11
		20.0	38.4	3.48	46.1	4.55	53.8	5.62	57.6	6.14	65.3	7.18	73.0	8.21	80.6	9.21
		25.0	38.4	3.87	46.1	4.98	53.8	6.06	57.6	6.59	65.3	7.63	73.0	8.65	80.6	9.64
		30.0	38.4	6.15	46.1	7.21	53.8	8.21	57.6	8.70	65.3	9.64	73.0	10.54	80.6	11.39
		35.0	38.4	8.19	46.1	9.58	53.8	10.89	57.6	11.53	65.3	12.75	73.0	13.91	80.6	15.02
		40.0	38.4	10.06	46.1	11.74	53.8	13.33	57.6	14.09	65.3	15.56	73.0	16.96	80.6	18.29
		43.0	38.4	11.22	46.1	13.07	53.8	14.82	57.6	15.66	65.3	17.28	73.0	18.83	80.6	20.30
46.0	38.4	12.12	46.1	14.02	53.8	15.87	57.6	16.78	65.3	18.57	73.0	20.31	80.6	22.02		
52.0	27.6	10.38	30.1	10.49	33.0	10.68	34.6	10.80	38.1	11.08	42.0	11.39	46.2	11.72		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	32.0	2.45	38.4	3.36	44.8	4.26	48.0	4.70	54.4	5.58	60.8	6.44	67.2	7.28
		-5.0	32.0	2.46	38.4	3.37	44.8	4.27	48.0	4.71	54.4	5.59	60.8	6.45	67.2	7.29
		0.0	32.0	2.47	38.4	3.38	44.8	4.28	48.0	4.72	54.4	5.59	60.8	6.46	67.2	7.30
		5.0	32.0	2.48	38.4	3.39	44.8	4.29	48.0	4.73	54.4	5.61	60.8	6.47	67.2	7.31
		10.0	32.0	2.49	38.4	3.40	44.8	4.30	48.0	4.75	54.4	5.62	60.8	6.49	67.2	7.33
		15.0	32.0	2.51	38.4	3.43	44.8	4.33	48.0	4.77	54.4	5.65	60.8	6.51	67.2	7.36
		20.0	32.0	2.55	38.4	3.47	44.8	4.37	48.0	4.81	54.4	5.68	60.8	6.54	67.2	7.39
		25.0	32.0	2.65	38.4	3.57	44.8	4.47	48.0	4.91	54.4	5.79	60.8	6.65	67.2	7.49
		30.0	32.0	4.70	38.4	5.35	44.8	5.75	48.0	6.03	54.4	6.68	60.8	7.38	67.2	8.12
		35.0	32.0	6.36	38.4	7.32	44.8	8.21	48.0	8.62	54.4	9.40	60.8	10.10	67.2	10.75
		40.0	32.0	7.91	38.4	9.12	44.8	10.23	48.0	10.75	54.4	11.73	60.8	12.62	67.2	13.45
		43.0	32.0	8.87	38.4	10.23	44.8	11.47	48.0	12.06	54.4	13.16	60.8	14.17	67.2	15.11
46.0	32.0	9.82	38.4	11.16	44.8	12.43	48.0	13.03	54.4	14.19	60.8	15.29	67.2	16.31		
52.0	27.6	10.38	30.1	10.49	33.0	10.68	34.6	10.80	38.1	11.08	42.0	11.39	46.2	11.72		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	25.6	1.54	30.7	2.28	35.8	3.01	38.4	3.37	43.5	4.09	48.6	4.79	53.8	5.49
		-5.0	25.6	1.54	30.7	2.28	35.8	3.01	38.4	3.38	43.5	4.09	48.6	4.80	53.8	5.50
		0.0	25.6	1.55	30.7	2.29	35.8	3.02	38.4	3.38	43.5	4.10	48.6	4.81	53.8	5.51
		5.0	25.6	1.55	30.7	2.30	35.8	3.03	38.4	3.39	43.5	4.11	48.6	4.82	53.8	5.52
		10.0	25.6	1.56	30.7	2.31	35.8	3.04	38.4	3.40	43.5	4.12	48.6	4.83	53.8	5.54
		15.0	25.6	1.58	30.7	2.33	35.8	3.06	38.4	3.42	43.5	4.14	48.6	4.85	53.8	5.56
		20.0	25.6	1.61	30.7	2.35	35.8	3.09	38.4	3.45	43.5	4.16	48.6	4.88	53.8	5.59
		25.0	25.6	1.67	30.7	2.41	35.8	3.14	38.4	3.50	43.5	4.21	48.6	4.92	53.8	5.63
		30.0	25.6	2.38	30.7	2.83	35.8	3.42	38.4	3.74	43.5	4.39	48.6	5.13	53.8	5.94
		35.0	25.6	4.71	30.7	5.34	35.8	5.88	38.4	6.12	43.5	6.56	48.6	7.09	53.8	7.78
		40.0	25.6	5.95	30.7	6.76	35.8	7.47	38.4	7.80	43.5	8.38	48.6	8.88	53.8	9.31
		43.0	25.6	6.71	30.7	7.64	35.8	8.47	38.4	8.84	43.5	9.52	48.6	10.11	53.8	10.63
46.0	25.6	7.77	30.7	8.67	35.8	9.48	38.4	9.85	43.5	10.55	48.6	11.17	53.8	11.72		
52.0	25.6	9.21	30.1	10.49	33.0	10.68	34.6	10.80	38.1	11.08	42.0	11.39	46.2	11.72		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	19.2	0.60	23.0	1.17	26.9	1.73	28.8	2.01	32.6	2.57	36.5	3.12	40.3	3.66
		-5.0	19.2	0.61	23.0	1.17	26.9	1.74	28.8	2.02	32.6	2.58	36.5	3.13	40.3	3.67
		0.0	19.2	0.61	23.0	1.18	26.9	1.74	28.8	2.03	32.6	2.59	36.5	3.14	40.3	3.68
		5.0	19.2	0.62	23.0	1.18	26.9	1.75	28.8	2.04	32.6	2.60	36.5	3.15	40.3	3.70
		10.0	19.2	0.62	23.0	1.19	26.9	1.76	28.8	2.05	32.6	2.61	36.5	3.17	40.3	3.71
		15.0	19.2	0.63	23.0	1.20	26.9	1.77	28.8	2.06	32.6	2.63	36.5	3.19	40.3	3.74
		20.0	19.2	0.65	23.0	1.22	26.9	1.80	28.8	2.09	32.6	2.66	36.5	3.22	40.3	3.76
		25.0	19.2	0.69	23.0	1.26	26.9	1.83	28.8	2.13	32.6	2.70	36.5	3.28	40.3	3.86
		30.0	19.2	0.80	23.0	1.33	26.9	1.91	28.8	2.25	32.6	2.94	36.5	3.62	40.3	4.27
		35.0	19.2	3.26	23.0	3.62	26.9	4.04	28.8	4.32	32.6	4.87	36.5	5.40	40.3	5.93
		40.0	19.2	4.18	23.0	4.67	26.9	5.07	28.8	5.25	32.6	5.54	36.5	5.76	40.3	5.93
		43.0	19.2	4.75	23.0	5.33	26.9	5.81	28.8	6.02	32.6	6.37	36.5	6.66	40.3	6.87
46.0	19.2	5.96	23.0	6.51	26.9	6.98	28.8	7.19	32.6	7.55	36.5	7.84	40.3	8.08		
52.0	19.2	7.00	23.0	7.71	26.9	8.34	28.8	8.62	32.6	8.89	36.5	9.04	40.3	9.10		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-28. 34HP (Heating) U-14ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	78.7	29.04	76.7	28.52	72.6	27.39	70.5	26.81	64.0	24.90	59.6	23.53	47.8	19.68
		-19.8	-20.0	82.7	29.72	80.6	29.16	76.3	28.00	74.1	27.38	67.3	25.41	62.7	23.98	50.4	20.01
		-14.7	-15.0	88.3	30.73	86.1	30.14	81.5	28.91	79.2	28.25	72.0	26.17	67.1	24.67	54.0	20.51
		-9.6	-10.0	95.9	32.16	93.5	31.51	88.6	30.17	86.1	29.47	78.3	27.22	72.9	25.61	58.7	21.17
		-4.4	-5.0	105.7	34.10	103.1	33.41	97.6	31.93	94.9	31.15	86.3	28.66	80.4	26.87	64.6	22.04
		-1.8	-2.5	111.5	34.89	108.7	34.17	103.0	32.65	100.1	31.86	91.0	29.31	84.7	27.50	68.0	22.46
		0.8	0.0	118.0	35.57	115.0	34.81	109.0	33.24	105.9	32.42	96.0	29.62	88.0	27.11	68.0	21.02
		2.8	2.0	124.0	35.75	120.0	34.52	112.0	32.09	108.0	30.89	96.0	27.37	88.0	25.09	68.0	19.53
		6.0	5.0	124.0	31.28	120.0	30.23	112.0	28.17	108.0	27.15	96.0	24.14	88.0	22.14	68.0	17.36
		7.0	6.0	124.0	29.83	120.0	28.85	112.0	26.90	108.0	25.90	96.0	23.06	88.0	21.20	68.0	16.67
		8.6	7.5	124.0	27.67	120.0	26.77	112.0	24.99	108.0	24.12	96.0	21.53	88.0	19.83	68.0	15.68
		11.2	10.0	124.0	24.32	120.0	23.57	112.0	22.08	108.0	21.34	96.0	19.15	88.0	17.71	68.0	14.13
		16.4	15.0	124.0	18.44	120.0	17.93	112.0	16.91	108.0	16.40	96.0	14.85	88.0	13.80	68.0	11.14
		24.0	18.0	124.0	15.12	120.0	14.70	112.0	13.86	108.0	13.43	96.0	12.13	88.0	11.25	68.0	9.05

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	90%	-24.9	-25.0	78.7	29.04	76.7	28.52	72.6	27.39	70.5	26.81	64.0	24.90	59.6	23.53	47.8	19.68
		-19.8	-20.0	82.7	29.72	80.6	29.16	76.3	28.00	74.1	27.38	67.3	25.41	62.7	23.98	50.4	20.01
		-14.7	-15.0	88.3	30.73	86.1	30.14	81.5	28.91	79.2	28.25	72.0	26.17	67.1	24.67	54.0	20.51
		-9.6	-10.0	95.9	32.16	93.5	31.51	88.6	30.17	86.1	29.47	78.3	27.22	72.9	25.61	58.7	21.17
		-4.4	-5.0	105.7	34.10	103.1	33.41	97.6	31.93	94.9	31.15	86.3	28.66	79.2	25.25	61.2	20.04
		-1.8	-2.5	111.5	34.89	108.0	31.23	100.8	29.34	97.2	28.39	86.4	25.54	79.2	23.63	61.2	18.83
		0.8	0.0	111.6	29.65	108.0	28.80	100.8	27.10	97.2	26.25	86.4	23.67	79.2	21.94	61.2	17.57
		2.8	2.0	111.6	27.12	108.0	26.37	100.8	24.86	97.2	24.10	86.4	21.80	79.2	20.26	61.2	16.42
		6.0	5.0	111.6	23.69	108.0	23.13	100.8	21.98	97.2	21.38	86.4	19.52	79.2	18.18	61.2	14.68
		7.0	6.0	111.6	23.08	108.0	22.46	100.8	21.20	97.2	20.57	86.4	18.67	79.2	17.38	61.2	14.09
		8.6	7.5	111.6	21.31	108.0	20.76	100.8	19.64	97.2	19.08	86.4	17.38	79.2	16.22	61.2	13.24
		11.2	10.0	111.6	18.53	108.0	18.10	100.8	17.21	97.2	16.76	86.4	15.37	79.2	14.41	61.2	11.90
		16.4	15.0	111.6	13.69	108.0	13.43	100.8	12.88	97.2	12.60	86.4	11.69	79.2	11.05	61.2	9.28
		24.0	18.0	111.6	13.62	108.0	13.25	100.8	12.49	97.2	12.11	86.4	10.98	79.2	10.23	61.2	8.34

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	80%	-24.9	-25.0	78.7	29.04	76.7	28.52	72.6	27.39	70.5	26.81	64.0	24.90	59.6	23.53	47.8	19.68
		-19.8	-20.0	82.7	29.72	80.6	29.16	76.3	28.00	74.1	27.38	67.3	25.41	62.7	23.98	50.4	20.01
		-14.7	-15.0	88.3	30.73	86.1	30.14	81.5	28.91	79.2	28.25	72.0	26.17	67.1	24.67	54.0	20.51
		-9.6	-10.0	95.9	32.16	93.5	31.51	88.6	30.17	86.1	29.47	78.3	27.22	72.9	25.61	54.4	18.54
		-4.4	-5.0	99.2	26.41	96.0	25.79	89.6	24.52	86.4	23.86	76.8	21.84	70.4	20.43	54.4	16.72
		-1.8	-2.5	99.2	24.44	96.0	23.89	89.6	22.76	86.4	22.18	76.8	20.36	70.4	19.09	54.4	15.78
		0.8	0.0	99.2	22.34	96.0	21.91	89.6	20.99	86.4	20.51	76.8	18.96	70.4	17.86	54.4	14.81
		2.8	2.0	99.2	20.65	96.0	20.27	89.6	19.46	86.4	19.03	76.8	17.64	70.4	16.63	54.4	13.85
		6.0	5.0	99.2	18.27	96.0	17.95	89.6	17.27	86.4	16.91	76.8	15.71	70.4	14.82	54.4	12.35
		7.0	6.0	99.2	17.63	96.0	17.28	89.6	16.56	86.4	16.18	76.8	14.99	70.4	14.15	54.4	11.86
		8.6	7.5	99.2	16.17	96.0	15.88	89.6	15.27	86.4	14.94	76.8	13.92	70.4	13.18	54.4	11.13
		11.2	10.0	99.2	13.90	96.0	13.70	89.6	13.25	86.4	13.01	76.8	12.23	70.4	11.65	54.4	9.98
		16.4	15.0	99.2	12.32	96.0	11.99	89.6	11.32	86.4	10.98	76.8	9.98	70.4	9.30	54.4	7.71
		24.0	18.0	99.2	12.32	96.0	11.99	89.6	11.32	86.4	10.98	76.8	9.98	70.4	9.30	54.4	7.63

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	70%	-24.9	-25.0	78.7	29.04	76.7	28.52	72.6	27.39	70.5	26.81	64.0	24.90	59.6	23.53	47.6	19.68
		-19.8	-20.0	82.7	29.72	80.6	29.16	76.3	28.00	74.1	27.38	67.2	22.84	61.6	21.31	47.6	17.42
		-14.7	-15.0	86.8	25.44	84.0	24.93	78.4	23.87	75.6	23.32	67.2	21.55	61.6	20.28	47.6	16.68
		-9.6	-10.0	86.8	22.91	84.0	22.49	78.4	21.59	75.6	21.12	67.2	19.60	61.6	18.54	47.6	15.55
		-4.4	-5.0	86.8	20.19	84.0	19.88	78.4	19.21	75.6	18.84	67.2	17.62	61.6	16.71	47.6	14.09
		-1.8	-2.5	86.8	18.83	84.0	18.55	78.4	17.95	75.6	17.62	67.2	16.52	61.6	15.69	47.6	13.29
		0.8	0.0	86.8	17.39	84.0	17.16	78.4	16.64	75.6	16.35	67.2	15.37	61.6	14.63	47.6	12.46
		2.8	2.0	86.8	15.98	84.0	15.79	78.4	15.34	75.6	15.09	67.2	14.24	61.6	13.58	47.6	11.63
		6.0	5.0	86.8	13.96	84.0	13.81	78.4	13.47	75.6	13.27	67.2	12.56	61.6	12.00	47.6	10.28
		7.0	6.0	86.8	13.28	84.0	13.13	78.4	12.79	75.6	12.60	67.2	11.95	61.6	11.44	47.6	9.92
		8.6	7.5	86.8	12.11	84.0	12.00	78.4	11.74	75.6	11.59	67.2	11.06	61.6	10.63	47.6	9.31
		11.2	10.0	86.8	11.02	84.0	10.73	78.4	10.14	75.6	10.05	67.2	9.68	61.6	9.37	47.6	8.34
		16.4	15.0	86.8	11.02	84.0	10.73	78.4	10.14	75.6	9.85	67.2	8.97	61.6	8.38	47.6	6.91
		24.0	18.0	86.8	11.02	84.0	10.73	78.4	10.14	75.6	9.85	67.2	8.97	61.6	8.38	47.6	6.91

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

34HP (Heating) U-14ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
	°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	74.4	22.37	72.0	22.01	67.2	21.25	64.8	20.83	57.6	19.42	52.8	18.28	40.8	15.14
		-19.8	-20.0	74.4	21.07	72.0	20.74	67.2	20.10	64.8	19.74	57.6	18.53	52.8	17.60	40.8	14.66
		-14.7	-15.0	74.4	19.62	72.0	19.37	67.2	18.79	64.8	18.46	57.6	17.37	52.8	16.54	40.8	14.08
		-9.6	-10.0	74.4	17.86	72.0	17.65	67.2	17.17	64.8	16.90	57.6	15.96	52.8	15.22	40.8	13.03
		-4.4	-5.0	74.4	15.80	72.0	15.64	67.2	15.26	64.8	15.04	57.6	14.28	52.8	13.67	40.8	11.80
		-1.8	-2.5	74.4	14.66	72.0	14.53	67.2	14.21	64.8	14.02	57.6	13.35	52.8	12.81	40.8	11.12
		0.8	0.0	74.4	13.47	72.0	13.37	67.2	13.12	64.8	12.96	57.6	12.39	52.8	11.92	40.8	10.41
		2.8	2.0	74.4	12.29	72.0	12.23	67.2	12.04	64.8	11.92	57.6	11.45	52.8	11.04	40.8	9.70
		6.0	5.0	74.4	10.55	72.0	10.50	67.2	10.38	64.8	10.29	57.6	9.95	52.8	9.64	40.8	8.53
		7.0	6.0	74.4	9.92	72.0	9.89	67.2	9.80	64.8	9.74	57.6	9.45	52.8	9.19	40.8	8.25
		8.6	7.5	74.4	9.72	72.0	9.47	67.2	8.99	64.8	8.94	57.6	8.74	52.8	8.53	40.8	7.74
		11.2	10.0	74.4	9.72	72.0	9.47	67.2	8.97	64.8	8.72	57.6	7.96	52.8	7.52	40.8	6.94
		16.4	15.0	74.4	9.72	72.0	9.47	67.2	8.97	64.8	8.72	57.6	7.96	52.8	7.46	40.8	6.20
		24.0	18.0	74.4	9.72	72.0	9.47	67.2	8.97	64.8	8.72	57.6	7.96	52.8	7.46	40.8	6.20

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
	°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	62.0	17.46	60.0	17.27	56.0	16.83	54.0	16.58	48.0	15.70	44.0	15.00	34.0	12.64
		-19.8	-20.0	62.0	16.57	60.0	16.40	56.0	16.00	54.0	15.77	48.0	14.96	44.0	14.33	34.0	12.32
		-14.7	-15.0	62.0	15.39	60.0	15.25	56.0	14.92	54.0	14.72	48.0	14.01	44.0	13.44	34.0	11.66
		-9.6	-10.0	62.0	13.95	60.0	13.85	56.0	13.59	54.0	13.43	48.0	12.84	44.0	12.35	34.0	10.78
		-4.4	-5.0	62.0	12.26	60.0	12.20	56.0	12.02	54.0	11.91	48.0	11.46	44.0	11.06	34.0	9.76
		-1.8	-2.5	62.0	11.34	60.0	11.30	56.0	11.17	54.0	11.08	48.0	10.70	44.0	10.36	34.0	9.20
		0.8	0.0	62.0	10.37	60.0	10.35	56.0	10.28	54.0	10.21	48.0	9.92	44.0	9.63	34.0	8.61
		2.8	2.0	62.0	9.41	60.0	9.41	56.0	9.36	54.0	9.31	48.0	9.08	44.0	8.84	34.0	7.98
		6.0	5.0	62.0	8.42	60.0	8.21	56.0	7.92	54.0	7.92	48.0	7.82	44.0	7.69	34.0	7.04
		7.0	6.0	62.0	8.42	60.0	8.21	56.0	7.79	54.0	7.58	48.0	7.44	44.0	7.33	34.0	6.81
		8.6	7.5	62.0	8.42	60.0	8.21	56.0	7.79	54.0	7.58	48.0	6.95	44.0	6.82	34.0	6.40
		11.2	10.0	62.0	8.42	60.0	8.21	56.0	7.79	54.0	7.58	48.0	6.95	44.0	6.54	34.0	5.76
		16.4	15.0	62.0	8.42	60.0	8.21	56.0	7.79	54.0	7.58	48.0	6.95	44.0	6.54	34.0	5.49
		24.0	18.0	62.0	8.42	60.0	8.21	56.0	7.79	54.0	7.58	48.0	6.95	44.0	6.54	34.0	5.49

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
	°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	49.6	13.50	48.0	13.40	44.8	13.14	43.2	12.99	38.4	12.41	35.2	11.94	27.2	10.35
		-19.8	-20.0	49.6	12.79	48.0	12.70	44.8	12.49	43.2	12.35	38.4	11.83	35.2	11.40	27.2	10.00
		-14.7	-15.0	49.6	11.86	48.0	11.80	44.8	11.63	43.2	11.52	38.4	11.08	35.2	10.70	27.2	9.44
		-9.6	-10.0	49.6	10.73	48.0	10.69	44.8	10.57	43.2	10.49	38.4	10.14	35.2	9.83	27.2	8.75
		-4.4	-5.0	49.6	9.40	48.0	9.39	44.8	9.34	43.2	9.29	38.4	9.05	35.2	8.81	27.2	7.93
		-1.8	-2.5	49.6	8.67	48.0	8.68	44.8	8.65	43.2	8.61	38.4	8.42	35.2	8.22	27.2	7.45
		0.8	0.0	49.6	7.81	48.0	7.84	44.8	7.86	43.2	7.85	38.4	7.73	35.2	7.59	27.2	6.96
		2.8	2.0	49.6	7.12	48.0	7.03	44.8	7.08	43.2	7.10	38.4	7.06	35.2	6.96	27.2	6.47
		6.0	5.0	49.6	7.12	48.0	6.95	44.8	6.62	43.2	6.45	38.4	6.12	35.2	6.09	27.2	5.77
		7.0	6.0	49.6	7.12	48.0	6.95	44.8	6.62	43.2	6.45	38.4	5.95	35.2	5.82	27.2	5.56
		8.6	7.5	49.6	7.12	48.0	6.95	44.8	6.62	43.2	6.45	38.4	5.95	35.2	5.61	27.2	5.25
		11.2	10.0	49.6	7.12	48.0	6.95	44.8	6.62	43.2	6.45	38.4	5.95	35.2	5.61	27.2	4.77
		16.4	15.0	49.6	7.12	48.0	6.95	44.8	6.62	43.2	6.45	38.4	5.95	35.2	5.61	27.2	4.77
		24.0	18.0	49.6	7.12	48.0	6.95	44.8	6.62	43.2	6.45	38.4	5.95	35.2	5.61	27.2	4.77

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
	°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	37.2	10.08	36.0	10.03	33.6	9.90	32.4	9.81	28.8	9.46	26.4	9.15	20.4	8.12
		-19.8	-20.0	37.2	9.54	36.0	9.51	33.6	9.40	32.4	9.33	28.8	9.03	26.4	8.75	20.4	7.82
		-14.7	-15.0	37.2	8.86	36.0	8.84	33.6	8.76	32.4	8.71	28.8	8.46	26.4	8.23	20.4	7.39
		-9.6	-10.0	37.2	7.99	36.0	7.99	33.6	7.95	32.4	7.91	28.8	7.73	26.4	7.54	20.4	6.85
		-4.4	-5.0	37.2	6.90	36.0	6.93	33.6	6.95	32.4	6.95	28.8	6.86	26.4	6.73	20.4	6.21
		-1.8	-2.5	37.2	6.31	36.0	6.36	33.6	6.41	32.4	6.42	28.8	6.38	26.4	6.29	20.4	5.86
		0.8	0.0	37.2	5.82	36.0	5.77	33.6	5.85	32.4	5.87	28.8	5.88	26.4	5.84	20.4	5.49
		2.8	2.0	37.2	5.82	36.0	5.70	33.6	5.44	32.4	5.35	28.8	5.40	26.4	5.39	20.4	5.14
		6.0	5.0	37.2	5.82	36.0	5.70	33.6	5.44	32.4	5.32	28.8	4.94	26.4	4.77	20.4	4.64
		7.0	6.0	37.2	5.82	36.0	5.70	33.6	5.44	32.4	5.32	28.8	4.94	26.4	4.69	20.4	4.48
		8.6	7.5	37.2	5.82	36.0	5.70	33.6	5.44	32.4	5.32	28.8	4.94	26.4	4.69	20.4	4.26
		11.2	10.0	37.2	5.82	36.0	5.70	33.6	5.44	32.4	5.32	28.8	4.94	26.4	4.69	20.4	4.06
		16.4	15.0	37.2	5.82	36.0	5.70	33.6	5.44	32.4	5.32	28.8	4.94	26.4	4.69	20.4	4.06
		24.0	18.0	37.2	5.82	36.0	5.70	33.6	5.44	32.4	5.32	28.8	4.94	26.4	4.69	20.4	4.06

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-29. 36HP (Cooling) U-16ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	67.3	8.11	80.8	9.73	94.3	11.36	101.0	12.17	114.5	13.79	127.9	15.41	141.4	17.03
		-5.0	67.3	8.13	80.8	9.75	94.3	11.37	101.0	12.18	114.5	13.81	127.9	15.43	141.4	17.05
		0.0	67.3	8.14	80.8	9.77	94.3	11.39	101.0	12.21	114.5	13.83	127.9	15.46	141.4	17.09
		5.0	67.3	8.17	80.8	9.80	94.3	11.42	101.0	12.24	114.5	13.90	127.9	15.58	141.4	17.23
		10.0	67.3	8.20	80.8	9.85	94.3	11.54	101.0	12.40	114.5	14.14	127.9	15.90	141.4	17.60
		15.0	67.3	8.37	80.8	10.17	94.3	12.02	101.0	12.96	114.5	14.86	127.9	16.77	141.4	18.53
		20.0	67.3	9.43	80.8	11.56	94.3	13.96	101.0	15.26	114.5	18.05	127.9	21.11	141.4	24.45
		25.0	67.3	12.08	80.8	14.90	94.3	17.99	101.0	19.64	114.5	23.14	127.9	26.93	141.4	31.00
		30.0	67.3	15.11	80.8	18.61	94.3	22.40	101.0	24.40	114.5	28.64	127.9	33.18	141.4	38.03
		35.0	67.3	18.37	80.8	22.59	94.3	27.13	101.0	29.52	114.5	34.55	127.9	39.92	135.3	41.29
		40.0	67.3	21.88	80.8	26.88	94.3	32.24	101.0	35.05	114.5	40.94	119.8	41.29	125.0	41.30
		43.0	67.3	24.11	80.8	29.61	94.3	35.49	101.0	38.58	109.3	41.29	114.5	41.29	117.0	39.22
		46.0	66.7	26.20	80.0	32.20	85.0	32.75	85.9	31.88	88.2	30.42	91.1	29.27	94.6	28.36
52.0	29.1	11.28	31.6	11.40	34.7	11.61	36.4	11.74	40.1	12.05	44.2	12.39	48.6	12.75		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	60.6	6.54	72.7	8.21	84.8	9.84	90.9	10.64	103.0	12.21	115.1	13.74	127.3	15.24
		-5.0	60.6	6.55	72.7	8.23	84.8	9.85	90.9	10.65	103.0	12.22	115.1	13.76	127.3	15.26
		0.0	60.6	6.57	72.7	8.24	84.8	9.87	90.9	10.67	103.0	12.25	115.1	13.78	127.3	15.28
		5.0	60.6	6.59	72.7	8.27	84.8	9.90	90.9	10.70	103.0	12.27	115.1	13.82	127.3	15.34
		10.0	60.6	6.63	72.7	8.30	84.8	9.95	90.9	10.76	103.0	12.38	115.1	13.97	127.3	15.54
		15.0	60.6	6.70	72.7	8.46	84.8	10.20	90.9	11.06	103.0	12.77	115.1	14.44	127.3	16.08
		20.0	60.6	7.33	72.7	9.31	84.8	11.25	90.9	12.19	103.0	14.03	115.1	16.10	127.3	18.31
		25.0	60.6	9.81	72.7	12.10	84.8	14.48	90.9	15.70	103.0	18.19	115.1	20.75	127.3	23.38
		30.0	60.6	12.61	72.7	15.39	84.8	18.22	90.9	19.66	103.0	22.57	115.1	25.55	127.3	28.60
		35.0	60.6	16.11	72.7	19.48	84.8	22.88	90.9	24.60	103.0	28.09	115.1	31.66	127.3	35.37
		40.0	60.6	19.21	72.7	23.08	84.8	26.97	90.9	28.94	103.0	32.97	115.1	37.17	125.0	41.30
		43.0	60.6	21.13	72.7	25.30	84.8	29.52	90.9	31.67	103.0	36.09	114.5	41.29	117.0	39.22
		46.0	60.6	22.62	72.7	27.42	84.8	32.45	85.9	31.88	88.2	30.42	91.1	29.27	94.6	28.36
52.0	29.1	11.28	31.6	11.40	34.7	11.61	36.4	11.74	40.1	12.05	44.2	12.39	48.6	12.75		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	53.9	5.60	64.6	7.12	75.4	8.59	80.8	9.32	91.6	10.75	102.3	12.15	113.1	13.52
		-5.0	53.9	5.61	64.6	7.13	75.4	8.61	80.8	9.33	91.6	10.76	102.3	12.16	113.1	13.53
		0.0	53.9	5.63	64.6	7.14	75.4	8.62	80.8	9.35	91.6	10.78	102.3	12.18	113.1	13.55
		5.0	53.9	5.65	64.6	7.16	75.4	8.65	80.8	9.37	91.6	10.81	102.3	12.21	113.1	13.57
		10.0	53.9	5.68	64.6	7.20	75.4	8.68	80.8	9.40	91.6	11.15	102.3	12.25	113.1	13.65
		15.0	53.9	5.72	64.6	7.25	75.4	8.77	80.8	9.52	91.6	11.01	102.3	12.47	113.1	13.91
		20.0	53.9	5.99	64.6	7.65	75.4	9.28	80.8	10.08	91.6	11.65	102.3	13.17	113.1	14.66
		25.0	53.9	7.98	64.6	9.71	75.4	11.47	80.8	12.37	91.6	14.18	102.3	16.01	113.1	17.87
		30.0	53.9	10.43	64.6	12.59	75.4	14.76	80.8	15.85	91.6	18.03	102.3	20.22	113.1	22.41
		35.0	53.9	13.50	64.6	16.18	75.4	18.83	80.8	20.16	91.6	22.80	102.3	25.43	113.1	28.08
		40.0	53.9	16.25	64.6	19.36	75.4	22.42	80.8	23.94	91.6	26.98	102.3	30.04	113.1	33.13
		43.0	53.9	17.95	64.6	21.32	75.4	24.65	80.8	26.30	91.6	29.61	102.3	32.96	113.1	36.39
		46.0	53.9	19.15	64.6	22.88	75.4	26.71	80.8	28.67	88.2	30.42	91.1	29.27	94.6	28.36
52.0	29.1	11.28	31.6	11.40	34.7	11.61	36.4	11.74	40.1	12.05	44.2	12.39	48.6	12.75		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	47.1	4.65	56.6	6.00	66.0	7.32	70.7	7.97	80.1	9.25	89.6	10.50	99.0	11.74
		-5.0	47.1	4.66	56.6	6.01	66.0	7.33	70.7	7.98	80.1	9.26	89.6	10.52	99.0	11.75
		0.0	47.1	4.67	56.6	6.02	66.0	7.34	70.7	7.99	80.1	9.28	89.6	10.53	99.0	11.77
		5.0	47.1	4.69	56.6	6.04	66.0	7.36	70.7	8.01	80.1	9.30	89.6	10.56	99.0	11.79
		10.0	47.1	4.71	56.6	6.06	66.0	7.39	70.7	8.04	80.1	9.33	89.6	10.58	99.0	11.81
		15.0	47.1	4.75	56.6	6.10	66.0	7.42	70.7	8.08	80.1	9.37	89.6	10.65	99.0	11.90
		20.0	47.1	4.84	56.6	6.24	66.0	7.62	70.7	8.30	80.1	9.64	89.6	10.95	99.0	12.23
		25.0	47.1	5.98	56.6	7.43	66.0	8.82	70.7	9.50	80.1	10.82	89.6	12.10	99.0	13.35
		30.0	47.1	8.43	56.6	10.05	66.0	11.64	70.7	12.43	80.1	13.98	89.6	15.51	99.0	17.02
		35.0	47.1	11.09	56.6	13.15	66.0	15.15	70.7	16.14	80.1	18.07	89.6	19.97	99.0	21.82
		40.0	47.1	13.49	56.6	15.92	66.0	18.28	70.7	19.43	80.1	21.69	89.6	23.89	99.0	26.05
		43.0	47.1	14.97	56.6	17.63	66.0	20.20	70.7	21.46	80.1	23.92	89.6	26.33	99.0	28.71
		46.0	47.1	16.01	56.6	18.84	66.0	21.68	70.7	23.11	80.1	25.96	89.6	27.79	94.6	28.36
52.0	29.1	11.28	31.6	11.40	34.7	11.61	36.4	11.74	40.1	12.05	44.2	12.39	48.6	12.75		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

36HP (Cooling) U-16ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	40.4	3.68	48.5	4.86	56.6	6.01	60.6	6.58	68.7	7.71	76.8	8.81	84.8	9.89
		-5.0	40.4	3.69	48.5	4.86	56.6	6.02	60.6	6.59	68.7	7.72	76.8	8.82	84.8	9.90
		0.0	40.4	3.70	48.5	4.88	56.6	6.03	60.6	6.60	68.7	7.73	76.8	8.83	84.8	9.92
		5.0	40.4	3.71	48.5	4.89	56.6	6.05	60.6	6.62	68.7	7.74	76.8	8.85	84.8	9.94
		10.0	40.4	3.73	48.5	4.91	56.6	6.07	60.6	6.64	68.7	7.77	76.8	8.87	84.8	9.96
		15.0	40.4	3.76	48.5	4.94	56.6	6.10	60.6	6.67	68.7	7.80	76.8	8.90	84.8	9.99
		20.0	40.4	3.81	48.5	4.99	56.6	6.15	60.6	6.73	68.7	7.87	76.8	8.99	84.8	10.09
		25.0	40.4	4.21	48.5	5.43	56.6	6.61	60.6	7.19	68.7	8.33	76.8	9.45	84.8	10.54
		30.0	40.4	6.64	48.5	7.79	56.6	8.90	60.6	9.43	68.7	10.46	76.8	11.45	84.8	12.39
		35.0	40.4	8.87	48.5	10.39	56.6	11.83	60.6	12.53	68.7	13.87	76.8	15.14	84.8	16.36
		40.0	40.4	10.93	48.5	12.77	56.6	14.51	60.6	15.34	68.7	16.96	76.8	18.49	84.8	19.95
		43.0	40.4	12.19	48.5	14.23	56.6	16.15	60.6	17.07	68.7	18.85	76.8	20.54	84.8	22.15
		46.0	40.4	13.18	48.5	15.27	56.6	17.30	60.6	18.30	68.7	20.26	76.8	22.17	84.8	24.04
52.0	29.1	11.28	31.6	11.40	34.7	11.61	36.4	11.74	40.1	12.05	44.2	12.39	48.6	12.75		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	33.7	2.69	40.4	3.69	47.1	4.67	50.5	5.16	57.2	6.12	64.0	7.06	70.7	7.99
		-5.0	33.7	2.70	40.4	3.70	47.1	4.68	50.5	5.17	57.2	6.13	64.0	7.07	70.7	7.99
		0.0	33.7	2.71	40.4	3.71	47.1	4.69	50.5	5.18	57.2	6.14	64.0	7.08	70.7	8.00
		5.0	33.7	2.72	40.4	3.72	47.1	4.70	50.5	5.19	57.2	6.15	64.0	7.09	70.7	8.02
		10.0	33.7	2.73	40.4	3.73	47.1	4.72	50.5	5.21	57.2	6.17	64.0	7.11	70.7	8.04
		15.0	33.7	2.76	40.4	3.76	47.1	4.74	50.5	5.23	57.2	6.19	64.0	7.13	70.7	8.06
		20.0	33.7	2.80	40.4	3.80	47.1	4.78	50.5	5.27	57.2	6.23	64.0	7.17	70.7	8.09
		25.0	33.7	2.90	40.4	3.90	47.1	4.89	50.5	5.38	57.2	6.34	64.0	7.28	70.7	8.20
		30.0	33.7	5.05	40.4	5.76	47.1	6.23	50.5	6.54	57.2	7.26	64.0	8.04	70.7	8.85
		35.0	33.7	6.85	40.4	7.91	47.1	8.89	50.5	9.34	57.2	10.19	64.0	10.97	70.7	11.68
		40.0	33.7	8.56	40.4	9.89	47.1	11.11	50.5	11.68	57.2	12.75	64.0	13.73	70.7	14.64
		43.0	33.7	9.62	40.4	11.10	47.1	12.47	50.5	13.11	57.2	14.32	64.0	15.43	70.7	16.46
		46.0	33.7	10.66	40.4	12.13	47.1	13.52	50.5	14.19	57.2	15.46	64.0	16.66	70.7	17.79
52.0	29.1	11.28	31.6	11.40	34.7	11.61	36.4	11.74	40.1	12.05	44.2	12.39	48.6	12.75		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	26.9	1.69	32.3	2.50	37.7	3.30	40.4	3.70	45.8	4.48	51.2	5.26	56.6	6.02
		-5.0	26.9	1.69	32.3	2.51	37.7	3.31	40.4	3.70	45.8	4.49	51.2	5.27	56.6	6.03
		0.0	26.9	1.70	32.3	2.51	37.7	3.32	40.4	3.71	45.8	4.50	51.2	5.27	56.6	6.04
		5.0	26.9	1.71	32.3	2.52	37.7	3.32	40.4	3.72	45.8	4.51	51.2	5.28	56.6	6.05
		10.0	26.9	1.72	32.3	2.53	37.7	3.34	40.4	3.73	45.8	4.52	51.2	5.30	56.6	6.07
		15.0	26.9	1.74	32.3	2.55	37.7	3.36	40.4	3.75	45.8	4.54	51.2	5.32	56.6	6.09
		20.0	26.9	1.77	32.3	2.58	37.7	3.38	40.4	3.78	45.8	4.56	51.2	5.35	56.6	6.12
		25.0	26.9	1.83	32.3	2.64	37.7	3.44	40.4	3.83	45.8	4.61	51.2	5.39	56.6	6.17
		30.0	26.9	2.57	32.3	3.08	37.7	3.73	40.4	4.08	45.8	4.80	51.2	5.61	56.6	6.49
		35.0	26.9	5.05	32.3	5.73	37.7	6.33	40.4	6.60	45.8	7.07	51.2	7.66	56.6	8.42
		40.0	26.9	6.41	32.3	7.30	37.7	8.08	40.4	8.44	45.8	9.07	51.2	9.63	56.6	10.10
		43.0	26.9	7.25	32.3	8.27	37.7	9.17	40.4	9.58	45.8	10.33	51.2	10.98	56.6	11.54
		46.0	26.9	8.42	32.3	9.40	37.7	10.29	40.4	10.70	45.8	11.46	51.2	12.14	56.6	12.75
52.0	26.9	10.00	31.6	11.40	34.7	11.61	36.4	11.74	40.1	12.05	44.2	12.39	48.6	12.75		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	20.2	0.67	24.2	1.29	28.3	1.90	30.3	2.21	34.3	2.82	38.4	3.43	42.4	4.02
		-5.0	20.2	0.67	24.2	1.29	28.3	1.91	30.3	2.22	34.3	2.83	38.4	3.43	42.4	4.03
		0.0	20.2	0.67	24.2	1.29	28.3	1.91	30.3	2.23	34.3	2.84	38.4	3.44	42.4	4.04
		5.0	20.2	0.68	24.2	1.30	28.3	1.92	30.3	2.24	34.3	2.85	38.4	3.46	42.4	4.05
		10.0	20.2	0.69	24.2	1.31	28.3	1.93	30.3	2.25	34.3	2.87	38.4	3.47	42.4	4.07
		15.0	20.2	0.70	24.2	1.32	28.3	1.95	30.3	2.26	34.3	2.89	38.4	3.50	42.4	4.10
		20.0	20.2	0.72	24.2	1.34	28.3	1.97	30.3	2.29	34.3	2.92	38.4	3.53	42.4	4.12
		25.0	20.2	0.76	24.2	1.38	28.3	2.01	30.3	2.33	34.3	2.96	38.4	3.59	42.4	4.23
		30.0	20.2	0.87	24.2	1.46	28.3	2.09	30.3	2.46	34.3	3.21	38.4	3.94	42.4	4.65
		35.0	20.2	3.46	24.2	3.86	28.3	4.32	30.3	4.62	34.3	5.22	38.4	5.81	42.4	6.39
		40.0	20.2	4.46	24.2	5.00	28.3	5.45	30.3	5.64	34.3	5.95	38.4	6.20	42.4	6.39
		43.0	20.2	5.09	24.2	5.72	28.3	6.26	30.3	6.48	34.3	6.88	38.4	7.18	42.4	7.42
		46.0	20.2	6.43	24.2	7.04	28.3	7.55	30.3	7.78	34.3	8.18	38.4	8.50	42.4	8.75
52.0	20.2	7.57	24.2	8.35	28.3	9.04	30.3	9.35	34.3	9.65	38.4	9.81	42.4	9.87		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-30. 36HP (Heating) U-16ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	81.2	29.77	79.1	29.24	75.0	28.12	72.8	27.51	66.2	25.59	61.6	24.20	49.6	20.28
		-19.8	-20.0	85.2	30.44	83.1	29.88	78.7	28.70	76.5	28.09	69.6	26.09	64.8	24.65	52.2	20.61
		-14.7	-15.0	91.0	31.44	88.7	30.84	84.1	29.60	81.7	28.95	74.4	26.85	69.4	25.33	55.9	21.11
		-9.6	-10.0	98.7	32.85	96.3	32.21	91.3	30.87	88.8	30.16	80.9	27.90	75.4	26.29	60.8	21.79
		-4.4	-5.0	108.8	34.86	106.1	34.16	100.6	32.64	97.8	31.85	89.2	29.31	83.1	27.49	67.0	22.59
		-1.8	-2.5	114.8	35.76	112.0	35.03	106.2	33.49	103.2	32.69	94.0	30.11	87.6	28.25	70.7	23.22
		0.8	0.0	121.4	36.48	118.4	35.73	112.3	34.13	109.2	33.30	99.5	30.64	92.1	28.40	71.1	21.94
		2.8	2.0	128.6	37.18	125.5	36.40	117.2	33.81	113.0	32.52	100.4	28.74	92.1	26.29	71.1	20.40
		6.0	5.0	129.7	33.08	125.6	31.94	117.2	29.70	113.0	28.60	100.4	25.37	92.1	23.23	71.1	18.14
		7.0	6.0	129.7	31.56	125.6	30.49	117.2	28.37	113.0	27.30	100.4	24.24	92.1	22.25	71.1	17.43
		8.6	7.5	129.7	29.29	125.6	28.31	117.2	26.38	113.0	25.43	100.4	22.63	92.1	20.81	71.1	16.39
		11.2	10.0	129.7	25.75	125.6	24.92	117.2	23.30	113.0	22.50	100.4	20.13	92.1	18.58	71.1	14.77
		16.4	15.0	129.7	19.56	125.6	19.00	117.2	17.89	113.0	17.33	100.4	15.65	92.1	14.53	71.1	11.70
		24.0	18.0	129.7	16.12	125.6	15.67	117.2	14.75	113.0	14.28	100.4	12.88	92.1	11.93	71.1	9.55

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	81.2	29.77	79.1	29.24	75.0	28.12	72.8	27.51	66.2	25.59	61.6	24.20	49.6	20.28
		-19.8	-20.0	85.2	30.44	83.1	29.88	78.7	28.70	76.5	28.09	69.6	26.09	64.8	24.65	52.2	20.61
		-14.7	-15.0	91.0	31.44	88.7	30.84	84.1	29.60	81.7	28.95	74.4	26.85	69.4	25.33	55.9	21.11
		-9.6	-10.0	98.7	32.85	96.3	32.21	91.3	30.87	88.8	30.16	80.9	27.90	75.4	26.29	60.8	21.79
		-4.4	-5.0	108.8	34.86	106.1	34.16	100.6	32.64	97.8	31.85	89.2	29.31	82.9	27.49	64.0	20.87
		-1.8	-2.5	114.8	35.76	112.0	35.03	105.5	30.82	101.7	29.80	90.4	26.74	82.9	24.71	64.0	19.63
		0.8	0.0	116.8	31.25	113.0	30.32	105.5	28.48	101.7	27.56	90.4	24.79	82.9	22.95	64.0	18.32
		2.8	2.0	116.8	28.60	113.0	27.78	105.5	26.14	101.7	25.32	90.4	22.85	82.9	21.22	64.0	17.16
		6.0	5.0	116.8	24.99	113.0	24.38	105.5	23.14	101.7	22.50	90.4	20.51	82.9	19.07	64.0	15.35
		7.0	6.0	116.8	24.43	113.0	23.74	105.5	22.37	101.7	21.68	90.4	19.61	82.9	18.23	64.0	14.73
		8.6	7.5	116.8	22.56	113.0	21.95	105.5	20.73	101.7	20.11	90.4	18.26	82.9	17.02	64.0	13.84
		11.2	10.0	116.8	19.63	113.0	19.15	105.5	18.17	101.7	17.67	90.4	16.16	82.9	15.13	64.0	12.45
		16.4	15.0	116.8	14.53	113.0	14.24	105.5	13.64	101.7	13.33	90.4	12.34	82.9	11.64	64.0	9.75
		24.0	18.0	116.8	14.08	113.0	13.70	105.5	12.92	101.7	12.53	90.4	11.37	82.9	10.60	64.0	8.66

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	81.2	29.77	79.1	29.24	75.0	28.12	72.8	27.51	66.2	25.59	61.6	24.20	49.6	20.28
		-19.8	-20.0	85.2	30.44	83.1	29.88	78.7	28.70	76.5	28.09	69.6	26.09	64.8	24.65	52.2	20.61
		-14.7	-15.0	91.0	31.44	88.7	30.84	84.1	29.60	81.7	28.95	74.4	26.85	69.4	25.33	55.9	21.11
		-9.6	-10.0	98.7	32.85	96.3	32.21	91.3	30.87	88.8	30.16	80.4	27.90	73.7	23.86	56.9	19.25
		-4.4	-5.0	103.8	27.73	100.4	27.06	93.7	25.68	90.4	24.98	80.4	22.82	73.7	21.32	56.9	17.41
		-1.8	-2.5	103.8	25.69	100.4	25.09	93.7	23.86	90.4	23.23	80.4	21.28	73.7	19.93	56.9	16.44
		0.8	0.0	103.8	23.45	100.4	22.98	93.7	22.00	90.4	21.48	80.4	19.84	73.7	18.66	56.9	15.45
		2.8	2.0	103.8	21.71	100.4	21.30	93.7	20.42	90.4	19.95	80.4	18.47	73.7	17.40	56.9	14.46
		6.0	5.0	103.8	19.25	100.4	18.91	93.7	18.17	90.4	17.78	80.4	16.50	73.7	15.54	56.9	12.91
		7.0	6.0	103.8	18.66	100.4	18.27	93.7	17.47	90.4	17.05	80.4	15.75	73.7	14.84	56.9	12.39
		8.6	7.5	103.8	17.13	100.4	16.80	93.7	16.11	90.4	15.75	80.4	14.63	73.7	13.82	56.9	11.64
		11.2	10.0	103.8	14.74	100.4	14.50	93.7	14.00	90.4	13.73	80.4	12.87	73.7	12.23	56.9	10.45
		16.4	15.0	103.8	12.75	100.4	12.40	93.7	11.72	90.4	11.37	80.4	10.34	73.7	9.65	56.9	8.12
		24.0	18.0	103.8	12.75	100.4	12.40	93.7	11.72	90.4	11.37	80.4	10.34	73.7	9.65	56.9	7.93

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	81.2	29.77	79.1	29.24	75.0	28.12	72.8	27.51	66.2	25.59	61.6	24.20	49.6	20.28
		-19.8	-20.0	85.2	30.44	83.1	29.88	78.7	28.70	76.5	28.09	69.6	26.09	64.5	24.65	49.8	18.07
		-14.7	-15.0	90.8	26.60	87.9	26.06	82.0	24.92	79.1	24.33	70.3	22.44	64.5	21.09	49.8	17.27
		-9.6	-10.0	90.8	23.98	87.9	23.52	82.0	22.55	79.1	22.05	70.3	20.43	64.5	19.27	49.8	16.15
		-4.4	-5.0	90.8	21.10	87.9	20.77	82.0	20.05	79.1	19.65	70.3	18.36	64.5	17.40	49.8	14.66
		-1.8	-2.5	90.8	19.70	87.9	19.41	82.0	18.76	79.1	18.40	70.3	17.23	64.5	16.36	49.8	13.84
		0.8	0.0	90.8	18.23	87.9	17.97	82.0	17.41	79.1	17.09	70.3	16.05	64.5	15.26	49.8	12.98
		2.8	2.0	90.8	16.77	87.9	16.56	82.0	16.07	79.1	15.81	70.3	14.89	64.5	14.19	49.8	12.13
		6.0	5.0	90.8	14.69	87.9	14.53	82.0	14.16	79.1	13.94	70.3	13.18	64.5	12.58	49.8	10.77
		7.0	6.0	90.8	14.06	87.9	13.88	82.0	13.49	79.1	13.28	70.3	12.55	64.5	12.00	49.8	10.37
		8.6	7.5	90.8	12.83	87.9	12.69	82.0	12.39	79.1	12.22	70.3	11.62	64.5	11.16	49.8	9.74
		11.2	10.0	90.8	11.41	87.9	11.11	82.0	10.71	79.1	10.60	70.3	10.19	64.5	9.84	49.8	8.73
		16.4	15.0	90.8	11.41	87.9	11.11	82.0	10.51	79.1	10.21	70.3	9.30	64.5	8.70	49.8	7.20
		24.0	18.0	90.8	11.41	87.9	11.11	82.0	10.51	79.1	10.21	70.3	9.30	64.5	8.70	49.8	7.20

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

36HP (Heating) U-16ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	60%	-24.9	-25.0	77.8	23.32	75.3	22.94	70.3	22.11	67.8	21.67	60.3	20.15	55.2	18.92	42.7	15.67
		-19.8	-20.0	77.8	21.97	75.3	21.63	70.3	20.89	67.8	20.49	60.3	19.22	55.2	18.25	42.7	15.15
		-14.7	-15.0	77.8	20.40	75.3	20.13	70.3	19.52	67.8	19.18	60.3	18.03	55.2	17.16	42.7	14.60
		-9.6	-10.0	77.8	18.60	75.3	18.37	70.3	17.86	67.8	17.58	60.3	16.58	55.2	15.81	42.7	13.53
		-4.4	-5.0	77.8	16.48	75.3	16.30	70.3	15.90	67.8	15.67	60.3	14.86	55.2	14.22	42.7	12.27
		-1.8	-2.5	77.8	15.31	75.3	15.17	70.3	14.82	67.8	14.62	60.3	13.91	55.2	13.34	42.7	11.57
		0.8	0.0	77.8	14.09	75.3	13.98	70.3	13.70	67.8	13.53	60.3	12.92	55.2	12.42	42.7	10.84
		2.8	2.0	77.8	12.88	75.3	12.80	70.3	12.59	67.8	12.46	60.3	11.95	55.2	11.52	42.7	10.12
		6.0	5.0	77.8	11.14	75.3	11.10	70.3	10.94	67.8	10.84	60.3	10.45	55.2	10.11	42.7	8.92
		7.0	6.0	77.8	10.50	75.3	10.45	70.3	10.34	67.8	10.26	60.3	9.93	55.2	9.64	42.7	8.63
		8.6	7.5	77.8	10.08	75.3	9.82	70.3	9.48	67.8	9.43	60.3	9.19	55.2	8.96	42.7	8.11
		11.2	10.0	77.8	10.08	75.3	9.82	70.3	9.30	67.8	9.05	60.3	8.27	55.2	7.91	42.7	7.28
		16.4	15.0	77.8	10.08	75.3	9.82	70.3	9.30	67.8	9.05	60.3	8.27	55.2	7.76	42.7	6.46
		24.0	18.0	77.8	10.08	75.3	9.82	70.3	9.30	67.8	9.05	60.3	8.27	55.2	7.76	42.7	6.46

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	50%	-24.9	-25.0	64.9	18.11	62.8	17.91	58.6	17.45	56.5	17.18	50.2	16.27	46.0	15.54	35.6	13.10
		-19.8	-20.0	64.9	17.19	62.8	17.02	58.6	16.60	56.5	16.36	50.2	15.51	46.0	14.85	35.6	12.77
		-14.7	-15.0	64.9	15.98	62.8	15.84	58.6	15.49	56.5	15.28	50.2	14.54	46.0	13.94	35.6	12.09
		-9.6	-10.0	64.9	14.51	62.8	14.40	58.6	14.12	56.5	13.96	50.2	13.34	46.0	12.83	35.6	11.20
		-4.4	-5.0	64.9	12.78	62.8	12.71	58.6	12.52	56.5	12.39	50.2	11.92	46.0	11.51	35.6	10.15
		-1.8	-2.5	64.9	11.82	62.8	11.78	58.6	11.64	56.5	11.54	50.2	11.14	46.0	10.79	35.6	9.58
		0.8	0.0	64.9	10.83	62.8	10.81	58.6	10.73	56.5	10.65	50.2	10.34	46.0	10.04	35.6	8.98
		2.8	2.0	64.9	9.86	62.8	9.86	58.6	9.82	56.5	9.78	50.2	9.52	46.0	9.27	35.6	8.34
		6.0	5.0	64.9	8.75	62.8	8.53	58.6	8.35	56.5	8.34	50.2	8.22	46.0	8.07	35.6	7.37
		7.0	6.0	64.9	8.75	62.8	8.53	58.6	8.10	56.5	7.90	50.2	7.82	46.0	7.70	35.6	7.13
		8.6	7.5	64.9	8.75	62.8	8.53	58.6	8.10	56.5	7.88	50.2	7.25	46.0	7.17	35.6	6.71
		11.2	10.0	64.9	8.75	62.8	8.53	58.6	8.10	56.5	7.88	50.2	7.24	46.0	6.81	35.6	6.05
		16.4	15.0	64.9	8.75	62.8	8.53	58.6	8.10	56.5	7.88	50.2	7.24	46.0	6.81	35.6	5.73
		24.0	18.0	64.9	8.75	62.8	8.53	58.6	8.10	56.5	7.88	50.2	7.24	46.0	6.81	35.6	5.73

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	40%	-24.9	-25.0	51.9	14.01	50.2	13.90	46.9	13.63	45.2	13.47	40.2	12.87	36.8	12.38	28.5	10.73
		-19.8	-20.0	51.9	13.28	50.2	13.19	46.9	12.96	45.2	12.82	40.2	12.28	36.8	11.83	28.5	10.38
		-14.7	-15.0	51.9	12.32	50.2	12.26	46.9	12.07	45.2	11.96	40.2	11.50	36.8	11.11	28.5	9.81
		-9.6	-10.0	51.9	11.16	50.2	11.12	46.9	10.99	45.2	10.91	40.2	10.54	36.8	10.22	28.5	9.10
		-4.4	-5.0	51.9	9.80	50.2	9.79	46.9	9.73	45.2	9.68	40.2	9.42	36.8	9.17	28.5	8.26
		-1.8	-2.5	51.9	9.05	50.2	9.06	46.9	9.04	45.2	9.01	40.2	8.81	36.8	8.60	28.5	7.79
		0.8	0.0	51.9	8.23	50.2	8.25	46.9	8.26	45.2	8.24	40.2	8.11	36.8	7.95	28.5	7.27
		2.8	2.0	51.9	7.41	50.2	7.41	46.9	7.45	45.2	7.46	40.2	7.40	36.8	7.30	28.5	6.77
		6.0	5.0	51.9	7.41	50.2	7.24	46.9	6.89	45.2	6.72	40.2	6.43	36.8	6.39	28.5	6.04
		7.0	6.0	51.9	7.41	50.2	7.24	46.9	6.89	45.2	6.72	40.2	6.21	36.8	6.11	28.5	5.83
		8.6	7.5	51.9	7.41	50.2	7.24	46.9	6.89	45.2	6.72	40.2	6.21	36.8	5.86	28.5	5.51
		11.2	10.0	51.9	7.41	50.2	7.24	46.9	6.89	45.2	6.72	40.2	6.21	36.8	5.86	28.5	5.00
		16.4	15.0	51.9	7.41	50.2	7.24	46.9	6.89	45.2	6.72	40.2	6.21	36.8	5.86	28.5	5.00
		24.0	18.0	51.9	7.41	50.2	7.24	46.9	6.89	45.2	6.72	40.2	6.21	36.8	5.86	28.5	5.00

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB °CWB		kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	30%	-24.9	-25.0	38.9	10.48	37.7	10.43	35.2	10.29	33.9	10.19	30.1	9.83	27.6	9.51	21.3	8.44
		-19.8	-20.0	38.9	9.93	37.7	9.89	35.2	9.78	33.9	9.70	30.1	9.39	27.6	9.10	21.3	8.13
		-14.7	-15.0	38.9	9.22	37.7	9.20	35.2	9.12	33.9	9.06	30.1	8.81	27.6	8.56	21.3	7.70
		-9.6	-10.0	38.9	8.36	37.7	8.36	35.2	8.32	33.9	8.28	30.1	8.08	27.6	7.88	21.3	7.15
		-4.4	-5.0	38.9	7.25	37.7	7.28	35.2	7.29	33.9	7.28	30.1	7.18	27.6	7.05	21.3	6.49
		-1.8	-2.5	38.9	6.64	37.7	6.68	35.2	6.73	33.9	6.74	30.1	6.69	27.6	6.59	21.3	6.13
		0.8	0.0	38.9	6.08	37.7	6.08	35.2	6.15	33.9	6.17	30.1	6.18	27.6	6.12	21.3	5.76
		2.8	2.0	38.9	6.08	37.7	5.95	35.2	5.69	33.9	5.63	30.1	5.68	27.6	5.66	21.3	5.39
		6.0	5.0	38.9	6.08	37.7	5.95	35.2	5.69	33.9	5.56	30.1	5.17	27.6	5.02	21.3	4.88
		7.0	6.0	38.9	6.08	37.7	5.95	35.2	5.69	33.9	5.56	30.1	5.17	27.6	4.91	21.3	4.72
		8.6	7.5	38.9	6.08	37.7	5.95	35.2	5.69	33.9	5.56	30.1	5.17	27.6	4.91	21.3	4.48
		11.2	10.0	38.9	6.08	37.7	5.95	35.2	5.69	33.9	5.56	30.1	5.17	27.6	4.91	21.3	4.27
		16.4	15.0	38.9	6.08	37.7	5.95	35.2	5.69	33.9	5.56	30.1	5.17	27.6	4.91	21.3	4.27
		24.0	18.0	38.9	6.08	37.7	5.95	35.2	5.69	33.9	5.56	30.1	5.17	27.6	4.91	21.3	4.27

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-31. 38HP (Cooling) U-18ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	71.3	8.53	85.6	10.23	99.9	11.93	107.0	12.78	121.3	14.49	135.5	16.19	149.8	17.89
		-5.0	71.3	8.54	85.6	10.25	99.9	11.95	107.0	12.81	121.3	14.51	135.5	16.22	149.8	17.91
		0.0	71.3	8.56	85.6	10.27	99.9	11.98	107.0	12.84	121.3	14.54	135.5	16.25	149.8	17.96
		5.0	71.3	8.60	85.6	10.31	99.9	12.01	107.0	12.87	121.3	14.62	135.5	16.39	149.8	18.13
		10.0	71.3	8.63	85.6	10.37	99.9	12.15	107.0	13.06	121.3	14.91	135.5	16.78	149.8	18.58
		15.0	71.3	8.83	85.6	10.76	99.9	12.74	107.0	13.75	121.3	15.80	135.5	17.87	149.8	19.76
		20.0	71.3	10.15	85.6	12.49	99.9	15.01	107.0	16.37	121.3	19.30	135.5	22.51	149.8	26.00
		25.0	71.3	13.04	85.6	15.99	99.9	19.23	107.0	20.96	121.3	24.64	135.5	28.61	149.8	32.87
		30.0	71.3	16.22	85.6	19.88	99.9	23.86	107.0	25.96	121.3	30.40	135.5	35.16	149.8	40.24
		35.0	71.3	19.63	85.6	24.06	99.9	28.82	107.0	31.32	121.3	36.60	135.5	42.22	143.5	43.81
		40.0	71.3	23.31	85.6	28.56	99.9	34.17	107.0	37.11	121.3	43.29	127.2	43.81	132.6	43.81
		43.0	71.3	25.65	85.6	31.42	99.9	37.58	107.0	40.82	116.0	43.82	121.5	43.76	123.9	41.49
		46.0	70.6	27.84	84.7	34.13	90.0	34.71	91.0	33.79	93.4	32.26	96.5	31.06	100.2	30.11
52.0	30.8	12.20	33.5	12.33	36.7	12.55	38.5	12.68	42.5	13.00	46.8	13.36	51.5	13.74		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	64.2	6.86	77.0	8.61	89.9	10.32	96.3	11.16	109.1	12.81	122.0	14.43	134.8	16.00
		-5.0	64.2	6.87	77.0	8.63	89.9	10.34	96.3	11.18	109.1	12.84	122.0	14.45	134.8	16.03
		0.0	64.2	6.89	77.0	8.65	89.9	10.37	96.3	11.21	109.1	12.87	122.0	14.48	134.8	16.05
		5.0	64.2	6.92	77.0	8.69	89.9	10.41	96.3	11.25	109.1	12.89	122.0	14.52	134.8	16.13
		10.0	64.2	6.97	77.0	8.73	89.9	10.46	96.3	11.31	109.1	13.02	122.0	14.71	134.8	16.37
		15.0	64.2	7.05	77.0	8.91	89.9	10.76	96.3	11.68	109.1	13.49	122.0	15.28	134.8	17.04
		20.0	64.2	7.82	77.0	9.97	89.9	12.06	96.3	13.09	109.1	15.08	122.0	17.25	134.8	19.57
		25.0	64.2	10.67	77.0	13.07	89.9	15.55	96.3	16.83	109.1	19.44	122.0	22.12	134.8	24.88
		30.0	64.2	13.61	77.0	16.51	89.9	19.47	96.3	20.97	109.1	24.02	122.0	27.14	134.8	30.35
		35.0	64.2	17.28	77.0	20.80	89.9	24.36	96.3	26.16	109.1	29.82	122.0	33.57	134.8	37.46
		40.0	64.2	20.53	77.0	24.57	89.9	28.65	96.3	30.72	109.1	34.94	122.0	39.34	132.6	43.81
		43.0	64.2	22.53	77.0	26.90	89.9	31.32	96.3	33.57	109.1	38.21	121.5	43.76	123.9	41.49
		46.0	64.2	24.09	77.0	29.12	89.9	34.39	91.0	33.79	93.4	32.26	96.5	31.06	100.2	30.11
52.0	30.8	12.20	33.5	12.33	36.7	12.55	38.5	12.68	42.5	13.00	46.8	13.36	51.5	13.74		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	57.1	5.87	68.5	7.46	79.9	9.01	85.6	9.77	97.0	11.28	108.4	12.75	119.8	14.19
		-5.0	57.1	5.88	68.5	7.47	79.9	9.03	85.6	9.79	97.0	11.30	108.4	12.77	119.8	14.21
		0.0	57.1	5.90	68.5	7.49	79.9	9.05	85.6	9.82	97.0	11.32	108.4	12.79	119.8	14.24
		5.0	57.1	5.93	68.5	7.52	79.9	9.08	85.6	9.85	97.0	11.35	108.4	12.83	119.8	14.26
		10.0	57.1	5.96	68.5	7.56	79.9	9.13	85.6	9.88	97.0	11.39	108.4	12.88	119.8	14.35
		15.0	57.1	6.02	68.5	7.62	79.9	9.22	85.6	10.02	97.0	11.59	108.4	13.14	119.8	14.66
		20.0	57.1	6.33	68.5	8.11	79.9	9.85	85.6	10.71	97.0	12.38	108.4	14.01	119.8	15.60
		25.0	57.1	8.76	68.5	10.57	79.9	12.42	85.6	13.35	97.0	15.24	108.4	17.16	119.8	19.10
		30.0	57.1	11.32	68.5	13.58	79.9	15.85	85.6	16.99	97.0	19.27	108.4	21.56	119.8	23.86
		35.0	57.1	14.55	68.5	17.35	79.9	20.13	85.6	21.51	97.0	24.28	108.4	27.04	119.8	29.81
		40.0	57.1	17.43	68.5	20.67	79.9	23.88	85.6	25.48	97.0	28.66	108.4	31.86	119.8	35.10
		43.0	57.1	19.20	68.5	22.73	79.9	26.21	85.6	27.95	97.0	31.42	108.4	34.93	119.8	38.52
		46.0	57.1	20.45	68.5	24.36	79.9	28.38	85.6	30.43	93.4	32.26	96.5	31.06	100.2	30.11
52.0	30.8	12.20	33.5	12.33	36.7	12.55	38.5	12.68	42.5	13.00	46.8	13.36	51.5	13.74		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	49.9	4.87	59.9	6.28	69.9	7.67	74.9	8.35	84.9	9.70	94.9	11.02	104.9	12.32
		-5.0	49.9	4.88	59.9	6.29	69.9	7.68	74.9	8.37	84.9	9.72	94.9	11.04	104.9	12.33
		0.0	49.9	4.89	59.9	6.31	69.9	7.70	74.9	8.39	84.9	9.74	94.9	11.06	104.9	12.36
		5.0	49.9	4.91	59.9	6.33	69.9	7.73	74.9	8.41	84.9	9.76	94.9	11.09	104.9	12.38
		10.0	49.9	4.95	59.9	6.37	69.9	7.76	74.9	8.45	84.9	9.80	94.9	11.12	104.9	12.41
		15.0	49.9	5.00	59.9	6.42	69.9	7.81	74.9	8.49	84.9	9.85	94.9	11.19	104.9	12.51
		20.0	49.9	5.10	59.9	6.57	69.9	8.03	74.9	8.75	84.9	10.17	94.9	11.56	104.9	12.92
		25.0	49.9	6.50	59.9	8.05	69.9	9.53	74.9	10.25	84.9	11.64	94.9	13.00	104.9	14.31
		30.0	49.9	9.24	59.9	10.93	69.9	12.59	74.9	13.41	84.9	15.04	94.9	16.64	104.9	18.21
		35.0	49.9	12.03	59.9	14.18	69.9	16.28	74.9	17.31	84.9	19.33	94.9	21.31	104.9	23.25
		40.0	49.9	14.54	59.9	17.08	69.9	19.54	74.9	20.75	84.9	23.11	94.9	25.42	104.9	27.69
		43.0	49.9	16.09	59.9	18.87	69.9	21.56	74.9	22.87	84.9	25.45	94.9	27.98	104.9	30.47
		46.0	49.9	17.15	59.9	20.13	69.9	23.11	74.9	24.60	84.9	27.59	94.9	29.51	100.2	30.11
52.0	30.8	12.20	33.5	12.33	36.7	12.55	38.5	12.68	42.5	13.00	46.8	13.36	51.5	13.74		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

38HP (Cooling) U-18ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	42.8	3.85	51.4	5.08	59.9	6.30	64.2	6.89	72.8	8.08	81.3	9.24	89.9	10.38
		-5.0	42.8	3.86	51.4	5.09	59.9	6.31	64.2	6.91	72.8	8.09	81.3	9.25	89.9	10.39
		0.0	42.8	3.87	51.4	5.11	59.9	6.32	64.2	6.92	72.8	8.11	81.3	9.27	89.9	10.41
		5.0	42.8	3.89	51.4	5.12	59.9	6.34	64.2	6.94	72.8	8.13	81.3	9.29	89.9	10.43
		10.0	42.8	3.91	51.4	5.15	59.9	6.37	64.2	6.97	72.8	8.16	81.3	9.32	89.9	10.46
		15.0	42.8	3.95	51.4	5.19	59.9	6.41	64.2	7.01	72.8	8.20	81.3	9.36	89.9	10.50
		20.0	42.8	4.02	51.4	5.25	59.9	6.47	64.2	7.08	72.8	8.28	81.3	9.45	89.9	10.61
		25.0	42.8	4.50	51.4	5.78	59.9	7.03	64.2	7.64	72.8	8.84	81.3	10.02	89.9	11.16
		30.0	42.8	7.36	51.4	8.57	59.9	9.73	64.2	10.28	72.8	11.36	81.3	12.39	89.9	13.37
		35.0	42.8	9.71	51.4	11.30	59.9	12.81	64.2	13.53	72.8	14.93	81.3	16.27	89.9	17.54
		40.0	42.8	11.86	51.4	13.78	59.9	15.60	64.2	16.48	72.8	18.16	81.3	19.76	89.9	21.29
		43.0	42.8	13.18	51.4	15.31	59.9	17.32	64.2	18.28	72.8	20.14	81.3	21.91	89.9	23.60
		46.0	42.8	14.20	51.4	16.38	59.9	18.51	64.2	19.56	72.8	21.61	81.3	23.62	89.9	25.57
52.0	30.8	12.20	33.5	12.33	36.7	12.55	38.5	12.68	42.5	13.00	46.8	13.36	51.5	13.74		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	35.7	2.81	42.8	3.86	49.9	4.89	53.5	5.40	60.6	6.41	67.8	7.40	74.9	8.37
		-5.0	35.7	2.82	42.8	3.87	49.9	4.90	53.5	5.41	60.6	6.42	67.8	7.41	74.9	8.38
		0.0	35.7	2.83	42.8	3.88	49.9	4.91	53.5	5.42	60.6	6.43	67.8	7.42	74.9	8.39
		5.0	35.7	2.84	42.8	3.89	49.9	4.93	53.5	5.44	60.6	6.45	67.8	7.44	74.9	8.41
		10.0	35.7	2.86	42.8	3.91	49.9	4.95	53.5	5.46	60.6	6.47	67.8	7.46	74.9	8.43
		15.0	35.7	2.89	42.8	3.94	49.9	4.98	53.5	5.49	60.6	6.50	67.8	7.49	74.9	8.47
		20.0	35.7	2.94	42.8	4.00	49.9	5.03	53.5	5.54	60.6	6.55	67.8	7.54	74.9	8.51
		25.0	35.7	3.06	42.8	4.12	49.9	5.15	53.5	5.67	60.6	7.52	67.8	7.66	74.9	8.64
		30.0	35.7	5.71	42.8	6.42	49.9	6.81	53.5	7.11	60.6	7.82	67.8	8.60	74.9	9.43
		35.0	35.7	7.61	42.8	8.72	49.9	9.73	53.5	10.20	60.6	11.09	67.8	11.90	74.9	12.64
		40.0	35.7	9.39	42.8	10.78	49.9	12.05	53.5	12.65	60.6	13.77	67.8	14.79	74.9	15.74
		43.0	35.7	10.49	42.8	12.04	49.9	13.47	53.5	14.14	60.6	15.41	67.8	16.57	74.9	17.64
		46.0	35.7	11.55	42.8	13.10	49.9	14.55	53.5	15.25	60.6	16.58	67.8	17.84	74.9	19.02
52.0	30.8	12.20	33.5	12.33	36.7	12.55	38.5	12.68	42.5	13.00	46.8	13.36	51.5	13.74		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	28.5	1.75	34.2	2.61	39.9	3.45	42.8	3.86	48.5	4.69	54.2	5.50	59.9	6.31
		-5.0	28.5	1.76	34.2	2.61	39.9	3.45	42.8	3.87	48.5	4.70	54.2	5.51	59.9	6.32
		0.0	28.5	1.77	34.2	2.62	39.9	3.46	42.8	3.88	48.5	4.71	54.2	5.52	59.9	6.33
		5.0	28.5	1.78	34.2	2.63	39.9	3.48	42.8	3.89	48.5	4.72	54.2	5.54	59.9	6.35
		10.0	28.5	1.79	34.2	2.65	39.9	3.49	42.8	3.91	48.5	4.73	54.2	5.55	59.9	6.37
		15.0	28.5	1.81	34.2	2.67	39.9	3.52	42.8	3.93	48.5	4.76	54.2	5.58	59.9	6.40
		20.0	28.5	1.85	34.2	2.71	39.9	3.55	42.8	3.97	48.5	4.79	54.2	5.62	59.9	6.44
		25.0	28.5	1.93	34.2	2.78	39.9	3.62	42.8	4.03	48.5	4.85	54.2	5.67	59.9	6.49
		30.0	28.5	2.83	34.2	3.31	39.9	3.97	42.8	4.33	48.5	5.07	54.2	5.93	59.9	6.87
		35.0	28.5	5.73	34.2	6.44	39.9	7.06	42.8	7.34	48.5	7.84	54.2	8.45	59.9	9.24
		40.0	28.5	7.14	34.2	8.07	39.9	8.89	42.8	9.26	48.5	9.93	54.2	10.50	59.9	11.00
		43.0	28.5	8.02	34.2	9.08	39.9	10.03	42.8	10.45	48.5	11.23	54.2	11.91	59.9	12.50
		46.0	28.5	9.20	34.2	10.23	39.9	11.16	42.8	11.60	48.5	12.39	54.2	13.10	59.9	13.74
52.0	28.5	10.86	33.5	12.33	36.7	12.55	38.5	12.68	42.5	13.00	46.8	13.36	51.5	13.74		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	21.4	0.68	25.7	1.33	30.0	1.98	32.1	2.31	36.4	2.95	40.7	3.58	44.9	4.21
		-5.0	21.4	0.68	25.7	1.33	30.0	1.99	32.1	2.31	36.4	2.96	40.7	3.59	44.9	4.22
		0.0	21.4	0.69	25.7	1.34	30.0	1.99	32.1	2.32	36.4	2.97	40.7	3.61	44.9	4.23
		5.0	21.4	0.70	25.7	1.35	30.0	2.00	32.1	2.33	36.4	2.99	40.7	3.62	44.9	4.25
		10.0	21.4	0.71	25.7	1.36	30.0	2.02	32.1	2.35	36.4	3.00	40.7	3.65	44.9	4.28
		15.0	21.4	0.72	25.7	1.37	30.0	2.04	32.1	2.37	36.4	3.03	40.7	3.68	44.9	4.31
		20.0	21.4	0.75	25.7	1.40	30.0	2.07	32.1	2.40	36.4	3.07	40.7	3.72	44.9	4.34
		25.0	21.4	0.80	25.7	1.45	30.0	2.12	32.1	2.46	36.4	3.12	40.7	3.78	44.9	4.46
		30.0	21.4	0.94	25.7	1.55	30.0	2.22	32.1	2.61	36.4	3.42	40.7	4.21	44.9	4.98
		35.0	21.4	4.07	25.7	4.48	30.0	4.96	32.1	5.28	36.4	5.90	40.7	6.52	44.9	7.13
		40.0	21.4	5.11	25.7	5.68	30.0	6.14	32.1	6.34	36.4	6.67	40.7	6.93	44.9	7.13
		43.0	21.4	5.77	25.7	6.43	30.0	6.98	32.1	7.22	36.4	7.63	40.7	7.95	44.9	8.20
		46.0	21.4	7.12	25.7	7.75	30.0	8.29	32.1	8.53	36.4	8.95	40.7	9.28	44.9	9.55
52.0	21.4	8.31	25.7	9.13	30.0	9.85	32.1	10.17	36.4	10.49	40.7	10.66	44.9	10.72		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-32. 38HP (Heating) U-18ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	90.1	33.89	87.8	33.25	83.1	31.89	80.7	31.18	73.2	28.91	68.1	27.27	54.7	22.71
		-19.8	-20.0	94.7	34.69	92.3	34.03	87.3	32.62	84.8	31.87	77.1	29.52	71.7	27.81	57.6	23.10
		-14.7	-15.0	101.1	35.90	98.6	35.19	93.3	33.69	90.7	32.91	82.4	30.41	76.7	28.62	61.7	23.67
		-9.6	-10.0	109.8	37.59	107.0	36.81	101.4	35.18	98.5	34.34	89.6	31.65	83.4	29.72	67.1	24.45
		-4.4	-5.0	121.0	39.83	118.0	38.92	111.8	37.02	108.6	36.03	98.8	33.20	91.9	31.09	73.9	25.41
		-1.8	-2.5	125.9	40.32	124.5	40.28	117.9	38.37	114.5	37.37	104.1	34.23	97.0	32.02	74.9	24.84
		0.8	0.0	131.5	40.32	129.8	40.32	123.4	38.63	119.0	37.16	105.8	32.84	97.0	30.04	74.9	23.25
		2.8	2.0	136.6	39.74	132.2	38.36	123.4	35.64	119.0	34.30	105.8	30.37	97.0	27.81	74.9	21.62
		6.0	5.0	136.6	34.81	132.2	33.64	123.4	31.32	119.0	30.18	105.8	26.81	97.0	24.57	74.9	19.22
		7.0	6.0	136.6	33.22	132.2	32.11	123.4	29.92	119.0	28.80	105.8	25.61	97.0	23.53	74.9	18.47
		8.6	7.5	136.6	30.84	132.2	29.82	123.4	27.82	119.0	26.84	105.8	23.93	97.0	22.02	74.9	17.37
		11.2	10.0	136.6	27.14	132.2	26.29	123.4	24.61	119.0	23.78	105.8	21.31	97.0	19.68	74.9	15.66
		16.4	15.0	136.6	20.66	132.2	20.08	123.4	18.91	119.0	18.33	105.8	16.56	97.0	15.37	74.9	12.36
		24.0	18.0	136.6	16.97	132.2	16.49	123.4	15.52	119.0	15.03	105.8	13.54	97.0	12.54	74.9	10.02

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	90.1	33.89	87.8	33.25	83.1	31.89	80.7	31.18	73.2	28.91	68.1	27.27	54.7	22.71
		-19.8	-20.0	94.7	34.69	92.3	34.03	87.3	32.62	84.8	31.87	77.1	29.52	71.7	27.81	57.6	23.10
		-14.7	-15.0	101.1	35.90	98.6	35.19	93.3	33.69	90.7	32.91	82.4	30.41	76.7	28.62	61.7	23.67
		-9.6	-10.0	109.8	37.59	107.0	36.81	101.4	35.18	98.5	34.34	89.6	31.65	83.4	29.72	67.1	24.45
		-4.4	-5.0	121.0	39.83	118.0	38.92	111.1	34.88	107.1	33.72	95.2	30.25	87.3	27.94	67.4	22.14
		-1.8	-2.5	123.0	35.71	119.0	34.65	111.1	32.53	107.1	31.47	95.2	28.29	87.3	26.16	67.4	20.82
		0.8	0.0	123.0	32.92	119.0	31.97	111.1	30.06	107.1	29.11	95.2	26.23	87.3	24.30	67.4	19.42
		2.8	2.0	123.0	30.14	119.0	29.29	111.1	27.59	107.1	26.74	95.2	24.17	87.3	22.44	67.4	18.16
		6.0	5.0	123.0	26.36	119.0	25.72	111.1	24.41	107.1	23.74	95.2	21.65	87.3	20.15	67.4	16.24
		7.0	6.0	123.0	25.67	119.0	24.97	111.1	23.56	107.1	22.85	95.2	20.71	87.3	19.26	67.4	15.59
		8.6	7.5	123.0	23.72	119.0	23.09	111.1	21.84	107.1	21.21	95.2	19.29	87.3	17.99	67.4	14.65
		11.2	10.0	123.0	20.66	119.0	20.17	111.1	19.16	107.1	18.65	95.2	17.08	87.3	16.00	67.4	13.18
		16.4	15.0	123.0	15.31	119.0	15.00	111.1	14.38	107.1	14.05	95.2	13.02	87.3	12.28	67.4	10.28
		24.0	18.0	123.0	15.00	119.0	14.59	111.1	13.75	107.1	13.34	95.2	12.09	87.3	11.26	67.4	9.18

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	90.1	33.89	87.8	33.25	83.1	31.89	80.7	31.18	73.2	28.91	68.1	27.27	54.7	22.71
		-19.8	-20.0	94.7	34.69	92.3	34.03	87.3	32.62	84.8	31.87	77.1	29.52	71.7	27.81	57.6	23.10
		-14.7	-15.0	101.1	35.90	98.6	35.19	93.3	33.69	90.7	32.91	82.4	30.41	76.7	28.62	59.9	21.64
		-9.6	-10.0	109.3	33.25	105.8	32.41	98.7	30.71	95.2	29.84	84.6	27.16	77.6	25.31	59.9	20.46
		-4.4	-5.0	109.3	29.27	105.8	28.58	98.7	27.15	95.2	26.42	84.6	24.16	77.6	22.60	59.9	18.47
		-1.8	-2.5	109.3	27.11	105.8	26.49	98.7	25.22	95.2	24.57	84.6	22.53	77.6	21.12	59.9	17.43
		0.8	0.0	109.3	24.79	105.8	24.31	98.7	23.27	95.2	22.73	84.6	21.00	77.6	19.76	59.9	16.37
		2.8	2.0	109.3	22.94	105.8	22.50	98.7	21.58	95.2	21.09	84.6	19.53	77.6	18.40	59.9	15.30
		6.0	5.0	109.3	20.30	105.8	19.94	98.7	19.17	95.2	18.75	84.6	17.40	77.6	16.40	59.9	13.64
		7.0	6.0	109.3	19.58	105.8	19.19	98.7	18.37	95.2	17.95	84.6	16.61	77.6	15.66	59.9	13.10
		8.6	7.5	109.3	17.97	105.8	17.64	98.7	16.95	95.2	16.58	84.6	15.42	77.6	14.59	59.9	12.30
		11.2	10.0	109.3	15.47	105.8	15.24	98.7	14.73	95.2	14.46	84.6	13.57	77.6	12.91	59.9	11.04
		16.4	15.0	109.3	13.57	105.8	13.20	98.7	12.46	95.2	12.09	84.6	10.98	77.6	10.24	59.9	8.53
		24.0	18.0	109.3	13.57	105.8	13.20	98.7	12.46	95.2	12.09	84.6	10.98	77.6	10.24	59.9	8.39

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	90.1	33.89	87.8	33.25	83.1	31.89	80.7	31.18	73.2	28.91	67.9	24.43	52.4	19.96
		-19.8	-20.0	94.7	34.69	92.3	34.03	86.4	28.39	83.3	27.65	74.0	25.18	67.9	23.52	52.4	19.21
		-14.7	-15.0	95.6	28.14	92.6	27.57	86.4	26.39	83.3	25.78	74.0	23.81	67.9	22.39	52.4	18.39
		-9.6	-10.0	95.6	25.35	92.6	24.88	86.4	23.88	83.3	23.35	74.0	21.66	67.9	20.48	52.4	17.16
		-4.4	-5.0	95.6	22.37	92.6	22.02	86.4	21.26	83.3	20.85	74.0	19.48	67.9	18.47	52.4	15.56
		-1.8	-2.5	95.6	20.86	92.6	20.56	86.4	19.88	83.3	19.51	74.0	18.27	67.9	17.35	52.4	14.68
		0.8	0.0	95.6	19.28	92.6	19.02	86.4	18.43	83.3	18.10	74.0	17.00	67.9	16.17	52.4	13.75
		2.8	2.0	95.6	17.72	92.6	17.50	86.4	17.00	83.3	16.72	74.0	15.75	67.9	15.02	52.4	12.84
		6.0	5.0	95.6	15.48	92.6	15.32	86.4	14.93	83.3	14.70	74.0	13.89	67.9	13.26	52.4	11.34
		7.0	6.0	95.6	14.73	92.6	14.55	86.4	14.17	83.3	13.95	74.0	13.22	67.9	12.65	52.4	10.95
		8.6	7.5	95.6	13.44	92.6	13.31	86.4	13.01	83.3	12.84	74.0	12.24	67.9	11.76	52.4	10.28
		11.2	10.0	95.6	12.14	92.6	11.81	86.4	11.25	83.3	11.14	74.0	10.72	67.9	10.37	52.4	9.21
		16.4	15.0	95.6	12.14	92.6	11.81	86.4	11.17	83.3	10.84	74.0	9.87	67.9	9.22	52.4	7.61
		24.0	18.0	95.6	12.14	92.6	11.81	86.4	11.17	83.3	10.84	74.0	9.87	67.9	9.22	52.4	7.61

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

38HP (Heating) U-18ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	82.0	24.71	79.3	24.32	74.0	23.46	71.4	23.00	63.5	21.42	58.2	20.16	45.0	16.69
		-19.8	-20.0	82.0	23.27	79.3	22.94	74.0	22.20	71.4	21.81	63.5	20.46	58.2	19.43	45.0	16.15
		-14.7	-15.0	82.0	21.70	79.3	21.41	74.0	20.76	71.4	20.41	63.5	19.19	58.2	18.26	45.0	15.52
		-9.6	-10.0	82.0	19.76	79.3	19.52	74.0	18.98	71.4	18.68	63.5	17.63	58.2	16.81	45.0	14.37
		-4.4	-5.0	82.0	17.48	79.3	17.29	74.0	16.87	71.4	16.63	63.5	15.77	58.2	15.09	45.0	13.01
		-1.8	-2.5	82.0	16.22	79.3	16.07	74.0	15.72	71.4	15.51	63.5	14.75	58.2	14.14	45.0	12.26
		0.8	0.0	82.0	14.91	79.3	14.80	74.0	14.51	71.4	14.33	63.5	13.69	58.2	13.16	45.0	11.48
		2.8	2.0	82.0	13.61	79.3	13.53	74.0	13.32	71.4	13.18	63.5	12.65	58.2	12.19	45.0	10.70
		6.0	5.0	82.0	11.67	79.3	11.62	74.0	11.47	71.4	11.37	63.5	10.99	58.2	10.65	45.0	9.40
		7.0	6.0	82.0	10.98	79.3	10.94	74.0	10.84	71.4	10.76	63.5	10.44	58.2	10.14	45.0	9.09
		8.6	7.5	82.0	10.70	79.3	10.43	74.0	9.94	71.4	9.89	63.5	9.66	58.2	9.42	45.0	8.54
		11.2	10.0	82.0	10.70	79.3	10.43	74.0	9.87	71.4	9.59	63.5	8.76	58.2	8.31	45.0	7.66
		16.4	15.0	82.0	10.70	79.3	10.43	74.0	9.87	71.4	9.59	63.5	8.76	58.2	8.21	45.0	6.82
24.0	18.0	82.0	10.70	79.3	10.43	74.0	9.87	71.4	9.59	63.5	8.76	58.2	8.21	45.0	6.82		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	68.3	19.29	66.1	19.07	61.7	18.58	59.5	18.29	52.9	17.32	48.5	16.54	37.5	13.93
		-19.8	-20.0	68.3	18.30	66.1	18.11	61.7	17.67	59.5	17.41	52.9	16.51	48.5	15.80	37.5	13.57
		-14.7	-15.0	68.3	17.00	66.1	16.84	61.7	16.47	59.5	16.25	52.9	15.46	48.5	14.82	37.5	12.85
		-9.6	-10.0	68.3	15.41	66.1	15.29	61.7	15.00	59.5	14.82	52.9	14.17	48.5	13.62	37.5	11.88
		-4.4	-5.0	68.3	13.55	66.1	13.48	61.7	13.27	59.5	13.15	52.9	12.64	48.5	12.20	37.5	10.76
		-1.8	-2.5	68.3	12.52	66.1	12.48	61.7	12.33	59.5	12.23	52.9	11.81	48.5	11.43	37.5	10.14
		0.8	0.0	68.3	11.46	66.1	11.44	61.7	11.35	59.5	11.28	52.9	10.94	48.5	10.63	37.5	9.48
		2.8	2.0	68.3	10.38	66.1	10.38	61.7	10.32	59.5	10.27	52.9	10.01	48.5	9.75	37.5	8.79
		6.0	5.0	68.3	9.27	66.1	9.04	61.7	8.74	59.5	8.74	52.9	8.63	48.5	8.48	37.5	7.76
		7.0	6.0	68.3	9.27	66.1	9.04	61.7	8.58	59.5	8.35	52.9	8.20	48.5	8.08	37.5	7.50
		8.6	7.5	68.3	9.27	66.1	9.04	61.7	8.58	59.5	8.35	52.9	7.65	48.5	7.52	37.5	7.05
		11.2	10.0	68.3	9.27	66.1	9.04	61.7	8.58	59.5	8.35	52.9	7.65	48.5	7.19	37.5	6.34
		16.4	15.0	68.3	9.27	66.1	9.04	61.7	8.58	59.5	8.35	52.9	7.65	48.5	7.19	37.5	6.03
24.0	18.0	68.3	9.27	66.1	9.04	61.7	8.58	59.5	8.35	52.9	7.65	48.5	7.19	37.5	6.03		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	54.7	14.89	52.9	14.78	49.4	14.49	47.6	14.32	42.3	13.68	38.8	13.16	30.0	11.40
		-19.8	-20.0	54.7	14.11	52.9	14.01	49.4	13.77	47.6	13.62	42.3	13.05	38.8	12.57	30.0	11.02
		-14.7	-15.0	54.7	13.08	52.9	13.01	49.4	12.82	47.6	12.70	42.3	12.21	38.8	11.79	30.0	10.40
		-9.6	-10.0	54.7	11.83	52.9	11.79	49.4	11.66	47.6	11.56	42.3	11.18	38.8	10.83	30.0	9.64
		-4.4	-5.0	54.7	10.37	52.9	10.36	49.4	10.30	47.6	10.24	42.3	9.97	38.8	9.71	30.0	8.73
		-1.8	-2.5	54.7	9.55	52.9	9.56	49.4	9.52	47.6	9.49	42.3	9.27	38.8	9.05	30.0	8.20
		0.8	0.0	54.7	8.60	52.9	8.63	49.4	8.65	47.6	8.64	42.3	8.52	38.8	8.35	30.0	7.66
		2.8	2.0	54.7	7.84	52.9	7.74	49.4	7.80	47.6	7.81	42.3	7.77	38.8	7.66	30.0	7.12
		6.0	5.0	54.7	7.84	52.9	7.65	49.4	7.28	47.6	7.10	42.3	6.74	38.8	6.70	30.0	6.35
		7.0	6.0	54.7	7.84	52.9	7.65	49.4	7.28	47.6	7.10	42.3	6.54	38.8	6.41	30.0	6.12
		8.6	7.5	54.7	7.84	52.9	7.65	49.4	7.28	47.6	7.10	42.3	6.54	38.8	6.17	30.0	5.78
		11.2	10.0	54.7	7.84	52.9	7.65	49.4	7.28	47.6	7.10	42.3	6.54	38.8	6.17	30.0	5.25
		16.4	15.0	54.7	7.84	52.9	7.65	49.4	7.28	47.6	7.10	42.3	6.54	38.8	6.17	30.0	5.25
24.0	18.0	54.7	7.84	52.9	7.65	49.4	7.28	47.6	7.10	42.3	6.54	38.8	6.17	30.0	5.25		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	41.0	11.10	39.7	11.05	37.0	10.90	35.7	10.80	31.7	10.42	29.1	10.08	22.5	8.94
		-19.8	-20.0	41.0	10.52	39.7	10.48	37.0	10.36	35.7	10.28	31.7	9.94	29.1	9.64	22.5	8.60
		-14.7	-15.0	41.0	9.75	39.7	9.73	37.0	9.65	35.7	9.59	31.7	9.32	29.1	9.06	22.5	8.14
		-9.6	-10.0	41.0	8.79	39.7	8.79	37.0	8.75	35.7	8.71	31.7	8.51	29.1	8.30	22.5	7.53
		-4.4	-5.0	41.0	7.59	39.7	7.62	37.0	7.65	35.7	7.64	31.7	7.54	29.1	7.41	22.5	6.83
		-1.8	-2.5	41.0	6.95	39.7	6.99	37.0	7.05	35.7	7.06	31.7	7.02	29.1	6.92	22.5	6.44
		0.8	0.0	41.0	6.40	39.7	6.35	37.0	6.43	35.7	6.46	31.7	6.47	29.1	6.42	22.5	6.04
		2.8	2.0	41.0	6.40	39.7	6.26	37.0	5.99	35.7	5.89	31.7	5.94	29.1	5.92	22.5	5.65
		6.0	5.0	41.0	6.40	39.7	6.26	37.0	5.99	35.7	5.85	31.7	5.43	29.1	5.24	22.5	5.10
		7.0	6.0	41.0	6.40	39.7	6.26	37.0	5.99	35.7	5.85	31.7	5.43	29.1	5.16	22.5	4.93
		8.6	7.5	41.0	6.40	39.7	6.26	37.0	5.99	35.7	5.85	31.7	5.43	29.1	5.16	22.5	4.68
		11.2	10.0	41.0	6.40	39.7	6.26	37.0	5.99	35.7	5.85	31.7	5.43	29.1	5.16	22.5	4.46
		16.4	15.0	41.0	6.40	39.7	6.26	37.0	5.99	35.7	5.85	31.7	5.43	29.1	5.16	22.5	4.46
24.0	18.0	41.0	6.40	39.7	6.26	37.0	5.99	35.7	5.85	31.7	5.43	29.1	5.16	22.5	4.46		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-33. 40HP (Cooling) U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	75.3	9.24	90.4	11.08	105.5	12.92	113.0	13.85	128.1	15.69	143.1	17.54	158.2	19.38
		-5.0	75.3	9.25	90.4	11.10	105.5	12.95	113.0	13.87	128.1	15.72	143.1	17.57	158.2	19.40
		0.0	75.3	9.27	90.4	11.13	105.5	12.98	113.0	13.90	128.1	15.75	143.1	17.60	158.2	19.45
		5.0	75.3	9.31	90.4	11.16	105.5	13.01	113.0	13.94	128.1	15.83	143.1	17.74	158.2	19.63
		10.0	75.3	9.35	90.4	11.23	105.5	13.15	113.0	14.14	128.1	16.13	143.1	18.15	158.2	20.09
		15.0	75.3	9.55	90.4	11.62	105.5	13.76	113.0	14.85	128.1	17.05	143.1	19.27	158.2	21.31
		20.0	75.3	10.91	90.4	13.41	105.5	16.14	113.0	17.62	128.1	20.79	143.1	24.27	158.2	28.06
		25.0	75.3	14.01	90.4	17.21	105.5	20.72	113.0	22.59	128.1	26.58	143.1	30.88	158.2	35.50
		30.0	75.3	17.45	90.4	21.43	105.5	25.73	113.0	28.01	128.1	32.82	143.1	37.98	158.2	43.49
		35.0	75.3	21.16	90.4	25.95	105.5	31.11	113.0	33.83	128.1	39.54	143.1	45.64	151.5	47.31
		40.0	75.3	25.14	90.4	30.83	105.5	36.91	113.0	40.10	128.1	46.80	134.2	47.31	140.0	47.31
		43.0	75.3	27.68	90.4	33.93	105.5	40.61	113.0	44.12	122.5	47.31	128.3	47.31	130.9	44.85
		46.0	74.6	30.05	89.5	36.86	95.1	37.49	96.1	36.50	98.6	34.84	101.9	33.54	105.8	32.51
52.0	32.5	13.10	35.4	13.23	38.8	13.47	40.7	13.62	44.8	13.97	49.4	14.35	54.4	14.77		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	67.8	7.43	81.4	9.33	94.9	11.19	101.7	12.10	115.3	13.88	128.8	15.63	142.4	17.34
		-5.0	67.8	7.45	81.4	9.35	94.9	11.21	101.7	12.12	115.3	13.91	128.8	15.66	142.4	17.37
		0.0	67.8	7.47	81.4	9.38	94.9	11.23	101.7	12.15	115.3	13.94	128.8	15.69	142.4	17.39
		5.0	67.8	7.50	81.4	9.41	94.9	11.27	101.7	12.19	115.3	13.97	128.8	15.73	142.4	17.46
		10.0	67.8	7.55	81.4	9.45	94.9	11.32	101.7	12.25	115.3	14.10	128.8	15.92	142.4	17.72
		15.0	67.8	7.64	81.4	9.64	94.9	11.64	101.7	12.63	115.3	14.59	128.8	16.51	142.4	18.41
		20.0	67.8	8.43	81.4	10.73	94.9	12.98	101.7	14.08	115.3	16.22	128.8	18.58	142.4	21.08
		25.0	67.8	11.44	81.4	14.03	94.9	16.73	101.7	18.11	115.3	20.94	128.8	23.85	142.4	26.84
		30.0	67.8	14.62	81.4	17.77	94.9	20.98	101.7	22.61	115.3	25.92	128.8	29.30	142.4	32.77
		35.0	67.8	18.60	81.4	22.42	94.9	26.28	101.7	28.23	115.3	32.19	128.8	36.26	142.4	40.47
		40.0	67.8	22.12	81.4	26.50	94.9	30.93	101.7	33.17	115.3	37.74	128.8	42.51	140.0	47.31
		43.0	67.8	24.29	81.4	29.03	94.9	33.82	101.7	36.26	115.3	41.29	128.3	47.31	130.9	44.85
		46.0	67.8	25.98	81.4	31.43	94.9	37.15	96.1	36.50	98.6	34.84	101.9	33.54	105.8	32.51
52.0	32.5	13.10	35.4	13.23	38.8	13.47	40.7	13.62	44.8	13.97	49.4	14.35	54.4	14.77		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	60.3	6.36	72.3	8.09	84.4	9.77	90.4	10.59	102.5	12.22	114.5	13.82	126.6	15.38
		-5.0	60.3	6.38	72.3	8.10	84.4	9.78	90.4	10.61	102.5	12.24	114.5	13.84	126.6	15.40
		0.0	60.3	6.40	72.3	8.12	84.4	9.81	90.4	10.64	102.5	12.27	114.5	13.86	126.6	15.43
		5.0	60.3	6.42	72.3	8.15	84.4	9.84	90.4	10.67	102.5	12.30	114.5	13.90	126.6	15.45
		10.0	60.3	6.46	72.3	8.19	84.4	9.88	90.4	10.71	102.5	12.34	114.5	13.95	126.6	15.54
		15.0	60.3	6.52	72.3	8.26	84.4	9.98	90.4	10.84	102.5	12.54	114.5	14.22	126.6	15.86
		20.0	60.3	6.84	72.3	8.76	84.4	10.63	90.4	11.55	102.5	13.36	114.5	15.12	126.6	16.83
		25.0	60.3	9.36	72.3	11.32	84.4	13.33	90.4	14.34	102.5	16.39	114.5	18.47	126.6	20.58
		30.0	60.3	12.14	72.3	14.59	84.4	17.05	90.4	18.28	102.5	20.76	114.5	23.24	126.6	25.74
		35.0	60.3	15.64	72.3	18.67	84.4	21.69	90.4	23.19	102.5	26.19	114.5	29.18	126.6	32.19
		40.0	60.3	18.76	72.3	22.28	84.4	25.76	90.4	27.49	102.5	30.94	114.5	34.41	126.6	37.92
		43.0	60.3	20.68	72.3	24.51	84.4	28.28	90.4	30.16	102.5	33.93	114.5	37.73	126.6	41.63
		46.0	60.3	22.03	72.3	26.28	84.4	30.63	90.4	32.85	98.6	34.84	101.9	33.54	105.8	32.51
52.0	32.5	13.10	35.4	13.23	38.8	13.47	40.7	13.62	44.8	13.97	49.4	14.35	54.4	14.77		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	52.7	5.28	63.3	6.81	73.8	8.31	79.1	9.05	89.6	10.51	100.2	11.94	110.7	13.35
		-5.0	52.7	5.29	63.3	6.82	73.8	8.33	79.1	9.07	89.6	10.53	100.2	11.96	110.7	13.37
		0.0	52.7	5.31	63.3	6.84	73.8	8.35	79.1	9.09	89.6	10.55	100.2	11.98	110.7	13.39
		5.0	52.7	5.33	63.3	6.87	73.8	8.37	79.1	9.12	89.6	10.58	100.2	12.01	110.7	13.42
		10.0	52.7	5.36	63.3	6.90	73.8	8.41	79.1	9.15	89.6	10.62	100.2	12.05	110.7	13.45
		15.0	52.7	5.41	63.3	6.96	73.8	8.46	79.1	9.20	89.6	10.67	100.2	12.12	110.7	13.55
		20.0	52.7	5.52	63.3	7.11	73.8	8.69	79.1	9.47	89.6	11.00	100.2	12.50	110.7	13.97
		25.0	52.7	6.96	63.3	8.63	73.8	10.23	79.1	11.01	89.6	12.52	100.2	13.98	110.7	15.40
		30.0	52.7	9.88	63.3	11.71	73.8	13.52	79.1	14.41	89.6	16.17	100.2	17.91	110.7	19.61
		35.0	52.7	12.90	63.3	15.23	73.8	17.51	79.1	18.63	89.6	20.82	100.2	22.97	110.7	25.08
		40.0	52.7	15.62	63.3	18.38	73.8	21.05	79.1	22.36	89.6	24.92	100.2	27.43	110.7	29.88
		43.0	52.7	17.30	63.3	20.32	73.8	23.24	79.1	24.66	89.6	27.46	100.2	30.20	110.7	32.90
		46.0	52.7	18.47	63.3	21.69	73.8	24.92	79.1	26.54	89.6	29.78	100.2	31.86	105.8	32.51
52.0	32.5	13.10	35.4	13.23	38.8	13.47	40.7	13.62	44.8	13.97	49.4	14.35	54.4	14.77		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

40HP (Cooling) U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	45.2	4.17	54.2	5.51	63.3	6.83	67.8	7.48	76.8	8.76	85.9	10.01	94.9	11.25
		-5.0	45.2	4.18	54.2	5.52	63.3	6.84	67.8	7.49	76.8	8.77	85.9	10.03	94.9	11.26
		0.0	45.2	4.20	54.2	5.54	63.3	6.85	67.8	7.50	76.8	8.79	85.9	10.04	94.9	11.28
		5.0	45.2	4.21	54.2	5.56	63.3	6.87	67.8	7.53	76.8	8.81	85.9	10.07	94.9	11.30
		10.0	45.2	4.24	54.2	5.58	63.3	6.90	67.8	7.55	76.8	8.84	85.9	10.10	94.9	11.33
		15.0	45.2	4.28	54.2	5.63	63.3	6.95	67.8	7.60	76.8	8.88	85.9	10.14	94.9	11.37
		20.0	45.2	4.35	54.2	5.69	63.3	7.01	67.8	7.67	76.8	8.96	85.9	10.24	94.9	11.49
		25.0	45.2	4.84	54.2	6.23	63.3	7.58	67.8	8.25	76.8	9.55	85.9	10.82	94.9	12.06
		30.0	45.2	7.84	54.2	9.16	63.3	10.41	67.8	11.01	76.8	12.18	85.9	13.30	94.9	14.36
		35.0	45.2	10.39	54.2	12.11	63.3	13.75	67.8	14.53	76.8	16.05	85.9	17.50	94.9	18.88
		40.0	45.2	12.72	54.2	14.80	63.3	16.78	67.8	17.73	76.8	19.55	85.9	21.29	94.9	22.95
		43.0	45.2	14.15	54.2	16.46	63.3	18.64	67.8	19.68	76.8	21.70	85.9	23.62	94.9	25.45
		46.0	45.2	15.26	54.2	17.63	63.3	19.94	67.8	21.07	76.8	23.30	85.9	25.47	94.9	27.59
52.0	32.5	13.10	35.4	13.23	38.8	13.47	40.7	13.62	44.8	13.97	49.4	14.35	54.4	14.77		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	37.7	3.05	45.2	4.19	52.7	5.30	56.5	5.86	64.0	6.95	71.6	8.02	79.1	9.07
		-5.0	37.7	3.06	45.2	4.19	52.7	5.31	56.5	5.87	64.0	6.96	71.6	8.03	79.1	9.09
		0.0	37.7	3.07	45.2	4.21	52.7	5.33	56.5	5.88	64.0	6.97	71.6	8.04	79.1	9.10
		5.0	37.7	3.08	45.2	4.22	52.7	5.34	56.5	5.89	64.0	6.99	71.6	8.06	79.1	9.12
		10.0	37.7	3.10	45.2	4.24	52.7	5.36	56.5	5.92	64.0	7.01	71.6	8.09	79.1	9.14
		15.0	37.7	3.13	45.2	4.27	52.7	5.40	56.5	5.95	64.0	7.04	71.6	8.12	79.1	9.17
		20.0	37.7	3.19	45.2	4.33	52.7	5.45	56.5	6.00	64.0	7.10	71.6	8.17	79.1	9.22
		25.0	37.7	3.31	45.2	4.45	52.7	5.58	56.5	6.13	64.0	8.14	71.6	8.30	79.1	9.35
		30.0	37.7	6.04	45.2	6.83	52.7	7.28	56.5	7.62	64.0	8.40	71.6	9.26	79.1	10.17
		35.0	37.7	8.10	45.2	9.30	52.7	10.41	56.5	10.92	64.0	11.88	71.6	12.76	79.1	13.57
		40.0	37.7	10.04	45.2	11.54	52.7	12.92	56.5	13.57	64.0	14.78	71.6	15.90	79.1	16.92
		43.0	37.7	11.23	45.2	12.92	52.7	14.47	56.5	15.20	64.0	16.57	71.6	17.83	79.1	18.99
		46.0	37.7	12.39	45.2	14.07	52.7	15.65	56.5	16.40	64.0	17.85	71.6	19.21	79.1	20.49
52.0	32.5	13.10	35.4	13.23	38.8	13.47	40.7	13.62	44.8	13.97	49.4	14.35	54.4	14.77		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	30.1	1.91	36.2	2.83	42.2	3.74	45.2	4.19	51.2	5.09	57.3	5.97	63.3	6.84
		-5.0	30.1	1.91	36.2	2.84	42.2	3.75	45.2	4.20	51.2	5.09	57.3	5.98	63.3	6.85
		0.0	30.1	1.92	36.2	2.85	42.2	3.76	45.2	4.21	51.2	5.10	57.3	5.99	63.3	6.87
		5.0	30.1	1.93	36.2	2.86	42.2	3.77	45.2	4.22	51.2	5.12	57.3	6.00	63.3	6.88
		10.0	30.1	1.95	36.2	2.87	42.2	3.79	45.2	4.24	51.2	5.13	57.3	6.02	63.3	6.90
		15.0	30.1	1.97	36.2	2.90	42.2	3.81	45.2	4.26	51.2	5.16	57.3	6.05	63.3	6.93
		20.0	30.1	2.01	36.2	2.94	42.2	3.85	45.2	4.30	51.2	5.19	57.3	6.09	63.3	6.97
		25.0	30.1	2.09	36.2	3.01	42.2	3.92	45.2	4.37	51.2	5.26	57.3	6.14	63.3	7.03
		30.0	30.1	3.02	36.2	3.56	42.2	4.28	45.2	4.67	51.2	5.48	57.3	6.41	63.3	7.42
		35.0	30.1	6.06	36.2	6.84	42.2	7.51	45.2	7.81	51.2	8.35	57.3	9.02	63.3	9.88
		40.0	30.1	7.60	36.2	8.61	42.2	9.49	45.2	9.90	51.2	10.62	57.3	11.24	63.3	11.78
		43.0	30.1	8.55	36.2	9.70	42.2	10.73	45.2	11.19	51.2	12.04	57.3	12.77	63.3	13.41
		46.0	30.1	9.84	36.2	10.96	42.2	11.97	45.2	12.44	51.2	13.30	57.3	14.08	63.3	14.76
52.0	30.1	11.64	35.4	13.23	38.8	13.47	40.7	13.62	44.8	13.97	49.4	14.35	54.4	14.77		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	22.6	0.74	27.1	1.45	31.6	2.15	33.9	2.50	38.4	3.20	42.9	3.89	47.5	4.56
		-5.0	22.6	0.75	27.1	1.45	31.6	2.16	33.9	2.51	38.4	3.21	42.9	3.90	47.5	4.57
		0.0	22.6	0.75	27.1	1.46	31.6	2.17	33.9	2.52	38.4	3.22	42.9	3.91	47.5	4.59
		5.0	22.6	0.76	27.1	1.47	31.6	2.18	33.9	2.53	38.4	3.24	42.9	3.93	47.5	4.61
		10.0	22.6	0.77	27.1	1.48	31.6	2.19	33.9	2.55	38.4	3.26	42.9	3.95	47.5	4.63
		15.0	22.6	0.79	27.1	1.49	31.6	2.21	33.9	2.57	38.4	3.29	42.9	3.98	47.5	4.67
		20.0	22.6	0.81	27.1	1.52	31.6	2.24	33.9	2.61	38.4	3.33	42.9	4.03	47.5	4.70
		25.0	22.6	0.87	27.1	1.57	31.6	2.29	33.9	2.66	38.4	3.38	42.9	4.09	47.5	4.83
		30.0	22.6	1.01	27.1	1.67	31.6	2.40	33.9	2.82	38.4	3.68	42.9	4.54	47.5	5.36
		35.0	22.6	4.26	27.1	4.71	31.6	5.23	33.9	5.57	38.4	6.25	42.9	6.92	47.5	7.58
		40.0	22.6	5.39	27.1	6.01	31.6	6.51	33.9	6.72	38.4	7.08	42.9	7.36	47.5	7.58
		43.0	22.6	6.11	27.1	6.83	31.6	7.43	33.9	7.68	38.4	8.13	42.9	8.48	47.5	8.74
		46.0	22.6	7.59	27.1	8.27	31.6	8.86	33.9	9.12	38.4	9.57	42.9	9.94	47.5	10.23
52.0	22.6	8.88	27.1	9.77	31.6	10.55	33.9	10.90	38.4	11.24	42.9	11.42	47.5	11.50		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-34. 40HP (Heating) U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	95.0	37.05	92.6	36.37	87.6	34.90	85.0	34.13	77.2	31.67	71.8	29.90	57.6	24.97
		-19.8	-20.0	99.8	37.92	97.2	37.20	92.0	35.68	89.4	34.88	81.2	32.32	75.5	30.48	60.7	25.39
		-14.7	-15.0	106.6	39.23	103.9	38.45	98.4	36.84	95.6	35.99	86.9	33.30	80.9	31.35	65.0	26.02
		-9.6	-10.0	115.7	41.06	112.8	40.23	106.9	38.47	103.9	37.55	94.5	34.63	87.9	32.55	70.7	26.85
		-4.4	-5.0	127.6	43.42	124.4	42.42	117.8	40.35	114.5	39.54	104.1	36.31	96.9	34.03	77.9	27.89
		-1.8	-2.5	134.6	45.01	131.2	44.00	124.3	41.91	120.7	40.83	109.8	37.43	102.2	35.04	80.0	27.72
		0.8	0.0	140.8	45.36	138.8	45.19	131.5	43.02	127.0	41.51	112.9	36.70	103.5	33.58	80.0	26.04
		2.8	2.0	145.8	44.52	141.1	42.96	131.7	39.91	127.0	38.41	112.9	34.00	103.5	31.15	80.0	24.25
		6.0	5.0	145.8	39.13	141.1	37.80	131.7	35.19	127.0	33.90	112.9	30.12	103.5	27.61	80.0	21.64
		7.0	6.0	145.8	37.40	141.1	36.14	131.7	33.67	127.0	32.40	112.9	28.81	103.5	26.48	80.0	20.82
		8.6	7.5	145.8	34.79	141.1	33.63	131.7	31.37	127.0	30.25	112.9	26.97	103.5	24.83	80.0	19.62
		11.2	10.0	145.8	30.74	141.1	29.77	131.7	27.85	127.0	26.90	112.9	24.10	103.5	22.27	80.0	17.75
		16.4	15.0	145.8	23.65	141.1	22.97	131.7	21.62	127.0	20.94	112.9	18.91	103.5	17.56	80.0	14.15
		24.0	18.0	145.8	19.57	141.1	19.01	131.7	17.87	127.0	17.30	112.9	15.59	103.5	14.44	80.0	11.57

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	95.0	37.05	92.6	36.37	87.6	34.90	85.0	34.13	77.2	31.67	71.8	29.90	57.6	24.97
		-19.8	-20.0	99.8	37.92	97.2	37.20	92.0	35.68	89.4	34.88	81.2	32.32	75.5	30.48	60.7	25.39
		-14.7	-15.0	106.6	39.23	103.9	38.45	98.4	36.84	95.6	35.99	86.9	33.30	80.9	31.35	65.0	26.02
		-9.6	-10.0	115.7	41.06	112.8	40.23	106.9	38.47	103.9	37.55	94.5	34.63	87.9	32.55	70.7	26.85
		-4.4	-5.0	127.6	43.42	124.4	42.42	117.8	40.35	114.3	39.54	101.6	33.76	93.1	31.18	72.0	24.76
		-1.8	-2.5	131.2	39.94	127.0	38.75	118.5	36.37	114.3	35.18	101.6	31.63	93.1	29.26	72.0	23.33
		0.8	0.0	131.2	36.89	127.0	35.82	118.5	33.67	114.3	32.60	101.6	29.38	93.1	27.22	72.0	21.81
		2.8	2.0	131.2	33.85	127.0	32.90	118.5	30.98	114.3	30.02	101.6	27.13	93.1	25.20	72.0	20.43
		6.0	5.0	131.2	29.72	127.0	28.99	118.5	27.50	114.3	26.74	101.6	24.37	93.1	22.69	72.0	18.34
		7.0	6.0	131.2	28.97	127.0	28.17	118.5	26.57	114.3	25.76	101.6	23.35	93.1	21.73	72.0	17.63
		8.6	7.5	131.2	26.83	127.0	26.12	118.5	24.69	114.3	23.97	101.6	21.80	93.1	20.33	72.0	16.60
		11.2	10.0	131.2	23.49	127.0	22.91	118.5	21.76	114.3	21.17	101.6	19.38	93.1	18.16	72.0	14.99
		16.4	15.0	131.2	17.61	127.0	17.25	118.5	16.51	114.3	16.13	101.6	14.94	93.1	14.09	72.0	11.82
		24.0	18.0	131.2	16.83	127.0	16.38	118.5	15.47	114.3	15.02	101.6	13.66	93.1	12.76	72.0	10.49

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	95.0	37.05	92.6	36.37	87.6	34.90	85.0	34.13	77.2	31.67	71.8	29.90	57.6	24.97
		-19.8	-20.0	99.8	37.92	97.2	37.20	92.0	35.68	89.4	34.88	81.2	32.32	75.5	30.48	60.7	25.39
		-14.7	-15.0	106.6	39.23	103.9	38.45	98.4	36.84	95.6	35.99	86.9	33.30	80.9	31.35	64.0	26.02
		-9.6	-10.0	115.7	41.06	112.8	40.23	105.4	34.26	101.6	33.29	90.3	30.30	82.8	28.24	64.0	22.87
		-4.4	-5.0	116.7	32.76	112.9	31.98	105.4	30.38	101.6	29.56	90.3	27.04	82.8	25.30	64.0	20.73
		-1.8	-2.5	116.7	30.40	112.9	29.70	105.4	28.27	101.6	27.54	90.3	25.26	82.8	23.69	64.0	19.59
		0.8	0.0	116.7	27.87	112.9	27.32	105.4	26.15	101.6	25.54	90.3	23.59	82.8	22.20	64.0	18.43
		2.8	2.0	116.7	25.84	112.9	25.35	105.4	24.30	101.6	23.74	90.3	21.98	82.8	20.72	64.0	17.27
		6.0	5.0	116.7	22.96	112.9	22.54	105.4	21.65	101.6	21.18	90.3	19.66	82.8	18.54	64.0	15.45
		7.0	6.0	116.7	22.17	112.9	21.72	105.4	20.79	101.6	20.30	90.3	18.79	82.8	17.73	64.0	14.87
		8.6	7.5	116.7	20.41	112.9	20.03	105.4	19.23	101.6	18.81	90.3	17.50	82.8	16.56	64.0	14.00
		11.2	10.0	116.7	17.68	112.9	17.40	105.4	16.81	101.6	16.49	90.3	15.47	82.8	14.73	64.0	12.62
		16.4	15.0	116.7	15.27	112.9	14.87	105.4	14.06	101.6	13.66	90.3	12.45	82.8	11.65	64.0	9.88
		24.0	18.0	116.7	15.27	112.9	14.87	105.4	14.06	101.6	13.66	90.3	12.45	82.8	11.65	64.0	9.63

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	95.0	37.05	92.6	36.37	87.6	34.90	85.0	34.13	77.2	31.67	71.8	29.90	56.0	22.30
		-19.8	-20.0	99.8	37.92	97.2	37.20	92.0	35.68	88.9	30.75	79.0	27.96	72.4	26.20	56.0	21.48
		-14.7	-15.0	102.1	31.41	98.8	30.78	92.2	29.46	88.9	28.77	79.0	26.58	72.4	25.00	56.0	20.55
		-9.6	-10.0	102.1	28.37	98.8	27.84	92.2	26.72	88.9	26.13	79.0	24.24	72.4	22.94	56.0	19.26
		-4.4	-5.0	102.1	25.12	98.8	24.73	92.2	23.86	88.9	23.40	79.0	21.87	72.4	20.73	56.0	17.51
		-1.8	-2.5	102.1	23.47	98.8	23.12	92.2	22.35	88.9	21.93	79.0	20.54	72.4	19.51	56.0	16.55
		0.8	0.0	102.1	21.74	98.8	21.44	92.2	20.76	88.9	20.39	79.0	19.16	72.4	18.23	56.0	15.55
		2.8	2.0	102.1	20.04	98.8	19.78	92.2	19.20	88.9	18.88	79.0	17.80	72.4	16.97	56.0	14.55
		6.0	5.0	102.1	17.59	98.8	17.39	92.2	16.94	88.9	16.68	79.0	15.76	72.4	15.06	56.0	12.92
		7.0	6.0	102.1	16.76	98.8	16.56	92.2	16.11	88.9	15.86	79.0	15.03	72.4	14.39	56.0	12.49
		8.6	7.5	102.1	15.35	98.8	15.19	92.2	14.84	88.9	14.65	79.0	13.96	72.4	13.41	56.0	11.75
		11.2	10.0	102.1	13.71	98.8	13.36	92.2	12.91	88.9	12.78	79.0	12.30	72.4	11.90	56.0	10.59
		16.4	15.0	102.1	13.71	98.8	13.36	92.2	12.65	88.9	12.30	79.0	11.24	72.4	10.54	56.0	8.78
		24.0	18.0	102.1	13.71	98.8	13.36	92.2	12.65	88.9	12.30	79.0	11.24	72.4	10.54	56.0	8.78

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

40HP (Heating) U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	87.5	27.58	84.7	27.14	79.0	26.19	76.2	25.67	67.7	23.91	62.1	22.49	48.0	18.71
		-19.8	-20.0	87.5	26.01	84.7	25.64	79.0	24.82	76.2	24.38	67.7	22.88	62.1	21.74	48.0	18.08
		-14.7	-15.0	87.5	24.30	84.7	23.97	79.0	23.25	76.2	22.84	67.7	21.49	62.1	20.46	48.0	17.45
		-9.6	-10.0	87.5	22.18	84.7	21.91	79.0	21.31	76.2	20.96	67.7	19.79	62.1	18.88	48.0	16.20
		-4.4	-5.0	87.5	19.69	84.7	19.48	79.0	19.00	76.2	18.73	67.7	17.77	62.1	17.01	48.0	14.71
		-1.8	-2.5	87.5	18.32	84.7	18.14	79.0	17.74	76.2	17.50	67.7	16.65	62.1	15.98	48.0	13.90
		0.8	0.0	87.5	16.88	84.7	16.75	79.0	16.42	76.2	16.22	67.7	15.50	62.1	14.90	48.0	13.05
		2.8	2.0	87.5	15.47	84.7	15.37	79.0	15.12	76.2	14.96	67.7	14.36	62.1	13.85	48.0	12.19
		6.0	5.0	87.5	13.34	84.7	13.27	79.0	13.10	76.2	12.99	67.7	12.55	62.1	12.16	48.0	10.78
		7.0	6.0	87.5	12.58	84.7	12.54	79.0	12.41	76.2	12.32	67.7	11.95	62.1	11.61	48.0	10.44
		8.6	7.5	87.5	12.15	84.7	11.85	79.0	11.42	76.2	11.36	67.7	11.09	62.1	10.83	48.0	9.84
		11.2	10.0	87.5	12.15	84.7	11.85	79.0	11.24	76.2	10.94	67.7	10.04	62.1	9.61	48.0	8.87
		16.4	15.0	87.5	12.15	84.7	11.85	79.0	11.24	76.2	10.94	67.7	10.04	62.1	9.43	48.0	7.92
		24.0	18.0	87.5	12.15	84.7	11.85	79.0	11.24	76.2	10.94	67.7	10.04	62.1	9.43	48.0	7.92

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	72.9	21.60	70.6	21.36	65.9	20.80	63.5	20.49	56.4	19.41	51.7	18.56	40.0	15.69
		-19.8	-20.0	72.9	20.52	70.6	20.31	65.9	19.81	63.5	19.53	56.4	18.54	51.7	17.75	40.0	15.30
		-14.7	-15.0	72.9	19.11	70.6	18.93	65.9	18.51	63.5	18.27	56.4	17.39	51.7	16.68	40.0	14.51
		-9.6	-10.0	72.9	17.37	70.6	17.24	65.9	16.91	63.5	16.71	56.4	15.98	51.7	15.38	40.0	13.47
		-4.4	-5.0	72.9	15.34	70.6	15.25	65.9	15.02	63.5	14.88	56.4	14.32	51.7	13.83	40.0	12.24
		-1.8	-2.5	72.9	14.22	70.6	14.17	65.9	14.00	63.5	13.88	56.4	13.41	51.7	12.99	40.0	11.57
		0.8	0.0	72.9	13.06	70.6	13.03	65.9	12.92	63.5	12.84	56.4	12.47	51.7	12.11	40.0	10.85
		2.8	2.0	72.9	11.88	70.6	11.87	65.9	11.80	63.5	11.74	56.4	11.44	51.7	11.15	40.0	10.09
		6.0	5.0	72.9	10.59	70.6	10.34	65.9	10.08	63.5	10.07	56.4	9.94	51.7	9.77	40.0	8.97
		7.0	6.0	72.9	10.59	70.6	10.34	65.9	9.84	63.5	9.58	56.4	9.48	51.7	9.34	40.0	8.68
		8.6	7.5	72.9	10.59	70.6	10.34	65.9	9.84	63.5	9.58	56.4	8.83	51.7	8.72	40.0	8.20
		11.2	10.0	72.9	10.59	70.6	10.34	65.9	9.84	63.5	9.58	56.4	8.83	51.7	8.32	40.0	7.43
		16.4	15.0	72.9	10.59	70.6	10.34	65.9	9.84	63.5	9.58	56.4	8.83	51.7	8.32	40.0	7.07
		24.0	18.0	72.9	10.59	70.6	10.34	65.9	9.84	63.5	9.58	56.4	8.83	51.7	8.32	40.0	7.07

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	58.3	16.77	56.4	16.64	52.7	16.32	50.8	16.13	45.2	15.43	41.4	14.85	32.0	12.91
		-19.8	-20.0	58.3	15.91	56.4	15.80	52.7	15.53	50.8	15.36	45.2	14.73	41.4	14.20	32.0	12.51
		-14.7	-15.0	58.3	14.79	56.4	14.71	52.7	14.49	50.8	14.36	45.2	13.82	41.4	13.36	32.0	11.84
		-9.6	-10.0	58.3	13.43	56.4	13.38	52.7	13.23	50.8	13.12	45.2	12.70	41.4	12.32	32.0	11.00
		-4.4	-5.0	58.3	11.83	56.4	11.82	52.7	11.75	50.8	11.68	45.2	11.39	41.4	11.09	32.0	10.02
		-1.8	-2.5	58.3	10.93	56.4	10.94	52.7	10.90	50.8	10.86	45.2	10.62	41.4	10.37	32.0	9.44
		0.8	0.0	58.3	9.90	56.4	9.93	52.7	9.95	50.8	9.94	45.2	9.79	41.4	9.61	32.0	8.84
		2.8	2.0	58.3	9.03	56.4	8.96	52.7	9.02	50.8	9.03	45.2	8.98	41.4	8.86	32.0	8.26
		6.0	5.0	58.3	9.03	56.4	8.83	52.7	8.43	50.8	8.22	45.2	7.85	41.4	7.81	32.0	7.42
		7.0	6.0	58.3	9.03	56.4	8.83	52.7	8.43	50.8	8.22	45.2	7.62	41.4	7.49	32.0	7.17
		8.6	7.5	58.3	9.03	56.4	8.83	52.7	8.43	50.8	8.22	45.2	7.62	41.4	7.22	32.0	6.80
		11.2	10.0	58.3	9.03	56.4	8.83	52.7	8.43	50.8	8.22	45.2	7.62	41.4	7.22	32.0	6.21
		16.4	15.0	58.3	9.03	56.4	8.83	52.7	8.43	50.8	8.22	45.2	7.62	41.4	7.22	32.0	6.21
		24.0	18.0	58.3	9.03	56.4	8.83	52.7	8.43	50.8	8.22	45.2	7.62	41.4	7.22	32.0	6.21

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	43.7	12.60	42.3	12.55	39.5	12.39	38.1	12.28	33.9	11.85	31.0	11.48	24.0	10.23
		-19.8	-20.0	43.7	11.97	42.3	11.92	39.5	11.79	38.1	11.70	33.9	11.33	31.0	11.00	24.0	9.87
		-14.7	-15.0	43.7	11.14	42.3	11.11	39.5	11.02	38.1	10.95	33.9	10.65	31.0	10.37	24.0	9.36
		-9.6	-10.0	43.7	10.08	42.3	10.08	39.5	10.03	38.1	9.99	33.9	9.77	31.0	9.54	24.0	8.71
		-4.4	-5.0	43.7	8.78	42.3	8.81	39.5	8.84	38.1	8.83	33.9	8.72	31.0	8.57	24.0	7.93
		-1.8	-2.5	43.7	8.08	42.3	8.12	39.5	8.18	38.1	8.20	33.9	8.15	31.0	8.04	24.0	7.51
		0.8	0.0	43.7	7.47	42.3	7.43	39.5	7.51	38.1	7.54	33.9	7.55	31.0	7.49	24.0	7.08
		2.8	2.0	43.7	7.47	42.3	7.32	39.5	7.02	38.1	6.92	33.9	6.97	31.0	6.95	24.0	6.65
		6.0	5.0	43.7	7.47	42.3	7.32	39.5	7.02	38.1	6.86	33.9	6.41	31.0	6.21	24.0	6.05
		7.0	6.0	43.7	7.47	42.3	7.32	39.5	7.02	38.1	6.86	33.9	6.41	31.0	6.11	24.0	5.87
		8.6	7.5	43.7	7.47	42.3	7.32	39.5	7.02	38.1	6.86	33.9	6.41	31.0	6.11	24.0	5.60
		11.2	10.0	43.7	7.47	42.3	7.32	39.5	7.02	38.1	6.86	33.9	6.41	31.0	6.11	24.0	5.35
		16.4	15.0	43.7	7.47	42.3	7.32	39.5	7.02	38.1	6.86	33.9	6.41	31.0	6.11	24.0	5.35
		24.0	18.0	43.7	7.47	42.3	7.32	39.5	7.02	38.1	6.86	33.9	6.41	31.0	6.11	24.0	5.35

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-35. 42HP (Cooling) U-10ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	78.7	8.87	94.4	10.64	110.1	12.42	118.0	13.30	133.7	15.08	149.5	16.86	165.2	18.63
		-5.0	78.7	8.88	94.4	10.66	110.1	12.43	118.0	13.32	133.7	15.10	149.5	16.87	165.2	18.64
		0.0	78.7	8.90	94.4	10.68	110.1	12.45	118.0	13.34	133.7	15.12	149.5	16.90	165.2	18.68
		5.0	78.7	8.92	94.4	10.70	110.1	12.48	118.0	13.38	133.7	15.18	149.5	17.01	165.2	18.81
		10.0	78.7	8.95	94.4	10.75	110.1	12.59	118.0	13.53	133.7	15.41	149.5	17.31	165.2	19.16
		15.0	78.7	9.11	94.4	11.05	110.1	13.04	118.0	14.05	133.7	16.08	149.5	18.13	165.2	20.02
		20.0	78.7	10.10	94.4	12.35	110.1	14.98	118.0	16.40	133.7	19.46	149.5	22.82	165.2	26.47
		25.0	78.7	12.93	94.4	16.01	110.1	19.39	118.0	21.20	133.7	25.04	149.5	29.19	165.2	33.64
		30.0	78.7	16.25	94.4	20.07	110.1	24.22	118.0	26.42	133.7	31.06	149.5	36.03	165.2	41.34
		35.0	78.7	19.81	94.4	24.44	110.1	29.41	118.0	32.03	133.7	37.53	149.5	43.41	165.2	44.80
		40.0	78.7	23.66	94.4	29.14	110.1	35.00	118.0	38.07	133.7	44.53	149.5	47.79	165.2	44.79
		43.0	78.7	26.10	94.4	32.12	110.1	38.56	118.0	41.95	127.6	44.79	133.6	44.79	136.7	42.65
		46.0	77.9	28.39	93.5	34.95	99.3	35.56	100.3	34.60	103.0	33.01	106.4	31.75	110.5	30.76
52.0	34.0	12.05	37.0	12.18	40.5	12.41	42.5	12.55	46.8	12.89	51.6	13.26	56.8	13.66		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	70.8	7.17	85.0	8.99	99.1	10.77	106.2	11.64	120.4	13.36	134.5	15.03	148.7	16.67
		-5.0	70.8	7.18	85.0	9.01	99.1	10.79	106.2	11.66	120.4	13.37	134.5	15.05	148.7	16.69
		0.0	70.8	7.20	85.0	9.02	99.1	10.80	106.2	11.68	120.4	13.39	134.5	15.07	148.7	16.71
		5.0	70.8	7.22	85.0	9.05	99.1	10.83	106.2	11.70	120.4	13.42	134.5	15.11	148.7	16.77
		10.0	70.8	7.25	85.0	9.08	99.1	10.87	106.2	11.76	120.4	13.52	134.5	15.25	148.7	16.96
		15.0	70.8	7.32	85.0	9.22	99.1	11.11	106.2	12.04	120.4	13.88	134.5	15.69	148.7	17.46
		20.0	70.8	7.91	85.0	10.02	99.1	12.09	106.2	13.09	120.4	15.06	134.5	17.33	148.7	19.75
		25.0	70.8	10.42	85.0	12.94	99.1	15.55	106.2	16.88	120.4	19.62	134.5	22.43	148.7	25.31
		30.0	70.8	13.50	85.0	16.55	99.1	19.65	106.2	21.23	120.4	24.42	134.5	27.68	148.7	31.03
		35.0	70.8	17.33	85.0	21.02	99.1	24.75	106.2	26.63	120.4	30.45	134.5	34.37	148.7	38.43
		40.0	70.8	20.73	85.0	24.96	99.1	29.23	106.2	31.39	120.4	35.80	134.5	40.40	145.8	44.79
		43.0	70.8	22.83	85.0	27.40	99.1	32.02	106.2	34.37	120.4	39.22	133.6	44.79	136.7	42.65
		46.0	70.8	24.46	85.0	29.72	99.1	35.23	100.3	34.60	103.0	33.01	106.4	31.75	110.5	30.76
52.0	34.0	12.05	37.0	12.18	40.5	12.41	42.5	12.55	46.8	12.89	51.6	13.26	56.8	13.66		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	62.9	6.15	75.5	7.80	88.1	9.41	94.4	10.20	107.0	11.76	119.6	13.29	132.2	14.79
		-5.0	62.9	6.16	75.5	7.81	88.1	9.42	94.4	10.22	107.0	11.78	119.6	13.31	132.2	14.81
		0.0	62.9	6.17	75.5	7.82	88.1	9.44	94.4	10.23	107.0	11.80	119.6	13.33	132.2	14.82
		5.0	62.9	6.19	75.5	7.84	88.1	9.46	94.4	10.26	107.0	11.82	119.6	13.35	132.2	14.85
		10.0	62.9	6.21	75.5	7.87	88.1	9.49	94.4	10.28	107.0	12.18	119.6	13.40	132.2	14.92
		15.0	62.9	6.25	75.5	7.92	88.1	9.57	94.4	10.39	107.0	12.01	119.6	13.60	132.2	15.16
		20.0	62.9	6.51	75.5	8.30	88.1	10.05	94.4	10.92	107.0	12.61	119.6	14.25	132.2	15.86
		25.0	62.9	8.41	75.5	10.31	88.1	12.25	94.4	13.23	107.0	15.22	119.6	17.23	132.2	19.27
		30.0	62.9	11.10	75.5	13.47	88.1	15.85	94.4	17.05	107.0	19.44	119.6	21.84	132.2	24.25
		35.0	62.9	14.46	75.5	17.40	88.1	20.31	94.4	21.76	107.0	24.66	119.6	27.55	132.2	30.45
		40.0	62.9	17.48	75.5	20.88	88.1	24.24	94.4	25.91	107.0	29.25	119.6	32.59	132.2	35.97
		43.0	62.9	19.35	75.5	23.04	88.1	26.68	94.4	28.50	107.0	32.12	119.6	35.79	132.2	39.54
		46.0	62.9	20.66	75.5	24.75	88.1	28.95	94.4	31.09	103.0	33.01	106.4	31.75	110.5	30.76
52.0	34.0	12.05	37.0	12.18	40.5	12.41	42.5	12.55	46.8	12.89	51.6	13.26	56.8	13.66		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	55.1	5.10	66.1	6.58	77.1	8.02	82.6	8.73	93.6	10.13	104.6	11.50	115.6	12.85
		-5.0	55.1	5.11	66.1	6.58	77.1	8.03	82.6	8.74	93.6	10.14	104.6	11.51	115.6	12.86
		0.0	55.1	5.12	66.1	6.60	77.1	8.04	82.6	8.75	93.6	10.15	104.6	11.53	115.6	12.87
		5.0	55.1	5.14	66.1	6.61	77.1	8.06	82.6	8.77	93.6	10.17	104.6	11.55	115.6	12.90
		10.0	55.1	5.16	66.1	6.64	77.1	8.09	82.6	8.80	93.6	10.20	104.6	11.57	115.6	12.92
		15.0	55.1	5.20	66.1	6.67	77.1	8.12	82.6	8.83	93.6	10.24	104.6	11.63	115.6	13.00
		20.0	55.1	5.28	66.1	6.80	77.1	8.30	82.6	9.04	93.6	10.50	104.6	11.92	115.6	13.31
		25.0	55.1	6.34	66.1	7.91	77.1	9.42	82.6	10.16	93.6	11.59	104.6	12.99	115.6	14.35
		30.0	55.1	8.91	66.1	10.69	77.1	12.44	82.6	13.30	93.6	15.01	104.6	16.68	115.6	18.33
		35.0	55.1	11.81	66.1	14.07	77.1	16.28	82.6	17.36	93.6	19.48	104.6	21.55	115.6	23.59
		40.0	55.1	14.45	66.1	17.12	77.1	19.70	82.6	20.96	93.6	23.44	104.6	25.86	115.6	28.22
		43.0	55.1	16.08	66.1	18.99	77.1	21.81	82.6	23.19	93.6	25.89	104.6	28.53	115.6	31.13
		46.0	55.1	17.22	66.1	20.33	77.1	23.44	82.6	25.00	93.6	28.12	104.6	30.13	110.5	30.76
52.0	34.0	12.05	37.0	12.18	40.5	12.41	42.5	12.55	46.8	12.89	51.6	13.26	56.8	13.66		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

42HP (Cooling) U-10ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	47.2	4.04	56.6	5.33	66.1	6.59	70.8	7.21	80.2	8.44	89.7	9.65	99.1	10.83
		-5.0	47.2	4.05	56.6	5.34	66.1	6.60	70.8	7.22	80.2	8.45	89.7	9.66	99.1	10.84
		0.0	47.2	4.06	56.6	5.35	66.1	6.61	70.8	7.23	80.2	8.46	89.7	9.67	99.1	10.86
		5.0	47.2	4.07	56.6	5.36	66.1	6.62	70.8	7.25	80.2	8.48	89.7	9.69	99.1	10.87
		10.0	47.2	4.09	56.6	5.38	66.1	6.65	70.8	7.27	80.2	8.50	89.7	9.71	99.1	10.90
		15.0	47.2	4.12	56.6	5.41	66.1	6.68	70.8	7.30	80.2	8.53	89.7	9.74	99.1	10.92
		20.0	47.2	4.17	56.6	5.46	66.1	6.73	70.8	7.35	80.2	8.60	89.7	9.82	99.1	11.02
		25.0	47.2	4.54	56.6	5.87	66.1	7.16	70.8	7.79	80.2	9.03	89.7	10.25	99.1	11.44
		30.0	47.2	6.93	56.6	8.21	66.1	9.42	70.8	10.01	80.2	11.14	89.7	12.22	99.1	13.25
		35.0	47.2	9.37	56.6	11.04	66.1	12.63	70.8	13.39	80.2	14.86	89.7	16.26	99.1	17.60
		40.0	47.2	11.63	56.6	13.65	66.1	15.57	70.8	16.48	80.2	18.25	89.7	19.93	99.1	21.54
		43.0	47.2	13.03	56.6	15.26	66.1	17.37	70.8	18.38	80.2	20.33	89.7	22.18	99.1	23.95
46.0	47.2	14.13	56.6	16.42	66.1	18.64	70.8	19.74	80.2	21.88	89.7	23.97	99.1	26.02		
52.0	34.0	12.05	37.0	12.18	40.5	12.41	42.5	12.55	46.8	12.89	51.6	13.26	56.8	13.66		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	39.3	2.96	47.2	4.06	55.1	5.13	59.0	5.66	66.9	6.71	74.7	7.74	82.6	8.75
		-5.0	39.3	2.97	47.2	4.06	55.1	5.14	59.0	5.67	66.9	6.72	74.7	7.75	82.6	8.76
		0.0	39.3	2.98	47.2	4.07	55.1	5.14	59.0	5.68	66.9	6.72	74.7	7.76	82.6	8.77
		5.0	39.3	2.99	47.2	4.08	55.1	5.16	59.0	5.69	66.9	6.74	74.7	7.77	82.6	8.78
		10.0	39.3	3.00	47.2	4.10	55.1	5.17	59.0	5.70	66.9	6.75	74.7	7.78	82.6	8.80
		15.0	39.3	3.02	47.2	4.12	55.1	5.19	59.0	5.73	66.9	6.78	74.7	7.81	82.6	8.82
		20.0	39.3	3.06	47.2	4.16	55.1	5.23	59.0	5.76	66.9	6.81	74.7	7.84	82.6	8.85
		25.0	39.3	3.16	47.2	4.26	55.1	5.33	59.0	5.87	66.9	6.92	74.7	7.95	82.6	8.96
		30.0	39.3	5.18	47.2	5.98	55.1	6.58	59.0	6.95	66.9	7.78	74.7	8.66	82.6	9.56
		35.0	39.3	7.16	47.2	8.32	55.1	9.39	59.0	9.89	66.9	10.83	74.7	11.68	82.6	12.46
		40.0	39.3	9.04	47.2	10.49	55.1	11.83	59.0	12.46	66.9	13.64	74.7	14.72	82.6	15.71
		43.0	39.3	10.20	47.2	11.83	55.1	13.33	59.0	14.03	66.9	15.36	74.7	16.58	82.6	17.71
46.0	39.3	11.37	47.2	12.98	55.1	14.50	59.0	15.23	66.9	16.62	74.7	17.94	82.6	19.17		
52.0	34.0	12.05	37.0	12.18	40.5	12.41	42.5	12.55	46.8	12.89	51.6	13.26	56.8	13.66		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	31.5	1.87	37.8	2.75	44.1	3.63	47.2	4.06	53.5	4.92	59.8	5.77	66.1	6.60
		-5.0	31.5	1.87	37.8	2.76	44.1	3.64	47.2	4.07	53.5	4.93	59.8	5.78	66.1	6.61
		0.0	31.5	1.88	37.8	2.77	44.1	3.64	47.2	4.08	53.5	4.93	59.8	5.78	66.1	6.62
		5.0	31.5	1.88	37.8	2.77	44.1	3.65	47.2	4.09	53.5	4.94	59.8	5.79	66.1	6.63
		10.0	31.5	1.89	37.8	2.78	44.1	3.66	47.2	4.10	53.5	4.96	59.8	5.81	66.1	6.65
		15.0	31.5	1.91	37.8	2.80	44.1	3.68	47.2	4.11	53.5	4.97	59.8	5.82	66.1	6.67
		20.0	31.5	1.94	37.8	2.83	44.1	3.71	47.2	4.14	53.5	5.00	59.8	5.85	66.1	6.70
		25.0	31.5	2.00	37.8	2.88	44.1	3.76	47.2	4.19	53.5	5.04	59.8	5.89	66.1	6.74
		30.0	31.5	2.69	37.8	3.29	44.1	4.03	47.2	4.42	53.5	5.22	59.8	6.10	66.1	7.04
		35.0	31.5	5.17	37.8	5.93	44.1	6.58	47.2	6.88	53.5	7.40	59.8	8.05	66.1	8.88
		40.0	31.5	6.67	37.8	7.65	44.1	8.51	47.2	8.90	53.5	9.60	59.8	10.21	66.1	10.73
		43.0	31.5	7.59	37.8	8.71	44.1	9.70	47.2	10.16	53.5	10.97	59.8	11.69	66.1	12.31
46.0	31.5	8.91	37.8	9.99	44.1	10.96	47.2	11.42	53.5	12.25	59.8	12.99	66.1	13.65		
52.0	31.5	10.65	37.0	12.18	40.5	12.41	42.5	12.55	46.8	12.89	51.6	13.26	56.8	13.66		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	23.6	0.75	28.3	1.43	33.0	2.10	35.4	2.44	40.1	3.10	44.8	3.76	49.6	4.41
		-5.0	23.6	0.75	28.3	1.43	33.0	2.11	35.4	2.44	40.1	3.11	44.8	3.77	49.6	4.41
		0.0	23.6	0.76	28.3	1.43	33.0	2.11	35.4	2.45	40.1	3.12	44.8	3.78	49.6	4.43
		5.0	23.6	0.76	28.3	1.44	33.0	2.12	35.4	2.46	40.1	3.13	44.8	3.79	49.6	4.44
		10.0	23.6	0.77	28.3	1.45	33.0	2.13	35.4	2.47	40.1	3.14	44.8	3.81	49.6	4.46
		15.0	23.6	0.78	28.3	1.46	33.0	2.14	35.4	2.49	40.1	3.16	44.8	3.83	49.6	4.48
		20.0	23.6	0.80	28.3	1.48	33.0	2.16	35.4	2.51	40.1	3.19	44.8	3.86	49.6	4.51
		25.0	23.6	0.84	28.3	1.51	33.0	2.20	35.4	2.55	40.1	3.23	44.8	3.92	49.6	4.61
		30.0	23.6	0.94	28.3	1.59	33.0	2.28	35.4	2.67	40.1	3.47	44.8	4.25	49.6	5.00
		35.0	23.6	3.42	28.3	3.86	33.0	4.37	35.4	4.70	40.1	5.36	44.8	6.01	49.6	6.65
		40.0	23.6	4.53	28.3	5.12	33.0	5.61	35.4	5.82	40.1	6.17	44.8	6.44	49.6	6.65
		43.0	23.6	5.22	28.3	5.92	33.0	6.50	35.4	6.75	40.1	7.18	44.8	7.52	49.6	7.78
46.0	23.6	6.74	28.3	7.40	33.0	7.97	35.4	8.21	40.1	8.65	44.8	9.00	49.6	9.28		
52.0	23.6	7.98	28.3	8.84	33.0	9.59	35.4	9.93	40.1	10.26	44.8	10.44	49.6	10.51		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-36. 42HP (Heating) U-10ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	93.1	31.81	90.8	31.27	86.1	30.11	83.6	29.48	76.2	27.48	71.0	26.01	57.4	21.86
		-19.8	-20.0	97.6	32.47	95.2	31.90	90.3	30.69	87.8	30.04	80.1	27.98	74.7	26.47	60.4	22.20
		-14.7	-15.0	104.0	33.46	101.5	32.86	96.3	31.58	93.7	30.92	85.5	28.75	79.8	27.17	64.7	22.73
		-9.6	-10.0	112.8	34.76	110.1	34.25	104.5	32.88	101.7	32.17	92.9	29.84	86.8	28.17	70.4	23.45
		-4.4	-5.0	124.2	36.83	121.3	36.16	115.2	34.72	112.1	33.95	102.4	31.41	95.6	29.56	77.5	24.41
		-1.8	-2.5	131.1	37.57	127.9	36.87	121.5	35.40	118.2	34.61	108.0	32.04	100.9	30.17	81.7	24.92
		0.8	0.0	138.6	38.19	135.4	37.47	128.6	35.93	125.1	35.11	114.3	32.45	106.7	30.53	83.1	23.79
		2.8	2.0	146.8	38.76	143.3	37.99	136.2	36.39	132.0	35.31	117.3	31.18	107.6	28.50	83.1	22.05
		6.0	5.0	151.6	35.73	146.7	34.49	136.9	32.06	132.0	30.86	117.3	27.35	107.6	25.04	83.1	19.51
		7.0	6.0	151.6	33.99	146.7	32.83	136.9	30.54	132.0	29.40	117.3	26.08	107.6	23.93	83.1	18.70
		8.6	7.5	151.6	31.43	146.7	30.37	136.9	28.29	132.0	27.27	117.3	24.26	107.6	22.30	83.1	17.53
		11.2	10.0	151.6	27.38	146.7	26.50	136.9	24.78	132.0	23.93	117.3	21.42	107.6	19.77	83.1	15.71
		16.4	15.0	151.6	20.32	146.7	19.76	136.9	18.64	132.0	18.08	117.3	16.38	107.6	15.23	83.1	12.30
		24.0	18.0	151.6	16.71	146.7	16.23	136.9	15.28	132.0	14.80	117.3	13.40	107.6	12.45	83.1	10.01

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	90%	-24.9	-25.0	93.1	31.81	90.8	31.27	86.1	30.11	83.6	29.48	76.2	27.48	71.0	26.01	57.4	21.86
		-19.8	-20.0	97.6	32.47	95.2	31.90	90.3	30.69	87.8	30.04	80.1	27.98	74.7	26.47	60.4	22.20
		-14.7	-15.0	104.0	33.46	101.5	32.86	96.3	31.58	93.7	30.92	85.5	28.75	79.8	27.17	64.7	22.73
		-9.6	-10.0	112.8	34.76	110.1	34.25	104.5	32.88	101.7	32.17	92.9	29.84	86.8	28.17	70.4	23.45
		-4.4	-5.0	124.2	36.83	121.3	36.16	115.2	34.72	112.1	33.95	102.4	31.41	95.6	29.56	74.8	22.68
		-1.8	-2.5	131.1	37.57	127.9	36.87	121.5	35.40	118.2	34.61	105.6	29.09	96.8	26.86	74.8	21.28
		0.8	0.0	136.4	33.95	132.0	32.94	123.2	30.92	118.8	29.91	105.6	26.89	96.8	24.87	74.8	19.80
		2.8	2.0	136.4	30.95	132.0	30.06	123.2	28.27	118.8	27.38	105.6	24.65	96.8	22.96	74.8	18.55
		6.0	5.0	136.4	26.85	132.0	26.22	123.2	24.92	118.8	24.24	105.6	22.13	96.8	20.55	74.8	16.49
		7.0	6.0	136.4	26.33	132.0	25.58	123.2	24.09	118.8	23.35	105.6	21.10	96.8	19.60	74.8	15.79
		8.6	7.5	136.4	24.20	132.0	23.54	123.2	22.23	118.8	21.56	105.6	19.57	96.8	18.22	74.8	14.79
		11.2	10.0	136.4	20.85	132.0	20.34	123.2	19.30	118.8	18.78	105.6	17.18	96.8	16.08	74.8	13.22
		16.4	15.0	136.4	15.23	132.0	14.81	123.2	14.22	118.8	13.90	105.6	12.91	96.8	12.20	74.8	10.23
		24.0	18.0	136.4	15.23	132.0	14.80	123.2	13.94	118.8	13.51	105.6	12.21	96.8	11.35	74.8	9.20

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	80%	-24.9	-25.0	93.1	31.81	90.8	31.27	86.1	30.11	83.6	29.48	76.2	27.48	71.0	26.01	57.4	21.86
		-19.8	-20.0	97.6	32.47	95.2	31.90	90.3	30.69	87.8	30.04	80.1	27.98	74.7	26.47	60.4	22.20
		-14.7	-15.0	104.0	33.46	101.5	32.86	96.3	31.58	93.7	30.92	85.5	28.75	79.8	27.17	64.7	22.73
		-9.6	-10.0	112.8	34.76	110.1	34.25	104.5	32.88	101.7	32.17	92.9	29.84	86.0	28.17	66.5	20.93
		-4.4	-5.0	121.2	30.18	117.3	29.44	109.5	27.94	105.6	27.17	93.9	24.79	86.0	23.15	66.5	18.85
		-1.8	-2.5	121.2	27.87	117.3	27.22	109.5	25.88	105.6	25.19	93.9	23.06	86.0	21.59	66.5	17.78
		0.8	0.0	121.2	25.44	117.3	24.82	109.5	23.77	105.6	23.23	93.9	21.45	86.0	20.19	66.5	16.68
		2.8	2.0	121.2	23.38	117.3	22.95	109.5	22.02	105.6	21.53	93.9	19.94	86.0	18.78	66.5	15.59
		6.0	5.0	121.2	20.65	117.3	20.30	109.5	19.53	105.6	19.12	93.9	17.77	86.0	16.73	66.5	13.85
		7.0	6.0	121.2	20.10	117.3	19.67	109.5	18.79	105.6	18.34	93.9	16.93	86.0	15.93	66.5	13.26
		8.6	7.5	121.2	18.35	117.3	17.99	109.5	17.25	105.6	16.87	93.9	15.65	86.0	14.78	66.5	12.41
		11.2	10.0	121.2	15.62	117.3	15.37	109.5	14.85	105.6	14.57	93.9	13.65	86.0	12.98	66.5	11.07
		16.4	15.0	121.2	13.75	117.3	13.36	109.5	12.60	105.6	12.21	93.9	11.06	86.0	10.30	66.5	8.49
		24.0	18.0	121.2	13.75	117.3	13.36	109.5	12.60	105.6	12.21	93.9	11.06	86.0	10.30	66.5	8.38

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	70%	-24.9	-25.0	93.1	31.81	90.8	31.27	86.1	30.11	83.6	29.48	76.2	27.48	71.0	26.01	57.4	21.86
		-19.8	-20.0	97.6	32.47	95.2	31.90	90.3	30.69	87.8	30.04	80.1	27.98	74.7	26.47	58.2	22.20
		-14.7	-15.0	104.0	33.46	101.5	32.86	95.8	31.58	92.4	30.92	82.1	24.46	75.3	22.97	58.2	18.76
		-9.6	-10.0	106.1	26.09	102.7	25.59	95.8	24.53	92.4	23.98	82.1	22.20	75.3	20.92	58.2	17.47
		-4.4	-5.0	106.1	22.79	102.7	22.44	95.8	21.67	92.4	21.26	82.1	19.86	75.3	18.82	58.2	15.82
		-1.8	-2.5	106.1	21.24	102.7	20.94	95.8	20.25	92.4	19.88	82.1	18.61	75.3	17.67	58.2	14.91
		0.8	0.0	106.1	19.62	102.7	19.35	95.8	18.75	92.4	18.42	82.1	17.31	75.3	16.45	58.2	13.96
		2.8	2.0	106.1	18.00	102.7	17.78	95.8	17.28	92.4	16.99	82.1	16.02	75.3	15.26	58.2	13.02
		6.0	5.0	106.1	15.70	102.7	15.54	95.8	15.16	92.4	14.94	82.1	14.15	75.3	13.50	58.2	11.55
		7.0	6.0	106.1	15.10	102.7	14.91	95.8	14.48	92.4	14.25	82.1	13.45	75.3	12.85	58.2	11.06
		8.6	7.5	106.1	13.70	102.7	13.56	95.8	13.23	92.4	13.04	82.1	12.40	75.3	11.89	58.2	10.34
		11.2	10.0	106.1	12.26	102.7	11.93	95.8	11.33	92.4	11.21	82.1	10.77	75.3	10.41	58.2	9.22
		16.4	15.0	106.1	12.26	102.7	11.93	95.8	11.26	92.4	10.92	82.1	9.91	75.3	9.24	58.2	7.57
		24.0	18.0	106.1	12.26	102.7	11.93	95.8	11.26	92.4	10.92	82.1	9.91	75.3	9.24	58.2	7.57

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

42HP (Heating) U-10ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	60%	-24.9	-25.0	90.9	25.44	88.0	25.02	82.1	24.11	79.2	23.62	70.4	21.95	64.5	20.60	49.9	16.99
		-19.8	-20.0	90.9	23.93	88.0	23.56	82.1	22.74	79.2	22.30	70.4	20.85	64.5	19.78	49.9	16.41
		-14.7	-15.0	90.9	22.06	88.0	21.77	82.1	21.12	79.2	20.76	70.4	19.52	64.5	18.57	49.9	15.76
		-9.6	-10.0	90.9	20.07	88.0	19.84	82.1	19.30	79.2	18.99	70.4	17.91	64.5	17.08	49.9	14.58
		-4.4	-5.0	90.9	17.73	88.0	17.55	82.1	17.13	79.2	16.88	70.4	16.01	64.5	15.31	49.9	13.17
		-1.8	-2.5	90.9	16.45	88.0	16.30	82.1	15.94	79.2	15.72	70.4	14.96	64.5	14.34	49.9	12.40
		0.8	0.0	90.9	15.09	88.0	14.98	82.1	14.69	79.2	14.51	70.4	13.86	64.5	13.32	49.9	11.59
		2.8	2.0	90.9	13.75	88.0	13.67	82.1	13.46	79.2	13.32	70.4	12.79	64.5	12.32	49.9	10.79
		6.0	5.0	90.9	11.84	88.0	11.80	82.1	11.68	79.2	11.59	70.4	11.18	64.5	10.80	49.9	9.49
		7.0	6.0	90.9	11.22	88.0	11.17	82.1	11.04	79.2	10.95	70.4	10.59	64.5	10.27	49.9	9.15
		8.6	7.5	90.9	10.78	88.0	10.49	82.1	10.07	79.2	10.01	70.4	9.75	64.5	9.50	49.9	8.56
		11.2	10.0	90.9	10.78	88.0	10.49	82.1	9.91	79.2	9.63	70.4	8.77	64.5	8.32	49.9	7.63
		16.4	15.0	90.9	10.78	88.0	10.49	82.1	9.91	79.2	9.63	70.4	8.77	64.5	8.19	49.9	6.75
		24.0	18.0	90.9	10.78	88.0	10.49	82.1	9.91	79.2	9.63	70.4	8.77	64.5	8.19	49.9	6.75
100%	50%	-24.9	-25.0	75.8	19.59	73.3	19.37	68.4	18.86	66.0	18.58	58.7	17.59	53.8	16.79	41.6	14.11
		-19.8	-20.0	75.8	18.57	73.3	18.38	68.4	17.93	66.0	17.67	58.7	16.75	53.8	16.03	41.6	13.74
		-14.7	-15.0	75.8	17.23	73.3	17.08	68.4	16.70	66.0	16.48	58.7	15.68	53.8	15.02	41.6	12.99
		-9.6	-10.0	75.8	15.60	73.3	15.48	68.4	15.19	66.0	15.01	58.7	14.34	53.8	13.79	41.6	12.00
		-4.4	-5.0	75.8	13.69	73.3	13.62	68.4	13.41	66.0	13.28	58.7	12.77	53.8	12.32	41.6	10.83
		-1.8	-2.5	75.8	12.63	73.3	12.59	68.4	12.44	66.0	12.34	58.7	11.91	53.8	11.52	41.6	10.19
		0.8	0.0	75.8	11.53	73.3	11.51	68.4	11.42	66.0	11.35	58.7	11.02	53.8	10.69	41.6	9.53
		2.8	2.0	75.8	10.45	73.3	10.46	68.4	10.42	66.0	10.38	58.7	10.13	53.8	9.87	41.6	8.86
		6.0	5.0	75.8	9.29	73.3	9.05	68.4	8.88	66.0	8.86	58.7	8.72	53.8	8.55	41.6	7.76
		7.0	6.0	75.8	9.29	73.3	9.05	68.4	8.57	66.0	8.36	58.7	8.27	53.8	8.13	41.6	7.50
		8.6	7.5	75.8	9.29	73.3	9.05	68.4	8.57	66.0	8.33	58.7	7.63	53.8	7.53	41.6	7.02
		11.2	10.0	75.8	9.29	73.3	9.05	68.4	8.57	66.0	8.33	58.7	7.62	53.8	7.14	41.6	6.28
		16.4	15.0	75.8	9.29	73.3	9.05	68.4	8.57	66.0	8.33	58.7	7.62	53.8	7.14	41.6	5.94
		24.0	18.0	75.8	9.29	73.3	9.05	68.4	8.57	66.0	8.33	58.7	7.62	53.8	7.14	41.6	5.94
100%	40%	-24.9	-25.0	60.6	15.09	58.7	14.97	54.8	14.68	52.8	14.50	46.9	13.85	43.0	13.31	33.2	11.49
		-19.8	-20.0	60.6	14.28	58.7	14.18	54.8	13.93	52.8	13.78	46.9	13.19	43.0	12.70	33.2	11.10
		-14.7	-15.0	60.6	13.22	58.7	13.15	54.8	12.96	52.8	12.83	46.9	12.33	43.0	11.90	33.2	10.46
		-9.6	-10.0	60.6	11.93	58.7	11.89	54.8	11.76	52.8	11.66	46.9	11.27	43.0	10.91	33.2	9.67
		-4.4	-5.0	60.6	10.42	58.7	10.42	54.8	10.35	52.8	10.30	46.9	10.02	43.0	9.75	33.2	8.75
		-1.8	-2.5	60.6	9.59	58.7	9.61	54.8	9.59	52.8	9.56	46.9	9.35	43.0	9.12	33.2	8.24
		0.8	0.0	60.6	8.74	58.7	8.77	54.8	8.79	52.8	8.78	46.9	8.63	43.0	8.44	33.2	7.68
		2.8	2.0	60.6	7.82	58.7	7.86	54.8	7.91	52.8	7.91	46.9	7.84	43.0	7.71	33.2	7.11
		6.0	5.0	60.6	7.81	58.7	7.62	54.8	7.23	52.8	7.04	46.9	6.74	43.0	6.69	33.2	6.28
		7.0	6.0	60.6	7.81	58.7	7.62	54.8	7.23	52.8	7.04	46.9	6.47	43.0	6.38	33.2	6.06
		8.6	7.5	60.6	7.81	58.7	7.62	54.8	7.23	52.8	7.04	46.9	6.47	43.0	6.08	33.2	5.70
		11.2	10.0	60.6	7.81	58.7	7.62	54.8	7.23	52.8	7.04	46.9	6.47	43.0	6.08	33.2	5.14
		16.4	15.0	60.6	7.81	58.7	7.62	54.8	7.23	52.8	7.04	46.9	6.47	43.0	6.08	33.2	5.13
		24.0	18.0	60.6	7.81	58.7	7.62	54.8	7.23	52.8	7.04	46.9	6.47	43.0	6.08	33.2	5.13
100%	30%	-24.9	-25.0	45.5	11.21	44.0	11.16	41.1	11.00	39.6	10.90	35.2	10.50	32.3	10.14	24.9	8.96
		-19.8	-20.0	45.5	10.61	44.0	10.56	41.1	10.44	39.6	10.36	35.2	10.00	32.3	9.69	24.9	8.61
		-14.7	-15.0	45.5	9.82	44.0	9.80	41.1	9.71	39.6	9.64	35.2	9.36	32.3	9.09	24.9	8.13
		-9.6	-10.0	45.5	8.86	44.0	8.86	41.1	8.82	39.6	8.78	35.2	8.57	32.3	8.35	24.9	7.54
		-4.4	-5.0	45.5	7.70	44.0	7.72	41.1	7.73	39.6	7.72	35.2	7.59	32.3	7.44	24.9	6.81
		-1.8	-2.5	45.5	7.02	44.0	7.06	41.1	7.10	39.6	7.11	35.2	7.04	32.3	6.93	24.9	6.41
		0.8	0.0	45.5	6.33	44.0	6.38	41.1	6.45	39.6	6.47	35.2	6.47	32.3	6.40	24.9	5.99
		2.8	2.0	45.5	6.32	44.0	6.18	41.1	5.89	39.6	5.86	35.2	5.91	32.3	5.88	24.9	5.58
		6.0	5.0	45.5	6.32	44.0	6.18	41.1	5.89	39.6	5.75	35.2	5.32	32.3	5.16	24.9	5.00
		7.0	6.0	45.5	6.32	44.0	6.18	41.1	5.89	39.6	5.75	35.2	5.32	32.3	5.03	24.9	4.82
		8.6	7.5	45.5	6.32	44.0	6.18	41.1	5.89	39.6	5.75	35.2	5.32	32.3	5.03	24.9	4.56
		11.2	10.0	45.5	6.32	44.0	6.18	41.1	5.89	39.6	5.75	35.2	5.32	32.3	5.03	24.9	4.31
		16.4	15.0	45.5	6.32	44.0	6.18	41.1	5.89	39.6	5.75	35.2	5.32	32.3	5.03	24.9	4.31
		24.0	18.0	45.5	6.32	44.0	6.18	41.1	5.89	39.6	5.75	35.2	5.32	32.3	5.03	24.9	4.31

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-37. 44HP (Cooling) U-12ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	82.7	9.48	99.2	11.37	115.7	13.27	124.0	14.22	140.5	16.11	157.1	18.01	173.6	19.90
		-5.0	82.7	9.49	99.2	11.39	115.7	13.28	124.0	14.23	140.5	16.13	157.1	18.03	173.6	19.92
		0.0	82.7	9.51	99.2	11.41	115.7	13.31	124.0	14.25	140.5	16.15	157.1	18.06	173.6	19.97
		5.0	82.7	9.53	99.2	11.43	115.7	13.33	124.0	14.30	140.5	16.24	157.1	18.20	173.6	20.13
		10.0	82.7	9.56	99.2	11.50	115.7	13.48	124.0	14.48	140.5	16.50	157.1	18.55	173.6	20.52
		15.0	82.7	9.76	99.2	11.85	115.7	13.99	124.0	15.08	140.5	17.26	157.1	19.46	173.6	21.50
		20.0	82.7	10.88	99.2	13.30	115.7	16.12	124.0	17.63	140.5	20.90	157.1	24.49	173.6	28.39
		25.0	82.7	13.92	99.2	17.21	115.7	20.83	124.0	22.76	140.5	26.86	157.1	31.29	173.6	36.06
		30.0	82.7	17.47	99.2	21.56	115.7	25.99	124.0	28.34	140.5	33.29	157.1	38.60	173.6	44.28
		35.0	82.7	21.28	99.2	26.22	115.7	31.53	124.0	34.33	140.5	40.21	157.1	46.49	165.9	48.01
		40.0	82.7	25.38	99.2	31.24	115.7	37.50	124.0	40.79	140.5	47.69	147.0	48.02	153.3	48.01
		43.0	82.7	27.99	99.2	34.43	115.7	41.32	124.0	44.93	134.1	48.02	140.5	48.02	143.6	45.68
		46.0	81.8	30.44	98.2	37.46	104.3	38.10	105.4	37.08	108.2	35.37	111.8	34.03	116.1	32.97
52.0	35.7	12.98	38.8	13.12	42.6	13.37	44.7	13.52	49.2	13.88	54.2	14.27	59.7	14.70		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	74.4	7.65	89.3	9.60	104.2	11.50	111.6	12.44	126.5	14.27	141.4	16.06	156.2	17.81
		-5.0	74.4	7.67	89.3	9.62	104.2	11.52	111.6	12.45	126.5	14.29	141.4	16.08	156.2	17.83
		0.0	74.4	7.68	89.3	9.64	104.2	11.54	111.6	12.47	126.5	14.31	141.4	16.09	156.2	17.85
		5.0	74.4	7.71	89.3	9.66	104.2	11.57	111.6	12.50	126.5	14.33	141.4	16.15	156.2	17.93
		10.0	74.4	7.74	89.3	9.69	104.2	11.62	111.6	12.57	126.5	14.46	141.4	16.32	156.2	18.15
		15.0	74.4	7.83	89.3	9.87	104.2	11.90	111.6	12.90	126.5	14.88	141.4	16.82	156.2	18.73
		20.0	74.4	8.51	89.3	10.79	104.2	13.01	111.6	14.09	126.5	16.20	141.4	18.62	156.2	21.21
		25.0	74.4	11.24	89.3	13.93	104.2	16.72	111.6	18.15	126.5	21.07	141.4	24.07	156.2	27.15
		30.0	74.4	14.53	89.3	17.79	104.2	21.10	111.6	22.79	126.5	26.20	141.4	29.68	156.2	33.26
		35.0	74.4	18.63	89.3	22.57	104.2	26.55	111.6	28.57	126.5	32.65	141.4	36.83	156.2	41.17
		40.0	74.4	22.26	89.3	26.78	104.2	31.34	111.6	33.65	126.5	38.36	141.4	43.27	153.3	48.01
		43.0	74.4	24.50	89.3	29.39	104.2	34.33	111.6	36.84	126.5	42.01	140.5	48.02	143.6	45.68
		46.0	74.4	26.25	89.3	31.86	104.2	37.75	105.4	37.08	108.2	35.37	111.8	34.03	116.1	32.97
52.0	35.7	12.98	38.8	13.12	42.6	13.37	44.7	13.52	49.2	13.88	54.2	14.27	59.7	14.70		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	66.1	6.56	79.4	8.32	92.6	10.05	99.2	10.90	112.4	12.57	125.7	14.20	138.9	15.80
		-5.0	66.1	6.57	79.4	8.34	92.6	10.06	99.2	10.91	112.4	12.58	125.7	14.22	138.9	15.82
		0.0	66.1	6.58	79.4	8.35	92.6	10.08	99.2	10.93	112.4	12.60	125.7	14.24	138.9	15.84
		5.0	66.1	6.60	79.4	8.37	92.6	10.10	99.2	10.95	112.4	12.63	125.7	14.25	138.9	15.86
		10.0	66.1	6.63	79.4	8.41	92.6	10.13	99.2	10.98	112.4	12.66	125.7	14.32	138.9	15.95
		15.0	66.1	6.67	79.4	8.46	92.6	10.24	99.2	11.12	112.4	12.85	125.7	14.56	138.9	16.23
		20.0	66.1	6.98	79.4	8.91	92.6	10.80	99.2	11.73	112.4	13.54	125.7	15.31	138.9	17.03
		25.0	66.1	9.10	79.4	11.13	92.6	13.20	99.2	14.25	112.4	16.37	125.7	18.52	138.9	20.69
		30.0	66.1	11.97	79.4	14.50	92.6	17.05	99.2	18.32	112.4	20.88	125.7	23.44	138.9	26.01
		35.0	66.1	15.57	79.4	18.70	92.6	21.81	99.2	23.36	112.4	26.45	125.7	29.54	138.9	32.64
		40.0	66.1	18.79	79.4	22.42	92.6	26.01	99.2	27.80	112.4	31.36	125.7	34.93	138.9	38.54
		43.0	66.1	20.78	79.4	24.72	92.6	28.62	99.2	30.56	112.4	34.43	125.7	38.35	138.9	42.36
		46.0	66.1	22.18	79.4	26.55	92.6	31.04	99.2	33.33	108.2	35.37	111.8	34.03	116.1	32.97
52.0	35.7	12.98	38.8	13.12	42.6	13.37	44.7	13.52	49.2	13.88	54.2	14.27	59.7	14.70		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	57.9	5.45	69.4	7.02	81.0	8.56	86.8	9.32	98.4	10.82	109.9	12.28	121.5	13.72
		-5.0	57.9	5.45	69.4	7.03	81.0	8.57	86.8	9.33	98.4	10.83	109.9	12.30	121.5	13.74
		0.0	57.9	5.47	69.4	7.04	81.0	8.59	86.8	9.35	98.4	10.84	109.9	12.31	121.5	13.75
		5.0	57.9	5.48	69.4	7.06	81.0	8.60	86.8	9.37	98.4	10.86	109.9	12.33	121.5	13.78
		10.0	57.9	5.51	69.4	7.09	81.0	8.63	86.8	9.39	98.4	10.89	109.9	12.36	121.5	13.80
		15.0	57.9	5.54	69.4	7.12	81.0	8.67	86.8	9.43	98.4	10.95	109.9	12.44	121.5	13.90
		20.0	57.9	5.64	69.4	7.28	81.0	8.89	86.8	9.69	98.4	11.25	109.9	12.78	121.5	14.27
		25.0	57.9	6.87	69.4	8.55	81.0	10.16	86.8	10.95	98.4	12.49	109.9	13.98	121.5	15.43
		30.0	57.9	9.63	69.4	11.53	81.0	13.40	86.8	14.32	98.4	16.14	109.9	17.93	121.5	19.69
		35.0	57.9	12.74	69.4	15.15	81.0	17.50	86.8	18.66	98.4	20.92	109.9	23.14	121.5	25.31
		40.0	57.9	15.55	69.4	18.40	81.0	21.16	86.8	22.51	98.4	25.15	109.9	27.73	121.5	30.27
		43.0	57.9	17.29	69.4	20.40	81.0	23.41	86.8	24.89	98.4	27.77	109.9	30.59	121.5	33.37
		46.0	57.9	18.51	69.4	21.83	81.0	25.15	86.8	26.82	98.4	30.16	109.9	32.30	116.1	32.97
52.0	35.7	12.98	38.8	13.12	42.6	13.37	44.7	13.52	49.2	13.88	54.2	14.27	59.7	14.70		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

44HP (Cooling) U-12ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	49.6	4.31	59.5	5.69	69.4	7.04	74.4	7.70	84.3	9.02	94.2	10.31	104.2	11.57
		-5.0	49.6	4.32	59.5	5.69	69.4	7.04	74.4	7.71	84.3	9.02	94.2	10.32	104.2	11.58
		0.0	49.6	4.33	59.5	5.70	69.4	7.06	74.4	7.72	84.3	9.04	94.2	10.33	104.2	11.60
		5.0	49.6	4.34	59.5	5.72	69.4	7.07	74.4	7.74	84.3	9.05	94.2	10.35	104.2	11.61
		10.0	49.6	4.36	59.5	5.74	69.4	7.09	74.4	7.76	84.3	9.08	94.2	10.37	104.2	11.64
		15.0	49.6	4.39	59.5	5.77	69.4	7.13	74.4	7.79	84.3	9.11	94.2	10.39	104.2	11.66
		20.0	49.6	4.44	59.5	5.82	69.4	7.18	74.4	7.86	84.3	9.19	94.2	10.50	104.2	11.78
		25.0	49.6	4.90	59.5	6.31	69.4	7.69	74.4	8.37	84.3	9.70	94.2	11.00	104.2	12.27
		30.0	49.6	7.52	59.5	8.88	69.4	10.18	74.4	10.80	84.3	12.01	94.2	13.17	104.2	14.27
		35.0	49.6	10.13	59.5	11.92	69.4	13.61	74.4	14.43	84.3	16.00	94.2	17.49	104.2	18.92
		40.0	49.6	12.54	59.5	14.70	69.4	16.74	74.4	17.73	84.3	19.61	94.2	21.41	104.2	23.12
		43.0	49.6	14.03	59.5	16.41	69.4	18.67	74.4	19.75	84.3	21.83	94.2	23.81	104.2	25.70
		46.0	49.6	15.21	59.5	17.65	69.4	20.03	74.4	21.19	84.3	23.49	94.2	25.72	104.2	27.91
52.0	35.7	12.98	38.8	13.12	42.6	13.37	44.7	13.52	49.2	13.88	54.2	14.27	59.7	14.70		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	41.3	3.16	49.6	4.32	57.9	5.47	62.0	6.04	70.3	7.16	78.5	8.26	86.8	9.34
		-5.0	41.3	3.16	49.6	4.33	57.9	5.48	62.0	6.05	70.3	7.17	78.5	8.27	86.8	9.35
		0.0	41.3	3.17	49.6	4.34	57.9	5.49	62.0	6.06	70.3	7.19	78.5	8.28	86.8	9.36
		5.0	41.3	3.18	49.6	4.35	57.9	5.50	62.0	6.07	70.3	7.19	78.5	8.29	86.8	9.38
		10.0	41.3	3.20	49.6	4.37	57.9	5.52	62.0	6.09	70.3	7.21	78.5	8.31	86.8	9.39
		15.0	41.3	3.22	49.6	4.39	57.9	5.54	62.0	6.11	70.3	7.23	78.5	8.34	86.8	9.42
		20.0	41.3	3.26	49.6	4.43	57.9	5.58	62.0	6.15	70.3	7.27	78.5	8.37	86.8	9.45
		25.0	41.3	3.38	49.6	4.55	57.9	5.71	62.0	6.28	70.3	7.32	78.5	8.50	86.8	9.58
		30.0	41.3	5.66	49.6	6.51	57.9	7.13	62.0	7.52	70.3	8.39	78.5	9.32	86.8	10.28
		35.0	41.3	7.77	49.6	9.01	57.9	10.15	62.0	10.69	70.3	11.68	78.5	12.59	86.8	13.43
		40.0	41.3	9.77	49.6	11.33	57.9	12.76	62.0	13.43	70.3	14.68	78.5	15.84	86.8	16.90
		43.0	41.3	11.01	49.6	12.75	57.9	14.36	62.0	15.11	70.3	16.53	78.5	17.83	86.8	19.03
		46.0	41.3	12.25	49.6	13.98	57.9	15.60	62.0	16.38	70.3	17.87	78.5	19.27	86.8	20.59
52.0	35.7	12.98	38.8	13.12	42.6	13.37	44.7	13.52	49.2	13.88	54.2	14.27	59.7	14.70		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	33.1	1.98	39.7	2.93	46.3	3.87	49.6	4.33	56.2	5.25	62.8	6.16	69.4	7.05
		-5.0	33.1	1.99	39.7	2.94	46.3	3.88	49.6	4.34	56.2	5.26	62.8	6.16	69.4	7.06
		0.0	33.1	2.00	39.7	2.95	46.3	3.88	49.6	4.35	56.2	5.26	62.8	6.17	69.4	7.07
		5.0	33.1	2.00	39.7	2.95	46.3	3.89	49.6	4.36	56.2	5.27	62.8	6.18	69.4	7.08
		10.0	33.1	2.01	39.7	2.97	46.3	3.91	49.6	4.37	56.2	5.29	62.8	6.20	69.4	7.10
		15.0	33.1	2.03	39.7	2.98	46.3	3.92	49.6	4.39	56.2	5.30	62.8	6.22	69.4	7.12
		20.0	33.1	2.06	39.7	3.01	46.3	3.95	49.6	4.42	56.2	5.33	62.8	6.24	69.4	7.15
		25.0	33.1	2.12	39.7	3.07	46.3	4.00	49.6	4.46	56.2	5.38	62.8	6.28	69.4	7.20
		30.0	33.1	2.94	39.7	3.56	46.3	4.34	49.6	4.75	56.2	5.60	62.8	6.54	69.4	7.56
		35.0	33.1	5.65	39.7	6.46	46.3	7.15	49.6	7.47	56.2	8.03	62.8	8.72	69.4	9.61
		40.0	33.1	7.24	39.7	8.29	46.3	9.21	49.6	9.63	56.2	10.37	62.8	11.02	69.4	11.58
		43.0	33.1	8.23	39.7	9.43	46.3	10.49	49.6	10.97	56.2	11.84	62.8	12.60	69.4	13.27
		46.0	33.1	9.63	39.7	10.78	46.3	11.82	49.6	12.30	56.2	13.19	62.8	13.99	69.4	14.69
52.0	33.1	11.48	38.8	13.12	42.6	13.37	44.7	13.52	49.2	13.88	54.2	14.27	59.7	14.70		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	24.8	0.79	29.8	1.51	34.7	2.24	37.2	2.60	42.2	3.31	47.1	4.01	52.1	4.70
		-5.0	24.8	0.79	29.8	1.52	34.7	2.24	37.2	2.60	42.2	3.32	47.1	4.02	52.1	4.71
		0.0	24.8	0.80	29.8	1.52	34.7	2.25	37.2	2.61	42.2	3.32	47.1	4.03	52.1	4.72
		5.0	24.8	0.80	29.8	1.53	34.7	2.25	37.2	2.62	42.2	3.34	47.1	4.04	52.1	4.74
		10.0	24.8	0.81	29.8	1.54	34.7	2.26	37.2	2.63	42.2	3.35	47.1	4.06	52.1	4.75
		15.0	24.8	0.82	29.8	1.55	34.7	2.28	37.2	2.65	42.2	3.37	47.1	4.08	52.1	4.78
		20.0	24.8	0.84	29.8	1.57	34.7	2.30	37.2	2.67	42.2	3.40	47.1	4.11	52.1	4.80
		25.0	24.8	0.88	29.8	1.61	34.7	2.34	37.2	2.72	42.2	3.44	47.1	4.18	52.1	4.93
		30.0	24.8	1.01	29.8	1.68	34.7	2.43	37.2	2.86	42.2	3.73	47.1	4.58	52.1	5.39
		35.0	24.8	3.78	29.8	4.25	34.7	4.79	37.2	5.15	42.2	5.85	47.1	6.54	52.1	7.23
		40.0	24.8	4.96	29.8	5.60	34.7	6.12	37.2	6.34	42.2	6.71	47.1	7.00	52.1	7.23
		43.0	24.8	5.70	29.8	6.44	34.7	7.07	37.2	7.34	42.2	7.79	47.1	8.16	52.1	8.43
		46.0	24.8	7.31	29.8	8.01	34.7	8.62	37.2	8.88	42.2	9.35	47.1	9.72	52.1	10.02
52.0	24.8	8.64	29.8	9.55	34.7	10.36	37.2	10.72	42.2	11.07	47.1	11.26	52.1	11.33		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-38. 44HP (Heating) U-12ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	96.1	32.77	93.7	32.20	88.8	30.98	86.2	30.34	78.5	28.26	73.1	26.74	58.9	22.44
		-19.8	-20.0	100.9	33.49	98.4	32.89	93.2	31.62	90.6	30.96	82.5	28.81	76.9	27.23	62.0	22.81
		-14.7	-15.0	107.6	34.57	104.9	33.93	99.5	32.61	96.7	31.90	88.2	29.63	82.2	27.99	66.4	23.36
		-9.6	-10.0	116.7	36.25	113.9	35.53	108.0	33.94	105.1	33.08	95.8	30.80	89.4	29.04	72.2	24.12
		-4.4	-5.0	128.6	37.87	125.5	37.19	119.1	35.74	115.8	34.95	105.6	32.38	98.5	30.48	79.5	25.18
		-1.8	-2.5	135.7	38.53	132.4	37.82	125.6	36.31	122.2	35.50	111.4	32.86	103.8	30.93	83.9	25.55
		0.8	0.0	143.6	39.13	140.1	38.38	132.9	36.80	129.2	35.97	117.8	33.24	109.9	31.27	86.9	24.97
		2.8	2.0	152.0	39.70	148.4	38.93	140.9	37.30	137.0	36.44	122.7	32.63	112.4	29.86	86.9	23.14
		6.0	5.0	158.4	37.22	153.3	35.96	143.1	33.47	138.0	32.24	122.7	28.62	112.4	26.22	86.9	20.46
		7.0	6.0	158.4	35.42	153.3	34.23	143.1	31.89	138.0	30.70	122.7	27.28	112.4	25.05	86.9	19.61
		8.6	7.5	158.4	32.74	153.3	31.66	143.1	29.53	138.0	28.48	122.7	25.38	112.4	23.35	86.9	18.38
		11.2	10.0	158.4	28.54	153.3	27.65	143.1	25.89	138.0	25.01	122.7	22.42	112.4	20.71	86.9	16.46
		16.4	15.0	158.4	21.22	153.3	20.64	143.1	19.49	138.0	18.90	122.7	17.13	112.4	15.93	86.9	12.84
		24.0	18.0	158.4	17.63	153.3	17.12	143.1	16.10	138.0	15.59	122.7	14.06	112.4	13.03	86.9	10.48

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	90%	-24.9	-25.0	96.1	32.77	93.7	32.20	88.8	30.98	86.2	30.34	78.5	28.26	73.1	26.74	58.9	22.44
		-19.8	-20.0	100.9	33.49	98.4	32.89	93.2	31.62	90.6	30.96	82.5	28.81	76.9	27.23	62.0	22.81
		-14.7	-15.0	107.6	34.57	104.9	33.93	99.5	32.61	96.7	31.90	88.2	29.63	82.2	27.99	66.4	23.36
		-9.6	-10.0	116.7	36.25	113.9	35.53	108.0	33.94	105.1	33.08	95.8	30.80	89.4	29.04	72.2	24.12
		-4.4	-5.0	128.6	37.87	125.5	37.19	119.1	35.74	115.8	34.95	105.6	32.38	98.5	30.48	78.2	25.18
		-1.8	-2.5	135.7	38.53	132.4	37.82	125.6	36.31	122.2	35.50	110.4	32.86	101.2	28.16	78.2	22.34
		0.8	0.0	142.6	35.42	138.0	34.39	128.8	32.32	124.2	31.29	110.4	28.17	101.2	26.07	78.2	20.78
		2.8	2.0	142.6	32.28	138.0	31.37	128.8	29.55	124.2	28.63	110.4	25.86	101.2	24.03	78.2	19.41
		6.0	5.0	142.6	28.00	138.0	27.35	128.8	26.00	124.2	25.30	110.4	23.10	101.2	21.48	78.2	17.26
		7.0	6.0	142.6	27.37	138.0	26.62	128.8	25.10	124.2	24.34	110.4	22.04	101.2	20.49	78.2	16.53
		8.6	7.5	142.6	25.16	138.0	24.49	128.8	23.16	124.2	22.48	110.4	20.44	101.2	19.05	78.2	15.47
		11.2	10.0	142.6	21.69	138.0	21.17	128.8	20.12	124.2	19.58	110.4	17.94	101.2	16.81	78.2	13.82
		16.4	15.0	142.6	16.05	138.0	15.59	128.8	14.80	124.2	14.48	110.4	13.45	101.2	12.70	78.2	10.64
		24.0	18.0	142.6	16.05	138.0	15.59	128.8	14.67	124.2	14.21	110.4	12.83	101.2	11.91	78.2	9.61

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	80%	-24.9	-25.0	96.1	32.77	93.7	32.20	88.8	30.98	86.2	30.34	78.5	28.26	73.1	26.74	58.9	22.44
		-19.8	-20.0	100.9	33.49	98.4	32.89	93.2	31.62	90.6	30.96	82.5	28.81	76.9	27.23	62.0	22.81
		-14.7	-15.0	107.6	34.57	104.9	33.93	99.5	32.61	96.7	31.90	88.2	29.63	82.2	27.99	66.4	23.36
		-9.6	-10.0	116.7	36.25	113.9	35.53	108.0	33.94	105.1	33.08	95.8	30.80	89.4	29.04	69.5	22.02
		-4.4	-5.0	126.8	31.55	122.7	30.80	114.5	29.25	110.4	28.45	98.1	26.00	90.0	24.29	69.5	19.79
		-1.8	-2.5	126.8	29.12	122.7	28.45	114.5	27.08	110.4	26.37	98.1	24.17	90.0	22.63	69.5	18.64
		0.8	0.0	126.8	26.45	122.7	25.95	114.5	24.86	110.4	24.30	98.1	22.46	90.0	21.13	69.5	17.47
		2.8	2.0	126.8	24.41	122.7	23.96	114.5	23.00	110.4	22.49	98.1	20.84	90.0	19.64	69.5	16.30
		6.0	5.0	126.8	21.51	122.7	21.15	114.5	20.35	110.4	19.93	98.1	18.53	90.0	17.46	69.5	14.47
		7.0	6.0	126.8	20.85	122.7	20.42	114.5	19.54	110.4	19.09	98.1	17.64	90.0	16.62	69.5	13.85
		8.6	7.5	126.8	19.02	122.7	18.67	114.5	17.93	110.4	17.54	98.1	16.31	90.0	15.42	69.5	12.95
		11.2	10.0	126.8	16.19	122.7	15.95	114.5	15.43	110.4	15.14	98.1	14.22	90.0	13.53	69.5	11.54
		16.4	15.0	126.8	14.47	122.7	14.06	114.5	13.24	110.4	12.83	98.1	11.60	90.0	10.79	69.5	8.80
		24.0	18.0	126.8	14.47	122.7	14.06	114.5	13.24	110.4	12.83	98.1	11.60	90.0	10.79	69.5	8.74

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	70%	-24.9	-25.0	96.1	32.77	93.7	32.20	88.8	30.98	86.2	30.34	78.5	28.26	73.1	26.74	58.9	22.44
		-19.8	-20.0	100.9	33.49	98.4	32.89	93.2	31.62	90.6	30.96	82.5	28.81	76.9	27.23	60.8	22.81
		-14.7	-15.0	107.6	34.57	104.9	33.93	99.5	32.61	96.6	31.90	85.9	25.69	78.7	24.14	60.8	19.76
		-9.6	-10.0	110.9	27.32	107.3	26.81	100.2	25.72	96.6	25.15	85.9	23.30	78.7	21.97	60.8	18.36
		-4.4	-5.0	110.9	23.89	107.3	23.53	100.2	22.73	96.6	22.29	85.9	20.84	78.7	19.75	60.8	16.59
		-1.8	-2.5	110.9	22.24	107.3	21.92	100.2	21.21	96.6	20.82	85.9	19.50	78.7	18.51	60.8	15.62
		0.8	0.0	110.9	20.50	107.3	20.23	100.2	19.61	96.6	19.27	85.9	18.11	78.7	17.22	60.8	14.61
		2.8	2.0	110.9	18.78	107.3	18.56	100.2	18.04	96.6	17.75	85.9	16.73	78.7	15.95	60.8	13.60
		6.0	5.0	110.9	16.33	107.3	16.17	100.2	15.78	96.6	15.56	85.9	14.73	78.7	14.06	60.8	12.00
		7.0	6.0	110.9	15.62	107.3	15.44	100.2	15.02	96.6	14.79	85.9	13.99	78.7	13.37	60.8	11.52
		8.6	7.5	110.9	14.17	107.3	14.03	100.2	13.71	96.6	13.53	85.9	12.88	78.7	12.37	60.8	10.77
		11.2	10.0	110.9	12.88	107.3	12.52	100.2	11.81	96.6	11.61	85.9	11.18	78.7	10.81	60.8	9.58
		16.4	15.0	110.9	12.88	107.3	12.52	100.2	11.81	96.6	11.45	85.9	10.38	78.7	9.66	60.8	7.88
		24.0	18.0	110.9	12.88	107.3	12.52	100.2	11.81	96.6	11.45	85.9	10.38	78.7	9.66	60.8	7.88

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

44HP (Heating) U-12ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	60%	-24.9	-25.0	95.1	26.71	92.0	26.28	85.9	25.34	82.8	24.83	73.6	23.11	67.5	21.72	52.1	17.87
		-19.8	-20.0	95.1	25.11	92.0	24.73	85.9	23.88	82.8	23.43	73.6	21.95	67.5	20.84	52.1	17.30
		-14.7	-15.0	95.1	23.21	92.0	22.91	85.9	22.23	82.8	21.85	73.6	20.54	67.5	19.54	52.1	16.57
		-9.6	-10.0	95.1	21.09	92.0	20.84	85.9	20.27	82.8	19.95	73.6	18.83	67.5	17.95	52.1	15.30
		-4.4	-5.0	95.1	18.59	92.0	18.40	85.9	17.96	82.8	17.70	73.6	16.79	67.5	16.06	52.1	13.80
		-1.8	-2.5	95.1	17.21	92.0	17.06	85.9	16.69	82.8	16.47	73.6	15.67	67.5	15.01	52.1	12.98
		0.8	0.0	95.1	15.76	92.0	15.65	85.9	15.36	82.8	15.18	73.6	14.50	67.5	13.93	52.1	12.12
		2.8	2.0	95.1	14.33	92.0	14.26	85.9	14.05	82.8	13.91	73.6	13.35	67.5	12.87	52.1	11.26
		6.0	5.0	95.1	12.30	92.0	12.26	85.9	12.13	82.8	12.02	73.6	11.59	67.5	11.22	52.1	9.85
		7.0	6.0	95.1	11.57	92.0	11.53	85.9	11.41	82.8	11.33	73.6	10.98	67.5	10.66	52.1	9.50
		8.6	7.5	95.1	11.30	92.0	10.99	85.9	10.40	82.8	10.35	73.6	10.10	67.5	9.85	52.1	8.88
		11.2	10.0	95.1	11.30	92.0	10.99	85.9	10.38	82.8	10.07	73.6	9.15	67.5	8.60	52.1	7.90
		16.4	15.0	95.1	11.30	92.0	10.99	85.9	10.38	82.8	10.07	73.6	9.15	67.5	8.54	52.1	7.01
24.0	18.0	95.1	11.30	92.0	10.99	85.9	10.38	82.8	10.07	73.6	9.15	67.5	8.54	52.1	7.01		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	50%	-24.9	-25.0	79.2	20.63	76.7	20.41	71.6	19.88	69.0	19.58	61.3	18.52	56.2	17.68	43.4	14.84
		-19.8	-20.0	79.2	19.54	76.7	19.35	71.6	18.88	69.0	18.60	61.3	17.63	56.2	16.86	43.4	14.44
		-14.7	-15.0	79.2	18.12	76.7	17.96	71.6	17.56	69.0	17.33	61.3	16.48	56.2	15.79	43.4	13.63
		-9.6	-10.0	79.2	16.37	76.7	16.25	71.6	15.95	69.0	15.76	61.3	15.06	56.2	14.47	43.4	12.57
		-4.4	-5.0	79.2	14.33	76.7	14.26	71.6	14.05	69.0	13.91	61.3	13.37	56.2	12.90	43.4	11.33
		-1.8	-2.5	79.2	13.20	76.7	13.16	71.6	13.01	69.0	12.90	61.3	12.46	56.2	12.05	43.4	10.65
		0.8	0.0	79.2	12.03	76.7	12.01	71.6	11.93	69.0	11.85	61.3	11.50	56.2	11.17	43.4	9.94
		2.8	2.0	79.2	10.88	76.7	10.89	71.6	10.86	69.0	10.82	61.3	10.56	56.2	10.27	43.4	9.20
		6.0	5.0	79.2	9.71	76.7	9.46	71.6	9.15	69.0	9.14	61.3	9.02	56.2	8.85	43.4	8.03
		7.0	6.0	79.2	9.71	76.7	9.46	71.6	8.95	69.0	8.69	61.3	8.54	56.2	8.41	43.4	7.76
		8.6	7.5	79.2	9.71	76.7	9.46	71.6	8.95	69.0	8.69	61.3	7.93	56.2	7.78	43.4	7.26
		11.2	10.0	79.2	9.71	76.7	9.46	71.6	8.95	69.0	8.69	61.3	7.93	56.2	7.42	43.4	6.47
		16.4	15.0	79.2	9.71	76.7	9.46	71.6	8.95	69.0	8.69	61.3	7.93	56.2	7.42	43.4	6.14
24.0	18.0	79.2	9.71	76.7	9.46	71.6	8.95	69.0	8.69	61.3	7.93	56.2	7.42	43.4	6.14		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	40%	-24.9	-25.0	63.4	15.86	61.3	15.74	57.2	15.43	55.2	15.25	49.1	14.55	45.0	13.98	34.8	12.05
		-19.8	-20.0	63.4	15.00	61.3	14.90	57.2	14.64	55.2	14.47	49.1	13.85	45.0	13.32	34.8	11.63
		-14.7	-15.0	63.4	13.87	61.3	13.79	57.2	13.59	55.2	13.46	49.1	12.93	45.0	12.47	34.8	10.95
		-9.6	-10.0	63.4	12.49	61.3	12.45	57.2	12.31	55.2	12.21	49.1	11.80	45.0	11.42	34.8	10.11
		-4.4	-5.0	63.4	10.88	61.3	10.88	57.2	10.81	55.2	10.76	49.1	10.47	45.0	10.18	34.8	9.12
		-1.8	-2.5	63.4	10.00	61.3	10.01	57.2	10.00	55.2	9.96	49.1	9.75	45.0	9.51	34.8	8.57
		0.8	0.0	63.4	9.05	61.3	9.08	57.2	9.10	55.2	9.08	49.1	8.93	45.0	8.74	34.8	7.95
		2.8	2.0	63.4	8.13	61.3	8.08	57.2	8.14	55.2	8.15	49.1	8.09	45.0	7.97	34.8	7.35
		6.0	5.0	63.4	8.13	61.3	7.93	57.2	7.52	55.2	7.31	49.1	6.94	45.0	6.89	34.8	6.48
		7.0	6.0	63.4	8.13	61.3	7.93	57.2	7.52	55.2	7.31	49.1	6.70	45.0	6.56	34.8	6.24
		8.6	7.5	63.4	8.13	61.3	7.93	57.2	7.52	55.2	7.31	49.1	6.70	45.0	6.29	34.8	5.86
		11.2	10.0	63.4	8.13	61.3	7.93	57.2	7.52	55.2	7.31	49.1	6.70	45.0	6.29	34.8	5.27
		16.4	15.0	63.4	8.13	61.3	7.93	57.2	7.52	55.2	7.31	49.1	6.70	45.0	6.29	34.8	5.27
24.0	18.0	63.4	8.13	61.3	7.93	57.2	7.52	55.2	7.31	49.1	6.70	45.0	6.29	34.8	5.27		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	30%	-24.9	-25.0	47.5	11.73	46.0	11.68	42.9	11.51	41.4	11.41	36.8	10.98	33.7	10.61	26.1	9.35
		-19.8	-20.0	47.5	11.09	46.0	11.05	42.9	10.91	41.4	10.83	36.8	10.45	33.7	10.12	26.1	8.98
		-14.7	-15.0	47.5	10.25	46.0	10.23	42.9	10.14	41.4	10.07	36.8	9.77	33.7	9.48	26.1	8.46
		-9.6	-10.0	47.5	9.23	46.0	9.23	42.9	9.18	41.4	9.14	36.8	8.92	33.7	8.69	26.1	7.82
		-4.4	-5.0	47.5	7.93	46.0	7.96	42.9	7.98	41.4	7.97	36.8	7.85	33.7	7.69	26.1	7.04
		-1.8	-2.5	47.5	7.21	46.0	7.26	42.9	7.31	41.4	7.32	36.8	7.27	33.7	7.16	26.1	6.61
		0.8	0.0	47.5	6.55	46.0	6.54	42.9	6.63	41.4	6.65	36.8	6.66	33.7	6.59	26.1	6.17
		2.8	2.0	47.5	6.55	46.0	6.39	42.9	6.09	41.4	6.01	36.8	6.07	33.7	6.04	26.1	5.73
		6.0	5.0	47.5	6.55	46.0	6.39	42.9	6.09	41.4	5.93	36.8	5.47	33.7	5.28	26.1	5.12
		7.0	6.0	47.5	6.55	46.0	6.39	42.9	6.09	41.4	5.93	36.8	5.47	33.7	5.17	26.1	4.93
		8.6	7.5	47.5	6.55	46.0	6.39	42.9	6.09	41.4	5.93	36.8	5.47	33.7	5.17	26.1	4.65
		11.2	10.0	47.5	6.55	46.0	6.39	42.9	6.09	41.4	5.93	36.8	5.47	33.7	5.17	26.1	4.40
		16.4	15.0	47.5	6.55	46.0	6.39	42.9	6.09	41.4	5.93	36.8	5.47	33.7	5.17	26.1	4.40
24.0	18.0	47.5	6.55	46.0	6.39	42.9	6.09	41.4	5.93	36.8	5.47	33.7	5.17	26.1	4.40		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-39. 46HP (Cooling) U-14ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	86.7	9.94	104.0	11.93	121.3	13.92	130.0	14.91	147.3	16.90	164.7	18.89	182.0	20.88
		-5.0	86.7	9.96	104.0	11.94	121.3	13.94	130.0	14.93	147.3	16.92	164.7	18.91	182.0	20.89
		0.0	86.7	9.97	104.0	11.96	121.3	13.96	130.0	14.95	147.3	16.94	164.7	18.95	182.0	20.95
		5.0	86.7	10.00	104.0	11.99	121.3	13.98	130.0	14.99	147.3	17.03	164.7	19.08	182.0	21.11
		10.0	86.7	10.03	104.0	12.06	121.3	14.13	130.0	15.18	147.3	17.29	164.7	19.43	182.0	21.50
		15.0	86.7	10.22	104.0	12.41	121.3	14.65	130.0	15.78	147.3	18.05	164.7	20.35	182.0	22.48
		20.0	86.7	11.35	104.0	13.87	121.3	16.82	130.0	18.41	147.3	21.84	164.7	25.60	182.0	29.69
		25.0	86.7	14.51	104.0	17.97	121.3	21.76	130.0	23.79	147.3	28.09	164.7	32.75	182.0	37.74
		30.0	86.7	18.23	104.0	22.53	121.3	27.18	130.0	29.64	147.3	34.84	164.7	40.42	182.0	46.37
		35.0	86.7	22.23	104.0	27.42	121.3	32.99	130.0	35.93	147.3	42.10	164.7	48.69	173.9	50.26
		40.0	86.7	26.54	104.0	32.69	121.3	39.26	130.0	42.71	147.3	49.95	154.0	50.25	160.6	50.25
		43.0	86.7	29.28	104.0	36.04	121.3	43.26	130.0	47.05	140.6	50.26	147.2	50.25	150.6	47.84
		46.0	85.8	31.85	103.0	39.21	109.4	39.89	110.5	38.82	113.5	37.03	117.2	35.62	121.8	34.51
52.0	37.4	13.53	40.7	13.67	44.6	13.93	46.8	14.09	51.6	14.47	56.8	14.88	62.6	15.33		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	78.0	8.03	93.6	10.08	109.2	12.07	117.0	13.05	132.6	14.97	148.2	16.85	163.8	18.69
		-5.0	78.0	8.05	93.6	10.09	109.2	12.09	117.0	13.07	132.6	14.99	148.2	16.87	163.8	18.71
		0.0	78.0	8.06	93.6	10.11	109.2	12.11	117.0	13.09	132.6	15.01	148.2	16.88	163.8	18.72
		5.0	78.0	8.09	93.6	10.14	109.2	12.13	117.0	13.11	132.6	15.04	148.2	16.93	163.8	18.80
		10.0	78.0	8.12	93.6	10.17	109.2	12.19	117.0	13.19	132.6	15.17	148.2	17.11	163.8	19.03
		15.0	78.0	8.21	93.6	10.35	109.2	12.47	117.0	13.52	132.6	15.59	148.2	17.61	163.8	19.60
		20.0	78.0	8.89	93.6	11.27	109.2	13.58	117.0	14.71	132.6	16.90	148.2	19.45	163.8	22.17
		25.0	78.0	11.70	93.6	14.52	109.2	17.45	117.0	18.95	132.6	22.01	148.2	25.17	163.8	28.40
		30.0	78.0	15.15	93.6	18.57	109.2	22.05	117.0	23.82	132.6	27.40	148.2	31.06	163.8	34.81
		35.0	78.0	19.45	93.6	23.59	109.2	27.77	117.0	29.88	132.6	34.16	148.2	38.56	163.8	43.11
		40.0	78.0	23.26	93.6	28.01	109.2	32.79	117.0	35.22	132.6	40.16	148.2	45.32	160.6	50.25
		43.0	78.0	25.62	93.6	30.74	109.2	35.93	117.0	38.56	132.6	43.99	147.2	50.25	150.6	47.84
		46.0	78.0	27.45	93.6	33.34	109.2	39.52	110.5	38.82	113.5	37.03	117.2	35.62	121.8	34.51
52.0	37.4	13.53	40.7	13.67	44.6	13.93	46.8	14.09	51.6	14.47	56.8	14.88	62.6	15.33		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	69.3	6.89	83.2	8.74	97.1	10.55	104.0	11.44	117.9	13.19	131.7	14.90	145.6	16.58
		-5.0	69.3	6.90	83.2	8.75	97.1	10.56	104.0	11.45	117.9	13.20	131.7	14.92	145.6	16.59
		0.0	69.3	6.91	83.2	8.76	97.1	10.58	104.0	11.47	117.9	13.22	131.7	14.94	145.6	16.62
		5.0	69.3	6.93	83.2	8.79	97.1	10.60	104.0	11.49	117.9	13.25	131.7	14.95	145.6	16.64
		10.0	69.3	6.96	83.2	8.82	97.1	10.63	104.0	11.52	117.9	13.28	131.7	15.02	145.6	16.73
		15.0	69.3	7.00	83.2	8.88	97.1	10.74	104.0	11.66	117.9	13.47	131.7	15.26	145.6	17.01
		20.0	69.3	7.31	83.2	9.32	97.1	11.30	104.0	12.27	117.9	14.16	131.7	16.01	145.6	17.81
		25.0	69.3	9.44	83.2	11.58	97.1	13.75	104.0	14.85	117.9	17.08	131.7	19.34	145.6	21.62
		30.0	69.3	12.46	83.2	15.12	97.1	17.79	104.0	19.13	117.9	21.82	131.7	24.51	145.6	27.21
		35.0	69.3	16.24	83.2	19.53	97.1	22.79	104.0	24.42	117.9	27.67	131.7	30.91	145.6	34.16
		40.0	69.3	19.62	83.2	23.44	97.1	27.20	104.0	29.08	117.9	32.81	131.7	36.56	145.6	40.35
		43.0	69.3	21.71	83.2	25.85	97.1	29.94	104.0	31.97	117.9	36.04	131.7	40.15	145.6	44.36
		46.0	69.3	23.18	83.2	27.77	97.1	32.48	104.0	34.88	113.5	37.03	117.2	35.62	121.8	34.51
52.0	37.4	13.53	40.7	13.67	44.6	13.93	46.8	14.09	51.6	14.47	56.8	14.88	62.6	15.33		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	60.7	5.72	72.8	7.37	84.9	8.99	91.0	9.78	103.1	11.35	115.3	12.89	127.4	14.40
		-5.0	60.7	5.73	72.8	7.38	84.9	9.00	91.0	9.79	103.1	11.36	115.3	12.90	127.4	14.41
		0.0	60.7	5.74	72.8	7.39	84.9	9.01	91.0	9.81	103.1	11.38	115.3	12.92	127.4	14.43
		5.0	60.7	5.75	72.8	7.41	84.9	9.03	91.0	9.83	103.1	11.40	115.3	12.94	127.4	14.45
		10.0	60.7	5.78	72.8	7.43	84.9	9.06	91.0	9.86	103.1	11.43	115.3	12.96	127.4	14.47
		15.0	60.7	5.82	72.8	7.47	84.9	9.09	91.0	9.89	103.1	11.48	115.3	13.04	127.4	14.58
		20.0	60.7	5.92	72.8	7.63	84.9	9.32	91.0	10.15	103.1	11.78	115.3	13.38	127.4	14.95
		25.0	60.7	7.14	72.8	8.90	84.9	10.59	91.0	11.41	103.1	13.02	115.3	14.59	127.4	16.11
		30.0	60.7	10.00	72.8	12.00	84.9	13.96	91.0	14.93	103.1	16.84	115.3	18.72	127.4	20.57
		35.0	60.7	13.26	72.8	15.80	84.9	18.27	91.0	19.48	103.1	21.86	115.3	24.19	127.4	26.47
		40.0	60.7	16.22	72.8	19.21	84.9	22.11	91.0	23.52	103.1	26.30	115.3	29.01	127.4	31.67
		43.0	60.7	18.04	72.8	21.31	84.9	24.47	91.0	26.02	103.1	29.05	115.3	32.01	127.4	34.92
		46.0	60.7	19.33	72.8	22.81	84.9	26.30	91.0	28.05	103.1	31.55	115.3	33.80	121.8	34.51
52.0	37.4	13.53	40.7	13.67	44.6	13.93	46.8	14.09	51.6	14.47	56.8	14.88	62.6	15.33		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

46HP (Cooling) U-14ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	52.0	4.53	62.4	5.97	72.8	7.39	78.0	8.08	88.4	9.46	98.8	10.82	109.2	12.14
		-5.0	52.0	4.54	62.4	5.98	72.8	7.39	78.0	8.09	88.4	9.47	98.8	10.83	109.2	12.15
		0.0	52.0	4.55	62.4	5.99	72.8	7.41	78.0	8.11	88.4	9.48	98.8	10.84	109.2	12.17
		5.0	52.0	4.56	62.4	6.00	72.8	7.42	78.0	8.12	88.4	9.50	98.8	10.86	109.2	12.19
		10.0	52.0	4.58	62.4	6.02	72.8	7.44	78.0	8.14	88.4	9.52	98.8	10.88	109.2	12.21
		15.0	52.0	4.61	62.4	6.06	72.8	7.48	78.0	8.18	88.4	9.56	98.8	10.90	109.2	12.23
		20.0	52.0	4.66	62.4	6.10	72.8	7.53	78.0	8.24	88.4	9.64	98.8	11.01	109.2	12.35
		25.0	52.0	5.11	62.4	6.60	72.8	8.04	78.0	8.75	88.4	10.15	98.8	11.51	109.2	12.85
		30.0	52.0	7.79	62.4	9.22	72.8	10.58	78.0	11.24	88.4	12.51	98.8	13.72	109.2	14.88
		35.0	52.0	10.53	62.4	12.40	72.8	14.18	78.0	15.04	88.4	16.68	98.8	18.25	109.2	19.75
		40.0	52.0	13.06	62.4	15.33	72.8	17.47	78.0	18.50	88.4	20.48	98.8	22.37	109.2	24.17
		43.0	52.0	14.62	62.4	17.12	72.8	19.49	78.0	20.62	88.4	22.81	98.8	24.89	109.2	26.87
		46.0	52.0	15.86	62.4	18.43	72.8	20.92	78.0	22.15	88.4	24.55	98.8	26.90	109.2	29.19
52.0	37.4	13.53	40.7	13.67	44.6	13.93	46.8	14.09	51.6	14.47	56.8	14.88	62.6	15.33		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	43.3	3.32	52.0	4.54	60.7	5.75	65.0	6.34	73.7	7.52	82.3	8.67	91.0	9.81
		-5.0	43.3	3.33	52.0	4.55	60.7	5.75	65.0	6.35	73.7	7.52	82.3	8.68	91.0	9.82
		0.0	43.3	3.33	52.0	4.56	60.7	5.76	65.0	6.36	73.7	7.53	82.3	8.69	91.0	9.83
		5.0	43.3	3.34	52.0	4.57	60.7	5.78	65.0	6.37	73.7	7.55	82.3	8.70	91.0	9.84
		10.0	43.3	3.36	52.0	4.59	60.7	5.79	65.0	6.39	73.7	7.56	82.3	8.72	91.0	9.86
		15.0	43.3	3.38	52.0	4.61	60.7	5.82	65.0	6.41	73.7	7.59	82.3	8.75	91.0	9.88
		20.0	43.3	3.42	52.0	4.65	60.7	5.86	65.0	6.45	73.7	7.63	82.3	8.78	91.0	9.91
		25.0	43.3	3.54	52.0	4.77	60.7	5.98	65.0	6.58	73.7	7.82	82.3	8.91	91.0	10.05
		30.0	43.3	5.83	52.0	6.73	60.7	7.40	65.0	7.82	73.7	8.75	82.3	9.73	91.0	10.75
		35.0	43.3	8.04	52.0	9.35	60.7	10.55	65.0	11.11	73.7	12.16	82.3	13.11	91.0	13.99
		40.0	43.3	10.15	52.0	11.78	60.7	13.29	65.0	13.99	73.7	15.31	82.3	16.52	91.0	17.63
		43.0	43.3	11.45	52.0	13.28	60.7	14.96	65.0	15.75	73.7	17.24	82.3	18.61	91.0	19.87
		46.0	43.3	12.76	52.0	14.57	60.7	16.28	65.0	17.10	73.7	18.66	82.3	20.13	91.0	21.51
52.0	37.4	13.53	40.7	13.67	44.6	13.93	46.8	14.09	51.6	14.47	56.8	14.88	62.6	15.33		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	34.7	2.09	41.6	3.08	48.5	4.07	52.0	4.55	58.9	5.51	65.9	6.46	72.8	7.40
		-5.0	34.7	2.09	41.6	3.09	48.5	4.07	52.0	4.56	58.9	5.52	65.9	6.47	72.8	7.41
		0.0	34.7	2.10	41.6	3.10	48.5	4.08	52.0	4.57	58.9	5.53	65.9	6.48	72.8	7.42
		5.0	34.7	2.11	41.6	3.10	48.5	4.09	52.0	4.58	58.9	5.54	65.9	6.49	72.8	7.43
		10.0	34.7	2.12	41.6	3.12	48.5	4.10	52.0	4.59	58.9	5.55	65.9	6.50	72.8	7.45
		15.0	34.7	2.14	41.6	3.13	48.5	4.12	52.0	4.61	58.9	5.57	65.9	6.52	72.8	7.47
		20.0	34.7	2.17	41.6	3.16	48.5	4.15	52.0	4.63	58.9	5.60	65.9	6.55	72.8	7.50
		25.0	34.7	2.23	41.6	3.22	48.5	4.20	52.0	4.68	58.9	5.64	65.9	6.59	72.8	7.55
		30.0	34.7	3.04	41.6	3.71	48.5	4.54	52.0	4.97	58.9	5.86	65.9	6.85	72.8	7.91
		35.0	34.7	5.82	41.6	6.66	48.5	7.40	52.0	7.73	58.9	8.31	65.9	9.04	72.8	9.98
		40.0	34.7	7.49	41.6	8.59	48.5	9.56	52.0	9.99	58.9	10.78	65.9	11.46	72.8	12.04
		43.0	34.7	8.53	41.6	9.79	48.5	10.90	52.0	11.40	58.9	12.32	65.9	13.12	72.8	13.82
		46.0	34.7	10.01	41.6	11.22	48.5	12.31	52.0	12.82	58.9	13.75	65.9	14.58	72.8	15.32
52.0	34.7	11.95	40.7	13.67	44.6	13.93	46.8	14.09	51.6	14.47	56.8	14.88	62.6	15.33		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	26.0	0.83	31.2	1.59	36.4	2.35	39.0	2.73	44.2	3.48	49.4	4.21	54.6	4.93
		-5.0	26.0	0.84	31.2	1.60	36.4	2.36	39.0	2.73	44.2	3.48	49.4	4.22	54.6	4.94
		0.0	26.0	0.84	31.2	1.60	36.4	2.36	39.0	2.74	44.2	3.49	49.4	4.23	54.6	4.96
		5.0	26.0	0.85	31.2	1.61	36.4	2.37	39.0	2.75	44.2	3.50	49.4	4.24	54.6	4.97
		10.0	26.0	0.86	31.2	1.62	36.4	2.38	39.0	2.76	44.2	3.52	49.4	4.26	54.6	4.99
		15.0	26.0	0.87	31.2	1.63	36.4	2.40	39.0	2.78	44.2	3.54	49.4	4.28	54.6	5.01
		20.0	26.0	0.89	31.2	1.65	36.4	2.42	39.0	2.81	44.2	3.57	49.4	4.32	54.6	5.04
		25.0	26.0	0.93	31.2	1.69	36.4	2.46	39.0	2.85	44.2	3.61	49.4	4.38	54.6	5.17
		30.0	26.0	1.05	31.2	1.76	36.4	2.55	39.0	3.00	44.2	3.90	49.4	4.78	54.6	5.63
		35.0	26.0	3.86	31.2	4.35	36.4	4.92	39.0	5.29	44.2	6.03	49.4	6.76	54.6	7.47
		40.0	26.0	5.09	31.2	5.76	36.4	6.31	39.0	6.54	44.2	6.94	49.4	7.24	54.6	7.47
		43.0	26.0	5.87	31.2	6.65	36.4	7.31	39.0	7.59	44.2	8.07	49.4	8.45	54.6	8.74
		46.0	26.0	7.57	31.2	8.31	36.4	8.95	39.0	9.23	44.2	9.71	49.4	10.11	54.6	10.42
52.0	26.0	8.97	31.2	9.93	36.4	10.77	39.0	11.15	44.2	11.52	49.4	11.72	54.6	11.80		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-40. 46HP (Heating) U-14ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	99.8	33.97	97.3	33.38	92.2	32.14	89.6	31.48	81.5	29.34	75.9	27.77	61.2	23.35
		-19.8	-20.0	104.7	34.69	102.1	34.07	96.8	32.79	94.1	32.11	85.7	29.89	79.9	28.29	64.5	23.72
		-14.7	-15.0	111.6	35.79	108.9	35.13	103.3	33.78	100.4	33.06	91.6	30.74	85.4	29.05	69.0	24.29
		-9.6	-10.0	121.1	37.50	118.1	36.76	112.1	35.14	109.0	34.25	99.5	31.94	92.8	30.14	75.1	25.08
		-4.4	-5.0	133.4	39.17	130.2	38.48	123.6	37.00	120.2	36.21	109.7	33.58	102.3	31.63	82.7	26.17
		-1.8	-2.5	140.7	39.84	137.3	39.14	130.3	37.59	126.8	36.77	115.6	34.07	107.9	32.10	87.2	26.56
		0.8	0.0	148.9	40.47	145.3	39.72	137.9	38.10	134.1	37.24	122.4	34.45	114.2	32.43	91.3	26.33
		2.8	2.0	157.7	41.05	153.9	40.26	146.1	38.60	142.1	37.71	128.9	34.47	118.1	31.53	91.3	24.40
		6.0	5.0	166.5	39.45	161.1	38.10	150.4	35.43	145.0	34.12	128.9	30.26	118.1	27.70	91.3	21.59
		7.0	6.0	166.5	37.55	161.1	36.27	150.4	33.77	145.0	32.50	128.9	28.85	118.1	26.47	91.3	20.70
		8.6	7.5	166.5	34.72	161.1	33.56	150.4	31.28	145.0	30.16	128.9	26.85	118.1	24.68	91.3	19.41
		11.2	10.0	166.5	30.29	161.1	29.33	150.4	27.43	145.0	26.50	128.9	23.72	118.1	21.90	91.3	17.39
		16.4	15.0	166.5	22.55	161.1	21.93	150.4	20.69	145.0	20.06	128.9	18.16	118.1	16.88	91.3	13.60
		24.0	18.0	166.5	18.52	161.1	17.99	150.4	16.92	145.0	16.39	128.9	14.82	118.1	13.74	91.3	11.05

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	99.8	33.97	97.3	33.38	92.2	32.14	89.6	31.48	81.5	29.34	75.9	27.77	61.2	23.35
		-19.8	-20.0	104.7	34.69	102.1	34.07	96.8	32.79	94.1	32.11	85.7	29.89	79.9	28.29	64.5	23.72
		-14.7	-15.0	111.6	35.79	108.9	35.13	103.3	33.78	100.4	33.06	91.6	30.74	85.4	29.05	69.0	24.29
		-9.6	-10.0	121.1	37.50	118.1	36.76	112.1	35.14	109.0	34.25	99.5	31.94	92.8	30.14	75.1	25.08
		-4.4	-5.0	133.4	39.17	130.2	38.48	123.6	37.00	120.2	36.21	109.7	33.58	102.3	31.63	82.2	26.17
		-1.8	-2.5	140.7	39.84	137.3	39.14	130.3	37.59	126.8	36.77	115.6	34.07	106.3	29.70	82.2	23.54
		0.8	0.0	148.9	40.47	145.0	39.72	135.3	34.16	130.5	33.06	116.0	29.74	106.3	27.51	82.2	21.91
		2.8	2.0	149.8	34.17	145.0	33.20	135.3	31.25	130.5	30.27	116.0	27.31	106.3	25.38	82.2	20.49
		6.0	5.0	149.8	29.67	145.0	28.96	135.3	27.52	130.5	26.77	116.0	24.43	106.3	22.70	82.2	18.22
		7.0	6.0	149.8	29.03	145.0	28.22	135.3	26.59	130.5	25.77	116.0	23.31	106.3	21.66	82.2	17.46
		8.6	7.5	149.8	26.70	145.0	25.98	135.3	24.54	130.5	23.82	116.0	21.63	106.3	20.14	82.2	16.35
		11.2	10.0	149.8	23.03	145.0	22.47	135.3	21.33	130.5	20.76	116.0	19.00	106.3	17.78	82.2	14.61
		16.4	15.0	149.8	16.87	145.0	16.39	135.3	15.73	130.5	15.38	116.0	14.27	106.3	13.48	82.2	11.29
		24.0	18.0	149.8	16.87	145.0	16.39	135.3	15.42	130.5	14.94	116.0	13.50	106.3	12.54	82.2	10.14

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	99.8	33.97	97.3	33.38	92.2	32.14	89.6	31.48	81.5	29.34	75.9	27.77	61.2	23.35
		-19.8	-20.0	104.7	34.69	102.1	34.07	96.8	32.79	94.1	32.11	85.7	29.89	79.9	28.29	64.5	23.72
		-14.7	-15.0	111.6	35.79	108.9	35.13	103.3	33.78	100.4	33.06	91.6	30.74	85.4	29.05	69.0	24.29
		-9.6	-10.0	121.1	37.50	118.1	36.76	112.1	35.14	109.0	34.25	99.5	31.94	92.8	30.14	73.0	25.08
		-4.4	-5.0	133.2	39.17	128.9	32.53	120.3	30.87	116.0	30.03	103.1	27.41	94.5	25.61	73.0	20.85
		-1.8	-2.5	133.2	30.78	128.9	30.07	120.3	28.60	116.0	27.85	103.1	25.50	94.5	23.87	73.0	19.65
		0.8	0.0	133.2	28.10	128.9	27.42	120.3	26.28	116.0	25.67	103.1	23.71	94.5	22.30	73.0	18.43
		2.8	2.0	133.2	25.82	128.9	25.35	120.3	24.32	116.0	23.77	103.1	22.02	94.5	20.74	73.0	17.21
		6.0	5.0	133.2	22.79	128.9	22.40	120.3	21.55	116.0	21.09	103.1	19.60	94.5	18.46	73.0	15.28
		7.0	6.0	133.2	22.12	128.9	21.66	120.3	20.71	116.0	20.22	103.1	18.67	94.5	17.58	73.0	14.63
		8.6	7.5	133.2	20.20	128.9	19.82	120.3	19.01	116.0	18.59	103.1	17.26	94.5	16.31	73.0	13.69
		11.2	10.0	133.2	17.21	128.9	16.95	120.3	16.37	116.0	16.07	103.1	15.06	94.5	14.33	73.0	12.21
		16.4	15.0	133.2	15.21	128.9	14.78	120.3	13.93	116.0	13.50	103.1	12.22	94.5	11.37	73.0	9.34
		24.0	18.0	133.2	15.21	128.9	14.78	120.3	13.93	116.0	13.50	103.1	12.22	94.5	11.37	73.0	9.23

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	99.8	33.97	97.3	33.38	92.2	32.14	89.6	31.48	81.5	29.34	75.9	27.77	61.2	23.35
		-19.8	-20.0	104.7	34.69	102.1	34.07	96.8	32.79	94.1	32.11	85.7	29.89	79.9	28.29	63.9	23.72
		-14.7	-15.0	111.6	35.79	108.9	35.13	103.3	33.78	100.4	33.06	90.2	30.74	82.7	25.42	63.9	20.78
		-9.6	-10.0	116.5	28.83	112.8	28.28	105.3	27.12	101.5	26.51	90.2	24.55	82.7	23.14	63.9	19.33
		-4.4	-5.0	116.5	25.21	112.8	24.82	105.3	23.98	101.5	23.51	90.2	21.97	82.7	20.81	63.9	17.49
		-1.8	-2.5	116.5	23.49	112.8	23.14	105.3	22.38	101.5	21.97	90.2	20.57	82.7	19.52	63.9	16.47
		0.8	0.0	116.5	21.67	112.8	21.37	105.3	20.72	101.5	20.35	90.2	19.11	82.7	18.17	63.9	15.41
		2.8	2.0	116.5	19.87	112.8	19.62	105.3	19.07	101.5	18.76	90.2	17.68	82.7	16.84	63.9	14.36
		6.0	5.0	116.5	17.30	112.8	17.13	105.3	16.71	101.5	16.47	90.2	15.59	82.7	14.88	63.9	12.70
		7.0	6.0	116.5	16.59	112.8	16.39	105.3	15.93	101.5	15.67	90.2	14.81	82.7	14.15	63.9	12.18
		8.6	7.5	116.5	15.05	112.8	14.90	105.3	14.55	101.5	14.35	90.2	13.65	82.7	13.10	63.9	11.39
		11.2	10.0	116.5	13.56	112.8	13.18	105.3	12.46	101.5	12.33	90.2	11.86	82.7	11.46	63.9	10.14
		16.4	15.0	116.5	13.56	112.8	13.18	105.3	12.44	101.5	12.06	90.2	10.94	82.7	10.19	63.9	8.33
		24.0	18.0	116.5	13.56	112.8	13.18	105.3	12.44	101.5	12.06	90.2	10.94	82.7	10.19	63.9	8.33

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

46HP (Heating) U-14ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	60%	-24.9	-25.0	99.8	33.97	96.7	27.68	90.2	26.68	87.0	26.14	77.3	24.30	70.9	22.83	54.8	18.80
		-19.8	-20.0	99.9	26.46	96.7	26.05	90.2	25.15	87.0	24.67	77.3	23.08	70.9	21.91	54.8	18.18
		-14.7	-15.0	99.9	24.44	96.7	24.12	90.2	23.40	87.0	22.99	77.3	21.61	70.9	20.56	54.8	17.44
		-9.6	-10.0	99.9	22.22	96.7	21.96	90.2	21.36	87.0	21.01	77.3	19.83	70.9	18.90	54.8	16.11
		-4.4	-5.0	99.9	19.61	96.7	19.41	90.2	18.94	87.0	18.67	77.3	17.70	70.9	16.93	54.8	14.55
		-1.8	-2.5	99.9	18.17	96.7	18.01	90.2	17.61	87.0	17.37	77.3	16.53	70.9	15.84	54.8	13.69
		0.8	0.0	99.9	16.66	96.7	16.54	90.2	16.22	87.0	16.03	77.3	15.31	70.9	14.71	54.8	12.79
		2.8	2.0	99.9	15.16	96.7	15.08	90.2	14.85	87.0	14.70	77.3	14.11	70.9	13.59	54.8	11.90
		6.0	5.0	99.9	13.04	96.7	13.00	90.2	12.86	87.0	12.75	77.3	12.28	70.9	11.88	54.8	10.43
		7.0	6.0	99.9	12.30	96.7	12.25	90.2	12.12	87.0	12.02	77.3	11.64	70.9	11.29	54.8	10.06
		8.6	7.5	99.9	11.90	96.7	11.58	90.2	11.05	87.0	10.99	77.3	10.71	70.9	10.44	54.8	9.41
		11.2	10.0	99.9	11.90	96.7	11.58	90.2	10.94	87.0	10.62	77.3	9.66	70.9	9.13	54.8	8.38
		16.4	15.0	99.9	11.90	96.7	11.58	90.2	10.94	87.0	10.62	77.3	9.66	70.9	9.02	54.8	7.42
		24.0	18.0	99.9	11.90	96.7	11.58	90.2	10.94	87.0	10.62	77.3	9.66	70.9	9.02	54.8	7.42

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	50%	-24.9	-25.0	83.2	21.71	80.6	21.47	75.2	20.91	72.5	20.59	64.4	19.48	59.1	18.60	45.6	15.61
		-19.8	-20.0	83.2	20.57	80.6	20.36	75.2	19.86	72.5	19.57	64.4	18.55	59.1	17.75	45.6	15.20
		-14.7	-15.0	83.2	19.08	80.6	18.91	75.2	18.49	72.5	18.24	64.4	17.35	59.1	16.62	45.6	14.36
		-9.6	-10.0	83.2	17.26	80.6	17.13	75.2	16.80	72.5	16.60	64.4	15.86	59.1	15.24	45.6	13.25
		-4.4	-5.0	83.2	15.12	80.6	15.04	75.2	14.82	72.5	14.68	64.4	14.11	59.1	13.61	45.6	11.96
		-1.8	-2.5	83.2	13.94	80.6	13.90	75.2	13.73	72.5	13.62	64.4	13.15	59.1	12.72	45.6	11.24
		0.8	0.0	83.2	12.71	80.6	12.70	75.2	12.60	72.5	12.52	64.4	12.15	59.1	11.79	45.6	10.50
		2.8	2.0	83.2	11.51	80.6	11.52	75.2	11.49	72.5	11.44	64.4	11.17	59.1	10.87	45.6	9.73
		6.0	5.0	83.2	10.25	80.6	9.98	75.2	9.72	72.5	9.71	64.4	9.57	59.1	9.38	45.6	8.51
		7.0	6.0	83.2	10.25	80.6	9.98	75.2	9.45	72.5	9.18	64.4	9.07	59.1	8.92	45.6	8.22
		8.6	7.5	83.2	10.25	80.6	9.98	75.2	9.45	72.5	9.18	64.4	8.38	59.1	8.26	45.6	7.70
		11.2	10.0	83.2	10.25	80.6	9.98	75.2	9.45	72.5	9.18	64.4	8.38	59.1	7.85	45.6	6.88
		16.4	15.0	83.2	10.25	80.6	9.98	75.2	9.45	72.5	9.18	64.4	8.38	59.1	7.85	45.6	6.51
		24.0	18.0	83.2	10.25	80.6	9.98	75.2	9.45	72.5	9.18	64.4	8.38	59.1	7.85	45.6	6.51

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	40%	-24.9	-25.0	66.6	16.70	64.4	16.57	60.1	16.24	58.0	16.05	51.6	15.32	47.3	14.72	36.5	12.70
		-19.8	-20.0	66.6	15.80	64.4	15.69	60.1	15.41	58.0	15.24	51.6	14.58	47.3	14.03	36.5	12.26
		-14.7	-15.0	66.6	14.61	64.4	14.54	60.1	14.32	58.0	14.18	51.6	13.63	47.3	13.15	36.5	11.55
		-9.6	-10.0	66.6	13.18	64.4	13.13	60.1	12.98	58.0	12.88	51.6	12.44	47.3	12.04	36.5	10.67
		-4.4	-5.0	66.6	11.49	64.4	11.49	60.1	11.42	58.0	11.36	51.6	11.05	47.3	10.75	36.5	9.63
		-1.8	-2.5	66.6	10.57	64.4	10.59	60.1	10.57	58.0	10.53	51.6	10.30	47.3	10.05	36.5	9.07
		0.8	0.0	66.6	9.62	64.4	9.64	60.1	9.65	58.0	9.63	51.6	9.46	47.3	9.26	36.5	8.43
		2.8	2.0	66.6	8.59	64.4	8.59	60.1	8.65	58.0	8.66	51.6	8.59	47.3	8.45	36.5	7.80
		6.0	5.0	66.6	8.59	64.4	8.38	60.1	7.95	58.0	7.74	51.6	7.37	47.3	7.32	36.5	6.89
		7.0	6.0	66.6	8.59	64.4	8.38	60.1	7.95	58.0	7.74	51.6	7.10	47.3	6.98	36.5	6.64
		8.6	7.5	66.6	8.59	64.4	8.38	60.1	7.95	58.0	7.74	51.6	7.10	47.3	6.67	36.5	6.23
		11.2	10.0	66.6	8.59	64.4	8.38	60.1	7.95	58.0	7.74	51.6	7.10	47.3	6.67	36.5	5.61
		16.4	15.0	66.6	8.59	64.4	8.38	60.1	7.95	58.0	7.74	51.6	7.10	47.3	6.67	36.5	5.61
		24.0	18.0	66.6	8.59	64.4	8.38	60.1	7.95	58.0	7.74	51.6	7.10	47.3	6.67	36.5	5.61

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	30%	-24.9	-25.0	49.9	12.37	48.3	12.31	45.1	12.14	43.5	12.03	38.7	11.58	35.4	11.19	27.4	9.87
		-19.8	-20.0	49.9	11.70	48.3	11.65	45.1	11.52	43.5	11.42	38.7	11.03	35.4	10.68	27.4	9.48
		-14.7	-15.0	49.9	10.82	48.3	10.80	45.1	10.70	43.5	10.63	38.7	10.31	35.4	10.01	27.4	8.95
		-9.6	-10.0	49.9	9.76	48.3	9.76	45.1	9.71	43.5	9.66	38.7	9.43	35.4	9.19	27.4	8.29
		-4.4	-5.0	49.9	8.42	48.3	8.45	45.1	8.47	43.5	8.45	38.7	8.32	35.4	8.16	27.4	7.46
		-1.8	-2.5	49.9	7.67	48.3	7.71	45.1	7.77	43.5	7.78	38.7	7.71	35.4	7.59	27.4	7.02
		0.8	0.0	49.9	6.94	48.3	6.96	45.1	7.05	43.5	7.07	38.7	7.08	35.4	7.00	27.4	6.55
		2.8	2.0	49.9	6.94	48.3	6.78	45.1	6.46	43.5	6.40	38.7	6.45	35.4	6.43	27.4	6.10
		6.0	5.0	49.9	6.94	48.3	6.78	45.1	6.46	43.5	6.30	38.7	5.82	35.4	5.63	27.4	5.45
		7.0	6.0	49.9	6.94	48.3	6.78	45.1	6.46	43.5	6.30	38.7	5.82	35.4	5.50	27.4	5.25
		8.6	7.5	49.9	6.94	48.3	6.78	45.1	6.46	43.5	6.30	38.7	5.82	35.4	5.50	27.4	4.97
		11.2	10.0	49.9	6.94	48.3	6.78	45.1	6.46	43.5	6.30	38.7	5.82	35.4	5.50	27.4	4.70
		16.4	15.0	49.9	6.94	48.3	6.78	45.1	6.46	43.5	6.30	38.7	5.82	35.4	5.50	27.4	4.70
		24.0	18.0	49.9	6.94	48.3	6.78	45.1	6.46	43.5	6.30	38.7	5.82	35.4	5.50	27.4	4.70

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-41. 48HP (Cooling) U-16ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	90.0	10.65	108.0	12.78	126.0	14.91	135.0	15.98	153.0	18.11	171.0	20.25	189.0	22.37
		-5.0	90.0	10.67	108.0	12.80	126.0	14.93	135.0	16.00	153.0	18.13	171.0	20.26	189.0	22.39
		0.0	90.0	10.68	108.0	12.82	126.0	14.96	135.0	16.02	153.0	18.15	171.0	20.30	189.0	22.45
		5.0	90.0	10.71	108.0	12.84	126.0	14.98	135.0	16.06	153.0	18.24	171.0	20.44	189.0	22.61
		10.0	90.0	10.74	108.0	12.91	126.0	15.13	135.0	16.25	153.0	18.52	171.0	20.80	189.0	23.02
		15.0	90.0	10.94	108.0	13.28	126.0	15.66	135.0	16.87	153.0	19.30	171.0	21.75	189.0	24.02
		20.0	90.0	12.10	108.0	14.78	126.0	17.94	135.0	19.65	153.0	23.33	171.0	27.36	189.0	31.75
		25.0	90.0	15.48	108.0	19.18	126.0	23.25	135.0	25.42	153.0	30.03	171.0	35.02	189.0	40.37
		30.0	90.0	19.46	108.0	24.07	126.0	29.05	135.0	31.69	153.0	37.27	171.0	43.24	189.0	49.62
		35.0	90.0	23.75	108.0	29.31	126.0	35.28	135.0	38.43	153.0	45.05	171.0	52.11	180.6	53.76
		40.0	90.0	28.37	108.0	34.96	126.0	42.00	135.0	45.70	153.0	53.46	159.9	53.75	166.8	53.75
		43.0	90.0	31.31	108.0	38.55	126.0	46.29	135.0	50.36	145.9	53.75	152.9	53.75	156.4	51.20
		46.0	89.1	34.06	106.9	41.95	113.6	42.68	114.8	41.53	117.8	39.61	121.7	38.09	126.4	36.91
52.0	38.8	14.42	42.3	14.57	46.4	14.85	48.6	15.02	53.6	15.42	59.0	15.87	65.0	16.35		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	81.0	8.61	97.2	10.80	113.4	12.94	121.5	13.99	137.7	16.05	153.9	18.06	170.1	20.02
		-5.0	81.0	8.63	97.2	10.82	113.4	12.95	121.5	14.00	137.7	16.06	153.9	18.08	170.1	20.04
		0.0	81.0	8.64	97.2	10.84	113.4	12.98	121.5	14.03	137.7	16.09	153.9	18.09	170.1	20.06
		5.0	81.0	8.67	97.2	10.86	113.4	13.00	121.5	14.05	137.7	16.11	153.9	18.15	170.1	20.14
		10.0	81.0	8.70	97.2	10.90	113.4	13.06	121.5	14.13	137.7	16.25	153.9	18.33	170.1	20.38
		15.0	81.0	8.79	97.2	11.08	113.4	13.35	121.5	14.47	137.7	16.68	153.9	18.85	170.1	20.97
		20.0	81.0	9.50	97.2	12.03	113.4	14.49	121.5	15.69	137.7	18.04	153.9	20.77	170.1	23.68
		25.0	81.0	12.45	97.2	15.48	113.4	18.62	121.5	20.23	137.7	23.52	153.9	26.90	170.1	30.36
		30.0	81.0	16.16	97.2	19.82	113.4	23.56	121.5	25.45	137.7	29.29	153.9	33.21	170.1	37.23
		35.0	81.0	20.76	97.2	25.20	113.4	29.69	121.5	31.95	137.7	36.54	153.9	41.25	170.1	46.13
		40.0	81.0	24.85	97.2	29.94	113.4	35.07	121.5	37.67	137.7	42.97	153.9	48.49	166.8	53.75
		43.0	81.0	27.37	97.2	32.87	113.4	38.43	121.5	41.25	137.7	47.07	152.9	53.75	156.4	51.20
		46.0	81.0	29.34	97.2	35.66	113.4	42.28	114.8	41.53	117.8	39.61	121.7	38.09	126.4	36.91
52.0	38.8	14.42	42.3	14.57	46.4	14.85	48.6	15.02	53.6	15.42	59.0	15.87	65.0	16.35		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	72.0	7.38	86.4	9.37	100.8	11.30	108.0	12.26	122.4	14.13	136.8	15.97	151.2	17.77
		-5.0	72.0	7.39	86.4	9.38	100.8	11.32	108.0	12.27	122.4	14.15	136.8	15.99	151.2	17.78
		0.0	72.0	7.41	86.4	9.39	100.8	11.34	108.0	12.29	122.4	14.17	136.8	16.01	151.2	17.81
		5.0	72.0	7.43	86.4	9.42	100.8	11.36	108.0	12.32	122.4	14.19	136.8	16.03	151.2	17.83
		10.0	72.0	7.46	86.4	9.45	100.8	11.39	108.0	12.34	122.4	14.23	136.8	16.09	151.2	17.92
		15.0	72.0	7.50	86.4	9.51	100.8	11.50	108.0	12.49	122.4	14.43	136.8	16.34	151.2	18.21
		20.0	72.0	7.82	86.4	9.97	100.8	12.08	108.0	13.11	122.4	15.14	136.8	17.11	151.2	19.03
		25.0	72.0	10.03	86.4	12.32	100.8	14.66	108.0	15.84	122.4	18.23	136.8	20.65	151.2	23.09
		30.0	72.0	13.27	86.4	16.13	100.8	18.99	108.0	20.43	122.4	23.31	136.8	26.19	151.2	29.08
		35.0	72.0	17.32	86.4	20.85	100.8	24.35	108.0	26.09	122.4	29.57	136.8	33.05	151.2	36.53
		40.0	72.0	20.95	86.4	25.04	100.8	29.08	108.0	31.08	122.4	35.09	136.8	39.11	151.2	43.17
		43.0	72.0	23.19	86.4	27.63	100.8	32.01	108.0	34.19	122.4	38.55	136.8	42.96	151.2	47.47
		46.0	72.0	24.77	86.4	29.69	100.8	34.73	108.0	37.31	117.8	39.61	121.7	38.09	126.4	36.91
52.0	38.8	14.42	42.3	14.57	46.4	14.85	48.6	15.02	53.6	15.42	59.0	15.87	65.0	16.35		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	63.0	6.13	75.6	7.90	88.2	9.63	94.5	10.49	107.1	12.17	119.7	13.82	132.3	15.43
		-5.0	63.0	6.14	75.6	7.91	88.2	9.64	94.5	10.50	107.1	12.18	119.7	13.83	132.3	15.45
		0.0	63.0	6.15	75.6	7.92	88.2	9.66	94.5	10.51	107.1	12.20	119.7	13.85	132.3	15.46
		5.0	63.0	6.17	75.6	7.94	88.2	9.68	94.5	10.53	107.1	12.22	119.7	13.87	132.3	15.49
		10.0	63.0	6.19	75.6	7.97	88.2	9.71	94.5	10.56	107.1	12.25	119.7	13.89	132.3	15.51
		15.0	63.0	6.23	75.6	8.01	88.2	9.74	94.5	10.60	107.1	12.30	119.7	13.98	132.3	15.62
		20.0	63.0	6.34	75.6	8.17	88.2	9.98	94.5	10.86	107.1	12.61	119.7	14.32	132.3	16.00
		25.0	63.0	7.60	75.6	9.48	88.2	11.29	94.5	12.17	107.1	13.89	119.7	15.57	132.3	17.20
		30.0	63.0	10.64	75.6	12.78	88.2	14.88	94.5	15.92	107.1	17.97	119.7	19.99	132.3	21.97
		35.0	63.0	14.13	75.6	16.85	88.2	19.50	94.5	20.80	107.1	23.35	119.7	25.84	132.3	28.29
		40.0	63.0	17.30	75.6	20.51	88.2	23.61	94.5	25.13	107.1	28.11	119.7	31.01	132.3	33.86
		43.0	63.0	19.26	75.6	22.76	88.2	26.15	94.5	27.81	107.1	31.05	119.7	34.23	132.3	37.35
		46.0	63.0	20.64	75.6	24.37	88.2	28.11	94.5	29.98	107.1	33.74	119.7	36.15	126.4	36.91
52.0	38.8	14.42	42.3	14.57	46.4	14.85	48.6	15.02	53.6	15.42	59.0	15.87	65.0	16.35		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

48HP (Cooling) U-16ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	54.0	4.86	64.8	6.40	75.6	7.92	81.0	8.67	91.8	10.14	102.6	11.59	113.4	13.02
		-5.0	54.0	4.87	64.8	6.41	75.6	7.93	81.0	8.68	91.8	10.15	102.6	11.60	113.4	13.03
		0.0	54.0	4.88	64.8	6.42	75.6	7.94	81.0	8.69	91.8	10.17	102.6	11.62	113.4	13.04
		5.0	54.0	4.89	64.8	6.44	75.6	7.96	81.0	8.71	91.8	10.18	102.6	11.64	113.4	13.06
		10.0	54.0	4.91	64.8	6.46	75.6	7.98	81.0	8.73	91.8	10.21	102.6	11.66	113.4	13.08
		15.0	54.0	4.94	64.8	6.49	75.6	8.01	81.0	8.76	91.8	10.24	102.6	11.69	113.4	13.11
		20.0	54.0	4.99	64.8	6.54	75.6	8.07	81.0	8.83	91.8	10.32	102.6	11.79	113.4	13.23
		25.0	54.0	5.46	64.8	7.05	75.6	8.60	81.0	9.36	91.8	10.85	102.6	12.31	113.4	13.74
		30.0	54.0	8.26	64.8	9.79	75.6	11.25	81.0	11.96	91.8	13.32	102.6	14.62	113.4	15.87
		35.0	54.0	11.19	64.8	13.20	75.6	15.11	81.0	16.03	91.8	17.80	102.6	19.48	113.4	21.09
		40.0	54.0	13.91	64.8	16.34	75.6	18.64	81.0	19.75	91.8	21.87	102.6	23.89	113.4	25.82
		43.0	54.0	15.59	64.8	18.27	75.6	20.81	81.0	22.02	91.8	24.37	102.6	26.60	113.4	28.73
		46.0	54.0	16.92	64.8	19.67	75.6	22.34	81.0	23.66	91.8	26.23	102.6	28.75	113.4	31.21
52.0	38.8	14.42	42.3	14.57	46.4	14.85	48.6	15.02	53.6	15.42	59.0	15.87	65.0	16.35		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	45.0	3.56	54.0	4.87	63.0	6.16	67.5	6.80	76.5	8.06	85.5	9.30	94.5	10.51
		-5.0	45.0	3.57	54.0	4.88	63.0	6.17	67.5	6.81	76.5	8.07	85.5	9.31	94.5	10.52
		0.0	45.0	3.58	54.0	4.89	63.0	6.18	67.5	6.82	76.5	8.08	85.5	9.32	94.5	10.53
		5.0	45.0	3.59	54.0	4.90	63.0	6.19	67.5	6.83	76.5	8.09	85.5	9.33	94.5	10.55
		10.0	45.0	3.60	54.0	4.92	63.0	6.21	67.5	6.85	76.5	8.11	85.5	9.35	94.5	10.57
		15.0	45.0	3.63	54.0	4.94	63.0	6.24	67.5	6.87	76.5	8.14	85.5	9.37	94.5	10.59
		20.0	45.0	3.67	54.0	4.98	63.0	6.28	67.5	6.92	76.5	8.17	85.5	9.41	94.5	10.62
		25.0	45.0	3.79	54.0	5.11	63.0	6.40	67.5	7.04	76.5	8.31	85.5	9.54	94.5	10.76
		30.0	45.0	6.16	54.0	7.13	63.0	7.87	67.5	8.33	76.5	9.33	85.5	10.39	94.5	11.48
		35.0	45.0	8.53	54.0	9.93	63.0	11.22	67.5	11.82	76.5	12.94	85.5	13.97	94.5	14.90
		40.0	45.0	10.79	54.0	12.54	63.0	14.15	67.5	14.91	76.5	16.32	85.5	17.62	94.5	18.81
		43.0	45.0	12.18	54.0	14.15	63.0	15.95	67.5	16.80	76.5	18.40	85.5	19.86	94.5	21.22
		46.0	45.0	13.60	54.0	15.54	63.0	17.37	67.5	18.24	76.5	19.92	85.5	21.49	94.5	22.98
52.0	38.8	14.42	42.3	14.57	46.4	14.85	48.6	15.02	53.6	15.42	59.0	15.87	65.0	16.35		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	36.0	2.24	43.2	3.31	50.4	4.36	54.0	4.88	61.2	5.91	68.4	6.93	75.6	7.94
		-5.0	36.0	2.25	43.2	3.32	50.4	4.37	54.0	4.89	61.2	5.92	68.4	6.94	75.6	7.94
		0.0	36.0	2.25	43.2	3.32	50.4	4.38	54.0	4.90	61.2	5.93	68.4	6.95	75.6	7.95
		5.0	36.0	2.26	43.2	3.33	50.4	4.39	54.0	4.91	61.2	5.94	68.4	6.96	75.6	7.97
		10.0	36.0	2.27	43.2	3.34	50.4	4.40	54.0	4.92	61.2	5.95	68.4	6.97	75.6	7.98
		15.0	36.0	2.29	43.2	3.36	50.4	4.42	54.0	4.94	61.2	5.97	68.4	6.99	75.6	8.00
		20.0	36.0	2.32	43.2	3.39	50.4	4.45	54.0	4.97	61.2	6.00	68.4	7.02	75.6	8.04
		25.0	36.0	2.39	43.2	3.45	50.4	4.50	54.0	5.02	61.2	6.04	68.4	7.06	75.6	8.09
		30.0	36.0	3.23	43.2	3.96	50.4	4.85	54.0	5.32	61.2	6.27	68.4	7.33	75.6	8.46
		35.0	36.0	6.14	43.2	7.05	50.4	7.84	54.0	8.19	61.2	8.82	68.4	9.60	75.6	10.60
		40.0	36.0	7.94	43.2	9.12	50.4	10.15	54.0	10.62	61.2	11.47	68.4	12.20	75.6	12.82
		43.0	36.0	9.05	43.2	10.40	50.4	11.59	54.0	12.14	61.2	13.12	68.4	13.98	75.6	14.73
		46.0	36.0	10.65	43.2	11.94	50.4	13.11	54.0	13.66	61.2	14.66	68.4	15.55	75.6	16.35
52.0	36.0	12.73	42.3	14.57	46.4	14.85	48.6	15.02	53.6	15.42	59.0	15.87	65.0	16.35		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	27.0	0.90	32.4	1.71	37.8	2.52	40.5	2.93	45.9	3.73	51.3	4.52	56.7	5.29
		-5.0	27.0	0.90	32.4	1.72	37.8	2.53	40.5	2.94	45.9	3.74	51.3	4.53	56.7	5.30
		0.0	27.0	0.91	32.4	1.72	37.8	2.54	40.5	2.94	45.9	3.75	51.3	4.54	56.7	5.31
		5.0	27.0	0.91	32.4	1.73	37.8	2.54	40.5	2.95	45.9	3.76	51.3	4.55	56.7	5.33
		10.0	27.0	0.92	32.4	1.74	37.8	2.55	40.5	2.96	45.9	3.77	51.3	4.57	56.7	5.35
		15.0	27.0	0.93	32.4	1.75	37.8	2.57	40.5	2.98	45.9	3.79	51.3	4.59	56.7	5.37
		20.0	27.0	0.96	32.4	1.77	37.8	2.59	40.5	3.01	45.9	3.83	51.3	4.62	56.7	5.40
		25.0	27.0	1.00	32.4	1.81	37.8	2.63	40.5	3.05	45.9	3.87	51.3	4.70	56.7	5.53
		30.0	27.0	1.12	32.4	1.89	37.8	2.73	40.5	3.20	45.9	4.16	51.3	5.10	56.7	6.01
		35.0	27.0	4.04	32.4	4.56	37.8	5.17	40.5	5.58	45.9	6.37	51.3	7.15	56.7	7.92
		40.0	27.0	5.37	32.4	6.08	37.8	6.67	40.5	6.92	45.9	7.34	51.3	7.67	56.7	7.92
		43.0	27.0	6.20	32.4	7.04	37.8	7.74	40.5	8.04	45.9	8.56	51.3	8.97	56.7	9.28
		46.0	27.0	8.04	32.4	8.83	37.8	9.51	40.5	9.81	45.9	10.33	51.3	10.75	56.7	11.09
52.0	27.0	9.53	32.4	10.56	37.8	11.46	40.5	11.87	45.9	12.27	51.3	12.48	56.7	12.56		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-42. 48HP (Heating) U-16ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	100%	-24.9	-25.0	102.3	34.74	99.7	34.14	94.6	32.89	91.9	32.21	83.7	30.06	78.1	28.47	63.0	23.96
		-19.8	-20.0	107.2	35.44	104.6	34.84	99.2	33.52	96.5	32.84	88.0	30.60	82.1	28.97	66.4	24.34
		-14.7	-15.0	114.3	36.54	111.6	35.89	105.9	34.52	103.0	33.80	94.0	31.44	87.7	29.74	71.0	24.91
		-9.6	-10.0	123.9	38.19	121.0	37.41	114.9	35.93	111.8	35.16	102.1	32.65	95.3	30.83	77.3	25.71
		-4.4	-5.0	136.5	40.06	133.3	39.36	126.6	37.86	123.2	37.05	112.5	34.36	105.1	32.37	85.1	26.81
		-1.8	-2.5	144.0	40.79	140.6	40.07	133.6	38.52	129.9	37.67	118.7	34.93	110.8	32.92	89.8	27.27
		0.8	0.0	152.4	41.45	148.8	40.68	141.3	39.05	137.5	38.18	125.5	35.33	117.2	33.27	94.4	27.26
		2.8	2.0	161.4	42.04	157.5	41.24	149.6	39.54	145.6	38.64	133.1	35.75	122.2	32.73	94.4	25.27
		6.0	5.0	172.2	41.25	166.7	39.80	155.6	36.96	150.0	35.57	133.3	31.48	122.2	28.79	94.4	22.38
		7.0	6.0	172.2	39.27	166.7	37.91	155.6	35.24	150.0	33.90	133.3	30.03	122.2	27.52	94.4	21.46
		8.6	7.5	172.2	36.35	166.7	35.11	155.6	32.67	150.0	31.47	133.3	27.95	122.2	25.67	94.4	20.12
		11.2	10.0	172.2	31.73	166.7	30.69	155.6	28.66	150.0	27.66	133.3	24.71	122.2	22.78	94.4	18.04
		16.4	15.0	172.2	23.67	166.7	23.00	155.6	21.66	150.0	20.99	133.3	18.97	122.2	17.61	94.4	14.15
		24.0	18.0	172.2	19.37	166.7	18.84	155.6	17.76	150.0	17.22	133.3	15.55	122.2	14.41	94.4	11.51

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	90%	-24.9	-25.0	102.3	34.74	99.7	34.14	94.6	32.89	91.9	32.21	83.7	30.06	78.1	28.47	63.0	23.96
		-19.8	-20.0	107.2	35.44	104.6	34.84	99.2	33.52	96.5	32.84	88.0	30.60	82.1	28.97	66.4	24.34
		-14.7	-15.0	114.3	36.54	111.6	35.89	105.9	34.52	103.0	33.80	94.0	31.44	87.7	29.74	71.0	24.91
		-9.6	-10.0	123.9	38.19	121.0	37.41	114.9	35.93	111.8	35.16	102.1	32.65	95.3	30.83	77.3	25.71
		-4.4	-5.0	136.5	40.06	133.3	39.36	126.6	37.86	123.2	37.05	112.5	34.36	105.1	32.37	85.0	26.81
		-1.8	-2.5	144.0	40.79	140.6	40.07	133.6	38.52	129.9	37.67	118.7	34.93	110.0	32.92	85.0	24.35
		0.8	0.0	152.4	41.45	148.8	40.68	140.0	35.54	135.0	34.37	120.0	30.86	110.0	28.52	85.0	22.65
		2.8	2.0	155.0	35.65	150.0	34.61	140.0	32.53	135.0	31.49	120.0	28.30	110.0	26.34	85.0	21.24
		6.0	5.0	155.0	30.98	150.0	30.24	140.0	28.70	135.0	27.90	120.0	25.43	110.0	23.59	85.0	18.89
		7.0	6.0	155.0	30.38	150.0	29.50	140.0	27.75	135.0	26.88	120.0	24.26	110.0	22.51	85.0	18.10
		8.6	7.5	155.0	27.95	150.0	27.17	140.0	25.63	135.0	24.85	120.0	22.51	110.0	20.94	85.0	16.95
		11.2	10.0	155.0	24.14	150.0	23.53	140.0	22.30	135.0	21.68	120.0	19.79	110.0	18.50	85.0	15.17
		16.4	15.0	155.0	17.54	150.0	17.20	140.0	16.48	135.0	16.11	120.0	14.92	110.0	14.07	85.0	11.76
		24.0	18.0	155.0	17.33	150.0	16.84	140.0	15.86	135.0	15.37	120.0	13.90	110.0	12.92	85.0	10.47

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	80%	-24.9	-25.0	102.3	34.74	99.7	34.14	94.6	32.89	91.9	32.21	83.7	30.06	78.1	28.47	63.0	23.96
		-19.8	-20.0	107.2	35.44	104.6	34.84	99.2	33.52	96.5	32.84	88.0	30.60	82.1	28.97	66.4	24.34
		-14.7	-15.0	114.3	36.54	111.6	35.89	105.9	34.52	103.0	33.80	94.0	31.44	87.7	29.74	71.0	24.91
		-9.6	-10.0	123.9	38.19	121.0	37.41	114.9	35.93	111.8	35.16	102.1	32.65	95.3	30.83	75.6	25.71
		-4.4	-5.0	136.5	40.06	133.3	39.36	124.4	32.04	120.0	31.15	106.7	28.39	97.8	26.50	75.6	21.54
		-1.8	-2.5	137.8	32.02	133.3	31.26	124.4	29.70	120.0	28.90	106.7	26.43	97.8	24.73	75.6	20.33
		0.8	0.0	137.8	29.25	133.3	28.53	124.4	27.30	120.0	26.66	106.7	24.60	97.8	23.12	75.6	19.07
		2.8	2.0	137.8	26.91	133.3	26.39	124.4	25.30	120.0	24.72	106.7	22.86	97.8	21.52	75.6	17.82
		6.0	5.0	137.8	23.79	133.3	23.37	124.4	22.46	120.0	21.97	106.7	20.39	97.8	19.18	75.6	15.84
		7.0	6.0	137.8	23.15	133.3	22.65	124.4	21.62	120.0	21.09	106.7	19.43	97.8	18.27	75.6	15.17
		8.6	7.5	137.8	21.15	133.3	20.73	124.4	19.86	120.0	19.40	106.7	17.97	97.8	16.96	75.6	14.20
		11.2	10.0	137.8	18.05	133.3	17.75	124.4	17.12	120.0	16.78	106.7	15.70	97.8	14.91	75.6	12.68
		16.4	15.0	137.8	15.64	133.3	15.21	124.4	14.34	120.0	13.90	106.7	12.59	97.8	11.72	75.6	9.74
		24.0	18.0	137.8	15.64	133.3	15.21	124.4	14.34	120.0	13.90	106.7	12.59	97.8	11.72	75.6	9.54

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	70%	-24.9	-25.0	102.3	34.74	99.7	34.14	94.6	32.89	91.9	32.21	83.7	30.06	78.1	28.47	63.0	23.96
		-19.8	-20.0	107.2	35.44	104.6	34.84	99.2	33.52	96.5	32.84	88.0	30.60	82.1	28.97	66.1	24.34
		-14.7	-15.0	114.3	36.54	111.6	35.89	105.9	34.52	103.0	33.80	93.3	31.44	85.6	29.74	66.1	21.37
		-9.6	-10.0	120.6	29.90	116.7	29.32	108.9	28.09	105.0	27.44	93.3	25.38	85.6	23.91	66.1	19.95
		-4.4	-5.0	120.6	26.14	116.7	25.73	108.9	24.84	105.0	24.35	93.3	22.73	85.6	21.52	66.1	18.06
		-1.8	-2.5	120.6	24.38	116.7	24.01	108.9	23.21	105.0	22.77	93.3	21.31	85.6	20.20	66.1	17.03
		0.8	0.0	120.6	22.52	116.7	22.20	108.9	21.51	105.0	21.12	93.3	19.81	85.6	18.82	66.1	15.95
		2.8	2.0	120.6	20.68	116.7	20.41	108.9	19.82	105.0	19.48	93.3	18.34	85.6	17.46	66.1	14.87
		6.0	5.0	120.6	18.05	116.7	17.86	108.9	17.41	105.0	17.15	93.3	16.21	85.6	15.46	66.1	13.19
		7.0	6.0	120.6	17.36	116.7	17.13	108.9	16.63	105.0	16.35	93.3	15.42	85.6	14.71	66.1	12.64
		8.6	7.5	120.6	15.77	116.7	15.59	108.9	15.20	105.0	14.98	93.3	14.22	85.6	13.63	66.1	11.83
		11.2	10.0	120.6	13.95	116.7	13.57	108.9	13.03	105.0	12.89	93.3	12.37	85.6	11.94	66.1	10.54
		16.4	15.0	120.6	13.95	116.7	13.57	108.9	12.81	105.0	12.43	93.3	11.28	85.6	10.52	66.1	8.61
		24.0	18.0	120.6	13.95	116.7	13.57	108.9	12.81	105.0	12.43	93.3	11.28	85.6	10.52	66.1	8.61

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

48HP (Heating) U-16ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	102.3	34.74	99.7	34.14	93.3	27.55	90.0	26.98	80.0	25.04	73.3	23.47	56.7	19.36
		-19.8	-20.0	103.3	27.36	100.0	26.93	93.3	25.99	90.0	25.48	80.0	23.81	73.3	22.57	56.7	18.68
		-14.7	-15.0	103.3	25.24	100.0	24.90	93.3	24.15	90.0	23.73	80.0	22.29	73.3	21.20	56.7	17.97
		-9.6	-10.0	103.3	22.98	100.0	22.70	93.3	22.07	90.0	21.71	80.0	20.47	73.3	19.51	56.7	16.63
		-4.4	-5.0	103.3	20.31	100.0	20.10	93.3	19.60	90.0	19.31	80.0	18.30	73.3	17.49	56.7	15.03
		-1.8	-2.5	103.3	18.84	100.0	18.67	93.3	18.24	90.0	17.99	80.0	17.10	73.3	16.38	56.7	14.15
		0.8	0.0	103.3	17.29	100.0	17.16	93.3	16.82	90.0	16.61	80.0	15.85	73.3	15.22	56.7	13.23
		2.8	2.0	103.3	15.76	100.0	15.67	93.3	15.42	90.0	15.25	80.0	14.62	73.3	14.08	56.7	12.32
		6.0	5.0	103.3	13.59	100.0	13.54	93.3	13.38	90.0	13.27	80.0	12.78	73.3	12.35	56.7	10.84
		7.0	6.0	103.3	12.87	100.0	12.81	93.3	12.65	90.0	12.54	80.0	12.12	73.3	11.74	56.7	10.45
		8.6	7.5	103.3	12.27	100.0	11.94	93.3	11.54	90.0	11.47	80.0	11.16	73.3	10.86	56.7	9.78
		11.2	10.0	103.3	12.27	100.0	11.94	93.3	11.28	90.0	10.96	80.0	9.98	73.3	9.52	56.7	8.72
		16.4	15.0	103.3	12.27	100.0	11.94	93.3	11.28	90.0	10.96	80.0	9.98	73.3	9.32	56.7	7.69
		24.0	18.0	103.3	12.27	100.0	11.94	93.3	11.28	90.0	10.96	80.0	9.98	73.3	9.32	56.7	7.69

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	86.1	22.37	83.3	22.12	77.8	21.54	75.0	21.21	66.7	20.06	61.1	19.15	47.2	16.08
		-19.8	-20.0	86.1	21.21	83.3	20.99	77.8	20.47	75.0	20.17	66.7	19.12	61.1	18.29	47.2	15.66
		-14.7	-15.0	86.1	19.69	83.3	19.51	77.8	19.07	75.0	18.82	66.7	17.88	61.1	17.14	47.2	14.81
		-9.6	-10.0	86.1	17.83	83.3	17.69	77.8	17.35	75.0	17.14	66.7	16.37	61.1	15.73	47.2	13.68
		-4.4	-5.0	86.1	15.65	83.3	15.56	77.8	15.33	75.0	15.17	66.7	14.58	61.1	14.06	47.2	12.35
		-1.8	-2.5	86.1	14.44	83.3	14.39	77.8	14.22	75.0	14.10	66.7	13.60	61.1	13.15	47.2	11.62
		0.8	0.0	86.1	13.19	83.3	13.17	77.8	13.06	75.0	12.97	66.7	12.58	61.1	12.21	47.2	10.87
		2.8	2.0	86.1	11.96	83.3	11.96	77.8	11.92	75.0	11.87	66.7	11.58	61.1	11.27	47.2	10.10
		6.0	5.0	86.1	10.58	83.3	10.30	77.8	10.15	75.0	10.13	66.7	9.96	61.1	9.76	47.2	8.85
		7.0	6.0	86.1	10.58	83.3	10.30	77.8	9.76	75.0	9.56	66.7	9.45	61.1	9.29	47.2	8.55
		8.6	7.5	86.1	10.58	83.3	10.30	77.8	9.76	75.0	9.49	66.7	8.72	61.1	8.61	47.2	8.01
		11.2	10.0	86.1	10.58	83.3	10.30	77.8	9.76	75.0	9.49	66.7	8.67	61.1	8.12	47.2	7.17
		16.4	15.0	86.1	10.58	83.3	10.30	77.8	9.76	75.0	9.49	66.7	8.67	61.1	8.12	47.2	6.76
		24.0	18.0	86.1	10.58	83.3	10.30	77.8	9.76	75.0	9.49	66.7	8.67	61.1	8.12	47.2	6.76

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	68.9	17.21	66.7	17.08	62.2	16.74	60.0	16.54	53.3	15.79	48.9	15.17	37.8	13.09
		-19.8	-20.0	68.9	16.29	66.7	16.18	62.2	15.89	60.0	15.71	53.3	15.04	48.9	14.47	37.8	12.65
		-14.7	-15.0	68.9	15.09	66.7	15.00	62.2	14.78	60.0	14.63	53.3	14.06	48.9	13.56	37.8	11.92
		-9.6	-10.0	68.9	13.62	66.7	13.57	62.2	13.41	60.0	13.30	53.3	12.85	48.9	12.44	37.8	11.02
		-4.4	-5.0	68.9	11.90	66.7	11.89	62.2	11.82	60.0	11.75	53.3	11.43	48.9	11.12	37.8	9.97
		-1.8	-2.5	68.9	10.95	66.7	10.97	62.2	10.95	60.0	10.90	53.3	10.66	48.9	10.40	37.8	9.39
		0.8	0.0	68.9	9.98	66.7	10.01	62.2	10.03	60.0	10.02	53.3	9.84	48.9	9.62	37.8	8.75
		2.8	2.0	68.9	8.93	66.7	8.97	62.2	9.02	60.0	9.02	53.3	8.94	48.9	8.79	37.8	8.10
		6.0	5.0	68.9	8.89	66.7	8.67	62.2	8.23	60.0	8.02	53.3	7.69	48.9	7.63	37.8	7.16
		7.0	6.0	68.9	8.89	66.7	8.67	62.2	8.23	60.0	8.02	53.3	7.36	48.9	7.28	37.8	6.91
		8.6	7.5	68.9	8.89	66.7	8.67	62.2	8.23	60.0	8.02	53.3	7.36	48.9	6.93	37.8	6.50
		11.2	10.0	68.9	8.89	66.7	8.67	62.2	8.23	60.0	8.02	53.3	7.36	48.9	6.93	37.8	5.85
		16.4	15.0	68.9	8.89	66.7	8.67	62.2	8.23	60.0	8.02	53.3	7.36	48.9	6.93	37.8	5.84
		24.0	18.0	68.9	8.89	66.7	8.67	62.2	8.23	60.0	8.02	53.3	7.36	48.9	6.93	37.8	5.84

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	51.7	12.78	50.0	12.71	46.7	12.53	45.0	12.42	40.0	11.96	36.7	11.55	28.3	10.20
		-19.8	-20.0	51.7	12.09	50.0	12.04	46.7	11.90	45.0	11.80	40.0	11.40	36.7	11.03	28.3	9.81
		-14.7	-15.0	51.7	11.19	50.0	11.17	46.7	11.07	45.0	10.99	40.0	10.66	36.7	10.35	28.3	9.26
		-9.6	-10.0	51.7	10.10	50.0	10.10	46.7	10.05	45.0	10.00	40.0	9.76	36.7	9.51	28.3	8.59
		-4.4	-5.0	51.7	8.77	50.0	8.80	46.7	8.81	45.0	8.79	40.0	8.65	36.7	8.47	28.3	7.75
		-1.8	-2.5	51.7	8.00	50.0	8.04	46.7	8.09	45.0	8.10	40.0	8.02	36.7	7.89	28.3	7.29
		0.8	0.0	51.7	7.21	50.0	7.27	46.7	7.35	45.0	7.38	40.0	7.37	36.7	7.29	28.3	6.82
		2.8	2.0	51.7	7.20	50.0	7.03	46.7	6.71	45.0	6.68	40.0	6.73	36.7	6.70	28.3	6.35
		6.0	5.0	51.7	7.20	50.0	7.03	46.7	6.71	45.0	6.54	40.0	6.05	36.7	5.88	28.3	5.69
		7.0	6.0	51.7	7.20	50.0	7.03	46.7	6.71	45.0	6.54	40.0	6.05	36.7	5.73	28.3	5.49
		8.6	7.5	51.7	7.20	50.0	7.03	46.7	6.71	45.0	6.54	40.0	6.05	36.7	5.73	28.3	5.19
		11.2	10.0	51.7	7.20	50.0	7.03	46.7	6.71	45.0	6.54	40.0	6.05	36.7	5.73	28.3	4.91
		16.4	15.0	51.7	7.20	50.0	7.03	46.7	6.71	45.0	6.54	40.0	6.05	36.7	5.73	28.3	4.91
		24.0	18.0	51.7	7.20	50.0	7.03	46.7	6.71	45.0	6.54	40.0	6.05	36.7	5.73	28.3	4.91

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-43. 50HP (Cooling) U-14ME2E8+U-16ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	93.3	10.84	112.0	13.01	130.7	15.17	140.0	16.26	158.7	18.43	177.3	20.60	196.0	22.76
		-5.0	93.3	10.86	112.0	13.03	130.7	15.20	140.0	16.28	158.7	18.45	177.3	20.62	196.0	22.78
		0.0	93.3	10.88	112.0	13.05	130.7	15.23	140.0	16.31	158.7	18.48	177.3	20.66	196.0	22.84
		5.0	93.3	10.91	112.0	13.09	130.7	15.26	140.0	16.36	158.7	18.57	177.3	20.82	196.0	23.03
		10.0	93.3	10.95	112.0	13.16	130.7	15.42	140.0	16.57	158.7	18.90	177.3	21.25	196.0	23.52
		15.0	93.3	11.18	112.0	13.59	130.7	16.06	140.0	17.31	158.7	19.84	177.3	22.40	196.0	24.75
		20.0	93.3	12.59	112.0	15.42	130.7	18.63	140.0	20.36	158.7	24.10	177.3	28.19	196.0	32.65
		25.0	93.3	16.12	112.0	19.88	130.7	24.01	140.0	26.22	158.7	30.90	177.3	35.97	196.0	41.41
		30.0	93.3	20.17	112.0	24.84	130.7	29.91	140.0	32.59	158.7	38.25	177.3	44.32	196.0	50.80
		35.0	93.3	24.53	112.0	30.17	130.7	36.23	140.0	39.43	158.7	46.15	177.3	53.32	187.5	55.16
		40.0	93.3	29.22	112.0	35.90	130.7	43.06	140.0	46.81	158.7	54.69	166.1	55.15	173.2	55.15
		43.0	93.3	32.20	112.0	39.55	130.7	47.41	140.0	51.54	151.6	55.16	158.8	55.16	162.2	52.40
		46.0	92.4	34.99	110.9	43.01	117.8	43.74	119.0	42.58	122.2	40.63	126.3	39.09	131.1	37.88
52.0	40.3	15.05	43.9	15.21	48.1	15.49	50.4	15.66	55.5	16.07	61.2	16.53	67.4	17.01		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	84.0	8.74	100.8	10.97	117.6	13.15	126.0	14.21	142.8	16.31	159.6	18.36	176.4	20.36
		-5.0	84.0	8.76	100.8	10.99	117.6	13.17	126.0	14.24	142.8	16.33	159.6	18.38	176.4	20.39
		0.0	84.0	8.78	100.8	11.02	117.6	13.19	126.0	14.26	142.8	16.36	159.6	18.41	176.4	20.41
		5.0	84.0	8.81	100.8	11.05	117.6	13.23	126.0	14.30	142.8	16.40	159.6	18.46	176.4	20.50
		10.0	84.0	8.86	100.8	11.09	117.6	13.29	126.0	14.38	142.8	16.54	159.6	18.67	176.4	20.77
		15.0	84.0	8.96	100.8	11.30	117.6	13.63	126.0	14.78	142.8	17.06	159.6	19.30	176.4	21.49
		20.0	84.0	9.79	100.8	12.44	117.6	15.01	126.0	16.27	142.8	18.72	159.6	21.49	176.4	24.45
		25.0	84.0	13.08	100.8	16.14	117.6	19.32	126.0	20.95	142.8	24.28	159.6	27.71	176.4	31.23
		30.0	84.0	16.83	100.8	20.54	117.6	24.32	126.0	26.24	142.8	30.14	159.6	34.12	176.4	38.20
		35.0	84.0	21.51	100.8	26.01	117.6	30.55	126.0	32.85	142.8	37.51	159.6	42.29	176.4	47.25
		40.0	84.0	25.65	100.8	30.81	117.6	36.02	126.0	38.66	142.8	44.04	159.6	49.65	173.2	55.15
		43.0	84.0	28.21	100.8	33.79	117.6	39.43	126.0	42.30	142.8	48.21	158.8	55.16	162.2	52.40
		46.0	84.0	30.20	100.8	36.62	117.6	43.34	119.0	42.58	122.2	40.63	126.3	39.09	131.1	37.88
52.0	40.3	15.05	43.9	15.21	48.1	15.49	50.4	15.66	55.5	16.07	61.2	16.53	67.4	17.01		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	74.7	7.49	89.6	9.51	104.5	11.48	112.0	12.45	126.9	14.36	141.9	16.23	156.8	18.06
		-5.0	74.7	7.50	89.6	9.52	104.5	11.50	112.0	12.47	126.9	14.38	141.9	16.25	156.8	18.08
		0.0	74.7	7.52	89.6	9.54	104.5	11.52	112.0	12.49	126.9	14.41	141.9	16.28	156.8	18.11
		5.0	74.7	7.55	89.6	9.57	104.5	11.55	112.0	12.53	126.9	14.44	141.9	16.31	156.8	18.14
		10.0	74.7	7.59	89.6	9.62	104.5	11.59	112.0	12.56	126.9	14.48	141.9	16.38	156.8	18.24
		15.0	74.7	7.64	89.6	9.68	104.5	11.71	112.0	12.72	126.9	14.71	141.9	16.67	156.8	18.59
		20.0	74.7	8.00	89.6	10.22	104.5	12.40	112.0	13.47	126.9	15.56	141.9	17.60	156.8	19.58
		25.0	74.7	10.63	89.6	12.94	104.5	15.31	112.0	16.50	126.9	18.92	141.9	21.37	156.8	23.85
		30.0	74.7	13.90	89.6	16.79	104.5	19.69	112.0	21.15	126.9	24.07	141.9	26.99	156.8	29.93
		35.0	74.7	18.02	89.6	21.59	104.5	25.14	112.0	26.91	126.9	30.44	141.9	33.97	156.8	37.50
		40.0	74.7	21.69	89.6	25.84	104.5	29.94	112.0	31.97	126.9	36.04	141.9	40.12	156.8	44.25
		43.0	74.7	23.96	89.6	28.47	104.5	32.91	112.0	35.12	126.9	39.55	141.9	44.03	156.8	48.61
		46.0	74.7	25.56	89.6	30.55	104.5	35.68	112.0	38.29	122.2	40.63	126.3	39.09	131.1	37.88
52.0	40.3	15.05	43.9	15.21	48.1	15.49	50.4	15.66	55.5	16.07	61.2	16.53	67.4	17.01		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	65.3	6.22	78.4	8.02	91.5	9.78	98.0	10.65	111.1	12.36	124.1	14.04	137.2	15.69
		-5.0	65.3	6.23	78.4	8.03	91.5	9.79	98.0	10.66	111.1	12.38	124.1	14.06	137.2	15.70
		0.0	65.3	6.24	78.4	8.05	91.5	9.81	98.0	10.68	111.1	12.40	124.1	14.08	137.2	15.72
		5.0	65.3	6.26	78.4	8.07	91.5	9.84	98.0	10.71	111.1	12.42	124.1	14.10	137.2	15.75
		10.0	65.3	6.30	78.4	8.10	91.5	9.87	98.0	10.74	111.1	12.46	124.1	14.14	137.2	15.78
		15.0	65.3	6.35	78.4	8.15	91.5	9.92	98.0	10.79	111.1	12.52	124.1	14.23	137.2	15.90
		20.0	65.3	6.46	78.4	8.34	91.5	10.18	98.0	11.09	111.1	12.88	124.1	14.64	137.2	16.35
		25.0	65.3	7.97	78.4	9.91	91.5	11.77	98.0	12.68	111.1	14.44	124.1	16.15	137.2	17.81
		30.0	65.3	11.24	78.4	13.40	91.5	15.53	98.0	16.58	111.1	18.66	124.1	20.70	137.2	22.71
		35.0	65.3	14.79	78.4	17.54	91.5	20.22	98.0	21.54	111.1	24.13	124.1	26.66	137.2	29.13
		40.0	65.3	18.00	78.4	21.25	91.5	24.40	98.0	25.94	111.1	28.95	124.1	31.90	137.2	34.79
		43.0	65.3	19.98	78.4	23.53	91.5	26.97	98.0	28.65	111.1	31.94	124.1	35.16	137.2	38.34
		46.0	65.3	21.36	78.4	25.15	91.5	28.95	98.0	30.85	111.1	34.67	124.1	37.11	131.1	37.88
52.0	40.3	15.05	43.9	15.21	48.1	15.49	50.4	15.66	55.5	16.07	61.2	16.53	67.4	17.01		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

50HP (Cooling) U-14ME2E8+U-16ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	56.0	4.92	67.2	6.49	78.4	8.03	84.0	8.80	95.2	10.30	106.4	11.77	117.6	13.22
		-5.0	56.0	4.93	67.2	6.50	78.4	8.05	84.0	8.81	95.2	10.31	106.4	11.79	117.6	13.24
		0.0	56.0	4.94	67.2	6.52	78.4	8.06	84.0	8.82	95.2	10.33	106.4	11.80	117.6	13.25
		5.0	56.0	4.96	67.2	6.53	78.4	8.08	84.0	8.84	95.2	10.35	106.4	11.83	117.6	13.28
		10.0	56.0	4.98	67.2	6.56	78.4	8.11	84.0	8.87	95.2	10.38	106.4	11.86	117.6	13.31
		15.0	56.0	5.02	67.2	6.60	78.4	8.15	84.0	8.92	95.2	10.42	106.4	11.90	117.6	13.34
		20.0	56.0	5.09	67.2	6.66	78.4	8.22	84.0	8.99	95.2	10.51	106.4	12.01	117.6	13.48
		25.0	56.0	5.63	67.2	7.26	78.4	8.84	84.0	9.61	95.2	11.14	106.4	12.63	117.6	14.08
		30.0	56.0	8.84	67.2	10.38	78.4	11.86	84.0	12.57	95.2	13.95	106.4	15.27	117.6	16.53
		35.0	56.0	11.82	67.2	13.85	78.4	15.78	84.0	16.71	95.2	18.50	106.4	20.21	117.6	21.84
		40.0	56.0	14.57	67.2	17.03	78.4	19.36	84.0	20.48	95.2	22.63	106.4	24.68	117.6	26.63
		43.0	56.0	16.26	67.2	18.98	78.4	21.55	84.0	22.78	95.2	25.16	106.4	27.42	117.6	29.58
		46.0	56.0	17.59	67.2	20.38	78.4	23.10	84.0	24.43	95.2	27.05	106.4	29.60	117.6	32.10
52.0	40.3	15.05	43.9	15.21	48.1	15.49	50.4	15.66	55.5	16.07	61.2	16.53	67.4	17.01		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	46.7	3.60	56.0	4.93	65.3	6.25	70.0	6.90	79.3	8.18	88.7	9.44	98.0	10.67
		-5.0	46.7	3.61	56.0	4.94	65.3	6.26	70.0	6.90	79.3	8.19	88.7	9.45	98.0	10.68
		0.0	46.7	3.62	56.0	4.95	65.3	6.27	70.0	6.92	79.3	8.20	88.7	9.46	98.0	10.70
		5.0	46.7	3.63	56.0	4.97	65.3	6.28	70.0	6.93	79.3	8.22	88.7	9.48	98.0	10.72
		10.0	46.7	3.65	56.0	4.99	65.3	6.31	70.0	6.96	79.3	8.24	88.7	9.50	98.0	10.74
		15.0	46.7	3.68	56.0	5.02	65.3	6.34	70.0	6.99	79.3	8.27	88.7	9.53	98.0	10.77
		20.0	46.7	3.74	56.0	5.07	65.3	6.39	70.0	7.04	79.3	8.32	88.7	9.58	98.0	10.81
		25.0	46.7	3.87	56.0	5.21	65.3	6.53	70.0	7.18	79.3	9.53	88.7	9.73	98.0	10.97
		30.0	46.7	6.71	56.0	7.66	65.3	8.30	70.0	8.73	79.3	9.70	88.7	10.74	98.0	11.83
		35.0	46.7	9.13	56.0	10.54	65.3	11.84	70.0	12.45	79.3	13.59	88.7	14.63	98.0	15.57
		40.0	46.7	11.41	56.0	13.18	65.3	14.81	70.0	15.58	79.3	17.01	88.7	18.33	98.0	19.53
		43.0	46.7	12.82	56.0	14.81	65.3	16.63	70.0	17.49	79.3	19.11	88.7	20.60	98.0	21.97
		46.0	46.7	14.22	56.0	16.19	65.3	18.05	70.0	18.93	79.3	20.63	88.7	22.23	98.0	23.74
52.0	40.3	15.05	43.9	15.21	48.1	15.49	50.4	15.66	55.5	16.07	61.2	16.53	67.4	17.01		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	37.3	2.26	44.8	3.34	52.3	4.41	56.0	4.94	63.5	5.99	70.9	7.03	78.4	8.05
		-5.0	37.3	2.26	44.8	3.35	52.3	4.42	56.0	4.95	63.5	6.00	70.9	7.04	78.4	8.06
		0.0	37.3	2.27	44.8	3.36	52.3	4.43	56.0	4.96	63.5	6.01	70.9	7.05	78.4	8.07
		5.0	37.3	2.28	44.8	3.37	52.3	4.44	56.0	4.97	63.5	6.02	70.9	7.06	78.4	8.09
		10.0	37.3	2.30	44.8	3.39	52.3	4.46	56.0	4.99	63.5	6.04	70.9	7.08	78.4	8.11
		15.0	37.3	2.32	44.8	3.41	52.3	4.48	56.0	5.01	63.5	6.06	70.9	7.11	78.4	8.14
		20.0	37.3	2.36	44.8	3.45	52.3	4.52	56.0	5.05	63.5	6.10	70.9	7.14	78.4	8.18
		25.0	37.3	2.44	44.8	3.52	52.3	4.59	56.0	5.11	63.5	6.16	70.9	7.19	78.4	8.24
		30.0	37.3	3.43	44.8	4.11	52.3	4.99	56.0	5.45	63.5	6.41	70.9	7.49	78.4	8.67
		35.0	37.3	6.71	44.8	7.63	52.3	8.43	56.0	8.78	63.5	9.42	70.9	10.21	78.4	11.22
		40.0	37.3	8.53	44.8	9.72	52.3	10.77	56.0	11.24	63.5	12.09	70.9	12.83	78.4	13.46
		43.0	37.3	9.65	44.8	11.02	52.3	12.22	56.0	12.77	63.5	13.77	70.9	14.64	78.4	15.39
		46.0	37.3	11.22	44.8	12.53	52.3	13.72	56.0	14.28	63.5	15.29	70.9	16.20	78.4	17.01
52.0	37.3	13.34	43.9	15.21	48.1	15.49	50.4	15.66	55.5	16.07	61.2	16.53	67.4	17.01		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	28.0	0.89	33.6	1.72	39.2	2.55	42.0	2.96	47.6	3.77	53.2	4.58	58.8	5.37
		-5.0	28.0	0.90	33.6	1.72	39.2	2.55	42.0	2.97	47.6	3.78	53.2	4.59	58.8	5.38
		0.0	28.0	0.90	33.6	1.73	39.2	2.56	42.0	2.97	47.6	3.80	53.2	4.60	58.8	5.40
		5.0	28.0	0.91	33.6	1.74	39.2	2.57	42.0	2.99	47.6	3.81	53.2	4.62	58.8	5.41
		10.0	28.0	0.92	33.6	1.75	39.2	2.58	42.0	3.00	47.6	3.83	53.2	4.64	58.8	5.44
		15.0	28.0	0.94	33.6	1.77	39.2	2.60	42.0	3.02	47.6	3.86	53.2	4.67	58.8	5.47
		20.0	28.0	0.96	33.6	1.79	39.2	2.63	42.0	3.06	47.6	3.90	53.2	4.72	58.8	5.51
		25.0	28.0	1.01	33.6	1.84	39.2	2.68	42.0	3.12	47.6	3.95	53.2	4.79	58.8	5.65
		30.0	28.0	1.16	33.6	1.94	39.2	2.80	42.0	3.29	47.6	4.29	53.2	5.27	58.8	6.21
		35.0	28.0	4.59	33.6	5.12	39.2	5.73	42.0	6.14	47.6	6.94	53.2	7.73	58.8	8.51
		40.0	28.0	5.93	33.6	6.65	39.2	7.24	42.0	7.50	47.6	7.92	53.2	8.25	58.8	8.51
		43.0	28.0	6.77	33.6	7.62	39.2	8.33	42.0	8.63	47.6	9.15	53.2	9.57	58.8	9.88
		46.0	28.0	8.57	33.6	9.37	39.2	10.06	42.0	10.37	47.6	10.90	53.2	11.33	58.8	11.67
52.0	28.0	10.09	33.6	11.13	39.2	12.05	42.0	12.46	47.6	12.87	53.2	13.08	58.8	13.17		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-44. 50HP (Heating) U-14ME2E8+U-16ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	100%	-24.9	-25.0	110.7	39.37	107.9	38.67	102.1	37.17	99.2	36.39	90.2	33.85	83.9	32.01	67.5	26.83
		-19.8	-20.0	116.2	40.25	113.2	39.51	107.3	37.96	104.2	37.15	94.8	34.52	88.3	32.62	71.1	27.28
		-14.7	-15.0	124.0	41.58	120.9	40.80	114.6	39.17	111.4	38.30	101.4	35.53	94.5	33.53	76.2	27.94
		-9.6	-10.0	134.6	43.27	131.3	42.62	124.5	40.85	121.0	39.92	110.2	36.94	102.7	34.79	82.8	28.84
		-4.4	-5.0	148.3	46.01	144.6	45.10	137.2	43.20	133.4	42.18	121.4	38.89	113.2	36.52	91.2	30.04
		-1.8	-2.5	156.5	46.98	152.6	46.05	144.7	44.08	140.6	43.04	128.1	39.70	119.3	37.29	96.3	30.67
		0.8	0.0	165.5	47.83	161.4	46.86	153.1	44.81	148.8	43.74	135.6	40.29	126.3	37.77	97.6	29.21
		2.8	2.0	175.3	48.69	171.1	47.69	160.7	44.82	155.0	43.13	137.8	38.16	126.3	34.93	97.6	27.13
		6.0	5.0	178.0	43.70	172.2	42.22	160.7	39.29	155.0	37.85	137.8	33.61	126.3	30.80	97.6	24.08
		7.0	6.0	178.0	41.66	172.2	40.26	160.7	37.50	155.0	36.10	137.8	32.09	126.3	29.47	97.6	23.12
		8.6	7.5	178.0	38.61	172.2	37.33	160.7	34.82	155.0	33.58	137.8	29.93	126.3	27.55	97.6	21.72
		11.2	10.0	178.0	33.86	172.2	32.79	160.7	30.69	155.0	29.65	137.8	26.57	126.3	24.55	97.6	19.54
		16.4	15.0	178.0	25.55	172.2	24.84	160.7	23.42	155.0	22.70	137.8	20.54	126.3	19.09	97.6	15.39
		24.0	18.0	178.0	20.95	172.2	20.37	160.7	19.20	155.0	18.61	137.8	16.81	126.3	15.59	97.6	12.48

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	90%	-24.9	-25.0	110.7	39.37	107.9	38.67	102.1	37.17	99.2	36.39	90.2	33.85	83.9	32.01	67.5	26.83
		-19.8	-20.0	116.2	40.25	113.2	39.51	107.3	37.96	104.2	37.15	94.8	34.52	88.3	32.62	71.1	27.28
		-14.7	-15.0	124.0	41.58	120.9	40.80	114.6	39.17	111.4	38.30	101.4	35.53	94.5	33.53	76.2	27.94
		-9.6	-10.0	134.6	43.27	131.3	42.62	124.5	40.85	121.0	39.92	110.2	36.94	102.7	34.79	82.8	28.84
		-4.4	-5.0	148.3	46.01	144.6	45.10	137.2	43.20	133.4	42.18	121.4	38.89	113.2	36.52	87.8	27.83
		-1.8	-2.5	156.5	46.98	152.6	46.05	144.7	44.08	139.5	39.60	124.0	35.58	113.7	32.89	87.8	26.15
		0.8	0.0	160.2	41.42	155.0	40.21	144.7	37.80	139.5	36.59	124.0	32.95	113.7	30.52	87.8	24.38
		2.8	2.0	160.2	37.85	155.0	36.79	144.7	34.65	139.5	33.57	124.0	30.33	113.7	28.17	87.8	22.80
		6.0	5.0	160.2	33.00	155.0	32.22	144.7	30.60	139.5	29.76	124.0	27.16	113.7	25.27	87.8	20.36
		7.0	6.0	160.2	32.23	155.0	31.34	144.7	29.55	139.5	28.66	124.0	25.96	113.7	24.14	87.8	19.53
		8.6	7.5	160.2	29.72	155.0	28.93	144.7	27.35	139.5	26.55	124.0	24.14	113.7	22.51	87.8	18.33
		11.2	10.0	160.2	25.79	155.0	25.17	144.7	23.91	139.5	23.27	124.0	21.31	113.7	19.97	87.8	16.45
		16.4	15.0	160.2	18.96	155.0	18.59	144.7	17.83	139.5	17.43	124.0	16.17	113.7	15.27	87.8	12.80
		24.0	18.0	160.2	18.82	155.0	18.30	144.7	17.25	139.5	16.72	124.0	15.15	113.7	14.10	87.8	11.47

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	80%	-24.9	-25.0	110.7	39.37	107.9	38.67	102.1	37.17	99.2	36.39	90.2	33.85	83.9	32.01	67.5	26.83
		-19.8	-20.0	116.2	40.25	113.2	39.51	107.3	37.96	104.2	37.15	94.8	34.52	88.3	32.62	71.1	27.28
		-14.7	-15.0	124.0	41.58	120.9	40.80	114.6	39.17	111.4	38.30	101.4	35.53	94.5	33.53	76.2	27.94
		-9.6	-10.0	134.6	43.27	131.3	42.62	124.5	40.85	121.0	39.92	110.2	36.94	101.0	31.85	78.1	25.72
		-4.4	-5.0	142.4	36.84	137.8	35.96	128.6	34.16	124.0	33.23	110.2	30.38	101.0	28.40	78.1	23.19
		-1.8	-2.5	142.4	34.08	137.8	33.30	128.6	31.69	124.0	30.87	110.2	28.30	101.0	26.51	78.1	21.88
		0.8	0.0	142.4	31.08	137.8	30.47	128.6	29.18	124.0	28.51	110.2	26.35	101.0	24.80	78.1	20.54
		2.8	2.0	142.4	28.73	137.8	28.20	128.6	27.05	124.0	26.44	110.2	24.49	101.0	23.09	78.1	19.20
		6.0	5.0	142.4	25.41	137.8	24.97	128.6	24.02	124.0	23.50	110.2	21.83	101.0	20.58	78.1	17.11
		7.0	6.0	142.4	24.60	137.8	24.10	128.6	23.06	124.0	22.52	110.2	20.83	101.0	19.64	78.1	16.41
		8.6	7.5	142.4	22.53	137.8	22.11	128.6	21.24	124.0	20.78	110.2	19.31	101.0	18.27	78.1	15.39
		11.2	10.0	142.4	19.33	137.8	19.03	128.6	18.39	124.0	18.05	110.2	16.94	101.0	16.13	78.1	13.78
		16.4	15.0	142.4	17.01	137.8	16.55	128.6	15.61	124.0	15.15	110.2	13.75	101.0	12.81	78.1	10.63
		24.0	18.0	142.4	17.01	137.8	16.55	128.6	15.61	124.0	15.15	110.2	13.75	101.0	12.81	78.1	10.48

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	70%	-24.9	-25.0	110.7	39.37	107.9	38.67	102.1	37.17	99.2	36.39	90.2	33.85	83.9	32.01	67.5	26.83
		-19.8	-20.0	116.2	40.25	113.2	39.51	107.3	37.96	104.2	37.15	94.8	34.52	88.3	32.62	68.3	24.14
		-14.7	-15.0	124.0	41.58	120.6	34.73	112.5	33.23	108.5	32.45	96.4	29.96	88.4	28.16	68.3	23.09
		-9.6	-10.0	124.6	31.90	120.6	31.30	112.5	30.04	108.5	29.37	96.4	27.23	88.4	25.69	68.3	21.53
		-4.4	-5.0	124.6	28.04	120.6	27.61	112.5	26.66	108.5	26.15	96.4	24.44	88.4	23.16	68.3	19.51
		-1.8	-2.5	124.6	26.14	120.6	25.76	112.5	24.92	108.5	24.45	96.4	22.91	88.4	21.75	68.3	18.40
		0.8	0.0	124.6	24.15	120.6	23.82	112.5	23.08	108.5	22.68	96.4	21.31	88.4	20.28	68.3	17.24
		2.8	2.0	124.6	22.19	120.6	21.91	112.5	21.29	108.5	20.94	96.4	19.74	88.4	18.82	68.3	16.09
		6.0	5.0	124.6	19.37	120.6	19.17	112.5	18.69	108.5	18.42	96.4	17.43	88.4	16.64	68.3	14.24
		7.0	6.0	124.6	18.51	120.6	18.28	112.5	17.79	108.5	17.52	96.4	16.58	88.4	15.86	68.3	13.71
		8.6	7.5	124.6	16.85	120.6	16.69	112.5	16.31	108.5	16.09	96.4	15.33	88.4	14.72	68.3	12.85
		11.2	10.0	124.6	15.21	120.6	14.80	112.5	14.05	108.5	13.91	96.4	13.39	88.4	12.95	68.3	11.50
		16.4	15.0	124.6	15.21	120.6	14.80	112.5	13.98	108.5	13.57	96.4	12.35	88.4	11.53	68.3	9.49
		24.0	18.0	124.6	15.21	120.6	14.80	112.5	13.98	108.5	13.57	96.4	12.35	88.4	11.53	68.3	9.49

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

50HP (Heating) U-14ME2E8+U-16ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	60%	-24.9	-25.0	106.8	31.11	103.3	30.61	96.4	29.53	93.0	28.94	82.7	26.94	75.8	25.33	58.6	20.93
		-19.8	-20.0	106.8	29.29	103.3	28.84	96.4	27.87	93.0	27.34	82.7	25.66	75.8	24.38	58.6	20.26
		-14.7	-15.0	106.8	27.19	103.3	26.83	96.4	26.03	93.0	25.58	82.7	24.06	75.8	22.90	58.6	19.46
		-9.6	-10.0	106.8	24.76	103.3	24.46	96.4	23.79	93.0	23.41	82.7	22.09	75.8	21.07	58.6	18.02
		-4.4	-5.0	106.8	21.89	103.3	21.66	96.4	21.13	93.0	20.83	82.7	19.76	75.8	18.91	58.6	16.30
		-1.8	-2.5	106.8	20.31	103.3	20.13	96.4	19.68	93.0	19.42	82.7	18.47	75.8	17.72	58.6	15.36
		0.8	0.0	106.8	18.65	103.3	18.51	96.4	18.16	93.0	17.94	82.7	17.14	75.8	16.48	58.6	14.37
		2.8	2.0	106.8	17.02	103.3	16.92	96.4	16.66	93.0	16.49	82.7	15.83	75.8	15.26	58.6	13.40
		6.0	5.0	106.8	14.67	103.3	14.60	96.4	14.41	93.0	14.29	82.7	13.79	75.8	13.35	58.6	11.77
		7.0	6.0	106.8	13.79	103.3	13.74	96.4	13.60	93.0	13.50	82.7	13.09	75.8	12.71	58.6	11.38
		8.6	7.5	106.8	13.40	103.3	13.05	96.4	12.45	93.0	12.39	82.7	12.09	75.8	11.79	58.6	10.67
		11.2	10.0	106.8	13.40	103.3	13.05	96.4	12.35	93.0	12.00	82.7	10.95	75.8	10.38	58.6	9.55
		16.4	15.0	106.8	13.40	103.3	13.05	96.4	12.35	93.0	12.00	82.7	10.95	75.8	10.25	58.6	8.50
		24.0	18.0	106.8	13.40	103.3	13.05	96.4	12.35	93.0	12.00	82.7	10.95	75.8	10.25	58.6	8.50

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	50%	-24.9	-25.0	89.0	24.17	86.1	23.91	80.4	23.28	77.5	22.94	68.9	21.71	63.1	20.74	48.8	17.46
		-19.8	-20.0	89.0	22.93	86.1	22.69	80.4	22.14	77.5	21.82	68.9	20.70	63.1	19.81	48.8	17.01
		-14.7	-15.0	89.0	21.29	86.1	21.10	80.4	20.64	77.5	20.36	68.9	19.38	63.1	18.58	48.8	16.09
		-9.6	-10.0	89.0	19.29	86.1	19.15	80.4	18.79	77.5	18.57	68.9	17.75	63.1	17.06	48.8	14.88
		-4.4	-5.0	89.0	16.95	86.1	16.87	80.4	16.61	77.5	16.46	68.9	15.82	63.1	15.28	48.8	13.46
		-1.8	-2.5	89.0	15.67	86.1	15.61	80.4	15.43	77.5	15.30	68.9	14.78	63.1	14.30	48.8	12.68
		0.8	0.0	89.0	14.32	86.1	14.30	80.4	14.19	77.5	14.10	68.9	13.69	63.1	13.29	48.8	11.87
		2.8	2.0	89.0	13.00	86.1	13.01	80.4	12.97	77.5	12.91	68.9	12.57	63.1	12.23	48.8	11.00
		6.0	5.0	89.0	11.59	86.1	11.30	80.4	10.97	77.5	10.96	68.9	10.81	63.1	10.62	48.8	9.69
		7.0	6.0	89.0	11.59	86.1	11.30	80.4	10.71	77.5	10.42	68.9	10.27	63.1	10.12	48.8	9.37
		8.6	7.5	89.0	11.59	86.1	11.30	80.4	10.71	77.5	10.42	68.9	9.55	63.1	9.40	48.8	8.80
		11.2	10.0	89.0	11.59	86.1	11.30	80.4	10.71	77.5	10.42	68.9	9.55	63.1	8.96	48.8	7.90
		16.4	15.0	89.0	11.59	86.1	11.30	80.4	10.71	77.5	10.42	68.9	9.55	63.1	8.96	48.8	7.51
		24.0	18.0	89.0	11.59	86.1	11.30	80.4	10.71	77.5	10.42	68.9	9.55	63.1	8.96	48.8	7.51

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	40%	-24.9	-25.0	71.2	18.67	68.9	18.52	64.3	18.16	62.0	17.94	55.1	17.15	50.5	16.49	39.0	14.27
		-19.8	-20.0	71.2	17.67	68.9	17.56	64.3	17.25	62.0	17.06	55.1	16.34	50.5	15.74	39.0	13.79
		-14.7	-15.0	71.2	16.38	68.9	16.29	64.3	16.06	62.0	15.90	55.1	15.29	50.5	14.76	39.0	13.01
		-9.6	-10.0	71.2	14.81	68.9	14.76	64.3	14.59	62.0	14.47	55.1	13.99	50.5	13.56	39.0	12.05
		-4.4	-5.0	71.2	12.96	68.9	12.96	64.3	12.88	62.0	12.81	55.1	12.48	50.5	12.14	39.0	10.92
		-1.8	-2.5	71.2	11.95	68.9	11.97	64.3	11.94	62.0	11.90	55.1	11.65	50.5	11.36	39.0	10.27
		0.8	0.0	71.2	10.82	68.9	10.85	64.3	10.87	62.0	10.85	55.1	10.68	50.5	10.47	39.0	9.58
		2.8	2.0	71.2	9.78	68.9	9.72	64.3	9.79	62.0	9.80	55.1	9.73	50.5	9.60	39.0	8.89
		6.0	5.0	71.2	9.78	68.9	9.55	64.3	9.08	62.0	8.85	55.1	8.42	50.5	8.37	39.0	7.91
		7.0	6.0	71.2	9.78	68.9	9.55	64.3	9.08	62.0	8.85	55.1	8.15	50.5	8.00	39.0	7.63
		8.6	7.5	71.2	9.78	68.9	9.55	64.3	9.08	62.0	8.85	55.1	8.15	50.5	7.68	39.0	7.19
		11.2	10.0	71.2	9.78	68.9	9.55	64.3	9.08	62.0	8.85	55.1	8.15	50.5	7.68	39.0	6.51
		16.4	15.0	71.2	9.78	68.9	9.55	64.3	9.08	62.0	8.85	55.1	8.15	50.5	7.68	39.0	6.51
		24.0	18.0	71.2	9.78	68.9	9.55	64.3	9.08	62.0	8.85	55.1	8.15	50.5	7.68	39.0	6.51

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	30%	-24.9	-25.0	53.4	13.91	51.7	13.84	48.2	13.65	46.5	13.53	41.3	13.04	37.9	12.61	29.3	11.17
		-19.8	-20.0	53.4	13.17	51.7	13.12	48.2	12.97	46.5	12.87	41.3	12.44	37.9	12.06	29.3	10.75
		-14.7	-15.0	53.4	12.21	51.7	12.18	48.2	12.08	46.5	12.00	41.3	11.66	37.9	11.33	29.3	10.16
		-9.6	-10.0	53.4	11.04	51.7	11.04	48.2	10.98	46.5	10.93	41.3	10.67	37.9	10.40	29.3	9.42
		-4.4	-5.0	53.4	9.53	51.7	9.57	48.2	9.59	46.5	9.58	41.3	9.45	37.9	9.27	29.3	8.53
		-1.8	-2.5	53.4	8.71	51.7	8.76	48.2	8.83	46.5	8.84	41.3	8.78	37.9	8.66	29.3	8.04
		0.8	0.0	53.4	7.97	51.7	7.95	48.2	8.05	46.5	8.08	41.3	8.09	37.9	8.02	29.3	7.53
		2.8	2.0	53.4	7.97	51.7	7.80	48.2	7.45	46.5	7.35	41.3	7.41	37.9	7.39	29.3	7.04
		6.0	5.0	53.4	7.97	51.7	7.80	48.2	7.45	46.5	7.27	41.3	6.75	37.9	6.52	29.3	6.34
		7.0	6.0	53.4	7.97	51.7	7.80	48.2	7.45	46.5	7.27	41.3	6.75	37.9	6.40	29.3	6.12
		8.6	7.5	53.4	7.97	51.7	7.80	48.2	7.45	46.5	7.27	41.3	6.75	37.9	6.40	29.3	5.81
		11.2	10.0	53.4	7.97	51.7	7.80	48.2	7.45	46.5	7.27	41.3	6.75	37.9	6.40	29.3	5.52
		16.4	15.0	53.4	7.97	51.7	7.80	48.2	7.45	46.5	7.27	41.3	6.75	37.9	6.40	29.3	5.52
		24.0	18.0	53.4	7.97	51.7	7.80	48.2	7.45	46.5	7.27	41.3	6.75	37.9	6.40	29.3	5.52

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-45. 52HP (Cooling) U-16ME2E8+U-16ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	96.7	11.55	116.0	13.86	135.3	16.17	145.0	17.32	164.3	19.63	183.7	21.94	203.0	24.25
		-5.0	96.7	11.57	116.0	13.88	135.3	16.19	145.0	17.35	164.3	19.66	183.7	21.97	203.0	24.27
		0.0	96.7	11.59	116.0	13.90	135.3	16.22	145.0	17.38	164.3	19.68	183.7	22.01	203.0	24.33
		5.0	96.7	11.62	116.0	13.94	135.3	16.25	145.0	17.42	164.3	19.78	183.7	22.17	203.0	24.53
		10.0	96.7	11.66	116.0	14.02	135.3	16.42	145.0	17.65	164.3	20.11	183.7	22.62	203.0	25.03
		15.0	96.7	11.90	116.0	14.46	135.3	17.08	145.0	18.41	164.3	21.09	183.7	23.80	203.0	26.29
		20.0	96.7	13.34	116.0	16.34	135.3	19.76	145.0	21.61	164.3	25.59	183.7	29.95	203.0	34.70
		25.0	96.7	17.09	116.0	21.10	135.3	25.50	145.0	27.85	164.3	32.85	183.7	38.24	203.0	44.04
		30.0	96.7	21.41	116.0	26.39	135.3	31.78	145.0	34.64	164.3	40.67	183.7	47.14	203.0	54.05
		35.0	96.7	26.05	116.0	32.06	135.3	38.53	145.0	41.93	164.3	49.10	183.7	56.74	194.1	58.66
		40.0	96.7	31.04	116.0	38.17	135.3	45.80	145.0	49.80	164.3	58.20	172.0	58.65	179.3	58.65
		43.0	96.7	34.22	116.0	42.06	135.3	50.44	145.0	54.84	156.9	58.66	164.4	58.65	168.0	55.75
		46.0	95.7	37.20	114.8	45.74	122.0	46.53	123.3	45.28	126.6	43.21	130.8	41.57	135.8	40.28
52.0	41.7	15.95	45.4	16.11	49.8	16.41	52.2	16.60	57.5	17.03	63.4	17.52	69.8	18.04		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	87.0	9.32	104.4	11.70	121.8	14.01	130.5	15.15	147.9	17.38	165.3	19.56	182.7	21.70
		-5.0	87.0	9.34	104.4	11.71	121.8	14.03	130.5	15.17	147.9	17.41	165.3	19.59	182.7	21.73
		0.0	87.0	9.36	104.4	11.74	121.8	14.06	130.5	15.20	147.9	17.44	165.3	19.62	182.7	21.75
		5.0	87.0	9.39	104.4	11.78	121.8	14.10	130.5	15.23	147.9	17.47	165.3	19.67	182.7	21.84
		10.0	87.0	9.44	104.4	11.82	121.8	14.16	130.5	15.32	147.9	17.62	165.3	19.89	182.7	22.12
		15.0	87.0	9.54	104.4	12.03	121.8	14.51	130.5	15.73	147.9	18.15	165.3	20.53	182.7	22.85
		20.0	87.0	10.40	104.4	13.20	121.8	15.93	130.5	17.26	147.9	19.86	165.3	22.82	182.7	25.96
		25.0	87.0	13.84	104.4	17.11	121.8	20.50	130.5	22.23	147.9	25.79	165.3	29.44	182.7	33.19
		30.0	87.0	17.84	104.4	21.80	121.8	25.83	130.5	27.88	147.9	32.03	165.3	36.28	182.7	40.63
		35.0	87.0	22.83	104.4	27.62	121.8	32.47	130.5	34.92	147.9	39.89	165.3	44.98	182.7	50.27
		40.0	87.0	27.24	104.4	32.75	121.8	38.30	130.5	41.11	147.9	46.84	165.3	52.82	179.3	58.65
		43.0	87.0	29.97	104.4	35.92	121.8	41.93	130.5	44.99	147.9	51.29	164.4	58.65	168.0	55.75
		46.0	87.0	32.10	104.4	38.93	121.8	46.10	123.3	45.28	126.6	43.21	130.8	41.57	135.8	40.28
52.0	41.7	15.95	45.4	16.11	49.8	16.41	52.2	16.60	57.5	17.03	63.4	17.52	69.8	18.04		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	77.3	7.99	92.8	10.14	108.3	12.24	116.0	13.27	131.5	15.31	146.9	17.30	162.4	19.25
		-5.0	77.3	8.00	92.8	10.15	108.3	12.26	116.0	13.29	131.5	15.33	146.9	17.32	162.4	19.27
		0.0	77.3	8.02	92.8	10.17	108.3	12.28	116.0	13.31	131.5	15.35	146.9	17.35	162.4	19.30
		5.0	77.3	8.04	92.8	10.20	108.3	12.31	116.0	13.35	131.5	15.39	146.9	17.38	162.4	19.33
		10.0	77.3	8.08	92.8	10.25	108.3	12.35	116.0	13.38	131.5	15.43	146.9	17.45	162.4	19.43
		15.0	77.3	8.14	92.8	10.32	108.3	12.48	116.0	13.55	131.5	15.66	146.9	17.74	162.4	19.79
		20.0	77.3	8.51	92.8	10.87	108.3	13.18	116.0	14.32	131.5	16.54	146.9	18.70	162.4	20.81
		25.0	77.3	11.23	92.8	13.70	108.3	16.22	116.0	17.49	131.5	20.07	146.9	22.68	162.4	25.33
		30.0	77.3	14.72	92.8	17.80	108.3	20.90	116.0	22.45	131.5	25.56	146.9	28.68	162.4	31.81
		35.0	77.3	19.10	92.8	22.92	108.3	26.70	116.0	28.59	131.5	32.35	146.9	36.11	162.4	39.88
		40.0	77.3	23.02	92.8	27.44	108.3	31.81	116.0	33.98	131.5	38.32	146.9	42.66	162.4	47.07
		43.0	77.3	25.44	92.8	30.24	108.3	34.98	116.0	37.34	131.5	42.06	146.9	46.83	162.4	51.71
		46.0	77.3	27.15	92.8	32.47	108.3	37.93	116.0	40.71	126.6	43.21	130.8	41.57	135.8	40.28
52.0	41.7	15.95	45.4	16.11	49.8	16.41	52.2	16.60	57.5	17.03	63.4	17.52	69.8	18.04		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	67.7	6.63	81.2	8.55	94.7	10.42	101.5	11.35	115.0	13.17	128.6	14.96	142.1	16.72
		-5.0	67.7	6.64	81.2	8.56	94.7	10.44	101.5	11.36	115.0	13.19	128.6	14.98	142.1	16.73
		0.0	67.7	6.66	81.2	8.58	94.7	10.46	101.5	11.38	115.0	13.21	128.6	15.00	142.1	16.76
		5.0	67.7	6.68	81.2	8.60	94.7	10.48	101.5	11.41	115.0	13.24	128.6	15.03	142.1	16.79
		10.0	67.7	6.71	81.2	8.64	94.7	10.52	101.5	11.45	115.0	13.28	128.6	15.06	142.1	16.82
		15.0	67.7	6.76	81.2	8.69	94.7	10.57	101.5	11.50	115.0	13.34	128.6	15.15	142.1	16.94
		20.0	67.7	6.88	81.2	8.88	94.7	10.84	101.5	11.81	115.0	13.71	128.6	15.58	142.1	17.40
		25.0	67.7	8.44	81.2	10.50	94.7	12.47	101.5	13.43	115.0	15.31	128.6	17.13	142.1	18.91
		30.0	67.7	11.88	81.2	14.19	94.7	16.46	101.5	17.58	115.0	19.79	128.6	21.97	142.1	24.12
		35.0	67.7	15.66	81.2	18.59	94.7	21.46	101.5	22.86	115.0	25.62	128.6	28.32	142.1	30.96
		40.0	67.7	19.08	81.2	22.55	94.7	25.91	101.5	27.55	115.0	30.77	128.6	33.91	142.1	36.99
		43.0	67.7	21.20	81.2	24.99	94.7	28.65	101.5	30.44	115.0	33.95	128.6	37.39	142.1	40.77
		46.0	67.7	22.68	81.2	26.72	94.7	30.76	101.5	32.79	115.0	36.86	128.6	39.46	135.8	40.28
52.0	41.7	15.95	45.4	16.11	49.8	16.41	52.2	16.60	57.5	17.03	63.4	17.52	69.8	18.04		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

52HP (Cooling) U-16ME2E8+U-16ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	58.0	5.25	69.6	6.92	81.2	8.57	87.0	9.38	98.6	10.98	110.2	12.55	121.8	14.09
		-5.0	58.0	5.26	69.6	6.93	81.2	8.58	87.0	9.39	98.6	10.99	110.2	12.56	121.8	14.11
		0.0	58.0	5.27	69.6	6.95	81.2	8.59	87.0	9.41	98.6	11.01	110.2	12.58	121.8	14.13
		5.0	58.0	5.29	69.6	6.97	81.2	8.61	87.0	9.43	98.6	11.03	110.2	12.60	121.8	14.15
		10.0	58.0	5.31	69.6	6.99	81.2	8.64	87.0	9.46	98.6	11.06	110.2	12.64	121.8	14.18
		15.0	58.0	5.35	69.6	7.04	81.2	8.69	87.0	9.50	98.6	11.10	110.2	12.67	121.8	14.21
		20.0	58.0	5.42	69.6	7.10	81.2	8.76	87.0	9.58	98.6	11.20	110.2	12.79	121.8	14.36
		25.0	58.0	5.98	69.6	7.71	81.2	9.39	87.0	10.22	98.6	11.84	110.2	13.42	121.8	14.98
		30.0	58.0	9.32	69.6	10.97	81.2	12.54	87.0	13.30	98.6	14.77	110.2	16.18	121.8	17.52
		35.0	58.0	12.49	69.6	14.66	81.2	16.72	87.0	17.71	98.6	19.62	110.2	21.44	121.8	23.18
		40.0	58.0	15.43	69.6	18.05	81.2	20.53	87.0	21.73	98.6	24.02	110.2	26.21	121.8	28.29
		43.0	58.0	17.24	69.6	20.13	81.2	22.87	87.0	24.19	98.6	26.72	110.2	29.13	121.8	31.43
		46.0	58.0	18.66	69.6	21.63	81.2	24.52	87.0	25.95	98.6	28.73	110.2	31.46	121.8	34.12
52.0	41.7	15.95	45.4	16.11	49.8	16.41	52.2	16.60	57.5	17.03	63.4	17.52	69.8	18.04		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	48.3	3.84	58.0	5.26	67.7	6.66	72.5	7.35	82.2	8.72	91.8	10.06	101.5	11.38
		-5.0	48.3	3.85	58.0	5.27	67.7	6.67	72.5	7.36	82.2	8.73	91.8	10.07	101.5	11.39
		0.0	48.3	3.86	58.0	5.28	67.7	6.68	72.5	7.37	82.2	8.74	91.8	10.08	101.5	11.40
		5.0	48.3	3.87	58.0	5.30	67.7	6.70	72.5	7.39	82.2	8.76	91.8	10.10	101.5	11.42
		10.0	48.3	3.89	58.0	5.32	67.7	6.72	72.5	7.41	82.2	8.78	91.8	10.13	101.5	11.44
		15.0	48.3	3.93	58.0	5.35	67.7	6.76	72.5	7.45	82.2	8.82	91.8	10.16	101.5	11.48
		20.0	48.3	3.98	58.0	5.41	67.7	6.81	72.5	7.50	82.2	8.87	91.8	10.20	101.5	11.52
		25.0	48.3	4.12	58.0	5.55	67.7	6.96	72.5	7.65	82.2	9.02	91.8	10.36	101.5	11.68
		30.0	48.3	7.05	58.0	8.07	67.7	8.78	72.5	9.24	82.2	10.28	91.8	11.40	101.5	12.56
		35.0	48.3	9.62	58.0	11.13	67.7	12.52	72.5	13.17	82.2	14.38	91.8	15.49	101.5	16.50
		40.0	48.3	12.06	58.0	13.95	67.7	15.69	72.5	16.50	82.2	18.03	91.8	19.43	101.5	20.72
		43.0	48.3	13.56	58.0	15.68	67.7	17.63	72.5	18.55	82.2	20.27	91.8	21.85	101.5	23.32
		46.0	48.3	15.06	58.0	17.16	67.7	19.14	72.5	20.09	82.2	21.90	91.8	23.60	101.5	25.21
52.0	41.7	15.95	45.4	16.11	49.8	16.41	52.2	16.60	57.5	17.03	63.4	17.52	69.8	18.04		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	38.7	2.41	46.4	3.57	54.1	4.71	58.0	5.27	65.7	6.39	73.5	7.49	81.2	8.58
		-5.0	38.7	2.42	46.4	3.58	54.1	4.72	58.0	5.28	65.7	6.40	73.5	7.50	81.2	8.59
		0.0	38.7	2.43	46.4	3.58	54.1	4.73	58.0	5.29	65.7	6.41	73.5	7.51	81.2	8.61
		5.0	38.7	2.44	46.4	3.60	54.1	4.74	58.0	5.30	65.7	6.42	73.5	7.53	81.2	8.62
		10.0	38.7	2.45	46.4	3.61	54.1	4.76	58.0	5.32	65.7	6.44	73.5	7.55	81.2	8.64
		15.0	38.7	2.48	46.4	3.64	54.1	4.78	58.0	5.35	65.7	6.46	73.5	7.57	81.2	8.67
		20.0	38.7	2.51	46.4	3.67	54.1	4.82	58.0	5.38	65.7	6.50	73.5	7.61	81.2	8.72
		25.0	38.7	2.60	46.4	3.75	54.1	4.89	58.0	5.45	65.7	6.56	73.5	7.66	81.2	8.78
		30.0	38.7	3.62	46.4	4.36	54.1	5.30	58.0	5.80	65.7	6.82	73.5	7.97	81.2	9.22
		35.0	38.7	7.05	46.4	8.02	54.1	8.87	58.0	9.25	65.7	9.93	73.5	10.77	81.2	11.86
		40.0	38.7	8.98	46.4	10.25	54.1	11.37	58.0	11.88	65.7	12.79	73.5	13.57	81.2	14.25
		43.0	38.7	10.18	46.4	11.64	54.1	12.92	58.0	13.51	65.7	14.57	73.5	15.50	81.2	16.30
		46.0	38.7	11.86	46.4	13.27	54.1	14.53	58.0	15.12	65.7	16.20	73.5	17.17	81.2	18.03
52.0	38.7	14.12	45.4	16.11	49.8	16.41	52.2	16.60	57.5	17.03	63.4	17.52	69.8	18.04		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	29.0	0.96	34.8	1.84	40.6	2.72	43.5	3.16	49.3	4.03	55.1	4.88	60.9	5.72
		-5.0	29.0	0.96	34.8	1.84	40.6	2.72	43.5	3.17	49.3	4.04	55.1	4.89	60.9	5.74
		0.0	29.0	0.97	34.8	1.85	40.6	2.73	43.5	3.17	49.3	4.05	55.1	4.91	60.9	5.75
		5.0	29.0	0.97	34.8	1.86	40.6	2.74	43.5	3.19	49.3	4.06	55.1	4.93	60.9	5.77
		10.0	29.0	0.98	34.8	1.87	40.6	2.76	43.5	3.20	49.3	4.08	55.1	4.95	60.9	5.80
		15.0	29.0	1.00	34.8	1.89	40.6	2.78	43.5	3.23	49.3	4.11	55.1	4.98	60.9	5.83
		20.0	29.0	1.03	34.8	1.91	40.6	2.81	43.5	3.26	49.3	4.15	55.1	5.02	60.9	5.87
		25.0	29.0	1.08	34.8	1.96	40.6	2.86	43.5	3.32	49.3	4.21	55.1	5.10	60.9	6.01
		30.0	29.0	1.24	34.8	2.06	40.6	2.97	43.5	3.49	49.3	4.55	55.1	5.59	60.9	6.59
		35.0	29.0	4.78	34.8	5.34	40.6	6.00	43.5	6.43	49.3	7.29	55.1	8.13	60.9	8.96
		40.0	29.0	6.21	34.8	6.98	40.6	7.61	43.5	7.88	49.3	8.34	55.1	8.69	60.9	8.96
		43.0	29.0	7.10	34.8	8.01	40.6	8.77	43.5	9.09	49.3	9.65	55.1	10.09	60.9	10.43
		46.0	29.0	9.04	34.8	9.90	40.6	10.63	43.5	10.96	49.3	11.52	55.1	11.98	60.9	12.35
52.0	29.0	10.66	34.8	11.77	40.6	12.75	43.5	13.19	49.3	13.62	55.1	13.85	60.9	13.94		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-46. 52HP (Heating) U-16ME2E8+U-16ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	113.2	40.15	110.3	39.43	104.5	37.93	101.6	37.14	92.4	34.57	86.0	32.71	69.3	27.45
		-19.8	-20.0	118.8	41.01	115.8	40.28	109.8	38.72	106.7	37.90	97.1	35.23	90.5	33.31	73.0	27.90
		-14.7	-15.0	126.7	42.34	123.6	41.55	117.2	39.90	113.9	39.03	103.8	36.24	96.8	34.22	78.2	28.56
		-9.6	-10.0	137.5	44.22	134.1	43.38	127.2	41.59	123.7	40.66	112.8	37.66	105.2	35.50	85.0	29.48
		-4.4	-5.0	151.5	46.85	147.8	45.94	140.3	44.00	136.4	42.96	124.4	39.62	115.9	37.21	93.6	30.64
		-1.8	-2.5	159.8	47.91	155.9	46.97	147.9	44.99	143.8	43.94	131.1	40.55	122.3	38.10	98.8	31.37
		0.8	0.0	169.0	48.81	164.9	47.83	156.5	45.76	152.1	44.66	138.8	41.16	129.5	38.66	100.7	30.14
		2.8	2.0	179.0	49.66	174.7	48.65	165.9	46.51	160.0	44.76	142.2	39.53	130.4	36.15	100.7	28.00
		6.0	5.0	183.7	45.50	177.8	43.92	165.9	40.82	160.0	39.30	142.2	34.84	130.4	31.89	100.7	24.87
		7.0	6.0	183.7	43.38	177.8	41.90	165.9	38.97	160.0	37.50	142.2	33.27	130.4	30.52	100.7	23.88
		8.6	7.5	183.7	40.23	177.8	38.87	165.9	36.20	160.0	34.89	142.2	31.04	130.4	28.53	100.7	22.44
		11.2	10.0	183.7	35.29	177.8	34.15	165.9	31.91	160.0	30.81	142.2	27.56	130.4	25.43	100.7	20.19
		16.4	15.0	183.7	26.66	177.8	25.90	165.9	24.39	160.0	23.63	142.2	21.35	130.4	19.82	100.7	15.94
		24.0	18.0	183.7	21.93	177.8	21.32	165.9	20.08	160.0	19.45	142.2	17.55	130.4	16.26	100.7	13.00

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	113.2	40.15	110.3	39.43	104.5	37.93	101.6	37.14	92.4	34.57	86.0	32.71	69.3	27.45
		-19.8	-20.0	118.8	41.01	115.8	40.28	109.8	38.72	106.7	37.90	97.1	35.23	90.5	33.31	73.0	27.90
		-14.7	-15.0	126.7	42.34	123.6	41.55	117.2	39.90	113.9	39.03	103.8	36.24	96.8	34.22	78.2	28.56
		-9.6	-10.0	137.5	44.22	134.1	43.38	127.2	41.59	123.7	40.66	112.8	37.66	105.2	35.50	85.0	29.48
		-4.4	-5.0	151.5	46.85	147.8	45.94	140.3	44.00	136.4	42.96	124.4	39.62	115.9	37.21	90.7	28.67
		-1.8	-2.5	159.8	47.91	155.9	46.97	147.9	44.99	143.8	43.94	128.0	36.79	117.3	33.98	90.7	26.96
		0.8	0.0	165.3	43.01	160.0	41.73	149.3	39.18	144.0	37.90	128.0	34.08	117.3	31.53	90.7	25.14
		2.8	2.0	165.3	39.33	160.0	38.20	149.3	35.93	144.0	34.80	128.0	31.38	117.3	29.14	90.7	23.54
		6.0	5.0	165.3	34.32	160.0	33.48	149.3	31.77	144.0	30.89	128.0	28.16	117.3	26.16	90.7	21.02
		7.0	6.0	165.3	33.57	160.0	32.62	149.3	30.72	144.0	29.77	128.0	26.91	117.3	25.00	90.7	20.17
		8.6	7.5	165.3	30.97	160.0	30.12	149.3	28.43	144.0	27.59	128.0	25.03	117.3	23.31	90.7	18.93
		11.2	10.0	165.3	26.89	160.0	26.22	149.3	24.87	144.0	24.19	128.0	22.10	117.3	20.69	90.7	17.00
		16.4	15.0	165.3	19.80	160.0	19.40	149.3	18.59	144.0	18.16	128.0	16.82	117.3	15.87	90.7	13.28
		24.0	18.0	165.3	19.29	160.0	18.76	149.3	17.69	144.0	17.15	128.0	15.54	117.3	14.47	90.7	11.80

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	113.2	40.15	110.3	39.43	104.5	37.93	101.6	37.14	92.4	34.57	86.0	32.71	69.3	27.45
		-19.8	-20.0	118.8	41.01	115.8	40.28	109.8	38.72	106.7	37.90	97.1	35.23	90.5	33.31	73.0	27.90
		-14.7	-15.0	126.7	42.34	123.6	41.55	117.2	39.90	113.9	39.03	103.8	36.24	96.8	34.22	78.2	28.56
		-9.6	-10.0	137.5	44.22	134.1	43.38	127.2	41.59	123.7	40.66	112.8	37.66	104.3	35.50	80.6	26.43
		-4.4	-5.0	147.0	38.17	142.2	37.23	132.7	35.33	128.0	34.36	113.8	31.36	104.3	29.30	80.6	23.89
		-1.8	-2.5	147.0	35.32	142.2	34.50	132.7	32.80	128.0	31.93	113.8	29.23	104.3	27.36	80.6	22.55
		0.8	0.0	147.0	32.20	142.2	31.56	132.7	30.21	128.0	29.50	113.8	27.23	104.3	25.61	80.6	21.18
		2.8	2.0	147.0	29.81	142.2	29.23	132.7	28.02	128.0	27.38	113.8	25.34	104.3	23.87	80.6	19.82
		6.0	5.0	147.0	26.40	142.2	25.93	132.7	24.92	128.0	24.38	113.8	22.63	104.3	21.31	80.6	17.67
		7.0	6.0	147.0	25.62	142.2	25.08	132.7	23.97	128.0	23.39	113.8	21.59	104.3	20.33	80.6	16.95
		8.6	7.5	147.0	23.49	142.2	23.03	132.7	22.08	128.0	21.59	113.8	20.03	104.3	18.92	80.6	15.90
		11.2	10.0	147.0	20.16	142.2	19.83	132.7	19.14	128.0	18.77	113.8	17.58	104.3	16.71	80.6	14.25
		16.4	15.0	147.0	17.45	142.2	16.97	132.7	16.02	128.0	15.54	113.8	14.12	104.3	13.17	80.6	11.04
		24.0	18.0	147.0	17.45	142.2	16.97	132.7	16.02	128.0	15.54	113.8	14.12	104.3	13.17	80.6	10.79

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	113.2	40.15	110.3	39.43	104.5	37.93	101.6	37.14	92.4	34.57	86.0	32.71	69.3	27.45
		-19.8	-20.0	118.8	41.01	115.8	40.28	109.8	38.72	106.7	37.90	97.1	35.23	90.5	33.31	70.5	24.80
		-14.7	-15.0	126.7	42.34	123.6	41.55	116.1	34.29	112.0	33.47	99.6	30.86	91.3	28.98	70.5	23.70
		-9.6	-10.0	128.6	32.98	124.4	32.34	116.1	31.01	112.0	30.31	99.6	28.07	91.3	26.46	70.5	22.15
		-4.4	-5.0	128.6	28.96	124.4	28.51	116.1	27.51	112.0	26.97	99.6	25.19	91.3	23.87	70.5	20.09
		-1.8	-2.5	128.6	27.03	124.4	26.62	116.1	25.73	112.0	25.25	99.6	23.64	91.3	22.43	70.5	18.96
		0.8	0.0	128.6	24.99	124.4	24.64	116.1	23.87	112.0	23.44	99.6	22.01	91.3	20.92	70.5	17.77
		2.8	2.0	128.6	22.98	124.4	22.69	116.1	22.02	112.0	21.66	99.6	20.40	91.3	19.44	70.5	16.59
		6.0	5.0	128.6	20.11	124.4	19.89	116.1	19.38	112.0	19.09	99.6	18.05	91.3	17.23	70.5	14.73
		7.0	6.0	128.6	19.28	124.4	19.03	116.1	18.49	112.0	18.19	99.6	17.19	91.3	16.42	70.5	14.17
		8.6	7.5	128.6	17.57	124.4	17.38	116.1	16.96	112.0	16.72	99.6	15.89	91.3	15.25	70.5	13.29
		11.2	10.0	128.6	15.60	124.4	15.19	116.1	14.62	112.0	14.47	99.6	13.90	91.3	13.43	70.5	11.90
		16.4	15.0	128.6	15.60	124.4	15.19	116.1	14.36	112.0	13.94	99.6	12.69	91.3	11.86	70.5	9.78
		24.0	18.0	128.6	15.60	124.4	15.19	116.1	14.36	112.0	13.94	99.6	12.69	91.3	11.86	70.5	9.78

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

52HP (Heating) U-16ME2E8+U-16ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	110.2	32.07	106.7	31.54	99.6	30.41	96.0	29.79	85.3	27.68	78.2	25.99	60.4	21.50
		-19.8	-20.0	110.2	30.20	106.7	29.73	99.6	28.71	96.0	28.16	85.3	26.37	78.2	25.04	60.4	20.77
		-14.7	-15.0	110.2	27.99	106.7	27.61	99.6	26.78	96.0	26.31	85.3	24.74	78.2	23.54	60.4	20.00
		-9.6	-10.0	110.2	25.51	106.7	25.20	99.6	24.49	96.0	24.10	85.3	22.73	78.2	21.68	60.4	18.53
		-4.4	-5.0	110.2	22.58	106.7	22.34	99.6	21.79	96.0	21.47	85.3	20.36	78.2	19.47	60.4	16.78
		-1.8	-2.5	110.2	20.97	106.7	20.77	99.6	20.30	96.0	20.03	85.3	19.05	78.2	18.25	60.4	15.82
		0.8	0.0	110.2	19.28	106.7	19.13	99.6	18.75	96.0	18.52	85.3	17.68	78.2	16.99	60.4	14.81
		2.8	2.0	110.2	17.61	106.7	17.50	99.6	17.22	96.0	17.04	85.3	16.34	78.2	15.75	60.4	13.82
		6.0	5.0	110.2	15.22	106.7	15.16	99.6	14.97	96.0	14.83	85.3	14.29	78.2	13.82	60.4	12.17
		7.0	6.0	110.2	14.36	106.7	14.30	99.6	14.14	96.0	14.02	85.3	13.57	78.2	13.17	60.4	11.76
		8.6	7.5	110.2	13.76	106.7	13.40	99.6	12.95	96.0	12.87	85.3	12.54	78.2	12.22	60.4	11.04
		11.2	10.0	110.2	13.76	106.7	13.40	99.6	12.69	96.0	12.33	85.3	11.26	78.2	10.76	60.4	9.89
		16.4	15.0	110.2	13.76	106.7	13.40	99.6	12.69	96.0	12.33	85.3	11.26	78.2	10.55	60.4	8.77
		24.0	18.0	110.2	13.76	106.7	13.40	99.6	12.69	96.0	12.33	85.3	11.26	78.2	10.55	60.4	8.77

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	91.9	24.84	88.9	24.56	83.0	23.92	80.0	23.56	71.1	22.30	65.2	21.30	50.4	17.93
		-19.8	-20.0	91.9	23.57	88.9	23.32	83.0	22.75	80.0	22.42	71.1	21.26	65.2	20.35	50.4	17.47
		-14.7	-15.0	91.9	21.91	88.9	21.70	83.0	21.22	80.0	20.94	71.1	19.92	65.2	19.09	50.4	16.54
		-9.6	-10.0	91.9	19.86	88.9	19.71	83.0	19.33	80.0	19.11	71.1	18.26	65.2	17.55	50.4	15.31
		-4.4	-5.0	91.9	17.48	88.9	17.38	83.0	17.12	80.0	16.95	71.1	16.30	65.2	15.73	50.4	13.86
		-1.8	-2.5	91.9	16.16	88.9	16.10	83.0	15.91	80.0	15.78	71.1	15.22	65.2	14.73	50.4	13.06
		0.8	0.0	91.9	14.79	88.9	14.76	83.0	14.64	80.0	14.55	71.1	14.12	65.2	13.70	50.4	12.24
		2.8	2.0	91.9	13.44	88.9	13.45	83.0	13.40	80.0	13.34	71.1	13.01	65.2	12.66	50.4	11.37
		6.0	5.0	91.9	11.92	88.9	11.62	83.0	11.40	80.0	11.38	71.1	11.21	65.2	11.00	50.4	10.01
		7.0	6.0	91.9	11.92	88.9	11.62	83.0	11.02	80.0	10.77	71.1	10.65	65.2	10.48	50.4	9.69
		8.6	7.5	91.9	11.92	88.9	11.62	83.0	11.02	80.0	10.73	71.1	9.86	65.2	9.75	50.4	9.11
		11.2	10.0	91.9	11.92	88.9	11.62	83.0	11.02	80.0	10.73	71.1	9.84	65.2	9.24	50.4	8.19
		16.4	15.0	91.9	11.92	88.9	11.62	83.0	11.02	80.0	10.73	71.1	9.84	65.2	9.24	50.4	7.75
		24.0	18.0	91.9	11.92	88.9	11.62	83.0	11.02	80.0	10.73	71.1	9.84	65.2	9.24	50.4	7.75

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	73.5	19.19	71.1	19.04	66.4	18.66	64.0	18.44	56.9	17.61	52.1	16.94	40.3	14.66
		-19.8	-20.0	73.5	18.17	71.1	18.05	66.4	17.73	64.0	17.54	56.9	16.79	52.1	16.18	40.3	14.18
		-14.7	-15.0	73.5	16.86	71.1	16.76	66.4	16.51	64.0	16.35	56.9	15.73	52.1	15.18	40.3	13.38
		-9.6	-10.0	73.5	15.25	71.1	15.19	66.4	15.02	64.0	14.90	56.9	14.40	52.1	13.95	40.3	12.40
		-4.4	-5.0	73.5	13.37	71.1	13.36	66.4	13.28	64.0	13.20	56.9	12.85	52.1	12.51	40.3	11.25
		-1.8	-2.5	73.5	12.34	71.1	12.35	66.4	12.32	64.0	12.28	56.9	12.01	52.1	11.72	40.3	10.61
		0.8	0.0	73.5	11.24	71.1	11.27	66.4	11.27	64.0	11.25	56.9	11.06	52.1	10.83	40.3	9.90
		2.8	2.0	73.5	10.07	71.1	10.10	66.4	10.16	64.0	10.17	56.9	10.08	52.1	9.93	40.3	9.20
		6.0	5.0	73.5	10.07	71.1	9.84	66.4	9.36	64.0	9.12	56.9	8.73	52.1	8.68	40.3	8.18
		7.0	6.0	73.5	10.07	71.1	9.84	66.4	9.36	64.0	9.12	56.9	8.41	52.1	8.29	40.3	7.90
		8.6	7.5	73.5	10.07	71.1	9.84	66.4	9.36	64.0	9.12	56.9	8.41	52.1	7.93	40.3	7.46
		11.2	10.0	73.5	10.07	71.1	9.84	66.4	9.36	64.0	9.12	56.9	8.41	52.1	7.93	40.3	6.75
		16.4	15.0	73.5	10.07	71.1	9.84	66.4	9.36	64.0	9.12	56.9	8.41	52.1	7.93	40.3	6.74
		24.0	18.0	73.5	10.07	71.1	9.84	66.4	9.36	64.0	9.12	56.9	8.41	52.1	7.93	40.3	6.74

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	55.1	14.31	53.3	14.24	49.8	14.05	48.0	13.92	42.7	13.42	39.1	12.98	30.2	11.50
		-19.8	-20.0	55.1	13.56	53.3	13.51	49.8	13.35	48.0	13.24	42.7	12.81	39.1	12.41	30.2	11.07
		-14.7	-15.0	55.1	12.58	53.3	12.55	49.8	12.44	48.0	12.36	42.7	12.00	39.1	11.67	30.2	10.47
		-9.6	-10.0	55.1	11.39	53.3	11.39	49.8	11.33	48.0	11.28	42.7	11.02	39.1	10.75	30.2	9.73
		-4.4	-5.0	55.1	9.88	53.3	9.91	49.8	9.93	48.0	9.92	42.7	9.77	39.1	9.59	30.2	8.81
		-1.8	-2.5	55.1	9.04	53.3	9.09	49.8	9.16	48.0	9.16	42.7	9.09	39.1	8.96	30.2	8.32
		0.8	0.0	55.1	8.23	53.3	8.26	49.8	8.35	48.0	8.38	42.7	8.38	39.1	8.30	30.2	7.80
		2.8	2.0	55.1	8.23	53.3	8.05	49.8	7.69	48.0	7.63	42.7	7.69	39.1	7.66	30.2	7.29
		6.0	5.0	55.1	8.23	53.3	8.05	49.8	7.69	48.0	7.52	42.7	6.98	39.1	6.77	30.2	6.58
		7.0	6.0	55.1	8.23	53.3	8.05	49.8	7.69	48.0	7.52	42.7	6.98	39.1	6.62	30.2	6.35
		8.6	7.5	55.1	8.23	53.3	8.05	49.8	7.69	48.0	7.52	42.7	6.98	39.1	6.62	30.2	6.03
		11.2	10.0	55.1	8.23	53.3	8.05	49.8	7.69	48.0	7.52	42.7	6.98	39.1	6.62	30.2	5.73
		16.4	15.0	55.1	8.23	53.3	8.05	49.8	7.69	48.0	7.52	42.7	6.98	39.1	6.62	30.2	5.73
		24.0	18.0	55.1	8.23	53.3	8.05	49.8	7.69	48.0	7.52	42.7	6.98	39.1	6.62	30.2	5.73

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-47. 54HP (Cooling) U-14ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	100.7	11.85	120.8	14.22	140.9	16.59	151.0	17.77	171.1	20.14	191.3	22.51	211.4	24.87
		-5.0	100.7	11.87	120.8	14.24	140.9	16.61	151.0	17.80	171.1	20.17	191.3	22.54	211.4	24.90
		0.0	100.7	11.90	120.8	14.27	140.9	16.65	151.0	17.84	171.1	20.20	191.3	22.59	211.4	24.97
		5.0	100.7	11.94	120.8	14.32	140.9	16.69	151.0	17.89	171.1	20.31	191.3	22.77	211.4	25.19
		10.0	100.7	11.99	120.8	14.40	140.9	16.88	151.0	18.14	171.1	20.69	191.3	23.28	211.4	25.77
		15.0	100.7	12.25	120.8	14.91	140.9	17.64	151.0	19.03	171.1	21.84	191.3	24.67	211.4	27.27
		20.0	100.7	13.94	120.8	17.12	140.9	20.63	151.0	22.52	171.1	26.60	191.3	31.06	211.4	35.93
		25.0	100.7	17.89	120.8	22.00	140.9	26.50	151.0	28.91	171.1	34.03	191.3	39.55	211.4	45.49
		30.0	100.7	22.31	120.8	27.41	140.9	32.94	151.0	35.86	171.1	42.04	191.3	48.67	211.4	55.74
		35.0	100.7	27.06	120.8	33.22	140.9	39.84	151.0	43.33	171.1	50.67	191.3	58.50	202.4	60.61
		40.0	100.7	32.18	120.8	39.48	140.9	47.29	151.0	51.39	171.1	59.99	179.3	60.61	187.0	60.61
		43.0	100.7	35.44	120.8	43.47	140.9	52.05	151.0	56.55	163.6	60.62	171.4	60.61	174.9	57.49
		46.0	99.7	38.49	119.6	47.24	127.0	48.04	128.4	46.77	131.8	44.64	136.2	42.96	141.4	41.64
52.0	43.5	16.72	47.3	16.89	51.9	17.20	54.4	17.39	59.9	17.83	66.0	18.33	72.7	18.86		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	90.6	9.54	108.7	11.98	126.8	14.36	135.9	15.53	154.0	17.82	172.1	20.06	190.3	22.25
		-5.0	90.6	9.56	108.7	12.01	126.8	14.39	135.9	15.55	154.0	17.85	172.1	20.09	190.3	22.29
		0.0	90.6	9.59	108.7	12.04	126.8	14.42	135.9	15.59	154.0	17.89	172.1	20.13	190.3	22.31
		5.0	90.6	9.63	108.7	12.08	126.8	14.46	135.9	15.63	154.0	17.92	172.1	20.18	190.3	22.42
		10.0	90.6	9.69	108.7	12.13	126.8	14.53	135.9	15.73	154.0	18.09	172.1	20.43	190.3	22.73
		15.0	90.6	9.80	108.7	12.37	126.8	14.93	135.9	16.20	154.0	18.71	172.1	21.17	190.3	23.59
		20.0	90.6	10.79	108.7	13.73	126.8	16.60	135.9	18.00	154.0	20.72	172.1	23.75	190.3	26.97
		25.0	90.6	14.58	108.7	17.92	126.8	21.38	135.9	23.16	154.0	26.79	172.1	30.53	190.3	34.37
		30.0	90.6	18.66	108.7	22.71	126.8	26.84	135.9	28.93	154.0	33.18	172.1	37.52	190.3	41.98
		35.0	90.6	23.78	108.7	28.68	126.8	33.64	135.9	36.15	154.0	41.24	172.1	46.46	190.3	51.87
		40.0	90.6	28.30	108.7	33.93	126.8	39.61	135.9	42.49	154.0	48.36	172.1	54.49	187.0	60.61
		43.0	90.6	31.09	108.7	37.18	126.8	43.33	135.9	46.46	154.0	52.91	171.4	60.61	174.9	57.49
		46.0	90.6	33.26	108.7	40.26	126.8	47.60	128.4	46.77	131.8	44.64	136.2	42.96	141.4	41.64
52.0	43.5	16.72	47.3	16.89	51.9	17.20	54.4	17.39	59.9	17.83	66.0	18.33	72.7	18.86		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	80.5	8.17	96.6	10.38	112.7	12.54	120.8	13.60	136.9	15.69	153.0	17.73	169.1	19.74
		-5.0	80.5	8.19	96.6	10.40	112.7	12.56	120.8	13.62	136.9	15.71	153.0	17.76	169.1	19.76
		0.0	80.5	8.21	96.6	10.43	112.7	12.59	120.8	13.65	136.9	15.74	153.0	17.79	169.1	19.80
		5.0	80.5	8.24	96.6	10.46	112.7	12.63	120.8	13.69	136.9	15.78	153.0	17.83	169.1	19.83
		10.0	80.5	8.29	96.6	10.51	112.7	12.68	120.8	13.74	136.9	15.83	153.0	17.90	169.1	19.95
		15.0	80.5	8.36	96.6	10.59	112.7	12.81	120.8	13.91	136.9	16.10	153.0	18.24	169.1	20.35
		20.0	80.5	8.78	96.6	11.23	112.7	13.63	120.8	14.81	136.9	17.12	153.0	19.37	169.1	21.55
		25.0	80.5	11.91	96.6	14.43	112.7	17.01	120.8	18.31	136.9	20.94	153.0	23.62	169.1	26.32
		30.0	80.5	15.48	96.6	18.63	112.7	21.79	120.8	23.38	136.9	26.56	153.0	29.75	169.1	32.95
		35.0	80.5	19.97	96.6	23.87	112.7	27.74	120.8	29.67	136.9	33.52	153.0	37.37	169.1	41.23
		40.0	80.5	23.98	96.6	28.50	112.7	32.97	120.8	35.19	136.9	39.63	153.0	44.08	169.1	48.59
		43.0	80.5	26.46	96.6	31.37	112.7	36.22	120.8	38.63	136.9	43.47	153.0	48.35	169.1	53.35
		46.0	80.5	28.19	96.6	33.64	112.7	39.23	120.8	42.09	131.8	44.64	136.2	42.96	141.4	41.64
52.0	43.5	16.72	47.3	16.89	51.9	17.20	54.4	17.39	59.9	17.83	66.0	18.33	72.7	18.86		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	70.5	6.78	84.6	8.75	98.7	10.68	105.7	11.63	119.8	13.50	133.9	15.33	148.0	17.13
		-5.0	70.5	6.79	84.6	8.76	98.7	10.69	105.7	11.64	119.8	13.52	133.9	15.35	148.0	17.16
		0.0	70.5	6.81	84.6	8.78	98.7	10.72	105.7	11.67	119.8	13.54	133.9	15.38	148.0	17.18
		5.0	70.5	6.84	84.6	8.81	98.7	10.75	105.7	11.70	119.8	13.58	133.9	15.41	148.0	17.22
		10.0	70.5	6.88	84.6	8.86	98.7	10.79	105.7	11.75	119.8	13.62	133.9	15.46	148.0	17.25
		15.0	70.5	6.94	84.6	8.92	98.7	10.85	105.7	11.80	119.8	13.69	133.9	15.56	148.0	17.39
		20.0	70.5	7.08	84.6	9.13	98.7	11.15	105.7	12.15	119.8	14.11	133.9	16.04	148.0	17.92
		25.0	70.5	8.88	84.6	11.02	98.7	13.07	105.7	14.06	119.8	15.99	133.9	17.87	148.0	19.69
		30.0	70.5	12.57	84.6	14.93	98.7	17.25	105.7	18.40	119.8	20.66	133.9	22.89	148.0	25.08
		35.0	70.5	16.45	84.6	19.45	98.7	22.38	105.7	23.81	119.8	26.63	133.9	29.39	148.0	32.10
		40.0	70.5	19.95	84.6	23.49	98.7	26.93	105.7	28.61	119.8	31.90	133.9	35.12	148.0	38.27
		43.0	70.5	22.11	84.6	25.99	98.7	29.73	105.7	31.57	119.8	35.16	133.9	38.68	148.0	42.14
		46.0	70.5	23.61	84.6	27.75	98.7	31.89	105.7	33.97	119.8	38.13	133.9	40.80	141.4	41.64
52.0	43.5	16.72	47.3	16.89	51.9	17.20	54.4	17.39	59.9	17.83	66.0	18.33	72.7	18.86		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

54HP (Cooling) U-14ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	60.4	5.36	72.5	7.08	84.6	8.77	90.6	9.60	102.7	11.24	114.8	12.86	126.8	14.44
		-5.0	60.4	5.37	72.5	7.09	84.6	8.78	90.6	9.61	102.7	11.26	114.8	12.87	126.8	14.46
		0.0	60.4	5.39	72.5	7.11	84.6	8.80	90.6	9.63	102.7	11.28	114.8	12.89	126.8	14.48
		5.0	60.4	5.41	72.5	7.13	84.6	8.82	90.6	9.66	102.7	11.31	114.8	12.92	126.8	14.51
		10.0	60.4	5.44	72.5	7.17	84.6	8.86	90.6	9.70	102.7	11.34	114.8	12.96	126.8	14.54
		15.0	60.4	5.49	72.5	7.22	84.6	8.91	90.6	9.75	102.7	11.40	114.8	13.01	126.8	14.59
		20.0	60.4	5.58	72.5	7.29	84.6	8.99	90.6	9.83	102.7	11.50	114.8	13.14	126.8	14.74
		25.0	60.4	6.21	72.5	7.99	84.6	9.72	90.6	10.57	102.7	12.24	114.8	13.87	126.8	15.46
		30.0	60.4	9.96	72.5	11.65	84.6	13.25	90.6	14.03	102.7	15.53	114.8	16.97	126.8	18.34
		35.0	60.4	13.22	72.5	15.44	84.6	17.54	90.6	18.55	102.7	20.50	114.8	22.36	126.8	24.14
		40.0	60.4	16.22	72.5	18.90	84.6	21.44	90.6	22.66	102.7	25.00	114.8	27.24	126.8	29.37
		43.0	60.4	18.06	72.5	21.02	84.6	23.82	90.6	25.17	102.7	27.76	114.8	30.23	126.8	32.58
		46.0	60.4	19.49	72.5	22.54	84.6	25.50	90.6	26.96	102.7	29.81	114.8	32.60	126.8	35.33
52.0	43.5	16.72	47.3	16.89	51.9	17.20	54.4	17.39	59.9	17.83	66.0	18.33	72.7	18.86		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	50.3	3.92	60.4	5.38	70.5	6.81	75.5	7.52	85.6	8.92	95.6	10.30	105.7	11.65
		-5.0	50.3	3.93	60.4	5.39	70.5	6.82	75.5	7.53	85.6	8.93	95.6	10.31	105.7	11.66
		0.0	50.3	3.94	60.4	5.40	70.5	6.84	75.5	7.55	85.6	8.95	95.6	10.33	105.7	11.68
		5.0	50.3	3.96	60.4	5.42	70.5	6.86	75.5	7.57	85.6	8.97	95.6	10.35	105.7	11.70
		10.0	50.3	3.98	60.4	5.45	70.5	6.88	75.5	7.60	85.6	9.00	95.6	10.38	105.7	11.73
		15.0	50.3	4.02	60.4	5.48	70.5	6.92	75.5	7.64	85.6	9.04	95.6	10.42	105.7	11.77
		20.0	50.3	4.09	60.4	5.55	70.5	6.99	75.5	7.70	85.6	9.10	95.6	10.48	105.7	11.82
		25.0	50.3	4.25	60.4	5.71	70.5	7.15	75.5	7.87	85.6	10.44	95.6	10.65	105.7	12.00
		30.0	50.3	7.64	60.4	8.66	70.5	9.28	75.5	9.72	85.6	10.74	95.6	11.86	105.7	13.02
		35.0	50.3	10.29	60.4	11.83	70.5	13.25	75.5	13.91	85.6	15.15	95.6	16.28	105.7	17.31
		40.0	50.3	12.78	60.4	14.71	70.5	16.48	75.5	17.31	85.6	18.88	95.6	20.31	105.7	21.63
		43.0	50.3	14.31	60.4	16.48	70.5	18.47	75.5	19.40	85.6	21.16	95.6	22.78	105.7	24.28
		46.0	50.3	15.81	60.4	17.96	70.5	19.99	75.5	20.96	85.6	22.81	95.6	24.56	105.7	26.21
52.0	43.5	16.72	47.3	16.89	51.9	17.20	54.4	17.39	59.9	17.83	66.0	18.33	72.7	18.86		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	40.3	2.45	48.3	3.64	56.4	4.81	60.4	5.39	68.5	6.53	76.5	7.67	84.6	8.79
		-5.0	40.3	2.46	48.3	3.65	56.4	4.82	60.4	5.40	68.5	6.54	76.5	7.68	84.6	8.80
		0.0	40.3	2.47	48.3	3.66	56.4	4.83	60.4	5.41	68.5	6.55	76.5	7.69	84.6	8.81
		5.0	40.3	2.48	48.3	3.67	56.4	4.84	60.4	5.42	68.5	6.57	76.5	7.71	84.6	8.83
		10.0	40.3	2.50	48.3	3.69	56.4	4.86	60.4	5.44	68.5	6.59	76.5	7.73	84.6	8.86
		15.0	40.3	2.53	48.3	3.72	56.4	4.89	60.4	5.47	68.5	6.62	76.5	7.76	84.6	8.89
		20.0	40.3	2.58	48.3	3.77	56.4	4.94	60.4	5.52	68.5	6.66	76.5	7.81	84.6	8.95
		25.0	40.3	2.68	48.3	3.86	56.4	5.02	60.4	5.60	68.5	6.74	76.5	7.87	84.6	9.02
		30.0	40.3	3.85	48.3	4.55	56.4	5.49	60.4	5.99	68.5	7.03	76.5	8.22	84.6	9.52
		35.0	40.3	7.66	48.3	8.66	56.4	9.53	60.4	9.91	68.5	10.61	76.5	11.47	84.6	12.57
		40.0	40.3	9.64	48.3	10.94	56.4	12.08	60.4	12.59	68.5	13.52	76.5	14.32	84.6	15.01
		43.0	40.3	10.86	48.3	12.35	56.4	13.66	60.4	14.26	68.5	15.34	76.5	16.29	84.6	17.11
		46.0	40.3	12.54	48.3	13.97	56.4	15.27	60.4	15.87	68.5	16.98	76.5	17.97	84.6	18.85
52.0	40.3	14.85	47.3	16.89	51.9	17.20	54.4	17.39	59.9	17.83	66.0	18.33	72.7	18.86		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	30.2	0.96	36.2	1.86	42.3	2.77	45.3	3.22	51.3	4.11	57.4	4.99	63.4	5.86
		-5.0	30.2	0.96	36.2	1.87	42.3	2.77	45.3	3.23	51.3	4.12	57.4	5.01	63.4	5.87
		0.0	30.2	0.97	36.2	1.88	42.3	2.78	45.3	3.24	51.3	4.14	57.4	5.02	63.4	5.89
		5.0	30.2	0.98	36.2	1.89	42.3	2.80	45.3	3.25	51.3	4.16	57.4	5.04	63.4	5.92
		10.0	30.2	0.99	36.2	1.90	42.3	2.81	45.3	3.27	51.3	4.18	57.4	5.07	63.4	5.95
		15.0	30.2	1.01	36.2	1.92	42.3	2.84	45.3	3.30	51.3	4.22	57.4	5.11	63.4	5.99
		20.0	30.2	1.04	36.2	1.95	42.3	2.87	45.3	3.34	51.3	4.26	57.4	5.16	63.4	6.03
		25.0	30.2	1.11	36.2	2.01	42.3	2.94	45.3	3.41	51.3	4.33	57.4	5.25	63.4	6.19
		30.0	30.2	1.29	36.2	2.14	42.3	3.07	45.3	3.61	51.3	4.72	57.4	5.81	63.4	6.86
		35.0	30.2	5.35	36.2	5.92	42.3	6.60	45.3	7.04	51.3	7.91	57.4	8.77	63.4	9.61
		40.0	30.2	6.81	36.2	7.59	42.3	8.24	45.3	8.52	51.3	8.98	57.4	9.34	63.4	9.61
		43.0	30.2	7.72	36.2	8.65	42.3	9.42	45.3	9.75	51.3	10.32	57.4	10.77	63.4	11.11
		46.0	30.2	9.64	36.2	10.52	42.3	11.27	45.3	11.61	51.3	12.18	57.4	12.66	63.4	13.03
52.0	30.2	11.30	36.2	12.44	42.3	13.44	45.3	13.89	51.3	14.34	57.4	14.57	63.4	14.66		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-48. 54HP (Heating) U-14ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	124.4	46.41	121.2	45.56	114.7	43.76	111.4	42.81	101.1	39.76	94.0	37.54	75.5	31.38
		-19.8	-20.0	130.7	47.50	127.3	46.61	120.5	44.73	117.1	43.75	106.4	40.56	99.0	38.27	79.5	31.93
		-14.7	-15.0	139.6	49.13	136.0	48.16	128.8	46.18	125.2	45.14	113.8	41.78	105.9	39.37	85.2	32.71
		-9.6	-10.0	151.5	51.40	147.7	50.37	140.0	48.21	136.0	47.08	123.7	43.47	115.2	40.88	92.6	33.76
		-4.4	-5.0	167.0	54.61	162.9	53.45	154.3	50.99	149.9	49.71	136.3	45.63	126.9	42.75	102.0	35.04
		-1.8	-2.5	176.2	56.06	171.8	54.87	162.7	52.38	158.1	51.06	143.8	46.92	133.8	43.97	106.4	35.47
		0.8	0.0	186.4	57.27	181.7	56.03	172.2	53.44	167.3	52.09	150.2	46.84	137.7	42.85	106.4	33.23
		2.8	2.0	194.0	56.63	187.8	54.67	175.3	50.81	169.0	48.90	150.2	43.32	137.7	39.69	106.4	30.90
		6.0	5.0	194.0	49.64	187.8	47.97	175.3	44.68	169.0	43.05	150.2	38.27	137.7	35.09	106.4	27.51
		7.0	6.0	194.0	47.38	187.8	45.80	175.3	42.69	169.0	41.10	150.2	36.57	137.7	33.62	106.4	26.44
		8.6	7.5	194.0	43.99	187.8	42.55	175.3	39.71	169.0	38.31	150.2	34.18	137.7	31.48	106.4	24.88
		11.2	10.0	194.0	38.74	187.8	37.54	175.3	35.15	169.0	33.96	150.2	30.46	137.7	28.15	106.4	22.45
		16.4	15.0	194.0	29.54	187.8	28.72	175.3	27.06	169.0	26.23	150.2	23.73	137.7	22.04	106.4	17.78
		24.0	18.0	194.0	24.31	187.8	23.62	175.3	22.25	169.0	21.56	150.2	19.45	137.7	18.03	106.4	14.46

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	90%	-24.9	-25.0	124.4	46.41	121.2	45.56	114.7	43.76	111.4	42.81	101.1	39.76	94.0	37.54	75.5	31.38
		-19.8	-20.0	130.7	47.50	127.3	46.61	120.5	44.73	117.1	43.75	106.4	40.56	99.0	38.27	79.5	31.93
		-14.7	-15.0	139.6	49.13	136.0	48.16	128.8	46.18	125.2	45.14	113.8	41.78	105.9	39.37	85.2	32.71
		-9.6	-10.0	151.5	51.40	147.7	50.37	140.0	48.21	136.0	47.08	123.7	43.47	115.2	40.88	92.6	33.76
		-4.4	-5.0	167.0	54.61	162.9	53.45	154.3	50.99	149.9	49.71	135.2	43.16	123.9	39.87	95.8	31.65
		-1.8	-2.5	174.6	50.91	169.0	49.40	157.7	46.39	152.1	44.89	135.2	40.37	123.9	37.35	95.8	29.77
		0.8	0.0	174.6	46.96	169.0	45.60	157.7	42.89	152.1	41.53	135.2	37.45	123.9	34.71	95.8	27.79
		2.8	2.0	174.6	43.00	169.0	41.80	157.7	39.39	152.1	38.18	135.2	34.53	123.9	32.08	95.8	26.00
		6.0	5.0	174.6	37.63	169.0	36.73	157.7	34.87	152.1	33.92	135.2	30.95	123.9	28.82	95.8	23.28
		7.0	6.0	174.6	36.67	169.0	35.67	157.7	33.67	152.1	32.66	135.2	29.62	123.9	27.57	95.8	22.36
		8.6	7.5	174.6	33.90	169.0	33.01	157.7	31.23	152.1	30.33	135.2	27.60	123.9	25.76	95.8	21.03
		11.2	10.0	174.6	29.56	169.0	28.85	157.7	27.42	152.1	26.69	135.2	24.46	123.9	22.93	95.8	18.93
		16.4	15.0	174.6	21.95	169.0	21.52	157.7	20.63	152.1	20.17	135.2	18.70	123.9	17.66	95.8	14.82
		24.0	18.0	174.6	21.52	169.0	20.93	157.7	19.75	152.1	19.16	135.2	17.39	123.9	16.21	95.8	13.26

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	80%	-24.9	-25.0	124.4	46.41	121.2	45.56	114.7	43.76	111.4	42.81	101.1	39.76	94.0	37.54	75.5	31.38
		-19.8	-20.0	130.7	47.50	127.3	46.61	120.5	44.73	117.1	43.75	106.4	40.56	99.0	38.27	79.5	31.93
		-14.7	-15.0	139.6	49.13	136.0	48.16	128.8	46.18	125.2	45.14	113.8	41.78	105.9	39.37	85.1	32.71
		-9.6	-10.0	151.5	51.40	147.7	50.37	140.0	48.21	135.2	42.57	120.2	38.77	110.2	36.15	85.1	29.26
		-4.4	-5.0	155.2	41.78	150.2	40.79	140.2	38.76	135.2	37.73	120.2	34.52	110.2	32.30	85.1	26.44
		-1.8	-2.5	155.2	38.70	150.2	37.82	140.2	36.02	135.2	35.09	120.2	32.20	110.2	30.20	85.1	24.96
		0.8	0.0	155.2	35.41	150.2	34.72	140.2	33.25	135.2	32.48	120.2	30.02	110.2	28.27	85.1	23.46
		2.8	2.0	155.2	32.78	150.2	32.16	140.2	30.85	135.2	30.16	120.2	27.95	110.2	26.35	85.1	21.95
		6.0	5.0	155.2	29.04	150.2	28.53	140.2	27.43	135.2	26.85	120.2	24.93	110.2	23.52	85.1	19.59
		7.0	6.0	155.2	28.03	150.2	27.47	140.2	26.31	135.2	25.71	120.2	23.81	110.2	22.47	85.1	18.83
		8.6	7.5	155.2	25.75	150.2	25.28	140.2	24.29	135.2	23.77	120.2	22.12	110.2	20.94	85.1	17.69
		11.2	10.0	155.2	22.20	150.2	21.86	140.2	21.14	135.2	20.75	120.2	19.49	110.2	18.56	85.1	15.90
		16.4	15.0	155.2	19.48	150.2	18.96	140.2	17.91	135.2	17.39	120.2	15.81	110.2	14.77	85.1	12.35
		24.0	18.0	155.2	19.48	150.2	18.96	140.2	17.91	135.2	17.39	120.2	15.81	110.2	14.77	85.1	12.14

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	70%	-24.9	-25.0	124.4	46.41	121.2	45.56	114.7	43.76	111.4	42.81	101.1	39.76	94.0	37.54	74.5	28.55
		-19.8	-20.0	130.7	47.50	127.3	46.61	120.5	44.73	117.1	43.75	105.2	35.95	96.4	33.59	74.5	27.49
		-14.7	-15.0	135.8	40.16	131.4	39.36	122.7	37.68	118.3	36.81	105.2	34.01	96.4	32.00	74.5	26.31
		-9.6	-10.0	135.8	36.21	131.4	35.54	122.7	34.12	118.3	33.37	105.2	30.97	96.4	29.29	74.5	24.58
		-4.4	-5.0	135.8	31.97	131.4	31.47	122.7	30.39	118.3	29.81	105.2	27.87	96.4	26.43	74.5	22.31
		-1.8	-2.5	135.8	29.83	131.4	29.39	122.7	28.43	118.3	27.90	105.2	26.15	96.4	24.84	74.5	21.06
		0.8	0.0	135.8	27.60	131.4	27.21	122.7	26.37	118.3	25.92	105.2	24.36	96.4	23.18	74.5	19.75
		2.8	2.0	135.8	25.38	131.4	25.06	122.7	24.35	118.3	23.95	105.2	22.59	96.4	21.54	74.5	18.45
		6.0	5.0	135.8	22.21	131.4	21.97	122.7	21.42	118.3	21.10	105.2	19.96	96.4	19.06	74.5	16.34
		7.0	6.0	135.8	21.14	131.4	20.90	122.7	20.35	118.3	20.04	105.2	19.00	96.4	18.19	74.5	15.78
		8.6	7.5	135.8	19.31	131.4	19.13	122.7	18.70	118.3	18.46	105.2	17.61	96.4	16.93	74.5	14.82
		11.2	10.0	135.8	17.45	131.4	16.99	122.7	16.20	118.3	16.04	105.2	15.45	96.4	14.95	74.5	13.31
		16.4	15.0	135.8	17.45	131.4	16.99	122.7	16.08	118.3	15.62	105.2	14.24	96.4	13.32	74.5	11.03
		24.0	18.0	135.8	17.45	131.4	16.99	122.7	16.08	118.3	15.62	105.2	14.24	96.4	13.32	74.5	11.03

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

54HP (Heating) U-14ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	116.4	35.30	112.7	34.74	105.2	33.52	101.4	32.86	90.1	30.63	82.6	28.82	63.8	23.91
		-19.8	-20.0	116.4	33.24	112.7	32.76	105.2	31.73	101.4	31.16	90.1	29.26	82.6	27.80	63.8	23.14
		-14.7	-15.0	116.4	31.01	112.7	30.60	105.2	29.68	101.4	29.18	90.1	27.45	82.6	26.13	63.8	22.26
		-9.6	-10.0	116.4	28.27	112.7	27.93	105.2	27.16	101.4	26.73	90.1	25.23	82.6	24.08	63.8	20.63
		-4.4	-5.0	116.4	25.03	112.7	24.77	105.2	24.17	101.4	23.82	90.1	22.61	82.6	21.64	63.8	18.70
		-1.8	-2.5	116.4	23.25	112.7	23.04	105.2	22.53	101.4	22.23	90.1	21.16	82.6	20.30	63.8	17.64
		0.8	0.0	116.4	21.39	112.7	21.23	105.2	20.82	101.4	20.57	90.1	19.66	82.6	18.91	63.8	16.53
		2.8	2.0	116.4	19.55	112.7	19.44	105.2	19.13	101.4	18.94	90.1	18.18	82.6	17.54	63.8	15.42
		6.0	5.0	116.4	16.81	112.7	16.73	105.2	16.52	101.4	16.39	90.1	15.84	82.6	15.35	63.8	13.58
		7.0	6.0	116.4	15.82	112.7	15.78	105.2	15.62	101.4	15.52	90.1	15.06	82.6	14.64	63.8	13.15
		8.6	7.5	116.4	15.42	112.7	15.03	105.2	14.35	101.4	14.28	90.1	13.94	82.6	13.61	63.8	12.36
		11.2	10.0	116.4	15.42	112.7	15.03	105.2	14.24	101.4	13.85	90.1	12.67	82.6	12.03	63.8	11.10
		16.4	15.0	116.4	15.42	112.7	15.03	105.2	14.24	101.4	13.85	90.1	12.67	82.6	11.88	63.8	9.92
		24.0	18.0	116.4	15.42	112.7	15.03	105.2	14.24	101.4	13.85	90.1	12.67	82.6	11.88	63.8	9.92

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	97.0	27.59	93.9	27.29	87.6	26.58	84.5	26.18	75.1	24.80	68.9	23.70	53.2	20.00
		-19.8	-20.0	97.0	26.19	93.9	25.92	87.6	25.29	84.5	24.93	75.1	23.65	68.9	22.65	53.2	19.49
		-14.7	-15.0	97.0	24.35	93.9	24.13	87.6	23.60	84.5	23.29	75.1	22.17	68.9	21.26	53.2	18.46
		-9.6	-10.0	97.0	22.10	93.9	21.93	87.6	21.51	84.5	21.26	75.1	20.33	68.9	19.56	53.2	17.10
		-4.4	-5.0	97.0	19.46	93.9	19.35	87.6	19.07	84.5	18.88	75.1	18.17	68.9	17.55	53.2	15.50
		-1.8	-2.5	97.0	18.01	93.9	17.94	87.6	17.73	84.5	17.59	75.1	16.99	68.9	16.45	53.2	14.62
		0.8	0.0	97.0	16.49	93.9	16.47	87.6	16.34	84.5	16.23	75.1	15.76	68.9	15.32	53.2	13.70
		2.8	2.0	97.0	14.99	93.9	14.97	87.6	14.89	84.5	14.81	75.1	14.44	68.9	14.08	53.2	12.71
		6.0	5.0	97.0	13.39	93.9	13.06	87.6	12.65	84.5	12.64	75.1	12.49	68.9	12.27	53.2	11.25
		7.0	6.0	97.0	13.39	93.9	13.06	87.6	12.41	84.5	12.08	75.1	11.89	68.9	11.72	53.2	10.88
		8.6	7.5	97.0	13.39	93.9	13.06	87.6	12.41	84.5	12.08	75.1	11.10	68.9	10.92	53.2	10.25
		11.2	10.0	97.0	13.39	93.9	13.06	87.6	12.41	84.5	12.08	75.1	11.10	68.9	10.44	53.2	9.24
		16.4	15.0	97.0	13.39	93.9	13.06	87.6	12.41	84.5	12.08	75.1	11.10	68.9	10.44	53.2	8.80
		24.0	18.0	97.0	13.39	93.9	13.06	87.6	12.41	84.5	12.08	75.1	11.10	68.9	10.44	53.2	8.80

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	77.6	21.37	75.1	21.20	70.1	20.80	67.6	20.55	60.1	19.65	55.1	18.91	42.6	16.40
		-19.8	-20.0	77.6	20.25	75.1	20.12	70.1	19.77	67.6	19.56	60.1	18.74	55.1	18.06	42.6	15.87
		-14.7	-15.0	77.6	18.79	75.1	18.69	70.1	18.42	67.6	18.25	60.1	17.56	55.1	16.96	42.6	14.99
		-9.6	-10.0	77.6	17.02	75.1	16.96	70.1	16.77	67.6	16.64	60.1	16.10	55.1	15.61	42.6	13.91
		-4.4	-5.0	77.6	14.95	75.1	14.94	70.1	14.85	67.6	14.77	60.1	14.39	55.1	14.02	42.6	12.63
		-1.8	-2.5	77.6	13.80	75.1	13.81	70.1	13.76	67.6	13.71	60.1	13.40	55.1	13.09	42.6	11.88
		0.8	0.0	77.6	12.45	75.1	12.50	70.1	12.52	67.6	12.51	60.1	12.33	55.1	12.10	42.6	11.11
		2.8	2.0	77.6	11.36	75.1	11.23	70.1	11.32	67.6	11.33	60.1	11.27	55.1	11.12	42.6	10.34
		6.0	5.0	77.6	11.36	75.1	11.10	70.1	10.57	67.6	10.31	60.1	9.80	55.1	9.75	42.6	9.25
		7.0	6.0	77.6	11.36	75.1	11.10	70.1	10.57	67.6	10.31	60.1	9.52	55.1	9.33	42.6	8.93
		8.6	7.5	77.6	11.36	75.1	11.10	70.1	10.57	67.6	10.31	60.1	9.52	55.1	9.00	42.6	8.44
		11.2	10.0	77.6	11.36	75.1	11.10	70.1	10.57	67.6	10.31	60.1	9.52	55.1	9.00	42.6	7.69
		16.4	15.0	77.6	11.36	75.1	11.10	70.1	10.57	67.6	10.31	60.1	9.52	55.1	9.00	42.6	7.69
		24.0	18.0	77.6	11.36	75.1	11.10	70.1	10.57	67.6	10.31	60.1	9.52	55.1	9.00	42.6	7.69

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	58.2	15.99	56.3	15.91	52.6	15.70	50.7	15.57	45.1	15.02	41.3	14.54	31.9	12.92
		-19.8	-20.0	58.2	15.16	56.3	15.10	52.6	14.94	50.7	14.82	45.1	14.34	41.3	13.91	31.9	12.45
		-14.7	-15.0	58.2	14.08	56.3	14.05	52.6	13.93	50.7	13.85	45.1	13.46	41.3	13.09	31.9	11.78
		-9.6	-10.0	58.2	12.72	56.3	12.71	52.6	12.66	50.7	12.60	45.1	12.31	41.3	12.02	31.9	10.93
		-4.4	-5.0	58.2	11.02	56.3	11.06	52.6	11.10	50.7	11.09	45.1	10.95	41.3	10.75	31.9	9.93
		-1.8	-2.5	58.2	10.10	56.3	10.17	52.6	10.25	50.7	10.26	45.1	10.20	41.3	10.07	31.9	9.38
		0.8	0.0	58.2	9.33	56.3	9.26	52.6	9.37	50.7	9.41	45.1	9.43	41.3	9.35	31.9	8.82
		2.8	2.0	58.2	9.33	56.3	9.13	52.6	8.74	50.7	8.60	45.1	8.67	41.3	8.65	31.9	8.26
		6.0	5.0	58.2	9.33	56.3	9.13	52.6	8.74	50.7	8.54	45.1	7.95	41.3	7.68	31.9	7.48
		7.0	6.0	58.2	9.33	56.3	9.13	52.6	8.74	50.7	8.54	45.1	7.95	41.3	7.56	31.9	7.24
		8.6	7.5	58.2	9.33	56.3	9.13	52.6	8.74	50.7	8.54	45.1	7.95	41.3	7.56	31.9	6.88
		11.2	10.0	58.2	9.33	56.3	9.13	52.6	8.74	50.7	8.54	45.1	7.95	41.3	7.56	31.9	6.57
		16.4	15.0	58.2	9.33	56.3	9.13	52.6	8.74	50.7	8.54	45.1	7.95	41.3	7.56	31.9	6.57
		24.0	18.0	58.2	9.33	56.3	9.13	52.6	8.74	50.7	8.54	45.1	7.95	41.3	7.56	31.9	6.57

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-49. 56HP (Cooling) U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	104.0	12.56	124.8	15.07	145.6	17.58	156.0	18.83	176.8	21.34	197.6	23.86	218.4	26.36
		-5.0	104.0	12.58	124.8	15.09	145.6	17.61	156.0	18.86	176.8	21.38	197.6	23.89	218.4	26.39
		0.0	104.0	12.61	124.8	15.13	145.6	17.64	156.0	18.90	176.8	21.41	197.6	23.94	218.4	26.46
		5.0	104.0	12.65	124.8	15.17	145.6	17.68	156.0	18.95	176.8	21.52	197.6	24.12	218.4	26.68
		10.0	104.0	12.70	124.8	15.26	145.6	17.88	156.0	19.21	176.8	21.91	197.6	24.65	218.4	27.28
		15.0	104.0	12.97	124.8	15.77	145.6	18.66	156.0	20.12	176.8	23.08	197.6	26.08	218.4	28.82
		20.0	104.0	14.71	124.8	18.05	145.6	21.76	156.0	23.77	176.8	28.09	197.6	32.83	218.4	37.98
		25.0	104.0	18.86	124.8	23.21	145.6	27.99	156.0	30.54	176.8	35.97	197.6	41.83	218.4	48.12
		30.0	104.0	23.55	124.8	28.95	145.6	34.82	156.0	37.92	176.8	44.47	197.6	51.49	218.4	58.99
		35.0	104.0	28.59	124.8	35.11	145.6	42.14	156.0	45.84	176.8	53.62	197.6	61.91	209.0	64.11
		40.0	104.0	34.01	124.8	41.75	145.6	50.03	156.0	54.38	176.8	63.50	185.2	64.11	193.1	64.12
		43.0	104.0	37.46	124.8	45.98	145.6	55.07	156.0	59.85	169.0	64.12	177.0	64.11	180.7	60.84
		46.0	103.0	40.70	123.6	49.97	131.2	50.83	132.6	49.48	136.2	47.22	140.7	45.44	146.1	44.04
52.0	44.9	17.62	48.9	17.80	53.6	18.13	56.2	18.33	61.9	18.80	68.2	19.33	75.1	19.89		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	93.6	10.12	112.3	12.70	131.0	15.22	140.4	16.46	159.1	18.89	177.8	21.26	196.6	23.59
		-5.0	93.6	10.14	112.3	12.73	131.0	15.25	140.4	16.49	159.1	18.92	177.8	21.29	196.6	23.62
		0.0	93.6	10.17	112.3	12.76	131.0	15.28	140.4	16.52	159.1	18.96	177.8	21.33	196.6	23.65
		5.0	93.6	10.21	112.3	12.80	131.0	15.33	140.4	16.57	159.1	18.99	177.8	21.39	196.6	23.75
		10.0	93.6	10.27	112.3	12.85	131.0	15.40	140.4	16.66	159.1	19.17	177.8	21.64	196.6	24.08
		15.0	93.6	10.38	112.3	13.10	131.0	15.80	140.4	17.15	159.1	19.80	177.8	22.40	196.6	24.96
		20.0	93.6	11.40	112.3	14.50	131.0	17.52	140.4	18.99	159.1	21.87	177.8	25.08	196.6	28.49
		25.0	93.6	15.34	112.3	18.89	131.0	22.56	140.4	24.45	159.1	28.30	177.8	32.26	196.6	36.33
		30.0	93.6	19.68	112.3	23.97	131.0	28.35	140.4	30.57	159.1	35.08	177.8	39.68	196.6	44.41
		35.0	93.6	25.10	112.3	30.30	131.0	35.56	140.4	38.22	159.1	43.61	177.8	49.15	196.6	54.89
		40.0	93.6	29.89	112.3	35.86	131.0	41.89	140.4	44.94	159.1	51.17	177.8	57.66	193.1	64.12
		43.0	93.6	32.85	112.3	39.31	131.0	45.83	140.4	49.15	159.1	55.99	177.0	64.11	180.7	60.84
		46.0	93.6	35.15	112.3	42.58	131.0	50.36	132.6	49.48	136.2	47.22	140.7	45.44	146.1	44.04
52.0	44.9	17.62	48.9	17.80	53.6	18.13	56.2	18.33	61.9	18.80	68.2	19.33	75.1	19.89		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	83.2	8.67	99.8	11.01	116.5	13.29	124.8	14.42	141.4	16.63	158.1	18.80	174.7	20.92
		-5.0	83.2	8.68	99.8	11.03	116.5	13.31	124.8	14.44	141.4	16.65	158.1	18.82	174.7	20.95
		0.0	83.2	8.71	99.8	11.05	116.5	13.34	124.8	14.47	141.4	16.69	158.1	18.86	174.7	20.98
		5.0	83.2	8.74	99.8	11.09	116.5	13.38	124.8	14.51	141.4	16.73	158.1	18.90	174.7	21.01
		10.0	83.2	8.79	99.8	11.14	116.5	13.44	124.8	14.56	141.4	16.78	158.1	18.97	174.7	21.13
		15.0	83.2	8.86	99.8	11.22	116.5	13.57	124.8	14.74	141.4	17.05	158.1	19.32	174.7	21.55
		20.0	83.2	9.29	99.8	11.87	116.5	14.41	124.8	15.65	141.4	18.10	158.1	20.47	174.7	22.78
		25.0	83.2	12.52	99.8	15.19	116.5	17.92	124.8	19.30	141.4	22.10	158.1	24.93	174.7	27.80
		30.0	83.2	16.30	99.8	19.64	116.5	23.00	124.8	24.68	141.4	28.05	158.1	31.43	174.7	34.83
		35.0	83.2	21.06	99.8	25.20	116.5	29.30	124.8	31.35	141.4	35.43	158.1	39.51	174.7	43.60
		40.0	83.2	25.31	99.8	30.11	116.5	34.85	124.8	37.21	141.4	41.91	158.1	46.63	174.7	51.41
		43.0	83.2	27.94	99.8	33.15	116.5	38.29	124.8	40.85	141.4	45.98	158.1	51.15	174.7	56.45
		46.0	83.2	29.78	99.8	35.56	116.5	41.49	124.8	44.51	136.2	47.22	140.7	45.44	146.1	44.04
52.0	44.9	17.62	48.9	17.80	53.6	18.13	56.2	18.33	61.9	18.80	68.2	19.33	75.1	19.89		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	72.8	7.19	87.4	9.28	101.9	11.32	109.2	12.33	123.8	14.31	138.3	16.25	152.9	18.16
		-5.0	72.8	7.21	87.4	9.29	101.9	11.34	109.2	12.34	123.8	14.33	138.3	16.28	152.9	18.18
		0.0	72.8	7.22	87.4	9.31	101.9	11.36	109.2	12.37	123.8	14.35	138.3	16.30	152.9	18.21
		5.0	72.8	7.25	87.4	9.34	101.9	11.39	109.2	12.40	123.8	14.39	138.3	16.34	152.9	18.25
		10.0	72.8	7.29	87.4	9.39	101.9	11.44	109.2	12.45	123.8	14.44	138.3	16.38	152.9	18.29
		15.0	72.8	7.36	87.4	9.45	101.9	11.50	109.2	12.51	123.8	14.51	138.3	16.48	152.9	18.42
		20.0	72.8	7.49	87.4	9.67	101.9	11.81	109.2	12.86	123.8	14.94	138.3	16.98	152.9	18.97
		25.0	72.8	9.35	87.4	11.61	101.9	13.77	109.2	14.82	123.8	16.87	138.3	18.86	152.9	20.79
		30.0	72.8	13.22	87.4	15.72	101.9	18.18	109.2	19.40	123.8	21.80	138.3	24.16	152.9	26.49
		35.0	72.8	17.33	87.4	20.51	101.9	23.61	109.2	25.14	123.8	28.13	138.3	31.06	152.9	33.92
		40.0	72.8	21.04	87.4	24.80	101.9	28.44	109.2	30.22	123.8	33.71	138.3	37.12	152.9	40.47
		43.0	72.8	23.33	87.4	27.44	101.9	31.42	109.2	33.36	123.8	37.17	138.3	40.90	152.9	44.57
		46.0	72.8	24.93	87.4	29.31	101.9	33.71	109.2	35.91	123.8	40.32	138.3	43.15	146.1	44.04
52.0	44.9	17.62	48.9	17.80	53.6	18.13	56.2	18.33	61.9	18.80	68.2	19.33	75.1	19.89		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

56HP (Cooling) U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	62.4	5.69	74.9	7.51	87.4	9.30	93.6	10.18	106.1	11.92	118.6	13.63	131.0	15.31
		-5.0	62.4	5.70	74.9	7.52	87.4	9.31	93.6	10.19	106.1	11.94	118.6	13.65	131.0	15.33
		0.0	62.4	5.72	74.9	7.54	87.4	9.33	93.6	10.21	106.1	11.96	118.6	13.67	131.0	15.35
		5.0	62.4	5.74	74.9	7.56	87.4	9.36	93.6	10.24	106.1	11.98	118.6	13.70	131.0	15.38
		10.0	62.4	5.77	74.9	7.60	87.4	9.39	93.6	10.28	106.1	12.02	118.6	13.74	131.0	15.42
		15.0	62.4	5.82	74.9	7.65	87.4	9.45	93.6	10.33	106.1	12.08	118.6	13.79	131.0	15.46
		20.0	62.4	5.91	74.9	7.73	87.4	9.53	93.6	10.42	106.1	12.18	118.6	13.92	131.0	15.62
		25.0	62.4	6.55	74.9	8.44	87.4	10.27	93.6	11.17	106.1	12.94	118.6	14.66	131.0	16.35
		30.0	62.4	10.45	74.9	12.23	87.4	13.94	93.6	14.76	106.1	16.36	118.6	17.88	131.0	19.33
		35.0	62.4	13.90	74.9	16.25	87.4	18.48	93.6	19.56	106.1	21.63	118.6	23.60	131.0	25.48
		40.0	62.4	17.08	74.9	19.92	87.4	22.62	93.6	23.91	106.1	26.40	118.6	28.77	131.0	31.03
		43.0	62.4	19.04	74.9	22.18	87.4	25.15	93.6	26.58	106.1	29.32	118.6	31.94	131.0	34.44
		46.0	62.4	20.56	74.9	23.79	87.4	26.93	93.6	28.48	106.1	31.50	118.6	34.46	131.0	37.35
52.0	44.9	17.62	48.9	17.80	53.6	18.13	56.2	18.33	61.9	18.80	68.2	19.33	75.1	19.89		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	52.0	4.16	62.4	5.70	72.8	7.23	78.0	7.98	88.4	9.46	98.8	10.92	109.2	12.35
		-5.0	52.0	4.17	62.4	5.72	72.8	7.24	78.0	7.99	88.4	9.47	98.8	10.93	109.2	12.37
		0.0	52.0	4.18	62.4	5.73	72.8	7.25	78.0	8.00	88.4	9.49	98.8	10.95	109.2	12.38
		5.0	52.0	4.20	62.4	5.75	72.8	7.27	78.0	8.02	88.4	9.51	98.8	10.97	109.2	12.41
		10.0	52.0	4.23	62.4	5.78	72.8	7.30	78.0	8.05	88.4	9.54	98.8	11.00	109.2	12.44
		15.0	52.0	4.26	62.4	5.82	72.8	7.34	78.0	8.09	88.4	9.58	98.8	11.04	109.2	12.48
		20.0	52.0	4.33	62.4	5.88	72.8	7.41	78.0	8.16	88.4	9.65	98.8	11.10	109.2	12.53
		25.0	52.0	4.50	62.4	6.05	72.8	7.58	78.0	8.33	88.4	11.05	98.8	11.28	109.2	12.71
		30.0	52.0	7.99	62.4	9.07	72.8	9.76	78.0	10.23	88.4	11.32	98.8	12.52	109.2	13.76
		35.0	52.0	10.79	62.4	12.43	72.8	13.93	78.0	14.63	88.4	15.94	98.8	17.14	109.2	18.24
		40.0	52.0	13.43	62.4	15.48	72.8	17.36	78.0	18.24	88.4	19.90	98.8	21.42	109.2	22.82
		43.0	52.0	15.06	62.4	17.35	72.8	19.47	78.0	20.46	88.4	22.33	98.8	24.05	109.2	25.63
		46.0	52.0	16.66	62.4	18.94	72.8	21.09	78.0	22.11	88.4	24.08	98.8	25.93	109.2	27.68
52.0	44.9	17.62	48.9	17.80	53.6	18.13	56.2	18.33	61.9	18.80	68.2	19.33	75.1	19.89		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	41.6	2.60	49.9	3.86	58.2	5.10	62.4	5.72	70.7	6.93	79.0	8.13	87.4	9.32
		-5.0	41.6	2.61	49.9	3.87	58.2	5.11	62.4	5.73	70.7	6.94	79.0	8.14	87.4	9.33
		0.0	41.6	2.62	49.9	3.88	58.2	5.12	62.4	5.74	70.7	6.95	79.0	8.16	87.4	9.35
		5.0	41.6	2.64	49.9	3.90	58.2	5.14	62.4	5.75	70.7	6.97	79.0	8.17	87.4	9.37
		10.0	41.6	2.65	49.9	3.92	58.2	5.16	62.4	5.77	70.7	6.99	79.0	8.20	87.4	9.39
		15.0	41.6	2.68	49.9	3.95	58.2	5.19	62.4	5.80	70.7	7.02	79.0	8.23	87.4	9.43
		20.0	41.6	2.73	49.9	3.99	58.2	5.24	62.4	5.85	70.7	7.07	79.0	8.28	87.4	9.48
		25.0	41.6	2.83	49.9	4.09	58.2	5.32	62.4	5.93	70.7	7.14	79.0	8.34	87.4	9.55
		30.0	41.6	4.04	49.9	4.80	58.2	5.80	62.4	6.34	70.7	7.44	79.0	8.70	87.4	10.06
		35.0	41.6	8.00	49.9	9.06	58.2	9.98	62.4	10.39	70.7	11.13	79.0	12.04	87.4	13.21
		40.0	41.6	10.10	49.9	11.48	58.2	12.69	62.4	13.23	70.7	14.22	79.0	15.07	87.4	15.80
		43.0	41.6	11.40	49.9	12.97	58.2	14.37	62.4	15.00	70.7	16.15	79.0	17.16	87.4	18.03
		46.0	41.6	13.19	49.9	14.71	58.2	16.09	62.4	16.72	70.7	17.90	79.0	18.95	87.4	19.88
52.0	41.6	15.63	48.9	17.80	53.6	18.13	56.2	18.33	61.9	18.80	68.2	19.33	75.1	19.89		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	31.2	1.02	37.4	1.98	43.7	2.94	46.8	3.42	53.0	4.36	59.3	5.30	65.5	6.21
		-5.0	31.2	1.03	37.4	1.99	43.7	2.95	46.8	3.43	53.0	4.38	59.3	5.31	65.5	6.23
		0.0	31.2	1.03	37.4	1.99	43.7	2.96	46.8	3.44	53.0	4.39	59.3	5.33	65.5	6.25
		5.0	31.2	1.04	37.4	2.01	43.7	2.97	46.8	3.45	53.0	4.41	59.3	5.35	65.5	6.27
		10.0	31.2	1.06	37.4	2.02	43.7	2.99	46.8	3.47	53.0	4.43	59.3	5.38	65.5	6.30
		15.0	31.2	1.08	37.4	2.04	43.7	3.01	46.8	3.50	53.0	4.47	59.3	5.42	65.5	6.34
		20.0	31.2	1.11	37.4	2.07	43.7	3.05	46.8	3.55	53.0	4.52	59.3	5.47	65.5	6.39
		25.0	31.2	1.18	37.4	2.13	43.7	3.11	46.8	3.62	53.0	4.59	59.3	5.56	65.5	6.55
		30.0	31.2	1.36	37.4	2.26	43.7	3.25	46.8	3.82	53.0	4.99	59.3	6.13	65.5	7.24
		35.0	31.2	5.55	37.4	6.16	43.7	6.87	46.8	7.34	53.0	8.26	59.3	9.18	65.5	10.07
		40.0	31.2	7.09	37.4	7.93	43.7	8.62	46.8	8.91	53.0	9.40	59.3	9.78	65.5	10.07
		43.0	31.2	8.07	37.4	9.05	43.7	9.87	46.8	10.22	53.0	10.82	59.3	11.30	65.5	11.66
		46.0	31.2	10.12	37.4	11.05	43.7	11.85	46.8	12.20	53.0	12.81	59.3	13.31	65.5	13.71
52.0	31.2	11.88	37.4	13.09	43.7	14.15	46.8	14.62	53.0	15.09	59.3	15.34	65.5	15.44		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-50. 56HP (Heating) U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	100%	-24.9	-25.0	127.6	47.59	124.4	46.73	117.7	44.90	114.3	43.94	103.9	40.83	96.7	38.58	77.7	32.30
		-19.8	-20.0	134.0	48.68	130.6	47.77	123.7	45.87	120.1	44.86	109.2	41.64	101.7	39.32	81.9	32.83
		-14.7	-15.0	143.0	50.31	139.4	49.34	132.1	47.33	128.4	46.26	116.8	42.86	108.9	40.42	87.7	33.64
		-9.6	-10.0	155.2	52.59	151.4	51.55	143.5	49.37	139.5	48.23	127.0	44.57	118.4	41.95	95.4	34.71
		-4.4	-5.0	171.1	55.84	166.8	54.64	158.2	52.15	153.7	50.82	140.0	46.67	130.4	43.73	105.0	35.89
		-1.8	-2.5	180.5	57.43	176.0	56.23	166.8	53.69	162.2	52.37	147.6	48.15	137.5	45.14	110.2	36.75
		0.8	0.0	190.9	58.73	186.2	57.46	176.5	54.83	171.6	53.45	155.6	48.76	142.6	44.57	110.2	34.48
		2.8	2.0	200.9	59.22	194.4	57.13	181.5	53.03	175.0	51.01	155.6	45.11	142.6	41.29	110.2	32.07
		6.0	5.0	200.9	51.92	194.4	50.14	181.5	46.64	175.0	44.92	155.6	39.87	142.6	36.52	110.2	28.56
		7.0	6.0	200.9	49.57	194.4	47.89	181.5	44.58	175.0	42.90	155.6	38.11	142.6	34.99	110.2	27.45
		8.6	7.5	200.9	46.04	194.4	44.50	181.5	41.48	175.0	39.99	155.6	35.62	142.6	32.77	110.2	25.84
		11.2	10.0	200.9	40.55	194.4	39.26	181.5	36.71	175.0	35.45	155.6	31.74	142.6	29.30	110.2	23.32
		16.4	15.0	200.9	30.94	194.4	30.06	181.5	28.30	175.0	27.41	155.6	24.76	142.6	22.99	110.2	18.51
		24.0	18.0	200.9	25.55	194.4	24.82	181.5	23.36	175.0	22.62	155.6	20.39	142.6	18.89	110.2	15.12

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	90%	-24.9	-25.0	127.6	47.59	124.4	46.73	117.7	44.90	114.3	43.94	103.9	40.83	96.7	38.58	77.7	32.30
		-19.8	-20.0	134.0	48.68	130.6	47.77	123.7	45.87	120.1	44.86	109.2	41.64	101.7	39.32	81.9	32.83
		-14.7	-15.0	143.0	50.31	139.4	49.34	132.1	47.33	128.4	46.26	116.8	42.86	108.9	40.42	87.7	33.64
		-9.6	-10.0	155.2	52.59	151.4	51.55	143.5	49.37	139.5	48.23	127.0	44.57	118.4	41.95	95.4	34.71
		-4.4	-5.0	171.1	55.84	166.8	54.64	158.2	52.15	153.7	50.82	140.0	46.67	128.3	41.39	99.2	32.79
		-1.8	-2.5	180.5	57.43	175.0	51.52	163.3	48.33	157.5	46.74	140.0	41.97	128.3	38.80	99.2	30.87
		0.8	0.0	180.8	49.01	175.0	47.57	163.3	44.69	157.5	43.25	140.0	38.94	128.3	36.06	99.2	28.82
		2.8	2.0	180.8	44.90	175.0	43.62	163.3	41.06	157.5	39.78	140.0	35.91	128.3	33.35	99.2	26.99
		6.0	5.0	180.8	39.30	175.0	38.34	163.3	36.38	157.5	35.37	140.0	32.24	128.3	29.99	99.2	24.17
		7.0	6.0	180.8	38.38	175.0	37.30	163.3	35.16	157.5	34.08	140.0	30.86	128.3	28.69	99.2	23.22
		8.6	7.5	180.8	35.48	175.0	34.52	163.3	32.61	157.5	31.65	140.0	28.76	128.3	26.81	99.2	21.83
		11.2	10.0	180.8	30.94	175.0	30.18	163.3	28.64	157.5	27.86	140.0	25.49	128.3	23.87	99.2	19.67
		16.4	15.0	180.8	23.01	175.0	22.55	163.3	21.59	157.5	21.10	140.0	19.53	128.3	18.43	99.2	15.44
		24.0	18.0	180.8	22.19	175.0	21.58	163.3	20.37	157.5	19.76	140.0	17.95	128.3	16.74	99.2	13.71

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	80%	-24.9	-25.0	127.6	47.59	124.4	46.73	117.7	44.90	114.3	43.94	103.9	40.83	96.7	38.58	77.7	32.30
		-19.8	-20.0	134.0	48.68	130.6	47.77	123.7	45.87	120.1	44.86	109.2	41.64	101.7	39.32	81.9	32.83
		-14.7	-15.0	143.0	50.31	139.4	49.34	132.1	47.33	128.4	46.26	116.8	42.86	108.9	40.42	87.7	33.64
		-9.6	-10.0	155.2	52.59	151.4	51.55	143.5	49.37	139.5	48.23	124.4	40.22	114.1	37.46	88.1	30.26
		-4.4	-5.0	160.7	43.51	155.6	42.46	145.2	40.31	140.0	39.22	124.4	35.84	114.1	33.50	88.1	27.39
		-1.8	-2.5	160.7	40.32	155.6	39.39	145.2	37.47	140.0	36.49	124.4	33.44	114.1	31.33	88.1	25.87
		0.8	0.0	160.7	36.87	155.6	36.13	145.2	34.59	140.0	33.77	124.4	31.19	114.1	29.34	88.1	24.32
		2.8	2.0	160.7	34.15	155.6	33.50	145.2	32.11	140.0	31.38	124.4	29.05	114.1	27.37	88.1	22.78
		6.0	5.0	160.7	30.31	155.6	29.76	145.2	28.60	140.0	27.97	124.4	25.95	114.1	24.47	88.1	20.36
		7.0	6.0	160.7	29.34	155.6	28.73	145.2	27.47	140.0	26.83	124.4	24.80	114.1	23.38	88.1	19.55
		8.6	7.5	160.7	26.95	155.6	26.44	145.2	25.37	140.0	24.81	124.4	23.05	114.1	21.80	88.1	18.38
		11.2	10.0	160.7	23.25	155.6	22.88	145.2	22.09	140.0	21.67	124.4	20.31	114.1	19.32	88.1	16.52
		16.4	15.0	160.7	20.10	155.6	19.56	145.2	18.49	140.0	17.95	124.4	16.33	114.1	15.26	88.1	12.87
		24.0	18.0	160.7	20.10	155.6	19.56	145.2	18.49	140.0	17.95	124.4	16.33	114.1	15.26	88.1	12.56

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	70%	-24.9	-25.0	127.6	47.59	124.4	46.73	117.7	44.90	114.3	43.94	103.9	40.83	96.7	38.58	77.1	32.30
		-19.8	-20.0	134.0	48.68	130.6	47.77	123.7	45.87	120.1	44.86	108.9	37.07	99.8	34.73	77.1	28.41
		-14.7	-15.0	140.6	41.72	136.1	40.87	127.0	39.10	122.5	38.18	108.9	35.24	99.8	33.13	77.1	27.17
		-9.6	-10.0	140.6	37.63	136.1	36.92	127.0	35.42	122.5	34.63	108.9	32.10	99.8	30.29	77.1	25.43
		-4.4	-5.0	140.6	33.20	136.1	32.67	127.0	31.53	122.5	30.91	108.9	28.89	99.8	27.38	77.1	23.09
		-1.8	-2.5	140.6	31.00	136.1	30.53	127.0	29.51	122.5	28.96	108.9	27.12	99.8	25.75	77.1	21.81
		0.8	0.0	140.6	28.69	136.1	28.29	127.0	27.40	122.5	26.91	108.9	25.27	99.8	24.04	77.1	20.46
		2.8	2.0	140.6	26.41	136.1	26.08	127.0	25.31	122.5	24.89	108.9	23.45	99.8	22.36	77.1	19.13
		6.0	5.0	140.6	23.16	136.1	22.90	127.0	22.31	122.5	21.97	108.9	20.77	99.8	19.83	77.1	16.98
		7.0	6.0	140.6	22.13	136.1	21.85	127.0	21.25	122.5	20.92	108.9	19.79	99.8	18.93	77.1	16.38
		8.6	7.5	140.6	20.22	136.1	20.01	127.0	19.54	122.5	19.27	108.9	18.34	99.8	17.62	77.1	15.40
		11.2	10.0	140.6	18.01	136.1	17.54	127.0	16.93	122.5	16.75	108.9	16.11	99.8	15.57	77.1	13.83
		16.4	15.0	140.6	18.01	136.1	17.54	127.0	16.60	122.5	16.13	108.9	14.72	99.8	13.78	77.1	11.42
		24.0	18.0	140.6	18.01	136.1	17.54	127.0	16.60	122.5	16.13	108.9	14.72	99.8	13.78	77.1	11.42

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

56HP (Heating) U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	120.6	36.59	116.7	36.00	108.9	34.72	105.0	34.03	93.3	31.66	85.6	29.75	66.1	24.69
		-19.8	-20.0	120.6	34.49	116.7	33.96	108.9	32.81	105.0	32.22	93.3	30.23	85.6	28.72	66.1	23.86
		-14.7	-15.0	120.6	32.09	116.7	31.66	108.9	30.71	105.0	30.18	93.3	28.38	85.6	27.01	66.1	23.00
		-9.6	-10.0	120.6	29.28	116.7	28.92	108.9	28.12	105.0	27.66	93.3	26.11	85.6	24.90	66.1	21.32
		-4.4	-5.0	120.6	25.95	116.7	25.68	108.9	25.05	105.0	24.68	93.3	23.41	85.6	22.40	66.1	19.35
		-1.8	-2.5	120.6	24.13	116.7	23.90	108.9	23.36	105.0	23.04	93.3	21.93	85.6	21.03	66.1	18.26
		0.8	0.0	120.6	22.21	116.7	22.04	108.9	21.60	105.0	21.34	93.3	20.38	85.6	19.59	66.1	17.12
		2.8	2.0	120.6	20.32	116.7	20.20	108.9	19.87	105.0	19.66	93.3	18.86	85.6	18.19	66.1	15.99
		6.0	5.0	120.6	17.58	116.7	17.49	108.9	17.25	105.0	17.09	93.3	16.49	85.6	15.97	66.1	14.11
		7.0	6.0	120.6	16.55	116.7	16.49	108.9	16.31	105.0	16.19	93.3	15.69	85.6	15.23	66.1	13.66
		8.6	7.5	120.6	15.93	116.7	15.53	108.9	14.98	105.0	14.90	93.3	14.53	85.6	14.17	66.1	12.84
		11.2	10.0	120.6	15.93	116.7	15.53	108.9	14.72	105.0	14.31	93.3	13.10	85.6	12.53	66.1	11.55
		16.4	15.0	120.6	15.93	116.7	15.53	108.9	14.72	105.0	14.31	93.3	13.10	85.6	12.30	66.1	10.28
		24.0	18.0	120.6	15.93	116.7	15.53	108.9	14.72	105.0	14.31	93.3	13.10	85.6	12.30	66.1	10.28

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	100.5	28.51	97.2	28.19	90.7	27.46	87.5	27.05	77.8	25.61	71.3	24.47	55.1	20.65
		-19.8	-20.0	100.5	27.07	97.2	26.79	90.7	26.14	87.5	25.76	77.8	24.44	71.3	23.40	55.1	20.13
		-14.7	-15.0	100.5	25.18	97.2	24.95	90.7	24.40	87.5	24.08	77.8	22.91	71.3	21.97	55.1	19.08
		-9.6	-10.0	100.5	22.87	97.2	22.69	90.7	22.26	87.5	22.00	77.8	21.03	71.3	20.23	55.1	17.68
		-4.4	-5.0	100.5	20.16	97.2	20.05	90.7	19.75	87.5	19.56	77.8	18.81	71.3	18.17	55.1	16.04
		-1.8	-2.5	100.5	18.67	97.2	18.60	90.7	18.38	87.5	18.22	77.8	17.60	71.3	17.04	55.1	15.14
		0.8	0.0	100.5	17.12	97.2	17.09	90.7	16.95	87.5	16.83	77.8	16.34	71.3	15.87	55.1	14.21
		2.8	2.0	100.5	15.60	97.2	15.60	90.7	15.52	87.5	15.44	77.8	15.03	71.3	14.63	55.1	13.20
		6.0	5.0	100.5	13.84	97.2	13.51	90.7	13.20	87.5	13.18	77.8	13.00	71.3	12.77	55.1	11.68
		7.0	6.0	100.5	13.84	97.2	13.51	90.7	12.83	87.5	12.50	77.8	12.38	71.3	12.19	55.1	11.31
		8.6	7.5	100.5	13.84	97.2	13.51	90.7	12.83	87.5	12.50	77.8	11.50	71.3	11.37	55.1	10.65
		11.2	10.0	100.5	13.84	97.2	13.51	90.7	12.83	87.5	12.50	77.8	11.49	71.3	10.82	55.1	9.62
		16.4	15.0	100.5	13.84	97.2	13.51	90.7	12.83	87.5	12.50	77.8	11.49	71.3	10.82	55.1	9.13
		24.0	18.0	100.5	13.84	97.2	13.51	90.7	12.83	87.5	12.50	77.8	11.49	71.3	10.82	55.1	9.13

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	80.4	22.08	77.8	21.91	72.6	21.49	70.0	21.23	62.2	20.30	57.0	19.54	44.1	16.95
		-19.8	-20.0	80.4	20.94	77.8	20.80	72.6	20.43	70.0	20.21	62.2	19.37	57.0	18.67	44.1	16.40
		-14.7	-15.0	80.4	19.44	77.8	19.34	72.6	19.06	70.0	18.87	62.2	18.16	57.0	17.54	44.1	15.51
		-9.6	-10.0	80.4	17.63	77.8	17.56	72.6	17.36	70.0	17.23	62.2	16.66	57.0	16.15	44.1	14.39
		-4.4	-5.0	80.4	15.49	77.8	15.48	72.6	15.39	70.0	15.30	62.2	14.90	57.0	14.51	44.1	13.09
		-1.8	-2.5	80.4	14.32	77.8	14.34	72.6	14.31	70.0	14.25	62.2	13.93	57.0	13.60	44.1	12.33
		0.8	0.0	80.4	12.99	77.8	13.03	72.6	13.05	70.0	13.02	62.2	12.82	57.0	12.57	44.1	11.53
		2.8	2.0	80.4	11.76	77.8	11.72	72.6	11.80	70.0	11.81	62.2	11.73	57.0	11.56	44.1	10.74
		6.0	5.0	80.4	11.76	77.8	11.49	72.6	10.95	70.0	10.68	62.2	10.21	57.0	10.15	44.1	9.61
		7.0	6.0	80.4	11.76	77.8	11.49	72.6	10.95	70.0	10.68	62.2	9.87	57.0	9.72	44.1	9.29
		8.6	7.5	80.4	11.76	77.8	11.49	72.6	10.95	70.0	10.68	62.2	9.87	57.0	9.33	44.1	8.78
		11.2	10.0	80.4	11.76	77.8	11.49	72.6	10.95	70.0	10.68	62.2	9.87	57.0	9.33	44.1	7.99
		16.4	15.0	80.4	11.76	77.8	11.49	72.6	10.95	70.0	10.68	62.2	9.87	57.0	9.33	44.1	7.99
		24.0	18.0	80.4	11.76	77.8	11.49	72.6	10.95	70.0	10.68	62.2	9.87	57.0	9.33	44.1	7.99

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	60.3	16.54	58.3	16.46	54.4	16.25	52.5	16.10	46.7	15.53	42.8	15.04	33.1	13.37
		-19.8	-20.0	60.3	15.69	58.3	15.63	54.4	15.46	52.5	15.34	46.7	14.84	42.8	14.40	33.1	12.89
		-14.7	-15.0	60.3	14.59	58.3	14.55	54.4	14.43	52.5	14.34	46.7	13.93	42.8	13.55	33.1	12.20
		-9.6	-10.0	60.3	13.23	58.3	13.22	54.4	13.15	52.5	13.09	46.7	12.78	42.8	12.48	33.1	11.34
		-4.4	-5.0	60.3	11.48	58.3	11.52	54.4	11.55	52.5	11.53	46.7	11.38	42.8	11.17	33.1	10.31
		-1.8	-2.5	60.3	10.53	58.3	10.59	54.4	10.67	52.5	10.68	46.7	10.61	42.8	10.47	33.1	9.75
		0.8	0.0	60.3	9.67	58.3	9.65	54.4	9.77	52.5	9.80	46.7	9.81	42.8	9.73	33.1	9.17
		2.8	2.0	60.3	9.67	58.3	9.47	54.4	9.07	52.5	8.96	46.7	9.03	42.8	9.00	33.1	8.59
		6.0	5.0	60.3	9.67	58.3	9.47	54.4	9.07	52.5	8.86	46.7	8.26	42.8	8.00	33.1	7.79
		7.0	6.0	60.3	9.67	58.3	9.47	54.4	9.07	52.5	8.86	46.7	8.26	42.8	7.85	33.1	7.54
		8.6	7.5	60.3	9.67	58.3	9.47	54.4	9.07	52.5	8.86	46.7	8.26	42.8	7.85	33.1	7.18
		11.2	10.0	60.3	9.67	58.3	9.47	54.4	9.07	52.5	8.86	46.7	8.26	42.8	7.85	33.1	6.85
		16.4	15.0	60.3	9.67	58.3	9.47	54.4	9.07	52.5	8.86	46.7	8.26	42.8	7.85	33.1	6.85
		24.0	18.0	60.3	9.67	58.3	9.47	54.4	9.07	52.5	8.86	46.7	8.26	42.8	7.85	33.1	6.85

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-51. 58HP (Cooling) U-18ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	108.0	12.97	129.6	15.56	151.2	18.15	162.0	19.45	183.6	22.04	205.2	24.64	226.8	27.22
		-5.0	108.0	13.00	129.6	15.59	151.2	18.19	162.0	19.48	183.6	22.08	205.2	24.68	226.8	27.26
		0.0	108.0	13.03	129.6	15.63	151.2	18.23	162.0	19.53	183.6	22.12	205.2	24.72	226.8	27.33
		5.0	108.0	13.08	129.6	15.69	151.2	18.28	162.0	19.59	183.6	22.24	205.2	24.93	226.8	27.58
		10.0	108.0	13.14	129.6	15.78	151.2	18.49	162.0	19.87	183.6	22.68	205.2	25.53	226.8	28.26
		15.0	108.0	13.44	129.6	16.36	151.2	19.38	162.0	20.92	183.6	24.03	205.2	27.18	226.8	30.04
		20.0	108.0	15.43	129.6	18.98	151.2	22.81	162.0	24.88	183.6	29.34	205.2	34.22	226.8	39.54
		25.0	108.0	19.82	129.6	24.31	151.2	29.24	162.0	31.87	183.6	37.46	205.2	43.50	226.8	49.99
		30.0	108.0	24.65	129.6	30.23	151.2	36.27	162.0	39.47	183.6	46.23	205.2	53.47	226.8	61.20
		35.0	108.0	29.85	129.6	36.58	151.2	43.82	162.0	47.64	183.6	55.66	205.2	64.22	217.3	66.63
		40.0	108.0	35.45	129.6	43.43	151.2	51.97	162.0	56.45	183.6	65.85	192.5	66.63	200.7	66.63
		43.0	108.0	39.00	129.6	47.78	151.2	57.16	162.0	62.09	175.7	66.64	183.9	66.56	187.7	63.11
		46.0	106.9	42.34	128.3	51.90	136.3	52.78	137.7	51.39	141.4	49.06	146.1	47.23	151.7	45.79
52.0	46.6	18.54	50.7	18.73	55.6	19.06	58.3	19.27	64.3	19.76	70.8	20.30	78.0	20.88		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	97.2	10.43	116.6	13.10	136.1	15.71	145.8	16.99	165.2	19.50	184.7	21.95	204.1	24.35
		-5.0	97.2	10.46	116.6	13.13	136.1	15.74	145.8	17.02	165.2	19.53	184.7	21.99	204.1	24.39
		0.0	97.2	10.49	116.6	13.17	136.1	15.78	145.8	17.06	165.2	19.58	184.7	22.03	204.1	24.42
		5.0	97.2	10.53	116.6	13.22	136.1	15.83	145.8	17.12	165.2	19.62	184.7	22.09	204.1	24.54
		10.0	97.2	10.60	116.6	13.28	136.1	15.91	145.8	17.21	165.2	19.81	184.7	22.37	204.1	24.90
		15.0	97.2	10.73	116.6	13.55	136.1	16.36	145.8	17.76	165.2	20.53	184.7	23.25	204.1	25.92
		20.0	97.2	11.89	116.6	15.15	136.1	18.34	145.8	19.89	165.2	22.92	184.7	26.23	204.1	29.74
		25.0	97.2	16.21	116.6	19.86	136.1	23.64	145.8	25.58	165.2	29.55	184.7	33.63	204.1	37.83
		30.0	97.2	20.67	116.6	25.09	136.1	29.60	145.8	31.89	165.2	36.53	184.7	41.28	204.1	46.15
		35.0	97.2	26.27	116.6	31.63	136.1	37.05	145.8	39.79	165.2	45.34	184.7	51.05	204.1	56.97
		40.0	97.2	31.20	116.6	37.36	136.1	43.57	145.8	46.71	165.2	53.14	184.7	59.83	200.7	66.63
		43.0	97.2	34.25	116.6	40.90	136.1	47.63	145.8	51.06	165.2	58.11	183.9	66.56	187.7	63.11
		46.0	97.2	36.62	116.6	44.28	136.1	52.31	137.7	51.39	141.4	49.06	146.1	47.23	151.7	45.79
52.0	46.6	18.54	50.7	18.73	55.6	19.06	58.3	19.27	64.3	19.76	70.8	20.30	78.0	20.88		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	86.4	8.93	103.7	11.35	121.0	13.71	129.6	14.87	146.9	17.16	164.2	19.40	181.4	21.59
		-5.0	86.4	8.95	103.7	11.37	121.0	13.74	129.6	14.90	146.9	17.19	164.2	19.43	181.4	21.62
		0.0	86.4	8.98	103.7	11.40	121.0	13.77	129.6	14.93	146.9	17.23	164.2	19.47	181.4	21.67
		5.0	86.4	9.02	103.7	11.44	121.0	13.82	129.6	14.98	146.9	17.28	164.2	19.52	181.4	21.70
		10.0	86.4	9.08	103.7	11.51	121.0	13.88	129.6	15.04	146.9	17.33	164.2	19.60	181.4	21.83
		15.0	86.4	9.16	103.7	11.60	121.0	14.03	129.6	15.24	146.9	17.63	164.2	19.99	181.4	22.30
		20.0	86.4	9.63	103.7	12.33	121.0	14.98	129.6	16.28	146.9	18.83	164.2	21.31	181.4	23.72
		25.0	86.4	13.30	103.7	16.06	121.0	18.86	129.6	20.28	146.9	23.16	164.2	26.08	181.4	29.04
		30.0	86.4	17.20	103.7	20.63	121.0	24.09	129.6	25.82	146.9	29.29	164.2	32.78	181.4	36.28
		35.0	86.4	22.11	103.7	26.37	121.0	30.60	129.6	32.70	146.9	36.91	164.2	41.12	181.4	45.34
		40.0	86.4	26.49	103.7	31.43	121.0	36.31	129.6	38.74	146.9	43.59	164.2	48.46	181.4	53.38
		43.0	86.4	29.19	103.7	34.56	121.0	39.86	129.6	42.50	146.9	47.78	164.2	53.12	181.4	58.59
		46.0	86.4	31.08	103.7	37.04	121.0	43.16	129.6	46.27	141.4	49.06	146.1	47.23	151.7	45.79
52.0	46.6	18.54	50.7	18.73	55.6	19.06	58.3	19.27	64.3	19.76	70.8	20.30	78.0	20.88		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	75.6	7.41	90.7	9.56	105.8	11.67	113.4	12.71	128.5	14.76	143.6	16.77	158.8	18.74
		-5.0	75.6	7.42	90.7	9.58	105.8	11.69	113.4	12.73	128.5	14.78	143.6	16.79	158.8	18.77
		0.0	75.6	7.45	90.7	9.60	105.8	11.72	113.4	12.76	128.5	14.81	143.6	16.83	158.8	18.80
		5.0	75.6	7.48	90.7	9.64	105.8	11.76	113.4	12.80	128.5	14.85	143.6	16.87	158.8	18.84
		10.0	75.6	7.52	90.7	9.69	105.8	11.81	113.4	12.86	128.5	14.91	143.6	16.93	158.8	18.89
		15.0	75.6	7.60	90.7	9.77	105.8	11.88	113.4	12.92	128.5	14.99	143.6	17.03	158.8	19.04
		20.0	75.6	7.75	90.7	10.00	105.8	12.22	113.4	13.32	128.5	15.48	143.6	17.59	158.8	19.65
		25.0	75.6	9.87	90.7	12.23	105.8	14.48	113.4	15.57	128.5	17.69	143.6	19.75	158.8	21.75
		30.0	75.6	14.03	90.7	16.60	105.8	19.13	113.4	20.38	128.5	22.85	143.6	25.29	158.8	27.68
		35.0	75.6	18.27	90.7	21.55	105.8	24.74	113.4	26.31	128.5	29.39	143.6	32.40	158.8	35.35
		40.0	75.6	22.09	90.7	25.96	105.8	29.71	113.4	31.54	128.5	35.14	143.6	38.65	158.8	42.10
		43.0	75.6	24.45	90.7	28.68	105.8	32.77	113.4	34.77	128.5	38.70	143.6	42.55	158.8	46.33
		46.0	75.6	26.08	90.7	30.60	105.8	35.13	113.4	37.40	128.5	41.95	143.6	44.87	151.7	45.79
52.0	46.6	18.54	50.7	18.73	55.6	19.06	58.3	19.27	64.3	19.76	70.8	20.30	78.0	20.88		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

58HP (Cooling) U-18ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	64.8	5.85	77.8	7.73	90.7	9.58	97.2	10.49	110.2	12.29	123.1	14.06	136.1	15.79
		-5.0	64.8	5.87	77.8	7.75	90.7	9.60	97.2	10.51	110.2	12.31	123.1	14.08	136.1	15.81
		0.0	64.8	5.89	77.8	7.77	90.7	9.62	97.2	10.53	110.2	12.33	123.1	14.10	136.1	15.84
		5.0	64.8	5.91	77.8	7.80	90.7	9.65	97.2	10.56	110.2	12.37	123.1	14.14	136.1	15.87
		10.0	64.8	5.95	77.8	7.84	90.7	9.69	97.2	10.61	110.2	12.41	123.1	14.18	136.1	15.92
		15.0	64.8	6.01	77.8	7.90	90.7	9.76	97.2	10.67	110.2	12.48	123.1	14.25	136.1	15.97
		20.0	64.8	6.12	77.8	7.99	90.7	9.85	97.2	10.77	110.2	12.59	123.1	14.38	136.1	16.14
		25.0	64.8	6.84	77.8	8.79	90.7	10.69	97.2	11.62	110.2	13.45	123.1	15.23	136.1	16.98
		30.0	64.8	11.17	77.8	13.01	90.7	14.77	97.2	15.62	110.2	17.25	123.1	18.82	136.1	20.32
		35.0	64.8	14.75	77.8	17.16	90.7	19.46	97.2	20.56	110.2	22.69	123.1	24.72	136.1	26.66
		40.0	64.8	18.01	77.8	20.94	90.7	23.71	97.2	25.04	110.2	27.61	123.1	30.05	136.1	32.37
		43.0	64.8	20.03	77.8	23.26	90.7	26.32	97.2	27.79	110.2	30.62	123.1	33.31	136.1	35.88
46.0	64.8	21.57	77.8	24.90	90.7	28.14	97.2	29.73	110.2	32.86	123.1	35.91	136.1	38.89		
52.0	46.6	18.54	50.7	18.73	55.6	19.06	58.3	19.27	64.3	19.76	70.8	20.30	78.0	20.88		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	54.0	4.28	64.8	5.87	75.6	7.44	81.0	8.22	91.8	9.75	102.6	11.26	113.4	12.74
		-5.0	54.0	4.29	64.8	5.88	75.6	7.45	81.0	8.23	91.8	9.76	102.6	11.27	113.4	12.75
		0.0	54.0	4.30	64.8	5.90	75.6	7.47	81.0	8.25	91.8	9.78	102.6	11.29	113.4	12.77
		5.0	54.0	4.32	64.8	5.92	75.6	7.50	81.0	8.27	91.8	9.81	102.6	11.32	113.4	12.80
		10.0	54.0	4.35	64.8	5.95	75.6	7.53	81.0	8.31	91.8	9.84	102.6	11.35	113.4	12.83
		15.0	54.0	4.40	64.8	6.00	75.6	7.58	81.0	8.36	91.8	9.89	102.6	11.40	113.4	12.88
		20.0	54.0	4.48	64.8	6.08	75.6	7.66	81.0	8.43	91.8	9.97	102.6	11.48	113.4	12.95
		25.0	54.0	4.66	64.8	6.26	75.6	7.84	81.0	8.62	91.8	11.45	102.6	11.66	113.4	13.14
		30.0	54.0	8.65	64.8	9.74	75.6	10.34	81.0	10.80	91.8	11.88	102.6	13.08	113.4	14.34
		35.0	54.0	11.55	64.8	13.23	75.6	14.77	81.0	15.49	91.8	16.85	102.6	18.08	113.4	19.21
		40.0	54.0	14.26	64.8	16.37	75.6	18.30	81.0	19.21	91.8	20.92	102.6	22.48	113.4	23.92
		43.0	54.0	15.93	64.8	18.30	75.6	20.47	81.0	21.49	91.8	23.41	102.6	25.18	113.4	26.82
46.0	54.0	17.55	64.8	19.90	75.6	22.11	81.0	23.18	91.8	25.20	102.6	27.11	113.4	28.91		
52.0	46.6	18.54	50.7	18.73	55.6	19.06	58.3	19.27	64.3	19.76	70.8	20.30	78.0	20.88		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	43.2	2.67	51.8	3.97	60.5	5.25	64.8	5.88	73.4	7.13	82.1	8.38	90.7	9.60
		-5.0	43.2	2.68	51.8	3.98	60.5	5.26	64.8	5.89	73.4	7.15	82.1	8.39	90.7	9.62
		0.0	43.2	2.69	51.8	3.99	60.5	5.27	64.8	5.91	73.4	7.16	82.1	8.40	90.7	9.64
		5.0	43.2	2.70	51.8	4.01	60.5	5.29	64.8	5.92	73.4	7.18	82.1	8.43	90.7	9.66
		10.0	43.2	2.73	51.8	4.03	60.5	5.31	64.8	5.95	73.4	7.20	82.1	8.45	90.7	9.69
		15.0	43.2	2.76	51.8	4.06	60.5	5.35	64.8	5.98	73.4	7.24	82.1	8.49	90.7	9.73
		20.0	43.2	2.82	51.8	4.12	60.5	5.41	64.8	6.04	73.4	7.29	82.1	8.55	90.7	9.79
		25.0	43.2	2.94	51.8	4.23	60.5	5.51	64.8	6.14	73.4	7.38	82.1	8.63	90.7	9.88
		30.0	43.2	4.30	51.8	5.03	60.5	6.04	64.8	6.58	73.4	7.72	82.1	9.02	90.7	10.45
		35.0	43.2	8.68	51.8	9.77	60.5	10.71	64.8	11.14	73.4	11.89	82.1	12.83	90.7	14.03
		40.0	43.2	10.83	51.8	12.25	60.5	13.50	64.8	14.06	73.4	15.07	82.1	15.95	90.7	16.70
		43.0	43.2	12.17	51.8	13.79	60.5	15.22	64.8	15.88	73.4	17.06	82.1	18.09	90.7	18.99
46.0	43.2	13.97	51.8	15.54	60.5	16.96	64.8	17.61	73.4	18.83	82.1	19.91	90.7	20.87		
52.0	43.2	16.49	50.7	18.73	55.6	19.06	58.3	19.27	64.3	19.76	70.8	20.30	78.0	20.88		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	32.4	1.03	38.9	2.02	45.4	3.01	48.6	3.51	55.1	4.49	61.6	5.45	68.0	6.40
		-5.0	32.4	1.04	38.9	2.03	45.4	3.02	48.6	3.52	55.1	4.50	61.6	5.47	68.0	6.42
		0.0	32.4	1.05	38.9	2.04	45.4	3.03	48.6	3.53	55.1	4.52	61.6	5.49	68.0	6.44
		5.0	32.4	1.06	38.9	2.05	45.4	3.05	48.6	3.55	55.1	4.54	61.6	5.52	68.0	6.47
		10.0	32.4	1.08	38.9	2.07	45.4	3.07	48.6	3.58	55.1	4.57	61.6	5.55	68.0	6.51
		15.0	32.4	1.10	38.9	2.09	45.4	3.10	48.6	3.61	55.1	4.61	61.6	5.60	68.0	6.56
		20.0	32.4	1.14	38.9	2.13	45.4	3.14	48.6	3.66	55.1	4.67	61.6	5.66	68.0	6.61
		25.0	32.4	1.21	38.9	2.20	45.4	3.22	48.6	3.74	55.1	4.75	61.6	5.76	68.0	6.79
		30.0	32.4	1.43	38.9	2.35	45.4	3.37	48.6	3.97	55.1	5.19	61.6	6.40	68.0	7.57
		35.0	32.4	6.16	38.9	6.79	45.4	7.52	48.6	8.00	55.1	8.95	61.6	9.89	68.0	10.81
		40.0	32.4	7.75	38.9	8.61	45.4	9.31	48.6	9.61	55.1	10.12	61.6	10.51	68.0	10.81
		43.0	32.4	8.74	38.9	9.75	45.4	10.59	48.6	10.96	55.1	11.58	61.6	12.07	68.0	12.44
46.0	32.4	10.81	38.9	11.77	45.4	12.59	48.6	12.95	55.1	13.58	61.6	14.10	68.0	14.51		
52.0	32.4	12.62	38.9	13.87	45.4	14.96	48.6	15.45	55.1	15.93	61.6	16.19	68.0	16.29		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-52. 58HP (Heating) U-18ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CW/B	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	137.3	52.21	133.8	51.22	126.5	49.14	122.9	48.05	111.5	44.57	103.7	42.05	83.2	35.04
		-19.8	-20.0	144.2	53.42	140.5	52.40	133.0	50.24	129.2	49.11	117.3	45.48	109.2	42.87	87.7	35.64
		-14.7	-15.0	154.0	55.29	150.1	54.18	142.1	51.89	138.1	50.69	125.5	46.85	116.9	44.11	93.9	36.52
		-9.6	-10.0	167.2	57.87	163.0	56.69	154.4	54.20	150.1	52.90	136.5	48.75	127.1	45.80	102.2	37.71
		-4.4	-5.0	184.3	61.29	179.7	59.89	170.2	56.96	165.4	55.45	150.4	51.14	140.0	47.91	112.5	39.19
		-1.8	-2.5	193.0	62.72	189.6	62.03	179.5	59.08	174.4	57.54	158.6	52.73	147.6	49.34	114.6	38.53
		0.8	0.0	201.3	62.72	198.8	62.72	188.7	59.94	182.0	57.66	161.8	50.97	148.3	46.62	114.6	36.11
		2.8	2.0	209.0	61.72	202.2	59.57	188.7	55.34	182.0	53.26	161.8	47.16	148.3	43.19	114.6	33.59
		6.0	5.0	209.0	54.14	202.2	52.31	188.7	48.70	182.0	46.92	161.8	41.68	148.3	38.20	114.6	29.91
		7.0	6.0	209.0	51.69	202.2	49.96	188.7	46.55	182.0	44.80	161.8	39.84	148.3	36.61	114.6	28.75
		8.6	7.5	209.0	48.01	202.2	46.43	188.7	43.31	182.0	41.78	161.8	37.25	148.3	34.29	114.6	27.06
		11.2	10.0	209.0	42.32	202.2	40.99	188.7	38.36	182.0	37.06	161.8	33.21	148.3	30.67	114.6	24.43
		16.4	15.0	209.0	32.34	202.2	31.42	188.7	29.59	182.0	28.67	161.8	25.90	148.3	24.04	114.6	19.35
		24.0	18.0	209.0	26.63	202.2	25.87	188.7	24.34	182.0	23.57	161.8	21.23	148.3	19.67	114.6	15.73

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CW/B	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	137.3	52.21	133.8	51.22	126.5	49.14	122.9	48.05	111.5	44.57	103.7	42.05	83.2	35.04
		-19.8	-20.0	144.2	53.42	140.5	52.40	133.0	50.24	129.2	49.11	117.3	45.48	109.2	42.87	87.7	35.64
		-14.7	-15.0	154.0	55.29	150.1	54.18	142.1	51.89	138.1	50.69	125.5	46.85	116.9	44.11	93.9	36.52
		-9.6	-10.0	167.2	57.87	163.0	56.69	154.4	54.20	150.1	52.90	136.5	48.75	127.1	45.80	102.2	37.71
		-4.4	-5.0	184.3	61.29	179.7	59.89	169.9	56.96	163.8	52.31	145.6	46.92	133.5	43.34	103.1	34.38
		-1.8	-2.5	188.1	55.43	182.0	53.78	169.9	50.49	163.8	48.84	145.6	43.91	133.5	40.61	103.1	32.34
		0.8	0.0	188.1	51.14	182.0	49.66	169.9	46.69	163.8	45.20	145.6	40.73	133.5	37.74	103.1	30.19
		2.8	2.0	188.1	46.85	182.0	45.54	169.9	42.89	163.8	41.57	145.6	37.57	133.5	34.89	103.1	28.25
		6.0	5.0	188.1	41.03	182.0	40.04	169.9	37.99	163.8	36.94	145.6	33.68	133.5	31.35	103.1	25.30
		7.0	6.0	188.1	39.98	182.0	38.88	169.9	36.68	163.8	35.57	145.6	32.24	133.5	29.99	103.1	24.30
		8.6	7.5	188.1	36.96	182.0	35.99	169.9	34.03	163.8	33.04	145.6	30.05	133.5	28.03	103.1	22.85
		11.2	10.0	188.1	32.26	182.0	31.48	169.9	29.90	163.8	29.10	145.6	26.65	133.5	24.96	103.1	20.58
		16.4	15.0	188.1	24.00	182.0	23.52	169.9	22.53	163.8	22.02	145.6	20.39	133.5	19.24	103.1	16.12
		24.0	18.0	188.1	23.32	182.0	22.68	169.9	21.40	163.8	20.76	145.6	18.84	133.5	17.56	103.1	14.36

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CW/B	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	137.3	52.21	133.8	51.22	126.5	49.14	122.9	48.05	111.5	44.57	103.7	42.05	83.2	35.04
		-19.8	-20.0	144.2	53.42	140.5	52.40	133.0	50.24	129.2	49.11	117.3	45.48	109.2	42.87	87.7	35.64
		-14.7	-15.0	154.0	55.29	150.1	54.18	142.1	51.89	138.1	50.69	125.5	46.85	116.9	44.11	91.7	33.57
		-9.6	-10.0	167.2	51.58	161.8	50.28	151.0	47.63	145.6	46.28	129.4	42.12	118.6	39.26	91.7	31.76
		-4.4	-5.0	167.2	45.45	161.8	44.37	151.0	42.16	145.6	41.02	129.4	37.52	118.6	35.09	91.7	28.71
		-1.8	-2.5	167.2	42.12	161.8	41.16	151.0	39.18	145.6	38.16	129.4	35.01	118.6	32.82	91.7	27.10
		0.8	0.0	167.2	38.56	161.8	37.79	151.0	36.18	145.6	35.34	129.4	32.65	118.6	30.72	91.7	25.47
		2.8	2.0	167.2	35.69	161.8	35.02	151.0	33.58	145.6	32.82	129.4	30.39	118.6	28.64	91.7	23.83
		6.0	5.0	167.2	31.64	161.8	31.07	151.0	29.86	145.6	29.21	129.4	27.11	118.6	25.56	91.7	21.26
		7.0	6.0	167.2	30.53	161.8	29.91	151.0	28.63	145.6	27.97	129.4	25.89	118.6	24.42	91.7	20.44
		8.6	7.5	167.2	28.05	161.8	27.53	151.0	26.44	145.6	25.87	129.4	24.06	118.6	22.77	91.7	19.21
		11.2	10.0	167.2	24.20	161.8	23.83	151.0	23.03	145.6	22.60	129.4	21.21	118.6	20.18	91.7	17.27
		16.4	15.0	167.2	21.11	161.8	20.54	151.0	19.41	145.6	18.84	129.4	17.13	118.6	15.99	91.7	13.41
		24.0	18.0	167.2	21.11	161.8	20.54	151.0	19.41	145.6	18.84	129.4	17.13	118.6	15.99	91.7	13.15

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CW/B	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	137.3	52.21	133.8	51.22	126.5	49.14	122.9	48.05	111.5	44.57	103.7	42.05	80.2	30.98
		-19.8	-20.0	144.2	53.42	140.5	52.40	132.1	44.00	127.4	42.84	113.2	39.00	103.8	36.45	80.2	29.82
		-14.7	-15.0	146.3	43.65	141.6	42.77	132.1	40.94	127.4	39.99	113.2	36.94	103.8	34.74	80.2	28.54
		-9.6	-10.0	146.3	39.36	141.6	38.63	132.1	37.07	127.4	36.26	113.2	33.63	103.8	31.81	80.2	26.68
		-4.4	-5.0	146.3	34.78	141.6	34.24	132.1	33.04	127.4	32.41	113.2	30.28	103.8	28.70	80.2	24.20
		-1.8	-2.5	146.3	32.46	141.6	31.97	132.1	30.91	127.4	30.33	113.2	28.41	103.8	26.98	80.2	22.85
		0.8	0.0	146.3	30.02	141.6	29.60	132.1	28.68	127.4	28.17	113.2	26.46	103.8	25.18	80.2	21.43
		2.8	2.0	146.3	27.62	141.6	27.27	132.1	26.48	127.4	26.04	113.2	24.55	103.8	23.40	80.2	20.02
		6.0	5.0	146.3	24.17	141.6	23.90	132.1	23.29	127.4	22.94	113.2	21.68	103.8	20.70	80.2	17.72
		7.0	6.0	146.3	23.00	141.6	22.73	132.1	22.12	127.4	21.79	113.2	20.64	103.8	19.75	80.2	17.12
		8.6	7.5	146.3	21.01	141.6	20.81	132.1	20.34	127.4	20.07	113.2	19.13	103.8	18.38	80.2	16.08
		11.2	10.0	146.3	18.91	141.6	18.41	132.1	17.62	127.4	17.45	113.2	16.79	103.8	16.24	80.2	14.44
		16.4	15.0	146.3	18.91	141.6	18.41	132.1	17.41	127.4	16.92	113.2	15.42	103.8	14.43	80.2	11.94
		24.0	18.0	146.3	18.91	141.6	18.41	132.1	17.41	127.4	16.92	113.2	15.42	103.8	14.43	80.2	11.94

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

58HP (Heating) U-18ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	60%	-24.9	-25.0	125.4	38.33	121.3	37.72	113.2	36.39	109.2	35.68	97.1	33.23	89.0	31.26	68.8	25.93
		-19.8	-20.0	125.4	36.11	121.3	35.59	113.2	34.46	109.2	33.84	97.1	31.76	89.0	30.17	68.8	25.08
		-14.7	-15.0	125.4	33.70	121.3	33.25	113.2	32.24	109.2	31.68	97.1	29.80	89.0	28.37	68.8	24.14
		-9.6	-10.0	125.4	30.72	121.3	30.35	113.2	29.51	109.2	29.03	97.1	27.40	89.0	26.13	68.8	22.37
		-4.4	-5.0	125.4	27.20	121.3	26.92	113.2	26.25	109.2	25.87	97.1	24.54	89.0	23.49	68.8	20.28
		-1.8	-2.5	125.4	25.27	121.3	25.04	113.2	24.47	109.2	24.14	97.1	22.97	89.0	22.03	68.8	19.13
		0.8	0.0	125.4	23.25	121.3	23.07	113.2	22.62	109.2	22.35	97.1	21.34	89.0	20.52	68.8	17.92
		2.8	2.0	125.4	21.25	121.3	21.13	113.2	20.78	109.2	20.57	97.1	19.74	89.0	19.03	68.8	16.72
		6.0	5.0	125.4	18.25	121.3	18.17	113.2	17.94	109.2	17.79	97.1	17.18	89.0	16.65	68.8	14.72
		7.0	6.0	125.4	17.19	121.3	17.13	113.2	16.96	109.2	16.84	97.1	16.34	89.0	15.88	68.8	14.25
		8.6	7.5	125.4	16.70	121.3	16.28	113.2	15.58	109.2	15.50	97.1	15.13	89.0	14.77	68.8	13.39
		11.2	10.0	125.4	16.70	121.3	16.28	113.2	15.42	109.2	15.00	97.1	13.72	89.0	13.05	68.8	12.04
		16.4	15.0	125.4	16.70	121.3	16.28	113.2	15.42	109.2	15.00	97.1	13.72	89.0	12.86	68.8	10.73
		24.0	18.0	125.4	16.70	121.3	16.28	113.2	15.42	109.2	15.00	97.1	13.72	89.0	12.86	68.8	10.73
100%	50%	-24.9	-25.0	104.5	29.95	101.1	29.62	94.4	28.85	91.0	28.42	80.9	26.91	74.1	25.70	57.3	21.68
		-19.8	-20.0	104.5	28.43	101.1	28.13	94.4	27.45	91.0	27.06	80.9	25.66	74.1	24.57	57.3	21.13
		-14.7	-15.0	104.5	26.43	101.1	26.20	94.4	25.62	91.0	25.27	80.9	24.05	74.1	23.06	57.3	20.01
		-9.6	-10.0	104.5	23.98	101.1	23.80	94.4	23.35	91.0	23.07	80.9	22.06	74.1	21.22	57.3	18.53
		-4.4	-5.0	104.5	21.12	101.1	21.01	94.4	20.70	91.0	20.49	80.9	19.71	74.1	19.04	57.3	16.80
		-1.8	-2.5	104.5	19.54	101.1	19.47	94.4	19.24	91.0	19.08	80.9	18.43	74.1	17.84	57.3	15.85
		0.8	0.0	104.5	17.90	101.1	17.87	94.4	17.73	91.0	17.62	80.9	17.10	74.1	16.61	57.3	14.84
		2.8	2.0	104.5	16.25	101.1	16.24	94.4	16.14	91.0	16.06	80.9	15.66	74.1	15.25	57.3	13.77
		6.0	5.0	104.5	14.50	101.1	14.14	94.4	13.72	91.0	13.71	80.9	13.53	74.1	13.30	57.3	12.18
		7.0	6.0	104.5	14.50	101.1	14.14	94.4	13.43	91.0	13.08	80.9	12.88	74.1	12.70	57.3	11.78
		8.6	7.5	104.5	14.50	101.1	14.14	94.4	13.43	91.0	13.08	80.9	12.01	74.1	11.83	57.3	11.10
		11.2	10.0	104.5	14.50	101.1	14.14	94.4	13.43	91.0	13.08	80.9	12.01	74.1	11.30	57.3	10.01
		16.4	15.0	104.5	14.50	101.1	14.14	94.4	13.43	91.0	13.08	80.9	12.01	74.1	11.30	57.3	9.52
		24.0	18.0	104.5	14.50	101.1	14.14	94.4	13.43	91.0	13.08	80.9	12.01	74.1	11.30	57.3	9.52
100%	40%	-24.9	-25.0	83.6	23.18	80.9	23.00	75.5	22.55	72.8	22.29	64.7	21.30	59.3	20.49	45.8	17.77
		-19.8	-20.0	83.6	21.96	80.9	21.82	75.5	21.44	72.8	21.20	64.7	20.32	59.3	19.58	45.8	17.19
		-14.7	-15.0	83.6	20.38	80.9	20.27	75.5	19.98	72.8	19.78	64.7	19.03	59.3	18.39	45.8	16.24
		-9.6	-10.0	83.6	18.46	80.9	18.40	75.5	18.19	72.8	18.04	64.7	17.45	59.3	16.92	45.8	15.07
		-4.4	-5.0	83.6	16.21	80.9	16.20	75.5	16.10	72.8	16.01	64.7	15.59	59.3	15.19	45.8	13.68
		-1.8	-2.5	83.6	14.95	80.9	14.96	75.5	14.91	72.8	14.85	64.7	14.52	59.3	14.17	45.8	12.87
		0.8	0.0	83.6	13.49	80.9	13.54	75.5	13.56	72.8	13.55	64.7	13.35	59.3	13.10	45.8	12.02
		2.8	2.0	83.6	12.29	80.9	12.17	75.5	12.26	72.8	12.27	64.7	12.20	59.3	12.04	45.8	11.19
		6.0	5.0	83.6	12.29	80.9	12.01	75.5	11.44	72.8	11.16	64.7	10.61	59.3	10.56	45.8	10.01
		7.0	6.0	83.6	12.29	80.9	12.01	75.5	11.44	72.8	11.16	64.7	10.30	59.3	10.10	45.8	9.66
		8.6	7.5	83.6	12.29	80.9	12.01	75.5	11.44	72.8	11.16	64.7	10.30	59.3	9.73	45.8	9.13
		11.2	10.0	83.6	12.29	80.9	12.01	75.5	11.44	72.8	11.16	64.7	10.30	59.3	9.73	45.8	8.31
		16.4	15.0	83.6	12.29	80.9	12.01	75.5	11.44	72.8	11.16	64.7	10.30	59.3	9.73	45.8	8.31
		24.0	18.0	83.6	12.29	80.9	12.01	75.5	11.44	72.8	11.16	64.7	10.30	59.3	9.73	45.8	8.31
100%	30%	-24.9	-25.0	62.7	17.33	60.7	17.24	56.6	17.02	54.6	16.86	48.5	16.27	44.5	15.75	34.4	13.99
		-19.8	-20.0	62.7	16.42	60.7	16.37	56.6	16.18	54.6	16.06	48.5	15.54	44.5	15.07	34.4	13.48
		-14.7	-15.0	62.7	15.26	60.7	15.22	56.6	15.10	54.6	15.00	48.5	14.58	44.5	14.18	34.4	12.76
		-9.6	-10.0	62.7	13.77	60.7	13.76	56.6	13.70	54.6	13.64	48.5	13.33	44.5	13.01	34.4	11.83
		-4.4	-5.0	62.7	11.92	60.7	11.97	56.6	12.01	54.6	12.00	48.5	11.85	44.5	11.64	34.4	10.74
		-1.8	-2.5	62.7	10.93	60.7	11.00	56.6	11.09	54.6	11.11	48.5	11.04	44.5	10.89	34.4	10.15
		0.8	0.0	62.7	10.09	60.7	10.02	56.6	10.14	54.6	10.18	48.5	10.20	44.5	10.12	34.4	9.54
		2.8	2.0	62.7	10.09	60.7	9.88	56.6	9.45	54.6	9.30	48.5	9.38	44.5	9.35	34.4	8.93
		6.0	5.0	62.7	10.09	60.7	9.88	56.6	9.45	54.6	9.24	48.5	8.60	44.5	8.31	34.4	8.09
		7.0	6.0	62.7	10.09	60.7	9.88	56.6	9.45	54.6	9.24	48.5	8.60	44.5	8.17	34.4	7.82
		8.6	7.5	62.7	10.09	60.7	9.88	56.6	9.45	54.6	9.24	48.5	8.60	44.5	8.17	34.4	7.44
		11.2	10.0	62.7	10.09	60.7	9.88	56.6	9.45	54.6	9.24	48.5	8.60	44.5	8.17	34.4	7.10
		16.4	15.0	62.7	10.09	60.7	9.88	56.6	9.45	54.6	9.24	48.5	8.60	44.5	8.17	34.4	7.10
		24.0	18.0	62.7	10.09	60.7	9.88	56.6	9.45	54.6	9.24	48.5	8.60	44.5	8.17	34.4	7.10

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-53. 60HP (Cooling) U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	112.0	13.68	134.4	16.41	156.8	19.15	168.0	20.51	190.4	23.25	212.8	25.99	235.2	28.71
		-5.0	112.0	13.71	134.4	16.44	156.8	19.18	168.0	20.55	190.4	23.29	212.8	26.03	235.2	28.75
		0.0	112.0	13.74	134.4	16.48	156.8	19.23	168.0	20.60	190.4	23.33	212.8	26.07	235.2	28.82
		5.0	112.0	13.79	134.4	16.54	156.8	19.27	168.0	20.65	190.4	23.45	212.8	26.28	235.2	29.08
		10.0	112.0	13.85	134.4	16.63	156.8	19.49	168.0	20.95	190.4	23.90	212.8	26.90	235.2	29.78
		15.0	112.0	14.15	134.4	17.23	156.8	20.40	168.0	22.01	190.4	25.27	212.8	28.58	235.2	31.59
		20.0	112.0	16.19	134.4	19.90	156.8	23.94	168.0	26.13	190.4	30.83	212.8	35.98	235.2	41.59
		25.0	112.0	20.79	134.4	25.52	156.8	30.73	168.0	33.50	190.4	39.40	212.8	45.78	235.2	52.62
		30.0	112.0	25.89	134.4	31.77	156.8	38.15	168.0	41.52	190.4	48.65	212.8	56.29	235.2	64.45
		35.0	112.0	31.37	134.4	38.47	156.8	46.11	168.0	50.14	190.4	58.60	212.8	67.63	225.3	70.14
		40.0	112.0	37.27	134.4	45.70	156.8	54.71	168.0	59.44	190.4	69.36	199.6	70.13	208.1	70.13
		43.0	112.0	41.03	134.4	50.29	156.8	60.19	168.0	65.39	182.1	70.13	190.7	70.11	194.6	66.47
		46.0	110.9	44.55	133.1	54.64	141.3	55.57	142.8	54.10	146.6	51.64	151.5	49.71	157.3	48.19
52.0	48.3	19.44	52.6	19.63	57.7	19.99	60.5	20.21	66.7	20.72	73.5	21.30	80.9	21.91		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	100.8	11.01	121.0	13.83	141.1	16.57	151.2	17.92	171.4	20.57	191.5	23.16	211.7	25.69
		-5.0	100.8	11.03	121.0	13.85	141.1	16.60	151.2	17.95	171.4	20.60	191.5	23.19	211.7	25.73
		0.0	100.8	11.07	121.0	13.89	141.1	16.64	151.2	17.99	171.4	20.65	191.5	23.24	211.7	25.76
		5.0	100.8	11.11	121.0	13.94	141.1	16.70	151.2	18.05	171.4	20.69	191.5	23.30	211.7	25.87
		10.0	100.8	11.18	121.0	14.01	141.1	16.78	151.2	18.15	171.4	20.89	191.5	23.59	211.7	26.25
		15.0	100.8	11.31	121.0	14.28	141.1	17.24	151.2	18.71	171.4	21.62	191.5	24.48	211.7	27.28
		20.0	100.8	12.50	121.0	15.92	141.1	19.25	151.2	20.88	171.4	24.06	191.5	27.55	211.7	31.26
		25.0	100.8	16.97	121.0	20.82	141.1	24.82	151.2	26.86	171.4	31.05	191.5	35.36	211.7	39.79
		30.0	100.8	21.69	121.0	26.35	141.1	31.11	151.2	33.52	171.4	38.42	191.5	43.43	211.7	48.57
		35.0	100.8	27.59	121.0	33.24	141.1	38.96	151.2	41.85	171.4	47.72	191.5	53.74	211.7	59.99
		40.0	100.8	32.80	121.0	39.29	141.1	45.84	151.2	49.16	171.4	55.94	191.5	63.00	208.1	70.13
		43.0	100.8	36.01	121.0	43.04	141.1	50.14	151.2	53.75	171.4	61.19	190.7	70.11	194.6	66.47
		46.0	100.8	38.52	121.0	46.59	141.1	55.06	142.8	54.10	146.6	51.64	151.5	49.71	157.3	48.19
52.0	48.3	19.44	52.6	19.63	57.7	19.99	60.5	20.21	66.7	20.72	73.5	21.30	80.9	21.91		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	89.6	9.43	107.5	11.98	125.4	14.47	134.4	15.69	152.3	18.10	170.2	20.47	188.2	22.78
		-5.0	89.6	9.45	107.5	12.00	125.4	14.49	134.4	15.72	152.3	18.13	170.2	20.50	188.2	22.81
		0.0	89.6	9.48	107.5	12.03	125.4	14.53	134.4	15.76	152.3	18.17	170.2	20.54	188.2	22.85
		5.0	89.6	9.52	107.5	12.07	125.4	14.57	134.4	15.80	152.3	18.22	170.2	20.59	188.2	22.89
		10.0	89.6	9.57	107.5	12.14	125.4	14.64	134.4	15.86	152.3	18.28	170.2	20.67	188.2	23.02
		15.0	89.6	9.66	107.5	12.23	125.4	14.79	134.4	16.06	152.3	18.58	170.2	21.07	188.2	23.50
		20.0	89.6	10.14	107.5	12.98	125.4	15.76	134.4	17.13	152.3	19.81	170.2	22.41	188.2	24.95
		25.0	89.6	13.90	107.5	16.81	125.4	19.77	134.4	21.27	152.3	24.31	170.2	27.39	188.2	30.51
		30.0	89.6	18.01	107.5	21.64	125.4	25.29	134.4	27.12	152.3	30.78	170.2	34.46	188.2	38.16
		35.0	89.6	23.20	107.5	27.69	125.4	32.16	134.4	34.38	152.3	38.82	170.2	43.26	188.2	47.71
		40.0	89.6	27.82	107.5	33.03	125.4	38.19	134.4	40.75	152.3	45.87	170.2	51.00	188.2	56.20
		43.0	89.6	30.67	107.5	36.34	125.4	41.93	134.4	44.71	152.3	50.29	170.2	55.93	188.2	61.69
		46.0	89.6	32.67	107.5	38.96	125.4	45.41	134.4	48.70	146.6	51.64	151.5	49.71	157.3	48.19
52.0	48.3	19.44	52.6	19.63	57.7	19.99	60.5	20.21	66.7	20.72	73.5	21.30	80.9	21.91		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	78.4	7.82	94.1	10.09	109.8	12.32	117.6	13.41	133.3	15.57	149.0	17.69	164.6	19.77
		-5.0	78.4	7.84	94.1	10.11	109.8	12.34	117.6	13.43	133.3	15.60	149.0	17.72	164.6	19.80
		0.0	78.4	7.86	94.1	10.14	109.8	12.37	117.6	13.46	133.3	15.63	149.0	17.75	164.6	19.83
		5.0	78.4	7.89	94.1	10.17	109.8	12.40	117.6	13.50	133.3	15.67	149.0	17.79	164.6	19.88
		10.0	78.4	7.94	94.1	10.22	109.8	12.46	117.6	13.56	133.3	15.73	149.0	17.85	164.6	19.92
		15.0	78.4	8.02	94.1	10.30	109.8	12.53	117.6	13.63	133.3	15.81	149.0	17.96	164.6	20.08
		20.0	78.4	8.17	94.1	10.54	109.8	12.88	117.6	14.03	133.3	16.30	149.0	18.53	164.6	20.70
		25.0	78.4	10.34	94.1	12.81	109.8	15.18	117.6	16.33	133.3	18.57	149.0	20.74	164.6	22.85
		30.0	78.4	14.67	94.1	17.38	109.8	20.06	117.6	21.38	133.3	23.99	149.0	26.56	164.6	29.08
		35.0	78.4	19.14	94.1	22.60	109.8	25.97	117.6	27.63	133.3	30.88	149.0	34.06	164.6	37.18
		40.0	78.4	23.18	94.1	27.26	109.8	31.22	117.6	33.15	133.3	36.95	149.0	40.66	164.6	44.30
		43.0	78.4	25.67	94.1	30.13	109.8	34.45	117.6	36.57	133.3	40.71	149.0	44.77	164.6	48.76
		46.0	78.4	27.39	94.1	32.16	109.8	36.94	117.6	39.34	133.3	44.14	149.0	47.22	157.3	48.19
52.0	48.3	19.44	52.6	19.63	57.7	19.99	60.5	20.21	66.7	20.72	73.5	21.30	80.9	21.91		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

60HP (Cooling) U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	67.2	6.18	80.6	8.16	94.1	10.11	100.8	11.07	114.2	12.97	127.7	14.83	141.1	16.66
		-5.0	67.2	6.20	80.6	8.18	94.1	10.13	100.8	11.09	114.2	12.99	127.7	14.85	141.1	16.68
		0.0	67.2	6.22	80.6	8.20	94.1	10.15	100.8	11.12	114.2	13.01	127.7	14.88	141.1	16.71
		5.0	67.2	6.24	80.6	8.23	94.1	10.18	100.8	11.15	114.2	13.05	127.7	14.91	141.1	16.74
		10.0	67.2	6.28	80.6	8.27	94.1	10.23	100.8	11.19	114.2	13.09	127.7	14.96	141.1	16.79
		15.0	67.2	6.34	80.6	8.34	94.1	10.29	100.8	11.26	114.2	13.16	127.7	15.02	141.1	16.84
		20.0	67.2	6.45	80.6	8.43	94.1	10.39	100.8	11.36	114.2	13.28	127.7	15.16	141.1	17.02
		25.0	67.2	7.18	80.6	9.24	94.1	11.24	100.8	12.23	114.2	14.15	127.7	16.03	141.1	17.87
		30.0	67.2	11.65	80.6	13.60	94.1	15.45	100.8	16.34	114.2	18.07	127.7	19.73	141.1	21.31
		35.0	67.2	15.42	80.6	17.97	94.1	20.40	100.8	21.56	114.2	23.81	127.7	25.96	141.1	28.00
		40.0	67.2	18.87	80.6	21.96	94.1	24.89	100.8	26.29	114.2	29.00	127.7	31.58	141.1	34.03
		43.0	67.2	21.00	80.6	24.41	94.1	27.64	100.8	29.19	114.2	32.18	127.7	35.02	141.1	37.74
46.0	67.2	22.64	80.6	26.15	94.1	29.57	100.8	31.25	114.2	34.54	127.7	37.76	141.1	40.91		
52.0	48.3	19.44	52.6	19.63	57.7	19.99	60.5	20.21	66.7	20.72	73.5	21.30	80.9	21.91		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	56.0	4.52	67.2	6.20	78.4	7.86	84.0	8.67	95.2	10.29	106.4	11.88	117.6	13.44
		-5.0	56.0	4.53	67.2	6.21	78.4	7.87	84.0	8.69	95.2	10.31	106.4	11.90	117.6	13.46
		0.0	56.0	4.54	67.2	6.23	78.4	7.89	84.0	8.71	95.2	10.33	106.4	11.92	117.6	13.48
		5.0	56.0	4.57	67.2	6.25	78.4	7.91	84.0	8.73	95.2	10.35	106.4	11.94	117.6	13.51
		10.0	56.0	4.59	67.2	6.28	78.4	7.94	84.0	8.77	95.2	10.39	106.4	11.98	117.6	13.54
		15.0	56.0	4.64	67.2	6.33	78.4	7.99	84.0	8.81	95.2	10.44	106.4	12.03	117.6	13.59
		20.0	56.0	4.72	67.2	6.41	78.4	8.07	84.0	8.89	95.2	10.51	106.4	12.10	117.6	13.66
		25.0	56.0	4.91	67.2	6.60	78.4	8.26	84.0	9.08	95.2	12.06	106.4	12.29	117.6	13.85
		30.0	56.0	8.99	67.2	10.15	78.4	10.81	84.0	11.31	95.2	12.46	106.4	13.74	117.6	15.08
		35.0	56.0	12.04	67.2	13.82	78.4	15.45	84.0	16.21	95.2	17.64	106.4	18.94	117.6	20.13
		40.0	56.0	14.91	67.2	17.13	78.4	19.18	84.0	20.14	95.2	21.93	106.4	23.59	117.6	25.10
		43.0	56.0	16.68	67.2	19.17	78.4	21.46	84.0	22.54	95.2	24.57	106.4	26.44	117.6	28.16
46.0	56.0	18.39	67.2	20.87	78.4	23.21	84.0	24.33	95.2	26.47	106.4	28.48	117.6	30.38		
52.0	48.3	19.44	52.6	19.63	57.7	19.99	60.5	20.21	66.7	20.72	73.5	21.30	80.9	21.91		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	44.8	2.82	53.8	4.19	62.7	5.54	67.2	6.21	76.2	7.53	85.1	8.84	94.1	10.13
		-5.0	44.8	2.83	53.8	4.20	62.7	5.55	67.2	6.22	76.2	7.54	85.1	8.85	94.1	10.15
		0.0	44.8	2.84	53.8	4.21	62.7	5.57	67.2	6.24	76.2	7.56	85.1	8.87	94.1	10.17
		5.0	44.8	2.86	53.8	4.23	62.7	5.59	67.2	6.26	76.2	7.58	85.1	8.89	94.1	10.19
		10.0	44.8	2.88	53.8	4.26	62.7	5.61	67.2	6.28	76.2	7.60	85.1	8.92	94.1	10.22
		15.0	44.8	2.92	53.8	4.29	62.7	5.65	67.2	6.32	76.2	7.64	85.1	8.96	94.1	10.27
		20.0	44.8	2.97	53.8	4.35	62.7	5.70	67.2	6.37	76.2	7.69	85.1	9.02	94.1	10.33
		25.0	44.8	3.10	53.8	4.46	62.7	5.81	67.2	6.47	76.2	7.79	85.1	9.10	94.1	10.41
		30.0	44.8	4.49	53.8	5.27	62.7	6.35	67.2	6.93	76.2	8.13	85.1	9.49	94.1	11.00
		35.0	44.8	9.01	53.8	10.16	62.7	11.16	67.2	11.61	76.2	12.41	85.1	13.40	94.1	14.67
		40.0	44.8	11.29	53.8	12.79	62.7	14.10	67.2	14.69	76.2	15.76	85.1	16.69	94.1	17.48
		43.0	44.8	12.70	53.8	14.41	62.7	15.93	67.2	16.61	76.2	17.86	85.1	18.96	94.1	19.90
46.0	44.8	14.61	53.8	16.27	62.7	17.77	67.2	18.46	76.2	19.74	85.1	20.88	94.1	21.90		
52.0	44.8	17.28	52.6	19.63	57.7	19.99	60.5	20.21	66.7	20.72	73.5	21.30	80.9	21.91		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	33.6	1.10	40.3	2.14	47.0	3.19	50.4	3.71	57.1	4.74	63.8	5.76	70.6	6.76
		-5.0	33.6	1.10	40.3	2.15	47.0	3.20	50.4	3.72	57.1	4.76	63.8	5.77	70.6	6.78
		0.0	33.6	1.11	40.3	2.16	47.0	3.21	50.4	3.73	57.1	4.77	63.8	5.80	70.6	6.80
		5.0	33.6	1.12	40.3	2.17	47.0	3.22	50.4	3.75	57.1	4.80	63.8	5.82	70.6	6.83
		10.0	33.6	1.14	40.3	2.19	47.0	3.24	50.4	3.78	57.1	4.83	63.8	5.86	70.6	6.87
		15.0	33.6	1.16	40.3	2.21	47.0	3.27	50.4	3.81	57.1	4.87	63.8	5.90	70.6	6.92
		20.0	33.6	1.20	40.3	2.25	47.0	3.32	50.4	3.86	57.1	4.93	63.8	5.97	70.6	6.97
		25.0	33.6	1.28	40.3	2.32	47.0	3.40	50.4	3.95	57.1	5.01	63.8	6.07	70.6	7.15
		30.0	33.6	1.50	40.3	2.48	47.0	3.55	50.4	4.17	57.1	5.46	63.8	6.73	70.6	7.95
		35.0	33.6	6.35	40.3	7.01	47.0	7.79	50.4	8.29	57.1	9.30	63.8	10.29	70.6	11.26
		40.0	33.6	8.03	40.3	8.93	47.0	9.68	50.4	10.00	57.1	10.53	63.8	10.94	70.6	11.26
		43.0	33.6	9.08	40.3	10.15	47.0	11.04	50.4	11.42	57.1	12.08	63.8	12.59	70.6	12.99
46.0	33.6	11.28	40.3	12.29	47.0	13.16	50.4	13.54	57.1	14.21	63.8	14.75	70.6	15.18		
52.0	33.6	13.19	40.3	14.50	47.0	15.66	50.4	16.18	57.1	16.69	63.8	16.96	70.6	17.06		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-54. 60HP (Heating) U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	141.4	54.89	137.8	53.88	130.3	51.71	126.5	50.57	114.9	46.92	106.8	44.30	85.7	36.99
		-19.8	-20.0	148.5	56.18	144.7	55.11	137.0	52.86	133.0	51.68	120.8	47.88	112.4	45.16	90.3	37.61
		-14.7	-15.0	158.6	58.11	154.6	56.97	146.4	54.57	142.2	53.32	129.3	49.33	120.3	46.45	96.7	38.54
		-9.6	-10.0	172.2	60.83	167.9	59.60	159.1	56.99	154.6	55.63	140.6	51.31	130.9	48.22	105.2	39.78
		-4.4	-5.0	189.9	64.32	185.1	62.85	175.3	59.78	170.4	58.58	154.9	53.79	144.2	50.42	115.9	41.32
		-1.8	-2.5	200.3	66.68	195.2	65.19	184.9	62.09	179.6	60.49	163.4	55.46	152.1	51.91	119.0	41.07
		0.8	0.0	209.5	67.20	206.6	66.95	195.7	63.74	189.0	61.49	168.0	54.37	154.0	49.74	119.0	38.58
		2.8	2.0	217.0	65.96	210.0	63.65	196.0	59.12	189.0	56.90	168.0	50.37	154.0	46.14	119.0	35.93
		6.0	5.0	217.0	57.98	210.0	56.01	196.0	52.13	189.0	50.23	168.0	44.62	154.0	40.90	119.0	32.06
		7.0	6.0	217.0	55.40	210.0	53.54	196.0	49.87	189.0	48.00	168.0	42.68	154.0	39.22	119.0	30.84
		8.6	7.5	217.0	51.53	210.0	49.83	196.0	46.47	189.0	44.82	168.0	39.96	154.0	36.78	119.0	29.07
		11.2	10.0	217.0	45.54	210.0	44.10	196.0	41.26	189.0	39.86	168.0	35.71	154.0	32.99	119.0	26.30
		16.4	15.0	217.0	35.03	210.0	34.03	196.0	32.03	189.0	31.03	168.0	28.02	154.0	26.01	119.0	20.96
		24.0	18.0	217.0	28.99	210.0	28.16	196.0	26.48	189.0	25.64	168.0	23.09	154.0	21.39	119.0	17.15

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	141.4	54.89	137.8	53.88	130.3	51.71	126.5	50.57	114.9	46.92	106.8	44.30	85.7	36.99
		-19.8	-20.0	148.5	56.18	144.7	55.11	137.0	52.86	133.0	51.68	120.8	47.88	112.4	45.16	90.3	37.61
		-14.7	-15.0	158.6	58.11	154.6	56.97	146.4	54.57	142.2	53.32	129.3	49.33	120.3	46.45	96.7	38.54
		-9.6	-10.0	172.2	60.83	167.9	59.60	159.1	56.99	154.6	55.63	140.6	51.31	130.9	48.22	105.2	39.78
		-4.4	-5.0	189.9	64.32	185.1	62.85	175.3	59.78	170.1	58.58	151.2	50.01	138.6	46.20	107.1	36.69
		-1.8	-2.5	195.3	59.17	189.0	57.40	176.4	53.88	170.1	52.12	151.2	46.86	138.6	43.35	107.1	34.56
		0.8	0.0	195.3	54.66	189.0	53.07	176.4	49.89	170.1	48.30	151.2	43.52	138.6	40.33	107.1	32.31
		2.8	2.0	195.3	50.15	189.0	48.73	176.4	45.90	170.1	44.48	151.2	40.19	138.6	37.34	107.1	30.26
		6.0	5.0	195.3	44.03	189.0	42.95	176.4	40.74	170.1	39.62	151.2	36.11	138.6	33.62	107.1	27.17
		7.0	6.0	195.3	42.91	189.0	41.73	176.4	39.36	170.1	38.17	151.2	34.59	138.6	32.19	107.1	26.12
		8.6	7.5	195.3	39.74	189.0	38.69	176.4	36.57	170.1	35.51	151.2	32.29	138.6	30.12	107.1	24.59
		11.2	10.0	195.3	34.80	189.0	33.95	176.4	32.23	170.1	31.36	151.2	28.71	138.6	26.90	107.1	22.21
		16.4	15.0	195.3	26.08	189.0	25.56	176.4	24.47	170.1	23.90	151.2	22.13	138.6	20.88	107.1	17.52
		24.0	18.0	195.3	24.94	189.0	24.27	176.4	22.92	170.1	22.25	151.2	20.24	138.6	18.90	107.1	15.54

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	141.4	54.89	137.8	53.88	130.3	51.71	126.5	50.57	114.9	46.92	106.8	44.30	85.7	36.99
		-19.8	-20.0	148.5	56.18	144.7	55.11	137.0	52.86	133.0	51.68	120.8	47.88	112.4	45.16	90.3	37.61
		-14.7	-15.0	158.6	58.11	154.6	56.97	146.4	54.57	142.2	53.32	129.3	49.33	120.3	46.45	95.2	38.54
		-9.6	-10.0	172.2	60.83	167.9	59.60	156.8	50.75	151.2	49.31	134.4	44.88	123.2	41.84	95.2	33.87
		-4.4	-5.0	173.6	48.54	168.0	47.38	156.8	45.01	151.2	43.79	134.4	40.06	123.2	37.48	95.2	30.71
		-1.8	-2.5	173.6	45.03	168.0	44.00	156.8	41.88	151.2	40.79	134.4	37.42	123.2	35.10	95.2	29.02
		0.8	0.0	173.6	41.29	168.0	40.47	156.8	38.74	151.2	37.83	134.4	34.94	123.2	32.89	95.2	27.31
		2.8	2.0	173.6	38.28	168.0	37.55	156.8	36.00	151.2	35.18	134.4	32.57	123.2	30.70	95.2	25.59
		6.0	5.0	173.6	34.01	168.0	33.40	156.8	32.08	151.2	31.38	134.4	29.12	123.2	27.46	95.2	22.89
		7.0	6.0	173.6	32.85	168.0	32.18	156.8	30.79	151.2	30.08	134.4	27.84	123.2	26.27	95.2	22.03
		8.6	7.5	173.6	30.24	168.0	29.67	156.8	28.49	151.2	27.87	134.4	25.92	123.2	24.53	95.2	20.73
		11.2	10.0	173.6	26.19	168.0	25.78	156.8	24.90	151.2	24.43	134.4	22.92	123.2	21.81	95.2	18.69
		16.4	15.0	173.6	22.63	168.0	22.03	156.8	20.84	151.2	20.24	134.4	18.45	123.2	17.26	95.2	14.63
		24.0	18.0	173.6	22.63	168.0	22.03	156.8	20.84	151.2	20.24	134.4	18.45	123.2	17.26	95.2	14.27

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	141.4	54.89	137.8	53.88	130.3	51.71	126.5	50.57	114.9	46.92	106.8	44.30	83.3	33.04
		-19.8	-20.0	148.5	56.18	144.7	55.11	137.0	52.86	132.3	45.56	117.6	41.43	107.8	38.81	83.3	31.82
		-14.7	-15.0	151.9	46.53	147.0	45.59	137.2	43.64	132.3	42.62	117.6	39.38	107.8	37.04	83.3	30.45
		-9.6	-10.0	151.9	42.03	147.0	41.24	137.2	39.58	132.3	38.70	117.6	35.91	107.8	33.98	83.3	28.54
		-4.4	-5.0	151.9	37.22	147.0	36.63	137.2	35.35	132.3	34.66	117.6	32.40	107.8	30.72	83.3	25.94
		-1.8	-2.5	151.9	34.77	147.0	34.25	137.2	33.11	132.3	32.49	117.6	30.43	107.8	28.91	83.3	24.52
		0.8	0.0	151.9	32.21	147.0	31.76	137.2	30.76	132.3	30.21	117.6	28.39	107.8	27.01	83.3	23.04
		2.8	2.0	151.9	29.69	147.0	29.31	137.2	28.45	132.3	27.98	117.6	26.37	107.8	25.14	83.3	21.55
		6.0	5.0	151.9	26.06	147.0	25.77	137.2	25.10	132.3	24.71	117.6	23.35	107.8	22.31	83.3	19.14
		7.0	6.0	151.9	24.83	147.0	24.53	137.2	23.87	132.3	23.50	117.6	22.26	107.8	21.31	83.3	18.50
		8.6	7.5	151.9	22.74	147.0	22.51	137.2	21.99	132.3	21.70	117.6	20.68	107.8	19.87	83.3	17.41
		11.2	10.0	151.9	20.31	147.0	19.79	137.2	19.13	132.3	18.93	117.6	18.22	107.8	17.62	83.3	15.69
		16.4	15.0	151.9	20.31	147.0	19.79	137.2	18.75	132.3	18.23	117.6	16.66	107.8	15.61	83.3	13.00
		24.0	18.0	151.9	20.31	147.0	19.79	137.2	18.75	132.3	18.23	117.6	16.66	107.8	15.61	83.3	13.00

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

60HP (Heating) U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	60%	-24.9	-25.0	130.2	40.86	126.0	40.20	117.6	38.79	113.4	38.03	100.8	35.42	92.4	33.31	71.4	27.73
		-19.8	-20.0	130.2	38.53	126.0	37.98	117.6	36.77	113.4	36.11	100.8	33.90	92.4	32.21	71.4	26.79
		-14.7	-15.0	130.2	36.00	126.0	35.51	117.6	34.44	113.4	33.84	100.8	31.84	92.4	30.32	71.4	25.85
		-9.6	-10.0	130.2	32.87	126.0	32.47	117.6	31.56	113.4	31.05	100.8	29.32	92.4	27.98	71.4	23.99
		-4.4	-5.0	130.2	29.16	126.0	28.86	117.6	28.15	113.4	27.74	100.8	26.32	92.4	25.20	71.4	21.80
		-1.8	-2.5	130.2	27.14	126.0	26.88	117.6	26.28	113.4	25.92	100.8	24.67	92.4	23.67	71.4	20.59
		0.8	0.0	130.2	25.01	126.0	24.82	117.6	24.32	113.4	24.03	100.8	22.96	92.4	22.08	71.4	19.33
		2.8	2.0	130.2	22.91	126.0	22.78	117.6	22.40	113.4	22.17	100.8	21.27	92.4	20.52	71.4	18.06
		6.0	5.0	130.2	19.76	126.0	19.67	117.6	19.41	113.4	19.24	100.8	18.59	92.4	18.01	71.4	15.96
		7.0	6.0	130.2	18.64	126.0	18.57	117.6	18.38	113.4	18.25	100.8	17.70	92.4	17.21	71.4	15.47
		8.6	7.5	130.2	18.00	126.0	17.55	117.6	16.92	113.4	16.84	100.8	16.43	92.4	16.04	71.4	14.57
		11.2	10.0	130.2	18.00	126.0	17.55	117.6	16.66	113.4	16.21	100.8	14.87	92.4	14.24	71.4	13.14
		16.4	15.0	130.2	18.00	126.0	17.55	117.6	16.66	113.4	16.21	100.8	14.87	92.4	13.97	71.4	11.74
24.0	18.0	130.2	18.00	126.0	17.55	117.6	16.66	113.4	16.21	100.8	14.87	92.4	13.97	71.4	11.74		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	50%	-24.9	-25.0	108.5	32.00	105.0	31.64	98.0	30.82	94.5	30.36	84.0	28.76	77.0	27.49	59.5	23.25
		-19.8	-20.0	108.5	30.40	105.0	30.08	98.0	29.35	94.5	28.94	84.0	27.46	77.0	26.30	59.5	22.67
		-14.7	-15.0	108.5	28.30	105.0	28.04	98.0	27.42	94.5	27.07	84.0	25.76	77.0	24.72	59.5	21.50
		-9.6	-10.0	108.5	25.73	105.0	25.54	98.0	25.05	94.5	24.75	84.0	23.67	77.0	22.79	59.5	19.95
		-4.4	-5.0	108.5	22.72	105.0	22.60	98.0	22.26	94.5	22.05	84.0	21.21	77.0	20.49	59.5	18.13
		-1.8	-2.5	108.5	21.07	105.0	20.99	98.0	20.74	94.5	20.56	84.0	19.87	77.0	19.24	59.5	17.13
		0.8	0.0	108.5	19.35	105.0	19.31	98.0	19.15	94.5	19.02	84.0	18.47	77.0	17.95	59.5	16.07
		2.8	2.0	108.5	17.60	105.0	17.59	98.0	17.48	94.5	17.39	84.0	16.95	77.0	16.52	59.5	14.95
		6.0	5.0	108.5	15.69	105.0	15.32	98.0	14.93	94.5	14.91	84.0	14.72	77.0	14.47	59.5	13.29
		7.0	6.0	108.5	15.69	105.0	15.32	98.0	14.57	94.5	14.20	84.0	14.04	77.0	13.84	59.5	12.86
		8.6	7.5	108.5	15.69	105.0	15.32	98.0	14.57	94.5	14.20	84.0	13.08	77.0	12.93	59.5	12.14
		11.2	10.0	108.5	15.69	105.0	15.32	98.0	14.57	94.5	14.20	84.0	13.08	77.0	12.33	59.5	11.00
		16.4	15.0	108.5	15.69	105.0	15.32	98.0	14.57	94.5	14.20	84.0	13.08	77.0	12.33	59.5	10.47
24.0	18.0	108.5	15.69	105.0	15.32	98.0	14.57	94.5	14.20	84.0	13.08	77.0	12.33	59.5	10.47		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	40%	-24.9	-25.0	86.8	24.84	84.0	24.65	78.4	24.17	75.6	23.89	67.2	22.85	61.6	22.01	47.6	19.13
		-19.8	-20.0	86.8	23.57	84.0	23.41	78.4	23.01	75.6	22.76	67.2	21.82	61.6	21.04	47.6	18.53
		-14.7	-15.0	86.8	21.91	84.0	21.79	78.4	21.47	75.6	21.27	67.2	20.48	61.6	19.79	47.6	17.53
		-9.6	-10.0	86.8	19.89	84.0	19.82	78.4	19.60	75.6	19.44	67.2	18.81	61.6	18.25	47.6	16.30
		-4.4	-5.0	86.8	17.52	84.0	17.51	78.4	17.41	75.6	17.31	67.2	16.87	61.6	16.43	47.6	14.84
		-1.8	-2.5	86.8	16.20	84.0	16.21	78.4	16.15	75.6	16.08	67.2	15.73	61.6	15.37	47.6	13.99
		0.8	0.0	86.8	14.67	84.0	14.71	78.4	14.74	75.6	14.72	67.2	14.51	61.6	14.24	47.6	13.10
		2.8	2.0	86.8	13.38	84.0	13.28	78.4	13.37	75.6	13.38	67.2	13.30	61.6	13.13	47.6	12.23
		6.0	5.0	86.8	13.38	84.0	13.08	78.4	12.48	75.6	12.18	67.2	11.63	61.6	11.57	47.6	11.00
		7.0	6.0	86.8	13.38	84.0	13.08	78.4	12.48	75.6	12.18	67.2	11.29	61.6	11.10	47.6	10.62
		8.6	7.5	86.8	13.38	84.0	13.08	78.4	12.48	75.6	12.18	67.2	11.29	61.6	10.69	47.6	10.07
		11.2	10.0	86.8	13.38	84.0	13.08	78.4	12.48	75.6	12.18	67.2	11.29	61.6	10.69	47.6	9.20
		16.4	15.0	86.8	13.38	84.0	13.08	78.4	12.48	75.6	12.18	67.2	11.29	61.6	10.69	47.6	9.20
24.0	18.0	86.8	13.38	84.0	13.08	78.4	12.48	75.6	12.18	67.2	11.29	61.6	10.69	47.6	9.20		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	30%	-24.9	-25.0	65.1	18.67	63.0	18.59	58.8	18.35	56.7	18.19	50.4	17.56	46.2	17.01	35.7	15.16
		-19.8	-20.0	65.1	17.73	63.0	17.66	58.8	17.47	56.7	17.34	50.4	16.79	46.2	16.30	35.7	14.62
		-14.7	-15.0	65.1	16.50	63.0	16.46	58.8	16.33	56.7	16.23	50.4	15.78	46.2	15.36	35.7	13.87
		-9.6	-10.0	65.1	14.94	63.0	14.93	58.8	14.86	56.7	14.80	50.4	14.47	46.2	14.14	35.7	12.90
		-4.4	-5.0	65.1	13.00	63.0	13.05	58.8	13.09	56.7	13.08	50.4	12.92	46.2	12.70	35.7	11.75
		-1.8	-2.5	65.1	11.96	63.0	12.03	58.8	12.13	56.7	12.14	50.4	12.07	46.2	11.92	35.7	11.13
		0.8	0.0	65.1	11.07	63.0	11.00	58.8	11.13	56.7	11.17	50.4	11.19	46.2	11.10	35.7	10.49
		2.8	2.0	65.1	11.07	63.0	10.84	58.8	10.39	56.7	10.25	50.4	10.33	46.2	10.30	35.7	9.86
		6.0	5.0	65.1	11.07	63.0	10.84	58.8	10.39	56.7	10.17	50.4	9.50	46.2	9.20	35.7	8.97
		7.0	6.0	65.1	11.07	63.0	10.84	58.8	10.39	56.7	10.17	50.4	9.50	46.2	9.05	35.7	8.69
		8.6	7.5	65.1	11.07	63.0	10.84	58.8	10.39	56.7	10.17	50.4	9.50	46.2	9.05	35.7	8.29
		11.2	10.0	65.1	11.07	63.0	10.84	58.8	10.39	56.7	10.17	50.4	9.50	46.2	9.05	35.7	7.93
		16.4	15.0	65.1	11.07	63.0	10.84	58.8	10.39	56.7	10.17	50.4	9.50	46.2	9.05	35.7	7.93
24.0	18.0	65.1	11.07	63.0	10.84	58.8	10.39	56.7	10.17	50.4	9.50	46.2	9.05	35.7	7.93		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-55. 62HP (Cooling) U-14ME2E8+U-16ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	116.0	13.38	139.2	16.05	162.4	18.73	174.0	20.07	197.2	22.75	220.4	25.42	243.6	28.10
		-5.0	116.0	13.40	139.2	16.07	162.4	18.75	174.0	20.09	197.2	22.77	220.4	25.45	243.6	28.12
		0.0	116.0	13.42	139.2	16.10	162.4	18.78	174.0	20.12	197.2	22.80	220.4	25.50	243.6	28.19
		5.0	116.0	13.45	139.2	16.13	162.4	18.82	174.0	20.17	197.2	22.91	220.4	25.68	243.6	28.40
		10.0	116.0	13.49	139.2	16.22	162.4	19.01	174.0	20.42	197.2	23.27	220.4	26.15	243.6	28.93
		15.0	116.0	13.76	139.2	16.70	162.4	19.70	174.0	21.22	197.2	24.29	220.4	27.37	243.6	30.24
		20.0	116.0	15.26	139.2	18.65	162.4	22.62	174.0	24.76	197.2	29.38	220.4	34.44	243.6	39.95
		25.0	116.0	19.52	139.2	24.17	162.4	29.28	174.0	32.00	197.2	37.80	220.4	44.05	243.6	50.78
		30.0	116.0	24.53	139.2	30.30	162.4	36.57	174.0	39.88	197.2	46.88	220.4	54.38	243.6	62.39
		35.0	116.0	29.91	139.2	36.88	162.4	44.39	174.0	48.34	197.2	56.65	220.4	65.51	232.8	67.61
		40.0	116.0	35.71	139.2	43.98	162.4	52.82	174.0	57.47	197.2	67.21	206.2	67.61	215.0	67.61
		43.0	116.0	39.39	139.2	48.49	162.4	58.21	174.0	63.31	188.1	67.62	197.1	67.62	201.6	64.37
		46.0	114.8	42.85	137.8	52.76	146.4	53.67	147.9	52.23	151.9	49.82	156.9	47.92	163.0	46.42
52.0	50.1	18.19	54.5	18.39	59.8	18.74	62.7	18.95	69.0	19.46	76.1	20.02	83.8	20.62		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	104.4	10.81	125.3	13.56	146.2	16.24	156.6	17.56	177.5	20.15	198.4	22.67	219.2	25.14
		-5.0	104.4	10.83	125.3	13.58	146.2	16.27	156.6	17.58	177.5	20.17	198.4	22.70	219.2	25.17
		0.0	104.4	10.85	125.3	13.61	146.2	16.29	156.6	17.61	177.5	20.20	198.4	22.72	219.2	25.19
		5.0	104.4	10.88	125.3	13.64	146.2	16.33	156.6	17.64	177.5	20.24	198.4	22.79	219.2	25.30
		10.0	104.4	10.93	125.3	13.68	146.2	16.40	156.6	17.75	177.5	20.41	198.4	23.03	219.2	25.60
		15.0	104.4	11.04	125.3	13.93	146.2	16.78	156.6	18.19	177.5	20.97	198.4	23.70	219.2	26.37
		20.0	104.4	11.96	125.3	15.16	146.2	18.26	156.6	19.78	177.5	22.73	198.4	26.16	219.2	29.82
		25.0	104.4	15.73	125.3	19.53	146.2	23.47	156.6	25.49	177.5	29.61	198.4	33.85	219.2	38.21
		30.0	104.4	20.38	125.3	24.98	146.2	29.67	156.6	32.04	177.5	36.86	198.4	41.79	219.2	46.83
		35.0	104.4	26.16	125.3	31.73	146.2	37.36	156.6	40.20	177.5	45.96	198.4	51.87	219.2	58.01
		40.0	104.4	31.29	125.3	37.68	146.2	44.12	156.6	47.38	177.5	54.03	198.4	60.97	215.0	67.61
		43.0	104.4	34.46	125.3	41.36	146.2	48.34	156.6	51.88	177.5	59.19	197.1	67.62	201.6	64.37
		46.0	104.4	36.93	125.3	44.86	146.2	53.17	147.9	52.23	151.9	49.82	156.9	47.92	163.0	46.42
52.0	50.1	18.19	54.5	18.39	59.8	18.74	62.7	18.95	69.0	19.46	76.1	20.02	83.8	20.62		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	92.8	9.27	111.4	11.76	129.9	14.19	139.2	15.39	157.8	17.75	176.3	20.05	194.9	22.31
		-5.0	92.8	9.28	111.4	11.77	129.9	14.21	139.2	15.41	157.8	17.76	176.3	20.07	194.9	22.33
		0.0	92.8	9.30	111.4	11.79	129.9	14.23	139.2	15.43	157.8	17.79	176.3	20.10	194.9	22.36
		5.0	92.8	9.33	111.4	11.82	129.9	14.26	139.2	15.46	157.8	17.82	176.3	20.12	194.9	22.39
		10.0	92.8	9.37	111.4	11.87	129.9	14.30	139.2	15.50	157.8	17.87	176.3	20.21	194.9	22.51
		15.0	92.8	9.42	111.4	11.95	129.9	14.45	139.2	15.69	157.8	18.13	176.3	20.53	194.9	22.89
		20.0	92.8	9.83	111.4	12.54	129.9	15.20	139.2	16.50	157.8	19.05	176.3	21.54	194.9	23.95
		25.0	92.8	12.69	111.4	15.57	129.9	18.50	139.2	19.98	157.8	22.97	176.3	26.01	194.9	29.08
		30.0	92.8	16.76	111.4	20.34	129.9	23.93	139.2	25.74	157.8	29.35	176.3	32.97	194.9	36.60
		35.0	92.8	21.84	111.4	26.27	129.9	30.66	139.2	32.85	157.8	37.22	176.3	41.58	194.9	45.95
		40.0	92.8	26.39	111.4	31.53	129.9	36.60	139.2	39.12	157.8	44.14	176.3	49.19	194.9	54.29
		43.0	92.8	29.20	111.4	34.78	129.9	40.28	139.2	43.01	157.8	48.49	176.3	54.02	194.9	59.68
		46.0	92.8	31.19	111.4	37.36	129.9	43.70	139.2	46.93	151.9	49.82	156.9	47.92	163.0	46.42
52.0	50.1	18.19	54.5	18.39	59.8	18.74	62.7	18.95	69.0	19.46	76.1	20.02	83.8	20.62		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	81.2	7.69	97.4	9.92	113.7	12.09	121.8	13.16	138.0	15.28	154.3	17.35	170.5	19.38
		-5.0	81.2	7.71	97.4	9.93	113.7	12.11	121.8	13.18	138.0	15.29	154.3	17.36	170.5	19.40
		0.0	81.2	7.72	97.4	9.95	113.7	12.13	121.8	13.20	138.0	15.31	154.3	17.39	170.5	19.42
		5.0	81.2	7.74	97.4	9.97	113.7	12.15	121.8	13.22	138.0	15.34	154.3	17.41	170.5	19.45
		10.0	81.2	7.78	97.4	10.00	113.7	12.19	121.8	13.26	138.0	15.38	154.3	17.44	170.5	19.48
		15.0	81.2	7.83	97.4	10.05	113.7	12.23	121.8	13.31	138.0	15.45	154.3	17.55	170.5	19.62
		20.0	81.2	7.96	97.4	10.27	113.7	12.54	121.8	13.65	138.0	15.85	154.3	18.01	170.5	20.11
		25.0	81.2	9.60	97.4	11.97	113.7	14.24	121.8	15.35	138.0	17.52	154.3	19.62	170.5	21.67
		30.0	81.2	13.45	97.4	16.14	113.7	18.78	121.8	20.08	138.0	22.65	154.3	25.18	170.5	27.67
		35.0	81.2	17.83	97.4	21.25	113.7	24.57	121.8	26.20	138.0	29.41	154.3	32.54	170.5	35.60
		40.0	81.2	21.81	97.4	25.84	113.7	29.74	121.8	31.65	138.0	35.38	154.3	39.03	170.5	42.60
		43.0	81.2	24.27	97.4	28.67	113.7	32.92	121.8	35.00	138.0	39.08	154.3	43.06	170.5	46.99
		46.0	81.2	26.00	97.4	30.69	113.7	35.38	121.8	37.73	138.0	42.45	154.3	45.47	163.0	46.42
52.0	50.1	18.19	54.5	18.39	59.8	18.74	62.7	18.95	69.0	19.46	76.1	20.02	83.8	20.62		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

62HP (Cooling) U-14ME2E8+U-16ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	69.6	6.10	83.5	8.03	97.4	9.94	104.4	10.88	118.3	12.73	132.2	14.55	146.2	16.34
		-5.0	69.6	6.11	83.5	8.05	97.4	9.95	104.4	10.89	118.3	12.75	132.2	14.57	146.2	16.36
		0.0	69.6	6.12	83.5	8.06	97.4	9.97	104.4	10.91	118.3	12.76	132.2	14.59	146.2	16.37
		5.0	69.6	6.14	83.5	8.08	97.4	9.99	104.4	10.93	118.3	12.79	132.2	14.61	146.2	16.40
		10.0	69.6	6.16	83.5	8.11	97.4	10.02	104.4	10.96	118.3	12.82	132.2	14.64	146.2	16.43
		15.0	69.6	6.20	83.5	8.15	97.4	10.06	104.4	11.00	118.3	12.86	132.2	14.67	146.2	16.46
		20.0	69.6	6.27	83.5	8.21	97.4	10.14	104.4	11.09	118.3	12.97	132.2	14.81	146.2	16.62
		25.0	69.6	6.88	83.5	8.88	97.4	10.82	104.4	11.78	118.3	13.65	132.2	15.49	146.2	17.28
		30.0	69.6	10.47	83.5	12.39	97.4	14.22	104.4	15.11	118.3	16.82	132.2	18.45	146.2	20.01
		35.0	69.6	14.16	83.5	16.68	97.4	19.07	104.4	20.22	118.3	22.44	132.2	24.55	146.2	26.57
		40.0	69.6	17.56	83.5	20.61	97.4	23.50	104.4	24.89	118.3	27.55	132.2	30.09	146.2	32.51
		43.0	69.6	19.67	83.5	23.03	97.4	26.21	104.4	27.74	118.3	30.68	132.2	33.48	146.2	36.15
		46.0	69.6	21.34	83.5	24.78	97.4	28.14	104.4	29.79	118.3	33.03	132.2	36.19	146.2	39.27
52.0	50.1	18.19	54.5	18.39	59.8	18.74	62.7	18.95	69.0	19.46	76.1	20.02	83.8	20.62		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	58.0	4.47	69.6	6.11	81.2	7.73	87.0	8.53	98.6	10.12	110.2	11.67	121.8	13.20
		-5.0	58.0	4.48	69.6	6.12	81.2	7.74	87.0	8.54	98.6	10.13	110.2	11.68	121.8	13.21
		0.0	58.0	4.49	69.6	6.13	81.2	7.76	87.0	8.56	98.6	10.14	110.2	11.70	121.8	13.22
		5.0	58.0	4.50	69.6	6.15	81.2	7.77	87.0	8.57	98.6	10.16	110.2	11.71	121.8	13.24
		10.0	58.0	4.52	69.6	6.17	81.2	7.79	87.0	8.60	98.6	10.18	110.2	11.74	121.8	13.26
		15.0	58.0	4.55	69.6	6.20	81.2	7.83	87.0	8.63	98.6	10.21	110.2	11.77	121.8	13.30
		20.0	58.0	4.61	69.6	6.26	81.2	7.88	87.0	8.68	98.6	10.26	110.2	11.81	121.8	13.34
		25.0	58.0	4.76	69.6	6.42	81.2	8.05	87.0	8.85	98.6	10.44	110.2	11.99	121.8	13.52
		30.0	58.0	7.83	69.6	9.05	81.2	9.96	87.0	10.52	98.6	11.77	110.2	13.09	121.8	14.46
		35.0	58.0	10.81	69.6	12.57	81.2	14.18	87.0	14.94	98.6	16.35	110.2	17.63	121.8	18.81
		40.0	58.0	13.65	69.6	15.85	81.2	17.87	87.0	18.81	98.6	20.59	110.2	22.22	121.8	23.72
		43.0	58.0	15.40	69.6	17.86	81.2	20.12	87.0	21.19	98.6	23.19	110.2	25.03	121.8	26.73
		46.0	58.0	17.17	69.6	19.60	81.2	21.90	87.0	23.00	98.6	25.10	110.2	27.08	121.8	28.94
52.0	50.1	18.19	54.5	18.39	59.8	18.74	62.7	18.95	69.0	19.46	76.1	20.02	83.8	20.62		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	46.4	2.81	55.7	4.15	65.0	5.47	69.6	6.13	78.9	7.42	88.2	8.70	97.4	9.96
		-5.0	46.4	2.82	55.7	4.16	65.0	5.48	69.6	6.14	78.9	7.43	88.2	8.71	97.4	9.97
		0.0	46.4	2.83	55.7	4.17	65.0	5.49	69.6	6.14	78.9	7.44	88.2	8.72	97.4	9.98
		5.0	46.4	2.84	55.7	4.18	65.0	5.50	69.6	6.16	78.9	7.45	88.2	8.73	97.4	10.00
		10.0	46.4	2.85	55.7	4.19	65.0	5.52	69.6	6.17	78.9	7.47	88.2	8.75	97.4	10.02
		15.0	46.4	2.87	55.7	4.22	65.0	5.54	69.6	6.20	78.9	7.49	88.2	8.78	97.4	10.05
		20.0	46.4	2.91	55.7	4.26	65.0	5.58	69.6	6.24	78.9	7.53	88.2	8.82	97.4	10.09
		25.0	46.4	3.00	55.7	4.33	65.0	5.65	69.6	6.30	78.9	7.59	88.2	8.87	97.4	10.16
		30.0	46.4	4.09	55.7	4.99	65.0	6.10	69.6	6.69	78.9	7.89	88.2	9.21	97.4	10.64
		35.0	46.4	7.82	55.7	8.96	65.0	9.94	69.6	10.39	78.9	11.18	88.2	12.16	97.4	13.41
		40.0	46.4	10.07	55.7	11.55	65.0	12.85	69.6	13.44	78.9	14.50	88.2	15.41	97.4	16.19
		43.0	46.4	11.47	55.7	13.16	65.0	14.65	69.6	15.34	78.9	16.57	88.2	17.65	97.4	18.58
		46.0	46.4	13.46	55.7	15.08	65.0	16.56	69.6	17.24	78.9	18.49	88.2	19.61	97.4	20.61
52.0	46.4	16.07	54.5	18.39	59.8	18.74	62.7	18.95	69.0	19.46	76.1	20.02	83.8	20.62		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	34.8	1.12	41.8	2.15	48.7	3.17	52.2	3.67	59.2	4.68	66.1	5.67	73.1	6.64
		-5.0	34.8	1.13	41.8	2.15	48.7	3.17	52.2	3.68	59.2	4.69	66.1	5.68	73.1	6.65
		0.0	34.8	1.13	41.8	2.16	48.7	3.18	52.2	3.69	59.2	4.70	66.1	5.69	73.1	6.67
		5.0	34.8	1.14	41.8	2.17	48.7	3.19	52.2	3.70	59.2	4.72	66.1	5.71	73.1	6.69
		10.0	34.8	1.15	41.8	2.18	48.7	3.20	52.2	3.72	59.2	4.74	66.1	5.73	73.1	6.71
		15.0	34.8	1.17	41.8	2.19	48.7	3.22	52.2	3.74	59.2	4.76	66.1	5.76	73.1	6.75
		20.0	34.8	1.20	41.8	2.22	48.7	3.25	52.2	3.78	59.2	4.80	66.1	5.81	73.1	6.78
		25.0	34.8	1.25	41.8	2.27	48.7	3.31	52.2	3.84	59.2	4.86	66.1	5.90	73.1	6.95
		30.0	34.8	1.41	41.8	2.37	48.7	3.43	52.2	4.03	59.2	5.24	66.1	6.43	73.1	7.57
		35.0	34.8	5.18	41.8	5.84	48.7	6.60	52.2	7.11	59.2	8.10	66.1	9.08	73.1	10.04
		40.0	34.8	6.84	41.8	7.74	48.7	8.48	52.2	8.79	59.2	9.32	66.1	9.73	73.1	10.04
		43.0	34.8	7.89	41.8	8.94	48.7	9.82	52.2	10.20	59.2	10.85	66.1	11.36	73.1	11.75
		46.0	34.8	10.18	41.8	11.18	48.7	12.03	52.2	12.40	59.2	13.06	66.1	13.59	73.1	14.02
52.0	34.8	12.06	41.8	13.35	48.7	14.48	52.2	14.99	59.2	15.50	66.1	15.76	73.1	15.86		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-56. 62HP (Heating) U-14ME2E8+U-16ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	133.9	45.54	130.5	44.75	123.7	43.10	120.2	42.21	109.4	39.35	102.0	37.26	82.3	31.34
		-19.8	-20.0	140.4	46.50	137.0	45.69	129.8	43.95	126.2	43.05	115.0	40.10	107.2	37.93	86.6	31.83
		-14.7	-15.0	149.7	47.96	146.1	47.10	138.6	45.28	134.8	44.32	122.9	41.23	114.6	38.96	92.7	32.60
		-9.6	-10.0	162.3	50.23	158.4	49.23	150.4	47.05	146.3	46.14	133.5	42.82	124.6	40.41	100.8	33.65
		-4.4	-5.0	178.9	52.52	174.6	51.60	165.8	49.63	161.3	48.55	147.2	45.03	137.3	42.43	111.1	35.12
		-1.8	-2.5	188.7	53.44	184.2	52.49	174.9	50.44	170.1	49.34	155.2	45.72	144.8	43.08	117.2	35.65
		0.8	0.0	199.7	54.29	194.9	53.29	185.0	51.11	179.9	49.97	164.2	46.23	153.3	43.52	122.8	35.41
		2.8	2.0	211.4	55.06	206.4	54.01	196.0	51.78	190.7	50.59	173.3	46.42	158.9	42.44	122.8	32.83
		6.0	5.0	223.9	53.20	216.7	51.36	202.2	47.75	195.0	45.97	173.3	40.75	158.9	37.30	122.8	29.05
		7.0	6.0	223.9	50.64	216.7	48.91	202.2	45.51	195.0	43.80	173.3	38.86	158.9	35.65	122.8	27.85
		8.6	7.5	223.9	46.84	216.7	45.27	202.2	42.17	195.0	40.65	173.3	36.16	158.9	33.24	122.8	26.11
		11.2	10.0	223.9	40.87	216.7	39.56	202.2	36.99	195.0	35.72	173.3	31.96	158.9	29.49	122.8	23.41
		16.4	15.0	223.9	30.44	216.7	29.60	202.2	27.91	195.0	27.06	173.3	24.49	158.9	22.75	122.8	18.31
		24.0	18.0	223.9	24.86	216.7	24.18	202.2	22.82	195.0	22.12	173.3	20.00	158.9	18.55	122.8	14.85

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	133.9	45.54	130.5	44.75	123.7	43.10	120.2	42.21	109.4	39.35	102.0	37.26	82.3	31.34
		-19.8	-20.0	140.4	46.50	137.0	45.69	129.8	43.95	126.2	43.05	115.0	40.10	107.2	37.93	86.6	31.83
		-14.7	-15.0	149.7	47.96	146.1	47.10	138.6	45.28	134.8	44.32	122.9	41.23	114.6	38.96	92.7	32.60
		-9.6	-10.0	162.3	50.23	158.4	49.23	150.4	47.05	146.3	46.14	133.5	42.82	124.6	40.41	100.8	33.65
		-4.4	-5.0	178.9	52.52	174.6	51.60	165.8	49.63	161.3	48.55	147.2	45.03	137.3	42.43	110.5	35.12
		-1.8	-2.5	188.7	53.44	184.2	52.49	174.9	50.44	170.1	49.34	155.2	45.72	143.0	39.97	110.5	31.66
		0.8	0.0	199.7	54.29	194.9	53.29	182.0	46.01	175.5	44.51	156.0	40.02	143.0	37.02	110.5	29.46
		2.8	2.0	201.5	46.06	195.0	44.73	182.0	42.09	175.5	40.76	156.0	36.76	143.0	34.16	110.5	27.57
		6.0	5.0	201.5	39.99	195.0	39.04	182.0	37.08	175.5	36.07	156.0	32.91	143.0	30.57	110.5	24.52
		7.0	6.0	201.5	39.16	195.0	38.05	182.0	35.84	175.5	34.73	156.0	31.40	143.0	29.16	110.5	23.49
		8.6	7.5	201.5	36.01	195.0	35.04	182.0	33.08	175.5	32.10	156.0	29.13	143.0	27.12	110.5	22.00
		11.2	10.0	201.5	31.08	195.0	30.31	182.0	28.77	175.5	27.99	156.0	25.59	143.0	23.95	110.5	19.67
		16.4	15.0	201.5	22.64	195.0	22.12	182.0	21.22	175.5	20.75	156.0	19.25	143.0	18.17	110.5	15.21
		24.0	18.0	201.5	22.64	195.0	22.00	182.0	20.71	175.5	20.07	156.0	18.14	143.0	16.85	110.5	13.63

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	133.9	45.54	130.5	44.75	123.7	43.10	120.2	42.21	109.4	39.35	102.0	37.26	82.3	31.34
		-19.8	-20.0	140.4	46.50	137.0	45.69	129.8	43.95	126.2	43.05	115.0	40.10	107.2	37.93	86.6	31.83
		-14.7	-15.0	149.7	47.96	146.1	47.10	138.6	45.28	134.8	44.32	122.9	41.23	114.6	38.96	92.7	32.60
		-9.6	-10.0	162.3	50.23	158.4	49.23	150.4	47.05	146.3	46.14	133.5	42.82	124.6	40.41	98.2	33.65
		-4.4	-5.0	178.9	52.52	173.3	43.79	161.8	41.55	156.0	40.41	138.7	36.88	127.1	34.44	98.2	28.03
		-1.8	-2.5	179.1	41.45	173.3	40.49	161.8	38.50	156.0	37.48	138.7	34.31	127.1	32.11	98.2	26.43
		0.8	0.0	179.1	37.85	173.3	36.93	161.8	35.37	156.0	34.55	138.7	31.91	127.1	30.01	98.2	24.78
		2.8	2.0	179.1	34.80	173.3	34.14	161.8	32.75	156.0	32.01	138.7	29.64	127.1	27.91	98.2	23.15
		6.0	5.0	179.1	30.73	173.3	30.19	161.8	29.04	156.0	28.42	138.7	26.40	127.1	24.85	98.2	20.56
		7.0	6.0	179.1	29.84	173.3	29.21	161.8	27.92	156.0	27.25	138.7	25.15	127.1	23.67	98.2	19.69
		8.6	7.5	179.1	27.25	173.3	26.73	161.8	25.63	156.0	25.06	138.7	23.25	127.1	21.96	98.2	18.43
		11.2	10.0	179.1	23.23	173.3	22.86	161.8	22.08	156.0	21.66	138.7	20.30	127.1	19.30	98.2	16.44
		16.4	15.0	179.1	20.42	173.3	19.85	161.8	18.71	156.0	18.14	138.7	16.42	127.1	15.27	98.2	12.59
		24.0	18.0	179.1	20.42	173.3	19.85	161.8	18.71	156.0	18.14	138.7	16.42	127.1	15.27	98.2	12.41

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	133.9	45.54	130.5	44.75	123.7	43.10	120.2	42.21	109.4	39.35	102.0	37.26	82.3	31.34
		-19.8	-20.0	140.4	46.50	137.0	45.69	129.8	43.95	126.2	43.05	115.0	40.10	107.2	37.93	85.9	31.83
		-14.7	-15.0	149.7	47.96	146.1	47.10	138.6	45.28	134.8	44.32	121.3	41.23	111.2	34.16	85.9	27.90
		-9.6	-10.0	156.7	38.80	151.7	38.06	141.6	36.48	136.5	35.66	121.3	33.01	111.2	31.11	85.9	25.98
		-4.4	-5.0	156.7	33.92	151.7	33.40	141.6	32.25	136.5	31.63	121.3	29.55	111.2	27.99	85.9	23.50
		-1.8	-2.5	156.7	31.61	151.7	31.14	141.6	30.12	136.5	29.55	121.3	27.68	111.2	26.26	85.9	22.15
		0.8	0.0	156.7	29.17	151.7	28.78	141.6	27.88	136.5	27.39	121.3	25.72	111.2	24.45	85.9	20.73
		2.8	2.0	156.7	26.76	151.7	26.43	141.6	25.67	136.5	25.25	121.3	23.79	111.2	22.66	85.9	19.31
		6.0	5.0	156.7	23.32	151.7	23.09	141.6	22.52	136.5	22.18	121.3	20.99	111.2	20.03	85.9	17.10
		7.0	6.0	156.7	22.38	151.7	22.10	141.6	21.47	136.5	21.12	121.3	19.95	111.2	19.05	85.9	16.40
		8.6	7.5	156.7	20.31	151.7	20.10	141.6	19.62	136.5	19.34	121.3	18.39	111.2	17.64	85.9	15.33
		11.2	10.0	156.7	18.21	151.7	17.71	141.6	16.80	136.5	16.63	121.3	15.98	111.2	15.44	85.9	13.66
		16.4	15.0	156.7	18.21	151.7	17.71	141.6	16.71	136.5	16.20	121.3	14.70	111.2	13.70	85.9	11.20
		24.0	18.0	156.7	18.21	151.7	17.71	141.6	16.71	136.5	16.20	121.3	14.70	111.2	13.70	85.9	11.20

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

62HP (Heating) U-14ME2E8+U-16ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	133.9	45.54	130.0	37.21	121.3	35.86	117.0	35.13	104.0	32.65	95.3	30.65	73.7	25.25
		-19.8	-20.0	134.3	35.58	130.0	35.03	121.3	33.82	117.0	33.16	104.0	31.01	95.3	29.44	73.7	24.40
		-14.7	-15.0	134.3	32.86	130.0	32.42	121.3	31.45	117.0	30.90	104.0	29.04	95.3	27.63	73.7	23.43
		-9.6	-10.0	134.3	29.88	130.0	29.53	121.3	28.72	117.0	28.25	104.0	26.65	95.3	25.40	73.7	21.66
		-4.4	-5.0	134.3	26.38	130.0	26.11	121.3	25.47	117.0	25.10	104.0	23.80	95.3	22.76	73.7	19.56
		-1.8	-2.5	134.3	24.45	130.0	24.22	121.3	23.69	117.0	23.37	104.0	22.23	95.3	21.29	73.7	18.40
		0.8	0.0	134.3	22.43	130.0	22.26	121.3	21.82	117.0	21.56	104.0	20.59	95.3	19.78	73.7	17.20
		2.8	2.0	134.3	20.42	130.0	20.31	121.3	19.99	117.0	19.79	104.0	18.98	95.3	18.29	73.7	16.00
		6.0	5.0	134.3	17.57	130.0	17.51	121.3	17.32	117.0	17.18	104.0	16.55	95.3	15.99	73.7	14.05
		7.0	6.0	134.3	16.59	130.0	16.52	121.3	16.33	117.0	16.20	104.0	15.68	95.3	15.20	73.7	13.54
		8.6	7.5	134.3	15.99	130.0	15.56	121.3	14.90	117.0	14.81	104.0	14.43	95.3	14.06	73.7	12.67
		11.2	10.0	134.3	15.99	130.0	15.56	121.3	14.70	117.0	14.27	104.0	12.99	95.3	12.30	73.7	11.29
		16.4	15.0	134.3	15.99	130.0	15.56	121.3	14.70	117.0	14.27	104.0	12.99	95.3	12.13	73.7	9.98
24.0	18.0	134.3	15.99	130.0	15.56	121.3	14.70	117.0	14.27	104.0	12.99	95.3	12.13	73.7	9.98		
100%	50%	-24.9	-25.0	111.9	29.16	108.3	28.83	101.1	28.09	97.5	27.65	86.7	26.17	79.4	24.98	61.4	20.97
		-19.8	-20.0	111.9	27.64	108.3	27.36	101.1	26.69	97.5	26.30	86.7	24.93	79.4	23.84	61.4	20.42
		-14.7	-15.0	111.9	25.64	108.3	25.41	101.1	24.85	97.5	24.52	86.7	23.31	79.4	22.33	61.4	19.29
		-9.6	-10.0	111.9	23.20	108.3	23.03	101.1	22.58	97.5	22.32	86.7	21.32	79.4	20.49	61.4	17.81
		-4.4	-5.0	111.9	20.33	108.3	20.23	101.1	19.93	97.5	19.73	86.7	18.96	79.4	18.30	61.4	16.07
		-1.8	-2.5	111.9	18.76	108.3	18.69	101.1	18.47	97.5	18.32	86.7	17.68	79.4	17.10	61.4	15.12
		0.8	0.0	111.9	17.11	108.3	17.08	101.1	16.96	97.5	16.85	86.7	16.34	79.4	15.86	61.4	14.13
		2.8	2.0	111.9	15.50	108.3	15.51	101.1	15.46	97.5	15.39	86.7	15.03	79.4	14.64	61.4	13.10
		6.0	5.0	111.9	13.77	108.3	13.42	101.1	13.10	97.5	13.08	86.7	12.89	79.4	12.64	61.4	11.46
		7.0	6.0	111.9	13.77	108.3	13.42	101.1	12.70	97.5	12.34	86.7	12.21	79.4	12.02	61.4	11.07
		8.6	7.5	111.9	13.77	108.3	13.42	101.1	12.70	97.5	12.34	86.7	11.27	79.4	11.13	61.4	10.37
		11.2	10.0	111.9	13.77	108.3	13.42	101.1	12.70	97.5	12.34	86.7	11.27	79.4	10.55	61.4	9.27
		16.4	15.0	111.9	13.77	108.3	13.42	101.1	12.70	97.5	12.34	86.7	11.27	79.4	10.55	61.4	8.77
24.0	18.0	111.9	13.77	108.3	13.42	101.1	12.70	97.5	12.34	86.7	11.27	79.4	10.55	61.4	8.77		
100%	40%	-24.9	-25.0	89.6	22.44	86.7	22.26	80.9	21.82	78.0	21.56	69.3	20.58	63.6	19.78	49.1	17.06
		-19.8	-20.0	89.6	21.23	86.7	21.08	80.9	20.71	78.0	20.48	69.3	19.60	63.6	18.86	49.1	16.47
		-14.7	-15.0	89.6	19.65	86.7	19.54	80.9	19.24	78.0	19.06	69.3	18.31	63.6	17.66	49.1	15.52
		-9.6	-10.0	89.6	17.72	86.7	17.65	80.9	17.45	78.0	17.31	69.3	16.72	63.6	16.19	49.1	14.34
		-4.4	-5.0	89.6	15.46	86.7	15.45	80.9	15.36	78.0	15.28	69.3	14.86	63.6	14.45	49.1	12.96
		-1.8	-2.5	89.6	14.22	86.7	14.24	80.9	14.21	78.0	14.16	69.3	13.85	63.6	13.51	49.1	12.20
		0.8	0.0	89.6	12.94	86.7	12.99	80.9	13.00	78.0	12.97	69.3	12.74	63.6	12.47	49.1	11.34
		2.8	2.0	89.6	11.56	86.7	11.58	80.9	11.66	78.0	11.67	69.3	11.57	63.6	11.39	49.1	10.50
		6.0	5.0	89.6	11.56	86.7	11.27	80.9	10.70	78.0	10.41	69.3	9.94	63.6	9.87	49.1	9.27
		7.0	6.0	89.6	11.56	86.7	11.27	80.9	10.70	78.0	10.41	69.3	9.55	63.6	9.40	49.1	8.94
		8.6	7.5	89.6	11.56	86.7	11.27	80.9	10.70	78.0	10.41	69.3	9.55	63.6	8.98	49.1	8.40
		11.2	10.0	89.6	11.56	86.7	11.27	80.9	10.70	78.0	10.41	69.3	9.55	63.6	8.98	49.1	7.56
		16.4	15.0	89.6	11.56	86.7	11.27	80.9	10.70	78.0	10.41	69.3	9.55	63.6	8.98	49.1	7.55
24.0	18.0	89.6	11.56	86.7	11.27	80.9	10.70	78.0	10.41	69.3	9.55	63.6	8.98	49.1	7.55		
100%	30%	-24.9	-25.0	67.2	16.63	65.0	16.55	60.7	16.32	58.5	16.17	52.0	15.56	47.7	15.04	36.8	13.27
		-19.8	-20.0	67.2	15.73	65.0	15.67	60.7	15.48	58.5	15.36	52.0	14.83	47.7	14.36	36.8	12.75
		-14.7	-15.0	67.2	14.55	65.0	14.52	60.7	14.39	58.5	14.29	52.0	13.87	47.7	13.47	36.8	12.03
		-9.6	-10.0	67.2	13.12	65.0	13.12	60.7	13.06	58.5	13.00	52.0	12.68	47.7	12.36	36.8	11.15
		-4.4	-5.0	67.2	11.35	65.0	11.38	60.7	11.40	58.5	11.38	52.0	11.20	47.7	10.98	36.8	10.05
		-1.8	-2.5	67.2	10.33	65.0	10.39	60.7	10.47	58.5	10.47	52.0	10.39	47.7	10.22	36.8	9.45
		0.8	0.0	67.2	9.34	65.0	9.38	60.7	9.50	58.5	9.53	52.0	9.53	47.7	9.43	36.8	8.82
		2.8	2.0	67.2	9.34	65.0	9.12	60.7	8.69	58.5	8.63	52.0	8.70	47.7	8.66	36.8	8.21
		6.0	5.0	67.2	9.34	65.0	9.12	60.7	8.69	58.5	8.48	52.0	7.84	47.7	7.59	36.8	7.35
		7.0	6.0	67.2	9.34	65.0	9.12	60.7	8.69	58.5	8.48	52.0	7.84	47.7	7.41	36.8	7.08
		8.6	7.5	67.2	9.34	65.0	9.12	60.7	8.69	58.5	8.48	52.0	7.84	47.7	7.41	36.8	6.70
		11.2	10.0	67.2	9.34	65.0	9.12	60.7	8.69	58.5	8.48	52.0	7.84	47.7	7.41	36.8	6.33
		16.4	15.0	67.2	9.34	65.0	9.12	60.7	8.69	58.5	8.48	52.0	7.84	47.7	7.41	36.8	6.33
24.0	18.0	67.2	9.34	65.0	9.12	60.7	8.69	58.5	8.48	52.0	7.84	47.7	7.41	36.8	6.33		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-57. 64HP (Cooling) U-16ME2E8+U-16ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	120.0	14.21	144.0	17.05	168.0	19.89	180.0	21.31	204.0	24.15	228.0	27.00	252.0	29.83
		-5.0	120.0	14.22	144.0	17.07	168.0	19.91	180.0	21.33	204.0	24.18	228.0	27.02	252.0	29.85
		0.0	120.0	14.25	144.0	17.09	168.0	19.94	180.0	21.36	204.0	24.20	228.0	27.07	252.0	29.93
		5.0	120.0	14.28	144.0	17.13	168.0	19.98	180.0	21.42	204.0	24.32	228.0	27.25	252.0	30.14
		10.0	120.0	14.32	144.0	17.22	168.0	20.17	180.0	21.67	204.0	24.69	228.0	27.74	252.0	30.69
		15.0	120.0	14.59	144.0	17.71	168.0	20.89	180.0	22.49	204.0	25.73	228.0	28.99	252.0	32.03
		20.0	120.0	16.14	144.0	19.71	168.0	23.93	180.0	26.20	204.0	31.11	228.0	36.48	252.0	42.33
		25.0	120.0	20.63	144.0	25.57	168.0	31.00	180.0	33.89	204.0	40.04	228.0	46.69	252.0	53.83
		30.0	120.0	25.95	144.0	32.09	168.0	38.74	180.0	42.26	204.0	49.69	228.0	57.66	252.0	66.16
		35.0	120.0	31.67	144.0	39.08	168.0	47.04	180.0	51.24	204.0	60.07	228.0	69.48	240.7	71.67
		40.0	120.0	37.83	144.0	46.61	168.0	56.00	180.0	60.93	204.0	71.28	213.2	71.67	222.4	71.67
		43.0	120.0	41.74	144.0	51.40	168.0	61.72	180.0	67.14	194.5	71.67	203.8	71.67	208.5	68.27
		46.0	118.8	45.41	142.6	55.93	151.4	56.90	153.0	55.37	157.1	52.81	162.3	50.79	168.6	49.21
52.0	51.8	19.23	56.4	19.43	61.8	19.80	64.8	20.03	71.4	20.57	78.7	21.17	86.7	21.80		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	108.0	11.48	129.6	14.41	151.2	17.25	162.0	18.65	183.6	21.39	205.2	24.08	226.8	26.70
		-5.0	108.0	11.50	129.6	14.42	151.2	17.27	162.0	18.67	183.6	21.42	205.2	24.10	226.8	26.73
		0.0	108.0	11.52	129.6	14.45	151.2	17.30	162.0	18.70	183.6	21.45	205.2	24.12	226.8	26.75
		5.0	108.0	11.56	129.6	14.49	151.2	17.34	162.0	18.73	183.6	21.48	205.2	24.19	226.8	26.86
		10.0	108.0	11.61	129.6	14.53	151.2	17.41	162.0	18.84	183.6	21.66	205.2	24.44	226.8	27.17
		15.0	108.0	11.72	129.6	14.78	151.2	17.80	162.0	19.29	183.6	22.24	205.2	25.13	226.8	27.96
		20.0	108.0	12.66	129.6	16.04	151.2	19.32	162.0	20.92	183.6	24.05	205.2	27.69	226.8	31.57
		25.0	108.0	16.61	129.6	20.64	151.2	24.83	162.0	26.97	183.6	31.36	205.2	35.86	226.8	40.48
		30.0	108.0	21.55	129.6	26.43	151.2	31.41	162.0	33.94	183.6	39.06	205.2	44.29	226.8	49.65
		35.0	108.0	27.68	129.6	33.60	151.2	39.58	162.0	42.60	183.6	48.72	205.2	55.00	226.8	61.51
		40.0	108.0	33.14	129.6	39.92	151.2	46.76	162.0	50.22	183.6	57.29	205.2	64.66	222.4	71.67
		43.0	108.0	36.50	129.6	43.83	151.2	51.24	162.0	55.01	183.6	62.77	203.8	71.67	208.5	68.27
		46.0	108.0	39.12	129.6	47.55	151.2	56.38	153.0	55.37	157.1	52.81	162.3	50.79	168.6	49.21
52.0	51.8	19.23	56.4	19.43	61.8	19.80	64.8	20.03	71.4	20.57	78.7	21.17	86.7	21.80		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	96.0	9.84	115.2	12.49	134.4	15.07	144.0	16.34	163.2	18.84	182.4	21.29	201.6	23.69
		-5.0	96.0	9.86	115.2	12.50	134.4	15.09	144.0	16.36	163.2	18.86	182.4	21.31	201.6	23.71
		0.0	96.0	9.88	115.2	12.53	134.4	15.11	144.0	16.39	163.2	18.89	182.4	21.34	201.6	23.74
		5.0	96.0	9.90	115.2	12.56	134.4	15.15	144.0	16.42	163.2	18.93	182.4	21.37	201.6	23.77
		10.0	96.0	9.95	115.2	12.60	134.4	15.18	144.0	16.46	163.2	18.98	182.4	21.46	201.6	23.89
		15.0	96.0	10.00	115.2	12.68	134.4	15.33	144.0	16.65	163.2	19.24	182.4	21.79	201.6	24.28
		20.0	96.0	10.42	115.2	13.30	134.4	16.11	144.0	17.48	163.2	20.19	182.4	22.82	201.6	25.38
		25.0	96.0	13.38	115.2	16.43	134.4	19.54	144.0	21.12	163.2	24.30	182.4	27.53	201.6	30.79
		30.0	96.0	17.70	115.2	21.50	134.4	25.32	144.0	27.24	163.2	31.07	182.4	34.92	201.6	38.78
		35.0	96.0	23.09	115.2	27.80	134.4	32.47	144.0	34.79	163.2	39.43	182.4	44.06	201.6	48.71
		40.0	96.0	27.93	115.2	33.38	134.4	38.77	144.0	41.45	163.2	46.78	182.4	52.14	201.6	57.56
		43.0	96.0	30.92	115.2	36.84	134.4	42.68	144.0	45.58	163.2	51.40	182.4	57.27	201.6	63.29
		46.0	96.0	33.03	115.2	39.58	134.4	46.31	144.0	49.74	157.1	52.81	162.3	50.79	168.6	49.21
52.0	51.8	19.23	56.4	19.43	61.8	19.80	64.8	20.03	71.4	20.57	78.7	21.17	86.7	21.80		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	84.0	8.18	100.8	10.53	117.6	12.84	126.0	13.98	142.8	16.22	159.6	18.42	176.4	20.58
		-5.0	84.0	8.19	100.8	10.55	117.6	12.86	126.0	14.00	142.8	16.24	159.6	18.44	176.4	20.60
		0.0	84.0	8.20	100.8	10.56	117.6	12.88	126.0	14.02	142.8	16.26	159.6	18.46	176.4	20.62
		5.0	84.0	8.23	100.8	10.59	117.6	12.90	126.0	14.04	142.8	16.29	159.6	18.49	176.4	20.65
		10.0	84.0	8.26	100.8	10.63	117.6	12.94	126.0	14.08	142.8	16.33	159.6	18.52	176.4	20.68
		15.0	84.0	8.31	100.8	10.67	117.6	12.99	126.0	14.13	142.8	16.40	159.6	18.63	176.4	20.83
		20.0	84.0	8.45	100.8	10.90	117.6	13.30	126.0	14.48	142.8	16.82	159.6	19.10	176.4	21.33
		25.0	84.0	10.13	100.8	12.64	117.6	15.05	126.0	16.23	142.8	18.52	159.6	20.76	176.4	22.93
		30.0	84.0	14.18	100.8	17.04	117.6	19.84	126.0	21.23	142.8	23.96	159.6	26.65	176.4	29.29
		35.0	84.0	18.84	100.8	22.46	117.6	25.99	126.0	27.73	142.8	31.13	159.6	34.46	176.4	37.72
		40.0	84.0	23.06	100.8	27.34	117.6	31.49	126.0	33.51	142.8	37.48	159.6	41.35	176.4	45.15
		43.0	84.0	25.68	100.8	30.35	117.6	34.87	126.0	37.08	142.8	41.40	159.6	45.64	176.4	49.81
		46.0	84.0	27.52	100.8	32.49	117.6	37.48	126.0	39.98	142.8	44.99	159.6	48.20	168.6	49.21
52.0	51.8	19.23	56.4	19.43	61.8	19.80	64.8	20.03	71.4	20.57	78.7	21.17	86.7	21.80		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

64HP (Cooling) U-16ME2E8+U-16ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	72.0	6.48	86.4	8.54	100.8	10.56	108.0	11.56	122.4	13.53	136.8	15.46	151.2	17.36
		-5.0	72.0	6.49	86.4	8.55	100.8	10.57	108.0	11.57	122.4	13.54	136.8	15.47	151.2	17.37
		0.0	72.0	6.50	86.4	8.56	100.8	10.59	108.0	11.59	122.4	13.56	136.8	15.49	151.2	17.39
		5.0	72.0	6.52	86.4	8.58	100.8	10.61	108.0	11.61	122.4	13.58	136.8	15.51	151.2	17.41
		10.0	72.0	6.55	86.4	8.61	100.8	10.64	108.0	11.64	122.4	13.61	136.8	15.55	151.2	17.45
		15.0	72.0	6.59	86.4	8.65	100.8	10.68	108.0	11.68	122.4	13.65	136.8	15.58	151.2	17.48
		20.0	72.0	6.65	86.4	8.72	100.8	10.76	108.0	11.77	122.4	13.77	136.8	15.72	151.2	17.65
		25.0	72.0	7.28	86.4	9.40	100.8	11.46	108.0	12.48	122.4	14.47	136.8	16.42	151.2	18.32
		30.0	72.0	11.02	86.4	13.06	100.8	15.00	108.0	15.94	122.4	17.76	136.8	19.50	151.2	21.15
		35.0	72.0	14.93	86.4	17.61	100.8	20.15	108.0	21.37	122.4	23.73	136.8	25.98	151.2	28.12
		40.0	72.0	18.55	86.4	21.79	100.8	24.86	108.0	26.33	122.4	29.16	136.8	31.86	151.2	34.43
		43.0	72.0	20.78	86.4	24.36	100.8	27.74	108.0	29.36	122.4	32.49	136.8	35.46	151.2	38.30
		46.0	72.0	22.56	86.4	26.23	100.8	29.79	108.0	31.54	122.4	34.98	136.8	38.33	151.2	41.61
52.0	51.8	19.23	56.4	19.43	61.8	19.80	64.8	20.03	71.4	20.57	78.7	21.17	86.7	21.80		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	60.0	4.75	72.0	6.50	84.0	8.22	90.0	9.07	102.0	10.75	114.0	12.40	126.0	14.02
		-5.0	60.0	4.76	72.0	6.51	84.0	8.23	90.0	9.08	102.0	10.76	114.0	12.41	126.0	14.03
		0.0	60.0	4.77	72.0	6.52	84.0	8.24	90.0	9.09	102.0	10.77	114.0	12.42	126.0	14.04
		5.0	60.0	4.78	72.0	6.53	84.0	8.26	90.0	9.11	102.0	10.79	114.0	12.44	126.0	14.06
		10.0	60.0	4.80	72.0	6.56	84.0	8.28	90.0	9.13	102.0	10.81	114.0	12.46	126.0	14.09
		15.0	60.0	4.84	72.0	6.59	84.0	8.31	90.0	9.17	102.0	10.85	114.0	12.50	126.0	14.12
		20.0	60.0	4.89	72.0	6.65	84.0	8.37	90.0	9.22	102.0	10.90	114.0	12.54	126.0	14.16
		25.0	60.0	5.05	72.0	6.81	84.0	8.54	90.0	9.39	102.0	12.44	114.0	12.73	126.0	14.35
		30.0	60.0	8.21	72.0	9.51	84.0	10.50	90.0	11.11	102.0	12.44	114.0	13.86	126.0	15.31
		35.0	60.0	11.37	72.0	13.24	84.0	14.96	90.0	15.76	102.0	17.26	114.0	18.62	126.0	19.87
		40.0	60.0	14.39	72.0	16.72	84.0	18.87	90.0	19.88	102.0	21.76	114.0	23.50	126.0	25.09
		43.0	60.0	16.24	72.0	18.86	84.0	21.27	90.0	22.40	102.0	24.53	114.0	26.49	126.0	28.29
		46.0	60.0	18.13	72.0	20.72	84.0	23.16	90.0	24.33	102.0	26.56	114.0	28.66	126.0	30.64
52.0	51.8	19.23	56.4	19.43	61.8	19.80	64.8	20.03	71.4	20.57	78.7	21.17	86.7	21.80		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	48.0	2.99	57.6	4.41	67.2	5.82	72.0	6.51	81.6	7.89	91.2	9.24	100.8	10.58
		-5.0	48.0	3.00	57.6	4.42	67.2	5.83	72.0	6.52	81.6	7.89	91.2	9.25	100.8	10.59
		0.0	48.0	3.01	57.6	4.43	67.2	5.83	72.0	6.53	81.6	7.90	91.2	9.26	100.8	10.60
		5.0	48.0	3.02	57.6	4.44	67.2	5.85	72.0	6.54	81.6	7.92	91.2	9.28	100.8	10.62
		10.0	48.0	3.03	57.6	4.46	67.2	5.86	72.0	6.56	81.6	7.94	91.2	9.30	100.8	10.64
		15.0	48.0	3.06	57.6	4.48	67.2	5.89	72.0	6.59	81.6	7.96	91.2	9.32	100.8	10.67
		20.0	48.0	3.10	57.6	4.52	67.2	5.93	72.0	6.62	81.6	8.00	91.2	9.36	100.8	10.72
		25.0	48.0	3.18	57.6	4.60	67.2	6.00	72.0	6.69	81.6	8.06	91.2	9.41	100.8	10.79
		30.0	48.0	4.30	57.6	5.28	67.2	6.46	72.0	7.09	81.6	8.36	91.2	9.77	100.8	11.28
		35.0	48.0	8.19	57.6	9.40	67.2	10.45	72.0	10.92	81.6	11.76	91.2	12.80	100.8	14.14
		40.0	48.0	10.59	57.6	12.16	67.2	13.54	72.0	14.16	81.6	15.29	91.2	16.26	100.8	17.09
		43.0	48.0	12.07	57.6	13.87	67.2	15.46	72.0	16.18	81.6	17.49	91.2	18.64	100.8	19.63
		46.0	48.0	14.20	57.6	15.92	67.2	17.49	72.0	18.21	81.6	19.54	91.2	20.74	100.8	21.79
52.0	48.0	16.97	56.4	19.43	61.8	19.80	64.8	20.03	71.4	20.57	78.7	21.17	86.7	21.80		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	36.0	1.20	43.2	2.29	50.4	3.37	54.0	3.91	61.2	4.97	68.4	6.02	75.6	7.05
		-5.0	36.0	1.20	43.2	2.29	50.4	3.37	54.0	3.91	61.2	4.98	68.4	6.03	75.6	7.07
		0.0	36.0	1.21	43.2	2.30	50.4	3.38	54.0	3.92	61.2	4.99	68.4	6.05	75.6	7.08
		5.0	36.0	1.22	43.2	2.31	50.4	3.39	54.0	3.94	61.2	5.01	68.4	6.07	75.6	7.10
		10.0	36.0	1.23	43.2	2.32	50.4	3.41	54.0	3.95	61.2	5.03	68.4	6.09	75.6	7.13
		15.0	36.0	1.25	43.2	2.33	50.4	3.43	54.0	3.98	61.2	5.06	68.4	6.12	75.6	7.17
		20.0	36.0	1.27	43.2	2.36	50.4	3.46	54.0	4.01	61.2	5.10	68.4	6.17	75.6	7.20
		25.0	36.0	1.33	43.2	2.41	50.4	3.51	54.0	4.07	61.2	5.16	68.4	6.26	75.6	7.37
		30.0	36.0	1.50	43.2	2.52	50.4	3.64	54.0	4.27	61.2	5.55	68.4	6.80	75.6	8.01
		35.0	36.0	5.38	43.2	6.09	50.4	6.90	54.0	7.43	61.2	8.49	68.4	9.53	75.6	10.56
		40.0	36.0	7.15	43.2	8.11	50.4	8.89	54.0	9.23	61.2	9.79	68.4	10.22	75.6	10.56
		43.0	36.0	8.26	43.2	9.38	50.4	10.32	54.0	10.72	61.2	11.41	68.4	11.96	75.6	12.37
		46.0	36.0	10.72	43.2	11.77	50.4	12.68	54.0	13.08	61.2	13.77	68.4	14.34	75.6	14.79
52.0	36.0	12.71	43.2	14.08	50.4	15.29	54.0	15.83	61.2	16.36	68.4	16.64	75.6	16.75		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-58. 64HP (Heating) U-16ME2E8+U-16ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	137.1	46.62	133.6	45.82	126.7	44.14	123.1	43.23	112.2	40.34	104.6	38.21	84.5	32.16
		-19.8	-20.0	143.7	47.57	140.2	46.76	133.0	44.99	129.3	44.08	117.9	41.08	109.9	38.88	88.9	32.67
		-14.7	-15.0	153.2	49.05	149.5	48.17	141.9	46.33	138.0	45.36	125.9	42.20	117.5	39.91	95.2	33.43
		-9.6	-10.0	166.1	51.26	162.1	50.21	153.9	48.23	149.8	47.20	136.8	43.82	127.7	41.38	103.5	34.51
		-4.4	-5.0	182.9	53.77	178.6	52.83	169.7	50.82	165.1	49.72	150.8	46.11	140.8	43.45	114.1	35.99
		-1.8	-2.5	193.0	54.75	188.4	53.78	179.0	51.70	174.1	50.56	159.0	46.89	148.5	44.18	120.3	36.60
		0.8	0.0	204.2	55.63	199.3	54.61	189.4	52.41	184.2	51.24	168.2	47.43	157.1	44.66	126.6	36.58
		2.8	2.0	216.2	56.42	211.1	55.36	200.5	53.07	195.1	51.87	178.4	47.99	163.8	43.93	126.6	33.92
		6.0	5.0	230.8	55.36	223.3	53.42	208.4	49.61	201.0	47.74	178.7	42.25	163.8	38.64	126.6	30.03
		7.0	6.0	230.8	52.71	223.3	50.89	208.4	47.30	201.0	45.50	178.7	40.31	163.8	36.94	126.6	28.80
		8.6	7.5	230.8	48.79	223.3	47.12	208.4	43.84	201.0	42.24	178.7	37.52	163.8	34.45	126.6	27.01
		11.2	10.0	230.8	42.58	223.3	41.20	208.4	38.47	201.0	37.13	178.7	33.17	163.8	30.58	126.6	24.22
		16.4	15.0	230.8	31.77	223.3	30.87	208.4	29.07	201.0	28.17	178.7	25.46	163.8	23.63	126.6	19.00
24.0	18.0	230.8	26.00	223.3	25.29	208.4	23.84	201.0	23.11	178.7	20.87	163.8	19.34	126.6	15.44		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	90%	-24.9	-25.0	137.1	46.62	133.6	45.82	126.7	44.14	123.1	43.23	112.2	40.34	104.6	38.21	84.5	32.16
		-19.8	-20.0	143.7	47.57	140.2	46.76	133.0	44.99	129.3	44.08	117.9	41.08	109.9	38.88	88.9	32.67
		-14.7	-15.0	153.2	49.05	149.5	48.17	141.9	46.33	138.0	45.36	125.9	42.20	117.5	39.91	95.2	33.43
		-9.6	-10.0	166.1	51.26	162.1	50.21	153.9	48.23	149.8	47.20	136.8	43.82	127.7	41.38	103.5	34.51
		-4.4	-5.0	182.9	53.77	178.6	52.83	169.7	50.82	165.1	49.72	150.8	46.11	140.8	43.45	113.9	35.99
		-1.8	-2.5	193.0	54.75	188.4	53.78	179.0	51.70	174.1	50.56	159.0	46.89	147.4	44.18	113.9	32.68
		0.8	0.0	204.2	55.63	199.3	54.61	187.6	47.70	180.9	46.13	160.8	41.42	147.4	38.28	113.9	30.41
		2.8	2.0	207.7	47.85	201.0	46.45	187.6	43.66	180.9	42.26	160.8	37.98	147.4	35.36	113.9	28.50
		6.0	5.0	207.7	41.58	201.0	40.59	187.6	38.51	180.9	37.45	160.8	34.14	147.4	31.66	113.9	25.35
		7.0	6.0	207.7	40.77	201.0	39.60	187.6	37.25	180.9	36.08	160.8	32.56	147.4	30.21	113.9	24.29
		8.6	7.5	207.7	37.51	201.0	36.47	187.6	34.39	180.9	33.35	160.8	30.22	147.4	28.11	113.9	22.75
		11.2	10.0	207.7	32.39	201.0	31.58	187.6	29.93	180.9	29.10	160.8	26.56	147.4	24.84	113.9	20.36
		16.4	15.0	207.7	23.55	201.0	23.08	187.6	22.12	180.9	21.62	160.8	20.02	147.4	18.89	113.9	15.78
24.0	18.0	207.7	23.26	201.0	22.61	187.6	21.29	180.9	20.63	160.8	18.66	147.4	17.34	113.9	14.05		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	80%	-24.9	-25.0	137.1	46.62	133.6	45.82	126.7	44.14	123.1	43.23	112.2	40.34	104.6	38.21	84.5	32.16
		-19.8	-20.0	143.7	47.57	140.2	46.76	133.0	44.99	129.3	44.08	117.9	41.08	109.9	38.88	88.9	32.67
		-14.7	-15.0	153.2	49.05	149.5	48.17	141.9	46.33	138.0	45.36	125.9	42.20	117.5	39.91	95.2	33.43
		-9.6	-10.0	166.1	51.26	162.1	50.21	153.9	48.23	149.8	47.20	136.8	43.82	127.7	41.38	101.2	34.51
		-4.4	-5.0	182.9	53.77	178.6	52.83	166.8	43.00	160.8	41.80	142.9	38.11	131.0	35.57	101.2	28.91
		-1.8	-2.5	184.6	42.98	178.7	41.96	166.8	39.86	160.8	38.79	142.9	35.47	131.0	33.19	101.2	27.28
		0.8	0.0	184.6	39.26	178.7	38.29	166.8	36.65	160.8	35.78	142.9	33.01	131.0	31.03	101.2	25.60
		2.8	2.0	184.6	36.12	178.7	35.43	166.8	33.96	160.8	33.18	142.9	30.68	131.0	28.89	101.2	23.92
		6.0	5.0	184.6	31.93	178.7	31.37	166.8	30.15	160.8	29.49	142.9	27.37	131.0	25.74	101.2	21.27
		7.0	6.0	184.6	31.07	178.7	30.40	166.8	29.01	160.8	28.30	142.9	26.08	131.0	24.53	101.2	20.37
		8.6	7.5	184.6	28.39	178.7	27.83	166.8	26.65	160.8	26.04	142.9	24.13	131.0	22.77	101.2	19.06
		11.2	10.0	184.6	24.22	178.7	23.82	166.8	22.97	160.8	22.53	142.9	21.07	131.0	20.01	101.2	17.02
		16.4	15.0	184.6	21.00	178.7	20.41	166.8	19.24	160.8	18.66	142.9	16.90	131.0	15.73	101.2	13.07
24.0	18.0	184.6	21.00	178.7	20.41	166.8	19.24	160.8	18.66	142.9	16.90	131.0	15.73	101.2	12.81		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	70%	-24.9	-25.0	137.1	46.62	133.6	45.82	126.7	44.14	123.1	43.23	112.2	40.34	104.6	38.21	84.5	32.16
		-19.8	-20.0	143.7	47.57	140.2	46.76	133.0	44.99	129.3	44.08	117.9	41.08	109.9	38.88	88.6	32.67
		-14.7	-15.0	153.2	49.05	149.5	48.17	141.9	46.33	138.0	45.36	125.1	42.20	114.6	39.91	88.6	28.69
		-9.6	-10.0	161.5	40.13	156.3	39.35	145.9	37.70	140.7	36.83	125.1	34.07	114.6	32.09	88.6	26.77
		-4.4	-5.0	161.5	35.08	156.3	34.54	145.9	33.34	140.7	32.68	125.1	30.51	114.6	28.88	88.6	24.25
		-1.8	-2.5	161.5	32.72	156.3	32.23	145.9	31.16	140.7	30.56	125.1	28.60	114.6	27.12	88.6	22.86
		0.8	0.0	161.5	30.23	156.3	29.80	145.9	28.86	140.7	28.34	125.1	26.59	114.6	25.26	88.6	21.40
		2.8	2.0	161.5	27.75	156.3	27.40	145.9	26.60	140.7	26.15	125.1	24.62	114.6	23.44	88.6	19.96
		6.0	5.0	161.5	24.23	156.3	23.97	145.9	23.36	140.7	23.01	125.1	21.76	114.6	20.75	88.6	17.71
		7.0	6.0	161.5	23.31	156.3	23.00	145.9	22.32	140.7	21.94	125.1	20.69	114.6	19.75	88.6	16.96
		8.6	7.5	161.5	21.16	156.3	20.93	145.9	20.40	140.7	20.11	125.1	19.08	114.6	18.29	88.6	15.87
		11.2	10.0	161.5	18.73	156.3	18.22	145.9	17.48	140.7	17.29	125.1	16.60	114.6	16.02	88.6	14.15
		16.4	15.0	161.5	18.73	156.3	18.22	145.9	17.19	140.7	16.68	125.1	15.15	114.6	14.12	88.6	11.56
24.0	18.0	161.5	18.73	156.3	18.22	145.9	17.19	140.7	16.68	125.1	15.15	114.6	14.12	88.6	11.56		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

64HP (Heating) U-16ME2E8+U-16ME2E8+U-16ME2E8+U-16ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	137.1	46.62	133.6	45.82	125.1	36.98	120.6	36.21	107.2	33.61	98.3	31.51	75.9	25.99
		-19.8	-20.0	138.5	36.73	134.0	36.14	125.1	34.88	120.6	34.20	107.2	31.96	98.3	30.30	75.9	25.07
		-14.7	-15.0	138.5	33.88	134.0	33.42	125.1	32.41	120.6	31.85	107.2	29.92	98.3	28.46	75.9	24.12
		-9.6	-10.0	138.5	30.84	134.0	30.47	125.1	29.62	120.6	29.14	107.2	27.48	98.3	26.18	75.9	22.31
		-4.4	-5.0	138.5	27.26	134.0	26.98	125.1	26.31	120.6	25.92	107.2	24.56	98.3	23.48	75.9	20.17
		-1.8	-2.5	138.5	25.29	134.0	25.05	125.1	24.48	120.6	24.14	107.2	22.95	98.3	21.98	75.9	18.99
		0.8	0.0	138.5	23.21	134.0	23.03	125.1	22.57	120.6	22.29	107.2	21.27	98.3	20.43	75.9	17.76
		2.8	2.0	138.5	21.16	134.0	21.03	125.1	20.69	120.6	20.47	107.2	19.62	98.3	18.90	75.9	16.54
		6.0	5.0	138.5	18.24	134.0	18.18	125.1	17.96	120.6	17.81	107.2	17.16	98.3	16.57	75.9	14.55
		7.0	6.0	138.5	17.27	134.0	17.20	125.1	16.98	120.6	16.84	107.2	16.27	98.3	15.76	75.9	14.02
		8.6	7.5	138.5	16.46	134.0	16.02	125.1	15.49	120.6	15.40	107.2	14.98	98.3	14.58	75.9	13.12
		11.2	10.0	138.5	16.46	134.0	16.02	125.1	15.15	120.6	14.71	107.2	13.39	98.3	12.77	75.9	11.70
		16.4	15.0	138.5	16.46	134.0	16.02	125.1	15.15	120.6	14.71	107.2	13.39	98.3	12.51	75.9	10.32
24.0	18.0	138.5	16.46	134.0	16.02	125.1	15.15	120.6	14.71	107.2	13.39	98.3	12.51	75.9	10.32		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	115.4	30.03	111.7	29.69	104.2	28.91	100.5	28.47	89.3	26.93	81.9	25.70	63.3	21.58
		-19.8	-20.0	115.4	28.47	111.7	28.18	104.2	27.48	100.5	27.07	89.3	25.66	81.9	24.54	63.3	21.02
		-14.7	-15.0	115.4	26.43	111.7	26.19	104.2	25.60	100.5	25.26	89.3	24.00	81.9	23.00	63.3	19.87
		-9.6	-10.0	115.4	23.93	111.7	23.75	104.2	23.29	100.5	23.01	89.3	21.97	81.9	21.11	63.3	18.36
		-4.4	-5.0	115.4	21.00	111.7	20.89	104.2	20.57	100.5	20.36	89.3	19.56	81.9	18.87	63.3	16.58
		-1.8	-2.5	115.4	19.39	111.7	19.32	104.2	19.09	100.5	18.92	89.3	18.25	81.9	17.65	63.3	15.60
		0.8	0.0	115.4	17.70	111.7	17.67	104.2	17.53	100.5	17.41	89.3	16.89	81.9	16.38	63.3	14.59
		2.8	2.0	115.4	16.05	111.7	16.06	104.2	16.00	100.5	15.93	89.3	15.54	81.9	15.13	63.3	13.55
		6.0	5.0	115.4	14.20	111.7	13.83	104.2	13.62	100.5	13.59	89.3	13.37	81.9	13.10	63.3	11.87
		7.0	6.0	115.4	14.20	111.7	13.83	104.2	13.10	100.5	12.83	89.3	12.68	81.9	12.46	63.3	11.48
		8.6	7.5	115.4	14.20	111.7	13.83	104.2	13.10	100.5	12.73	89.3	11.70	81.9	11.55	63.3	10.76
		11.2	10.0	115.4	14.20	111.7	13.83	104.2	13.10	100.5	12.73	89.3	11.64	81.9	10.90	63.3	9.62
		16.4	15.0	115.4	14.20	111.7	13.83	104.2	13.10	100.5	12.73	89.3	11.64	81.9	10.90	63.3	9.08
24.0	18.0	115.4	14.20	111.7	13.83	104.2	13.10	100.5	12.73	89.3	11.64	81.9	10.90	63.3	9.08		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	92.3	23.11	89.3	22.92	83.4	22.47	80.4	22.20	71.5	21.19	65.5	20.36	50.6	17.57
		-19.8	-20.0	92.3	21.86	89.3	21.72	83.4	21.33	80.4	21.09	71.5	20.18	65.5	19.42	50.6	16.97
		-14.7	-15.0	92.3	20.25	89.3	20.14	83.4	19.83	80.4	19.64	71.5	18.87	65.5	18.20	50.6	16.00
		-9.6	-10.0	92.3	18.28	89.3	18.21	83.4	18.00	80.4	17.85	71.5	17.25	65.5	16.69	50.6	14.80
		-4.4	-5.0	92.3	15.97	89.3	15.96	83.4	15.86	80.4	15.77	71.5	15.34	65.5	14.92	50.6	13.38
		-1.8	-2.5	92.3	14.70	89.3	14.72	83.4	14.69	80.4	14.63	71.5	14.31	65.5	13.96	50.6	12.60
		0.8	0.0	92.3	13.39	89.3	13.44	83.4	13.47	80.4	13.45	71.5	13.20	65.5	12.91	50.6	11.74
		2.8	2.0	92.3	11.98	89.3	12.04	83.4	12.11	80.4	12.11	71.5	12.00	65.5	11.80	50.6	10.88
		6.0	5.0	92.3	11.93	89.3	11.64	83.4	11.05	80.4	10.76	71.5	10.32	65.5	10.24	50.6	9.61
		7.0	6.0	92.3	11.93	89.3	11.64	83.4	11.05	80.4	10.76	71.5	9.88	65.5	9.77	50.6	9.28
		8.6	7.5	92.3	11.93	89.3	11.64	83.4	11.05	80.4	10.76	71.5	9.88	65.5	9.30	50.6	8.72
		11.2	10.0	92.3	11.93	89.3	11.64	83.4	11.05	80.4	10.76	71.5	9.88	65.5	9.30	50.6	7.86
		16.4	15.0	92.3	11.93	89.3	11.64	83.4	11.05	80.4	10.76	71.5	9.88	65.5	9.30	50.6	7.83
24.0	18.0	92.3	11.93	89.3	11.64	83.4	11.05	80.4	10.76	71.5	9.88	65.5	9.30	50.6	7.83		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	69.2	17.15	67.0	17.06	62.5	16.82	60.3	16.67	53.6	16.05	49.1	15.51	38.0	13.69
		-19.8	-20.0	69.2	16.22	67.0	16.16	62.5	15.97	60.3	15.84	53.6	15.30	49.1	14.81	38.0	13.16
		-14.7	-15.0	69.2	15.02	67.0	14.99	62.5	14.85	60.3	14.75	53.6	14.31	49.1	13.90	38.0	12.42
		-9.6	-10.0	69.2	13.56	67.0	13.56	62.5	13.49	60.3	13.43	53.6	13.10	49.1	12.77	38.0	11.53
		-4.4	-5.0	69.2	11.77	67.0	11.81	62.5	11.82	60.3	11.80	53.6	11.61	49.1	11.37	38.0	10.41
		-1.8	-2.5	69.2	10.73	67.0	10.79	62.5	10.86	60.3	10.87	53.6	10.77	49.1	10.60	38.0	9.79
		0.8	0.0	69.2	9.68	67.0	9.75	62.5	9.87	60.3	9.90	53.6	9.89	49.1	9.79	38.0	9.15
		2.8	2.0	69.2	9.66	67.0	9.44	62.5	9.00	60.3	8.97	53.6	9.03	49.1	8.99	38.0	8.53
		6.0	5.0	69.2	9.66	67.0	9.44	62.5	9.00	60.3	8.78	53.6	8.13	49.1	7.89	38.0	7.64
		7.0	6.0	69.2	9.66	67.0	9.44	62.5	9.00	60.3	8.78	53.6	8.13	49.1	7.69	38.0	7.37
		8.6	7.5	69.2	9.66	67.0	9.44	62.5	9.00	60.3	8.78	53.6	8.13	49.1	7.69	38.0	6.97
		11.2	10.0	69.2	9.66	67.0	9.44	62.5	9.00	60.3	8.78	53.6	8.13	49.1	7.69	38.0	6.59
		16.4	15.0	69.2	9.66	67.0	9.44	62.5	9.00	60.3	8.78	53.6	8.13	49.1	7.69	38.0	6.59
24.0	18.0	69.2	9.66	67.0	9.44	62.5	9.00	60.3	8.78	53.6	8.13	49.1	7.69	38.0	6.59		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-59. 66HP (Cooling) U-10ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	123.3	14.45	148.0	17.33	172.7	20.22	185.0	21.66	209.7	24.55	234.3	27.44	259.0	30.32
		-5.0	123.3	14.47	148.0	17.36	172.7	20.25	185.0	21.70	209.7	24.59	234.3	27.48	259.0	30.36
		0.0	123.3	14.50	148.0	17.40	172.7	20.29	185.0	21.74	209.7	24.63	234.3	27.53	259.0	30.43
		5.0	123.3	14.55	148.0	17.45	172.7	20.34	185.0	21.80	209.7	24.74	234.3	27.73	259.0	30.67
		10.0	123.3	14.61	148.0	17.54	172.7	20.55	185.0	22.08	209.7	25.17	234.3	28.32	259.0	31.34
		15.0	123.3	14.90	148.0	18.11	172.7	21.42	185.0	23.10	209.7	26.49	234.3	29.92	259.0	33.07
		20.0	123.3	16.85	148.0	20.68	172.7	24.95	185.0	27.26	209.7	32.23	234.3	37.68	259.0	43.61
		25.0	123.3	21.61	148.0	26.62	172.7	32.12	185.0	35.05	209.7	41.29	234.3	48.03	259.0	55.27
		30.0	123.3	27.00	148.0	33.22	172.7	39.97	185.0	43.53	209.7	51.07	234.3	59.15	259.0	67.77
		35.0	123.3	32.80	148.0	40.31	172.7	48.39	185.0	52.64	209.7	61.59	234.3	71.13	247.8	73.63
		40.0	123.3	39.04	148.0	47.95	172.7	57.47	185.0	62.47	209.7	72.95	219.6	73.63	229.0	73.63
		43.0	123.3	43.01	148.0	52.80	172.7	63.27	185.0	68.76	200.3	73.63	209.9	73.63	214.3	69.90
		46.0	122.1	46.73	146.5	57.40	155.6	58.38	157.3	56.83	161.5	54.23	166.8	52.19	173.3	50.58
52.0	53.2	20.19	57.9	20.39	63.5	20.77	66.6	21.00	73.4	21.54	80.9	22.15	89.1	22.80		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	111.0	11.64	133.2	14.62	155.4	17.51	166.5	18.94	188.7	21.73	210.9	24.46	233.1	27.13
		-5.0	111.0	11.67	133.2	14.64	155.4	17.54	166.5	18.97	188.7	21.76	210.9	24.49	233.1	27.17
		0.0	111.0	11.70	133.2	14.68	155.4	17.58	166.5	19.01	188.7	21.81	210.9	24.54	233.1	27.20
		5.0	111.0	11.74	133.2	14.73	155.4	17.64	166.5	19.06	188.7	21.85	210.9	24.60	233.1	27.31
		10.0	111.0	11.81	133.2	14.79	155.4	17.71	166.5	19.16	188.7	22.04	210.9	24.88	233.1	27.67
		15.0	111.0	11.94	133.2	15.06	155.4	18.16	166.5	19.70	188.7	22.74	210.9	25.73	233.1	28.66
		20.0	111.0	13.07	133.2	16.62	155.4	20.08	166.5	21.77	188.7	25.07	210.9	28.76	233.1	32.69
		25.0	111.0	17.57	133.2	21.64	155.4	25.87	166.5	28.04	188.7	32.47	210.9	37.03	233.1	41.71
		30.0	111.0	22.56	133.2	27.49	155.4	32.53	166.5	35.08	188.7	40.27	210.9	45.57	233.1	51.00
		35.0	111.0	28.79	133.2	34.77	155.4	40.83	166.5	43.88	188.7	50.08	210.9	56.45	233.1	63.05
		40.0	111.0	34.30	133.2	41.17	155.4	48.10	166.5	51.61	188.7	58.77	210.9	66.24	229.0	73.63
		43.0	111.0	37.71	133.2	45.13	155.4	52.64	166.5	56.46	188.7	64.32	209.9	73.63	214.3	69.90
		46.0	111.0	40.36	133.2	48.89	155.4	57.85	157.3	56.83	161.5	54.23	166.8	52.19	173.3	50.58
52.0	53.2	20.19	57.9	20.39	63.5	20.77	66.6	21.00	73.4	21.54	80.9	22.15	89.1	22.80		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	98.7	9.97	118.4	12.66	138.1	15.29	148.0	16.59	167.7	19.13	187.5	21.62	207.2	24.06
		-5.0	98.7	9.99	118.4	12.69	138.1	15.32	148.0	16.61	167.7	19.16	187.5	21.65	207.2	24.09
		0.0	98.7	10.02	118.4	12.72	138.1	15.35	148.0	16.65	167.7	19.20	187.5	21.69	207.2	24.13
		5.0	98.7	10.06	118.4	12.76	138.1	15.40	148.0	16.69	167.7	19.24	187.5	21.74	207.2	24.17
		10.0	98.7	10.11	118.4	12.82	138.1	15.46	148.0	16.75	167.7	19.30	187.5	21.82	207.2	24.30
		15.0	98.7	10.20	118.4	12.91	138.1	15.61	148.0	16.95	167.7	19.59	187.5	22.20	207.2	24.76
		20.0	98.7	10.66	118.4	13.63	138.1	16.54	148.0	17.96	167.7	20.76	187.5	23.49	207.2	26.14
		25.0	98.7	14.31	118.4	17.39	138.1	20.53	148.0	22.12	167.7	25.34	187.5	28.60	207.2	31.90
		30.0	98.7	18.67	118.4	22.51	138.1	26.37	148.0	28.31	167.7	32.19	187.5	36.08	207.2	39.99
		35.0	98.7	24.14	118.4	28.90	138.1	33.62	148.0	35.98	167.7	40.67	187.5	45.37	207.2	50.08
		40.0	98.7	29.03	118.4	34.55	138.1	40.00	148.0	42.72	167.7	48.12	187.5	53.55	207.2	59.05
		43.0	98.7	32.05	118.4	38.05	138.1	43.96	148.0	46.91	167.7	52.80	187.5	58.76	207.2	64.85
		46.0	98.7	34.18	118.4	40.82	138.1	47.64	148.0	51.12	161.5	54.23	166.8	52.19	173.3	50.58
52.0	53.2	20.19	57.9	20.39	63.5	20.77	66.6	21.00	73.4	21.54	80.9	22.15	89.1	22.80		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	86.3	8.28	103.6	10.67	120.9	13.02	129.5	14.18	146.8	16.46	164.0	18.70	181.3	20.89
		-5.0	86.3	8.29	103.6	10.69	120.9	13.04	129.5	14.20	146.8	16.49	164.0	18.72	181.3	20.92
		0.0	86.3	8.32	103.6	10.72	120.9	13.07	129.5	14.23	146.8	16.51	164.0	18.75	181.3	20.95
		5.0	86.3	8.35	103.6	10.75	120.9	13.11	129.5	14.27	146.8	16.55	164.0	18.80	181.3	20.99
		10.0	86.3	8.39	103.6	10.80	120.9	13.16	129.5	14.32	146.8	16.61	164.0	18.85	181.3	21.04
		15.0	86.3	8.47	103.6	10.88	120.9	13.23	129.5	14.39	146.8	16.69	164.0	18.95	181.3	21.19
		20.0	86.3	8.62	103.6	11.11	120.9	13.57	129.5	14.78	146.8	17.16	164.0	19.50	181.3	21.79
		25.0	86.3	10.69	103.6	13.29	120.9	15.77	129.5	16.98	146.8	19.33	164.0	21.61	181.3	23.84
		30.0	86.3	15.12	103.6	18.00	120.9	20.83	129.5	22.23	146.8	24.99	164.0	27.71	181.3	30.39
		35.0	86.3	19.85	103.6	23.51	120.9	27.08	129.5	28.83	146.8	32.27	164.0	35.64	181.3	38.94
		40.0	86.3	24.12	103.6	28.44	120.9	32.63	129.5	34.68	146.8	38.70	164.0	42.62	181.3	46.47
		43.0	86.3	26.76	103.6	31.48	120.9	36.05	129.5	38.29	146.8	42.67	164.0	46.96	181.3	51.19
		46.0	86.3	28.59	103.6	33.64	120.9	38.69	129.5	41.22	146.8	46.30	164.0	49.55	173.3	50.58
52.0	53.2	20.19	57.9	20.39	63.5	20.77	66.6	21.00	73.4	21.54	80.9	22.15	89.1	22.80		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

66HP (Cooling) U-10ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8 Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	74.0	6.55	88.8	8.64	103.6	10.70	111.0	11.71	125.8	13.72	140.6	15.68	155.4	17.61
		-5.0	74.0	6.56	88.8	8.66	103.6	10.72	111.0	11.73	125.8	13.73	140.6	15.70	155.4	17.63
		0.0	74.0	6.58	88.8	8.68	103.6	10.74	111.0	11.75	125.8	13.76	140.6	15.73	155.4	17.66
		5.0	74.0	6.61	88.8	8.71	103.6	10.77	111.0	11.78	125.8	13.79	140.6	15.76	155.4	17.69
		10.0	74.0	6.64	88.8	8.74	103.6	10.81	111.0	11.83	125.8	13.83	140.6	15.80	155.4	17.73
		15.0	74.0	6.70	88.8	8.81	103.6	10.87	111.0	11.89	125.8	13.90	140.6	15.86	155.4	17.79
		20.0	74.0	6.80	88.8	8.90	103.6	10.96	111.0	11.99	125.8	14.01	140.6	16.00	155.4	17.96
		25.0	74.0	7.51	88.8	9.68	103.6	11.79	111.0	12.82	125.8	14.85	140.6	16.83	155.4	18.77
		30.0	74.0	11.93	88.8	13.99	103.6	15.95	111.0	16.90	125.8	18.73	140.6	20.48	155.4	22.16
		35.0	74.0	15.90	88.8	18.61	103.6	21.17	111.0	22.41	125.8	24.79	140.6	27.06	155.4	29.22
		40.0	74.0	19.56	88.8	22.83	103.6	25.93	111.0	27.42	125.8	30.28	140.6	33.01	155.4	35.61
		43.0	74.0	21.81	88.8	25.43	103.6	28.84	111.0	30.49	125.8	33.64	140.6	36.65	155.4	39.53
		46.0	74.0	23.57	88.8	27.28	103.6	30.90	111.0	32.67	125.8	36.16	140.6	39.56	155.4	42.88
52.0	53.2	20.19	57.9	20.39	63.5	20.77	66.6	21.00	73.4	21.54	80.9	22.15	89.1	22.80		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	61.7	4.79	74.0	6.57	86.3	8.32	92.5	9.18	104.8	10.89	117.2	12.57	129.5	14.21
		-5.0	61.7	4.80	74.0	6.58	86.3	8.33	92.5	9.19	104.8	10.90	117.2	12.58	129.5	14.23
		0.0	61.7	4.82	74.0	6.60	86.3	8.35	92.5	9.21	104.8	10.92	117.2	12.60	129.5	14.25
		5.0	61.7	4.84	74.0	6.62	86.3	8.37	92.5	9.24	104.8	10.95	117.2	12.63	129.5	14.27
		10.0	61.7	4.87	74.0	6.65	86.3	8.40	92.5	9.27	104.8	10.98	117.2	12.66	129.5	14.31
		15.0	61.7	4.91	74.0	6.69	86.3	8.45	92.5	9.32	104.8	11.03	117.2	12.71	129.5	14.36
		20.0	61.7	4.99	74.0	6.77	86.3	8.53	92.5	9.39	104.8	11.10	117.2	12.78	129.5	14.42
		25.0	61.7	5.17	74.0	6.96	86.3	8.71	92.5	9.58	104.8	12.70	117.2	12.96	129.5	14.61
		30.0	61.7	9.10	74.0	10.35	86.3	11.15	92.5	11.70	104.8	12.97	117.2	14.35	129.5	15.78
		35.0	61.7	12.32	74.0	14.21	86.3	15.93	92.5	16.74	104.8	18.25	117.2	19.63	129.5	20.90
		40.0	61.7	15.36	74.0	17.72	86.3	19.88	92.5	20.90	104.8	22.80	117.2	24.55	129.5	26.16
		43.0	61.7	17.23	74.0	19.88	86.3	22.31	92.5	23.45	104.8	25.60	117.2	27.58	129.5	29.40
		46.0	61.7	19.08	74.0	21.70	86.3	24.17	92.5	25.36	104.8	27.62	117.2	29.75	129.5	31.76
52.0	53.2	20.19	57.9	20.39	63.5	20.77	66.6	21.00	73.4	21.54	80.9	22.15	89.1	22.80		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	49.3	3.00	59.2	4.45	69.1	5.88	74.0	6.58	83.9	7.98	93.7	9.36	103.6	10.72
		-5.0	49.3	3.01	59.2	4.46	69.1	5.89	74.0	6.59	83.9	7.99	93.7	9.37	103.6	10.74
		0.0	49.3	3.02	59.2	4.47	69.1	5.90	74.0	6.61	83.9	8.00	93.7	9.39	103.6	10.75
		5.0	49.3	3.04	59.2	4.49	69.1	5.92	74.0	6.62	83.9	8.02	93.7	9.41	103.6	10.78
		10.0	49.3	3.06	59.2	4.51	69.1	5.94	74.0	6.65	83.9	8.05	93.7	9.43	103.6	10.81
		15.0	49.3	3.09	59.2	4.54	69.1	5.97	74.0	6.68	83.9	8.08	93.7	9.47	103.6	10.85
		20.0	49.3	3.15	59.2	4.60	69.1	6.03	74.0	6.74	83.9	8.13	93.7	9.52	103.6	10.91
		25.0	49.3	3.27	59.2	4.71	69.1	6.13	74.0	6.83	83.9	8.22	93.7	9.60	103.6	10.99
		30.0	49.3	4.60	59.2	5.49	69.1	6.65	74.0	7.27	83.9	8.55	93.7	9.99	103.6	11.55
		35.0	49.3	9.11	59.2	10.33	69.1	11.39	74.0	11.86	83.9	12.71	93.7	13.76	103.6	15.11
		40.0	49.3	11.52	59.2	13.11	69.1	14.50	74.0	15.13	83.9	16.27	93.7	17.25	103.6	18.09
		43.0	49.3	13.02	59.2	14.83	69.1	16.44	74.0	17.17	83.9	18.49	93.7	19.65	103.6	20.65
		46.0	49.3	15.09	59.2	16.84	69.1	18.42	74.0	19.15	83.9	20.51	93.7	21.72	103.6	22.79
52.0	49.3	17.90	57.9	20.39	63.5	20.77	66.6	21.00	73.4	21.54	80.9	22.15	89.1	22.80		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	37.0	1.18	44.4	2.29	51.8	3.39	55.5	3.94	62.9	5.03	70.3	6.10	77.7	7.15
		-5.0	37.0	1.19	44.4	2.29	51.8	3.40	55.5	3.95	62.9	5.04	70.3	6.11	77.7	7.17
		0.0	37.0	1.20	44.4	2.30	51.8	3.41	55.5	3.96	62.9	5.06	70.3	6.13	77.7	7.19
		5.0	37.0	1.21	44.4	2.31	51.8	3.42	55.5	3.98	62.9	5.08	70.3	6.16	77.7	7.22
		10.0	37.0	1.22	44.4	2.33	51.8	3.44	55.5	4.00	62.9	5.11	70.3	6.19	77.7	7.26
		15.0	37.0	1.25	44.4	2.35	51.8	3.47	55.5	4.03	62.9	5.15	70.3	6.24	77.7	7.30
		20.0	37.0	1.28	44.4	2.39	51.8	3.51	55.5	4.08	62.9	5.20	70.3	6.30	77.7	7.36
		25.0	37.0	1.36	44.4	2.46	51.8	3.59	55.5	4.17	62.9	5.28	70.3	6.40	77.7	7.53
		30.0	37.0	1.57	44.4	2.61	51.8	3.74	55.5	4.39	62.9	5.72	70.3	7.03	77.7	8.29
		35.0	37.0	6.28	44.4	6.99	51.8	7.81	55.5	8.35	62.9	9.41	70.3	10.46	77.7	11.50
		40.0	37.0	8.07	44.4	9.03	51.8	9.82	55.5	10.15	62.9	12.72	70.3	11.16	77.7	11.50
		43.0	37.0	9.18	44.4	10.31	51.8	11.26	55.5	11.66	62.9	12.36	70.3	12.91	77.7	13.33
		46.0	37.0	11.56	44.4	12.63	51.8	13.55	55.5	13.95	62.9	14.66	70.3	15.23	77.7	15.69
52.0	37.0	13.58	44.4	14.97	51.8	16.19	55.5	16.74	62.9	17.28	70.3	17.56	77.7	17.68		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-60. 66HP (Heating) U-10ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	100%	-24.9	-25.0	152.5	56.33	148.7	55.31	140.7	53.13	136.7	52.00	124.3	48.34	115.7	45.66	93.1	38.21
		-19.8	-20.0	160.1	57.57	156.1	56.51	147.8	54.26	143.7	53.08	130.7	49.28	121.7	46.51	98.0	38.84
		-14.7	-15.0	170.8	59.47	166.6	58.35	157.9	55.96	153.5	54.71	139.8	50.71	130.2	47.81	105.0	39.78
		-9.6	-10.0	185.4	62.16	180.8	60.93	171.5	58.36	166.7	57.02	151.9	52.70	141.6	49.61	114.2	41.06
		-4.4	-5.0	204.3	65.96	199.3	64.55	189.0	61.59	183.7	60.04	167.4	55.12	156.0	51.65	125.8	42.65
		-1.8	-2.5	215.5	67.87	210.2	66.45	199.4	63.47	193.8	61.91	176.5	56.93	164.5	53.38	130.3	42.80
		0.8	0.0	228.0	69.39	222.4	67.92	210.9	64.83	205.0	63.19	184.0	56.69	168.7	51.83	130.3	40.10
		2.8	2.0	237.7	68.74	230.0	66.32	214.7	61.57	207.0	59.24	184.0	52.40	168.7	47.97	130.3	37.28
		6.0	5.0	237.7	60.15	230.0	58.10	214.7	54.06	207.0	52.08	184.0	46.24	168.7	42.37	130.3	33.15
		7.0	6.0	237.7	57.38	230.0	55.44	214.7	51.63	207.0	49.70	184.0	44.17	168.7	40.57	130.3	31.84
		8.6	7.5	237.7	53.24	230.0	51.47	214.7	47.99	207.0	46.28	184.0	41.24	168.7	37.95	130.3	29.95
		11.2	10.0	237.7	46.77	230.0	45.29	214.7	42.38	207.0	40.93	184.0	36.67	168.7	33.88	130.3	26.99
		16.4	15.0	237.7	35.48	230.0	34.48	214.7	32.50	207.0	31.50	184.0	28.50	168.7	26.48	130.3	21.37
		24.0	18.0	237.7	29.21	230.0	28.40	214.7	26.77	207.0	25.94	184.0	23.43	168.7	21.73	130.3	17.44

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	90%	-24.9	-25.0	152.5	56.33	148.7	55.31	140.7	53.13	136.7	52.00	124.3	48.34	115.7	45.66	93.1	38.21
		-19.8	-20.0	160.1	57.57	156.1	56.51	147.8	54.26	143.7	53.08	130.7	49.28	121.7	46.51	98.0	38.84
		-14.7	-15.0	170.8	59.47	166.6	58.35	157.9	55.96	153.5	54.71	139.8	50.71	130.2	47.81	105.0	39.78
		-9.6	-10.0	185.4	62.16	180.8	60.93	171.5	58.36	166.7	57.02	151.9	52.70	141.6	49.61	114.2	41.06
		-4.4	-5.0	204.3	65.96	199.3	64.55	189.0	61.59	183.7	60.04	165.6	52.20	151.8	48.19	117.3	38.18
		-1.8	-2.5	213.9	61.75	207.0	59.89	193.2	56.19	186.3	54.35	165.6	48.82	151.8	45.13	117.3	35.91
		0.8	0.0	213.9	56.91	207.0	55.25	193.2	51.92	186.3	50.26	165.6	45.26	151.8	41.92	117.3	33.51
		2.8	2.0	213.9	52.08	207.0	50.61	193.2	47.65	186.3	46.17	165.6	41.70	151.8	38.74	117.3	31.38
		6.0	5.0	213.9	45.49	207.0	44.40	193.2	42.16	186.3	41.00	165.6	37.41	151.8	34.81	117.3	28.07
		7.0	6.0	213.9	44.45	207.0	43.22	193.2	40.75	186.3	39.51	165.6	35.78	151.8	33.28	117.3	26.94
		8.6	7.5	213.9	41.04	207.0	39.95	193.2	37.75	186.3	36.65	165.6	33.31	151.8	31.06	117.3	25.32
		11.2	10.0	213.9	35.70	207.0	34.83	193.2	33.08	186.3	32.19	165.6	29.47	151.8	27.61	117.3	22.77
		16.4	15.0	213.9	26.40	207.0	25.89	193.2	24.82	186.3	24.26	165.6	22.50	151.8	21.24	117.3	17.83
		24.0	18.0	213.9	25.86	207.0	25.15	193.2	23.73	186.3	23.02	165.6	20.89	151.8	19.47	117.3	15.92

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	80%	-24.9	-25.0	152.5	56.33	148.7	55.31	140.7	53.13	136.7	52.00	124.3	48.34	115.7	45.66	93.1	38.21
		-19.8	-20.0	160.1	57.57	156.1	56.51	147.8	54.26	143.7	53.08	130.7	49.28	121.7	46.51	98.0	38.84
		-14.7	-15.0	170.8	59.47	166.6	58.35	157.9	55.96	153.5	54.71	139.8	50.71	130.2	47.81	104.3	39.78
		-9.6	-10.0	185.4	62.16	180.8	60.93	171.5	58.36	166.7	57.02	147.2	46.85	134.9	43.64	104.3	35.26
		-4.4	-5.0	190.1	50.59	184.0	49.37	171.7	46.89	165.6	45.62	147.2	41.69	134.9	38.99	104.3	31.87
		-1.8	-2.5	190.1	46.84	184.0	45.76	171.7	43.55	165.6	42.41	147.2	38.89	134.9	36.43	104.3	30.10
		0.8	0.0	190.1	42.76	184.0	41.92	171.7	40.15	165.6	39.22	147.2	36.24	134.9	34.10	104.3	28.28
		2.8	2.0	190.1	39.59	184.0	38.84	171.7	37.25	165.6	36.42	147.2	33.73	134.9	31.80	104.3	26.47
		6.0	5.0	190.1	35.09	184.0	34.47	171.7	33.15	165.6	32.43	147.2	30.13	134.9	28.40	104.3	23.64
		7.0	6.0	190.1	34.00	184.0	33.30	171.7	31.85	165.6	31.11	147.2	28.77	134.9	27.12	104.3	22.69
		8.6	7.5	190.1	31.19	184.0	30.60	171.7	29.38	165.6	28.74	147.2	26.71	134.9	25.27	104.3	21.31
		11.2	10.0	190.1	26.83	184.0	26.41	171.7	25.52	165.6	25.04	147.2	23.49	134.9	22.36	104.3	19.13
		16.4	15.0	190.1	23.41	184.0	22.78	171.7	21.52	165.6	20.89	147.2	19.00	134.9	17.74	104.3	14.87
		24.0	18.0	190.1	23.41	184.0	22.78	171.7	21.52	165.6	20.89	147.2	19.00	134.9	17.74	104.3	14.58

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	70%	-24.9	-25.0	152.5	56.33	148.7	55.31	140.7	53.13	136.7	52.00	124.3	48.34	115.7	45.66	91.2	38.21
		-19.8	-20.0	160.1	57.57	156.1	56.51	147.8	54.26	143.7	53.08	128.8	43.28	118.1	40.50	91.2	33.11
		-14.7	-15.0	166.4	48.59	161.0	47.61	150.3	45.55	144.9	44.48	128.8	41.06	118.1	38.60	91.2	31.67
		-9.6	-10.0	166.4	43.79	161.0	42.97	150.3	41.22	144.9	40.31	128.8	37.37	118.1	35.27	91.2	29.60
		-4.4	-5.0	166.4	38.54	161.0	37.95	150.3	36.64	144.9	35.93	128.8	33.59	118.1	31.84	91.2	26.86
		-1.8	-2.5	166.4	35.97	161.0	35.44	150.3	34.28	144.9	33.64	128.8	31.53	118.1	29.94	91.2	25.36
		0.8	0.0	166.4	33.28	161.0	32.83	150.3	31.81	144.9	31.24	128.8	29.36	118.1	27.93	91.2	23.79
		2.8	2.0	166.4	30.62	161.0	30.23	150.3	29.37	144.9	28.89	128.8	27.23	118.1	25.97	91.2	22.23
		6.0	5.0	166.4	26.81	161.0	26.53	150.3	25.86	144.9	25.47	128.8	24.11	118.1	23.03	91.2	19.73
		7.0	6.0	166.4	25.65	161.0	25.34	150.3	24.64	144.9	24.26	128.8	22.96	118.1	21.96	91.2	19.01
		8.6	7.5	166.4	23.40	161.0	23.17	150.3	22.63	144.9	22.32	128.8	21.26	118.1	20.42	91.2	17.85
		11.2	10.0	166.4	20.97	161.0	20.42	150.3	19.56	144.9	19.37	128.8	18.63	118.1	18.02	91.2	16.02
		16.4	15.0	166.4	20.97	161.0	20.42	150.3	19.31	144.9	18.76	128.8	17.11	118.1	16.00	91.2	13.24
		24.0	18.0	166.4	20.97	161.0	20.42	150.3	19.31	144.9	18.76	128.8	17.11	118.1	16.00	91.2	13.24

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

66HP (Heating) U-10ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	142.6	42.64	138.0	41.96	128.8	40.47	124.2	39.66	110.4	36.91	101.2	34.70	78.2	28.75
		-19.8	-20.0	142.6	40.18	138.0	39.56	128.8	38.22	124.2	37.50	110.4	35.20	101.2	33.44	78.2	27.81
		-14.7	-15.0	142.6	37.32	138.0	36.83	128.8	35.71	124.2	35.10	110.4	33.03	101.2	31.44	78.2	26.77
		-9.6	-10.0	142.6	34.03	138.0	33.61	128.8	32.69	124.2	32.17	110.4	30.37	101.2	28.98	78.2	24.81
		-4.4	-5.0	142.6	30.14	138.0	29.83	128.8	29.10	124.2	28.68	110.4	27.22	101.2	26.05	78.2	22.49
		-1.8	-2.5	142.6	28.00	138.0	27.74	128.8	27.13	124.2	26.77	110.4	25.48	101.2	24.44	78.2	21.22
		0.8	0.0	142.6	25.76	138.0	25.56	128.8	25.07	124.2	24.78	110.4	23.67	101.2	22.76	78.2	19.89
		2.8	2.0	142.6	23.55	138.0	23.42	128.8	23.05	124.2	22.81	110.4	21.90	101.2	21.12	78.2	18.57
		6.0	5.0	142.6	20.38	138.0	20.29	128.8	20.01	124.2	19.84	110.4	19.14	101.2	18.53	78.2	16.37
		7.0	6.0	142.6	19.19	138.0	19.12	128.8	18.91	124.2	18.77	110.4	18.19	101.2	17.67	78.2	15.84
		8.6	7.5	142.6	18.52	138.0	18.05	128.8	17.35	124.2	17.26	110.4	16.84	101.2	16.42	78.2	14.88
		11.2	10.0	142.6	18.52	138.0	18.05	128.8	17.11	124.2	16.63	110.4	15.21	101.2	14.50	78.2	13.36
		16.4	15.0	142.6	18.52	138.0	18.05	128.8	17.11	124.2	16.63	110.4	15.21	101.2	14.27	78.2	11.90
		24.0	18.0	142.6	18.52	138.0	18.05	128.8	17.11	124.2	16.63	110.4	15.21	101.2	14.27	78.2	11.90

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	118.8	33.17	115.0	32.81	107.3	31.97	103.5	31.48	92.0	29.82	84.3	28.50	65.2	24.04
		-19.8	-20.0	118.8	31.50	115.0	31.17	107.3	30.41	103.5	29.98	92.0	28.44	84.3	27.23	65.2	23.43
		-14.7	-15.0	118.8	29.28	115.0	29.02	107.3	28.38	103.5	28.01	92.0	26.66	84.3	25.57	65.2	22.19
		-9.6	-10.0	118.8	26.57	115.0	26.38	107.3	25.88	103.5	25.58	92.0	24.46	84.3	23.53	65.2	20.56
		-4.4	-5.0	118.8	23.41	115.0	23.28	107.3	22.94	103.5	22.72	92.0	21.86	84.3	21.11	65.2	18.64
		-1.8	-2.5	118.8	21.66	115.0	21.58	107.3	21.33	103.5	21.16	92.0	20.43	84.3	19.79	65.2	17.58
		0.8	0.0	118.8	19.85	115.0	19.81	107.3	19.66	103.5	19.53	92.0	18.96	84.3	18.42	65.2	16.49
		2.8	2.0	118.8	18.07	115.0	18.07	107.3	18.01	103.5	17.93	92.0	17.46	84.3	17.00	65.2	15.32
		6.0	5.0	118.8	16.08	115.0	15.69	107.3	15.31	103.5	15.29	92.0	15.08	84.3	14.81	65.2	13.53
		7.0	6.0	118.8	16.08	115.0	15.69	107.3	14.90	103.5	14.50	92.0	14.35	84.3	14.13	65.2	13.10
		8.6	7.5	118.8	16.08	115.0	15.69	107.3	14.90	103.5	14.50	92.0	13.32	84.3	13.16	65.2	12.33
		11.2	10.0	118.8	16.08	115.0	15.69	107.3	14.90	103.5	14.50	92.0	13.32	84.3	12.53	65.2	11.12
		16.4	15.0	118.8	16.08	115.0	15.69	107.3	14.90	103.5	14.50	92.0	13.32	84.3	12.53	65.2	10.56
		24.0	18.0	118.8	16.08	115.0	15.69	107.3	14.90	103.5	14.50	92.0	13.32	84.3	12.53	65.2	10.56

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	95.1	25.69	92.0	25.50	85.9	25.00	82.8	24.71	73.6	23.62	67.5	22.73	52.1	19.71
		-19.8	-20.0	95.1	24.35	92.0	24.19	85.9	23.77	82.8	23.51	73.6	22.53	67.5	21.71	52.1	19.07
		-14.7	-15.0	95.1	22.60	92.0	22.48	85.9	22.16	82.8	21.94	73.6	21.11	67.5	20.39	52.1	18.02
		-9.6	-10.0	95.1	20.47	92.0	20.40	85.9	20.17	82.8	20.01	73.6	19.36	67.5	18.76	52.1	16.72
		-4.4	-5.0	95.1	17.98	92.0	17.97	85.9	17.86	82.8	17.77	73.6	17.30	67.5	16.85	52.1	15.19
		-1.8	-2.5	95.1	16.61	92.0	16.63	85.9	16.60	82.8	16.54	73.6	16.19	67.5	15.80	52.1	14.32
		0.8	0.0	95.1	15.09	92.0	15.14	85.9	15.15	82.8	15.13	73.6	14.89	67.5	14.60	52.1	13.38
		2.8	2.0	95.1	13.64	92.0	13.60	85.9	13.69	82.8	13.70	73.6	13.60	67.5	13.41	52.1	12.45
		6.0	5.0	95.1	13.64	92.0	13.32	85.9	12.69	82.8	12.37	73.6	11.82	67.5	11.75	52.1	11.12
		7.0	6.0	95.1	13.64	92.0	13.32	85.9	12.69	82.8	12.37	73.6	11.43	67.5	11.25	52.1	10.74
		8.6	7.5	95.1	13.64	92.0	13.32	85.9	12.69	82.8	12.37	73.6	11.43	67.5	10.80	52.1	10.15
		11.2	10.0	95.1	13.64	92.0	13.32	85.9	12.69	82.8	12.37	73.6	11.43	67.5	10.80	52.1	9.22
		16.4	15.0	95.1	13.64	92.0	13.32	85.9	12.69	82.8	12.37	73.6	11.43	67.5	10.80	52.1	9.22
		24.0	18.0	95.1	13.64	92.0	13.32	85.9	12.69	82.8	12.37	73.6	11.43	67.5	10.80	52.1	9.22

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	71.3	19.23	69.0	19.15	64.4	18.89	62.1	18.72	55.2	18.05	50.6	17.48	39.1	15.52
		-19.8	-20.0	71.3	18.24	69.0	18.17	64.4	17.97	62.1	17.83	55.2	17.25	50.6	16.72	39.1	14.95
		-14.7	-15.0	71.3	16.94	69.0	16.90	64.4	16.76	62.1	16.65	55.2	16.18	50.6	15.74	39.1	14.16
		-9.6	-10.0	71.3	15.36	69.0	15.36	64.4	15.29	62.1	15.21	55.2	14.85	50.6	14.49	39.1	13.16
		-4.4	-5.0	71.3	13.32	69.0	13.37	64.4	13.40	62.1	13.39	55.2	13.20	50.6	12.96	39.1	11.95
		-1.8	-2.5	71.3	12.22	69.0	12.29	64.4	12.38	62.1	12.39	55.2	12.30	50.6	12.13	39.1	11.29
		0.8	0.0	71.3	11.19	69.0	11.18	64.4	11.32	62.1	11.36	55.2	11.37	50.6	11.26	39.1	10.60
		2.8	2.0	71.3	11.19	69.0	10.96	64.4	10.48	62.1	10.37	55.2	10.45	50.6	10.41	39.1	9.93
		6.0	5.0	71.3	11.19	69.0	10.96	64.4	10.48	62.1	10.25	55.2	9.54	50.6	9.24	39.1	8.99
		7.0	6.0	71.3	11.19	69.0	10.96	64.4	10.48	62.1	10.25	55.2	9.54	50.6	9.06	39.1	8.69
		8.6	7.5	71.3	11.19	69.0	10.96	64.4	10.48	62.1	10.25	55.2	9.54	50.6	9.06	39.1	8.27
		11.2	10.0	71.3	11.19	69.0	10.96	64.4	10.48	62.1	10.25	55.2	9.54	50.6	9.06	39.1	7.88
		16.4	15.0	71.3	11.19	69.0	10.96	64.4	10.48	62.1	10.25	55.2	9.54	50.6	9.06	39.1	7.88
		24.0	18.0	71.3	11.19	69.0	10.96	64.4	10.48	62.1	10.25	55.2	9.54	50.6	9.06	39.1	7.88

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-61. 68HP (Cooling) U-12ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	126.7	14.94	152.0	17.92	177.3	20.91	190.0	22.40	215.3	25.39	240.7	28.37	266.0	31.35
		-5.0	126.7	14.96	152.0	17.95	177.3	20.94	190.0	22.43	215.3	25.43	240.7	28.41	266.0	31.39
		0.0	126.7	14.99	152.0	17.99	177.3	20.98	190.0	22.48	215.3	25.46	240.7	28.47	266.0	31.47
		5.0	126.7	15.04	152.0	18.04	177.3	21.03	190.0	22.54	215.3	25.60	240.7	28.70	266.0	31.75
		10.0	126.7	15.10	152.0	18.15	177.3	21.27	190.0	22.86	215.3	26.07	240.7	29.33	266.0	32.47
		15.0	126.7	15.43	152.0	18.78	177.3	22.21	190.0	23.95	215.3	27.48	240.7	31.04	266.0	34.30
		20.0	126.7	17.51	152.0	21.49	177.3	25.91	190.0	28.30	215.3	33.44	240.7	39.07	266.0	45.20
		25.0	126.7	22.46	152.0	27.64	177.3	33.32	190.0	36.35	215.3	42.81	240.7	49.77	266.0	57.26
		30.0	126.7	28.03	152.0	34.46	177.3	41.43	190.0	45.12	215.3	52.92	240.7	61.27	266.0	70.19
		35.0	126.7	34.03	152.0	41.79	177.3	50.14	190.0	54.54	215.3	63.80	240.7	73.66	254.6	76.30
		40.0	126.7	40.48	152.0	49.69	177.3	59.53	190.0	64.70	215.3	75.55	225.6	76.29	235.2	76.29
		43.0	126.7	44.58	152.0	54.71	177.3	65.53	190.0	71.21	205.8	76.30	215.6	76.30	220.1	72.39
		46.0	125.4	48.43	150.5	59.46	159.9	60.48	161.5	58.87	165.8	56.19	171.3	54.07	178.0	52.41
52.0	54.7	20.98	59.5	21.20	65.2	21.58	68.4	21.83	75.4	22.39	83.1	23.01	91.5	23.68		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	114.0	12.03	136.8	15.11	159.6	18.10	171.0	19.58	193.8	22.47	216.6	25.29	239.4	28.05
		-5.0	114.0	12.06	136.8	15.13	159.6	18.13	171.0	19.61	193.8	22.50	216.6	25.33	239.4	28.09
		0.0	114.0	12.09	136.8	15.17	159.6	18.17	171.0	19.65	193.8	22.54	216.6	25.37	239.4	28.13
		5.0	114.0	12.14	136.8	15.22	159.6	18.23	171.0	19.70	193.8	22.59	216.6	25.44	239.4	28.25
		10.0	114.0	12.21	136.8	15.28	159.6	18.32	171.0	19.82	193.8	22.80	216.6	25.75	239.4	28.65
		15.0	114.0	12.35	136.8	15.59	159.6	18.81	171.0	20.41	193.8	23.56	216.6	26.67	239.4	29.71
		20.0	114.0	13.58	136.8	17.27	159.6	20.86	171.0	22.62	193.8	26.03	216.6	29.85	239.4	33.91
		25.0	114.0	18.28	136.8	22.49	159.6	26.86	171.0	29.10	193.8	33.68	216.6	38.40	239.4	43.24
		30.0	114.0	23.43	136.8	28.54	159.6	33.74	171.0	36.38	193.8	41.74	216.6	47.22	239.4	52.84
		35.0	114.0	29.88	136.8	36.07	159.6	42.32	171.0	45.49	193.8	51.90	216.6	58.48	239.4	65.31
		40.0	114.0	35.58	136.8	42.68	159.6	49.85	171.0	53.48	193.8	60.89	216.6	68.61	235.2	76.29
		43.0	114.0	39.10	136.8	46.78	159.6	54.54	171.0	58.49	193.8	66.62	215.6	76.30	220.1	72.39
		46.0	114.0	41.84	136.8	50.67	159.6	59.93	161.5	58.87	165.8	56.19	171.3	54.07	178.0	52.41
52.0	54.7	20.98	59.5	21.20	65.2	21.58	68.4	21.83	75.4	22.39	83.1	23.01	91.5	23.68		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	101.3	10.31	121.6	13.09	141.9	15.81	152.0	17.15	172.3	19.78	192.5	22.36	212.8	24.88
		-5.0	101.3	10.33	121.6	13.11	141.9	15.83	152.0	17.17	172.3	19.81	192.5	22.39	212.8	24.91
		0.0	101.3	10.35	121.6	13.14	141.9	15.87	152.0	17.21	172.3	19.84	192.5	22.42	212.8	24.95
		5.0	101.3	10.39	121.6	13.19	141.9	15.91	152.0	17.26	172.3	19.89	192.5	22.47	212.8	24.99
		10.0	101.3	10.45	121.6	13.25	141.9	15.98	152.0	17.31	172.3	19.96	192.5	22.57	212.8	25.14
		15.0	101.3	10.53	121.6	13.35	141.9	16.15	152.0	17.54	172.3	20.28	192.5	22.99	212.8	25.64
		20.0	101.3	11.06	121.6	14.14	141.9	17.16	152.0	18.64	172.3	21.54	192.5	24.37	212.8	27.12
		25.0	101.3	14.91	121.6	18.10	141.9	21.34	152.0	22.98	172.3	26.31	192.5	29.68	212.8	33.09
		30.0	101.3	19.41	121.6	23.39	141.9	27.38	152.0	29.38	172.3	33.39	192.5	37.41	212.8	41.45
		35.0	101.3	25.08	121.6	30.00	141.9	34.88	152.0	37.31	172.3	42.17	192.5	47.02	212.8	51.89
		40.0	101.3	30.13	121.6	35.84	141.9	41.48	152.0	44.28	172.3	49.87	192.5	55.49	212.8	61.17
		43.0	101.3	33.26	121.6	39.45	141.9	45.57	152.0	48.61	172.3	54.71	192.5	60.87	212.8	67.17
		46.0	101.3	35.45	121.6	42.32	141.9	49.37	152.0	52.97	165.8	56.19	171.3	54.07	178.0	52.41
52.0	54.7	20.98	59.5	21.20	65.2	21.58	68.4	21.83	75.4	22.39	83.1	23.01	91.5	23.68		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	88.7	8.55	106.4	11.03	124.1	13.46	133.0	14.66	150.7	17.02	168.5	19.33	186.2	21.60
		-5.0	88.7	8.57	106.4	11.05	124.1	13.48	133.0	14.68	150.7	17.04	168.5	19.36	186.2	21.63
		0.0	88.7	8.59	106.4	11.07	124.1	13.51	133.0	14.71	150.7	17.07	168.5	19.39	186.2	21.66
		5.0	88.7	8.62	106.4	11.11	124.1	13.55	133.0	14.75	150.7	17.11	168.5	19.43	186.2	21.70
		10.0	88.7	8.67	106.4	11.16	124.1	13.60	133.0	14.80	150.7	17.17	168.5	19.48	186.2	21.75
		15.0	88.7	8.75	106.4	11.24	124.1	13.67	133.0	14.87	150.7	17.26	168.5	19.61	186.2	21.92
		20.0	88.7	8.91	106.4	11.50	124.1	14.05	133.0	15.31	150.7	17.78	168.5	20.21	186.2	22.57
		25.0	88.7	11.14	106.4	13.83	124.1	16.40	133.0	17.65	150.7	20.09	168.5	22.45	186.2	24.75
		30.0	88.7	15.75	106.4	18.72	124.1	21.65	133.0	23.10	150.7	25.95	168.5	28.76	186.2	31.53
		35.0	88.7	20.64	106.4	24.42	124.1	28.11	133.0	29.92	150.7	33.48	168.5	36.96	186.2	40.37
		40.0	88.7	25.05	106.4	29.52	124.1	33.85	133.0	35.97	150.7	40.12	168.5	44.18	186.2	48.16
		43.0	88.7	27.78	106.4	32.67	124.1	37.39	133.0	39.70	150.7	44.23	168.5	48.67	186.2	53.04
		46.0	88.7	29.67	106.4	34.89	124.1	40.12	133.0	42.74	150.7	47.99	168.5	51.35	178.0	52.41
52.0	54.7	20.98	59.5	21.20	65.2	21.58	68.4	21.83	75.4	22.39	83.1	23.01	91.5	23.68		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

68HP (Cooling) U-12ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8 Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	76.0	6.76	91.2	8.93	106.4	11.05	114.0	12.10	129.2	14.18	144.4	16.21	159.6	18.21
		-5.0	76.0	6.78	91.2	8.94	106.4	11.07	114.0	12.12	129.2	14.19	144.4	16.23	159.6	18.23
		0.0	76.0	6.80	91.2	8.96	106.4	11.09	114.0	12.15	129.2	14.22	144.4	16.25	159.6	18.25
		5.0	76.0	6.82	91.2	8.99	106.4	11.13	114.0	12.18	129.2	14.25	144.4	16.29	159.6	18.29
		10.0	76.0	6.86	91.2	9.03	106.4	11.17	114.0	12.22	129.2	14.30	144.4	16.33	159.6	18.33
		15.0	76.0	6.92	91.2	9.10	106.4	11.23	114.0	12.29	129.2	14.36	144.4	16.39	159.6	18.38
		20.0	76.0	7.02	91.2	9.19	106.4	11.33	114.0	12.39	129.2	14.49	144.4	16.55	159.6	18.58
		25.0	76.0	7.81	91.2	10.05	106.4	12.23	114.0	13.30	129.2	15.41	144.4	17.46	159.6	19.47
		30.0	76.0	12.45	91.2	14.58	106.4	16.61	114.0	17.59	129.2	19.48	144.4	21.29	159.6	23.02
		35.0	76.0	16.56	91.2	19.36	106.4	22.01	114.0	23.29	129.2	25.75	144.4	28.10	159.6	30.33
		40.0	76.0	20.34	91.2	23.72	106.4	26.92	114.0	28.46	129.2	31.43	144.4	34.24	159.6	36.93
		43.0	76.0	22.67	91.2	26.41	106.4	29.94	114.0	31.64	129.2	34.90	144.4	38.01	159.6	40.98
		46.0	76.0	24.48	91.2	28.32	106.4	32.06	114.0	33.89	129.2	37.50	144.4	41.01	159.6	44.45
52.0	54.7	20.98	59.5	21.20	65.2	21.58	68.4	21.83	75.4	22.39	83.1	23.01	91.5	23.68		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	63.3	4.95	76.0	6.78	88.7	8.59	95.0	9.48	107.7	11.25	120.3	12.99	133.0	14.69
		-5.0	63.3	4.96	76.0	6.80	88.7	8.60	95.0	9.50	107.7	11.27	120.3	13.00	133.0	14.71
		0.0	63.3	4.97	76.0	6.81	88.7	8.62	95.0	9.52	107.7	11.28	120.3	13.02	133.0	14.73
		5.0	63.3	4.99	76.0	6.83	88.7	8.65	95.0	9.54	107.7	11.31	120.3	13.05	133.0	14.75
		10.0	63.3	5.02	76.0	6.87	88.7	8.68	95.0	9.58	107.7	11.34	120.3	13.08	133.0	14.79
		15.0	63.3	5.07	76.0	6.91	88.7	8.73	95.0	9.62	107.7	11.39	120.3	13.13	133.0	14.84
		20.0	63.3	5.15	76.0	6.99	88.7	8.81	95.0	9.70	107.7	11.47	120.3	13.20	133.0	14.90
		25.0	63.3	5.35	76.0	7.20	88.7	9.01	95.0	9.91	107.7	13.15	120.3	13.41	133.0	15.12
		30.0	63.3	9.53	76.0	10.82	88.7	11.63	95.0	12.19	107.7	13.49	120.3	14.91	133.0	16.39
		35.0	63.3	12.86	76.0	14.81	88.7	16.59	95.0	17.43	107.7	18.99	120.3	20.42	133.0	21.72
		40.0	63.3	16.00	76.0	18.44	88.7	20.68	95.0	21.73	107.7	23.70	120.3	25.50	133.0	27.16
		43.0	63.3	17.94	76.0	20.67	88.7	23.18	95.0	24.36	107.7	26.58	120.3	28.63	133.0	30.51
		46.0	63.3	19.84	76.0	22.55	88.7	25.11	95.0	26.33	107.7	28.67	120.3	30.87	133.0	32.94
52.0	54.7	20.98	59.5	21.20	65.2	21.58	68.4	21.83	75.4	22.39	83.1	23.01	91.5	23.68		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	50.7	3.10	60.8	4.59	70.9	6.07	76.0	6.80	86.1	8.24	96.3	9.67	106.4	11.08
		-5.0	50.7	3.10	60.8	4.60	70.9	6.08	76.0	6.81	86.1	8.25	96.3	9.68	106.4	11.09
		0.0	50.7	3.12	60.8	4.61	70.9	6.09	76.0	6.82	86.1	8.27	96.3	9.70	106.4	11.11
		5.0	50.7	3.13	60.8	4.63	70.9	6.11	76.0	6.84	86.1	8.29	96.3	9.72	106.4	11.14
		10.0	50.7	3.15	60.8	4.65	70.9	6.13	76.0	6.86	86.1	8.31	96.3	9.75	106.4	11.17
		15.0	50.7	3.19	60.8	4.69	70.9	6.17	76.0	6.90	86.1	8.35	96.3	9.78	106.4	11.21
		20.0	50.7	3.25	60.8	4.75	70.9	6.23	76.0	6.96	86.1	8.40	96.3	9.84	106.4	11.27
		25.0	50.7	3.37	60.8	4.86	70.9	6.33	76.0	7.05	86.1	8.49	96.3	9.92	106.4	11.36
		30.0	50.7	4.82	60.8	5.72	70.9	6.91	76.0	7.54	86.1	8.86	96.3	10.35	106.4	11.98
		35.0	50.7	9.55	60.8	10.81	70.9	11.90	76.0	12.39	86.1	13.26	96.3	14.35	106.4	15.74
		40.0	50.7	12.04	60.8	13.68	70.9	15.12	76.0	15.77	86.1	16.94	96.3	17.95	106.4	18.82
		43.0	50.7	13.58	60.8	15.46	70.9	17.12	76.0	17.87	86.1	19.24	96.3	20.43	106.4	21.47
		46.0	50.7	15.71	60.8	17.52	70.9	19.16	76.0	19.91	86.1	21.31	96.3	22.56	106.4	23.67
52.0	50.7	18.62	59.5	21.20	65.2	21.58	68.4	21.83	75.4	22.39	83.1	23.01	91.5	23.68		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	38.0	1.21	45.6	2.35	53.2	3.49	57.0	4.06	64.6	5.19	72.2	6.30	79.8	7.38
		-5.0	38.0	1.22	45.6	2.36	53.2	3.50	57.0	4.07	64.6	5.20	72.2	6.31	79.8	7.40
		0.0	38.0	1.23	45.6	2.37	53.2	3.51	57.0	4.09	64.6	5.22	72.2	6.33	79.8	7.43
		5.0	38.0	1.24	45.6	2.38	53.2	3.53	57.0	4.10	64.6	5.24	72.2	6.36	79.8	7.46
		10.0	38.0	1.25	45.6	2.40	53.2	3.55	57.0	4.13	64.6	5.27	72.2	6.39	79.8	7.49
		15.0	38.0	1.28	45.6	2.42	53.2	3.58	57.0	4.16	64.6	5.31	72.2	6.44	79.8	7.54
		20.0	38.0	1.32	45.6	2.46	53.2	3.62	57.0	4.21	64.6	5.37	72.2	6.50	79.8	7.59
		25.0	38.0	1.40	45.6	2.53	53.2	3.70	57.0	4.30	64.6	5.45	72.2	6.61	79.8	7.80
		30.0	38.0	1.62	45.6	2.68	53.2	3.86	57.0	4.54	64.6	5.94	72.2	7.31	79.8	8.63
		35.0	38.0	6.62	45.6	7.35	53.2	8.20	57.0	8.76	64.6	9.86	72.2	10.94	79.8	12.01
		40.0	38.0	8.47	45.6	9.46	53.2	10.28	57.0	10.62	64.6	11.21	72.2	11.66	79.8	12.01
		43.0	38.0	9.62	45.6	10.79	53.2	11.76	57.0	12.18	64.6	12.90	72.2	13.47	79.8	13.90
		46.0	38.0	12.06	45.6	13.17	53.2	14.12	57.0	14.54	64.6	15.26	72.2	15.86	79.8	16.33
52.0	38.0	14.15	45.6	15.59	53.2	16.85	57.0	17.42	64.6	17.98	72.2	18.27	79.8	18.39		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-62. 68HP (Heating) U-12ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	155.5	57.19	151.6	56.17	143.4	53.95	139.3	52.78	126.5	49.05	117.7	46.33	94.6	38.76
		-19.8	-20.0	163.3	58.51	159.2	57.42	150.7	55.12	146.4	53.91	133.1	50.03	123.9	47.22	99.6	39.40
		-14.7	-15.0	174.4	60.49	170.0	59.33	161.1	56.91	156.5	55.63	142.3	51.52	132.6	48.57	106.7	40.38
		-9.6	-10.0	189.3	63.28	184.6	62.03	175.0	59.38	170.0	58.00	154.8	53.60	144.2	50.43	116.0	41.68
		-4.4	-5.0	208.7	67.18	203.5	65.79	192.9	62.87	187.4	61.31	170.6	56.37	158.8	52.83	127.8	43.32
		-1.8	-2.5	220.2	68.83	214.6	67.39	203.4	64.40	197.7	62.82	179.8	57.78	167.5	54.18	134.1	44.10
		0.8	0.0	232.9	70.23	227.1	68.73	215.2	65.61	209.2	63.98	189.3	58.27	173.6	53.29	134.1	41.28
		2.8	2.0	244.6	70.44	236.7	67.99	220.9	63.18	213.0	60.81	189.3	53.85	173.6	49.32	134.1	38.36
		6.0	5.0	244.6	61.65	236.7	59.57	220.9	55.47	213.0	53.45	189.3	47.50	173.6	43.54	134.1	34.10
		7.0	6.0	244.6	58.80	236.7	56.84	220.9	52.98	213.0	51.00	189.3	45.37	173.6	41.70	134.1	32.75
		8.6	7.5	244.6	54.55	236.7	52.76	220.9	49.23	213.0	47.49	189.3	42.36	173.6	39.01	134.1	30.80
		11.2	10.0	244.6	47.94	236.7	46.45	220.9	43.49	213.0	42.02	189.3	37.68	173.6	34.82	134.1	27.75
		16.4	15.0	244.6	36.38	236.7	35.37	220.9	33.34	213.0	32.32	189.3	29.24	173.6	27.17	134.1	21.91
		24.0	18.0	244.6	29.86	236.7	29.03	220.9	27.36	213.0	26.51	189.3	23.93	173.6	22.18	134.1	17.78

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	90%	-24.9	-25.0	155.5	57.19	151.6	56.17	143.4	53.95	139.3	52.78	126.5	49.05	117.7	46.33	94.6	38.76
		-19.8	-20.0	163.3	58.51	159.2	57.42	150.7	55.12	146.4	53.91	133.1	50.03	123.9	47.22	99.6	39.40
		-14.7	-15.0	174.4	60.49	170.0	59.33	161.1	56.91	156.5	55.63	142.3	51.52	132.6	48.57	106.7	40.38
		-9.6	-10.0	189.3	63.28	184.6	62.03	175.0	59.38	170.0	58.00	154.8	53.60	144.2	50.43	116.0	41.68
		-4.4	-5.0	208.7	67.18	203.5	65.79	192.9	62.87	187.4	61.31	170.4	56.37	156.2	49.60	120.7	39.33
		-1.8	-2.5	220.1	68.83	213.0	61.47	198.8	57.71	191.7	55.84	170.4	50.20	156.2	46.43	120.7	36.97
		0.8	0.0	220.1	58.38	213.0	56.70	198.8	53.32	191.7	51.63	170.4	46.53	156.2	43.11	120.7	34.49
		2.8	2.0	220.1	53.41	213.0	51.92	198.8	48.92	191.7	47.41	170.4	42.86	156.2	39.82	120.7	32.25
		6.0	5.0	220.1	46.66	213.0	45.55	198.8	43.25	191.7	42.07	170.4	38.39	156.2	35.74	120.7	28.84
		7.0	6.0	220.1	45.50	213.0	44.25	198.8	41.76	191.7	40.50	170.4	36.72	156.2	34.17	120.7	27.68
		8.6	7.5	220.1	42.00	213.0	40.90	198.8	38.69	191.7	37.57	170.4	34.18	156.2	31.89	120.7	26.01
		11.2	10.0	220.1	36.54	213.0	35.67	198.8	33.90	191.7	33.00	170.4	30.24	156.2	28.34	120.7	23.38
		16.4	15.0	220.1	27.00	213.0	26.48	198.8	25.39	191.7	24.83	170.4	23.03	156.2	21.74	120.7	18.24
		24.0	18.0	220.1	26.68	213.0	25.95	198.8	24.47	191.7	23.73	170.4	21.51	156.2	20.04	120.7	16.34

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	80%	-24.9	-25.0	155.5	57.19	151.6	56.17	143.4	53.95	139.3	52.78	126.5	49.05	117.7	46.33	94.6	38.76
		-19.8	-20.0	163.3	58.51	159.2	57.42	150.7	55.12	146.4	53.91	133.1	50.03	123.9	47.22	99.6	39.40
		-14.7	-15.0	174.4	60.49	170.0	59.33	161.1	56.91	156.5	55.63	142.3	51.52	132.6	48.57	106.7	40.38
		-9.6	-10.0	189.3	63.28	184.6	62.03	175.0	59.38	170.0	58.00	151.5	48.24	138.8	44.96	107.3	36.36
		-4.4	-5.0	195.6	51.95	189.3	50.72	176.7	48.20	170.4	46.90	151.5	42.90	138.8	40.13	107.3	32.82
		-1.8	-2.5	195.6	48.09	189.3	47.00	176.7	44.75	170.4	43.60	151.5	40.00	138.8	37.50	107.3	30.97
		0.8	0.0	195.6	43.93	189.3	43.07	176.7	41.27	170.4	40.31	151.5	37.26	138.8	35.08	107.3	29.08
		2.8	2.0	195.6	40.64	189.3	39.88	176.7	38.26	170.4	37.40	151.5	34.65	138.8	32.67	107.3	27.20
		6.0	5.0	195.6	35.96	189.3	35.34	176.7	33.99	170.4	33.26	151.5	30.89	138.8	29.13	107.3	24.26
		7.0	6.0	195.6	34.75	189.3	34.05	176.7	32.60	170.4	31.85	151.5	29.49	138.8	27.82	107.3	23.28
		8.6	7.5	195.6	31.87	189.3	31.29	176.7	30.06	170.4	29.42	151.5	27.37	138.8	25.90	107.3	21.86
		11.2	10.0	195.6	27.41	189.3	26.99	176.7	26.10	170.4	25.62	151.5	24.06	138.8	22.91	107.3	19.61
		16.4	15.0	195.6	24.14	189.3	23.48	176.7	22.17	170.4	21.51	151.5	19.54	138.8	18.23	107.3	15.17
		24.0	18.0	195.6	24.14	189.3	23.48	176.7	22.17	170.4	21.51	151.5	19.54	138.8	18.23	107.3	14.95

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	70%	-24.9	-25.0	155.5	57.19	151.6	56.17	143.4	53.95	139.3	52.78	126.5	49.05	117.7	46.33	93.9	38.76
		-19.8	-20.0	163.3	58.51	159.2	57.42	150.7	55.12	146.4	53.91	132.5	44.75	121.5	41.79	93.9	34.15
		-14.7	-15.0	171.2	49.98	165.7	48.98	154.6	46.88	149.1	45.79	132.5	42.30	121.5	39.79	93.9	32.68
		-9.6	-10.0	171.2	45.02	165.7	44.18	154.6	42.41	149.1	41.48	132.5	38.48	121.5	36.32	93.9	30.49
		-4.4	-5.0	171.2	39.66	165.7	39.06	154.6	37.72	149.1	36.99	132.5	34.59	121.5	32.78	93.9	27.65
		-1.8	-2.5	171.2	37.00	165.7	36.45	154.6	35.26	149.1	34.60	132.5	32.43	121.5	30.80	93.9	26.09
		0.8	0.0	171.2	34.20	165.7	33.73	154.6	32.69	149.1	32.11	132.5	30.19	121.5	28.72	93.9	24.45
		2.8	2.0	171.2	31.42	165.7	31.03	154.6	30.16	149.1	29.66	132.5	27.97	121.5	26.67	93.9	22.82
		6.0	5.0	171.2	27.45	165.7	27.17	154.6	26.49	149.1	26.10	132.5	24.70	121.5	23.58	93.9	20.19
		7.0	6.0	171.2	26.17	165.7	25.86	154.6	25.18	149.1	24.80	132.5	23.50	121.5	22.49	93.9	19.48
		8.6	7.5	171.2	23.87	165.7	23.64	154.6	23.11	149.1	22.81	132.5	21.75	121.5	20.90	93.9	18.28
		11.2	10.0	171.2	21.60	165.7	21.02	154.6	19.97	149.1	19.77	132.5	19.04	121.5	18.42	93.9	16.38
		16.4	15.0	171.2	21.60	165.7	21.02	154.6	19.87	149.1	19.30	132.5	17.57	121.5	16.43	93.9	13.55
		24.0	18.0	171.2	21.60	165.7	21.02	154.6	19.87	149.1	19.30	132.5	17.57	121.5	16.43	93.9	13.55

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

68HP (Heating) U-12ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	146.7	43.91	142.0	43.21	132.5	41.69	127.8	40.87	113.6	38.07	104.1	35.83	80.5	29.67
		-19.8	-20.0	146.7	41.36	142.0	40.73	132.5	39.40	127.8	38.70	113.6	36.33	104.1	34.51	80.5	28.71
		-14.7	-15.0	146.7	38.49	142.0	37.98	132.5	36.85	127.8	36.21	113.6	34.06	104.1	32.43	80.5	27.59
		-9.6	-10.0	146.7	35.06	142.0	34.64	132.5	33.69	127.8	33.15	113.6	31.30	104.1	29.86	80.5	25.55
		-4.4	-5.0	146.7	31.01	142.0	30.69	132.5	29.95	127.8	29.52	113.6	28.01	104.1	26.81	80.5	23.13
		-1.8	-2.5	146.7	28.79	142.0	28.53	132.5	27.90	127.8	27.52	113.6	26.20	104.1	25.13	80.5	21.81
		0.8	0.0	146.7	26.46	142.0	26.26	132.5	25.76	127.8	25.46	113.6	24.32	104.1	23.39	80.5	20.42
		2.8	2.0	146.7	24.16	142.0	24.02	132.5	23.65	127.8	23.41	113.6	22.47	104.1	21.67	80.5	19.05
		6.0	5.0	146.7	20.77	142.0	20.68	132.5	20.42	127.8	20.25	113.6	19.56	104.1	18.95	80.5	16.74
		7.0	6.0	146.7	19.54	142.0	19.48	132.5	19.29	127.8	19.15	113.6	18.58	104.1	18.06	80.5	16.19
		8.6	7.5	146.7	19.05	142.0	18.56	132.5	17.68	127.8	17.60	113.6	17.18	104.1	16.77	80.5	15.20
		11.2	10.0	146.7	19.05	142.0	18.56	132.5	17.57	127.8	17.08	113.6	15.60	104.1	14.79	80.5	13.63
		16.4	15.0	146.7	19.05	142.0	18.56	132.5	17.57	127.8	17.08	113.6	15.60	104.1	14.62	80.5	12.16
		24.0	18.0	146.7	19.05	142.0	18.56	132.5	17.57	127.8	17.08	113.6	15.60	104.1	14.62	80.5	12.16

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	122.3	34.24	118.3	33.86	110.4	32.99	106.5	32.49	94.7	30.77	86.8	29.39	67.1	24.78
		-19.8	-20.0	122.3	32.49	118.3	32.15	110.4	31.37	106.5	30.92	94.7	29.33	86.8	28.08	67.1	24.14
		-14.7	-15.0	122.3	30.18	118.3	29.91	110.4	29.25	106.5	28.87	94.7	27.47	86.8	26.34	67.1	22.85
		-9.6	-10.0	122.3	27.36	118.3	27.16	110.4	26.65	106.5	26.33	94.7	25.18	86.8	24.22	67.1	21.14
		-4.4	-5.0	122.3	24.06	118.3	23.94	110.4	23.58	106.5	23.36	94.7	22.47	86.8	21.70	67.1	19.14
		-1.8	-2.5	122.3	22.25	118.3	22.17	110.4	21.91	106.5	21.73	94.7	20.99	86.8	20.32	67.1	18.04
		0.8	0.0	122.3	20.36	118.3	20.33	110.4	20.17	106.5	20.04	94.7	19.46	86.8	18.90	67.1	16.90
		2.8	2.0	122.3	18.51	118.3	18.50	110.4	18.40	106.5	18.30	94.7	17.84	86.8	17.37	67.1	15.66
		6.0	5.0	122.3	16.51	118.3	16.10	110.4	15.59	106.5	15.57	94.7	15.38	86.8	15.11	67.1	13.82
		7.0	6.0	122.3	16.51	118.3	16.10	110.4	15.28	106.5	14.87	94.7	14.62	86.8	14.41	67.1	13.36
		8.6	7.5	122.3	16.51	118.3	16.10	110.4	15.28	106.5	14.87	94.7	13.64	86.8	13.41	67.1	12.57
		11.2	10.0	122.3	16.51	118.3	16.10	110.4	15.28	106.5	14.87	94.7	13.64	86.8	12.81	67.1	11.31
		16.4	15.0	122.3	16.51	118.3	16.10	110.4	15.28	106.5	14.87	94.7	13.64	86.8	12.81	67.1	10.76
		24.0	18.0	122.3	16.51	118.3	16.10	110.4	15.28	106.5	14.87	94.7	13.64	86.8	12.81	67.1	10.76

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	97.8	26.47	94.7	26.27	88.4	25.76	85.2	25.45	75.7	24.33	69.4	23.40	53.6	20.28
		-19.8	-20.0	97.8	25.07	94.7	24.91	88.4	24.47	85.2	24.21	75.7	23.19	69.4	22.35	53.6	19.61
		-14.7	-15.0	97.8	23.26	94.7	23.13	88.4	22.80	85.2	22.57	75.7	21.72	69.4	20.97	53.6	18.51
		-9.6	-10.0	97.8	21.04	94.7	20.96	88.4	20.73	85.2	20.57	75.7	19.89	69.4	19.28	53.6	17.15
		-4.4	-5.0	97.8	18.44	94.7	18.43	88.4	18.33	85.2	18.23	75.7	17.75	69.4	17.28	53.6	15.56
		-1.8	-2.5	97.8	17.02	94.7	17.04	88.4	16.99	85.2	16.92	75.7	16.54	69.4	16.14	53.6	14.63
		0.8	0.0	97.8	15.36	94.7	15.41	88.4	15.44	85.2	15.42	75.7	15.19	69.4	14.90	53.6	13.65
		2.8	2.0	97.8	13.96	94.7	13.82	88.4	13.93	85.2	13.95	75.7	13.86	69.4	13.67	53.6	12.69
		6.0	5.0	97.8	13.96	94.7	13.64	88.4	12.98	85.2	12.65	75.7	12.02	69.4	11.96	53.6	11.33
		7.0	6.0	97.8	13.96	94.7	13.64	88.4	12.98	85.2	12.65	75.7	11.67	69.4	11.43	53.6	10.92
		8.6	7.5	97.8	13.96	94.7	13.64	88.4	12.98	85.2	12.65	75.7	11.67	69.4	11.01	53.6	10.31
		11.2	10.0	97.8	13.96	94.7	13.64	88.4	12.98	85.2	12.65	75.7	11.67	69.4	11.01	53.6	9.37
		16.4	15.0	97.8	13.96	94.7	13.64	88.4	12.98	85.2	12.65	75.7	11.67	69.4	11.01	53.6	9.37
		24.0	18.0	97.8	13.96	94.7	13.64	88.4	12.98	85.2	12.65	75.7	11.67	69.4	11.01	53.6	9.37

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	73.4	19.76	71.0	19.67	66.3	19.40	63.9	19.23	56.8	18.55	52.1	17.95	40.2	15.92
		-19.8	-20.0	73.4	18.72	71.0	18.65	66.3	18.44	63.9	18.30	56.8	17.70	52.1	17.16	40.2	15.32
		-14.7	-15.0	73.4	17.37	71.0	17.33	66.3	17.19	63.9	17.08	56.8	16.59	52.1	16.14	40.2	14.50
		-9.6	-10.0	73.4	15.69	71.0	15.68	66.3	15.61	63.9	15.53	56.8	15.17	52.1	14.81	40.2	13.44
		-4.4	-5.0	73.4	13.56	71.0	13.61	66.3	13.65	63.9	13.64	56.8	13.46	52.1	13.22	40.2	12.18
		-1.8	-2.5	73.4	12.41	71.0	12.49	66.3	12.59	63.9	12.61	56.8	12.53	52.1	12.36	40.2	11.50
		0.8	0.0	73.4	11.42	71.0	11.35	66.3	11.49	63.9	11.54	56.8	11.56	52.1	11.46	40.2	10.79
		2.8	2.0	73.4	11.42	71.0	11.17	66.3	10.68	63.9	10.52	56.8	10.61	52.1	10.58	40.2	10.09
		6.0	5.0	73.4	11.42	71.0	11.17	66.3	10.68	63.9	10.43	56.8	9.70	52.1	9.36	40.2	9.11
		7.0	6.0	73.4	11.42	71.0	11.17	66.3	10.68	63.9	10.43	56.8	9.70	52.1	9.20	40.2	8.80
		8.6	7.5	73.4	11.42	71.0	11.17	66.3	10.68	63.9	10.43	56.8	9.70	52.1	9.20	40.2	8.36
		11.2	10.0	73.4	11.42	71.0	11.17	66.3	10.68	63.9	10.43	56.8	9.70	52.1	9.20	40.2	7.97
		16.4	15.0	73.4	11.42	71.0	11.17	66.3	10.68	63.9	10.43	56.8	9.70	52.1	9.20	40.2	7.97
		24.0	18.0	73.4	11.42	71.0	11.17	66.3	10.68	63.9	10.43	56.8	9.70	52.1	9.20	40.2	7.97

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-63. 70HP (Cooling) U-10ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	130.7	15.46	156.8	18.54	182.9	21.63	196.0	23.18	222.1	26.26	248.3	29.36	274.4	32.44
		-5.0	130.7	15.48	156.8	18.58	182.9	21.67	196.0	23.21	222.1	26.31	248.3	29.40	274.4	32.48
		0.0	130.7	15.52	156.8	18.62	182.9	21.72	196.0	23.27	222.1	26.35	248.3	29.45	274.4	32.55
		5.0	130.7	15.57	156.8	18.68	182.9	21.77	196.0	23.33	222.1	26.48	248.3	29.68	274.4	32.83
		10.0	130.7	15.64	156.8	18.78	182.9	22.01	196.0	23.64	222.1	26.97	248.3	30.35	274.4	33.59
		15.0	130.7	15.97	156.8	19.43	182.9	23.00	196.0	24.81	222.1	28.48	248.3	32.20	274.4	35.59
		20.0	130.7	18.21	156.8	22.38	182.9	26.95	196.0	29.42	222.1	34.73	248.3	40.55	274.4	46.89
		25.0	130.7	23.38	156.8	28.73	182.9	34.61	196.0	37.75	222.1	44.41	248.3	51.61	274.4	59.35
		30.0	130.7	29.14	156.8	35.79	182.9	43.00	196.0	46.81	222.1	54.86	248.3	63.50	274.4	72.71
		35.0	130.7	35.34	156.8	43.36	182.9	52.00	196.0	56.54	222.1	66.11	248.3	76.31	262.7	79.09
		40.0	130.7	42.01	156.8	51.52	182.9	61.70	196.0	67.05	222.1	78.25	232.8	79.09	242.7	79.09
		43.0	130.7	46.25	156.8	56.72	182.9	67.90	196.0	73.77	212.4	79.09	222.5	79.09	227.0	74.99
		46.0	129.4	50.23	155.2	61.63	164.9	62.68	166.6	61.02	171.1	58.25	176.8	56.06	183.6	54.34
52.0	56.4	21.85	61.4	22.08	67.3	22.48	70.6	22.73	77.8	23.31	85.7	23.96	94.4	24.65		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	117.6	12.44	141.1	15.62	164.6	18.73	176.4	20.25	199.9	23.24	223.4	26.16	247.0	29.02
		-5.0	117.6	12.47	141.1	15.66	164.6	18.76	176.4	20.28	199.9	23.28	223.4	26.20	247.0	29.06
		0.0	117.6	12.51	141.1	15.70	164.6	18.81	176.4	20.33	199.9	23.33	223.4	26.26	247.0	29.10
		5.0	117.6	12.56	141.1	15.76	164.6	18.87	176.4	20.40	199.9	23.38	223.4	26.32	247.0	29.22
		10.0	117.6	12.64	141.1	15.83	164.6	18.95	176.4	20.50	199.9	23.59	223.4	26.63	247.0	29.63
		15.0	117.6	12.78	141.1	16.12	164.6	19.46	176.4	21.11	199.9	24.38	223.4	27.60	247.0	30.76
		20.0	117.6	14.07	141.1	17.92	164.6	21.67	176.4	23.50	199.9	27.08	223.4	31.02	247.0	35.22
		25.0	117.6	19.07	141.1	23.42	164.6	27.93	176.4	30.25	199.9	34.98	223.4	39.85	247.0	44.86
		30.0	117.6	24.39	141.1	29.66	164.6	35.04	176.4	37.77	199.9	43.31	223.4	48.97	247.0	54.78
		35.0	117.6	31.06	141.1	37.45	164.6	43.92	176.4	47.18	199.9	53.81	223.4	60.61	247.0	67.67
		40.0	117.6	36.95	141.1	44.29	164.6	51.69	176.4	55.44	199.9	63.10	223.4	71.08	242.7	79.09
		43.0	117.6	40.58	141.1	48.52	164.6	56.54	176.4	60.62	199.9	69.03	222.5	79.09	227.0	74.99
		46.0	117.6	43.41	141.1	52.54	164.6	62.11	166.6	61.02	171.1	58.25	176.8	56.06	183.6	54.34
52.0	56.4	21.85	61.4	22.08	67.3	22.48	70.6	22.73	77.8	23.31	85.7	23.96	94.4	24.65		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	104.5	10.66	125.4	13.54	146.3	16.35	156.8	17.73	177.7	20.46	198.6	23.12	219.5	25.74
		-5.0	104.5	10.68	125.4	13.56	146.3	16.38	156.8	17.76	177.7	20.49	198.6	23.16	219.5	25.77
		0.0	104.5	10.71	125.4	13.60	146.3	16.42	156.8	17.80	177.7	20.53	198.6	23.20	219.5	25.82
		5.0	104.5	10.75	125.4	13.65	146.3	16.47	156.8	17.86	177.7	20.59	198.6	23.26	219.5	25.86
		10.0	104.5	10.82	125.4	13.72	146.3	16.55	156.8	17.92	177.7	20.65	198.6	23.35	219.5	26.00
		15.0	104.5	10.92	125.4	13.82	146.3	16.71	156.8	18.14	177.7	20.98	198.6	23.78	219.5	26.53
		20.0	104.5	11.44	125.4	14.63	146.3	17.76	156.8	19.30	177.7	22.32	198.6	25.26	219.5	28.11
		25.0	104.5	15.59	125.4	18.88	146.3	22.23	156.8	23.93	177.7	27.36	198.6	30.85	219.5	34.37
		30.0	104.5	20.24	125.4	24.34	146.3	28.47	156.8	30.53	177.7	34.68	198.6	38.83	219.5	43.01
		35.0	104.5	26.10	125.4	31.18	146.3	36.22	156.8	38.74	177.7	43.76	198.6	48.77	219.5	53.80
		40.0	104.5	31.32	125.4	37.21	146.3	43.04	156.8	45.94	177.7	51.72	198.6	57.52	219.5	63.40
		43.0	104.5	34.55	125.4	40.95	146.3	47.27	156.8	50.42	177.7	56.72	198.6	63.08	219.5	69.60
		46.0	104.5	36.81	125.4	43.91	146.3	51.20	156.8	54.92	171.1	58.25	176.8	56.06	183.6	54.34
52.0	56.4	21.85	61.4	22.08	67.3	22.48	70.6	22.73	77.8	23.31	85.7	23.96	94.4	24.65		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	91.5	8.84	109.8	11.40	128.1	13.92	137.2	15.16	155.5	17.60	173.8	19.99	192.1	22.34
		-5.0	91.5	8.86	109.8	11.43	128.1	13.94	137.2	15.18	155.5	17.63	173.8	20.02	192.1	22.37
		0.0	91.5	8.89	109.8	11.46	128.1	13.97	137.2	15.22	155.5	17.66	173.8	20.06	192.1	22.41
		5.0	91.5	8.92	109.8	11.50	128.1	14.02	137.2	15.26	155.5	17.71	173.8	20.10	192.1	22.46
		10.0	91.5	8.97	109.8	11.55	128.1	14.08	137.2	15.32	155.5	17.77	173.8	20.17	192.1	22.51
		15.0	91.5	9.06	109.8	11.65	128.1	14.16	137.2	15.40	155.5	17.86	173.8	20.28	192.1	22.67
		20.0	91.5	9.23	109.8	11.90	128.1	14.53	137.2	15.83	155.5	18.40	173.8	20.90	192.1	23.36
		25.0	91.5	11.60	109.8	14.39	128.1	17.06	137.2	18.36	155.5	20.89	173.8	23.34	192.1	25.72
		30.0	91.5	16.46	109.8	19.53	128.1	22.55	137.2	24.05	155.5	27.00	173.8	29.90	192.1	32.75
		35.0	91.5	21.52	109.8	25.42	128.1	29.23	137.2	31.10	155.5	34.78	173.8	38.38	192.1	41.90
		40.0	91.5	26.07	109.8	30.69	128.1	35.16	137.2	37.35	155.5	41.64	173.8	45.83	192.1	49.95
		43.0	91.5	28.89	109.8	33.94	128.1	38.82	137.2	41.21	155.5	45.89	173.8	50.47	192.1	54.99
		46.0	91.5	30.84	109.8	36.23	128.1	41.64	137.2	44.34	155.5	49.77	173.8	53.25	183.6	54.34
52.0	56.4	21.85	61.4	22.08	67.3	22.48	70.6	22.73	77.8	23.31	85.7	23.96	94.4	24.65		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

70HP (Cooling) U-10ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	78.4	6.99	94.1	9.23	109.8	11.43	117.6	12.52	133.3	14.66	149.0	16.76	164.6	18.83
		-5.0	78.4	7.01	94.1	9.25	109.8	11.45	117.6	12.54	133.3	14.68	149.0	16.79	164.6	18.85
		0.0	78.4	7.03	94.1	9.27	109.8	11.48	117.6	12.56	133.3	14.71	149.0	16.81	164.6	18.88
		5.0	78.4	7.06	94.1	9.30	109.8	11.51	117.6	12.60	133.3	14.74	149.0	16.85	164.6	18.92
		10.0	78.4	7.10	94.1	9.35	109.8	11.56	117.6	12.65	133.3	14.80	149.0	16.90	164.6	18.97
		15.0	78.4	7.17	94.1	9.42	109.8	11.63	117.6	12.72	133.3	14.87	149.0	16.98	164.6	19.03
		20.0	78.4	7.29	94.1	9.53	109.8	11.74	117.6	12.83	133.3	15.00	149.0	17.13	164.6	19.22
		25.0	78.4	8.09	94.1	10.41	109.8	12.67	117.6	13.77	133.3	15.95	149.0	18.07	164.6	20.15
		30.0	78.4	13.05	94.1	15.25	109.8	17.34	117.6	18.36	133.3	20.31	149.0	22.18	164.6	23.97
		35.0	78.4	17.31	94.1	20.19	109.8	22.93	117.6	24.25	133.3	26.79	149.0	29.22	164.6	31.52
		40.0	78.4	21.21	94.1	24.70	109.8	28.01	117.6	29.60	133.3	32.66	149.0	35.57	164.6	38.34
		43.0	78.4	23.61	94.1	27.47	109.8	31.12	117.6	32.87	133.3	36.25	149.0	39.46	164.6	42.53
		46.0	78.4	25.47	94.1	29.44	109.8	33.31	117.6	35.20	133.3	38.92	149.0	42.56	164.6	46.11
52.0	56.4	21.85	61.4	22.08	67.3	22.48	70.6	22.73	77.8	23.31	85.7	23.96	94.4	24.65		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	65.3	5.11	78.4	7.01	91.5	8.88	98.0	9.81	111.1	11.63	124.1	13.43	137.2	15.19
		-5.0	65.3	5.12	78.4	7.02	91.5	8.90	98.0	9.82	111.1	11.65	124.1	13.45	137.2	15.21
		0.0	65.3	5.14	78.4	7.04	91.5	8.92	98.0	9.84	111.1	11.67	124.1	13.47	137.2	15.23
		5.0	65.3	5.16	78.4	7.07	91.5	8.94	98.0	9.87	111.1	11.70	124.1	13.50	137.2	15.26
		10.0	65.3	5.20	78.4	7.10	91.5	8.98	98.0	9.91	111.1	11.74	124.1	13.54	137.2	15.30
		15.0	65.3	5.25	78.4	7.16	91.5	9.04	98.0	9.96	111.1	11.79	124.1	13.59	137.2	15.36
		20.0	65.3	5.34	78.4	7.25	91.5	9.13	98.0	10.05	111.1	11.88	124.1	13.68	137.2	15.43
		25.0	65.3	5.54	78.4	7.45	91.5	9.33	98.0	10.26	111.1	13.61	124.1	13.88	137.2	15.64
		30.0	65.3	10.04	78.4	11.35	91.5	12.13	98.0	12.69	111.1	14.01	124.1	15.46	137.2	16.98
		35.0	65.3	13.49	78.4	15.50	91.5	17.34	98.0	18.20	111.1	19.81	124.1	21.29	137.2	22.63
		40.0	65.3	16.73	78.4	19.24	91.5	21.55	98.0	22.64	111.1	24.67	124.1	26.54	137.2	28.25
		43.0	65.3	18.73	78.4	21.55	91.5	24.14	98.0	25.36	111.1	27.65	124.1	29.77	137.2	31.71
		46.0	65.3	20.67	78.4	23.48	91.5	26.12	98.0	27.38	111.1	29.80	124.1	32.08	137.2	34.22
52.0	56.4	21.85	61.4	22.08	67.3	22.48	70.6	22.73	77.8	23.31	85.7	23.96	94.4	24.65		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	52.3	3.20	62.7	4.74	73.2	6.27	78.4	7.02	88.9	8.52	99.3	9.99	109.8	11.46
		-5.0	52.3	3.21	62.7	4.75	73.2	6.28	78.4	7.04	88.9	8.53	99.3	10.01	109.8	11.47
		0.0	52.3	3.22	62.7	4.77	73.2	6.30	78.4	7.05	88.9	8.55	99.3	10.03	109.8	11.49
		5.0	52.3	3.24	62.7	4.79	73.2	6.32	78.4	7.07	88.9	8.57	99.3	10.05	109.8	11.52
		10.0	52.3	3.26	62.7	4.81	73.2	6.35	78.4	7.10	88.9	8.60	99.3	10.08	109.8	11.56
		15.0	52.3	3.30	62.7	4.85	73.2	6.39	78.4	7.14	88.9	8.64	99.3	10.13	109.8	11.61
		20.0	52.3	3.37	62.7	4.92	73.2	6.45	78.4	7.20	88.9	8.70	99.3	10.19	109.8	11.67
		25.0	52.3	3.50	62.7	5.04	73.2	6.56	78.4	7.32	88.9	8.80	99.3	10.28	109.8	11.77
		30.0	52.3	5.02	62.7	5.93	73.2	7.15	78.4	7.81	88.9	9.17	99.3	10.71	109.8	12.40
		35.0	52.3	10.06	62.7	11.36	73.2	12.49	78.4	13.00	88.9	13.90	99.3	15.02	109.8	16.46
		40.0	52.3	12.64	62.7	14.33	73.2	15.81	78.4	16.49	88.9	17.70	99.3	18.74	109.8	19.64
		43.0	52.3	14.23	62.7	16.17	73.2	17.88	78.4	18.66	88.9	20.07	99.3	21.30	109.8	22.38
		46.0	52.3	16.41	62.7	18.28	73.2	19.97	78.4	20.75	88.9	22.20	99.3	23.49	109.8	24.64
52.0	52.3	19.42	61.4	22.08	67.3	22.48	70.6	22.73	77.8	23.31	85.7	23.96	94.4	24.65		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	39.2	1.25	47.0	2.43	54.9	3.61	58.8	4.20	66.6	5.36	74.5	6.51	82.3	7.64
		-5.0	39.2	1.26	47.0	2.44	54.9	3.62	58.8	4.21	66.6	5.38	74.5	6.53	82.3	7.66
		0.0	39.2	1.27	47.0	2.45	54.9	3.63	58.8	4.23	66.6	5.40	74.5	6.55	82.3	7.69
		5.0	39.2	1.28	47.0	2.46	54.9	3.65	58.8	4.25	66.6	5.42	74.5	6.58	82.3	7.72
		10.0	39.2	1.30	47.0	2.48	54.9	3.67	58.8	4.27	66.6	5.46	74.5	6.62	82.3	7.76
		15.0	39.2	1.32	47.0	2.51	54.9	3.70	58.8	4.31	66.6	5.50	74.5	6.67	82.3	7.82
		20.0	39.2	1.37	47.0	2.55	54.9	3.75	58.8	4.37	66.6	5.57	74.5	6.75	82.3	7.88
		25.0	39.2	1.45	47.0	2.63	54.9	3.84	58.8	4.46	66.6	5.66	74.5	6.85	82.3	8.07
		30.0	39.2	1.69	47.0	2.81	54.9	4.01	58.8	4.71	66.6	6.15	74.5	7.57	82.3	8.94
		35.0	39.2	7.05	47.0	7.80	54.9	8.68	58.8	9.25	66.6	10.38	74.5	11.50	82.3	12.61
		40.0	39.2	8.95	47.0	9.97	54.9	10.82	58.8	11.18	66.6	11.78	74.5	12.25	82.3	12.61
		43.0	39.2	10.14	47.0	11.34	54.9	12.35	58.8	12.78	66.6	13.53	74.5	14.11	82.3	14.56
		46.0	39.2	12.64	47.0	13.78	54.9	14.76	58.8	15.19	66.6	15.95	74.5	16.56	82.3	17.05
52.0	39.2	14.79	47.0	16.28	54.9	17.59	58.8	18.17	66.6	18.75	74.5	19.05	82.3	19.17		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-64. 70HP (Heating) U-10ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	100%	-24.9	-25.0	164.8	62.82	160.6	61.64	152.0	59.19	147.6	57.89	134.0	53.73	124.7	50.72	100.2	42.37
		-19.8	-20.0	173.0	64.26	168.7	63.04	159.7	60.48	155.1	59.13	141.0	54.82	131.2	51.71	105.5	43.07
		-14.7	-15.0	184.8	66.45	180.1	65.15	170.6	62.42	165.8	60.99	150.8	56.45	140.4	53.16	113.0	44.13
		-9.6	-10.0	200.6	69.51	195.6	68.09	185.4	65.15	180.1	63.61	163.9	58.69	152.7	55.18	122.9	45.54
		-4.4	-5.0	221.1	73.50	215.6	71.83	204.3	68.34	198.5	66.94	180.7	61.54	168.2	57.69	135.4	47.30
		-1.8	-2.5	232.4	75.74	227.4	74.47	215.5	70.96	209.4	69.14	190.5	63.41	177.4	59.38	137.9	46.52
		0.8	0.0	242.3	75.73	239.3	75.74	227.1	72.33	219.0	69.58	194.7	61.52	178.4	56.28	137.9	43.64
		2.8	2.0	251.4	74.52	243.3	71.92	227.1	66.81	219.0	64.29	194.7	56.93	178.4	52.15	137.9	40.61
		6.0	5.0	251.4	65.36	243.3	63.15	227.1	58.79	219.0	56.65	194.7	50.34	178.4	46.15	137.9	36.18
		7.0	6.0	251.4	62.41	243.3	60.32	227.1	56.20	219.0	54.10	194.7	48.12	178.4	44.23	137.9	34.78
		8.6	7.5	251.4	57.98	243.3	56.07	227.1	52.30	219.0	50.45	194.7	44.99	178.4	41.43	137.9	32.75
		11.2	10.0	251.4	51.10	243.3	49.49	227.1	46.32	219.0	44.76	194.7	40.12	178.4	37.08	137.9	29.59
		16.4	15.0	251.4	39.05	243.3	37.95	227.1	35.76	219.0	34.66	194.7	31.34	178.4	29.12	137.9	23.51
24.0	18.0	251.4	32.24	243.3	31.33	227.1	29.51	219.0	28.59	194.7	25.80	178.4	23.92	137.9	19.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	90%	-24.9	-25.0	164.8	62.82	160.6	61.64	152.0	59.19	147.6	57.89	134.0	53.73	124.7	50.72	100.2	42.37
		-19.8	-20.0	173.0	64.26	168.7	63.04	159.7	60.48	155.1	59.13	141.0	54.82	131.2	51.71	105.5	43.07
		-14.7	-15.0	184.8	66.45	180.1	65.15	170.6	62.42	165.8	60.99	150.8	56.45	140.4	53.16	113.0	44.13
		-9.6	-10.0	200.6	69.51	195.6	68.09	185.4	65.15	180.1	63.61	163.9	58.69	152.7	55.18	122.9	45.54
		-4.4	-5.0	221.1	73.50	215.6	71.83	204.3	68.34	197.1	63.13	175.2	56.64	160.6	52.32	124.1	41.54
		-1.8	-2.5	226.3	66.93	219.0	64.94	204.4	60.96	197.1	58.97	175.2	53.02	160.6	49.05	124.1	39.10
		0.8	0.0	226.3	61.76	219.0	59.97	204.4	56.39	197.1	54.59	175.2	49.20	160.6	45.60	124.1	36.52
		2.8	2.0	226.3	56.60	219.0	55.01	204.4	51.82	197.1	50.22	175.2	45.40	160.6	42.18	124.1	34.20
		6.0	5.0	226.3	49.58	219.0	48.38	204.4	45.93	197.1	44.66	175.2	40.75	160.6	37.94	124.1	30.66
		7.0	6.0	226.3	48.36	219.0	47.03	204.4	44.37	197.1	43.03	175.2	39.01	160.6	36.31	124.1	29.46
		8.6	7.5	226.3	44.73	219.0	43.55	204.4	41.18	197.1	39.98	175.2	36.38	160.6	33.94	124.1	27.72
		11.2	10.0	226.3	39.04	219.0	38.10	204.4	36.19	197.1	35.23	175.2	32.27	160.6	30.25	124.1	24.99
		16.4	15.0	226.3	29.09	219.0	28.52	204.4	27.33	197.1	26.71	175.2	24.77	160.6	23.39	124.1	19.65
24.0	18.0	226.3	28.24	219.0	27.48	204.4	25.95	197.1	25.18	175.2	22.88	160.6	21.35	124.1	17.52		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	80%	-24.9	-25.0	164.8	62.82	160.6	61.64	152.0	59.19	147.6	57.89	134.0	53.73	124.7	50.72	100.2	42.37
		-19.8	-20.0	173.0	64.26	168.7	63.04	159.7	60.48	155.1	59.13	141.0	54.82	131.2	51.71	105.5	43.07
		-14.7	-15.0	184.8	66.45	180.1	65.15	170.6	62.42	165.8	60.99	150.8	56.45	140.4	53.16	110.3	40.56
		-9.6	-10.0	200.6	69.51	194.7	60.70	181.7	57.50	175.2	55.87	155.7	50.86	142.8	47.41	110.3	38.38
		-4.4	-5.0	201.2	54.91	194.7	53.60	181.7	50.93	175.2	49.56	155.7	45.33	142.8	42.41	110.3	34.74
		-1.8	-2.5	201.2	50.90	194.7	49.74	181.7	47.35	175.2	46.12	155.7	42.32	142.8	39.67	110.3	32.81
		0.8	0.0	201.2	46.58	194.7	45.66	181.7	43.72	175.2	42.72	155.7	39.48	142.8	37.16	110.3	30.86
		2.8	2.0	201.2	43.15	194.7	42.33	181.7	40.60	175.2	39.69	155.7	36.77	142.8	34.68	110.3	28.91
		6.0	5.0	201.2	38.29	194.7	37.61	181.7	36.16	175.2	35.38	155.7	32.86	142.8	31.00	110.3	25.86
		7.0	6.0	201.2	37.03	194.7	36.28	181.7	34.72	175.2	33.92	155.7	31.40	142.8	29.63	110.3	24.84
		8.6	7.5	201.2	34.04	194.7	33.40	181.7	32.08	175.2	31.39	155.7	29.20	142.8	27.64	110.3	23.36
		11.2	10.0	201.2	29.39	194.7	28.93	181.7	27.96	175.2	27.45	155.7	25.76	142.8	24.53	110.3	21.03
		16.4	15.0	201.2	25.61	194.7	24.93	181.7	23.56	175.2	22.88	155.7	20.84	142.8	19.48	110.3	16.41
24.0	18.0	201.2	25.61	194.7	24.93	181.7	23.56	175.2	22.88	155.7	20.84	142.8	19.48	110.3	16.08		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	70%	-24.9	-25.0	164.8	62.82	160.6	61.64	152.0	59.19	147.6	57.89	134.0	53.73	124.7	50.72	96.5	37.45
		-19.8	-20.0	173.0	64.26	168.7	63.04	159.0	53.10	153.3	51.69	136.3	47.03	124.9	44.02	96.5	36.06
		-14.7	-15.0	176.0	52.72	170.3	51.66	159.0	49.45	153.3	48.30	136.3	44.62	124.9	41.98	96.5	34.51
		-9.6	-10.0	176.0	47.57	170.3	46.68	159.0	44.81	153.3	43.82	136.3	40.66	124.9	38.39	96.5	32.28
		-4.4	-5.0	176.0	42.01	170.3	41.35	159.0	39.93	153.3	39.17	136.3	36.62	124.9	34.72	96.5	29.33
		-1.8	-2.5	176.0	39.23	170.3	38.66	159.0	37.38	153.3	36.69	136.3	34.39	124.9	32.67	96.5	27.71
		0.8	0.0	176.0	36.32	170.3	35.82	159.0	34.70	153.3	34.10	136.3	32.05	124.9	30.51	96.5	26.02
		2.8	2.0	176.0	33.45	170.3	33.03	159.0	32.08	153.3	31.55	136.3	29.76	124.9	28.38	96.5	24.32
		6.0	5.0	176.0	29.32	170.3	29.01	159.0	28.28	153.3	27.85	136.3	26.36	124.9	25.17	96.5	21.60
		7.0	6.0	176.0	27.99	170.3	27.65	159.0	26.91	153.3	26.50	136.3	25.11	124.9	24.03	96.5	20.86
		8.6	7.5	176.0	25.59	170.3	25.34	159.0	24.76	153.3	24.43	136.3	23.29	124.9	22.38	96.5	19.61
		11.2	10.0	176.0	22.97	170.3	22.37	159.0	21.48	153.3	21.27	136.3	20.48	124.9	19.81	96.5	17.64
		16.4	15.0	176.0	22.97	170.3	22.37	159.0	21.18	153.3	20.59	136.3	18.80	124.9	17.61	96.5	14.63
24.0	18.0	176.0	22.97	170.3	22.37	159.0	21.18	153.3	20.59	136.3	18.80	124.9	17.61	96.5	14.63		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

70HP (Heating) U-10ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	150.9	46.31	146.0	45.57	136.3	43.97	131.4	43.11	116.8	40.15	107.1	37.77	82.7	31.38
		-19.8	-20.0	150.9	43.66	146.0	43.00	136.3	41.60	131.4	40.86	116.8	38.37	107.1	36.45	82.7	30.35
		-14.7	-15.0	150.9	40.69	146.0	40.15	136.3	38.94	131.4	38.27	116.8	36.02	107.1	34.30	82.7	29.24
		-9.6	-10.0	150.9	37.12	146.0	36.68	136.3	35.67	131.4	35.10	116.8	33.15	107.1	31.63	82.7	27.12
		-4.4	-5.0	150.9	32.92	146.0	32.58	136.3	31.78	131.4	31.33	116.8	29.74	107.1	28.47	82.7	24.62
		-1.8	-2.5	150.9	30.61	146.0	30.32	136.3	29.65	131.4	29.26	116.8	27.85	107.1	26.73	82.7	23.24
		0.8	0.0	150.9	28.19	146.0	27.97	136.3	27.43	131.4	27.10	116.8	25.90	107.1	24.92	82.7	21.81
		2.8	2.0	150.9	25.80	146.0	25.65	136.3	25.24	131.4	24.98	116.8	23.99	107.1	23.14	82.7	20.38
		6.0	5.0	150.9	22.28	146.0	22.18	136.3	21.89	131.4	21.70	116.8	20.96	107.1	20.31	82.7	17.99
		7.0	6.0	150.9	21.00	146.0	20.93	136.3	20.71	131.4	20.57	116.8	19.95	107.1	19.39	82.7	17.42
		8.6	7.5	150.9	20.33	146.0	19.82	136.3	19.04	131.4	18.95	116.8	18.50	107.1	18.05	82.7	16.39
		11.2	10.0	150.9	20.33	146.0	19.82	136.3	18.80	131.4	18.29	116.8	16.76	107.1	15.99	82.7	14.76
		16.4	15.0	150.9	20.33	146.0	19.82	136.3	18.80	131.4	18.29	116.8	16.76	107.1	15.74	82.7	13.19
		24.0	18.0	150.9	20.33	146.0	19.82	136.3	18.80	131.4	18.29	116.8	16.76	107.1	15.74	82.7	13.19

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	125.7	36.20	121.7	35.79	113.6	34.88	109.5	34.35	97.3	32.55	89.2	31.10	68.9	26.29
		-19.8	-20.0	125.7	34.37	121.7	34.03	113.6	33.20	109.5	32.72	97.3	31.06	89.2	29.75	68.9	25.63
		-14.7	-15.0	125.7	31.99	121.7	31.70	113.6	31.00	109.5	30.60	97.3	29.13	89.2	27.95	68.9	24.30
		-9.6	-10.0	125.7	29.06	121.7	28.84	113.6	28.29	109.5	27.97	97.3	26.75	89.2	25.74	68.9	22.53
		-4.4	-5.0	125.7	25.64	121.7	25.50	113.6	25.12	109.5	24.88	97.3	23.94	89.2	23.13	68.9	20.46
		-1.8	-2.5	125.7	23.75	121.7	23.66	113.6	23.39	109.5	23.20	97.3	22.41	89.2	21.71	68.9	19.32
		0.8	0.0	125.7	21.79	121.7	21.75	113.6	21.58	109.5	21.44	97.3	20.82	89.2	20.23	68.9	18.13
		2.8	2.0	125.7	19.86	121.7	19.86	113.6	19.74	109.5	19.63	97.3	19.13	89.2	18.64	68.9	16.85
		6.0	5.0	125.7	17.69	121.7	17.27	113.6	16.82	109.5	16.80	97.3	16.58	89.2	16.30	68.9	14.94
		7.0	6.0	125.7	17.69	121.7	17.27	113.6	16.42	109.5	15.99	97.3	15.80	89.2	15.57	68.9	14.46
		8.6	7.5	125.7	17.69	121.7	17.27	113.6	16.42	109.5	15.99	97.3	14.72	89.2	14.53	68.9	13.64
		11.2	10.0	125.7	17.69	121.7	17.27	113.6	16.42	109.5	15.99	97.3	14.72	89.2	13.87	68.9	12.34
		16.4	15.0	125.7	17.69	121.7	17.27	113.6	16.42	109.5	15.99	97.3	14.72	89.2	13.87	68.9	11.74
		24.0	18.0	125.7	17.69	121.7	17.27	113.6	16.42	109.5	15.99	97.3	14.72	89.2	13.87	68.9	11.74

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	100.6	28.09	97.3	27.88	90.8	27.34	87.6	27.01	77.9	25.84	71.4	24.87	55.2	21.61
		-19.8	-20.0	100.6	26.64	97.3	26.46	90.8	26.00	87.6	25.72	77.9	24.66	71.4	23.78	55.2	20.92
		-14.7	-15.0	100.6	24.75	97.3	24.62	90.8	24.26	87.6	24.03	77.9	23.13	71.4	22.35	55.2	19.78
		-9.6	-10.0	100.6	22.45	97.3	22.37	90.8	22.12	87.6	21.95	77.9	21.24	71.4	20.59	55.2	18.38
		-4.4	-5.0	100.6	19.75	97.3	19.74	90.8	19.62	87.6	19.52	77.9	19.02	71.4	18.52	55.2	16.73
		-1.8	-2.5	100.6	18.28	97.3	18.29	90.8	18.24	87.6	18.17	77.9	17.76	71.4	17.34	55.2	15.76
		0.8	0.0	100.6	16.55	97.3	16.60	90.8	16.63	87.6	16.61	77.9	16.36	71.4	16.05	55.2	14.75
		2.8	2.0	100.6	15.06	97.3	14.96	90.8	15.06	87.6	15.08	77.9	14.98	71.4	14.78	55.2	13.76
		6.0	5.0	100.6	15.06	97.3	14.72	90.8	14.04	87.6	13.70	77.9	13.07	71.4	13.00	55.2	12.34
		7.0	6.0	100.6	15.06	97.3	14.72	90.8	14.04	87.6	13.70	77.9	12.68	71.4	12.46	55.2	11.92
		8.6	7.5	100.6	15.06	97.3	14.72	90.8	14.04	87.6	13.70	77.9	12.68	71.4	11.99	55.2	11.28
		11.2	10.0	100.6	15.06	97.3	14.72	90.8	14.04	87.6	13.70	77.9	12.68	71.4	11.99	55.2	10.29
		16.4	15.0	100.6	15.06	97.3	14.72	90.8	14.04	87.6	13.70	77.9	12.68	71.4	11.99	55.2	10.29
		24.0	18.0	100.6	15.06	97.3	14.72	90.8	14.04	87.6	13.70	77.9	12.68	71.4	11.99	55.2	10.29

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	75.4	21.09	73.0	20.99	68.1	20.72	65.7	20.54	58.4	19.82	53.5	19.20	41.4	17.09
		-19.8	-20.0	75.4	20.01	73.0	19.94	68.1	19.72	65.7	19.57	58.4	18.95	53.5	18.38	41.4	16.48
		-14.7	-15.0	75.4	18.61	73.0	18.57	68.1	18.42	65.7	18.30	58.4	17.80	53.5	17.32	41.4	15.62
		-9.6	-10.0	75.4	16.87	73.0	16.86	68.1	16.78	65.7	16.70	58.4	16.33	53.5	15.94	41.4	14.52
		-4.4	-5.0	75.4	14.66	73.0	14.71	68.1	14.75	65.7	14.74	58.4	14.55	53.5	14.30	41.4	13.22
		-1.8	-2.5	75.4	13.47	73.0	13.55	68.1	13.65	65.7	13.67	58.4	13.58	53.5	13.40	41.4	12.51
		0.8	0.0	75.4	12.42	73.0	12.37	68.1	12.51	65.7	12.56	58.4	12.58	53.5	12.47	41.4	11.77
		2.8	2.0	75.4	12.42	73.0	12.16	68.1	11.65	65.7	11.50	58.4	11.60	53.5	11.56	41.4	11.05
		6.0	5.0	75.4	12.42	73.0	12.16	68.1	11.65	65.7	11.40	58.4	10.63	53.5	10.30	41.4	10.03
		7.0	6.0	75.4	12.42	73.0	12.16	68.1	11.65	65.7	11.40	58.4	10.63	53.5	10.12	41.4	9.72
		8.6	7.5	75.4	12.42	73.0	12.16	68.1	11.65	65.7	11.40	58.4	10.63	53.5	10.12	41.4	9.26
		11.2	10.0	75.4	12.42	73.0	12.16	68.1	11.65	65.7	11.40	58.4	10.63	53.5	10.12	41.4	8.85
		16.4	15.0	75.4	12.42	73.0	12.16	68.1	11.65	65.7	11.40	58.4	10.63	53.5	10.12	41.4	8.85
		24.0	18.0	75.4	12.42	73.0	12.16	68.1	11.65	65.7	11.40	58.4	10.63	53.5	10.12	41.4	8.85

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-65. 72HP (Cooling) U-16ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	134.7	16.23	161.6	19.47	188.5	22.71	202.0	24.33	228.9	27.58	255.9	30.82	282.8	34.06
		-5.0	134.7	16.25	161.6	19.50	188.5	22.74	202.0	24.37	228.9	27.62	255.9	30.86	282.8	34.09
		0.0	134.7	16.28	161.6	19.54	188.5	22.79	202.0	24.41	228.9	27.66	255.9	30.92	282.8	34.18
		5.0	134.7	16.33	161.6	19.59	188.5	22.84	202.0	24.48	228.9	27.79	255.9	31.15	282.8	34.46
		10.0	134.7	16.39	161.6	19.70	188.5	23.08	202.0	24.80	228.9	28.28	255.9	31.80	282.8	35.20
		15.0	134.7	16.73	161.6	20.34	188.5	24.04	202.0	25.92	228.9	29.71	255.9	33.55	282.8	37.07
		20.0	134.7	18.86	161.6	23.12	188.5	27.92	202.0	30.52	228.9	36.10	255.9	42.23	282.8	48.89
		25.0	134.7	24.17	161.6	29.80	188.5	35.98	202.0	39.28	228.9	46.29	255.9	53.86	282.8	62.00
		30.0	134.7	30.23	161.6	37.22	188.5	44.80	202.0	48.81	228.9	57.28	255.9	66.36	282.8	76.05
		35.0	134.7	36.74	161.6	45.18	188.5	54.26	202.0	59.05	228.9	69.10	255.9	79.83	270.5	82.59
		40.0	134.7	43.76	161.6	53.77	188.5	64.47	202.0	70.09	228.9	81.88	239.7	82.58	249.9	82.59
		43.0	134.7	48.22	161.6	59.23	188.5	70.99	202.0	77.16	218.7	82.59	229.1	82.59	234.0	78.45
		46.0	133.3	52.41	160.0	64.39	169.9	65.50	171.7	63.75	176.3	60.84	182.2	58.54	189.2	56.73
52.0	58.1	22.57	63.3	22.80	69.4	23.22	72.8	23.49	80.1	24.09	88.3	24.78	97.3	25.50		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	121.2	13.08	145.4	16.42	169.7	19.68	181.8	21.27	206.0	24.41	230.3	27.48	254.5	30.48
		-5.0	121.2	13.11	145.4	16.45	169.7	19.71	181.8	21.31	206.0	24.45	230.3	27.52	254.5	30.52
		0.0	121.2	13.14	145.4	16.49	169.7	19.75	181.8	21.35	206.0	24.49	230.3	27.56	254.5	30.55
		5.0	121.2	13.19	145.4	16.54	169.7	19.81	181.8	21.40	206.0	24.54	230.3	27.63	254.5	30.68
		10.0	121.2	13.26	145.4	16.60	169.7	19.89	181.8	21.52	206.0	24.76	230.3	27.95	254.5	31.09
		15.0	121.2	13.40	145.4	16.91	169.7	20.40	181.8	22.12	206.0	25.53	230.3	28.88	254.5	32.17
		20.0	121.2	14.66	145.4	18.63	169.7	22.49	181.8	24.38	206.0	28.06	230.3	32.21	254.5	36.63
		25.0	121.2	19.61	145.4	24.20	169.7	28.95	181.8	31.39	206.0	36.38	230.3	41.50	254.5	46.77
		30.0	121.2	25.23	145.4	30.78	169.7	36.44	181.8	39.31	206.0	45.14	230.3	51.10	254.5	57.21
		35.0	121.2	32.23	145.4	38.96	169.7	45.76	181.8	49.20	206.0	56.17	230.3	63.33	254.5	70.75
		40.0	121.2	38.43	145.4	46.15	169.7	53.94	181.8	57.89	206.0	65.94	230.3	74.33	249.9	82.59
		43.0	121.2	42.26	145.4	50.60	169.7	59.04	181.8	63.34	206.0	72.18	229.1	82.59	234.0	78.45
		46.0	121.2	45.24	145.4	54.84	169.7	64.90	171.7	63.75	176.3	60.84	182.2	58.54	189.2	56.73
52.0	58.1	22.57	63.3	22.80	69.4	23.22	72.8	23.49	80.1	24.09	88.3	24.78	97.3	25.50		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	107.7	11.21	129.3	14.23	150.8	17.18	161.6	18.64	183.1	21.49	204.7	24.29	226.2	27.03
		-5.0	107.7	11.23	129.3	14.25	150.8	17.21	161.6	18.66	183.1	21.52	204.7	24.32	226.2	27.07
		0.0	107.7	11.26	129.3	14.29	150.8	17.24	161.6	18.70	183.1	21.56	204.7	24.36	226.2	27.11
		5.0	107.7	11.30	129.3	14.33	150.8	17.29	161.6	18.75	183.1	21.61	204.7	24.41	226.2	27.15
		10.0	107.7	11.36	129.3	14.39	150.8	17.36	161.6	18.80	183.1	22.30	204.7	24.51	226.2	27.30
		15.0	107.7	11.44	129.3	14.50	150.8	17.53	161.6	19.04	183.1	22.01	204.7	24.94	226.2	27.81
		20.0	107.7	11.98	129.3	15.30	150.8	18.56	161.6	20.16	183.1	23.30	204.7	26.35	226.2	29.32
		25.0	107.7	15.95	129.3	19.42	150.8	22.95	161.6	24.74	183.1	28.36	204.7	32.02	226.2	35.74
		30.0	107.7	20.85	129.3	25.17	150.8	29.52	161.6	31.69	183.1	36.06	204.7	40.43	226.2	44.83
		35.0	107.7	27.01	129.3	32.35	150.8	37.67	161.6	40.31	183.1	45.59	204.7	50.87	226.2	56.16
		40.0	107.7	32.51	129.3	38.71	150.8	44.84	161.6	47.89	183.1	53.97	204.7	60.07	226.2	66.25
		43.0	107.7	35.90	129.3	42.64	150.8	49.29	161.6	52.60	183.1	59.23	204.7	65.92	226.2	72.77
		46.0	107.7	38.29	129.3	45.76	150.8	53.43	161.6	57.34	176.3	60.84	182.2	58.54	189.2	56.73
52.0	58.1	22.57	63.3	22.80	69.4	23.22	72.8	23.49	80.1	24.09	88.3	24.78	97.3	25.50		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	94.3	9.30	113.1	11.99	132.0	14.63	141.4	15.93	160.3	18.50	179.1	21.01	198.0	23.47
		-5.0	94.3	9.32	113.1	12.01	132.0	14.66	141.4	15.96	160.3	18.52	179.1	21.04	198.0	23.50
		0.0	94.3	9.34	113.1	12.04	132.0	14.68	141.4	15.99	160.3	18.55	179.1	21.07	198.0	23.53
		5.0	94.3	9.38	113.1	12.08	132.0	14.72	141.4	16.03	160.3	18.59	179.1	21.11	198.0	23.58
		10.0	94.3	9.42	113.1	12.13	132.0	14.78	141.4	16.08	160.3	18.65	179.1	21.16	198.0	23.62
		15.0	94.3	9.50	113.1	12.21	132.0	14.85	141.4	16.15	160.3	18.74	179.1	21.29	198.0	23.80
		20.0	94.3	9.67	113.1	12.48	132.0	15.24	141.4	16.60	160.3	19.28	179.1	21.90	198.0	24.47
		25.0	94.3	11.95	113.1	14.86	132.0	17.64	141.4	19.00	160.3	21.64	179.1	24.20	198.0	26.69
		30.0	94.3	16.86	113.1	20.10	132.0	23.29	141.4	24.86	160.3	27.97	179.1	31.02	198.0	34.03
		35.0	94.3	22.17	113.1	26.29	132.0	30.31	141.4	32.28	160.3	36.15	179.1	39.93	198.0	43.64
		40.0	94.3	26.98	113.1	31.84	132.0	36.55	141.4	38.85	160.3	43.37	179.1	47.78	198.0	52.11
		43.0	94.3	29.95	113.1	35.26	132.0	40.40	141.4	42.91	160.3	47.84	179.1	52.66	198.0	57.41
		46.0	94.3	32.01	113.1	37.69	132.0	43.37	141.4	46.21	160.3	51.92	179.1	55.58	189.2	56.73
52.0	58.1	22.57	63.3	22.80	69.4	23.22	72.8	23.49	80.1	24.09	88.3	24.78	97.3	25.50		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

72HP (Cooling) U-16ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	80.8	7.36	97.0	9.71	113.1	12.02	121.2	13.16	137.4	15.41	153.5	17.62	169.7	19.79
		-5.0	80.8	7.38	97.0	9.73	113.1	12.04	121.2	13.18	137.4	15.43	153.5	17.64	169.7	19.81
		0.0	80.8	7.40	97.0	9.75	113.1	12.06	121.2	13.20	137.4	15.46	153.5	17.67	169.7	19.84
		5.0	80.8	7.42	97.0	9.78	113.1	12.09	121.2	13.24	137.4	15.49	153.5	17.70	169.7	19.87
		10.0	80.8	7.46	97.0	9.82	113.1	12.14	121.2	13.28	137.4	15.54	153.5	17.75	169.7	19.92
		15.0	80.8	7.52	97.0	9.89	113.1	12.20	121.2	13.35	137.4	15.60	153.5	17.81	169.7	19.97
		20.0	80.8	7.63	97.0	9.98	113.1	12.31	121.2	13.46	137.4	15.74	153.5	17.97	169.7	20.17
		25.0	80.8	8.43	97.0	10.86	113.1	13.23	121.2	14.39	137.4	16.67	153.5	18.90	169.7	21.08
		30.0	80.8	13.27	97.0	15.59	113.1	17.80	121.2	18.86	137.4	20.93	153.5	22.90	169.7	24.78
		35.0	80.8	17.74	97.0	20.78	113.1	23.67	121.2	25.06	137.4	27.74	153.5	30.29	169.7	32.72
		40.0	80.8	21.85	97.0	25.53	113.1	29.01	121.2	30.69	137.4	33.91	153.5	36.98	169.7	39.90
		43.0	80.8	24.39	97.0	28.45	113.1	32.29	121.2	34.14	137.4	37.69	153.5	41.07	169.7	44.31
		46.0	80.8	26.37	97.0	30.54	113.1	34.61	121.2	36.60	137.4	40.52	153.5	44.34	169.7	48.08
52.0	58.1	22.57	63.3	22.80	69.4	23.22	72.8	23.49	80.1	24.09	88.3	24.78	97.3	25.50		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	67.3	5.39	80.8	7.38	94.3	9.35	101.0	10.32	114.5	12.24	127.9	14.12	141.4	15.97
		-5.0	67.3	5.40	80.8	7.40	94.3	9.36	101.0	10.33	114.5	12.25	127.9	14.14	141.4	15.99
		0.0	67.3	5.41	80.8	7.41	94.3	9.38	101.0	10.35	114.5	12.27	127.9	14.16	141.4	16.01
		5.0	67.3	5.44	80.8	7.44	94.3	9.40	101.0	10.38	114.5	12.30	127.9	14.18	141.4	16.04
		10.0	67.3	5.47	80.8	7.47	94.3	9.44	101.0	10.41	114.5	12.33	127.9	14.22	141.4	16.07
		15.0	67.3	5.51	80.8	7.52	94.3	9.49	101.0	10.46	114.5	12.38	127.9	14.27	141.4	16.12
		20.0	67.3	5.60	80.8	7.60	94.3	9.57	101.0	10.54	114.5	12.46	127.9	14.34	141.4	16.19
		25.0	67.3	5.80	80.8	7.81	94.3	9.78	101.0	10.75	114.5	12.67	127.9	14.56	141.4	16.41
		30.0	67.3	10.09	80.8	11.51	94.3	12.45	101.0	13.09	114.5	14.52	127.9	16.09	141.4	17.70
		35.0	67.3	13.71	80.8	15.83	94.3	17.77	101.0	18.68	114.5	20.38	127.9	21.93	141.4	23.35
		40.0	67.3	17.13	80.8	19.78	94.3	22.21	101.0	23.36	114.5	25.50	127.9	27.47	141.4	29.28
		43.0	67.3	19.23	80.8	22.21	94.3	24.94	101.0	26.22	114.5	28.64	127.9	30.87	141.4	32.92
		46.0	67.3	21.32	80.8	24.27	94.3	27.05	101.0	28.38	114.5	30.92	127.9	33.31	141.4	35.57
52.0	58.1	22.57	63.3	22.80	69.4	23.22	72.8	23.49	80.1	24.09	88.3	24.78	97.3	25.50		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	53.9	3.38	64.6	5.00	75.4	6.61	80.8	7.40	91.6	8.97	102.3	10.52	113.1	12.05
		-5.0	53.9	3.39	64.6	5.01	75.4	6.62	80.8	7.41	91.6	8.98	102.3	10.53	113.1	12.06
		0.0	53.9	3.40	64.6	5.03	75.4	6.63	80.8	7.42	91.6	8.99	102.3	10.55	113.1	12.08
		5.0	53.9	3.42	64.6	5.04	75.4	6.65	80.8	7.44	91.6	9.01	102.3	10.57	113.1	12.11
		10.0	53.9	3.44	64.6	5.07	75.4	6.67	80.8	7.47	91.6	9.04	102.3	10.60	113.1	12.14
		15.0	53.9	3.47	64.6	5.10	75.4	6.71	80.8	7.50	91.6	9.07	102.3	10.64	113.1	12.18
		20.0	53.9	3.53	64.6	5.16	75.4	6.77	80.8	7.56	91.6	9.13	102.3	10.69	113.1	12.25
		25.0	53.9	3.65	64.6	5.27	75.4	6.87	80.8	7.66	91.6	9.22	102.3	10.77	113.1	12.34
		30.0	53.9	5.14	64.6	6.15	75.4	7.46	80.8	8.16	91.6	9.60	102.3	11.21	113.1	12.97
		35.0	53.9	10.10	64.6	11.47	75.4	12.66	80.8	13.19	91.6	14.15	102.3	15.33	113.1	16.84
		40.0	53.9	12.81	64.6	14.60	75.4	16.16	80.8	16.87	91.6	18.15	102.3	19.25	113.1	20.20
		43.0	53.9	14.50	64.6	16.53	75.4	18.34	80.8	19.16	91.6	20.65	102.3	21.95	113.1	23.08
		46.0	53.9	16.83	64.6	18.80	75.4	20.58	80.8	21.41	91.6	22.93	102.3	24.29	113.1	25.49
52.0	53.9	20.00	63.3	22.80	69.4	23.22	72.8	23.49	80.1	24.09	88.3	24.78	97.3	25.50		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	40.4	1.33	48.5	2.57	56.6	3.81	60.6	4.43	68.7	5.65	76.8	6.85	84.8	8.03
		-5.0	40.4	1.34	48.5	2.58	56.6	3.82	60.6	4.44	68.7	5.66	76.8	6.87	84.8	8.05
		0.0	40.4	1.35	48.5	2.59	56.6	3.83	60.6	4.45	68.7	5.68	76.8	6.89	84.8	8.08
		5.0	40.4	1.36	48.5	2.60	56.6	3.85	60.6	4.47	68.7	5.70	76.8	6.92	84.8	8.11
		10.0	40.4	1.38	48.5	2.62	56.6	3.87	60.6	4.49	68.7	5.73	76.8	6.95	84.8	8.14
		15.0	40.4	1.40	48.5	2.64	56.6	3.90	60.6	4.53	68.7	5.78	76.8	7.00	84.8	8.19
		20.0	40.4	1.44	48.5	2.68	56.6	3.94	60.6	4.58	68.7	5.84	76.8	7.06	84.8	8.25
		25.0	40.4	1.52	48.5	2.75	56.6	4.02	60.6	4.67	68.7	5.92	76.8	7.18	84.8	8.45
		30.0	40.4	1.75	48.5	2.91	56.6	4.19	60.6	4.92	68.7	6.42	76.8	7.89	84.8	9.30
		35.0	40.4	6.92	48.5	7.71	56.6	8.63	60.6	9.24	68.7	10.44	76.8	11.62	84.8	12.78
		40.0	40.4	8.92	48.5	10.00	56.6	10.89	60.6	11.27	68.7	11.91	76.8	12.40	84.8	12.78
		43.0	40.4	10.18	48.5	11.45	56.6	12.51	60.6	12.97	68.7	13.75	76.8	14.37	84.8	14.84
		46.0	40.4	12.87	48.5	14.07	56.6	15.11	60.6	15.56	68.7	16.35	76.8	17.00	84.8	17.51
52.0	40.4	15.14	48.5	16.71	56.6	18.08	60.6	18.69	68.7	19.30	76.8	19.62	84.8	19.75		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-66. 72HP (Heating) U-16ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	162.4	59.54	158.3	58.48	149.9	56.24	145.6	55.03	132.4	51.18	123.3	48.40	99.2	40.56
		-19.8	-20.0	170.5	60.88	166.2	59.75	157.4	57.40	153.0	56.18	139.2	52.18	129.7	49.30	104.5	41.22
		-14.7	-15.0	182.0	62.88	177.4	61.69	168.2	59.20	163.5	57.90	148.8	53.69	138.7	50.66	111.9	42.23
		-9.6	-10.0	197.4	65.69	192.5	64.42	182.6	61.74	177.5	60.32	161.8	55.81	150.8	52.57	121.7	43.58
		-4.4	-5.0	217.6	69.72	212.3	68.32	201.3	65.29	195.7	63.69	178.3	58.61	166.2	54.98	134.0	45.19
		-1.8	-2.5	229.5	71.51	223.9	70.07	212.3	66.98	206.4	65.38	188.0	60.22	175.2	56.50	141.4	46.43
		0.8	0.0	242.8	72.97	236.9	71.46	224.6	68.26	218.4	66.60	199.0	61.27	184.1	56.80	142.3	43.89
		2.8	2.0	257.2	74.36	251.0	72.80	234.4	67.62	226.0	65.04	200.9	57.48	184.1	52.59	142.3	40.79
		6.0	5.0	259.5	66.16	251.1	63.88	234.4	59.40	226.0	57.20	200.9	50.73	184.1	46.46	142.3	36.28
		7.0	6.0	259.5	63.12	251.1	60.97	234.4	56.74	226.0	54.60	200.9	48.47	184.1	44.49	142.3	34.85
		8.6	7.5	259.5	58.59	251.1	56.62	234.4	52.75	226.0	50.85	200.9	45.26	184.1	41.62	142.3	32.78
		11.2	10.0	259.5	51.50	251.1	49.85	234.4	46.60	226.0	45.00	200.9	40.26	184.1	37.16	142.3	29.55
		16.4	15.0	259.5	39.11	251.1	38.00	234.4	35.77	226.0	34.66	200.9	31.31	184.1	29.06	142.3	23.39
		24.0	18.0	259.5	32.24	251.1	31.33	234.4	29.50	226.0	28.57	200.9	25.76	184.1	23.86	142.3	19.09

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	90%	-24.9	-25.0	162.4	59.54	158.3	58.48	149.9	56.24	145.6	55.03	132.4	51.18	123.3	48.40	99.2	40.56
		-19.8	-20.0	170.5	60.88	166.2	59.75	157.4	57.40	153.0	56.18	139.2	52.18	129.7	49.30	104.5	41.22
		-14.7	-15.0	182.0	62.88	177.4	61.69	168.2	59.20	163.5	57.90	148.8	53.69	138.7	50.66	111.9	42.23
		-9.6	-10.0	197.4	65.69	192.5	64.42	182.6	61.74	177.5	60.32	161.8	55.81	150.8	52.57	121.7	43.58
		-4.4	-5.0	217.6	69.72	212.3	68.32	201.3	65.29	195.7	63.69	178.3	58.61	165.7	54.98	128.1	41.74
		-1.8	-2.5	229.5	71.51	223.9	70.07	210.9	61.64	203.4	59.60	180.8	53.49	165.7	49.42	128.1	39.27
		0.8	0.0	233.5	62.49	226.0	60.65	210.9	56.96	203.4	55.12	180.8	49.59	165.7	45.90	128.1	36.64
		2.8	2.0	233.5	57.20	226.0	55.57	210.9	52.29	203.4	50.64	180.8	45.70	165.7	42.44	128.1	34.31
		6.0	5.0	233.5	49.98	226.0	48.77	210.9	46.27	203.4	45.00	180.8	41.01	165.7	38.13	128.1	30.69
		7.0	6.0	233.5	48.86	226.0	47.48	210.9	44.74	203.4	43.36	180.8	39.23	165.7	36.46	128.1	29.46
		8.6	7.5	233.5	45.12	226.0	43.90	210.9	41.46	203.4	40.23	180.8	36.53	165.7	34.03	128.1	27.68
		11.2	10.0	233.5	39.27	226.0	38.30	210.9	36.34	203.4	35.34	180.8	32.32	165.7	30.26	128.1	24.90
		16.4	15.0	233.5	29.07	226.0	28.49	210.9	27.28	203.4	26.66	180.8	24.68	165.7	23.29	128.1	19.50
		24.0	18.0	233.5	28.17	226.0	27.39	210.9	25.84	203.4	25.07	180.8	22.74	165.7	21.19	128.1	17.32

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	80%	-24.9	-25.0	162.4	59.54	158.3	58.48	149.9	56.24	145.6	55.03	132.4	51.18	123.3	48.40	99.2	40.56
		-19.8	-20.0	170.5	60.88	166.2	59.75	157.4	57.40	153.0	56.18	139.2	52.18	129.7	49.30	104.5	41.22
		-14.7	-15.0	182.0	62.88	177.4	61.69	168.2	59.20	163.5	57.90	148.8	53.69	138.7	50.66	111.9	42.23
		-9.6	-10.0	197.4	65.69	192.5	64.42	182.6	61.74	177.5	60.32	160.7	55.81	147.3	47.72	113.8	38.50
		-4.4	-5.0	207.6	55.47	200.9	54.12	187.5	51.37	180.8	49.96	160.7	45.63	147.3	42.65	113.8	34.82
		-1.8	-2.5	207.6	51.37	200.9	50.18	187.5	47.72	180.8	46.46	160.7	42.56	147.3	39.85	113.8	32.87
		0.8	0.0	207.6	46.90	200.9	45.97	187.5	43.99	180.8	42.97	160.7	39.67	147.3	37.32	113.8	30.90
		2.8	2.0	207.6	43.42	200.9	42.60	187.5	40.83	180.8	39.90	160.7	36.93	147.3	34.79	113.8	28.92
		6.0	5.0	207.6	38.51	200.9	37.82	187.5	36.34	180.8	35.55	160.7	32.99	147.3	31.08	113.8	25.83
		7.0	6.0	207.6	37.32	200.9	36.54	187.5	34.93	180.8	34.10	160.7	31.50	147.3	29.68	113.8	24.79
		8.6	7.5	207.6	34.25	200.9	33.59	187.5	32.22	180.8	31.51	160.7	29.25	147.3	27.65	113.8	23.28
		11.2	10.0	207.6	29.47	200.9	29.00	187.5	27.99	180.8	27.46	160.7	25.73	147.3	24.47	113.8	20.90
		16.4	15.0	207.6	25.50	200.9	24.81	187.5	23.43	180.8	22.74	160.7	20.68	147.3	19.30	113.8	16.23
		24.0	18.0	207.6	25.50	200.9	24.81	187.5	23.43	180.8	22.74	160.7	20.68	147.3	19.30	113.8	15.85

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	70%	-24.9	-25.0	162.4	59.54	158.3	58.48	149.9	56.24	145.6	55.03	132.4	51.18	123.3	48.40	99.2	40.56
		-19.8	-20.0	170.5	60.88	166.2	59.75	157.4	57.40	153.0	56.18	139.2	52.18	128.9	49.30	99.6	36.13
		-14.7	-15.0	181.6	53.20	175.8	52.11	164.1	49.84	158.2	48.66	140.6	44.89	128.9	42.18	99.6	34.54
		-9.6	-10.0	181.6	47.95	175.8	47.04	164.1	45.11	158.2	44.10	140.6	40.86	128.9	38.54	99.6	32.30
		-4.4	-5.0	181.6	42.20	175.8	41.54	164.1	40.10	158.2	39.31	140.6	36.73	128.9	34.80	99.6	29.32
		-1.8	-2.5	181.6	39.41	175.8	38.81	164.1	37.52	158.2	36.81	140.6	34.47	128.9	32.71	99.6	27.68
		0.8	0.0	181.6	36.46	175.8	35.94	164.1	34.81	158.2	34.19	140.6	32.10	128.9	30.53	99.6	25.96
		2.8	2.0	181.6	33.54	175.8	33.11	164.1	32.14	158.2	31.61	140.6	29.78	128.9	28.38	99.6	24.26
		6.0	5.0	181.6	29.37	175.8	29.06	164.1	28.31	158.2	27.88	140.6	26.37	128.9	25.16	99.6	21.53
		7.0	6.0	181.6	28.12	175.8	27.77	164.1	26.99	158.2	26.56	140.6	25.11	128.9	24.00	99.6	20.74
		8.6	7.5	181.6	25.66	175.8	25.39	164.1	24.78	158.2	24.44	140.6	23.25	128.9	22.32	99.6	19.48
		11.2	10.0	181.6	22.83	175.8	22.23	164.1	21.42	158.2	21.20	140.6	20.37	128.9	19.69	99.6	17.47
		16.4	15.0	181.6	22.83	175.8	22.23	164.1	21.02	158.2	20.42	140.6	18.61	128.9	17.40	99.6	14.39
		24.0	18.0	181.6	22.83	175.8	22.23	164.1	21.02	158.2	20.42	140.6	18.61	128.9	17.40	99.6	14.39

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

72HP (Heating) U-16ME2E8+U-16ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	155.7	46.63	150.7	45.87	140.6	44.23	135.6	43.34	120.5	40.30	110.5	37.85	85.4	31.35
		-19.8	-20.0	155.7	43.93	150.7	43.25	140.6	41.78	135.6	40.98	120.5	38.44	110.5	36.50	85.4	30.30
		-14.7	-15.0	155.7	40.80	150.7	40.25	140.6	39.04	135.6	38.35	120.5	36.07	110.5	34.32	85.4	29.20
		-9.6	-10.0	155.7	37.20	150.7	36.75	140.6	35.72	135.6	35.16	120.5	33.17	110.5	31.63	85.4	27.06
		-4.4	-5.0	155.7	32.95	150.7	32.61	140.6	31.80	135.6	31.34	120.5	29.72	110.5	28.44	85.4	24.53
		-1.8	-2.5	155.7	30.62	150.7	30.34	140.6	29.65	135.6	29.25	120.5	27.82	110.5	26.67	85.4	23.13
		0.8	0.0	155.7	28.18	150.7	27.96	140.6	27.40	135.6	27.07	120.5	25.85	110.5	24.84	85.4	21.68
		2.8	2.0	155.7	25.75	150.7	25.60	140.6	25.18	135.6	24.92	120.5	23.91	110.5	23.04	85.4	20.24
		6.0	5.0	155.7	22.28	150.7	22.19	140.6	21.88	135.6	21.68	120.5	20.90	110.5	20.23	85.4	17.84
		7.0	6.0	155.7	20.99	150.7	20.91	140.6	20.67	135.6	20.51	120.5	19.87	110.5	19.28	85.4	17.26
		8.6	7.5	155.7	20.16	150.7	19.64	140.6	18.96	135.6	18.86	120.5	18.38	110.5	17.92	85.4	16.21
		11.2	10.0	155.7	20.16	150.7	19.64	140.6	18.61	135.6	18.09	120.5	16.54	110.5	15.82	85.4	14.56
		16.4	15.0	155.7	20.16	150.7	19.64	140.6	18.61	135.6	18.09	120.5	16.54	110.5	15.51	85.4	12.93
		24.0	18.0	155.7	20.16	150.7	19.64	140.6	18.61	135.6	18.09	120.5	16.54	110.5	15.51	85.4	12.93

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	129.7	36.23	125.6	35.82	117.2	34.89	113.0	34.36	100.4	32.53	92.1	31.08	71.1	26.20
		-19.8	-20.0	129.7	34.38	125.6	34.04	117.2	33.19	113.0	32.72	100.4	31.03	92.1	29.71	71.1	25.53
		-14.7	-15.0	129.7	31.97	125.6	31.69	117.2	30.98	113.0	30.57	100.4	29.08	92.1	27.89	71.1	24.18
		-9.6	-10.0	129.7	29.01	125.6	28.79	117.2	28.25	113.0	27.91	100.4	26.68	92.1	25.66	71.1	22.40
		-4.4	-5.0	129.7	25.55	125.6	25.42	117.2	25.04	113.0	24.79	100.4	23.83	92.1	23.01	71.1	20.30
		-1.8	-2.5	129.7	23.65	125.6	23.57	117.2	23.28	113.0	23.09	100.4	22.29	92.1	21.57	71.1	19.15
		0.8	0.0	129.7	21.66	125.6	21.62	117.2	21.45	113.0	21.31	100.4	20.68	92.1	20.08	71.1	17.95
		2.8	2.0	129.7	19.72	125.6	19.73	117.2	19.64	113.0	19.56	100.4	19.04	92.1	18.53	71.1	16.68
		6.0	5.0	129.7	17.49	125.6	17.06	117.2	16.70	113.0	16.68	100.4	16.44	92.1	16.14	71.1	14.73
		7.0	6.0	129.7	17.49	125.6	17.06	117.2	16.20	113.0	15.80	100.4	15.64	92.1	15.40	71.1	14.26
		8.6	7.5	129.7	17.49	125.6	17.06	117.2	16.20	113.0	15.77	100.4	14.50	92.1	14.33	71.1	13.42
		11.2	10.0	129.7	17.49	125.6	17.06	117.2	16.20	113.0	15.77	100.4	14.48	92.1	13.62	71.1	12.09
		16.4	15.0	129.7	17.49	125.6	17.06	117.2	16.20	113.0	15.77	100.4	14.48	92.1	13.62	71.1	11.46
		24.0	18.0	129.7	17.49	125.6	17.06	117.2	16.20	113.0	15.77	100.4	14.48	92.1	13.62	71.1	11.46

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	103.8	28.03	100.4	27.80	93.7	27.26	90.4	26.94	80.4	25.74	73.7	24.77	56.9	21.46
		-19.8	-20.0	103.8	26.56	100.4	26.38	93.7	25.92	90.4	25.63	80.4	24.55	73.7	23.66	56.9	20.77
		-14.7	-15.0	103.8	24.65	100.4	24.51	93.7	24.15	90.4	23.92	80.4	23.01	73.7	22.22	56.9	19.62
		-9.6	-10.0	103.8	22.32	100.4	22.24	93.7	21.98	90.4	21.81	80.4	21.09	73.7	20.44	56.9	18.20
		-4.4	-5.0	103.8	19.60	100.4	19.58	93.7	19.46	90.4	19.35	80.4	18.85	73.7	18.35	56.9	16.53
		-1.8	-2.5	103.8	18.10	100.4	18.13	93.7	18.08	90.4	18.01	80.4	17.63	73.7	17.20	56.9	15.58
		0.8	0.0	103.8	16.45	100.4	16.50	93.7	16.51	90.4	16.48	80.4	16.22	73.7	15.89	56.9	14.55
		2.8	2.0	103.8	14.82	100.4	14.81	93.7	14.91	90.4	14.92	80.4	14.81	73.7	14.60	56.9	13.54
		6.0	5.0	103.8	14.82	100.4	14.48	93.7	13.79	90.4	13.44	80.4	12.86	73.7	12.78	56.9	12.08
		7.0	6.0	103.8	14.82	100.4	14.48	93.7	13.79	90.4	13.44	80.4	12.41	73.7	12.23	56.9	11.67
		8.6	7.5	103.8	14.82	100.4	14.48	93.7	13.79	90.4	13.44	80.4	12.41	73.7	11.72	56.9	11.02
		11.2	10.0	103.8	14.82	100.4	14.48	93.7	13.79	90.4	13.44	80.4	12.41	73.7	11.72	56.9	10.01
		16.4	15.0	103.8	14.82	100.4	14.48	93.7	13.79	90.4	13.44	80.4	12.41	73.7	11.72	56.9	10.00
		24.0	18.0	103.8	14.82	100.4	14.48	93.7	13.79	90.4	13.44	80.4	12.41	73.7	11.72	56.9	10.00

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	77.8	20.95	75.3	20.85	70.3	20.57	67.8	20.39	60.3	19.66	55.2	19.03	42.7	16.89
		-19.8	-20.0	77.8	19.86	75.3	19.79	70.3	19.56	67.8	19.41	60.3	18.77	55.2	18.20	42.7	16.27
		-14.7	-15.0	77.8	18.45	75.3	18.41	70.3	18.24	67.8	18.13	60.3	17.61	55.2	17.13	42.7	15.40
		-9.6	-10.0	77.8	16.72	75.3	16.72	70.3	16.64	67.8	16.56	60.3	16.16	55.2	15.77	42.7	14.31
		-4.4	-5.0	77.8	14.50	75.3	14.55	70.3	14.58	67.8	14.56	60.3	14.36	55.2	14.09	42.7	12.98
		-1.8	-2.5	77.8	13.29	75.3	13.37	70.3	13.46	67.8	13.48	60.3	13.38	55.2	13.19	42.7	12.26
		0.8	0.0	77.8	12.15	75.3	12.16	70.3	12.30	67.8	12.35	60.3	12.35	55.2	12.24	42.7	11.52
		2.8	2.0	77.8	12.15	75.3	11.89	70.3	11.38	67.8	11.27	60.3	11.36	55.2	11.31	42.7	10.78
		6.0	5.0	77.8	12.15	75.3	11.89	70.3	11.38	67.8	11.12	60.3	10.34	55.2	10.03	42.7	9.75
		7.0	6.0	77.8	12.15	75.3	11.89	70.3	11.38	67.8	11.12	60.3	10.34	55.2	9.83	42.7	9.43
		8.6	7.5	77.8	12.15	75.3	11.89	70.3	11.38	67.8	11.12	60.3	10.34	55.2	9.83	42.7	8.97
		11.2	10.0	77.8	12.15	75.3	11.89	70.3	11.38	67.8	11.12	60.3	10.34	55.2	9.83	42.7	8.54
		16.4	15.0	77.8	12.15	75.3	11.89	70.3	11.38	67.8	11.12	60.3	10.34	55.2	9.83	42.7	8.54
		24.0	18.0	77.8	12.15	75.3	11.89	70.3	11.38	67.8	11.12	60.3	10.34	55.2	9.83	42.7	8.54

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-67. 74HP (Cooling) U-16ME2E8+U-18ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	138.7	16.64	166.4	19.96	194.1	23.29	208.0	24.95	235.7	28.28	263.5	31.60	291.2	34.92
		-5.0	138.7	16.67	166.4	20.00	194.1	23.32	208.0	24.99	235.7	28.32	263.5	31.65	291.2	34.96
		0.0	138.7	16.71	166.4	20.04	194.1	23.38	208.0	25.04	235.7	28.36	263.5	31.71	291.2	35.05
		5.0	138.7	16.76	166.4	20.10	194.1	23.43	208.0	25.11	235.7	28.51	263.5	31.96	291.2	35.36
		10.0	138.7	16.83	166.4	20.22	194.1	23.70	208.0	25.46	235.7	29.05	263.5	32.68	291.2	36.18
		15.0	138.7	17.20	166.4	20.93	194.1	24.76	208.0	26.71	235.7	30.66	263.5	34.65	291.2	38.29
		20.0	138.7	19.59	166.4	24.05	194.1	28.97	208.0	31.63	235.7	37.35	263.5	43.62	291.2	50.45
		25.0	138.7	25.13	166.4	30.90	194.1	37.22	208.0	40.60	235.7	47.78	263.5	55.54	291.2	63.87
		30.0	138.7	31.33	166.4	38.50	194.1	46.26	208.0	50.36	235.7	59.04	263.5	68.33	291.2	78.26
		35.0	138.7	38.01	166.4	46.65	194.1	55.95	208.0	60.85	235.7	71.15	263.5	82.13	278.8	85.12
		40.0	138.7	45.19	166.4	55.44	194.1	66.40	208.0	72.16	235.7	84.23	247.0	85.11	257.6	85.10
		43.0	138.7	49.76	166.4	61.03	194.1	73.08	208.0	79.40	225.4	85.11	236.1	85.12	240.9	80.72
		46.0	137.3	54.05	164.7	66.32	175.0	67.45	176.8	65.67	181.6	62.68	187.6	60.32	194.8	58.47
52.0	59.9	23.49	65.2	23.73	71.4	24.16	74.9	24.43	82.5	25.05	91.0	25.75	100.1	26.50		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	124.8	13.40	149.8	16.82	174.7	20.16	187.2	21.80	212.2	25.02	237.1	28.16	262.1	31.24
		-5.0	124.8	13.43	149.8	16.85	174.7	20.20	187.2	21.84	212.2	25.06	237.1	28.21	262.1	31.29
		0.0	124.8	13.46	149.8	16.90	174.7	20.24	187.2	21.88	212.2	25.11	237.1	28.26	262.1	31.33
		5.0	124.8	13.52	149.8	16.96	174.7	20.31	187.2	21.95	212.2	25.16	237.1	28.34	262.1	31.47
		10.0	124.8	13.60	149.8	17.03	174.7	20.40	187.2	22.08	212.2	25.40	237.1	28.68	262.1	31.91
		15.0	124.8	13.75	149.8	17.36	174.7	20.96	187.2	22.74	212.2	26.26	237.1	29.73	262.1	33.12
		20.0	124.8	15.15	149.8	19.28	174.7	23.31	187.2	25.28	212.2	29.11	237.1	33.36	262.1	37.88
		25.0	124.8	20.48	149.8	25.17	174.7	30.03	187.2	32.53	212.2	37.63	237.1	42.87	262.1	48.26
		30.0	124.8	26.22	149.8	31.90	174.7	37.69	187.2	40.63	212.2	46.60	237.1	52.69	262.1	58.95
		35.0	124.8	33.40	149.8	40.28	174.7	47.25	187.2	50.77	212.2	57.90	237.1	65.23	262.1	72.83
		40.0	124.8	39.74	149.8	47.65	174.7	55.62	187.2	59.66	212.2	67.91	237.1	76.50	257.6	85.10
		43.0	124.8	43.66	149.8	52.20	174.7	60.84	187.2	65.24	212.2	74.30	236.1	85.12	240.9	80.72
		46.0	124.8	46.70	149.8	56.53	174.7	66.84	176.8	65.67	181.6	62.68	187.6	60.32	194.8	58.47
52.0	59.9	23.49	65.2	23.73	71.4	24.16	74.9	24.43	82.5	25.05	91.0	25.75	100.1	26.50		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	110.9	11.47	133.1	14.57	155.3	17.60	166.4	19.09	188.6	22.02	210.8	24.90	233.0	27.71
		-5.0	110.9	11.50	133.1	14.60	155.3	17.63	166.4	19.12	188.6	22.06	210.8	24.93	233.0	27.74
		0.0	110.9	11.53	133.1	14.64	155.3	17.67	166.4	19.16	188.6	22.10	210.8	24.98	233.0	27.79
		5.0	110.9	11.57	133.1	14.69	155.3	17.73	166.4	19.22	188.6	22.16	210.8	25.03	233.0	27.84
		10.0	110.9	11.64	133.1	14.76	155.3	17.80	166.4	19.29	188.6	22.23	210.8	25.13	233.0	28.00
		15.0	110.9	11.74	133.1	14.87	155.3	17.99	166.4	19.53	188.6	22.59	210.8	25.61	233.0	28.57
		20.0	110.9	12.32	133.1	15.76	155.3	19.13	166.4	20.79	188.6	24.03	210.8	27.19	233.0	30.26
		25.0	110.9	16.74	133.1	20.28	155.3	23.89	166.4	25.72	188.6	29.42	210.8	33.17	233.0	36.97
		30.0	110.9	21.75	133.1	26.17	155.3	30.61	166.4	32.83	188.6	37.30	210.8	41.78	233.0	46.27
		35.0	110.9	28.06	133.1	33.53	155.3	38.96	166.4	41.67	188.6	47.07	210.8	52.47	233.0	57.89
		40.0	110.9	33.68	133.1	40.03	155.3	46.30	166.4	49.42	188.6	55.65	210.8	61.90	233.0	68.23
		43.0	110.9	37.16	133.1	44.05	155.3	50.86	166.4	54.25	188.6	61.03	210.8	67.89	233.0	74.91
		46.0	110.9	39.59	133.1	47.24	155.3	55.09	166.4	59.10	181.6	62.68	187.6	60.32	194.8	58.47
52.0	59.9	23.49	65.2	23.73	71.4	24.16	74.9	24.43	82.5	25.05	91.0	25.75	100.1	26.50		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	97.1	9.52	116.5	12.28	135.9	14.99	145.6	16.32	165.0	18.95	184.4	21.53	203.8	24.05
		-5.0	97.1	9.54	116.5	12.30	135.9	15.01	145.6	16.35	165.0	18.98	184.4	21.55	203.8	24.08
		0.0	97.1	9.56	116.5	12.33	135.9	15.04	145.6	16.38	165.0	19.01	184.4	21.59	203.8	24.12
		5.0	97.1	9.60	116.5	12.37	135.9	15.09	145.6	16.42	165.0	19.06	184.4	21.64	203.8	24.17
		10.0	97.1	9.66	116.5	12.43	135.9	15.15	145.6	16.49	165.0	19.13	184.4	21.71	203.8	24.22
		15.0	97.1	9.75	116.5	12.53	135.9	15.23	145.6	16.57	165.0	19.22	184.4	21.84	203.8	24.41
		20.0	97.1	9.93	116.5	12.81	135.9	15.65	145.6	17.05	165.0	19.81	184.4	22.51	203.8	25.16
		25.0	97.1	12.48	116.5	15.48	135.9	18.35	145.6	19.75	165.0	22.46	184.4	25.10	203.8	27.66
		30.0	97.1	17.67	116.5	20.98	135.9	24.24	145.6	25.85	165.0	29.02	184.4	32.15	203.8	35.23
		35.0	97.1	23.12	116.5	27.33	135.9	31.43	145.6	33.45	165.0	37.41	184.4	41.28	203.8	45.07
		40.0	97.1	28.03	116.5	33.00	135.9	37.82	145.6	40.18	165.0	44.80	184.4	49.31	203.8	53.74
		43.0	97.1	31.06	116.5	36.50	135.9	41.76	145.6	44.33	165.0	49.37	184.4	54.31	203.8	59.17
		46.0	97.1	33.16	116.5	38.97	135.9	44.79	145.6	47.70	165.0	53.55	184.4	57.29	194.8	58.47
52.0	59.9	23.49	65.2	23.73	71.4	24.16	74.9	24.43	82.5	25.05	91.0	25.75	100.1	26.50		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

74HP (Cooling) U-16ME2E8+U-18ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	83.2	7.53	99.8	9.94	116.5	12.31	124.8	13.48	141.4	15.78	158.1	18.05	174.7	20.27
		-5.0	83.2	7.54	99.8	9.96	116.5	12.33	124.8	13.50	141.4	15.80	158.1	18.07	174.7	20.30
		0.0	83.2	7.57	99.8	9.98	116.5	12.35	124.8	13.52	141.4	15.83	158.1	18.10	174.7	20.33
		5.0	83.2	7.60	99.8	10.01	116.5	12.39	124.8	13.56	141.4	15.87	158.1	18.14	174.7	20.37
		10.0	83.2	7.64	99.8	10.06	116.5	12.44	124.8	13.61	141.4	15.92	158.1	18.19	174.7	20.42
		15.0	83.2	7.71	99.8	10.14	116.5	12.52	124.8	13.69	141.4	16.00	158.1	18.27	174.7	20.48
		20.0	83.2	7.84	99.8	10.24	116.5	12.63	124.8	13.81	141.4	16.14	158.1	18.44	174.7	20.69
		25.0	83.2	8.71	99.8	11.21	116.5	13.64	124.8	14.84	141.4	17.18	158.1	19.46	174.7	21.70
		30.0	83.2	14.00	99.8	16.37	116.5	18.63	124.8	19.72	141.4	21.82	158.1	23.84	174.7	25.76
		35.0	83.2	18.58	99.8	21.69	116.5	24.64	124.8	26.06	141.4	28.80	158.1	31.41	174.7	33.90
		40.0	83.2	22.79	99.8	26.55	116.5	30.11	124.8	31.82	141.4	35.12	158.1	38.25	174.7	41.25
		43.0	83.2	25.38	99.8	29.53	116.5	33.46	124.8	35.35	141.4	38.99	158.1	42.45	174.7	45.76
		46.0	83.2	27.38	99.8	31.65	116.5	35.82	124.8	37.86	141.4	41.87	158.1	45.79	174.7	49.61
52.0	59.9	23.49	65.2	23.73	71.4	24.16	74.9	24.43	82.5	25.05	91.0	25.75	100.1	26.50		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	69.3	5.50	83.2	7.55	97.1	9.56	104.0	10.56	117.9	12.52	131.7	14.46	145.6	16.36
		-5.0	69.3	5.52	83.2	7.56	97.1	9.58	104.0	10.57	117.9	12.54	131.7	14.48	145.6	16.37
		0.0	69.3	5.53	83.2	7.58	97.1	9.60	104.0	10.60	117.9	12.56	131.7	14.50	145.6	16.40
		5.0	69.3	5.56	83.2	7.61	97.1	9.63	104.0	10.62	117.9	12.59	131.7	14.53	145.6	16.43
		10.0	69.3	5.59	83.2	7.65	97.1	9.67	104.0	10.66	117.9	12.63	131.7	14.57	145.6	16.47
		15.0	69.3	5.65	83.2	7.70	97.1	9.72	104.0	10.72	117.9	12.69	131.7	14.63	145.6	16.53
		20.0	69.3	5.74	83.2	7.80	97.1	9.82	104.0	10.81	117.9	12.78	131.7	14.71	145.6	16.60
		25.0	69.3	5.96	83.2	8.02	97.1	10.04	104.0	11.04	117.9	14.66	131.7	14.94	145.6	16.84
		30.0	69.3	10.75	83.2	12.18	97.1	13.04	104.0	13.65	117.9	15.08	131.7	16.65	145.6	18.28
		35.0	69.3	14.46	83.2	16.63	97.1	18.62	104.0	19.55	117.9	21.28	131.7	22.87	145.6	24.32
		40.0	69.3	17.96	83.2	20.67	97.1	23.16	104.0	24.32	117.9	26.52	131.7	28.53	145.6	30.38
		43.0	69.3	20.11	83.2	23.15	97.1	25.94	104.0	27.26	117.9	29.73	131.7	32.00	145.6	34.10
		46.0	69.3	22.21	83.2	25.23	97.1	28.08	104.0	29.44	117.9	32.04	131.7	34.50	145.6	36.80
52.0	59.9	23.49	65.2	23.73	71.4	24.16	74.9	24.43	82.5	25.05	91.0	25.75	100.1	26.50		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	55.5	3.44	66.6	5.11	77.7	6.75	83.2	7.56	94.3	9.17	105.4	10.76	116.5	12.33
		-5.0	55.5	3.45	66.6	5.12	77.7	6.76	83.2	7.58	94.3	9.18	105.4	10.78	116.5	12.35
		0.0	55.5	3.47	66.6	5.13	77.7	6.78	83.2	7.59	94.3	9.20	105.4	10.80	116.5	12.37
		5.0	55.5	3.48	66.6	5.15	77.7	6.80	83.2	7.61	94.3	9.22	105.4	10.82	116.5	12.40
		10.0	55.5	3.51	66.6	5.18	77.7	6.83	83.2	7.64	94.3	9.25	105.4	10.85	116.5	12.44
		15.0	55.5	3.55	66.6	5.22	77.7	6.87	83.2	7.68	94.3	9.29	105.4	10.90	116.5	12.49
		20.0	55.5	3.62	66.6	5.29	77.7	6.94	83.2	7.75	94.3	9.36	105.4	10.96	116.5	12.56
		25.0	55.5	3.76	66.6	5.42	77.7	7.06	83.2	7.86	94.3	9.46	105.4	11.06	116.5	12.66
		30.0	55.5	5.40	66.6	6.39	77.7	7.70	83.2	8.41	94.3	9.87	105.4	11.53	116.5	13.36
		35.0	55.5	10.78	66.6	12.18	77.7	13.39	83.2	13.94	94.3	14.91	105.4	16.12	116.5	17.67
		40.0	55.5	13.55	66.6	15.37	77.7	16.97	83.2	17.70	94.3	19.00	105.4	20.13	116.5	21.10
		43.0	55.5	15.27	66.6	17.35	77.7	19.20	83.2	20.04	94.3	21.56	105.4	22.89	116.5	24.04
		46.0	55.5	17.62	66.6	19.63	77.7	21.46	83.2	22.30	94.3	23.86	105.4	25.25	116.5	26.48
52.0	55.5	20.86	65.2	23.73	71.4	24.16	74.9	24.43	82.5	25.05	91.0	25.75	100.1	26.50		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	41.6	1.34	49.9	2.61	58.2	3.88	62.4	4.52	70.7	5.77	79.0	7.01	87.4	8.22
		-5.0	41.6	1.35	49.9	2.62	58.2	3.89	62.4	4.53	70.7	5.79	79.0	7.03	87.4	8.24
		0.0	41.6	1.36	49.9	2.63	58.2	3.91	62.4	4.55	70.7	5.81	79.0	7.05	87.4	8.27
		5.0	41.6	1.38	49.9	2.65	58.2	3.93	62.4	4.57	70.7	5.84	79.0	7.08	87.4	8.31
		10.0	41.6	1.39	49.9	2.67	58.2	3.95	62.4	4.60	70.7	5.87	79.0	7.12	87.4	8.35
		15.0	41.6	1.42	49.9	2.70	58.2	3.98	62.4	4.64	70.7	5.92	79.0	7.18	87.4	8.41
		20.0	41.6	1.47	49.9	2.74	58.2	4.04	62.4	4.70	70.7	5.99	79.0	7.25	87.4	8.47
		25.0	41.6	1.56	49.9	2.82	58.2	4.13	62.4	4.80	70.7	6.08	79.0	7.37	87.4	8.69
		30.0	41.6	1.81	49.9	3.00	58.2	4.31	62.4	5.07	70.7	6.63	79.0	8.16	87.4	9.63
		35.0	41.6	7.53	49.9	8.34	58.2	9.28	62.4	9.90	70.7	11.12	79.0	12.33	87.4	13.52
		40.0	41.6	9.58	49.9	10.68	58.2	11.59	62.4	11.98	70.7	12.63	79.0	13.13	87.4	13.52
		43.0	41.6	10.86	49.9	12.16	58.2	13.24	62.4	13.71	70.7	14.51	79.0	15.14	87.4	15.62
		46.0	41.6	13.56	49.9	14.79	58.2	15.85	62.4	16.31	70.7	17.12	79.0	17.78	87.4	18.31
52.0	41.6	15.88	49.9	17.49	58.2	18.89	62.4	19.52	70.7	20.14	79.0	20.47	87.4	20.60		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-68. 74HP (Heating) U-16ME2E8+U-18ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	100%	-24.9	-25.0	172.1	64.09	167.7	62.91	158.7	60.42	154.1	59.11	140.1	54.89	130.3	51.82	104.7	43.28
		-19.8	-20.0	180.7	65.57	176.1	64.34	166.8	61.73	162.0	60.38	147.3	55.99	137.1	52.82	110.3	44.02
		-14.7	-15.0	192.9	67.77	188.1	66.47	178.2	63.73	173.2	62.29	157.5	57.64	146.8	54.33	118.2	45.10
		-9.6	-10.0	209.4	70.91	204.2	69.49	193.6	66.51	188.1	64.93	171.3	59.96	159.5	56.38	128.5	46.56
		-4.4	-5.0	230.8	75.29	225.1	73.65	213.4	70.22	207.3	68.42	188.7	62.76	175.8	58.76	141.5	48.14
		-1.8	-2.5	243.5	77.49	237.5	75.86	225.1	72.39	218.7	70.56	199.0	64.80	185.4	60.71	146.7	48.58
		0.8	0.0	257.2	79.10	251.2	77.57	238.1	73.96	231.4	72.06	207.1	64.39	189.9	58.86	146.7	45.52
		2.8	2.0	267.5	78.07	258.9	75.33	241.6	69.94	233.0	67.29	207.1	59.53	189.9	54.49	146.7	42.32
		6.0	5.0	267.5	68.38	258.9	66.04	241.6	61.45	233.0	59.19	207.1	52.55	189.9	48.14	146.7	37.63
		7.0	6.0	267.5	65.25	258.9	63.04	241.6	58.71	233.0	56.50	207.1	50.20	189.9	46.10	146.7	36.15
		8.6	7.5	267.5	60.56	258.9	58.54	241.6	54.58	233.0	52.63	207.1	46.89	189.9	43.14	146.7	34.00
		11.2	10.0	267.5	53.27	258.9	51.58	241.6	48.25	233.0	46.60	207.1	41.73	189.9	38.53	146.7	30.65
		16.4	15.0	267.5	40.51	258.9	39.36	241.6	37.07	233.0	35.92	207.1	32.45	189.9	30.12	146.7	24.24
		24.0	18.0	267.5	33.33	258.9	32.39	241.6	30.48	233.0	29.52	207.1	26.61	189.9	24.65	146.7	19.71

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	90%	-24.9	-25.0	172.1	64.09	167.7	62.91	158.7	60.42	154.1	59.11	140.1	54.89	130.3	51.82	104.7	43.28
		-19.8	-20.0	180.7	65.57	176.1	64.34	166.8	61.73	162.0	60.38	147.3	55.99	137.1	52.82	110.3	44.02
		-14.7	-15.0	192.9	67.77	188.1	66.47	178.2	63.73	173.2	62.29	157.5	57.64	146.8	54.33	118.2	45.10
		-9.6	-10.0	209.4	70.91	204.2	69.49	193.6	66.51	188.1	64.93	171.3	59.96	159.5	56.38	128.5	46.56
		-4.4	-5.0	230.8	75.29	225.1	73.65	213.4	70.22	207.3	68.42	186.4	59.26	170.9	54.70	132.0	43.32
		-1.8	-2.5	240.8	70.10	233.0	68.00	217.5	63.80	209.7	61.70	186.4	55.42	170.9	51.24	132.0	40.74
		0.8	0.0	240.8	64.63	233.0	62.74	217.5	58.96	209.7	57.07	186.4	51.39	170.9	47.58	132.0	38.01
		2.8	2.0	240.8	59.16	233.0	57.48	217.5	54.12	209.7	52.44	186.4	47.35	170.9	43.97	132.0	35.56
		6.0	5.0	240.8	51.72	233.0	50.46	217.5	47.89	209.7	46.56	186.4	42.45	170.9	39.49	132.0	31.82
		7.0	6.0	240.8	50.46	233.0	49.06	217.5	46.25	209.7	44.85	186.4	40.61	170.9	37.76	132.0	30.54
		8.6	7.5	240.8	46.61	233.0	45.37	217.5	42.87	209.7	41.62	186.4	37.82	170.9	35.25	132.0	28.70
		11.2	10.0	240.8	40.58	233.0	39.59	217.5	37.59	209.7	36.58	186.4	33.47	170.9	31.35	132.0	25.81
		16.4	15.0	240.8	30.05	233.0	29.46	217.5	28.22	209.7	27.58	186.4	25.54	170.9	24.09	132.0	20.17
		24.0	18.0	240.8	29.29	233.0	28.48	217.5	26.87	209.7	26.06	186.4	23.63	170.9	22.01	132.0	17.96

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	80%	-24.9	-25.0	172.1	64.09	167.7	62.91	158.7	60.42	154.1	59.11	140.1	54.89	130.3	51.82	104.7	43.28
		-19.8	-20.0	180.7	65.57	176.1	64.34	166.8	61.73	162.0	60.38	147.3	55.99	137.1	52.82	110.3	44.02
		-14.7	-15.0	192.9	67.77	188.1	66.47	178.2	63.73	173.2	62.29	157.5	57.64	146.8	54.33	117.4	45.10
		-9.6	-10.0	209.4	70.91	204.2	69.49	193.3	66.51	186.4	65.73	165.7	53.17	151.9	49.53	117.4	40.00
		-4.4	-5.0	214.0	57.42	207.1	56.04	193.3	53.21	186.4	51.77	165.7	47.32	151.9	44.24	117.4	36.14
		-1.8	-2.5	214.0	53.17	207.1	51.94	193.3	49.43	186.4	48.14	165.7	44.13	151.9	41.34	117.4	34.11
		0.8	0.0	214.0	48.58	207.1	47.62	193.3	45.60	186.4	44.52	165.7	41.12	151.9	38.69	117.4	32.04
		2.8	2.0	214.0	44.97	207.1	44.11	193.3	42.29	186.4	41.33	165.7	38.26	151.9	36.05	117.4	29.98
		6.0	5.0	214.0	39.83	207.1	39.12	193.3	37.60	186.4	36.78	165.7	34.14	151.9	32.17	117.4	26.76
		7.0	6.0	214.0	38.52	207.1	37.73	193.3	36.09	186.4	35.25	165.7	32.59	151.9	30.72	117.4	25.68
		8.6	7.5	214.0	35.35	207.1	34.68	193.3	33.29	186.4	32.57	165.7	30.26	151.9	28.62	117.4	24.11
		11.2	10.0	214.0	30.43	207.1	29.95	193.3	28.93	186.4	28.39	165.7	26.62	151.9	25.33	117.4	21.64
		16.4	15.0	214.0	26.51	207.1	25.79	193.3	24.35	186.4	23.63	165.7	21.47	151.9	20.03	117.4	16.77
		24.0	18.0	214.0	26.51	207.1	25.79	193.3	24.35	186.4	23.63	165.7	21.47	151.9	20.03	117.4	16.44

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	70%	-24.9	-25.0	172.1	64.09	167.7	62.91	158.7	60.42	154.1	59.11	140.1	54.89	130.3	51.82	102.7	39.02
		-19.8	-20.0	180.7	65.57	176.1	64.34	166.8	61.73	162.0	60.38	145.0	49.15	132.9	45.96	102.7	37.54
		-14.7	-15.0	187.3	55.13	181.2	54.01	169.1	51.68	163.1	50.46	145.0	46.59	132.9	43.79	102.7	35.91
		-9.6	-10.0	187.3	49.68	181.2	48.75	169.1	46.77	163.1	45.73	145.0	42.39	132.9	40.00	102.7	33.55
		-4.4	-5.0	187.3	43.78	181.2	43.10	169.1	41.60	163.1	40.79	145.0	38.11	132.9	36.11	102.7	30.43
		-1.8	-2.5	187.3	40.85	181.2	40.24	169.1	38.90	163.1	38.18	145.0	35.75	132.9	33.94	102.7	28.72
		0.8	0.0	187.3	37.77	181.2	37.25	169.1	36.08	163.1	35.44	145.0	33.29	132.9	31.66	102.7	26.93
		2.8	2.0	187.3	34.73	181.2	34.30	169.1	33.31	163.1	32.75	145.0	30.86	132.9	29.41	102.7	25.14
		6.0	5.0	187.3	30.39	181.2	30.06	169.1	29.29	163.1	28.85	145.0	27.28	132.9	26.03	102.7	22.27
		7.0	6.0	187.3	28.99	181.2	28.64	169.1	27.86	163.1	27.43	145.0	25.96	132.9	24.83	102.7	21.48
		8.6	7.5	187.3	26.45	181.2	26.19	169.1	25.58	163.1	25.24	145.0	24.03	132.9	23.08	102.7	20.16
		11.2	10.0	187.3	23.72	181.2	23.09	169.1	22.11	163.1	21.89	145.0	21.06	132.9	20.36	102.7	18.07
		16.4	15.0	187.3	23.72	181.2	23.09	169.1	21.83	163.1	21.20	145.0	19.31	132.9	18.05	102.7	14.91
		24.0	18.0	187.3	23.72	181.2	23.09	169.1	21.83	163.1	21.20	145.0	19.31	132.9	18.05	102.7	14.91

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

74HP (Heating) U-16ME2E8+U-18ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	160.5	48.37	155.3	47.59	145.0	45.90	139.8	44.99	124.3	41.87	113.9	39.36	88.0	32.60
		-19.8	-20.0	160.5	45.57	155.3	44.87	145.0	43.37	139.8	42.59	124.3	39.96	113.9	37.95	88.0	31.52
		-14.7	-15.0	160.5	42.39	155.3	41.84	145.0	40.57	139.8	39.87	124.3	37.48	113.9	35.67	88.0	30.34
		-9.6	-10.0	160.5	38.63	155.3	38.17	145.0	37.10	139.8	36.51	124.3	34.45	113.9	32.85	88.0	28.10
		-4.4	-5.0	160.5	34.19	155.3	33.83	145.0	33.00	139.8	32.53	124.3	30.84	113.9	29.52	88.0	25.46
		-1.8	-2.5	160.5	31.76	155.3	31.46	145.0	30.75	139.8	30.34	124.3	28.86	113.9	27.67	88.0	24.00
		0.8	0.0	160.5	29.20	155.3	28.97	145.0	28.41	139.8	28.07	124.3	26.80	113.9	25.76	88.0	22.48
		2.8	2.0	160.5	26.67	155.3	26.52	145.0	26.09	139.8	25.82	124.3	24.77	113.9	23.88	88.0	20.97
		6.0	5.0	160.5	22.99	155.3	22.88	145.0	22.57	139.8	22.37	124.3	21.59	113.9	20.91	88.0	18.45
		7.0	6.0	160.5	21.62	155.3	21.55	145.0	21.32	139.8	21.17	124.3	20.52	113.9	19.93	88.0	17.85
		8.6	7.5	160.5	20.93	155.3	20.39	145.0	19.56	139.8	19.46	124.3	18.98	113.9	18.51	88.0	16.76
		11.2	10.0	160.5	20.93	155.3	20.39	145.0	19.31	139.8	18.77	124.3	17.16	113.9	16.33	88.0	15.04
		16.4	15.0	160.5	20.93	155.3	20.39	145.0	19.31	139.8	18.77	124.3	17.16	113.9	16.08	88.0	13.38
		24.0	18.0	160.5	20.93	155.3	20.39	145.0	19.31	139.8	18.77	124.3	17.16	113.9	16.08	88.0	13.38

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	133.8	37.66	129.4	37.24	120.8	36.28	116.5	35.72	103.6	33.83	94.9	32.31	73.4	27.23
		-19.8	-20.0	133.8	35.74	129.4	35.38	120.8	34.51	116.5	34.01	103.6	32.25	94.9	30.87	73.4	26.53
		-14.7	-15.0	133.8	33.22	129.4	32.92	120.8	32.19	116.5	31.76	103.6	30.22	94.9	28.97	73.4	25.12
		-9.6	-10.0	133.8	30.13	129.4	29.90	120.8	29.33	116.5	28.99	103.6	27.70	94.9	26.64	73.4	23.25
		-4.4	-5.0	133.8	26.51	129.4	26.37	120.8	25.97	116.5	25.72	103.6	24.73	94.9	23.88	73.4	21.06
		-1.8	-2.5	133.8	24.52	129.4	24.43	120.8	24.14	116.5	23.94	103.6	23.11	94.9	22.37	73.4	19.85
		0.8	0.0	133.8	22.44	129.4	22.41	120.8	22.23	116.5	22.08	103.6	21.44	94.9	20.81	73.4	18.61
		2.8	2.0	133.8	20.42	129.4	20.43	120.8	20.31	116.5	20.20	103.6	19.67	94.9	19.15	73.4	17.25
		6.0	5.0	133.8	18.14	129.4	17.69	120.8	17.22	116.5	17.20	103.6	16.97	94.9	16.67	73.4	15.23
		7.0	6.0	133.8	18.14	129.4	17.69	120.8	16.80	116.5	16.35	103.6	16.14	94.9	15.90	73.4	14.73
		8.6	7.5	133.8	18.14	129.4	17.69	120.8	16.80	116.5	16.35	103.6	15.00	94.9	14.80	73.4	13.86
		11.2	10.0	133.8	18.14	129.4	17.69	120.8	16.80	116.5	16.35	103.6	15.00	94.9	14.10	73.4	12.48
		16.4	15.0	133.8	18.14	129.4	17.69	120.8	16.80	116.5	16.35	103.6	15.00	94.9	14.10	73.4	11.85
		24.0	18.0	133.8	18.14	129.4	17.69	120.8	16.80	116.5	16.35	103.6	15.00	94.9	14.10	73.4	11.85

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	107.0	29.11	103.6	28.89	96.7	28.33	93.2	27.98	82.8	26.75	75.9	25.73	58.7	22.29
		-19.8	-20.0	107.0	27.58	103.6	27.40	96.7	26.92	93.2	26.62	82.8	25.50	75.9	24.57	58.7	21.55
		-14.7	-15.0	107.0	25.59	103.6	25.45	96.7	25.08	93.2	24.83	82.8	23.88	75.9	23.06	58.7	20.35
		-9.6	-10.0	107.0	23.16	103.6	23.07	96.7	22.81	93.2	22.63	82.8	21.88	75.9	21.21	58.7	18.87
		-4.4	-5.0	107.0	20.31	103.6	20.30	96.7	20.17	93.2	20.06	82.8	19.53	75.9	19.02	58.7	17.13
		-1.8	-2.5	107.0	18.75	103.6	18.77	96.7	18.73	93.2	18.65	82.8	18.22	75.9	17.78	58.7	16.11
		0.8	0.0	107.0	16.95	103.6	17.00	96.7	17.03	93.2	17.00	82.8	16.74	75.9	16.42	58.7	15.04
		2.8	2.0	107.0	15.36	103.6	15.26	96.7	15.37	93.2	15.39	82.8	15.28	75.9	15.07	58.7	13.99
		6.0	5.0	107.0	15.36	103.6	15.00	96.7	14.28	93.2	13.92	82.8	13.26	75.9	13.19	58.7	12.48
		7.0	6.0	107.0	15.36	103.6	15.00	96.7	14.28	93.2	13.92	82.8	12.84	75.9	12.61	58.7	12.04
		8.6	7.5	107.0	15.36	103.6	15.00	96.7	14.28	93.2	13.92	82.8	12.84	75.9	12.12	58.7	11.37
		11.2	10.0	107.0	15.36	103.6	15.00	96.7	14.28	93.2	13.92	82.8	12.84	75.9	12.12	58.7	10.32
		16.4	15.0	107.0	15.36	103.6	15.00	96.7	14.28	93.2	13.92	82.8	12.84	75.9	12.12	58.7	10.32
		24.0	18.0	107.0	15.36	103.6	15.00	96.7	14.28	93.2	13.92	82.8	12.84	75.9	12.12	58.7	10.32

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	80.3	21.73	77.7	21.63	72.5	21.34	69.9	21.15	62.1	20.39	57.0	19.73	44.0	17.51
		-19.8	-20.0	80.3	20.59	77.7	20.52	72.5	20.29	69.9	20.13	62.1	19.47	57.0	18.87	44.0	16.86
		-14.7	-15.0	80.3	19.11	77.7	19.08	72.5	18.91	69.9	18.79	62.1	18.25	57.0	17.75	44.0	15.95
		-9.6	-10.0	80.3	17.29	77.7	17.28	72.5	17.19	69.9	17.11	62.1	16.71	57.0	16.30	44.0	14.79
		-4.4	-5.0	80.3	14.95	77.7	15.00	72.5	15.05	69.9	15.03	62.1	14.83	57.0	14.56	44.0	13.41
		-1.8	-2.5	80.3	13.69	77.7	13.77	72.5	13.88	69.9	13.90	62.1	13.81	57.0	13.61	44.0	12.66
		0.8	0.0	80.3	12.57	77.7	12.52	72.5	12.68	69.9	12.73	62.1	12.74	57.0	12.63	44.0	11.89
		2.8	2.0	80.3	12.57	77.7	12.30	72.5	11.76	69.9	11.60	62.1	11.70	57.0	11.66	44.0	11.12
		6.0	5.0	80.3	12.57	77.7	12.30	72.5	11.76	69.9	11.49	62.1	10.68	57.0	10.33	44.0	10.05
		7.0	6.0	80.3	12.57	77.7	12.30	72.5	11.76	69.9	11.49	62.1	10.68	57.0	10.14	44.0	9.71
		8.6	7.5	80.3	12.57	77.7	12.30	72.5	11.76	69.9	11.49	62.1	10.68	57.0	10.14	44.0	9.23
		11.2	10.0	80.3	12.57	77.7	12.30	72.5	11.76	69.9	11.49	62.1	10.68	57.0	10.14	44.0	8.79
		16.4	15.0	80.3	12.57	77.7	12.30	72.5	11.76	69.9	11.49	62.1	10.68	57.0	10.14	44.0	8.79
		24.0	18.0	80.3	12.57	77.7	12.30	72.5	11.76	69.9	11.49	62.1	10.68	57.0	10.14	44.0	8.79

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-69. 76HP (Cooling) U-16ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	142.0	17.23	170.4	20.68	198.8	24.12	213.0	25.84	241.4	29.29	269.8	32.74	298.2	36.17
		-5.0	142.0	17.26	170.4	20.71	198.8	24.16	213.0	25.88	241.4	29.34	269.8	32.79	298.2	36.21
		0.0	142.0	17.30	170.4	20.76	198.8	24.21	213.0	25.94	241.4	29.38	269.8	32.84	298.2	36.30
		5.0	142.0	17.36	170.4	20.82	198.8	24.27	213.0	26.01	241.4	29.53	269.8	33.10	298.2	36.62
		10.0	142.0	17.43	170.4	20.94	198.8	24.54	213.0	26.36	241.4	30.07	269.8	33.83	298.2	37.45
		15.0	142.0	17.80	170.4	21.66	198.8	25.62	213.0	27.63	241.4	31.71	269.8	35.82	298.2	39.59
		20.0	142.0	20.22	170.4	24.82	198.8	29.92	213.0	32.68	241.4	38.61	269.8	45.10	298.2	52.18
		25.0	142.0	25.94	170.4	31.92	198.8	38.47	213.0	41.97	241.4	49.41	269.8	57.45	298.2	66.08
		30.0	142.0	32.37	170.4	39.79	198.8	47.83	213.0	52.09	241.4	61.07	269.8	70.71	298.2	80.99
		35.0	142.0	39.28	170.4	48.24	198.8	57.87	213.0	62.95	241.4	73.62	269.8	85.00	285.4	88.05
		40.0	142.0	46.73	170.4	57.35	198.8	68.71	213.0	74.67	241.4	87.18	252.9	88.05	263.7	88.06
		43.0	142.0	51.46	170.4	63.14	198.8	75.62	213.0	82.17	230.8	88.06	241.7	88.05	246.7	83.53
		46.0	140.6	55.90	168.7	68.62	179.2	69.79	181.1	67.94	185.9	64.85	192.1	62.41	199.5	60.49
52.0	61.3	24.24	66.7	24.49	73.1	24.94	76.7	25.22	84.5	25.86	93.1	26.58	102.6	27.36		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	127.8	13.88	153.4	17.43	178.9	20.89	191.7	22.58	217.3	25.92	242.8	29.18	268.4	32.36
		-5.0	127.8	13.91	153.4	17.46	178.9	20.92	191.7	22.62	217.3	25.96	242.8	29.22	268.4	32.41
		0.0	127.8	13.95	153.4	17.50	178.9	20.97	191.7	22.67	217.3	26.01	242.8	29.27	268.4	32.45
		5.0	127.8	14.00	153.4	17.57	178.9	21.04	191.7	22.74	217.3	26.07	242.8	29.35	268.4	32.59
		10.0	127.8	14.09	153.4	17.64	178.9	21.13	191.7	22.86	217.3	26.30	242.8	29.70	268.4	33.04
		15.0	127.8	14.24	153.4	17.98	178.9	21.69	191.7	23.54	217.3	27.18	242.8	30.76	268.4	34.27
		20.0	127.8	15.66	153.4	19.93	178.9	24.08	191.7	26.11	217.3	30.07	242.8	34.47	268.4	39.15
		25.0	127.8	21.12	153.4	25.98	178.9	31.02	191.7	33.60	217.3	38.89	242.8	44.33	268.4	49.91
		30.0	127.8	27.07	153.4	32.95	178.9	38.96	191.7	42.00	217.3	48.19	242.8	54.50	268.4	60.98
		35.0	127.8	34.50	153.4	41.64	178.9	48.86	191.7	52.50	217.3	59.90	242.8	67.49	268.4	75.37
		40.0	127.8	41.08	153.4	49.27	178.9	57.53	191.7	61.72	217.3	70.26	242.8	79.17	263.7	88.06
		43.0	127.8	45.14	153.4	53.99	178.9	62.95	191.7	67.50	217.3	76.88	241.7	88.05	246.7	83.53
		46.0	127.8	48.30	153.4	58.48	178.9	69.16	181.1	67.94	185.9	64.85	192.1	62.41	199.5	60.49
52.0	61.3	24.24	66.7	24.49	73.1	24.94	76.7	25.22	84.5	25.86	93.1	26.58	102.6	27.36		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	113.6	11.89	136.3	15.10	159.0	18.24	170.4	19.78	193.1	22.82	215.8	25.79	238.6	28.70
		-5.0	113.6	11.91	136.3	15.13	159.0	18.27	170.4	19.81	193.1	22.85	215.8	25.83	238.6	28.74
		0.0	113.6	11.95	136.3	15.16	159.0	18.31	170.4	19.85	193.1	22.90	215.8	25.87	238.6	28.79
		5.0	113.6	11.99	136.3	15.21	159.0	18.36	170.4	19.91	193.1	22.96	215.8	25.93	238.6	28.83
		10.0	113.6	12.06	136.3	15.29	159.0	18.44	170.4	19.98	193.1	23.02	215.8	26.03	238.6	29.00
		15.0	113.6	12.16	136.3	15.40	159.0	18.63	170.4	20.23	193.1	23.40	215.8	26.51	238.6	29.58
		20.0	113.6	12.75	136.3	16.30	159.0	19.79	170.4	21.50	193.1	24.85	215.8	28.12	238.6	31.29
		25.0	113.6	17.24	136.3	20.91	159.0	24.66	170.4	26.55	193.1	30.39	215.8	34.27	238.6	38.21
		30.0	113.6	22.43	136.3	27.01	159.0	31.62	170.4	33.92	193.1	38.55	215.8	43.19	238.6	47.85
		35.0	113.6	28.97	136.3	34.64	159.0	40.27	170.4	43.08	193.1	48.68	215.8	54.27	238.6	59.89
		40.0	113.6	34.80	136.3	41.38	159.0	47.88	170.4	51.11	193.1	57.56	215.8	64.04	238.6	70.59
		43.0	113.6	38.40	136.3	45.54	159.0	52.60	170.4	56.11	193.1	63.14	215.8	70.25	238.6	77.52
		46.0	113.6	40.93	136.3	48.85	159.0	56.99	170.4	61.13	185.9	64.85	192.1	62.41	199.5	60.49
52.0	61.3	24.24	66.7	24.49	73.1	24.94	76.7	25.22	84.5	25.86	93.1	26.58	102.6	27.36		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	99.4	9.86	119.3	12.72	139.2	15.53	149.1	16.91	169.0	19.63	188.9	22.30	208.7	24.92
		-5.0	99.4	9.88	119.3	12.75	139.2	15.55	149.1	16.94	169.0	19.66	188.9	22.33	208.7	24.95
		0.0	99.4	9.91	119.3	12.78	139.2	15.59	149.1	16.97	169.0	19.70	188.9	22.37	208.7	24.99
		5.0	99.4	9.95	119.3	12.82	139.2	15.63	149.1	17.02	169.0	19.74	188.9	22.42	208.7	25.04
		10.0	99.4	10.01	119.3	12.88	139.2	15.70	149.1	17.08	169.0	19.81	188.9	22.48	208.7	25.09
		15.0	99.4	10.10	119.3	12.97	139.2	15.78	149.1	17.16	169.0	19.91	188.9	22.62	208.7	25.28
		20.0	99.4	10.29	119.3	13.27	139.2	16.20	149.1	17.65	169.0	20.51	188.9	23.30	208.7	26.04
		25.0	99.4	12.87	119.3	15.97	139.2	18.94	149.1	20.38	169.0	23.20	188.9	25.92	208.7	28.58
		30.0	99.4	18.21	119.3	21.64	139.2	25.01	149.1	26.68	169.0	29.98	188.9	33.22	208.7	36.40
		35.0	99.4	23.85	119.3	28.21	139.2	32.47	149.1	34.56	169.0	38.66	188.9	42.67	208.7	46.60
		40.0	99.4	28.94	119.3	34.09	139.2	39.09	149.1	41.53	169.0	46.32	188.9	51.00	208.7	55.59
		43.0	99.4	32.08	119.3	37.72	139.2	43.17	149.1	45.83	169.0	51.06	188.9	56.18	208.7	61.21
		46.0	99.4	34.26	119.3	40.28	139.2	46.31	149.1	49.33	169.0	55.39	188.9	59.27	199.5	60.49
52.0	61.3	24.24	66.7	24.49	73.1	24.94	76.7	25.22	84.5	25.86	93.1	26.58	102.6	27.36		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

76HP (Cooling) U-16ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8 Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	85.2	7.80	102.2	10.30	119.3	12.75	127.8	13.96	144.8	16.35	161.9	18.70	178.9	21.00
		-5.0	85.2	7.82	102.2	10.32	119.3	12.77	127.8	13.99	144.8	16.38	161.9	18.72	178.9	21.03
		0.0	85.2	7.84	102.2	10.34	119.3	12.80	127.8	14.01	144.8	16.40	161.9	18.75	178.9	21.06
		5.0	85.2	7.87	102.2	10.38	119.3	12.84	127.8	14.05	144.8	16.44	161.9	18.79	178.9	21.10
		10.0	85.2	7.92	102.2	10.43	119.3	12.89	127.8	14.10	144.8	16.50	161.9	18.85	178.9	21.15
		15.0	85.2	7.99	102.2	10.50	119.3	12.96	127.8	14.18	144.8	16.57	161.9	18.92	178.9	21.21
		20.0	85.2	8.11	102.2	10.61	119.3	13.08	127.8	14.30	144.8	16.72	161.9	19.10	178.9	21.43
		25.0	85.2	9.00	102.2	11.59	119.3	14.11	127.8	15.34	144.8	17.77	161.9	20.14	178.9	22.45
		30.0	85.2	14.40	102.2	16.86	119.3	19.20	127.8	20.33	144.8	22.51	161.9	24.60	178.9	26.59
		35.0	85.2	19.15	102.2	22.37	119.3	25.43	127.8	26.90	144.8	29.74	161.9	32.45	178.9	35.02
		40.0	85.2	23.50	102.2	27.40	119.3	31.10	127.8	32.87	144.8	36.29	161.9	39.54	178.9	42.64
		43.0	85.2	26.19	102.2	30.50	119.3	34.57	127.8	36.53	144.8	40.30	161.9	43.88	178.9	47.31
		46.0	85.2	28.27	102.2	32.70	119.3	37.02	127.8	39.13	144.8	43.29	161.9	47.34	178.9	51.31
52.0	61.3	24.24	66.7	24.49	73.1	24.94	76.7	25.22	84.5	25.86	93.1	26.58	102.6	27.36		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	71.0	5.71	85.2	7.82	99.4	9.91	106.5	10.94	120.7	12.98	134.9	14.98	149.1	16.95
		-5.0	71.0	5.72	85.2	7.84	99.4	9.93	106.5	10.96	120.7	13.00	134.9	15.00	149.1	16.97
		0.0	71.0	5.74	85.2	7.86	99.4	9.95	106.5	10.98	120.7	13.02	134.9	15.02	149.1	16.99
		5.0	71.0	5.76	85.2	7.89	99.4	9.98	106.5	11.01	120.7	13.05	134.9	15.05	149.1	17.02
		10.0	71.0	5.80	85.2	7.92	99.4	10.02	106.5	11.05	120.7	13.09	134.9	15.09	149.1	17.06
		15.0	71.0	5.85	85.2	7.98	99.4	10.07	106.5	11.11	120.7	13.15	134.9	15.15	149.1	17.12
		20.0	71.0	5.95	85.2	8.07	99.4	10.17	106.5	11.20	120.7	13.24	134.9	15.24	149.1	17.20
		25.0	71.0	6.17	85.2	8.30	99.4	10.40	106.5	11.43	120.7	13.47	134.9	15.47	149.1	17.44
		30.0	71.0	11.04	85.2	12.52	99.4	13.43	106.5	14.08	120.7	15.57	134.9	17.20	149.1	18.90
		35.0	71.0	14.88	85.2	17.13	99.4	19.18	106.5	20.15	120.7	21.95	134.9	23.59	149.1	25.10
		40.0	71.0	18.50	85.2	21.31	99.4	23.89	106.5	25.10	120.7	27.37	134.9	29.46	149.1	31.37
		43.0	71.0	20.73	85.2	23.88	99.4	26.78	106.5	28.14	120.7	30.70	134.9	33.06	149.1	35.24
		46.0	71.0	22.92	85.2	26.05	99.4	29.00	106.5	30.41	120.7	33.10	134.9	35.65	149.1	38.04
52.0	61.3	24.24	66.7	24.49	73.1	24.94	76.7	25.22	84.5	25.86	93.1	26.58	102.6	27.36		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	56.8	3.57	68.2	5.30	79.5	7.00	85.2	7.84	96.6	9.51	107.9	11.15	119.3	12.78
		-5.0	56.8	3.58	68.2	5.31	79.5	7.01	85.2	7.85	96.6	9.52	107.9	11.17	119.3	12.80
		0.0	56.8	3.60	68.2	5.32	79.5	7.03	85.2	7.87	96.6	9.54	107.9	11.19	119.3	12.82
		5.0	56.8	3.61	68.2	5.34	79.5	7.05	85.2	7.89	96.6	9.56	107.9	11.21	119.3	12.85
		10.0	56.8	3.64	68.2	5.37	79.5	7.08	85.2	7.92	96.6	9.59	107.9	11.25	119.3	12.89
		15.0	56.8	3.68	68.2	5.41	79.5	7.12	85.2	7.96	96.6	9.63	107.9	11.29	119.3	12.94
		20.0	56.8	3.75	68.2	5.48	79.5	7.19	85.2	8.03	96.6	9.70	107.9	11.36	119.3	13.01
		25.0	56.8	3.89	68.2	5.61	79.5	7.31	85.2	8.14	96.6	9.80	107.9	11.45	119.3	13.11
		30.0	56.8	5.56	68.2	6.59	79.5	7.96	85.2	8.70	96.6	10.22	107.9	11.94	119.3	13.82
		35.0	56.8	11.06	68.2	12.51	79.5	13.77	85.2	14.33	96.6	15.34	107.9	16.59	119.3	18.20
		40.0	56.8	13.93	68.2	15.82	79.5	17.48	85.2	18.23	96.6	19.58	107.9	20.75	119.3	21.75
		43.0	56.8	15.71	68.2	17.87	79.5	19.79	85.2	20.66	96.6	22.23	107.9	23.61	119.3	24.81
		46.0	56.8	18.16	68.2	20.25	79.5	22.14	85.2	23.01	96.6	24.62	107.9	26.06	119.3	27.34
52.0	56.8	21.52	66.7	24.49	73.1	24.94	76.7	25.22	84.5	25.86	93.1	26.58	102.6	27.36		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	42.6	1.40	51.1	2.71	59.6	4.03	63.9	4.69	72.4	5.99	80.9	7.26	89.5	8.52
		-5.0	42.6	1.41	51.1	2.72	59.6	4.04	63.9	4.70	72.4	6.00	80.9	7.28	89.5	8.54
		0.0	42.6	1.42	51.1	2.73	59.6	4.05	63.9	4.72	72.4	6.02	80.9	7.31	89.5	8.57
		5.0	42.6	1.43	51.1	2.75	59.6	4.07	63.9	4.74	72.4	6.05	80.9	7.34	89.5	8.61
		10.0	42.6	1.45	51.1	2.77	59.6	4.10	63.9	4.76	72.4	6.08	80.9	7.38	89.5	8.65
		15.0	42.6	1.48	51.1	2.80	59.6	4.13	63.9	4.80	72.4	6.13	80.9	7.43	89.5	8.71
		20.0	42.6	1.52	51.1	2.84	59.6	4.18	63.9	4.86	72.4	6.20	80.9	7.51	89.5	8.77
		25.0	42.6	1.61	51.1	2.93	59.6	4.27	63.9	4.97	72.4	6.30	80.9	7.63	89.5	9.00
		30.0	42.6	1.87	51.1	3.11	59.6	4.46	63.9	5.24	72.4	6.85	80.9	8.43	89.5	9.95
		35.0	42.6	7.69	51.1	8.53	59.6	9.51	63.9	10.15	72.4	11.42	80.9	12.67	89.5	13.90
		40.0	42.6	9.81	51.1	10.96	59.6	11.90	63.9	12.30	72.4	12.97	80.9	13.50	89.5	13.90
		43.0	42.6	11.14	51.1	12.49	59.6	13.61	63.9	14.10	72.4	14.92	80.9	15.58	89.5	16.08
		46.0	42.6	13.95	51.1	15.23	59.6	16.32	63.9	16.80	72.4	17.65	80.9	18.33	89.5	18.87
52.0	42.6	16.36	51.1	18.02	59.6	19.48	63.9	20.13	72.4	20.77	80.9	21.11	89.5	21.25		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

76HP (Heating) U-16ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	164.6	50.55	159.3	49.74	148.7	47.98	143.4	47.02	127.5	43.76	116.8	41.13	90.3	34.16
		-19.8	-20.0	164.6	47.66	159.3	46.93	148.7	45.36	143.4	44.55	127.5	41.81	116.8	39.72	90.3	33.01
		-14.7	-15.0	164.6	44.39	159.3	43.80	148.7	42.47	143.4	41.74	127.5	39.25	116.8	37.37	90.3	31.83
		-9.6	-10.0	164.6	40.50	159.3	40.01	148.7	38.90	143.4	38.27	127.5	36.12	116.8	34.46	90.3	29.52
		-4.4	-5.0	164.6	35.91	159.3	35.53	148.7	34.66	143.4	34.16	127.5	32.40	116.8	31.01	90.3	26.79
		-1.8	-2.5	164.6	33.40	159.3	33.08	148.7	32.34	143.4	31.90	127.5	30.35	116.8	29.11	90.3	25.29
		0.8	0.0	164.6	30.75	159.3	30.51	148.7	29.91	143.4	29.55	127.5	28.22	116.8	27.14	90.3	23.72
		2.8	2.0	164.6	28.14	159.3	27.98	148.7	27.52	143.4	27.23	127.5	26.13	116.8	25.19	90.3	22.16
		6.0	5.0	164.6	24.33	159.3	24.20	148.7	23.88	143.4	23.66	127.5	22.84	116.8	22.12	90.3	19.56
		7.0	6.0	164.6	22.92	159.3	22.83	148.7	22.59	143.4	22.42	127.5	21.73	116.8	21.11	90.3	18.94
		8.6	7.5	164.6	22.08	159.3	21.52	148.7	20.76	143.4	20.65	127.5	20.14	116.8	19.65	90.3	17.82
		11.2	10.0	164.6	22.08	159.3	21.52	148.7	20.41	143.4	19.85	127.5	18.18	116.8	17.39	90.3	16.04
		16.4	15.0	164.6	22.08	159.3	21.52	148.7	20.41	143.4	19.85	127.5	18.18	116.8	17.07	90.3	14.28
		24.0	18.0	164.6	22.08	159.3	21.52	148.7	20.41	143.4	19.85	127.5	18.18	116.8	17.07	90.3	14.28
100%	50%	-24.9	-25.0	137.2	39.45	132.8	39.01	123.9	37.99	119.5	37.42	106.2	35.44	97.4	33.86	75.2	28.59
		-19.8	-20.0	137.2	37.46	132.8	37.07	123.9	36.16	119.5	35.64	106.2	33.82	97.4	32.38	75.2	27.87
		-14.7	-15.0	137.2	34.85	132.8	34.53	123.9	33.77	119.5	33.33	106.2	31.71	97.4	30.42	75.2	26.43
		-9.6	-10.0	137.2	31.66	132.8	31.41	123.9	30.82	119.5	30.46	106.2	29.12	97.4	28.02	75.2	24.50
		-4.4	-5.0	137.2	27.92	132.8	27.77	123.9	27.35	119.5	27.08	106.2	26.05	97.4	25.17	75.2	22.24
		-1.8	-2.5	137.2	25.86	132.8	25.77	123.9	25.46	119.5	25.25	106.2	24.38	97.4	23.61	75.2	20.99
		0.8	0.0	137.2	23.72	132.8	23.68	123.9	23.48	119.5	23.33	106.2	22.65	97.4	22.00	75.2	19.71
		2.8	2.0	137.2	21.62	132.8	21.63	123.9	21.49	119.5	21.38	106.2	20.82	97.4	20.28	75.2	18.30
		6.0	5.0	137.2	19.20	132.8	18.74	123.9	18.30	119.5	18.28	106.2	18.03	97.4	17.71	75.2	16.22
		7.0	6.0	137.2	19.20	132.8	18.74	123.9	17.81	119.5	17.35	106.2	17.17	97.4	16.92	75.2	15.70
		8.6	7.5	137.2	19.20	132.8	18.74	123.9	17.81	119.5	17.35	106.2	15.96	97.4	15.78	75.2	14.80
		11.2	10.0	137.2	19.20	132.8	18.74	123.9	17.81	119.5	17.35	106.2	15.95	97.4	15.03	75.2	13.38
		16.4	15.0	137.2	19.20	132.8	18.74	123.9	17.81	119.5	17.35	106.2	15.95	97.4	15.03	75.2	12.71
		24.0	18.0	137.2	19.20	132.8	18.74	123.9	17.81	119.5	17.35	106.2	15.95	97.4	15.03	75.2	12.71
100%	40%	-24.9	-25.0	109.8	30.57	106.2	30.33	99.1	29.75	95.6	29.39	85.0	28.11	77.9	27.05	60.2	23.48
		-19.8	-20.0	109.8	28.99	106.2	28.79	99.1	28.29	95.6	27.98	85.0	26.83	77.9	25.86	60.2	22.73
		-14.7	-15.0	109.8	26.93	106.2	26.78	99.1	26.38	95.6	26.14	85.0	25.15	77.9	24.30	60.2	21.49
		-9.6	-10.0	109.8	24.42	106.2	24.33	99.1	24.05	95.6	23.86	85.0	23.09	77.9	22.38	60.2	19.96
		-4.4	-5.0	109.8	21.48	106.2	21.46	99.1	21.33	95.6	21.21	85.0	20.66	77.9	20.12	60.2	18.16
		-1.8	-2.5	109.8	19.87	106.2	19.89	99.1	19.84	95.6	19.75	85.0	19.31	77.9	18.84	60.2	17.11
		0.8	0.0	109.8	18.00	106.2	18.06	99.1	18.08	95.6	18.05	85.0	17.78	77.9	17.44	60.2	16.01
		2.8	2.0	109.8	16.32	106.2	16.25	99.1	16.36	95.6	16.38	85.0	16.27	77.9	16.05	60.2	14.92
		6.0	5.0	109.8	16.32	106.2	15.95	99.1	15.21	95.6	14.84	85.0	14.18	77.9	14.10	60.2	13.37
		7.0	6.0	109.8	16.32	106.2	15.95	99.1	15.21	95.6	14.84	85.0	13.73	77.9	13.51	60.2	12.91
		8.6	7.5	109.8	16.32	106.2	15.95	99.1	15.21	95.6	14.84	85.0	13.73	77.9	12.98	60.2	12.22
		11.2	10.0	109.8	16.32	106.2	15.95	99.1	15.21	95.6	14.84	85.0	13.73	77.9	12.98	60.2	11.13
		16.4	15.0	109.8	16.32	106.2	15.95	99.1	15.21	95.6	14.84	85.0	13.73	77.9	12.98	60.2	11.13
		24.0	18.0	109.8	16.32	106.2	15.95	99.1	15.21	95.6	14.84	85.0	13.73	77.9	12.98	60.2	11.13
100%	30%	-24.9	-25.0	82.3	22.92	79.7	22.81	74.4	22.51	71.7	22.31	63.7	21.53	58.4	20.85	45.1	18.55
		-19.8	-20.0	82.3	21.75	79.7	21.67	74.4	21.42	71.7	21.26	63.7	20.58	58.4	19.96	45.1	17.88
		-14.7	-15.0	82.3	20.22	79.7	20.17	74.4	20.01	71.7	19.88	63.7	19.32	58.4	18.80	45.1	16.94
		-9.6	-10.0	82.3	18.33	79.7	18.32	74.4	18.23	71.7	18.14	63.7	17.72	58.4	17.31	45.1	15.75
		-4.4	-5.0	82.3	15.92	79.7	15.97	74.4	16.02	71.7	16.00	63.7	15.79	58.4	15.51	45.1	14.32
		-1.8	-2.5	82.3	14.62	79.7	14.70	74.4	14.81	71.7	14.83	63.7	14.73	58.4	14.53	45.1	13.55
		0.8	0.0	82.3	13.45	79.7	13.41	74.4	13.57	71.7	13.62	63.7	13.63	58.4	13.52	45.1	12.75
		2.8	2.0	82.3	13.45	79.7	13.17	74.4	12.61	71.7	12.46	63.7	12.56	58.4	12.52	45.1	11.96
		6.0	5.0	82.3	13.45	79.7	13.17	74.4	12.61	71.7	12.34	63.7	11.50	58.4	11.15	45.1	10.85
		7.0	6.0	82.3	13.45	79.7	13.17	74.4	12.61	71.7	12.34	63.7	11.50	58.4	10.94	45.1	10.51
		8.6	7.5	82.3	13.45	79.7	13.17	74.4	12.61	71.7	12.34	63.7	11.50	58.4	10.94	45.1	10.01
		11.2	10.0	82.3	13.45	79.7	13.17	74.4	12.61	71.7	12.34	63.7	11.50	58.4	10.94	45.1	9.55
		16.4	15.0	82.3	13.45	79.7	13.17	74.4	12.61	71.7	12.34	63.7	11.50	58.4	10.94	45.1	9.55
		24.0	18.0	82.3	13.45	79.7	13.17	74.4	12.61	71.7	12.34	63.7	11.50	58.4	10.94	45.1	9.55

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

78HP (Cooling) U-18ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8
Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	87.6	7.97	105.1	10.52	122.6	13.04	131.4	14.28	148.9	16.72	166.4	19.13	184.0	21.48
		-5.0	87.6	7.99	105.1	10.55	122.6	13.06	131.4	14.30	148.9	16.75	166.4	19.15	184.0	21.51
		0.0	87.6	8.01	105.1	10.57	122.6	13.09	131.4	14.33	148.9	16.78	166.4	19.19	184.0	21.55
		5.0	87.6	8.05	105.1	10.61	122.6	13.13	131.4	14.37	148.9	16.82	166.4	19.23	184.0	21.59
		10.0	87.6	8.10	105.1	10.67	122.6	13.19	131.4	14.43	148.9	16.88	166.4	19.29	184.0	21.65
		15.0	87.6	8.18	105.1	10.75	122.6	13.27	131.4	14.52	148.9	16.97	166.4	19.38	184.0	21.72
		20.0	87.6	8.32	105.1	10.87	122.6	13.40	131.4	14.65	148.9	17.13	166.4	19.56	184.0	21.96
		25.0	87.6	9.29	105.1	11.94	122.6	14.53	131.4	15.79	148.9	18.28	166.4	20.70	184.0	23.08
		30.0	87.6	15.14	105.1	17.64	122.6	20.03	131.4	21.18	148.9	23.41	166.4	25.54	184.0	27.58
		35.0	87.6	19.99	105.1	23.28	122.6	26.40	131.4	27.91	148.9	30.81	166.4	33.57	184.0	36.20
		40.0	87.6	24.44	105.1	28.42	122.6	32.19	131.4	34.00	148.9	37.49	166.4	40.82	184.0	43.98
		43.0	87.6	27.18	105.1	31.58	122.6	35.74	131.4	37.74	148.9	41.59	166.4	45.26	184.0	48.76
		46.0	87.6	29.29	105.1	33.82	122.6	38.23	131.4	40.39	148.9	44.64	166.4	48.79	184.0	52.85
52.0	63.0	25.16	68.6	25.41	75.2	25.87	78.9	26.16	86.9	26.82	95.8	27.56	105.4	28.35		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	73.0	5.82	87.6	7.99	102.2	10.13	109.5	11.18	124.1	13.27	138.7	15.32	153.3	17.33
		-5.0	73.0	5.84	87.6	8.01	102.2	10.14	109.5	11.20	124.1	13.29	138.7	15.34	153.3	17.35
		0.0	73.0	5.86	87.6	8.03	102.2	10.17	109.5	11.22	124.1	13.31	138.7	15.36	153.3	17.38
		5.0	73.0	5.88	87.6	8.06	102.2	10.20	109.5	11.26	124.1	13.35	138.7	15.40	153.3	17.41
		10.0	73.0	5.92	87.6	8.10	102.2	10.24	109.5	11.30	124.1	13.39	138.7	15.45	153.3	17.46
		15.0	73.0	5.98	87.6	8.16	102.2	10.31	109.5	11.37	124.1	13.46	138.7	15.51	153.3	17.53
		20.0	73.0	6.09	87.6	8.27	102.2	10.41	109.5	11.47	124.1	13.56	138.7	15.61	153.3	17.61
		25.0	73.0	6.34	87.6	8.52	102.2	10.66	109.5	11.72	124.1	15.56	138.7	15.86	153.3	17.87
		30.0	73.0	11.70	87.6	13.19	102.2	14.02	109.5	14.65	124.1	16.12	138.7	17.76	153.3	19.48
		35.0	73.0	15.64	87.6	17.93	102.2	20.03	109.5	21.01	124.1	22.85	138.7	24.53	153.3	26.07
		40.0	73.0	19.33	87.6	22.20	102.2	24.83	109.5	26.07	124.1	28.39	138.7	30.52	153.3	32.47
		43.0	73.0	21.61	87.6	24.82	102.2	27.78	109.5	29.17	124.1	31.79	138.7	34.20	153.3	36.42
		46.0	73.0	23.81	87.6	27.01	102.2	30.03	109.5	31.47	124.1	34.23	138.7	36.83	153.3	39.27
52.0	63.0	25.16	68.6	25.41	75.2	25.87	78.9	26.16	86.9	26.82	95.8	27.56	105.4	28.35		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	58.4	3.63	70.1	5.40	81.8	7.14	87.6	8.00	99.3	9.71	111.0	11.40	122.6	13.07
		-5.0	58.4	3.65	70.1	5.41	81.8	7.16	87.6	8.02	99.3	9.73	111.0	11.41	122.6	13.09
		0.0	58.4	3.66	70.1	5.43	81.8	7.18	87.6	8.04	99.3	9.74	111.0	11.44	122.6	13.11
		5.0	58.4	3.68	70.1	5.45	81.8	7.20	87.6	8.06	99.3	9.77	111.0	11.46	122.6	13.14
		10.0	58.4	3.71	70.1	5.48	81.8	7.23	87.6	8.10	99.3	9.80	111.0	11.50	122.6	13.19
		15.0	58.4	3.76	70.1	5.53	81.8	7.28	87.6	8.14	99.3	9.85	111.0	11.55	122.6	13.24
		20.0	58.4	3.83	70.1	5.61	81.8	7.35	87.6	8.22	99.3	9.92	111.0	11.63	122.6	13.32
		25.0	58.4	4.00	70.1	5.76	81.8	7.49	87.6	8.35	99.3	10.04	111.0	11.73	122.6	13.43
		30.0	58.4	5.82	70.1	6.82	81.8	8.20	87.6	8.95	99.3	10.49	111.0	12.26	122.6	14.20
		35.0	58.4	11.74	70.1	13.22	81.8	14.50	87.6	15.08	99.3	16.11	111.0	17.39	122.6	19.02
		40.0	58.4	14.67	70.1	16.60	81.8	18.29	87.6	19.06	99.3	20.44	111.0	21.63	122.6	22.65
		43.0	58.4	16.49	70.1	18.69	81.8	20.64	87.6	21.53	99.3	23.14	111.0	24.55	122.6	25.77
		46.0	58.4	18.94	70.1	21.08	81.8	23.01	87.6	23.90	99.3	25.55	111.0	27.03	122.6	28.34
52.0	58.4	22.38	68.6	25.41	75.2	25.87	78.9	26.16	86.9	26.82	95.8	27.56	105.4	28.35		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	43.8	1.41	52.6	2.76	61.3	4.10	65.7	4.78	74.5	6.11	83.2	7.42	92.0	8.71
		-5.0	43.8	1.42	52.6	2.77	61.3	4.12	65.7	4.79	74.5	6.13	83.2	7.44	92.0	8.74
		0.0	43.8	1.43	52.6	2.78	61.3	4.13	65.7	4.81	74.5	6.15	83.2	7.47	92.0	8.77
		5.0	43.8	1.45	52.6	2.80	61.3	4.15	65.7	4.83	74.5	6.18	83.2	7.51	92.0	8.80
		10.0	43.8	1.47	52.6	2.82	61.3	4.18	65.7	4.87	74.5	6.22	83.2	7.55	92.0	8.85
		15.0	43.8	1.50	52.6	2.85	61.3	4.22	65.7	4.91	74.5	6.28	83.2	7.61	92.0	8.92
		20.0	43.8	1.55	52.6	2.90	61.3	4.28	65.7	4.98	74.5	6.36	83.2	7.70	92.0	8.99
		25.0	43.8	1.65	52.6	3.00	61.3	4.38	65.7	5.09	74.5	6.46	83.2	7.83	92.0	9.23
		30.0	43.8	1.94	52.6	3.20	61.3	4.58	65.7	5.39	74.5	7.06	83.2	8.70	92.0	10.28
		35.0	43.8	8.30	52.6	9.16	61.3	10.15	65.7	10.81	74.5	12.10	83.2	13.38	92.0	14.63
		40.0	43.8	10.47	52.6	11.64	61.3	12.60	65.7	13.00	74.5	13.69	83.2	14.22	92.0	14.63
		43.0	43.8	11.82	52.6	13.20	61.3	14.34	65.7	14.84	74.5	15.68	83.2	16.35	92.0	16.86
		46.0	43.8	14.64	52.6	15.95	61.3	17.06	65.7	17.56	74.5	18.42	83.2	19.12	92.0	19.67
52.0	43.8	17.10	52.6	18.80	61.3	20.29	65.7	20.96	74.5	21.62	83.2	21.96	92.0	22.10		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-72. 78HP (Heating) U-18ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	100%	-24.9	-25.0	184.4	70.49	179.6	69.16	170.0	66.39	165.0	64.92	149.8	60.22	139.3	56.80	111.8	47.36
		-19.8	-20.0	193.7	72.16	188.7	70.78	178.7	67.87	173.5	66.35	157.6	61.45	146.7	57.93	117.8	48.18
		-14.7	-15.0	206.9	74.65	201.6	73.18	190.9	70.09	185.5	68.47	168.6	63.30	156.9	59.58	126.2	49.37
		-9.6	-10.0	224.6	78.16	219.0	76.57	207.5	73.20	201.6	71.45	183.3	65.85	170.7	61.86	137.2	50.97
		-4.4	-5.0	247.6	82.74	241.4	80.85	228.7	76.90	222.2	74.85	202.0	69.08	188.1	64.72	151.1	52.96
		-1.8	-2.5	260.1	85.12	254.6	83.75	241.2	79.79	234.3	77.70	213.1	71.22	198.3	66.65	154.3	52.22
		0.8	0.0	271.1	85.11	267.8	85.12	254.1	81.24	245.0	78.16	217.8	69.10	199.6	63.20	154.3	48.97
		2.8	2.0	281.3	83.71	272.2	80.79	254.1	75.05	245.0	72.23	217.8	63.95	199.6	58.57	154.3	45.57
		6.0	5.0	281.3	73.47	272.2	70.98	254.1	66.07	245.0	63.66	217.8	56.56	199.6	51.83	154.3	40.59
		7.0	6.0	281.3	70.16	272.2	67.81	254.1	63.17	245.0	60.80	217.8	54.07	199.6	49.68	154.3	39.03
		8.6	7.5	281.3	65.19	272.2	63.04	254.1	58.80	245.0	56.71	217.8	50.56	199.6	46.55	154.3	36.75
		11.2	10.0	281.3	57.50	272.2	55.69	254.1	52.11	245.0	50.35	217.8	45.11	199.6	41.67	154.3	33.19
		16.4	15.0	281.3	44.02	272.2	42.77	254.1	40.26	245.0	39.01	217.8	35.24	199.6	32.71	154.3	26.34
24.0	18.0	281.3	36.29	272.2	35.25	254.1	33.16	245.0	32.11	217.8	28.93	199.6	26.79	154.3	21.45		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	90%	-24.9	-25.0	184.4	70.49	179.6	69.16	170.0	66.39	165.0	64.92	149.8	60.22	139.3	56.80	111.8	47.36
		-19.8	-20.0	193.7	72.16	188.7	70.78	178.7	67.87	173.5	66.35	157.6	61.45	146.7	57.93	117.8	48.18
		-14.7	-15.0	206.9	74.65	201.6	73.18	190.9	70.09	185.5	68.47	168.6	63.30	156.9	59.58	126.2	49.37
		-9.6	-10.0	224.6	78.16	219.0	76.57	207.5	73.20	201.6	71.45	183.3	65.85	170.7	61.86	137.2	50.97
		-4.4	-5.0	247.6	82.74	241.4	80.85	228.7	76.90	220.5	70.89	196.0	63.59	179.7	58.74	138.8	46.61
		-1.8	-2.5	253.2	75.15	245.0	72.92	228.7	68.45	220.5	66.22	196.0	59.52	179.7	55.06	138.8	43.86
		0.8	0.0	253.2	69.36	245.0	67.35	228.7	63.32	220.5	61.30	196.0	55.24	179.7	51.18	138.8	40.96
		2.8	2.0	253.2	63.57	245.0	61.78	228.7	58.19	220.5	56.39	196.0	50.96	179.7	47.34	138.8	38.33
		6.0	5.0	253.2	55.71	245.0	54.35	228.7	51.58	220.5	50.14	196.0	45.72	179.7	42.56	138.8	34.36
		7.0	6.0	253.2	54.28	245.0	52.79	228.7	49.79	220.5	48.29	196.0	43.77	179.7	40.72	138.8	33.00
		8.6	7.5	253.2	50.21	245.0	48.89	228.7	46.22	220.5	44.88	196.0	40.81	179.7	38.07	138.8	31.05
		11.2	10.0	253.2	43.86	245.0	42.80	228.7	40.64	220.5	39.55	196.0	36.22	179.7	33.93	138.8	27.98
		16.4	15.0	253.2	32.69	245.0	32.04	228.7	30.68	220.5	29.98	196.0	27.76	179.7	26.19	138.8	21.95
24.0	18.0	253.2	31.63	245.0	30.77	228.7	29.04	220.5	28.17	196.0	25.58	179.7	23.86	138.8	19.54		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	80%	-24.9	-25.0	184.4	70.49	179.6	69.16	170.0	66.39	165.0	64.92	149.8	60.22	139.3	56.80	111.8	47.36
		-19.8	-20.0	193.7	72.16	188.7	70.78	178.7	67.87	173.5	66.35	157.6	61.45	146.7	57.93	117.8	48.18
		-14.7	-15.0	206.9	74.65	201.6	73.18	190.9	70.09	185.5	68.47	168.6	63.30	156.9	59.58	123.4	45.50
		-9.6	-10.0	224.6	78.16	217.8	68.14	203.3	64.55	196.0	62.72	174.2	57.09	159.7	53.21	123.4	43.05
		-4.4	-5.0	225.0	61.63	217.8	60.16	203.3	57.16	196.0	55.62	174.2	50.87	159.7	47.58	123.4	38.94
		-1.8	-2.5	225.0	57.13	217.8	55.82	203.3	53.14	196.0	51.76	174.2	47.48	159.7	44.51	123.4	36.78
		0.8	0.0	225.0	52.33	217.8	51.28	203.3	49.10	196.0	47.95	174.2	44.29	159.7	41.68	123.4	34.57
		2.8	2.0	225.0	48.46	217.8	47.53	203.3	45.57	196.0	44.55	174.2	41.24	159.7	38.88	123.4	32.36
		6.0	5.0	225.0	42.98	217.8	42.20	203.3	40.55	196.0	39.67	174.2	36.82	159.7	34.71	123.4	28.89
		7.0	6.0	225.0	41.48	217.8	40.64	203.3	38.90	196.0	38.00	174.2	35.17	159.7	33.17	123.4	27.79
		8.6	7.5	225.0	38.13	217.8	37.42	203.3	35.94	196.0	35.16	174.2	32.70	159.7	30.95	123.4	26.12
		11.2	10.0	225.0	32.93	217.8	32.42	203.3	31.33	196.0	30.74	174.2	28.85	159.7	27.45	123.4	23.50
		16.4	15.0	225.0	28.65	217.8	27.89	203.3	26.35	196.0	25.58	174.2	23.28	159.7	21.74	123.4	18.29
24.0	18.0	225.0	28.65	217.8	27.89	203.3	26.35	196.0	25.58	174.2	23.28	159.7	21.74	123.4	17.90		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	70%	-24.9	-25.0	184.4	70.49	179.6	69.16	170.0	66.39	165.0	64.92	149.8	60.22	139.3	56.80	108.0	41.99
		-19.8	-20.0	193.7	72.16	188.7	70.78	177.9	59.60	171.5	58.03	152.4	52.81	139.7	49.39	108.0	40.42
		-14.7	-15.0	196.9	59.16	190.6	57.97	177.9	55.49	171.5	54.19	152.4	50.06	139.7	47.09	108.0	38.69
		-9.6	-10.0	196.9	53.37	190.6	52.37	177.9	50.27	171.5	49.16	152.4	45.60	139.7	43.13	108.0	36.19
		-4.4	-5.0	196.9	47.18	190.6	46.44	177.9	44.83	171.5	43.96	152.4	41.08	139.7	38.94	108.0	32.85
		-1.8	-2.5	196.9	44.05	190.6	43.38	177.9	41.94	171.5	41.16	152.4	38.56	139.7	36.61	108.0	31.03
		0.8	0.0	196.9	40.76	190.6	40.19	177.9	38.93	171.5	38.24	152.4	35.92	139.7	34.18	108.0	29.11
		2.8	2.0	196.9	37.51	190.6	37.03	177.9	35.97	171.5	35.37	152.4	33.34	139.7	31.78	108.0	27.20
		6.0	5.0	196.9	32.85	190.6	32.49	177.9	31.65	171.5	31.17	152.4	29.46	139.7	28.13	108.0	24.10
		7.0	6.0	196.9	31.28	190.6	30.91	177.9	30.08	171.5	29.62	152.4	28.06	139.7	26.86	108.0	23.28
		8.6	7.5	196.9	28.59	190.6	28.31	177.9	27.67	171.5	27.30	152.4	26.02	139.7	25.01	108.0	21.89
		11.2	10.0	196.9	25.68	190.6	25.01	177.9	24.00	171.5	23.76	152.4	22.86	139.7	22.11	108.0	19.67
		16.4	15.0	196.9	25.68	190.6	25.01	177.9	23.66	171.5	22.99	152.4	20.98	139.7	19.63	108.0	16.27
24.0	18.0	196.9	25.68	190.6	25.01	177.9	23.66	171.5	22.99	152.4	20.98	139.7	19.63	108.0	16.27		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

78HP (Heating) U-18ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	60%	-24.9	-25.0	168.8	51.95	163.3	51.12	152.4	49.33	147.0	48.35	130.7	45.04	119.8	42.37	92.6	35.18
		-19.8	-20.0	168.8	48.95	163.3	48.26	152.4	46.72	147.0	45.88	130.7	43.06	119.8	40.90	92.6	34.01
		-14.7	-15.0	168.8	45.70	163.3	45.09	152.4	43.72	147.0	42.96	130.7	40.41	119.8	38.47	92.6	32.75
		-9.6	-10.0	168.8	41.67	163.3	41.17	152.4	40.02	147.0	39.39	130.7	37.16	119.8	35.46	92.6	30.37
		-4.4	-5.0	168.8	36.93	163.3	36.54	152.4	35.63	147.0	35.12	130.7	33.32	119.8	31.89	92.6	27.54
		-1.8	-2.5	168.8	34.31	163.3	33.99	152.4	33.23	147.0	32.78	130.7	31.20	119.8	29.93	92.6	25.99
		0.8	0.0	168.8	31.58	163.3	31.33	152.4	30.72	147.0	30.36	130.7	28.99	119.8	27.88	92.6	24.37
		2.8	2.0	168.8	28.89	163.3	28.72	152.4	28.25	147.0	27.96	130.7	26.83	119.8	25.87	92.6	22.74
		6.0	5.0	168.8	24.84	163.3	24.72	152.4	24.41	147.0	24.20	130.7	23.38	119.8	22.65	92.6	20.04
		7.0	6.0	168.8	23.40	163.3	23.32	152.4	23.09	147.0	22.93	130.7	22.24	119.8	21.61	92.6	19.41
		8.6	7.5	168.8	22.70	163.3	22.13	152.4	21.22	147.0	21.11	130.7	20.61	119.8	20.11	92.6	18.25
		11.2	10.0	168.8	22.70	163.3	22.13	152.4	20.98	147.0	20.40	130.7	18.67	119.8	17.80	92.6	16.42
		16.4	15.0	168.8	22.70	163.3	22.13	152.4	20.98	147.0	20.40	130.7	18.67	119.8	17.52	92.6	14.64
		24.0	18.0	168.8	22.70	163.3	22.13	152.4	20.98	147.0	20.40	130.7	18.67	119.8	17.52	92.6	14.64

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	50%	-24.9	-25.0	140.6	40.62	136.1	40.17	127.0	39.13	122.5	38.54	108.9	36.50	99.8	34.87	77.1	29.43
		-19.8	-20.0	140.6	38.56	136.1	38.17	127.0	37.24	122.5	36.70	108.9	34.82	99.8	33.34	77.1	28.69
		-14.7	-15.0	140.6	35.87	136.1	35.54	127.0	34.76	122.5	34.29	108.9	32.63	99.8	31.30	77.1	27.18
		-9.6	-10.0	140.6	32.57	136.1	32.31	127.0	31.70	122.5	31.33	108.9	29.95	99.8	28.82	77.1	25.19
		-4.4	-5.0	140.6	28.70	136.1	28.54	127.0	28.12	122.5	27.84	108.9	26.77	99.8	25.87	77.1	22.85
		-1.8	-2.5	140.6	26.57	136.1	26.47	127.0	26.15	122.5	25.94	108.9	25.05	99.8	24.26	77.1	21.56
		0.8	0.0	140.6	24.35	136.1	24.31	127.0	24.11	122.5	23.96	108.9	23.26	99.8	22.59	77.1	20.20
		2.8	2.0	140.6	22.12	136.1	22.10	127.0	21.97	122.5	21.86	108.9	21.31	99.8	20.76	77.1	18.75
		6.0	5.0	140.6	19.73	136.1	19.25	127.0	18.69	122.5	18.68	108.9	18.44	99.8	18.13	77.1	16.61
		7.0	6.0	140.6	19.73	136.1	19.25	127.0	18.29	122.5	17.81	108.9	17.56	99.8	17.31	77.1	16.07
		8.6	7.5	140.6	19.73	136.1	19.25	127.0	18.29	122.5	17.81	108.9	16.37	99.8	16.14	77.1	15.14
		11.2	10.0	140.6	19.73	136.1	19.25	127.0	18.29	122.5	17.81	108.9	16.37	99.8	15.41	77.1	13.67
		16.4	15.0	140.6	19.73	136.1	19.25	127.0	18.29	122.5	17.81	108.9	16.37	99.8	15.41	77.1	13.01
		24.0	18.0	140.6	19.73	136.1	19.25	127.0	18.29	122.5	17.81	108.9	16.37	99.8	15.41	77.1	13.01

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	40%	-24.9	-25.0	112.5	31.46	108.9	31.21	101.6	30.61	98.0	30.25	87.1	28.91	79.9	27.83	61.7	24.15
		-19.8	-20.0	112.5	29.82	108.9	29.62	101.6	29.11	98.0	28.79	87.1	27.59	79.9	26.59	61.7	23.37
		-14.7	-15.0	112.5	27.69	108.9	27.54	101.6	27.14	98.0	26.87	87.1	25.86	79.9	24.98	61.7	22.08
		-9.6	-10.0	112.5	25.09	108.9	25.00	101.6	24.72	98.0	24.52	87.1	23.72	79.9	23.00	61.7	20.50
		-4.4	-5.0	112.5	22.05	108.9	22.03	101.6	21.90	98.0	21.78	87.1	21.22	79.9	20.66	61.7	18.63
		-1.8	-2.5	112.5	20.35	108.9	20.36	101.6	20.29	98.0	20.21	87.1	19.76	79.9	19.30	61.7	17.53
		0.8	0.0	112.5	18.38	108.9	18.44	101.6	18.48	98.0	18.45	87.1	18.19	79.9	17.85	61.7	16.39
		2.8	2.0	112.5	16.75	108.9	16.59	101.6	16.71	98.0	16.74	87.1	16.64	79.9	16.41	61.7	15.27
		6.0	5.0	112.5	16.75	108.9	16.37	101.6	15.60	98.0	15.22	87.1	14.49	79.9	14.41	61.7	13.68
		7.0	6.0	112.5	16.75	108.9	16.37	101.6	15.60	98.0	15.22	87.1	14.07	79.9	13.80	61.7	13.20
		8.6	7.5	112.5	16.75	108.9	16.37	101.6	15.60	98.0	15.22	87.1	14.07	79.9	13.30	61.7	12.49
		11.2	10.0	112.5	16.75	108.9	16.37	101.6	15.60	98.0	15.22	87.1	14.07	79.9	13.30	61.7	11.38
		16.4	15.0	112.5	16.75	108.9	16.37	101.6	15.60	98.0	15.22	87.1	14.07	79.9	13.30	61.7	11.38
		24.0	18.0	112.5	16.75	108.9	16.37	101.6	15.60	98.0	15.22	87.1	14.07	79.9	13.30	61.7	11.38

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW		
100%	30%	-24.9	-25.0	84.4	23.55	81.7	23.44	76.2	23.13	73.5	22.92	65.3	22.12	59.9	21.42	46.3	19.04
		-19.8	-20.0	84.4	22.33	81.7	22.25	76.2	22.01	73.5	21.83	65.3	21.13	59.9	20.50	46.3	18.35
		-14.7	-15.0	84.4	20.76	81.7	20.71	76.2	20.54	73.5	20.41	65.3	19.84	59.9	19.30	46.3	17.38
		-9.6	-10.0	84.4	18.75	81.7	18.74	76.2	18.65	73.5	18.57	65.3	18.15	59.9	17.73	46.3	16.13
		-4.4	-5.0	84.4	16.26	81.7	16.32	76.2	16.37	73.5	16.36	65.3	16.15	59.9	15.87	46.3	14.66
		-1.8	-2.5	84.4	14.92	81.7	15.01	76.2	15.13	73.5	15.15	65.3	15.06	59.9	14.86	46.3	13.86
		0.8	0.0	84.4	13.78	81.7	13.68	76.2	13.85	73.5	13.91	65.3	13.93	59.9	13.82	46.3	13.03
		2.8	2.0	84.4	13.78	81.7	13.49	76.2	12.91	73.5	12.71	65.3	12.83	59.9	12.79	46.3	12.22
		6.0	5.0	84.4	13.78	81.7	13.49	76.2	12.91	73.5	12.63	65.3	11.76	59.9	11.37	46.3	11.08
		7.0	6.0	84.4	13.78	81.7	13.49	76.2	12.91	73.5	12.63	65.3	11.76	59.9	11.19	46.3	10.72
		8.6	7.5	84.4	13.78	81.7	13.49	76.2	12.91	73.5	12.63	65.3	11.76	59.9	11.19	46.3	10.20
		11.2	10.0	84.4	13.78	81.7	13.49	76.2	12.91	73.5	12.63	65.3	11.76	59.9	11.19	46.3	9.75
		16.4	15.0	84.4	13.78	81.7	13.49	76.2	12.91	73.5	12.63	65.3	11.76	59.9	11.19	46.3	9.75
		24.0	18.0	84.4	13.78	81.7	13.49	76.2	12.91	73.5	12.63	65.3	11.76	59.9	11.19	46.3	9.75

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-73. 80HP (Cooling) U-20ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	100%	-10.0	149.3	18.24	179.2	21.89	209.1	25.53	224.0	27.35	253.9	31.00	283.7	34.65	313.6	38.28
		-5.0	149.3	18.28	179.2	21.92	209.1	25.57	224.0	27.40	253.9	31.05	283.7	34.71	313.6	38.33
		0.0	149.3	18.32	179.2	21.98	209.1	25.63	224.0	27.46	253.9	31.10	283.7	34.77	313.6	38.43
		5.0	149.3	18.38	179.2	22.05	209.1	25.70	224.0	27.54	253.9	31.26	283.7	35.05	313.6	38.77
		10.0	149.3	18.46	179.2	22.18	209.1	25.99	224.0	27.93	253.9	31.86	283.7	35.86	313.6	39.70
		15.0	149.3	18.87	179.2	22.97	209.1	27.20	224.0	29.35	253.9	33.70	283.7	38.10	313.6	42.12
		20.0	149.3	21.59	179.2	26.53	209.1	31.93	224.0	34.84	253.9	41.11	283.7	47.98	313.6	55.46
		25.0	149.3	27.71	179.2	34.03	209.1	40.97	224.0	44.67	253.9	52.54	283.7	61.03	313.6	70.17
		30.0	149.3	34.51	179.2	42.36	209.1	50.86	224.0	55.36	253.9	64.87	283.7	75.06	313.6	85.94
		35.0	149.3	41.83	179.2	51.30	209.1	61.48	224.0	66.85	253.9	78.14	283.7	90.18	300.4	93.52
		40.0	149.3	49.70	179.2	60.93	209.1	72.94	224.0	79.25	253.9	92.47	266.1	93.51	277.5	93.50
		43.0	149.3	54.70	179.2	67.06	209.1	80.25	224.0	87.18	242.8	93.51	254.3	93.47	259.5	88.62
		46.0	147.8	59.40	177.4	72.85	188.5	74.09	190.4	72.13	195.5	68.86	202.0	66.28	209.8	64.25
52.0	64.5	25.91	70.2	26.18	76.9	26.65	80.7	26.95	88.9	27.63	98.0	28.39	107.8	29.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	90%	-10.0	134.4	14.68	161.3	18.43	188.2	22.10	201.6	23.89	228.5	27.42	255.4	30.87	282.2	34.25
		-5.0	134.4	14.71	161.3	18.47	188.2	22.14	201.6	23.94	228.5	27.47	255.4	30.92	282.2	34.30
		0.0	134.4	14.76	161.3	18.52	188.2	22.19	201.6	23.99	228.5	27.53	255.4	30.99	282.2	34.35
		5.0	134.4	14.82	161.3	18.59	188.2	22.27	201.6	24.07	228.5	27.59	255.4	31.07	282.2	34.50
		10.0	134.4	14.91	161.3	18.68	188.2	22.37	201.6	24.20	228.5	27.85	255.4	31.45	282.2	35.00
		15.0	134.4	15.08	161.3	19.04	188.2	22.99	201.6	24.95	228.5	28.82	255.4	32.64	282.2	36.38
		20.0	134.4	16.66	161.3	21.22	188.2	25.67	201.6	27.84	228.5	32.08	255.4	36.73	282.2	41.68
		25.0	134.4	22.63	161.3	27.76	188.2	33.09	201.6	35.82	228.5	41.40	255.4	47.15	282.2	53.05
		30.0	134.4	28.91	161.3	35.13	188.2	41.48	201.6	44.70	228.5	51.23	255.4	57.91	282.2	64.76
		35.0	134.4	36.78	161.3	44.32	188.2	51.95	201.6	55.81	228.5	63.63	255.4	71.65	282.2	79.98
		40.0	134.4	43.73	161.3	52.39	188.2	61.13	201.6	65.55	228.5	74.59	255.4	84.01	277.5	93.50
		43.0	134.4	48.02	161.3	57.38	188.2	66.85	201.6	71.67	228.5	81.59	254.3	93.47	259.5	88.62
		46.0	134.4	51.36	161.3	62.13	188.2	73.42	190.4	72.13	195.5	68.86	202.0	66.28	209.8	64.25
52.0	64.5	25.91	70.2	26.18	76.9	26.65	80.7	26.95	88.9	27.63	98.0	28.39	107.8	29.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	80%	-10.0	119.5	12.57	143.4	15.97	167.3	19.29	179.2	20.92	203.1	24.14	227.0	27.29	250.9	30.37
		-5.0	119.5	12.60	143.4	16.00	167.3	19.32	179.2	20.96	203.1	24.18	227.0	27.33	250.9	30.41
		0.0	119.5	12.64	143.4	16.04	167.3	19.37	179.2	21.01	203.1	24.23	227.0	27.38	250.9	30.47
		5.0	119.5	12.69	143.4	16.10	167.3	19.43	179.2	21.07	203.1	24.30	227.0	27.45	250.9	30.52
		10.0	119.5	12.76	143.4	16.18	167.3	19.52	179.2	21.15	203.1	24.37	227.0	27.56	250.9	30.70
		15.0	119.5	12.88	143.4	16.31	167.3	19.72	179.2	21.42	203.1	24.78	227.0	28.09	250.9	31.34
		20.0	119.5	13.53	143.4	17.31	167.3	21.02	179.2	22.84	203.1	26.41	227.0	29.88	250.9	33.26
		25.0	119.5	18.54	143.4	22.41	167.3	26.36	179.2	28.37	203.1	32.42	227.0	36.53	250.9	40.68
		30.0	119.5	24.02	143.4	28.85	167.3	33.72	179.2	36.15	203.1	41.04	227.0	45.95	250.9	50.88
		35.0	119.5	30.93	143.4	36.92	167.3	42.88	179.2	45.84	203.1	51.76	227.0	57.68	250.9	63.62
		40.0	119.5	37.09	143.4	44.04	167.3	50.92	179.2	54.33	203.1	61.16	227.0	68.00	250.9	74.94
		43.0	119.5	40.90	143.4	48.45	167.3	55.91	179.2	59.62	203.1	67.05	227.0	74.57	250.9	82.26
		46.0	119.5	43.56	143.4	51.94	167.3	60.55	179.2	64.93	195.5	68.86	202.0	66.28	209.8	64.25
52.0	64.5	25.91	70.2	26.18	76.9	26.65	80.7	26.95	88.9	27.63	98.0	28.39	107.8	29.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	70%	-10.0	104.5	10.42	125.4	13.45	146.3	16.42	156.8	17.88	177.7	20.77	198.6	23.59	219.5	26.36
		-5.0	104.5	10.45	125.4	13.48	146.3	16.45	156.8	17.91	177.7	20.80	198.6	23.63	219.5	26.40
		0.0	104.5	10.48	125.4	13.51	146.3	16.49	156.8	17.95	177.7	20.84	198.6	23.67	219.5	26.44
		5.0	104.5	10.52	125.4	13.56	146.3	16.54	156.8	18.00	177.7	20.89	198.6	23.73	219.5	26.50
		10.0	104.5	10.59	125.4	13.63	146.3	16.61	156.8	18.08	177.7	20.97	198.6	23.80	219.5	26.56
		15.0	104.5	10.69	125.4	13.74	146.3	16.70	156.8	18.17	177.7	21.07	198.6	23.94	219.5	26.77
		20.0	104.5	10.90	125.4	14.05	146.3	17.17	156.8	18.71	177.7	21.74	198.6	24.70	219.5	27.60
		25.0	104.5	13.78	125.4	17.09	146.3	20.24	156.8	21.77	177.7	24.76	198.6	27.65	219.5	30.46
		30.0	104.5	19.55	125.4	23.18	146.3	26.74	156.8	28.50	177.7	31.98	198.6	35.41	219.5	38.78
		35.0	104.5	25.52	125.4	30.13	146.3	34.63	156.8	36.84	177.7	41.17	198.6	45.41	219.5	49.57
		40.0	104.5	30.90	125.4	36.35	146.3	41.62	156.8	44.21	177.7	49.27	198.6	54.21	219.5	59.06
		43.0	104.5	34.22	125.4	40.18	146.3	45.94	156.8	48.75	177.7	54.28	198.6	59.69	219.5	65.02
		46.0	104.5	36.52	125.4	42.88	146.3	49.26	156.8	52.45	177.7	58.85	198.6	62.96	209.8	64.25
52.0	64.5	25.91	70.2	26.18	76.9	26.65	80.7	26.95	88.9	27.63	98.0	28.39	107.8	29.21		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".



3. Part Load of Outdoor Unit

80HP (Cooling) U-20ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8 Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	60%	-10.0	89.6	8.24	107.5	10.89	125.4	13.48	134.4	14.76	152.3	17.29	170.2	19.78	188.2	22.22
		-5.0	89.6	8.26	107.5	10.91	125.4	13.51	134.4	14.79	152.3	17.32	170.2	19.80	188.2	22.24
		0.0	89.6	8.29	107.5	10.94	125.4	13.54	134.4	14.82	152.3	17.35	170.2	19.84	188.2	22.28
		5.0	89.6	8.32	107.5	10.97	125.4	13.58	134.4	14.86	152.3	17.40	170.2	19.88	188.2	22.32
		10.0	89.6	8.37	107.5	11.03	125.4	13.64	134.4	14.92	152.3	17.46	170.2	19.95	188.2	22.39
		15.0	89.6	8.45	107.5	11.11	125.4	13.72	134.4	15.01	152.3	17.55	170.2	20.03	188.2	22.46
		20.0	89.6	8.60	107.5	11.24	125.4	13.85	134.4	15.14	152.3	17.70	170.2	20.22	188.2	22.69
		25.0	89.6	9.58	107.5	12.32	125.4	14.99	134.4	16.30	152.3	18.87	170.2	21.38	188.2	23.83
		30.0	89.6	15.54	107.5	18.13	125.4	20.60	134.4	21.79	152.3	24.10	170.2	26.30	188.2	28.41
		35.0	89.6	20.56	107.5	23.96	125.4	27.19	134.4	28.75	152.3	31.75	170.2	34.61	188.2	37.33
		40.0	89.6	25.16	107.5	29.28	125.4	33.18	134.4	35.06	152.3	38.66	170.2	42.10	188.2	45.38
		43.0	89.6	28.00	107.5	32.55	125.4	36.85	134.4	38.92	152.3	42.90	170.2	46.69	188.2	50.32
		46.0	89.6	30.18	107.5	34.86	125.4	39.43	134.4	41.67	152.3	46.06	170.2	50.35	188.2	54.54
52.0	64.5	25.91	70.2	26.18	76.9	26.65	80.7	26.95	88.9	27.63	98.0	28.39	107.8	29.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	50%	-10.0	74.7	6.02	89.6	8.26	104.5	10.47	112.0	11.56	126.9	13.72	141.9	15.84	156.8	17.92
		-5.0	74.7	6.04	89.6	8.28	104.5	10.49	112.0	11.58	126.9	13.74	141.9	15.86	156.8	17.94
		0.0	74.7	6.06	89.6	8.30	104.5	10.52	112.0	11.61	126.9	13.77	141.9	15.89	156.8	17.97
		5.0	74.7	6.09	89.6	8.34	104.5	10.55	112.0	11.64	126.9	13.80	141.9	15.92	156.8	18.01
		10.0	74.7	6.13	89.6	8.38	104.5	10.59	112.0	11.69	126.9	13.85	141.9	15.97	156.8	18.05
		15.0	74.7	6.19	89.6	8.44	104.5	10.66	112.0	11.75	126.9	13.91	141.9	16.04	156.8	18.12
		20.0	74.7	6.30	89.6	8.55	104.5	10.77	112.0	11.86	126.9	14.02	141.9	16.14	156.8	18.21
		25.0	74.7	6.55	89.6	8.80	104.5	11.02	112.0	12.11	126.9	16.08	141.9	16.39	156.8	18.47
		30.0	74.7	11.98	89.6	13.53	104.5	14.42	112.0	15.07	126.9	16.61	141.9	18.32	156.8	20.10
		35.0	74.7	16.05	89.6	18.43	104.5	20.60	112.0	21.61	126.9	23.52	141.9	25.26	156.8	26.84
		40.0	74.7	19.88	89.6	22.84	104.5	25.57	112.0	26.85	126.9	29.25	141.9	31.45	156.8	33.47
		43.0	74.7	22.23	89.6	25.56	104.5	28.62	112.0	30.06	126.9	32.76	141.9	35.25	156.8	37.55
		46.0	74.7	24.52	89.6	27.83	104.5	30.95	112.0	32.44	126.9	35.29	141.9	37.98	156.8	40.51
52.0	64.5	25.91	70.2	26.18	76.9	26.65	80.7	26.95	88.9	27.63	98.0	28.39	107.8	29.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	40%	-10.0	59.7	3.76	71.7	5.59	83.6	7.39	89.6	8.28	101.5	10.04	113.5	11.79	125.4	13.51
		-5.0	59.7	3.78	71.7	5.60	83.6	7.40	89.6	8.30	101.5	10.06	113.5	11.81	125.4	13.53
		0.0	59.7	3.79	71.7	5.62	83.6	7.42	89.6	8.32	101.5	10.08	113.5	11.83	125.4	13.56
		5.0	59.7	3.81	71.7	5.64	83.6	7.45	89.6	8.34	101.5	10.10	113.5	11.86	125.4	13.59
		10.0	59.7	3.84	71.7	5.67	83.6	7.48	89.6	8.37	101.5	10.14	113.5	11.89	125.4	13.63
		15.0	59.7	3.89	71.7	5.72	83.6	7.53	89.6	8.42	101.5	10.19	113.5	11.94	125.4	13.69
		20.0	59.7	3.97	71.7	5.80	83.6	7.60	89.6	8.50	101.5	10.26	113.5	12.02	125.4	13.77
		25.0	59.7	4.13	71.7	5.95	83.6	7.74	89.6	8.63	101.5	10.38	113.5	12.13	125.4	13.88
		30.0	59.7	5.98	71.7	7.03	83.6	8.46	89.6	9.24	101.5	10.84	113.5	12.66	125.4	14.67
		35.0	59.7	12.02	71.7	13.55	83.6	14.88	89.6	15.48	101.5	16.54	113.5	17.86	125.4	19.56
		40.0	59.7	15.05	71.7	17.05	83.6	18.80	89.6	19.59	101.5	21.02	113.5	22.25	125.4	23.31
		43.0	59.7	16.93	71.7	19.21	83.6	21.23	89.6	22.15	101.5	23.82	113.5	25.28	125.4	26.54
		46.0	59.7	19.48	71.7	21.69	83.6	23.69	89.6	24.61	101.5	26.32	113.5	27.84	125.4	29.20
52.0	59.7	23.04	70.2	26.18	76.9	26.65	80.7	26.95	88.9	27.63	98.0	28.39	107.8	29.21		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp. °CDB	Indoor air temp. : °CWB													
			14.0		16.0		18.0		19.0		21.0		23.0		25.0	
			TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW	TC kW	PI kW
100%	30%	-10.0	44.8	1.46	53.8	2.86	62.7	4.25	67.2	4.94	76.2	6.32	85.1	7.68	94.1	9.01
		-5.0	44.8	1.47	53.8	2.87	62.7	4.26	67.2	4.96	76.2	6.34	85.1	7.70	94.1	9.03
		0.0	44.8	1.48	53.8	2.88	62.7	4.28	67.2	4.98	76.2	6.36	85.1	7.73	94.1	9.07
		5.0	44.8	1.50	53.8	2.90	62.7	4.30	67.2	5.00	76.2	6.39	85.1	7.76	94.1	9.10
		10.0	44.8	1.52	53.8	2.92	62.7	4.32	67.2	5.03	76.2	6.43	85.1	7.81	94.1	9.15
		15.0	44.8	1.55	53.8	2.95	62.7	4.36	67.2	5.08	76.2	6.49	85.1	7.87	94.1	9.22
		20.0	44.8	1.61	53.8	3.00	62.7	4.42	67.2	5.15	76.2	6.57	85.1	7.96	94.1	9.29
		25.0	44.8	1.71	53.8	3.10	62.7	4.53	67.2	5.26	76.2	6.68	85.1	8.09	94.1	9.54
		30.0	44.8	2.00	53.8	3.30	62.7	4.73	67.2	5.57	76.2	7.28	85.1	8.97	94.1	10.59
		35.0	44.8	8.46	53.8	9.35	62.7	10.38	67.2	11.06	76.2	12.40	85.1	13.72	94.1	15.02
		40.0	44.8	10.70	53.8	11.91	62.7	12.91	67.2	13.33	76.2	14.04	85.1	14.59	94.1	15.02
		43.0	44.8	12.11	53.8	13.53	62.7	14.71	67.2	15.23	76.2	16.10	85.1	16.79	94.1	17.32
		46.0	44.8	15.03	53.8	16.39	62.7	17.54	67.2	18.05	76.2	18.94	85.1	19.67	94.1	20.24
52.0	44.8	17.58	53.8	19.34	62.7	20.88	67.2	21.57	76.2	22.25	85.1	22.61	94.1	22.75		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

3-74. 80HP (Heating) U-20ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8

Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	100%	-24.9	-25.0	188.5	73.19	183.7	71.84	173.8	68.95	168.7	67.43	153.2	62.57	142.4	59.06	114.3	49.32
		-19.8	-20.0	198.0	74.91	193.0	73.48	182.6	70.48	177.4	68.90	161.1	63.84	149.9	60.21	120.4	50.15
		-14.7	-15.0	211.5	77.48	206.1	75.96	195.2	72.77	189.6	71.09	172.4	65.77	160.5	61.93	129.0	51.39
		-9.6	-10.0	229.7	81.10	223.9	79.46	212.1	75.98	206.1	74.17	187.4	68.41	174.5	64.29	140.3	53.04
		-4.4	-5.0	253.2	85.77	246.8	83.80	233.8	79.71	227.2	78.10	206.5	71.72	192.2	67.22	154.5	55.10
		-1.8	-2.5	267.1	88.91	260.3	86.92	246.5	82.79	239.5	80.65	217.8	73.94	202.8	69.22	158.7	54.76
		0.8	0.0	279.4	89.60	275.4	89.27	260.9	84.98	252.0	81.99	224.0	72.50	205.3	66.32	158.7	51.43
		2.8	2.0	289.3	87.94	280.0	84.87	261.3	78.83	252.0	75.86	224.0	67.17	205.3	61.52	158.7	47.90
		6.0	5.0	289.3	77.30	280.0	74.68	261.3	69.51	252.0	66.97	224.0	59.49	205.3	54.53	158.7	42.74
		7.0	6.0	289.3	73.87	280.0	71.39	261.3	66.50	252.0	64.00	224.0	56.91	205.3	52.30	158.7	41.12
		8.6	7.5	289.3	68.71	280.0	66.44	261.3	61.96	252.0	59.76	224.0	53.27	205.3	49.05	158.7	38.76
		11.2	10.0	289.3	60.72	280.0	58.80	261.3	55.01	252.0	53.14	224.0	47.61	205.3	43.98	158.7	35.07
		16.4	15.0	289.3	46.71	280.0	45.37	261.3	42.70	252.0	41.37	224.0	37.36	205.3	34.68	158.7	27.95
24.0	18.0	289.3	38.65	280.0	37.54	261.3	35.31	252.0	34.18	224.0	30.79	205.3	28.52	158.7	22.86		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	90%	-24.9	-25.0	188.5	73.19	183.7	71.84	173.8	68.95	168.7	67.43	153.2	62.57	142.4	59.06	114.3	49.32
		-19.8	-20.0	198.0	74.91	193.0	73.48	182.6	70.48	177.4	68.90	161.1	63.84	149.9	60.21	120.4	50.15
		-14.7	-15.0	211.5	77.48	206.1	75.96	195.2	72.77	189.6	71.09	172.4	65.77	160.5	61.93	129.0	51.39
		-9.6	-10.0	229.7	81.10	223.9	79.46	212.1	75.98	206.1	74.17	187.4	68.41	174.5	64.29	140.3	53.04
		-4.4	-5.0	253.2	85.77	246.8	83.80	233.8	79.71	226.8	78.10	201.6	66.68	184.8	61.60	142.8	48.92
		-1.8	-2.5	260.4	78.89	252.0	76.54	235.2	71.84	226.8	69.50	201.6	62.47	184.8	57.79	142.8	46.08
		0.8	0.0	260.4	72.87	252.0	70.75	235.2	66.51	226.8	64.39	201.6	58.03	184.8	53.77	142.8	43.07
		2.8	2.0	260.4	66.87	252.0	64.98	235.2	61.20	226.8	59.30	201.6	53.59	184.8	49.78	142.8	40.35
		6.0	5.0	260.4	58.70	252.0	57.26	235.2	54.33	226.8	52.83	201.6	48.15	184.8	44.82	142.8	36.22
		7.0	6.0	260.4	57.22	252.0	55.64	235.2	52.48	226.8	50.89	201.6	46.12	184.8	42.92	142.8	34.82
		8.6	7.5	260.4	52.99	252.0	51.59	235.2	48.76	226.8	47.34	201.6	43.06	184.8	40.17	142.8	32.79
		11.2	10.0	260.4	46.39	252.0	45.26	235.2	42.98	226.8	41.82	201.6	38.28	184.8	35.87	142.8	29.61
		16.4	15.0	260.4	34.78	252.0	34.07	235.2	32.62	226.8	31.87	201.6	29.50	184.8	27.84	142.8	23.35
24.0	18.0	260.4	33.25	252.0	32.36	235.2	30.57	226.8	29.67	201.6	26.99	184.8	25.20	142.8	20.72		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	80%	-24.9	-25.0	188.5	73.19	183.7	71.84	173.8	68.95	168.7	67.43	153.2	62.57	142.4	59.06	114.3	49.32
		-19.8	-20.0	198.0	74.91	193.0	73.48	182.6	70.48	177.4	68.90	161.1	63.84	149.9	60.21	120.4	50.15
		-14.7	-15.0	211.5	77.48	206.1	75.96	195.2	72.77	189.6	71.09	172.4	65.77	160.5	61.93	126.9	51.39
		-9.6	-10.0	229.7	81.10	223.9	79.46	209.1	67.67	201.6	65.75	179.2	59.85	164.3	55.78	126.9	45.17
		-4.4	-5.0	231.5	64.71	224.0	63.17	209.1	60.01	201.6	58.39	179.2	53.41	164.3	49.97	126.9	40.94
		-1.8	-2.5	231.5	60.04	224.0	58.67	209.1	55.84	201.6	54.39	179.2	49.90	164.3	46.80	126.9	38.69
		0.8	0.0	231.5	55.06	224.0	53.97	209.1	51.65	201.6	50.45	179.2	46.59	164.3	43.86	126.9	36.41
		2.8	2.0	231.5	51.04	224.0	50.07	209.1	48.00	201.6	46.90	179.2	43.42	164.3	40.94	126.9	34.12
		6.0	5.0	231.5	45.35	224.0	44.53	209.1	42.78	201.6	41.85	179.2	38.83	164.3	36.61	126.9	30.52
		7.0	6.0	231.5	43.79	224.0	42.90	209.1	41.06	201.6	40.11	179.2	37.12	164.3	35.02	126.9	29.37
		8.6	7.5	231.5	40.32	224.0	39.56	209.1	37.99	201.6	37.17	179.2	34.56	164.3	32.71	126.9	27.65
		11.2	10.0	231.5	34.92	224.0	34.37	209.1	33.20	201.6	32.58	179.2	30.56	164.3	29.09	126.9	24.92
		16.4	15.0	231.5	30.17	224.0	29.37	209.1	27.78	201.6	26.99	179.2	24.60	164.3	23.01	126.9	19.51
24.0	18.0	231.5	30.17	224.0	29.37	209.1	27.78	201.6	26.99	179.2	24.60	164.3	23.01	126.9	19.03		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWB	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW
100%	70%	-24.9	-25.0	188.5	73.19	183.7	71.84	173.8	68.95	168.7	67.43	153.2	62.57	142.4	59.06	111.1	44.05
		-19.8	-20.0	198.0	74.91	193.0	73.48	182.6	70.48	176.4	60.75	156.8	55.24	143.7	51.75	111.1	42.42
		-14.7	-15.0	202.5	62.04	196.0	60.79	182.9	58.19	176.4	56.83	156.8	52.50	143.7	49.39	111.1	40.60
		-9.6	-10.0	202.5	56.03	196.0	54.98	182.9	52.77	176.4	51.61	156.8	47.88	143.7	45.31	111.1	38.05
		-4.4	-5.0	202.5	49.62	196.0	48.84	182.9	47.13	176.4	46.21	156.8	43.20	143.7	40.96	111.1	34.59
		-1.8	-2.5	202.5	46.35	196.0	45.66	182.9	44.14	176.4	43.32	156.8	40.58	143.7	38.54	111.1	32.70
		0.8	0.0	202.5	42.94	196.0	42.34	182.9	41.01	176.4	40.29	156.8	37.85	143.7	36.01	111.1	30.71
		2.8	2.0	202.5	39.58	196.0	39.08	182.9	37.93	176.4	37.30	156.8	35.16	143.7	33.52	111.1	28.73
		6.0	5.0	202.5	34.75	196.0	34.36	182.9	33.46	176.4	32.95	156.8	31.14	143.7	29.74	111.1	25.51
		7.0	6.0	202.5	33.10	196.0	32.71	182.9	31.82	176.4	31.34	156.8	29.68	143.7	28.42	111.1	24.67
		8.6	7.5	202.5	30.31	196.0	30.01	182.9	29.32	176.4	28.93	156.8	27.57	143.7	26.50	111.1	23.22
		11.2	10.0	202.5	27.09	196.0	26.39	182.9	25.50	176.4	25.25	156.8	24.29	143.7	23.50	111.1	20.92
		16.4	15.0	202.5	27.09	196.0	26.39	182.9	25.00	176.4	24.30	156.8	22.21	143.7	20.82	111.1	17.34
24.0	18.0	202.5	27.09	196.0	26.39	182.9	25.00	176.4	24.30	156.8	22.21	143.7	20.82	111.1	17.34		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 "1. Capacity of Outdoor Unit".

3. Part Load of Outdoor Unit

80HP (Heating) U-20ME2E8+U-20ME2E8+U-20ME2E8+U-20ME2E8 Part Load Ratio 30-100%

TC: Total capacity (kW), PI: Power input (kW)

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWb	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	60%	-24.9	-25.0	173.6	54.48	168.0	53.61	156.8	51.72	151.2	50.70	134.4	47.23	123.2	44.42	95.2	36.97
		-19.8	-20.0	173.6	51.37	168.0	50.65	156.8	49.03	151.2	48.15	134.4	45.20	123.2	42.94	95.2	35.72
		-14.7	-15.0	173.6	47.99	168.0	47.35	156.8	45.92	151.2	45.12	134.4	42.45	123.2	40.42	95.2	34.47
		-9.6	-10.0	173.6	43.82	168.0	43.29	156.8	42.09	151.2	41.40	134.4	39.09	123.2	37.30	95.2	31.99
		-4.4	-5.0	173.6	38.89	168.0	38.48	156.8	37.53	151.2	36.99	134.4	35.09	123.2	33.60	95.2	29.06
		-1.8	-2.5	173.6	36.18	168.0	35.84	156.8	35.03	151.2	34.57	134.4	32.89	123.2	31.56	95.2	27.45
		0.8	0.0	173.6	33.35	168.0	33.09	156.8	32.43	151.2	32.04	134.4	30.61	123.2	29.44	95.2	25.77
		2.8	2.0	173.6	30.55	168.0	30.37	156.8	29.87	151.2	29.55	134.4	28.36	123.2	27.36	95.2	24.08
		6.0	5.0	173.6	26.34	168.0	26.22	156.8	25.88	151.2	25.66	134.4	24.78	123.2	24.02	95.2	21.28
		7.0	6.0	173.6	24.85	168.0	24.77	156.8	24.51	151.2	24.33	134.4	23.60	123.2	22.94	95.2	20.63
		8.6	7.5	173.6	24.00	168.0	23.41	156.8	22.56	151.2	22.45	134.4	21.91	123.2	21.38	95.2	19.43
		11.2	10.0	173.6	24.00	168.0	23.41	156.8	22.21	151.2	21.62	134.4	19.83	123.2	18.98	95.2	17.53
		16.4	15.0	173.6	24.00	168.0	23.41	156.8	22.21	151.2	21.62	134.4	19.83	123.2	18.63	95.2	15.65
24.0	18.0	173.6	24.00	168.0	23.41	156.8	22.21	151.2	21.62	134.4	19.83	123.2	18.63	95.2	15.65		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWb	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	50%	-24.9	-25.0	144.7	42.66	140.0	42.19	130.7	41.09	126.0	40.48	112.0	38.35	102.7	36.65	79.3	30.99
		-19.8	-20.0	144.7	40.54	140.0	40.11	130.7	39.13	126.0	38.58	112.0	36.62	102.7	35.07	79.3	30.22
		-14.7	-15.0	144.7	37.74	140.0	37.39	130.7	36.56	126.0	36.09	112.0	34.35	102.7	32.96	79.3	28.67
		-9.6	-10.0	144.7	34.31	140.0	34.05	130.7	33.40	126.0	33.01	112.0	31.57	102.7	30.38	79.3	26.60
		-4.4	-5.0	144.7	30.29	140.0	30.13	130.7	29.68	126.0	29.39	112.0	28.28	102.7	27.32	79.3	24.18
		-1.8	-2.5	144.7	28.09	140.0	27.98	130.7	27.65	126.0	27.42	112.0	26.49	102.7	25.65	79.3	22.84
		0.8	0.0	144.7	25.80	140.0	25.75	130.7	25.53	126.0	25.37	112.0	24.62	102.7	23.93	79.3	21.43
		2.8	2.0	144.7	23.47	140.0	23.45	130.7	23.31	126.0	23.18	112.0	22.60	102.7	22.03	79.3	19.93
		6.0	5.0	144.7	20.92	140.0	20.42	130.7	19.91	126.0	19.88	112.0	19.63	102.7	19.30	79.3	17.72
		7.0	6.0	144.7	20.92	140.0	20.42	130.7	19.43	126.0	18.93	112.0	18.72	102.7	18.45	79.3	17.15
		8.6	7.5	144.7	20.92	140.0	20.42	130.7	19.43	126.0	18.93	112.0	17.44	102.7	17.23	79.3	16.19
		11.2	10.0	144.7	20.92	140.0	20.42	130.7	19.43	126.0	18.93	112.0	17.44	102.7	16.44	79.3	14.67
		16.4	15.0	144.7	20.92	140.0	20.42	130.7	19.43	126.0	18.93	112.0	17.44	102.7	16.44	79.3	13.96
24.0	18.0	144.7	20.92	140.0	20.42	130.7	19.43	126.0	18.93	112.0	17.44	102.7	16.44	79.3	13.96		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWb	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	40%	-24.9	-25.0	115.7	33.12	112.0	32.87	104.5	32.23	100.8	31.85	89.6	30.47	82.1	29.34	63.5	25.51
		-19.8	-20.0	115.7	31.43	112.0	31.21	104.5	30.68	100.8	30.35	89.6	29.10	82.1	28.05	63.5	24.71
		-14.7	-15.0	115.7	29.21	112.0	29.06	104.5	28.63	100.8	28.36	89.6	27.30	82.1	26.39	63.5	23.38
		-9.6	-10.0	115.7	26.52	112.0	26.43	104.5	26.13	100.8	25.92	89.6	25.08	82.1	24.33	63.5	21.74
		-4.4	-5.0	115.7	23.36	112.0	23.35	104.5	23.21	100.8	23.08	89.6	22.49	82.1	21.91	63.5	19.79
		-1.8	-2.5	115.7	21.60	112.0	21.61	104.5	21.53	100.8	21.45	89.6	20.98	82.1	20.49	63.5	18.65
		0.8	0.0	115.7	19.56	112.0	19.62	104.5	19.65	100.8	19.63	89.6	19.35	82.1	18.99	63.5	17.47
		2.8	2.0	115.7	17.84	112.0	17.70	104.5	17.82	100.8	17.85	89.6	17.74	82.1	17.50	63.5	16.31
		6.0	5.0	115.7	17.84	112.0	17.44	104.5	16.64	100.8	16.25	89.6	15.51	82.1	15.43	63.5	14.66
		7.0	6.0	115.7	17.84	112.0	17.44	104.5	16.64	100.8	16.25	89.6	15.05	82.1	14.80	63.5	14.17
		8.6	7.5	115.7	17.84	112.0	17.44	104.5	16.64	100.8	16.25	89.6	15.05	82.1	14.26	63.5	13.43
		11.2	10.0	115.7	17.84	112.0	17.44	104.5	16.64	100.8	16.25	89.6	15.05	82.1	14.26	63.5	12.27
		16.4	15.0	115.7	17.84	112.0	17.44	104.5	16.64	100.8	16.25	89.6	15.05	82.1	14.26	63.5	12.27
24.0	18.0	115.7	17.84	112.0	17.44	104.5	16.64	100.8	16.25	89.6	15.05	82.1	14.26	63.5	12.27		

Combination :Indoor/outdoor capacity ratio	:Part load ratio	Outdoor air temp.		Indoor air temp. : °CDB													
				16.0		17.0		19.0		20.0		23.0		25.0		30.0	
				TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
		°CDB	°CWb	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	kW	
100%	30%	-24.9	-25.0	86.8	24.90	84.0	24.79	78.4	24.46	75.6	24.25	67.2	23.41	61.6	22.68	47.6	20.21
		-19.8	-20.0	86.8	23.64	84.0	23.55	78.4	23.30	75.6	23.12	67.2	22.39	61.6	21.73	47.6	19.50
		-14.7	-15.0	86.8	22.00	84.0	21.95	78.4	21.77	75.6	21.64	67.2	21.04	61.6	20.48	47.6	18.49
		-9.6	-10.0	86.8	19.92	84.0	19.91	78.4	19.82	75.6	19.73	67.2	19.29	61.6	18.85	47.6	17.20
		-4.4	-5.0	86.8	17.34	84.0	17.40	78.4	17.46	75.6	17.44	67.2	17.22	61.6	16.93	47.6	15.67
		-1.8	-2.5	86.8	15.95	84.0	16.05	78.4	16.17	75.6	16.19	67.2	16.10	61.6	15.89	47.6	14.84
		0.8	0.0	86.8	14.75	84.0	14.67	78.4	14.84	75.6	14.90	67.2	14.92	61.6	14.80	47.6	13.99
		2.8	2.0	86.8	14.75	84.0	14.46	78.4	13.86	75.6	13.66	67.2	13.78	61.6	13.73	47.6	13.14
		6.0	5.0	86.8	14.75	84.0	14.46	78.4	13.86	75.6	13.56	67.2	12.66	61.6	12.27	47.6	11.96
		7.0	6.0	86.8	14.75	84.0	14.46	78.4	13.86	75.6	13.56	67.2	12.66	61.6	12.07	47.6	11.59
		8.6	7.5	86.8	14.75	84.0	14.46	78.4	13.86	75.6	13.56	67.2	12.66	61.6	12.07	47.6	11.05
		11.2	10.0	86.8	14.75	84.0	14.46	78.4	13.86	75.6	13.56	67.2	12.66	61.6	12.07	47.6	10.58
		16.4	15.0	86.8	14.75	84.0	14.46	78.4	13.86	75.6	13.56	67.2	12.66	61.6	12.07	47.6	10.58
24.0	18.0	86.8	14.75	84.0	14.46	78.4	13.86	75.6	13.56	67.2	12.66	61.6	12.07	47.6	10.58		

The above table shows the characteristics of Part Load (Total capacity and Power input) while all connected indoor units are operating at 100% ratio indoor and outdoor capacity.

* When choosing a model of outdoor unit, use the table under the Section 8 “1. Capacity of Outdoor Unit”.

Contents

9. RENEWAL

1. Precautions on Renewal Design & Installation	9-2
1. General.....	9-2
2. Basic Points for Using Existing Tubing	9-2
3. VRF Renewal Kit and Sight Glass	9-3
4. Procedure for Renewal	9-4
5. Judging Whether Possible to Reuse Existing Tubing: Judgments 1 to 5	9-5
6. Heating Test Run and Cooling Test Run	9-9
2. Reference	9-10
1. Purposes for Attaching VRF Renewal Kit.....	9-10
2. Type of oil	9-10
3. Oil discoloration	9-10
4. Oil color standards for renewal	9-11
5. Standards for judging refrigerant with sight glass	9-11
3. INSTALLATION INSTRUCTIONS (VRF Renewal Kit)	9-12
4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)	9-13

1. Precautions on Renewal Design & Installation

1. General

VRF^{™1} adopts the refrigerant R410A that has a higher pressure than conventional refrigerants, but it uses high-precision microcomputer control to enable operation at a "design pressure of 3.3 MPa", which is around the same as that before the refrigerant R410A was adopted. This means that you can use refrigerant tubing for R22².

Furthermore, if certain conditions are satisfied, you can reuse existing tubing by attaching one VRF Renewal Kit (CZ-SLK2) to each outdoor unit.

When performing the work, check the "DESIGN of VRF SYSTEM" section together with this section.

Operating Range (Outdoor unit)

Cooling : -10 ~ 43°C (DB)

Heating : -25 ~ 18°C (WB)

NOTE

*1. Systems for 2WAY VRF.

*2. Refrigerant tubing R22 has a maximum working pressure of 3.3 MPa and can be used for refrigerants such as R22 and R407C.

2. Basic Points for Using Existing Tubing

For existing tubing to be reused, the condition of the tubing needs to satisfy the basic points of "Safety" and "Cleanliness". First, confirm that the condition of the existing tubing satisfies the following check items.

■ Safety

- The existing unit shall be an air conditioner for use with R22/R407C/R410A refrigerant.
The reuse of existing tubing and the like that has been used for an application other than air conditioning (refrigerating device, etc.) is prohibited because it is difficult to know the situation.
- The tubing shall not be dented, cracked, corroded, etc.
Checking whether existing tubing is damaged, dented, and the like and the reliability of tubing strength is the responsibility of the installer performing the installation and is not guaranteed by us.
- The maximum working pressure of branches shall be 3.3 MPa or more. Furthermore, the branches shall be our genuine products.
We do not guarantee the tubing strength of any branch that is not a genuine product of us.
- The thermal insulation material shall not be decayed and peeling off.
If there is no thermal insulation installed on the liquid tubing, thermal insulation needs to be installed.

■ Cleanliness

- Check one of the refrigerant oil is used in the existing unit as shown below.

Mineral oil: SUNISO, FLEOLE S, MS

Synthetic oil: Type of alkyl benzene (HAB, barrel-freeze), type of ester (only PVE)

NOTE: In case that the existing unit is the type of GHP, in addition, PAG oil (HP-55/7/9, PR, etc.) is used, pipe cleaning is necessary. If the unit is continuously used without cleaning, winding insulation failure occurs. In the case of using SUNISO or the type of ether (FV xxxx S Series) for the GHP outdoor unit, it is not necessary to clean the unit. In this case, be sure to check the type of refrigerant oil in the existing unit.


- The existing tubing shall be connected to the indoor unit and outdoor unit and be air tight.
Using tubing that is dirty inside as is may cause a failure of the new equipment.
- When using the existing unit, there is no trouble caused by foreign materials such as rare short circuited, moisture choke or oxidized scale inside the tubes. If any trouble occurs, appropriate measures shall be carried out on a timely basis.

1. Precautions on Renewal Design & Installation


3. VRF Renewal Kit and Sight Glass

The following shows an overview of the VRF Renewal Kit (CZ-SLK2) that is required when existing tubing is reused. If the exact tube length and tube size of the existing tubing are uncertain, attach a sight glass in accordance with the figure below. It will be used for checking the amount of additional refrigerant charge (calculating the amount in Judgment 4).

■ VRF Renewal Kit: CZ-SLK2

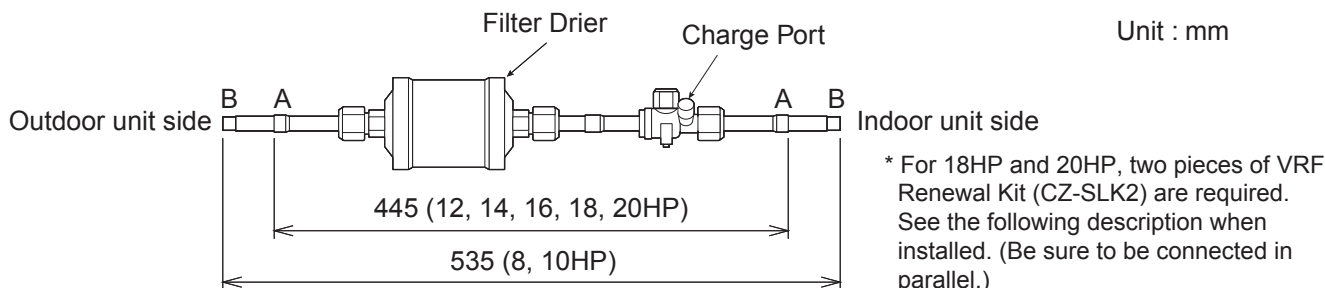


Connecting tube dimensions
 A : $\varnothing 12.7$ (12, 14, 16, 18, 20HP)
 B : $\varnothing 9.52$ (8, 10HP)

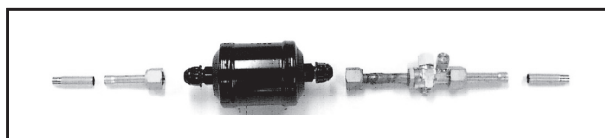

NOTE

If the tube size does not match that of the existing tubing, use a reducer (field supply) to adjust the tube diameter.

■ Attaching the VRF Renewal Kit, sight glass and High-pressure SW kit

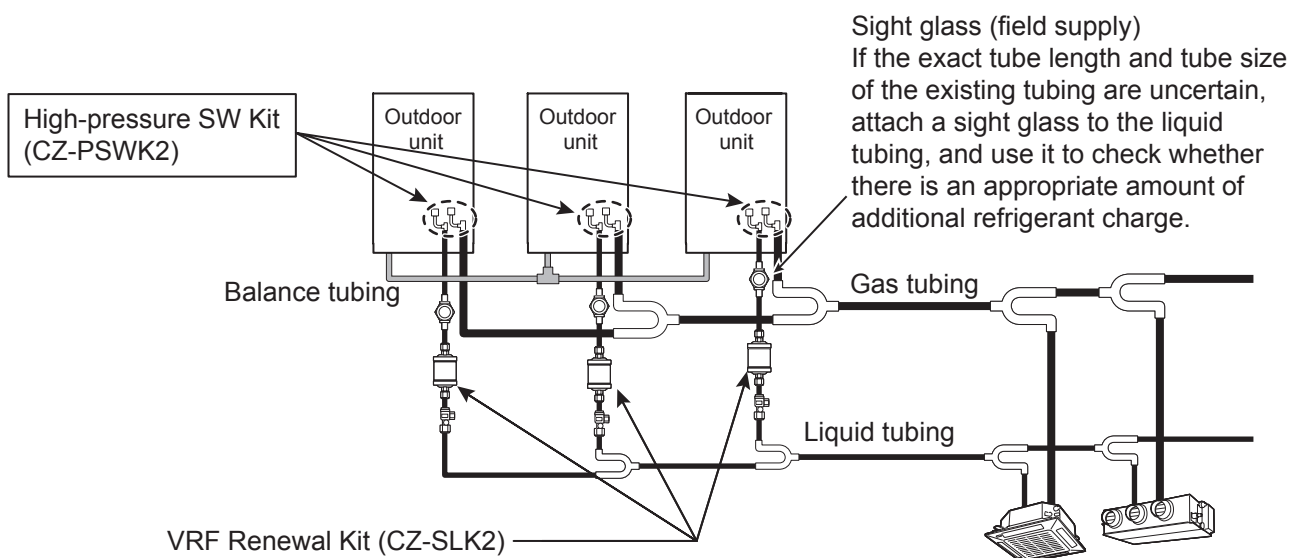


- VRF Renewal Kit (CZ-SLK2) shall be attached to the liquid tubing of all outdoor units.
- There is no need to remove the VRF Renewal Kit (CZ-SLK2) after a test run is performed because normal operation is possible while it is attached.
- When attaching the VRF Renewal Kit (CZ-SLK2), care shall be taken with regards to the installation location and orientation of the filter drier and ball valve. If a mistake is made, the refrigerant in the system needs to be recovered when the filter drier is replaced, which will make maintenance difficult.
- Thermal insulation material (field supply: heat resistance of 80°C or higher and thickness of 10 mm or greater) shall be applied to the VRF Renewal Kit (CZ-SLK2).
- The filter drier of the VRF Renewal Kit (CZ-SLK2) may need to be replaced depending on the condition of the existing unit. Use a Danfoss DMB 164 as the replacement filter drier.

1. Precautions on Renewal Design & Installation

4. Procedure for Renewal

After checking "2. Basic Points for Using Existing Tubing", perform the work in accordance with the renewal flow below. When performing the work, also check the "DESIGN of VRF SYSTEM" section.

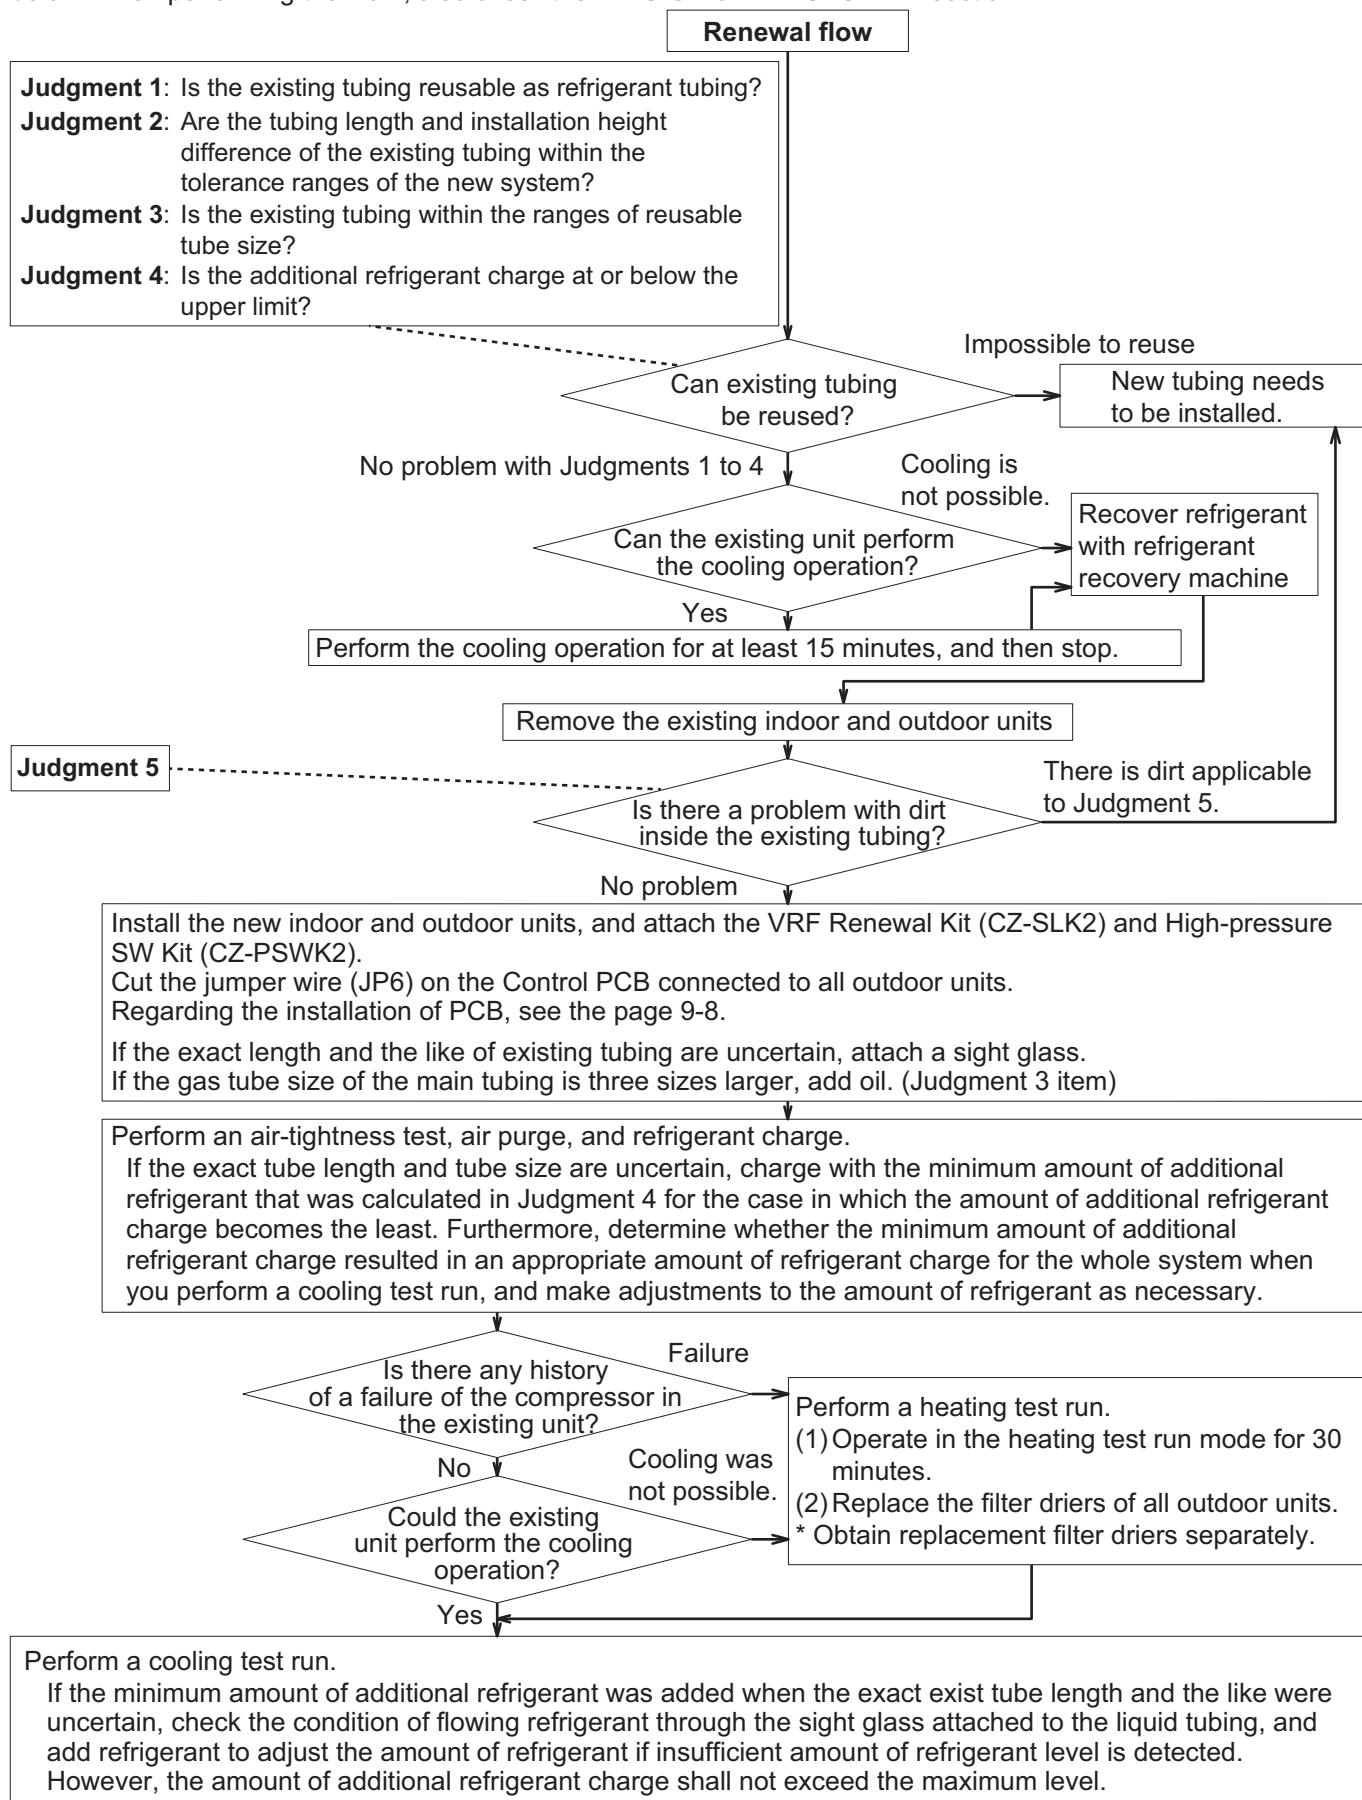


1. Precautions on Renewal Design & Installation

5. Judging Whether Possible to Reuse Existing Tubing: Judgments 1 to 5

It is necessary to check whether the existing tubing satisfies the following Judgments 1 to 5 while referring to the figure below. If the existing tubing does not satisfy the following conditions, new tubing needs to be installed.

Sample Image of Tubing of Existing Unit

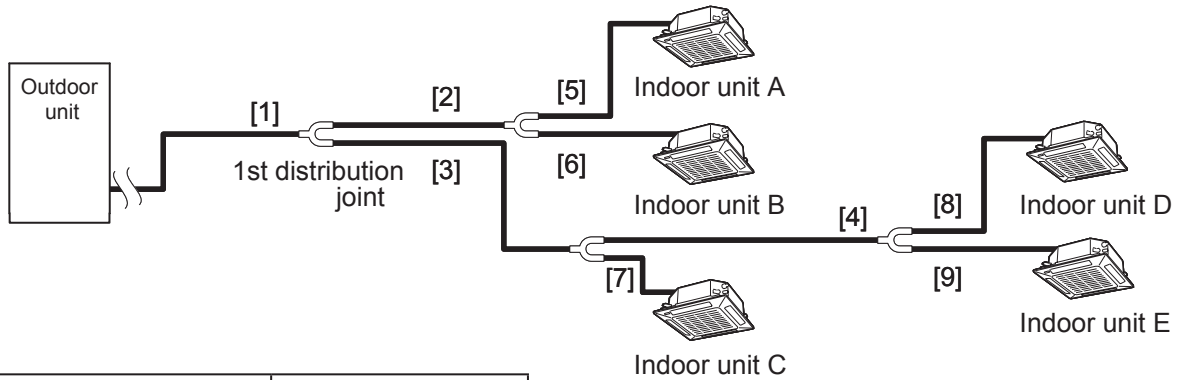

Item	Applicable Tubing
Main tubing*1	[1]
Main tubing after distribution*1	[2][3][4]
Indoor unit connection tube	[5][6][7][8][9]

Fig. 9-1

*1: If “main tubing after distribution” is the same size as “main tubing”, it shall be considered to be “main tubing”.
For example, if the tube size of [3] is the same as the tube size of [1], “main tubing” is [1] + [3].

■ Judgment 1

Is the refrigerant tubing reusable?

Check whether the existing refrigerant tubing is reusable (the refrigerant tubing is for R22 or has the same or a higher design pressure than refrigerant tubing for R22). Wall thickness shall comply with the applicable legislation. Table 9-1 shows the minimal wall thickness of reusable refrigerant tubing. Also check the maximum working pressure for branches separately.

Table 9-1 Usable Refrigerant Tubing (Seamless phosphorous deoxidized copper tube for refrigeration)

Material	Material Temper - O					Material Temper - 1/2H, H								
	6.35	9.52	12.7	15.88	19.05	19.05	22.22	25.4	28.58	31.75	38.1	41.28	44.45	50.8
Outer dia. (mm)	6.35	9.52	12.7	15.88	19.05	19.05	22.22	25.4	28.58	31.75	38.1	41.28	44.45	50.8
Thickness (mm)	0.80	0.80	0.80	1.00	1.00	1.00	1.00	1.00	1.00	1.10	1.15	1.20	1.25	1.40

■ Judgment 2

Are the tubing length and installation height difference of the existing tubing within the tolerance ranges of the new system?

The refrigerant tubing length and installation height difference must be within the tolerance ranges of the tubing length and installation height difference of the new system.

1. Precautions on Renewal Design & Installation

■ Judgment 3

Is the existing tubing within the reusable tube size ranges?

Check whether the tube sizes of the existing refrigerant tubing are within the usable ranges.

Tables 9-2 to 9-4 show the usable tube size ranges for each of the main tubing, main tubing after distribution, and indoor unit connection tubing.

The existing tube sizes must be checked to determine whether they are within the ranges in these tables.

Furthermore, extra oil may need to be added depending on the gas tube sizes of the main tubing, main tubing after distribution.

Table 9-2 Usable Tube Size Ranges for Main Tubing [1]

Outdoor Unit HP	Gas tubing (mm)										Liquid tubing (mm)							
	12.7	15.88	19.05	22.22	25.4	28.58	31.75	38.1	41.28	44.45	50.8	6.35	9.52	12.7	15.88	19.05	22.22	25.4
8			⊙	○	○	●							⊙	○	○	○	○	○
10				⊙	○	○	●						⊙	○	○	○	○	○
12					⊙	○	○	●						⊙	○	○	○	○
14					⊙	○	○	●						⊙	○	○	○	○
16						⊙	○	○	●					⊙	○	○	○	○
18						⊙	○	○	●						⊙	○	○	○
20						⊙	○	○	●						⊙	○	○	○
22						⊙	○	○	●						⊙	○	○	○
24						⊙	○	○	●						⊙	○	○	○
26							⊙	○	○	●						⊙	○	○
28							⊙	○	○	●						⊙	○	○
30							⊙	○	○	●						⊙	○	○
32							⊙	○	○	●						⊙	○	○
34							⊙	○	○	●						⊙	○	○
36								⊙	○	○	●					⊙	○	○
38								⊙	○	○	●					⊙	○	○
40								⊙	○	○	●					⊙	○	○
42								⊙	○	○	●					⊙	○	○
44								⊙	○	○	●					⊙	○	○
46								⊙	○	○	●					⊙	○	○
48								⊙	○	○	●					⊙	○	○
50								⊙	○	○	●					⊙	○	○
52								⊙	○	○	●					⊙	○	○
54								⊙	○	○	●					⊙	○	○
56								⊙	○	○	●					⊙	○	○
58								⊙	○	○	●					⊙	○	○
60								⊙	○	○	●					⊙	○	○
62									⊙	○	○	●				⊙	○	○
64									⊙	○	○	●				⊙	○	○
66									⊙	○	○	●				⊙	○	○
68									⊙	○	○	●				⊙	○	○
70									⊙	○	○	●				⊙	○	○
72										⊙	○	○	●			⊙	○	○
74										⊙	○	○	●			⊙	○	○
76										⊙	○	○	●			⊙	○	○
78										⊙	○	○	●			⊙	○	○
80										⊙	○	○	●			⊙	○	○

- *1. Marking with ⊙ shows the standard size. Marking with ○ shows available for the sizes.
- *2. If the extension is planned in the future and tubing size is checked after expansion, see the location of total HP after expansion if the combination of outdoor units in the table above is not convenient.
- *3. The balance tube (outdoor unit tubing) is φ6.35.
- *4. If the maximum tubing length (L1) exceeds 90m (equivalent length), it is impossible to use the tube marked with ⊙ in the Main Tubing Size Table (as well as gas and liquid tubes).
- *5. Even in case of excluding No.4, if the main tube (LM) exceeds maximum length of 50m, only the gas tube marked with ⊙ cannot be used within 50m in length for the main tube. Liquid tube is available for use.
- *6. When using the tube marked with ● in the Main Tubing Size Table, additional oil charge is necessary. Add 30cc/m of oil.

Table 9-3 Usable Tube Size Ranges for Main Tubing after Distribution [2][3][4]

Total volume after the branch The parenthesis shows the equivalent horsepower.		Gas tubing (mm)										Liquid tubing (mm)							
over	below	12.7	15.88	19.05	22.22	25.4	28.58	31.75	38.1	41.28	44.45	50.8	6.35	9.52	12.7	15.88	19.05	22.22	25.4
-	7.1(2.5)	⊙	○	○	●									⊙	○	○	○	○	○
7.1(2.5)	16.0(6)		⊙	○	○	●								⊙	○	○	○	○	○
16.0(6)	22.5(8.1)			⊙	○	○	●							⊙	○	○	○	○	○
22.5(8.1)	30.0(11)				⊙	○	○	●						⊙	○	○	○	○	○
30.0(11)	42.0(15)					⊙	○	○	●						⊙	○	○	○	○
42.0(15)	52.4(19)						⊙	○	○	●					⊙	○	○	○	○
52.4(19)	70.0(25)							⊙	○	○	●					⊙	○	○	○
70.0(25)	98.0(35)								⊙	○	○	●					⊙	○	○
98.0(35)	170.0(61)									⊙	○	○	●				⊙	○	○
170.0(61)	187.0(67)										⊙	○	○	●			⊙	○	○
187.0(67)	199.0(71)											⊙	○	○	●			⊙	○
199.0(71)	-												⊙	○	○			⊙	○

- *1. Marking with ⊙ shows the standard size. Marking with ○ shows available for the sizes.
- *2. Be careful the main tubing size after distribution shall not exceed the main tubing size.
- *3. If the total volume of connected indoor units after distribution exceeds the total volume of outdoor units, select the main tubing size in consideration of the total volume of outdoor units.
- *4. It is possible to use tube marked with ● in the Main Tubing Size Table after the branch by additional oil charge within the length of 50m.

1. Precautions on Renewal Design & Installation

Table 9-4 Usable Tube Size Ranges for Indoor Unit Connection Tubing [5][6][7][8][9]

Type Indoor unit	Gas tubing (mm)										Liquid tubing (mm)							
	12.7	15.88	19.05	22.22	25.4	28.58	31.75	38.1	41.28	44.45	50.8	6.35	9.52	12.7	15.88	19.05	22.22	25.4
15	⊙											⊙	○					
22	⊙											⊙	○					
28	⊙											⊙	○					
36	⊙											⊙	○					
45	⊙	○										⊙	○					
56	⊙	○										⊙	○					
60		⊙										△	⊙					
71/73		⊙										△	⊙					
90		⊙	○									△	⊙					
106		⊙	○										⊙					
140		⊙	○										⊙					
160		⊙	○										⊙					
180			⊙	○	○								⊙	○				
224			⊙	○	○								⊙	○				
280				⊙	○	○							⊙	○				

- *1. Marking with ⊙ shows the standard size. Marking with ○ shows available for the sizes.
- *2. The tube marked with △ in the Indoor Unit Connecting Tubing Size Table can be used when the following conditions are all satisfied.
 1. Lack of capacity or refrigerant flow noise does not occur in the existing indoor unit.
 2. The existing indoor unit is the type of 6300-7500kcal/h.
 3. The length of tube φ 6.35 is within 10m.
 4. The elevation difference between indoor units (H2) is within 4m.

Judgment 4
Is the additional refrigerant charge at or below the upper limit?

Check that the amount of additional refrigerant charge for the existing refrigerant tubing is at or below the upper limit that is determined from the number of outdoor unit connections.

Calculate the amount of additional refrigerant charge from the liquid tubing size and total tubing length using the same criteria as for standard units (VRF).

Table 9-5 shows the calculation formula for the amount of additional refrigerant charge.

Check the existing liquid tubing size and total tubing length of each size, and calculate the amount of additional refrigerant charge from that result.

Also, check that the calculation result is at or below the upper limit for the amount of additional refrigerant charge determined by the number of outdoor unit connections that is shown in Table 9-6.

● **If the exact tube length and tube size of the existing tubing are uncertain:**

If the exact tube length and tube size of the existing tubing are uncertain, assume the case in which the amount of additional refrigerant charge becomes the most (liquid tube = thick and tube length = long) and conversely, the case in which the amount of additional refrigerant charge becomes the least (liquid tube = thin and tube length = short), and calculate the amount of additional refrigerant charge for each case. When you determine the amount of refrigerant, the result calculated for the maximum amount of additional refrigerant charge must be at or below the upper limit.

Furthermore, make sure you calculate the minimum amount of additional refrigerant for the case in which the amount of additional refrigerant charge becomes the least because it will be required when the actual renewal work is performed.

Table 9-5 Calculation of Amount of Additional Refrigerant Charge

Liquid Tube Size (mm)	Total Tube Length (m)		Amount of Additional Refrigerant Charge (g/m)	=	Sub-total (g)	} Total (kg)
φ 6.35		x	26	=		
φ 9.52		x	56	=		
φ 12.7		x	128	=		
φ 15.88		x	185	=		
φ 19.05		x	259	=		
φ 22.22		x	366	=		
φ 25.4		x	490	=		

Table 9-6 Number of Outdoor Unit Connections and Upper Limit for Amount of Additional Refrigerant Charge

Number of Outdoor Units	Upper Limit for Amount of Additional Refrigerant Charge
1	50 kg
2	80 kg
3	100 kg
4	100 kg

1. Precautions on Renewal Design & Installation

■ Judgment 5


Is there a problem with dirt inside the existing tubing?

After the existing units are removed, new tubing needs to be installed if the existing tubing is in any of the following situations.

- There is apparently a large amount of discolored oil remaining inside the existing tubing.
See the item "4. Oil color standards for renewal" in the chapter 2 "Reference".
- There is apparently a large amount of residue or wear debris remaining inside the existing tubing.
Oil collected with a finger feels gritty or looks glittery.

Control PCB of outdoor unit

When reusing the existing tubes, it is necessary to cut out the jumper wire JP6 connected to all outdoor units.
See page 9-4 under the section "4. Procedure for Renewal".

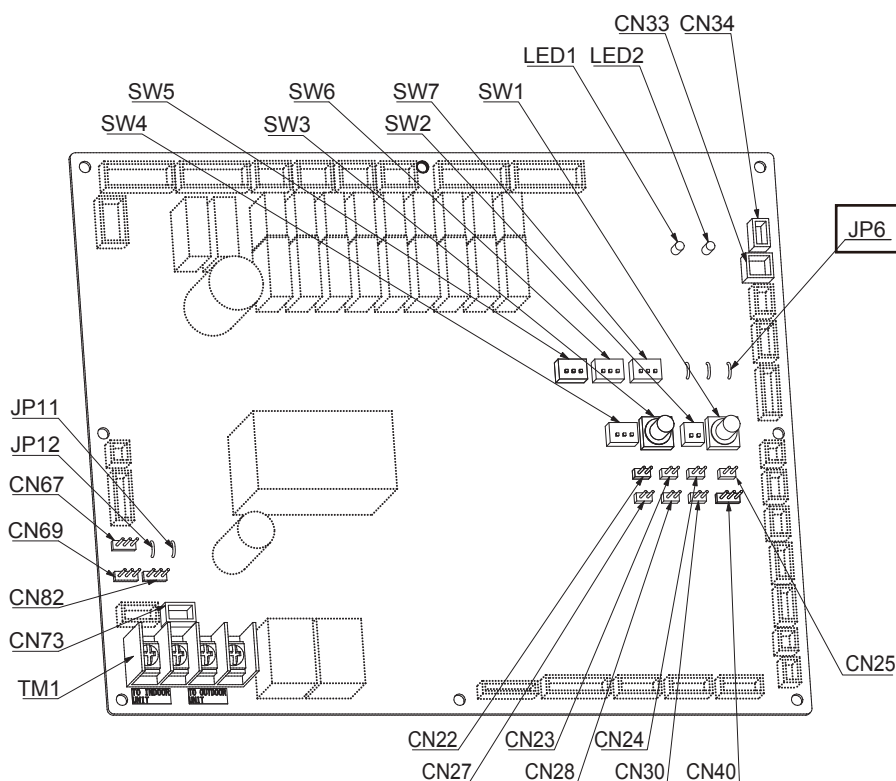

1. Precautions on Renewal Design & Installation

6. Heating Test Run and Cooling Test Run

a) Heating Test Run

If refrigerant recovery could not be implemented by performing the cooling operation with the existing unit or if there is history of a failure of the compressor in the existing unit, perform the tubing cleaning operation with a heating test run.

Furthermore, it is necessary to replace the filter drier of the VRF Renewal Kit (CZ-SLK2) after you perform the tubing cleaning operation.

Obtain and prepare a replacement filter drier in advance.

Step 1 : Perform a heating test run for 30 minutes.

- If a heating test run cannot be performed because there is an insufficient amount of refrigerant, add the required minimum amount of refrigerant.

Step 2 : Stop the outdoor units manually.

Step 3 : Need to replace all filter driers of the VRF Renewal Kit (CZ-SLK2).

The tubing cleaning operation with the heating test run is now complete.

b) Cooling Test Run

If the exact tube length and tube size of the existing tubing are uncertain, the current condition should be one in which the additional charging of the minimum amount of refrigerant calculated in Judgment 4 has been performed. Under the condition, perform a cooling test run, adjust the appropriate amount of system refrigerant while checking the condition of flowing refrigerant with the sight glass.

Step 1 : Start the cooling test run, and wait until the operating condition of the system stabilizes.

Step 2 : After operation stabilizes, visually observe the flowing refrigerant through the sight glass attached to the liquid tubing. If flashing becomes visible, add refrigerant by degrees until flashing disappears.

- Add refrigerant in increments of approximately 1 kg.
- Check flashing after adding refrigerant when operation has stabilized after approximately 10 minutes has elapsed.
- The amount of additional refrigerant must not exceed the maximum amount of additional refrigerant calculated in Judgment 4.

Step 3 : For when maintenance is performed, fill in the total amount of additional refrigerant charge on the label inside the outdoor unit.

The adjustment of the system refrigerant charge amount with the cooling test run is now complete.

2. Reference

1. Purposes for Attaching VRF Renewal Kit (CZ-SLK2)

The VRF Renewal Kit: CZ-SLK2 has functions for collecting small wear debris and residue that pass through the strainer and absorbing moisture.

When existing tubing is reused, the VRF Renewal Kit can be used in addition to the strainer attached to the outdoor unit to collect the wear debris and residue that remains inside the existing tubing in order to prevent them entering inside the outdoor unit.

Furthermore, perform the tubing cleaning operation with a heating test run if there is the possibility of residue remaining inside the existing tubing (heating test run in flow for judging whether to reuse existing tubing).

However, if the tubing cleaning operation is performed, the filter drier of the VRF Renewal Kit must be replaced after the cleaning operation is performed.

Furthermore, it has been verified that a small amount of residue and the like is not a problem if a VRF Renewal Kit is attached, but if there is apparently a large amount of discolored oil or residue, the existing tubing cannot be used because there is danger of the strainer and VRF Renewal Kit becoming clogged (Judgment 5 in flow for judging whether to reuse existing tubing).

2. Type of oil

VRF series are filled with oil at the time of shipment.

The type of oil differs depending on the application and refrigerant to be used.

Furthermore, the recent diversification of compressor types as well as the severe conditions of use mean that the additives may differ even if the type is the same.

When reusing existing tubing, the old oil remaining inside the tubing will mix with the oil for the new unit, so perform an evaluation test by mixing an oil for R22 shown below to check that there is no problem.

- Check one of the refrigerant oil is used in the existing unit as shown below.

Mineral oil: SUNISO, FLEOLE S, MS

Synthetic oil: Type of alkyl benzene (HAB, barrel-freeze), type of ester (only PVE)

NOTE: In case that the existing unit is the type of GHP, in addition, PAG oil (HP-55/7/9, PR, etc.) is used, pipe cleaning is necessary. If the unit is continuously used without cleaning, winding insulation failure occurs. In the case of using SUNISO or the type of ether (FV xxxx S Series) for the GHP outdoor unit, it is not necessary to clean the unit. In this case, be sure to check the type of refrigerant oil in the existing unit.

3. Oil discoloration

There are two causes of oil discoloration.

1. Oxide scale or minute wear debris floating in the oil results in the oil appearing discolored.

The quality of the oil itself has not changed, so the oil can be sufficiently cleaned with the VRF Renewal Kit if there is just a little bit of dirt.

However, if the oil contains a large amount of wear debris and feels gritty when touched with a fingertip or there is apparently a large amount of residue, the existing piping cannot be used.
2. The oil is exposed to high temperatures for long periods of time resulting in the oil itself becoming discolored.

Lubrication of the compressor has deteriorated because the lubrication performance of the oil itself has been greatly reduced. Therefore, the existing tubing cannot be used.

However, it has been verified that there is no adverse effect on the lubrication performance of the new system when there is only a small amount of oil that is discolored as described above.

Remark :

Residual chlorine that causes metal to corrode may sometimes be included in the old oil.

As a countermeasure, add additives for catching the chlorine content into the oil in the VRF series so that no problem occurs.

2. Reference

4. Oil color standards for renewal

In a test tube with a diameter of approximately 2 cm, collect a sample of 3 to 5 cm of oil for renewal, and then check the oil comparing with the pattern of colors below.

Applicable Oil

Mineral oil : Suniso, Freol S and MS

Synthetic fluid : Alkyl benzene-type (HAB, Barrel-freeze), ester-type, ether-type (PVE only)

Tube cleaning not necessary ←

If moisture is mixed with the oil, an increase in friction (abnormal friction) or rusting may result in damage to the system.

If moisture is mixed with the oil and the oil is whitish, it is necessary to clean the tubing or install a new tubing.

New Oil

Oil Containing Moisture

New oil is transparent. If moisture mixes with the oil, the oil emulsifies and the level of transparency is reduced, so it becomes difficult to see through to the other side of the test tube.

5. Standards for judging refrigerant with sight glass

If the exact tube length and tube size of existing tubing are uncertain, you can check with the sight glass whether there is an appropriate amount of additional refrigerant charge.

Check the condition after operation has stabilized during the cooling test run.

Outdoor unit stopped ← → Outdoor unit activated





Refrigerant not activated :
As the refrigerant is transparent, the bottom of the sight glass is visible.

Flashing :
The amount of refrigerant is not satisfied with the standard level. The refrigerant forms bubbles and seems whitish overall. Add refrigerant until the appropriate level is reached.

A few bubbles occur :
There seems to be nothing inside the sight glass because the refrigerant is transparent and full. When the operating condition changes, a few bubbles occur. No additional refrigerant charge required.

3. INSTALLATION INSTRUCTIONS (VRF Renewal Kit)

Check the parts of the VRF Renewal Kit (CZ-SLK2) you purchased.


Name	Shape	Quantity	Name	Shape	Quantity
(1) Filter drier		1	(3) Tube 1 (for ø12.7)		2
(2) Valve		1	(4) Tube 2 (for ø9.52)		2

1. How to attach the VRF Renewal Kit (CZ-SLK2)


1-1. Assemble and use parts (1) to (4) in the figure above in accordance with the table below.

Outdoor Unit Type	Parts	Quantity	Outdoor Unit Type	Parts	Quantity	Outdoor Unit Type	Parts	Quantity
8, 10 HP	(1), (2)	1	12, 14, 16 HP	(1), (2)	1	18, 20 HP	(1), (2)	2
	(3), (4)	2		(3)	2		(3)	4

1-2. Connect each part in accordance with the figure below.

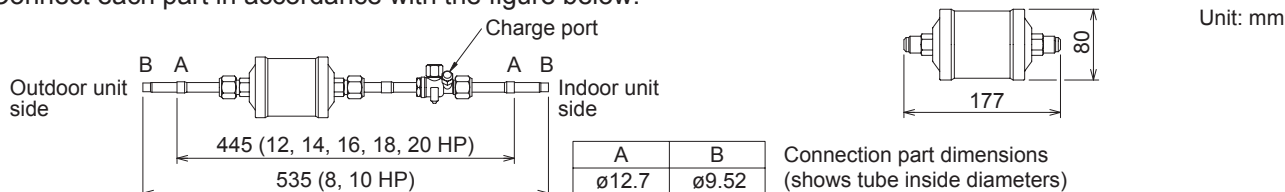

- Attach the valve to the indoor unit side as viewed from the filter drier.
 - If the tube size does not match the existing tube size, use a reducer (obtain locally) to adjust the tube diameter.
 - For 18HP and 20HP, two pieces of VRF renewal kit are required.
- See the following description when installed. Be sure to be connected in parallel.

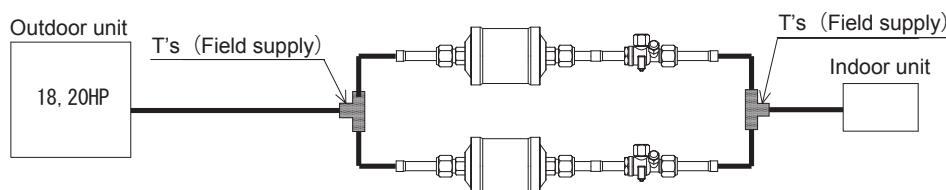

1-3. Attach the VRF Renewal Kit to each outdoor unit.


1-4. Cut the existing tubing on site with a pipe cutter or the like and attach the VRF Renewal Kit according to the rough indication of the dimensions for attaching the VRF Renewal Kit shown in the figure above.

2. Tightening flare nuts and brazing

- Use a tightening torque of 55±6 N·m for the flare nuts.
- Be sure to use a wet cloth or the like to cool the valve main part and filter drier when you perform the brazing process.


Also, be sure to replace the air inside the tube with nitrogen to prevent the formation of an oxide film when you perform the brazing process.

There is a risk of system malfunction through clogging of the strainer or refrigerant circuit when the brazing is performed without nitrogen gas replacement in the tube.

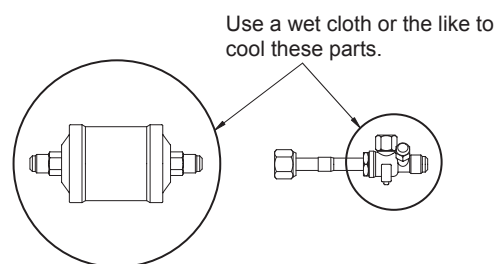

3. Opening and closing the valve

The valve is opened at the time of shipment from the factory.

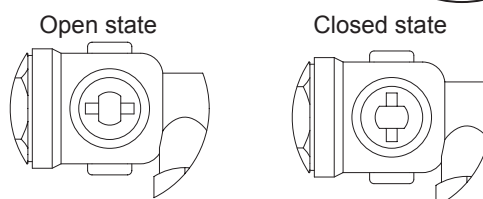

4. Leak testing

Perform a leak test for the brazing parts and flare connections parts. For the leak test, refer to "Installation Instructions" supplied with the outdoor unit.

5. Attaching thermal insulation material

Make sure the thermal insulation (obtain locally) covers the entire kit. Use thermal insulation material with a heat resistance of at least 80°C and thickness of at least 10 mm.








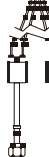

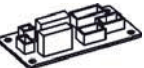





4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)

Installation Instructions (High Pressure Switch Kit)

Refer to the Installation Instructions supplied with the outdoor unit.

ACCESSORIES

NOTE: Check all supplied parts before installation.

No.	Part name	Figure	Q'ty
①	Connection tubing (Φ 9.52)		1
②	Connection tubing (Φ 12.7)		1
③	Connection tubing (Φ 15.88)		1
④	Connection tubing (Φ 19.05)		1
⑤	Connection tubing (Φ 22.22)		1
⑥	Connection tubing (Φ 25.4)		1
⑦	Connection tubing (Φ 28.58)		1
⑧	High pressure switch (HPS label attached to liquid tube side)		1
⑨	Clamper T30R (140mm)		7
⑫	Relay PCB		1
⑬	Spacer (SPLSN-6U)		4
⑭	Lead wire (Relay PCB $\begin{matrix} 2P \\ \text{BLK} \end{matrix}$ ~ CR PCB $\begin{matrix} 2P \\ \text{BLK} \end{matrix}$)		1
⑮	Lead wire (Relay PCB $\begin{matrix} 2P \\ \text{GRN} \end{matrix}$ ~ HIC1 PCB $\begin{matrix} 3P \\ \text{WHT} \end{matrix}$)		1
⑯	Lead wire (Relay PCB $\begin{matrix} 3P \\ \text{GRN} \end{matrix}$ ~ HIC2 PCB $\begin{matrix} 3P \\ \text{WHT} \end{matrix}$)		1
⑰	Lead wire (63PH2 Short-circuit connector)		1

4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)


HOW TO INSTALL

1. Process of Tube and Connection Tubing

- Material: Use C1220T phosphorus deoxidized copper specified in JIS H3300 “Copper and Copper Alloy Seamless Pipes and Tubes”. (1/2H material & H material for outer diameter over $\Phi 22.22$, O material for others)
- Use the tubing size that is shown in the table at the right.
- When cutting the tube, remove burrs at the end of copper tube with a tube reamer.
- When bending the tube, bend radius should be at least 4 times the outer diameter of the tube. Be careful not to crush or scratch it.
- Before flaring procedure, remove the flare nut of the liquid tubing valve (2WAY) and assemble Part①, Part② and Part③ as shown in the figure.
- Use the flare tools for flaring procedure securely.

Table 1 Refrigerant tubing

Tubing size (mm)			
O material		1/2H, H material	
Outer diameter	Thickness	Outer diameter	Thickness
$\Phi 9.52$	T0.8	$\Phi 22.22$	T1.0
$\Phi 12.7$	T0.8	$\Phi 25.4$	T1.0
$\Phi 15.88$	T1.0	$\Phi 28.58$	T1.0
$\Phi 19.05$	Over T1.0		

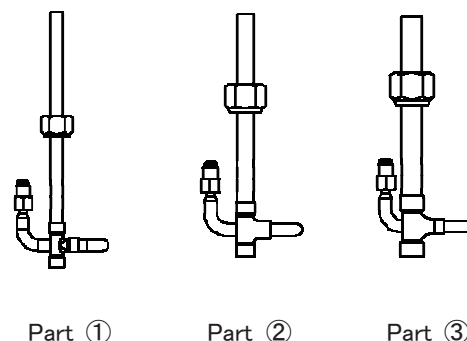


2. Connection Tubing

- Before brazing the gas tubing valve (2WAY ME2 series), connect the high pressure switch for gas tubing (2WAY ME2 series) of Part⑧ into Part①, Part② and Part③.
- When finished connecting the high pressure switch for liquid tubing (2WAY ME2 series) and brazing Part①, Part② and Part③ by the local delivery, braze the gas tubing valve (2WAY ME2 series).
- Regarding the type of 2WAY, make use of the connection tube supplied with the outdoor unit together.
- To fasten the flare nuts, use two adjustable wrenches or spanners. Tightening torque should be $16 \pm 2 \text{ N}\cdot\text{m}$. If the flare nuts are over-tightened, the flare may be damaged.
- Precautions for brazing
When brazing, do nitrogen replacement inside the tube to prevent the oxide layer. Use a wet cloth to make the valve cool when brazing.

4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)


2WAY8HP (ME2 series)

Refrigerant tube	Connection	Accessories
Liquid tube	Flaring	Part①+Part⑧(HPS label attached)
Gas tube	Brazing	Part④+Part⑧

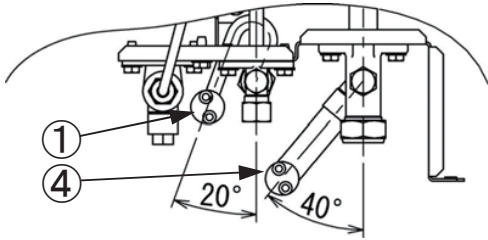


Install Part① so that the tube, as shown in the figure, and the tube distributed in local delivery can be fixed at an approx. 20° angle.

Install Part④ so that the tube, as shown in the figure, and the tube distributed in local delivery can be fixed at an approx. 40° angle.

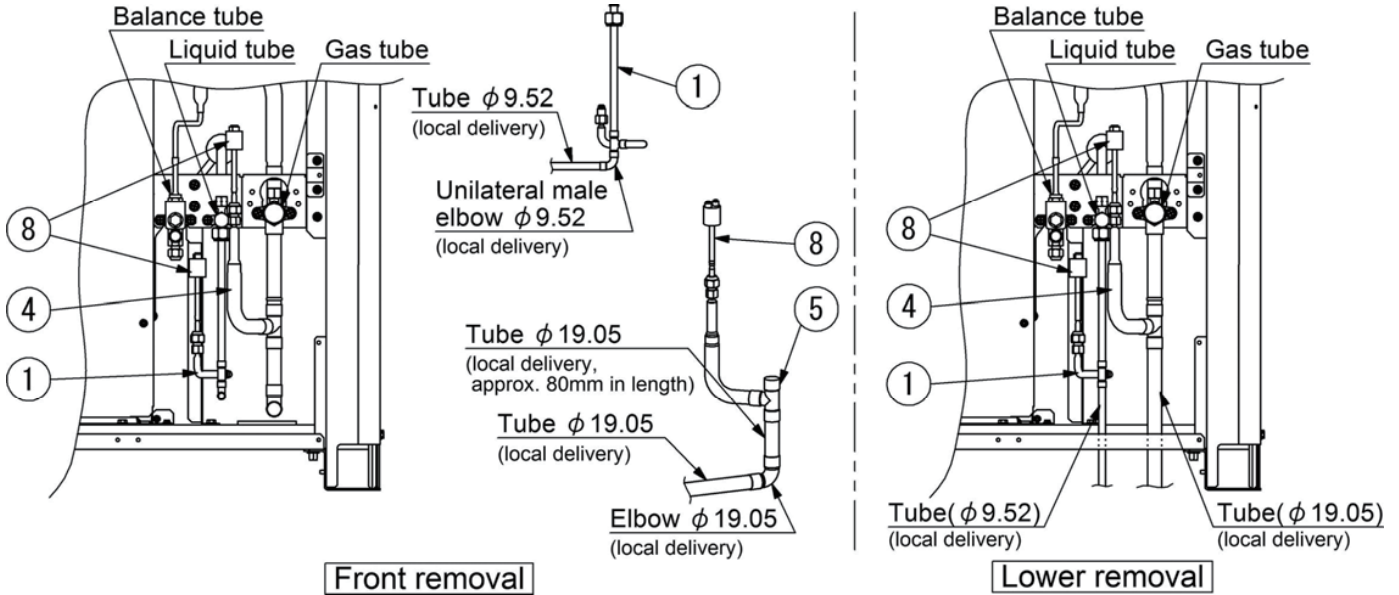


2WAY 10HP (ME2 series)

Refrigerant tube	Connection	Accessories
Liquid tube	Flaring	Part①+Part⑧(HPS label attached)
Gas tube	Brazing	Part⑤+Part⑧

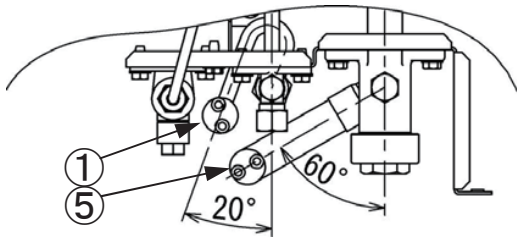


Install Part① so that the tube, as shown in the figure, and the tube distributed in local delivery can be fixed at an approx. 20° angle.

Install Part⑤ so that the tube, as shown in the figure, and the tube distributed in local delivery can be fixed at an approx. 60° angle.

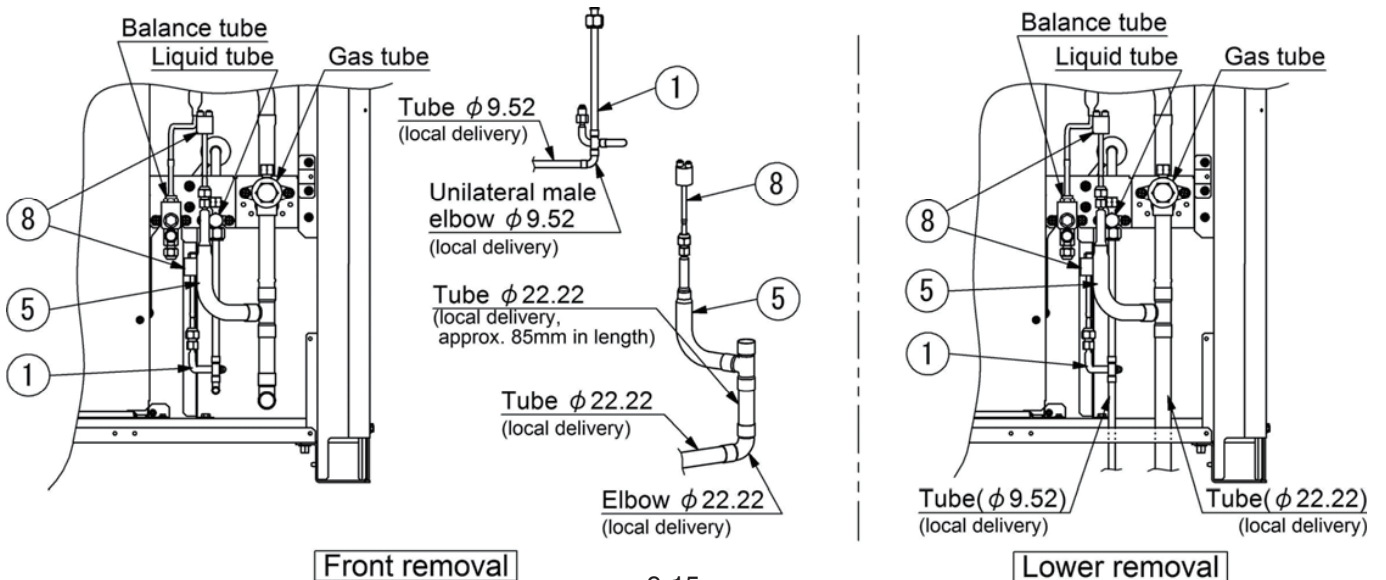


4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)

2WAY 12-16HP (ME2 series)

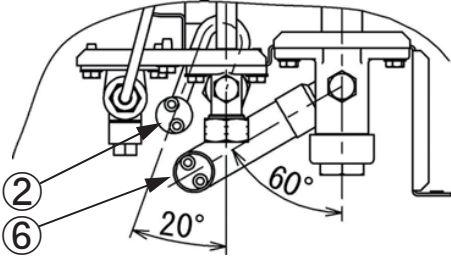


Refrigerant tube	Connection	Accessories
Liquid tube	Flaring	Part②+Part⑧(HPS label attached)
Gas tube	12-14HP Brazing	Part⑥+Part⑧
	16HP Brazing	Part⑥+Part⑧ + Tube supplied with outdoor unit ($\phi 25.4 \rightarrow \phi 28.58$)

Install Part② so that the tube, as shown in the figure, and the tube distributed in local delivery can be fixed at an approx. 20° angle.
Install Part⑥ so that the tube, as shown in the figure, and the tube distributed in local delivery can be fixed at an approx. 60° angle.

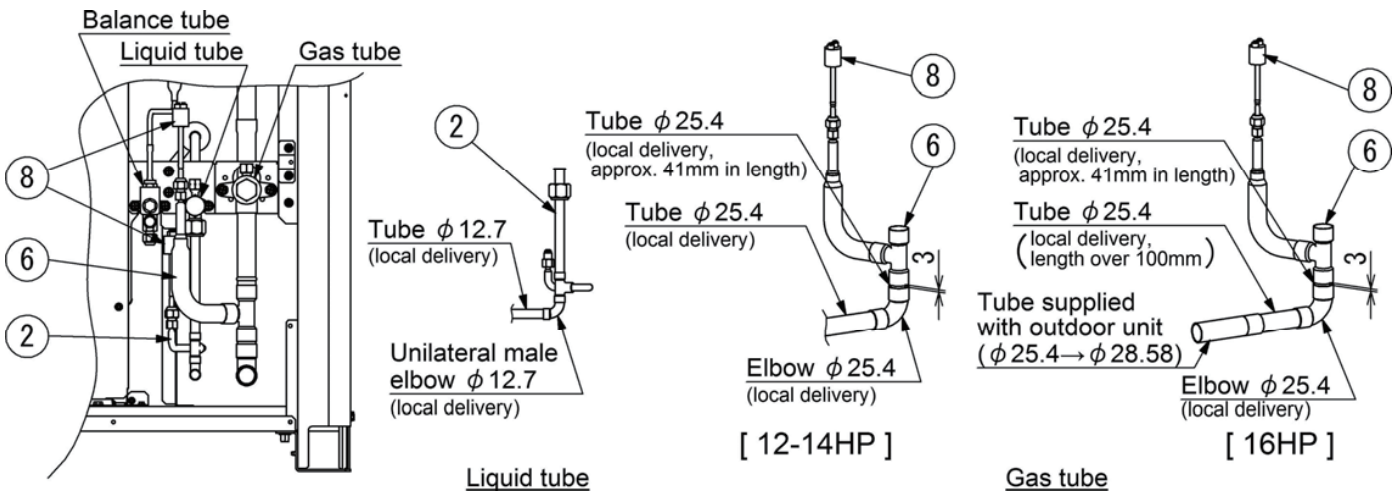

Front removal

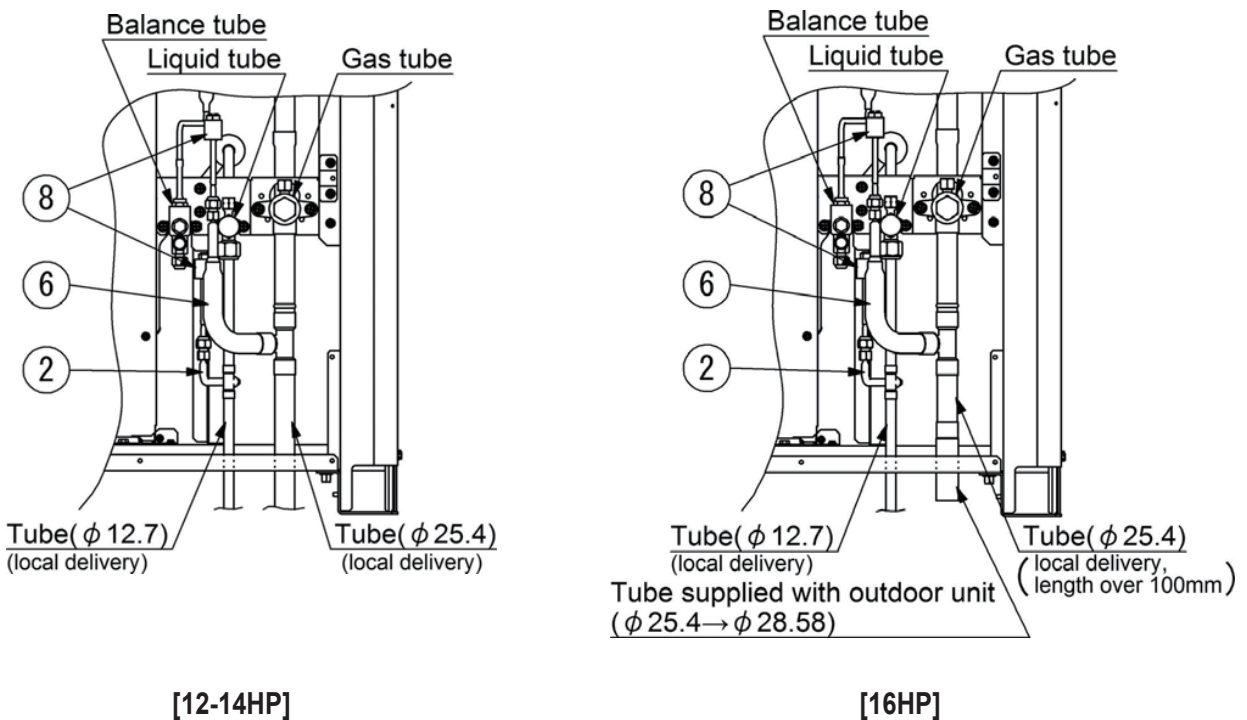


Lower removal

4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)


2WAY 18-20HP (ME2 series)

Refrigerant tube	Connection	Accessories
Liquid tube	Flaring	Part③+Part⑧(HPS label attached)
Gas tube	Brazing	Part⑦+Part⑧

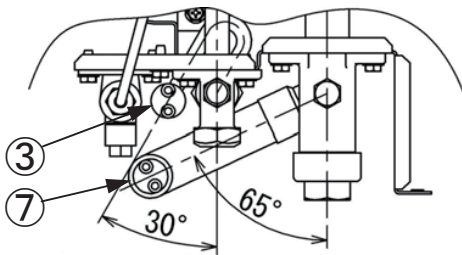


Install Part③ so that the tube, as shown in the figure, and the tube distributed in local delivery can be fixed at an approx. 30° angle.

Install Part⑦ so that the tube, as shown in the figure, and the tube distributed in local delivery can be fixed at an approx. 65° angle.

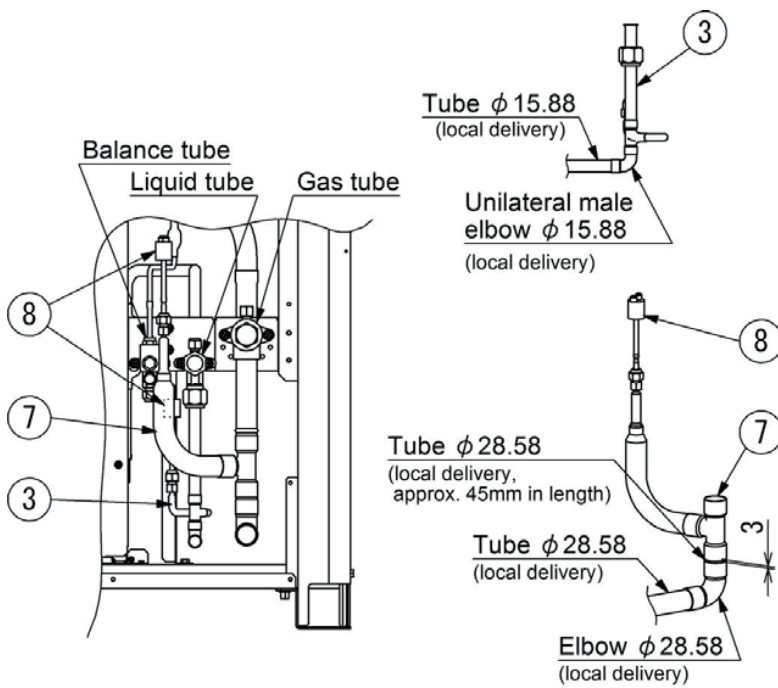

Front removal

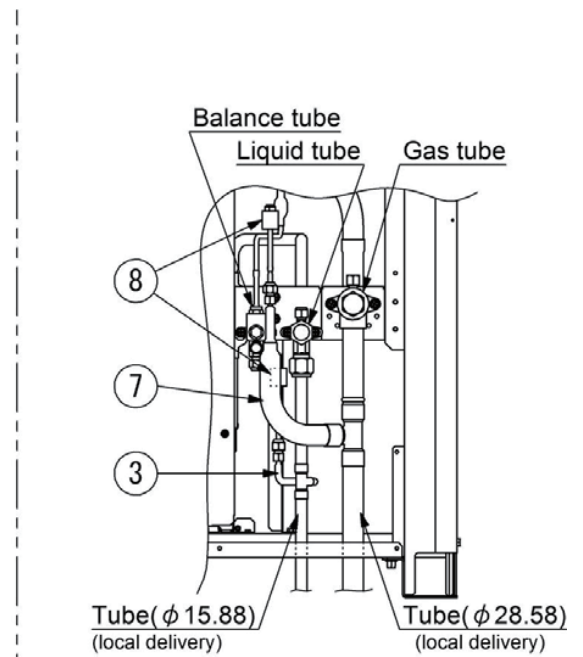

Lower removal

4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)

3. Wiring Connection

Connect the wire for High Pressure switch using Part⑧. Refer to next page for details.

4. Airtight Test

Refer to the installation instructions supplied with the outdoor unit. Make sure the airtight test pressure should be increased to 3.3MPaG by the nitrogen and check there is no leakage.

5. Checking Operation for High Pressure Switch of Kit Part

With the condition of airtight test pressure of 3.3MPaG by the nitrogen, turn the power ON in all systems.

Press the remote control operation button. If the Alarm P04 is displayed, High Pressure switch functions normally.

6. Tube Vacuuming and Additional Refrigerant Charge

Refer to the installation instructions supplied with the outdoor unit.

7. Insulating the Refrigerant Tubing

Refer to the installation instructions supplied with the outdoor unit and insulate and tape over the tubing.

8. Checking Operation for High Pressure Switch in the Unit

Operate the unit in the test heating mode and fully open the gas valve after 5-minute drive. If the unit operates for a while and the compressor is stopped, High Pressure switch is functioning normally.

4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)


WIRING PROCESS OF HIGH PRESSURE SWITCH KIT

1. Inside Wiring

■ 2WAY 8-10HP (ME2 series)

Be cautious that the lead wires should not touch other pipes and valves directly.

1. Install the PCB (12) by using Spacer (13) in the Control box as shown in the DTL (A).
2. Disconnect the lead wire of the pressure switch (63PH1) of the outdoor unit from the PCB.
3. Wiring the lead wire of Part (8) as shown in the figure.
 - *1: Unfasten the repeat tie of outdoor unit and then bundle it with other lead wires.
 - *2: The lead wire of Part (8) are bundled to the capillary tube of the heat-exchanger by Band (9).
 - *3: Bundle the lead wires of the gas / liquid pressure switch of Part (8) by Band (9) placed at the location shown in the figure.
 - *4: The extra length of wires should be bundled by Band (9) at the location shown in the figure.

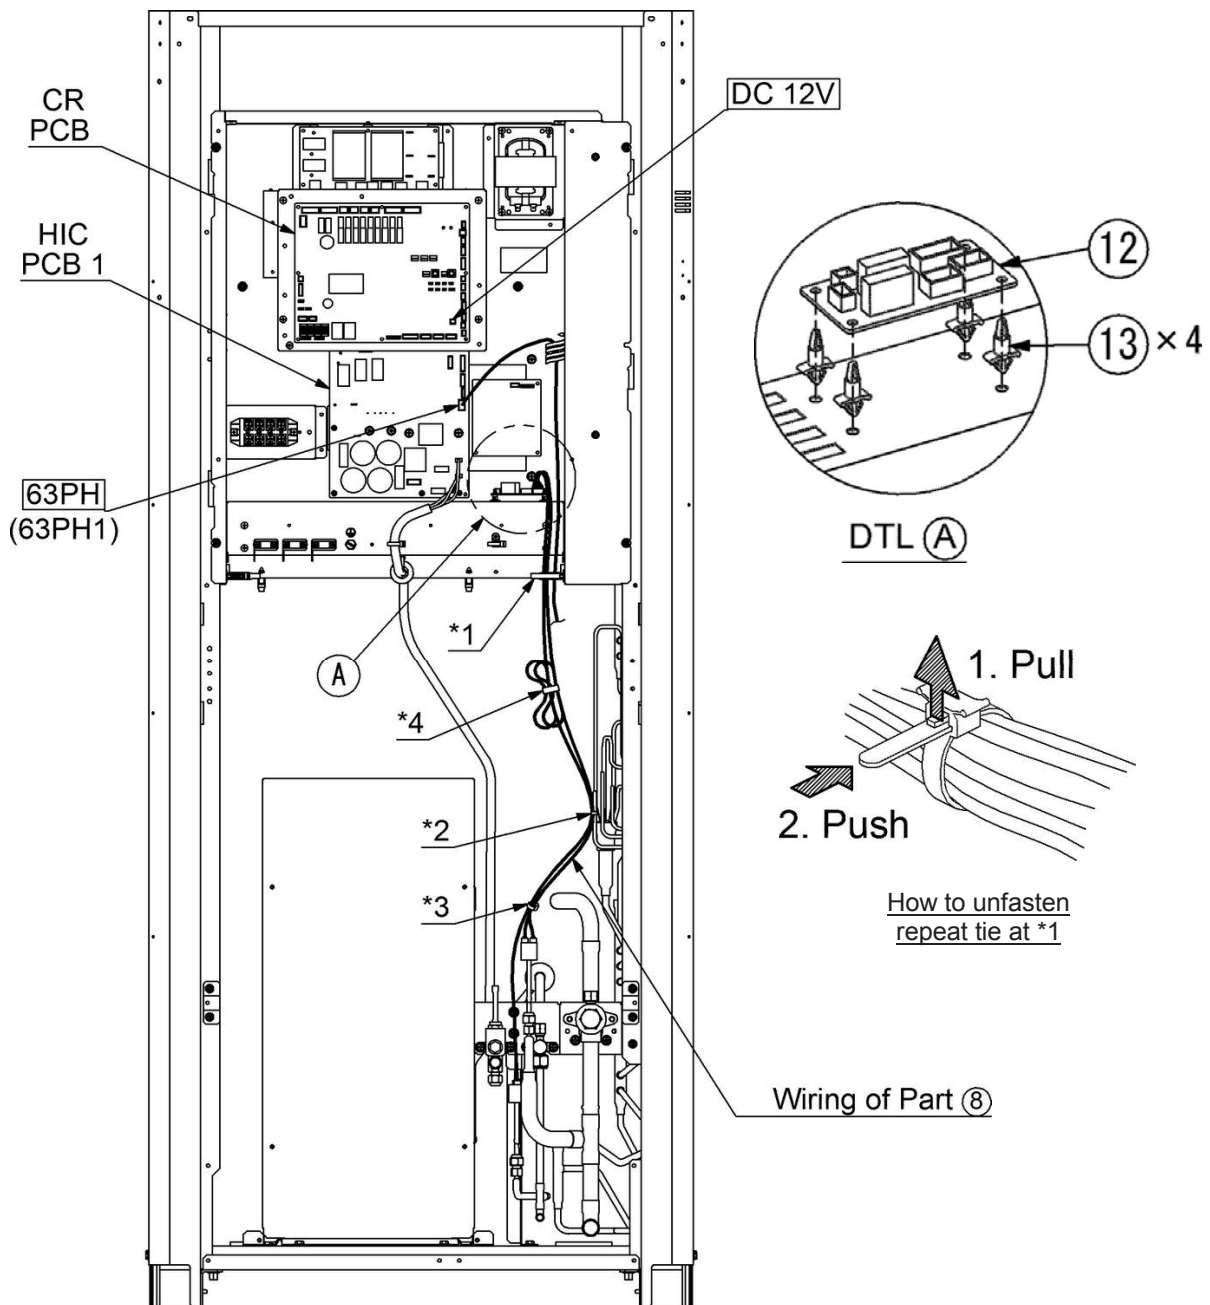


4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)

■ 2WAY 12HP (ME2 series)

Be cautious that the lead wires should not touch other pipes and valves directly.

1. Install the PCB (12) by using Spacer (13) in the Control box as shown in the DTL (A).
2. Disconnect the lead wire of the pressure switch (63PH1) of outdoor unit from the PCB.
3. Wiring the lead wire of Part (8) as shown in the figure.
 - *1: Unfasten the repeat tie of the outdoor unit and then bundle it with other lead wires.
 - *2: The lead wire of Part (8) are bundled to the capillary tube of the heat-exchanger by Band (9).
 - *3: Bundle the lead wires from the gas / liquid pressure switch of Part (8) by Band (9) placed at the location shown in the figure.
 - *4: The extra length of wire should be bundled by Band (9) placed at the location shown in the figure.

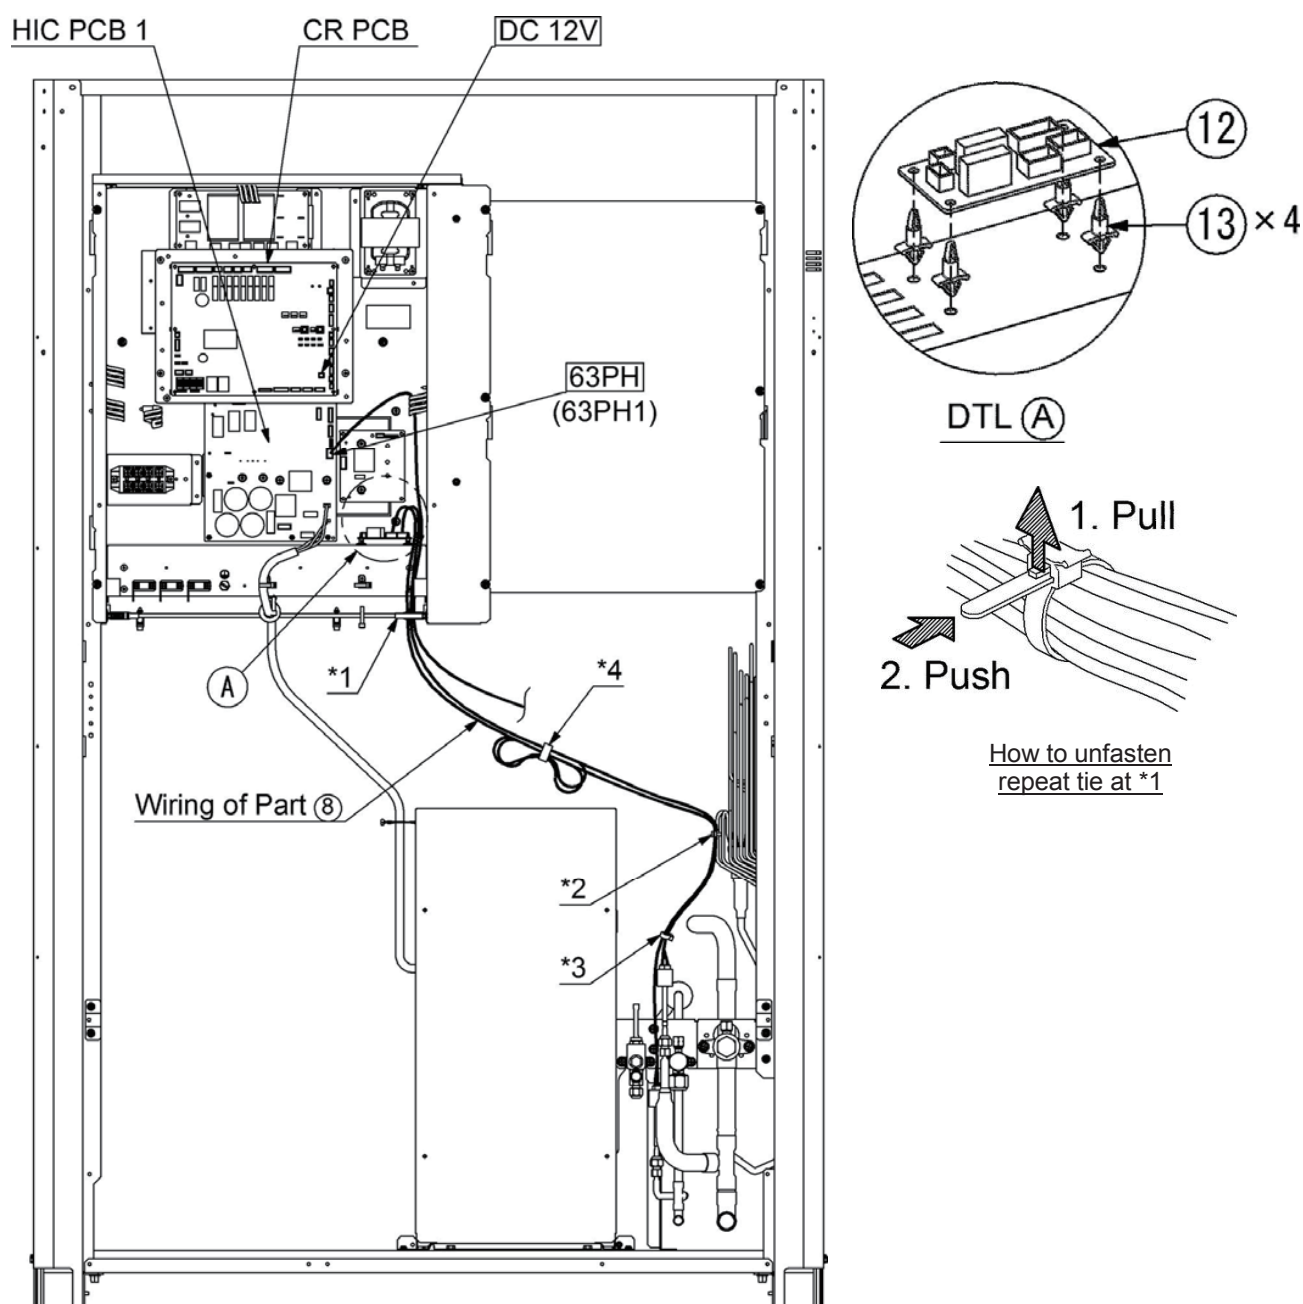


4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)

■ 2WAY 14-20HP (ME2 series)

Be cautious that the lead wires should not touch other pipes and valves directly.

1. Install PCB (12) by using Spacer (13) in the Control box as shown in the DTL (A).
2. Disconnect the lead wires of the pressure switch (63PH1/63PH2) of the outdoor unit from the PCB. Cut at the two points of the band (T30R) marked with the *1.
3. Wiring the lead wire of Part (8) as shown in the figure.
 - *2: Bundle the lead wires of the gas / liquid pressure switch of Part (8) by band (9) placed at the location shown in the figure.
 - *3: The lead wire of Part (8) are bundled to the capillary tube of the heat-exchanger by Band (9).
 - *4: Unfasten the repeat tie of the outdoor unit and then bundle it with other lead wires. The lead wire (63PH1) disconnected under the Step 2 described above is bundled with the repeat tie on the right side.
 - *5: Cut the band (T30R) and then bundle the lead wire (63PH1) disconnected under the Step 2 described above with the lead wire from the compressor.
 - *6: Cut the band (T30R) and then bundle the lead wire of Part (8) with other lead wires by band (9).
 - *7: The extra length of wire should be bundled by Band (9) placed at the location shown in the figure.

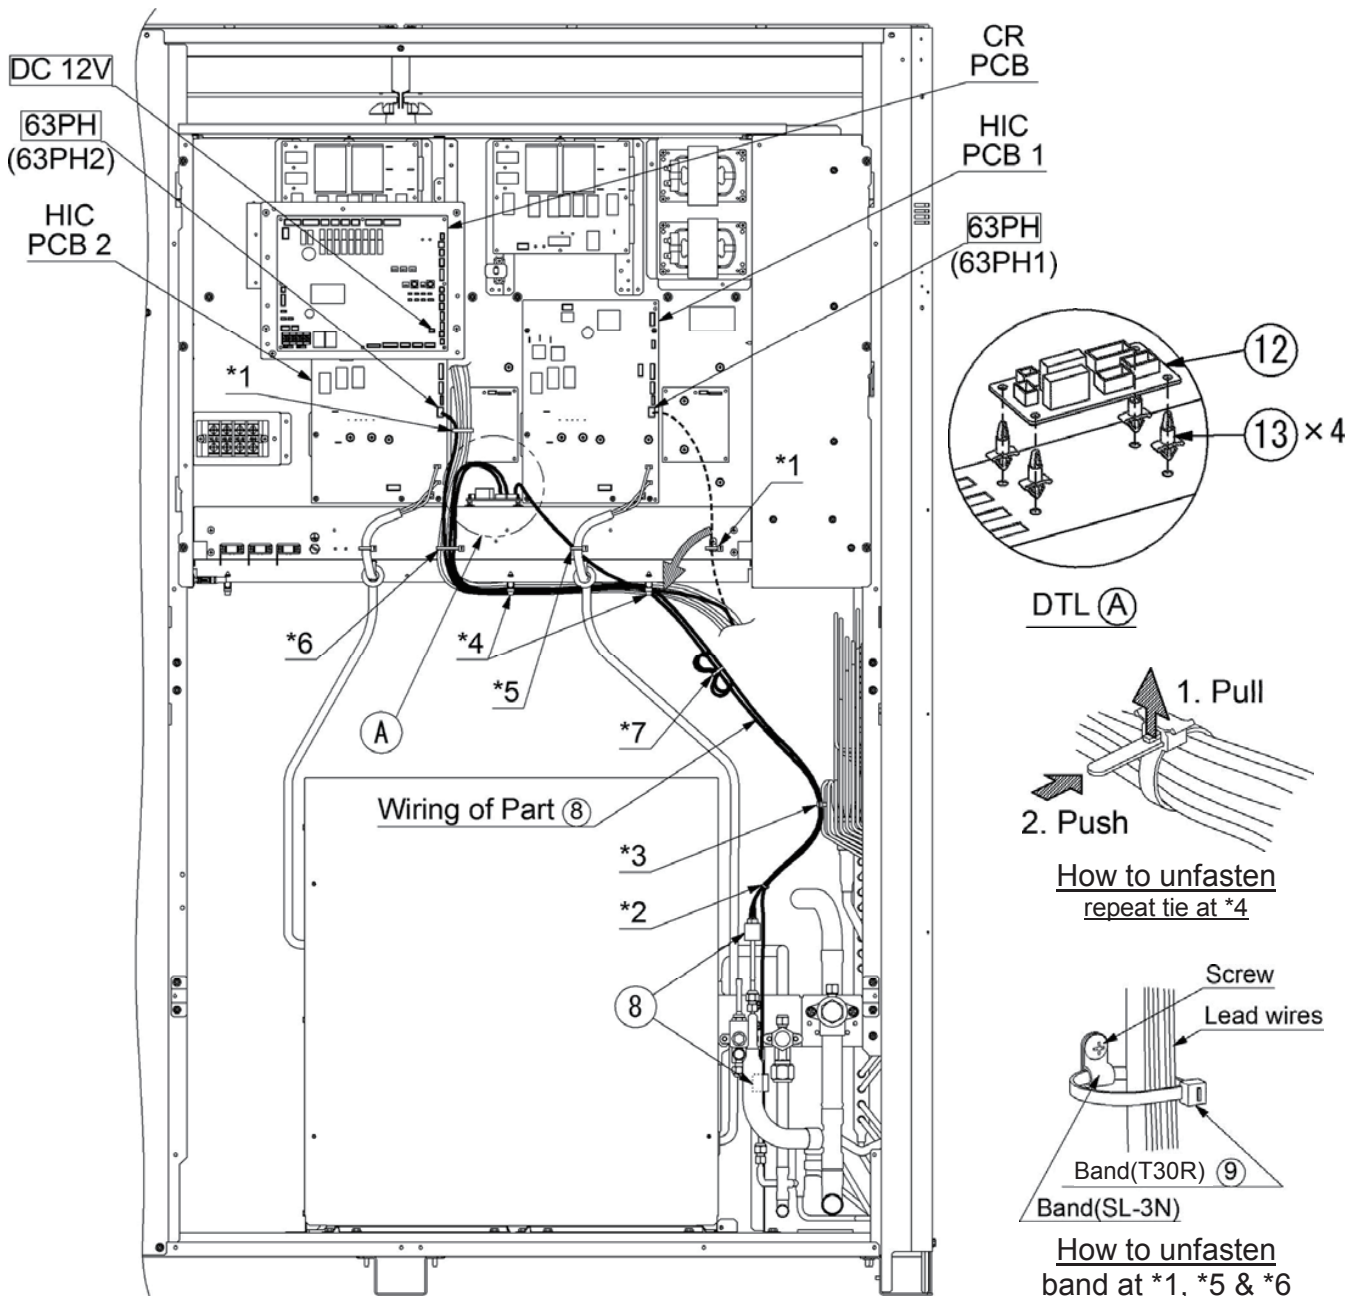

4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)

2. C-BOX Inside Wiring



■ 2WAY 8-12HP (ME2 series)

Make connections as shown in the figure below.

The lead wire disconnected at "Inside wiring" should be connected to the [63PH1 IN] of Part (12).

Part (17) are connected to [63PH2 IN] of Part (12).

* Extra length of wire should be bundled by band (9) placed at the location in the figure.

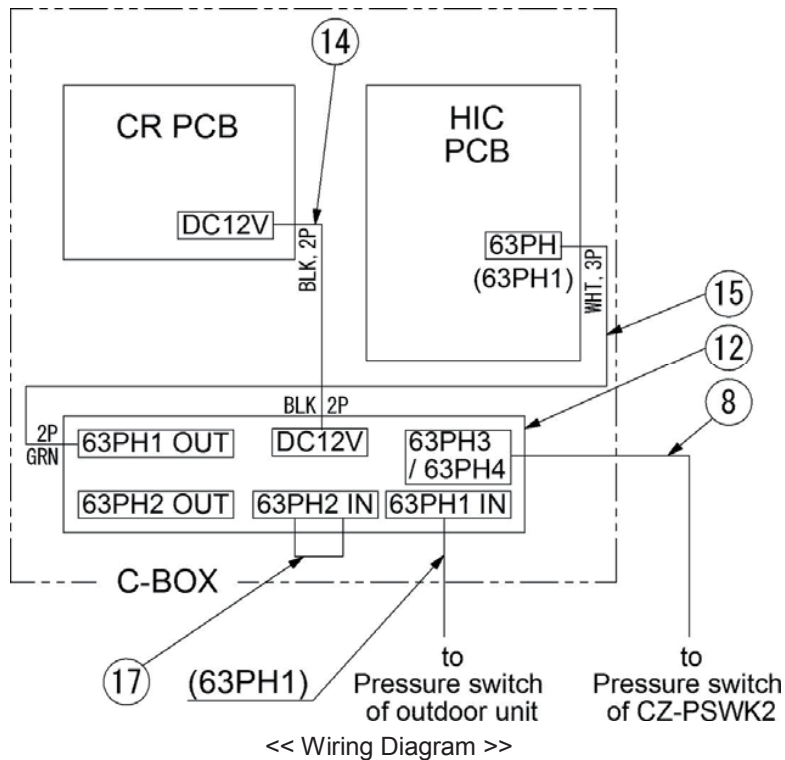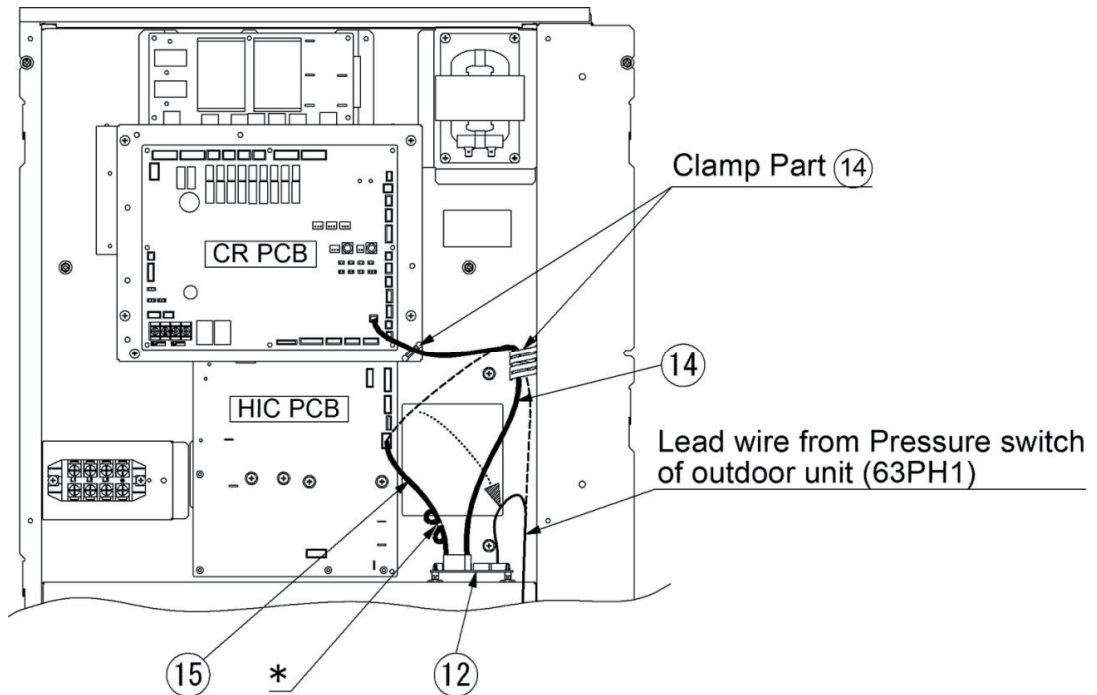

4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)



■ 2WAY 14-20HP (ME2 series)

Make connections as shown in the figure below.

The lead wires of 63PH1 and 63PH2 disconnected at "Inside wiring"

should be connected each to the [63PH1 IN] and the [63PH2 IN] of Part (12).

Bundle the lead wires of Part (8), (14), (15), (16), 63PH1 and 63PH2 with other wires at the * position shown in the figure.

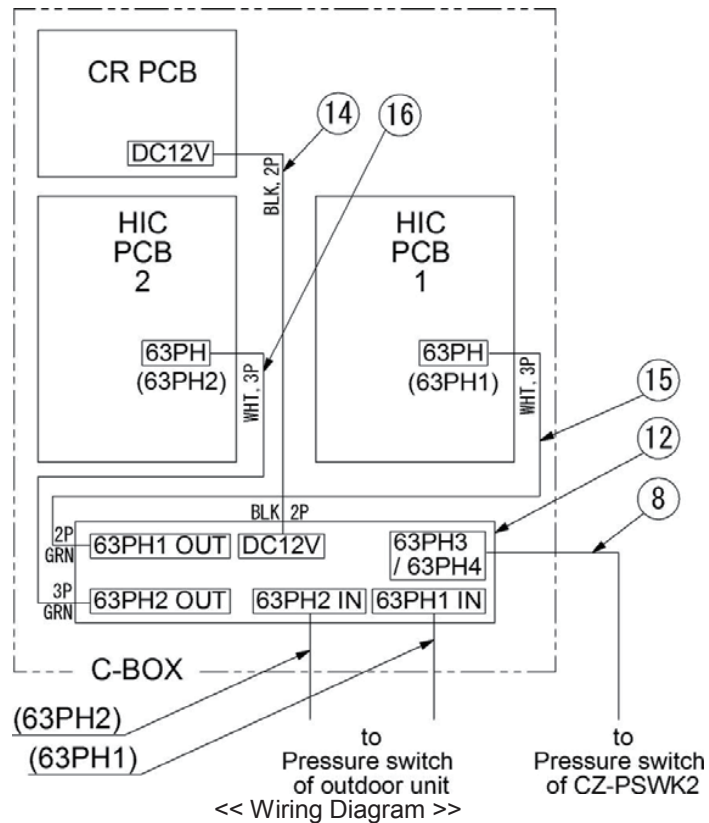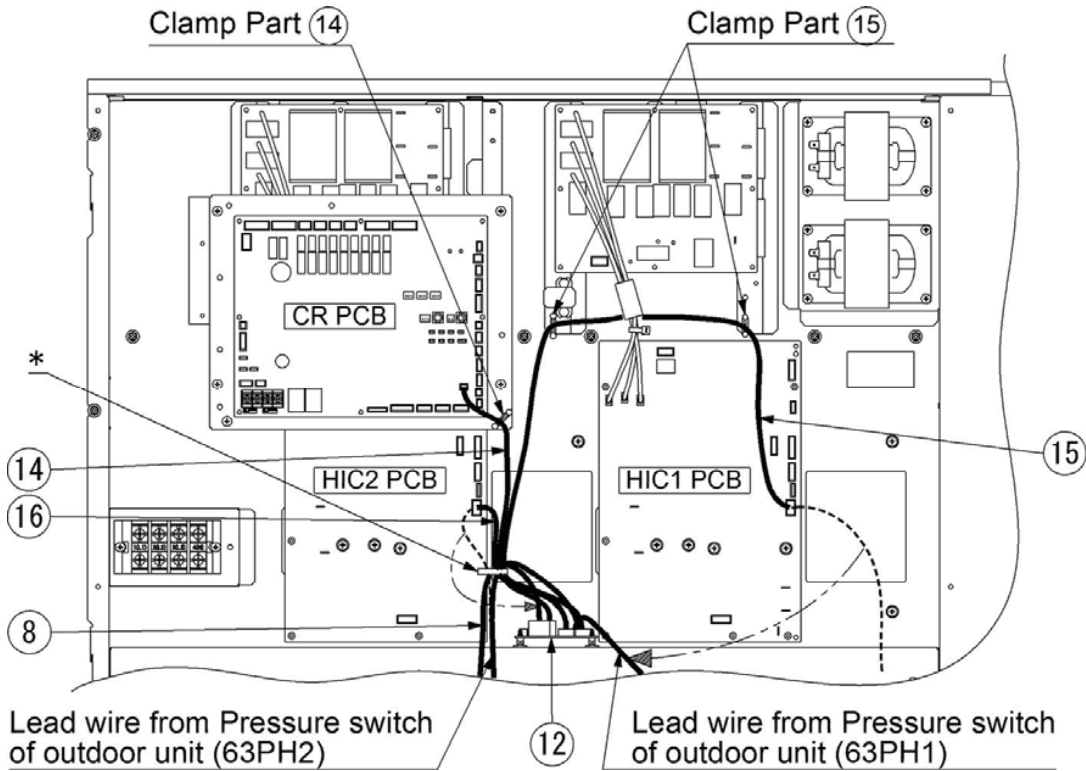

4. INSTALLATION INSTRUCTIONS (High Pressure Switch Kit)

■ 2WAY (ME2 series)

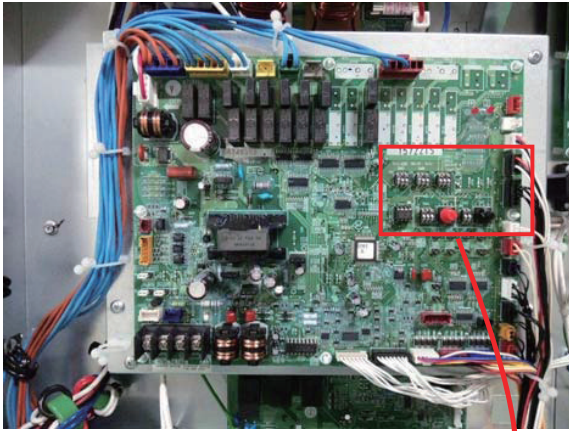


Fig. 1 : CR PCB

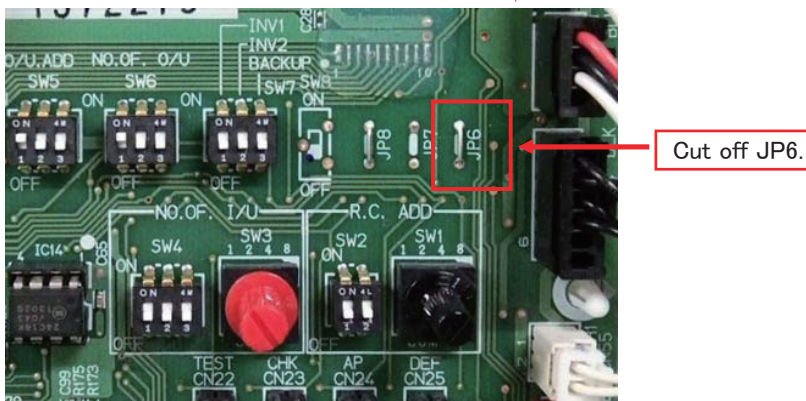


Fig. 5 : JP6 (2WAY ME2 series)

NOTE: Always turn off the power before working on the given circuit to avoid electrical shock or damage to the electrical wiring or devices and then cut off JP6.

